

# Keysight Technologies

## Noise Sources: 346A, 346B, N4000A, and N4001A (All Serial Numbers)

## Instructions for Setting Bias Current

Installation  
Note

# Notices

## Copyright Notice

© Keysight Technologies 2001 - 2019

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

00346-90137

## Edition

Edition 3, December 16, 2019

## Printed in:

Printed in Malaysia

## Published by:

Keysight Technologies  
Bayan Lepas Free Industrial Zone,  
11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Notice

The information contained in this document is subject to change without notice.

Keysight Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Keysight Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

## Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

### Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

## Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- [www.keysight.com/find/mta](http://www.keysight.com/find/mta)  
(product-specific information and support, software and documentation updates)
- [www.keysight.com/find/assist](http://www.keysight.com/find/assist)  
(worldwide contact information for repair and service)

## Table of Contents

Waste Electrical and Electronic Equipment (WEEE) Directive .....	3
Product category: .....	3
Sales and Technical Support .....	3
List of Figures .....	7
List of Tables .....	9
Introduction .....	11
Replacement Parts List .....	11
346A/B Replacement Noise Cartridge Installation Instructions .....	12
346A/B Replacement Bulkhead Assembly Installation Instructions .....	13
346A/B Replacement Printed Circuit Board Assembly Installation Instructions .....	14
N4000A/ N4001A Replacement Noise Cartridge Installation Instructions .....	14
N4000A/ N4001A Replacement Bulkhead Assembly Installation Instructions .....	15
N4000A/ N4001A Replacement Printed Circuit Board Assembly Installation Instructions 15	
Printed Circuit Board Assembly Graphic and Resistor List .....	16

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Figures

Figure 1	00346-60183	.....	16
----------	-------------	-------	----

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.



List of Tables

Table 1	Replacement parts list	11
Table 2	Parts list	16

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## Introduction

Due to a change of manufacturer of the noise diodes, adjustment of bias current is now necessary to ensure that the noise source performs within its specified ENR range. This document is supplied with all the following replacement parts.

The noise source diode inside the noise source cartridge changed at serial prefix MY/SG/US5323 for models 346A and N4000A including options 001, 002, and 004.

Noise sources with serial prefixes manufactured before MY/SG/US5323 will now have a noise cartridge replacement kit that will include both a new noise cartridge and new attenuator. Both must be replaced.

Noise sources manufactured with serial prefix MY/SG5323 and later will have a new noise cartridge replacement part number. Refer to [Table 1](#).

### CAUTION

Repair or parts replacement of noise sources should NOT be attempted without full calibration capability and official field calibration software.

## Replacement Parts List

This Installation Note applies to the installation of the following replacement parts:

**Table 1** Replacement parts list

Model	Replacement bulkhead	Replacement noise cartridge	
		Noise cartridge kit <sup>[a]</sup> (Serial Prefix up to MY/SG/ US5322)	Noise cartridge (Serial Prefix up to MY5323 or SG5323 and later)
346A Std.	00346-60168	00346-60194	00346-60193
346A Opt. 001	00346-60169	00346-60194	00346-60193
346A Opt. 002	00346-60170	00346-60194	00346-60193
346A Opt. 004	00346-60171	00346-60194	00346-60193
Noise cartridge (All serial prefixes)			
346B Std.	00346-60172	00346-60179	
346B Opt. 001	00346-60164	00346-60179	
346B Opt. 002	00346-60165	00346-60179	
346B Opt. 004	00346-60166	00346-60179	
		Noise cartridge kit <sup>[a]</sup> (Serial Prefix up to MY/SG/ US5322)	Noise cartridge (Serial Prefix up to MY5323 or SG5323 and later)
N4000A Std.	N4000-60020	00346-60194	00346-60193
N4000A Opt 001	N4000-60021	00346-60194	00346-60193

**Table 1** Replacement parts list (continued)

Model	Replacement bulkhead	Replacement noise cartridge
		Noise cartridge (All serial prefixes)
N4001A Std.	N4001-60011	00346-60179
N4001A Opt 001	N4001-60012	00346-60179

[a] 00346-60194 contains a compatible noise cartridge and attenuator assembly. Both must be installed.

**NOTE**

This Installation Note also applies to the replacement of the 00346-60001 and N4000-60001 printed circuit boards. To replace the PC board, please order the 00346-60157 (for 346A/B) or N4000-60016 (for N4000A/1A) Replacement PC Board Kit.

The replacement parts listed in [Table 1](#) are tested in the factory to determine the bias current level necessary to ensure that it meets ENR specification.

For the 346A and 346B, bias levels are determined by installing the appropriate resistor value for R7 on the printed circuit board ([Figure 1](#)). The appropriate resistor is supplied with the part.

Replacement Bulkheads for the 346A and 346B have the recommended bias level written on the part. The appropriate resistor is enclosed in a small envelope. The resistor value and part number are written on the envelope. The N4000/1A bulkheads are not supplied with an envelope and resistor. However, the value of the current is marked on the part.

Replacement Noise Cartridges are used in all the listed models. These parts are labeled with a tracking number. The appropriate resistor is enclosed in an envelope which is marked with the tracking number of the cartridge, resistor value, part number and recommended bias current level. Also, the cartridges are shipped with Installation Note 00346-90024, Attenuator Replacement, in case attenuator tuning is necessary to bring the unit to within specification. It may be necessary, in rare cases, to replace the attenuator to meet specification.

On the N4000A and N4001A models, the bias is set electronically by using field calibration software to calibrate the Noise Source and re-burn the EEPROM. The bias value of current supplied with the Replacement Noise Cartridge is to be used to program the sensor. The enclosed resistor can be discarded.

## 346A/B Replacement Noise Cartridge Installation Instructions

- 1 Ensure that the cartridge was shipped with a resistor contained in a small envelope.
- 2 Ensure that the tracking number on the cartridge matches the number on the envelope.
- 3 Ensure that the value of the current marked on the envelope corresponds to the resistor value and part number provided (refer to [Table 2](#)).
- 4 Ensure that the resistor value on the envelope matches the resistor supplied.
- 5 Ensure that Installation Note 00346-90024 has been provided.
- 6 Disassemble the Noise Source by removing the two flat head screws near the output connector and slide the bulkhead out of the housing.

- 7** Next, remove the two flat head screws near the BNC connector and slide out the printed circuit board assembly.
- 8** Remove the old cartridge from the bulkhead and install the replacement cartridge. Ensure that the tiny bellows remains on the attenuator pin.
- 9** Check the resistor installed in position R7 on the 00346-60183 printed circuit board; please refer to [Figure 1](#). If it matches the resistor supplied, it is not necessary to install it in the printed circuit board.
- 10** Install the supplied resistor in R7 position (refer to [Figure 1](#)).
- 11** Reassemble the unit and do a preliminary ENR measurement.
- 12** For the 346B, if the ENR is not within specification, refer to the supplied 00346-90024 Installation Note for instructions on how to tune the attenuator to meet the ENR specification at frequencies above 12 GHz. The 346A should not require pyiron tuning.
- 13** Retest ENR after tuning the attenuator.
- 14** If the ENR is still out of specification, substitute another resistor for R7 from [Table 2](#). Decreasing the bias current by 10% increases the ENR response by 0.5dB at 10MHz.
- 15** Retest ENR.

## 346A/B Replacement Bulkhead Assembly Installation Instructions

- 1** Ensure that the bulkhead was shipped with a small envelope containing a resistor.
- 2** Ensure that the value of the current marked on the bulkhead matches the value on the envelope.
- 3** Ensure that the value of the current marked on the envelope corresponds to the resistor value and part number provided (refer to [Table 2](#)).
- 4** Ensure that the resistor value on the envelope matches the resistor supplied.
- 5** Disassemble the Noise Source by removing the two flat head screws near the output connector and slide the bulkhead out of the housing.
- 6** Remove the two flat head screws near the BNC connector and slide out the printed circuit board assembly.
- 7** Install the replacement bulkhead.
- 8** Check the resistor installed (if any) in position R7 on the 00346-60183 printed circuit board; refer to [Figure 1](#). If it matches the resistor supplied, it is not necessary to install it in the printed circuit board.
- 9** Install the supplied resistor in R7 position (refer to [Figure 1](#)).
- 10** Reassemble the unit and perform a preliminary ENR measurement.
- 11** If the ENR is not meeting specification, substitute another resistor for R7 from [Table 2](#). Decreasing the bias current by 10% increases the ENR response by 0.5dB at 10MHz.
- 12** Retest ENR.

## 346A/B Replacement Printed Circuit Board Assembly Installation Instructions

- 1 Disassemble the Noise Source by removing the two flat head screws near the BNC connector, and slide out the printed circuit board assembly.
- 2 R7 is not loaded in the replacement printed circuit board assembly. Install the same value of R7 as in the printed circuit board being replaced.
- 3 Install the replacement printed circuit board, reassemble the unit and do a preliminary ENR measurement.
- 4 If the ENR is not meeting specification, substitute another resistor for R7 from [Table 2](#). Decreasing the bias current by 10% increases the ENR response by 0.5dB at 10MHz.
- 5 Retest ENR.

## N4000A/ N4001A Replacement Noise Cartridge Installation Instructions

- 1 Ensure that the cartridge was shipped with a small envelope.
- 2 Ensure that the value of the current is marked on the envelope (the resistor will not be used).
- 3 Ensure that Installation Note 00346-90024 has been provided.
- 4 Disassemble the Noise Source using the procedure in the SNS Series Operating and Service Guide, N4000-90001.
- 5 Remove the old cartridge and install the replacement cartridge.
- 6 Using the field calibration software, set the bias current to the value on the envelope (in mA). Discard the resistor enclosed.
- 7 Reassemble the unit and do a preliminary ENR measurement.
- 8 If the ENR is not within specification, refer to the supplied 00346-90024 Installation Note for instructions on how to tune the attenuator to meet the ENR specification at frequencies above 12 GHz.
- 9 Retest ENR after tuning the attenuator.
- 10 If the ENR is not meeting specification, use the field calibration software to reprogram the bias current using the values from [Table 2](#). Decreasing the bias current by 10% increases the ENR response by 0.5dB at 10MHz.
- 11 Retest ENR.

## N4000A/ N4001A Replacement Bulkhead Assembly Installation Instructions

- 1 Ensure that the value of the current is marked on the replacement bulkhead.
- 2 Disassemble the Noise Source using the procedure in the SNS Series Operating and Service Guide, N4000-90001.
- 3 Remove the old bulkhead and install the replacement bulkhead.
- 4 Using the field calibration software, set the bias current to the value on the bulkhead (in mA).
- 5 Reassemble the unit and do a preliminary ENR measurement.
- 6 If the ENR is not meeting specification, use the field calibration software to reprogram the bias current using the values from [Table 2](#). Decreasing the bias current by 10% increases the ENR response by 0.5dB at 10MHz.
- 7 Retest ENR.

## N4000A/ N4001A Replacement Printed Circuit Board Assembly Installation Instructions


- 1 Using the field calibration software, determine the bias current applied to the noise diode or use the bias current value written on the bulkhead.
- 2 Disassemble the Noise Source using the procedure in the SNS Series Operating and Service Guide, N4000-90001.
- 3 Install the replacement printed circuit board.
- 4 Reassemble the unit.
- 5 Using the field calibration software, set the bias current to the original value
- 6 Perform a preliminary ENR measurement.
- 7 If the ENR is not meeting specification, use the field calibration software to change the bias setting. Refer to [Table 2](#) for bias current values. Decreasing the bias current increases the ENR response.
- 8 Retest ENR.

## Printed Circuit Board Assembly Graphic and Resistor List

**Table 2** Parts list

Current (mA)	R7 ohms	R7 part number
11	237	0698-3442
12	200	0698-6377
13	162	0757-0405
14	133	0698-7215
15	100	0757-0401
16	75	0698-7209
17	51.1	0757-0394
18	28.7	0698-7199
19	10	0757-0346
20	162 <sup>[a]</sup>	0698-7217

[a] In addition, replace R6 with 0698-7216 (147 ohms)

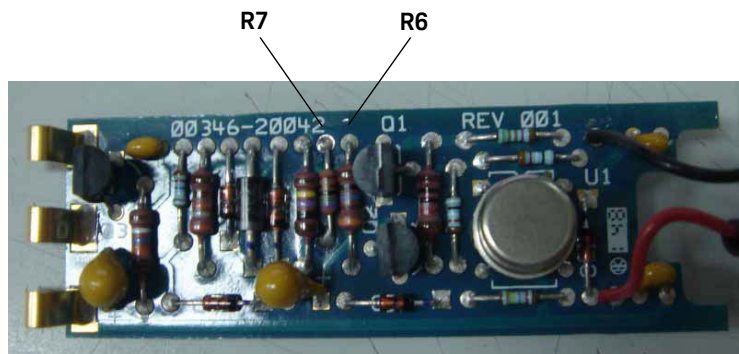

**Figure 1** 00346-60183





This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2001 - 2019  
Edition 3, December 16, 2019

Printed in Malaysia



00346-90137

[www.keysight.com](http://www.keysight.com)