



75000 Series C

User Manual and SCPI Programming

Keysight E1418A 8/16 Channel D/A Converter

Notices

© Keysight Technologies, Inc. 1995-2019

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

E1418-90002

Edition

Third Edition, August 2019

Published by

Keysight Technologies, Inc.
900 S. Taft Ave.
Loveland, CO 80537 USA

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

www.keysight.com/find/E1418A

(product-specific information and support, software and documentation updates)

www.keysight.com/find/assist (world-wide contact information for repair and service)

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://keysight.com/go/conformity> and click on "Declarations of Conformity." You can then search by product number to find the latest Declaration of Conformity.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Keysight Technologies does not warrant third-party system-level (combination of chassis, controllers, modules, etc.) performance, safety, or regulatory compliance unless specifically stated.

DFARS/Restricted Rights Notices

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Information

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings or operating instructions in the product manuals violates safety standards of design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

General

Do not use this product in any manner not specified by the manufacturer. The protective features of this product must not be impaired if it is used in a manner specified in the operation instructions.

Before Applying Power

Verify that all safety precautions are taken. Make all connections to the unit before applying power. Note the external markings described under "Safety Symbols".

Ground the Instrument

Keysight chassis' are provided with a grounding-type power plug. The instrument chassis and cover must be connected to an electrical ground to minimize shock hazard. The ground pin must be firmly connected to an electrical ground (safety ground) terminal at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.

Do Not Operate in an Explosive Atmosphere

Do not operate the module/chassis in the presence of flammable gases or fumes.

Do Not Operate Near Flammable Liquids

Do not operate the module/chassis in the presence of flammable liquids or near containers of such liquids.

Cleaning

Clean the outside of the Keysight module/chassis with a soft, lint-free, slightly dampened cloth. Do not use detergent or chemical solvents.

Do Not Remove Instrument Cover

Only qualified, service-trained personnel who are aware of the hazards involved should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover.

Keep away from live circuits

Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers and shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

DO NOT operate damaged equipment

Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Keysight Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.

DO NOT block the primary disconnect

The primary disconnect device is the appliance connector/power cord when a chassis used by itself, but when installed into a rack or system the disconnect may be impaired and must be considered part of the installation.

Do Not Modify the Instrument

Do not install substitute parts or perform any unauthorized modification to the product. Return the product to a Keysight Sales and Service Office to ensure that safety features are maintained.

In Case of Damage

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel

CAUTION

Do NOT block vents and fan exhaust: To ensure adequate cooling and ventilation, leave a gap of at least 50mm (2") around vent holes on both sides of the chassis.

Do NOT operate with empty slots: To ensure proper cooling and avoid damaging equipment, fill each empty slot with an AXle filler panel module.

Do NOT stack free-standing chassis: Stacked chassis should be rack-mounted.

All modules are grounded through the chassis: During installation, tighten each module's retaining screws to secure the module to the chassis and to make the ground connection.

WARNING

Operator is responsible to maintain safe operating conditions. To ensure safe operating conditions, modules should not be operated beyond the full temperature range specified in the Environmental and physical specification. Exceeding safe operating conditions can result in shorter lifespan, improper module performance and user safety issues. When the modules are in use and operation within the specified full temperature range is not maintained, module surface temperatures may exceed safe handling conditions which can cause discomfort or burns if touched. In the event of a module exceeding the full temperature range, always allow the module to cool before touching or removing modules from the chassis.

Safety Symbols

CAUTION

A CAUTION denotes a hazard. It calls attention to an operating procedure or practice, that, if not correctly performed or adhered to could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING denotes a hazard. It calls attention to an operating procedure or practice, that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Products display the following symbols:



Warning, risk of electric shock



Refer to manual for additional safety information.



Earth Ground.



Chassis Ground.



Alternating Current (AC).



Direct Current (DC)

Contents

1 Module Setup and Installation

Using This Chapter	17
Module Description	17
Ordering Options	18
Field Kits	19
Terminal Modules	19
Functional Description	20
Front Panel Connectors	22
Setting the Logical Address Switch	23
Module Installation	24
Installation in a Mainframe	24
Terminal Modules	26
Screw-Type Terminal Module (Standard)	26
Wiring the Terminal Module	27
Attaching the Terminal Module	29
Removing the Terminal Module	30
Terminal Module Options	31
Option A3E	31
Option A3H	33
Option 135	34
Terminal Module Connectors	35
Configuring the Terminal Module	36
P/J Jumper	36
V/I Jumper	36
Options A3E and A3H Terminals	37
Terminal Module Connections	38
Combining Channels	39
Connecting an External Trigger Source	41
Using the CAL Output Terminals	42
Initial Operation	43
Device Driver	43
Module Identification	44

2 Programming Examples

Using This Chapter	45
Program Examples	45
Querying Module Identification and Configuration	46
APPLY Output	51
Error Checking	53
I/O Error Checking	53
SCPI Error Checking	53
SOURCE Output	56
Setting the Output Mode	58
Controlling the Output Relay	59
Triggering	60
Using *OPC?	62
Combining Output Channels	63

3 Keysight E1418A SCPI Command Reference

Using This Chapter	65
Command Types	65
Common Command Format	65
SCPI Command Format	66
Command Separator	66
Abbreviated and Short Commands	66
Implied Commands	67
Linking Commands	68
SCPI Command Reference	68
ABORT subsystem	69
APPLY subsystem	69
APPLYn:CURRENT	70
APPLYn:VOLTage	71
CALibration subsystem	72
CALibration:CONDition?	72
CALibration:CONFigure:RESistance?	74
CALibration:RESet	74
CALibration:STORe	75
CALibration:TEST?	75
CALibration:VALue:RESistance	76
CALibrationn:CONFigure:CURRENT?	76
CALibrationn:CONFigure:VOLTage?	78
CALibrationn:VALue:CURRENT?	79

CALibrationn:VALue:VOLTage?	80
DIAGnostic Subsystem	82
DIAGnostic:CALibration:OUTPut[:MODE]	82
DIAGnostic:CALibration:OUTPut[:MODE]?	83
DIAGnostic:CONFigure?	83
DIAGnostic:OUTPut:ALL[:STATE]	84
DIAGnostic:SOURcen:FUNcTion:MODE	84
DIAGnostic:TRIGgered?	85
INITiate Subsystem	86
INITiate[:IMMediate]	86
OUTPut Subsystem	87
OUTPut:TTLTrgn[:STATE]	87
OUTPut:TTLTrgn[:STATE]?	88
OUTPutn[:STATE]	88
OUTPutn[:STATE]?	89
SOURce Subsystem	90
SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]	90
SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]?	91
SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]	92
SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]?	93
SOURcen:FUNcTion:MODE	94
SOURcen:FUNcTion:MODE?	95
SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]	95
SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]?	96
SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]	97
SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]?	98
STATus Subsystem	99
STATus:OPERation:CONDition?	101
STATus:OPERation:ENABle	101
STATus:OPERation:ENABle?	102
STATus:OPERation[:EVENT]?	102
STATus:PRESet	102
STATus:QUEStionable:CONDition?	102
STATus:QUEStionable:ENABle	103
STATus:QUEStionable:ENABle?	104
SYSTem Subsystem	105
SYSTem:ERRor?	105
SYSTem:VERSion?	105
TEST Subsystem	106
TEST:NUMBer?	106
TEST:TST[:RESults]?	107

*TST?	107
TRIGger Subsystem	109
TRIGger[:IMMediate]	109
TRIGger:SOURce	110
TRIGger:SOURce?	111
IEEE-488.2 Common Command Quick Reference	112
Keysight E1418A Command Quick Reference	113

A E1418A Specifications

General Characteristics	117
Power Requirements	118
Cooling Requirements	118

B E1418A Register-Based Programming

Addressing the Registers	120
A16 Registers	120
A24 Registers	121
The Base Address	122
A16 Address Space Outside the Command Module	124
A16 Address Space Inside the Command Module or Mainframe	124
Register Offset	125
Reset and Registers	127
Register Maps	128
Register Descriptions	135
Manufacturer ID Register	135
Logical Address Register	135
Device Type Register	136
VXI Status/Control Register	136
VXI Offset Register	137
Calibration Control Register	137
Card Configuration Register	139
Software Trigger Register	140
Trigger Control Register	140
Using the Trigger Control Register	141
Interrupt Status Register	142
Isolation Status Register	142
Channel Program Jumper Register	142
Channel Trigger Register	143
Channel Mode Register	143
Channel Relay Control Register	144
Card Control Register	145
Main_DAC Immediate Registers	146

Main_DAC Triggered Registers	146
Offset_DAC Registers	147
Gain_DAC Registers	147
Undefined Registers Channel Voltage Offset Calibration Registers	148
Channel Voltage Gain Calibration Registers	149
Channel Current Offset Calibration Registers	149
Channel Current Gain Calibration Registers	150
Calibration Resistor Value Registers	151
Voltage Calibration Status Register	151
Current Calibration Status Register	152
Calibration Isolation Status Register	152
Calibration Card Configuration Register	153
Calibration Checksum Register	154
Module Serial Number Registers	154
Register Example	156

C E1418A Error Messages

Error Types	159
Error Messages	160

D Voltage/Current Output Adjustment

Using This Appendix	163
Calibration Constants and Non-Volatile Memory	164
Equipment Required	164
Making Connections	164
Adjustment Procedure	165
Preparation	165
Voltage Adjustment	166
Current Adjustment	168
Storing the Adjustments	172
Return the Module to Use	173

E Configuration and Disassembly

Using This Appendix	177
Configuration	177
Checking Configuration	177
Changing Configuration	179
Adding 8 Channels	179
Installing Isolated/Non-Isolated Plug-on Modules	181
Troubleshooting	185
Isolating an Assembly (Self-Test)	185
Assembly Exchange	186

To Exchange an Assembly. 187

1 Module Setup and Installation

Using This Chapter

This chapter provides general module information and tasks you must perform to install and prepare your module. A procedure to verify your installation is also given. The chapter is divided into the following sections:

Module Description	page 17
Functional Description	page 20
Front Panel Connectors	page 22
Setting the Logical Address Switch	page 23
Module Installation	page 24
Terminal Modules	page 26
Wiring the Terminal Module	page 27
Attaching the Terminal Module	page 29
Removing the Terminal Module	page 30
Terminal Module Options	page 31
Terminal Module Connectors	page 35
Configuring the Terminal Module	page 36
Terminal Module Connections	page 38
Initial Operation	page 43

Module Description

The Keysight E1418A is an 8 or 16 channel digital-to-analog converter module for use in a VXIbus C-size mainframe. The module is a register-based device. The module can be programmed via direct register access or, with the appropriate driver, by high level commands. This manual describes programming the module using SCPI (Standard Commands for Programmable Instruments) and the SCPI driver.

Each Keysight E1418A module is a unique instrument having its own output buffer and error queue. Multiple modules cannot be combined into a single instrument.

Each channel can be configured to either voltage or current output mode. When configured for voltage output, voltages in the range of -16.0 to +16.0 Volts can be set. When configured for current output, current in the range of -0.02 to +0.02 A can be set. Channel output mode can be programmatically set, or forced to either voltage or current by mechanical jumpers on the terminal module.

Each output channel is individually configurable to be either an isolated output or a non-isolated output. Channel configuration to isolated or non-isolated is made by individual plug-on modules for each channel.

Figure 1-1 shows the module.

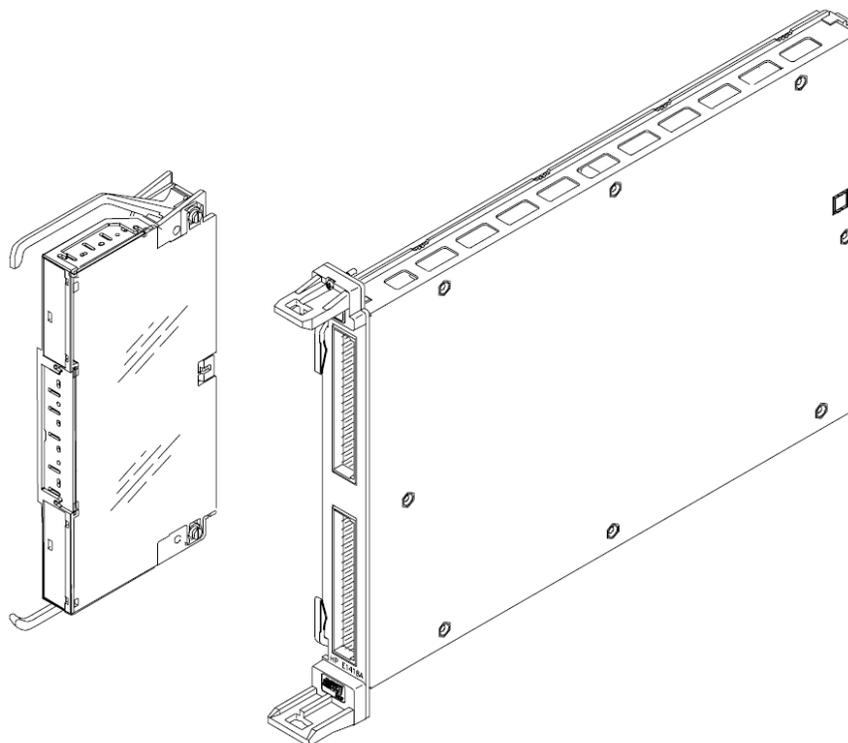


Figure 1-1 The E1418A 8/16-Channel D/A Converter with Terminal Module

Ordering Options

The Keysight E1418A may be ordered from Keysight Technologies in a variety of configurations. As ordered, the module has the following options:

	Description
E1418A	8-Channel D/A Converter with Non-Isolated Outputs
E1418A Option 001	16-Channel D/A Converter with Non-Isolated Outputs
E1418A Option 002	8-Channel D/A Converter with Isolated Outputs
E1418A Option 003	16-Channel D/A Converter with Isolated Outputs

Field Kits

The module can also be user configured. The following field expansion and configuration kits are available:

	Description	Use
E1523A	Single Channel Isolated plug-on module	To change a single channel from non-isolated to isolated output.
E1524A	Expansion kit, 8-Channel Non-Isolated Outputs	To add 8 additional non-isolated channels to an existing 8-channel module.
E1525A	Expansion kit, 8-Channel Isolated Outputs	To add 8 additional isolated channels to an existing 8-channel module.

Terminal Modules

The standard Keysight E1418A Terminal Module provides screw terminals for connections. Two other terminal options are available with the Keysight E1418A:

- Crimp and Insert (Option A3E)
- Ribbon Cable (Option A3H)
- Terminal Module Housing without a terminal module PC board or connectors included (Option 135)

Functional Description

The Keysight E1418A provides great flexibility in configuration. This functional description will help you become familiar with the various configurations and how the module is structured. A functional block diagram is shown in Figure 1-2.

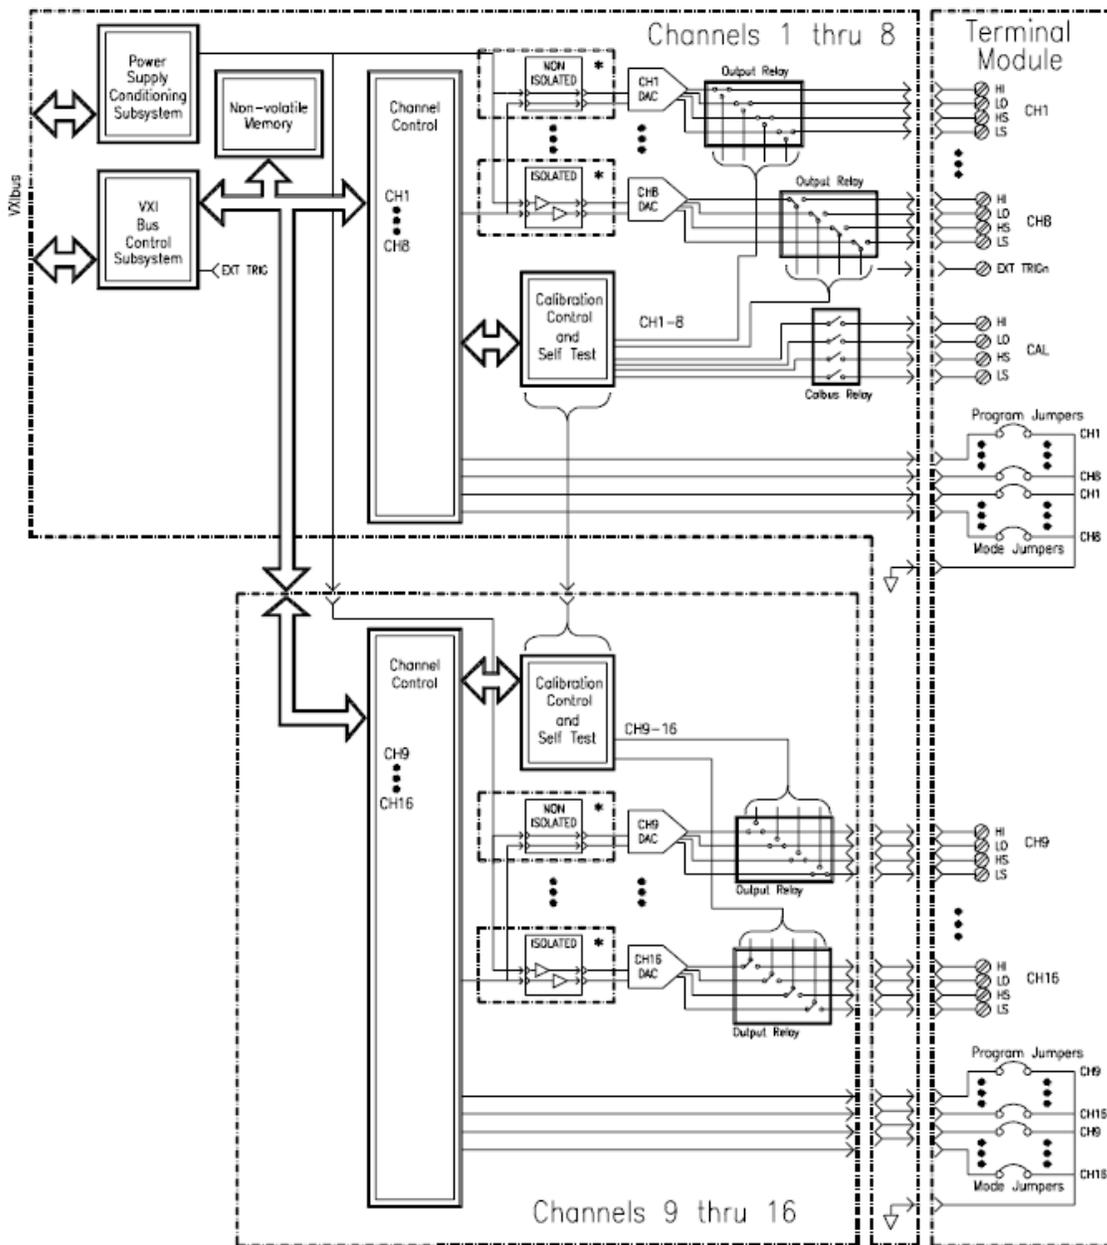


Figure 1-2 A Functional Block Diagram

* Each channel MUST have either an isolated or non-isolated plug-on module installed. Channels may be configured using any combination of Isolated and Non-Isolated plug-on modules.

As shown, there are four major assemblies that make up an Keysight E1418A:

- Channels 1 through 8 main board and VXIbus backplane circuitry.
- Channels 9 through 16 expansion board.
- Isolated or Non-isolated plug-on modules.
- Terminal Module.

Channels 1–8 main board and VXIbus backplane circuitry.

This assembly contains all the VXIbus interface and decoding circuitry. Isolated and Non-Isolated plug-on modules for channels 1–8 connect to this assembly. The panel connectors for the terminal module are also mounted on this assembly.

The optional Channels 9–16 expansion board is electrically connected and mechanically mounted to the main board. Isolated and Non-Isolated plug-on modules for channels 9–16 connect to this assembly.

Isolated or Non-isolated plug-on modules are required for every channel. Eight plug-on modules mount to the main board and 8 plug-on modules mount to the expansion board. Any combination of isolated or non-isolated plug-on modules may be used, but every channel must have a plug-on module installed.

The **Terminal Module** shown in Figure 1-2 is the standard screw-type terminal module. This module provides screw connections for each channel output, the calibration connections, and the external trigger in connections. This module also contains two jumpers for each channel; one, called the P/J Jumper, to enable or disable VXIbus programming of the channel mode (either voltage or current) and one, called the V/I Jumper, to set the channel mode when the P/J Jumper is in the Jumper position.

Front Panel Connectors

Figure 1-3 shows the connections at the front panel connectors of the main module.

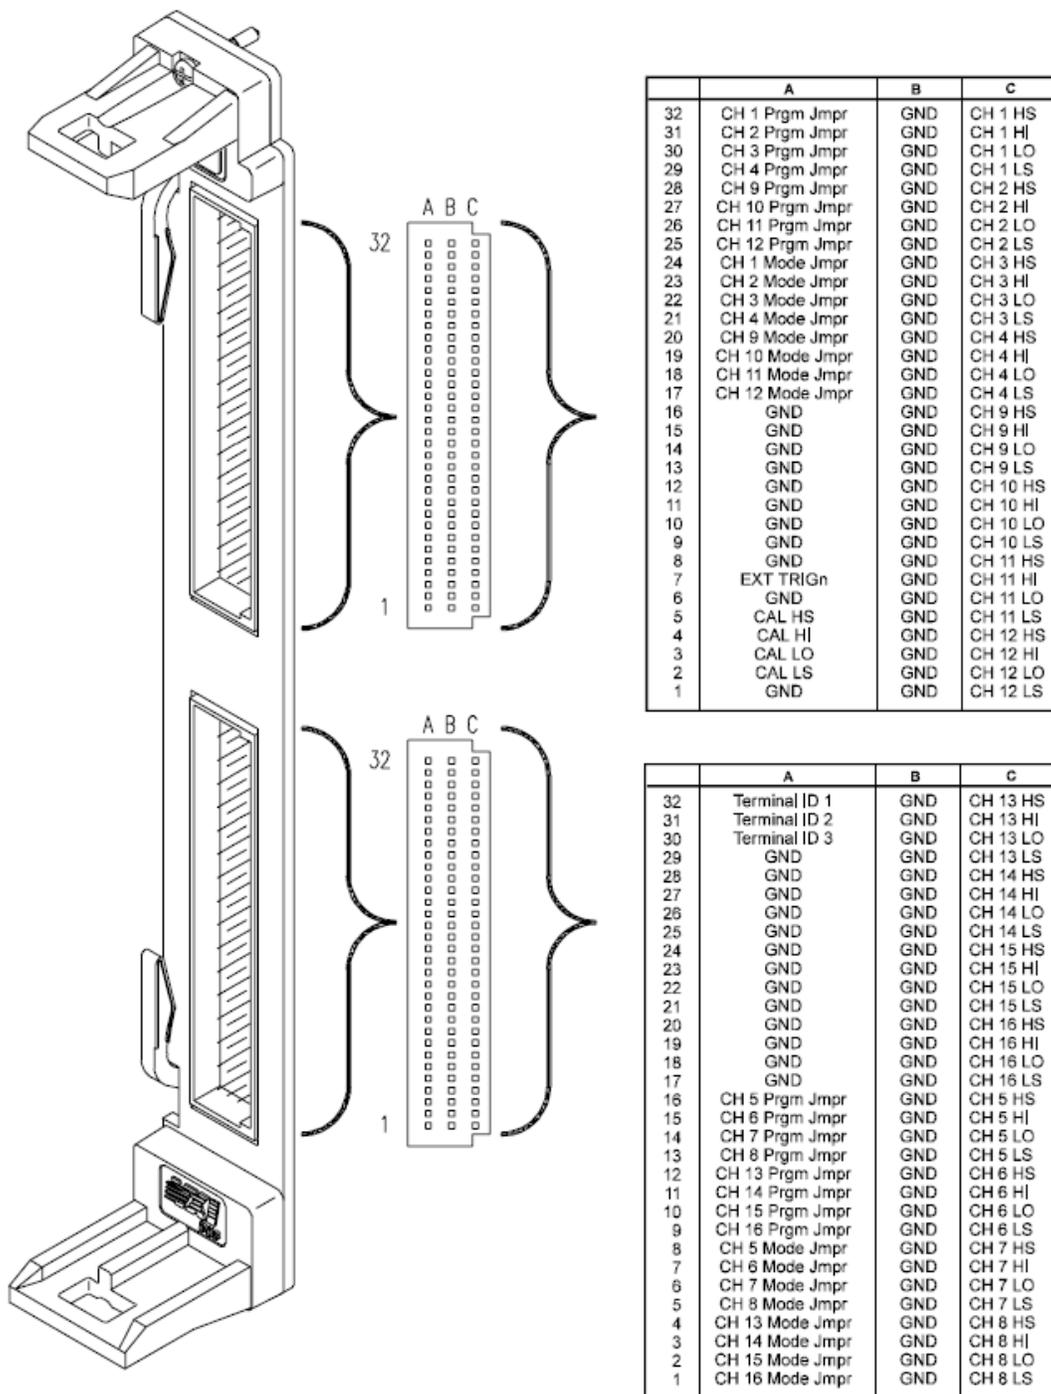


Figure 1-3 E1418A Front Panel Connector Pinout

Setting the Logical Address Switch

Figure 1-4 shows the logical address switch location and setting. The logical address switch factory setting is 72. Valid addresses range from 1 to 255.

When used with an Keysight Command Module the factory set address of decimal 72 results in a module address of 9 (72 divided by 8). The module address is used as a secondary address when using GPIB and a Command Module. For example, the module address may be 7 09 09, where 7 is the GPIB interface address, 09 is the command module address, and 09 is the Keysight E1418A address.

The Keysight E1418A supports dynamic address configuration. When you set the logical address to 255, the resource manager sets the logical address programmatically.

NOTE

When using an Keysight C-size mainframe with the Keysight E1405/E1406 Command Modules, the logical address setting must be a multiple of 8.

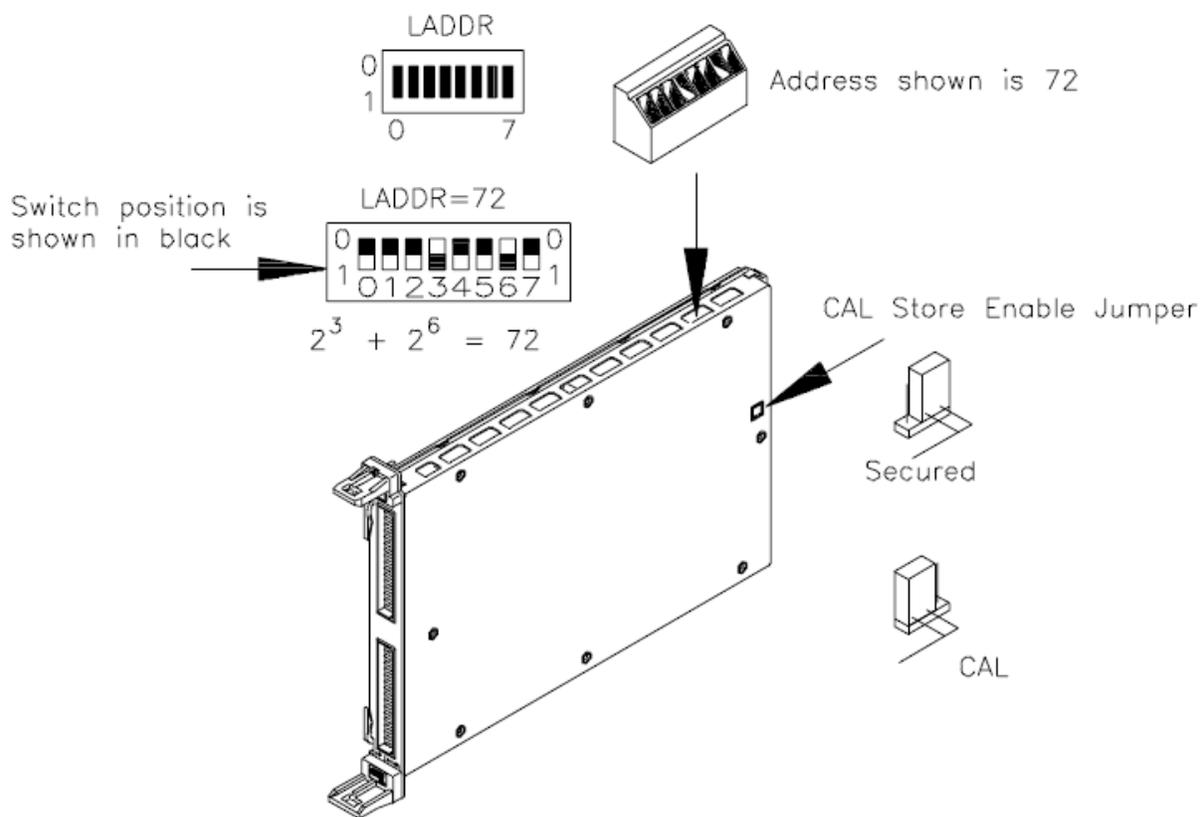


Figure 1-4 Setting the Logical Address

Module Installation

To install the module:

- 1 Verify the position of the CAL Store Enable Jumper for your application. The Jumper, as shipped, is in the CAL position. In this position, a calibration may be performed and the results stored in non-volatile memory. In the Secured position, a calibration may be performed, but may NOT be stored in non-volatile memory. This jumper is described elsewhere.
- 2 Verify or set the logical address switch as shown in Figure 1-4.
- 3 Install the module in a mainframe as shown in Figure 1-5.

Installation in a Mainframe

The Keysight E1418A may be installed in any slot (except slot 0) in a C-size VXIbus mainframe. To install in a mainframe:

- 1 Set the extraction levers out. Slide the module into any slot (except slot 0) until the backplane connectors touch.
- 2 Seat the module by moving the levers toward each other.
- 3 Tighten the top and bottom screws to secure the module in the mainframe.

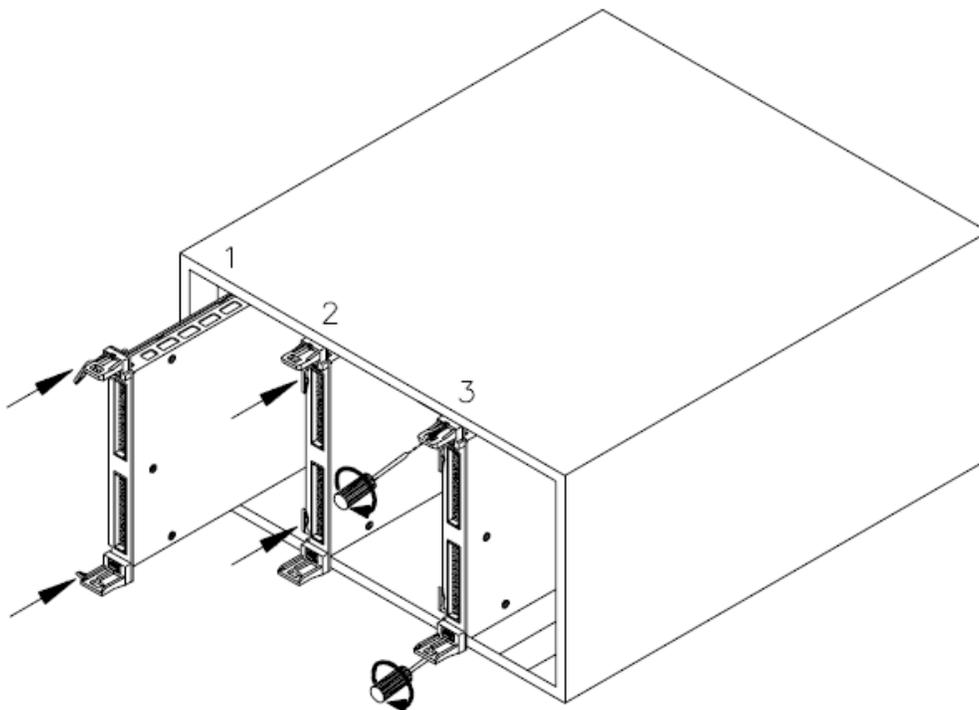


Figure 1-5 Installing the E1418A in a VXIbus Mainframe

To Remove a Module:

To remove a module from a mainframe:

- 1** Remove any terminal modules.
- 2** Loosen the top and bottom screws securing the module in the mainframe.
- 3** Move the extraction levers away from each other. As the levers are moved, the module will detach from the backplane connectors.
- 4** Slide the module out.

NOTE

The extraction levers will not seat and unseat the backplane connectors on older Keysight VXIbus mainframes and non-Keysight mainframes. You must manually seat the connectors by pushing the module into the mainframe until the front panel is flush with the front of the mainframe. The extraction levers may be used to guide or remove the module.

Terminal Modules

Four terminal modules are available for the Keysight E1418A; a screw-type, a crimp-and-insert type, a ribbon cable type, and an empty terminal housing (without a PC board or connectors).

Screw-Type Terminal Module (Standard)

The standard terminal module uses screw-type terminals to make connections. Figure 1-6 may be photocopied and used for wiring layout.

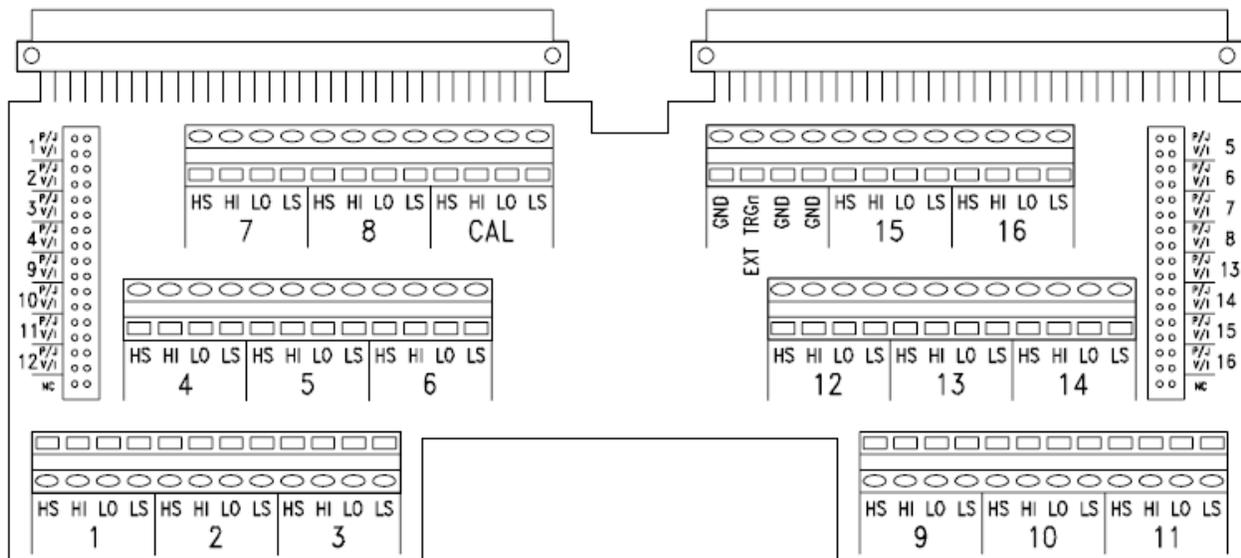


Figure 1-6 Screw-Type Terminal Module Layout

Wiring the Terminal Module

Figure 1-7 shows how to open and wire the E1418A terminal module.

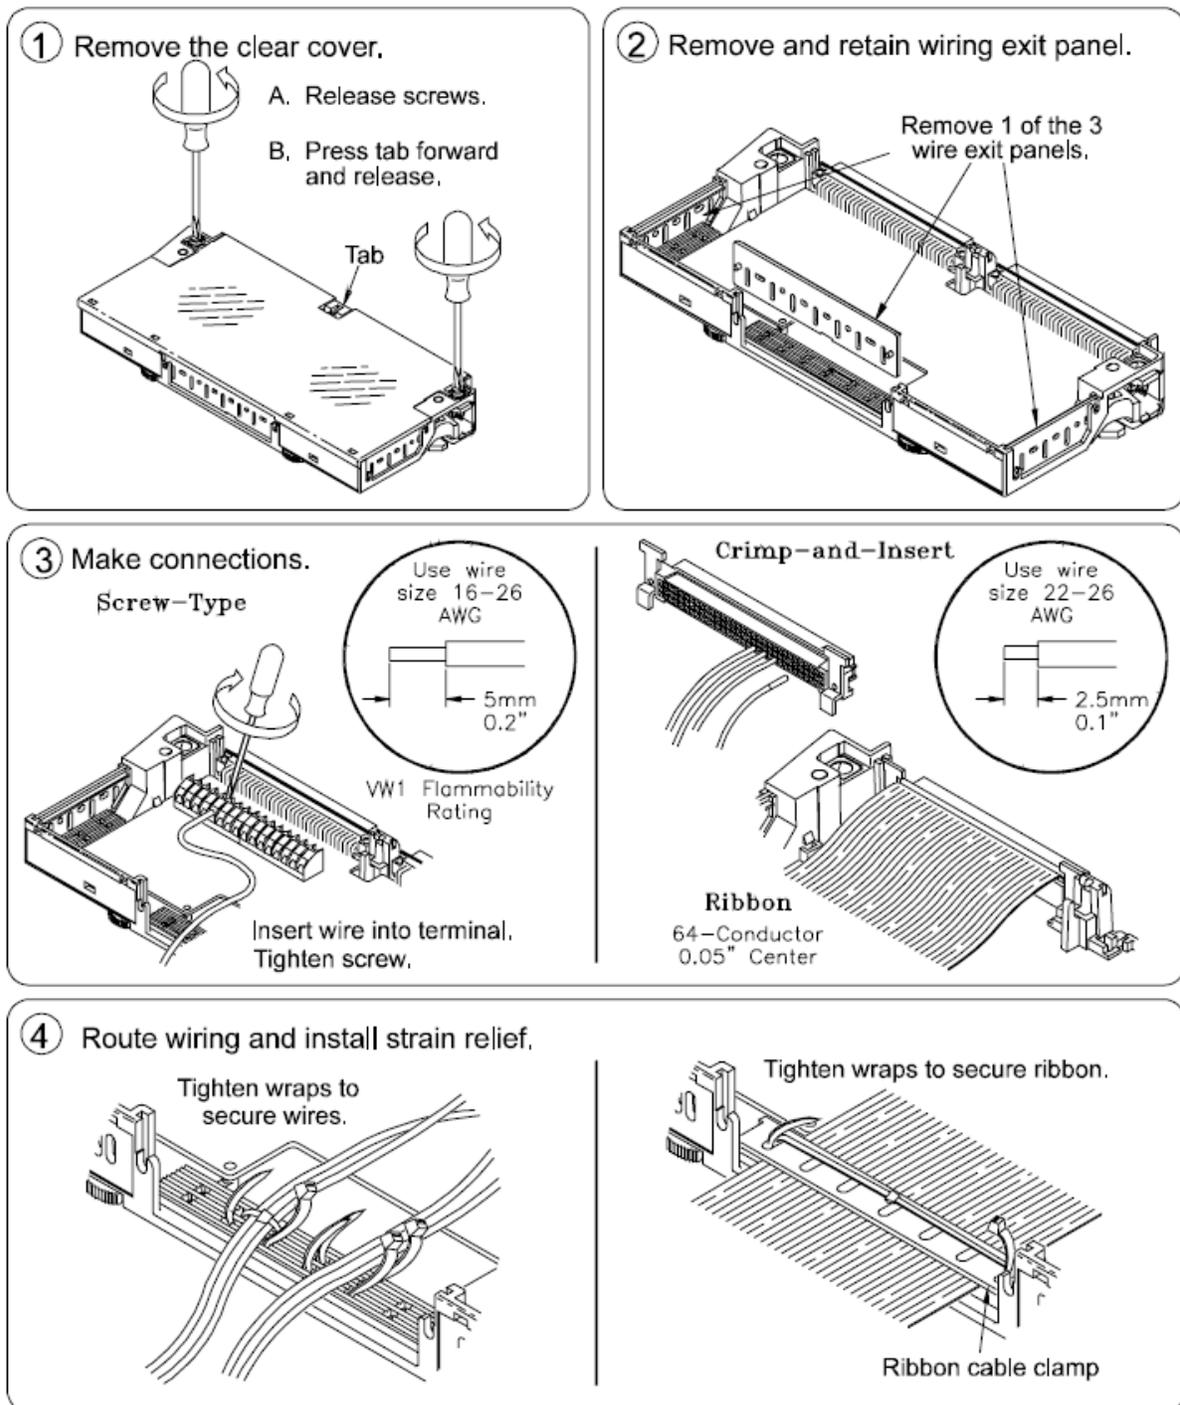


Figure 1-7 Wiring the E1418A Terminal Module

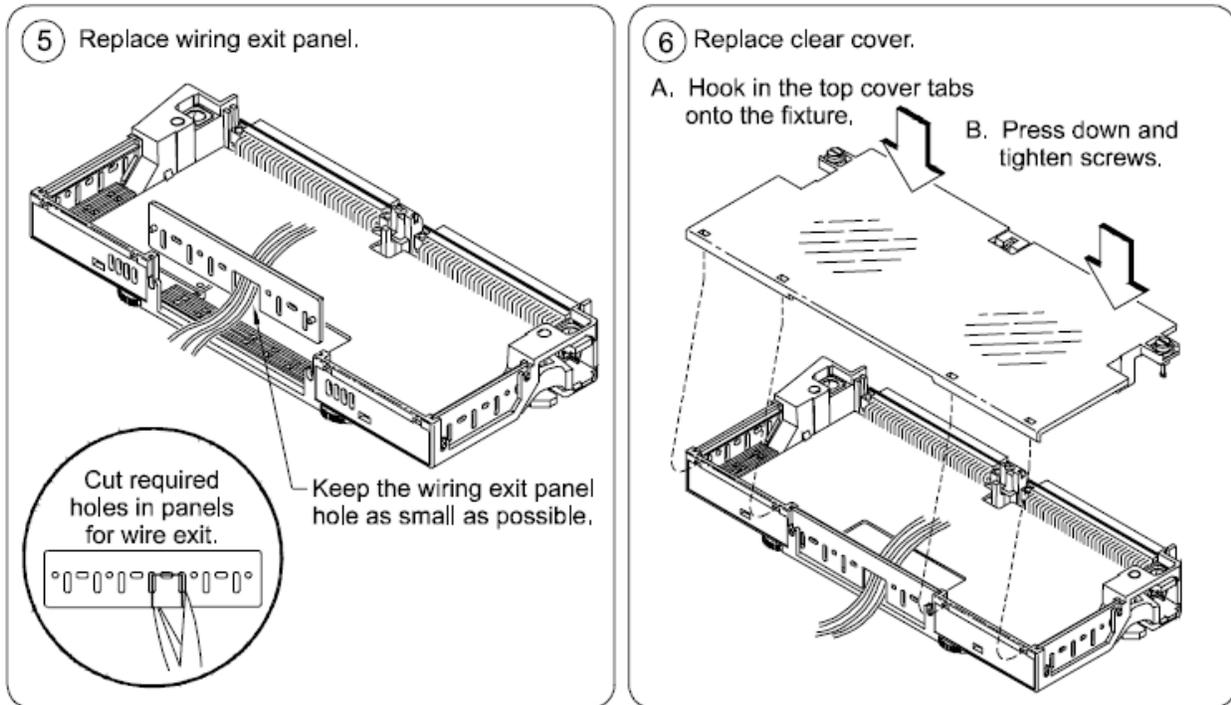


Figure 1-7 Wiring the E1418A Terminal Module (continued from previous page)

Attaching the Terminal Module

Figure 1-8 shows how to attach the E1418A terminal module.

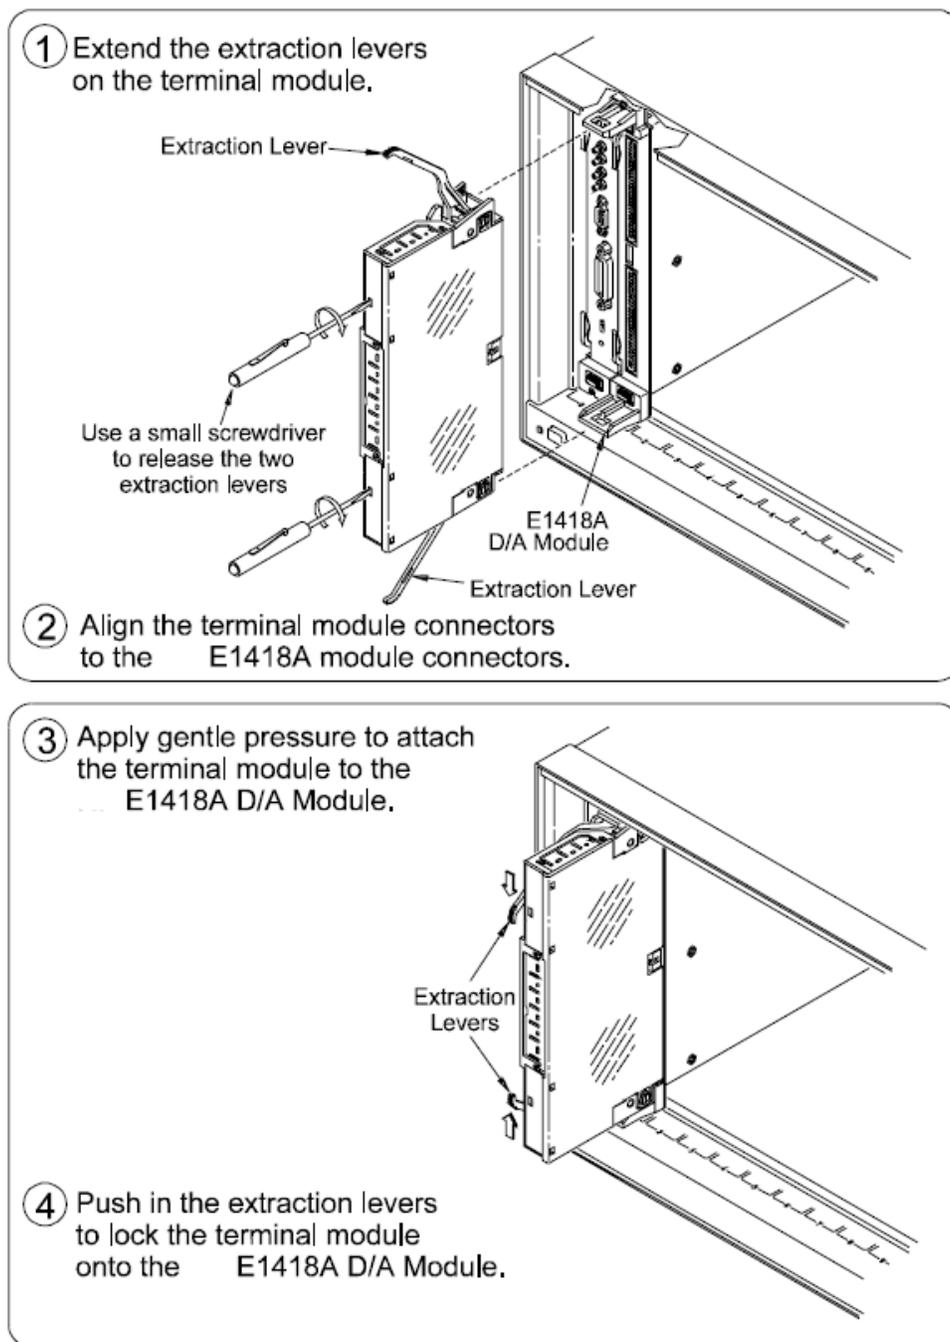


Figure 1-8 Attaching the E1418A Terminal Module

Removing the Terminal Module

Figure 1-9 shows how to remove the E1418A terminal module.

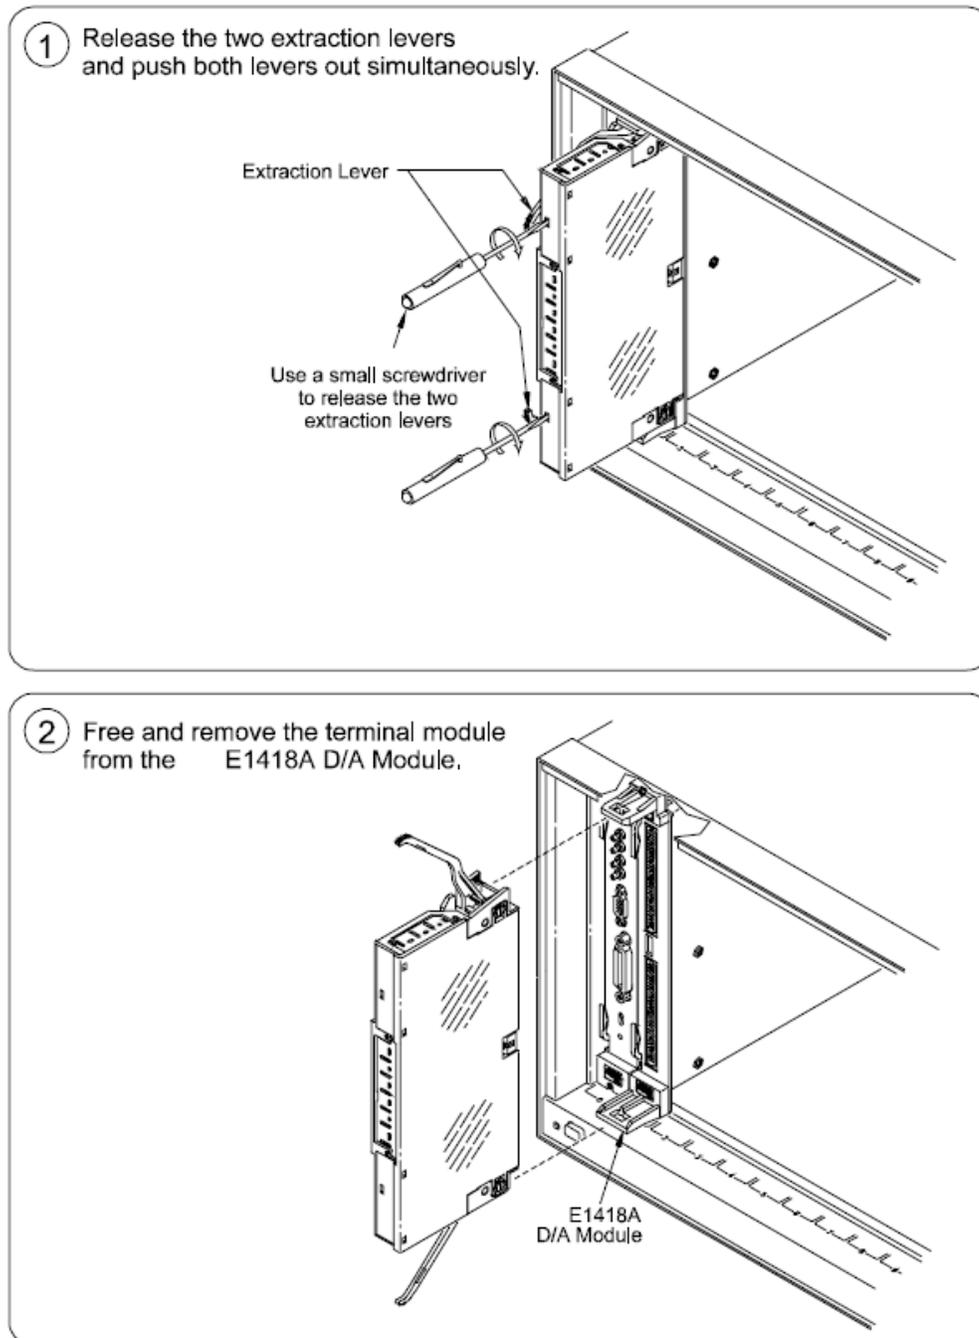


Figure 1-9 Removing the E1418A Terminal Module

Terminal Module Options

Besides the standard screw-type terminal module, the Keysight E1418A can be ordered with the following two options. One option (A3E) provides crimp-and-insert connectors and terminal housing. The other option (A3H) provides a ribbon cable connector and terminal housing.

Option A3E

Keysight E1418A Option A3E can be ordered if a crimp-and-insert terminal module is desired. This allows you to crimp connectors onto wires which are then inserted directly into the Keysight E1418A faceplate connector. Refer to the pin-out diagram to make the connections. The crimp-and-insert connector is shown in Figure 1-10.

NOTE

The pin numbering on the crimp-and-insert connector may not agree with the pin numbering on the Keysight E1418's faceplate connector. Use the pin numbering on the faceplate connector to wire the crimp-and-insert connector.

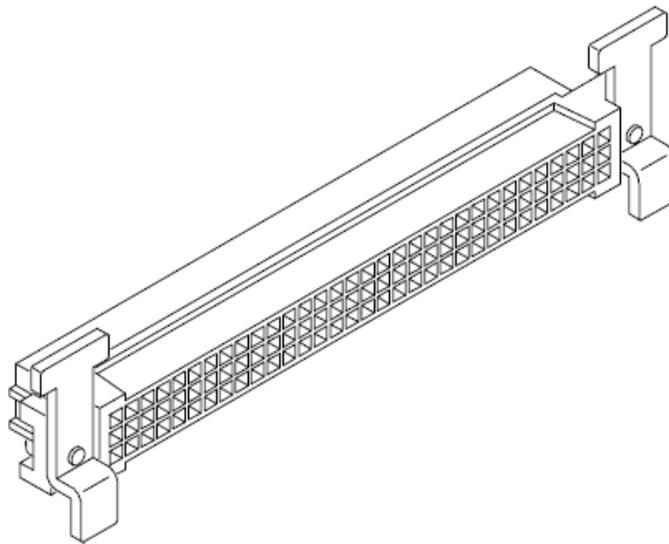



Figure 1-10 Option A3E Crimp-and-Insert Connector

Crimp-and-Insert Terminal Module Accessories

The following accessories are necessary for use with crimp-and-insert Option A3E:

Single-Conductor and Contact


A crimp-and-insert contact is crimped onto one end of a wire. The other end is not terminated. Order Keysight 91510A.

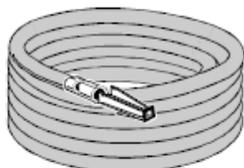

Length: 2 meters
Wire Gauge: 24 AWG
Quantity: 50 each
Insulation Rating: 105°C maximum
Voltage: 300 V

Shielded-Twisted-Pair and Contacts

A crimp-and-insert contact is crimped onto each conductor at one end of a shielded-twisted-pair cable. The other end is not terminated. Order Keysight 91511A.

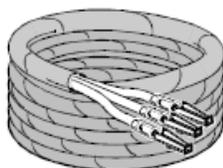

Length: 2 meters
Wire Gauge: 24 AWG
Quantity: 20 each
Outside Diameter: 0,1 inch
Insulation Rating: 250°C maximum
Voltage: 600 V

Jumper Wire and Contacts

A crimp-and-insert contact is crimped onto each end of a single-conductor jumper wire. This jumper is typically used to tie two pins together in a single crimp-and-insert connector. Order Keysight 91512A.



Length: 10 cm
Wire Gauge: 24 AWG
Quantity: 10 each
Insulation Rating: 105°C maximum
Voltage: 300 V

Crimp-and-Insert Contacts

These contacts may be crimped onto a conductor and then inserted into a crimp-and-insert connector. The crimp tool kit is required to crimp the contacts onto a conductor and remove the contact from the connector. Order Keysight 91515A.



Wire Gauge Range: 20-26 AWG
Quantity: 250 each
Plating: Gold Plated Contact
Maximum Current: 2A at 70°C

Crimp-and-Insert Tools

The hand crimp tool (part number Keysight 91518A) is used for crimping contacts onto a conductor. The pin extractor tool (part number Keysight 91519A) is required for removing contacts from the crimp-and-insert connector. These products are not included with Option A3E or with the terminal option accessories listed earlier.

Extra Crimp-and-Insert Connectors

The crimp-and-insert connector is normally supplied with Option A3E. Contact Keysight Technologies if additional connectors are needed. Order Keysight 91484B.

Option A3H

The Ribbon Cable Connector Terminal Option provides a terminal housing and ribbon cable connectors. The connectors are designed to be used with 64-pin 0.05 inch center ribbon cables (not provided). Use Figure 1-12 to make the connections.

NOTE

In Figure 1-12, the center row of each connector is not used in the ribbon cable. The center row of both connectors is module ground (GND).


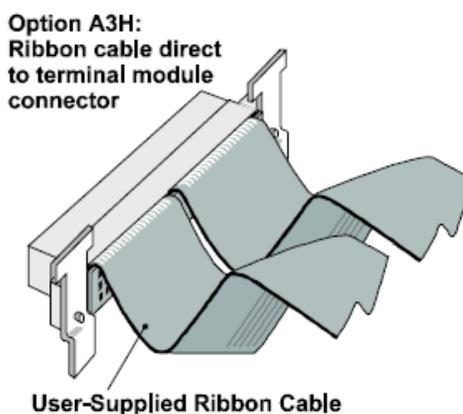


Figure 1-11 Option A3H Ribbon Cable Connector

Option 135

The Terminal Module Housing Option provides a terminal housing with no connectors of any type.

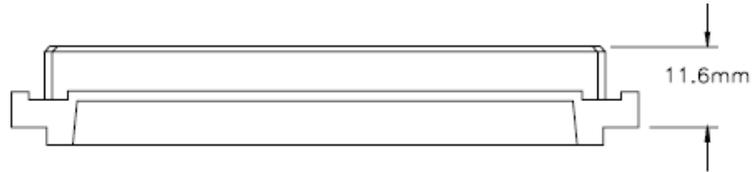

The user-supplied connector must be a DIN 41612 type C female, 11.6 mm dimension as shown above.

Terminal Module Connectors

Figure 1-12 shows the connections at the terminal module connectors.

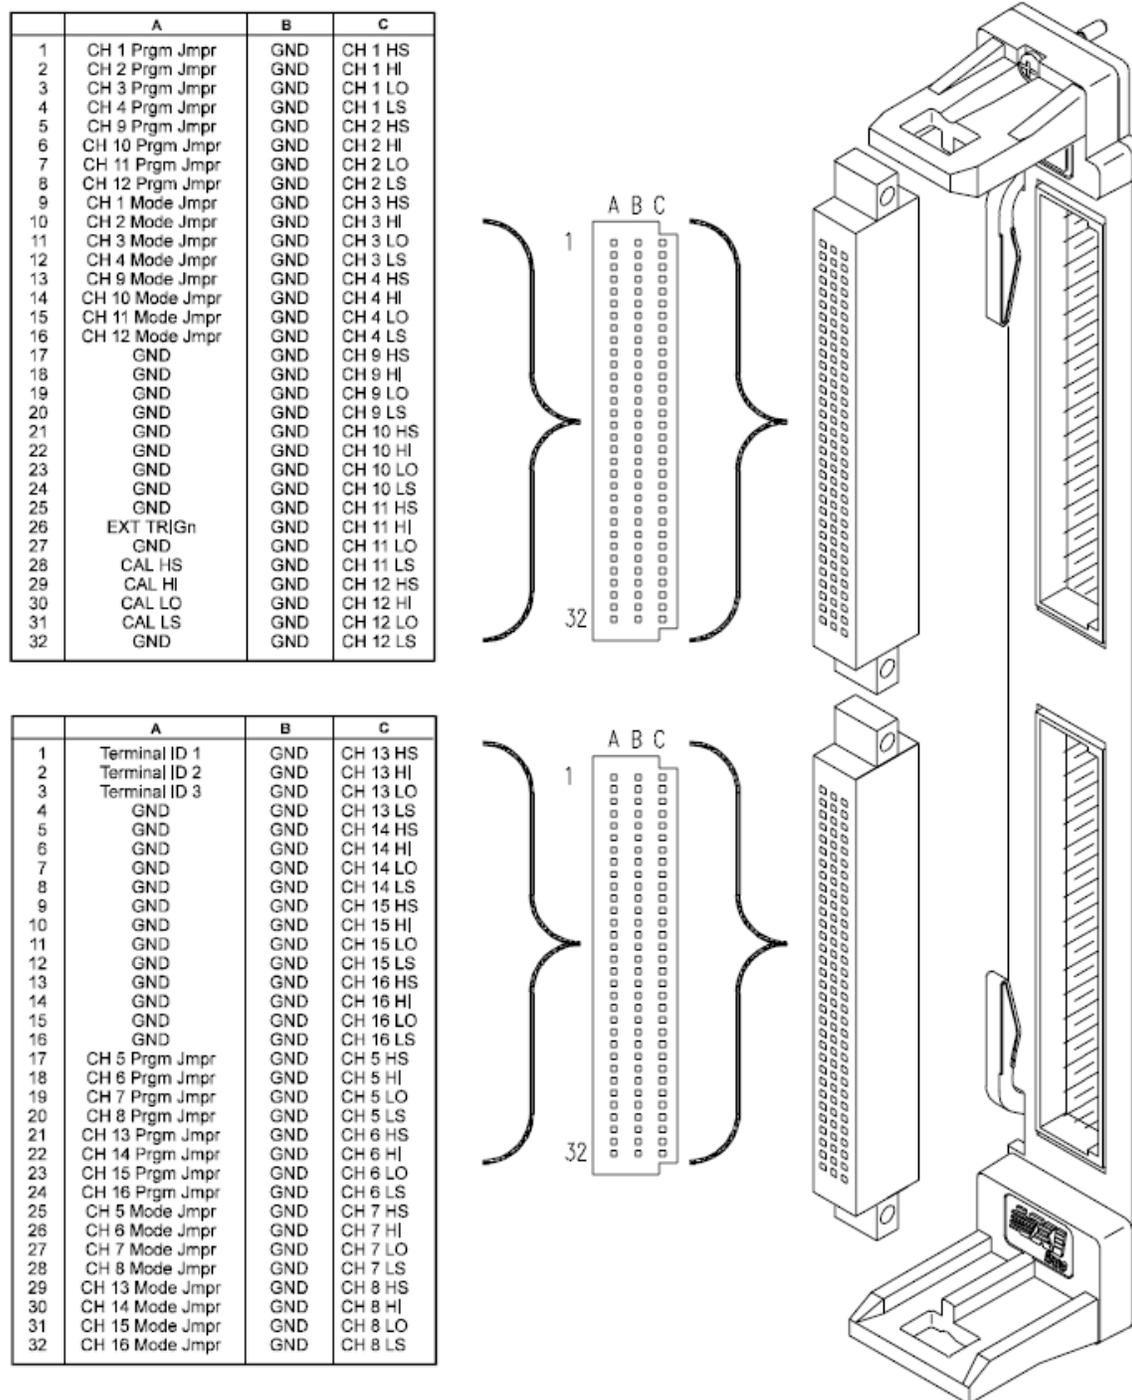


Figure 1-12 E1418A Terminal Module Connector Pinout

Configuring the Terminal Module

The screw-type terminal module contains jumpers that control how the Keysight E1418A operates. The jumpers are shipped in a separate bag with the terminal module. The Keysight E1418A will operate without any jumpers installed. You can, however, store the jumpers on the terminal module for later reconfiguration. Figure 1-13 shows the jumper locations and example settings.

There are two jumpers for each channel; a P/J jumper and a V/I jumper. The two jumpers work together.

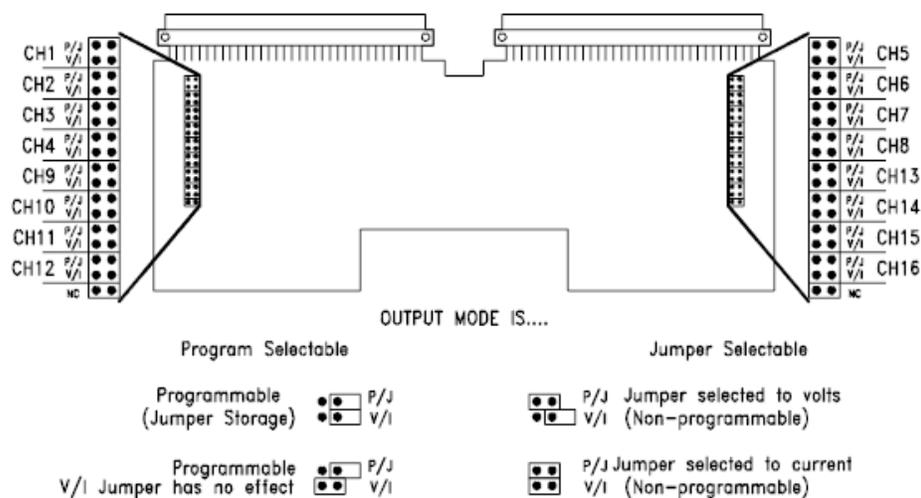


Figure 1-13 P/J and V/I Jumpers

P/J Jumper

The P/J jumper sets the channel output mode to be either Program Selectable or Jumper Selectable. When the jumper is in the program selectable position, the channel output mode can be set via programming commands. In the jumper selectable position, the channel output mode is set via the V/I jumper.

V/I Jumper

The V/I jumper sets the channel output mode to either voltage or current when the P/J jumper is set to the Jumper Selectable position. When the P/J jumper is set to Program Selectable, this jumper has no effect.

NOTE

With no jumpers installed, the module will be in the Program Selectable output mode.

When the P/J Jumper is set to the Jumper Selectable position, the output mode cannot be changed with SCPI commands. The output mode following a *RST Common Command will be the mode set by the V/I jumper.

Options A3E and A3H Terminals

The P/J jumper connection for each channel is named CH X PRGM JMPR in the connection diagram. With no connection to this pin, the module will operate in the Program Selectable mode. Shorting this pin to GND will set the Jumper Selectable mode for channel X.

When CH X PRGM JMPR is shorted to GND, the CH X MODE JMPR pin (corresponding to the V/I Jumper) sets the output mode for channel X. If the pin is open, voltage output mode is selected. If the pin is shorted to GND, current output mode is selected for channel X.

Terminal Module Connections

Each channel has four output lines; HI, LO, HS (Hi Sense), and LS (Low Sense). When using a channel in the voltage output mode, you can use the sense lines to increase accuracy or to compensate for long lead lengths. The sense leads are not used in the current output mode.

Voltage and Current Output Connections

Figure 1-14 shows connections for three types of output. Channel 1 is connected in the 2-wire voltage output mode, the sense leads are not used (and the sense connections need not be made). Channel 2 is connected in the 4-wire voltage output mode. Use this connection for the highest voltage accuracy and to compensate for long lead lengths. Channel 3 is connected for current output mode (sense is not used for current output).

NOTE

The sense leads are internally disconnected for current output. External wiring may be left connected to the sense outputs on the terminal module with no effect.

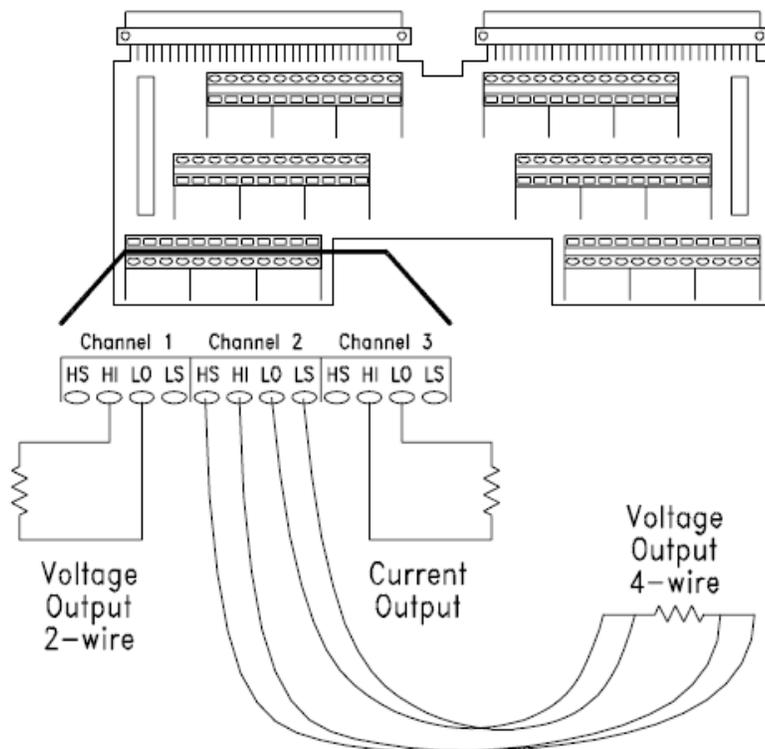


Figure 1-14 Typical Output Connections

Options A3E and A3H Terminals

HI, HS, LO, and LS connections are shown on the diagram.

Combining Channels

You can combine channels in series to obtain higher output voltages or in parallel to obtain higher output currents.

Channels in Series

- All channels connected in series **MUST** be configured as isolated channels (with isolated plug-on modules installed).
- Up to 3 channels may be combined, but the output voltage **MUST NOT** exceed 42 Vdc/42 Vpeak.

Channels in Parallel

- Channels may be either Isolated or Non-Isolated.
- Up to 16 channels may be combined.

Figure 1-15 shows how to combine voltage channels (in series) and current channels (in parallel).

CAUTION

All SERIES CONNECTED output channels MUST be configured as ISOLATED OUTPUTS.

When combining output voltage channels, be sure not to exceed the maximum module isolation rating of 42 Vdc or 42 Vpeak.

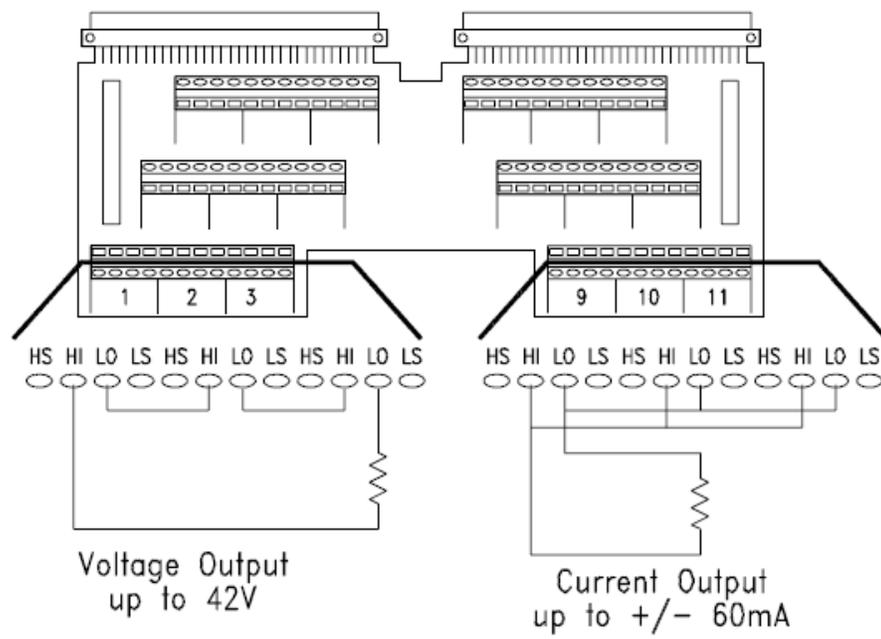


Figure 1-15 Combined Channels Output Connections

Connecting an External Trigger Source

An external trigger input is provided on the terminal module. Use the external trigger to externally synchronize multiple outputs or multiple instruments. The External Trigger uses TTL levels. The trigger occurs when the EXT TRIGn connection is pulled low for at least 1 μ S. Typical connections to the external trigger is shown in Figure 1-16.

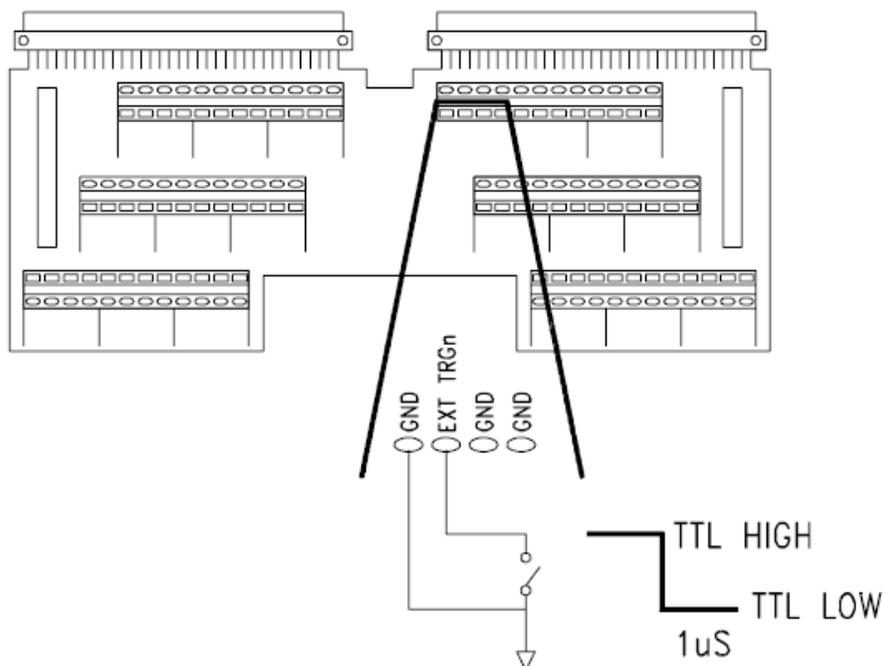


Figure 1-16 External Trigger Connections

Options A3E and A3H Terminals

The external trigger line is located on the upper connector and is labeled EXT TRIGn in the diagram.

Using the CAL Output Terminals

The CAL Output Terminals provide one set of connections that can be used to calibrate the output on all 16 channels. Calibration and adjustment procedures are described in Appendix D.

The CAL output terminals are available on the terminal module. There are four lines; HI, LO, HS (Hi Sense), and LS (Low Sense). Typical CAL output terminal connections are shown in Figure 1-17.

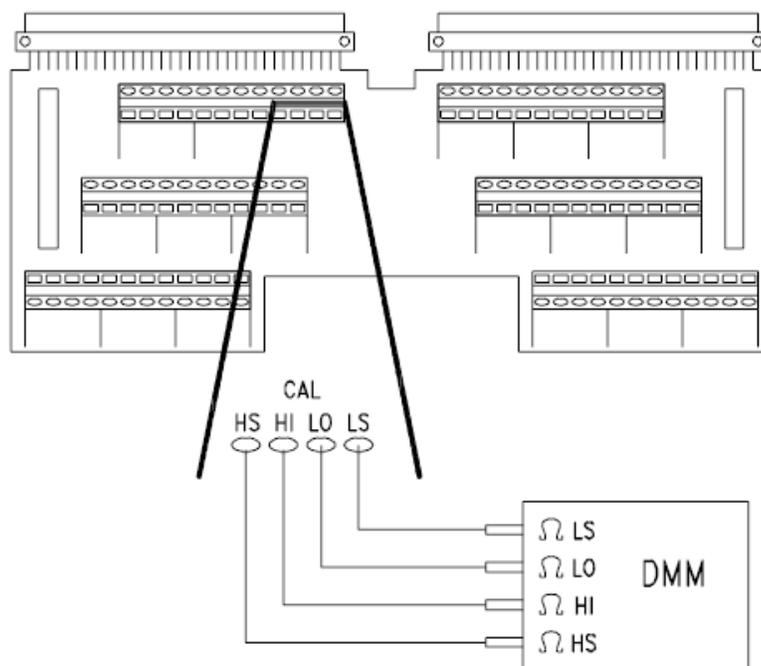


Figure 1-17 Calbus Connections

Options A3E and A3H Terminals

The CAL Output Terminals are located on the upper connector and are labeled CAL HI, CAL HS, CAL LO, and CAL LS in the diagram.

Initial Operation

This section provides a programming example to help verify correct module installation and operation. Additional programming examples and procedures are given in the next chapter.

The examples shown here use BASIC and SCPI (Standard Commands for Programmable Instruments). The example assumes a factory set logical address of 72 for the Keysight E1418A module and uses an Keysight Command Module for command interpretation. Examples in ANSI C are given in the next chapter.

NOTE

This discussion applies to SCPI programming using the driver provided with the module. The SCPI commands are described in Chapter 3 of this manual. Appendix B of this manual describes direct register access.

Device Driver

The Keysight E1418A module is shipped a driver CD. This CD contains the SCPI instrument driver, VXIplug&play drivers, example programs, and Keysight VIC (VXI Installation Consultant). Follow the instructions contained on the CD to properly install the device driver.

The following example shows how to query the command module and verify that the correct device driver is installed:

```
10 DIM A$(256)
20 OUTPUT 70900;"DIAG:DRIV:LIST?"
30 ENTER 70900;A$
40 PRINT A$
50 END
```

In this example, the command module is located on GPIB (interface address 7) and uses a primary address of 09. Responses to this example vary depending upon the drivers loaded on your system. A typical response might look like:

```
E1418,E1418,A.01.00,RAM;SWITCH,SWITCHBOX,A.08.00,ROM;
SYSTEM,E1405A,A.08.00,ROM;IBASIC,IBASIC,A.04.02,ROM;
VOLTMTR,E1326A,A.05.00,ROM;SWITCH,SWITCHBOX,A.07.00,
ROM;COUNTER,E1332A,A.04.02,ROM;COUNTER,E1333A,A.04.02,
ROM;DIG_I/O,E1330A,A.04.03,ROM;D/A,E1328A,A.04.02,ROM
```

Verify that the string " E1418,E1418,A.01.00," is located somewhere within the returned string.

Module Identification

This example can be used to verify that the logical address has been correctly set, that the module is correctly installed, and that the module is communicating with the command module. The terminal module does not need to be installed for this example to work. This example queries the module for the identification string.

```
10 DIM A$[256]
20 OUTPUT 70909; "*IDN?"
30 ENTER 70909; A$
40 PRINT A$
50 END
```

The response should be similar to one of the following:

```
HEWLETT-PACKARD,E1418A_8CH,xxxxAxxxx,A.01.00
```

or

```
HEWLETT-PACKARD,E1418A_16CH,xxxxAxxxx,A.01.00
```

The xxxxAxxxx portion of the response string is the module serial number.

2 Programming Examples

Using This Chapter

This chapter provides examples and descriptions of the most common operations using the Keysight E1418A. Use this chapter to gain an overview of how to program the module, and to obtain programming hints. The examples shown in this chapter are in ANSI C and use SCPI commands to control the module. The SCPI commands are described in detail in Chapter 3 of this manual. SCPI usage conventions and syntax rules are described elsewhere.

This chapter is divided into the following sections:

Querying Module Identification and Configuration	page 46
APPLy Output	page 51
Error Checking	page 53
SOURce Output	page 56
Setting the Output Mode	page 58
Triggering	page 60
Using *OPC?	page 62
Combining Output Channels	page 63

Program Examples

Example programs in ANSI C format are included on the driver CD supplied with the Keysight E1418A. Most examples in this chapter are included. The examples are ASCII files with the *.c extension.

NOTE

The int data type is system dependent. These examples were developed on a system where int is a 16-bit integer. Other systems may define int to be a different width.

In the examples, the Keysight VISA Transition Library is used for I/O operations with the VXIbus. An Keysight command module (Keysight E1405/E1406) is used and controlled via GPIB.

To use the Keysight VISA Transition Library (abbreviated as VTL), include the visa.h header file.

```
#include visa.h
```

Keysight VTL function calls and data types typically begin with the lower case letters vi. Output and enter are performed with functions named viPrintf and viScanf. Both these functions require a session (a VTL defined I/O function) to uniquely identify the device being controlled. In the examples, the session has been named dac.

Querying Module Identification and Configuration

This example will query the module for the identification string and determine the module configuration.

The module identification is obtained using the IEEE-488 Command *IDN?.

!Send query to the module.

*IDN?

!Enter a string.

The string returned should be similar to one of the following:

HEWLETT-PACKARD,E1418A_8CH,xxxxAxxxxx,A.01.00

or

HEWLETT-PACKARD,E1418A_16CH,xxxxAxxxxx,A.01.00

The xxxxAxxxxx portion of the response string is the module serial number.

The module configuration is obtained using the DIAGnostic:CONFiguration? query.

!Send query to the module.

DIAG:CONF?

!Enter six integers and decode the integers.

The DIAG:CONF? query returns six integers. The six integers returned contain the module configuration and have the following meaning.

Integer Returned	Meaning
1st	Expansion Board ID in the form: 0 = present, 7 = none (expansion board contains channels 9 through 16)
2nd	Terminal Module ID in the form 0 = screw type, 7 = none or other
3rd	Isolated/Non-isolated Channel status A bit set to 0 indicates an isolated channel A bit set to 1 indicates a non-isolated channel or no plug-on module installed (DO NOT operate the module without a plug-on module) Bits 0 – 15 correspond to channels 1 – 16, respectively*
4th	Channel Mode A bit set to 0 indicates a current output channel A bit set to 1 indicates a voltage output channel Bits 0 – 15 correspond to channels 1 – 16, respectively*
5th	Channel Output State A bit set to 0 indicates the channel output relay is closed A bit set to 1 indicates the channel output relay is open Bits 0 – 15 correspond to channels 1 – 16, respectively*
6th	Channel Mode Programmable State (P/J Jumper) A bit set to 0 indicates a channel is not mode programmable A bit set to 1 indicates a channel is mode programmable Bits 0 – 15 correspond to channels 1 – 16, respectively*

* For 8-channel configurations, the upper 8 bits of integers 3, 4, 5, and 6 are set to 1's.

For example, if the following six integers are returned, the module has the configuration indicated.

Integer	Decimal Value	Configuration
1st	7	No expansion board installed (Only channels 1 through 8).
2nd	7	No Terminal Module installed or unknown terminal module installed.
3rd	-1	All channels are non-isolated.
4th	-1	All channels are voltage output channels.
5th	-1	All channel outputs are disabled (all output relays are open).
6th	-1	All channels are output mode programmable.

Configuration Example

The following program segment demonstrates how to read the module identification string and the configuration. The configuration integers are bit manipulated using the C operator for bit shifting `result = result <<1` (a one bit shift to the left).

```

/** FUNCTION PROTOTYPES **/
void main (void);
void err_handler(ViSession vi, ViStatus x);/* VTL error routine*/
void sys_err(ViSession resource);/* Checks for SCPI programming errors */

/** GLOBAL **/
ViStatus err;
ViSession defaultRM, cmd, dac;

void main (void)
{
    int i,num_chan,result = {0},config [6]={0};
    char buf[256] = { 0 };

    /*** Check the module identification      ***/

    err=viPrintf(dac, "*IDN?\n");           /* request id from the module */
    err=viScanf(dac, "%t", &buf);         /* enter string returned */ printf
    ("Module is identified as a %s\n", buf); /* print the result      */

    /*** Get the module configuration      ***/

    err=viPrintf(dac, "DIAG:CONF?\n"); /* request module configuration */
    err=viScanf(dac, "%,6d", &config); /* returns six integers      */

    /* Decode the first integer */

    result=config[0]; /* Expansion board */
    if (result < 7)
    {
        printf ("Module is a 16 channel device\n");
        num_chan = 16;
    }
    else
    {
        printf ("Module is an 8 channel device\n");
        num_chan=8;
    }
}

```

```
/* Decode the second integer */

result = config [1];/* Terminal Module */
if (result > 0)
{
printf ("Module does NOT have a terminal module installed\n");
}
else
{
printf ("Module has a screw-type terminal module installed\n");
}

/* Decode the third integer */

result=config[2];/* Isolated or non-isolated outputs */
if (num_chan < 9) result = result << 8; /* strip upper 8 bits */
for (i=num_chan;i>0;i --)
{
if (result >= 0x8000)
{
printf ("Channel %d is configured for non-isolated output\n",i);
}
else
{
printf("Channel %d is configured for isolated output\n",i);
}
result = result << 1;
}

/* Decode the fourth integer */

result=config[3];/* Output Mode Voltage or Current */
if (num_chan < 9) result = result << 8; /* strip upper 8 bits */
for (i=num_chan;i>0;i --)
{
if (result >= 0x8000)
{
printf ("Channel %d is set to voltage output mode\n",i);
}
else
{
printf("Channel %d is set to current output mode\n",i);
}
result = result << 1;
}
```

```
}

/* Decode the fifth integer */

result=config[4];/* Channel relay open or closed */
if (num_chan < 9) result = result << 8; /* strip upper 8 bits */
for (i=num_chan;i>0;i --)
{
if (result >= 0x8000)
{
printf ("Channel %d output is disabled\n",i);
}
else
{
printf("Channel %d output is enabled\n",i);
}
result = result << 1;
}

/* Decode the sixth integer */

result=config[5];/* P/J Jumper position */
if (num_chan < 9) result = result << 8; /* strip upper 8 bits */
for (i=num_chan;i>0;i --)
{
if (result >= 0x8000)
{
printf ("Channel %d output mode is programmable\n",i);
}
else
{
printf("Channel %d output mode is fixed and jumper selected\n",i);
}
result = result << 1;
}

}
```

APPLy Output

The APPLyn subsystem commands provide the easiest method to output voltages or currents.

```
/* Set channel 1 for 5.0 Volt output */
APPLy1:VOLTage 5.000
/* Channel is set to voltage output and 5.000 V applied */
* Set channel 8 for 10 mA output */
APPLy8:CURRent 0.0100
/* Channel is set to current output and 10 mA applied */
```

The APPLyn subsystem outputs the voltage or current specified on the channel specified immediately. The output relay for that channel is closed. Other channel outputs and output states are not disturbed.

An APPLyn subsystem command performs several actions with a single command. Each APPLyn command affects a single channel and:

- Sets the channel output mode (voltage or current).
- Sets the output value (volts or amps).
- Enables the outputs (closes the output relay).

The output channel remains enabled, and outputs the last programmed voltage or current value, unless you take explicit action to turn off the output. For example, if you send two APPLyn commands to the same channel, the first command sets an output value and closes the output relay. The second command changes only the output value (since the relay is already closed).

```
/* Set channel 1 for 5.0 Volt output */
APPLy1:VOLTage 5.000
/* Channel 1 is set to voltage output and 5.000 V applied */
/* Now set channel 1 for 6.0 Volt output */
APPLy1:VOLTage 6.000
/* Channel 1 is set to voltage output and 6.000 V applied */
```

The commands above will set a 5.000 Volt output on Channel 1, and then set a 6.000 Volt output on channel 1. The output relay is not affected by the second command.

The output can also be disabled before changing the mode or output value. Use the OUTPutn commands to disable the output.

```
/* Set channel 1 for 5.0 Volt output */
APPLy1:VOLTage 5.000
/* Disable the output */
OUTPut1 OFF
/* Channel 1 output relay is opened */
/* Now, enable the output */
OUTPut1 ON
/* Channel 1 is set to voltage output and 5.000 V applied */
```

```
/* Disable the output */  
OUTPut1 OFF  
/* Now set channel 1 for 20 mA current output */  
APPLY1:CURRent .0200  
/* Channel 1 is set to current output and 20 mA applied */
```

The OUTPut subsystem commands only affect the output relay. The programmed mode and output value for a given channel is not changed. Once the mode is set and the desired output value programmed, the output can be turned on or off as needed with the OUTPutn[:STATe] command.

It is also possible, with the APPLyn commands, to change the channel output mode from voltage to current.

```
/* Set channel 1 for 5.0 Volt output */  
APPLY1:VOLTage 5.000  
/* Channel 1 is set to voltage output and 5.000 V applied */  
/* Now set channel 1 for 20 mA current output */  
APPLY1:CURRent .0200  
/* Channel 1 is set to current output and 20 mA applied */
```

During the change from voltage to current (or current to voltage), the channel output relay is opened. Sending a command sequence similar to the one above performs the following actions:

- Programs channel 1 to the voltage mode and 5.000 Volts output.
- Closes the channel 1 output relay.
- Opens the channel 1 output relay.
- Programs channel 1 to current mode and 20 mA output.
- Closes the channel 1 output relay.

Error Checking

To develop programs you will need to create one or more error checking routines. For example, you will need routines to check for errors in the following operations:

- I/O operations to the VXIbus, and
- SCPI commands to the module.

I/O Error Checking

I/O error checking is specific to the type of I/O library you are using to communicate with the VXIbus. In this manual and on the CD, the Keysight VISA Transition Library is used.

Function calls to the Keysight VISA Transition Library (VTL) typically begin with a lower case vi. For example, viPrintf is a VTL output function call. The Keysight VTL I/O function calls return a variable that can be tested for errors against the VTL variable VI_SUCCESS. In the examples, the variable err is used to trap the VTL errors and is declared as a global variable of the ViStatus type (defined in visa.h).

I/O error checking is illustrated in the following program example. The VTL error checking function is named error_handler. Errors found are reported to the standard output device.

SCPI Error Checking

You must also check for errors reported by the SCPI driver. The SCPI driver reports errors in response to the SYSTem:ERRor? query.

```
/* Repeat ?          */
SYST:ERR?
/* ?until no errors found */
```

The query returns two values: an integer error code and an error description string. The integer value returns +0 and the string returns " No Error" if no errors are found.

SCPI errors are reported in an error queue. The error queue is a first in, first out queue. Each response to the SYSTem:ERRor? query removes one error from the queue. Multiple SCPI errors may be generated by a single

incorrect command and the error queue should be read until it reports +0, "No Error".

SCPI error checking is illustrated in the following program example. The SCPI error routine is named sys_error. Errors found are reported to the standard output device.

```

•
•
•
/** FUNCTION PROTOTYPES **/
void main (void);
void err_handler(ViSession vi, ViStatus x);/* VTL error routine*/
void sys_err(ViSession resource);/* SCPI error routine*/
?
•
•
•
/** GLOBAL **/ ViStatus err;
ViSession defaultRM, cmd, dac;
?
•
•
•
void main (void)
{
  /** Open the resource manager, command module, and dac sessions ***/
  viOpenDefaultRM (&defaultRM);
  viOpen (defaultRM, CMD_ADDRESS, VI_NULL, VI_NULL, &cmd);
  viOpen(defaultRM, DAC_ADDRESS, VI_NULL, VI_NULL, &dac);
  /** Set the timeout for the dac ***/
  viSetAttribute(dac, VI_ATTR_TMO_VALUE, 10000); /* 10 second timeout */
  err=viPrintf(dac, "*RST\n"); /* reset the dac */ if(err <
VI_SUCCESS) err_handler(dac, err); /* VTL error check */ sys_err (dac);
/* SCPI error check */
•
•
•
}
/**VTL Error handling function ***/
void err_handler (ViSession dac, ViStatus err)
{
  char buf[1024]={0}; viStatusDesc(dac,err,buf); printf("VTL ERROR = %s\n",
buf); return;
}
/**End of VTL error handler ***/
•
•
•
/** SCPI Error check***/
void sys_err(ViSession resource)
{
  char buf [1024] = {0};

```

```
int err_no;
err = viPrintf (resource, "SYST:ERR?\n");/* query error queue*/
if (err < VI_SUCCESS) err_handler(resource,err);
err = viScanf (resource,"%d\t",&err_no,&buf);/* get error number and
string */
if (err < VI_SUCCESS) err_handler(resource,err);
while (err_no != 0)
{
printf ("\nCommand Error: %d,%s\n",err_no,buf);
err = viPrintf (resource, "SYST:ERR?\n");/* query error queue*/
if (err < VI_SUCCESS) err_handler(resource,err);
err = viScanf (resource,"%d\t",&err_no,&buf);/* get error number and
string */
if (err < VI_SUCCESS) err_handler(resource,err);
}
return;
}
/** End of SCPI error check **/
```

SOURce Output

Setting an output on a channel is a three step process:

- Set the channel mode (voltage or current)
- Set the channel output value (volts or amps)
- Enable the output (close the channel output relay)

As described previously, a single APPLyn command performs all three of these actions. In some cases you may need more control of each step in the output process. The following commands perform the same action as a single APPLyn command.

```
/* Set channel 1 voltage mode */
SOURce1:FUNcTion:MODE VOLTage
/* Channel 1 is set to voltage output */
/* Set channel 1 voltage output */
SOURce1:VOLTage 5.000
/* Channel 1 is set to output 5.000 Volts */
/* Turn on the output */
OUTPut1 ON
/* Channel 1 output is enabled */
```

The SOURcen subsystem contains two types of commands to set current or voltage output. The type used in the above examples has the form:

```
SOURcen:CURREnt[:LEVel][:IMMediate][:AMPLitude] <value>
SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude] <value>
```

The implied commands (enclosed in brackets []) are not shown in the examples. The commands shown above immediately program the output values. The SOURcen subsystem also contains commands of the form:

```
SOURcen:CURREnt[:LEVel]:TRIGgered[:AMPLitude] <value>
SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude] <value>
```

These commands are used with the trigger system to control when the outputs are applied. The trigger system is described elsewhere.

Like the APPLyn commands, you can change the output value by sending additional SOURcen commands. Changing the output value with the SOURcen commands does not open the output relay.

```
/* Set channel 1 voltage mode */
SOURce1:FUNcTion:MODE VOLTage
/* Set channel 1 voltage output */
SOURce1:VOLTage 5.000
/* Turn on the output */
OUTPut1 ON
/* Channel 1 output is enabled */
/* Send a new output voltage */
```

```
SOURce1:VOLTage 15.000
```

Changing the output mode with the SOURcen commands opens the output relay.

```
/* Set channel 1 voltage mode */
SOURce1:FUNCTION:MODE VOLTage
/* Set channel 1 voltage output */
SOURce1:VOLTage 5.000
/* Turn on the output */
OUTPut1 ON
/* Channel 1 output is enabled and 5 volts applied */
/* Send a new output mode */
SOURce1:FUNCTION:MODE CURRent
/* Channel 1 output is disabled */
/* Set channel 1 output current */
SOURce1:CURRent .01
/* Channel 1 is programmed for 10 mA */
/* Turn on the output */
OUTPut1 ON
/* Channel 1 output is enabled and 10 mA applied */
```

Setting the Output Mode

The output mode can be set using commands in the SOURce subsystem.

```
SOURcen:FUNction:MODE VOLTage  
SOURcen:FUNction:MODE CURRent
```

The mode can also be set on the terminal module with the P/J jumpers and V/I jumpers. If the mode is set to Jumper selectable with the P/J jumper on the terminal module, the mode cannot be changed with the SCPI commands and the output mode is set by the V/I jumper (also on the terminal module).

For example, if on the terminal module, channel 1 P/J jumper is set to Jumper Selectable and the V/I jumper is set to current mode, the following command will each generate an error:

```
SOURce1:FUNction:MODE VOLT
```

The error returned is:

```
+3012 Channel cannot be programmed to this mode, check jumpers
```

Appendix C contains a full list of the errors that may be generated by the SCPI commands for the Keysight E1418A.

Controlling the Output Relay

There are three programming methods to enable the output of a channel (close the output relay).

- The `APPLyn:VOLTage <value>` or `APPLyn:CURRent <value>` command both program an output value and close the output relay on a single channel.
- The `OUTPutn:STATe ON` command closes the output relay for a single channel. The last programmed mode and output value remains in effect.
- The `DIAGnostic:OUTPut:ALL:STATe ON` command closes all output relays. The order of relay closure is not guaranteed.

There are three programming methods to disable the output of a channel (open the output relay).

- Send the `OUTPutn:STATe OFF` command to open a single channel output relay without changing the programmed mode or output value for that channel or affecting any other channels.
- Send `*RST` to program all channels to voltage mode, 0 volts output, and open all output relays. `*RST` will not change the output mode if the P/J jumper is set to Jumper Selectable.
- Send the `DIAGnostic:OUTPut:ALL OFF` command to open all output relays without changing the programmed mode or output value.

The output relay will also be opened and then closed by a change of output mode using the `APPLy` commands.

- An `APPLyn:VOLTage <value>` followed by an `APPLyn:CURRent <value>` command (or vice versa) will open and then close the output relay.

All output relays will be opened, and left open, by the following commands.

- The `SOURcen:FUNCTion:MODE VOLTage` or `SOURcen:FUNCTion:MODE CURRent` commands set output mode for a single channel and opens the output relay for that channel. Other channels are not affected.
- The `*RST` command performs a reset and leaves the output relays open on all channels (the command also programs all channels to voltage mode, 0 volts output unless the P/J jumper is set to Jumper Selectable).
- The `*TST?` command performs a self-test and leaves the output relays open on all channels. Programmed output modes are restored following the self-test.

Triggering

To synchronize outputs to external events, backplane events, or software events use the TRIGger subsystem commands. Triggering an output from the module involves four steps:

- 1 Set the trigger source.
- 2 Set one or more channels for triggered output.
- 3 Put the trigger system in the wait-for-trigger state.
- 4 Send the trigger event.

The TRIGger:SOURce <source> command sets the trigger source. One of four trigger sources can be specified.

- VXIbus backplane trigger – one of the eight TTL trigger lines defined in the VXIbus P2 connector. The lines are named *TTLTRG0 through *TTLTRG7. Any one of these trigger lines may be used as a trigger source.
- Software trigger – generated within the controlling program.
- Immediate trigger – places the trigger system in the wait-for-trigger state and then immediately triggers the output.
- External Trigger – an input on the terminal module. Use this source to synchronize the outputs to an external event.

The SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude] and SOURcen:CURREnt[:LEVel]:TRIGgered[:AMPLitude] commands program a channel output value when the trigger conditions are met.

The INITiate:IMMediate command places the trigger system in the wait-for-trigger state. The trigger event depends upon the trigger source set.

The trigger system is common to all channels in the module. That is, a single trigger event triggers the output on all channels that are waiting for the trigger. The SOURce subsystem contains commands to put each channel in the wait-for-trigger state.

```


/* Set the trigger source for software trigger*/
TRIGger:SOURce HOLD
/* Set channels 1 and 2 for triggered output*/
SOURce1:VOLTage:TRIGgered 1.5000
SOURce2:VOLTage:TRIGgered -2.5000
/* Close the output relays*/
OUTPut1 ON OUTPut2 ON
/* Put the trigger system in the wait-for-trigger state */
INITiate
/* Send the trigger event*/
TRIGger:IMMediate
/* Channels 1 and 2 output the programmed voltages */

```

Note that the channels must be set for triggered output (using the `SOURce` subsystem) before the trigger system is changed to the wait-for-trigger state (using the `INITiate` command). If you send the `SOURcen` commands after the `INITiate` command, the following error is reported:

+3014 Illegal while initiated

Once the outputs have been triggered (using `TRIGger:IMMEDIATE` in the previous example) the trigger system is set back to the trigger idle state. New triggered channel output values can be programmed and the trigger system put in the wait-for-trigger state. The triggering process is illustrated below.

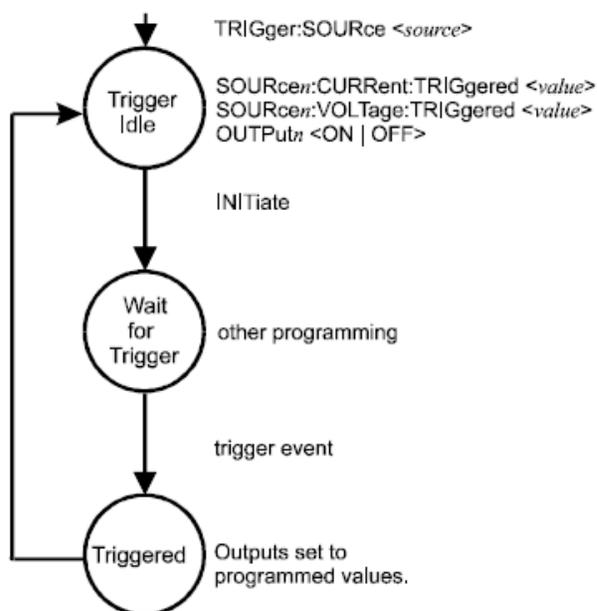

NOTE

Once an output is enabled and a voltage or current output, that value remains on the output. Sending subsequent `SOURn:VOLT:TRIG` or `SOURn:CURR:TRIG` commands will not change the output value until the trigger event is received. The output may be disabled (output relay opened) with the `OUTPn OFF` command.

The trigger source set using the `TRIGger:SOURce` command remains in effect until it is changed or a reset occurs. Following a reset (`*RST`) the trigger source is set to `HOLD`.

Using *OPC?

As shown, the examples have made no attempt to coordinate the program execution with the Keysight E1418A module. In some cases, you may need to pause program execution until the module has completed executing the commands.

The IEEE-488 common command *OPC? can be used to keep the program and the module synchronized. The *OPC? query returns a 1 when all programmed operations are complete. The program can wait for the response before executing additional statements. The returned value is unimportant (always a 1).

```
/* Set channel 1 voltage mode */
SOURCE1:FUNCTION:MODE VOLTage
/* Set channel 1 voltage output */
SOURCE1:VOLTage 5.000
/* Turn on the output */
OUTPut1 ON
*OPC?
/* enter the response          */
```

*OPC? is used to synchronize the program with the module since program execution waits for the response. The command may be combined using the ; as described under “ Linking Commands.” For example,

```
/* Set channel 1 voltage mode */
SOURCE1:FUNCTION:MODE VOLTage;*OPC?
/* enter the response          */
```

Combining Output Channels

Multiple outputs may be combined to obtain higher voltage or current outputs. A triggered output is recommended for combined channels. The general sequence used to control combined channels is:

- 1 Set the trigger source.
- 2 Close the output relays.
- 3 Set the desired output on all combined channels.
- 4 Trigger the output.

For example, when three current channels are combined in parallel, the following commands can be used.

```
/* Set the trigger source for external trigger*/
TRIGger:SOURce EXT
/* Close the output relays*/
OUTPut9 ON OUTPut10 ON OUTPut11 ON
/* Set channels 9, 10, and 11 for triggered output*/
SOURce9:CURRent:TRIGgered MAX
SOURce10:CURRent:TRIGgered MAX
SOURce11:CURRent:TRIGgered .0100
/* Put the trigger system in the wait-for-trigger state */
INITiate
/* Wait for the trigger event*/
/* When the trigger occurs?*/
/* ...output 50 mA*/
```

When combining channels in parallel, for increased current output, channels may be configured with either isolated or non-isolated plug-on modules. When combining channels in series, for increased voltage output, all combined channels MUST be configured with isolated plug-on modules.

CAUTION

When combining output voltage channels (series connections) you must ensure that the output does not exceed the maximum isolation rating of ± 42

Vdc/42 Vpeak. Up to three channels may be combined, but the controlling program must ensure that all three channels together are NEVER set beyond ± 42 Vdc.

3 Keysight E1418A SCPI Command Reference

Using This Chapter

This chapter describes Standard Commands for Programmable Instrumentation (SCPI) and summarizes IEEE 488.2 Common (*) Commands applicable to the Keysight E1418A D/A Converter Module. This chapter contains the following sections:

Command Types	page 65
SCPI Command Reference	page 68
ABORt Subsystem	page 69
APPLy Subsystem	page 69
CALibration Subsystem	page 72
DIAGnostic Subsystem	page 82
INITiate Subsystem	page 86
OUTPut Subsystem	page 87
SOURce Subsystem	page 90
STATus Subsystem	page 99
SYSTem Subsystem	page 105
TEST Subsystem	page 106
TRIGger Subsystem	page 109
IEEE-488.2 Common Command Quick Reference	page 112
Keysight E1418A Command Quick Reference	page 113

Command Types

Commands are separated into two types: IEEE 488.2 Common Commands and SCPI Commands.

Common Command Format

The IEEE 488.2 standard defines the common commands that perform functions like reset, self-test, status byte query, etc. Common Commands are four or five characters in length, always begin with the asterisk character (*), and may include one or more parameters. The command keyword is separated from the

first parameter by a space character. Common commands are not documented, except in a general manner, in this manual. Some examples of common commands are:

```
*RST
*ESR 32
*STB?
```

SCPI Command Format

SCPI commands perform functions like setting outputs, querying instrument states, or retrieving data. The command structure is a hierarchical structure that usually consists of a top level (or root) command, one or more lower level commands, and their parameters. The following example shows part of a typical subsystem:

```
SOURcen:
  FUNCtion:
    MODE <CURRent | VOLTage>
```

SOURcen: is the root command (where n is replaced by the channel number in the range of 1 to 16), FUNCtion: is a second level command, MODE is a third level command, and <CURRent | VOLTage> is an input parameter.

Command Separator

A colon (:) always separates one command from the next lower level command. This is illustrated as follows:

```
SOURcen:FUNCtion:MODE VOLT
```

Colons separate the root command from the second level (SOURcen:FUNCtion) and the second from third level (FUNCtion:MODE), and so forth.

Abbreviated and Short Commands

The command syntax shows most commands as a mix of upper and lower case letters. The upper case letters indicate an abbreviated spelling for the command. For shorter program lines, send only the abbreviated form. For better program readability use the entire command. The instrument will accept either the abbreviated form or the entire command.

For example, if the command reference syntax shows the command TRIGger, then TRIG and TRIGGER are both acceptable forms. Other forms of TRIGger, such as TRIGG or TRIGGE will generate an error.

The instrument does not distinguish between upper case and lower case characters. Therefore TRIGGER, trigger, and TrigGeR are all acceptable.

Command keywords can be entered in their full form, as shown above, or can be entered in their short form. In this manual, the entry required in short form commands is always capitalized. The short form is generally used for examples in this manual.

Implied Commands

Implied commands appear in square brackets ([]) in the command syntax. (Note that the brackets are not part of the command and are not sent to the instrument.) Suppose you send a second level command but do not send the preceding implied command. In this case, the instrument assumes you intend to use the implied command and it responds as if you had sent it. Examine this excerpt from the STATus subsystem shown below:

```
STATus:
  OPERation
    [:EVENT]?
```

The third level command, EVENT, is implied. To read the value of the Event Register, you can use either:

```
STATus:OPERation?

or

STATus:OPERation:EVENT?
```

Parameters

Parameters are enclosed in greater than/less than symbols (< >) in the command syntax. When more than one parameter is allowed, the parameters are separated by a vertical line (|).

Parameter Types. The following table contains explanations and examples of parameter types you might see later in this chapter. Parameters must always be separated from the keywords by a space.

Parameter Type	Explanations and Examples
Numeric	Accepts all commonly used decimal representations of numbers including optional signs, decimal points, and scientific notation. 123, 123E2, -123, -1.23E2, .123, 1.23E-2, 1.23000E-01. Special cases include MIN, MAX, and DEF.
Boolean	Represents a single binary condition that is either true or false. ON, OFF, 1, 0.
Discrete	Selects from a finite number of values. These parameters use mnemonics to represent each valid setting. An example is the SOURcen:FUNCTION:MODE <mode> command where the <mode> parameter can be either CURRENT or VOLTage.

Optional Parameters. Parameters shown within square brackets ([]) are optional parameters. (Note that the brackets are not part of the command and are not sent to the instrument.) If you do not specify a value for an optional parameter, the instrument chooses a default value.

Linking Commands

Linking IEEE 488.2 Common Commands with SCPI Commands. Use a semicolon between the commands. For example:

```
*RST;APPLY2:VOLT 10 or INIT:IMM;*IDN?
```

Linking Multiple SCPI Commands. Use both a semicolon and a colon between the commands. For example:

```
SOURce2:FUNCTion:MODE VOLT;:SOURce2:VOLTage 10
```

SCPI Command Reference

The following sections describe the Standard Commands for Programmable Instruments (SCPI) commands for the Keysight E1418A D/A Converter Module. Commands are listed alphabetically by subsystem and within each subsystem. A command guide is printed in the top margin of each page. The guide indicates the current subsystem on that page.

ABORt Subsystem

The ABORt subsystem disables the trigger system and places the trigger system in the trigger idle state.

Subsystem Syntax

ABORt

Parameters

None.

Comments

- Following this command, the trigger system is in the idle state. Sending an INITiate command after ABORt returns the trigger system to the wait-for-trigger state.
- Triggering is described elsewhere.
- Related Commands: INITiate[:IMMediate]

APPLy Subsystem

The APPLy subsystem enables and outputs a current or voltage on the specified channel.

Subsystem Syntax

APPLyn
:CURRent <value | MIN | MAX | DEF>
:VOLTage <value | MIN | MAX | DEF>

APPLyn:CURRent

APPLyn:CURRent <value | MIN | MAX | DEF> outputs a current on the specified channel, *n*.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
APPLyn	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-0.02 Amps to +0.02 Amps or MIN MAX DEF	0

Comments

- In the keyword, APPLyn, the valid range of *n* is:
 1 to 8 for E1418A, E1418A Option 002
 1 to 16 for E1418A Option 001, E1418A Option 003.
 Values of *n* outside these ranges will generate an error.
- The <value> parameter can range from -0.02 to +0.02 Amps.
 MIN sets -0.02 Amps output.
 MAX sets +0.02 Amps output.
 DEF sets 0 Amps output.
- This command is affected by the state of the P/J jumper for this channel on the terminal module. To use the APPLyn:CURRent command:
 - the P/J jumper must be set to program selectable or, if set to jumper selectable,
 - the V/I jumper must be set to the current mode. These jumpers are described elsewhere.
- Equivalent Commands: SOURcen:FUNcTION:MODE CURR,
 SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude], OUTPutn[:STATE] ON
- *RST Condition:
 - If the P/J jumper is set to program selectable:
 output mode is set to voltage, 0 volts output, output relay open.
 - If the P/J jumper is set to jumper selectable:
 output mode is set by the V/I jumper, 0 volts or amps, output relay open.

APPLyn:VOLTage

APPLyn:VOLTage <value | MIN | MAX | DEF> outputs a voltage on the specified channel, n.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
APPLyn	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-16 V to +16 V or MIN MAX DEF	0

Comments

- In the keyword, APPLyn, the valid range of n is:
 - 1 to 8 for E1418A, E1418A Option 002
 - 1 to 16 for E1418A Option 001, E1418A Option 003. Values of n outside these ranges will generate an error.
- The <value> parameter can range from -16 Volts to +16 Volts. MIN sets -16 Volts output. MAX sets +16 Volts output. DEF sets 0 Volts output.
- This command is affected by the state of the program jumper on the terminal module for this channel. To use the APPLyn:VOLT command:
 - the P/J jumper must be set to program selectable or, if set to jumper selectable,
 - the V/I jumper must be set to the voltage mode.
- Equivalent Commands: SOURcen:FUNctIon:MODE VOLT, SOURcen:VOLTage[:LEvel][:IMMediate][:AMPLitude], OUTPutn[:STATe] ON
- *RST Condition:
 - If the P/J jumper is set to program selectable: output mode is set to voltage, 0 volts output, output relay open.
 - If the P/J jumper is set to jumper selectable: output mode is set by the V/I jumper, 0 volts or amps, output relay open.

CALibration Subsystem

The CALibration commands are used during periodic calibration of the module. Calibration is described in Appendix D of this manual. You should review Appendix D before using any of these commands.

Subsystem Syntax

```

CALibration
:CONDition?
:CONFigure
:RESistance?
:RESet
:STORe
:TEST?
:VALue
:RESistance <value>
CALibrationn
:CONFigure
:CURRent?
:VOLTage?
:VALue
:CURRent? <value>
:VOLTage? <value>

```

CALibration:CONDition?

CALibration:CONDition? queries the module type and calibration status. The query returns four 16-bit unsigned integers.

Parameters

Returns: four unsigned 16-bit integers (uint16).

Comments

- The integers returned indicate the module configuration and status at the last calibration, not the current configuration of the module. The first and second integers returned from this query can be compared to the first and third integers returned from the DIAGnostic:CONFigure? query to determine if the module configuration has changed since the last calibration.

Integer Returned	Meaning
1	Expansion Board ID in the form: 0 = present, 7 = none (expansion board contains channels 9-16)
2	2nd 16-bit value indicates how the channels are configured (isolated or non-isolated). A bit set to 0 indicates an isolated channel, a bit set to 1 indicates a non-isolated channel. Bits 0-15 correspond to channels 1-16, respectively.
3	3rd 16-bit value indicates the current calibration status for each channel. A bit set to 0 indicates the channel is not calibrated for current, a bit set to 1 indicates the channel has been calibrated for current. Bits 0-15 correspond to channels 1-16, respectively.
4	4th 16-bit value indicates the voltage calibration status for each channel. A bit set to 0 indicates the channel is not calibrated for voltage, a bit set to 1 indicates the channel has been calibrated for voltage. Bits 0-15 correspond to channels 1-16, respectively.

CALibration:CONFigure:RESistance?

CALibration:CONFigure:RESistance? configures the module to perform calibration of the internal calibration resistor and returns a 0 or 1 indicating the readiness of the module.

Parameters

Returns: signed 16-bit integer (int16). 1 = ready, 0 = not ready.

Comments

- The internal calibration resistor should be calibrated before calibrating the channels in current mode.
- This query configures the module for a 4-wire resistance measurement at the CAL output terminals when the calibration point is set to CALB (following a *RST or DIAGnostic:CALibration:OUTPut[:MODE] CALBus command).
- This query may also be used to set an external calibration resistor value when calibrating at each channel output.
- This query is used together with the CALibration:VALue:RESistance command to calibrate the current calibration resistor.
- Refer to Appendix D, “ Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibration:VALue:RESistance

CALibration:RESet

CALibration:RESet reloads, for module use, the calibration constants stored in non-volatile memory.

Parameters

None.

Comments

- This command, with respect to the calibration constants, performs the same action as power-on.
- At power-on, or following this command, calibration constants stored in non-volatile memory are loaded into the module where they are used during output operations.
- If the trigger system is waiting for a trigger when this command is received, an error is generated.
- This command opens all output relays.
- Related Commands: CALibration:STORe

CALibration:STORe

CALibration:STORe loads the stored non-volatile memory calibration constants with the calibration constants currently in use by the module.

Parameters

None.

Comments

- This command sets the calibration constants in non-volatile memory if the CAL Store Enable Jumper is properly set. Non-volatile memory has finite life, based upon the number of writes. Use this command sparingly.
- At power-on, calibration constants stored in non-volatile memory are loaded into the module where they are used during output operations.
- When this command is received, the checksum is verified using the constants currently in use by the module. If the checksum does not verify, the non-volatile memory is not updated and an error is generated.
- Refer to Appendix D, “Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibration:RESet

CALibration:TEST?

CALibration:TEST? performs an internal rough check of the calibration of each channel and returns an integer indicating the channel calibration condition. Calibration is checked to approximately ±2%.

Parameters

Returns: unsigned 16-bit integer (uint16).

Comments

- Following the completion of this query all outputs are disabled and set to 0 Volts or 0 Amps based on the channel mode.
- This query returns a 16-bit integer indicating the calibration status of each channel.
 - Bits set to 0 indicate no calibration errors were found.
 - Bits set to 1 indicate a channel with questionable calibration.
 - Bits 0–15 correspond to channels 1–16, respectively.
- If the trigger system is waiting for a trigger when this command is received, an error is generated.

CALibration:VALue:RESistance

CALibration:VALue:RESistance <value> enters a new measured value to be used as the internal calibration resistor constant by the module.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<value>	numeric (float 32)	Must be > 0 ohms	none

Comments

- The new calibration constant is used by the module but not stored in non-volatile memory.
- This command is used together with the CALibration:CONFigure:RESistance? query to calibrate the internal current calibration resistor.
- The internal calibration resistor should be calibrated before calibrating channels in current mode. When calibrating at the CAL connections and using the internal calibration resistor, the value need only be entered once to calibrate all channels.
- If using an external resistor to calibrate current mode, you must calibrate at each channel output. External resistances in the range of 50 ? to 500 ? are recommended.
- Refer to Appendix D, “ Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibration:STORe, CALibration:CONFigure:RESistance?

CALibrationn:CONFigure:CURRent?

CALibrationn:CONFigure:CURRent? configures the channel for current mode calibration and returns a 0 or 1 to indicate the channel's readiness for calibration.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
CALibrationn	keyword	1 to 8 or 1 to 16	1

Returns: an unsigned 16-bit integer (uint16). 1 = ready, 0 = not ready.

Comments

- In the keyword, CALibrationn, the valid range of n is:
 1 to 8 for E1418A, E1418A Option 002
 1 to 16 for E1418A Option 001, E1418A Option 003.
 Values of n outside these ranges will generate an error.
- This command is used together with the CALibrationn:VALue:CURRent? <value> query to perform current mode calibration.
- The calibration is performed either at the CAL output terminals or at an individual channel. The choice is made using the DIAGnostic:CALibration:OUTPut[:MODE] command.
 - When the DIAG:CAL:OUTP:MODE CALBus command (also the reset state) is used, the output relay routes the calibration current to the CAL output terminals (and opens all channel output terminals).
 - When the DIAG:CAL:OUTP:MODE CHANnel command is used, the output relay routes the calibration current to the channel terminals (the CAL terminals are not connected).

The DIAG:CAL:OUTP:MODE command must be sent to the module before the CALibrationn:CONFigure:CURRent? query.

- This query will generate an error if the trigger system is waiting for a trigger event when this command is received.
- This query returns a 0 to indicate that the channel is not ready for calibration, and a 1 to indicate the channel is ready for calibration.
- This query is affected by the state of the program jumper for this channel on the terminal module. To use this command:
 - the P/J jumper must be set to program selectable or, if set to jumper selectable,
 - the V/I jumper must be set to the current mode.
- Refer to Appendix D, “ Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibrationn:VALue:CURRent?,
 DIAGnostic:CALibration:OUTPut[:MODE]

CALibrationn:CONFigure:VOLTage?

CALibrationn:CONFigure:VOLTage? configures the channel for voltage mode calibration and returns a 0 or 1 to indicate the channel's readiness for calibration.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
CALibrationn	keyword	1 to 8 or 1 to 16	1

Returns: an unsigned 16-bit integer (uint16). 1 = ready, 0 = not ready.

Comments

- In the keyword, CALibrationn, the valid range of n is:
 - 1 to 8 for E1418A, E1418A Option 002
 - 1 to 16 for E1418A Option 001, E1418A Option 003. Values of n outside these ranges will generate an error.
 - This command is used together with the CALibrationn:VALue:VOLTage? query to perform voltage mode calibration.
 - The calibration is performed either at the CAL output terminals or at an individual channel. The choice is made using the DIAGnostic:CALibration:OUTPut[:MODE] command.
 - When the DIAG:CAL:OUTP:MODE CALBus command (also the reset state) is used, the output relay routes the calibration voltage to the CAL output terminals (and opens all channel output terminals).
 - When the command DIAG:CAL:OUTP:MODE CHANnel is used, the output relay routes the calibration voltage to the channel terminals (the CAL terminals are not connected).
- The DIAGnostic:CALibration:OUTPut[:MODE] command must be sent to the module before the CALibrationn:CONFigure:VOLTage? query.
- This query will generate an error if the trigger system is waiting for a trigger event when this command is received.
 - This query returns a 0 to indicate that the channel is not ready for calibration, and a 1 to indicate the channel is ready for calibration.
 - This command is affected by the state of the program jumper for this channel on the terminal module. To use this command:
 - the P/J jumper must be set to program selectable or, if set to jumper selectable, the V/I jumper must be set to the voltage mode.
 - Refer to Appendix D, "Voltage/Current Output Adjustment" for additional information about this command.
 - Related Commands: CALibrationn:VALue:VOLTage?, DIAGnostic:CALibration:OUTPut[:MODE]

CALibrationn:VALue:CURRent?

CALibrationn:VALue:CURRent? <value> enters a measured calibration value and returns a value indicating the present state of the current calibration process.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
CALibrationn	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32)	0.0 to 6.0 V	none

Returns: unsigned 16-bit integer (uint16).

Comments

- In the keyword, CALibrationn, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- This command is used together with the CALibrationn:CONFigure:CURRent? query to perform voltage mode calibration. Following the CALn:CONF:CURR? query, this command is used repetitively until the return value indicates that the calibration is complete.
- The <value> parameter is the measured output voltage. A minimum of 9 measurements must be taken to calibrate a channel for current mode output (a maximum of 50 measurements may be required).
- This query returns one of the following values:

Return Value	Meaning
0	Calibration is complete. New constants are in RAM. Resistance is calibrated.
1	More measurements are needed. Resistance is calibrated.
2	Calibration is complete. New constants are in RAM. Resistance is not calibrated.
3	More Measurements are needed. Resistance is not calibrated.
5	Calibration aborted.

- A returned value of 5 (calibration aborted) is given if either:
 - a** The command is received when the module is in voltage calibration or resistance calibration mode, or
 - b** The calibration in process has entered more than 50 values without a successful calibration.
- If the internal calibration resistor is not calibrated, the channel is not marked as calibrated following the completion of calibration (see the CALibration:CONDition? query). The new calibration constants are used, however.
- When the channel current calibration is completed, the new calibration constants are used by the module, but not stored in non-volatile memory.
- If a calibration is interrupted before completion (that is, by another command being received), no constants will be changed.
- Refer to Appendix D, “Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibration:STORe, CALibrationn:CONFigure:CURRent?,

CALibrationn:VALue:VOLTage?

CALibrationn:VALue:VOLTage? <value> enters a measured calibration value and returns a value indicating the present state of the voltage calibration process.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
CALibrationn	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32)	0 to 19.2 V	none

Returns: unsigned 16-bit integer (uint16).

Comments

- In the keyword, CALibrationn, the valid range of n is:
 - 1 to 8 for E1418A, E1418A Option 002
 - 1 to 16 for E1418A Option 001, E1418A Option 003.
 Values of n outside these ranges will generate an error.
- This command is used together with the CALibrationn:CONFigure:VOLTage? query to perform voltage mode calibration. Following the CALn:CONF:VOLT? query, this command is used repetitively until the return value indicates that the calibration is complete.

- The <value> parameter is the measured output voltage. A minimum of 9 measurements must be taken to calibrate a voltage output channel (a maximum of 50 measurements may be required).
- This query returns one of the following values:

Return Value	Meaning
0	Calibration is complete. New constants are in RAM.
1	More measurements are needed.
5	Calibration aborted.

- A return value of 5 (calibration aborted) is given if either:
 - a The command is received when the module is in current calibration or resistance calibration mode, or
 - b The calibration in process has entered more than 50 values without a successful calibration.
- When the channel voltage calibration is completed, the new calibration constants are used by the module, but not stored in non-volatile memory.
- If a voltage calibration is interrupted before completion (that is, by another command being received), no constants are changed.
- Refer to Appendix D, “Voltage/Current Output Adjustment” for additional information about this command.
- Related Commands: CALibration:STORe, CALibrationn:CONFIgure:VOLTage?

DIAGnostic Subsystem

The DIAGnostic subsystem contains commands used to check the module configuration, enable or disable all outputs simultaneously, change a channel's mode without opening and closing the output relay, and check the state of the trigger on all channels.

Subsystem Syntax

```

DIAGnostic
  :CALibration
    :OUTPut
      [:MODE] <path>
      [:MODE]?
  :CONFigure?
  :OUTPut
    :ALL
    [:STATe] <state>
  :SOURcen
    :FUNction
      :MODE <mode>
  :TRIGgered?

```

DIAGnostic:CALibration:OUTPut[:MODE]

DIAGnostic:CALibration:OUTPut[:MODE] <path> sets the voltage calibration path for the module to either the CAL output terminals or at each output channel.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<path>	discrete	CALBus or CHANnel	none

Comments

- The typical calibration mode for the module is through the CAL output terminals. Following *RST or power-on, the default calibration mode is through the CAL output terminals (and this command is not needed).
- This command with the CHANnel parameter, sets calibration to be performed at each channel's output terminals (and so includes the channel output relay contacts).
- This command must be sent before: CALibrationn:CONFigure:VOLTage? or CALibrationn:CONFigure:CURRent? query.
- *RST State: Calibration paths set to use the CAL output terminals.

DIAGnostic:CALibration:OUTPut[:MODE]?

DIAGnostic:CALibration:OUTPut[:MODE]? queries the voltage calibration path for the module.

Parameters

Returns: string.

Comments

- The returned string will be one of CALB or CHAN.

DIAGnostic:CONFigure?

DIAGnostic:CONFigure? returns six 16-bit words indicating the present settings of the module.

Parameters

Returns: six unsigned 16-bit integers (uint16).

Comments

- This query returns six 16-bit words with the following meanings:

Integer Returned	Meaning
1st	Expansion Board ID in the form: 0 = present, 7 = none (expansion board contains channels 9-16).
2nd	Terminal Module ID in the form: 0 = screw type, 7 = none or other.
3rd	Isolated/Non-Isolated Channel Status A bit set to 0 indicates an isolated channel. A bit set to 1 indicates a non-isolated channel or no plug-on module installed (DO NOT operate the module without a plug-on module). Bits 0-15 correspond to channels 1-16, respectively ¹ .
4th	Channel Mode A bit set to 0 indicates a current output channel. A bit set to 1 indicates a voltage output channel. Bits 0-15 correspond to channels 1-16, respectively ¹ .
5th	Channel Output State: A bit set to 0 indicates the channel output relay is closed. A bit set to 1 indicates the channel output relay is open. Bits 0-15 correspond to channels 1-16, respectively ¹ .

Integer Returned	Meaning
6th	Channel Mode Programmable State (P/J Jumper): A bit set to 0 indicates a channel is not programmable. A bit set to 1 indicates a channel is programmable. Bits 0–15 correspond to channels 1–16, respectively ¹ .

¹ For 8 channel configurations, the upper 8 bits of integers 3, 4, 5, and 6 are set to 1's.

DIAGnostic:OUTPut:ALL[:STATe]

DIAGnostic:OUTPut:ALL[:STATe] <state> opens or closes all channel output relays at once.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<state>	boolean	OFF ON 0 1	0

Comments

- This command performs the same function as the OUTPutn[:STATe] command, but enables or disables all outputs simultaneously.
- Related Commands: OUTPutn[:STATe]

DIAGnostic:SOURcen:FUNCTion:MODE

DIAGnostic:SOURcen:FUNCTion:MODE <mode> changes the output mode of the channel without disabling the channel output.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<mode>	discrete	CURRent or VOLTage	none

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.

- Use this command with caution. The output voltage or current is not predictable during the mode change and transients will occur.
- This command performs the same function as the SOURcen:FUNcTion:MODE command, but does not disable the output during the mode change. This command can reduce the settling time required to disable and enable the outputs.
- Following a mode change with this command, the appropriate calibration constants are used, the channel mode is changed, and the output is set to either 0 V or 0 A.
- This command will generate an error if the trigger system is waiting for a trigger event when this command is received.
- This command is affected by the state of the P/J jumper on the terminal module. If the P/J jumper is not set to Program Selectable, this command will generate an error.
- Related Commands: SOURcen:FUNcTion:MODE

DIAGnostic:TRIGgered?

DIAGnostic:TRIGgered? returns a 16-bit word indicating the current trigger status of the module.

Parameters

Returns: unsigned 16-bit integer (uint16).

Comments

- This query returns a 16-bit word indicating the trigger status of each channel.
 - A bit is set to 0 to indicate the channel is not waiting for a trigger.
 - A bit is set to 1 to indicate the channel is in the wait-for-trigger state.
 - Bits 0–15 correspond to channels 1–16, respectively.
- Related Commands: TRIGger:SOURce

INITiate Subsystem

The INITiate subsystem changes the trigger state from idle to wait-for-trigger.

Subsystem Syntax

```
INITiate  
[:IMMediate]
```

INITiate[:IMMediate]

Changes the trigger system from the idle state to the wait-for-trigger state.

Parameters

None.

Comments

- If this command is received and the trigger system is not idle, an error is generated.
- If this command is received and no channels are waiting for a trigger event, an error is generated.
- Triggering is described elsewhere.
- Related Commands: TRIGger:SOURce, SOURcen:VOLTage:TRIGgered, SOURcen:CURREnt:TRIGgered, ABORT

OUTPut Subsystem

The OUTPut subsystem provides commands to open or close the output relay on each channel and to enable the module to output the selected trigger source on one of the VXIbus TTL trigger lines.

Subsystem Syntax

```

OUTPut
  :TTLTrgn
    [:STATe] <state>
    [:STATe]?
OUTPutn
  [:STATe] <state>
  [:STATe]?

```

OUTPut:TTLTrgn[:STATe]

OUTPut:TTLTrgn[:STATe] <state> specifies which VXIbus TTLTRG line is enabled to source a VXIbus trigger when the module is triggered.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
TTLTrgn	keyword	0 to 7	none
<state>	boolean	OFF ON 0 1	0

Comments

- VXIbus TTLTRG lines are numbered from 0 to 7. Only one line can be enabled at a time.
- If a different line is already enabled when this command is received, a settings conflict error is reported.
- This command sources a trigger from the module. The TRIGger:SOURce TTLTn command programs the module to accept triggers from the VXIbus TTLTRG lines. The module can be programmed to both accept and source triggers on the VXIbus TTLTRG lines but the source TTLTRG line and the accepted TTLTRG line must be different.
- This command should be sent before the TRIGger:SOURce TTLTn command.
- *RST Condition: All lines disabled.
- Related Commands: TRIGger:SOURce TTLTn, OUTPut:TTLTn[:STATe]?

OUTPut:TTLTrgn[:STATe]?

OUTPut:TTLTrgn[:STATe]? queries if the specified VXIbus TTLTRG line is set to be a source of trigger from the module.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
TTLTrgn	keyword	0 to 7	none

Returns: unsigned 16-bit integer (uint16).

Comments

- This query returns a 1 if the specified VXIbus TTLTRG line is enabled as a trigger source. This query returns a 0 if the specified VXIbus TTLTRG line is disabled as a trigger source.
- Related Commands: OUTPut:TTLTrn[:STATe]

OUTPutn[:STATe]

OUTPutn[:STATe] <state> opens or closes the specified channel output relay.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
OUTPutn	keyword	1 to 8 or 1 to 16	none
<state>	boolean	OFF ON 0 1	none

Comments

- In the keyword, OUTPutn, the valid range of n is:
 1 to 8 for E1418A, E1418A Option 002
 1 to 16 for E1418A Option 001, E1418A Option 003.
 Values of n outside these ranges will generate an error.
- This command sets the output state of individual channel output relays. Use the DIAGnostic:OUTPut:ALL[:STATe] command to set all channels with a single command.
- *RST Condition: All output relays open.
- Related Commands: OUTPutn[:STATe]?, DIAGnostic:OUTPut:ALL[:STATe]

OUTPutn[:STATe]?

OUTPutn[:STATe]? queries the state of the specified channel output relay and returns a 0 or 1.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
OUTPutn	keyword	1 to 8 or 1 to 16	none

Returns: unsigned 16-bit integer (uint16).

Comments

- In the keyword, OUTPutn, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- The query returns a 0 if the specified channel output relay is open. The query returns a 1 if the specified channel output relay is closed.
- Related Commands: OUTPutn[:STATe]

SOURce Subsystem

The SOURce subsystem provides commands used to output a voltage or current at each channel.

Subsystem Syntax

```

SOURcen
  :CURRent
    [:LEVel]
      [:IMMediate]
        [:AMPLitude] <value | MIN | MAX | DEF>
        [:AMPLitude]?
      :TRIGgered
        [:AMPLitude] <value | MIN | MAX | DEF>
        [:AMPLitude]?
  :FUNCTION
    :MODE <mode>
    :MODE?
  :VOLTage
    [:LEVel]
      [:IMMediate]
        [:AMPLitude] <value | MIN | MAX | DEF>
        [:AMPLitude]?
      :TRIGgered
        [:AMPLitude] <value | MIN | MAX | DEF>
        [:AMPLitude]?

```

SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]

SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude] <value | MIN | MAX | DEF>

immediately outputs the current set in value at channel n when the output relay is closed.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-0.02 Amps to +0.02 Amps or MIN MAX DEF	0

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- The <value> parameter is a floating point 32-bit number in the range of -0.02 A to +0.02 A. MIN sets -0.02 Amps. MAX sets +0.02 Amps. DEF sets 0 Amps.
- This command immediately programs the specified current on channel n. The output state of the channel must be enabled for the current to appear at the output terminals.
- If the channel is in the voltage mode when this command is received, an error is generated.
- Related Commands:
SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]?,
SOURcen:FUNCTion:MODE CURRent, OUTPutn[:STATE]

SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]?

SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude]? [<MIN | MAX | DEF>
queries the last output value written by
SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude].

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<MIN MAX DEF>	discrete (optional)	MIN MAX DEF	none

Returns: 32-bit floating point number (float 32).

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003. Values of n outside these ranges will generate an error.
- If no parameter is given, this query returns the source current set on channel n by the last SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude] command. The value returned is the value last programmed on that channel, not an actual measurement of the hardware output value.
- If a parameter is given, MIN returns -0.02 Amps. MAX returns +0.02 Amps. DEF returns 0 Amps.
- This command generates an error if channel n is in the voltage output mode.
- Related Commands: SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude], SOURcen:FUNCTion:MODE CURRent

SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]

SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude] <value | MIN | MAX | DEF> outputs the current set in value at channel n when the trigger conditions are satisfied and the output relay is closed. Use this command to synchronize multiple channel outputs.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-0.02 Amps to +0.02 Amps or MIN MAX DEF	0

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- The <value> parameter is a floating point 32-bit number in the range of -0.02 A to +0.02 A. MIN sets -0.02 Amps. MAX sets +0.02 Amps. DEF sets 0 Amps.
- This command sets channel n to output the current specified following a valid trigger condition. Following this command, the trigger system must be enabled using an INITiate command. See the TRIGger subsystem discussion for additional information.

- If the module is in a wait-for-trigger state (INIT has been received) when this command is received, an error is generated.
- The output state of the channel must be enabled and the trigger event satisfied for the current to appear at the output terminals.
- If the channel is in the voltage mode when this command is received, an error is generated.
- Related Commands: SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]?, SOURcen:FUNCTion:MODE CURRent, OUTPutn[:STATe]

SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]?

SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude]? [<MIN | MAX | DEF>
queries the last value written by either
SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude] or
SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude].

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<MIN MAX DEF>	discrete (optional)	MIN MAX DEF	none

Returns: 32-bit floating point number (float 32).

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- If no parameter is given, this query returns the last value set on channel n by the last SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude] or SOURcen:CURRent[:LEVel][:IMMediate][:AMPLitude] command. The value returned is the value last programmed on that channel, not an actual measurement of the hardware output value.
- If a parameter is given, MIN returns -0.02 Amps. MAX returns +0.02 Amps. DEF returns 0 Amps.
- This command generates an error if channel n is in the voltage output mode.
- Related Commands: SOURcen:CURRent[:LEVel]:TRIGgered[:AMPLitude], SOURcen:FUNCTion:MODE CURRent

SOURcen:FUNction:MODE

SOURcen:FUNction:MODE <mode> configures channel n for either current or voltage output.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<mode>	discrete	CURRent or VOLTage	none

Comments

- In the keyword, SOURcen, the valid range of n is:
 1 to 8 for E1418A, E1418A Option 002
 1 to 16 for E1418A Option 001, E1418A Option 003.
 Values of n outside these ranges will generate an error.
- Following this command, the output is disabled and set to either 0 A or 0 V.
- If the module is in the wait-for-trigger state when this command is received, an error is generated.
- This command is affected by the state of the P/J jumper for this channel on the terminal module. If the P/J jumper is not set to program selectable this command will return an error. This jumper is described elsewhere.
- *RST Condition:
 - If the P/J jumper is set to program selectable:
 output mode is set to voltage, 0 volts output, output relay open.
 - If the P/J jumper is set to jumper selectable:
 output mode is set by the V/I jumper, 0 volts or amps, output relay open.
- Related Commands: SOURcen:FUNction:MODE?, SOURcen:CURRent ...commands, SOURcen:VOLTage ...commands

SOURcen:FUNction:MODE?

SOURcen:FUNction:MODE? queries channel n for current or voltage output mode. The query returns a string.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1

Returns: string.

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- This query returns CURR or VOLT.
- Related Commands: SOURcen:FUNction:MODE

SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]

SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude] <value | MIN | MAX | DEF> immediately outputs the voltage set in value at channel n when the output relay is closed.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-16 V to +16 V or MIN MAX DEF	0

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- The <value> parameter is a floating point 32-bit number in the range of -16 Volts to +16 Volts. MIN sets -16 Volts. MAX sets +16 Volts. DEF sets 0 Volts.

- This command immediately programs the specified voltage on channel n. The output relay for that channel must be closed for the voltage to appear at the output terminals.
- This command generates an error if channel n is in the current output mode.
- Related Commands: SOURcen:FUNCTION:MODE VOLTage, SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]?, OUTPUTn[:STATe]

SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]?

SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude]? [<MIN | MAX | DEF>
queries the last output value written by
SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude].

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<MIN MAX DEF>	discrete (optional)	MIN MAX DEF	none

Returns: 32-bit floating point number (float 32).

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- If no parameter is given, this query returns the last value set on channel n with the last SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude] command. The value returned is the value last programmed on that channel, not an actual measurement of the hardware output value.
- If a parameter is given, MIN returns -16.000. MAX returns +16.000. DEF returns 0.0000.
- This command generates an error if channel n is in the current output mode.
- Related Commands: SOURcen:VOLTage[:LEVel][:IMMediate][:AMPLitude], SOURcen:FUNCTION:MODE VOLTage

SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]

SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude] <value | MIN | MAX | DEF> outputs the voltage set in value at channel n when the trigger conditions are satisfied and the channel output relay is closed. Use this command to synchronize multiple channel outputs.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<value>	numeric (float 32) or discrete	-16 V to +16 V or MIN MAX DEF	0

Comments

- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- The <value> parameter is a floating point 32-bit number in the range of -16 Volts to +16 Volts. MIN sets -16 Volts. MAX sets +16 Volts. DEF sets 0 Volts.
- This command sets channel n to output the voltage specified following a valid trigger condition. Following this command, the trigger system must be enabled using an INITiate command. See the TRIGger subsystem discussion, page 54, for additional information.
- The channel output relay must be closed for the voltage to appear at the output terminals.
- If the module is in a wait-for-trigger state (INIT has been received) when this command is received, an error is generated.
- If the channel is in the current mode when this command is received, an error is generated.
- Related Commands: SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]?, SOURcen:FUNCTion:MODE VOLTage

SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]?

SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [<MIN | MAX | DEF> queries the latest value written by either SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude] or SOURcen:VOLTage[:LEVel]:IMMEDIATE[:AMPLitude].

Parameters

Parameter Name	Parameter Type	Range of Values	Default
SOURcen	keyword	1 to 8 or 1 to 16	1
<MIN MAX DEF>	discrete (optional)	MIN MAX DEF	none

Returns: 32-bit floating point number (float 32).

Comments


- In the keyword, SOURcen, the valid range of n is:
1 to 8 for E1418A, E1418A Option 002
1 to 16 for E1418A Option 001, E1418A Option 003.
Values of n outside these ranges will generate an error.
- If no parameter is given, this query returns the last value set on channel n by the SOURcen:VOLTage[:LEVel]:IMMEDIATE[:AMPLitude] or SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude] command. The value returned is the value last programmed on that channel, not an actual measurement of the hardware output value.
- If a parameter is given, MIN returns -16.000. MAX returns +16.000. DEF returns 0.000.
- This command generates an error if channel n is in the current output mode.
- Related Commands: SOURcen:VOLTage[:LEVel]:TRIGgered[:AMPLitude], SOURcen:FUNCTION:MODE VOLTage

STATus Subsystem

The STATus subsystem controls the SCPI-defined Operation and Questionable Status Registers and the Standard Event Register. Each is comprised of a Condition Register, an Event Register, and an Enable mask. The SCPI Status System is shown in the figure below.

Subsystem Syntax

```
STATus
:OPERation
  :CONDition?
  :ENABle <mask>
  :ENABle?
  [:EVENT]?
:PRESet
:QUEStionable
  :CONDition?
  :ENABle <mask>
  :ENABle?
  [:EVENT]?
```

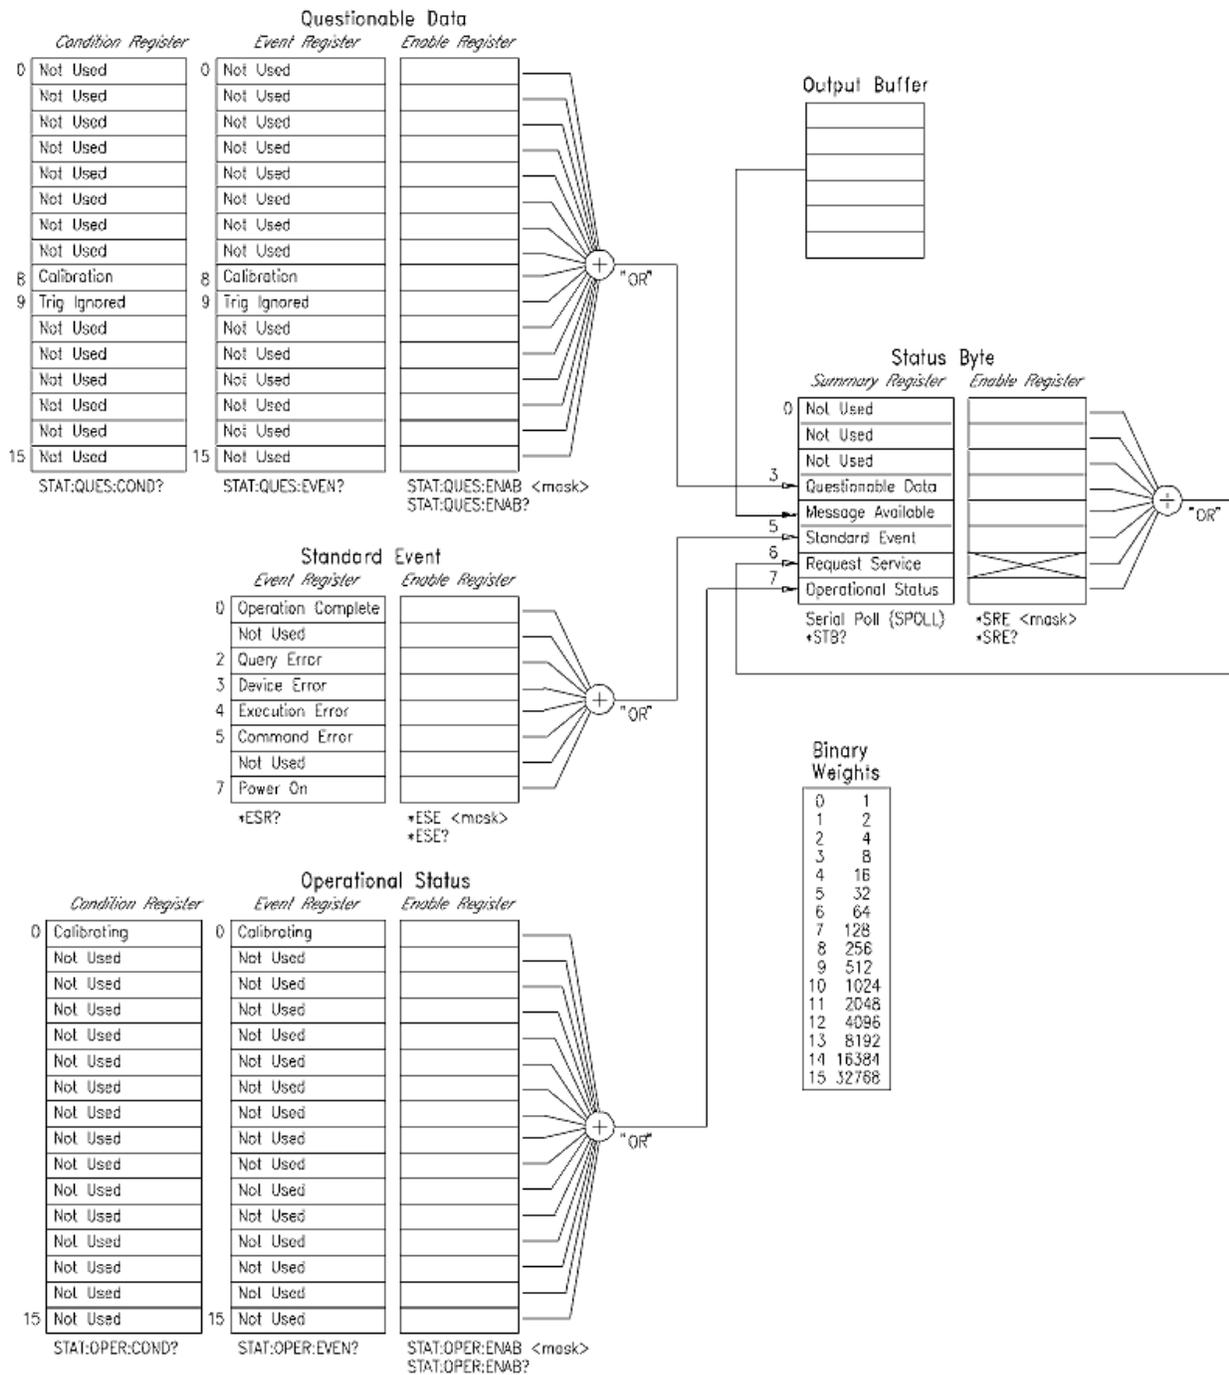

STATus:OPERation:CONDition?

STATus:OPERation:CONDition? returns the contents of the Operation Status Condition Register. Reading the register does not affect its contents.

Parameters

Returns: 16-bit signed integer (int16).

Comments

- Bit 0 of this register (decimal 1) is the Calibrating bit. This bit is set when:
 - the CALibration:CONFigure:RESistance?, CALibrationn:CONFigure:VOLTage?, or CALibrationn:CONFigure:CURRent? command has been received and,
 - measurements with the corresponding CALibration:VALue:RESistance, CALibrationn:VALue:VOLTage?, or CALibrationn:VALue:CURRent? commands are not complete.
- *RST Condition: clears all conditions.
- *CLS and STATus:PRESet do not affect bits in the Status Operation Condition Register.

STATus:OPERation:ENABle

STATus:OPERation:ENABle <mask> specifies which bits of the Operational Status Event Register are OR'd together to create the Operational Status bit (bit 7) in the Summary Register of the Status Byte.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<mask>	numeric (int16) or non-decimal numeric	-32768 to +32767 or #H0000 to #HFFFF	none

Comments

- Only bit 0 (decimal 0) is used or defined in the Operation Register. Bit 0 is defined as the Calibrating bit. A 1 in this bit indicates the module is currently in the calibration mode.
- The non-decimal numeric forms are the #H, #Q, or #B formats specified by IEEE-488.2.
- *RST clears all conditions.
- *CLS and STATus:PRESet do not affect bits in the Operation Status Condition Register.

STATus:OPERation:ENABle?

STATus:OPERation:ENABle? returns the value of the mask set for the Operation Status Register.

Parameters

Returns: 16-bit signed integer (int16).

STATus:OPERation[:EVENT]?

STATus:OPERation[:EVENT]? returns the value of the contents of the Operation Status Event Register. Reading the register clears all bits in the register.

Parameters

Returns: 16-bit signed integer (int16).

Comments

- Bit 0 of this register (decimal 1) is the only defined bit in this register.
- This bit is set if the CALibration:CONFigure:RESistance?, CALibrationn:CONFigure:VOLTage?, or CALibrationn:CONFigure:CURRent? command has been received and the calibration process is not yet complete.
- *RST Condition: no effect.
- *CLS clears the contents of the Operation Status Register.
- STATus:PRESet does not affect the contents of the Operation Status Register, but does disable reporting the Summary bit to the Status Byte Register.

STATus:PRESet

STATus:PRESet presets all Enable Registers to 0 (zero). The command has no effect on Condition or Event Registers.

STATus:QUEStionable:CONDition?

STATus:QUEStionable:CONDition? returns the value of the Questionable Status Condition Register. Reading the register does not affect its contents. Since only two bits are used in the Keysight E1418A and both those bits are defined to be events, this command always returns 0 and is included for compatibility purposes.

Parameters

Returns: 16-bit signed integer (int16).

Comments

- Bit 8 of this register (decimal 256) indicates the calibration condition. Bit 9 of this register (decimal 512) indicates the trigger-ignored event.
- *RST Condition: clears all conditions.
- *CLS and STATus:PRESet do not affect bits in the Questionable Status Condition Register.

STATus:QUEStionable:ENABle

STATus:QUEStionable:ENABle <mask> specifies which bits of the Questionable Event Register are OR'd together to create the Questionable Data bit (bit 3) in the Status Byte Summary Register.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<mask>	numeric (int16) or non-decimal numeric	-32768 to +32767 or #H0000 to #HFFFF	none

Comments

- Only bits 8 and 9 of the Questionable Data Register are used or defined. Bit 8 indicates a questionable calibration and bit 9 indicates a trigger was ignored.
- Either bit 8 or bit 9 can be used to generate an SRQ interrupt. Use the *SRE <mask> common command to set the enable mask for the Status Byte Register to include the Questionable Data bit (bit 3) in the Request for Service bit (bit 6). The request for Service bit (bit 6) is used to generate the SRQ interrupt.
- The non-decimal numeric forms are the #H, #Q, or #B formats specified by IEEE-488.2.
- *RST clears all conditions.
- *CLS and STATus:PRESet do not affect bits in the Questionable Status Condition Register.

STATus:QUEStionable:ENABle?

STATus:QUEStionable:ENABle? returns the mask set for the Questionable Status Enable Register.

Parameters

Returns: 16-bit signed integer (int16).

STATus:QUEStionable[:EVENT]?

STATus:QUEStionable[:EVENT]? returns the value of the Questionable Status Event Register. Reading the register clears all bits in the register.

Parameters

Returns: 16-bit signed integer (int16).

Comments

- Bit 8 of this register (decimal 256) is set when either:
 - A channel is set to an output mode that has not been calibrated, or
 - A channel fails the CALibration:TEST? query.
- Bit 9 of this register (decimal 512) is set when a trigger-ignored event occurs.
- *RST Condition: no effect.
- *CLS clears the contents of the Questionable Status Register.
- STATus:PRESet does not affect the contents of the Questionable Status Register, but does disable reporting the Summary bit to the Status Byte Register.

SYSTEM Subsystem

The SYSTEM subsystem returns information about the module.

Subsystem Syntax

```
SYSTEM  
:ERRor?  
:VERSion?
```

SYSTEM:ERRor?

SYSTEM:ERRor? returns an error number and message from the instrument's error queue.

Parameters

Returns: 16-bit signed integer (int16) and a string.

Comments

- Each query returns an error number and error string from the queue. When no errors are in the error buffer, the query returns +0,"No error".
- *CLS clears the error queue.
- *RST has no effect on the error queue.

SYSTEM:VERSion?

SYSTEM:VERSion? returns the SCPI version the driver complies with (not the driver version).

Parameters

Returns: string or float32.

Comments

- Returns a decimal value in the form: YYYY.R; where YYYY is the year, and R is the revision number within that year. Return value can be input as a string.

TEST Subsystem

The TEST subsystem provides commands used to run individual self-tests and to query the results of previous self-tests. To run the complete set of self-tests, use the *TST? common command.

Subsystem Syntax

```
TEST
  :NUMBer? <number>
  :TST
    [:RESults]?
*TST?
```

TEST:NUMBer?

TEST:NUMBer? <number> performs a single internal self-test on the module and returns a 16-bit integer indicating the results of the self-test.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<number>	numeric	1 to 75	none

Comments

- Following the completion of this command, all outputs are disabled and set to either 0 A or 0 V.
- If the module is in the wait-for-trigger state when this command is received, an error is generated.
- Complete descriptions of each test and specific codes returned in the Test Info field are contained in the Keysight E1418A Service Manual.
- A successful self-test returns 0.
- A failure of a self-test returns a non-zero 16-bit integer. The integer returned has a binary coding of the form:

BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Meaning	Test Number								A24		Test Info					

- The description of *TST provides a brief listing of the test numbers.

TEST:TST[:RESults]?

TEST:TST[:RESults]? returns an array showing the result of all self-tests performed by the *TST? query.

Parameters

None.

Comments

- The *TST? query returns the result of the first failure found, if any. This query provides a means to check all test failure codes.
- This command may be used if the value returned by the *TST? query is other than 0 and complete self-test results are needed.
- Complete descriptions of each test and specific codes returned in the Test Info and A24 fields are contained in the Keysight E1418A Service Manual.

BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Meaning	Test Number								A24		Test Info					

- This query returns an array of 100 16-bit integers (int16). The first array element corresponds to test 1. Array elements above 75 are unused. Each 16-bit integer in the array is in the form:
- The description of *TST? provides a brief listing of the test numbers.
- Related Commands: *TST?

*TST?

*TST? performs all internal self-tests on the module and returns a 16-bit integer indicating the results of the self-test. All circuits on the module are tested up to the output relay.

Parameters

None.

Comments

- Following the completion of this query, all outputs are disabled and set to either 0 A or 0 V.
- If the module is in the wait-for-trigger state when this query is received, an error is generated.
- The returned value indicates the first failure found. Complete test results (all failures found) are reported by the query TEST:TST[:RESults]?

- A successful self-test returns +0.
- A failure of a self-test returns a non-zero 16-bit integer. The integer returned has a binary coding of the form:

BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Meaning	Test Number								A24		Test Info					

- Test number is the internal self-test number of the first failure found. The Test Info and A24 fields contain information related to the failure in Test Number.

Test Number	Tested Area
1-25	Register Read and Writes.
26-41	Trigger Control for each Channel. (test 26 corresponds to channel 1, test 41 corresponds to channel 16)
42-43	VXIbus Interrupt Control.
44-59	Channel Voltage Output. (test 44 corresponds to channel 1, test 59 corresponds to channel 16)
60-75	Channel Current Output. (test 60 corresponds to channel 1, test 75 corresponds to channel 16)

- Complete descriptions of each test and specific codes returned in the Test Info field are contained in the Keysight E1418A Service Manual.
- A subset of self-test is automatically run at power-on.
- Related Commands: TEST:TST[:RESults]?

TRIGger Subsystem

The TRIGger subsystem controls when and how the outputs are enabled. Other commands, designed for use with the TRIGger subsystem are ABORt and INITiate[:IMMEDIATE].

Subsystem Syntax

```
TRIGger
  [:IMMEDIATE]
  :SOURce <source>
  :SOURce?
```

TRIGger[:IMMEDIATE]

TRIGger[:IMMEDIATE] triggers all channels waiting for trigger when the trigger source has been set to either BUS or HOLD.

Parameters

None.

Comments

- To use this command to trigger outputs, the trigger source must be set to either BUS or HOLD. An error is generated if other trigger sources are set.
- If this command is received and the module is not in the wait-for-trigger state, an error is generated.
- Triggering is described in more detail elsewhere.
- Related Commands: TRIGger:SOURce, SOURcen:VOLTage[:LEVel][:IMMEDIATE]:TRIGgered[:AMPLitude], SOURcen:CURRent[:LEVel][:IMMEDIATE]:TRIGgered[:AMPLitude]

TRIGger:SOURce

TRIGger:SOURce sets the trigger source for the module.

Parameters

Parameter Name	Parameter Type	Range of Values	Default
<source>	discrete	TTLT0, TTLT1, TTLT2, TTLT3, TTLT4, TTLT5, TTLT6, TTLT7, BUS, HOLD, IMM, or EXT	none

Comments

- The <source> parameter defines the following trigger conditions:

<source>	Trigger
TTLT0–TTLT7	Sets the trigger source to one of the VXIbus backplane trigger lines.
BUS or HOLD	Sets software trigger. A *TRG, TRIG:IMM, or GET will trigger the output.
IMMEDIATE	Places the trigger system in the wait-for-trigger state and then triggers the output.
EXTernal	Sets the trigger source to the EXTernal trigger line on the terminal module.

- If this command is received when the module is in the wait-for-trigger state, an error is generated.
- This command set the source for the trigger in to the module. The module can also output a trigger on the VXIbus TTLTrg lines using the OUTPut:TTLTrgn command.
- Triggering is described in more detail elsewhere.
- Related Commands: TRIGger:SOURce?
- *RST Condition: Trigger source set to HOLD.

TRIGger:SOURce?

TRIGger:SOURce? queries the trigger source for the module.

Parameters

Returns: string.

Comments

- The query returns one of the following unquoted strings:

String	Trigger Source
TTLn	VXIbus backplane trigger line n
BUS	Software trigger
HOLD	Trigger hold (reset state)
IMM	Immediate trigger
EXT	External trigger

IEEE-488.2 Common Command Quick Reference

The following table lists the IEEE-488.2 Common (*) Commands that can be executed by the Keysight E1418A D/A module. For more information about Common Commands, consult ANSI/IEEE Standard 488.2-1987.

NOTE

These commands apply to many instruments and are not documented in detail here.

Command	Title	Description
*CLS	Clear status registers	Clears the event registers and request for OPC flag.
*ESE <mask>	Event status enable	Sets bits in the Event Status Enable Register.
*ESE?	Event status enable query	Queries the Event Status Enable Register.
*ESR?	Event status register query	Queries and clears the contents of the Standard Event Status Register.
*IDN?	Identification query	Returns the identification string of the module.
*OPC	Operation complete	Sets the Request for OPC flag when all pending operations have been completed. Also sets the OPC bit in the Standard Event Register.
*OPC?	Operation complete query	Returns a 1 to the output queue when all pending operations are complete.
*RST	Reset	Disables all outputs. Rewrites calibration data from FLASH to RAM. Sets all outputs to 0. Sets, if not jumpered, all outputs to voltage mode. Enables trigger with source IMM.
*SRE <mask>	Service request enable	Sets the Service Request Enable bits and corresponding Serial Poll Status Byte Register bits to generate a service request.
*SRE?	Service request enable query	Queries the Service Request Enable Register.
*STB?	Read status byte query	Queries the Status Byte Register.
*TST?	Self-test query	Performs the internal self-test. Disables all outputs. Sets all outputs to 0. Returns the first error found in a 16-bit integer.
*WAI	Wait to continue	Waits until all relays are settled and the idle trigger state is reached.
*TRG	Trigger	Causes an immediate trigger.
*DMC	Define macro	Defines a macro.
*GMC?	Menu query	Gets the results of a menu query.
*PMC	Purge macros	Purges all macros from memory.
*LMC?	List macros	Lists macros by name.
*EMC <n>	Enable macro	Enables execution of macro n.
*EMC? <n>	Enable macro query	Queries execution state of macro n.
*RMC	Remove macros	Removes all macros.

Keysight E1418A Command Quick Reference

The following table summarizes commands for the Keysight E1418A.

Command	Description
APPLyn :CURRent <value MIN MAX DEF> :VOLTage <value MIN MAX DEF>	Closes the output relay and outputs a current on the specified channel, n. Closes the output relay and outputs a voltage on the specified channel, n.
CALibration :CONDition? :CONFigure:RESistance? :RESet :STORe :TEST? :VALue:RESistance <value> CALibrationn :CONFigure:CURRent? :CONFigure:VOLTage? :VALue:CURRent? <value> :VALue:VOLTage? <value>	Queries the module type and calibration status. The query returns four 16-bit unsigned integers. Configures the module to perform calibration of the internal calibration resistor and returns a 0 or 1 indicating the readiness of the module. Reloads, for module use, the calibration constants stored in non-volatile memory. Loads the non-volatile memory with the calibration constants presently in use by the module. Performs an internal check of the calibration of each channel and returns an integer indicating the channel calibration condition. Sets a new internal calibration resistor constant used by the module for current output. Configures the channel for current mode calibration and returns a 0 or 1 to indicate the channel's readiness for calibration. Configures the channel for voltage mode calibration and returns a 0 or 1 to indicate the channel's readiness for calibration. Enters a measured calibration value and returns a value indicating the current state of the calibration. Enters a measured calibration value and returns a value indicating the current state of the calibration.
DIAGnostic :CALibration:OUTPut[:MODE] <CALBus CHANnel> :CALibration:OUTPut[:MODE]? :CONFigure? :OUTPut:ALL[:STATe] <OFF ON> :SOURcen:FUNCTion:MODE <CURRent VOLTage> :TRIGgered?	Sets the voltage calibration path for the module to either the CAL output terminals or each output channel. Queries the voltage calibration path for the module. Returns six 16-bit words indicating the present settings of the module. Opens or closes all channel output relays at once. Changes the output mode of the channel without disabling the channel output. Returns a 16-bit word indicating the present trigger status of the module.

Keysight E1418A Command Quick Reference

Command	Description
OUTPut:TTLTrgn[:STATe] <OFF ON> :TTLTrgn[:STATe]? OUTPutn [:STATe] <OFF ON> [:STATe]?	<p>Specifies which VXIbus TTLTRG line is enabled to source a VXIbus trigger when the module is triggered.</p> <p>Queries the state of the specified VXIbus TTLTRG line for use as a trigger output line.</p> <p>Opens or closes the specified channel output relay. Queries the state of the specified channel output relay and returns a 0 or 1.</p>
SOURcen :CURRent[:LEVel][:IMMediate][:AMPLitude] <value MIN MAX DEF> :CURRent[:LEVel][:IMMediate][:AMPLitude]? [<MIN MAX DEF>] :CURRent[:LEVel]:TRIGgered[:AMPLitude] <value MIN MAX DEF> :CURRent[:LEVel]:TRIGgered[:AMPLitude]? [<MIN MAX DEF>] :FUNction:MODE <CURRent VOLTage> :FUNction:MODE? :VOLTage[:LEVel][:IMMediate][:AMPLitude] <value MIN MAX DEF> DEF> :VOLTage[:LEVel][:IMMediate][:AMPLitude]? [<MIN MAX DEF>] :VOLTage[:LEVel]:TRIGgered[:AMPLitude] <value MIN MAX DEF> DEF> :VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [<MIN MAX DEF>]	<p>Outputs the current set in value at channel n when the output relay is closed.</p> <p>Queries the last output value written by SOURcen:CURRent <value>.</p> <p>Outputs the current set in value at channel n when the trigger conditions are satisfied and the output relay is closed.</p> <p>Queries the last value written by either SOURn:CURR:TRIG or SOURn:CURR[:IMM].</p> <p>Configures channel n for either current or voltage output. Queries channel n for current or voltage output mode. The query returns a string.</p> <p>Outputs the voltage set in value at channel n when the output relay is closed.</p> <p>Queries the last output value written by SOURn:VOLT[:IMM] <value>.</p> <p>Outputs the voltage set in value at channel n when the trigger conditions are satisfied and the channel output relay is closed.</p> <p>Queries the latest value written by either SOURn:VOLT:TRIG or SOURn:VOLT[:IMM].</p>

Keysight E1418A Command Quick Reference

Command	Description
STATus :OPERation:CONDition? :OPERation:ENABLE <mask> :OPERation:ENABLE? :OPERation[:EVENT]? :PRESet :QUEStionable:CONDition? :QUEStionable:ENABLE <mask> :QUEStionable:ENABLE? :QUEStionable[:EVENT]?	<p>Returns the contents of the Operation Status Condition Register. Reading the register does not affect its contents.</p> <p>Specifies which bits of the associated Event Register are included in bit 7 of the Status Byte Register. The Summary bit is the bit-for-bit logical AND of the Event Register and the unmasked bit(s).</p> <p>Returns the value of the mask set for the Operation Status Register.</p> <p>Returns the value of the contents of the Operation Status Event Register. Reading the register clears all bits in the register.</p> <p>Presets all Enable Registers to 0. The command has no effect on Condition or Event Registers.</p> <p>Returns the value of the Questionable Status Condition Register. Reading the register does not affect its contents.</p> <p>Specifies which bits of the associated Event Register are included in bit 3 of the Status Byte Register. The Summary bit is the bit-for-bit logical AND of the Event Register and the unmasked bits.</p> <p>Returns the mask set for the Questionable Status Enable Register.</p> <p>Returns the value of the Questionable Status Event Register. Reading the register clears all bits in the register.</p>
SYSTem :ERRor? :VERSion?	<p>Returns an error number and message from the instrument's error queue.</p> <p>Returns the SCPI version with which the driver complies.</p>
TEST :NUMBer? <number> :TST[:RESults]? *TST?	<p>Performs a single internal self-test on the module and returns a 16-bit integer indicating the results of the self-test.</p> <p>Returns an array showing the result of all self-tests performed by the *TST? query.</p> <p>Performs all internal self-tests on the module and returns a 16-bit integer indicating the results of the self-test.</p>
TRIGger [:IMMediate] :SOURce <source> :SOURce?	<p>Triggers any channels waiting for trigger when the trigger source is set to either BUS or HOLD.</p> <p>Sets the trigger source for the module.</p> <p>Queries the trigger source for the module.</p>
ABORt INITiate[:IMMediate]	<p>Disables the trigger system and places the module in the idle state.</p> <p>Changes the trigger system from the idle state to the wait-for-trigger state.</p>

A E1418A Specifications

DC Voltage

Range: ± 16 V

Resolution: 16 bits (488 μ V steps) Monotonic to 2.0 mV

Accuracy: \pm (% of value + volts)

After calibration and at a temperature within ± 5 °C of calibration temperature.

90 day: \pm (0.05% + 3.0 mV)

Output Current:

Compliance Current: >20 mA, 0 to ± 12 Volts, derate linearly to 5 mA at ± 16 V

Short Circuit Current: < 60 mA

Differential Ripple and Noise: < 2 mV rms, 20 Hz to 250 kHz into 10 k Ω load

DC Current

Range: -0.02 Amps to +0.02 Amps

Resolution: 16 bits (610 nA steps) Monotonic to 2.5 μ A

Accuracy: \pm (% of value + amps)

After calibration and at a temperature within ± 5 °C of calibration temperature.

90 day: \pm (0.09% + 5.0 μ A)

Output Voltage:

Compliance Voltage: ± 12 V

Maximum Open Circuit Voltage: < 18 V

Differential Ripple and Noise: < 2 μ A rms, 20 Hz to 250 kHz into a 250 Ω load

General Characteristics

Settling Time: 300 μ S (+ full scale to – full scale step, single channel, to accuracy listed above)

Isolation (isolated channels): 42 Vdc/42 V peak (channel-to-chassis or channel-to-channel)

Synchronization: Software commands, External TTL trigger, or VXIbus TTL Trigger lines
Single channel or multiple channel

VXI Specification: Device Type: A16 or A24, D16, slave only, register-based

Power Requirements

Configuration	Current Required (Amps)							
	+5 V DC	+5 V Dynamic	+12 V DC	+12 V Dynamic	+24 V DC	+24 V Dynamic	-24 V DC	-24 V Dynamic
8 Channel Non-Isolated	0.70	0.01	0.04	0.01	0.44	0.01	0.44	0.01
8 Channel Isolated	0.75	0.01	0.04	0.01	0.88	0.01	0.00	0.00
16 Channel Non-Isolated	1.25	0.01	0.04	0.01	0.88	0.01	0.88	0.01
16 Channel Isolated	1.40	0.01	0.04	0.01	1.60	0.01	0.00	0.00

Cooling Requirements

For a 10 °C rise

	Air Flow	ΔP	Avg Watts/slot
8 Channel configurations	2.0 liters/second	0.10 mm H ₂ O	25.4
16 Channel configurations	3.9 liters/second	0.18 mm H ₂ O	49.0

B E1418A Register-Based Programming

The Keysight E1418A 8/16 Channel D/A Module is a register-based module. It does not support the VXIbus word serial protocol. The module may be controlled at the register level or, with appropriate drivers, controlled by higher level commands.

The SCPI commands described in this manual are parsed by an Keysight E1405/ E1406 Command Module and turned into appropriate register reads and writes.

The same is true for Keysight Compiled SCPI programming in the C language. In this case, SCPI commands are pre-processed by C-SCPI and replaced with function calls to driver libraries that perform register-based programming.

NOTE

If SCPI commands (or other high level driver-based commands) are used to program this module with a command module, then register programming is not recommended. The SCPI driver maintains an image of the module state. The driver will be unaware of changes made to the module by register access.

Register-based programming is a series of reads and writes directly to the module registers. This appendix contains the information you need for register-based programming. The contents of this appendix are:

- Addressing the Registers [page 120](#)
- Reset and Registers [page 127](#)
- Register Maps [page 128](#)
- Register Descriptions [page 135](#)
- Register Example [page 156](#)


Addressing the Registers

To access a specific register for either read or write operations, the address of the register must be used. The Keysight E1418A uses both A16 and A24 register accesses.

A16 Registers

Register addresses for the VXI module are found in an address space known as VXI A16. The exact location of A16 within a VXIbus master’s memory map depends on the design of the VXIbus master you are using. For the Keysight E1405/E1406 Command Module, the A16 space location starts at 1F000016.

The A16 space is divided so that the VXI modules are addressed only at locations above 1FC00016 within A16. Every VXI module is allocated 64 bytes for register addresses (4016). The address of a module is determined by its logical address (set by the address switches on the module or by a write to the logical address register) times 64 (4016). In the case of the Keysight E1418A, the factory setting is 72 or 4816, so the addresses start at 1FD20016.

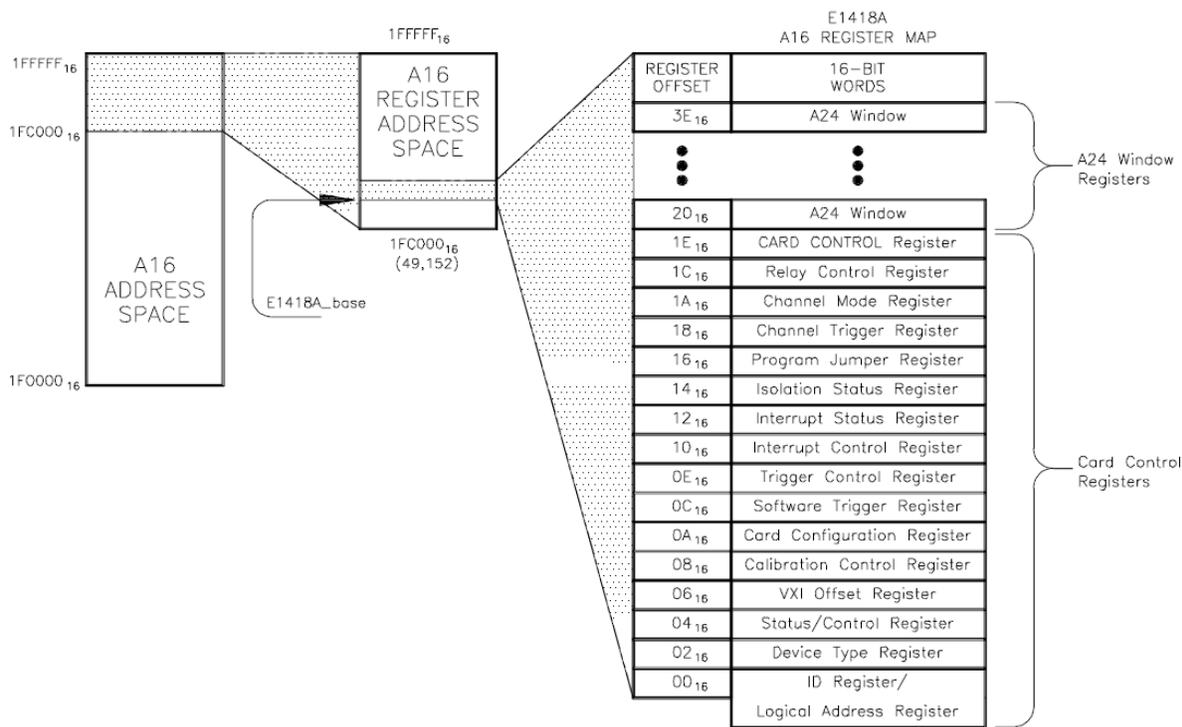

$$E1418A_base = 1FC000_{16} + (Logical\ Address * 40)_{16}$$

OR

$$2,080,768 + (Logical\ Address * 64)_{10}$$

$$Register\ Address = E1418A_base + Register\ Offset$$

E1418A FIG APPB1

Figure B-1 Register Locations in A16 Address Space

NOTE

Writing an address to the Logical Address Register is typically performed by the resource manager as a part of dynamic addressing. If the address is changed by a write to the Logical Address Register, later accesses must use the new address.

A24 Registers

The Keysight E1418A requires 256 kbytes of A24 address space. The resource manager determines the location in A24 space of the 256 kbytes assigned to the Keysight E1418A and writes the most significant address lines into the A16 VXI_Offset Register (base + 0616).

A16/A24 Windows

By using window addressing, you can control the A24 space registers by mapping them onto the upper 16 of the A16 registers. This allows full control of the Keysight E1418A using only A16 addressing. Figure B-3 shows the A24 mapping into A16 space.

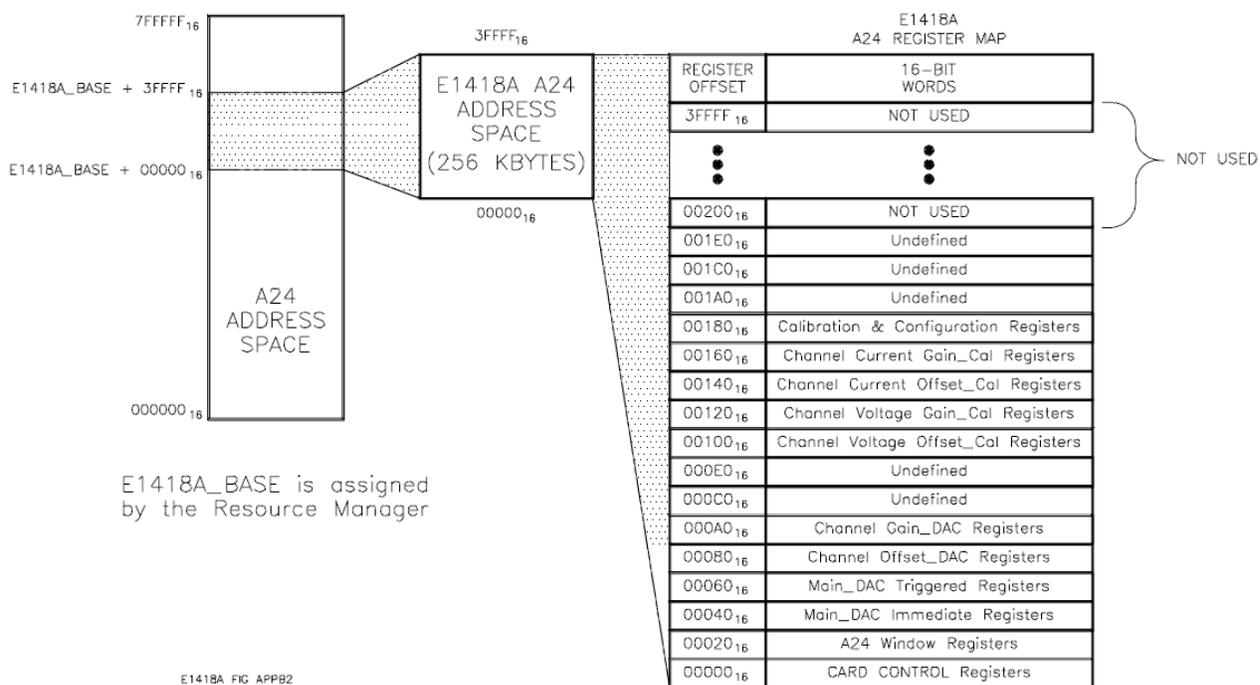


Figure B-2 Register Locations in A24 Address Space

In practice, four bits (A24_Window Value) in the A16 Card Control Register (base + 1E16) control which A24 registers map to the A16 space. For example, if the A24_Window Value is set to 0010, the 16 Main_DAC Write Immediate Registers are mapped to the A16 space. The Card Control Register is described in more detail elsewhere.

The Base Address

When reading or writing to a module register, a hexadecimal or decimal register address must be specified. This address consists of a base address plus a register offset. The base address used in register-based programming depends on whether the A16 address space is outside or inside the Keysight E1405/E1406 Command Module.

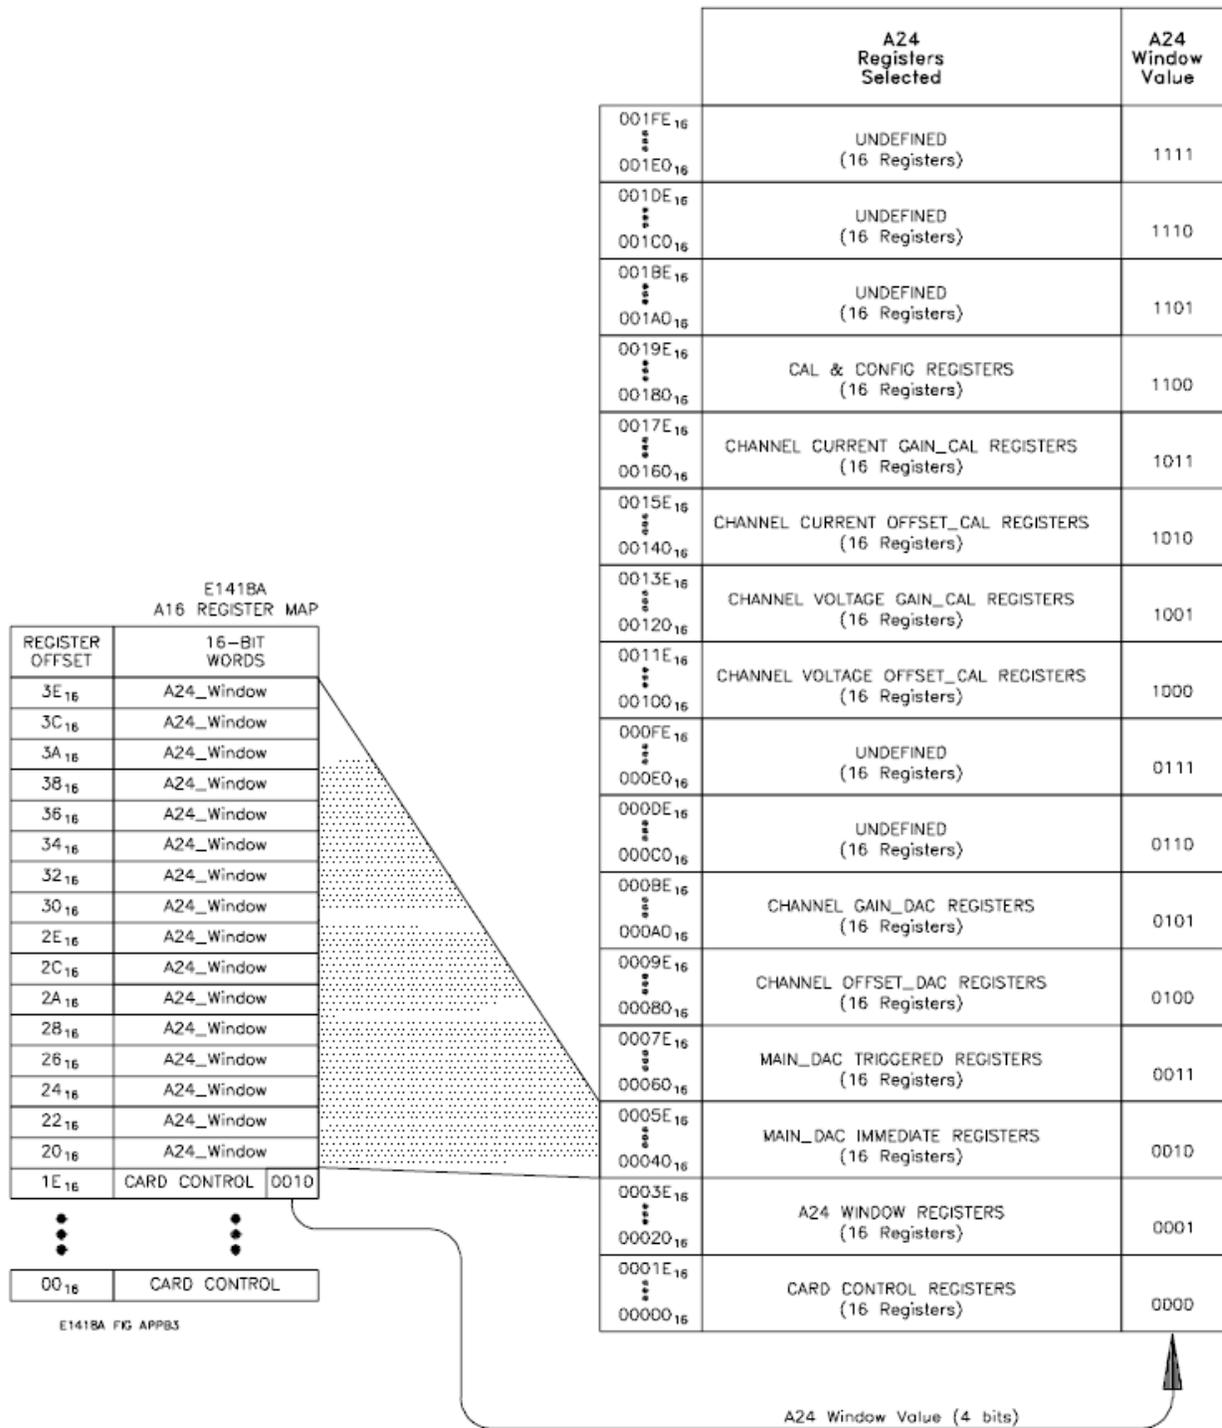


Figure B-3 A24 Windowing into the A16 Registers

A16 Address Space Outside the Command Module

When the Keysight E1405/E1406 Command Module is not part of your VXIbus system (Figure B-1), the Keysight E1418A's base address is computed as:

$$\text{Base Address} = \text{C00016} + (\text{LADDR16} * 4016)$$

or (decimal)

$$49,152 + (\text{LADDR} * 64)$$

where C00016 (49,152) is the starting location of the register addresses, LADDR is the module's logical address (set either by the switches or using dynamic addressing), and 64 is the number of address bytes per VXI device. For example, the Keysight E1418A's factory set logical address is 72 (4816), therefore it will have a base address of:

$$\text{C00016} + (4816 * 4016) = \text{C00016} + 120016 = \text{D20016}$$

or (decimal)

$$49,152 + (72 * 64) = 49,152 + 4608 = 53760$$

A16 Address Space Inside the Command Module or Mainframe

When the A16 address space is inside the Keysight E1405/E1406 Command Module (Figure B-2), the module's base address is computed as:

$$\text{Base Address} = 1\text{FC00016} + (\text{LADDR} * 40)16$$

or

$$2,080,768 + (\text{LADDR} * 64)$$

where 1FC00016 (2,080,768) is the starting location of the VXI A16 addresses, LADDR is the module's logical address (set either by the switches or using dynamic addressing), and 64 is the number of address bytes per register-based device. The Keysight E1418A's factory set logical address is 72. If this address is not changed, the module will have a base address of:

$$1\text{FC00016} + (4816 * 4016) = 1\text{FC00016} + 120016 = 1\text{FD20016}$$

or

$$2,080,768 + (72 * 64) = 2,080,768 + 4608 = 2,085,376$$

Register Offset

The register offset is the register's location in the block of 64 bytes that belong to the module. For example, the module's Status/Control Register has an offset of 0416. When you write a command to this register, the offset is added to the base address to form the register address:

$$\text{register_address} = \text{base_address} + \text{register_offset}$$

Outside the command module:

$$\begin{aligned} \text{D20016} + 0416 &= \text{D20416} \\ 53,760 + 4 &= 53,764 \end{aligned}$$

In the command module:

$$\begin{aligned} 1\text{FD20016} + 0416 &= 1\text{FD20416} \\ 2,085,376 + 4 &= 2,085,380 \end{aligned}$$

Table B-1 shows some general programming methods for accessing the Keysight E1418A registers using different computers.

Table B-1 Register Access

System	Typical Commands	Base Address
External Computer (over GPIB to E1405/E1406 Command Module)	VXI:READ? logical_address, offset VXI:WRITE logical_address, offset, data DIAG:PEEK? Base_addr + offset, width DIAG:POKE Base_addr + offset, width, data (width must be either 8 or 16)	logical_address = LADDR ¹ offset = register number Base_addr = 1FC00016 + (LADDR16 * 4016) or = 2,080,768 + (LADDR * 64) offset = register number
V/382 Embedded Computer	READIO (-18, Base_addr + offset) WRITEIO (-18, Base_addr + offset; data) (positive select code = byte read or write negative select code = word read or write)	Base_addr = C00016 + (LADDR16 * 4016) or = 49,152 + (LADDR * 64) offset = register number
SICL	iwpoke(Base_addr + offset,data) iwpeek(Base_addr + offset)	imap(id,I_MAP_VXIDEV,0,0,NULL)

¹ LADDR = Keysight E1418A Logical Address = 72 = 4816

Reset and Registers

Following power-on or a *RST command, the registers are put into the following states:

- The Manufacturer ID and Device ID Registers remain unaffected.
- The Channel Mode Register (base + 1A16) is set to voltage output for all channels (FFFF16) or is set to the state set by the V/I jumper if the P/J jumper is in the jumper selectable position.
- The Channel Program Jumper Register (base + 1616) is set to program selectable for all channels (FFFF16) or to the position of the P/J jumper.
- The Channel Relay Control Register (base + 1C16) is set to open all channel relays (FFFF16).
- The Isolation Status Register (base + 1416) reflects the isolated/non-isolated configuration of each channel.
- The Calibration Control Register (base + 0816) is set to calibrate voltage with the cal mux disabled (200016).
- Channel Trigger Register (base + 1816) is set to 000016 if the module is a 16-channel configuration or FF0016 if an 8-channel configuration.

NOTE

The upper 8-bits of all channel related registers are set to 1's (FF16) for 8-channel configurations.

Register Maps

A16/A24 REGISTERS

Address	Read Registers	Write Registers	Type
Base + 0016	ID Register	Logical Address Register	
Base + 0216	Device Type Register		VXI Required Registers
Base + 0416	VXI Status Register	VXI Control Register	
Base + 0616		VXI Offset Register	
Base + 0816		Calibration Control Register	
Base + 0A16	Card Configuration Register		Card Control Registers
Base + 0C16		Software Trigger Register	
Base + 0E16		Trigger Control Register	
Base + 1016		Interrupt Control Register (Not Supported)	
Base + 1216		Interrupt Status Register (Not Supported)	
Base + 1416	Isolation Status Register		
Base + 1616	Chan Prog_Jumper Register		
Base + 1816	Chan_Trigger Register		Channel Control Registers
Base + 1A16		Chan_Mode Register	
Base + 1C16		Chan Relay Control Register	
Base + 1E16		Card Control Register	A24 Access Register
Base + 2016 through Base + 3E16		Remapped A24 Registers	A24 Window Registers

A24 REGISTERS

Address	Read Registers	Write Registers	Type
Base + 4016		Ch 01 Main_DAC Immediate	Channel Main DAC Immediate Registers (New output values appear immediately when the output relay is closed)
Base + 4216		Ch 02 Main_DAC Immediate	
Base + 4416		Ch 03 Main_DAC Immediate	
Base + 4616		Ch 04 Main_DAC Immediate	
Base + 4816		Ch 05 Main_DAC Immediate	
Base + 4A16		Ch 06 Main_DAC Immediate	
Base + 4C16		Ch 07 Main_DAC Immediate	
Base + 4E16		Ch 08 Main_DAC Immediate	
Base + 5016		Ch 09 Main_DAC Immediate	
Base + 5216		Ch 10 Main_DAC Immediate	
Base + 5416		Ch 11 Main_DAC Immediate	
Base + 5616		Ch 12 Main_DAC Immediate	
Base + 5816		Ch 13 Main_DAC Immediate	
Base + 5A16		Ch 14 Main_DAC Immediate	
Base + 5C16		Ch 15 Main_DAC Immediate	
Base + 5E16		Ch 16 Main_DAC Immediate	
Base + 6016		Ch 01 Main_DAC Triggered	Channel Main DAC Triggered Registers (New output values appear after the next trigger event when the output relay is closed)
Base + 6216		Ch 02 Main_DAC Triggered	
Base + 6416		Ch 03 Main_DAC Triggered	
Base + 6616		Ch 04 Main_DAC Triggered	
Base + 6816		Ch 05 Main_DAC Triggered	
Base + 6A16		Ch 06 Main_DAC Triggered	
Base + 6C16		Ch 07 Main_DAC Triggered	
Base + 6E16		Ch 08 Main_DAC Triggered	
Base + 7016		Ch 09 Main_DAC Triggered	
Base + 7216		Ch 10 Main_DAC Triggered	
Base + 7416		Ch 11 Main_DAC Triggered	
Base + 7616		Ch 12 Main_DAC Triggered	
Base + 7816		Ch 13 Main_DAC Triggered	
Base + 7A16		Ch 14 Main_DAC Triggered	
Base + 7C16		Ch 15 Main_DAC Triggered	
Base + 7E16		Ch 16 Main_DAC Triggered	

Address	Read Registers	Write Registers	Type
Base + 8016		Ch 01 Offset_DAC	Channel Offset DAC Registers
Base + 8216		Ch 02 Offset_DAC	
Base + 8416		Ch 03 Offset_DAC	
Base + 8616		Ch 04 Offset_DAC	
Base + 8816		Ch 05 Offset_DAC	
Base + 8A16		Ch 06 Offset_DAC	
Base + 8C16		Ch 07 Offset_DAC	
Base + 8E16		Ch 08 Offset_DAC	
Base + 9016		Ch 09 Offset_DAC	
Base + 9216		Ch 10 Offset_DAC	
Base + 9416		Ch 11 Offset_DAC	
Base + 9616		Ch 12 Offset_DAC	
Base + 9816		Ch 13 Offset_DAC	
Base + 9A16		Ch 14 Offset_DAC	
Base + 9C16		Ch 15 Offset_DAC	
Base + 9E16		Ch 16 Offset_DAC	
Base + A016		Ch 01 Gain_DAC	Channel Gain DAC Registers
Base + A216		Ch 02 Gain_DAC	
Base + A416		Ch 03 Gain_DAC	
Base + A616		Ch 04 Gain_DAC	
Base + A816		Ch 05 Gain_DAC	
Base + AA16		Ch 06 Gain_DAC	
Base + AC16		Ch 07 Gain_DAC	
Base + AE16		Ch 08 Gain_DAC	
Base + B016		Ch 09 Gain_DAC	
Base + B216		Ch 10 Gain_DAC	
Base + B416		Ch 11 Gain_DAC	
Base + B616		Ch 12 Gain_DAC	
Base + B816		Ch 13 Gain_DAC	
Base + BA16		Ch 14 Gain_DAC	
Base + BC16		Ch 15 Gain_DAC	
Base + BE16		Ch 16 Gain_DAC	
Base + C016 through Base + FE16	Undefined		Not Used

Address	Read Registers	Write Registers	Type
Base + 10016	Ch 01 Voltage Offset_Cal		Channel Voltage Offset Cal Storage Registers (non-volatile)
Base + 10216	Ch 02 Voltage Offset_Cal		
Base + 10416	Ch 03 Voltage Offset_Cal		
Base + 10616	Ch 04 Voltage Offset_Cal		
Base + 10816	Ch 05 Voltage Offset_Cal		
Base + 10A16	Ch 06 Voltage Offset_Cal		
Base + 10C16	Ch 07 Voltage Offset_Cal		
Base + 10E16	Ch 08 Voltage Offset_Cal		
Base + 11016	Ch 09 Voltage Offset_Cal		
Base + 11216	Ch 10 Voltage Offset_Cal		
Base + 11416	Ch 11 Voltage Offset_Cal		
Base + 11616	Ch 12 Voltage Offset_Cal		
Base + 11816	Ch 13 Voltage Offset_Cal		
Base + 11A16	Ch 14 Voltage Offset_Cal		
Base + 11C16	Ch 15 Voltage Offset_Cal		
Base + 11E16	Ch 16 Voltage Offset_Cal		
Base + 12016	Ch 01 Voltage Gain_Cal		Channel Voltage Gain Cal Storage Registers (non-volatile)
Base + 12216	Ch 02 Voltage Gain_Cal		
Base + 12416	Ch 03 Voltage Gain_Cal		
Base + 12616	Ch 04 Voltage Gain_Cal		
Base + 12816	Ch 05 Voltage Gain_Cal		
Base + 12A16	Ch 06 Voltage Gain_Cal		
Base + 12C16	Ch 07 Voltage Gain_Cal		
Base + 12E16	Ch 08 Voltage Gain_Cal		
Base + 13016	Ch 09 Voltage Gain_Cal		
Base + 13216	Ch 10 Voltage Gain_Cal		
Base + 13416	Ch 11 Voltage Gain_Cal		
Base + 13616	Ch 12 Voltage Gain_Cal		
Base + 13816	Ch 13 Voltage Gain_Cal		
Base + 13A16	Ch 14 Voltage Gain_Cal		
Base + 13C16	Ch 15 Voltage Gain_Cal		
Base + 13E16	Ch 16 Voltage Gain_Cal		

Address	Read Registers	Write Registers	Type
Base + 14016	Ch 01 Current Offset_Cal		Channel Current Offset Cal Storage Registers (non-volatile)
Base + 14216	Ch 02 Current Offset_Cal		
Base + 14416	Ch 03 Current Offset_Cal		
Base + 14616	Ch 04 Current Offset_Cal		
Base + 14816	Ch 05 Current Offset_Cal		
Base + 14A16	Ch 06 Current Offset_Cal		
Base + 14C16	Ch 07 Current Offset_Cal		
Base + 14E16	Ch 08 Current Offset_Cal		
Base + 15016	Ch 09 Current Offset_Cal		
Base + 15216	Ch 10 Current Offset_Cal		
Base + 15416	Ch 11 Current Offset_Cal		
Base + 15616	Ch 12 Current Offset_Cal		
Base + 15816	Ch 13 Current Offset_Cal		
Base + 15A16	Ch 14 Current Offset_Cal		
Base + 15C16	Ch 15 Current Offset_Cal		
Base + 15E16	Ch 16 Current Offset_Cal		
Base + 16016	Ch 01 Current Gain_Cal		Channel Current Gain Cal Storage Registers (non-volatile)
Base + 16216	Ch 02 Current Gain_Cal		
Base + 16416	Ch 03 Current Gain_Cal		
Base + 16616	Ch 04 Current Gain_Cal		
Base + 16816	Ch 05 Current Gain_Cal		
Base + 16A16	Ch 06 Current Gain_Cal		
Base + 16C16	Ch 07 Current Gain_Cal		
Base + 16E16	Ch 08 Current Gain_Cal		
Base + 17016	Ch 09 Current Gain_Cal		
Base + 17216	Ch 10 Current Gain_Cal		
Base + 17416	Ch 11 Current Gain_Cal		
Base + 17616	Ch 12 Current Gain_Cal		
Base + 17816	Ch 13 Current Gain_Cal		
Base + 17A16	Ch 14 Current Gain_Cal		
Base + 17C16	Ch 15 Current Gain_Cal		
Base + 17E16	Ch 16 Current Gain_Cal		

Address	Read Registers	Write Registers	Type
Base + 18016	Calibration resistor value		Calibration Registers (non-volatile)
Base + 18216	Calibration resistor value		
Base + 18416	Voltage calibration status		
Base + 18616	Current calibration status		
Base + 18816	Calibration isolation status		
Base + 18A16	Calibration card configuration		
Base + 18C16	Calibration checksum		
Base + 18E16	SERIAL NUMBER		Module Serial Number Registers (10 byte serial number) (non-volatile)
Base + 19016			
Base + 19216			
Base + 19416			
Base + 19616			
Base + 19816	Undefined calibration memory		Undefined Calibration Storage Registers (non-volatile)
Base + 19A16			
Base + 19C16			
Base + 19E16			
Base + 1A016			
Base + 1A216			
Base + 1A416			
Base + 1A616			
Base + 1A816			
Base + 1AA16			
Base + 1AC16			
Base + 1AE16			
Base + 1B016			
Base + 1B216			
Base + 1B416			
Base + 1B616			
Base + 1B816			
Base + 1BA16			
Base + 1BC16			
Base + 1BE16			

NOTE

Calibration Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Register Descriptions

Manufacturer ID Register

The Manufacturer ID Register is a VXIbus required register. A read of this register returns CFFF16 (-12289 decimal).

Address Base + 0016	Bit Position	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	Setting	1	1	0	0	1	1	1	1	1	1	1	1	1	1	1	1
	READ	Device Class		Address Mode		Manufacturer's ID Code											

Device Class: The Keysight E1418A is a register-based device.

Address Mode: The Keysight E1418A uses the A16/A24 address mode.

Manufacturer ID Code: Identifies Keysight Technologies as the device manufacturer.

Logical Address Register

The module supports Dynamic Configuration. The module's logical address is set in bits 0 through 7 of the Logical Address Register.

Address Base + 0016	Bit Position	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	Setting	Undefined									0016-FF16							
	WRITE	Undefined									Logical Address Setting							

Logical Address Setting: Bits 0 through 7 of this register is set by either:

- the logical address switch settings following power-up or system reset,
- or
- by a write to this register during Dynamic Configuration.

When bits 0–7 are set to a value of 255 (FF16) the device is available for selection via Dynamic Configuration, and when MODID is asserted the module will respond. Typically, this is only done once at power-up or system reset and the desired logical address is written into the register bits 0 through 7. With any other Logical Address Register setting, the module will not be accessible via MODID. The content of this register is compared with address lines 6 through 13 from the backplane to determine module accesses in A16 space.

NOTE

Writes to this register can be made at any time and will change the logical address of the module for later accesses.

Device Type Register

The Device Type Register is a VXIbus required register. This register indicates the module's configuration as either an 8-channel DAC or a 16-channel DAC. A read of this register returns 523016 (21040 decimal) if the module is configured as a 16-channel DAC, or 523716 (21047 decimal) if the module is configured as an 8-channel DAC.

Address Base + 0216	Bit Position	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	Setting	516				23016 or 23716												
	READ	Required Memory				Model Codes												

Required Memory: The Keysight E1418A requires 256 kbytes of A24 address space.

Model Codes: The model codes for the Keysight E1418A are shown in the table below.

Configuration	Model-Code Value	Register Read Value
16-channel DAC	23016	523016
8-channel DAC	23716	523716

VXI Status/Control Register

The VXI Status/Control Register is a VXIbus required register. As a READ register, the value returned indicates the status of A24 memory access, the MODID* line, and module readiness. As a WRITE register, the value written can control the state of the A24 memory access, the control of the VXIbus SYSFAIL* line, and perform a module reset.

Address Base + 0416	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	A24 ACT	MODID *	Unused										Ready	Passed	Unused	
	WRITE	A24 EN	Unused													SYSIN H	RESET

READ

A24 ACT: A one (1) in this field indicates that A24 memory can be accessed (is active) via A24 addressing. A zero (0) indicates that A24 memory cannot be accessed via A24 addressing (is inactive). This bit reflects the state of the write register A24 EN bit.

MODID*: A one (1) in this field indicates the module is not selected via the P2 MODID line. A zero (0) in this field indicates the module is selected by a high state on the P2 MODID line.

Ready: A one (1) in this field, together with a one (1) in the Passed bit, indicates the module is ready for operation. A zero (0) in this field, together with a 0 in the Passed bit, indicates the module failed initialization.

Passed: A one (1) in this field indicates the module has finished a reset or has completed module initialization. A zero (0) in this field indicates the module is executing a reset or has failed module initialization.

WRITE

A24 EN: Writing a one (1) to this field enables access to the A24 address space via A24 addressing. Writing a zero (0) to this field disables access to the A24 address space.

SYSINH: Writing a one (1) to this field disables the module from driving the VXIbus SYSFAIL* line. Writing a zero (0) enables the module to drive SYSFAIL*.

RESET: Writing a one (1) and then a zero (0) to this field performs a module reset. Writing a one (1) to this field forces the module into the reset state. The module is held in the reset state until a zero (0) is written to this field.

VXI Offset Register

The VXI Offset Register is a VXIbus required register. The offset register defines the base address of the module's A24 address space.

Address Base + 0616	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	A24 Offset						0	0	0	0	0	0	0	0	0	0	0
	WRITE	A24 Offset						0	0	0	0	0	0	0	0	0	0	0

A24 Offset: This field is the six most significant bits of the module's A24 base address.

Bits 0 through 9 are always zero (0).

Calibration Control Register

The Calibration Control Register sets and reports calibration conditions.

Address Base + 0816	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Cal Bus En	A/D Bsy	Cal Mode	Cal Mux En	Cal Mux Chan Address			A/D Reading Value								
	WRITE	Cal Bus En	A/D Trg	Cal Mode Sel	Cal Mux En	Cal Mux Chan Address S			A/D Scale	Unused							

READ

Cal Bus En: A one (1) in this field indicates the cal bus is connected. A zero (0) in this field indicates the cal bus is not connected. This bit reflects the state of the last write to Cal Bus En field.

A/D Bsy: A one (1) in this field indicates the A/D is taking a reading. A zero (0) in this field indicates a new reading is available.

Cal Mode: A one (1) in this field indicates the calibration system is set to calibrate voltage. A zero (0) in this field indicates the calibration system is set to calibrate current. This bit reflects the state of the last write to Cal Mode Sel field.

Cal Mux En: A one (1) in this field indicates the Cal Mux is enabled. A zero (0) in this field indicates the Cal Mux is disabled (high-impedance). This bit reflects the state of the last write to Cal Mux En field.

Cal Mux Chan Address: This field returns the channel selected for calibration. This bit reflects the state of the last write to Cal Mux Chan Address field. The channel address, expressed in hexadecimal, has values from 016 through F16 corresponding to channels 1 through 16, respectively.

A/D Reading Value: This field returns the latest reading taken by the A/D. When A/D Scale is set to 0, the actual voltage represented by the reading value is given as:

$$\text{Voltage} = 16.8V - \frac{33.6V}{255\text{steps}} \bullet \text{ADReadingValue}$$

When **A/D Scale** is set to 1, the actual voltage represented by the reading value is given as:

$$\text{Voltage} = 16.8V - \frac{33.6V}{255\text{steps}} \bullet \frac{\text{ADReadingValue}}{13.7}$$

WRITE

Cal Bus En: Writing a one (1) in this field connects the cal bus. Writing a zero (0) in this field disconnects the cal bus.

A/D Trg: Writing a one (1) in this field begins an A/D reading. Writing a zero (0) in this field during a reading in progress will corrupt the reading. Do not combine this bit setting with other bits in this register (write only this bit).

Cal Mode Sel: Writing a one (1) in this field sets the calibration system to calibrate voltage. Writing a zero (0) in this field sets the calibration system to calibrate current. This bit controls a relay that requires approximately 5 mS to change states.

Cal Mux En: Writing a one (1) in this field enables the Cal Mux. Writing a zero (0) in this field disables the Cal Mux.

Cal Mux Chan Address: The address of the channel selected is written to this field. The channel address, expressed in hexadecimal, has values from 016 through F16 corresponding to channels 1 through 16, respectively. This field only has effect when the Cal Mux En field is set to one (1).

A/D Scale: This bit changes the A/D scaling. When set to 0, normal A/D scaling is used. When set to 1, A/D scaling is divided by 13.7. This bit is used by self-test to test gain and offset DACs.

Card Configuration Register

The Card Configuration Register returns information about the module configuration and terminal module in use.

Address Base + 0A16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Undefined											Configuration			Terminal	

Configuration: When the module is configured as an 8-channel DAC, all bits in this field are set to one (1). When the module is configured as a 16-channel DAC, all bits in this field are set to zero (0).

Terminal: This field returns information about the terminal module.

	Bits		
	02	01	00
Terminal Installed			
Screw Type Terminal	0	0	0
No Terminal Installed	1	1	1

NOTE

The Terminal bits reflect the state of the of the TERMINAL ID 1, TERMINAL ID 2, and TERMINAL ID 3 lines in the output connector. If you are not using the screw-type terminal module, these bits may be set to any value desired by shorting the line to ground.

Software Trigger Register

The Software Trigger Register provides a means to trigger the module when software trigger has been selected as the trigger source in the Trigger Control Register.

Address Base + 0C16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Software Trigger															

Software Trigger: When software trigger is selected as the trigger source in the Trigger Control Register, any write to this register generates the trigger (the value written is not important).

Trigger Control Register

The Trigger Control Register selects the sources, destinations, and modes used to synchronize channels programmed for triggered operation.

Address Base + 0E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Trig Syst En	Unused						Trigger Out			Trigger Mode	Trigger Source				
	WRITE																

Trig Syst En: Writing a one (1) to this field enables the trigger system. Writing a zero (0) disables the trigger system.

Trigger Out: This field selects which VXIbus trigger line will be driven when the trigger mode is set to Output. The trigger lines selected are shown below.

Line Out Selected	Bits		
	08	07	06
TTLTRIG0*	0	0	0
TTLTRIG1*	0	0	1
TTLTRIG2*	0	1	0
TTLTRIG3*	0	1	1
TTLTRIG4*	1	0	0
TTLTRIG5*	1	0	1
TTLTRIG6*	1	1	0
TTLTRIG7*	1	1	1

Trigger Mode: This field selects the operating mode for trigger-enabled channels.

Trigger Mode	Bits	
	05	04
SYNC	0	0
OUTPUT	1	1

Trigger Source: This field selects the trigger source for trigger-enabled channels.

Trigger Source Selected	Bits			
	03	02	01	00
TTLTRIG0*	0	0	0	0
TTLTRIG1*	0	0	0	1
TTLTRIG2*	0	0	1	0
TTLTRIG3*	0	0	1	1
TTLTRIG4*	0	1	0	0
TTLTRIG5*	0	1	0	1
TTLTRIG6*	0	1	1	0
TTLTRIG7*	0	1	1	1
SOFTWARE TRIGGER	1	0	0	0
EXTERNAL TRIGGER	1	0	0	1

Using the Trigger Control Register

To set up the Trigger Control Register for the VXIbus trigger types:

SYNC mode: This mode allows the card to receive a trigger from one of the VXI backplane TTL trigger lines. To set the VXIbus SYNC trigger mode, the Trigger Mode field is set to SYNC (00) and the Trigger Source field is set to one of the *TTLTRIG lines. The Trigger Out field is not used.

OUTPUT mode: This mode allows the card to receive a trigger from one TTL trigger line and also source a trigger on another TTL trigger line. The output mode is not a VXIbus defined trigger mode. The output mode is used to synchronize additional modules. The Trigger Mode field is set to OUTPUT (11), the Trigger Source field is set one of the *TTLTRIG lines, and the Trigger Out field is set to a different *TTLTRIG line.

Interrupt Status Register

The Interrupt Status Register shows the state of the trigger ignored interrupt condition. The bit is a strobed interrupt source.

Address Base + 1216	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Unused							TRG IGN	Unused								
	WRITE																	

TRG IGN: This field is set to a one (1) if the trigger ignored condition exists.

Isolation Status Register

The Isolation Status Register reports the plug-on module isolated/non-isolated configuration for each channel.

Address Base + 1416	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Ch 16 ISO	Ch 15 ISO	Ch 14 ISO	Ch 13 ISO	Ch 12 ISO	Ch 11 ISO	Ch 10 ISO	Ch 09 ISO	Ch 08 ISO	Ch 07 ISO	Ch 06 ISO	Ch 05 ISO	Ch 04 ISO	Ch 03 ISO	Ch 02 ISO	Ch 01 ISO

Ch XX ISO: Each field will return a one (1) if the channel has a non-isolated plug-on installed. A zero (0) indicates an isolating plug-on is installed.

NOTE

A channel will not function without a plug-on module installed. A one (1) indicates either a non-isolated plug-on is installed or that no plug-on module is installed. DO NOT operate the module without a plug-on module installed on every channel.

For 8-Channel configurations, the upper 8 bits (channels 09 through 16) are set to 1's (FF16).

Channel Program Jumper Register

The Channel Program Jumper Register returns the state of the P/J jumper on each channel. Additional information about these jumpers is given elsewhere.

Address Base + 1616	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Ch 16 Jmpr	Ch 15 Jmpr	Ch 14 Jmpr	Ch 13 Jmpr	Ch 12 Jmpr	Ch 11 Jmpr	Ch 10 Jmpr	Ch 09 Jmpr	Ch 08 Jmpr	Ch 07 Jmpr	Ch 06 Jmpr	Ch 05 Jmpr	Ch 04 Jmpr	Ch 03 Jmpr	Ch 02 Jmpr	Ch 01 Jmpr

Ch XX Jmpr: A one (1) in a field indicates that the P/J jumper is in the program selectable position. A zero (0) indicates the P/J jumper is set to the jumper selectable position.

When the P/J jumper is in the program selectable position (1), the channel can be programmed to either the voltage or current mode from the VXIbus backplane. When the P/J jumper is in the jumper selectable position (0), the voltage or current output mode is set via the V/I jumper on the terminal module and can not be programmed from the VXIbus backplane.

NOTE

Channels 09 through 16 will return ones (1) if the module is configured as an 8-channel device.

Channel Trigger Register

The Channel Trigger Register reports the trigger status for each channel.

Address Base + 1816	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Ch 16 TM	Ch 15 TM	Ch 14 TM	Ch 13 TM	Ch 12 TM	Ch 11 TM	Ch 10 TM	Ch 09 TM	Ch 08 TM	Ch 07 TM	Ch 06 TM	Ch 05 TM	Ch 04 TM	Ch 03 TM	Ch 02 TM	Ch 01 TM

Ch XX TM: A one (1) in a field indicates a value has been written to the channel Main_DAC Triggered Register, but the output is not enabled until the trigger is received. A zero (0) in a field indicates a trigger will have no effect on the channel. The trigger events are set in the Trigger Control Register.

NOTE

You can output an immediate value on a channel that has been set for triggered operation by writing a value to the Main_DAC Immediate Register. The trigger mode for that channel is changed to the immediate write-thru mode.

You can set a value on a channel to be applied at the next trigger event by writing a value to the Main_DAC Triggered Register. The trigger status for that channel will be changed to triggered.

Channels 09 through 16 will return ones (1) if the module is configured as an 8-channel device.

Channel Mode Register

The Channel Mode Register reports or programs the voltage or current operating mode for each channel.

Address Base + 1A16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Ch 16	Ch 15	Ch 14	Ch 13	Ch 12	Ch 11	Ch 10	Ch 09	Ch 08	Ch 07	Ch 06	Ch 05	Ch 04	Ch 03	Ch 02	Ch 01	Ch 00
	WRITE	Mode																

Ch XX Mode: Writing a one (1) to this field selects the voltage output mode for that channel. Writing a zero (0) to this field selects the current output mode for that channel.

The mode program jumpers on the terminal module override values written to this register. When the P/J jumper for a channel is set to jumper selectable, writing to this register has no effect.

Reading this register returns the channel mode. The channel mode is reported in this register for both VXIbus backplane programming and jumper programming on the terminal module.

NOTE

Channels 09 through 16 will return ones (1) if the module is configured as an 8-channel device.

Channel Relay Control Register

The Channel Relay Control Register programs and reports the state of each channel relay.

Address Base + 1C16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Ch 16	Ch 15	Ch 14	Ch 13	Ch 12	Ch 11	Ch 10	Ch 09	Ch 08	Ch 07	Ch 06	Ch 05	Ch 04	Ch 03	Ch 02	Ch 01	Ch 00
	WRITE	Relay																

Ch XX Relay: Writing a one (1) to this field opens the channel relay. Writing a zero (0) to this field closes the channel relay. The write operation will complete before the relays change state. The relays take approximately 5 milliseconds to change state.

Reading this register returns a one (1) in each field if the channel relay is programmed open and a zero (0) if the channel relay is programmed closed.

NOTE

Channels 09 through 16 will return ones (1) if the module is configured as an 8-channel device.

Card Control Register

The Card Control Register allows for access to the A24 address space from the A16 address space. It also provides access to the non-volatile memory.

Address Base + 1E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Unused												VPPEN	A24 Window			
	WRITE																	

VPPEN: Writing a one (1) to this field enables the non-volatile memory to be altered. Writing a zero (0) disables updates or erasures of the non-volatile memory. Non-volatile memory is located at base + 10016 to base + 20016.

NOTE

The VPPEN field enables or disables the programming voltage needed to change the contents of the non-volatile memory. A physical jumper on the main printed circuit board must also be moved to the CAL position before the contents of the non-volatile memory can be altered.

A24 Window: Writing a value to this field sets which 16 register-wide portion of A24 registers can be accessed via A16 registers 2016 to 3E16. The registers mapped for each value are shown below and in Figure B-3.

A24 Window Value	A24 Registers Mapped
016	A16 0016 through 1E16
116	A16 2016 through 3E16
216	Main_DAC Immediate Registers
316	Main_DAC Triggered Registers
416	Offset_DAC Registers
516	Gain_DAC Registers
616	Undefined
716	Undefined
816	Voltage Offset Cal Memory (non-volatile)
916	Voltage Gain Cal Memory (non-volatile)
A16	Current Offset Cal Memory (non-volatile)
B16	Current Gain Cal Memory (non-volatile)
C16	Cal and Configuration Registers (non-volatile)
D16	Undefined Cal Memory (non-volatile)
E16	Undefined Cal Memory (non-volatile)
F16	Undefined Cal Memory (non-volatile)

NOTE

Each incremental value of the A24 Window offsets the window by 32 bytes. Up to 512 bytes of A24 space can be pointed to.

A24 Window values 816 through F16 point to Calibration Registers. Calibration Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Main_DAC Immediate Registers

The Main_DAC Immediate Registers are used to program the next output value on a channel. There are 16 registers, one for each output channel. The register at base + 4016 programs channel 1, base + 4216 programs channel 2, up to base + 5E16 to program channel 16. Values loaded in these registers are applied to the output immediately (no trigger condition is required).

Address Base + 4016 through Base + 5E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Output Value															

Output Value: Writing a 16-bit value to this field outputs the value on the channel selected by the base address. The 16-bit value is a 2's complement number. Scaling is based upon 16 V maximum for voltage mode and .020 Amps for current mode.

Main_DAC Triggered Registers

The Main_DAC Triggered Registers are used to program the next output value on a channel. There are 16 registers, one for each output channel. The register at base + 6016 programs channel 1, base + 6216 programs channel 2, up to base + 7E16 to program channel 16. Values loaded in these registers are applied to the output(s) following the next trigger event.

Address Base + 6016 through Base + 7E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Output Value															

Output Value: Writing a 16-bit value to this field outputs the value on the channel selected by the base address. The 16-bit value is a 2's complement number. Scaling is based upon 16 V maximum for voltage mode and .020 Amps for current mode.

NOTE

The Main_DAC Triggered Registers, together with the Trigger Control Register, can be used to provide synchronized output changes on multiple channels.

Offset_DAC Registers

The Offset_DAC Registers are used to program the next offset value on a channel. There are 16 registers, one for each output channel. The register at base + 8016 programs channel 1, base + 8216 programs channel 2, up to base + 9E16 to program channel 16. Values loaded in these registers are applied to the output immediately (no trigger condition is required).

Address Base + 8016 through Base + 9E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Output Value										

Output Value: Writing a 12-bit value to this field outputs the value on the channel selected by the base address. Values are in the range:

00016	maximum positive offset
80016	nominal (zero) offset
FFF16	maximum negative offset

NOTE

A different offset value is required for voltage and current output operation.

Gain_DAC Registers

The Gain_DAC Registers are used to program the next gain value on a channel. There are 16 registers, one for each output channel. The register at base + A016 programs channel 1, base + A216 programs channel 2, up to base BE16 to program channel 16. Values loaded in these registers are applied to the output immediately (no trigger condition is required).

Address Base + A016 through Base + BE16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Output Value										

Output Value: Writing a 12-bit value to this field outputs the value on the channel selected by the base address. Values are in the range:

00016	minimum gain
80016	nominal gain
FFF16	maximum gain

NOTE

A different gain value is required for voltage and current output operation.

Undefined Registers Channel Voltage Offset Calibration Registers

The registers from C016 through FE16 are undefined.

The Channel Voltage Offset Calibration Registers store voltage offset calibration constants in non-volatile memory. There are 16 registers, one for each output channel. The register at base + 10016 stores channel 1, base + 10216 stores channel 2, up to base 11E16 which stores channel 16. This register is non-volatile.

Address Base + 10016 through Base + 11E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Voltage Offset Calibration Constant										

Voltage Offset Calibration Constant: Writing a 12-bit value to this field stores a new constant used to calibrate the channel output. Values are in the range:

00016	maximum positive offset
80016	nominal (zero) offset
FFF16	maximum negative offset

NOTE

Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Non-volatile memory has finite life, based upon the number of writes. Use care when writing to this memory.

The contents of this register are loaded into volatile memory at power-on and not used on an on-going basis.

Channel Voltage Gain Calibration Registers

The Channel Voltage Gain Calibration Registers store voltage gain calibration constants in non-volatile memory. There are 16 registers, one for each output channel. The register at base + 12016 stores channel 1, base + 12216 stores channel 2, up to base 13E16 which stores channel 16. This register is non-volatile.

Address Base + 12016 through Base + 13E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Voltage Gain Calibration Constant										

Voltage Gain Calibration Constant: Writing a 12-bit value to this field stores a new constant used to calibrate the channel output. The 16-bit value is a 2's complement number. Values are in the range:

00016	minimum gain
80016	nominal gain
FFF16	maximum gain

NOTE

Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Non-volatile memory has finite life, based upon the number of writes. Use care when writing to this memory.

The contents of this register are loaded into volatile memory at power-on and not used on an on-going basis.

Channel Current Offset Calibration Registers

The Channel Current Offset Calibration Registers store current offset calibration constants in non-volatile memory. There are 16 registers, one for each output channel. The register at base + 14016 stores channel 1, base + 14216 stores channel 2, up to base 15E16 to store channel 16.

This register is non-volatile.

Address Base + 14016 through Base + 15E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Current Offset Calibration Constant										

Current Offset Calibration Constant: Writing a 16-bit value to this field sets a new constant used to calibrate the channel output. Values are in the range:

00016	maximum positive offset
80016	nominal (zero) offset
FFF16	maximum negative offset

NOTE

Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Non-volatile memory has finite life, based upon the number of writes. Use care when writing to this memory.

The contents of this register are loaded into volatile memory at power-on and not used on an on-going basis.

Channel Current Gain Calibration Registers

The Channel Current Gain Calibration Registers store current gain calibration constants in non-volatile memory. There are 16 registers, one for each output channel. The register at base + 16016 stores channel 1, base + 16216 stores channel 2, up to base 17E16 to store channel 16. This register is non-volatile.

Address Base + 16016 through Base + 17E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	WRITE	Unused					msb lsb Current Gain Calibration Constant										

Current Gain Calibration Constant: Writing a 16-bit value to this field sets a new constant used to calibrate the channel output. Values are in the range:

00016	minimum gain
80016	nominal gain
FFF16	maximum gain

NOTE

Registers 0010016 through 001BE16 are located in non-volatile (FLASH) memory. Writing to this memory requires a complicated sequence of register accesses not documented here. It is recommended that calibration be performed using the SCPI driver for the module, not register access.

Non-volatile memory has finite life, based upon the number of writes. Use care when writing to this memory.

The contents of this register are loaded into volatile memory at power-on and not used on an on-going basis.

Calibration Resistor Value Registers

The Calibration Resistor Value Registers store the value of the resistor used to calibrate current output. The Calibration resistor value is a 32-bit value and requires two 16-bit registers. These registers are non-volatile.

Address Base + 18016	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	2nd Least Significant Byte								Least Significant Byte							
	WRITE																

Address Base + 18216	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Most Significant Byte								2nd Most Significant Byte							
	WRITE																

Value: The 32-bit resistor value (in ohms) is written to two adjacent 16-bit registers. The value is a float 32 format.

Voltage Calibration Status Register

The Voltage Calibration Status Register provides a non-volatile record of the voltage calibration status for each channel. This register is non-volatile.

Address Base + 18416	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Ch 16	Ch 15	Ch 14	Ch 13	Ch 12	Ch 11	Ch 10	Ch 09	Ch 08	Ch 07	Ch 06	Ch 05	Ch 04	Ch 03	Ch 02	Ch 01	Ch 00
	WRITE	Volt Cal Stat																

Ch XX Cal Stat: This field is set to a one (1) when the channel has been successfully voltage calibrated. This field is set to a zero (0) when the channel is not voltage calibrated.

NOTE

This register is not set or used by the hardware. The Keysight E1418A SCPI driver, if used to calibrate the module, automatically sets the bits in this register. If you use register programming to calibrate this module, you may wish to use this register to record the calibration status.

The Voltage Calibration Status Register, the Current Calibration Status Register, the Calibration Isolation Status Register, and the Calibration Card Configuration Register are used together to store the overall calibration status of the module.

Current Calibration Status Register

The Current Calibration Status Register provides a non-volatile record of the current calibration status for each channel. This register is non-volatile.

Address Base + 18616	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Ch 16	Ch 15	Ch 14	Ch 13	Ch 12	Ch 11	Ch 10	Ch 09	Ch 08	Ch 07	Ch 06	Ch 05	Ch 04	Ch 03	Ch 02	Ch 01
WRITE	Cur r Cal Stat																

Ch XX Curr Cal Stat: This field is set to a one (1) when the channel has been successfully current calibrated. This field is set to a zero (0) when the channel is not current calibrated.

NOTE

This register is not set or used by the hardware. The Keysight E1418A SCPI driver, if used to calibrate the module, automatically sets the bits in this register. If you use register programming to calibrate this module, you may wish to use this register to record the calibration status.

The Voltage Calibration Status Register, the Current Calibration Status Register, the Calibration Isolation Status Register, and the Calibration Card Configuration Register are used together to store the overall calibration status of the module.

Calibration Isolation Status Register

The Calibration Isolation Status Register provides a non-volatile record of the isolation status of each channel at the last calibration. This register is non-volatile.

Address Base + 18816	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Ch 16	Ch 15	Ch 14	Ch 13	Ch 12	Ch 11	Ch 10	Ch 09	Ch 08	Ch 07	Ch 06	Ch 05	Ch 04	Ch 03	Ch 02	Ch 01
WRITE	Iso Cal Stat																

Ch XX Iso Cal Stat: This field is set to a one (1) when the last calibration of the channel was performed with the channel configured as non-isolated. This field is set to a zero (0) when the channel was last calibrated in the isolated configuration.

NOTE

This register is not set or used by the hardware. The Keysight E1418A SCPI driver, if used to calibrate the module, automatically sets the bits in this register. If you use register programming to calibrate this module, you may wish to use this register to record the calibration status.

The Voltage Calibration Status Register, the Current Calibration Status Register, the Calibration Isolation Status Register, and the Calibration Card Configuration Register are used together to maintain the overall calibration status of the module.

Changes in the values of these fields indicate a change in the module configuration and may indicate the need to recalibrate the module.

Calibration Card Configuration Register

The Calibration Card Configuration Register provides a non-volatile record of the module configuration as either an 8-channel device or a 16-channel device when the module was last calibrated.

Address Base + 18A16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	
	READ	Undefined											Configuration			Undefined		
	WRITE																	

Configuration: When the module was configured as an 8-channel DAC during the last calibration, all bits in this field are set to one (1). When the module was configured as a 16-channel DAC at the last calibration, all bits in this field are set to zero (0).

NOTE

This register is not set or used by the hardware. The Keysight E1418A SCPI driver, if used to calibrate the module, automatically sets the bits in this register. If you use register programming to calibrate this module, you may wish to use this register to record the calibration status.

The Voltage Calibration Status Register, the Current Calibration Status Register, the Calibration Isolation Status Register, and the Calibration Card Configuration Register are used together to maintain the overall calibration status of the module.

Changes in the values of the configuration field indicate a change in the module configuration and may indicate the need to recalibrate the module. This register is non-volatile and the field can be compared to the volatile Configuration Register to determine if the module configuration has changed.

Changes in the terminal module do not affect the contents of this register.

Calibration Checksum Register

The Calibration Checksum Register provides a non-volatile record of the checksum computed from all non-volatile calibration memory locations. The checksum computed is a 32-bit value but only the least significant

16-bits are available.

Address Base + 18C16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	2nd Least Significant Byte								Least Significant Byte							
	WRITE																

Value: The 16 least significant bits of the Checksum Register.

Module Serial Number Registers

The Module Serial Number Registers provides a 10-byte module serial number stored in non-volatile memory.

Address Base + 18E16	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	2nd Least Significant Byte								Least Significant Byte							

Address Base + 19016	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	4th Least Significant Byte								3 rd Least Significant Byte							

Address Base + 19216	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	6th Least Significant Byte								5th Least Significant Byte							

Address Base + 19416	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	8th Least Significant Byte								7th Least Significant Byte							

Address Base + 19616	Bit	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
	READ	Most Significant Byte								9th Least Significant Byte							

Register Example

This example demonstrates using direct register access to set a calibrated voltage output. The example is in BASIC and uses a command module controlled via GPIB.

```

•
•
•
679 Reg_offset(0) = 0      ! ID / Logical Address Register.
680 Reg_offset(1) = 2      ! Device Type Register.
681 Reg_offset(2) = 4      ! Status/Control Register.
682 Reg_offset(3) = 6      ! VXI Offset Register.
683 Reg_offset(4) = 8      ! Calibration Control Register.
684 Reg_offset(5) = 10     ! Card Configuration Register.
685 Reg_offset(6) = 12     ! Software Trigger Register.
686 Reg_offset(7) = 14     ! Trigger Control Register.
687 Reg_offset(8) = 16     ! Interrupt Control Register.
688 Reg_offset(9) = 18     ! Interrupt Status Register.
689 Reg_offset(10) = 20    ! Isolation Status Register.
690 Reg_offset(11) = 22    ! Program Jumper Register.
691 Reg_offset(12) = 24    ! Channel Trigger Register.
692 Reg_offset(13) = 26    ! Channel Mode Register.
693 Reg_offset(14) = 28    ! Relay Control Register.
694 Reg_offset(15) = 30    ! Card Control A24 Window Register.
695 Reg_offset(16) = 32    ! A_24 Window Register (Channel 1 DAC and CAL).
696 Reg_offset(17) = 34    ! A_24 Window Register (Channel 2 DAC and CAL).
697 Reg_offset(18) = 36    ! A_24 Window Register (Channel 3 DAC and CAL).
698 Reg_offset(19) = 38    ! A_24 Window Register (Channel 4 DAC and CAL).
699 Reg_offset(20) = 40    ! A_24 Window Register (Channel 5 DAC and CAL).
700 Reg_offset(21) = 42    ! A_24 Window Register (Channel 6 DAC and CAL).
701 Reg_offset(22) = 44    ! A_24 Window Register (Channel 7 DAC and CAL).
702 Reg_offset(23) = 46    ! A_24 Window Register (Channel 8 DAC and CAL).
703 Reg_offset(24) = 48    ! A_24 Window Register (Channel 9 DAC and CAL).
704 Reg_offset(25) = 50    ! A_24 Window Register (Channel 10 DAC and CAL).
705 Reg_offset(26) = 52    ! A_24 Window Register (Channel 11 DAC and CAL).
706 Reg_offset(27) = 54    ! A_24 Window Register (Channel 12 DAC and CAL).
707 Reg_offset(28) = 56    ! A_24 Window Register (Channel 13 DAC and CAL).
708 Reg_offset(29) = 58    ! A_24 Window Register (Channel 14 DAC and CAL).
709 Reg_offset(30) = 60    ! A_24 Window Register (Channel 15 DAC and CAL).
710 Reg_offset(31) = 62    ! A_24 Window Register (Channel 16 DAC and CAL).
•
•
•
999! Output a calibrated voltage on channel 3.

```

```

1000!
1001Write_a16(Reg_offset(15),8)      ! Map A 24 voltage offset cal
registers.
1002Off_con=FNRead_a16(Reg_offset(18)) ! Get the channel 3 voltage
offset cal.
1003Write_a16(Reg_offset(15),4)      ! Map A 24 channel offset
registers.
1004Write_a16(Reg_offset(18),Off_con) ! Put in the offset constant.
1005Write_a16(Reg_offset(15),9)      ! Map A 24 voltage gain cal registers.
1006Gain_con=FNRead_a16(Reg_offset(18)) ! Get the channel 3 voltage gain cal.
1007Write_a16(Reg_offset(15),5)! Map A 24 channel gain registers.
1008Write_a16(Reg_offset(18),Gain_con)! Put in the gain constant.
1009Write_a16(Reg_offset(15),2)! Map A 24 channel Main_DAC registers.
1010Write_a16(Reg_offset(18),Out_val) ! Program the output value.
1011Write_a16(Reg_offset(14),0)      ! Close all output relays.

•
•
•

2200Write_a16:SUB Write_a16(INTEGER Register,INTEGER Value).
2201!
2202!
2203Laddr$="09"
2204OUTPUT 70900;"VXI:WRITE "&Laddr$&","&VAL$(Register)&","&VAL$(Value)
2205SUBEND

•
•
•

3200Read_a16:DEF FNRead_a16(INTEGER Register)
3201!
3202!
3203Laddr$="09"
3204OUTPUT 70900;"VXI:READ? "&Laddr$&","&VAL$(Register)
3205ENTER 70900; Reading
3206RETURN Reading
3207Read_a16_end:FNEND

•
•
•

```


C E1418A Error Messages

Error Types

Table C-2 lists the error messages generated by the Keysight E1418A 8/16-Channel D/A Converter Module firmware when programmed by SCPI. Errors with negative values are governed by the SCPI standard and are categorized in Table C-1. Error numbers with positive values are not governed by the SCPI standard.

Table C-1 Error Types Described

-199 to -100	Command Errors (syntax and parameter errors). See the Keysight E1405/E1406 Command Module User's Manual for a description of these errors.
-299 to -200	Execution Errors (instrument driver detected errors). See Table C-2 for these values (also, see the Keysight E1405/E1406 Command Module User's Manual for further details).
-399 to -300	Device Specific Errors (instrument driver errors that are not command or execution errors). See Table C-2 for these values (also, see the Keysight E1405/E1406 Command Module User's Manual for further details).
-499 to -400	Query Errors (problem in querying an instrument). See the Keysight E1405/E1406 Command Module User's Manual for a description of these errors.

Error Messages

Table C-2 Error Messages

Code	Error Messages	Potential Cause(s)
-141	Invalid character data	An invalid SCPI keyword was used.
-211	Trigger ignored	A trigger was received and no channels were in the wait for trigger state.
-213	Init ignored	An INITiate was received and one or more channels were already in the wait for trigger state.
-221	Setting Conflict	A command was received for a mode not set. For example, a SOURn:VOLT command was received and the channel is set to CURR mode.
-222	Data out of range	<n> in SCPI keyword is not in the range of 1 to 16. <value> is out of range. <mask> is out of range. <number> is out of range.
-224	Illegal Parameter Value	Value received is not in the legal range for the parameter.
-240	Hardware Error	A hardware failure has been detected. The module may require replacement or repair.
+2001	Invalid Channel Number	<n> in SCPI keyword is not valid for the module configuration. For example <n> is set to 11 on an 8-channel configuration.
+3000	Trigger too fast	The trigger was received before the module completed the last command.
+3002	Self Test Failed	A hardware failure was detected during power up self-test. Additional self-test information is given in Appendix E.
+3004	Multiple attempts to erase non-volatile Memory failed	Attempts to erase non-volatile memory using the CAL:STOR command failed. May indicate a hardware failure or the CAL Store Enable Jumper is not in the correct position.
+3005	Multiple attempts to program non-volatile Memory failed	Attempts to write to non-volatile memory using the CAL:STOR command failed. May indicate a hardware failure or the CAL Store Enable Jumper is not in the correct position.
+3006	CAL Store Enable Jumper not set properly	A CAL:STOR command was received and the CAL Store Enable Jumper is not set to the CAL position.
+3007	Checksum error on non-volatile Memory	Calibration constants in non-volatile memory are corrupted. Recalibration is needed.

Code	Error Messages	Potential Cause(s)
+3008	Invalid Calibration State	An invalid sequence of calibration commands was received. For example, a CALn:CONF:VOLT command followed by a CALn:VAL:CURR command.
+3009	Invalid Calibration Channel	An invalid channel number, n, was requested in the CALn:CONF or CALn:VAL commands.
+3010	Calibration aborted	A command, other than one of the CALibration commands, was received during the calibration process.
+3011	Checksum error on Calibration Memory	Calibration constants in RAM are corrupted. Recalibration is needed.
+3012	Channel cannot be programmed to this mode, check jumpers	An attempt to set the channel output mode when the P/J jumper is set to Jumper selectable and the mode is set by the V/I jumper.
+3013	Waiting for Trigger	An attempt to change a channel output value or mode was made after the trigger system in the wait-for-trigger state.
+3014	Illegal while initiated	An attempt to program a channel was made when the channel is in the wait-for-trigger state.
+3015	Non-volatile memory write failed	Indicates a hardware failure in non-volatile memory.

D Voltage/Current Output Adjustment

Using This Appendix

This appendix describes adjustment procedures. The procedures in this appendix are intended for qualified service personnel.

Adjustment procedures are a part of calibration procedures. Calibration involves functional testing, performance testing, adjustment, and verification testing. These procedures are given in the Keysight E1418A 8/16-Channel DAC Service Manual.

To maintain the output accuracy shown in Appendix A, adjustment should be performed at 90 day intervals. Keysight Technologies can perform calibration and adjustment for you. Contact the nearest Keysight Technologies Sales and Service Office for additional information.

The Keysight E1418A Specifications (Appendix A) require that the operation temperature is within $\pm 5^{\circ}\text{C}$ of the calibration temperature. The module temperature is affected by both the ambient temperature and the cooling performance of the mainframe. Because VXI mainframes have significantly different cooling capabilities, the most accurate calibration is achieved when the Output Adjustment is performed with the module in the same environment and mainframe as it will be operating in.

Adjustment may be performed at more frequent intervals, if required. The module can be adjusted for use without changing the permanent calibration settings.

Adjustments are performed electronically. There are no mechanical adjustments in the module.

Calibration Constants and Non-Volatile Memory

The accuracy of a channel output depends upon a number of calibration constants. Calibration constants are stored in two locations within the module; in non-volatile memory and in RAM. The constants in RAM are used by the module to adjust all outputs.

When the module is used with the SCPI driver, the RAM constants are loaded from the non-volatile memory at power-up. You can adjust the RAM calibration constants without disturbing the non-volatile memory constants (creating a temporary calibration).

Non-volatile memory has a finite number of writes. Writing the calibration constants to non-volatile memory, therefore, reduces the life of this memory. If you are calibrating the module at 90 day or 1 year intervals, write the new constants into non-volatile memory. The new constants will be used following power-up. If you are calibrating the module more frequently (daily, for example), write the new calibration constants into RAM, but do not write to non-volatile memory.

The adjustment procedures shown in this appendix demonstrate both methods of writing calibration constants.

Equipment Required

The following equipment is recommended for calibration and adjustment. Key specifications are listed to allow for equipment substitutions.

Model	Requirements
Digital Multimeter (DMM) 5 1/2 or 6 1/2 digit	Voltage measurements to ± 16.8 V Four-wire Resistance measurements from 50 Ω to 500 Ω

Making Connections

All adjustment can be performed using the CAL output terminals. The CAL output terminals provide one set of connections for both voltage and current adjustment.

Optionally, you can also perform the adjustment at each channel output (to include the output relay contacts in the path). Before beginning adjustment procedures, you must send the DIAGnostic:CALibration:OUTPut CHANnel command to set the adjustment point at the channels instead of the CAL output terminals. Adjustment at each channel output will require individual connections. You must make a four-wire connections for the adjustment procedures.

Adjustment Procedure

Adjustment is performed on each channel, one at a time. Additionally, voltage output and current output each use unique calibration constants. If desired, you may adjust only voltage output or current output.

Preparation

Before performing any adjustments, determine if the adjustments are to be temporary or permanent.

If Permanent

- 1 Turn off the mainframe.
- 2 Remove the terminal module.
- 3 Remove the module from the mainframe.
- 4 Set the Cal Store Enable Jumper to the CAL position as shown in Figure D-1.
- 5 Reinstall the module in the mainframe.
- 6 Make the CAL output terminal connections on the terminal module.

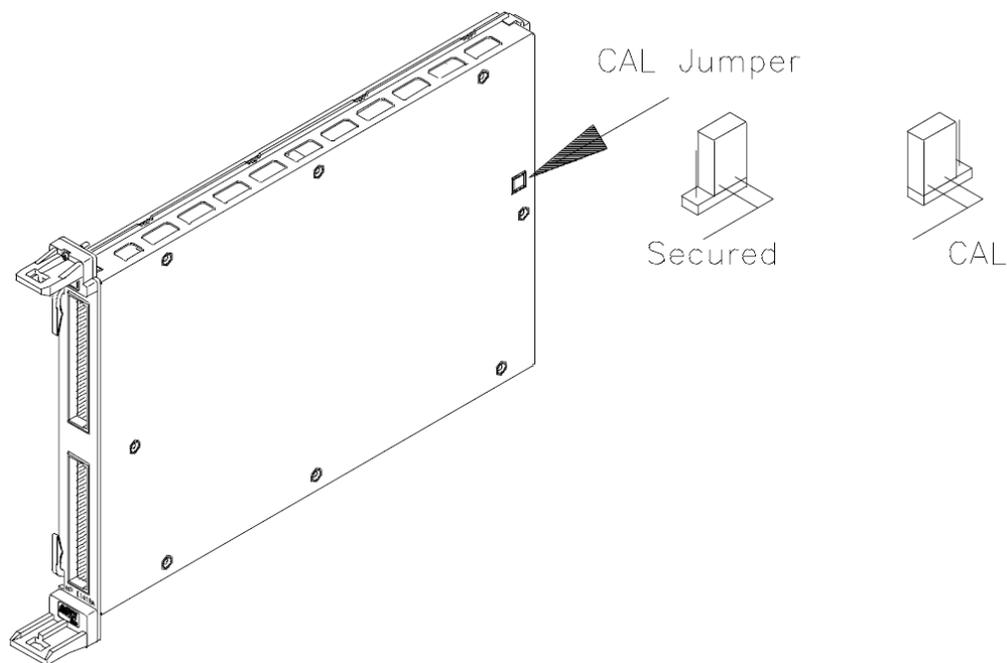


Figure D-1 CAL Store Enable Jumper

- 7 Install the terminal module.
- 8 Apply power and allow a 15 minute warm-up.

If Temporary

- 1 Make the CAL output terminal connections on the terminal module.
- 2 Install the terminal module.
- 3 Apply power and allow a 15 minute warm-up.

Voltage Adjustment

Voltage output adjustment uses two of the CALibration subsystem queries.

```
CALibrationn:CONFigure:VOLTage?  
CALibrationn:VALue:VOLTage?
```

The general procedure for channel voltage adjustment is:

- 1 Make the connections shown in Figure D-2 or D-3.
- 2 Send the CALibrationn:CONFigure:VOLTage? query to the module and read the response until a 1 is returned (typically the first query response).
- 3 Read the voltage output on the DMM.
- 4 Send the DMM value read with the CALibrationn:VALue:VOLTage? query.
- 5 Enter the query response.
- 6 Repeat steps 3, 4, and 5 until the CALibrationn:VALue:VOLTage? query returns a 0.
- 7 Repeat steps 1 through 6 for each channel.

The first query, CALibrationn:CONFigure:VOLTage?, sets the channel to the calibration mode and returns a 1 when the channel is ready for calibration. When a 1 is returned, the channel output voltage is set to the first adjustment point.

Read the output voltage on the DMM and return the value obtained using the CALibrationn:VALue:VOLTage? query. This query returns an integer indicating the calibration state of the channel. Any non-zero return from this query indicates additional values are needed.

Each channel will require multiple iterations of the CALibrationn:VALue:VOLTage? query. A minimum of 9 queries, to a maximum of 50 queries, will be required at each channel. During the process, the output voltage will range from +16 V to -16 V and the last values output will be at or near 0 volts.

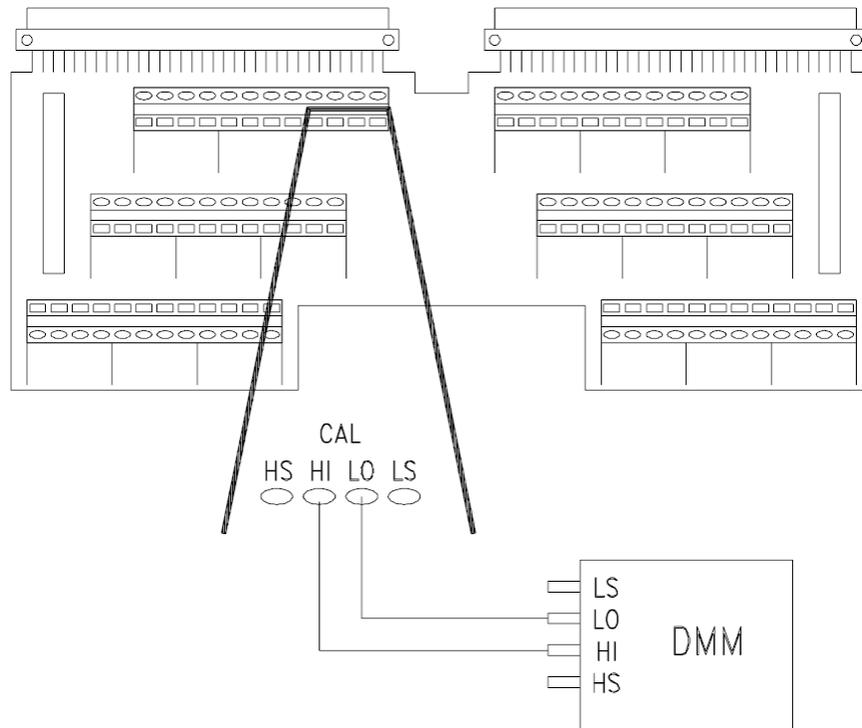


Figure D-2 Voltage Calibration Connections (CAL)

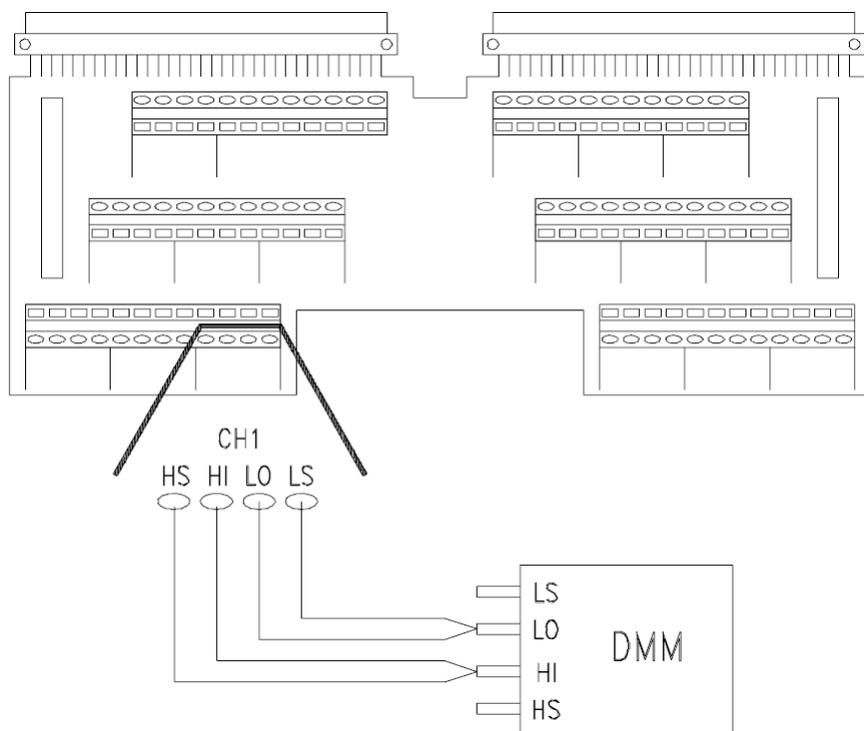


Figure D-3 Voltage Calibration Connections (CHAN)

Current Adjustment

Current output uses an internal resistance value to calibrate all channels. This resistance value is approximately 244 Ω .

NOTE

You may also use an external resistance value on each channel for current output calibration. If you wish to specify an external resistor value, you must send the `DIAGnostic:CALibration:OUTPut CHANnel` command and perform the adjustment at each channel output. Any resistor value may be used but values in the range of 50 Ω to 500 Ω are recommended.

To set the internal resistance value use the following `CALibration` commands:

```
CALibration:CONFigure:RESistance?
CALibration:VALue:RESistance
```

The resistance value set, either internal or external, is not stored. When using the internal resistor value, the general procedure is:

- 1 Make the connections shown in Figure D-4.
- 2 Send the CALibration:CONFigure:RESistance? query to the module and read the response until a 1 is returned (typically the first query response).
- 3 Read the resistance on the DMM.
- 4 Send the DMM value read to the module using the CALibration:VALue:RESistance command.

The resistor value is only set once for current calibration of all channels. If you are using an external resistor value, for each channel:

- 1 Send the CALibration:CONFigure:RESistance? query to the module and read the response until a 1 is returned (typically the first query response).
- 2 Measure the channel's external resistor value on the DMM.
- 3 Send the DMM value read to the module using the CALibration:VALue:RESistance command.

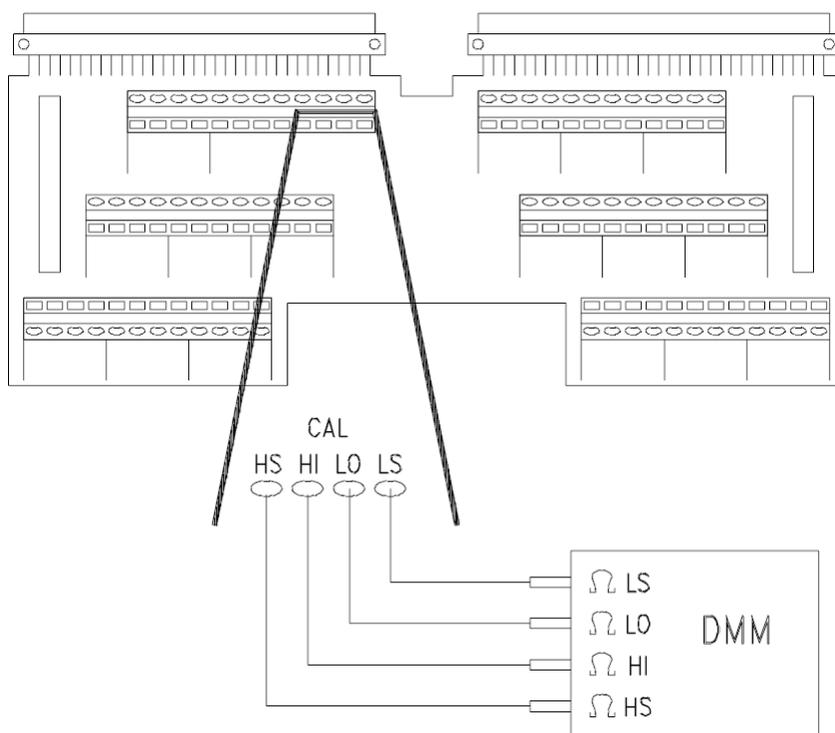


Figure D-4 Resistance Calibration Connections (CAL)

Current output adjustment uses two of the CALibration subsystem queries. Current adjustment requires voltage measurements.

CALibrationn:CONFigure:CURRent?
CALibrationn:VALue:CURRent? <value>

Once the calibration resistance value is set as described earlier, the general procedure for each channel current output adjustment is:

- 1** Make the connections shown in Figure D-5 or D-6.
- 2** Send the CALn:CONF:CURR? query to the module and read the response until a 1 is returned (typically the first query response).
- 3** Read the voltage output on the DMM.
- 4** Send the DMM value read with the CALn:VAL:CURR? <value> query.
- 5** Enter the query response.
- 6** Repeat steps 3, 4, and 5 until the CALn:VAL:CURR? <value> query returns a 0.
- 7** Repeat steps 1 through 6 for each channel.

The first query, CALn:CONF:CURR?, sets the channel to the calibration mode and returns a 1 when the channel is ready for calibration. When a 1 is returned, the channel output voltage is set to the first adjustment point.

Read the output voltage on the DMM and return the value obtained using the CALn:VAL:CURR? <value> query. This query returns an integer indicating the calibration state of the channel. A value other than 0 or 2 from this query indicates additional values are needed.

Each channel will require multiple iterations of the CALn:VAL:CURR? <value> query. A minimum of 9 queries, to a maximum of 50 queries, will be required at each channel. During the process, the output voltage will range from -5 to +5 V and the last values output will be at or near 0 volts.

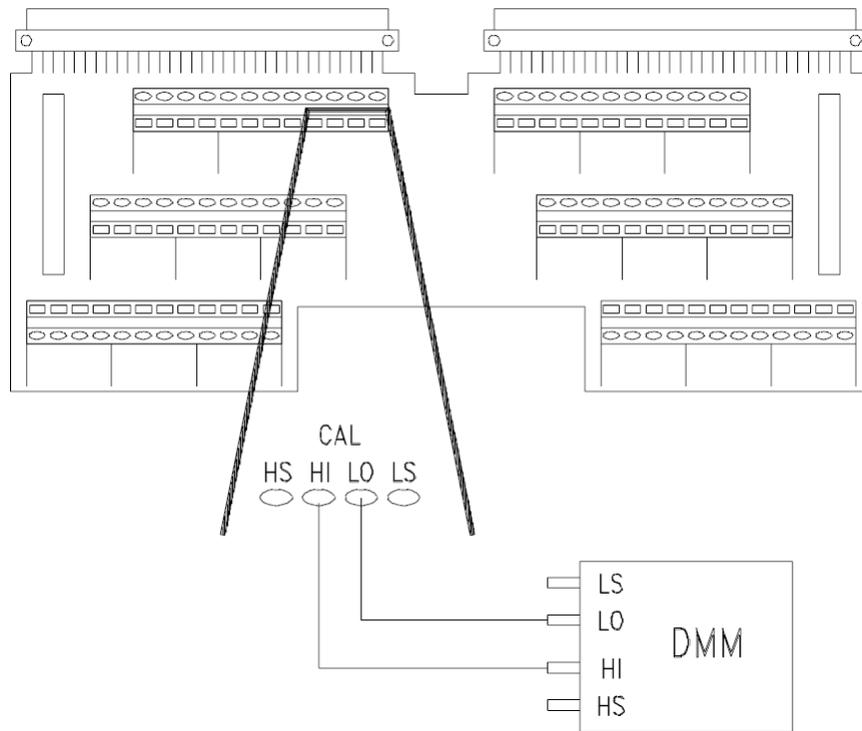


Figure D-5 Current Calibration Connections (CAL)

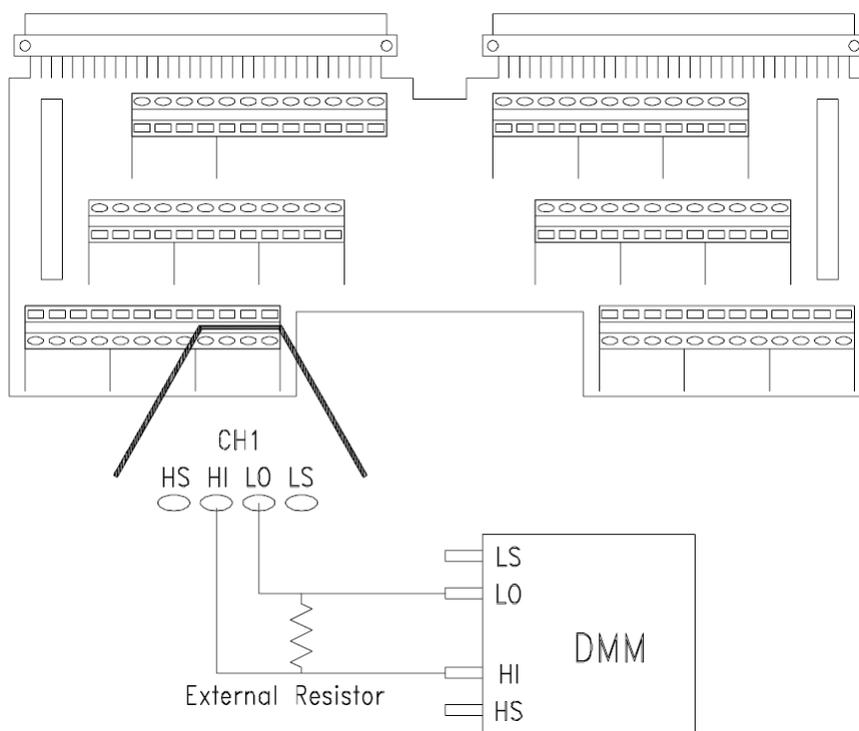


Figure D-6 Current Calibration Connections (CHAN)

Storing the Adjustments

Once all adjustments have been made using the procedures outlined previously, you can store the new calibration constants in non-volatile memory by sending the following command:

```
/* Store the new constants */
```

```
CALibration:STORe
```

This command will generate an error if the Cal Store Enable Jumper is not set to the CAL position.

NOTE

The Keysight E1418A will be busy storing the new calibration constants following the CAL:STORe command. You should not perform any bus resets or module resets until the store is complete. You can use the *OPC? query as described elsewhere, if needed.

Return the Module to Use

If you have changed the position of the Cal Store Enable Jumper and you wish to prevent writing calibration constants to non-volatile memory, set the jumper to the SECURE position.

Example Program

The following program, written in ANSI C illustrates a full calibration of all channels for both voltage and resistance. The internal calibration resistor is used. The SCPI drivers disk contains a calibration example file. This example uses function calls to the Keysight VISA Transition Library for I/O operations. Page 39 provides more details about this library.

```

•
•
•
/** FUNCTION PROTOTYPES **/
void main (void);
void err_handler(ViSession vi, ViStatus x);/* VTL error routine */
void sys_err(ViSession resource);/* Checks for SCPI programming errors */
void pause();/* Waits for a keystroke to continue program execution */
int config_check ();/* Checks and reports the module configuration */
/* returns the number of channels in module */
float get_voltage ();/* Obtains the measured voltage */
float get_resistance ();/* Obtains the measured resistance */
•
•
•
void main (void)
{
char cal_point [5],int_ext [4];
int num_chan,result,compare,i,condition [4];
float meas_volt,meas_res;
•
•
•
/**VOLTAGE OUTPUT ADJUSTMENT***/
for (i=1;i<num_chan+1;i++)
{
result = 0;
while (result < 1)
{
err=viPrintf(dac, "CAL%d:CONF:VOLT?\n",i); /* Configure for calibration */
if(err < VI_SUCCESS) err_handler(dac, err);

```

```

err=viScanf(dac, "%d", &result);/* Enter integer returned */
/* returns a 1 when ready to calibrate */
if(err < VI_SUCCESS) err_handler(dac, err);
}
result = 1;
while (result !=0)
{
meas_volt=get_voltage ();/* Get the voltage measurement */ err=viPrintf(dac,
"CAL%d:VAL:VOLT? %f\n",i,meas_volt); /* Send the measurement*/ if(err <
VI_SUCCESS) err_handler(dac, err);
err=viScanf(dac, "%d", &result);/* Enter integer returned */
/* returns a 0 when calibration complete */
if(err < VI_SUCCESS) err_handler(dac, err);
if (result == 5)/* Calibration for this channel aborted */
{
printf ("Calibration for channel %d aborted\n",i);
result = 0;
}
}
}

/**CURRENT OUTPUT ADJUSTMENT***/

/** set the calibration resistor value***/
result = 0;
while (result < 1)
{
err=viPrintf(dac, "CAL:CONF:RES?\n");/* Configure for resistance calibration
*/
if(err < VI_SUCCESS) err_handler(dac, err);
err=viScanf(dac, "%d", &result);/* Enter integer returned */
/* returns a 1 when ready to calibrate */
if(err < VI_SUCCESS) err_handler(dac, err);
}
meas_res = get_resistance();
err=viPrintf(dac, "CAL:VAL:RES %f\n",meas_res); /* Send the resistance value
*/
if(err < VI_SUCCESS) err_handler(dac, err);
/** channel current output adjustment ***/

for (i=1;i<num_chan+1;i++)
{
result = 0;

```

```

while (result < 1)
{
err=viPrintf(dac, "CAL%d:CONF:CURRE? \n",i); /* Configure for calibration */
if(err < VI_SUCCESS) err_handler(dac, err);
err=viScanf(dac, "%d", &result);/* Enter integer returned */
/*, returns a 1 when ready to calibrate */
if(err < VI_SUCCESS) err_handler(dac, err);
}
result = 1;
while (result !=0 && result !=2)
{
meas_volt=get_voltage ();/* Get the voltage measurement */
err=viPrintf(dac, "CAL%d:VAL:CURRE? %f\n",i,meas_volt);
if(err < VI_SUCCESS) err_handler(dac, err);
err=viScanf(dac, "%d", &result);/* Enter integer returned */
/* returns a 0 when calibration complete */
if(err < VI_SUCCESS) err_handler(dac, err);
if (result == 5)/* Calibration aborted */
{
printf ("Calibration for channel %d aborted\n\n",i);
result = 0;
}
}
}

/**** STORE THE NEW CALIBRATION CONSTANTS****/

err=viPrintf(dac, "CAL:STOR;*OPC?\n");/* Store the new cal constants */
if(err < VI_SUCCESS) err_handler(dac, err);
err=(viScanf(dac, "%d",&result);
if(err < VI_SUCCESS) err_handler(dac, err);
sys_err(dac);
    •
    •
    •
}

```


E Configuration and Disassembly

Using This Appendix

This appendix contains information about the mechanical and electrical layout of the module. Use this appendix to:

- Disassemble and reconfigure the module
- Perform assembly level troubleshooting

CAUTION

Procedures in this appendix should be performed by qualified service personnel at approved static safe workstations.

Configuration

The Keysight E1418A can be configured as either an 8-channel output device or a 16-channel output device. Each output channel can be configured as either an isolated output or a non-isolated output. The following sub-sections describe how to check or change this configuration.

Checking Configuration

Use the following SCPI command to check the configuration of a module. You can also use this command to verify changes you make to the configuration. Additional programming information is given Chapter 2 and Chapter 3.

! Check the configuration by sending this query.
DIAG:CONF?

! Enter the returned values, the query returns six integers.

The query above returns six 16-bit integers. The first and third integer contain configuration information. The second, fourth, fifth, and sixth integers contain information about the terminal module, jumper settings, and output relays. The configuration information is shown on the next page.

1st Value Returned

Indicates an 8-channel or 16-channel configuration.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Use	Not Used													Channels		

Channels can have one of two values; all 1's (decimal 7) for an 8-channel configuration, and all 0's (decimal 0) for a 16-channel configuration.

2nd Value Returned

Indicates the type of Terminal Module (if any) installed.

3rd Value Returned

Indicates isolated or non-isolated plug-on modules for each channel.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Use	Ch16	Ch15	Ch14	Ch13	Ch12	Ch11	Ch10	Ch9	Ch8	Ch7	Ch6	Ch5	Ch4	Ch3	Ch2	Ch1

When a bit is set to a 0 an isolated plug-on is present. A bit set to a 1 indicates a non-isolated plug-on. For 8-channel devices, channels 9 through 16 bits are set to 1.

4th Value Returned

Indicates the state of the V/I jumper on the terminal module as either current or voltage when the P/J jumper is in the jumper selectable position.

5th Value Returned

Indicates the state of the channel output relay.

6th Value Returned

Indicates the state of the P/J jumper on the terminal module.

Changing Configuration

Configuration changes are made using Keysight add-on kits. These procedures support the following add-on kits:

Kit Part Number	Description	Use
Keysight E1523A	1-Channel Isolation Plug-On Module	Change one or more channels from Non-Isolated to Isolated Output.
Keysight E1524A	8-Channel Non-Isolated Expansion Kit	Add 8 Channels of Non-Isolated Output.
Keysight E1525A	8-Channel Isolated Expansion Kit	Add 8 Channels of Isolated Output.

Adding 8 Channels

Use this procedure to install an 8-Channel expansion kit (Keysight E1524A or Keysight E1525A).

CAUTION

Almost all electrical components can be damaged by electrostatic discharge (ESD) during handling. Component damage can occur at electrostatic discharge voltages as low as 50 volts. Disassemble and reconfigure only in a static free work area. Minimize handling of assemblies and components. Keep all assemblies and replacement parts in the original static free packaging.

These procedures should be performed by qualified service personnel at approved static safe workstations.

Tools Needed

- T10 Torx Driver (one is provided in the kit).
- Static Safe Workstation.
- Static Wrist Strap.

Procedure

Refer to Figures E-1 and E-2 during these procedures.

- 1** Remove the top cover. Refer to Figure E-1.
- 2** Remove the screw holding the sheet metal spacer and save the screw. Remove and discard the sheet-metal spacer.
- 3** Place expansion board over the main board, component sides facing each other. Line up the three electrical connectors and carefully press into place.

Install the hold down screw through the expansion board and secure with a T10 Torx Driver. Refer to Figure E-2.

- 4 Replace the top cover.
- 5 Perform the adjustment procedures on the module. See Appendix D.

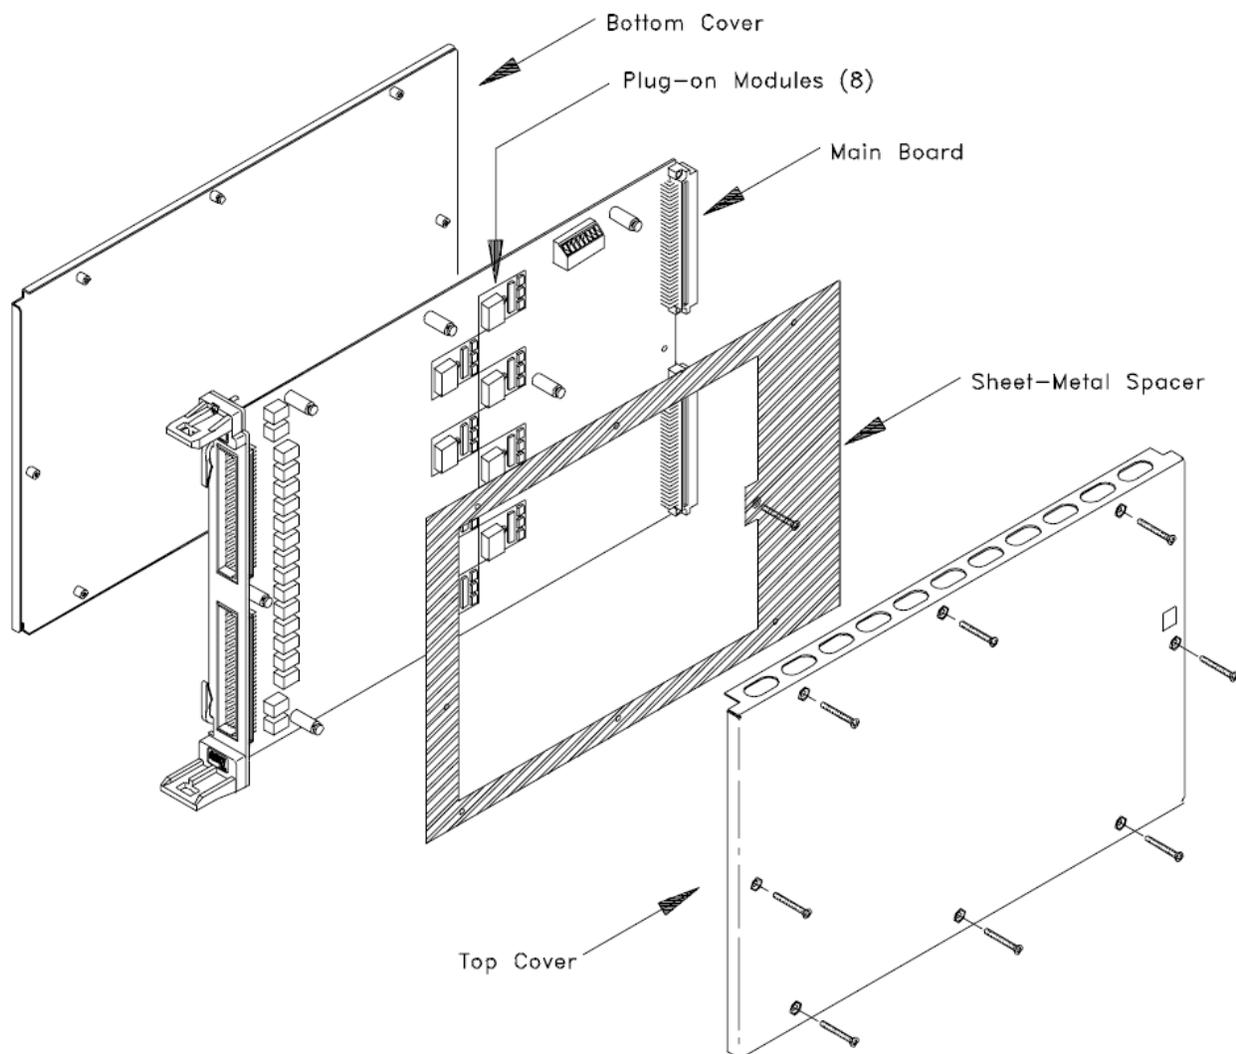


Figure E-1 8-Channel Disassembly

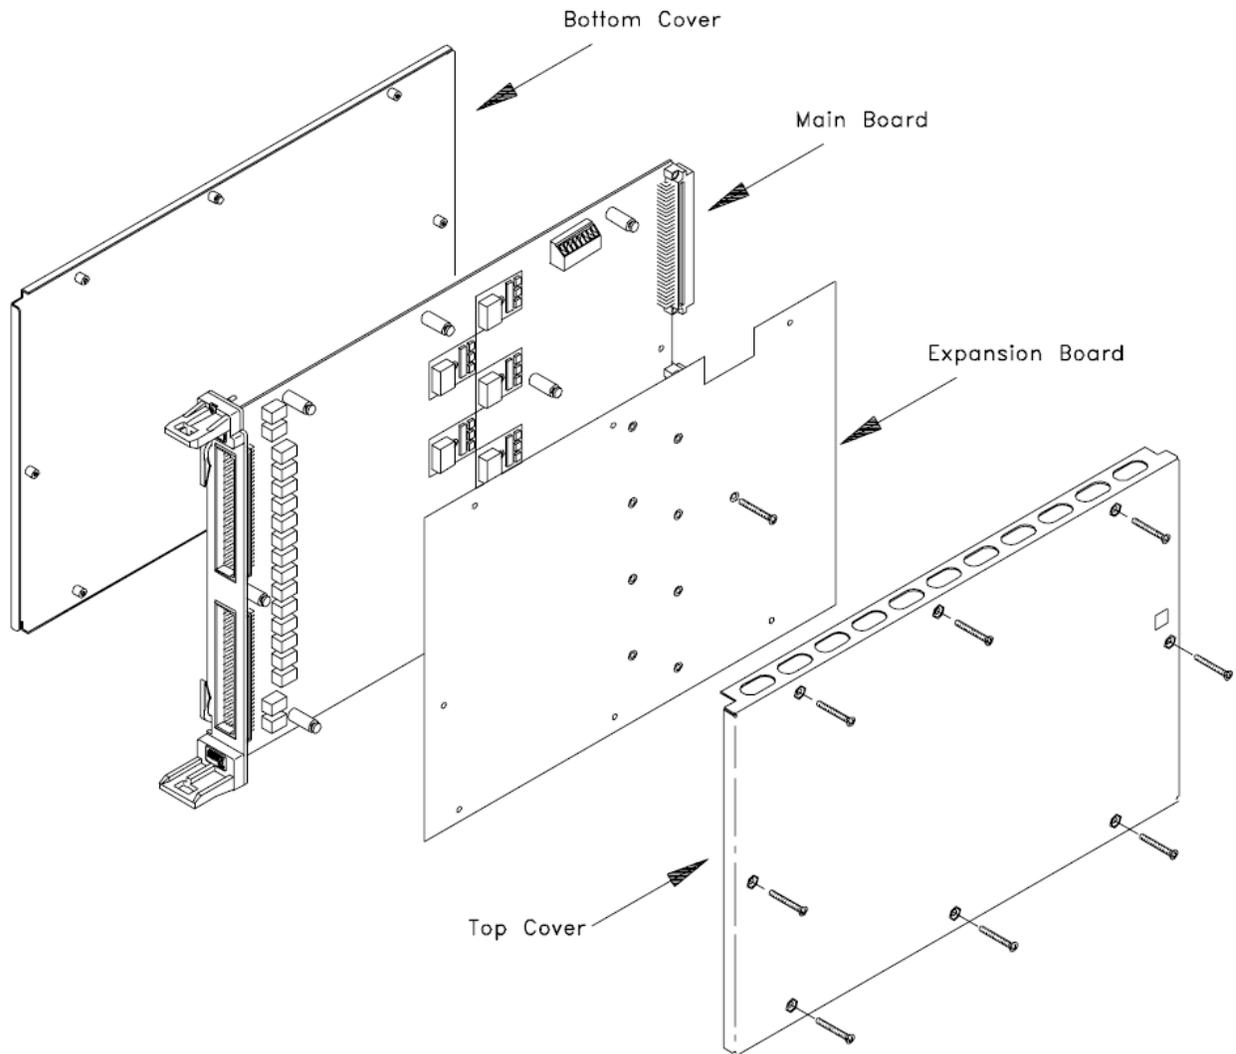


Figure E-2 Plug-on Channel Locations

Installing Isolated/Non-Isolated Plug-on Modules

Use this procedure to install the isolated plug-on kit (Keysight E1523A) or to change the channel isolation configuration.

CAUTION

Almost all electrical components can be damaged by electrostatic discharge (ESD) during handling. Component damage can occur at electrostatic discharge voltages as low as 50 volts. Disassemble and reconfigure only in a static free work area. Minimize handling of assemblies and components. Keep all assemblies and replacement parts in the original static free packaging.

These procedures should be performed by qualified service personnel at approved static safe workstations.

Tools Needed

- T10 Torx Driver (one is provided with the kit)
- Static Safe Workstation
- Static Wrist Strap

Procedure

Refer to Figures E-1 and E-2 during these procedures

- 1** Remove the top cover.
- 2** Remove the screw holding the sheet-metal spacer (Figure E-1) or expansion board (Figure E-2). Remove the spacer or expansion board.
- 3** Refer to Figure E-3 for the locations of the isolated/non-isolated plug-on modules. Each channel must have a plug-on module. Remove the screw securing the plug-on module(s).
- 4** Use Figure E-4 to identify isolated or non-isolated plug-on modules. Install the new plug-on module as shown in Figure E-4. Note the locator pin on the main board or expansion board that ensures correct orientation. Replace the screw in the plug-on module.
- 5** Repeat steps 3 and 4 for each channel.
- 6** Reinstall the sheet metal spacer or expansion board (a complete procedure for the expansion board is given earlier in this chapter).
- 7** Replace the top cover.
- 8** Perform the adjustment procedures on the module. See Appendix D.

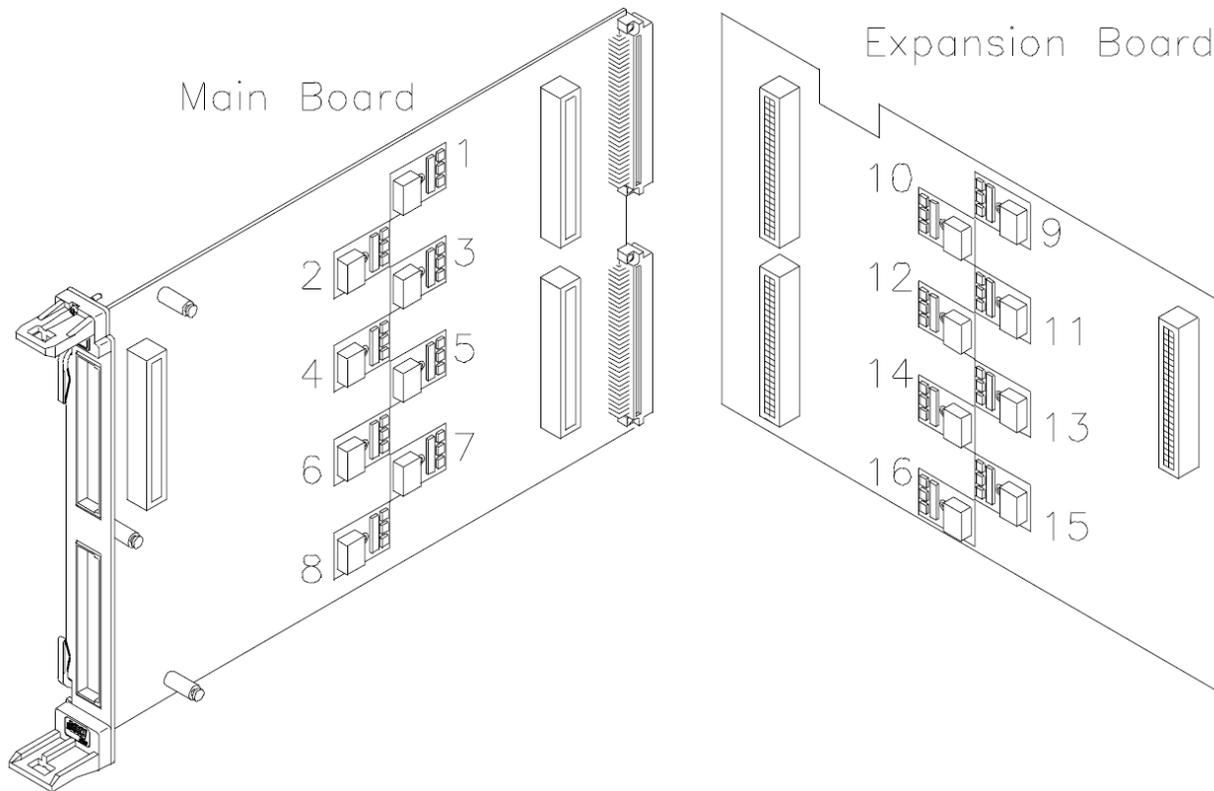


Figure E-3 Plug-on Channel Locations

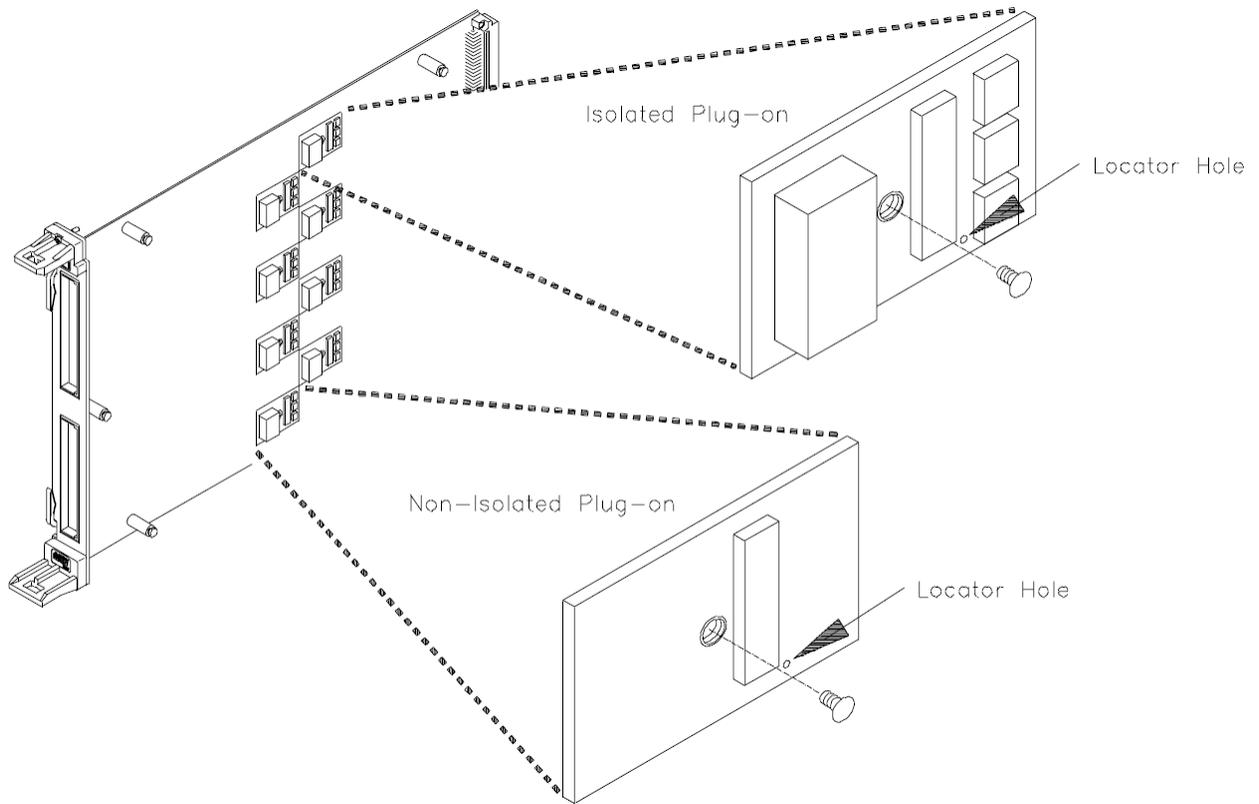


Figure E-4 Installing Plug-on Modules

Troubleshooting

These procedures will help you isolate a failure to a particular assembly. The major assemblies of the Keysight E1418A are available on an exchange basis.

Isolating an Assembly (Self-Test)

Use the following SCPI Common Command query to initiate a module self-test.

- ! Start the Self-test.
- *TST?
- ! Enter the 16-bit integer returned.

The query will return a +0 if no errors are encountered. The return value looks like:

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Use	Test Number								Test Information							

The Test Information bits are not described in this manual. The test number is the number of the first test to fail. This number can be used to isolate a failing assembly. The possible test numbers and probable failing assembly are shown below.

Test Number	Failing Assembly Indicated	Notes
0	None	All Self-tests passed
1	Main Board	
2 through 9	Main Board or Plug-On Modules	Test 2 = channel 1, Test 3 = channel 2, etc.
10 through 17	Expansion Board or Plug-on Modules	Test 10 = channel 9, Test 11 = channel 10, etc.
18 through 25	Main Board	
26 through 33	Main board	
34 through 41	Expansion Board	
42 through 43	Main Board	
44 through 51	Main Board	
52 through 59	Expansion Board	
60 through 67	Main Board	
68 through 75	Expansion Board	

NOTE

Since the query returns only the first failure test number, additional failures are possible but not reported by this command.

Assembly Exchange

The following assemblies are available for exchange.

Part Number	Assembly
E1418-69201	Main board and all sheet metal. Does NOT include plug-on assemblies or expansion board.
E1418-69502	Expansion board. Does NOT include plug-on assemblies.
E1418-66503	Isolated plug-on module (replacement, not an exchange).

NOTE

When exchanging either the main board or expansion board, you must disassemble the module and remove all plug-on assemblies before sending the exchange part. Keep all parts removed in a safe place.

If you are exchanging a main board from a module configured as a 16-channel device, you must remove the expansion board before sending the exchange part.

CAUTION

Almost all electrical components can be damaged by electrostatic discharge (ESD) during handling. Component damage can occur at electrostatic discharge voltages as low as 50 volts. Disassemble and reconfigure only in a static free work area. Minimize handling of assemblies and components. Keep all assemblies and replacement parts in the original static free packaging.

These procedures should be performed by qualified service personnel at approved static safe workstations.

To Exchange an Assembly

- 1** Contact the nearest Keysight Technologies Sales and Service Office for instructions on packaging and shipping.
- 2** Disassemble the module, using the procedures given earlier in this appendix, until just the exchange part is obtained. Remove the plug-on modules and expansion board, if any.
- 3** Keep all removed parts in a static-safe place. Do not send plug-on modules with the exchange assembly.
- 4** Package the assembly in static-safe packaging material.
- 5** Include a description of the problem encountered as well as your phone number and return address.



This information is subject to change without notice.

© Keysight Technologies, 1995-2019

Printed in Malaysia

Edition 3, August 2019



E1418-90002

www.keysight.com