Agilent E5061B Network Analyzer Firmware A.01.10 Touch Screen Driver Update Ream Me for Firmware A.01.00 Demo Unit User

Table of Contents

Contents of the compressed file

Downloading and copying the files to the E5061B

Updating the touch screen driver on E5061B

Updating the E5061B firmware

Contents of the compressed file

- E5061B.msi Agilent E5061B Firmware installer

- tsun10.exe Touch screen driver uninstaller

Agilent_Gunze without Tools tab.7z Touch screen driver installer compressed file

ReadMe.pdf Update instructions

Downloading and copying the files to the E5061B

- 1. Download the "E5061B_01.10_and_TouchScreenDriver.exe" file from the download site to your PC. It is prepared as execution file.
- 2. Run the "E5061B_01.10_and_TouchScreenDriver.exe" to extract the files.
- 3. Create the folder named "e5061b01" under the "E5061B_01.10_and_TouchScreenDriver" folder.
- 4. Uncompress Agilent_Gunze without Tools tab.7z to "e5061b01". This file was archived using 7-zip. You can download 7-zip at (http://www.7-zip.org/) if you do not already have it.
 - *Be sure to use English one byte characters for folder name. Or error will occur during installation of the driver.
- 5. Save the "E5061B_01.10_and_TouchScreenDriver" to a USB mass storage device in order to move it to E5061B.
- 6. Connect the mouse to your E5061B and turn the E5061B on.
- 7. Connect the USB mass storage device into the front USB port of the E5061B.

8. Copy the "E5061B_01.10_and_TouchScreenDriver" to the desktop of the E5061B.

Updating the touch screen driver on the E5061B

 
- 1. Press "Start" on the Windows Taskbar and select "Control Panel" from Start Menu.
- 2. Open "Add Remove Programs".
- 3. "Touch Screen Controller Uninstall, Rev 6.31b" and press "Change/Remove".
- 4. Press "Yes" on the uninstall confirmation window.
- 5. Press "OK" on the confirmation window.



- 6. After a short time, the "Touch Screen Controller Uninstall, Rev 6.31b" is removed from "Add Remove Programs".
- 7. Close "Add Remove Programs".
- 8. Run the copied executable file "tsun10.exe" on the folder named "E5061B_01.10_and_TouchScreenDriver" to uninstall the driver completely.
- 9. Repeat process 4 and 5 to execute the process.
- 10. Run the "setup.exe" on "e5061b01".
- 11. Press "Next" on the welcome window.
- 12. Check "I accept all of the terms of the above License Agreement" and then press "Next".
- 13. On the "Select Controller window", select "USB".



- 14. Press "Finish" on the install window. The installation will start.
- 15. The following message will be displayed. Wait until the message is disappeared.

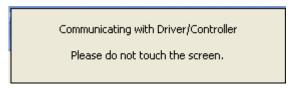

16. Press "OK" on the message window.



* If the error message as shown in following figure is prompted, check the path of the setup.exe. If the letter other than English one byte characters is used, please rename it.



- 17. After updating the driver, calibrate the touch screen according to the following procedure.
- 18. Press System > Service Menu > Test Menu > Adjust Touch Screen.
- 19. The touch screen calibration screen appears.
- 20. Touch the x mark on the upper left with your finger. The mark x also appears on the upper right, lower right, and lower left. Touch the x marks in that order with your finger.
- 21. Touching all the four locations described above with your finger automatically concludes the touch screen calibration.

Updating the E5061B firmware

- 1. Press System > Service Menu > Update Firmware. Then, the password dialog box appears.
- 2. Type e506xa as the password, and then click OK.
- 3. In Open dialog box, select E5061B.msi, and then press Open. Then the windows installer appears.
- 4. Follow the instruction of windows installer.
- 5. After the installation is finished, the instrument restarts.
- 6. Press System > Firmware Revision to confirm the firmware revision you have just installed.

For detailed information, refer to the <u>E5061B Web Help</u>.