

**Keysight E36102A DC Power Supply, 6V, 5A, 30W**  
**Keysight E36103A DC power supply, 20V, 2A, 40W**  
**Keysight E36104A DC power supply, 35V, 1A, 35W**  
**Keysight E36105A DC power supply, 60V, 0.6A, 36W**  
**Keysight E36106A DC power supply, 100V, 0.4A, 40W**

## **Firmware Update Release Notes**

### **Firmware Revision 1.0.6-1.01 Fixes**

1. Fixed LAN interface unit hang issue.

### **Firmware Revision 1.0.5-1.01 Enhancements and Fixes**

2. Logged error when EEPROM is blank.
3. Make the 'SYST:COMM:RLState local' and 'system:local' to be identical.
4. Fixed front panel doesn't lock issue. Locked front panel when RWLock command is issued.
5. Fixed E36103A locked up issue after bunches of open and close cycles done over USB.
6. Screen will no longer lock remote mode. User can change from remote mode to local mode by pressing any key on the front panel.
7. Fixed serial number missing issue.
8. RMT annunciator will now appear when the instrument is controlled remotely via USB

### **Firmware Revision 1.0.0-1.00 Enhancements and Fixes**

1. Fixed output not allow to enable when OVP, OCP and OTP.
2. Fixed VXI-11 system error for query unterminated.
3. Added hpsl parser event to synchronize scpi commands.
4. Support fw upgrade to enter bootloader automatically.
5. Updated DHCP client for renew DHCP lease.