



## E5070A/E5071A Internal/External Test Update Procedure

The purpose of this procedure is to update the Internal/External test software of E5070A/E5071A.

- **Required Equipment**

- E5070A or E5071A (with keyboard and mouse)
- One blank floppy disk (DOS format)

- **How to make E5070A/E5071A Internal/External Test Installation Disk**

The following is the procedure to make the E5070A/E5071A Internal/External Test Installation disk.

1. Insert the floppy disk into your computer's FDD
2. Copy the following files to the floppy disk.

**InternalTest.VBA**

**ExternalTest.VBA**

- **How to update the E5070A/E5071A Internal/External Test**

The following is the procedure to update the Internal/External Test.

1. Power on E5070A or E5071A
2. Press [**System**].
3. Click **Service Menu - Restart Menu** on the menu bar, and the Password dialog box will appear.
4. Enter the password, **e507xa**, into the Password box.
5. Click **Restart as Service** on the menu bar, and the instrument will be restarted.
6. Double-click the "**My Computer**" icon on the Windows desktop.
7. Insert the Internal/External Test Installation Disk into the FDD of the E5070A or E5071A.
8. Double-click the "**3 1/2 Floppy [A:]**" icon.
9. Copy (overwrite) **InternalTest.VBA** to **D:¥Agilent¥Service**.
10. Copy (overwrite) **ExternalTest.VBA** to **D:¥Agilent¥Service**.
11. Double-click "**Restart as instr**" icon on the Windows desktop, and the instrument will be restarted and the measurement screen will appear.