## Firmware Update Instructions Keysight AC6900 Three-Phase AC Power Source (Firmware Update Tool)

NOTE


- Ensure that the FWUpdateTool program and FW files are extracted and saved to the same directory. Failure
  to do so will result in errors during FW update process.
- 2. GPIB interface is not supported.


Update Instrument Firmware

CAUTION


Do not turn off the instrument during the update.

- 1. Click and open the "AC69FwUpdTool" Application. AC69FwUpdTool is found at the <u>AC6900\_FirmwareUpdate</u> Supporting Documentation section.
- Click the "Search" button. Find your unit's VISA address and click on it. For reference, the VISA address can also be found on Connection expert.

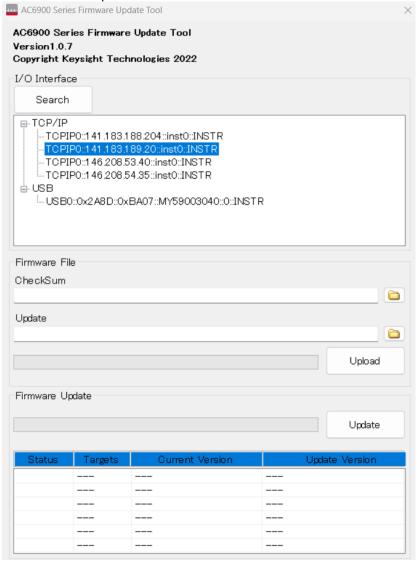


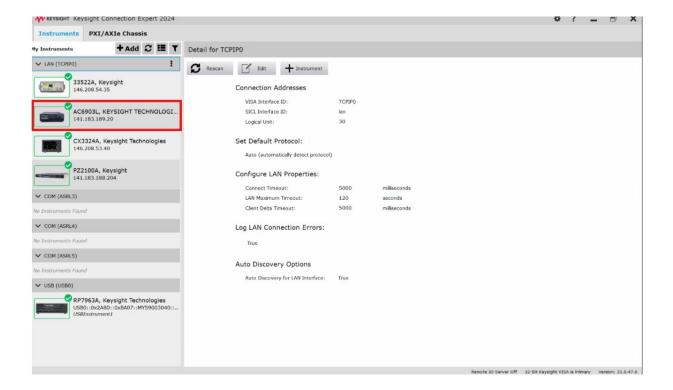

- 3. Click on the Folder icon under CheckSum and select the CHECKSUM.md5 file to be uploaded.
- 4. Click on the Folder icon under Update and select the Update.img file to be uploaded.
- 5. Click the "Upload" button. Wait until the progress bar reaches 100%.

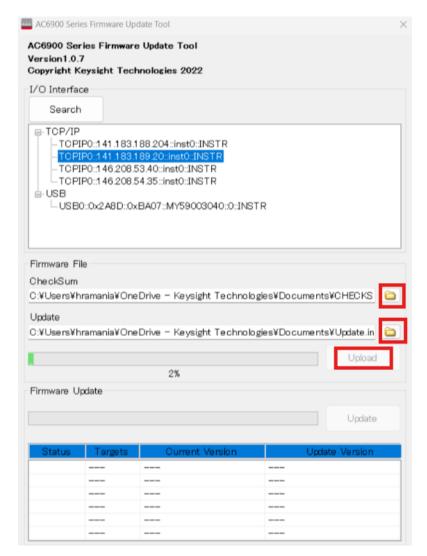

6. Once the Upload progress bar reached 100%, click on the Firmware Update's "Update" button.

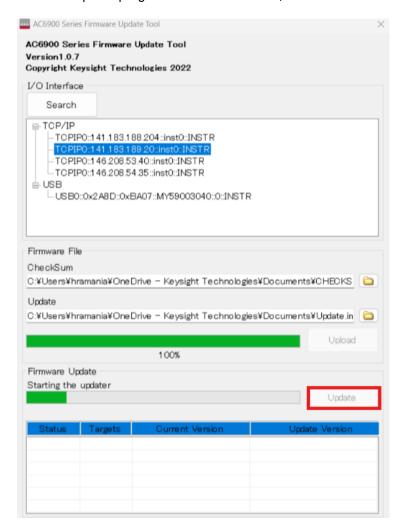

7. Once "Firmware update" progress bar reaches 100%, the "Firmware Update" will display "Firmware update was successful. Please power cycle the instrument." Click on "OK". Then, proceed to power cycle your instrument.

