## Firmware Update Instructions Keysight AC6900 Three-Phase AC Power Source (USB Update)

**Update Instrument Firmware** 

CAUTION

Do not turn off the instrument during the update.

- 1. Download the firmware file and save the file to your computer. Note the directory where the file is saved.
- 2. Unzip the file and save the 'CHECKSUM' and 'update' files separately on a USB thumbdrive.
- 3. Mount the USB thumbdrive on the USB port on the front panel.
- 4. Go to Utilities > System Settings > About > Firmware Update to update the firmware.
- 5. Reboot the instrument upon firmware update.

