

# Keysight E7515B UXM 5G Firmware Update Tool

For the E7515B UXM 5G Wireless Test Platform

Installation &  
User Guide

# Notices

© Keysight Technologies, Inc. 2018

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

## Trademark Acknowledgments

## Manual Part Number

E7515-90027

## Edition

Edition 1, December 2018

Supersedes January 2018

Printed in USA/Malaysia

Published by:

Keysight Technologies  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS

COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public.

Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at

<http://www.keysight.com/find/sweula>

The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software

documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Safety Notices

### CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

---

### WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

---

## Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URL.

To receive the latest updates by email, subscribe to Keysight Email Updates at the following URL:

<http://www.keysight.com/find/MyKeysight>

Information on preventing instrument damage can be found at:

[www.keysight.com/find/PreventingInstrumentRepair](http://www.keysight.com/find/PreventingInstrumentRepair)

## Is your product software up-to-date?

Periodically, Keysight releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Keysight Technical Support website at:

<http://www.keysight.com/find/techsupport>



## Firmware Update Tool

The E7515B UXM 5G Firmware Update Tool is designed as a “one-click” application which allows you to easily update the firmware of E7515B UXM 5G units. By selecting a firmware version and clicking on a button, you can uninstall the current UXM 5G firmware version and install the new one, including an update of the required software components.

This application must be installed and executed in the UXM 5G embedded PC, running Microsoft Windows 7 Standard Embedded Edition.

The application can be executed only by local “Administrator” user, and no other users can be logged on the system. It also will work only on UXM 5G units.

The following sections are included here:

- “Firmware Update Tool” on page 5
- “Installation” on page 6
- “Repository” on page 7
- “Operation” on page 8
  - “Add Versions” on page 8
  - “Remove Versions” on page 10
  - “Get UXM 5G Information” on page 12
  - “Firmware Update” on page 13
  - “Special Considerations” on page 18
- “Command Line Interface” on page 20
  - “Add Versions” on page 21
  - “Remove Versions” on page 21
  - “Get UXM 5G Information” on page 22
  - “Firmware Update” on page 22
  - “Get List of Installers in Local Repository” on page 23
  - “Launch Graphical User Interface” on page 23
  - “Help” on page 23

## Installation

The E7515B UXM 5G Firmware Update Tool is distributed as a Windows installer: **UXM5G\_FirmwareUpdateTool\_Installer\_x.y.w.z.exe**

To install the application just execute the installer and follow the guided installation dialogs.

Once installed, the application can be launched from Windows Start menu:  
**All Programs > Keysight E7515B UXM 5G > Firmware Update Tool**

Figure 1-1

Firmware Update Tool in the Windows Start Menu




## Repository

The UXM 5G Firmware Update Tool repository is located at:  
**D:\ProgramData\Keysight\E7515B\Firmware**

To be able to update the UXM 5G firmware to a specific version, the installer associated with that version must be present in the repository folder.

UXM 5G firmware installers file names must be in the form  
**E7515B\_UXM5G\_\*.exe** to be recognized by the application.

 Figure 1-2 Repository for the Firmware Update Tool

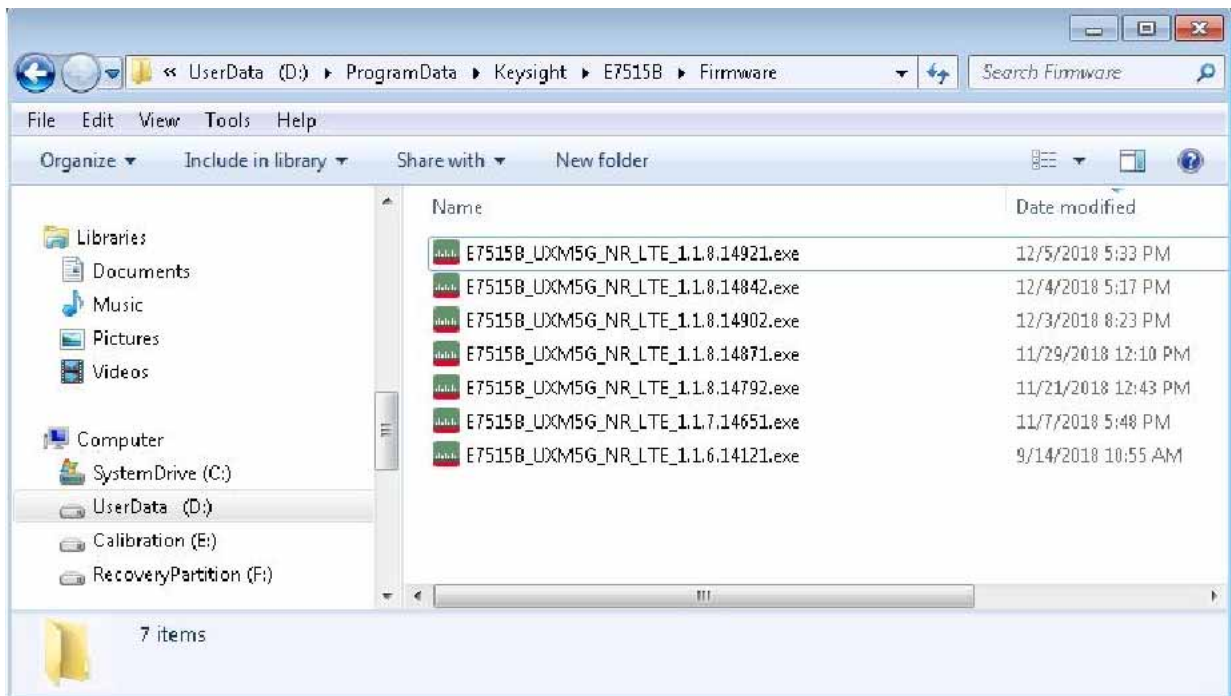


## Operation

### Add Versions

There are three different options for adding UXM 5G versions to the application repository.

The first method is to select **Add** from the **Versions** menu:

 Figure 1-3 Adding a version (using Versions menu)

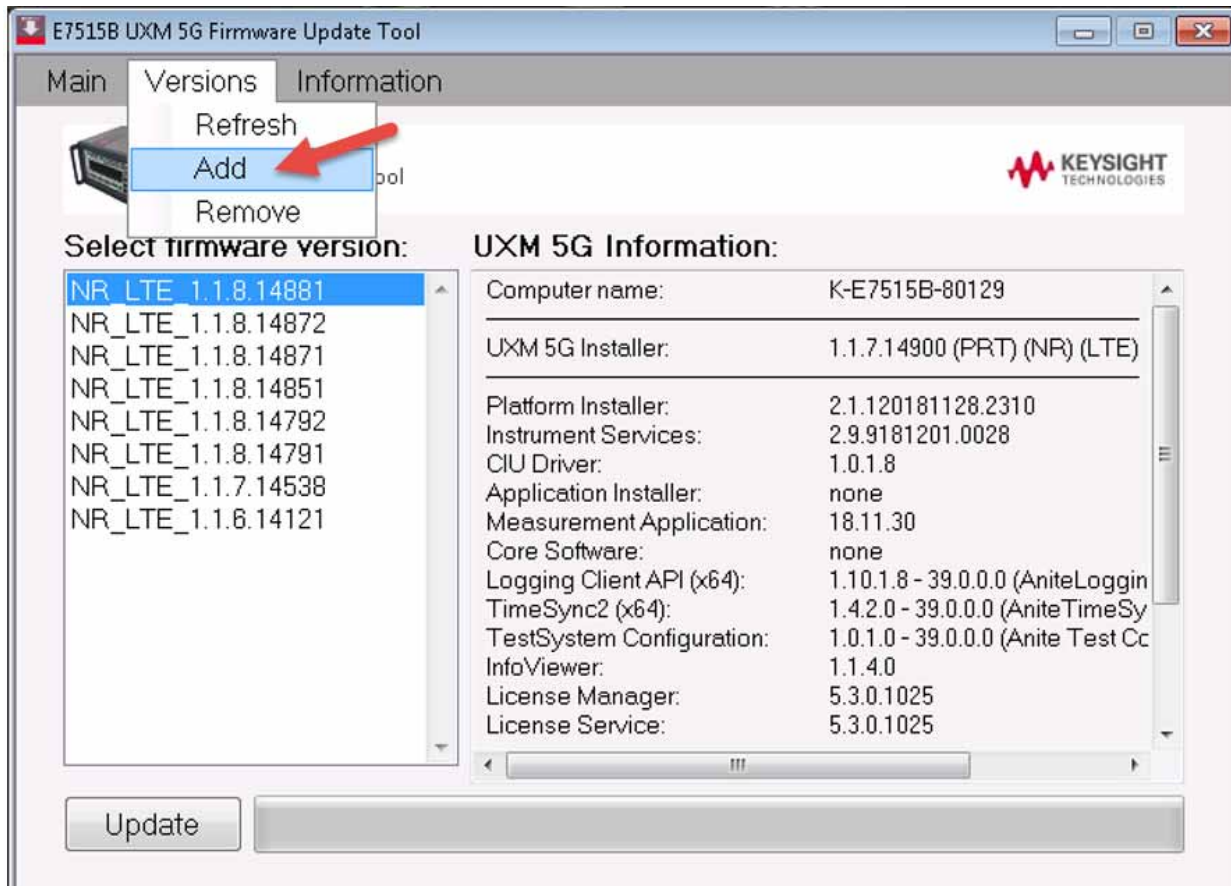




## Firmware Update Tool Operation

The second method is to select **Add** from the menu invoked by right-clicking on the list of firmware versions:

 Figure 1-4 Adding a version (using right-click menu)

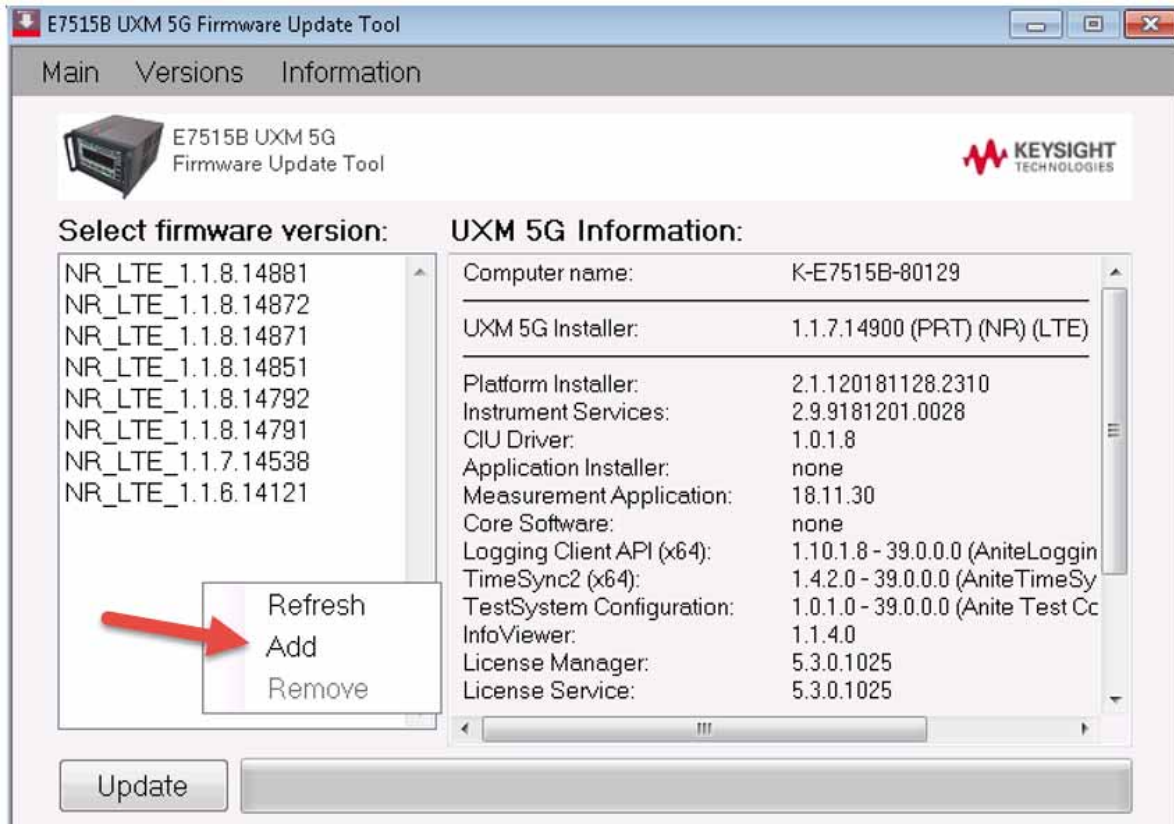

The third method is to use Windows Explorer to copy an installer file into the repository folder. In that case, the list box has to be refreshed from within the application, using any of these methods:


- Selecting **Refresh** on the **Versions** menu.
- Selecting **Refresh** on the menu which is invoked by right-clicking on the list of firmware versions.
- Pressing the **F5** key.

## Remove Versions

There are three different options for removing UXM 5G versions from the application repository.


The first method is to select **Remove** from the **Versions** menu:

 Figure 1-5 Removing a version (using Versions menu)

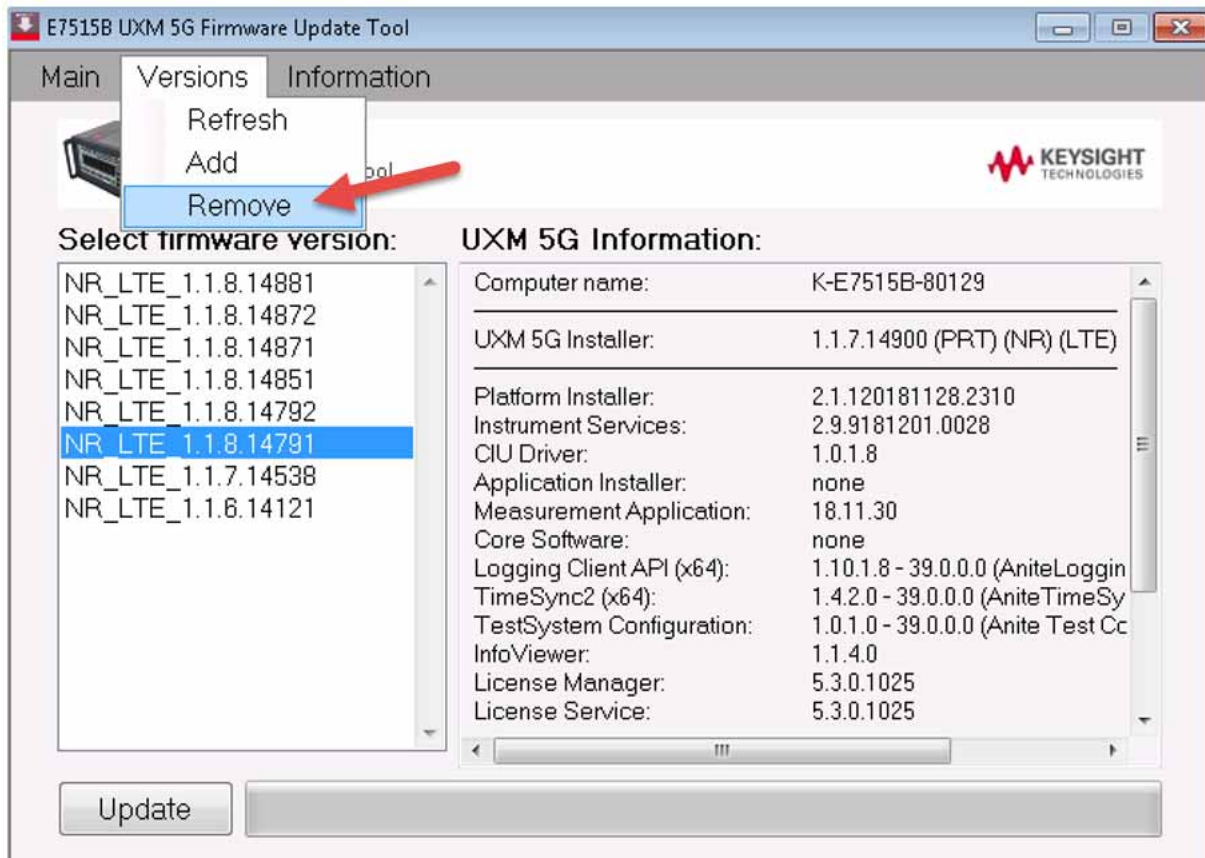

The second method is to select **Remove** from the menu invoked by right-clicking on the list of firmware versions:

 Figure 1-6 Removing a version (using right-click menu)

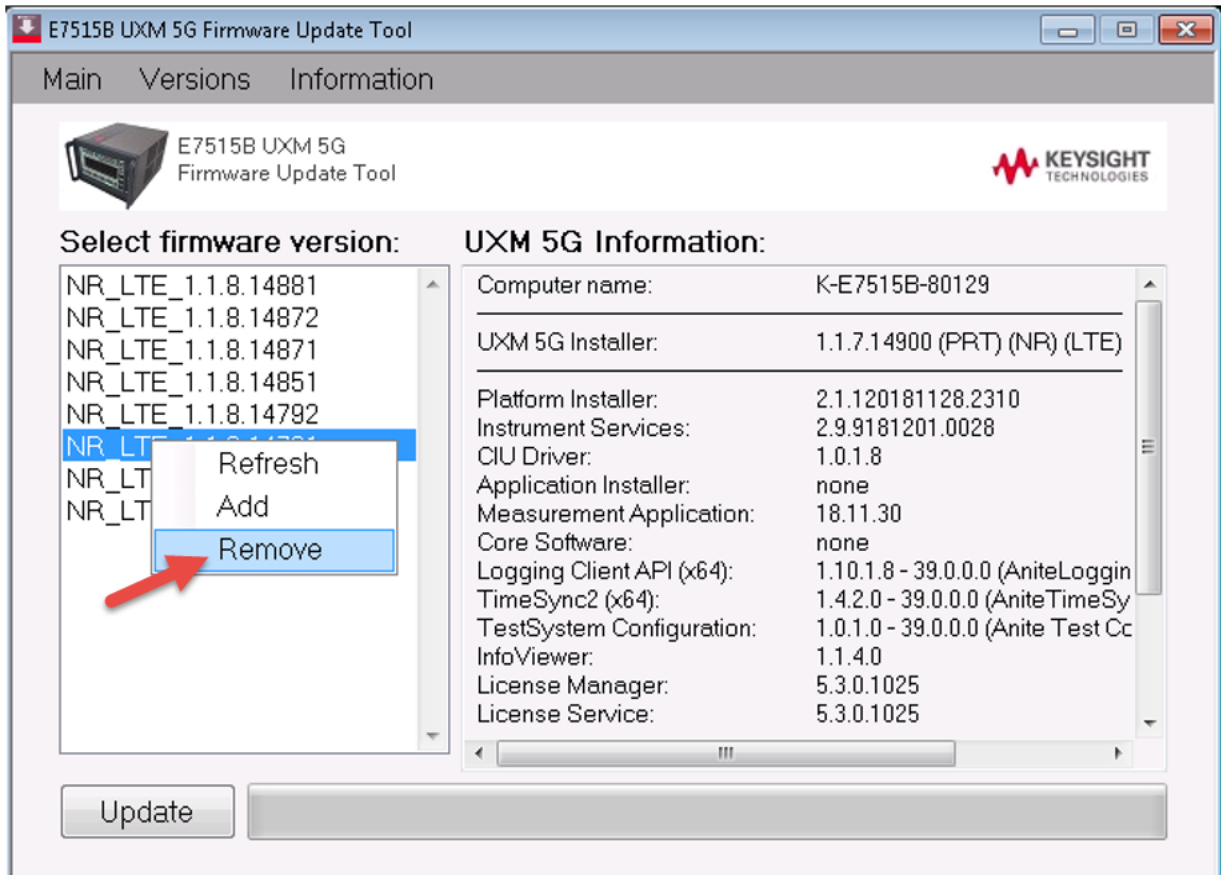

The third method is to use Windows Explorer to delete an installer file from the repository folder. In that case, the list box has to be refreshed from within the application, using any of these methods:


- Selecting **Refresh** on the **Versions** menu.
- Selecting **Refresh** on the menu which is invoked by right-clicking on the list of firmware versions.
- Pressing the **F5** key.

## Get UXM 5G Information

The application can display information about the version of the UXM 5G firmware currently installed in the unit, as well as for all the installed software components that are part of this firmware.

This information can be displayed in a text box by pressing the **F6** key, or by selecting **Get from unit** from the **Information** menu:

 Figure 1-7 Getting information from the UXM 5G

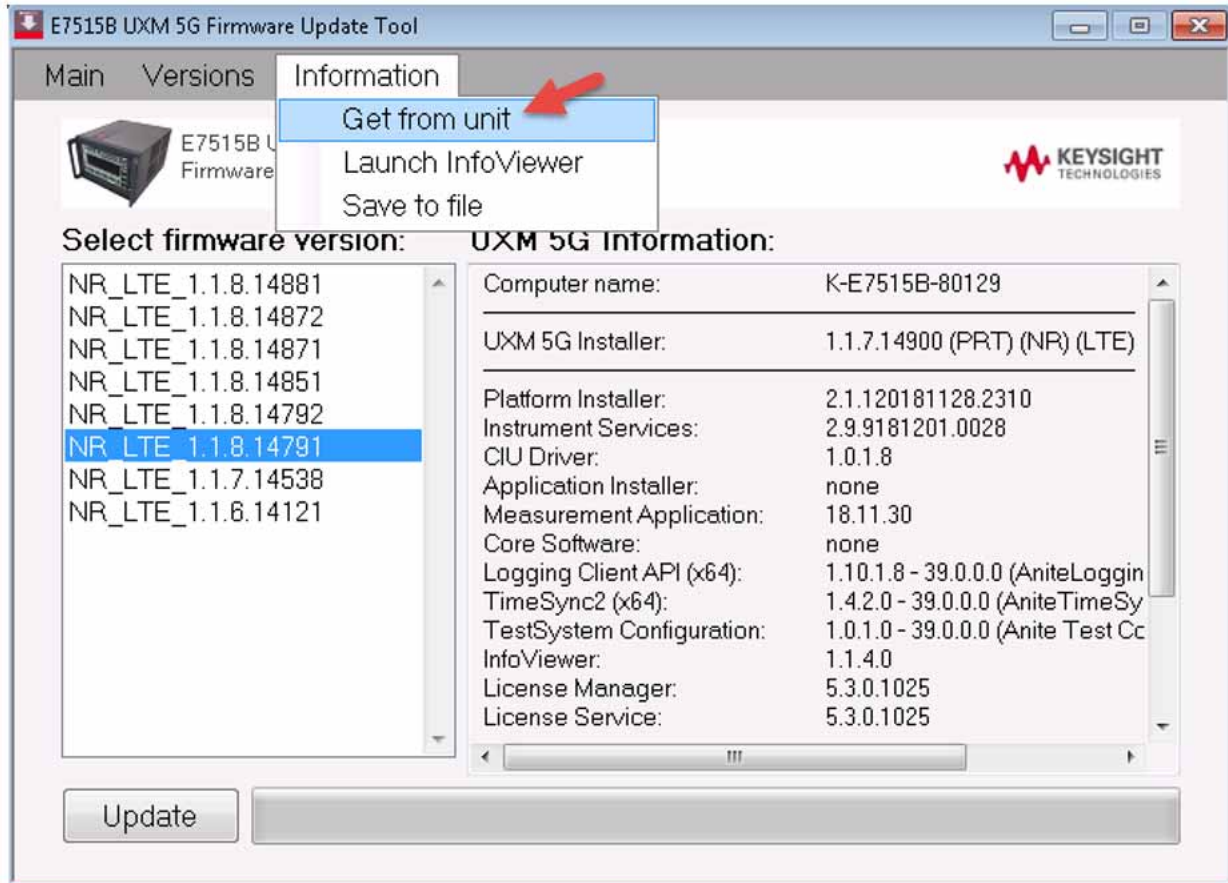


## Firmware Update

**NOTE**

Before starting a firmware update it is highly recommended to close any running application that interacts with the UXM 5G, and disconnect the LAN.

The UXM 5G firmware update process can be launched by double-clicking on a firmware version element in the list box of available versions, or by selecting a firmware version from the list and clicking the **Update** button.

 
Figure 1-8 Launching a firmware update

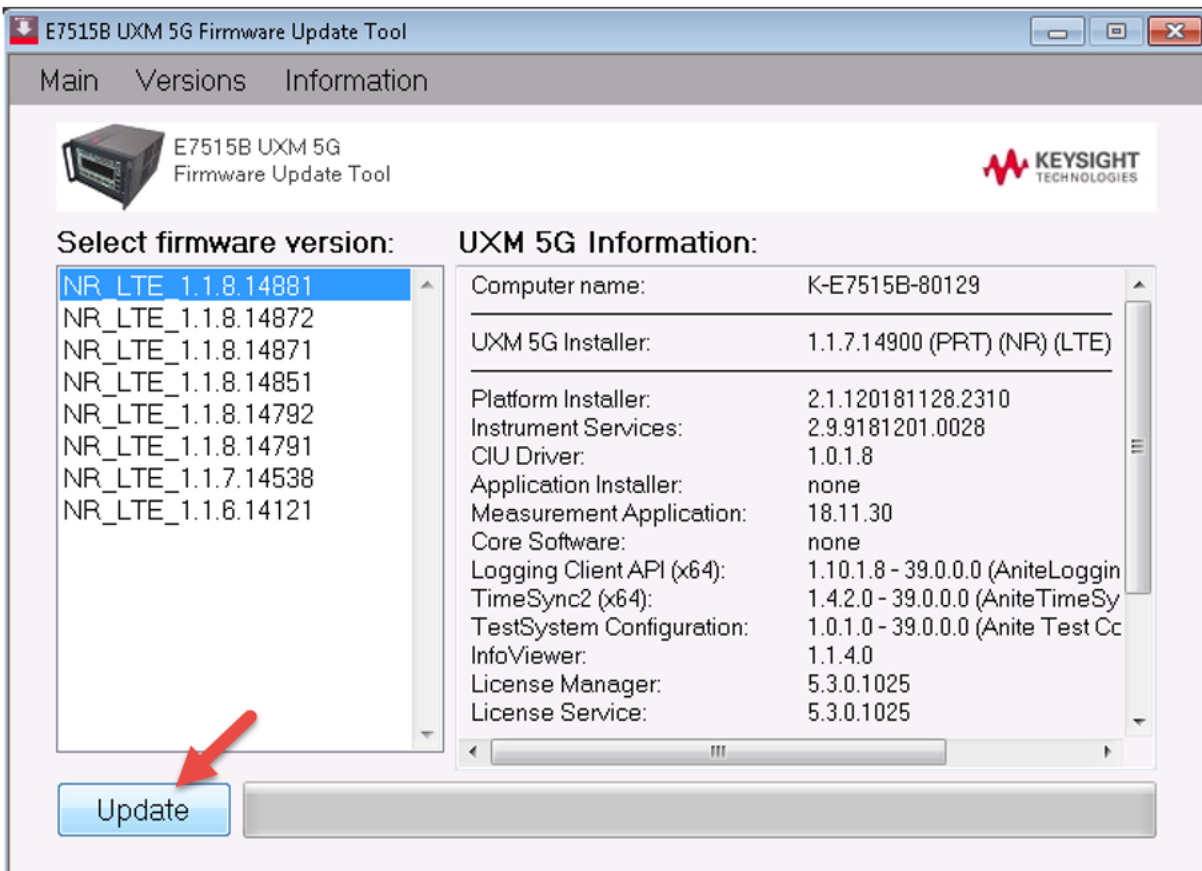

Firmware Update Tool  
Operation

Before the update process begins, a confirmation dialog appears, showing the firmware version number the UXM 5G unit will be updated to:

 Figure 1-9 Confirming the firmware update

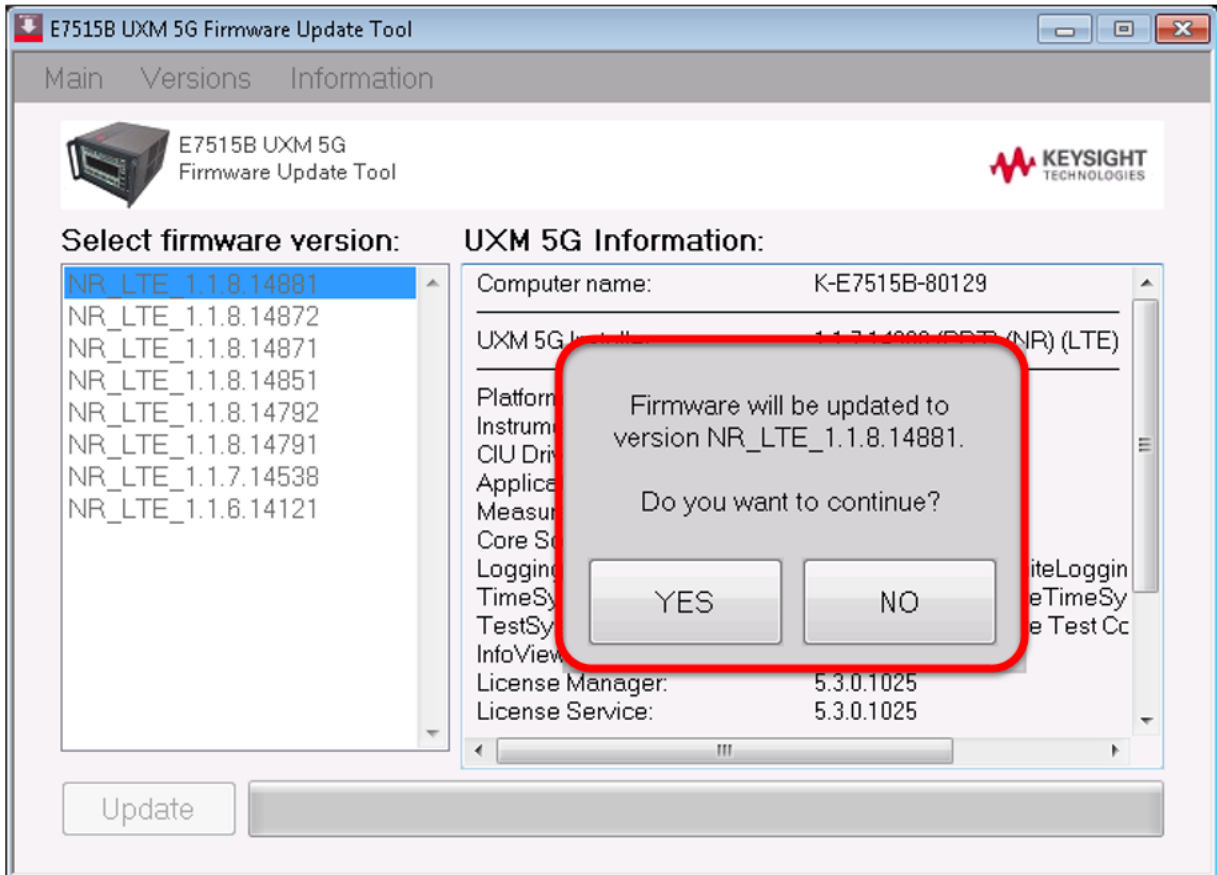


## Firmware Update Tool Operation

Clicking **YES** causes the update operation to start. Information about the process is displayed in the **Update Process Information** text box. A green progress bar is also displayed.

### NOTE

The update process can take up to 40 minutes.

 
Figure 1-10 Update Process Information

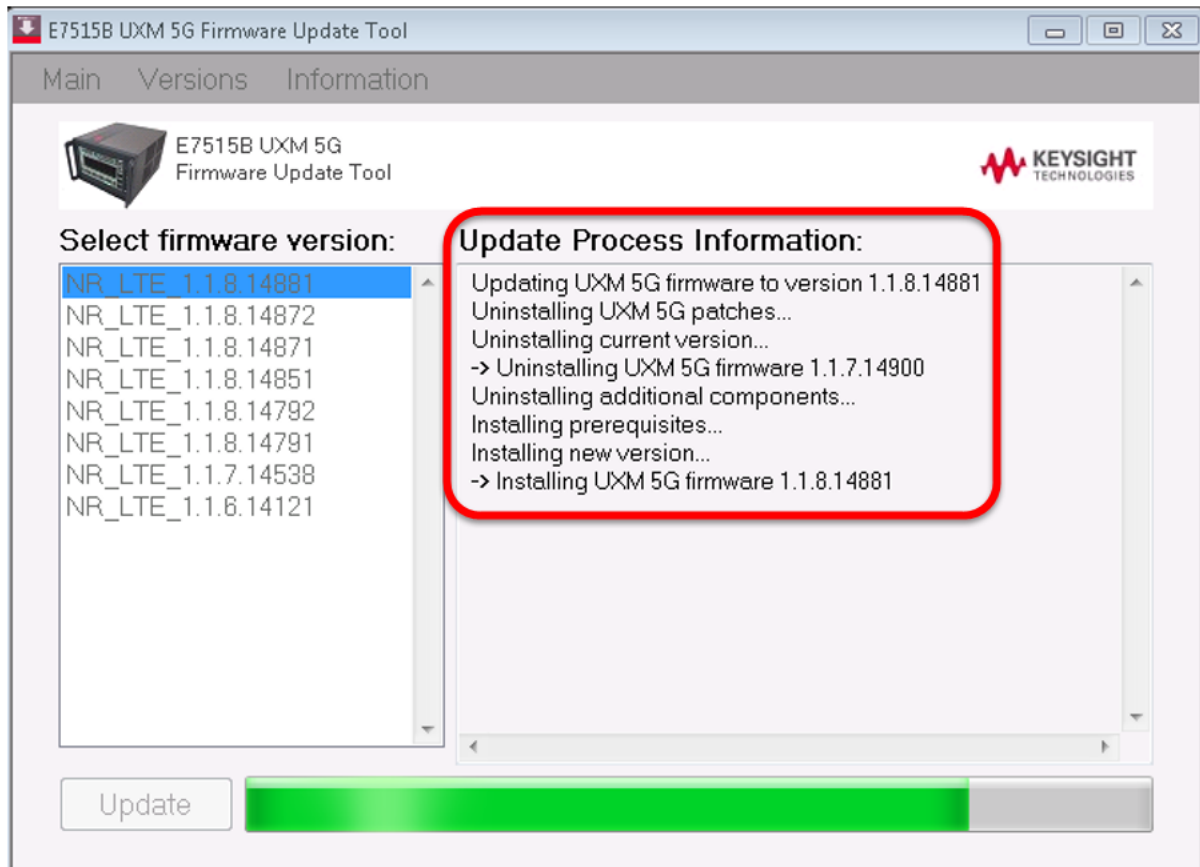

Firmware Update Tool  
Operation

When the update operation is finished, a new dialog is displayed, indicating that the update is completed.

 Figure 1-11 Completion dialog

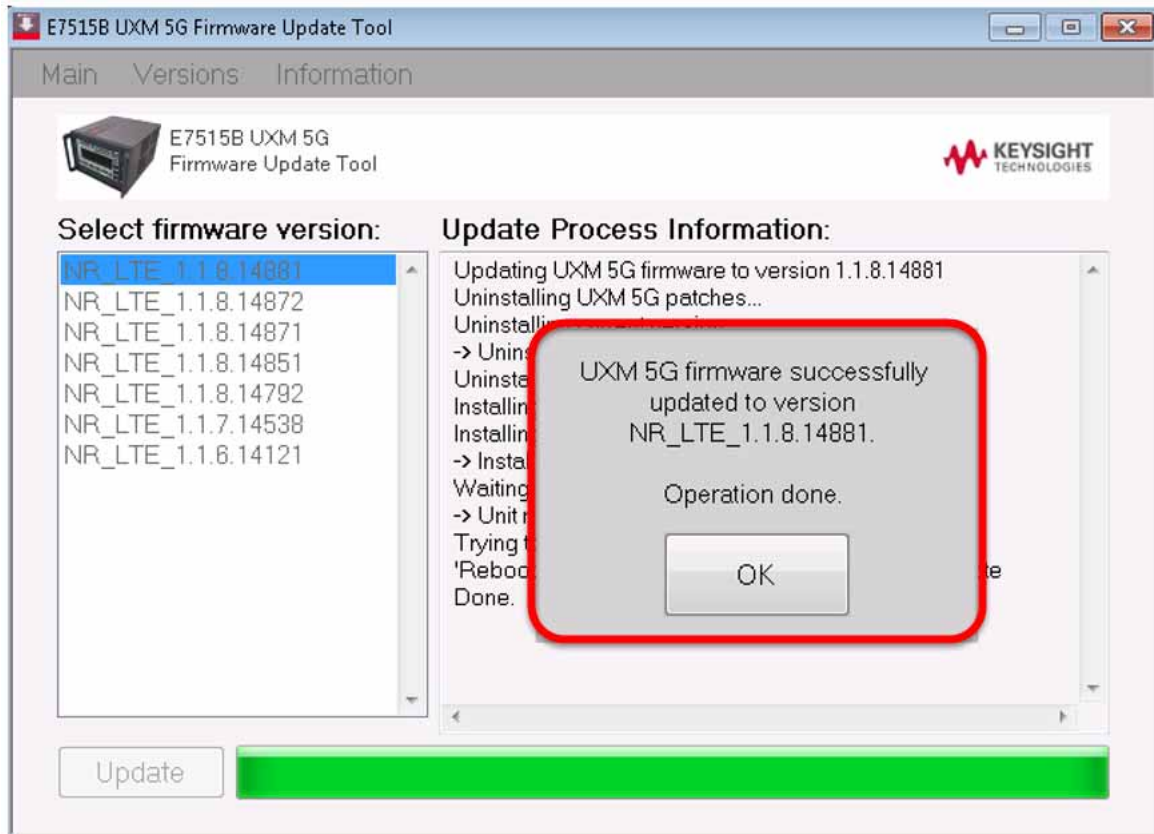




Firmware Update Tool  
Operation

After you dismiss the dialog (by clicking **OK**), you can check the installed firmware version by requesting the UXM 5G information (click on **Information > Get from unit**, or press the **F6** key).

 Figure 1-12 Checking the installed firmware version

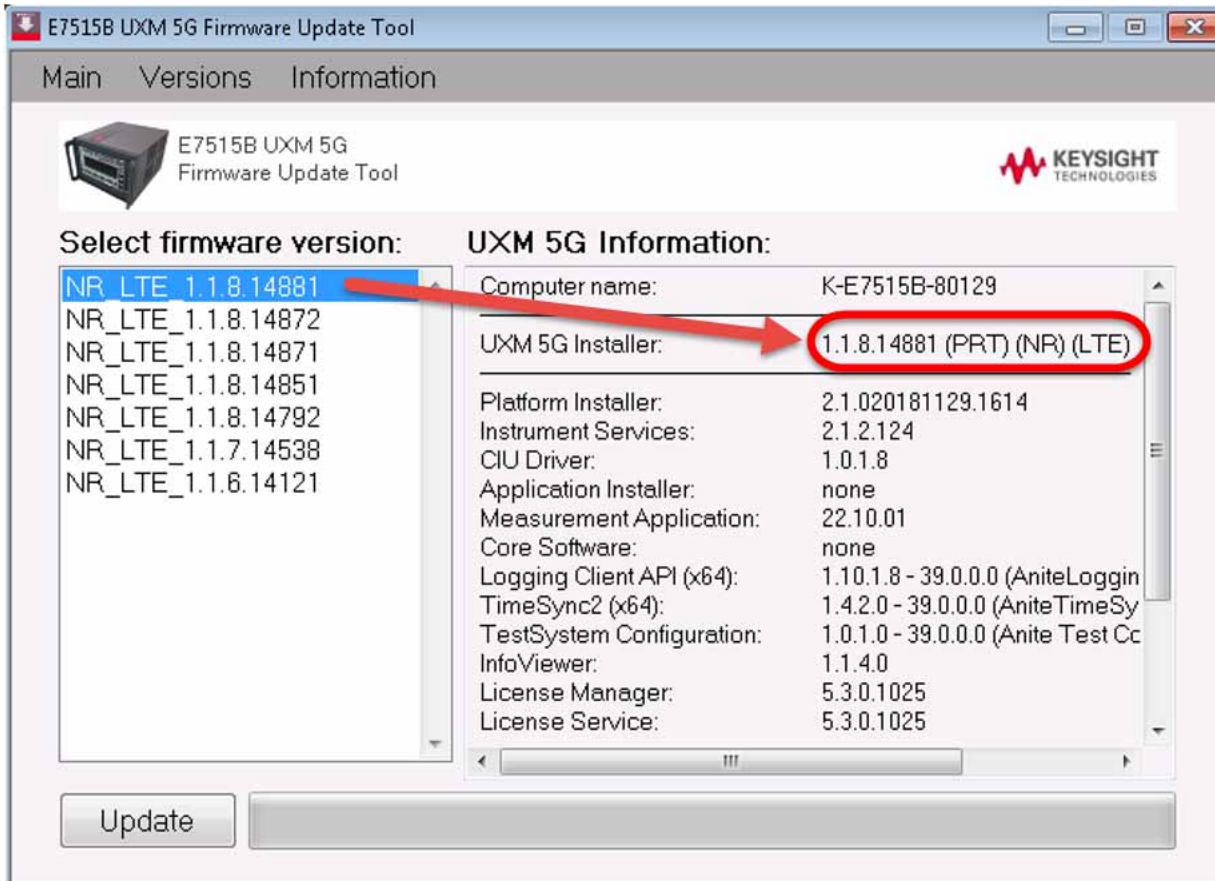


## Special Considerations

### Reboot

The UXM 5G firmware update operation may require the unit to be rebooted during the process (usually when "Microsoft .NET Framework" must be replaced by a newer version). If that happens, you will be informed in the update confirmation dialog, and also before the unit is rebooted. After the reboot, the process will continue automatically, with no user interaction required.

 Figure 1-13 Reboot warnings

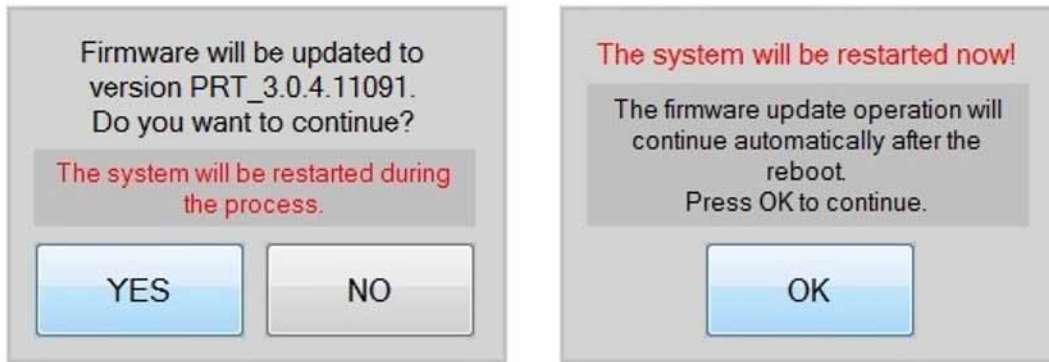

### Operational State

The firmware update process concludes when the unit reaches the “Operational” state. If this state is not reached, an error message is displayed in the conclusion dialog.

Figure 1-14 Error message if UXM 5G is not operational



## Command Line Interface

**NOTE**

The command-line user interface is only supported in Firmware Update Tool version 1.4.0.0 and later.

The Firmware Update Tool provides a command-line user interface covering all the operations described under “**Operation**” on page 8, but also allows the combination of several operations in one command.

The valid arguments are:

Argument	Significance
-a <fullpathfilename>	Add versions
-r <filename> version	Remove versions
-i	Get UXM 5G Information
-u <version>	Firmware Update
-l	Get list of Installers in Local Repository
-g	Launch Graphical User Interface
-h	Help

## Add Versions

### Syntax

`-a <fullpathfilename>`

### Description

Add an installer to the list. It is necessary to indicate the full path.

If the path includes a remote server (`\\agpnas2.agp.is.keysight.com` or `http://wts.support.keysight.com`), the UXM5G Full Installer is automatically downloaded from that location.

### Examples

1. Adding from local path:  
`UXM5GUpdateTool.exe -a  
C:\Temp\E7515B_UXM5G_NR_LTE_1.1.8.14881.exe`
2. Adding from agpnas2 server:  
`UXM5GUpdateTool.exe -a  
\\agpnas2.agp.is.keysight.com\v2\CCO-MLG\Deliverables\UXM_R  
elease\E7515B_UXM5G_NR_LTE_Full_Installer  
/E7515B_UXM5G_NR_LTE_1.1.8.14881.exe`
3. Adding from WTS Server:  
`UXM5GUpdateTool.exe -a  
http://wts.support.keysight.com/UXM%205GNR/Full%20Installer  
/E7515B_UXM5G_NR_LTE_1.1.8.14881.exe`

## Remove Versions

### Syntax

`-r <filename>|version`

### Description

Remove an installer from the local disk ("`D:\ProgramData\Keysight\E7515B\Firmware`") using the name or the version of the UXM5G Full Installer.

### Examples

1. Remove using filename:  
`UXM5GUpdateTool.exe -r E7515B_UXM5G_NR_LTE_1.1.8.14841.exe`
2. Removing using version  
`UXM5GUpdateTool.exe -r 1.1.8.14841`

## Get UXM 5G Information

### Syntax

**-i**

### Description

Get Information from the UXM5G unit and list the versions of the installed components in the file "%ProgramFiles%\Keysight\E7515B\UXM 5G Firmware Tool\UxmInfoCmdLine.log".

### Example

```
UXM5GUpdateTool.exe -i
```

## Firmware Update

### Syntax

**-u <version>**

### Description

Update the UXM 5G with the version of the UXM5G Full Installer stated in the argument. The installer file must be already located in the local repository ("D:\ProgramData\Keysight\E7515B\Firmware").

### Examples

1. Updating with binary in the local repository:  

```
UXM5GUpdateTool.exe -u 1.1.8.14841
```
2. Updating with binary from another local folder:  

```
UXM5GUpdateTool.exe -a  
C:\Temp\E7515B_UXM5G_NR_LTE_1.1.8.14881.exe -u 1.1.8.14841
```
3. Updating with binary from remote server  

```
UXM5GUpdateTool.exe -a  
http://wts.support.keysight.com/UXM%205GNR/Full%20Installer  
/E7515B_UXM5G_NR_LTE_1.1.8.14881.exe -u 1.1.8.14841
```

## Get List of Installers in Local Repository

### Syntax

**-l**

### Description

Get the list of current UXM5G Full installers located in the local repository (it is written to: "%ProgramFiles%\Keysight\E7515B\UXM 5G Firmware Tool\UxmInstallersList.log".)

### Example

```
UXM5GUpdateTool.exe -l
```

## Launch Graphical User Interface

### Syntax

**-g**

### Description

Launch the graphical user interface

### Example

```
UXM5GUpdateTool.exe -g
```

## Help

### Syntax

**-h**

### Description

Get the version of the tool and list of valid arguments. It is written in the output log file "%ProgramFiles%\Keysight\E7515B\UXM 5G Firmware Tool\UXM5GUpdateTool.log".

### Example

```
UXM5GUpdateTool.exe -h
```



This information is subject to change without notice.

© Keysight Technologies 2018

Edition 1, December 2018

E7515-90027

[www.keysight.com](http://www.keysight.com)