

---

# Keysight B2980B Series Femto / Picoammeter and Electrometer Meters

## Firmware Installation Instruction

This is an Instruction Sheet for PZ2100A. More details about this product can be obtained at : [B2980 Femto / Picoammeter and Electrometer Meters | Keysight](#)

## Procedure

1. If the B2980B is turned on, press line switch to turn off.
2. Press line switch to turn on the B2980B and wait for LAN indicator becomes green or red.
3. Attach your USB flash memory device, contains B2980B folder on the top, to the USB port  
on the B2980B front panel.
4. Press [System Menu], [More...], [System], [More...], [Info.], [Update], and [Firmware]
5. Press [OK] to start updating the firmware.

After completing the update, you will be prompted to power cycle the B2980B.

6. Press the line switch to turn off. And then, press it again to turn on.

End of procedure.