

# Keysight M9180 Series PXI 6½ Digit Digital Multimeters

M9181A, M9182A, M9183A

# Notices

## Copyright Notice

© Keysight Technologies 2011 - 2022  
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

M9182-90001

## Edition

Edition 6, September 2022

## Printed in:

Printed in Malaysia

## Published by:

Keysight Technologies  
Bayan Lepas Free Industrial Zone,  
11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Trademarks

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

MATLAB is a U.S registered Trademark of The MathWorks, Inc.




PXI is a registered trademark of the PXI Systems Alliance.

Visual Studio is a registered trademark of Microsoft Corporation in the United States.

LabVIEW is a registered trademark of National Instruments.

# Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	Caution, risk of danger (refer to this manual for specific Warning or Caution information)		Earth (ground) terminal
	Indicates that antistatic precautions should be taken.		

# Safety Considerations

Read the information below before using this instrument.

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards for design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

## General

Do not use this product in any manner not specified by the manufacturer. The protective features of this product must not be impaired if it is used in a manner specified in the operation instructions.

## Before applying power

Verify that all safety precautions are taken. Make all connections to the unit before applying power. Note the instrument's external markings described under [Safety Symbols](#).

## Ground the instrument

PXI chassis are provided with a grounding-type power plug. The instrument chassis and cover must be connected to an electrical ground to minimize shock hazard. The ground pin must be firmly connected to an electrical ground (safety ground) terminal at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.

## Do not operate in an explosive atmosphere or wet environments

Do not operate the Keysight module/chassis in the presence of flammable gases or fumes, vapor or wet environments.

## Do not operate near flammable liquids

Do not operate the Keysight module/chassis in the presence of flammable liquids or near containers of such liquids.

## Do not remove instrument cover

Only qualified, service-trained personnel who are aware of the hazards involved should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover.

## Cleaning

Clean the outside of the Keysight module, chassis, or accessory with a soft, lint-free, slightly dampened cloth. Do not use detergent or chemical solvents.

## Keep away from live circuits

Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers and shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

## Do not operate damaged equipment

Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to an Keysight Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.

## Do not block the primary disconnect

The primary disconnect device is the appliance connector/power cord when a chassis is used by itself, but when installed into a rack or system the disconnect may be impaired and must be considered part of the installation.

## Do not modify the instrument

Do not install substitute parts or perform any unauthorized modification to the product. Return the product to an Keysight Sales and Service Office to ensure that safety features are maintained.

## In case of damage

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

### **WARNING**

- IEC Measurement Category II. The HI and LO input terminals may be connected to mains in IEC Category II installations for line voltages up to 250 VAC<sub>rms</sub>. To avoid the danger of electric shock, do not connect the inputs to mains for line voltages above 250 VAC<sub>rms</sub>. The M9181A DMM is limited to 240 VAC<sub>rms</sub>. See below for further information.
  - The DMM comes installed with four shields (bottom, top and two edge strips). These shields must be in place for performance and safety reasons. Removal or improper assembly of these shields can result in lethal voltages occurring within your PC. Be sure to check your installation before closing the cover on your chassis.
-

**WARNING**

- During and after installing your DMM, verify that no loose wires or ribbon cables infringe upon any of the internal circuits of the DMM, as this may apply measurement voltages to your chassis, causing electrocution and/or damage to your chassis!
  - To avoid shock hazard, install the DMM only into a chassis that has its power connector connected to a power receptacle with an earth safety ground.
  - When making any measurements above 50 VDC or 40 VAC<sub>rms</sub>, only use safety test leads, such as Keysight test leads.
  - Measuring voltages greater than 30 VAC<sub>rms</sub>, 42 V<sub>pk</sub> or 60 VDC is always hazardous. ALL multimeter terminals must be considered as hazardous whenever inputs greater than 30 VAC<sub>rms</sub>, 42 V<sub>pk</sub> or 60 VDC are connected to ANY input terminal. Regard all terminals as being at the same potential as the highest voltage applied to any terminal.
- 

**CAUTION**

Use with caution when working with voltages above 30 VAC<sub>rms</sub>, 42 V<sub>pk</sub> or 60 VDC. These voltages pose a shock hazard.

---



## Input terminal measurement limits

Measurement limits are defined for the input terminals:

**Main input (HI and LO) terminals:** The HI and LO input terminals are used for voltage, resistance, frequency (period), capacitance, and diode test measurements. Two measurement limits are defined for these terminals:

- HI to LO measurement limit.  
The measurement limit from HI to LO (Input terminals) is 240 VDC or 240 VAC<sub>rms</sub> (M9181A), and 250 VAC<sub>rms</sub> (M9182A/83A), which is also the maximum voltage measurement.
- LO to ground measurement limit.  
The LO input terminal can safely "float" a maximum of 240 VDC or 240 VAC<sub>rms</sub> (M9181A), and 250 VDC or 250 VAC<sub>rms</sub> (M9182A/83A) relative to ground, where ground is defined as the Protective Earth Conductor in the AC mains power cord connected to the instrument.

**Current input terminal:** The current input ("I") terminal has a measurement limit of 2.4 A (DC or AC) between the HI terminal and the LO input terminal. Note that the current input terminals will always be at approximately the same voltage as the main input LO terminal.

**Sense terminal measurement limits:** The HI and LO sense terminals are used for four-wire resistance and temperature measurements. The measurement limit is 5 V<sub>pk</sub> for all the terminal pairings: LO sense to LO input, HI sense to LO input, and HI sense to LO sense.

### CAUTION

Do not connect the V HI and V LO or I HI and I LO terminals to anything when the measurement function does not utilize these terminals. Disconnect these terminals with an external device.

---

## IEC Measurement Category II overvoltage protection

To protect against the danger of electric shock, the Keysight M9180 Series digital multimeters (DMMs) provide overvoltage protection for line-voltage mains connections meeting both of the following conditions:

The HI and LO input terminals are connected to the mains under Measurement Category II conditions, defined below,

**and**

The mains are limited to a maximum line voltage of  $250 \text{ VAC}_{\text{rms}}$  ( $240 \text{ VAC}_{\text{rms}}$  for the M9181A).

IEC Measurement Category II includes electrical devices connected to mains at an outlet on a branch circuit. Such devices include most small appliances, test equipment, and other devices that plug into a branch outlet or socket. The M9180 Series DMMs may be used to make measurements with the HI and LO inputs connected to mains in such devices, or to the branch outlet itself (up to  $250 \text{ VAC}_{\text{rms}}$ , or  $240 \text{ VAC}_{\text{rms}}$  for the M9181A). However, the DMMs may not be used with their HI and LO inputs connected to mains in permanently installed electrical devices such as the main circuit-breaker panel, sub-panel disconnect boxes, or permanently wired motors. Such devices and circuits are subject to overvoltages that may exceed the protection limits of the M9180 Series.

### NOTE

The M9182A and M9183 can measure voltages up to  $250 \text{ VAC}_{\text{rms}}$  in circuits that are isolated from mains (CAT None).

### CAUTION

This is a sensitive measurement apparatus by design and may have some performance loss when exposed to ambient continuous electromagnetic phenomenon.

## Environmental Conditions

This instrument is designed for indoor use and in an area with low condensation. The table below shows the general environmental requirements for this instrument.



Environmental conditions	Requirements
Operating temperature	–10 °C to 55 °C
Operating humidity	Up to 80% RH at 40 °C (non-condensing) Full accuracy up to 40% RH for 41 °C to 55 °C (non-condensing)
Storage temperature	–40 °C to 85 °C
Altitude	up to 2000 m
Measurement category	M9181A: CAT II 240 V M9182/M9183A: CAT II 250 V
Pollution degree	Pollution Degree 2

## Product Regulatory and Compliance

The M9180 Series PXI multimeter complies with safety and EMC requirements.

Refer to Declaration of Conformity at <http://www.keysight.com/go/conformity> for the latest revision.

## Regulatory Markings

Symbol	Description
	The RCM mark is a registered trademark of the Australian Communications and Media Authority.
 CAN ICES/NMB-001(A) ISM GRP 1-A	<p>The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.</p> <p>CAN ICES/NMB-001(A) indicates that this ISM device complies with the Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada.</p> <p>ISM GRP 1-A indicates that this is an Industrial Scientific and Medical Group 1 Class A product.</p>
	This symbol indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.
	This symbol is a South Korean Class A EMC Declaration. This is a Class A instrument suitable for professional use and in electromagnetic environment outside of the home.
	The CSA mark is a registered trademark of the Canadian Standards Association.

South Korean Class A EMC declaration:

Information to the user:

This equipment has been conformity assessed for use in business environments. In a residential environment this equipment may cause radio interference.

- This EMC statement applies to the equipment only for use in business environment.

## 사용자안내문

이 기기는 업무용 환경에서 사용할 목적으로 적합성 평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파 간섭의 우려가 있습니다.

- 사용자 안내문은"업무용 방송통신기자재"에만 적용한다.

## Waste Electrical and Electronic Equipment (WEEE)

The crossed out wheeled bin symbol indicates that separate collection for waste electric and electronic equipment (WEEE) is required, as obligated by the EU DIRECTIVE and other National legislation.

Please refer to [keysight.com/go/takeback](https://www.keysight.com/go/takeback) to understand your Trade in options with Keysight in addition to product takeback instructions.



## Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- [www.keysight.com/find/pxi-dmm](https://www.keysight.com/find/pxi-dmm)  
(product-specific information and support, software and documentation updates)
- [www.keysight.com/find/assist](https://www.keysight.com/find/assist)  
(worldwide contact information for repair and service)
- [www.keysight.com/find/tips](https://www.keysight.com/find/tips)  
(information on preventing damage to your Keysight equipment)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Table of Contents

Trademarks	3
Safety Symbols	4
Safety Considerations	5
General	5
Before applying power	5
Ground the instrument	5
Do not operate in an explosive atmosphere or wet environments	5
Do not operate near flammable liquids	6
Do not remove instrument cover	6
Cleaning	6
Keep away from live circuits	6
Do not operate damaged equipment	6
Do not block the primary disconnect	7
Do not modify the instrument	7
In case of damage	7
Input terminal measurement limits	9
IEC Measurement Category II overvoltage protection	10
Environmental Conditions	11
Product Regulatory and Compliance	11
Regulatory Markings	12
South Korean Class A EMC declaration:	12
Waste Electrical and Electronic Equipment (WEEE)	13
Sales and Technical Support	13
Introduction	17
Related documentation	17
Step 1: Unpack and Inspect the Module	18
Step 2: Verify Shipment Contents	20
Step 3: Install the Software on the Controller	21
System requirements	22
Power the controller	23

Install Keysight IO Libraries Suite .....	23
Install instrument drivers and Soft Front Panel .....	24
Step 4: Connect the PC to the PXI Chassis .....	26
Using a remote PC .....	26
Using an embedded computer .....	27
Step 5: Install the DMM Modules in the PXI Chassis .....	28
Step 6: Verify Operation of the DMM .....	30
Run Keysight IO Libraries Connection Expert .....	30
Module Functional Description .....	33



## Introduction

The Keysight M9180 Series digital multimeters (DMM) deliver high-performance measurement with fast, easy installation and configuration via the Keysight Connection Expert and a soft front panel (SFP).

### **Keysight PXI 6½ digit DMM Modules**

- M9181A, PXI 6½ digit Digital Multimeter, basic features
- M9182A, PXI 6½ digit Digital Multimeter, high performance
- M9183A, PXI 6½ digit Digital Multimeter, enhanced high performance

Keysight also supplies software drivers that allow you to support the modules in many popular PXI chassis and programming environments. The soft front panel allows you to exercise the DMMs.

### Related documentation

For the latest specifications, documentation, software, and example programs, please see the Keysight web site at: [www.keysight.com/find/pxi-dmm](http://www.keysight.com/find/pxi-dmm).

## Step 1: Unpack and Inspect the Module

### CAUTION

Keysight's PXI DMMs are shipped in materials which prevent static electricity damage. The modules should only be removed from the packaging in an anti-static area ensuring that correct anti-static precautions are taken. Store all modules in anti-static envelopes when not in use.

---

### ESD

Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe work station. Purchase acceptable ESD accessories from your local supplier.

- Conductive table-mat and wrist-strap combination.
- Conductive floor-mat and heel-strap combination.

Both types, when used together, provide a significant level of ESD protection. Of the two, only the table-mat and wrist-strap combination provides adequate ESD protection when used alone. To ensure user safety, the static-safe accessories must provide at least 1 M $\Omega$  of isolation from ground.

### Inspect for damage

After unpacking the DMM, carefully inspect it for any shipping damage. Report any damage to the shipping agent immediately, as such damage is not covered by the warranty.

### CAUTION

To avoid damage when handling a module; do not touch exposed connector pins.

---

### NOTE

Information on preventing damage to your Keysight equipment can be found at [www.keysight.com/find/tips](http://www.keysight.com/find/tips).

---

### Return the module for service

Should it become necessary to return an Keysight DMM for repair or service, follow the steps below:

- 1 Review the warranty information shipped with your product.
- 2 Contact Keysight to obtain a Return Material Authorization (RMA) and return address. For assistance finding Keysight contact information go to [www.keysight.com/find/assist](http://www.keysight.com/find/assist) (worldwide contact information for repair and service) or refer to the Support information on the product web page at: [www.keysight.com/find/pxi-dmm](http://www.keysight.com/find/pxi-dmm).
- 3 Write the following information on a tag and attach it to the malfunctioning equipment.
  - Name and address of owner. A Post Office box is not acceptable as a return address.
  - Product model number (for example, M9182A)
  - Product serial number (for example, MYXXXXXXXX). The serial number label is located on the side of the module.
  - A description of failure or service required.
- 4 Carefully pack the module in its original ESD bag and packing carton. If the original carton is not available, use bubble wrap or packing peanuts and place the instrument in a sealed container and mark the container “FRAGILE.”
- 5 On the shipping label, write ATTENTION REPAIR DEPARTMENT and the RMA number.

#### NOTE

If any correspondence is required, refer to the product by serial number and model number.

---

## Step 2: Verify Shipment Contents


## Step 2: Verify Shipment Contents

Your shipment should have included the following:

- The Keysight PXI DMM module that you ordered.
- Any other accessories that you ordered (cables, connectors, etc.).

## Step 3: Install the Software on the Controller

The following illustration shows typical installations.

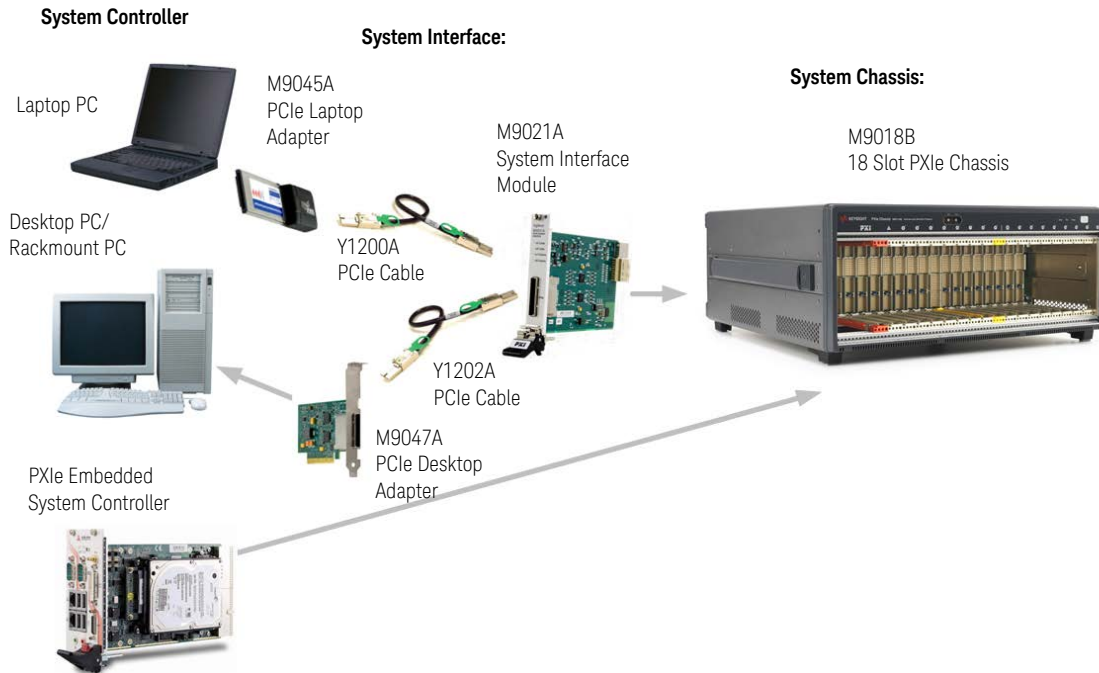

### NOTE

Do not install the PXI modules in the PXI chassis yet! You must install the software prior to installing the modules in the chassis so that Keysight IO Libraries Connection Expert finds them.

### Step 3: Install the Software on the Controller

## System requirements

The following table lists the minimum system requirements for Keysight IO Libraries. In general, any x86 or x64 (except Itanium) should work but there may be a significant decrease in performance.

<b>Operating System</b>	Windows 7 SP1 (32- and 64-bit)	Windows 8 and Windows 8.1 (32- and 64-bit)	Windows 10 (32- and 64-bit)
<b>Processor Speed</b>	1 GHz 32-bit (x86), 1 GHz 64-bit (x64), no support for Itanium64	1 GHz 32-bit (x86), 1 GHz 64-bit (x64), no support for Itanium64 or Windows 8 RT	1 GHz 32-bit (x86), 1 GHz 64-bit (x64), no support for Itanium64 or Windows 8 RT
<b>Available memory</b>	1 GB minimum	1 GB minimum	1 GB minimum
<b>Available hard disk space<sup>[a]</sup></b>	1.5 GB available hard disk space, includes: <ul style="list-style-type: none"><li>– 1 GB available for Microsoft.NET Framework 4.6</li><li>– 100MB for Keysight IO Libraries Suite</li></ul>	2.5 GB available hard disk space, includes: <ul style="list-style-type: none"><li>– 2 GB available for Microsoft.NET Framework 3.5 and 4.6</li><li>– 100MB for Keysight IO Libraries Suite</li></ul>	2.5 GB available hard disk space, includes: <ul style="list-style-type: none"><li>– 2 GB available for Microsoft.NET Framework 3.5 and 4.6</li><li>– 100MB for Keysight IO Libraries Suite</li></ul>
<b>Minimum display</b>	1024x768, 96 or 120 DPI	1024x768, 96 or 120 DPI	1024x768, 96 or 120 DPI

[a] Because of the installation procedure, less memory may be required for operation than is required for installation.

## Power the controller

- If you are using a desktop, laptop, or rackmount PC as a controller:
  - 1** Install any peripheral devices in the PC (e.g., PCIe Interface adapters, etc.). Follow the manufacturers instructions.
  - 2** Power up the computer.
  - 3** Choose the automatic option for any “Found Hardware” dialogs
- If you are using a PXI embedded computer as the controller:
  - 1** Install the embedded computer module into the PXI chassis following the manufacturer’s instructions.
  - 2** Connect peripherals such as a mouse, keyboard, monitor, CD-ROM drive, etc.
  - 3** Power up the chassis.
  - 4** Choose the automatic option for any “Found Hardware” dialogs

## Install Keysight IO Libraries Suite

Install Keysight IO Library Suite (IOLS), which includes the Keysight Connection Expert, the IVI Shared Components, and the VISA Shared Components.

### NOTE

**Keysight IO Libraries must be installed prior to installing and running any other software and prior to powering up the chassis.**

- 1** Download and install IO Libraries software from [www.keysight.com/find/iosuite](http://www.keysight.com/find/iosuite).
- 2** Follow the installation instructions that came with the Keysight IO Libraries Suite.

**NOTE**

If the **IVI Shared Components** and **VISA Shared Components** are not already installed on your PC, Keysight IO Libraries Suite installs them in the standard, default locations. If the **IVI Shared Components** and **VISA Shared Components** are already installed, the Keysight IO Libraries Suite installer will upgrade them to the latest version, using the same installation location used by the older version. If this is a first-time installation, you will be able to select installation locations for these components by choosing a Custom Installation.

---

## Install instrument drivers and Soft Front Panel

- 1 Download and install the instrument drivers from [www.keysight.com/find/pxi-dmm](http://www.keysight.com/find/pxi-dmm).
- 2 Follow the installer prompts. Accept all of the default directories specified during installation if prompted.
- 3 After the Welcome screen, you will be prompted three times for license agreements. The software installer installs the following drivers:
  - **Keysight Modular Software License Agreement.** The installer program installs the Soft Front Panel (SFP) application and other object code to connect to the switches. Accept the license terms and click **Next**.
  - **Keysight IVI Driver Source Code License Agreement.** The Interchangeable Virtual Instrument (IVI) driver is available for programming the Keysight switch modules using Microsoft® development environments (e.g., Visual Studio®, C, C++, C#, Visual Basic), Keysight VEE, MATLAB®, or National Instruments® LabVIEW™. Accept the license terms and click **Next**.
  - **Keysight Software License Agreement for drivers for use with LabVIEW Software.** The LabVIEW driver provides access to the functionality of the switches through LabVIEW VIs. This driver works in National Instruments LabVIEW development environments. Before this driver can be installed, your computer must already have the IVI Shared Components installed. Accept the license terms and click **Next**.

**NOTE**

Installing Keysight IO Libraries also installs the IVI Shared Components.

---



### Step 3: Install the Software on the Controller

- 4 Next, the installer indicates the LabVIEW installations found on your host computer. Click **Next**.
- 5 After accepting the licenses, the driver software is ready to be installed on your host computer. Click **Install**.
- 6 The installation program will take several minutes to finish the installation; do not cancel the installation process. When the installation wizard is finished, you will be prompted to reboot your host computer. Do not reboot the host computer at this time! Select “**No, I will restart my computer later.**” Power down the host computer.

## Step 4: Connect the PC to the PXI Chassis

### NOTE

To ensure proper operation and the PC's ability to enumerate all of the PXI modules, you must use an approved embedded PC, desktop PC, or laptop PC along with approved PCIe adapter and cable.


---

### Using a remote PC

Refer to the following figure. Make certain that both the PC and the PXI chassis are turned off. If you are using the M9018A 18 Slot PXIe chassis, install the Keysight M9021 System Interface Module in the chassis.

- If you are using a desktop or rackmount PC, install the M9047 PCIe Desktop Adapter in the PC. With an Keysight Y1202 cable, connect the adapter to the System Interface module.
- If you are using a laptop PC then install the M9045 PCIe ExpressCard Adapter in the laptop PC. With an Keysight Y1200 cable, connect the adapter to the System Interface module or the embedded computer on the PXI chassis.

## Step 4: Connect the PC to the PXI Chassis

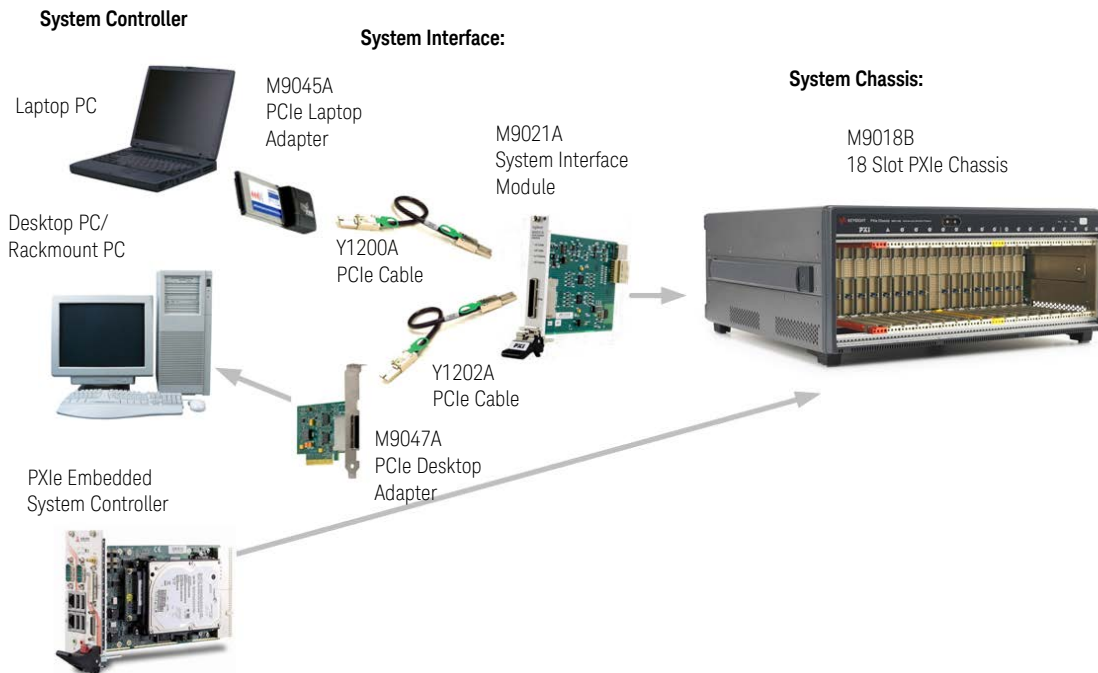

### Using an embedded computer

Refer to the figure above. If you are using an embedded controller in the PXI chassis, you should have installed it prior to installing the Keysight IO Libraries and instrument drivers. No cables or other adapters are required. After installation, proceed to [Step 5: Install the DMM Modules in the PXI Chassis](#).

## Step 5: Install the DMM Modules in the PXI Chassis

### CAUTION

- PXI hardware does not support “hot-swap” capabilities (changing modules while power is applied to the chassis).
- Before installing Keysight PXI Modules into the chassis, the chassis must be powered off and unplugged to prevent damage to the PXI module.

### NOTE

These modules can be used in a chassis with a cPCI, PXI-1, or PXIh chassis peripheral slot.



The module can be installed in any standard PXI slot marked with a peripheral slot compatibility image (a circle containing the slot number).




The module can also be installed in any hybrid PXI slot marked with a peripheral slot compatibility image (the letter "H" and a solid circle containing the slot number).

- 1 Make sure the PXI chassis power is turned off.
- 2 If the chassis has multiple fan speed settings, ensure that the fans are set to automatic. Do not set the fan speed to low or turn them off.
- 3 Position the chassis so that there is ample space between the chassis fan intake and exhaust vents. Blockage by walls or obstructions affects the air flow needed for cooling. (Refer to the chassis documentation for more information about cooling).
- 4 Holding the PXI module by the injector/ejector handle, slide it into an available PXI (or hybrid) slot, as shown in the following figure.
  - Install the module into the PXI slot of the chassis by placing the module card edges into the front module guides (top and bottom).
  - Slide the module to the rear of the chassis and assure that the injector/ejector handle is pushed down in the unlatched (downward) position.

## Step 5: Install the DMM Modules in the PXI Chassis

- Slide the module completely into the chassis. When you begin to feel resistance, push up on the injector/ejector handle to fully seat the module into the chassis.

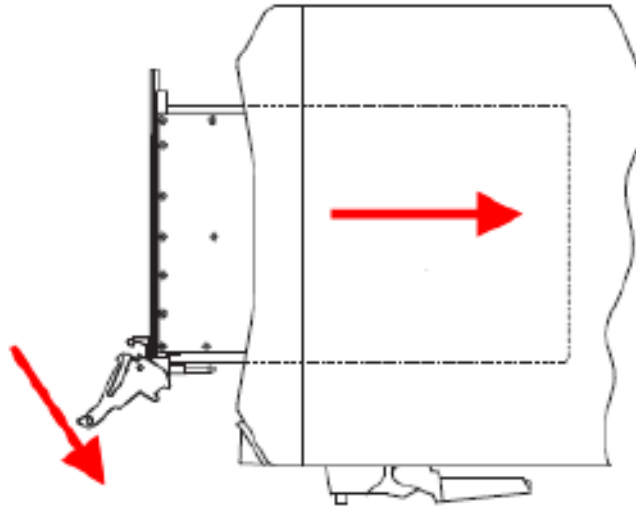

- 5** Latch the module by pulling up on the injector/ejector handle and secure the front panel to the chassis using the module front-panel mounting screws.
- 6** Tighten the screws on the module (or remote controller) front panel. Performance may suffer if the screws are not securely tightened.
- 7** Install all chassis covers, filler panels, and air scoops after installing the module. Missing filler panels may disrupt necessary air circulation in the chassis.
- 8** If you are using a remote controller, connect the Cable Interface Card in the chassis to host computer.
- 9** Plug in and power up the PXI chassis. Verify that the chassis fans are operating and free of obstructions that may restrict airflow.
- 10** If you are using a remote controller (rackmount, desktop, or laptop PC), reboot the controller.

Step 6: Verify Operation of the DMM

Step 6: Verify Operation of the DMM


Run Keysight IO Libraries Connection Expert

If Keysight Connection Expert is already running on the controller, click the Refresh All button to identify any hardware you have just installed or re-connected.

NOTE

If Connection Expert is not already running, run it now to verify your I/O configuration: In the Windows Notification area, click the IO icon (🔌), then click **Keysight Connection Expert**.


Locate your interfaces and instruments in the Keysight Connection Expert Explorer Pane. Click on them to see their properties (displayed in the right-hand pane). Observe their state, also displayed in the right-hand pane -- if communication to the interface or instrument has been successfully established, it will be in the Verified state, denoted by a green check mark. The following illustration shows the Keysight Connection Expert.

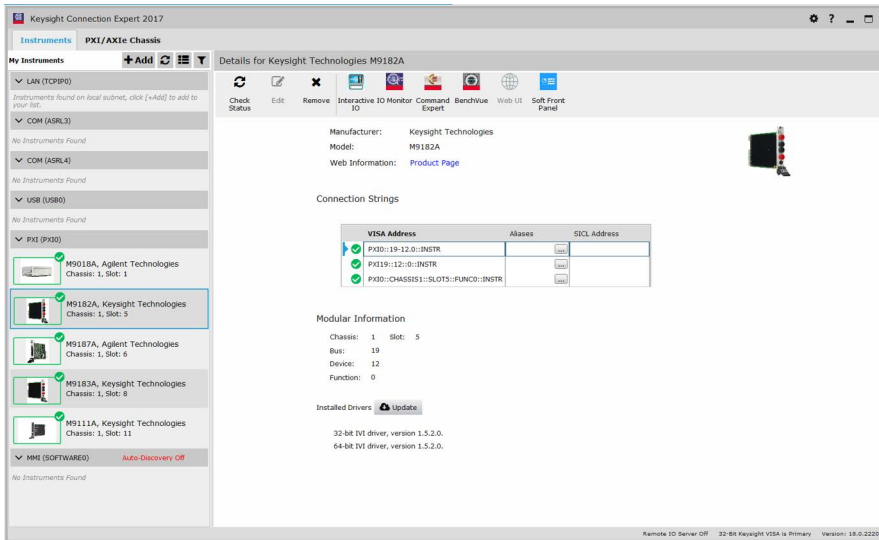

## Step 6: Verify Operation of the DMM

You can use the Soft Front Panel (SFP) software to open and close the relays and verify operation of the PXI DMM modules. The Soft Front Panel Software was installed as part of the Software installation process.

Refer to the SFP help file for specific detailed information on using the SFP. The following graphic shows an example of the SFP for the DMM modules.

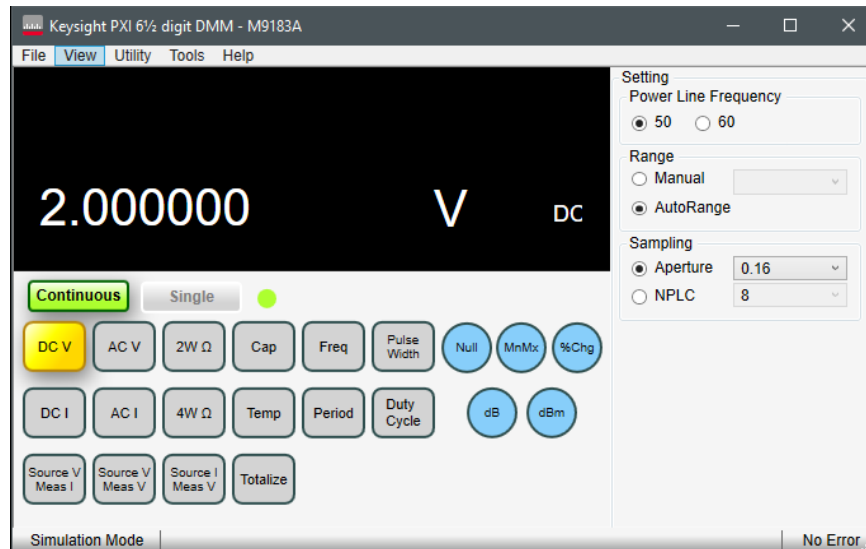


### Verify operation

To verify basic operational readiness, use the Soft Front Panel software to configure and take a few basic measurements. For example, you could apply a short across the input terminals and take a DCV measurement or 2W  $\Omega$  measurement. Both measurements should report values near zero. Module specifications are guaranteed by design.

### Conduct self test

Use the Utility menu on the Soft Front Panel software to run a module self test.

## Step 6: Verify Operation of the DMM

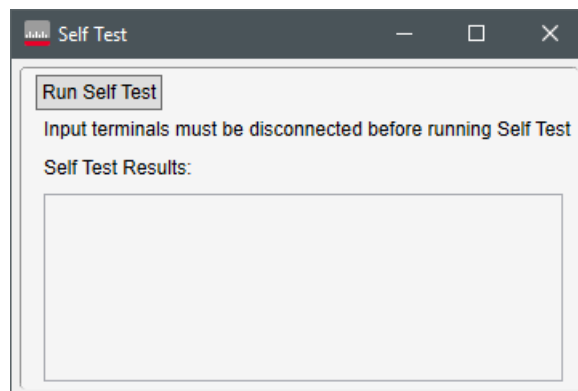



## Module Functional Description

The Keysight M9180 Series DMM modules conform to the single slot, 3U height (128 mm) Eurocard standard. These modules meet PXI Specification 2.2. Local bus, trigger bus, and star trigger are not included. The modules also include:

- CPCI Ejector Handle
- The front panel secures to the chassis by two  $M2.5 \times 6$  mm pan-head Posi-drive screws.

There are no user serviceable or field replaceable components on these modules.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2011 - 2022  
Edition 6, September 2022

Printed in Malaysia



M9182-90001

[www.keysight.com](http://www.keysight.com)