



## **Installation Instructions for the Agilent 5DX 8.4.1 Patch**

**NOTE: The Agilent 5DX 8.4.1 patch contains only the files necessary for the patch and requires 8.4 to be previously installed.**

### **Preparing the 5DX system for installation of 8.4.1**

1. Stop inspections and unload all panels from the system.
2. From the User Interface, perform a long-term shutdown by selecting **System Access > Shutdown > Long-Term Shutdown**.
3. Exit out of the User Interface.
4. Double-click the **Agilent 5DX Reset** icon to reset the system.
5. Close all other programs; close any open windows.

### **Installation of the 8.4.1 Patch**

1. Download the file 5DX 8.4.1 Patch from the Agilent 5DX Technical Support web site to a local drive: [www.agilent.com/see/5DX](http://www.agilent.com/see/5DX) under “Technical Support” - “Software Downloads & Utilities” as “5DX 8.4.1 Patch”
2. Create the following subdirectory: C:\Temp\8.4.1 Patch\.
3. Move the patch file to the subdirectory: C:\Temp\8.4.1 Patch\.
4. From Windows Explorer, double click on the 5DX 8.4.1 Patch Download.zip.
5. Extract all files to the default directory.
6. Navigate to C:\Temp\8.4.1 Patch\Disk1\Disk1
7. Double click on setup.exe.
8. Follow the on-screen instructions to install the patch.
9. Once the installation process is complete, reboot the PC.

### **Restarting the 5DX system**

1. After the system reboots, log back into the operating system and also back into the 5DX User Interface
2. Perform a startup by selecting **System Access > Startup > Automatic Startup**.

### **Verifying Proper Patch Installation on the 5DX**

The top of the 5DX Main User Interface screen will now reflect the current software revision, 8.4.1.