
Keysight M9502A 2-Slot and M9505A 5-Slot AXIe Chassis



Notices

© Keysight Technologies, 2010-2024

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

M9502-90005

Edition

Twelfth Edition, April 2024
Published in USA

Keysight Technologies
1400 Fountaingrove Parkway
Santa Rosa, CA 95403 USA

Trademarks

AXIe is a registered trademark of the AXIe Consortium.

PXI is a registered trademark of the PXI Systems Alliance.

PICMG®, Compact PCI®, and AdvancedTCA® are registered trademarks of the PCI Industrial Computer Manufacturers Group.

PCI-SIG®, PCI Express®, and PCIe® are registered trademarks of PCI-SIG.

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

www.keysight.com/find/M9502A or www.keysight.com/find/M9505A (product-specific information and support, software and documentation updates)

www.keysight.com/find/assist (world-wide contact information for repair and service)

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://keysight.com/go/conformity> and click on "Declarations of Conformity." You can then search by product number to find the latest Declaration of Conformity.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Keysight Technologies does not warrant third-party system-level (combination of chassis, controllers, modules, etc.) performance, safety, or regulatory compliance unless specifically stated.

DFARS/Restricted Rights Notices

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data

Safety Information

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings or operating instructions in the product manuals violates safety standards of design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

General

Do not use this product in any manner not specified by the manufacturer. The protective features of this product must not be impaired if it is used in a manner specified in the operation instructions.

Before Applying Power

Verify that all safety precautions are taken. Make all connections to the unit before applying power. Note the external markings described under "Safety Symbols".

Ground the Instrument

Keysight chassis' are provided with a grounding-type power plug. The instrument chassis and cover must be connected to an electrical ground to minimize shock hazard. The ground pin must be firmly connected to an electrical ground (safety ground) terminal at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.

Do Not Operate in an Explosive Atmosphere

Do not operate the module/chassis in the presence of flammable gases or fumes.

Do Not Operate Near Flammable Liquids

Do not operate the module/chassis in the presence of flammable liquids or near containers of such liquids.

Cleaning

To prevent electrical shock, disconnect the instrument from mains before cleaning. Clean the outside of the Keysight module/chassis with a soft, lint-free, slightly dampened cloth. Do not use detergent or chemical solvents.

Do Not Remove Instrument Cover

Only qualified, service-trained personnel who are aware of the hazards involved should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover.

Keep away from live circuits

Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers and shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

DO NOT operate damaged equipment

Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Keysight Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.

DO NOT block the primary disconnect

The primary disconnect device is the appliance connector/power cord when a chassis used by itself, but when installed into a rack or system the disconnect may be impaired and must be considered part of the installation.

Do Not Modify the Instrument

Do not install substitute parts or perform any unauthorized modification to the product. Return the product to a Keysight Sales and Service Office to ensure that safety features are maintained.

In Case of Damage

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel

CAUTION

Do NOT block vents and fan exhaust: To ensure adequate cooling and ventilation, leave a gap of at least 50mm (2") around vent holes on both sides of the chassis.

Do NOT operate with empty slots: To ensure proper cooling and avoid damaging equipment, fill each empty slot with an AXle filler panel module.

Do NOT stack free-standing chassis: Stacked chassis should be rack-mounted.

All modules are grounded through the chassis: During installation, tighten each module's retaining screws to secure the module to the chassis and to make the ground connection.

WARNING

Operator is responsible to maintain safe operating conditions. To ensure safe operating conditions, modules should not be operated beyond the full temperature range specified in the Environmental and physical specification. Exceeding safe operating conditions can result in shorter lifespan, improper module performance and user safety issues. When the modules are in use and operation within the specified full temperature range is not maintained, module surface temperatures may exceed safe handling conditions which can cause discomfort or burns if touched. In the event of a module exceeding the full temperature range, always allow the module to cool before touching or removing modules from the chassis.

Safety Symbols

CAUTION

A CAUTION denotes a hazard. It calls attention to an operating procedure or practice, that, if not correctly performed or adhered to could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING denotes a hazard. It calls attention to an operating procedure or practice, that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Products may display the following symbols:



Warning, risk of electric shock



The instruction documentation symbol. The product is marked with this symbol when it is necessary for the user to refer to the instruction in the documentation.



Earth Ground.



Frame or chassis Terminal.



Alternating Current (AC).



Standby Power. Unit is not completely disconnected from AC mains when switch is in standby.



Antistatic precautions should be taken.

CAT I
CAT II
CAT III
CAT IV

IEC Measurement Category I, II, III, or IV

For localized Safety Warnings, Refer to Keysight Safety document (p/n 9320-6792).



ON position of the power line switch.



OFF position of the power line switch.



DC Voltage



Three-phase alternating current



Alternating Current (AC).



Standby Power. Unit is not completely disconnected from AC mains when switch is in standby.



Presence of a Laser device



Protective Conductor Terminal



Equipment is protected throughout by double or reinforced insulation



Protective Conductor Terminal



The CSA mark is a registered trademark of the Canadian Standards Association and indicates compliance to the standards laid out by them. Refer to the product Declaration of Conformity for details.



The CE marking is registered trademark of the European Community (if accompanied by a year, it is the year when the design was proven). It indicates that the product complies with all relevant directives.



UK conformity mark is a UK government owned mark. When affixed to the product is declaring all applicable Directives and Regulations have been met in full.

ccr.keysight@keysight.com

The Keysight email address is required by EU directives applicable to our product.

CAN ICES/NMB-001(A)

Canada EMC label. Interference-Causing Equipment Standard for industrial, scientific and medical (ISM) equipment. Matériel industriel, scientifique et médical (ISM)



CE/ICES/ISM Label. This is a space saver label that combines three markings - CE with CAN ICES (see above) and ISM (see below).



The RCM mark is a registered trademark of the Australian Communications and Media Authority.



This is a combined marking to indicate product compliance with the Industry-Canadian Interference-Causing Equipment Standard (ICES/NMB-001). This is also a symbol of an Industrial Scientific and Medical Group 1 Class A product (CISPR 11, Clause 5).

Safety Symbols (continued)

ISM 1-A

This is a symbol of an Industrial Scientific and Medical Group 1 Class A product. (CISPR 11, Clause 5)



South Korean Certification (KC) mark. It includes the marking's identifier code.

A 급 기기 (업무용 방송통신기자재)
이 기기는 업무용 (A 급) 전자파적합기
로서 판 매자 또는 사용자는 이 점을 주
의하시기 바라 며 , 가정외의 지역에서
사용하는 것을 목적으로 합니다.



Waste Electrical and
Electronic
Equipment (WEEE)
Directive
2002/96/EC

This WEEE symbol indicates separate collection for electrical and electronic equipment, mandated under EU law as of August 13, 2005. All electric and electronic equipment are required to be separated from normal waste for disposal.

To return unwanted products, contact your local Keysight office, or for more information see <http://about.keysight.com/en/companyinfo/environment/takeback.shtml>.



China Restricted Substance Product Label. The EPUP (environmental protection use period) number in the center indicates the time period during which no hazardous or toxic substances or elements are expected to leak or deteriorate during normal use and generally reflects the expected useful life of the product.



Universal recycling symbol. This symbol indicates compliance with the China standard GB 18455-2001 as required by the China RoHS regulations for paper/fiberboard packaging.

IP x y

This mark indicates product has been designed to meet the requirements of "IP x y", where "x" is the solid particle protection and "y" is the liquid ingress protection.

Contents

1 Introduction

AXIe Chassis Description	2
M9502A 2-Slot AXIe Chassis at a Glance	4
M9505A 5-Slot AXIe Chassis at a Glance	6
AXIe Embedded System Module (ESM)	8
AXIe Embedded System Module (ESM) Option U20 with USB	9
AXIe Instrument Modules	10
ESD Precautions	11
Power-Up and Power-Down	12
Circuit Breaker	12
ON/STANDBY Switch	12
Power Modes	12
To Power Up the Chassis	13
To Power Down the Chassis	15
Chassis Firmware, IVI Driver, and IO Libraries Matrix.	16
Safety-Related Specifications.	17
Regulatory	17
Operating Conditions	17
Chassis Weight	17
AC Power Supply Requirements	17
Chassis Power Dissipation	18
DC Power Supply Output	18
Related Documentation	19
Product Warranty	19

2 Chassis Installation

Planning the Installation	22
Basic Chassis Verification	22
Complete Installation	22
Once Chassis Are In Place:	22
Installing Modules	23
To Remove a Filler Panel Module	24
To Install a Module	24
To Remove a Module	28
Mounting the Chassis	29
Environmental and Power Considerations	29
Rackmounting the Chassis	29
To Remove the Carry Handle and Bumpers from the M9502A	30
To Remove the Carry Handles and Bumpers from the M9505A	31

Reinstalling the Bumpers and Carry Handles	33
Setting Up a Host PC.	34
To Install Module Soft Front Panel and Device Drivers	34
Verifying Operation with Modules Installed.	35
Using the M9536A Embedded Controller LAN Ports	36
Recommendations	37
Using an external controller.	41
Using Multiple Chassis.	42
How does a multiple chassis system differ from a MultiFrame system? . . .	42

3 Navigating the Web Interface

Launching the Web Interface	43
Home Page.	44
Menu.	45
LAN Configuration Page	46
Module Configuration Page.	47
ESM PCIe Upstream Connection Settings	48
New Configuration	48
E-Keying	49
Trigger Routing Page.	51
Chassis Health Page	53
Configure Fan Control.	54
Example of Chassis Fan Speed	56
AXIe Chassis Version Information and Fan Speed	57

4 Using the Soft Front Panel

Starting the Soft Front Panel.	60
SFP Screens	61
Monitor screen	61
Configure Trigger Routing.	61

5 Features and Functions

Chassis Block Diagram	66
Shelf Management Functions	68
To Monitor Fans:	68
Current Speed Level	70
Dynamic Minimum Fan Level.	70
Adjust Current Speed Level and Dynamic Minimum Fan Level	70
To Control Fan Speed:.	70
To Monitor Chassis Temperature:	71

To Monitor Module Health:	71
PCIe and LAN Switching (data transfer)	73
Data Channels Explained	73
Implementing Fabric 2	74
Maximizing Data Upload Speeds	74
PCIe, LAN or Both?	74
Chassis Synchronization and Triggering	75
Synchronization	76
Available Clocks	76
Selecting a Clock Bus Source	77
Using the Clocks	77
Triggering	78
Trigger Resources	79
Crosspoint Switch	80
TRIG	82
STRIG	83
SYNC	84
TRIGGER OUT	86
MultiFrame Flags	86
MultiFrame SYNC	87
MultiFrame Operation	89
Shared Features	89
Interconnection	90
To Connect a MultiFrame Chassis:	91
LVDS Local Bus	92
Electronic Keying (E-Keying)	92
E-Keying Process	94

6 For Module Developers

Module Types	96
ATCA and AXIe Requirements	97
Overview	97
ATCA Requirements and Exceptions for AXIe 1.0	97
AXIe Extensions to AdvancedTCA®	99
Chassis Backplane Connections	100
M9502A Backplane	100
M9505A Backplane	101
Zone 1 Connector Layout	102
Zone 1 Connector Usage	102
Zone 1 Pin Assignments	103
Zone 2 Connector Layout	104
Zone 2 Connector Usage	105
Zone 2 Pin Assignments	106

7 Troubleshooting and Service

- Updating the Chassis Firmware. 110
 - Revision string numbering format 110
- Troubleshooting 111
 - Overview 111
 - Normal Chassis Operating Behavior. 111
 - Chassis Hardware Troubleshooting 113
 - Chassis Fans. 113
 - Power Supply Unit (PSU). 114
 - Embedded System Module (ESM). 114
- User-Replaceable Parts 117
- To Replace the Power Supply Unit 118
 - To remove the PSU from the M9502A 118
 - To remove the PSU from the M9505A 120
- To Replace the Fan Tray. 124
- To Replace the Embedded System Module. 124

Glossary

1 Introduction

This chapter provides a brief introduction to the AXIe chassis.

AXIe Chassis Description	2
M9502A 2-Slot AXIe Chassis at a Glance	4
M9505A 5-Slot AXIe Chassis at a Glance	6
AXIe Embedded System Module (ESM)	8
AXIe Instrument Modules	10
ESD Precautions	11
Power-Up and Power-Down	12
Safety-Related Specifications	17
Related Documentation	19
Product Warranty	19

NOTE

A NOTE calls the user's attention to an important point or special information in the text. This version of the M9505A/M9502A User Guide supports and describes features of the chassis firmware revision 1.3.23 (and later). This version of firmware adds features that were not available in previous firmware versions. These features include, but are not limited to the following:

- Support for E-Keying (see “[Module Configuration Page](#)” on page 47)
- Fan speed adjustable from 35 to 100 (previously it was 8 to 15) (see “[Chassis Health Page](#)” on page 53 and the notes concerning “[Configure Fan Control](#)” on page 54)
- Ability to force the ESM to PCIe Gen 1 speeds (see “[Embedded System Module \(ESM\)](#)” on page 114)

To identify the chassis firmware revision, see “[Home Page](#)” on page 44

To update chassis firmware, IVI driver (including Soft Front Panel), and LabVIEW driver, and get the most up-to-date documentation, refer to the Keysight AXIe chassis web pages:

www.keysight.com/find/M9502A or www.keysight.com/find/M9505A

To update IO Libraries Suite, go to: www.keysight.com/find/iosuite. IO Libraries Suite version 16.3 update 1 (or later) is required for multiple chassis operation.

Always use the latest version of chassis firmware, IVI and LabVIEW drivers, and IO Libraries Suite to get the best performance and latest features.

AXIe Chassis Description

The Keysight M9502A (2-slot) and M9505A (5-slot) AXIe chassis are modular instrument chassis fully compatible with the AXIe 1.0 specification. They allow multiple application-specific instrument modules to share a common chassis frame, power supply, cooling system, PCI Express (PCIe) Gen 2 data bus, Gigabit LAN hub, local bus for module-to-module signaling, and host PC connections. Multiple chassis may be interconnected for scalability, in either a multiple chassis or MultiFrame configuration; see “Using Multiple Chassis” on page 42 for more information.

The full rack chassis provides (two or five) general purpose peripheral slots that accept 1U AXIe instrument modules.

Each module slot is supplied with a Gen 2 x4 link (maximum of 2 GB/s data rate per module) to the chassis primary data ‘fabric’ hub—a x8 PCIe switch and data bus.

Both chassis include a half-height Embedded System Module (ESM) which manages chassis functions. The ESM provides all ATCA shelf manager functions, plus these AXIe extensions:

- provides host PC connectivity (Gen 2 PCIe x8 and/or Ethernet)
- sources timing signals (CLK100, SYNC and FCLK)
- routes STRIG (Star Trigger) to instruments through the backplane
- routes trigger signals through an external parallel trigger bus
- provides backplane PCIe and Ethernet communication between modules

Other than a Power button and instrument status light, all monitoring, control and communication with the chassis requires a *host PC*. This can be an *embedded* controller such as the Keysight M9536A (a Windows-based PC specifically designed for use in an AXIe chassis) or *remote* (a rackmount, desktop, or laptop PC).

The shared Gen 2 x8 PCIe interface from the ESM to an external host PC provides up to a 4 GB/s data rate shared among installed modules.

NOTE

In order for a computer to serve as host PC, its BIOS must support enumeration of PCIe slots in the AXIe chassis; many computers are not capable of enumerating a sufficient number of PCIe slots to ensure that slots in an external chassis are enumerated. Keysight maintains a document listing the integrated, rack mount, desktop and laptop computers that have been verified to properly enumerate PCIe devices in the AXIe chassis, at www.keysight.com/find/axie-chassis.

For general host PC requirements, such as operating system and RAM requirements, please refer to the *M9502A/M9505A AXIe Chassis Startup Guide*.

For the ESM and for each other installed module, appropriate control software and instrument drivers must be installed on the host PC.

The **M9502A/M9505A AXIe Chassis Startup Guide** provides just the basics to get you started with your AXIe chassis. Provided in print with each new chassis, it can also be viewed in PDF form on the *Software and Product Information CD*. Note that you must specifically request this CD when you ordered your chassis. The Startup Guide includes:

- A high-level overview of the 2-slot and 5-slot AXIe chassis and basic nomenclature
- Unpacking the contents and planning your installation
- Connecting to a host PC
- Loading chassis software
- Verifying basic chassis operation

This **User Guide** includes detailed instructions for chassis configuration, operation and service. Chapters include:


- Chapter 1: Introduction
- Chapter 2: Installation
 - Installing Modules
 - Mounting the Chassis
 - Setting Up a Host PC
- Chapter 3: Navigating the Web Interface
- Chapter 4: Using the Soft Front Panel
- Chapter 5: Features and Functions
 - Chassis Topology
 - Shelf Management Functions
 - PCIe and LAN Data Transfer
 - Instrument Synchronization and Triggering
 - MultiFrame Signaling
 - LVDS Local Bus
- Chapter 6: For Module Developers
 - ATCA and AXIe Requirements
 - Module and Backplane Connectors and Pin Assignments
- Chapter 7: Troubleshooting and Service
 - Updating Firmware
 - Troubleshooting
 - Parts Replacement

M9502A 2-Slot AXIe Chassis at a Glance


Designed for portable or small system testing, the M9502A is shipped with bumpers and a carry handle installed for benchtop use (these remove for rack mounting), Slot 1 open and a filler panel module installed in Slot 2.


Main components on the 2-slot chassis are shown below:

Front Panel

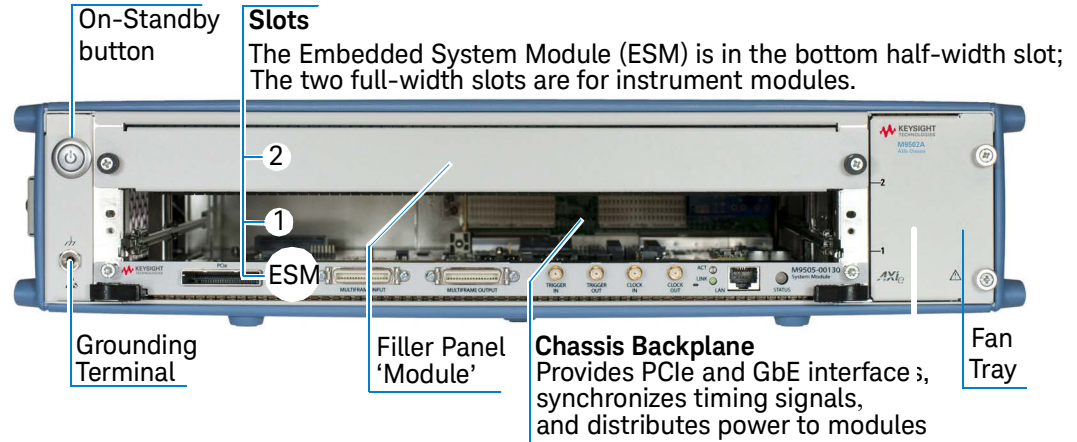

Rear Panel

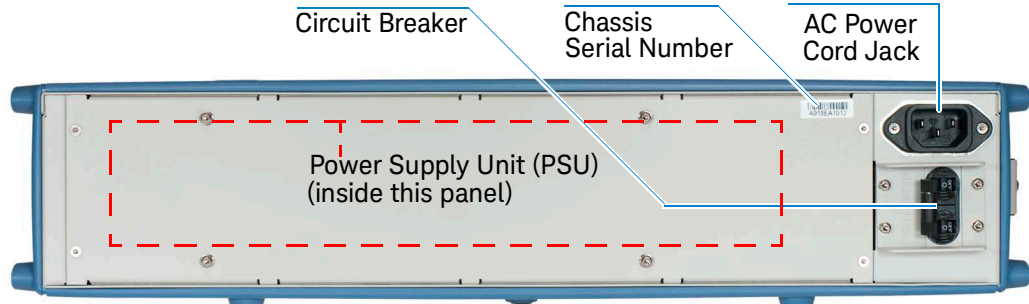

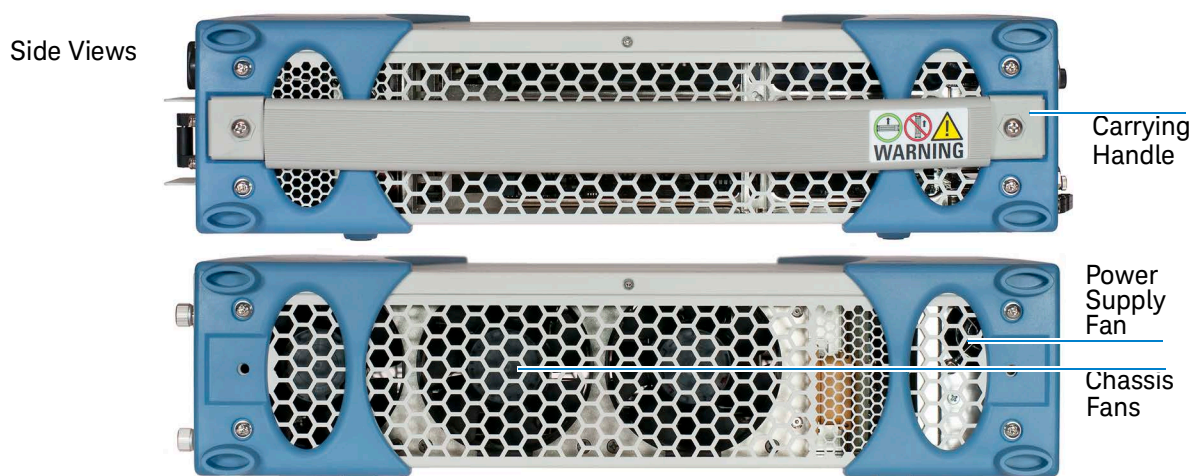**WARNING**

Use Keysight supplied power cord or one with same or better electrical rating.

Do not use adapters, extension cords to power the equipment.

The AC Voltage source (outlet) must be in proper working order and provide a secure electrical connection.


Do not use the outlet if the power cord makes a loose connection or if the power cord plug does not match the outlet. Do not use the outlet if it is damaged or if the voltage is outside the required range.

If a power strip is used, be sure it is adequately rated for the intended use. These devices may not be sufficiently rated to carry the required current and become a safety hazard.


M9505A 5-Slot AXIe Chassis at a Glance

The M9505A is shipped with bumpers and two carry handles installed for benchtop use (these remove for rack mounting), Slot 1 open and filler panel modules installed in Slots 2 through 5.


Main components on the 5-slot chassis are shown below:

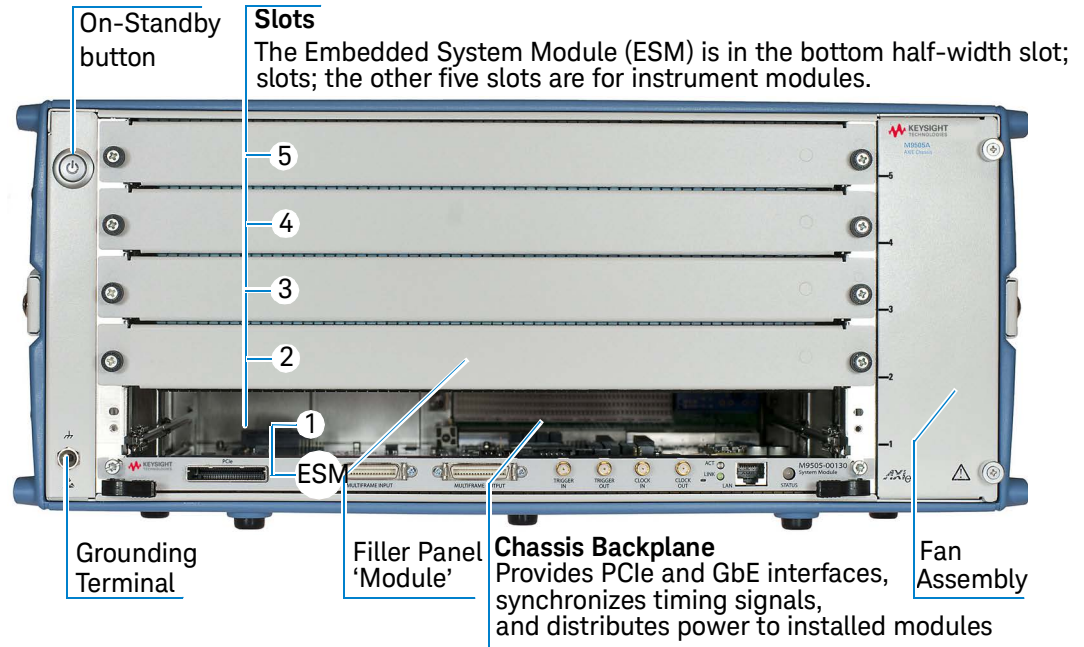


Rear Panel

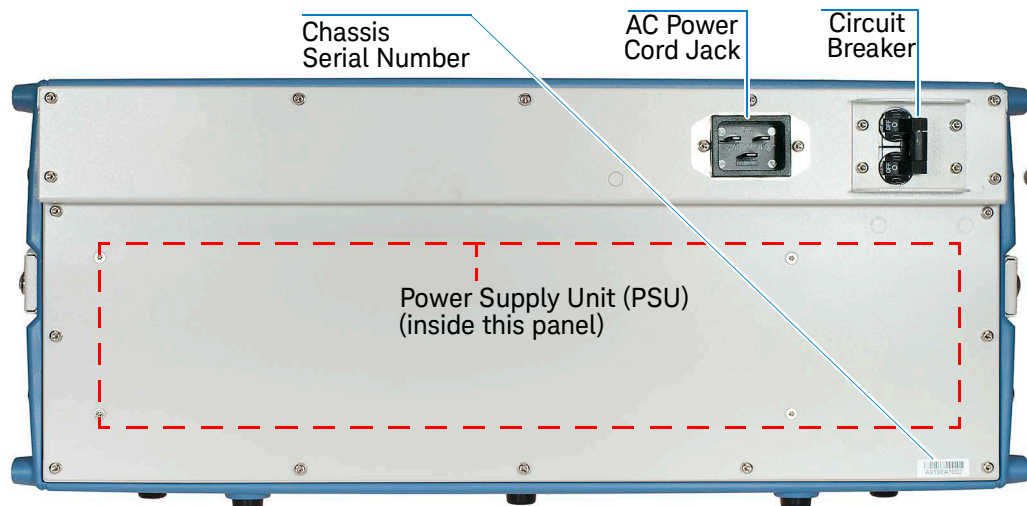

Side Views

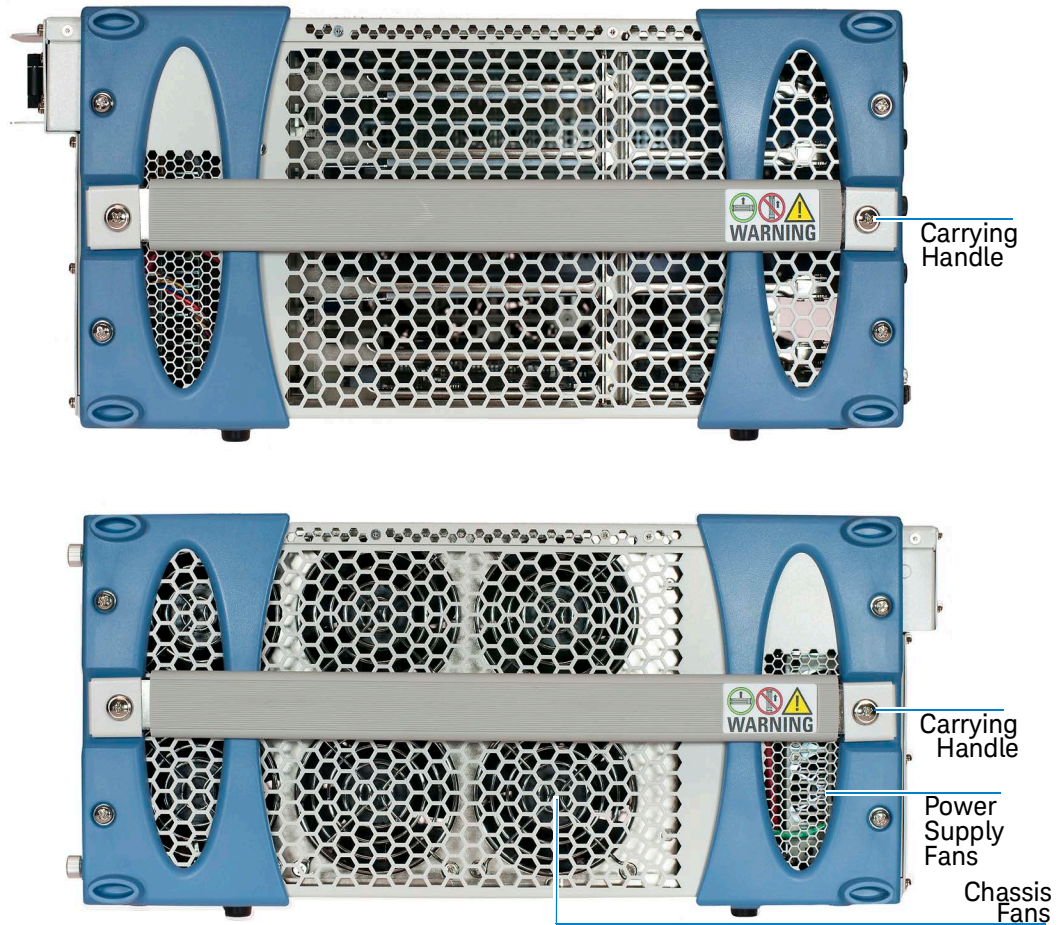

AXIe Embedded System Module (ESM)

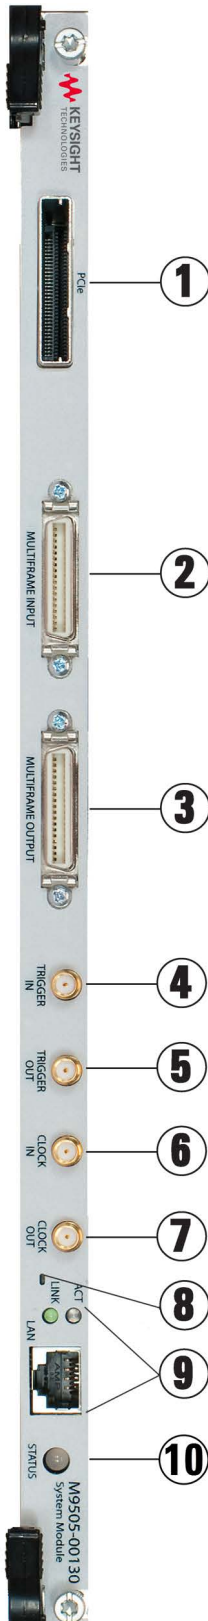

The ESM is installed in a half-height slot at the base of the chassis. It performs the following functions:

- tracks inserted modules and manages power requirements
- monitors chassis temperature and controls variable-speed chassis fans
- monitors module sensors and reports component failures to a system log
- acts as a Gigabit Ethernet switch; forwards packets along the backplane
- connects an external host PC to the chassis
- synchronizes timing across all modules through the Keysight Trigger Bus, using an internal or external clock source

ESM Front Panel

1	PCIe	Connects a remote host PC to the chassis via PCIe. Gen 2 compliant PCIe x8 connector.
2	MULTIFRAME INPUT	Synchronizes timing signals with multiple daisy-chained chassis (either 2-slot or 5-slot). 36-pin mini D connectors use accessory Keysight cables.
3	MULTIFRAME OUTPUT	Gets timing signals from the previous chassis. If this chassis is at the head of the chain, it becomes the primary using an internal or external clock to send timing signals to other chassis in the chain.
4	TRIGGER IN	Provides timing signals to the next chassis.
5	TRIGGER OUT	External trigger connections. SMA connectors with ESD suppression.
6	CLOCK IN	Accepts an external trigger. Adjustable threshold input, +/-5V range, 250 mV minimum swing.
7	CLOCK OUT	Extends the parallel trigger bus to external instruments. 3.3V CMOS, 50Ω line drive, 3-state.
8	RESET	External clock connections. SMA connectors with ESD suppression.
9	LAN	Accepts an externally sourced timing input. Input range -5V to +5V, AC coupled, unterminated, 100 mV minimum swing.
10	STATUS Light	Extends the internal clock source to external instruments. 3.3V CMOS, 50Ω line drive, 3-state.
		Reset chassis. Insert small pin, hold until Status LED turns amber, remove pin.
		Connects the host PC to the chassis, RJ45 connector. Tri-rate 10/100/1000 Base-T, auto crossover. Green LINK light and amber ACT light indicate power and port activity.
		An embedded controller module does not use this port; it communicates with the ESM through the chassis backplane.
		The LAN port is for communication with the AXIe chassis, not individual modules.
		The status indicator light is a bi-color LED. Green indicates normal operation. Red indicates a power-up error. Both lights on (amber) indicates the chassis is powered on and booting.

AXIe Embedded System Module (ESM) Option U20 with USB



The Option U20 ESM provides the same features as the standard ESM and adds a USB 2.0 port*.

NOTE

The USB port is supported only for specific Keysight AXIe modules and software. Refer to the documentation for the supported modules and software for USB use and operating instructions.

This USB port provides the following features:

- It enables using the AXIe chassis and the supported USB compatible AXIe modules and software with any host controller that has a USB 2.0 port.
- Either the USB port or the PCIe port may be used -- but not both simultaneously. To change connectivity between USB and PCIe, power down the chassis and host PC. Connect either a USB or PCIe cable, but not both. Power up the system.
- USB provides easy PC connectivity and uses less expensive and longer cables than PCIe. USB is physically hot pluggable, however you must restart the software controlling the module(s) when a USB connectivity change is made. You do not need to reboot the chassis or host PC.
- USB provides control for the chassis and a number of Keysight modules. Please refer to module datasheets and documentation to determine if a particular module is supported. USB-compatible and PCIe compatible modules cannot be used at the same time. If you are controlling an AXIe module via USB, you must change cable connections and reboot the host PC before controlling an AXIe module via PCIe.

STOP!

IMPORTANT: The installation and setup information in this manual is generic.

The USB port is supported only through specific Keysight software applications and modules such as the Keysight logic and protocol analyzer software and modules. These AXIe systems that use the USB port may require a different installation and setup procedure than described in this manual. Refer to the installation documentation supplied with your AXIe module or system for detailed installation information.

CAUTION

Some AXIe test system software applications, such as the Keysight logic and protocol analyzer software and modules, sets and uses specific trigger lines in the AXIe chassis. Do not use the AXIe chassis Soft Front Panel (SFP) software or the AXIe chassis web interface to set or reroute any of the AXIe chassis trigger lines. Rerouting any of the trigger lines may cause the application software to not function correctly.

* The USB port requires AXIe chassis firmware 1.3.37 or later. Refer to M9502A/M9505A User Guide.


AXle Instrument Modules

The chassis slots accept AXle instrument modules. These may comprise one or more instruments for signal injection, data acquisition, and measurement. Install them in any available AXle slot.

There are two special type of instrument modules which—if used—are most typically installed in slot 1 (consult the module vendor for specific slot placement requirements).

- An instrument hub module – a specialty instrument module which also acts as a hub for a secondary vendor-defined x4 data fabric.
- *An integrated controller module* – this is a host PC with a form factor and backplane connections specifically designed for an AXle chassis. It uses the chassis backplane for PCIe and LAN connection to the ESM.

The drawing below illustrates the AXle module's general layout, backplane connections and chassis fasteners, viewed from the top.

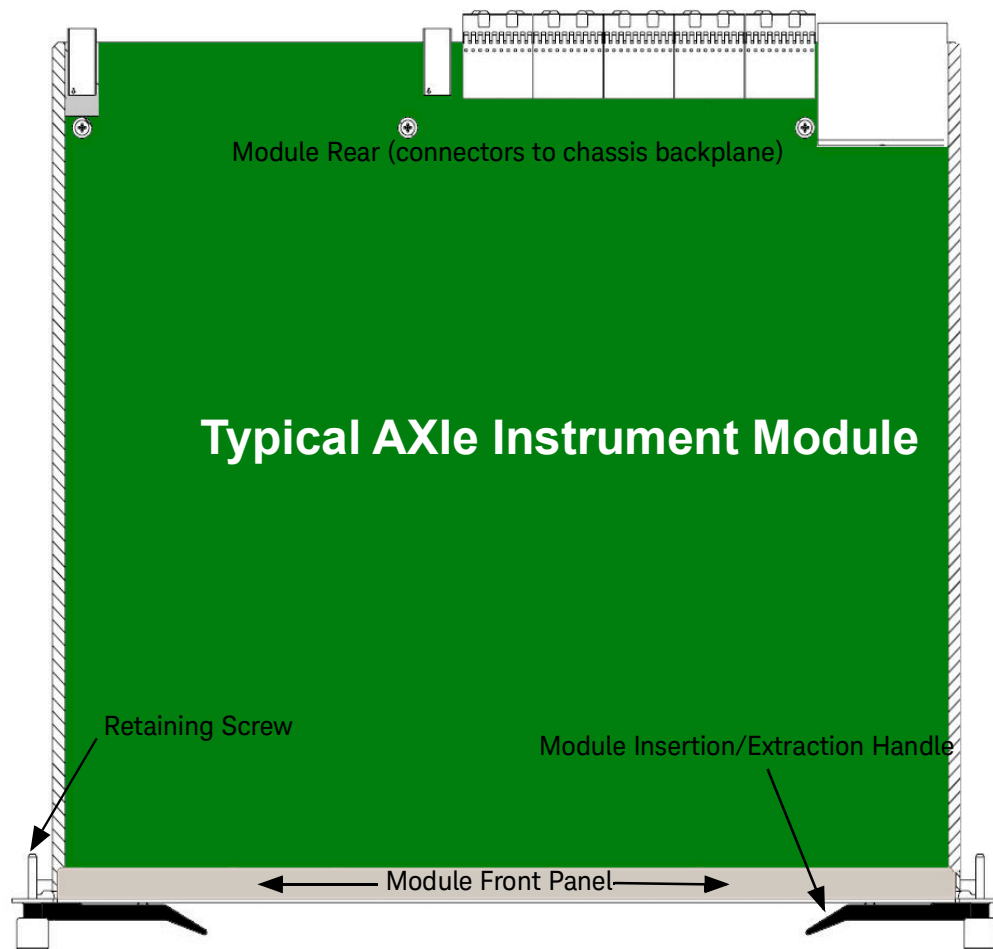

Test connections are made at the module's front panel. The front panel and backplane connectors will vary depending on the module.

ESD Precautions


CAUTION

Keysight's AXIe chassis and instrument modules are shipped in materials which prevent static electricity damage. These instruments should only be removed from the packaging in an anti-static area ensuring that correct anti-static precautions are taken. Store all modules in anti-static envelopes when not installed.

Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe work station. The following figure shows an example of a static-safe work station using two types of ESD protection. Purchase acceptable ESD accessories from your local supplier.

- Conductive table-mat and wrist-strap combination.
- Conductive floor-mat and heel-strap combination.

Both types, when used together, provide a significant level of ESD protection. Of the two, only the table-mat and wrist-strap combination provides adequate ESD protection when used alone. To ensure user safety, the static-safe accessories must provide at least $1\text{ M}\Omega$ of isolation from ground.

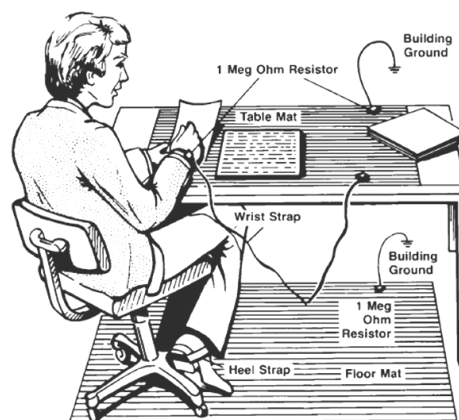

Power-Up and Power-Down

Circuit Breaker

The chassis circuit breaker is a toggle switch, marked OFF (O) when open and ON (I) when closed:



Circuit Breaker Open (OFF)



Circuit Breaker Closed (ON)

ON/STANDBY Switch

The chassis' button on the front of the chassis is the **ON/STANDBY** switch, lit when the chassis is ON:



STANDBY
(off if power is disconnected
or breaker is open)



ON

Power Modes

The chassis has three power modes:

OFF With the power cord removed or the circuit breaker in the open position, the chassis is **OFF**.

STANDBY With the power cord connected, the circuit breaker closed, and the front panel switch in the standby (not depressed) position, the chassis is in **STANDBY** mode. Although no power is supplied to the ESM and installed modules when in Standby, the chassis is energized and consumes power. Fans may operate.

ON With the power cord attached, circuit breaker closed, and the front panel switch in the **ON** (depressed) position, the chassis is **ON**. Power is supplied to the ESM and installed modules. Fans will operate as dictated by chassis thermal load.

To Power Up the Chassis

Plug-In Chassis Using the supplied cord, connect the chassis to an appropriate AC power main.

Close Circuit Breaker Close the rear panel circuit breaker

Press On/Standby Button Press the chassis' **ON/STANDBY** switch. It should light when depressed


The **STATUS** light on the ESM will cycle as follows:

- 1 Light off - with button in **STANDBY** mode
- 2 Amber, steady - after pressing switch, ESM is performing a power-on self-test (POST)
- 3 Green, blinking - for a few seconds after POST
- 4 Green, steady - successful chassis power-up is complete



CAUTION

The chassis and host PC must be powered up and down in the following sequence. The chassis should be powered up first, which will initiate its built-in self test. During self test, the chassis STATUS LED will be amber. The STATUS LED will blink green and then stay green continuously when the ESM is ready. The ESM then powers up each module slot. The remote host PC should be turned on only after all installed modules have performed their initialization—see your module documentation for initialization information. An embedded controller such as the M9536A handles this sequence automatically.

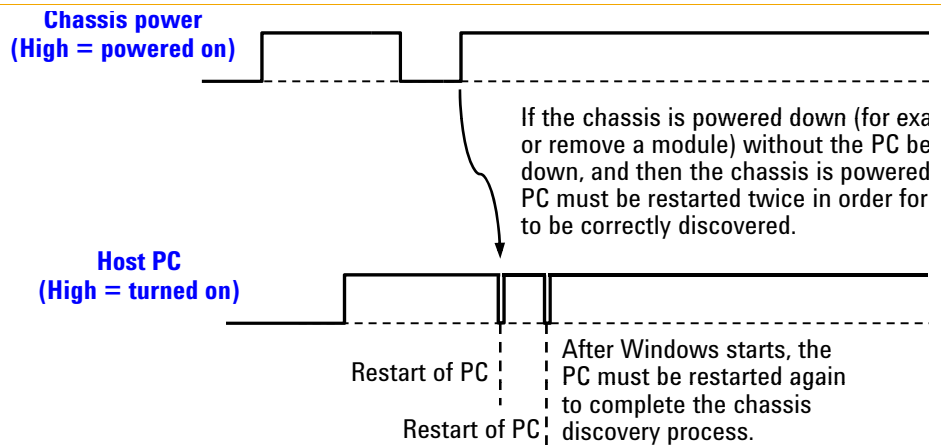

In brief, the host PC must be off whenever the chassis is powered up or down. Note the need to restart the host PC (after Windows starts) if the chassis configuration has been changed in any way while the PC was turned off.

NOTE

Some AXIe instrument modules (also known as Blades) take longer to be ready for enumeration than the PXI link ready requirement of 100ms. Consequently, it is possible for some controllers (such as the Keysight M9536A Embedded Controller) to enumerate the chassis before all of the individual modules are ready and therefore not enumerate them. If you have a situation where Keysight Connection Expert and/or the Windows Device Manager consistently do not find specific instrument modules when the chassis powers up, increase the module initialization time. Refer to the Wait time setting in [“ESM PCIe Upstream Connection Settings”](#) on page 48.

While the power sequencing shown above doesn't apply to an embedded controller (because an embedded controller and chassis are powered simultaneously), an embedded controller must also be restarted (after Windows starts) if the chassis configuration was changed in any way while the chassis and embedded controller were turned off.

To Power Down the Chassis

For routine power-down or to cycle power to the chassis, press the chassis **ON/STANDBY** switch. The main chassis fans will gradually drop in speed to off, and the PSU fans will gradually return to idle speed as the PSU cools. This is normal.

CAUTION

If you are using an embedded controller such as the Keysight M9536A, always shut down the Windows operating system before pressing the chassis ON/STANDBY switch.

Also, ensure that the embedded PC never goes into sleep or hibernate mode. It is possible for the PC to lose its chassis enumeration.

CAUTION

For routine power-down, do not use the circuit breaker to turn the chassis off. Doing so interrupts power to the power supply fans, which could shorten the life of the PSU. Use the front panel On/Standby switch to power down the unit, and allow the PSU fans to return to idle before removing power from the chassis.

Once the chassis has cooled, you may isolate the chassis from AC power as needed. This is usually done by opening the circuit breaker.

Chassis Firmware, IVI Driver, and IO Libraries Matrix

The following table lists the various chassis firmware versions, IVI software versions, and IO Libraries versions shipped with the Keysight M9502 and M9505A AXIe chassis.

Approximate chassis shipment date	AXIe Chassis Firmware Version	AXIe Chassis Driver (IVI) version	IO Libraries Suite Minimum Version	IO Libraries Suite Version the chassis firmware or drivers were released with
May, 2011	1.3.8 (actually 1.3.08)	1.1.1.1	16.0	16.0
December, 2011	1.3.23	1.1.1.1	16.0	16.1 Update 1
May, 2012	1.3.23	1.2.1.x	16.2	16.2
July 2012	1.3.37	1.2.1.x	16.2	16.2
December 2013	1.3.38	1.2.1.x	16.2	16.3 Update 2
January 2014	1.3.110.0	1.2.1	17.1	17.1
December 2021	2.1.5 (for shmm 700) 1.3.46 (for shmm 500)	1.4.4.1	18.2	18.2

CAUTION

If you are using an embedded controller such as the Keysight M9536A, always shut down the Windows operating system before pressing the chassis ON/STANDBY switch.

Also, ensure that the embedded PC never goes into sleep or hibernate mode. It is possible for the PC to lose its chassis enumeration.

Always use the latest version of chassis firmware, IVI and LabVIEW drivers, and IO Libraries Suite to get the best performance and latest features. For multiple chassis support, use IO Libraries 16.3 update 1, or later. Refer to the Note on page 1 of this manual for upgrading information.

Safety-Related Specifications

This section provides a partial set of safety-related Specifications for the Keysight M9502A and M9505A AXIe chassis, to ensure safe startup. Complete specifications are included in the Keysight *M9502A/M9505A Data Sheet*.

Regulatory

Safety	
Conforms to the following:	<p>Complies with the essential requirements of the European Low Voltage Directive as well as current editions of the following standards (dates and editions are cited in the Declaration of Conformity):</p> <ul style="list-style-type: none"> - IEC/EN 61010-1 - Canada: CSA C22.2 No. 61010-1 - USA: UL std no. 61010-1
EMC	
Conforms to the following:	<p>Complies with the essential requirements of the European EMC Directive and the UK Electromagnetic Compatibility Regulations 2016 as well as current editions of the following standards (dates and editions are cited in the Declaration of Conformity):</p> <ul style="list-style-type: none"> - IEC/EN 61326-1 - CISPR Pub 11 Group 1, class A <p>CAUTION: This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.</p> <ul style="list-style-type: none"> - AS/NZS CISPR 11 - CAN ICES/NMB-001(A) <p>This ISM device complies with Canadian ICES-001. Cet appareil ISM est conforme a la norme NMB-001 du Canada.</p>

Operating Conditions

Temperature	Humidity	Altitude
0°C to 50°C	<p>*Maximum Relative Humidity (non-condensing): 95%RH up to 40°C, decreases linearly to 57%RH at 50°C*</p>	up to 3000 meters

* From 40°C to 50°C, the maximum% Relative Humidity follows the line of constant dew point

WARNING

M9502A and M9505A are rated as a Pollution Degree 2, Installation Category II. Indoor use only.

Chassis Weight

Chassis	Weight (as shipped, no modules)	Weight (maximum, all slots filled)
M9502A	7.7 kg	15.7 kg
M9505A	13.3 kg	33.3 kg

AC Power Supply Requirements

	M9502A	M9505A (Serial Number TW51150212 and earlier)	M9505A (Serial Number TW51160201 and later)
Operating voltage range:	100-240VAC	100-120VAC	200-240VAC
Input frequency range:	50-60 Hz	50-60 Hz	50-60 Hz
Input power consumption:	800 VA	865 VA	1350 VA
Overcurrent protection:	auto recovery	auto recovery	auto recovery
Efficiency (typical):	85-90%	85-93%	85-93%

Chassis Power Dissipation

Airflow	Direction
Slot airflow direction	Right to left
Chassis cooling intake	Right side of chassis
Chassis cooling exhaust	Left side of chassis
Power dissipation, per instrument slot	200W maximum* see table below

DC Power Supply Output

	M9502A	M9505A (Serial Number TW51150212 and earlier)	M9505A (Serial Number TW51160201 and later)
DC Output	50V	52V	52V
Total DC Power	520W	100VAC - 120VAC: 680 W 200VAC - 240VAC: 1020 W*	100-240VAC: 1020W*

* M9505A configurations that consume more than 850W (200-240V) or 400W (100-120V) total power across all 5 slots may experience occasional system reset if installed in environments prone to line voltage dropouts in excess of 20ms. In such an event, the PC controlling the chassis will require a restart or reboot. To avoid system resets due to line dropouts, use an uninterruptible power supply.

WARNING

This instrument has auto-ranging line voltage input, be sure the supply voltage is within the specified range and voltage fluctuations do not to exceed 10 percent of the nominal supply voltage.

Related Documentation

The documentation listed below can be found on the M9502-10001 *Software and Product Information* CD. Note that you must specifically request this CD when you ordered your chassis. The CD covers both the 2-slot and 5-slot AXIe chassis, and includes.

- M9502A/M9505A AXIe Chassis Startup Guide

Provided with each new chassis in print, this manual is also provided in PDF.

- M9502A/M9505A AXIe Chassis User Guide

This printable PDF document. A complete guide for configuring, operating, and troubleshooting the chassis.

- Help file for the Keysight M9502A/M9505A IVI-C and IVI-COM device drivers
- The interactive help provides instruction for programming the chassis using Microsoft development environments.
- Help file for the Keysight M9502A/M9505A LabVIEW G device drivers. The interactive help provides instruction for programming the chassis using National Instruments LabVIEW.
- Keysight M9502A/M9505A Data Sheet.

The Data Sheet contains complete physical and electrical specifications for the chassis.

Product specifications, available accessories, firmware and software may change over time. Please check the Keysight website at www.keysight.com/find/axie-chassis for the latest updates to the product software, Guides, Help files and Data Sheets.

Product Warranty

To find warranty information on your M9502A or M9505A AXIe chassis, go to www.keysight.com/find/warranty and enter your model number (M9502A or M9505A) in the **Product Number** field, and enter the serial number from the chassis rear panel in the **Serial No.** field.

2 Chassis Installation

This chapter begins where the Startup Guide leaves off, and provides the detailed procedures for module installation and removal, bumper removal, rack mounting, and module software installation.

Planning the Installation	22
Basic Chassis Verification	22
Complete Installation	22
Installing Modules	23
To Remove a Filler Panel Module	24
To Install a Module	24
To Remove a Module	28
Mounting the Chassis	29
Environmental and Power Considerations	29
Rackmounting the Chassis	29
Setting Up a Host PC	34
To Install Module Soft Front Panel and Device Drivers	34
Verifying Operation with Modules Installed	35
Using the M9536A Embedded Controller LAN Ports	36
Using Multiple Chassis	42

NOTE

IMPORTANT: The installation and setup information in this manual is generic. Some AXIe modules and systems require a different installation and setup procedure than described in this manual. Refer to the installation documentation supplied with your AXIe module and or system for detailed installation information.

WARNING

Safety of any system incorporating the equipment is the responsibility of the assembler of the system.

Planning the Installation

Basic Chassis Verification

The *M9502A/M9505A AXIe Chassis Startup Guide*, provided in print and on CD with each chassis, includes a step-by-step procedure to connect the chassis to a host PC and establish basic LAN communication with the chassis using the built-in Web Interface. Keysight recommends you follow the Steps in the *Startup Guide* before proceeding. You may also obtain the latest *Startup Guide* at www.keysight.com/find/axie-chassis.

To verify basic chassis operation, it is not mandatory to install modules, mount the chassis, or interconnect to other chassis.

Complete Installation

After basic chassis operation is verified, you can complete the installation:

Install Modules Install the instrument modules in the chassis (see [page 23](#)). If you'll be rackmounting the chassis, it is easiest to remove the bumpers (see [page 30](#)) before installing modules.

Mount the Chassis If required, rackmount the chassis using an available hardware kit. You will need to remove the bumpers before rackmounting the chassis. See [page 29](#) for instructions; this section also provides considerations for benchtop use.

Make MultiFrame or Multiple Chassis Connections You may interconnect two or more AXIe chassis. For more information, see ["Using Multiple Chassis"](#) on page 42.

Once Chassis Are In Place:

Set Up a Host PC Reconnect the chassis to the host PC (complete instructions are in the *Startup Guide*).

NOTE

IMPORTANT: The installation and setup information in this manual is generic. Some AXIe modules and systems require a different installation and setup procedure than described in this manual. Refer to the installation documentation supplied with your AXIe module and or system for detailed installation information.

Install Software You should have already installed the chassis device drivers and Keysight IO Libraries Suite on your host PC. You should now install any device drivers or Soft Front Panel software required for your installed modules. See [page 34](#).

Verify Operation Verify that the chassis powers up correctly and that Keysight Connection Expert recognizes the chassis configuration and installed modules (see [page 35](#)).

Installing Modules

The AXIe chassis accept modules conforming to the single slot, 1U AXIe standard. These may include:

- AXIe instrument or instrument hub* modules
- AXIe embedded controller* module
- AXIe filler panel modules

* If used, a hub or controller module must be installed in slot 1

The insertion and removal procedures are the same for the 2-slot and 5-slot chassis, and for all module types except filler panels.

CAUTION

Static Electricity—The components and connectors on modules are sensitive to static electricity. To minimize electrostatic damage, take the necessary anti-static precautions. Both chassis provide a grounding terminal, to which you can connect a wrist strap. To locate this terminal, see “[M9502A 2-Slot AXIe Chassis at a Glance](#)” on page 4 and “[M9505A 5-Slot AXIe Chassis at a Glance](#)” on page 6.

Empty Slots—Except for performing initial chassis verification or troubleshooting, do not operate the chassis with empty slots. Always insert a filler panel module or instrument module into empty slots. This is especially important for the slots on either side of an instrument module. This allows proper air flow and cooling, and provides EMI shielding for the chassis and installed components. Leaving slots empty can increase fan speed, raise ambient noise, overheat components, and shut down modules.

ESM—The Embedded System Manager is integral to the operation of the chassis. Except for troubleshooting purposes, do not remove the ESM.

Hot Swap—AXIe does not explicitly support hot swap for instrument modules. Keysight recommends fully powering down the chassis before installing or removing modules

Embedded Controller Module—Manually initiate a graceful shutdown of the controller operating system and power off the chassis before removing the module.

The chassis is shipped with filler panel modules in all but Slot 1; you may need to remove filler panels from covered slots.

To Remove a Filler Panel Module

- 1 Power down and unplug the AXIe chassis.
- 2 Fully loosen the captive retaining screws on both sides of the filler panel.

CAUTION


Ensure you fully loosened the captive module retaining screws before trying to extract any module. If you attempt to pull the module out by the screws (for filler panels) or by using the extraction handles (other modules) with these screws still engaged, damage to the chassis or module could result.

- 3 Grasp the panel by the two retaining screws, and slide it out of the chassis.


To Install a Module

- 1 Power down and unplug the AXIe chassis (see [“To Power Down the Chassis”](#) on page 15).
- 2 Plan slot usage. If you are using an embedded controller module, it must be in Slot 1. If there are modules that will be removed often, insert them into the topmost slots.

- 3 Locate the (left and right) guide rails for each slot. The example below shows the right side guide rails in the M9505A with all slots empty; typically one or more will be covered. The rails on the M9502A are identical, just fewer.

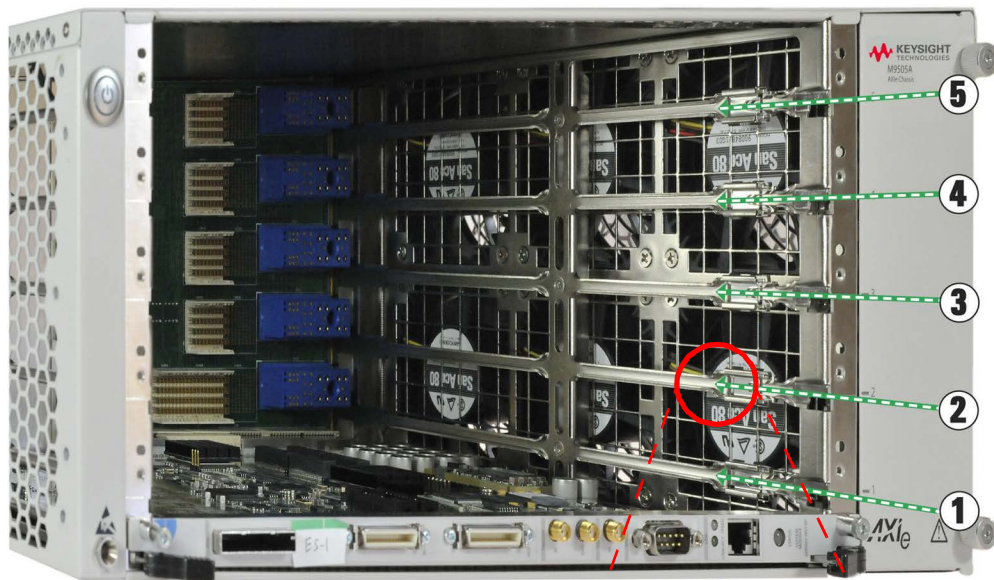

Spring guides center the module's PCB at the entry of the guide rail

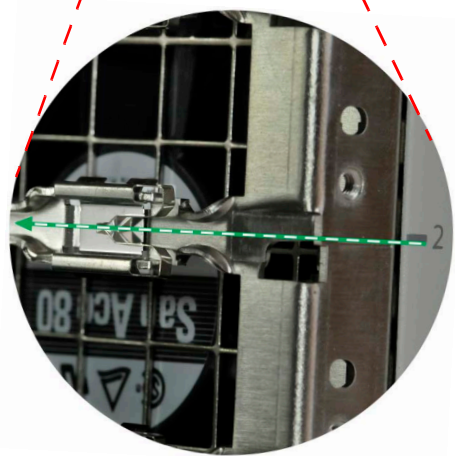


The illustrations below show the M9502A, but apply to both chassis.

- 4 Align the module's circuit board with the guide rails on both ends of the chassis. If the blade has metal plates covering the board, be sure to insert the circuit board and not the metal plates into the rails. Slide the board

gently into the two rails. If the fit is tight, slide the board back out and recheck alignment.



- 5 Locate the insertion/extraction handles at each side of the module's front panel. Extend the ends of both handles, by pulling them inwards towards each other; the plastic handle end slides about 1 cm on the metal handle shaft. Then fully open the handles by pivoting them out towards you until they are perpendicular to the front panel. The left handle is shown below, from the top view, correctly extended.

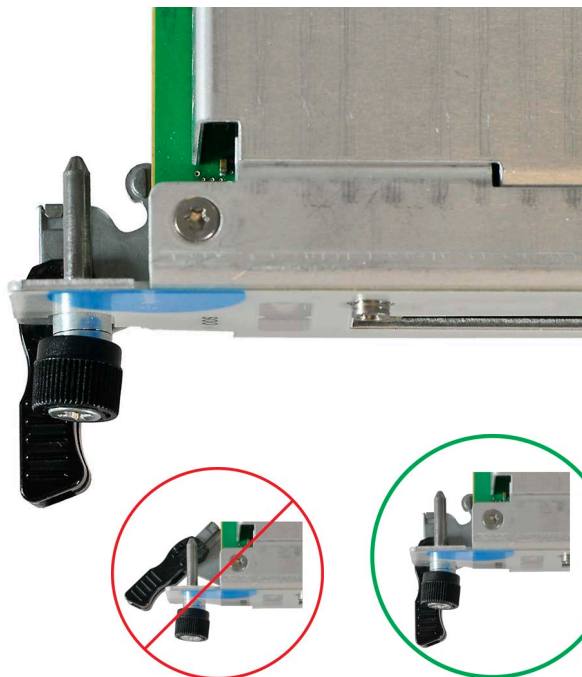

If either handle is misaligned, you will not be able to properly install the module.

- 6 Slide the module completely into the chassis. When the module's backplane connectors contact the chassis backplane, you will feel resistance and the


two handles will begin to close toward each other. The module's faceplate will be about 1 cm from the chassis front panel.



- 7 Continue nudging the module faceplate gently but firmly with your thumbs, until the handles are pressed up against the chassis and the module's front panel lies flush with the chassis' front panel. This seats the module firmly in the chassis backplane. If necessary, gently press inward (toward the chassis) on the handles to ensure full insertion.



- 8 Tighten the captive retaining screws at both sides of the module.

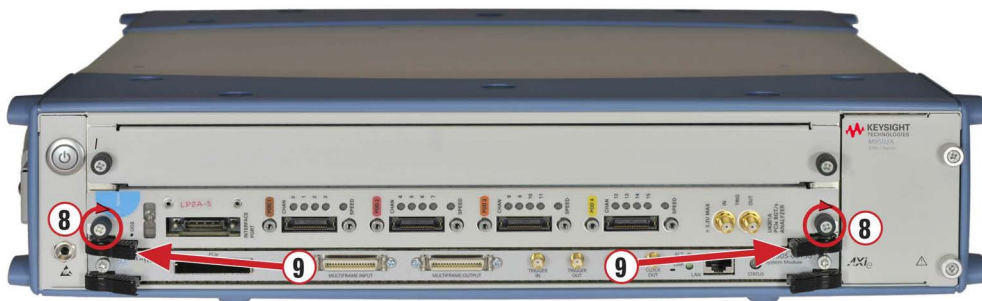

CAUTION

Modules are grounded through the chassis. Tighten the module retaining screws to ensure a proper ground connection.

- 9 Retract the handle ends by sliding them outward on their metal shafts, away from each other, toward the chassis edge; this secures them out of the way of test connections.
- 10 Repeat steps 4 through 9 for additional modules, as needed. Ensure that each slot has an instrument or filler panel module installed.
- 11 Plug in and power up the AXIe chassis. Verify that the chassis fans are operating and free of obstructions that may restrict airflow.


To Remove a Module

The instructions below apply to all module types. The Embedded System Module (ESM) has the same extraction handles and retaining screws as instrument modules. If you should ever have to remove the ESM, follow the instructions for instrument modules below.

- 1 Power down and unplug the AXIe chassis (see [page 15](#)).
- 2 Fully loosen the captive retaining screws on both sides of the module.

CAUTION


Ensure you fully loosened the captive module retaining screws before trying to extract any module. If you attempt to pull the module out by the screws (for filler panels) or by using the extraction handles (other modules) with these screws still engaged, damage to the chassis or module could result.

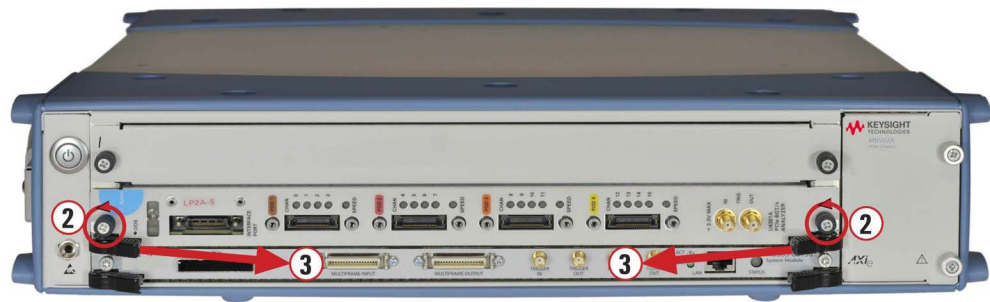

- 3 For a filler panel module, grasp the panel by the two captive retaining screws, and slide it out of the chassis.

For all other modules, locate the insertion/extraction handles at each side of the module's front panel. Extend the plastic ends of both handles by sliding them outward on their metal handle shafts, inwards towards each other.

- 4 Open the handles by pivoting them out towards you, away from the chassis. Place each thumb at the inside of the handle, forefinger outside the handle, and rotate the handles with your thumbs. When the handles are perpendicular with the chassis, stop. The module should now be unseated the module from the chassis backplane and its faceplate from the chassis front panel.

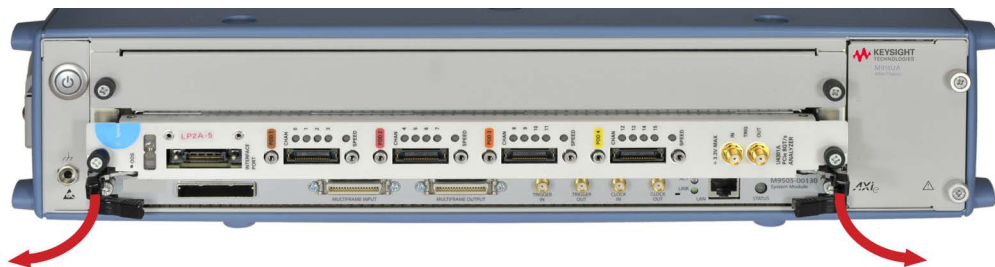

Grasp the levers to slide the module out of the chassis.

Mounting the Chassis

Environmental and Power Considerations

Consider your anticipated chassis weight (with modules installed), power and ventilation requirements, benchtop use and rackmounting options to ensure safety and optimize access to test and control instrumentation.

Weight The 2-slot chassis weighs 7.7 kg (17 lbs), including ESM but with no other modules installed. With two instrument modules, it can weigh 15.7 kg (35 lbs).

The 5-slot chassis weighs 13.3 kg (29 lbs) with ESM, and can weigh 33.3 kg (73 lbs) fully loaded. It is typically used rackmounted, but can also be used on the bench, with proper support and ventilation.

AC Input The chassis will operate on 100–240VAC, with input frequency from 50–60 Hz. Maximum input power consumption is 800 VA for the M9502A, 1280 VA for the M9505A.

WARNING

Avoid overloading an electrical circuit. Ensure your power supply matches the AC Input requirements listed above.

In case you need to power down the chassis in an emergency, make sure that you have clear and quick access to the primary disconnect. If the chassis is rackmounted, this primary disconnect can be a power system on the rack or the detachable cord.

Ventilation The chassis is designed to dissipate 200W per instrument slot. Depending on load, the chassis and power supply fans may exhaust significant heat. Whether used on the benchtop or rackmounted, operate in a well ventilated environment and allow 2" (5 cm) clearance around both sides of the chassis.

CAUTION

Do not block the vent holes on the chassis. This overheats and damages components. Leave a gap of at least 2" (50mm) around all vent holes and fan exhaust areas.

Rackmounting the Chassis

An optional rack mount kit is available from Keysight for each chassis. The kits include mounting instructions.

Description of Parts Kit	Keysight Part Number
2-Slot Chassis Rackmount Kit	Y1225A
5-Slot Chassis Rackmount Kit	Y1226A

Installed Carry Handles and Bumpers

Both the 2-slot and 5-slot chassis are shipped with carry handles and bumpers installed for portability and desktop use. For rackmounting, the carry handles and bumpers must first be removed. Tool needed:

- #2 Phillips driver for M9502A
- #1 and #2 Phillips drivers for M9505A

NOTE

Save all screws, bumpers and carry handles. Reinstall them if you remove the chassis from the rack to make it portable or for desktop use or if you ever need to ship the chassis.

CAUTION

If you have been using the chassis with modules and bumpers installed, you should remove all modules (including the ESM) before removing the bumpers. This will make handling the chassis easier and reduce chances of damaging modules. See [“To Remove a Module”](#) on page 28.

CAUTION


On both the M9502A and M9505A chassis, do not attempt to install the carry handles without the front and rear bumpers. Do not install handle screws without handle and bumpers installed. Handle screws are too long without the other components installed and could result in damage to the chassis. If you remove the chassis from a rack, you should reinstall both the front and rear bumpers and the carry handles

To Remove the Carry Handle and Bumpers from the M9502A

- 1 The 2-slot chassis has a single carry handle, which must be removed before the plastic bumpers. Remove the two #2 Phillips round head screws securing the handle.




- 2 Remove the two #2 Phillips round head screws from each side of both bumpers (8 screws total)

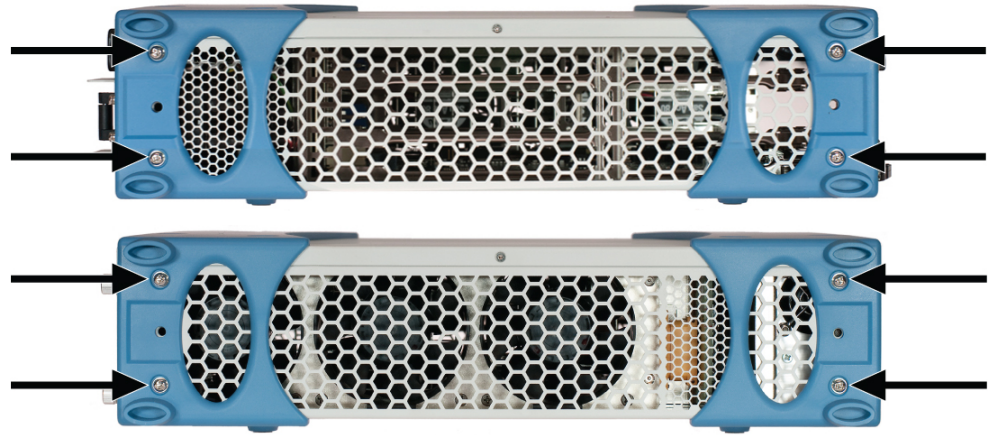


- 3 Pry the bumpers off the chassis.

To Remove the Carry Handles and Bumpers from the M9505A

- 1 The 5-slot chassis has two carry handles, which must be removed before the plastic bumpers. Remove the two #2 Phillips round head screws securing each handle.
- 2 Remove the two #2 Phillips round head screws from each side of both bumpers (8 screws total).

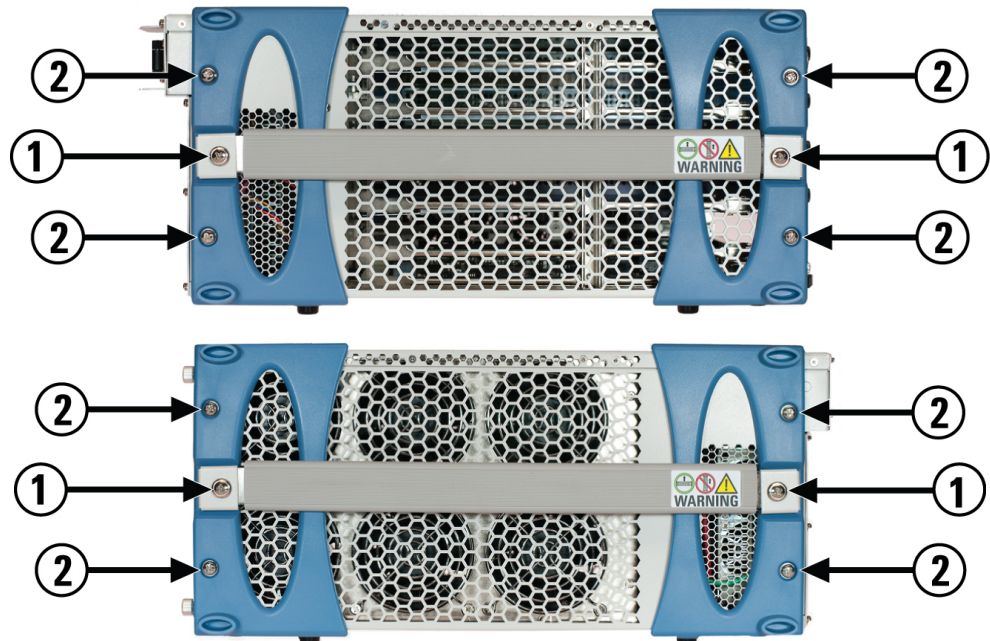


- 3 Remove the three #1 Phillips flat head screws from the top of each bumper (6 screws total).

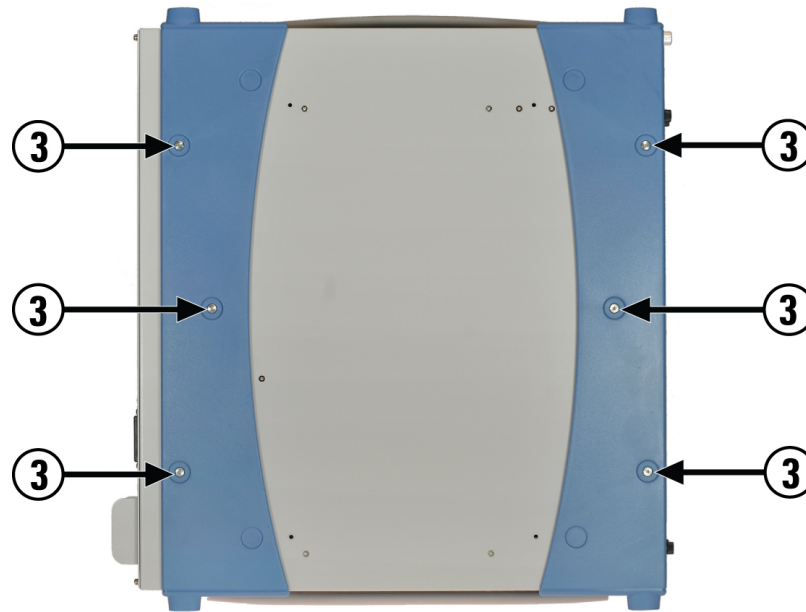

- 4 Carefully turn the chassis over onto its top.
- 5 Refer to the photograph on the next page. Remove the four plastic feet from the bottom of each bumper (8 feet total). Each foot is attached to the chassis through the bumper with a small #2 Phillips screw retained at the back of the foot with a plastic washer. Loosen each screw just enough to disengage from the chassis; the foot, screw and washer will remain intact.

Install the instrument so that the detachable power cord is readily identifiable and is easily reached by the operator. The detachable power cord is the instrument disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument. The front panel switch is only a standby switch and is not a LINE switch. The unit is also equipped with a circuit breaker in the rear of the unit. This switch also removes power from the instrument but is not considered the disconnecting device.

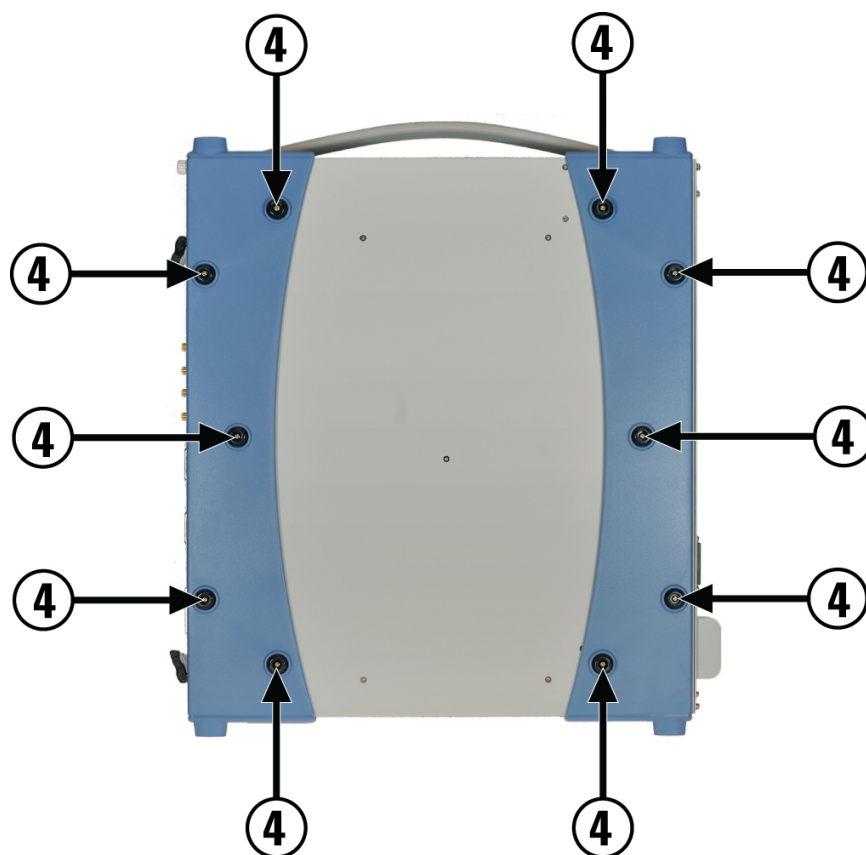

6 Slide the bumpers off the chassis.

Reinstalling the Bumpers and Carry Handles

If you remove the chassis from the rack to make it portable or for desktop use or if you ever need to ship the chassis, reinstall the front and rear bumpers and carry handles. Reverse the previous procedures to install the bumpers and handles.

NOTE

A thread-lock screw must be used to secure the handles to the chassis. A new handle screw kit (M9502-80011) is available for use with both chassis. The screws are now 14mm long. Tighten the handle screws to 25kgf.cm (21.8 in-lbs).

CAUTION

On both the M9502A and M9505A chassis, do not attempt to install the carry handles without the front and rear bumpers. Do not install handle screws without handle and bumpers installed. Handle screws are too long without the other components installed and could result in damage to the chassis. If you remove the chassis from a rack, you should reinstall both the front and rear bumpers and the carry handles

Setting Up a Host PC

Following the *M9502A/M9505A AXIe Chassis Startup Guide*, you should have selected a host PC, made physical connection to the chassis, and communicated with the chassis using its Web Interface. You may have then disconnected the host PC from the chassis in order to install modules or mount the chassis. Re-establish that connection, per the *Startup Guide*.

NOTE

If you find that your AXIe chassis driver is no longer able to connect, check your host controller's Network Adapter settings to make certain that the related NIC card has not been disabled.

CAUTION

Do not enable the Microsoft Windows sleep mode on the host PC. The PC may not have proper chassis enumeration when it wakes up and unpredictable operation may result.

To Install Module Soft Front Panel and Device Drivers

Each installed module typically requires device drivers and control software. You need not install them to verify basic chassis operation, but would logically install them on the host PC at this time. For Keysight instrument modules, load each module's *Software and Product Information* CD into the optical drive of your PC and follow the prompts. For others, consult the module provider for software requirements and instructions.

Verifying Operation with Modules Installed

In the M9502A/M9505A AXIe Chassis Startup Guide, you should have verified basic power-on operation of the AXIe chassis and communication with the host PC. Subsequently, in this chapter you have installed instrument modules and perhaps rackmounted the chassis. Then you have reconnected the host PC, and loaded chassis and module software drivers. Reverify that Connection Expert communicates with the chassis and installed modules.

NOTE

The LAN connection to the ESM provides communication to the chassis only -- chassis firmware updates, web interface to monitor/control the chassis, etc. It does not provide communication with individual AXIe modules. Use PCIe to control AXIe modules.

- Power up the chassis (solid green status light on the ESM).
- Reboot the host PC. This allows the host PC's BIOS to recognize the PCIe devices in the chassis.
- You may need to run the appropriate Add Hardware process in Windows for the host PC's operating system to correctly recognize and enumerate modules on the PCIe bus.
- Establish chassis communication with Keysight Connection Expert.
- Keysight Connection Expert should recognize installed modules, and they should be listed on the chassis Web Interface Module Configuration Page.
- After driver installation is complete, restart your PC. The Ethernet Controller **Found New Hardware Dialog** should no longer appear.

Using the M9536A Embedded Controller LAN Ports

If you installed a Keysight M9536A Embedded Controller in the Keysight AXIe chassis (M9502A or M9505A), there are a total of three LAN ports accessible on the front panels -- two on the M9536A controller and one on the Embedded System Module (ESM). Windows Device Manager shows a total of five (5) individual Network Interface Cards (NICs); one is not used and one connects to the chassis backplane.

CAUTION

Changing the LAN port connection or removing the LAN cable, may cause Keysight Connection Expert to lose track of LAN-enabled instruments. Reboot the AXIe chassis to restore the complete list of LAN-enabled instruments. Read the following for details.

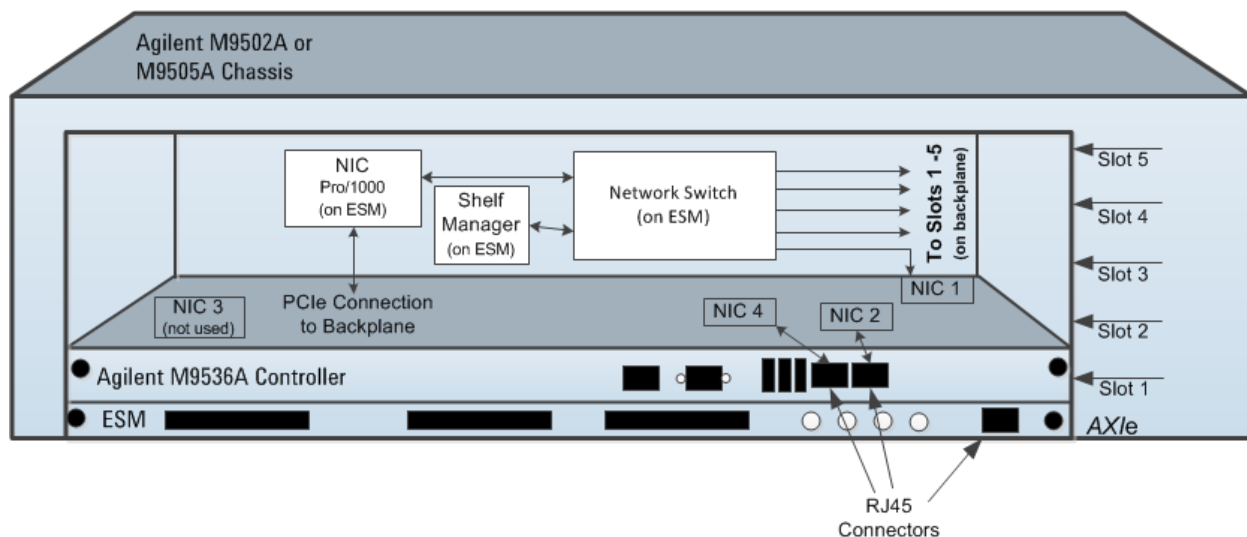


Figure 1 NIC ports reported for the M9536A (NIC 3 is not used)

NIC numbers correspond to the numbering in **Figure 1** above. Note that NIC 3 is not used. NIC numbering on your controller may be different.

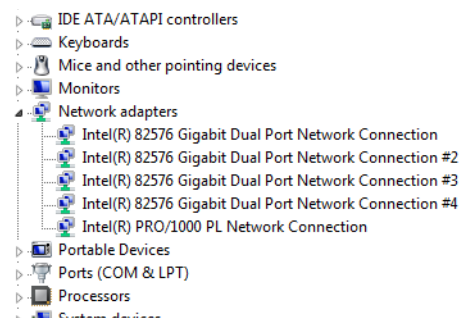


Figure 2 Windows Device Manager showing Network Connections

This section provides overall guidance on selecting and using the M9536A LAN ports. The controller uses the Keysight IO Libraries configuration file to keep track of all instrument connections. Any change to LAN connections after running Connection Expert (adding, removing, or changing LAN cable connections) may cause a change in LAN address and therefore cause Connection Expert to lose track of instruments. If your application programs rely on a specific IP address, these programs may cease to operate if you change LAN cable connections.

Changes to the ESM PCIe or LAN connection are only detected as the ESM is powered up. Perform the following steps when you change either of these two connections:

- 1 Within Keysight Connection Expert, delete the LAN interfaces (right click on the interface then select **Delete**). This causes Connection Expert to forget all instrument history.
- 2 Shut down Windows on the M9536A Embedded Controller.
- 3 After Windows shuts down, power down the AXIe chassis using the chassis power button.
- 4 Make the desired cabling change to the ESM PCIe and/or LAN connections.
- 5 Power up the AXIe chassis using the chassis power button.
- 6 Run Keysight Connection Expert and verify that the LAN interfaces are operating correctly and that Connection Expert finds the AXIe chassis.

NOTE

With Keysight IO Libraries 16.2 (and later versions) Keysight Connection Expert should automatically identify the AXIe chassis. With Keysight IO Libraries version 16.1, you may need to start Connection Expert, then power down the controller and chassis and reboot them in order for Connection Expert to identify the AXIe chassis.

Recommendations

As a general rule, connect a network LAN cable to the ESM's LAN port and connect LXI instruments to the M9536A's LAN ports. While other configurations are viable, this configuration provides the fastest and most consistent reporting in Keysight Connection Expert. Refer to [Figure 3](#).

- Where you have the network and instruments connected when the chassis and controller first power on determines how quickly Keysight Connection Expert locates network instruments. If necessary, shut down the controller and chassis and reboot.
- If you move a LAN cable while chassis power is applied, Connection Expert may not find all of the instruments available on the network.

For example, if the LAN cable is connected to the ESM when power is first applied to the chassis and subsequently moved to one of the two LAN ports on the controller (while the chassis is still powered on), Connection Expert may only find the M9536A controller and AXIe modules installed in the chassis. Shut down the controller and chassis and reboot to restore Connection Expert's ability to locate other network instruments.

- Connect external LAN-enabled instruments (LXI instruments) to the M9536A controller LAN ports. This allows Keysight Connection Expert to automatically find the instruments. These instruments will have a local LAN IP address or private network range.

LXI instruments may be connected to the ESM's LAN port but Connection Expert may not automatically find them when these instruments are not located on the same LAN subnet range. However, instruments may be added manually using Connection Expert's Add Address feature.

- If you are using an external LAN router or switch, cycling power on the chassis may cause the IP address of the chassis ESM and controller to change. Therefore you may want to set a static IP address. Refer to your particular network device's documentation for information on setting static IP addresses.

With the Keysight M9536A Embedded Controller installed in the AXIe chassis, the x8 PCIe connection on the ESM module is disabled. However, the PCIe cable detect mechanism may reset the hardware when attaching a PCIe cable. This hardware reset may change the IP address.

- The chassis must be power cycled in order to restart the ESM's Shelf Manager, which will allow the Shelf Manager to respond to the new LAN configuration. Absent power cycling the chassis, the ESM will contain old (pre-connection-of-LAN) network information.

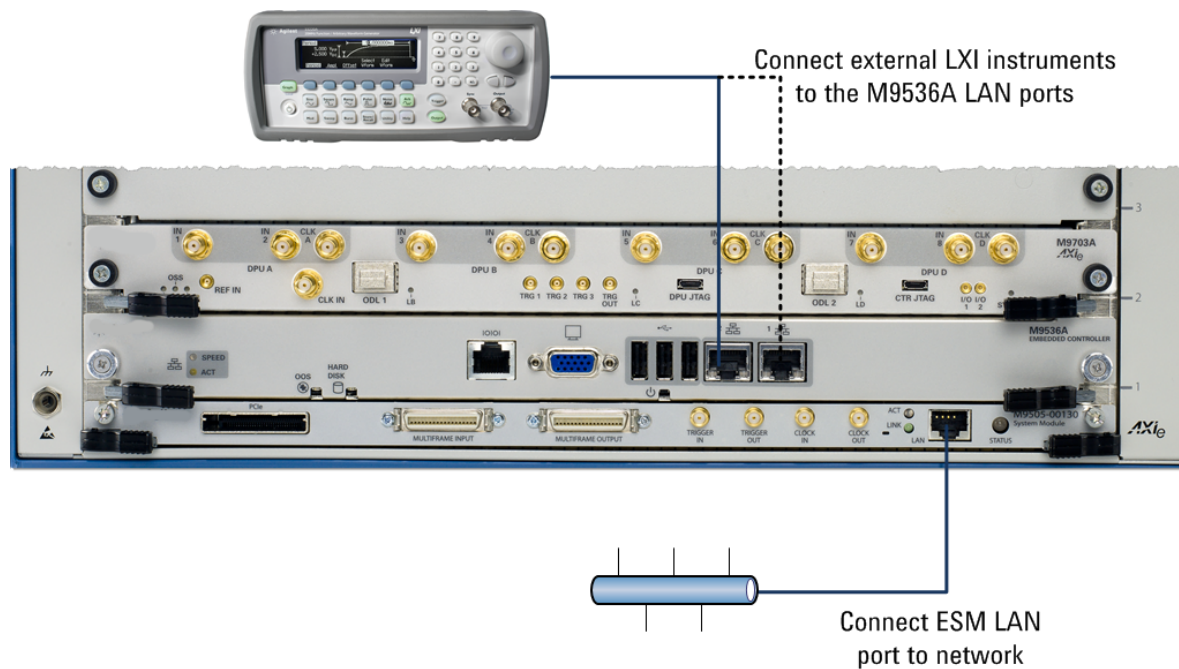


Figure 3 Recommended LAN Connections

The above figure shows the recommended LAN connections to the AXIe chassis/ESM and the M9535A. Two other possible LAN connections are shown in the following figure. Note that you may need to manually add instrument IPO addresses to Keysight Connection Expert.

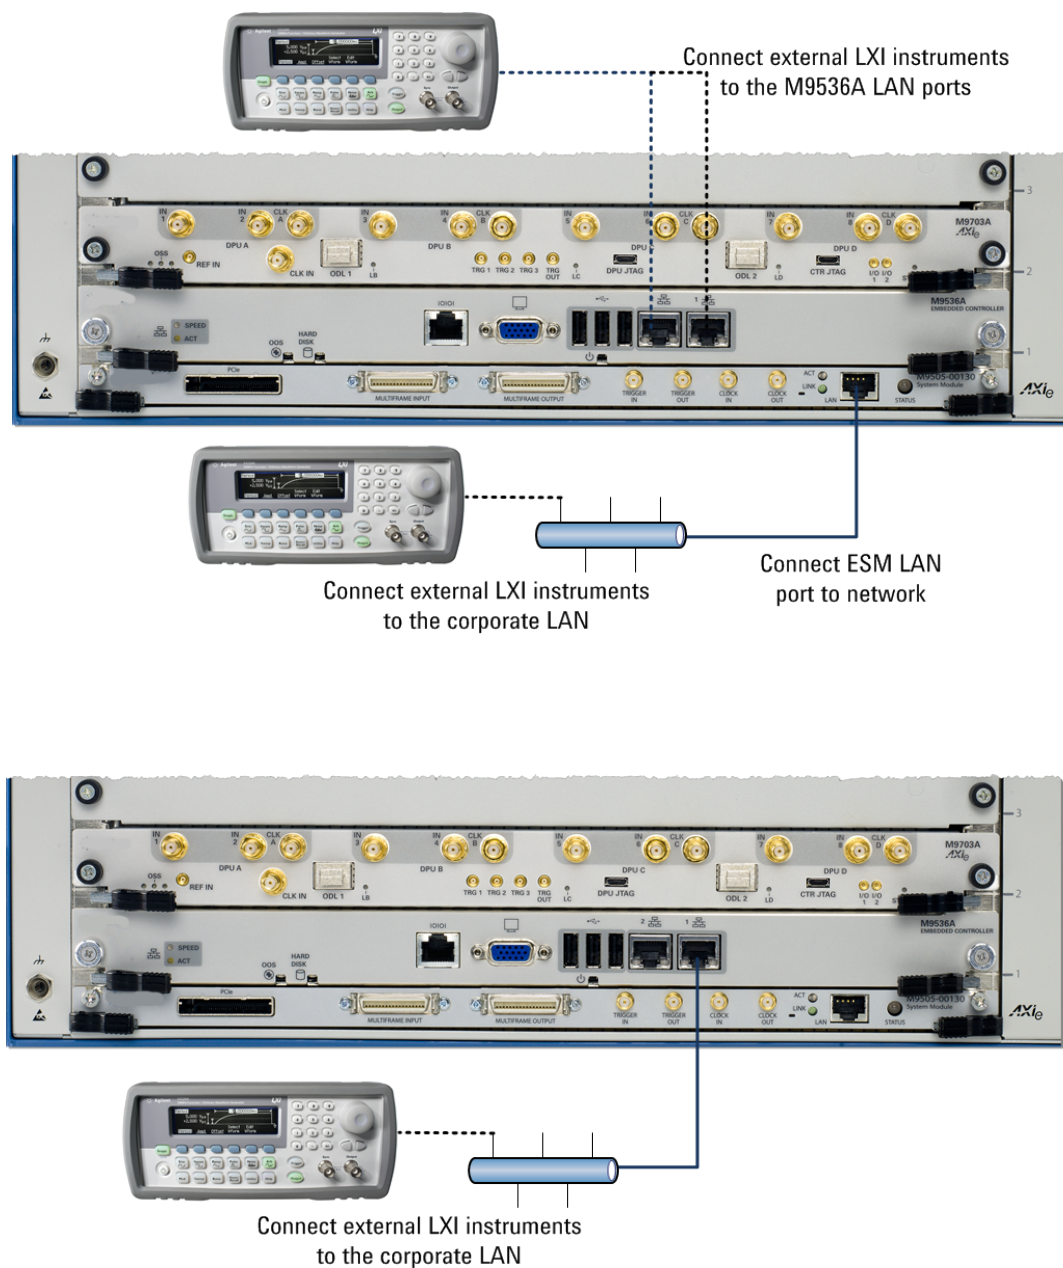


Figure 4 Possible Alternate LAN Connections. You may need to manually add instrument IP addresses to Keysight Connection Expert. (see text)

Using an external controller

Changes to the ESM PCIe or LAN connection are only detected as the ESM is powered up. Perform the following steps when you change either of these two connections:

- 1 Within Keysight Connection Expert, delete the LAN interfaces (right click on the interface then select **Delete**). This causes connection Expert to forget all instrument history.
- 2 Turn off the remote host controller.
- 3 Power down the AXIe chassis using the chassis power button.
- 4 Make the desired cabling change to the ESM PCIe and/or LAN connections.
- 5 Power up the AXIe chassis.
- 6 Power on the remote host controller.
- 7 Run Keysight Connection Expert and verify that the LAN interfaces are operating correctly and that Connection Expert finds the AXIe chassis.

Using Multiple Chassis

There are several possible ways to configure multiple M9502A 2-Slot and M9505A 5-Slot AXIe chassis systems. You can also combine AXIe and PXIe chassis (such as the M9018A PXIe chassis) into multiple chassis configurations. These multiple chassis configurations are controlled by a single host controller. The host controller can be either a PXIe Embedded Controller (such as the Keysight M9036A) or a desktop or rack-mounted computer. For detailed configuration and installation information, refer to Keysight's Multiple PXIe and AXIe Chassis Configuration tool. This tool is available on the M9502A/M9505A Product information CD and on line at:

www.keysight.com/find/M9502A
or
www.keysight.com/find/M9505A

How does a multiple chassis system differ from a MultiFrame system?

In both multiple chassis and MultiFrame systems, all chassis are controlled by a single controller. The differences between the two system types are:

- In a multiple chassis system, the time base and triggering for each chassis operates independently from the other chassis. You can use this type of configuration to increase the number of chassis/modules that do not require a common time base or cross triggering between chassis. For more information, refer to Keysight's Multiple PXIe and AXIe Chassis Configuration tool. This tool is available on the M9018A Product information CD and on line at:
www.keysight.com/find/pxie-multichassis.
- MultiFrame is a Keysight feature by which multiple instruments in two or more chassis are interconnected to appear as one integral instrument to the user. In a MultiFrame system, special cabling connects the time base and triggering of the primary chassis to all daisy-chained secondary chassis. These cables extend trigger and timing features to instruments not connected to the primary chassis's backplane. You can use the MultiFrame configuration to increase the number of measurement modules utilizing a common time base or cross triggering. Refer to "MultiFrame Operation" on page 89 for more information.

3 Navigating the Web Interface

This chapter provides a complete overview of the AXIe chassis Web Interface, which allows for chassis monitoring and configuration.

The Web Interface is stored in the chassis firmware, and may evolve in look and functionality as more recent versions of the firmware are developed. The examples in this manual reflect the firmware at time of product introduction.

- Launching the Web Interface 43
- Home Page 44
- Menu 45
- LAN Configuration Page 46
- Module Configuration Page 47
- Trigger Routing Page 51
- Chassis Health Page 53
- Configure Fan Control 54

NOTE

The LAN connection to the ESM provides communication to the chassis only -- chassis firmware updates, using the web interface to monitor and control the chassis, etc. It does not provide communication with individual AXIe modules. Use the PCIe connection to control individual AXIe modules.

Launching the Web Interface


The *M9502A/M9505A Startup Guide* provides detailed instructions for connecting to the chassis using Keysight Connection Expert and launching the Chassis Web Interface. Following those instructions, launch the Web Interface.

NOTE

If you have problems launching the chassis Web interface, check your browser's proxy settings. When Keysight Connection Expert launches a Web interface for a chassis, it hands off the **http://<address>** to the browser or dedicated web application. Therefore, it should not use a proxy.

Home Page

The home page displays identifying information about your chassis and LAN connection, more if you click the Advanced Information ([▼ More Information](#)) button.

**KEYSIGHT**
TECHNOLOGIES

M9505A AXIe 5 Slot Chassis
Serial number: 4234567890

Home

Module Configuration

Fan Control

E-keying


Configure LAN

Health

Trigger

Firmware Update

?



Connected to AXIe M9505A chassis
at IP address 10.72.43.249

Turn Off Front Panel Identification Indicator

Description

Model number	M9505A
Manufacturer	Keysight Technologies
Serial number	4234567890
Firmware revision	F5AX-1.3.46-0108-A002e-B14043011-CA1.5-DA1.0-E1.5
Description	M9505A AXIe 5 Slot Chassis
Host ID	PCSERNO.LK42477582
License Option	Full Range

▲ Less Information

LAN details

DNS hostname	A-M9505A-567890
mDNS hostname	A-M9505A-567890.local
IPv4 address	10.72.43.249
IPv6 addresses	[fe80::ad9c:af4b:1d31:250d]
IPv6-enabled protocols	HiSLIP, Socket
Ethernet (MAC) address	00:18:49:03:30:80
Auto-MDIX capable	Yes










Chassis
Firmware
Version
(see
page 110)



Clicking **Turn On Front Panel Identification Indicator** will cause the ESM front panel STATUS light to flash steadily; use this to quickly identify which chassis you are communicating with.

Menu


The nine buttons at left are the Web Interface's Menu:

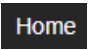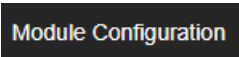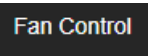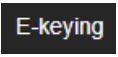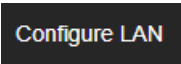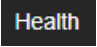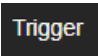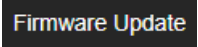	Home Page - View General Information about the chassis, such as product identification, firmware version and LAN parameters.
	Module Configuration Page - View Manufacturer, Revision / Part Number and Serial Number for the chassis frame, AXIe System Module (ASM) and any instrument modules installed in the chassis.
	Fan Control Page - Display the fan operating level for module cooling.
	E-keying Page - View the connection protocols each module has with other modules in the chassis over the backplane.
	Configure LAN Page - View network and PCIe configuration parameters of the instrument.
	Chassis Health Page - Displays read-only diagnostic information on chassis fan speed, voltage rails, and temperature sensors. It also allows you to set a minimum chassis fan speed and provides a link to update chassis firmware.
	Trigger Routing Page - View static trigger routing through the Embedded System Module (ESM), using the AXIe chassis crosspoint switch.
	Firmware Update Page - To update the chassis firmware on M9502A 2-slot and M9505A 5-slot AXIe chassis, which includes the Embedded System Module (ESM) and chassis backplane.
	Help Page - General help topics and context-based help for the current page.

We will explore each Page in the order they are listed in the menu.

LAN Configuration Page

Click the **Configure LAN** button to display the LAN Configuration page:


KEYSIGHT
 TECHNOLOGIES

M9505A AXIe 5 Slot Chassis
 Serial number: 4234567890

[Home](#)
[Module Configuration](#)
[Fan Control](#)
[E-keying](#)
[Configure LAN](#)
[Health](#)
[Trigger](#)
[Firmware Update](#)
[?](#)

Refresh

Initial releases of the AXIe chassis will have IP configuration set to Automatic; the IP Address, Subnet Mask and Default Gateway are set automatically and cannot be changed.

When you make a LAN connection between host PC and chassis ESM, and then power-on the chassis, the following process happens:

- 1 The chassis, as client, seeks a Dynamic Host Configuration Protocol (DHCP) server to set the IP configuration.
- 2 If you connected the chassis and PC to a corporate LAN, the network will provide the DHCP addresses.
- 3 If you made a direct LAN connection (physical LAN or implicit LAN connection through PCIe), the chassis reverts to link-local addressing.

NOTE

If you are having difficulty ‘finding’ a specific AXIe chassis on a network, you can search by the mDns Instrument Name, which includes the unique chassis serial number. This number is located at the rear of the chassis.

Module Configuration Page

Click the **Module Configuration** button to display the Module Configuration page. This page allows you to view the physical location and identifying information for recognized modules installed in the chassis, as well as the chassis frame and Embedded System Module.

Chassis Module Configuration

Module Slot	Product Name	Description	
5	-empty-	P/N	
		S/N	
		Revision	
		Manufacturer	
4	aTCA-6890	P/N	aTCA-6890
		S/N	7340EB3019
		Revision	0B3-008
		Manufacturer	ADLINK Technology
3	-empty-	P/N	
		S/N	
		Revision	
		Manufacturer	
2	-empty-	P/N	
		S/N	
		Revision	
		Manufacturer	
1	AXIe System Controller	P/N	M9536A
		S/N	B4A7EC1002
		Revision	A3
		Manufacturer	Agilent Technologies
Chassis			
Frame	M9505A	P/N	AG-M9505-00100
		S/N	A987EA1003
		Revision	AX5-ES2.E0M0
		Manufacturer	Agilent Technologies
ESM	ESM002-USB-AXIe-MPO	P/N	AG-M9505-00230
		S/N	A919EA1002
		Revision	ESM002-ES2.E0M0.SM4A
		Manufacturer	Agilent Technologies
		PCIe Mode	PCIe Gen 2 Enabled (SW6.2 is on)
		PCIe Rev	1.4
		PCIe Upstream Connection	<div>Active Configuration: Slot 1 (Instrument Hub) and wait 5 seconds</div> <div>New Configuration*: Slot 1 (Instrument Hub) and wait 5 seconds</div> <div>Apply New PCIe Settings</div> <div>Restore Factory Default</div>
<div>*CAUTION: Applying a new PCIe setting will take effect after the next power cycle. Use caution when not specifying auto configuration. For example, specifying "Slot 1" will always select "Slot 1" as the preferred upstream connection. See the User Guide for more details.</div>			

Note PCIe mode; either

PCIe Upstream Connection Settings, see

The above example shows an M9505A chassis with two installed modules (slots 3 and 4) and the Keysight M9536A Embedded Controller in slot 1.

ESM PCIe Upstream Connection Settings

The section for the ESM PCIe Upstream Connection displays the current PCIe configuration (called the **Active Configuration**) and allows you to change the configuration if necessary.

NOTE

You should seldom need to change the PCIe Upstream Configuration. Leave it set to Auto for the ESM to select the appropriate configuration.

New Configuration

The New Configuration field allows you to designate a PCIe Upstream Connection or designate an enumeration wait time. As a general rule, you should not need to reconfigure these; you should leave the PCIe Upstream Configuration in Auto mode.

If you do select a new PCIe Configuration and/or enumeration wait time, you must click the **Apply New PCIe Settings** button to save the changes as the new default. The changes take effect after cycling power on the chassis. To restore the factory default setting, click the **Restore Factory Default** button.

PCIe Upstream Configuration: The possible PCIe Upstream Connections are:

- **Auto:** The ESM automatically determines the upstream connection port. This is the default setting.
- **PCIe Front Panel:** The PCIe upstream connection port is the ESM PCIe connector.
- **USB Front Panel:** The PCIe upstream connection port is the USB PCIe connector. This option is available only if the Option U20 USB ESM is installed. See “[AXIe Embedded System Module \(ESM\) Option U20 with USB](#)” on page 9
- **Slot 1 (Instrument Hub):** An embedded controller (such as the Keysight M9536A) can act as a PCIe root complex when installed in slot 1 of the chassis. This is also known as the “Instrument Hub.”

Depending on your chassis configuration (ESM, embedded controller, etc.) some of the upstream connections may not appear in the pull-down menu.

Wait Time: You should not need to change the enumeration wait time. However, some AXIe instrument modules (also known as Blades) take longer to be ready for enumeration than the PXI link ready requirement of 100ms. Consequently, it is possible for some controllers (such as the Keysight M9536A Embedded Controller) to enumerate the chassis before all of the individual modules are ready and therefore not enumerate them. If you have a situation where Keysight Connection Expert and/or the Windows Device Manager consistently do not find specific instrument modules when the chassis powers up, increase the wait time (valid range is 0 to 60 seconds).

E-Keying

Scrolling down the Module Configuration page displays the E-Keying Activity information. E-Keying (short for Electronic Keying) is a process in which compatible matches over links between different modules are identified and enabled to be used. For more information on E-Keying refer to “[Electronic Keying \(E-Keying\)](#)” on page 92.

In general, you do not need to understand how E-Keying works. The E-Keying process is handled by the chassis shelf manager. The following two figures illustrate the Module E-Keying Activity display in the Module Configuration Page.

Module E-Keying Activity

This table describes the electronic keying link activity permitted by the shelf manager. A status of 'enabled' indicates an interface and associated link is permitted to be established. It does not indicate whether the link is alive and active. Modules may have many interfaces. A blank status indicates an interface is available, but not in use. Clicking on any heading will sort the table according to that column.

From Slot ▾	To Slot	Status	Interface	Link Type	Extension	Group	Channel	Port
ESM	4	Enabled	AXIE Timing (0x02)	STRIG	All STRIG links	0	8	1
ESM	4	Enabled	AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	4	1,2,3,4
ESM	3	Enabled	AXIE Timing (0x02)	STRIG	All STRIG links	0	7	1
ESM	3	Enabled	AXIE Timing (0x02)	SYNC	Instrument slot input	0	3	1
ESM	3	Enabled	AXIE Timing (0x02)	CLK100	Instrument slot input	0	2	1
ESM	3	Enabled	AXIE Timing (0x02)	FCLK	Instrument slot input	0	1	1
ESM	3	Enabled	AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	3	1,2,3,4
ESM	1	Enabled	Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	1	1
ESM			AXIE Timing (0x02)	STRIG	All STRIG links	0	9	1
ESM			AXIE Timing (0x02)	STRIG	All STRIG links	0	6	1
ESM			AXIE Timing (0x02)	STRIG	All STRIG links	0	5	1
ESM			AXIE Timing (0x02)	SYNC	System slot output	0	3	1
ESM			AXIE Timing (0x02)	CLK100	System slot output	0	2	1
ESM			AXIE Timing (0x02)	FCLK	System slot output	0	1	1
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	5	1
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	5	1,2
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	5	1,2,3,4
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	4	1
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	4	1,2
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	3	1
ESM			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	3	1,2

In the following segment, note that modules in Slots 3 and 4 (column 1 “From Slot” and column 2 “To Slot”) have an Enabled status and use the AXIE Local Bus (62 pair Local Bus). This simply states that the Shelf Manager has given the two modules permission to communicate directly (E-Keying) over the AXIE backplane local bus. Also note that both modules are enabled to use the AXIE Timing STRIG link and the PCI Express fabric.

ESM			Fabric (0x01)	PICMG 3.4 PCI Express Fabric	(PCI Express Base)	0	1	1,2,3,4
ESM			Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	5	1
ESM			Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	4	1
ESM			Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	3	1
ESM			Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	2	1
1			Update Channel (0x02)	OEM GUID-based (0xf0)		0	1	1
1			Fabric (0x01)	PICMG 3.1 Ethernet Fabric	(1000BASE-BX)	0	2	1
1			Fabric (0x01)	PICMG 3.1 Ethernet Fabric	(10GBASE-BX4)	0	2	1,2,3,4
1			Fabric (0x01)	PICMG 3.1 Ethernet Fabric	(1000BASE-BX)	0	1	1
1			Fabric (0x01)	PICMG 3.1 Ethernet Fabric	(10GBASE-BX4)	0	1	1,2,3,4
1			Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	2	1
1	ESM	Enabled	Base (0x00)	PICMG 3.0 Base 10/100/1000 BASE-T	(10/100/1000 BASE-T)	0	1	1
3	4	Enabled	AXIE Local Bus (0x01)	OEM GUID-based (0xf0)	62-pair local bus	0	2 (Right)	1
3	ESM	Enabled	AXIE Timing (0x02)	STRIG	All STRIG links	0	4	1
3	ESM	Enabled	AXIE Timing (0x02)	SYNC	Instrument slot input	0	3	1
3	ESM	Enabled	AXIE Timing (0x02)	CLK100	Instrument slot input	0	2	1
3	ESM	Enabled	AXIE Timing (0x02)	FCLK	Instrument slot input	0	1	1
3			AXIE Local Bus (0x01)	OEM GUID-based (0xf0)	62-pair local bus	0	1 (Left)	1
3			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	1	1
3			AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	1	1,2
3	ESM	Enabled	AXIE Fabric (0x00)	PCI Express Fabric	5 GT/s normal	0	1	1,2,3,4
3			Fabric (0x01)	PICMG 3.4 PCI Express Fabric	(PCI Express Base)	0	1	1
3			Fabric (0x01)	PICMG 3.4 PCI Express Fabric	(PCI Express Base)	0	1	1,2
3			Fabric (0x01)	PICMG 3.4 PCI Express Fabric	(PCI Express Base)	0	1	1,2,3,4
4	3	Enabled	AXIE Local Bus (0x01)	OEM GUID-based (0xf0)	62-pair local bus	0	1 (Left)	1
4	ESM	Enabled	AXIE Timing (0x02)	STRIG	All STRIG links	0	4	1
4			AXIE Timing (0x02)	SYNC	Instrument slot input	0	3	1
4			AXIE Timing (0x02)	CLK100	Instrument slot input	0	2	1

More information on AXIE E-Keying is available on the AXIE Consortium website:
www.axiestandard.org.


Trigger Routing Page

Click the **Trigger** button to display the Trigger Routing page. This page allows you to view and assign static trigger routing through the ESM, using the chassis *Crosspoint Switch*.

Trigger Routing on your M9505A AXIe 5 Slot Chassis

This page allows control of trigger routing connections through the crosspoint switch between the chassis backplane and external connections located on the Embedded System Module (ESM). These connections may be applied, saved as a default configuration, and later restored if necessary. For more detailed information on the trigger subsystem, see the *M9502A/M9505A AXIe Chassis User's Guide*.

Please note this page does not control signal routing on module slots. Refer to the routing setup instructions for those modular instrument products.

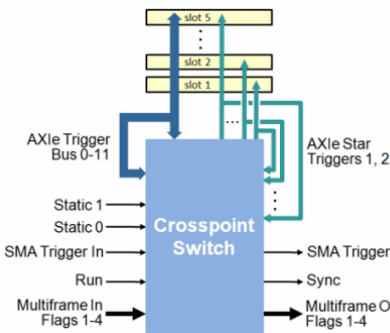

Destination To:		Output Signal	Output Enable	Input Signal	Conditions	
Chassis Internal Backplane	AXIe Trigger Bus	TRIG 0	<input type="checkbox"/>	Static 0		
		TRIG 1	<input type="checkbox"/>	Static 0		
		TRIG 2	<input type="checkbox"/>	Static 0		
		TRIG 3	<input type="checkbox"/>	Static 0		
		TRIG 4	<input type="checkbox"/>	Static 0		
		TRIG 5	<input type="checkbox"/>	Static 0		
		TRIG 6	<input type="checkbox"/>	Static 0		
		TRIG 7	<input type="checkbox"/>	Static 0		
		TRIG 8	<input type="checkbox"/>	Static 0		
		TRIG 9	<input type="checkbox"/>	Static 0		
		TRIG 10	<input type="checkbox"/>	Static 0		
		TRIG 11	<input type="checkbox"/>	Static 0		
	SYNC	<input type="checkbox"/>	Static 0	<input checked="" type="checkbox"/> Sync routed through crosspoint switch		
	AXIe Star Trigger	To Slot 1	<input type="checkbox"/>	Static 0		
		To Slot 2	<input type="checkbox"/>	Static 0		
To Slot 3		<input type="checkbox"/>	Static 0			
To Slot 4		<input type="checkbox"/>	Static 0			
To Slot 5		<input type="checkbox"/>	Static 0			
Chassis External Connectors	SMA Trigger	In			Threshold Volts: 1.65	
		Out	<input type="checkbox"/>	Static 0	Inversion: None Pulsed: None Inversion: None	
	SMA Clock	In		May be connected to a 10 MHz clock source.		
		Out	<input type="checkbox"/>			
	Multiframe Interconnect	Flag 1		Static 0		
		Flag 2		Static 0		
		Flag 3		Static 0		
		Flag 4		Static 0		

Apply Changes

Don't Apply Changes, Keep Previous Settings

Clear Form

Save Trigger Routing as Default State

Restore Trigger Routing from Default State

Restore Factory Default

The Crosspoint Switch provides the flexibility of routing many signal events from the backplane, flags or external trigger to different destinations. You can choose to enable and assign the input source for any or all signal destinations (trigger/timing resources to be output from the ESM). You can also source a logical 0 or 1 to drive any output for test purposes.

Multiple outputs may be driven from the same input, but each output can have only one input assigned. The default input for all outputs is “Static 0”, which assigns a logic 0.

These trigger bus inputs and outputs are covered in detail in [“Triggering”](#) beginning on [page 78](#).

Making Trigger Routing Changes

The Trigger Routing page provides several buttons at the bottom of the form, which allow you to apply, save, and restore trigger bus *States*, complete sets of trigger bus configuration settings. These States are stored in non-volatile RAM (NVRAM); settings do not change when you cycle power to the chassis.

NOTE

Trigger bus settings displayed in the Trigger Routing page form are not activated until you apply them.

Active State: Each time you load or refresh the Trigger Routing page, it shows the Active State (of the trigger bus).

- The displayed form allows you to make and display configuration changes, but they are not made Active until you specifically apply them.
- If you click the **Apply Changes** button, the displayed settings will be made Active (become the Active State).
- If you do not want to apply the displayed changes, do not click **Apply Changes**. You can click **Clear Form** to clear all trigger bus assignments on the form.
- If you want to restore the Active State, click the **Discard and Refresh** button.

Default State: The chassis will store a custom set of default settings, called the Default State.

- If you click the **Save as Default** button, the displayed settings will be made Active and be saved as the new Default State.
- You can always restore the form to the Default State by clicking the **Restore Form from Default** button. Then, if you click the **Apply Changes** button, the Default State will be made Active.

Factory Default State: You can always restore the form to the factory default, by clicking the **Restore Factory Default** button. Then, if you click the **Apply Changes** button; the factory default becomes the Active State.

Complete description, selection and routing instructions for the trigger bus are provided in [“Chassis Synchronization and Triggering”](#), beginning on [page 75](#).

Chassis Health Page

Click the **Health** button to display the Chassis Health page. Note that, in the example below, three fan speeds are shown as below the minimum fan speed limit.

Chassis Health

Sensors

Module Slot	Instrument	State	Sensor Readings			
5	-empty-					
	Status		ID	Type	Name	Value
4	-empty-					
	Status		ID	Type	Name	Value
3	-empty-					
	Status		ID	Type	Name	Value
2	-empty-					
	Status		ID	Type	Name	Value
1	AXIe System Controller	Active				
	Status		ID	Type	Name	Value
	Nominal		6	Voltage	+1.5V DDR-CPU1	1.54 Volts
	Nominal		7	Voltage	+1.8V CPU1	1.80 Volts
	Nominal		10	Voltage	+5.0V	5.10 Volts
	Nominal		11	Voltage	+3.3V	3.34 Volts
	Nominal		12	Voltage	+12V	12.15 Volts
	Nominal		18	Temperature	LM75 SYS Temp	57.00 degrees C
	Nominal		19	Temperature	CPU1 Temp	60.00 degrees C
	Nominal		20	Temperature	CPU2 Temp	0.00 degrees C
Chassis	5-SLOT-AXIe-MPO	Active				
	Status		ID	Type	Name	Value
	Nominal		120	Temperature	External Temp1	35.00 degrees C
	Nominal		121	Temperature	External Temp2	32.00 degrees C
	Nominal		2	Fan	Front-Lower	2436 RPM
	Nominal		3	Fan	Middle-Lower	2406 RPM
	Nominal		4	Fan	Rear-Lower	2406 RPM
	Nominal		5	Fan	Front-Upper	2466 RPM
	Nominal		6	Fan	Middle-Upper	2377 RPM
	Nominal		7	Fan	Rear-Upper	2377 RPM

Refresh Readings

Configure Fan Control

Fan Status	Normal	
Cooling Status	Normal	
Current Speed Level	42	
Dynamic Minimum Fan Level	42	
Adjust Current Speed Level and Dynamic Minimum Fan Level	40 <input type="button" value="-"/> <input type="button" value="+"/> % of maximum RPM	<input type="button" value="Apply"/>

Chassis Firmware Update

The following link opens a form to update the firmware components of this chassis. The components checked during an update are the Embedded Systems Module (ESM) and chassis backplane modules. Instrument modules are not included in this update. For updating an instrument module, please follow the directions provided by the module vendor.

[Open the Chassis Firmware Update page.](#)

This page has three sections: Sensors, Fan Control and Chassis Firmware Upgrade. Sensor monitoring is explained in detail in [“Shelf Management Functions”](#) on page 68. To update the chassis firmware, see [“Updating the Chassis Firmware”](#) on page 110.

Configure Fan Control

The minimum chassis fan speed is approximately 2200 RPM; the maximum fan speed is approximately 6000 RPM. Using a range of 35 to 100 (percentage of maximum), you can manually set the minimum speed you want the fans to operate at – 35 means the minimum fan speed of approximately 2200 RPM and 100 is the maximum fan speed of approximately 6000 RPM. Each increment is approximately 58 RPM.

NOTE

Do not attempt to set the fan speed below 35. Earlier chassis firmware versions (see AXIe Chassis Version Information below), used fan speed numbers from 8 to 15, with 8 representing the minimum fan speed and 15 representing the maximum fan speed. For backwards compatibility, these numbers are now reserved.

If you have an existing application program using IVI or LabVIEW drivers to set the minimum fan speed using the old 8 to 15 range, your program will continue to work normally with the new AXIe chassis firmware; 8 now corresponds to the new 35 (minimum fan speed) and 15 corresponds to the new 100 (or maximum fan speed).

The new firmware revision returns fan speed as 35 to 100. If your application program reads the current fan speed and expects a value between 8 and 15, your program may error. Please adjust your application appropriately.

NOTE

Regardless of where you set the minimum fan speed, if the temperature inside the AXIe chassis rises, the fans speed increases to provide additional cooling. The resolution of the Current Fan Level, as shown on the Chassis Health interface page, is an approximation of the fan speed.

The Configure Fan Control section of the Chassis Health Page has the following 5 fields:

Fan Status The shelf manager continuously monitors chassis fan speed, looking for indication that one or more fans are not turning. **Normal** fan status represents a fan speed of at least 2200 RPM (or higher when required by instrumentation load). Below that speed, the shelf manager reports an alarm condition for that fan, it attempts to increase fan speed and continues to monitor. Failure of one fan will not result in interruption of power to installed modules.

Cooling Status The shelf manager continuously monitors reported module temperatures, looking for indication that one or more modules is outside its optimal temperature range. This range is specified by the module vendor, as are the thresholds for alarm conditions. Typically only high temperatures generate an alarm, although it is possible for a vendor to specify low temperature alarm levels as well.

In the event of a high temperature alarm from any module, the shelf manager responds by increasing chassis fan speed and continuing to monitor. If the Upper Non-Recoverable threshold is reached, the shelf manager requests the module to power down to its inactive state. Because this level is set by the module vendor, it may not indicate that the module has failed, only that continued operation is inadvisable until the module cools.

Current Speed Level This is the level the fans are currently operating and is controlled by the Shelf Manager. It increases from a set minimum as needed to adjust for changes in chassis temperature. The range is from 35 to 100, where 35 is the slowest speed level and 100 is the highest speed level. The Current Speed Level indicates an approximate percentage of maximum fan RPM. Therefore, a level of 40 indicates the fans are operating at approximately 40% of maximum RPM, and 100 indicates the fans are operating at 100% of maximum RPM. Note, the default/reset value is 40.

Dynamic Minimum Fan Level This is the minimum fan level the shelf manager algorithm sets as it actively monitors the overall system temperature and temperature threshold events received from instrument modules. Over time, the algorithm adjusts this level towards the user-specified minimum fan level provided the cooling status remains at Normal.


Adjust Current Speed Level and Dynamic Minimum Fan Level This user adjustable parameter actually sets both values. This level is kept in non-volatile RAM until you change it; cycling power to the chassis does not change the minimum fan level. Adjust the minimum fan level by entering a value in the field, or clicking the up/down arrows, and then clicking the **Apply** button.

Note that you can individually set the Current Speed Level and the Dynamic Minimum Fan Level using ICI controls. The Web UI (and the Soft Front Panel) binds these two together. Setting the Current Speed Level is always temporary because the Dynamic Minimum Fan Level algorithm continuously adjusts the fan speed towards a dynamic minimum when cooling conditions permit. For example, consider a situation where the chassis and installed modules require a fan speed of 50 to maintain proper cooling. If you attempt to manually set the Current Fan Speed to a lower value (40 for example) the algorithm overrides the setting and maintains the fan speed to provide adequate cooling. Conversely, if you manually set the fan speed to a higher value (65 for example), the algorithm sets that fan speed and does not change it unless additional cooling becomes required.

Of course, since the actual cooling requirements for the chassis and modules may continuously change, that actual fan Current Speed Level and the Dynamic Minimum Fan Speed will also change over time.

Example of Chassis Fan Speed

The following graph illustrates how the chassis fan speed operates. For simplicity, only one temperature event is shown; in reality, temperature events may be happening frequently causing the fan Current Speed Level to change and the Dynamic Minimum Fan Speed to gradually change.

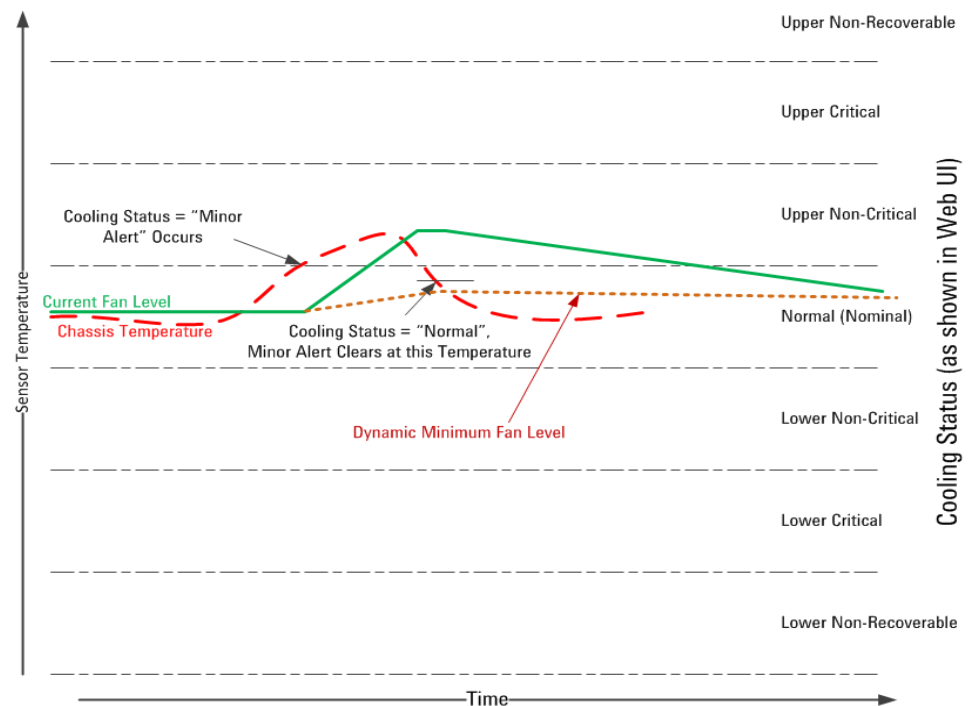

Assume at the beginning, the chassis is reporting a Nominal cooling status. The Dynamic Minimum Fan Level is approximately the same as the fan Current Speed Level. When one (or more) temperature sensors reports that a temperature has increased above its Nominal range and is now above its Upper Non-Critical threshold, a Minor Alert occurs on the cooling status. At this point, the chassis fan Current Speed Level begins ramping up to provide additional cooling. Note that the change is not instantaneous.

When the temperature sensors report that the temperature has dropped back into the Nominal range (because of hysteresis it is actually a few degrees below the Upper Non-Critical threshold), the chassis fan Current Speed Level begins to gradually slow down, compensating for the reduced heat load.

During this entire time, the Dynamic Minimum Fan Level algorithm is recalculating to provide a new minimum fan speed. As additional temperature events occur, and the Current Fan Level changes, the Dynamic Minimum Fan Level algorithm recalculates the minimum fan speed required to ensure optimal cooling in the chassis.

AXIe Chassis Version Information and Fan Speed

AXIe Chassis Firmware version	IVI Driver version	Fan Speed Range
1.3.8 (actually, 1.3.08)	1.1.1.1	8 (minimum) to 15 (maximum)
1.3.23	1.1.1.1	Chassis firmware, including the Chassis Web Interface page uses 35 to 100. However, the IVI and LabVIEW drivers, including the Soft Front Panel interface, had not been updated to use the 35 to 100 range.
1.3.23 (and later)	1.2.0.x (and later)	Chassis firmware and the IVI and LabVIEW drivers, including the Soft Front Panel interface, were updated to use the 35 to 100 range.

4 Using the Soft Front Panel

This chapter provides an overview of the AXIe chassis soft front panel (SFP). The SFP provides the same functionality as the Web Interface. While the Web Interface runs in a browser window and accesses the web server built into the chassis, the SFP is an executable which runs on a PC and communicates to the chassis using the IVI drivers. The SFP is installed automatically when the chassis software is installed.

Starting the Soft Front Panel	60
SFP Screens	61

Starting the Soft Front Panel

After the chassis software is installed, the SFP can be started from the Start menu as follows:

Start > All Programs > Keysight > M950x AXIe Chassis > M950x SFP

The SFP help system can be launched from the Start menu as well.

For detailed information on the features and functionality of the SFP, see the SFP help system.

NOTE

IMPORTANT: If your chassis is connected to the host PC via a LAN connection, and Keysight Connection Expert has discovered the chassis as a LAN device, then the Soft Front Panel software will also find the chassis.


However, if you connected the chassis to the host PC via PCIe cable, you must manually add the chassis to the LAN device tree. This is true, even if Keysight Connection Expert has found the chassis and listed it under the PXI device tree. To add the chassis as a LAN device, select the LAN tree, then select Add Instrument. The chassis must be added as Socket protocol (typically port 5025).

SFP Screens

The SFP contains two screens, the **Monitor** screen and the **Configure Trigger Routing** Screen.


Monitor screen

The **Monitor** screen is used to monitor the chassis fan speeds, the temperature sensors, and the chassis voltages. The following graphic shows an M9502A 2-slot chassis with a module in slot 1 that has both Temperature and Voltage sensors.

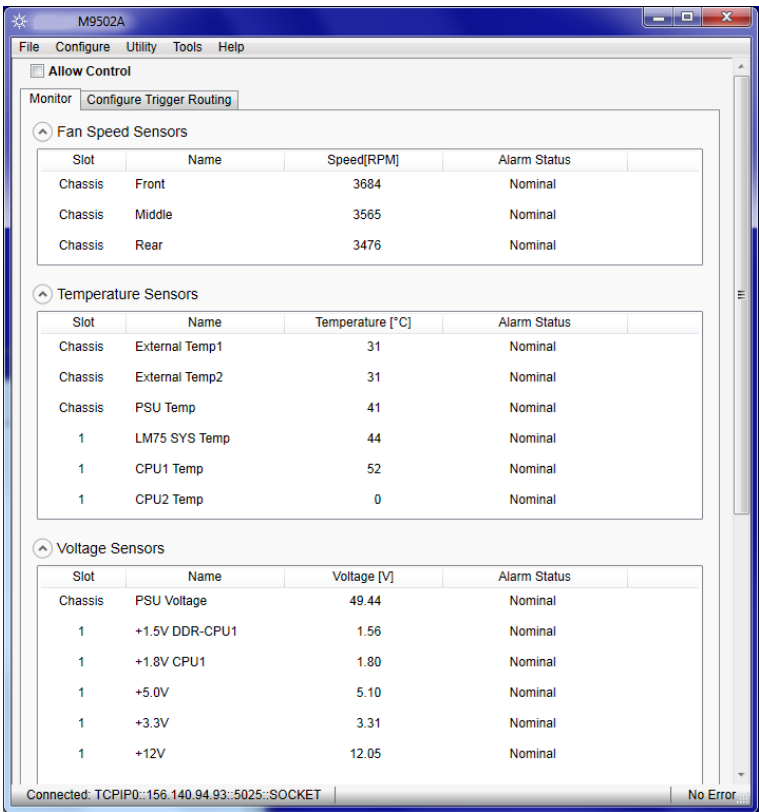

Configure Trigger Routing

The **Configure Trigger Routing** screen is used to configure the inputs and outputs of the chassis Crosspoint Switch.

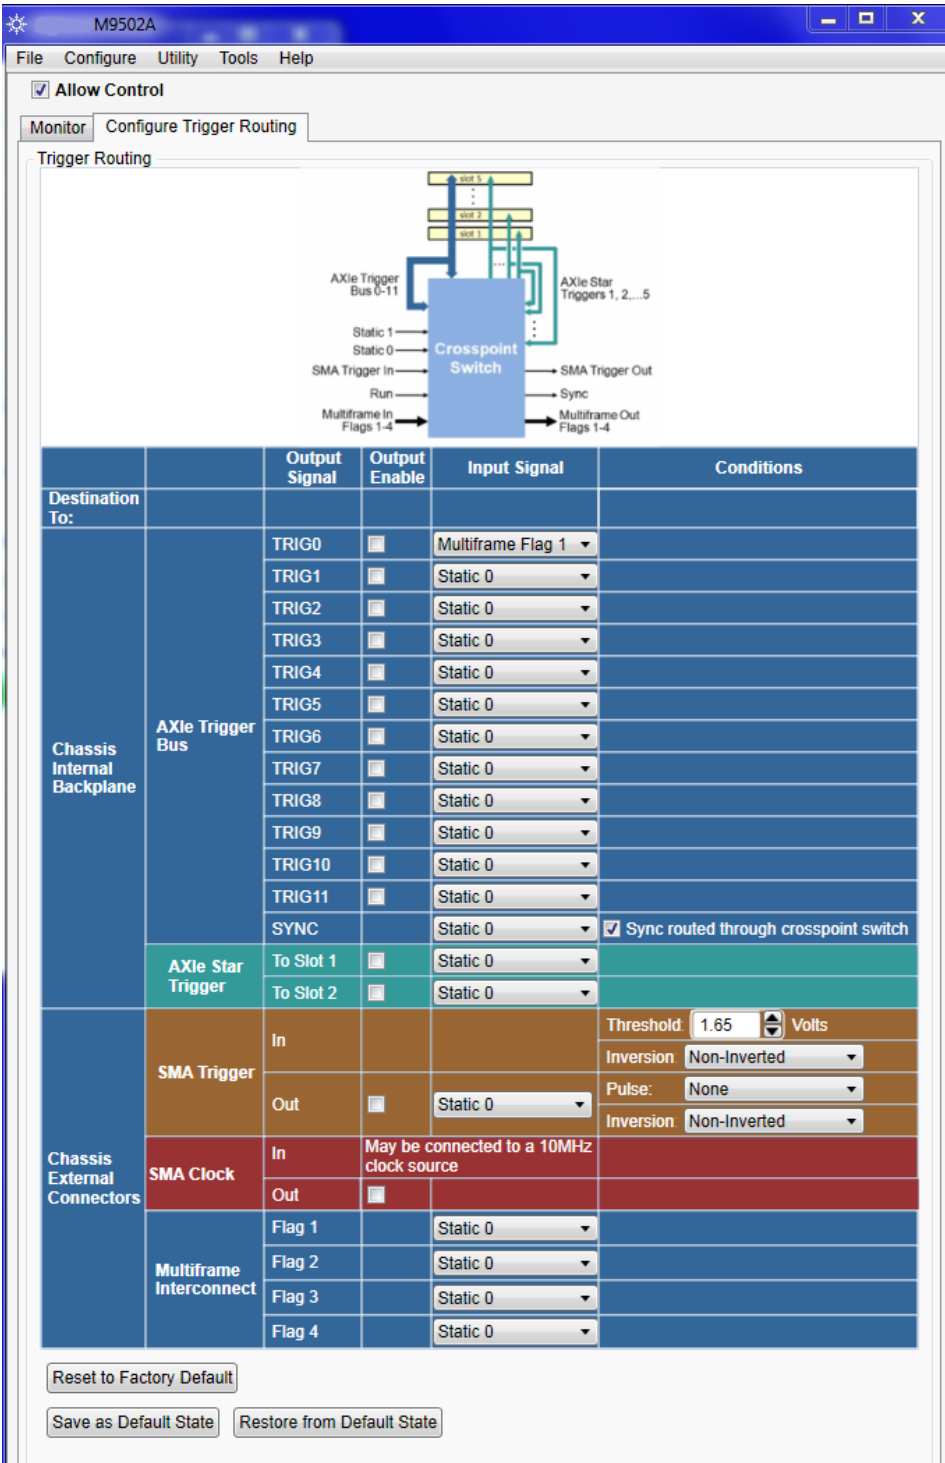

Note that the **Allow Control** check box in the top-left corner of the window must be checked in order to make changes to the trigger routing. This check box is provided to prevent changes from being inadvertently made to the trigger routing.

Below the Configure Trigger Routing table are three buttons:

- **Reset to Factory Default:** This button resets the chassis trigger subsystem to the factory default configuration, including setting TriggerInThreshold to 1.65 VDC, connecting Static 0 to all crosspoint switch inputs, and disabling the Trigger Bus and Star Trigger Output Buffers.
- **Save as Default State:** This button saves the trigger subsystem configuration as the new power-on default configuration, replacing the current power-on default configuration. The just-saved configuration is re-applied using the Restore from Default State button. Only one state can be saved.
- **Restore from Default State:** This button restores the trigger subsystem to the power-on default configuration. The power-on default configuration can be a previous configuration saved by using the Save as Default State button. Otherwise, the power-on default configuration is the factory default configuration.

NOTE

In the Simulation Mode, the Save as Default State button does not actually save the configuration. The Restore from Default State always restores the Factory Default configuration. The state is saved in the chassis hardware, hence, in Simulation Mode, there is no ability to save or recall states.


5 Features and Functions

This chapter explains the monitoring, synchronization, triggering and signal routing options for the AXIe chassis.

Chassis Block Diagram	66
Shelf Management Functions	68
To Monitor Fans:	68
To Control Fan Speed:	70
To Monitor Chassis Temperature:	71
To Monitor Module Health:	71
PCIe and LAN Switching (data transfer)	73
Data Channels Explained	73
Implementing Fabric 2	74
Maximizing Data Upload Speeds	74
PCIe, LAN or Both?	74
Chassis Synchronization and Triggering	75
Synchronization	76
Triggering	78
Trigger Resources	79
Crosspoint Switch	80
TRIG	82
STRIG	83
SYNC	84
TRIGGER OUT	86
MultiFrame Flags	86
MultiFrame SYNC	87
MultiFrame Operation	89
Shared Features	89
Interconnection	90
LVDS Local Bus	92

Chassis Block Diagram

Below is a high-level diagram showing how signals are routed between the Embedded System Module (ESM), front panel, and chassis backplane slots.

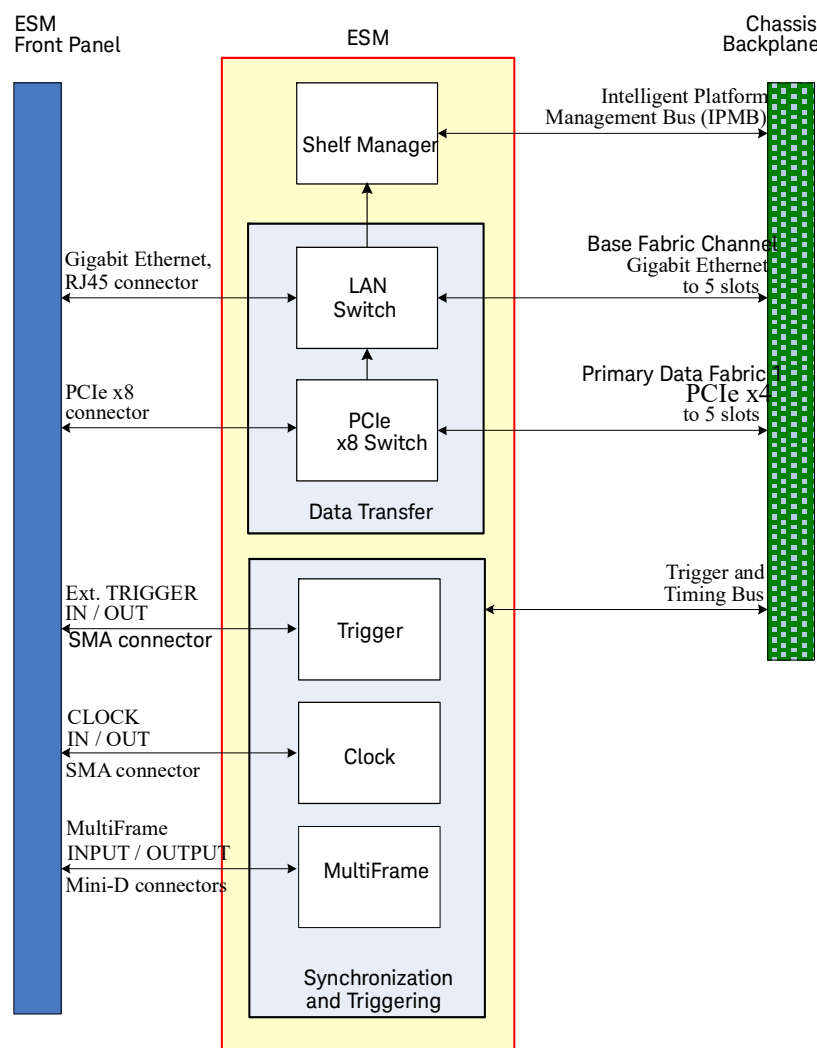


A block diagram of an M9505A 5-slot AXIe chassis system is presented on the next page.

M950x AXle Chassis System

(The M9505A chassis is shown here, but all concepts apply to the M9502A chassis as well)

Keysight M9505A AXIe Chassis

The PCIe x4 connections to each slot can only be accessed from the chassis PCIe interface. However, the Gb Ethernet connections to each slot can be accessed from both the PCIe interface (through the Intel NIC and LAN Switch) and through the chassis LAN interface.

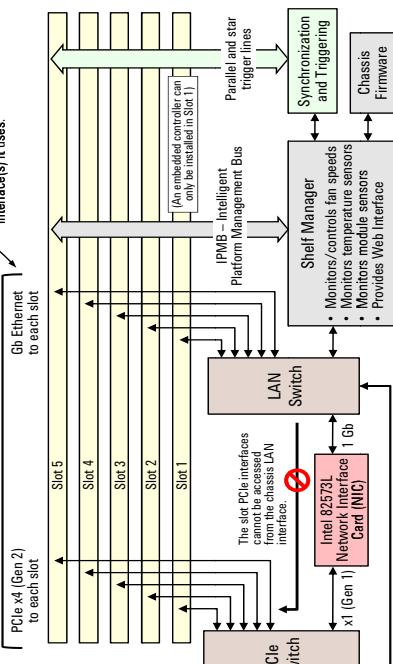


IMPORTANT: PCIe is typically an extension of the host PC backplane. If the PCIe interface is used to connect to the chassis, the chassis Intel 82573L NIC will appear to Windows as if it is installed directly in the PC. While Windows 7 provides the necessary Intel NIC driver, Windows XP does not natively include the required Intel NIC driver. If you're using the PCIe interface on Windows XP and if you see the dialog partially shown below, you'll need to install the Intel PRO/1000 network driver.



Situations where the above dialog won't be displayed include:

1. If a Windows XP-based host PC contains Intel-based networking, the required Intel NIC driver will likely already be installed – if so, the above dialog won't be displayed.
2. If you're connected to the chassis using *only* the LAN interface, the NIC will not be visible to the Host Controller. PR and the above dialog won't be displayed.

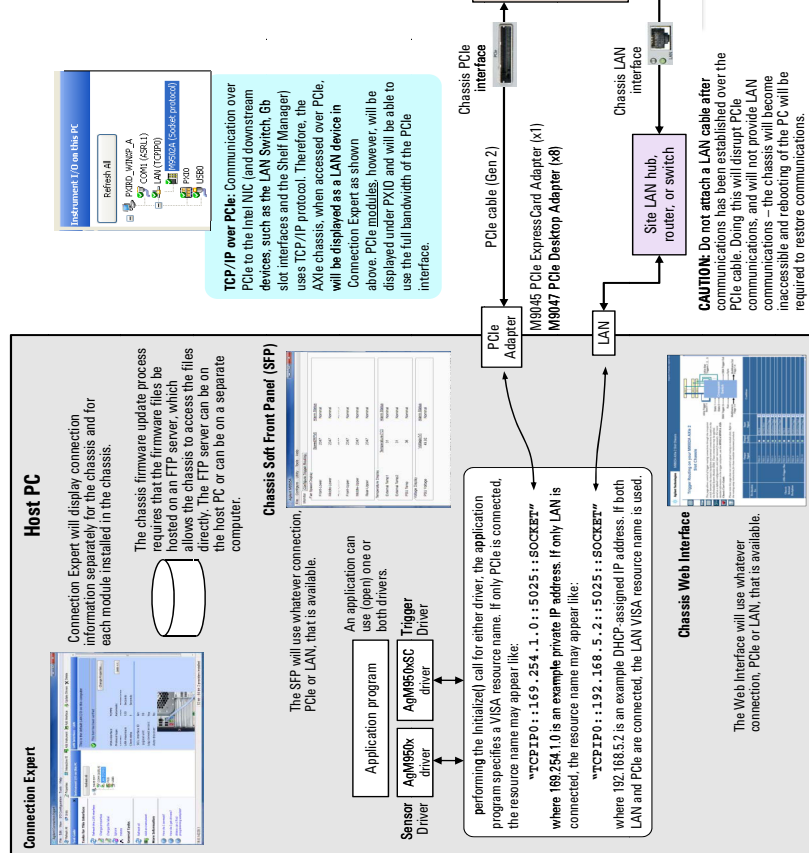

NOTES:

1. **PCIe and LAN connectivity:**
 - A. If the chassis PCIe interface is connected and the chassis LAN interface isn't connected, the Intel NIC provides a means for the PC to access the LAN Switch—this provides PC access to the Shelf Manager as well as access to the Gb Ethernet connections to each slot.
 - B. While the Intel NIC allows the host PC to use the PCIe interface to access the LAN Switch (and the devices connected to the LAN Switch), the reverse does not apply—the PC cannot use the LAN interface and the Intel NIC to access the slot PCIe x4 interfaces.
2. **PCIe Generation ("Gen") 1 peak speed is 2.5 Gb/s per lane. PCIe Gen 2 peak speed is 5.0 Gb/s per lane. Taking into account encoding and other overhead, typical Gen 2 performances in MB/s and GB/s are as follows for x1, x4 and x8:**

x1: 500 MB/s
x4: 2 GB/s
x8: 4 GB/s
3. **The PCIe Switch internal buffering allows the chassis to communicate to the host PC at 4 GB/s, and simultaneously communicate at 2 GB/s to each of two x4 module slots. Factoring in certain overheads, nominal data rates of 1.85 GB/s per slot can be achieved.**

Shelf Management Functions

All AXIe chassis provide these ATCA shelf management functions:

- Monitor and control chassis fan speed
- Monitor chassis backplane temperature
- Monitor module health, as provided by the module vendor (may include voltages and temperatures, fuse status, alarms and alarm setpoints)
- Automatically and safely shutdown power upon a fan tray or power supply unit (PSU) failure

You may monitor chassis behavior and make fan settings as explained below using the chassis *Web Interface*, on the **Chassis Health** page.

Shelf management is implemented in the ESM firmware. You may upgrade firmware through the base interface (LAN) connection.

To Monitor Fans:

You can check the individual chassis fan speeds, fan levels, and status. The fan speeds are listed under the Chassis header in the **Sensors** section of the Chassis Health page.

Sensors

Module Slot	Instrument	State	Sensor Readings			
Chassis	5-SLOT-AXIe-MPO	Active				
	Status		ID	Type	Name	Value
	Nominal		120	Temperature	External Temp1	23.00 degrees C
	Nominal		121	Temperature	External Temp2	24.00 degrees C
	Nominal		2	Fan	Front-Lower	2109 RPM
	Nominal		3	Fan	Middle-Lower	2050 RPM
	Nominal		4	Fan	Rear-Lower	2050 RPM
	Nominal		5	Fan	Front-Upper	2080 RPM
	Nominal		6	Fan	Middle-Upper	2139 RPM

Under **Fan Control**, you can monitor Fan Status, Cooling Status, Present Fan Level, and Minimum Fan Level. These are explained in order below.

Configure Fan Control

Fan Status	Normal	
Cooling Status	Normal	
Current Speed Level	42	
Dynamic Minimum Fan Level	42	
Adjust Current Speed Level and Dynamic Minimum Fan Level	40 <input type="button" value="↓"/> <input type="button" value="↑"/> % of maximum RPM	<input type="button" value="Apply"/>

Fan Status: The shelf manager continuously monitors chassis fan speed, looking for possible indication that one or more fans are not turning. Nominal fan status represents a fan speed of approximately 2,000 RPM, higher when required by instrumentation load. Below that range, the shelf manager will report an alarm condition for that fan, attempt to increase fan speed and continue to monitor. Failure of one fan will not result in interruption of power to installed modules. The fan status conditions are listed below.

Fan Status	Fan Speed (RPM)	Shelf Manager Response
Nominal	2,000 or higher	Continue monitoring fan speed
Lower Non-Critical		Increase fan speed one step and continue monitoring
Lower Critical		Increase fan speed to maximum and continue monitoring
Lower Non-Recoverable		This usually indicates a fan has stopped turning; increase fan speed to maximum and continue monitoring

Cooling Status: The shelf manager continuously monitors reported module temperatures, looking for indication that one or more modules is outside its optimal temperature range. This range is specified by the module vendor, as are the thresholds for alarm conditions. Typically only high temperatures generate an alarm, although it is possible for a vendor to specify low temperature alarm levels as well.

In the event of a high temperature alarm from any module, the shelf manager will respond by increasing chassis fan speed and continuing to monitor. If the Upper Non-Recoverable level is reached, the shelf manager will shut down power to that module. As this level is set by the module vendor, it may not indicate that the module has failed, only that continued operation is inadvisable until the module cools.

Cooling Status	Module Temp	Shelf Manager Response
Nominal	specified by module vendor	Continue monitoring module temperature
Upper Non-Critical		Increase fan speed one step and continue monitoring
Upper Critical		Increase fan speed to maximum and continue monitoring
Upper Non-Recoverable		Increase fan speed to maximum, deactivate that module and continue monitoring. This usually implies imminent module damage if operation continues;

Current Speed Level

This is the level the fans are currently operating at and is controlled by the Shelf Manager. It increases from a set minimum as needed to adjust for changes in chassis temperature. The range is from 35 to 100, where 35 is the slowest speed level and 100 is the highest speed level. The speed level indicates an approximate percentage of maximum fan RPM. Therefore, a level of 40 indicates the fans are operating at 40% of maximum RPM, and 100 indicates the fans are operating at 100% of maximum RPM.

Dynamic Minimum Fan Level

This is the minimum fan level the shelf manager algorithm sets as it actively monitors the overall system temperature and temperature threshold events received from instrument modules. Over time, the algorithm adjusts this level towards the user-specified minimum fan level provided the cooling status remains at normal.

Adjust Current Speed Level and Dynamic Minimum Fan Level

This is a user adjustable parameter allowing you to specify a minimum fan speed level. This level is kept in non-volatile RAM until you change it; cycling power to the chassis does not change the minimum fan level. Adjust the minimum fan level by entering a value, or clicking the up/down arrows and clicking the Apply button.

You cannot monitor the PSU fans.

To Control Fan Speed:

You can set the *minimum fan level*, over a range from 35 to 100 as a percentage of maximum fan speed, by setting that level in the Adjust Current Speed Level and Dynamic Minimum Fan Level field and clicking the **Apply** button. This specifies the minimum level at which you want the chassis fans to run. The Shelf Manager will increase fan speed from that minimum—for all (three or six) chassis fans—if required by an alarm condition (low fan speed or high module temperature).

NOTE

If the minimum fan speed is changed using the Web Interface, the newly-set value will become the chassis power-on default value. This is unlike other parameters set using the Web Interface, which do not persist through a power cycle. For more detailed information on controlling the fans using the Web Interface, refer to [“Configure Fan Control”](#) on page 54.

The power supply (PSU) fans are controlled automatically, you cannot override them.

To Monitor Chassis Temperature:

There are two backplane sensors which measure chassis temperature in degrees celsius. These temperatures are listed in the **Sensors** section of the Chassis Health page.

Chassis	5-SLOT-AXIe-MPO	Active				
	Status		ID	Type	Name	Value
	Nominal		120	Temperature	External Temp1	32.00 degrees C
	Nominal		121	Temperature	External Temp2	30.00 degrees C

They are provided as an indication of ambient chassis temperature only; the individual slot temperatures reported by installed modules control the chassis fans.

To Monitor Module Health:

The Sensors section of the Chassis Health page lists sensor measurements for each module slot. The sensors are vendor-specific, and the type of readings will vary by module. Below is a screen capture of the Sensors section from a chassis with two modules installed.

Sensors


Module Slot	Instrument	State	Sensor Readings			
5	-empty-					
	Status		ID	Type	Name	Value
4	-empty-					
	Status		ID	Type	Name	Value
3	LPT_AMP_REF_blade	Active				
	Status		ID	Type	Name	Value
	Nominal		1	Voltage	+5.0V	5.17 Volts
	Lower Non-Recoverable		2	Voltage	+3.3V	0.61 Volts
	Nominal		3	Voltage	+2.5V	2.61 Volts
	Lower Critical		4	Voltage	ADC +3.3V IPMI	3.00 Volts
	Upper Non-Recoverable		5	Voltage	+1.8V PROM	2.26 Volts
2	-empty-					
	Status		ID	Type	Name	Value
1	aTCA-6100	Active				
	Status		ID	Type	Name	Value
	Nominal		6	Voltage	+1.5V DDR-CPU1	1.54 Volts
	Nominal		7	Voltage	+1.8V CPU1	1.80 Volts
	Nominal		10	Voltage	+5.0V	5.04 Volts
	Nominal		11	Voltage	+3.3V	3.34 Volts
	Nominal		12	Voltage	+12V	12.05 Volts
	Nominal		20	Temperature	LM75 SYS Temp	27.00 degrees C
	Nominal		18	Temperature	CPU1 Temp	32.00 degrees C
	Nominal		19	Temperature	CPU2 Temp	0.00 degrees C
Chassis	5-SLOT-AXIe-MPO	Active				
	Status		ID	Type	Name	Value
	Nominal		120	Temperature	External Temp1	32.00 degrees C
	Nominal		121	Temperature	External Temp2	32.00 degrees C
	Nominal		2	Fan	Front-Lower	2347 RPM
	Nominal		3	Fan	Middle-Lower	2317 RPM
	Nominal		4	Fan	Rear-Lower	2288 RPM
	Nominal		5	Fan	Front-Upper	2258 RPM
	Nominal		6	Fan	Middle-Upper	2258 RPM

PCIe and LAN Switching (data transfer)

Data Channels Explained

The AXIe chassis provides three paths for communication and data transfer to and from installed modules:

- Gigabit (Gb) Ethernet
- PCIe
- Fabric 2 (optional, requires instrument hub module)

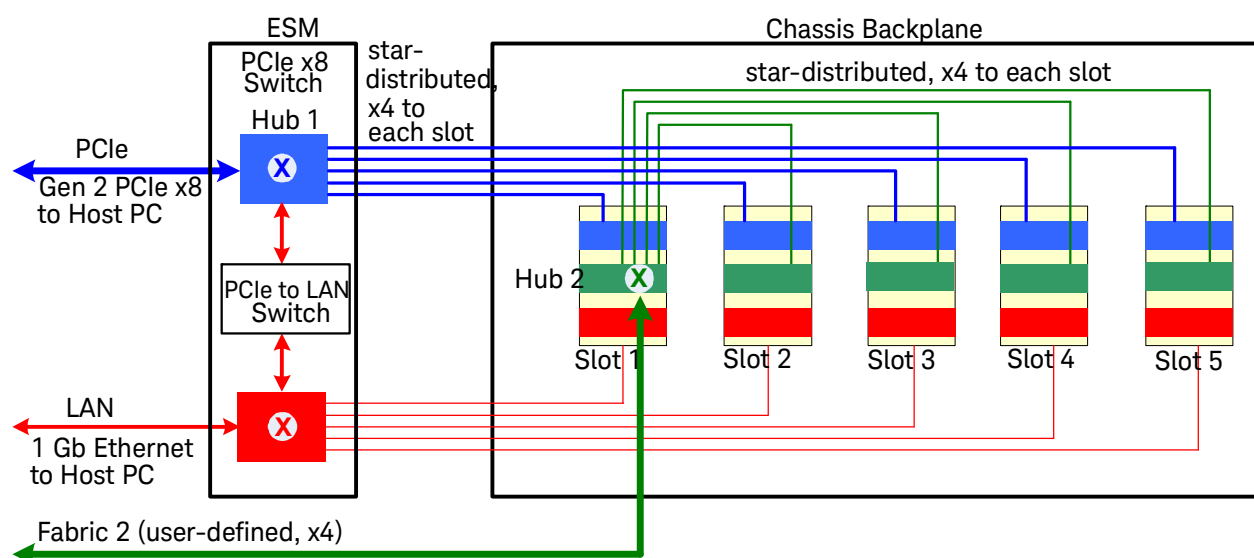

Gb Ethernet: This is a star-distributed 1 Gb Ethernet:

- From the LAN switch in the ESM—the base channel hub—to each slot.
- From the LAN switch in the ESM to the RJ45 front panel LAN connection; 10/100/1000BASE-TX.

PCIe: This is the high speed primary data path:

- From the PCIe switch in the ESM—the fabric 1 hub—four lanes to each instrument slot through the backplane defined as PCIe x4.
- From the PCIe switch in the ESM to the PCIe x8 front panel connection.

Fabric 2: *Fabric 2*, if implemented, provides a high speed secondary data path through the backplane:

- From an instrument hub module in slot 1—the fabric 2 hub—four lanes to each instrument slot through the backplane; protocol is vendor-defined.
- Fabric 2 data does not pass through the ESM; you must make external connections to the instrument hub to use fabric 2 data

Implementing Fabric 2

To use *fabric 2*, the secondary data path (four channels) through the chassis backplane, you must:

- Install in slot 1 an AXIe instrument hub module designed to implement the fabric 2 star. Access to these backplane signals must be controlled by the instrument hub module.
- Use a remote host PC. With an instrument hub module, you cannot simultaneously use an embedded controller, which must be installed in slot 1.

Maximizing Data Upload Speeds

The maximum data bandwidth to each slot is dictated by the x4 connection.

You will typically achieve higher PCIe data throughput to a remote (desktop or rackmount) host PC than to an embedded controller.

- Using a high speed rackmount or desktop PC and a x8 cable, the primary data fabric utilizes a x8 connection between the ESM and the host PC. The ESM's PCIe switch can achieve Gen2 upload speeds when transferring data to the host from multiple modules simultaneously.
- If an embedded controller is installed in the chassis, that x8 connection is disabled; the controller uses its slot 1 backplane x4 link to the PCIe switch.
- By using both an instrument hub module and a fast remote host PC with dual x8 cable adapters, you could potentially move two x8 fabric channels to the host at Gen 2 speeds (if the instrument hub outputs PCIe x8).

PCIe, LAN or Both?

You can establish communication between the chassis and host PC over either a LAN or a PCIe connection. In practice, the choice is usually driven by the interface(s) on your modules. For example, if you have a module with a x4 PCIe interface, you'll want to establish a PCIe connection to the chassis.

PCIe Connection Only You may connect the ESM to the host PC using only a PCIe cable. This allows both the base (LAN) channel and fabric 1 data channels. Base channel communication between PC, ESM and any LAN capable installed instruments are made through the PCIe connection. A PCIe to LAN switch in the ESM manages the base channel communication to the slots; it is seen as a network interface device by Windows Device Manager.

LAN Connection Only You may connect ESM to host PC using only a LAN cable. You will have base channel communication only and significantly less data throughput than when using PCIe.

Hybrid Operation: You may connect both LAN and PCIe cables from ESM to host PC. This provides the most operational flexibility and some data throughput advantages over using only PCIe.

Chassis Synchronization and Triggering

The Keysight AXIe chassis provides a rich set of signaling (triggering and timing) options. These allow you to achieve time-aligned operation of multiple instruments installed in a single chassis or MultiFrame (interconnected AXIe chassis system).

NOTE

MultiFrame operation is described in “[MultiFrame Operation](#)” on page 89. For this chapter, ‘instruments in the chassis’ includes all instrument modules in the single chassis or MultiFrame. If you are using only a single chassis, the MultiFrame references are inapplicable.

An example of time aligned operation would be starting and stopping some aspect of a test running on multiple instruments in the chassis. The time alignment of these operations can be:

- *Synchronous*: A single event (trigger signal or sync signal), initiated by an external trigger, flag, or other signal transition, triggers one or more instruments simultaneously.
- *Asynchronous*: Instruments operate independently, with their resulting data to be time-aligned post-collection in your analysis software. This requires the data to be referenced to a common clock source.

Moreover, there is capability to group instruments and perform such operations on several independent groups simultaneously. For example, instrument group A can be triggered from a 100MHz clock and instrument group B can receive an external trigger from an event transition in the test environment, while receiving the same clock signal to synchronize the two groups.

Although the triggering and timing options can be inter-operated, it is easiest to understand them using distinct Clock Bus and Trigger Bus diagrams, each providing ESM front panel and backplane signal connections.

CAUTION

Some AXIe test system software applications, such as the Keysight AXIe Based Logic Analyzer Software and modules, sets and uses specific trigger lines in the AXIe chassis. Do not use the AXIe chassis Soft Front Panel (SFP) software or the AXIe chassis web interface to set or reroute any of the AXIe chassis trigger lines. Rerouting any of the trigger lines may cause the application software to not function correctly.

Synchronization

Available Clocks

Clock Outputs The Embedded System Module (ESM) generates a 100 MHz instrument clock signal from its clock bus. This signal is:

- Star distributed to all instrument slots as **CLK100**
- Provided to the ESM's front panel SMA connector **CLOCK OUT**, as a 10 MHz external reference clock (3.3V CMOS, 50W)
- Distributed to additional chassis as **MULTIFRAME OUTPUT CLK100**

A separate 100 MHz distributed PCIe fabric reference clock (**FCLK**) is provided from the ESM to all instrument slots.

Clock Sources There are three possible sources for the clock bus in a given chassis. Clock detection logic is automatic, and the input source is chosen in the following priority order, depending on which external inputs are sensed:


- 1 An external reference clock (**MULTIFRAME INPUT CLK100**) from the lower chassis connector
- 2 A 10 MHz external reference clock (**CLOCK IN**) applied at the ESM's front panel SMA connector

NOTE

If you choose the external 10 MHz reference clock, it must be present at the front panel SMA connector when the chassis is powered on. If you attach the cable after power is applied, you must cycle power on the chassis.

- 3 The local 100 MHz clock oscillator within the ESM

Clock Bus Diagram The clock resources are illustrated below.

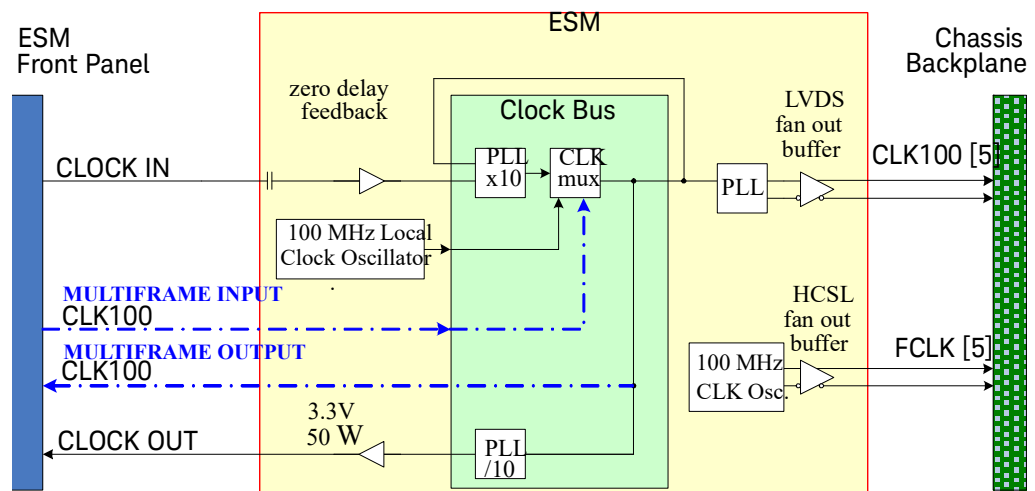

Selecting a Clock Bus Source

By default, the clock bus is driven by the local 100 MHz clock oscillator. You can also drive the clock bus from an external reference clock supplied by CLOCK IN or the MultiFrame Cable.

To use CLOCK IN: You can connect a 10 MHz external reference clock source to drive the clock bus on any given chassis.

- 1 Provide a clock source at that chassis's front panel SMA connector. The chassis will recognize a signal with these characteristics:
 - AC coupled, -5V to +5V input
 - 250 mV minimum swing
 - frequency 10 MHz \pm 5%
- 2 The chassis will automatically select CLOCK IN if sensed. When a chassis senses both CLOCK IN and MULTIFRAME INPUT CLK100, MULTIFRAME INPUT CLK100 has priority.

NOTE

If you choose the external 10 MHz reference clock, it must be present at the front panel SMA connector when the chassis is powered on. If you attach the cable after power is applied, you must cycle power on the chassis.

To use MultiFrame INPUT CLK100: In a MultiFrame system, the CLK100 signal sourced from the primary chassis drives the clock buses for all secondary chassis.

- 1 The CLK100 signal is provided from the primary to each secondary chassis's MULTIFRAME INPUT (lower chassis) connector.
- 2 Each secondary chassis will automatically select MULTIFRAME INPUT CLK100 as its clock source if sensed.

Using the Clocks

To use CLK100: Regardless of source, the clock bus output CLK100 can be accessed by AXIe instruments via the backplane or MultiFrame connection.

- 1 AXIe modules installed in a given chassis may access CLK100 via the backplane.
- 2 If the module is in a secondary chassis in a MultiFrame, its clock source is MULTIFRAME INPUT CLK100 from the Primary chassis.

To use CLOCK OUT: You can extend the clock bus output to *external instruments*. These are instruments which cannot access CLK100 from that chassis, either via the backplane or MultiFrame connection. They may be external to the AXIe chassis or chassis system.

The 10 MHz output is synchronous with the internal CLK100 signal.

- 1 Connect the external instrument's clock input to the ESM's front panel SMA **CLOCK OUT** connector.
- 2 Enable the external clock output by checking its Enable box on the Web Interface's Chassis Health page.

		Output Signal	Output Enable	Input Signal	Conditions
Destination To:					
Chassis External Connectors	SMA Clock	In		May be connected to a 10 MHz clock source.	
		Out	<input checked="" type="checkbox"/>		


Triggering

This section introduces the AXIe chassis's trigger bus resources and some of the many ways you may use them. Any AXIe instrument can be triggered:

- internally, based on its own automation or signals from DUT connected directly to it
- through an externally applied trigger.
- through the chassis backplane,

The AXIe chassis allows you to trigger instruments—singly, in groups, or all instruments in the chassis—from different signal sources.

The diagram below shows how the triggering resources are derived.

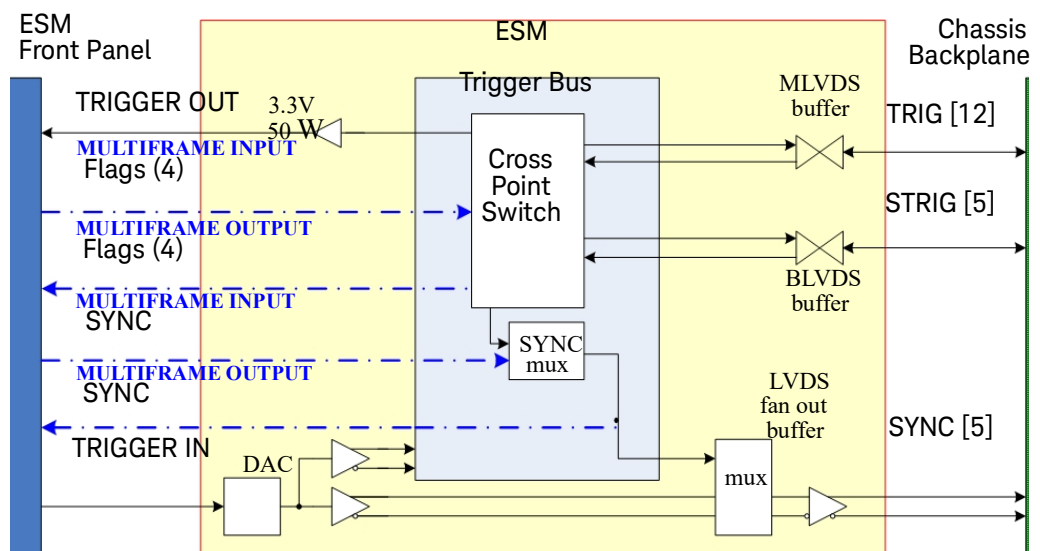

Trigger Resources

The primary AXIe trigger resource is the Crosspoint Switch. It allows any trigger input to be connected to any trigger output.

Trigger Inputs There are many inputs to the Crosspoint Switch. Any input can be connected to one or more trigger outputs. The inputs include:

- An external trigger (**TRIGGER IN**) applied at the ESM's front panel SMA connector
- Any of the 12 **TRIG** signals. As these lines are bidirectional, any AXIe module can source a trigger via the backplane using them. E-keying is used to manage traffic on the parallel trigger bus.
- Any of the (two to five) **STRIG** signals. As these lines are bidirectional, any AXIe module can source a trigger via the backplane using them.
- Any of the four event Flag signals (**MULTIFRAME INPUT Flags 1 through 4**) from the lower chassis connector
- A MultiFrame SYNC signal (**MULTIFRAME INPUT SYNC**) from the lower chassis connector
- A MultiFrame **RUN** Signal from the lower or upper chassis connector


Trigger Outputs From the diagram, note that the ESM can output six types of trigger signal:

- From the chassis backplane
 - **TRIG**
 - **STRIG**
 - **SYNC**
- From the ESM front panel
 - **TRIGGER OUT** (SMA connector to any instrument)
 - **MultiFrame Out Flags 1 through 4** (MultiFrame to upper chassis)
 - **MultiFrame Out SYNC** (MultiFrame connector to upper chassis)

Each type of trigger output signal is explored in detail, after a closer look at the Crosspoint Switch.

Crosspoint Switch

The Crosspoint Switch provides the flexibility of routing many signal events from the backplane, flags or external trigger to different destinations. You can choose to enable and assign the input *source* for any or all of 19 signal *destinations* (trigger/timing resources to be output from the ESM). You can also source a logical 0 or 1 to force any destination low or high for test purposes.

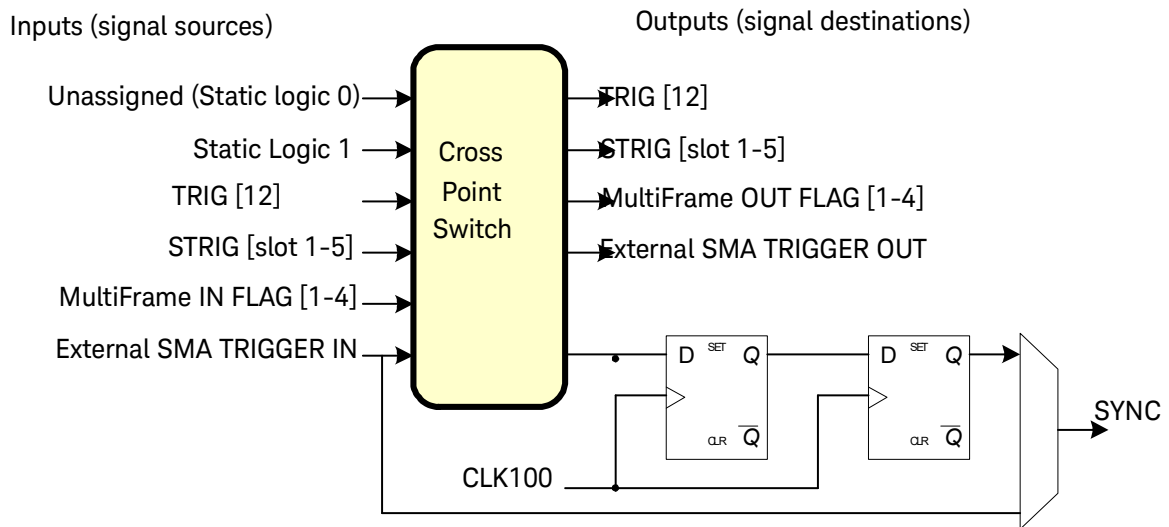

Outputs Each of the Crosspoint Switch outputs (see [page 79](#)) can be enabled and driven independently. An output must be enabled before it can be used as an output.

Inputs Any of the Crosspoint Switch inputs (see [page 79](#)) can be assigned to any output, except that you cannot assign the same input as the output.


Multiple outputs may be driven from the same input, but each output may have only one input assigned.

The default input for all outputs is “Static 0”. If you don’t specify the input signal for a specific output signal, the input signal will be logic 0 by default for that output signal.

The detailed trigger diagram “M950x Trigger Subsystem” is presented on [page 78](#).

M950x Trigger Subsystem (shown for the M9505A AXIe Chassis)

The factory default is that all bi-directional signals shown below are three-stated (high impedance) at power-on.

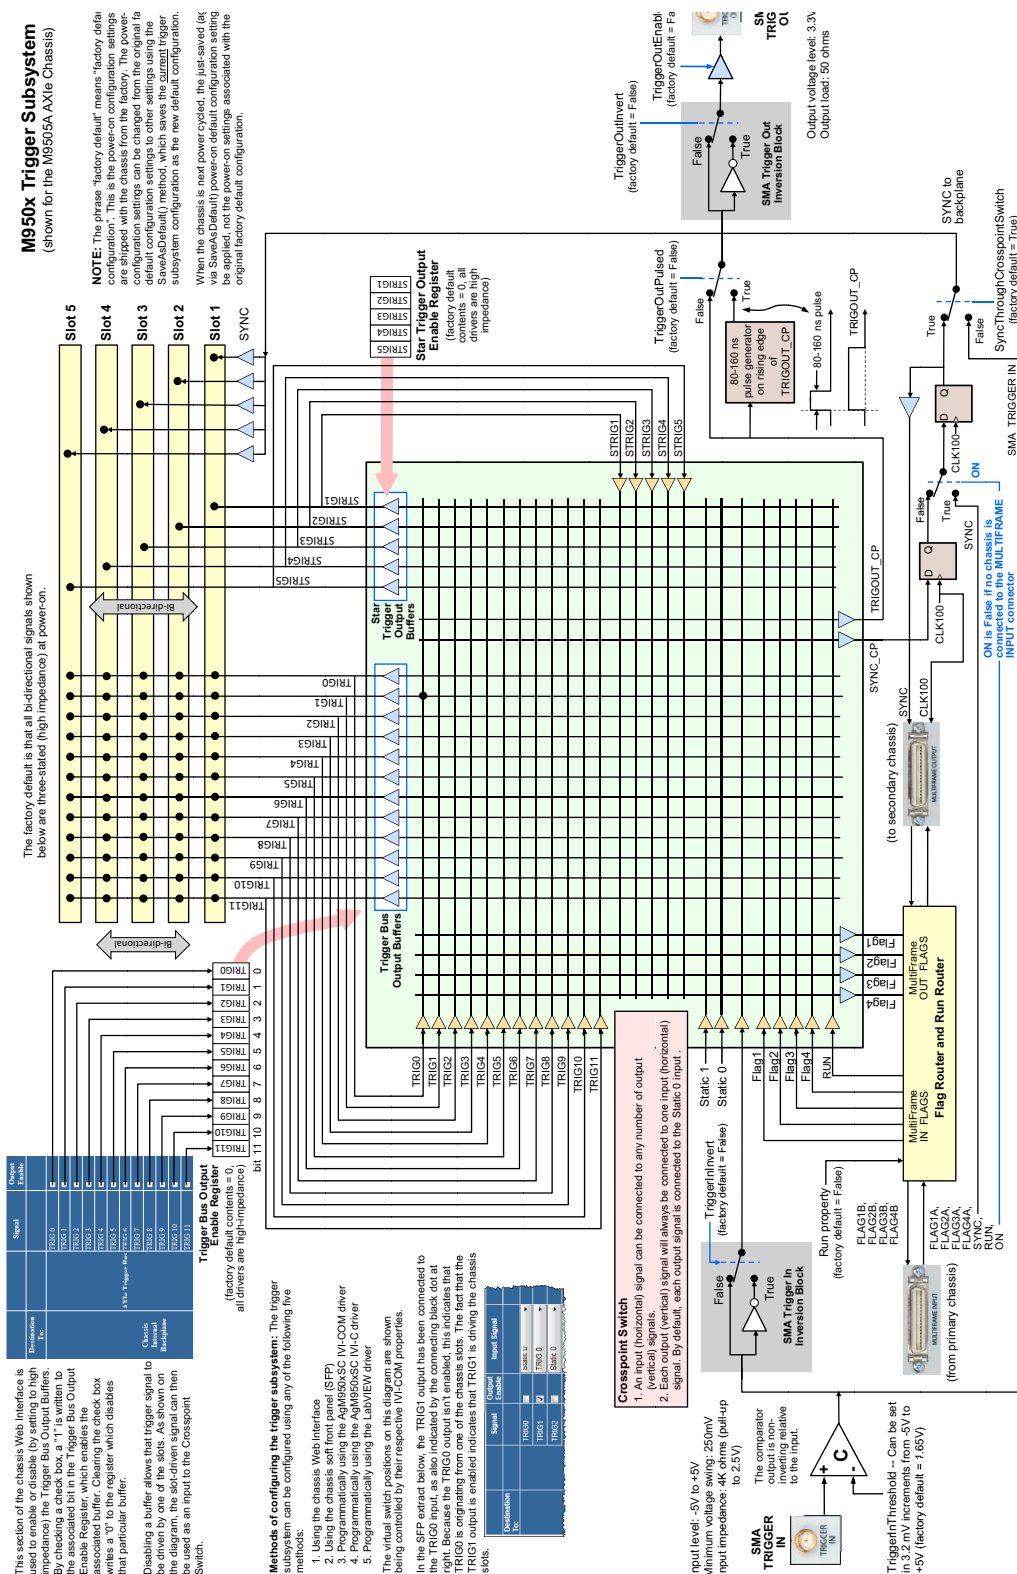


TRIG

The TRIG bus (TRIG[0,11]) is a set of 12 Multipoint Low Voltage Differential Signaling (MLVDS) signal pairs with the following characteristics representative for each pair:

- Multi-point and bidirectional to all slots plus the ESM
- Backplane terminated with 80W at each end
- Requires the instrument module to provide MLVDS buffers (blue lines)
- TRIG bus resources are allocated through E-Keying)

TRIG Bus (one of 12 pairs)

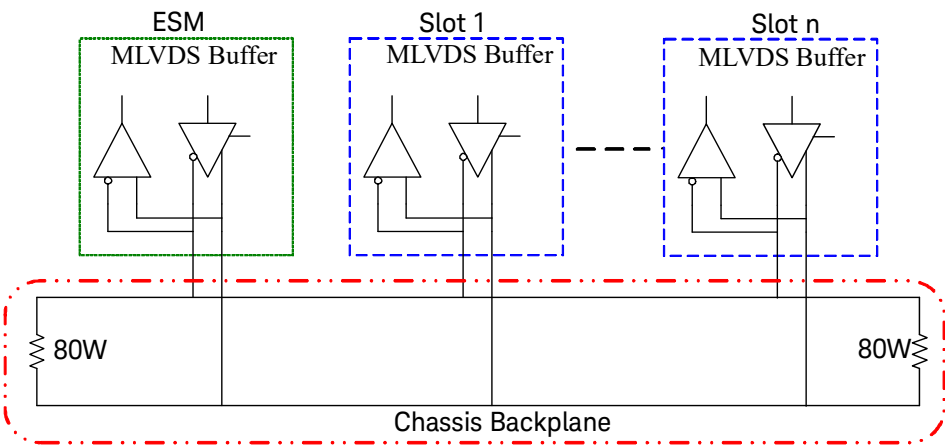

Each TRIG line (signal pair) is a parallel bus, with connections to all logical slots (ESM slot plus the instrument slots). Any instrument in the chassis can send or receive a trigger signal using any of these lines.

Use When: The TRIG bus’s multipoint topology makes it fast and direct for module-to-module triggering.

To use a TRIG line as a trigger output:

- 1 Using the chassis Web Interface, on the **Trigger Routing** page, check the Output Enable box to enable the TRIG line as an output signal.
- 2 From the **Input Signal** drop down list, select an input signal for the output-enabled TRIG output.


		Output Signal	Output Enable	Input Signal	Conditions
Destination To:					
Chassis Internal Backplane		TRIG 0	<input checked="" type="checkbox"/>	STRIG Slot 1	
		TRIG 1	<input type="checkbox"/>	Static 0	
		TRIG 2	<input checked="" type="checkbox"/>	SMA Trigger In	

In the above example, TRIG 0 is enabled as an output, and will trigger when slot 1 sends a STRIG signal. TRIG 2 is also enabled, and will trigger when an external SMA trigger is applied.

STRIG

The STRIG signal is a Bidirectional Low Voltage Differential Signaling (BLVDS) star trigger with the following characteristics:

- Point-to-point and bidirectional between the ESM (logical slot 1) and instrument slots (physical slots 1 through n)
- Slot terminated with 100 Ω differential and 50 Ω series (optional)
- All STRIG lines are trace length matched to 0.025"

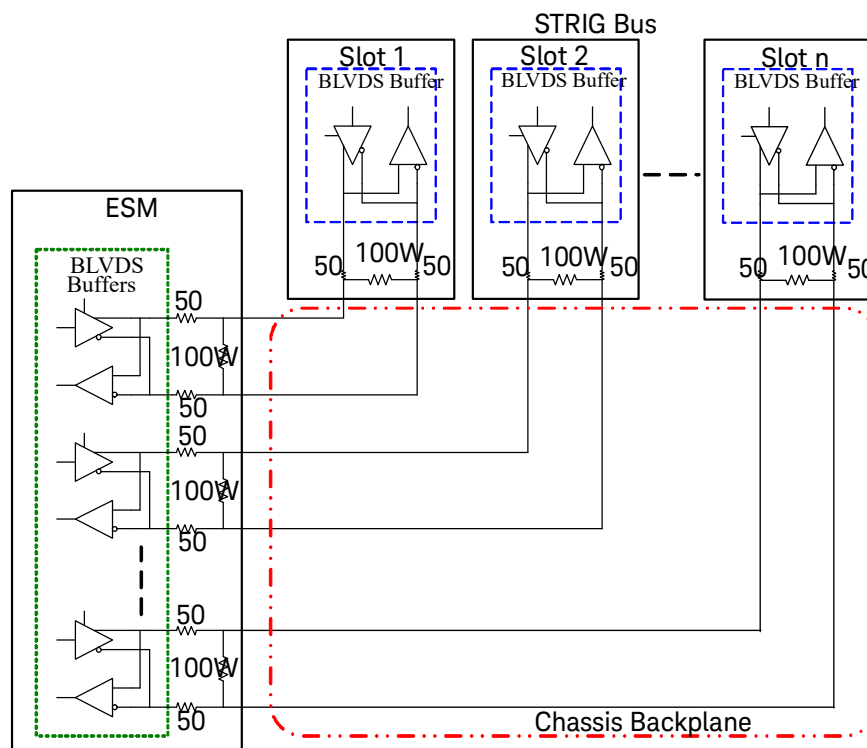

Use When: The STRIG bus's trace matched lines ensure the lowest skew when synchronously triggering multiple modules.

To use a STRIG line as an output:

- 1 Using the chassis Web Interface, on the **Trigger Routing** page, check an Output Enable box to enable any individual slot AXIe Star Trigger line as an output signal.
- 2 From the **Input Signal** drop down list, select an input signal for each output-enabled AXIe Star Trigger output(s).


		Output Signal	Output Enable	Input Signal	Conditions
Destination To:					
Chassis Internal Backplane	AXIe Star Trigger	To Slot 1	<input checked="" type="checkbox"/>	TRIG 0	
		To Slot 2	<input checked="" type="checkbox"/>	TRIG 0	
		To Slot 3	<input checked="" type="checkbox"/>	TRIG 0	
		To Slot 4	<input type="checkbox"/>	Static 0	
		To Slot 5	<input type="checkbox"/>	Static 0	

In the example shown above, STRIG output is enabled for slots 1 through 3, and will simultaneously trigger these three STRIG lines when an input signal is received from any instrument on the TRIG 0 bus.

SYNC

The **SYNC** and **CLK100** signals are a Low Voltage Differential Signaling (LVDS) star trigger and a star clock. SYNC provides an LVDS trigger signal, output at the next rising edge of CLK100 after the source trigger is received. The SYNC and CLK100 lines use identical fan out buffers and are trace length matched to 0.25" to operate as a pair, with the following characteristics:

- Point-to-point between the ESM (logical slot 1) and instrument slots (physical slots 1 through *n*)
- Slot terminated with 100W differential

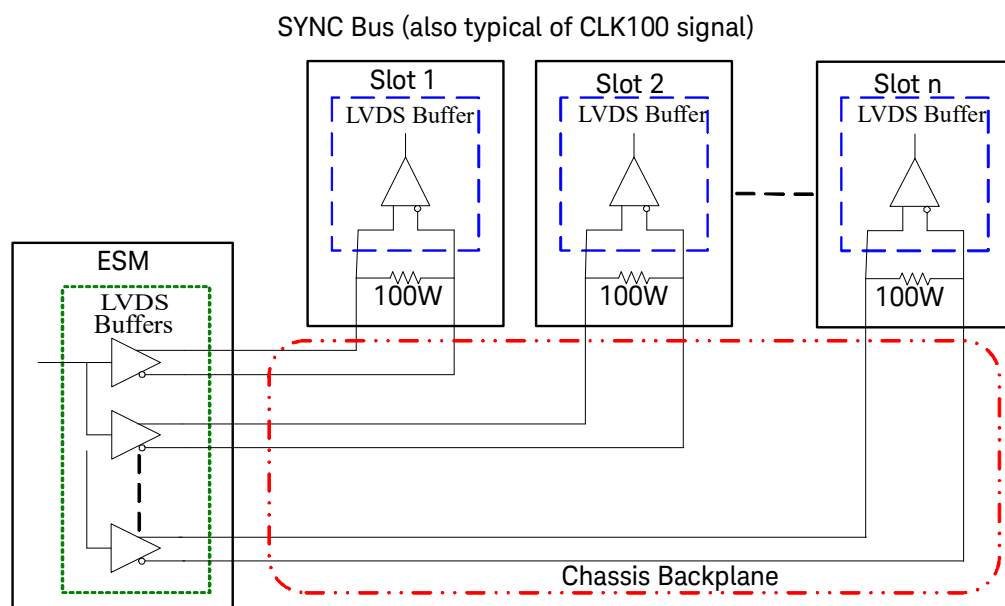

Use When: For truly synchronous applications, SYNC allows you to trigger multiple instruments both simultaneously and in sync with the reference clock. It can also be used as a general asynchronous star trigger output line.

To use SYNC as a trigger output:

- 1 Using the chassis Web Interface, on the **Trigger Routing** page, note that SYNC is always output-enabled, as it is not bidirectional.
- 2 From the **Input Signal** drop down list, select an input signal for the SYNC output.

Destination To:		Output Signal	Output Enable	Input Signal	Conditions
Chassis Internal Backplane		TRIG 10	<input type="checkbox"/>	Static 0	
		TRIG 11	<input type="checkbox"/>	Static 0	
		SYNC	<input type="checkbox"/>	SMA Trigger In	<input checked="" type="checkbox"/> Sync routed through crosspoint switch

In the above example, SYNC will be driven high synchronously on the next rising edge of CLK100 after an external SMA trigger input signal is received. To drive the line asynchronously, uncheck the Sync routed through crosspoint box; the external trigger will drive SYNC directly.

TRIGGER OUT

The **TRIGGER OUT** signal (also known as **SMA TRIGGER OUT**) is available on the ESM front panel **TRIGGER OUT SMA** connector with the following characteristics:

- 3.3V CMOS drive, 100 mV minimum swing
- 50W output termination

Use When: **TRIGGER OUT** allows you to extend the trigger bus to instruments outside the chassis system or which require an external input.

To use SMA TRIGGER OUT as an Output Signal:

- 1 Connect a cable from the chassis **SMA TRIGGER OUT** connector to the instrument you wish to trigger.
- 2 Using the chassis Web Interface, on the **Trigger Routing** page, check the Output Enable box to enable the **SMA TRIGGER OUT** signal as an output signal.
- 3 From the **Input Signal** drop down list, select an input signal to connect to the output-enabled **SMA TRIGGER OUT** output signal.
- 4 Under Conditions, you can select whether or not an 80-160 ns pulse is generated (always on the rising edge of the signal) and whether the signal is inverted just prior to the **SMA TRIGGER OUT** connector. The default is no pulse ("None") and Passthrough (no inversion).

		Output Signal	Output Enable	Input Signal	Conditions	
Destination To:						
Chassis External Connectors	SMA Trigger	In			Threshold Volts:	1.65
					Inversion:	None
		Out	<input checked="" type="checkbox"/>	STRIG Slot 1	Pulsed:	None
					Inversion:	Inverted

In the above example, the **SMA TRIGGER OUT** output signal is enabled and it will output an inverted signal when a STRIG signal is received from slot 1.

MultiFrame Flags

Four BLVDS flags are provided on the MultiFrame cables. These flags can be distributed among any applications in a MultiFrame chassis that use asynchronous flagging.

A *flag* is an asynchronous pulse, which any instrument in any chassis can generate in response to a signal transition or program command.

Asynchronous flagging is accomplished by sending a flag and having the rest of the system act in a pre-configured way when it receives the flag. Any flag can be set or cleared (by assigning a static 1 or 0) or sourced, using the Web Interface.

The Flag lines are bidirectional. Any chassis can enable any of the four Flag lines as a trigger bus destination or specify a Flag as a trigger bus source; the MultiFrame logic will only allow one source per Flag in the MultiFrame.

Use When: The MultiFrame Flags provide for module to module signaling between modules in different chassis.

To use a MultiFrame Flag as an output signal:

- 1 As you can see below, there are no Output Enable check boxes; the MultiFrame output signals are always enabled.
- 2 From the **Input Signal** drop down list, select the input signal for each MultiFrame Flag output signal.

Destination To:		Output Signal	Output Enable	Input Signal	Conditions
Chassis External Connectors	Multiframe Interconnect	Flag 1		TRIG 0	
		Flag 2		TRIG 1	
		Flag 3		Static 0	
		Flag 4		Static 0	

In the above example, Flag 1 will output a trigger when an input signal is received from an instrument on the TRIG 0 bus. Flag 2 will output a trigger when an input signal is received from an instrument on the TRIG 1 bus.

Separately, you will need to program other chassis how to respond to a received MultiFrame flag.

MultiFrame SYNC

A SYNC line is provided on the MultiFrame cables. This can be used to synchronously trigger any AXIe instruments in the MultiFrame.

To use MultiFrame SYNC as a Trigger Output

A SYNC signal output from the primary chassis in the MultiFrame will be passed to the other chassis over the MultiFrame cable, as MultiFrame Sync.

To Output MultiFrame SYNC

Using the chassis Web Interface, on the **Trigger Routing** page, from the **Input Signal** drop down list, select the input signal for SYNC.

		Output Signal	Output Enable	Input Signal	Conditions
Destination To:					
		TRIG 10	<input type="checkbox"/>	Static 0	
		TRIG 11	<input type="checkbox"/>	Static 0	
		SYNC		SMA Trigger In	<input checked="" type="checkbox"/> Sync routed through crosspoint switch

The primary chassis will output the SYNC signal over the MultiFrame cable. Only one chassis in the MultiFrame may be set to output on the shared SYNC line.

MultiFrame Operation

MultiFrame is a Keysight feature by which multiple measurement instruments in two or more chassis can be interconnected to appear as one integral instrument to the user. It includes hardware, software, and cabling specifications.

In practice, the potential combinations of instruments which can share synchronization and triggering are numerous, and there is no practical limit on the number of chassis which you may interconnect. This section introduces basic MultiFrame connection and features, based on a simple MultiFrame of three M9505A chassis.

NOTE

MultiFrame operation is a Keysight feature, not an AXIe specification. Cables may be hot plugged. *MultiFrame* operation is different from *multiple chassis* operation; see “[How does a multiple chassis system differ from a MultiFrame system?](#)” on page 42 for more information.

Use When: Use MultiFrame to increase the number of measurement modules which utilize a common time base or cross triggering to achieve correlation. The MultiFrame cables extend trigger and timing features to instruments not connected to the primary chassis's backplane.

Shared Features

All chassis (therefore all installed instruments) in the MultiFrame can share:

Clock Source A common 100 MHz clock is sourced from the primary chassis. The time offset for clock signals to traverse the cable and signal path between each pair of chassis is about 35 ns. The MultiFrame design calibrates this out, within about 600 ps of error.

Cross Synchronization A common SYNC signal is sourced from the primary chassis. The time offset for SYNC to traverse the cable and signal path between each pair of chassis is about 35 ns. The MultiFrame design calibrates this out, within about 600 ps of error.


Cross Triggering Any instrument in the MultiFrame can source or receive a trigger, using any of the four Flag signals carried between chassis using the MultiFrame cables.

NOTE

MultiFrame cables (such as the Y1223A and 1224A) can be hot plugged; that is, you do not need to cycle chassis power when connecting multiple chassis. The secondary chassis detects the presence of the MultiFrame cable and automatically switches its clock source to the primary chassis' clock output from the MultiFrame cable.

Interconnection


You will need to interconnect the chassis using MultiFrame cables, then make LAN and PCIe connections between the chassis and host PC. The illustration below shows an example of a three-chassis MultiFrame connection with a rack-mount host PC and a LAN switch. Instrument modules are not shown.

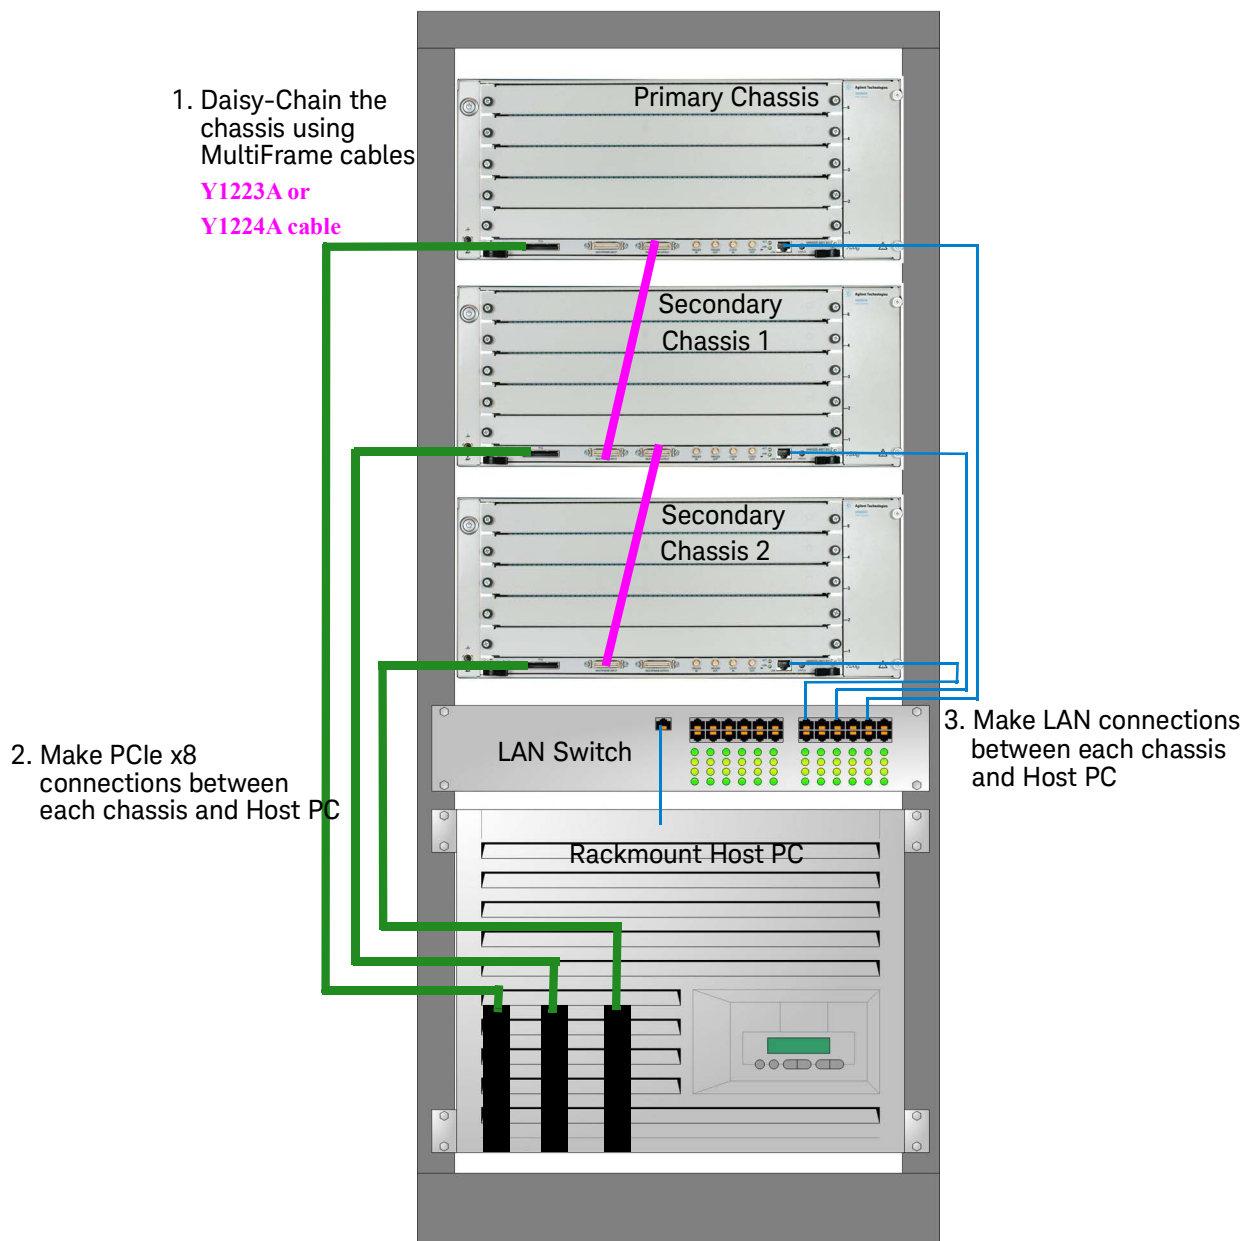

To Connect a MultiFrame Chassis:

Daisy-Chain the Chassis Interconnect the MultiFrame ports as follows:

- 1 Using a Keysight Multi-Chassis cable (see table below), connect the Primary Chassis's MULTIFRAME OUTPUT port to the first secondary chassis's MULTIFRAME INPUT port.

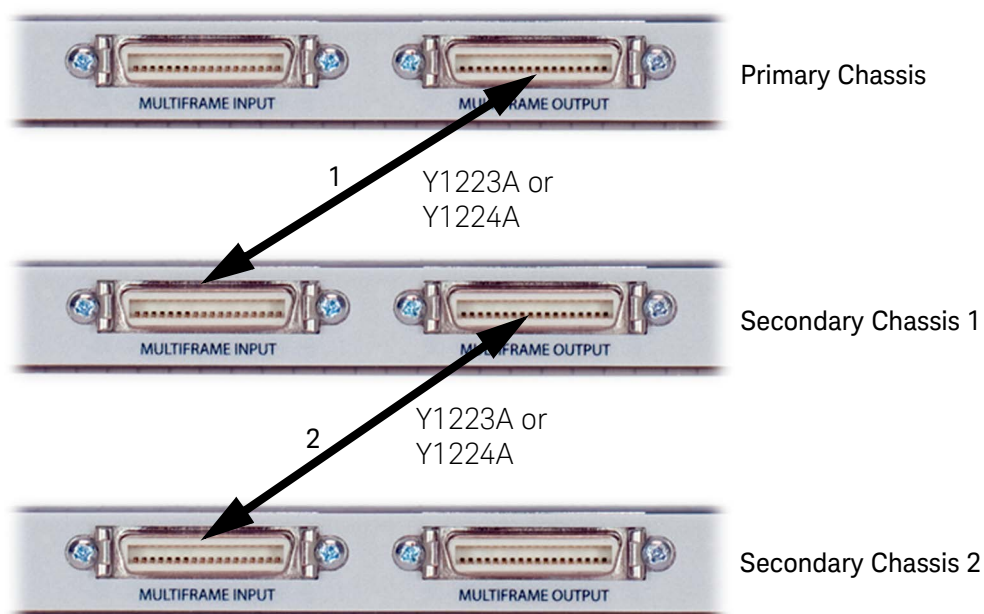

Keysight Part Number	Description
Y1223A	AXIe Multi-Chassis Cable, 0.5M
Y1224A	AXIe Multi-Chassis Cable, 3M

- 2 Repeat Step 1 from each secondary chassis's MULTIFRAME OUTPUT port to the next secondary chassis's MULTIFRAME INPUT port.

Make LAN Connections Make host LAN connections as follows:

- 1 Connect each chassis's LAN port to a Gigabit Ethernet switch or hub, and connect the hub to the host PC.

Make PCIe Connections Make host PCIe connections as follows:

- 1 For chassis requiring PCIe data transfer, connect each of those chassis's PCIe x8 ports to a PCIe x8 cable adapter in the host PC.
- 2 Some adjustment of BIOS or OS settings may be required to properly recognize and enumerate all instruments on the host PC's PCIe bus.

LVDS Local Bus

The M9502A and M9505A chassis backplane provides a *local bus* with 62 differential signaling pairs between each pair of adjacent instrument physical slots. This bus is the Low Voltage Differential Signaling or LVDS bus.

Availability of these signal lines to any module will depend on vendor implementation of the Zone 2 connectors and related commands to manage signaling on the local bus. See “[Interconnection](#)” on page 90 for a look at these connectors.

The chassis provides these local bus pairs on Zone 2 backplane connectors P20–P24. Most instrument modules will load connector P20 to access the trigger and timing bus, and will load connector J23 in order to utilize the AXIe base and data fabrics. Connector J23 provides the first 22 local bus pairs from backplane to module.

Modules designed to take maximum advantage of the AXIe local bus will load additional connectors (P24, P21) and expand the local bus up to 42 or 62 signals to each adjacent module slot. If P24 (or P24 and P21) are loaded on your module, likely the vendor is utilizing the local bus.

Check with the module vendor for any instrument in your AXIe chassis to determine if it utilizes the AXIe local bus and what functionality that feature provides you.

Electronic Keying (E-Keying)

Electronic keying is one of several capabilities AXIe inherits from the AdvancedTCA architecture. Like ATCA, AXIe promotes a fabric independent (also known as fabric-agnostic) backplane with respect to local bus connectivity.


Each module plugged into a chassis may provide various communication protocols and hardware signaling that connect to pins on the backplane that link adjacent modules together. In general, the backplane itself does not provide internal buffering, so a link connection between two adjacent modules is simply a wired connection, either configured point to point or tied together on a common bus. This allows different modules in the system to establish their own link protocols provided a connection path exists.

This flexibility frees the chassis configuration from dictating signal levels and protocols involved with any particular link. However, this flexibility presents a challenge: how to know whether the endpoints of a link are compatible or not.

NOTE

If you have modules in your system that are E-Keying compatible, refer to the documentation provided with your modules for detailed installation information.

E-Keying is a process in which compatible matches over links between different modules are identified and enabled to be used. The E-Keying process is handled by the chassis shelf manager. Each module in the chassis runs a Intelligent Platform Manager Controller (IPMC). These IPMCs interface with the shelf manager and each other using the Intelligent Platform Management Bus (IPMB). IPMB is basically a side channel protocol built on top of I2C that connects all modules in a chassis together. See the figure below.

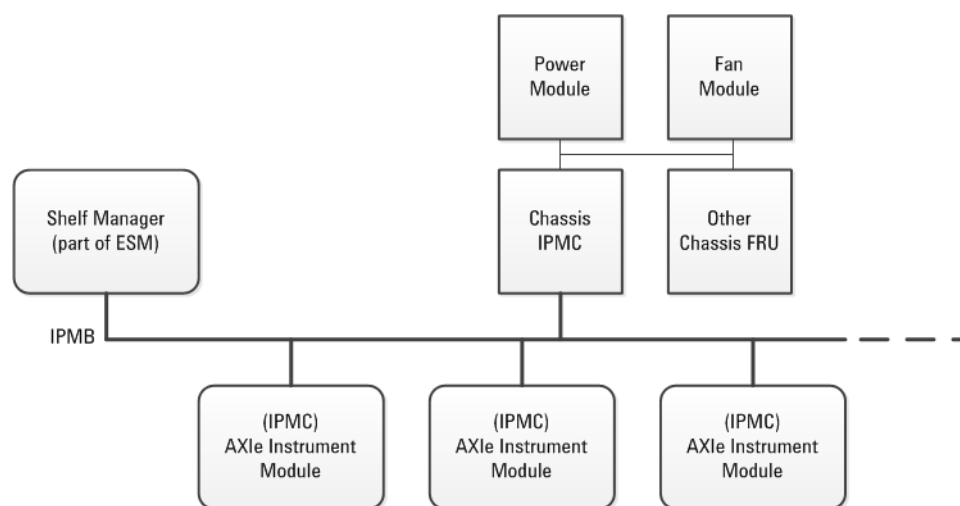

The shelf manager has two primary roles:

- Manage the inventory and infrastructure of a chassis by communicating with IPMCs in the chassis:
 - Power requirements of the modules and managing the power module
 - Chassis cooling control of the fan module.
 - Individual Field Replaceable Unit (FRU)* inventory located in non-volatile memory that tracks ATCA and AXIe attributes from each module
 - E-Keying interconnection resources among modules:
 - Point-to-point (P2P) connections for base, fabric, and update channel interfaces. P2P connections are predominately what AXIe is concerned with.
 - Bussed resources for clock and metallic test bus (in ATCA).
- External connectivity to a system manager, using an IPMI connection over Ethernet using a RMCP protocol.

* A field replaceable unit is a part that may be removed from a system and exchanged with another part or returned to a factory for service. Examples of FRUs may be a module card in a chassis slot, a fan tray, a power supply, and the chassis frame.

E-Keying Process

When the chassis powers on, the first step the shelf manager does in point-to-point (P2P) E-Keying is read the backplane P2P connectivity records from the chassis modules. These connectivity records specify the P2P interconnections the backplane routes between specific slots and specific channels on each slot.

Next, for each board loaded in the chassis, the shelf manager reads each board's Field Replaceable Unit (FRU) table for the P2P connections that board makes to the backplane. The shelf manager builds up a connection inventory of all the potential links a particular board can implement. This list is later used to examine the potential logical links each board has to other boards. Each potential link end has a link descriptor that identifies the following information:

- P2P interface on the backplane and a channel number within that interface
- The ports on a given channel that are involved with this link. This may include sets of differential signal pairs.
- Finally, the link type which identifies the specification entity, such as PICMG 3.x, AXIe 1.0, or other specification that fully describes the link classification. The link type may also be an OEM-defined value using a 128-bit Globally Universal Identifier (GUID); each card may support up to 15 different GUIDs.

The shelf manager goes through the backplane connection possibilities, identifying each end of a P2P connection and searches for a compatible link descriptors. If a pair of ends match, such as both ends are PCIe Express x4, then the shelf manager issues a "Set Port State (enable)" command to each board for that link. For the matches that are not found, the shelf manager issues a "Set Port State (disable)" command to ensure that incompatible link connections are kept off.

As a final note, the shelf manager is truly agnostic about specific details of a link protocol. This permits new protocols to be added without modification to the chassis.

For additional information on E-Keying, refer to the AdvancedTCA specification (<http://www.picmg.org>) and the AXIe specification (<http://www.axistandard.org>).

6 For Module Developers

This chapter provides a detailed look at the AXIe chassis backplane and connectors, provided as a quick reference for AXIe module developers.

Module Types	96
ATCA and AXIe Requirements	97
ATCA Requirements and Exceptions for AXIe 1.0	97
AXIe Extensions to AdvancedTCA®	99
Chassis Backplane Connections	100
M9502A Backplane	100
M9505A Backplane	101
Zone 1 Connector Layout	102
Zone 1 Connector Usage	102
Zone 1 Pin Assignments	103
Zone 2 Connector Layout	104
Zone 2 Connector Usage	105
Zone 2 Pin Assignments	106

Module Types

The AXIe chassis provide a wealth of options for high speed, low voltage differential (LVDS) signaling. Whether you can develop individual instrument modules or modular instrumentation sets, communication between modules may travel across the backplane.

Depending on your application, you have the flexibility create a variety of module types.

- Instrument Module: An instrument module can go in any slot and will typically use the AXIe trigger bus resources. It will not typically use the local bus unless it is part of an instrumentation set.
- Instrumentation Sets: AXIe provides the opportunity for you to create scalable, modular measurement and test systems which can occupy two or more chassis slots.
 - If you create a two-module instrumentation set intended to occupy adjacent slots, you can utilize up to 62 LVDS backplane local bus lines. This set would function in both the 2-slot and 5-slot chassis, and could be designed to function in any two adjacent slots of the M9505A. Refer to [“LVDS Local Bus”](#) on page 92 and [“Electronic Keying \(E-Keying\)”](#) on page 92.
 - You can also create instrumentation sets with up to five AXIe modules, and may implement backplane features and specify module placement as required.
 - Your multiple module instrumentation set can include an instrument hub module installed in slot 1. That hub may use AXIe trigger bus features, communicate between adjacent modules using the local bus, and provide the hub for a secondary x4 backplane data fabric to slots 2 through 5.

ATCA and AXIe Requirements

Overview

The Keysight AXIe (ATCA eXtensions for Instrumentation) chassis backplanes used in the M9502A and M9505A comply with the AXIe 1.0 Base Architecture Specification. AXIe 1.0 is based on AdvancedTCA® (ATCA) architecture, expanded with several *eXtensions*, all of which will remain electrically compatible with standard ATCA blades. These modifications provide timing, triggering, local bus signaling and data transport features.

Keysight provides this chapter as a quick backplane reference for developers of AXIe instrument and instrument hub modules. It gives a brief explanation of how the M9502A and M9505A chassis implement AXIe features, and provides signal connection pin assignments for module backplane connectors.

NOTE

This summary of AXIe requirements is not intended to replace the applicable module design standards, which specify mechanical, electrical, and logical interfaces between module and chassis. AXIe modules must comply with:

- AXIe 1.0 Base Architecture Specification, available at <http://www.axiestandard.org>
- AdvancedTCA® PICMG 3.0® Specification, available at <http://www.picmg.org>

Most ATCA modules should be able to work in an AXIe environment. Conversely, developers should design AXIe modules to be compatible in an ATCA environment.

ATCA Requirements and Exceptions for AXIe 1.0

Mechanical AXIe modules must meet all ATCA mechanical requirements for modules.

Exception: AXIe 1.0 chassis do not accommodate rear transition modules (RTM).

Hardware Platform (shelf) Management AXIe modules must incorporate the ATCA hardware platform management features.

Exceptions:

- AXIe uses an intelligent platform bus (IPMB) for platform management communication between the intelligent FRUs (for example: shelf manager, module IPMC) in a chassis. This IPMB conforms to the ATCA requirements for IPMB-0, but with no IPMB redundancy.
- AXIe modules are not required to support the complete hot swap capabilities of ATCA. However, the module's FRUs are required to support all of the operational states required for ATCA front boards.

- AXIe modules are not required to have the handle switches that sense the module's insertion and impending removal from the chassis nor the blue hot-swap LEDs.
- AXIe modules do not implement ATCA electronic keying, metallic test bus, and ringing bus.

Power Distribution Dual power supplies are provided to each slot. AXIe Modules may use either or both supply feeds, and must be able to operate over a range from -53VDC to -45VDC.

Data Transport AXIe modules must comply with all ATCA requirements for Zone 2 base and fabric interfaces.

Exceptions:

- AXIe modules only implement a single base interface channel (LAN channel 1).
- AXIe modules may connect to data fabric channel 1 or channel 2, or both.
- Data fabric channel 1, if used by the AXIe module, must implement a PCIe connection, operated from the supplied 100MHz reference clock (FCLK).
- Data fabric channel 2, if used by the AXIe module, may implement proprietary protocols.
- AXIe modules may connect to any of the CLK100, SYNC or STRIG signal pairs, any of the 12 AXIe TRIG pairs, and any number of available pairs on either or both local bus ports.

Synchronization Clock AXIe backplanes maintain the bused topology of most Synchronization Clock signals, and devices implement the same MLVDS signaling levels as ATCA.

Exceptions:

- AXIe architecture expands the use of the ATCA Synchronization Clock Interface. The signals and connector pin assignments for AXIe modules differ from ATCA.

No Update Channel Interface

Exception:

- The AXIe architecture does not implement the ATCA Update Channel Interface. AXIe backplanes implement a single bused MLVDS topology for the signals connecting to those Zone 2 connector contacts, and devices implement different signaling schemes as defined in the AXIe specification. AXIe modules must implement electronic keying appropriate to prevent incompatible connections between AXIe and ATCA devices installed in either system environment.

AXIe Extensions to AdvancedTCA®

AXIe expands the ATCA specification with several *eXtensions*, Zone 2 customizations which include:

- The AXIe *timing interface*, providing for specific clock distribution and signaling between the ESM and instrument slots 1 through 5. This interface includes timing resources SYNC, CLK100, and STRIG. See “[Chassis Synchronization and Triggering](#)” on page 75 for a complete functional description of these timing resources.
 - A 12 pair MLVDS *trigger bus*, TRIG[0,11], bused across all slots (the ESM slot and instrument slots 1 through 5). See “[Triggering](#)” on page 78.
 - A 62 pair *local bus* for signaling between adjacent instrument slots. See “[LVDS Local Bus](#)” on page 92.
 - The *data transport fabric*, a dual star x4 PCIe gen2 interface:
 - Channel 1 connects the ESM slot in a star configuration to provide an x4 link to each instrument slot
 - Channel 2 star connects slot 1—the instrument hub slot—in a star configuration to provide an x4 link to instrument slots 2 through 5
 - Uses a distributed PCIe fabric reference clock (FCLK) driven from the ESM
- See “[LVDS Local Bus](#)” on page 92.
- AXIe chassis implement an extended set of electronic keying records to assure consistent use of AXIe-defined backplane fabrics and resources.

In the AXIe chassis, the ESM acts as logical slot 1 for base fabric signaling (LAN) and channel 1 data fabric signaling (PCIe) signaling in addition to shelf management.

An *AXIe instrument hub module* is an instrument module that may optionally serve as a hub for vendor-defined protocols using the data fabric channel 2 star. An instrument hub module must be installed in slot 1 (logical slot 2), while other AXIe modules can be installed in any slot.


Chassis Backplane Connections

M9502A Backplane

The photo below reveals the M9502A backplane, with modules removed from all slots. The backplane provides Zone 2 connectors P20, P21, P23, P24 and Zone 1 connector J10. Connector designations are shown for instrument slot 1.

The backplane differs from the M9505A in that the 2-slot backplane does not utilize P22 (see “[M9505A Backplane](#)” on page 101).

A typical module layout is shown below the backplane photo, with the mating connectors J20 through J24 and P10.

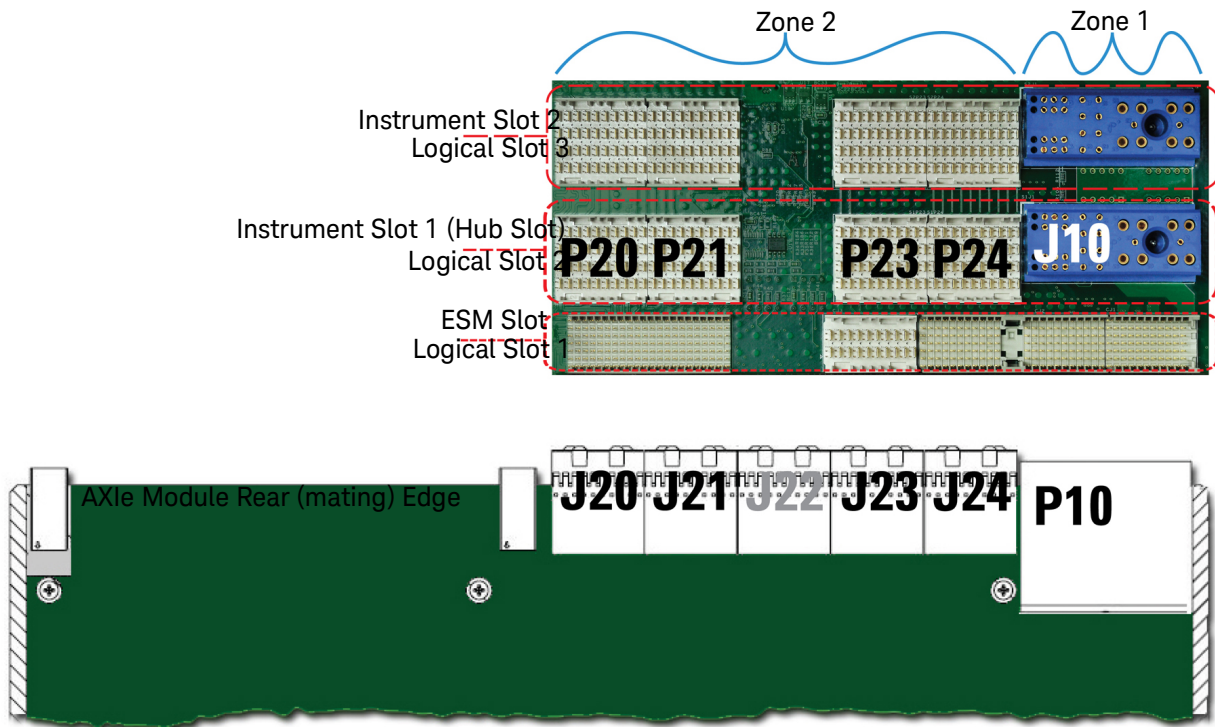


Depending on module type, you may implement all or none of J20–J24 for use in the 2-slot chassis. You will always need connector P10 to power the module. Optionally, you may need connector:

- J20 to use the timing and trigger buses
- J23 to use the base fabric (channel 1) and data fabric (channels 1 and/or 2) interfaces
- J23 and J20 to use up to 22 local bus interface pairs
- J24 to expand local bus use to 42 pairs
- J24 and J21 to expand local bus use to 62 pairs
- J22 if the module is to be used as an instrument hub for the M9505A

M9505A Backplane

The photo below reveals the M9505A backplane, with modules removed from all slots. The backplane provides connectors P20 through P24 and J10. Connector designations are shown for instrument slot 1. This layout differs from the M9502A backplane in that the M9505A provides an additional slot 1 connector, P22, to implement the data fabric channel 2 star.

A typical module connector layout is illustrated below the backplane photo, with the mating connectors J20 through J24 and P10.

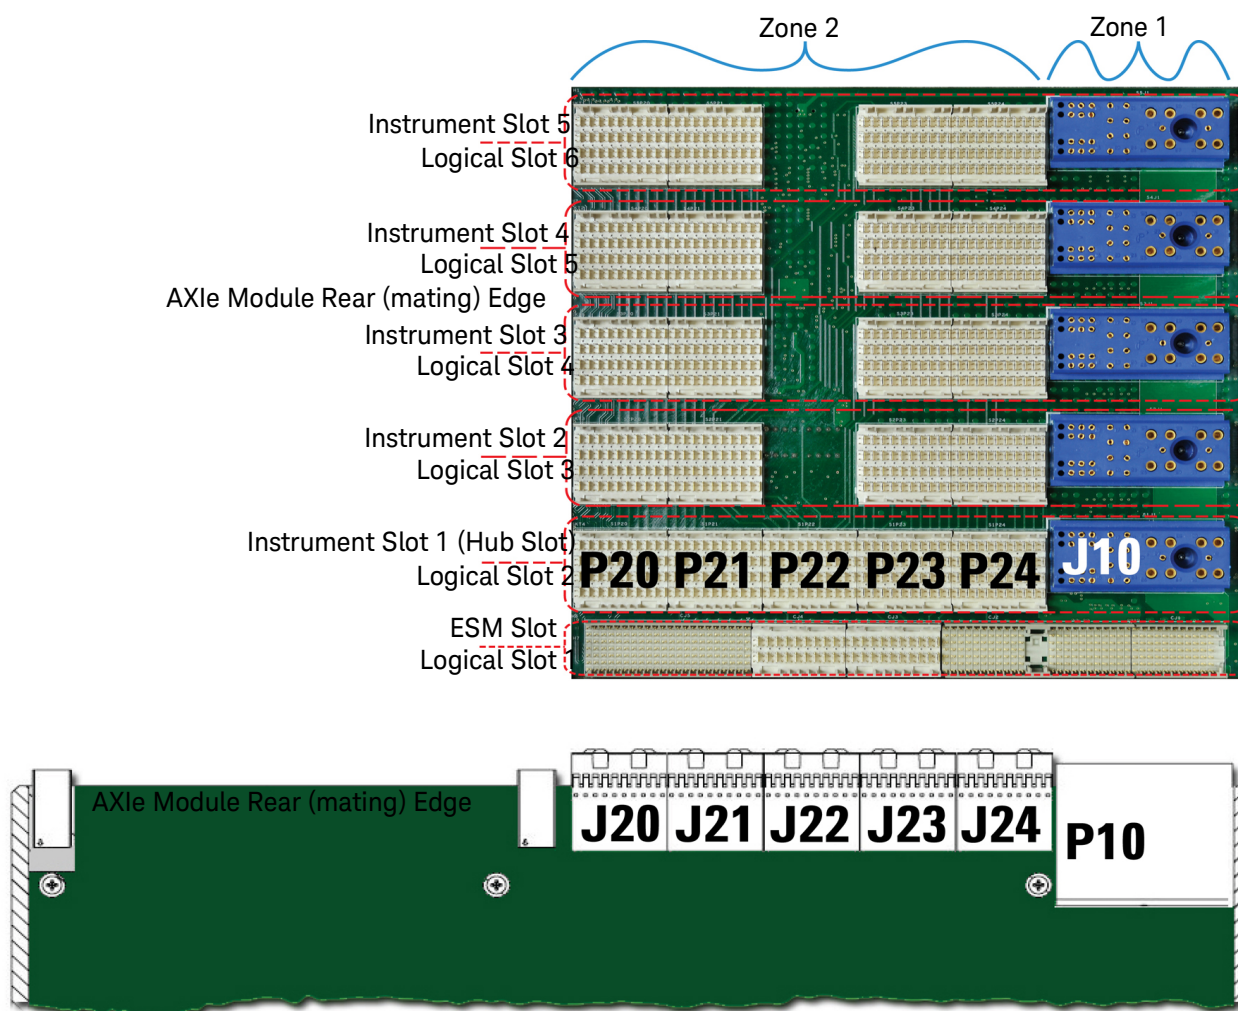

Depending on module type, you may implement all or none of J20-J24, just as with the M9502A. You will always need connector P10 to power the module.


Zone 1 Connector Layout

The blue jack at far right in each slot is J10, the AXle Zone 1 backplane connector. Through J10, the chassis distributes power feeds and provides shelf management. AXle modules should be capable of operating normally from either feed, over a range from -53V to -45V. Your module must provide mating connector P10.

The photo below shows slot 1 from the M9505A, normal chassis orientation. The pin layout for J10 (all slots) is illustrated below the photo.



Zone 1 Backplane Connector J10

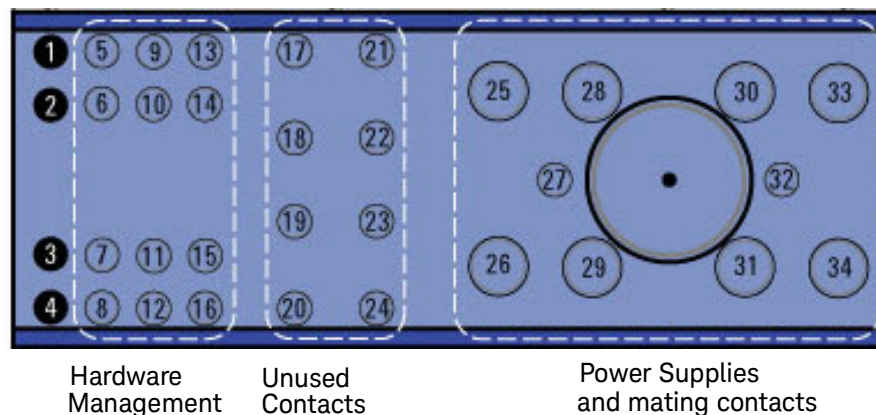

Zone 1 Connector Usage

Zone 1 provides these connections to each module slot:

- Dual redundant –48 VDC power supplies, per the ATCA specification.
- Hardware management circuits, including the Intelligent Platform Management Bus (IPMB) and Hardware Addressing (HA), per the ATCA specification.
- Metallic test and ringing generator buses are *not* provided in AXIe 1.0. Connector J10 will physically accommodate P10 pins 17-24 from a legacy ATCA module, but with no functionality.

Complete circuit definitions and design specifications can be found in the ATCA 3.0 base specification. Pin assignments are listed on the following page.

Zone 1 Pin Assignments

The Zone 1 pin assignments and circuit definitions for backplane connector J10 and module connector P10 are listed below:

Power Circuit Contacts for J10/P10

Contact Number	ATCA Designation	Description
25	SHELF_GND	Connection to Shelf Ground and safety ground
26	LOGIC_GND	Ground reference and return for Front Board-to-Front Board logic signals
27	ENABLE_B	Short pin for power sequencing, Feed B, tied to VRTN_B on backplanes
28	VRTN_A	-48 v return, Feed A
29	VRTN_A	-48 v return, Feed B
30	EARLY_A	-48 v input, Feed A pre-charge
31	EARLY_B	-48 v input, Feed B pre-charge
32	ENABLE_A	Short pin for power sequencing, Feed A, tied to VRTN_A on backplanes
33	-48V_A	-48 v input, Feed A, uses ENABLE_A to enable converters
34	-48V_B	-48 v input, Feed B, uses ENABLE_B to enable converters

Legacy ATCA Test Circuit Pins for J10/P10

Contact Number	ATCA Designation	Description
17	MT1_TIP	These backplane J10 contacts will physically accept pins from ATCA modules, but do not provide ATCA metallic test and ringing generator bus circuits.
18	MT2_TIP	
19	-RING_A	
20	-RING_B	
21	MT1_RING	
22	MT2_RING	
23	RRTN_A	
24	RRTN_B	

Hardware Management Circuit Contacts for J10/P10


Contact Number	ATCA Designation	Description
1-4		Reserved, do not connect
5	HA0	Hardware address bit 0
6	HA1	Hardware address bit 1
7	HA2	Hardware address bit 2
8	HA3	Hardware address bit 3
9	HA4	Hardware address bit 4
10	HA5	Hardware address bit 5
11	HA6	Hardware address bit 6
12	HA7/P	Hardware address bit 7 (odd parity bit)
13	SCL_A	IPMB clock, Port A
14	SDA_A	IPMB data, Port A
15	SCL_B	IPMB clock, Port B
16	SDA_B	IPMB data, Port B

Zone 2 Connector Layout

The Zone 2 connectors provide pins for up to 200 differential signaling pairs per slot (40 pairs per connector), although most slots and many modules will not feature all these connectors.

Zone 2 provides the signal connections for the data transport fabric and AXIe extensions, using P20 through P24; the white plugs in each instrument slot. Only instrument hub slot 1 on the M9505A uses P22, as shown in the single slot photo below. For complete backplane photos, see “M9502A Backplane” on page 100 and “M9505A Backplane” on page 101.

Each Zone 2 plug provides 40 differential signal contact pairs with ground in 10 columns, four pairs to a column. The pin layout for P20 (typical for all Zone 2 connectors) is illustrated below the slot photo.

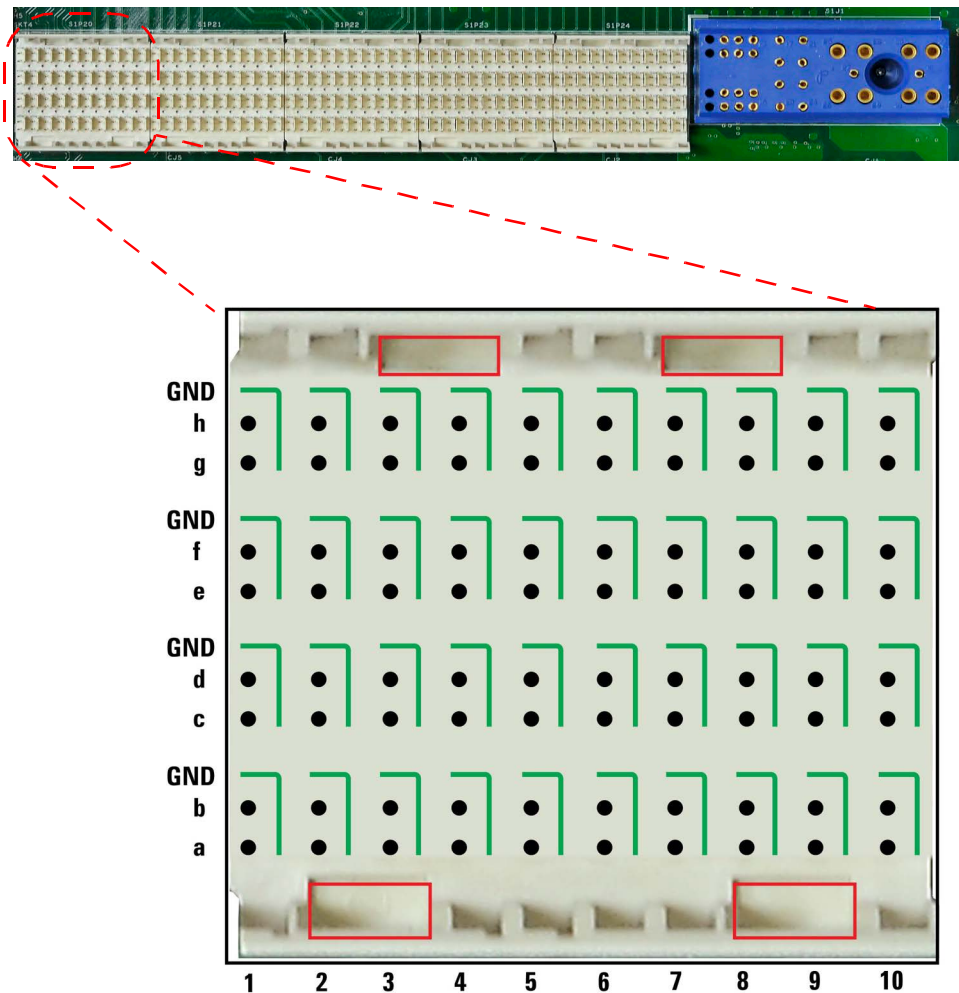

These plugs use male contacts; the mating module connectors J20 through J24 use female contacts. Note the areas shown with red boxes; these are for alignment/keying.

Zone 2 Connector Usage

Your module may implement any or none of the Zone 2 connectors. If you want:

- to utilize the AXIe trigger, timing, data, and local bus (22 pair) features in your module, load connectors J20 and J23.
- to expand the local bus up to 62 pair, load connectors J24 and J21.
- to complete a five-slot star hub for data fabric channel 2—used in instrument hub modules only—load connector J22.

The table below provides a locational map linking each AXIe Zone 2 interface type (function) with its backplane connectors

Interface Type	Interface	Number of Signal Pairs	Chassis Backplane Connector
Trigger Bus	TRIG[0,11]	12	P20
Timing Bus	STRIG, SYNC, CLK100 and FCLK	4	P20
Local Bus	pairs 0 through 7	8	P20
	pairs 8 through 17	10	P23
	pairs 18 through 37	20	P24
	pairs 38 through 41	4	P20
	pairs 42 through 61	20	P21
Base Channel		4	P23
Fabric Channel 1 (PCIe x4)	from ASM star hub	8	P23
Fabric Channel 2 (User-defined)	from slot 1 instrument hub module	8	P23

For both chassis, these pairs are also provided to slot 1:

Interface Type	Interface	Number of Signal Pairs	Backplane Connector
Fabric Channel 2	Channel 2 star hub (implemented by hub module in slot 1) one x4 connection each to slots 1 and 2	16	P23

For the M9505A chassis only, backplane connector P22 is added to slot 1:

Interface Type	Interface	Number of Signal Pairs	Backplane Connector
Fabric Channel 2	Channel 2 star hub one x4 connection each to slots 3 through 5	24	P22

Complete circuit definitions and design specifications can be found in the ATCA and AXIe specifications. Pin assignments are listed on the following page.

Zone 2 Pin Assignments

The Zone 2 pin assignments and circuit definitions for connector pairs P20/J20 through P24/J24 are listed below. For the local bus assignments:

- Pin designations beginning with LBL connect to the adjacent lower slot
- Pin designations beginning with LBR connect to the adjacent upper slot

P20/J20

Row	Interface	Instrument Slot 1-5 (Logical Slot 2-6)							
		ab		cd		ef		gh	
1	Trigger	TRIG[0]+	TRIG[0]-	TRIG[1]+	TRIG[1]-	TRIG[2]+	TRIG[2]-	TRIG[3]+	TRIG[3]-
2	Trigger	TRIG[4]+	TRIG[4]-	TRIG[5]+	TRIG[5]-	TRIG[6]+	TRIG[6]-	FCLK+	FCLK-
3	Trigger	TRIG[7]+	TRIG[7]-	TRIG[8]+	TRIG[8]-	TRIG[9]+	TRIG[9]-	TRIG[0]+	TRIG[0]-
4	Timing	TRIG[11]+	TRIG[11]-	STRIG+	STRIG-	SYNC100+	SYNC100-	CLK100+	CLK100-
5	Local Bus	LBL[0]+	LBL[0]-	LBL[1]+	LBL[1]-	LBR[0]+	LBR[0]-	LBR[1]+	LBR[1]-
6		LBL[2]+	LBL[2]-	LBL[3]+	LBL[3]-	LBR[2]+	LBR[2]-	LBR[3]+	LBR[3]-
7		LBL[4]+	LBL[4]-	LBL[5]+	LBL[5]-	LBR[4]+	LBR[4]-	LBR[5]+	LBR[5]-
8		LBL[6]+	LBL[6]-	LBL[7]+	LBL[7]-	LBR[6]+	LBR[6]-	LBR[7]+	LBR[7]-
9		LBL[38]+	LBL[38]-	LBL[39]+	LBL[39]-	LBR[38]+	LBR[38]-	LBR[39]+	LBR[39]-
10		LBL[40]+	LBL[40]-	LBL[41]+	LBL[41]-	LBR[40]+	LBR[40]-	LBR[41]+	LBR[41]-

P21/J21

Row	Interface	Instrument Slot 1-5 (Logical Slot 2-6)							
		ab		cd		ef		gh	
1	Add for 62-Pair Local Bus	LBL[42]+	LBL[42]-	LBL[43]+	LBL[43]-	LBR[42]+	LBR[42]-	LBR[43]+	LBR[43]-
2		LBL[44]+	LBL[44]-	LBL[45]+	LBL[45]-	LBR[44]+	LBR[44]-	LBR[45]+	LBR[45]-
3		LBL[46]+	LBL[46]-	LBL[47]+	LBL[47]-	LBR[46]+	LBR[46]-	LBR[47]+	LBR[47]-
4		LBL[48]+	LBL[48]-	LBL[49]+	LBL[49]-	LBR[48]+	LBR[48]-	LBR[49]+	LBR[49]-
5		LBL[50]+	LBL[50]-	LBL[51]+	LBL[51]-	LBR[50]+	LBR[50]-	LBR[51]+	LBR[51]-
6		LBL[52]+	LBL[52]-	LBL[53]+	LBL[53]-	LBR[52]+	LBR[52]-	LBR[53]+	LBR[53]-
7		LBL[54]+	LBL[54]-	LBL[55]+	LBL[55]-	LBR[54]+	LBR[54]-	LBR[55]+	LBR[55]-
8		LBL[56]+	LBL[56]-	LBL[57]+	LBL[57]-	LBR[56]+	LBR[56]-	LBR[57]+	LBR[57]-
9		LBL[58]+	LBL[58]-	LBL[59]+	LBL[59]-	LBR[58]+	LBR[58]-	LBR[59]+	LBR[59]-
10		LBL[60]+	LBL[60]-	LBL[61]+	LBL[61]-	LBR[60]+	LBR[60]-	LBR[61]+	LBR[61]-

P22/J22 (Used only on the Hub Slot 1)

Row	Interface	ONLY Instrument Hub Slot 1 (Logical Slot 2)							
		ab		cd		ef		gh	
1		NC	NC	NC	NC	NC	NC	NC	NC
2		NC	NC	NC	NC	NC	NC	NC	NC
3		NC	NC	NC	NC	NC	NC	NC	NC
4		NC	NC	NC	NC	NC	NC	NC	NC
5	Fabric Ch 2	TX2[5]+	TX2[5]-	RX2[5]+	RX2[5]-	TX3[5]+	TX3[5]-	RX3[5]+	RX3[5]-
6	Hub to Slot 3	TX0[5]+	TX0[5]-	RX0[5]+	RX0[5]-	TX1[5]+	TX1[5]-	RX1[5]+	RX1[5]-
7	Fabric Ch 2	TX2[4]+	TX2[4]-	RX2[4]+	RX2[4]-	TX3[4]+	TX3[4]-	RX3[4]+	RX3[4]-
8	Hub to Slot 4	TX0[4]+	TX0[4]-	RX0[4]+	RX0[4]-	TX1[4]+	TX1[4]-	RX1[4]+	RX1[4]-
9	Fabric Ch 2	TX2[3]+	TX2[3]-	RX2[3]+	RX2[3]-	TX3[3]+	TX3[3]-	RX3[3]+	RX3[3]-
10	Hub to Slot 5	TX0[3]+	TX0[3]-	RX0[3]+	RX0[3]-	TX1[3]+	TX1[3]-	RX1[3]+	RX1[3]-

P23/J23

Row	Interface	Instrument Slot 1-5 (Logical Slot 2-6)							
		ab		cd		ef		gh	
1	Fabric	TX2[2]+	TX2[2]-	RX2[2]+	RX2[2]-	TX3[2]+	TX3[2]-	RX3[2]+	RX3[2]-
2	Channel 2	TX0[2]+	TX0[2]-	RX0[2]+	RX0[2]-	TX1[2]+	TX1[2]-	RX1[2]+	RX1[2]-
3	Fabric	TX2[1]+	TX2[1]-	RX2[1]+	RX2[1]-	TX3[1]+	TX3[1]-	RX3[1]+	RX3[1]-
4	Channel 1	TX0[1]+	TX0[1]-	RX0[1]+	RX0[1]-	TX1[1]+	TX1[1]-	RX1[1]+	RX1[1]-
5	Base Channel 1	BI_DA1+ (Tx1+)	BI_DA1- (Tx1-)	BI_DB1+ (Rx1+)	BI_DB1- (Rx1-)	BI_DC1+	BI_DC1-	BI_DD1+	BI_DD1-
6	Local Bus	LBL[8]+	LBL[8]-	LBL[9]+	LBL[9]-	LBR[8]+	LBR[8]-	LBR[9]+	LBR[9]-
7		LBL[10]+	LBL[10]-	LBL[11]+	LBL[11]-	LBR[10]+	LBR[10]-	LBR[11]+	LBR[11]-
8		LBL[12]+	LBL[12]-	LBL[13]+	LBL[13]-	LBR[12]+	LBR[12]-	LBR[13]+	LBR[13]-
9		LBL[14]+	LBL[14]-	LBL[15]+	LBL[15]-	LBR[14]+	LBR[14]-	LBR[15]+	LBR[15]-
10		LBL[16]+	LBL[16]-	LBL[17]+	LBL[17]-	LBR[16]+	LBR[16]-	LBR[17]+	LBR[17]-

P24/J24

Row	Interface	Instrument Slot 1-5 (Logical Slot 2-6)							
		ab		cd		ef		gh	
1	Add for 42-Pair Local Bus	LBL[18]+	LBL[18]-	LBL[19]+	LBL[19]-	LBR[18]+	LBR[18]-	LBR[19]+	LBR[19]-
2		LBL[20]+	LBL[20]-	LBL[21]+	LBL[21]-	LBR[20]+	LBR[20]-	LBR[21]+	LBR[21]-
3		LBL[22]+	LBL[22]-	LBL[23]+	LBL[23]-	LBR[22]+	LBR[22]-	LBR[23]+	LBR[23]-
4		LBL[24]+	LBL[24]-	LBL[25]+	LBL[25]-	LBR[24]+	LBR[24]-	LBR[25]+	LBR[25]-
5		LBL[26]+	LBL[26]-	LBL[27]+	LBL[27]-	LBR[26]+	LBR[26]-	LBR[27]+	LBR[27]-
6		LBL[28]+	LBL[28]-	LBL[29]+	LBL[29]-	LBR[28]+	LBR[28]-	LBR[29]+	LBR[29]-
7		LBL[30]+	LBL[30]-	LBL[31]+	LBL[31]-	LBR[30]+	LBR[30]-	LBR[31]+	LBR[31]-
8		LBL[32]+	LBL[32]-	LBL[33]+	LBL[33]-	LBR[32]+	LBR[32]-	LBR[33]+	LBR[33]-
9		LBL[34]+	LBL[34]-	LBL[35]+	LBL[35]-	LBR[34]+	LBR[34]-	LBR[35]+	LBR[35]-
10		LBL[36]+	LBL[36]-	LBL[37]+	LBL[37]-	LBR[36]+	LBR[36]-	LBR[37]+	LBR[37]-

7 Troubleshooting and Service

This chapter provides instructions for updating the chassis firmware, troubleshooting problems with your AXIe chassis, a list of user-replaceable parts, and instructions for parts replacement.

Updating the Chassis Firmware	110
Troubleshooting	111
Overview	111
Normal Chassis Operating Behavior	111
Chassis Hardware Troubleshooting	113
User-Replaceable Parts	117
To Replace the Power Supply Unit	118
To remove the PSU from the M9502A	118
To remove the PSU from the M9505A	120
To Replace the Fan Tray	124
To Replace the Embedded System Module	124

Updating the Chassis Firmware

The current version of your chassis' firmware is listed on the Home Page of the web interface. See "[Home Page](#)" on page 44. You can update the AXIe chassis firmware to take advantage of refinements and added features as they become available. To check if a later version is available, go to the website below for your product, then click the tabs/links indicated:

M9502A: www.keysight.com/find/M9502A, then **Technical Support > Drivers & Software > Firmware Update**

M9505A: www.keysight.com/find/M9505A, then **Technical Support > Drivers & Software > Firmware Update**

Revision string numbering format

The chassis firmware revision string is organized in the following format:

<Chassis Class>.<Firmware Version>.<Chassis Component>.<Axxxx>[-<Bxxxx>]...

Where: **<Chassis Class>** is either

F2AXIdentifies an M9502A 2 slot AXIe chassis

F5AXIdentifies an M9505A 5 slot AXIe chassis

<Firmware Version> is structured as: **<major>.<minor>.<build>**

<major>Identifies the major release number.

<minor>Identifies the minor release number.

<build>Identifies a build number.

<Chassis Component> is a four digit number, **<xxxx>**

Where **<xxxx>** is a hexadecimal value identifying the backplane firmware revision. The backplane revision may be different between a 2 slot and 5 slot chassis. While it is possible to move an ESM from one chassis to another, the revision of the target chassis may not reside at the same revision level installed on the ESM (and its previous chassis). It is important to review the revision string after relocation to verify that the complete revision string is current. If not up-to-date, run through the firmware update process.

<Axxxx>; <Bxxxx>...

<xxxx> is a hexadecimal value for the firmware component. The actual content of these components is for Keysight internal use only.

A firmware revision example: F2AX-1.3.37-0103-A002e-CA1.0-DA1.0-E1.3

This example shows an M9502A chassis with firmware revision 1.3.37. The backplane revision is 0103 and component A is at revision 002e, component CA is at revision 1.0, component DA is at 1.0, and component E is at 1.3. Refer to the M9502A/M9505A AXIe Chassis Firmware Update Guide for specific details regarding updating the chassis firmware.

Troubleshooting

Overview

The Keysight AXIe chassis is typically used as part of a complex test system, where system refers to the complete hardware/software system including:

- One or more AXIe chassis with installed application modules
- Connections from modules to devices under test (DUT)
- A host PC running Keysight Connection Expert software, chassis and module device drivers, and programming environment software
- LAN connection from the Host PC to Chassis Web Interface software
- A compatible PCIe host cable adapter installed and configured in the PC
- Compatible PCIe and LAN interface cables

Troubleshooting that complete test system is beyond the scope of this chapter. Keysight recommends that to properly isolate complex operational problems, you take all routine steps to rule out a host software or connectivity issue.

You may also wish to physically isolate the chassis from your DUT or installed modules, to distinguish a module hardware issue from a chassis hardware issue. As a temporary measure, you may (with the chassis powered down) partially remove a module without disturbing DUT connections, by removing it far enough to disengage it from the chassis backplane.

Keysight recommends returning a failing chassis to Keysight Service. They will inspect, test and replace failed components, then retest the chassis.

In general, an AXIe chassis has three major subsystems that can be replaced to service a failing chassis:

- Fan Tray
- Power Supply Unit (PSU)
- Embedded System Module (ESM)

This chapter assumes you can identify a suspected faulty subsystem, or have access to known good replacement subsystems you can swap to help isolate a hardware problem. Detailed step-by-step instructions are provided for fan tray, PSU, and ESM replacement.

Normal Chassis Operating Behavior

When the chassis is new and operating properly, familiarize yourself with its expected normal power-up and power-down behavior. This behavior involves these observable components:

- Front panel power switch (mechanical feel and indicator light)
- Rear panel circuit breaker (mechanical feel and resulting relay activation)

- ESM front panel STATUS light
 - PSU fan operation
 - Chassis fan operation
 - Web Interface Chassis Health page (fan speeds, fan settings, fan/cooling system status, backplane and slot temperatures)
- 1** OFF: With the chassis plugged into a correct power main, the rear panel circuit breaker open (OFF) and the front panel switch off (flush with chassis), all chassis lights should be extinguished.
 - 2** BREAKER CLOSED: Close the circuit breaker (ON). You should observe:
 - The breaker handle engages with a solid click, overcoming slight spring pressure.
 - After a slight delay, you may hear a softer click; this is a relay closing in the PSU. You may not hear this relay close, due to PSU fan noise.
 - The front panel power switch may light briefly, then extinguish.
 - The two PSU fans will initially spin up to maximum speed, then gradually step down in speed (4-5 distinct steps) to idle over two seconds. These fans should remain on at idle with the breaker closed.
 - 3** ON: Press the ON/STANDBY switch (turn the chassis ON). You should observe:
 - The switch will depress (ON) and will light.
 - The chassis fans will briefly turn on at high speed, then drop to and remain at low speed, until chassis load dictates otherwise.
 - The PSU fans will increase to and remain at high speed.
 - The ESM front panel STATUS light will cycle as follows:
 - Amber - ESM is booting; for about 20 seconds
 - Flashing green - briefly
 - Steady green - booted
 - Steady red - the ESM has detected failure and requires service.
 - 4** WHILE ON: With the chassis ON, you can monitor real-time shelf management functions using the chassis's Web Interface.
 - 5** STANDBY: Press the ON/STANDBY switch again. You should observe:
 - The switch should return to the flush position (OFF) and its light will extinguish.
 - The ESM front panel STATUS light will extinguish.
 - The chassis fans will turn off.
 - The PSU fans will slowly drop in speed, while continuing to cool the PSU from operating temperature to standby temperature.
 - Once the PSU cools down, the PSU fans will return to a steady idle speed.
 - 6** OFF: Open the circuit breaker (OFF). You should observe:

- The breaker handle releases spring pressure.
- After a slight delay, you should hear a soft click; this is a relay opening in the PSU. You may not hear this relay open, due to PSU fan noise.
- The front panel power switch may light briefly, then extinguish.
- The two PSU fans will turn off.

Chassis Hardware Troubleshooting

Chassis Fans

If module loads are kept within the 200W per slot rating and adequate ventilation is provided around the chassis, the chassis fans are designed to automatically cool the chassis. If the chassis powers up properly, the fans should be turning at all times, with speed in proportional to thermal load.

There are a few reasons you may suspect a fan tray failure:

- One or more fans does not turn.
- A fan makes excessive bearing noise.
- You observe reduced speed for one or more fans relative to the others.
- One or more fans do not behave as described in “**Normal Chassis Operating Behavior**” on page 111.
- You experience an overheat condition, whether detected by the chassis Health Monitor, module monitoring software or other means.

In the event you experience unacceptably high chassis or module operating temperatures or other indications of fan failure, follow the procedure below.

To Check Chassis Fan Operation In the event you experience unacceptably high chassis or module operating temperatures, or other indications of fan failure, follow the procedure below.

- 1 Visually check that all three (M9502A) or six (M9505A) fans are turning. If any fans are not turning, check for and remove obstructions. If there is evidence of excessive buildup on the fan blades, remove the fan tray to clean and reinsert it (see [page 124](#)), and recheck. If any fans still do not turn, replace the fan tray. Else continue.
- 2 Using the Web Interface, access the Chassis Health page. In the Sensors section, each fan is listed individually, with real time speed in rpm.
- 3 The six speeds should be reasonably close. Identify any that turn more slowly than the group. Any large deviation may indicate reveal early signs of fan failure.
- 4 Below the fan speed readouts are your fan settings. You may set a higher fan speed to see if the fans are responsive.

- 5 For fan noise problems, make sure which fans are noisy or not turning properly, by visually inspecting both the PSU and chassis fans through the side of the chassis.
- 6 For all routine chassis fan failures, replace the fan tray assembly (see [“To Replace the Fan Tray”](#) on page 124). For PSU fan failures, replace the PSU (see [“To Replace the Power Supply Unit”](#) on page 118).

If the fans are operating correctly and you still have high temperatures, reduce your chassis load or troubleshoot installed modules.

Power Supply Unit (PSU)

The PSUs are self regulating, constant voltage supplies that will shut themselves down (or not power up at all) if they are out of spec. These are standard ATCA supplies.

The PSU operation is binary. If the supply is delivering voltage within a very wide range, it will turn on its output and power up the chassis. You can then view PSU voltages using the Web Interface. If the system does not power up, it likely has failed and should be replaced (see [“To Replace the Power Supply Unit”](#) on page 118).

Embedded System Module (ESM)


If, upon power up, the ESM does not boot to a steady green STATUS light, replace the ESM (see [“To Replace the Embedded System Module”](#) on page 124).

If replacing the PSU or ESM does not correct an operating problem, and the ESM still fails to boot to a steady green STATUS light, the problem is in the remainder of the chassis; replace it.

To Reset ESM DIP Switches The ESM has several sets of dual in-line package (dip) switches. Should you believe any of these may have been changed, you may verify and reset them to their correct positions; see photo and table below.


NOTE

Most of these switches are reserved for factory testing purposes or reserved for future use and should not be changed.

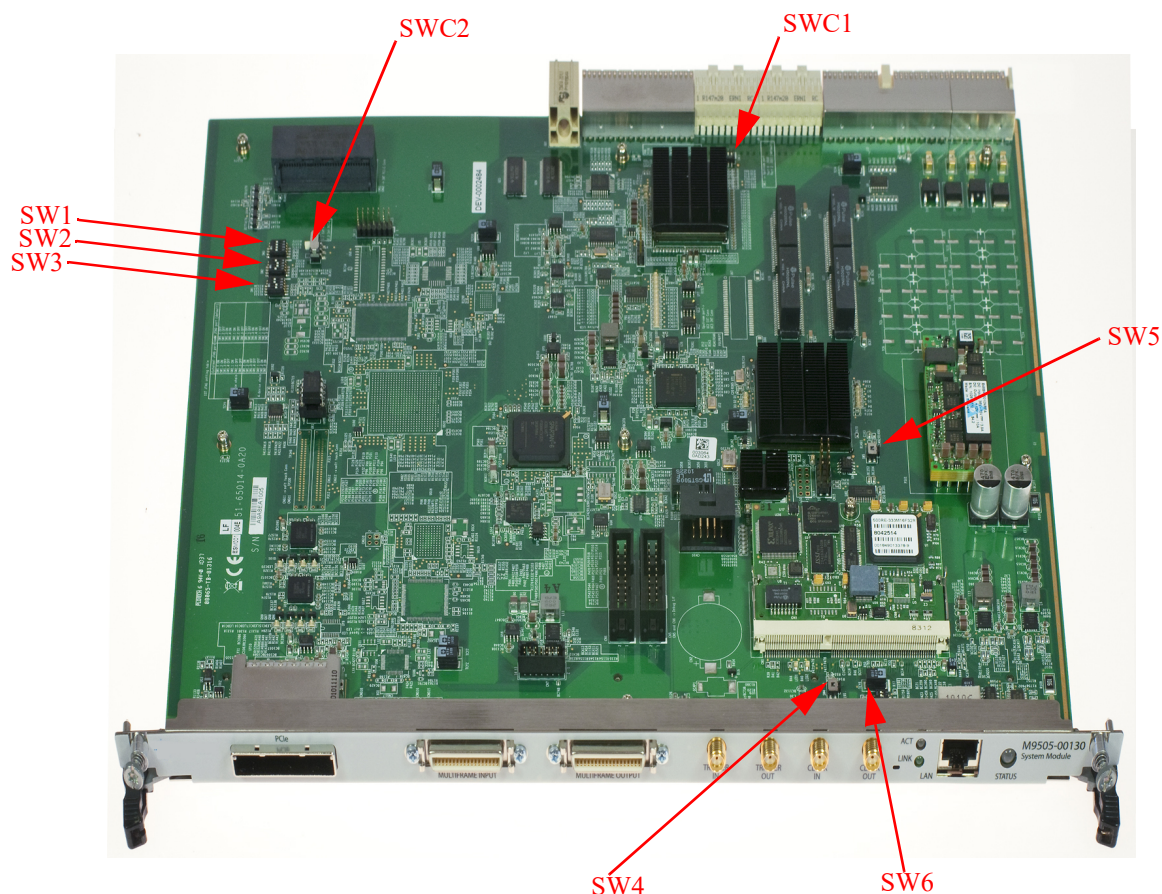

Switch Number on ESM	Factory Switch Setting	What it Does
SW1	0011	JTAG Testing (see silk-screen)
SW2	0111	JTAG Testing (see silk-screen)
SW3	1111	JTAG Testing (see silk-screen)
SW4	N/A	Reserved (momentary contact)
SW5	N/A	Reserved (momentary contact)
SW6	2 - left (see below)	Set PCIe Gen 2 (default) speed or Gen 1 speed
	1 - left (see below)	Reserved
SWC1	0010	Upstream Port
SWC2	Left	Internal/External PCIe setting (see silk-screen)

A DIP switch (SW6) on the ESM configures the PCIe operational mode setting. The default mode is PCIe Gen 2 operation. If your controller cannot enumerate the AXIe chassis, switch to PCIe Gen 1 speed behavior. See the following figure.

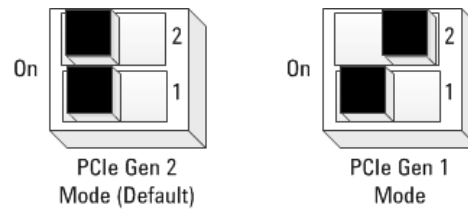

The Chassis Module Configuration Page (“[Module Configuration Page](#)” on page 47) indicates the current PCIe mode.

NOTE

Turn chassis power off before setting this switch. After setting the switch to either position, the host PC must have power cycled to re-enumerate the chassis.

WARNING

This is a Safety Protection Class I Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited.

User-Replaceable Parts

The following user-replaceable assemblies and accessories are available from Keysight:

AXle Mainframe	Description of Parts Kit or Subassembly	Keysight Part Number
M9502A	2-Slot Chassis Fan Tray	M9502-00017
	2-Slot Chassis Power Supply Unit	M9502-64800
	AXle Embedded System Module (ESM)	M9505-00130
	2-Slot Chassis Bumper Kit (includes one handle)	N5650-00018
	2-Slot Chassis Rackmount Kit	N5650-00020
	AXle Filler Panel Module	N5650-00080
M9505A	5-Slot Chassis Fan Tray	M9505-00017
	5-Slot Chassis Power Supply Unit	M9505-64800
	AXle Embedded System Module (ESM)	M9505-00132
	5-Slot Chassis Bumper Kit (includes two handles)	M9505-47901
	5-Slot Chassis Rackmount Kit	M9505-00020
	AXle Filler Panel Module	N5650-00080

Other parts originally supplied with the mainframe may be available from Keysight.

To Replace the Power Supply Unit

PSU replacement should be performed at a static-safe work station (see “**ESD Precautions**” on page 11), preferably on the bench. While it is possible—given adequate room for access—to perform this job with the chassis rack-mounted, extra caution must be taken to avoid damage to the chassis’ back panel wiring or loss of small parts.

To remove the PSU from the M9502A


Tools needed: #8 and #10 Torx drivers.

- 1 Power down and disconnect the power cord from the chassis.


WARNING

To prevent electrical shock, disconnect the instrument from mains before attempting to replace components.


- 2 If the chassis is rack-mounted, remove it from the rack.
- 3 If installed, remove the carry handle and rear bumper (see “**To Remove the Carry Handle and Bumpers from the M9502A**” on page 30).
- 4 Position the chassis top panel down. Remove the three #8 Torx flat head screws from rear edge of the bottom panel.

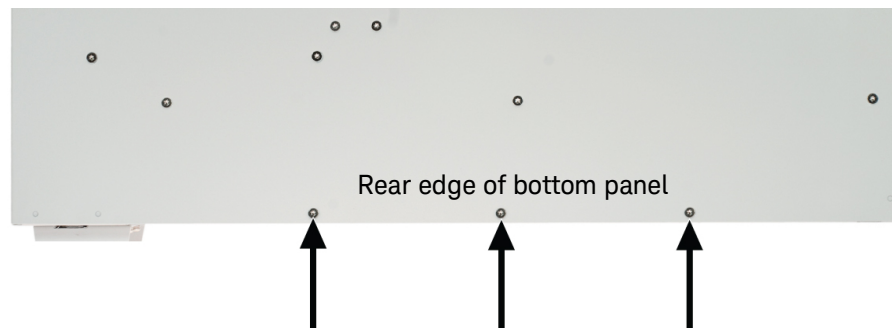


- 5 Flip the chassis over onto bottom panel (normal orientation). Remove the three #8 Torx flat head screws from rear edge of the top panel.

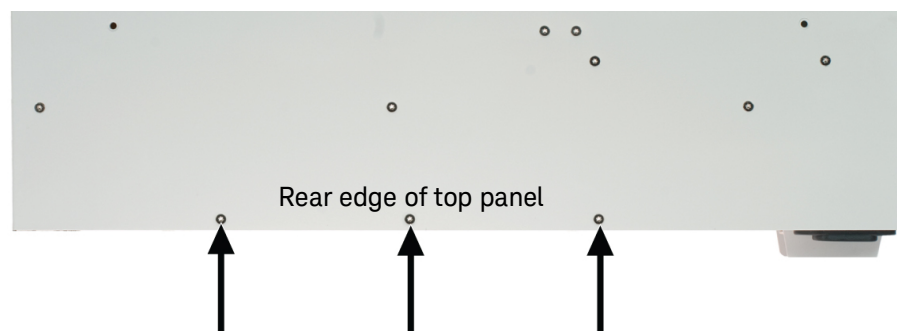


- 6 Remove the four #8 Torx flat head screws from the rear panel.

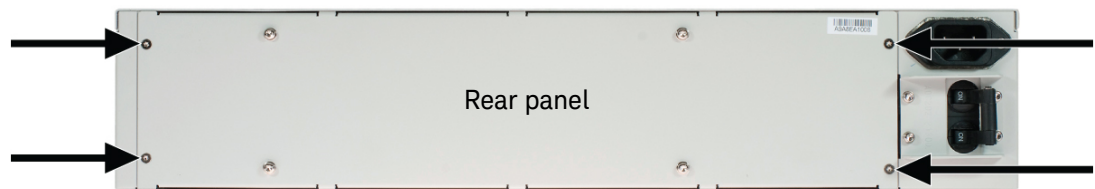

- 7 The rear panel is now detached from the chassis. Take care not to strain the power connections between the rear panel and chassis.
- 8 Rotate the rear panel away from the left side of the chassis, as shown below.
- 9 Remove the four #10 Torx round head screws holding the PSU to the rear panel.
- 10 While holding the rear panel firmly in one hand, pull the PSU out of its blue chassis connector, in the direction shown below.

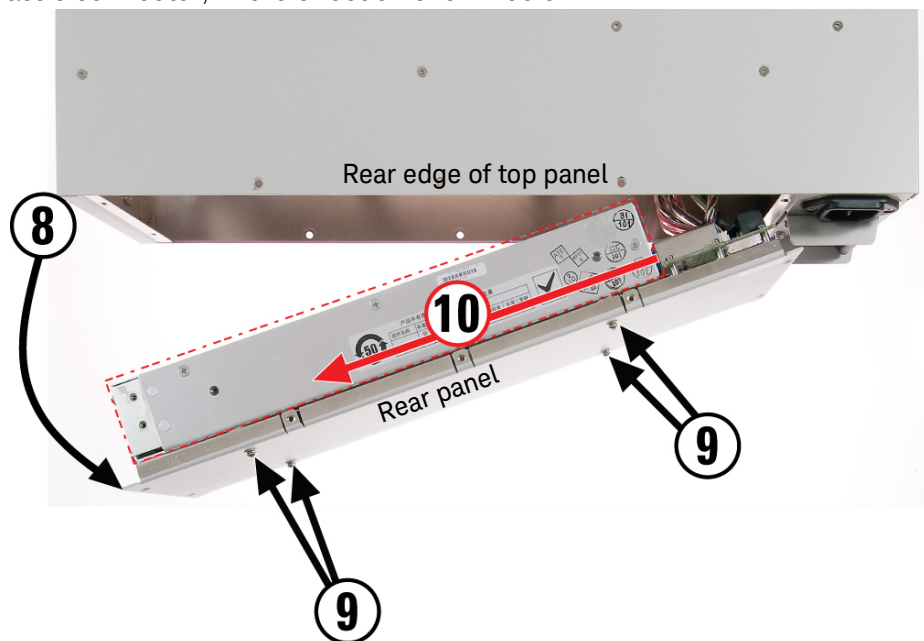

- 11 The removed PSU is shown below, in proximity to its chassis connector.

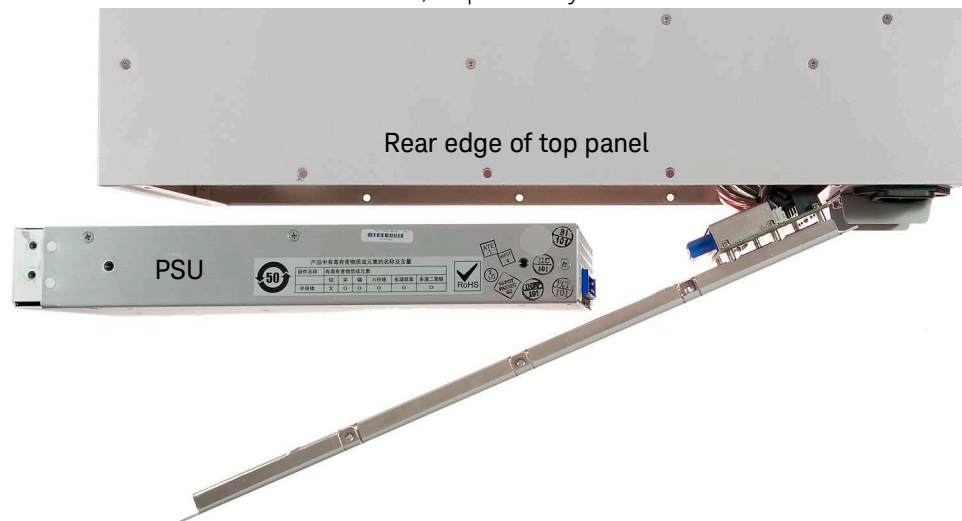

- 12 To install the PSU, reverse these steps. The new PSU must be firmly inserted into its chassis connector for its rear panel attachment screws to line up.

To remove the PSU from the M9505A

Tools needed: #8 and #10 Torx drivers.

- 1 Power down and disconnect the power cord from the chassis.
- 2 If the chassis is rack-mounted, remove it from the rack.
- 3 Remove the 16 #10 Torx round head screws from the perimeter of the rear panel, as shown below. Do not remove the similar screws holding the circuit breaker to the rear panel.




- 4 The rear panel is now detached from the chassis. Take care not to strain the power connections between the rear panel and chassis.


- 5 Remove four #8 Torx flat head screws holding the PSU to the rear panel.




- 6 Rotate the rear panel away from the left side of the chassis, as shown below.
- 7 Remove the #8 Torx flat head screw holding the PSU end bracket to the rear panel.
- 8 While holding the rear panel firmly in one hand, pull the PSU/end bracket/shield assembly out of its chassis connector, in the direction shown below.

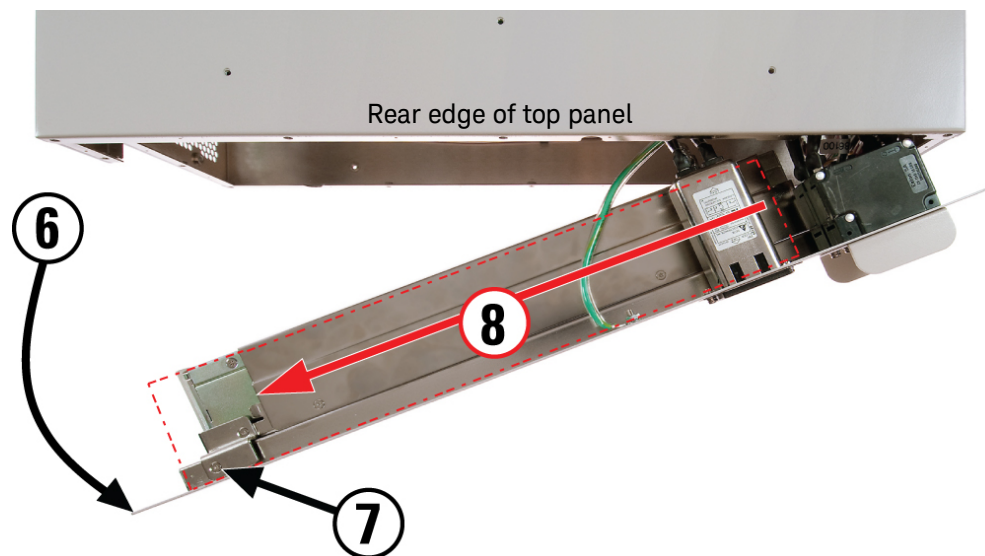


- 9 The removed PSU/end bracket/shield assembly is shown below, in proximity to its chassis connector...

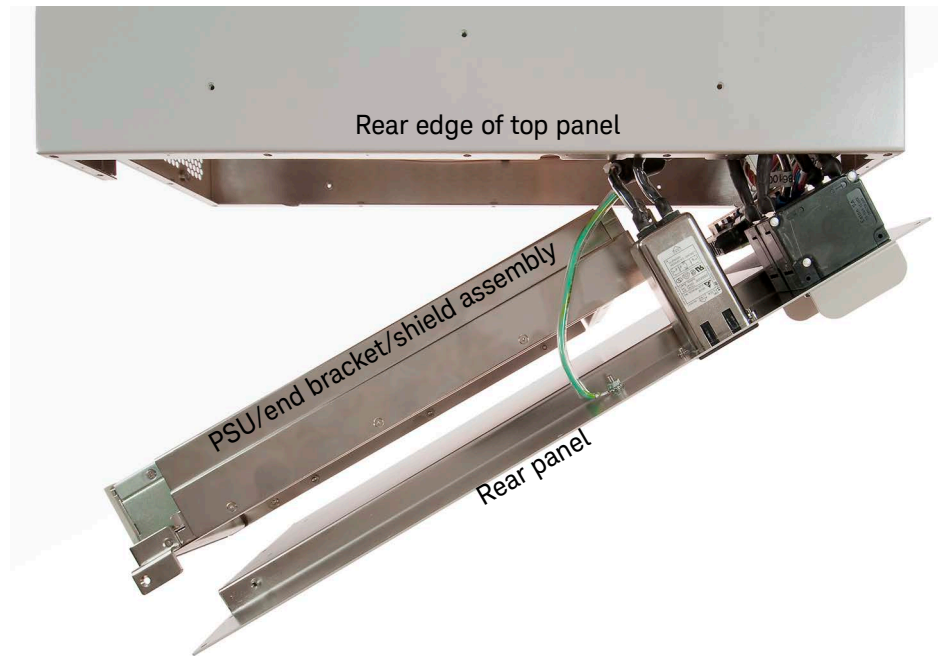

- 10 Remove the four #8 flat head Torx screws from the top and bottom of the PSU outer shield and end bracket (8 screws total).

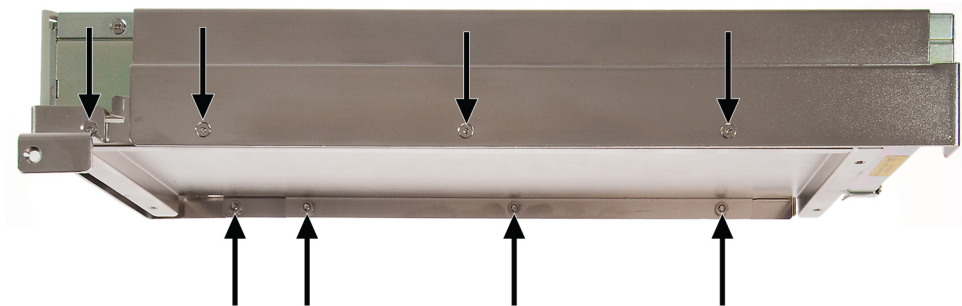

- 11** Slide the outer shield and end bracket off the PSU/inner shield assembly; they are shown removed below.

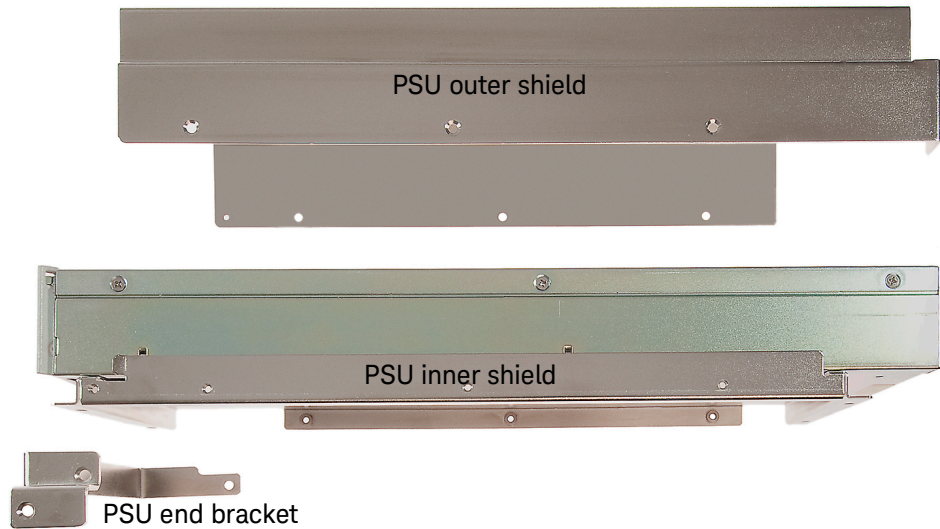

- 12** Slide the PSU out of the inner shield, as shown below.



- 13** The removed PSU:



- 14** To install the PSU, reverse these steps.

To Replace the Fan Tray

The illustrations below show the M9502A; the procedure is identical for the 5-slot chassis.

- 1 Power down and unplug the AXIe chassis.

WARNING

To prevent electrical shock, disconnect the instrument from mains before attempting to replace components.

- 2 Fully loosen the two captive retaining screws on the front panel of the fan tray.

CAUTION

Ensure you fully loosened the captive retaining screws before trying to extract the fan tray. If you attempt to pull the fan tray out by the screws with these screws still engaged, damage could result.



- 3 Grasp the fan tray by the two captive retaining screws, and slide it out of the chassis.



- 4 To install the fan tray, reverse these steps.

To Replace the Embedded System Module

Remove and reinstall the ESM exactly like an application module, except that it can only fit in the bottom half-height slot. See “Installing Modules” on page 23 for instructions.

Glossary

Many of the terms in this manual and glossary are AXIe®, ATCA® or PICMG® specific. Refer to the relevant specifications for more detail on these terms.

ADB-6100AX Apple Desktop Bus (ADB) is an obsolete bit-serial computer bus for connecting low-speed devices (mouse, keyboard, etc.) to a computer.

ATCA® Advanced Telecommunication Computing Architecture® (also known as AdvancedTCA) is a PCI Industrial Computing Manufacturers Group (PICMG) specification. See AXIe below.

AXIe® AdvancedTCA eXtensions for Instrumentation is a platform for general purpose modular instrumentation. It is an open industry standard aimed at test equipment and instrumentation. It builds on the experience of VXIbus, PXI and LXI technologies.

Base Channel Supports a 10/100/1000 Base-T LAN port on the backplane of the AXIe shelf.

BMC Baseboard Management Controller

BMR-H8S Board Management Reference design for AdvancedTCA®

ESD Electrostatic Discharge. See “**ESD Precautions**” on page 11

FRU Field Replaceable Unit. A unit (such as a module or power supply) that the user can replace in the field. Many FRUs are not hot swappable.

GbE Gigabit Ethernet. Ethernet at a rate of 1 gigabit per second.

GUID globally unique identifier is a unique identifier number used in computer software. The term GUID also is used for Microsoft's implementation of the Universally Unique IDentifier (UUID). The value of a GUID is represented as a 32-character hexadecimal string, and is usually stored as a 128-bit integer

HPM Hardware Platform Management. PICMG specification that defines an open mechanism to upgrade the resident management software and firmware.

IPMB Intelligent Platform Management Bus. Based on the I²C (also known as Inter IC, IIC or I2C) bus, the IPMB interface provide communication between components on a PC chassis; it is an internal chassis bus that also connects to the external chassis through a bridge chip.

IPMC **Intelligent Platform Management Interface.** It is used to monitor system health and manage the computer system.

IPMI Intelligent Platform Management Interface

KCS Keyboard Style Controller

LPC Low Pin count. An interface specification for legacy I/O. Allows legacy I/O of motherboard components, such as a Super I/O chip, to migrate from the ISA/X bus to the new LPC interface while retaining software compatibility. It runs at the PCI 33MHz clock making LPC much faster than the older ISA running with an 8MHz clock.

MultiFrame MultiFrame is a Keysight feature in which multiple measurement instruments in two or more chassis are interconnected to appear as one integral instrument to the user. In a MultiFrame system, special daisy-chain cabling connects the time base and triggering of the primary chassis to all secondary chassis. These cables extend trigger and timing features to instruments not connected to the primary chassis's backplane. You can use the MultiFrame configuration to increase the number of measurement modules utilizing a common time base or cross triggering. Refer to **"MultiFrame Operation"** on page 89 for more information.

Multiple Chassis In a multiple chassis system, multiple chassis are controlled by a single controller, and the time base and triggering for each chassis operates independently from the other chassis. You can use the multiple chassis configuration to increase the number of chassis/modules that do not require a common time base or cross triggering between chassis. For more information, refer to Keysight's Multiple PXIe and AXIe Chassis Configuration tool. This tool is available on the M9018A Product information CD as well as on line at: www.keysight.com/find/pxie-multichassis.

OEM Original Equipment Manufacturer.

PCI Peripheral Component Interface bus. A standard for connecting hardware in a computer.

PCI-E PCI Express. Peripheral Component Interface Express (or PCIe) A standard to replace PCI.

PICMG[®] PCI Industrial Computer Manufacturers Group. PICMG is a consortium of hundreds of companies that develop open specifications for high performance telecommunications and industrial computing applications.

SATA Serial ATA or Serial Advanced Technology Attachment. A computer bus interface for connecting host adapters to mass storage devices (hard drives, etc.) This standard is also known as EIDE.

SerDes Serializer/Deserializer. Two blocks used in high speed communications to compensate for limited throughput. They convert data between serial and parallel interfaces.

Super I/O A class of ICs that combines interfaces for a variety of low-bandwidth devices such as serial ports, keyboard and mouse, temperature and fan speed monitoring, etc.

TPM Trusted Platform Module. An IC designed by the Trusted Computing Group (TCG) for storing passwords, encryption keys, digital certificates, etc.

UXGA Abbreviation for Ultra eXtended Graphics Array referring to a standard monitor resolution of 1600×1200 pixels.

Numerics

2-slot chassis, 4
5-slot chassis, 6

A

AdvancedTCA, 99
ATCA, 97
AXIe chassis description, 2

B

Backplane Connections, 100
Bidirectional Low Voltage
Differential Signaling, 83
Block Diagram, 66
BLVDS, 83
Bumpers, 30

C

Carry Handles, 30
Chassis
Backplane Connections, 100
Block Diagram, 66
power, 17
verification, 22
weight, 17
Chassis Backplane
Connections, 100
Chassis Description, 2
Chassis Fans, 113
Chassis firmware revision, 1
Chassis Firmware,
Updating, 110
Chassis Health Page, 53
Chassis Synchronization and
Triggering, 75
Chassis Temperature, 71
Chassis Troubleshooting, 113
Chassis, troubleshooting, 113
Circuit Breaker, 12
CLK100, 84
Clock in/out, 8
Clock Source, MultiFrame, 89
Clocks, 76
Configure Trigger Routing,
SFP, 61
controlling, 70
Cooling Status, 69
Cross
Synchronization, MultiFrame
, 89
Cross
Triggering, MultiFrame, 89
Crosspoint Switch, 80

D

Data Channels, 73
Data Upload Speeds, 74
Device Drivers, 34
DIP Switches, ESM, 114
Drivers, device, 34
Dynamic Minimum Fan
Level, 70

E

E-Keying, 92
E-Keying Activity, 49
Electronic Keying, 49, 92
Electrostatic Discharge
Precautions, 11
Embedded System Module, 2,
8
Embedded System Module,
replacing, 124
ESD Precautions, 11
ESM (Embedded System
Module), 2, 8
ESM DIP Switches, 114
ESM replacing, 124

F

Fabric 2, 74
Fan Control, 54
Fan Speed, 70
Fan Status, 69
Fan Tray
Replace, 124
Fans, chassis, 113
Fans, monitoring, 68
Filler Panel, 24
Firmware revision, 1
Flag, MultiFrame, 86
Front Panel Identification
Indicator, 44

G

Gen 1, PCIe, 115
Gen 2, PCIe, 115
general specifications, 17, 18

H

Health, monitor module, 71
Home Page, Web, 44
Host PC, 34
How does a multiple chassis
system differ from a
MultiFrame system?, 42

I

Installation, 22

L

LAN Configuration Page, 46
Local Bus, 92
Low Voltage Differential
Signaling, 84
LVDS, 84, 92

M

M9502A, 4
M9505A, 6
Module Configuration Page, 47
Module Health, 71
Monitor Fans, 68
Monitor screen, SFP, 61
MultiFrame
Clock Source, 89
Cross Synchronization, 89
Cross Triggering, 89
Flags, 86
SYNC, 87
Multiframe Input/Output, 8
MultiFrame vs. multiple
chassis, 42
Multiple chassis, 42
Multiple chassis vs.
MultiFrame, 42

O

ON/STANDBY Switch, 12

P

PCIe connector, 8
PCIe Gen 1, 115
PCIe Gen 2, 115
power button
2-slot chassis, 4
Power Modes, 12
Power Supply Unit, 114
Power Supply Unit,
replacing, 118
Power-Down, 12
Power-Up, 12
PSU, 114

R

Rack mounting, 29
Replaceable parts, 117
Replacing ESM, 124

Index

S

- Shelf Manager, 68
- Soft Front Panel, 34, 60
- Specifications, 17
 - general specifications, 17, 18
- Status Light, 8
- STRIG, 83
- SYNC, 84
- Sync,MultiFrame, 87
- Synchronization, 76

T

- Temperature, chassis, 71
- TRIG, 82
- Trigger in/out, 8
- TRIGGER OUT, 86
- Trigger Routing Page, 51
- Triggering, 75, 78
- Troubleshooting, chassis
 - hardware, 113

U

- Updating chassis
 - firmware, 110
- User-Replaceable Parts, 117

V

- Ventilation, 29
- Verification, chassis, 22
- version, firmware, 1

W

- Web Interface, 43

Z

- Zone 1 Connector Layout, 102
- Zone 1 Connector Usage, 102
- Zone 1 Pin Assignments, 103
- Zone 2 Connector Layout, 104
- Zone 2 Connector Usage, 105
- Zone 2 Pin Assignments, 106

