

Keysight Signal Generators Hole Plug Foot Installation for Rack Mount Kits

Note: For the latest revision of this note, go to
www.keysight.com

Notice: This document contains references to Agilent. Please note that Agilent's Test and Measurement business has become Keysight Technologies. For more information, go to www.keysight.com.

Installation Note

Part Number: N5180-90019
Published in USA
September 2014

Notice

The information contained in this document is subject to change without notice.

Keysight Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Keysight Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hole Plug Foot Installation for Rack Mount Kits

Products Affected:	All
Serial Numbers:	All
Options:	1CM, 1CP, 1CR, and E8251-60419
To Be Performed By:	(X) Agilent Technologies Service Center (X) Personnel Qualified by Agilent Technologies (X) Customer
Estimated Installation Time:	0.25 hours
Estimated Verification Time:	n/a

Introduction

This installation kit adds the bottom hole plug feet to all Agilent Technologies signal generators.

Installation Kit Parts List

Item	Quantity	Description	Part Number
1	1	Installation Note	N5180-90019
2	4	Hole Plug, Bottom Foot	W1312-40032

Typical Safety Considerations


WARNING	Before you disassemble the signal generator, turn the power switch off and unplug the power cord. Failure to unplug the signal generator can result in personal injury.
----------------	--

CAUTION	Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe workstation.
----------------	--

Install Bottom Hole Plug Feet

1. Recommended: Disconnect the power cord.
2. With the signal generator on its side, pry the black slot tabs (1) out from the four bottom feet (2).
3. Remove the four feet by lifting the foot tab and sliding the foot in the direction of the arrow printed on the foot.

Figure 1 **Bottom View**

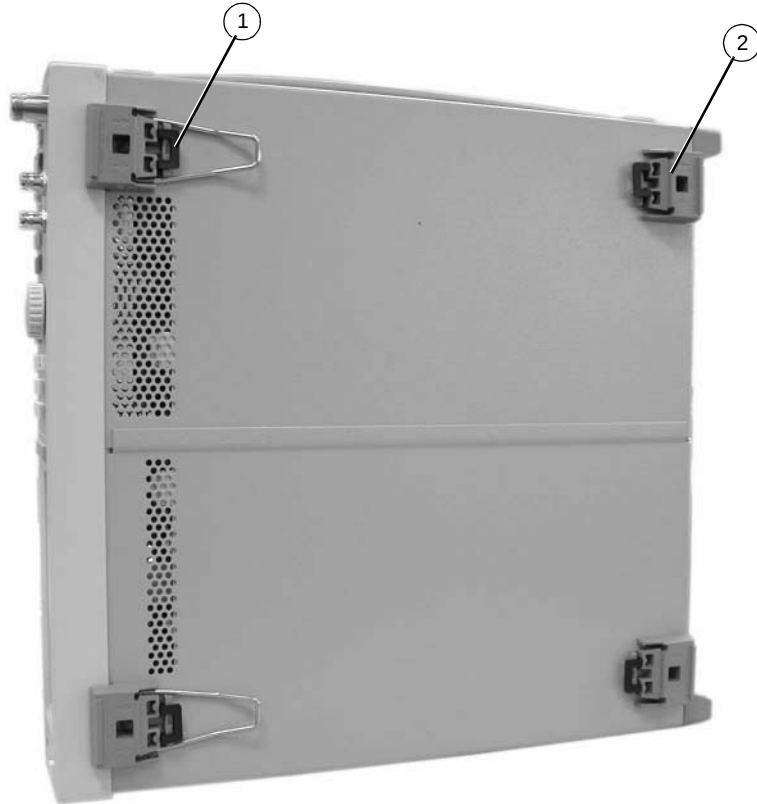

4. Install the bottom Hole Plug feet by placing the single tabbed end of the foot (see Figure 2) into its hole first, then gently press the remaining tabs into the other holes, one at a time, until they click.

Figure 2

