


DOCKING PLATE KIT

KEYSIGHT PART NUMBER E5053-60151

QTY.	CONTENTS	PART NO.
2...	DOCKING PLATE ASSEMBLY (Phantom Gray)...	E5053-60152
2...	TRIM-FR FR SIDE (Phantom Gray).....	E5052-25151
2...	TRIM-FR FR SIDE (Phantom Gray).....	E5052-25152

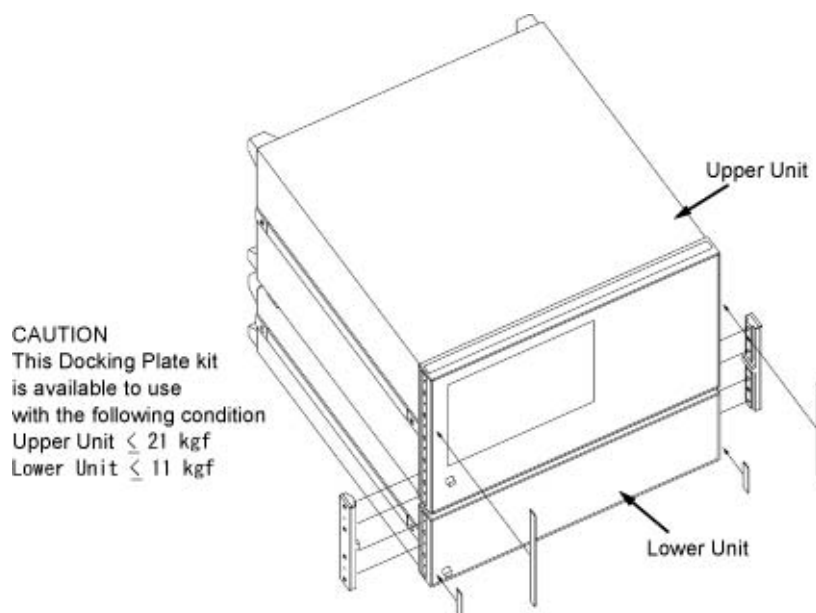

WARNING



DO NOT ATTEMPT TO DOCKING PLATE SEPARATELY WITH HARDWARE PROVIDED.
LIFT BOTH PRODUCTS AT THE SAME TIME AFTER APPLYING THIS KIT.

INSTRUCTIONS

1. REMOVE SIDE TRIM STRIPS OF BOTH UNITS (UPPER&LOWER).
2. ATTACH DOCKING ASS'Y WITH 4 SCREWS PER SIDE.
3. PASTE THE NEW SIDE TRIM STRIPS TO BOTH UNITS AAS ABOVE INSTRUCTION.

INSTRUCTION SHEET NO.E5053-99021

E5053-60151

