


88.1H FRONT HANDLE KIT

(PRODUCT HT.88.1mm/3.469in)

KEYSIGHT PART NUMBER 1CN006A SYSTEM II PALLET 2000

CONTENTS

QTY.		PART NO.
2FRON	T HANDLE ASSEMBLY T HANDLE TRIM 0.7 X 10 SCREW,FLAT HEAD,	5041-9179

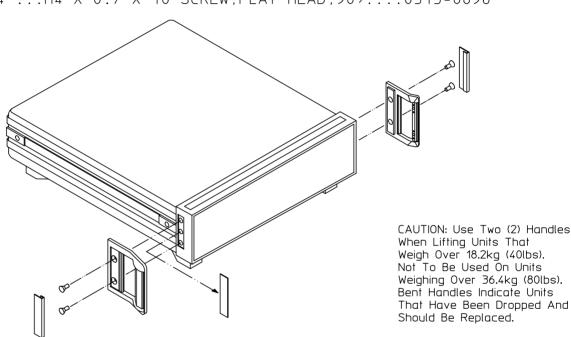

CAUTION: THIS KIT CONTAINS ONLY METRIC HARDWARE. INSTRUMENTS WITH METRIC CABINETS HAVE THE WORD "METRIC" CAST ON TOP OF THE FRONT FRAME (UNDER THE TRIM)."

INSTRUCTIONS

- 1. REMOVE SIDE TRIM STRIPS.
- 2. ATTACH FRONT HANDLE ASSEMBLY WITH 2 SCREWS PER SIDE.
- 3. PRESS FRONT HANDLE TRIM IN PLACE.

PACKAGED IN MALAYSIA WITH COMPONENTS FROM MALAYSIA AND OTHER COUNTRIES

15

1CN006A

