


# N28xxA/B Passive Probes

## Introduction

The Keysight N28xxA/B low-cost, general-purpose passive probes provide up to 500 MHz bandwidth and feature a high input resistance of 10 M $\Omega$  for low probe loading. These probes provide a 10:1 attenuation ratio except for the N2889A which provides a switch in the probe handle for switching the attenuation ratio between 1:1 and 10:1.

The probes are compatible with Keysight InfiniiVision and Infiniium Series oscilloscopes with 1 M $\Omega$  BNC input.

The N284xA Series passive probes are the frequency tuned versions of the N2889A/90A, offering more linear frequency response with Keysight oscilloscopes.

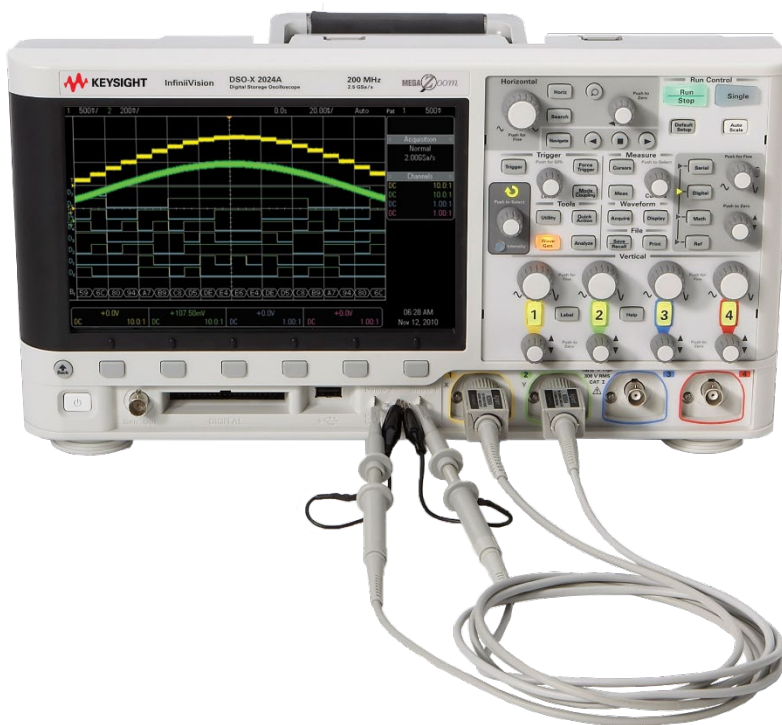



N2840A/41A/42A/43A/53A

Probe Characteristics	N2840A	N2841A	N2842A / N2853A	N2889A	N2843A
Bandwidth (–3 dB)	50 MHz	150 MHz	300 MHz (N2842A), 350 MHz (N2853A)	350 MHz (at 10:1), 10 MHz (at 1:1)	500 MHz
Rise time (10 to 90%)	7 nsec	2.33 nsec	1.16 nsec (N2842A), 1 nsec (N2853A)	1 nsec (at 10:1), 35 nsec (at 1:1)	700 psec
Attenuation ratio	10:1	10:1	10:1	1:1/10:1 (switchable)	10:1
Input resistance (when terminated into 1 MΩ)	10 MΩ	10 MΩ	10 MΩ	10 MΩ (at 10:1), 1 MΩ (at 1:1)	10 MΩ
Input capacitance	15 pF	15 pF	11 pF	11 pF (at 10:1), 60 pF (at 1:1)	11 pF
Maximum input voltage	300 V RMS (or < 400 Vpk) mains isolated and CAT II	150 V CAT II, 300 V mains isolated	150 V CAT II, 300 V mains isolated	150 V CAT II (1:1), 300 V mains isolated (10:1)	150 V CAT II, 300 V mains isolated
Scope compensation range	5-30 pF	5-30 pF	5-30 pF	5-30 pF (at 10:1)	5-30 pF
Probe ID	Yes	Yes	Yes	No	Yes
Cable length	1.2 m	1.2 m	1.2 m (N2842A), 2 m (N2853A)	1.3 m	1.2 m
Safety	CAN/CSA C22.2 No. 61010-031:24, UL61010-031 3 <sup>rd</sup> Edition, IEC 61010-031:2022				
Operating temperature	0 to +50 °C (N2862B/63B, N2889A, N2890A), 0 to +55 °C (N2840A/41A/42A/43A)				
Storage temperature	0 to +50 °C (N2862B/63B, N2889A, N2890A), -40 to +70 °C (N2840A/41A/42A/43A)				
Humidity	80% RH for non-condensing				
Altitude	2000m (indoor use only)				
Pollution Degree	Pollution Degree 2				

# Compensation Adjustments

These probes can be adjusted for low-frequency and high-frequency compensation. For the best measurement results you should compensate your probe to match its characteristics to the oscilloscope. A poorly compensated probe can introduce measurement errors. Low-frequency compensation should be performed before performing high-frequency compensation.

## Low-Frequency Compensation


1. Connect the probe from the appropriate oscilloscope channel to the 1-kHz square wave source.
2. Press Autoscale. Adjust the oscilloscope to display two to three cycles of the waveform over two to six vertical divisions.
3. Set the Low-Frequency (LF) compensation adjustment on the probe for the flattest pulse possible (see Figure 3).




**Figure 1.** Low-frequency compensation adjustment (for N2889A/90A).




**Figure 2.** Low-frequency compensation adjustment (for N2840A/41A/42A/43A/53A)

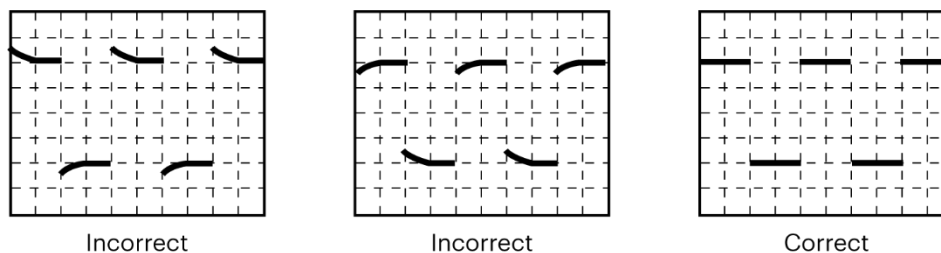

**Figure 3.**

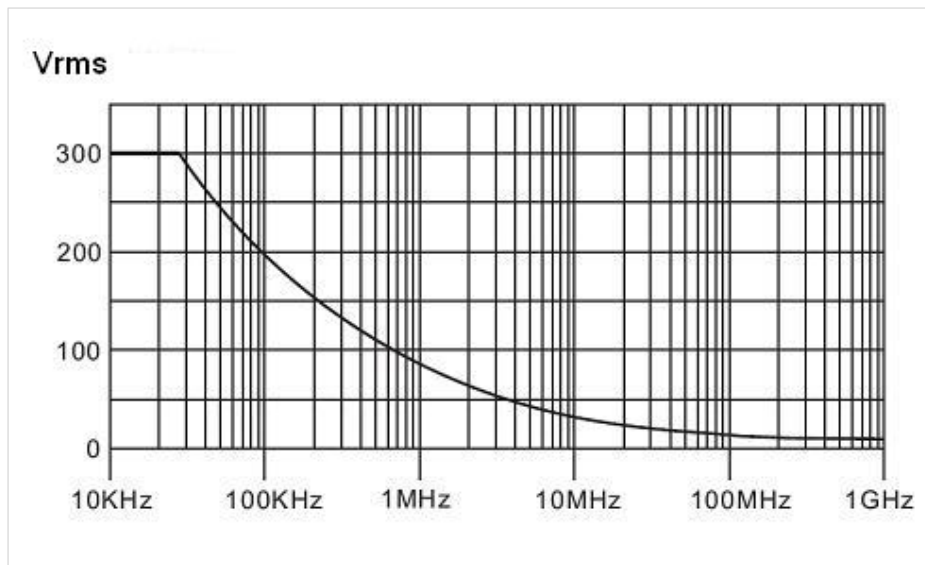

**Figure 4.** Voltage derating curve @10:1 attenuation ratio.

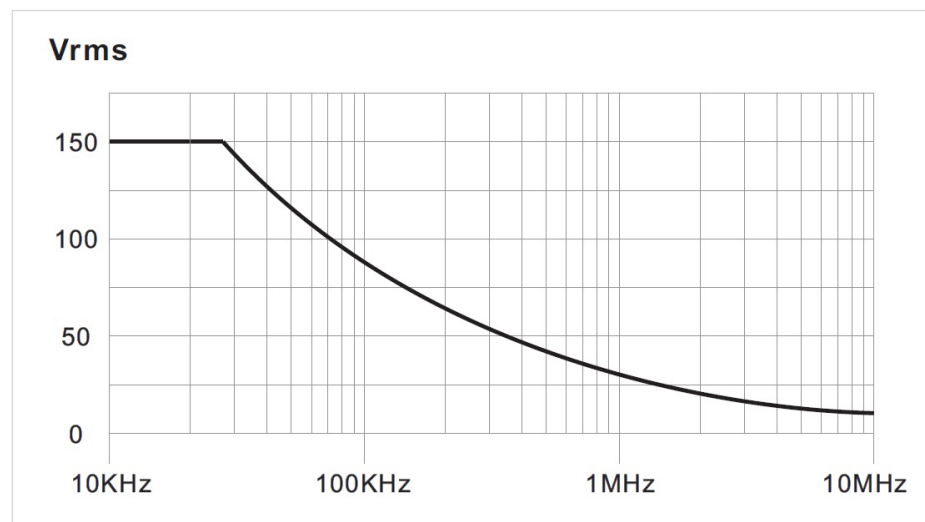

**Figure 5.** Voltage derating curve @1:1 attenuation ratio (N2889A)

# Accessories



**Figure 6.** With standard accessories included in the probe

## Standard Accessories

Item	Description	Quantity
1	Retractable hook	1
2	Adjustment tools	2 (with N2889A/90A) 1 (with all others)
3	Insulating cap	1
4	IC insulating cap	1
5	Identification tags (green,yellow, purple and pink)	2 each
6	Probe tip	2
7	Ground spring	1
8	BNC adapter	1
9	Ground lead (black 12 cm)	1

## N2856A Passive Probe Accessory Kit


The N2856A passive probe accessory kit includes all of the standard accessories for the N2840A, N2841A, N2842A, N2843A, and N2853A passive probes.

Contents:

- Retractable hook
- Adjustment Tools
- Insulating cap
- IC insulating cap
- Identification tags (green, yellow, purple, and pink) (2 each)
- Probe tips
- Ground spring
- BNC adapter
- Ground lead (12 cm)

## Replacement Accessories

- N2857A alligator ground lead (qty 2)
- N2858A retractable hook tip adapter (qty 2)
- N2859A replaceable probe tip (qty 2)
- N4826A dual lead adapter (qty 2)
- N4827A PCB socket adapter (qty 2)
- N4828A ground spring, 5 mm (qty 2)

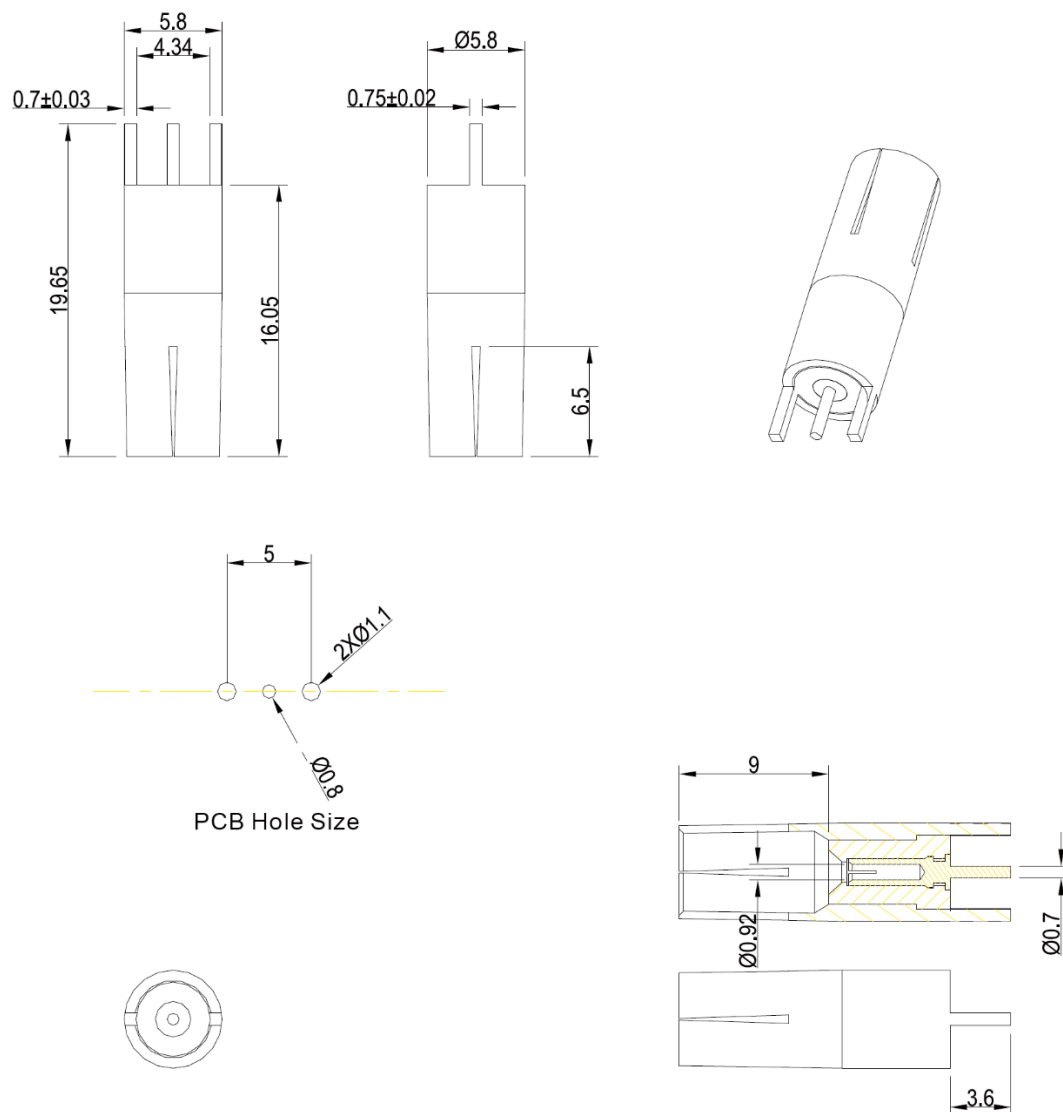

**Figure 7.** N4827A PCB socket adapter dimension and foot print information.

[www.keysight.com/find/probes](http://www.keysight.com/find/probes)