



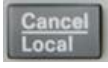

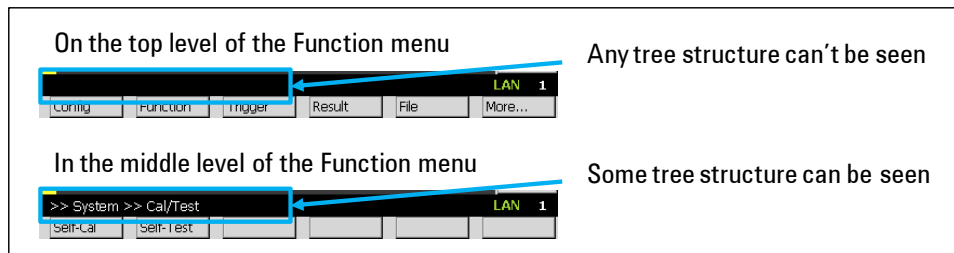


How to set the remote control command set (Default or 2400)


The Agilent B2901/02/11/12A supports two remote control command sets. One is the default command set which supports all B2901/02/11/12A functions. The other is the conventional command set designed for using the existing programs which you created to control existing instruments such as Keithley 2400.


In order to configure the instrument to use the conventional command set, take the following steps.


Step 1. If you aren't on the top of the Function menu, press  repeatedly to return to the top level.




Step 2. Press , , ,  and then press  to select the conventional command set.

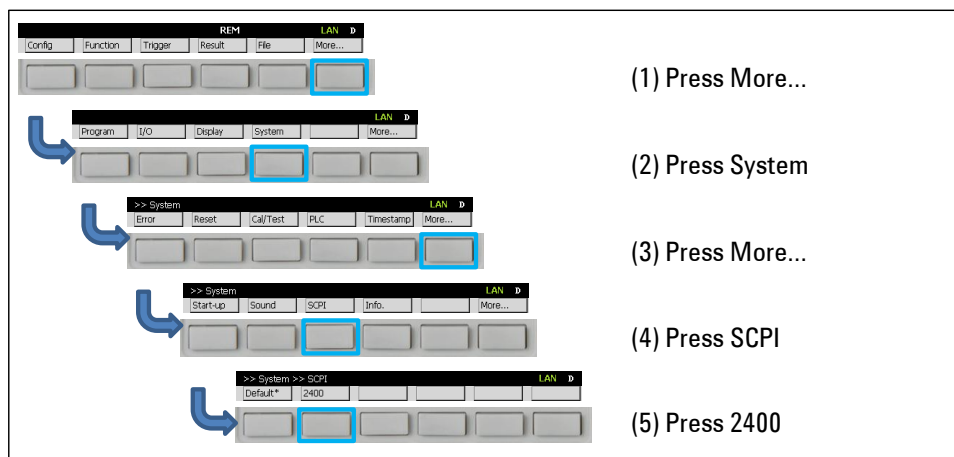

*) Select  if you'd like to change the remote control command set from the conventional command set to the default command set.

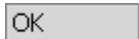Step 3. Press  to reboot to change the remote control command set.

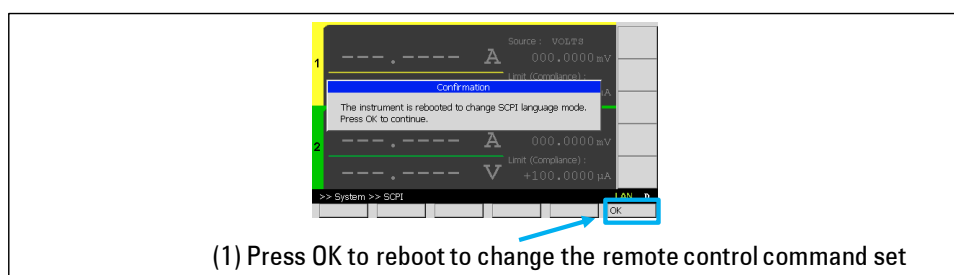

After that, the instrument will be rebooted and you can use it with the conventional command set.