




**WARNING :** When unpacking the analyzer, if the exterior of the analyzer appear to be damaged, **DO NOT turn ON the power switch**, to avoid any electrical shock.

**1 Verify contents of shipment**



**Turn ON Line Switch**

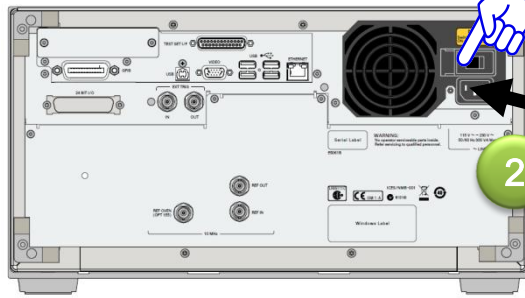


**3**

**Connect the power cable to AC outlet & rear panel of the unit**




**2**

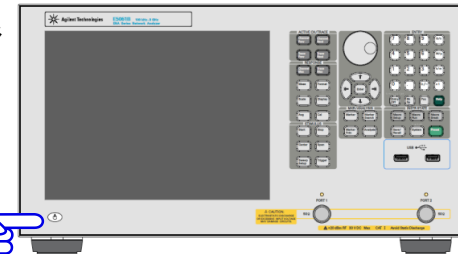

**4 Press the Standby Switch**

The unit is ready for use.  
For detailed instruction,  
read the Installation Guide.

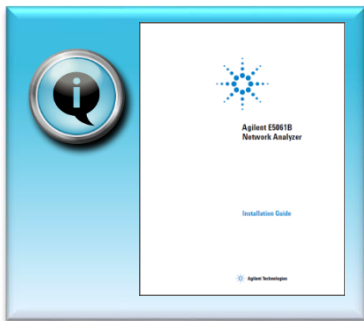

**6**

**Read the license agreement, then click "Agree" button.**



**5**

**Press <ENTER> to perform Initial Registration of the Windows OS**

