

Keysight LPDDR5 Decoder

User's Guide

Notices

© Keysight Technologies 2022

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Software Release

07.00.0000

Edition

April 2022

Available in electronic format only

Keysight Technologies
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Safety Notices

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Safety Summary

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings or operating instructions in the product manuals violates safety standards of design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements. Product manuals are provided with your instrument on CD-ROM and/or in printed form. Printed manuals are an option for many products. Manuals may also be available on the Web. Go to www.keysight.com and type in your product number in the Search field at the top of the page.

General	Do not use this product in any manner not specified by the manufacturer. The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.
Before Applying Power	Verify that all safety precautions are taken. Make all connections to the unit before applying power. Note the instrument's external markings described in "Safety Symbols".
Ground the Instrument	If your product is provided with a grounding type power plug, the instrument chassis and cover must be connected to an electrical ground to minimize shock hazard. The ground pin must be firmly connected to an electrical ground (safety ground) terminal at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.
Fuses	See the user's guide or operator's manual for information about line-fuse replacement. Some instruments contain an internal fuse, which is not user accessible.
Do Not Operate in an Explosive Atmosphere	Do not operate the instrument in the presence of flammable gases or fumes.
Do Not Remove the Instrument Cover	Only qualified, service-trained personnel who are aware of the hazards involved should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover.
Cleaning	Clean the outside of the instrument with a soft, lint-free, slightly dampened cloth. Do not use detergent or chemical solvents.
Do Not Modify the Instrument	Do not install substitute parts or perform any unauthorized modification to the product. Return the product to an Keysight Sales and Service Office for service and repair to ensure that safety features are maintained.
In Case of Damage	Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

CAUTION















A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Safety Symbols




Table 1 Safety Symbol

Symbol	Description
	Direct current
	Alternating current
	Both direct and alternating current
	Three phase alternating current
	Three phase alternating current
	Earth ground terminal
	Protective earth ground terminal
	Frame or chassis ground terminal
	Terminal is at earth potential
	Equipotentiality
N	Neutral conductor on permanently installed equipment
L	Line conductor on permanently installed equipment
	On (mains supply)
	Off (mains supply)
	Standby (mains supply). The instrument is not completely disconnected from the mains supply when the power switch is in the standby position
	In position of a bi-stable push switch

Symbol	Description
	Out position of a bi-stable push switch
	Equipment protected throughout by DOUBLE INSULATION or REINFORCED INSULATION
	Caution, refer to accompanying documentation
	Caution, risk of electric shock
	Do not apply around or remove from HAZARDOUS LIVE conductors
	Application around and removal from HAZARDOUS LIVE conductors is permitted
	Caution, hot surface
	Ionizing radiation
CAT I	IEC Measurement Category I
CAT II	Measurement Category II
CAT III	Measurement Category III
CAT IV	Measurement Category IV

Compliance and Environmental Information

Table 2 Compliance and Environmental Information

Safety Symbol	Description
	CSA is the Canadian certification mark to demonstrate compliance with the Safety requirements.
	The C-tick mark is a registered trademark of the Spectrum Management Agency of Australia. This signifies compliance with the Australia EMC Framework regulations under the terms of the Radio Communication Act of 1992.
	CE compliance marking to the EU Safety and EMC Directives. ISM GRP-1A classification according to the international EMC standard. ICES/NMB-001 compliance marking to the Canadian EMC standard.

Contents

Safety Summary	3
Compliance and Environmental Information	6
1 LPDDR5 Decoder - Overview	
Flow of steps to use the LPDDR5 Decoder	1
Related Tools	1
When to Use the LPDDR5 Decoder	1
Required Hardware, Software, and Licenses	2
2 Setting Up LPDDR5 Bus Decode	
Hardware Setup for LPDDR5 Bus Decode	4
Logic Analyzer Measurement Setup for LPDDR5 Bus Decode	5
Sample Logic Analyzer Setup for LPDDR5 Decode	6
To create a configuration file	6
To configure LPDDR5 Decoder Settings	6
Sampling Positions	7
3 Capturing Data	
4 Understanding LPDDR5 Decode Displayed in the Listing Window	
Data Generated by the LPDDR5 Decoder	12
LPDDR5 Bus Decode	12
Decode Errors	12
To find commands of a specific type in the listing	13
To filter or colorize decoded data display	14
5 Troubleshooting the LPDDR5 Decoder	
Hardware Related Checks	18
Software Related Checks	19
Common Problems and Recommended Solutions	20

1 LPDDR5 Decoder – Overview

The Keysight LPDDR5 Decoder software lets you decode and view transactions and commands from an LPDDR5 SDRAM memory bus in your device under test.

This decoder works with the Keysight Logic and Protocol Analyzer software application (in online / offline mode) to decode the acquired LPDDR5 traces. The data acquisition can be done using a compatible Keysight Logic Analyzer module. See "[Required Hardware, Software, and Licenses](#)" on page 2 for details.

The decoded LPDDR5 data can then be viewed and analyzed using the Listing window in the Logic and Protocol Analyzer application. LPDDR5 data is displayed as raw hexadecimal data in this window. The decoder does not inverse assemble the data payload. It shows the decode of the traffic at any given point in the trace.

Flow of steps to use the LPDDR5 Decoder

- 1 Install the required software and licenses.
- 2 Set up the logic analyzer module, probing hardware, and connections to DUT.
- 3 Configure the Logic and Protocol Analyzer software setup and LPDDR5 Decoder settings as per your testing requirements.
- 4 Capture LPDDR5 data.
- 5 View and analyze the decoded data in the Listing window.

Related Tools

- The *DDR Setup Assistant* is a wizard-like application that helps you set up your logic analyzer properly for DDR data capture and analysis. It guides you through the setup process and automates setting threshold voltages and sample positions for control/address signals. For more information, see *DDR Setup Assistant - At a Glance*.
- The *DDR Eyescan* tool helps you set the logic analyzer threshold and sampling positions for read data and write data signals.
- The *DDR5 Decoder* tool to decode and view transactions and commands from a DDR5 SDRAM memory bus.
- The *DDR/LPDDR Memory Analysis Viewer* to analyze the captured DDR/LPDDR memory data using various charts and statistical data such as traffic statistics, bus utilization, refresh rate analysis, and data for Read/Write commands.

When to Use the LPDDR5 Decoder

There are situations when the LPDDR5 Decoder is more suitable and provides key benefits as compared to the Keysight DDR/LPDDR Memory Analysis viewer. Following are examples of such situations.

- The LPDDR5 Decoder does not decode the entire trace in one go. At a time, it decodes only that specific portion of your trace that you are currently viewing in its Listing window. This significantly reduces the time it takes to decode and display results. This is especially useful when you have a long trace to decode and you want to immediately view the decoded information.

- The LPDDR5 Decoder can show information from multiple subchannels of your LPDDR5 memory design in a single Listing window. The subchannels information is time-correlated and presented as separate columns in a single listing window. This eliminates the need to have a separate viewer for each subchannel's information.


While LPDDR5 Decoder has key strengths, it is recommended to use the DDR/LPDDR Memory Analysis viewer instead of LPDDR5 Decoder in the following situations:

- If you want to specify how your SDRAM address components (rank, bank, row, and column addresses) are used to construct an overall physical address so that the reconstructed address can be displayed for each read or write operation. then you should use the DDR/LPDDR Memory Analysis viewer. The LPDDR5 Decoder does not support physical address reconstruction.
- If you want to view the details (memory address and Read/Write data) for the individual Read or Write commands, then you should use the Details tab of the DDR/LPDDR Memory Analysis viewer. The LPDDR5 Decoder does not show the data associated with a Read or Write command.
- If you want to do higher-level analysis such as analyzing your SDRAM's traffic statistics, Refresh rate, or performance measurements for data transfer rates and memory utilization, then you should use various charts and statistics provided in different tabs of the DDR/LPDDR Memory Analysis viewer. The LPDDR5 Decoder does not provide any of these higher-level analysis features and is focused on displaying traffic decode at a given point in the trace.

Required Hardware, Software, and Licenses

Required Hardware	Required Software	Required License
<ul style="list-style-type: none"> ▪ U4164A Logic Analyzer module to capture LPDDR5 data ▪ LPDDR5 memory bus probes 	<ul style="list-style-type: none"> ▪ Logic and Protocol Analyzer software version 7.0 or higher ▪ LPDDR5 Decoder software <p>These can be downloaded and installed from: www.keysight.com/find/lpdr5-sw-download</p>	<p>No separate license is needed specifically for the LPDDR5 Decoder. However, you must have installed the following standard memory license for LPDDR5. B4661A-6TP/6FP/6NP LPDDR5 Analysis and Compliance Validation license Without this license, you can only view and analyze the decoded LPDDR5 data from an existing .ala file in offline mode.</p>

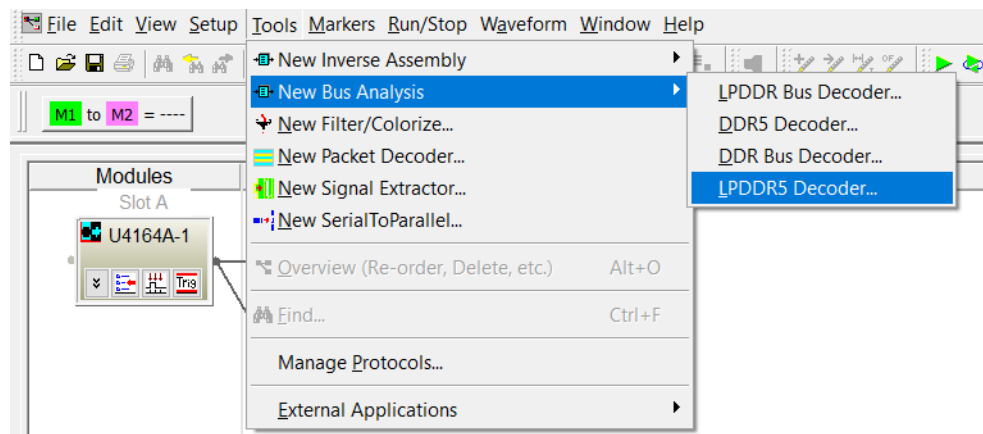On installing the LPDDR5 Decoder software, you can access this tool from the following location in the Logic and Protocol Analyzer GUI.



2 Setting Up LPDDR5 Bus Decode

The topics in this section describe how to set up the logic analysis system hardware and software components for LPDDR5 bus decode.

Hardware Setup for LPDDR5 Bus Decode

1. Connect the probe to your device under test (DUT).
2. Connect the logic analyzer pods to the probe.

Each probe has its own user's guide that describes in detail how to make these connections. You can download the user's guide from the probe's page at www.keysight.com.

CAUTION

When you are working with the logic analyzer, be sure to power down both the analyzer and device under test before disconnecting or connecting cables or probes. Otherwise, you may damage circuitry in the analyzer or device under test.

Logic Analyzer Measurement Setup for LPDDR5 Bus Decode

To configure the Logic Analyzer measurement setup for LPDDR5 decode, you use the DDR Setup Assistant. This tool is available at no charge as part of the Keysight B4661A memory analysis software package.

The DDR Setup Assistant is a wizard-like application that helps you set up your logic analyzer properly for LPDDR data capture and analysis. This tool simplifies the measurement setup by guiding you through the setup process and automating the threshold voltages and sample positions settings for control/address signals.


The following two scenarios are applicable when using the DDR Setup Assistant to create Logic Analyzer measurement setup.

Scenario 1: You are using a standard probing solution

In this case, a standard LPDDR5 configuration file is available for the probing solution being used. A set of standard LPDDR5 configuration files is provided when you install the LPDDR5 Decoder software.

The DDR Setup Assistant wizard automatically:

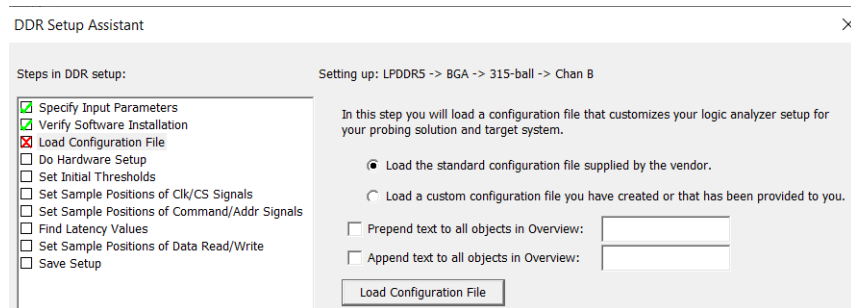
- loads the appropriate standard configuration file matching the standard probing solution details that you provided in the wizard.
- sets the required buses and signals.
- adds the LPDDR5 Decoder tool and a Listing window in the Logic and Protocol Analyzer GUI.



Scenario 2: You are using a custom probing solution


In this case:

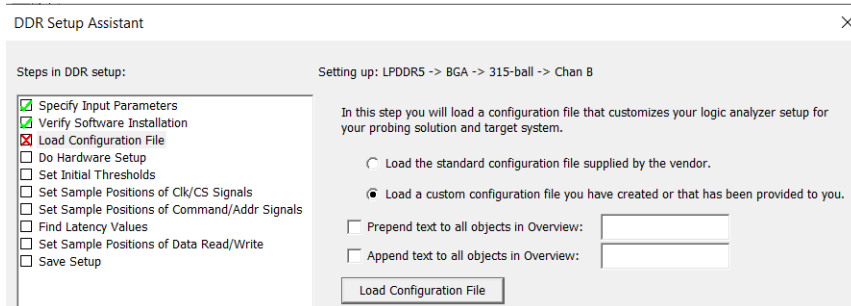1. Create your own custom LPDDR5 configuration file. You use the DDR Custom Configuration Creator tool installed with the B4661A Memory Analysis SW package to create custom files.
2. Run the DDR Setup Assistant and load your custom configuration file in the third step of the wizard as shown below.



See: ["To create a configuration file"](#) on page 6

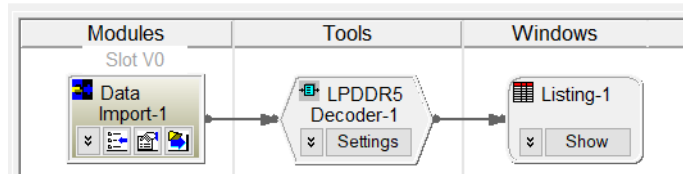Sample Logic Analyzer Setup for LPDDR5 Decode

**NOTE**

In the logic analyzer measurement setup, the LPDDR5 Decoder tool can be attached to the U4164A Logic Analyzer module or a Data Import module as displayed in the above screen. You can also attach a Filter tool to the LPDDR5 Decoder tool to filter the decoded data display based on your specific analysis requirements. But you cannot attach the LPDDR5 Decoder tool to another decoder or Memory Analysis Viewer.

To create a configuration file

The Keysight-provided configuration files are valid only when used with the corresponding memory probe and DRAM for which these are designed.

If you are using some other probing scheme or have a unique DRAM configuration that is not addressed by these standard configuration files, then you must create your own configuration file using the DDR Custom Configuration Creator tool. This tool simplifies the procedure of custom configuration file creation and ensures that all the layout information (buses and signals definitions) needed by LPDDR5 Decoder is included in the created configuration file.

This tool is included in the Keysight B4661A DDR/LPDDR Tools package and is available only after you install this package.

To know more about this tool, refer to its online help that gets installed with this tool's software.

To configure LPDDR5 Decoder Settings

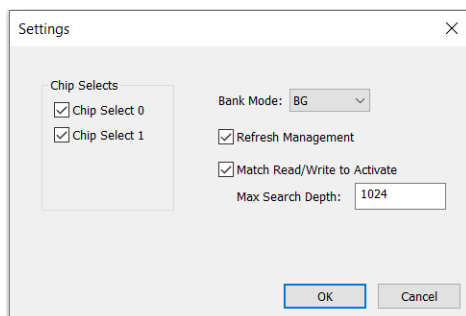
To ensure that the acquired LPDDR5 data is decoded accurately, you need to configure the LPDDR5 Decoder settings. Use the Settings dialog to tell the decoder which chip selects will be used by your device under test and to specify how the decoder should work.

To access the Settings dialog

From the main menu bar, select **Tools > LPDDR5 Decoder > Settings**.

or

In the **Overview** display, click the **Settings** button on the LPDDR5 Decoder tool.



Field	Description
Chip Selects	You must enable all chip selects that are being used in the system to ensure that the decoder functions correctly. Likewise, any chip selects that are not used must not be enabled.
Bank Mode	Choose the type of LPDDR5 bank mode reflecting your bank architecture. The decoder supports the following three bank modes. <ul style="list-style-type: none"> ▪ BG - Bank-group mode (4 Banks, 4 Bank-groups) ▪ 8B - 8-Bank ▪ 16 B - 16-Bank
Refresh Management	Select this checkbox if your LPDDR5 bus is using the Refresh Management (RFM) feature and therefore you want to instruct the decoder to account for the occurrence of Refresh Management commands.
Match Read/Write to Activate	Select this checkbox if you want the decoder to match the Read and Write commands to the corresponding Activate commands in the captured data.
Max Search Depth	This field is enabled only when you select the Match Read/Write to Activate checkbox. This field allows you to specify the limit for the number of row addresses that the Decoder should search to find a matching Activate corresponding to a Read or a Write command in the captured data. The default value is 1024. This limit is specially useful when: <ul style="list-style-type: none"> ▪ you have qualified the storage to NOT store the Activates. ▪ the Activate may not be available for some read/write commands. For instance, during the initialization phase of the LPDDR5 bus. By specifying a shorter search limit, you can significantly reduce the processing time taken by the decoder in searching extensively for the matching Activates in situations such as those mentioned above. However, if you notice that the search limit is so short that the Activates present in the trace are not being found by Decoder and the decode for Read/Write is showing "Row Address = Unknown", then you can increase this limit.

Sampling Positions

Sampling positions tell the logic analyzer when each signal is valid. Correct sampling positions are required for Command and Address, Read Data, and Write Data to reliably capture data on your bus.

NOTE

The DDR Setup Assistant tool automatically sets the required sampling positions on your DDR command, address, and data read and write signals.

If you need assistance in setting sampling positions correctly, please contact your Keysight Technologies representative.

3 Capturing Data

To capture data, the logic analyzer must run a measurement and then end the measurement (either manually or by detecting a trigger).

- 1 Set the logic analyzer with the desired trigger.
- 2 Run the logic analyzer.
- 3 Run the device under test.

The logic analyzer will trigger when the specified condition is found on the bus.

4 Understanding LPDDR5 Decode Displayed in the Listing Window

The decoded LPDDR5 bus data is displayed as various columns in the Listing window. These columns can be categorized in the following two categories:

- Buses and signals captured by logic analyzer
- Data generated by the LPDDR5 Decoder

Sample Number	Buses and Signals Captured by Logic Analyzer															Time	LPDDR5 Bus Decode		
	CK0	CS	CS#	COMMAND	CA	CA_R	CA_F	AP	AB	DATA_R	DATA_W	DM_W	DBI_W	DBI_R	DDRTc	DDRTo			
93	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	46.500 ns	
94	1	1	2	03 0180	03	00	0	0	0000	0000	0000	00...	0	0	0	1	1	47.000 ns	ACT-2 CS: 0 BG: 2 BA: 1 Row Addr = 0x6000
95	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	47.500 ns	
96	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	48.000 ns	
97	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	48.500 ns	
98	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	49.000 ns	
99	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	49.500 ns	
100	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	50.000 ns	
101	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	50.500 ns	
102	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	51.000 ns	
103	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	51.500 ns	
104	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	52.000 ns	
105	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	52.500 ns	
106	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	53.000 ns	
107	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	53.500 ns	
108	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	54.000 ns	
109	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	54.500 ns	
110	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	55.000 ns	
111	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	55.500 ns	
112	1	1	2	1C 0E00	1C	00	0	0	0000	0000	0000	00...	0	0	0	1	1	56.000 ns	CAS WS WR=1 WS RD=0 WS FS=0 DC=0 WRX=0 WRXSA=0 WRXSB/B3=0
113	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	56.500 ns	
114	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	57.000 ns	
115	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	57.500 ns	
116	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	58.000 ns	
117	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	58.500 ns	
118	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	59.000 ns	
119	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	59.500 ns	
120	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	60.000 ns	
121	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	60.500 ns	
122	1	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	1	1	61.000 ns	
123	0	0	3	00 0000	00	00	0	0	0000	0000	0000	00...	0	0	0	0	0	61.500 ns	
124	1	1	2	6E 3707	6E	07	0	0	0000	0000	0000	00...	0	0	0	1	1	62.000 ns	Write CS: 0 BG: 1 BA: 3 Row Addr = 0x2000 Col Addr = 0x31
124.1																			
124.2																			

Data Generated by the LPDDR5 Decoder

The decoder generates the following column, which is displayed in the listing in addition to the input buses captured by logic analyzer.

LPDDR5 Bus Decode

This column contains decoded data from the memory bus. Decoded commands may cover two or rows (a main row and subrow(s)).

The following screen shows a sample LPDDR5 decode column.


Time	LPDDR5 Bus Decode
46.000 ns	
46.500 ns	
47.000 ns	ACT-2 CS: 0 BG: 2 BA: 1 Row Addr = 0x6000
47.500 ns	
48.000 ns	
48.500 ns	
49.000 ns	
49.500 ns	
50.000 ns	
50.500 ns	
51.000 ns	
51.500 ns	
52.000 ns	
52.500 ns	
53.000 ns	
53.500 ns	
54.000 ns	
54.500 ns	
55.000 ns	
55.500 ns	
56.000 ns	CAS WS WR=1 WS RD=0 WS FS=0 DC=0 WRX=0 WRXSA=0 WRXSB/B3=0
56.500 ns	
57.000 ns	
57.500 ns	
58.000 ns	
58.500 ns	
59.000 ns	
59.500 ns	
60.000 ns	
60.500 ns	
61.000 ns	
61.500 ns	
62.000 ns	Write CS: 0 BG: 1 BA: 3 Row Addr = 0x2000 Col Addr = 0x31
62.500 ns	

Decode Errors

The decoder cannot decode a state if you have not enabled one ore more chip selects or if the input buses/signals required by the decoder are not present.

To find commands of a specific type in the listing

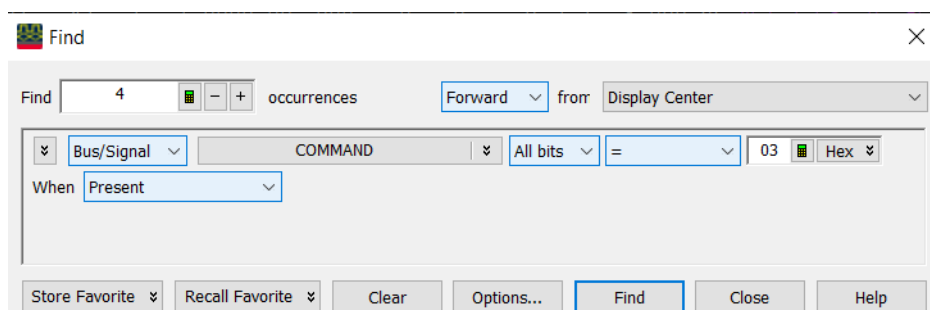- 1 Open the Find dialog by choosing **Edit > Find...** from the menu bar.
- 2 For the bus/signal name, choose **Command**.
- 3 Select the command you wish to find.
- 4 Specify the bus/signal pattern event you wish to find.
- 5 Click **Find**. The occurrence of the specified pattern is highlighted and is placed at the center of the display.



Sample Number	CK0	CS	CS#	COI	CA	CA_R	CA_F	AP	AB	DATA_R	DATA_DM	DBL	DBI_R	DCI	Time	LPDDR5 Bus Decode		
973	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	487.500 ns		
974	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	487.000 ns	
975	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	487.500 ns	
976	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	488.000 ns	
977	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	488.500 ns	
978	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	489.000 ns	
979	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	489.500 ns	
980	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	490.000 ns	
981	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	490.500 ns	
982	1	1	2	03	0180	03	00	0	0	0000	00...000...	0	0	0	1	1	491.000 ns	ACT-2 CS: 0 BG: 1 BA: 3 Row Addr = 0x2000
982.1																		
983	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	491.500 ns	
984	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	492.000 ns	
985	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	492.500 ns	
986	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	493.000 ns	
987	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	493.500 ns	
988	1	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	1	1	494.000 ns	
989	0	0	3	00	0000	00	00	0	0	0000	00...000...	0	0	0	0	0	494.500 ns	

To filter or colorize decoded data display

In the logic analyzer measurement setup, you can add the Filter tool with the LPDDR5 Decoder tool. The Filter tool lets you specify the filtering criteria based on which the decoded data displayed in the Listing can be shown, hidden, or colorized.

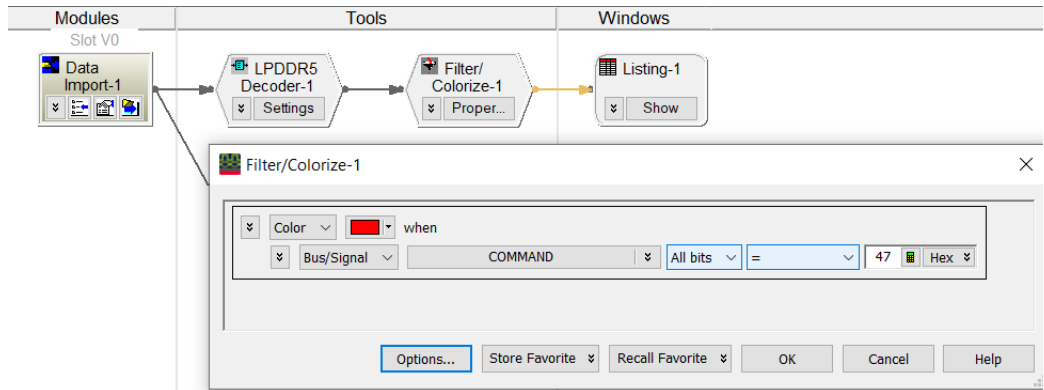
Filtering allows faster analysis in two ways.

First, you can filter unneeded information out of the Listing display. For example, hiding the data for all Chip Selects except the one you are analyzing.

Second, you can isolate particular operations by hiding all other operations. For example, you can show just write commands, without the associated data.


The filter settings filter only the display of data in the Listing. These settings do not filter the data storage by the logic analyzer. You can examine the same data with different settings, for different analysis requirements.

Example of a colorized display in decoded data



Sample Number	CK0	CS	CS#	COMMAND	CA	CA_R	CA_F	AP	AB	DATA_R	DATA_W	DM_W	DBL_W	DBI_R	DDRToolUseOnlyP	DDRToolUseOnl	Time	LPD
12	1	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	1	1	6.000 ns	
13	0	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	6.500 ns	
14	1	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	1	1	7.000 ns	
15	0	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	7.500 ns	
16	1	1	2	07 03c7	07	47	1	1	1	0000 00...	0000 00...	0	0	0	1	1	8.000 ns	ACT-1 CS: 0 R17:R11 =
17	0	0	3	47 2380	47	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	8.500 ns	
18	1	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	1	1	9.000 ns	
19	0	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	9.500 ns	
20	1	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	1	1	10.000 ns	
21	0	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	10.500 ns	
22	1	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	1	1	11.000 ns	
23	0	0	3	00 0000	00	00	0	0	0	0000 00...	0000 00...	0	0	0	0	0	11.500 ns	

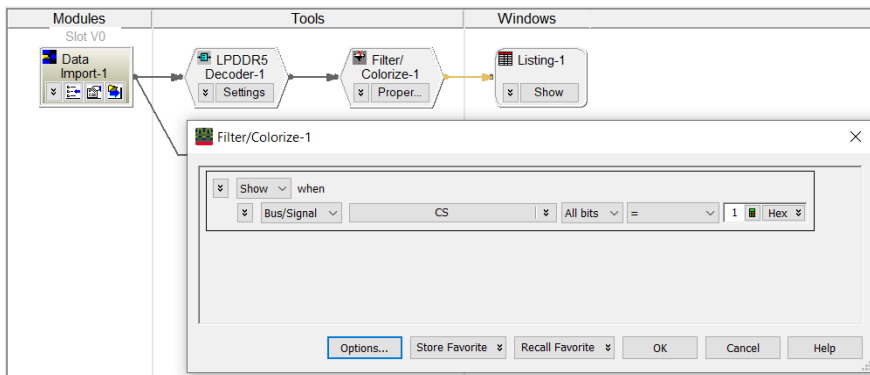Example - filtering the display based on a particular Chip Select (CS 1 in this example)



Sample Number	CK0	CS	CS#	COM	CA	CA_R	CA_F	AP	AB	DATA_R	DATA_DM	DBI_	DBI_R	DCI	Time	LPDDR5 Bus Decode
16	1	1	2	07	03c7	07	47	1	1	0000 00... 000...	0	0	0	1	6.000 ns	ACT-1 CS: 0 BG: 1 BA: 3 R17:R11 = 0x4
16.1																
28	1	1	2	03	0180	03	00	0	0	0000 00... 000...	0	0	0	1	14.000 ns	ACT-2 CS: 0 BG: 1 BA: 3 Row Addr = 0x2000
28.1																
44	1	1	2	0F	0785	0F	05	0	0	0000 00... 000...	0	0	0	1	22.000 ns	ACT-1 CS: 0 BG: 1 BA: 1 R17:R11 = 0x8
44.1																
56	1	1	2	03	0180	03	00	0	0	0000 00... 000...	0	0	0	1	28.000 ns	ACT-2 CS: 0 BG: 1 BA: 1 Row Addr = 0x4000
56.1																
82	1	1	2	0F	07C9	0F	49	1	1	0000 00... 000...	0	0	0	1	41.000 ns	ACT-1 CS: 0 BG: 2 BA: 1 R17:R11 = 0xC
82.1																
94	1	1	2	03	0180	03	00	0	0	0000 00... 000...	0	0	0	1	47.000 ns	ACT-2 CS: 0 BG: 2 BA: 1 Row Addr = 0x6000
94.1																
112	1	1	2	1C	0E00	1C	00	0	0	0000 00... 000...	0	0	0	1	56.000 ns	CAS WS WR=1 WS_RD=0 WS_FS=0 DC=0 WRX=0 WRXSA=0 WRXSB/B3=0
112.1																
124	1	1	2	6E	3707	6E	07	0	0	0000 00... 000...	0	0	0	1	62.000 ns	Write CS: 0 BG: 1 BA: 3 Row Addr = 0x2000 Col Addr = 0x31
124.1																
124.2																
164	1	1	2	0C	0601	0C	01	0	0	0000 00... 000...	0	0	0	1	82.000 ns	CAS WS WR=0 WS_RD=0 WS_FS=0 DC=1 WRX=0 WRXSA=0 WRXSB/B3=0
164.1																
172	1	1	2	42	2105	42	05	0	0	0000 00... 000...	0	0	0	1	86.000 ns	Mask Write CS: 0 BG: 1 BA: 1 Row Addr = 0x4000 Col Addr = 0x20
172.1																
172.2																
220	1	1	2	0C	0601	0C	01	0	0	0000 00... 000...	0	0	0	1	110.000 ns	CAS WS WR=0 WS_RD=0 WS_FS=0 DC=1 WRX=0 WRXSA=0 WRXSB/B3=0
220.1																
224	1	1	2	42	2107	42	07	0	0	0000 00... 010...	0	0	0	1	112.000 ns	Mask Write CS: 0 BG: 1 BA: 3

If you want to prevent certain data from being stored, then use the logic analyzer's storage qualification feature.

See Also

The filter/colorize tool in the Logic Analyzer Online Help

5 Troubleshooting the LPDDR5 Decoder

The following are a few checks and recommended solutions that can help you avoid, diagnose, and resolve problems faced when using the LPDDR5 Decoder.

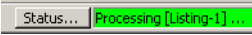

Hardware Related Checks

- The logic analyzer cards should be firmly seated in the logic analysis system frame.
- Logic analyzer pods should be connected to the proper connectors and probes. All cables and probes should be seated properly ensuring that there are no bent pins or poor probe connections.
- The device under test should be "On" and running properly.

Software Related Checks

Ensure that you have loaded the correct configuration file for the probe you are using. Signals are mapped differently, depending on which configuration file is loaded.

Common Problems and Recommended Solutions

Problem	Cause	Recommended Solution
<p>Logic analyzer "hangs up" just after capturing a trace and the following status message is displayed at the bottom of the screen.</p> 	<p>This indicates that the decoder is busy decoding the captured data.</p>	<p>If the "Processing" message doesn't go away after a minute or two, it is possible that the decoder is searching through an enormous number of idle states in between "meaningful" states. In such a situation, you can use the Cancel button to stop the decoder.</p> 
<p>No trace list display</p>	<p>The trigger specification may be incorrect for the data you want to capture, or the trace memory may be only partially filled.</p>	<ul style="list-style-type: none"> Check your trigger sequence to ensure that it will capture the events of interest. Try stopping the analyzer; if the trace list is partially filled, this should display the contents of trace memory.
<p>Logic analyzer won't power up</p>	<p>If logic analyzer power is cycled when the logic analyzer is connected to a device under test that remains powered up, the logic analyzer may not be able to power up. Some logic analyzers are inhibited from powering up when they are connected to a device under test that is already powered up.</p>	<p>Remove power from the device under test, then disconnect all logic analyzer cabling. This will allow the logic analyzer to power up. Reconnect logic analyzer cabling after power up.</p>

Problem	Cause	Recommended Solution
Erratic trace measurements		<ul style="list-style-type: none"> ▪ Do a full reset of the device under test before beginning the measurement. ▪ Ensure that your device under test meets the timing requirements of the applicable JEDEC bus standard. ▪ See Capacitive loading. If the device under test design has extremely close timing margins, loading from probes may cause incorrect functioning and give erratic trace results. ▪ Ensure that you have sufficient cooling for the device under test while the probes are installed.
Capacitive loading	Excessive capacitive loading can degrade signals, resulting in incorrect capture, or system lockup in the microprocessor. All probes add additional capacitive loading, as can custom probe fixtures you design for your application.	<ul style="list-style-type: none"> ▪ Careful layout of your device under test can minimize loading problems and result in better margins for your design. This is especially important for systems that are running at frequencies greater than 50 MHz. ▪ Remove as many pin protectors, extenders, and adapters as possible.
No decoding or incorrect decoding	This problem may be due to incorrect synchronization, modified configuration, incorrect connections, or a hardware problem in the device under test. A locked status line can cause incorrect or incomplete decoding.	<ul style="list-style-type: none"> ▪ Ensure that each logic analyzer pod is connected to the correct connector. ▪ There is not always a one-to-one correspondence between analyzer pod numbers and connector numbers. Probes must supply address, data, and status information to the analyzer in a predefined order. ▪ Check the activity indicators for status lines locked in a high or low state. ▪ Check that the signals on the device under test are routed to the connector according to the manual for your probe. ▪ Verify that the required input buses have not been modified from their default values. These buses must remain as they are configured by the configuration file. Do not change the names of these labels or the bit assignments within the labels. Some analysis probes also require other data labels. ▪ Verify that storage qualification has not excluded storage of all the needed states. ▪ Verify that the sampling positions are correctly configured.

If you still have difficulty using the decoder after trying these suggestions, please contact your Keysight Technologies representative.

