
.Net Framework 2.0 installation procedure

This is the procedure to install .Net framework 2.0 to E5052B.

Installation

Required Equipment

- E5052B (with keyboard and mouse).
- USB memory.

NOTE

The free space of 30 MB or more is necessary for the USB mass storage device.

How to make Installation device

The following is the procedure to make the Installation Device.

- Step 1.** Download the installer, “dotnetfx.exe” from Agilent Technologies web site, then copy this file to the USB mass storage device.

The latest firmware can be downloaded from the following site.

- <http://www.agilent.com/find/ssa/>

How to install .Net Framework 2.0

- Step 1.** Exit from the E5052B firmware.

1. Press **System** key.
2. Press **Service Menu - Administrator Menu - Exit E5052B - OK** on the menu bar.

- Step 2.** Connect USB mass storage device in to the front USB port of E5052B.


- Step 3.** Copy the installer to E5052B user drive (F).

- Step 4.** Disable USB mass storage device, then remove it from the front USB port of E5052B.

- Step 5.** Install “.Net Framework 2.0” using the following procedure.


1. Double-Click “**dotnetfx.exe**” icon. Setup Wizard start automatically as shown in Figure 1.
2. Click on the **Next** button.

Figure 1 .Net Framework 2.0 Setup Wizard

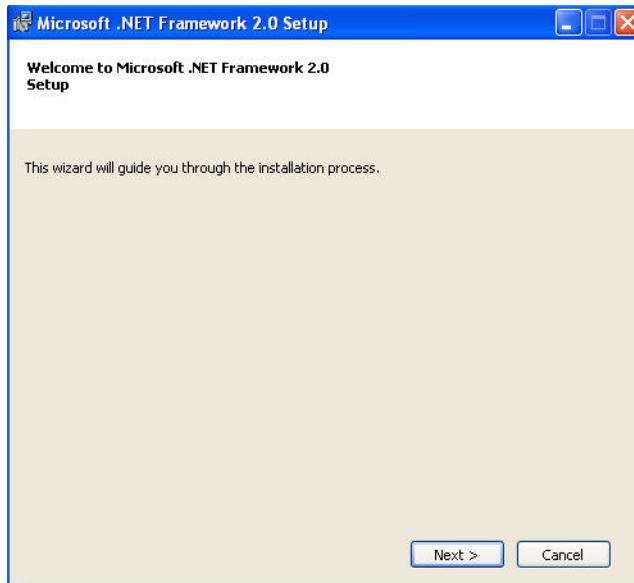

3. Read End-user License Agreement as shown in Figure 2, and check on the check box. Then click on **Install** button.

Figure 2 .Net Framework 2.0 setup Wizard

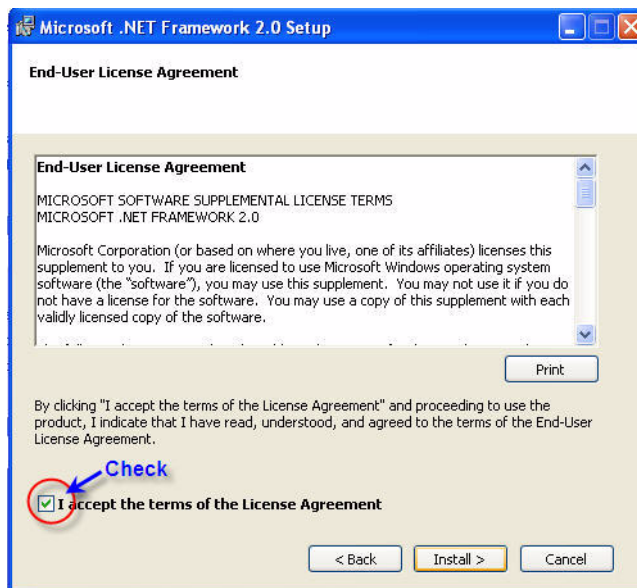


4. Installation starts. Wait until "Setup Wizard" (Figure 3) disappears.

.Net Framework 2.0 installation procedure
Installation

Figure 3


.Net Framework 2.0 setup Wizard

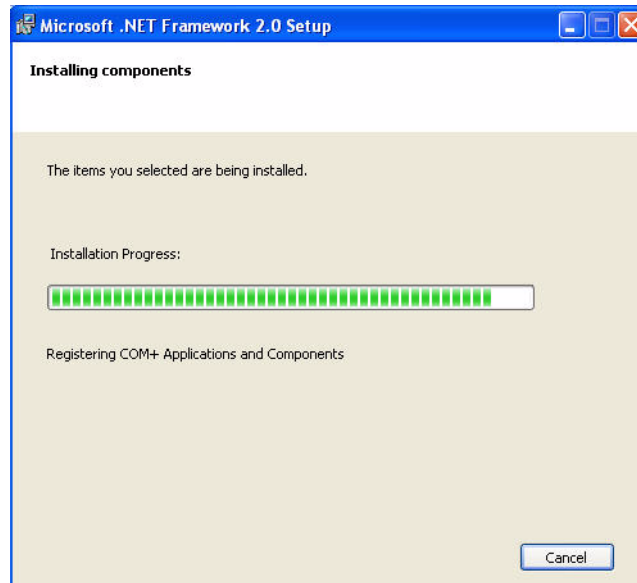

5. When the installation succeeds, the screen (Figure 4) is displayed.

Figure 4

.Net Framework 2.0 setup Wizard

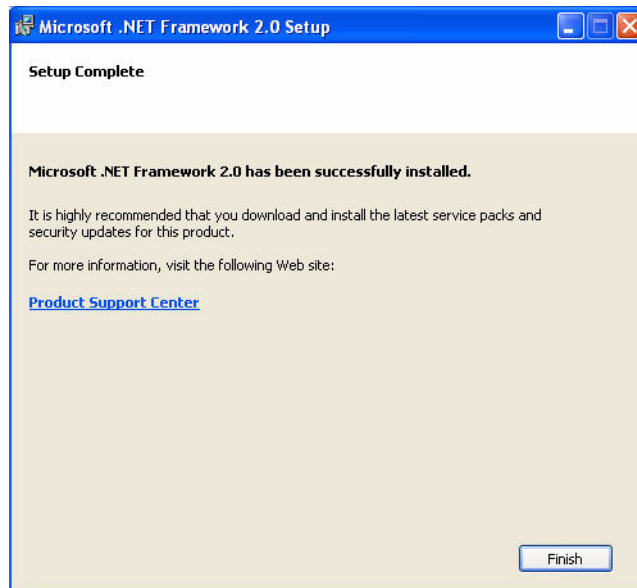

6. Click on the **Finish** button.

Step 6. Install Firmware 3.10 or later, refer to E5052B Firmware Update Procedure.

NOTE

The following screen might be displayed when FW3.10 is started for the first time occasionally. In this case, it is required to click on the **Unblock** button.

Figure 5 .Net Framework 2.0 setup Wizard



.Net Framework 2.0 installation procedure
Installation