

Installation Note

Keysight – Add Configurable Test Set Upgrade Kit For Version 6 Single Source Synthesizers

To Upgrade PNA N5224A/B or N5225A/B Option 200 to Option 201

Upgrade Kit Order Number: N5224AU-201, N5225AU-201,

N5224BU-201, and N5225BU-201

Keysight Kit Number: N5225-60101

NOTICE: This document contains references to Agilent Technologies. Agilent's former Test and Measurement business has become Keysight Technologies. For more information, go to **www.keysight.com**.



Notices

© Keysight Technologies, Inc.
2011-2022

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Trademark Acknowledgments

Manual Part Number

N5225-90101

Edition

Edition 2, January 2022
Supersedes: December 2020

Printed in USA/Malaysia

Published by:
Keysight Technologies
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS,” AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS

COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is “commercial computer software,” as defined by Federal Acquisition Regulation (“FAR”) 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement (“DFARS”) 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public.

Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at

<http://www.keysight.com/find/sweula>

The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software

documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Description of the Upgrade

NOTE

Some of the assembly drawings in this document may be different from your instrument, but the process is similar for both an “A” model and “B” model instruments.

This upgrade adds the following items to your N5224A/B Option 200 or N5225A/B Option 200 network analyzer:

- a reference mixer switch
- front panel jumpers
- front panel overlay replacement
- new cable

After installation of this upgrade, your analyzer will be an N5224A/B Option 201 or N5225A/B Option 201.

Refer to **“Overview of the Installation Procedure” on page 13.**

CAUTION

This repair must be done at a service center or a self-maintainer service center! Refer to **“Getting Assistance from Keysight” on page 4.**

Getting Assistance from Keysight

Installing this upgrade kit requires special skills and experience. If you think you may not be qualified to do the work, or need advice, contact Keysight.

Contacting Keysight

Assistance with test and measurements needs and information on finding a local Keysight office are available on the Web at:

<http://www.keysight.com/find/assist>

If you do not have access to the Internet, please contact your Keysight field engineer.

NOTE

In any correspondence or telephone conversation, refer to the Keysight product by its model number and full serial number. With this information, the Keysight representative can determine whether your product is still within its warranty period.

If You Have Problems With the Upgrade Kit Contents

Keysight stands behind the quality of the upgrade kit contents. If you have problems with any item in the kit, refer to www.keysight.com and the **Contact**

Keysight () link.

Getting Prepared

CAUTION

The PNA contains extremely sensitive components that can be ruined if mishandled. Follow instructions carefully when making cable connections, especially wire harness connections.

The person performing the work accepts responsibility for the full cost of the repair or replacement of damaged components.

NOTE

IMPORTANT! Before you begin this upgrade:

- This document contains references to legacy and new A25 HMA26.5 Multiplier/Amplifier. Your model instrument may have either a legacy assembly or the new parts installed.
 - To verify your instrument's A25 HMA26.5 Multiplier/Amplifier, refer to [“Verify the Model/Version of HMA26.5 Installed” on page 7](#).
 - The A27/A28 mixer bricks might be a legacy part number 5087-7323 (with (x2) discrete 3dB attenuators, 08490-60039) or new part number 5087-7417 (with integrated 3 dB attenuators).
 - See also your instrument's PDF Service Guide ^a.
-

a. See [“Downloading the Online PNA Service Guide” on page 9](#).

To successfully install this upgrade kit, you will need the following:

- A license key - refer to [“License Key Redemption”](#) below.
- A PDF copy or a paper copy of the PNA Service Guide - refer to [“Downloading the Online PNA Service Guide”](#) below.
- An ESD-safe work area - refer to [“Protecting Your Workspace from Electrostatic Discharge”](#) below.
- Correct tools - refer to [“Tools Required for the Installation” on page 10](#).
- Enough time - refer to [“About Installing the Upgrade” on page 10](#).
- Test equipment for the post-upgrade adjustments and full instrument calibration. To view the equipment list, click the Chapter 3 bookmark “Tests and Adjustments” in the PDF Service Guide¹.

1. See [“Downloading the Online PNA Service Guide” on page 9](#).

License Key Redemption

NOTE

The only difference between an A model license key redemption and a B model is that the A model uses a 12-character license key and the B model uses a license key file.

NOTE

Ensure that you are connected to an external server, before attempting to download your email and license key file.

If you are unfamiliar with the licensing process:

For A models: Refer to

<https://www.keysight.com/us/en/assets/9018-03565/installation-guides/9018-03565.pdf> (N5225-90110).

For B models: Refer to the

<https://www.keysight.com/us/en/assets/9018-04534/installation-guides/9018-04534.pdf> (N5242-90024).

NOTE

The enclosed Software Entitlement Certificate is a receipt, verifying that you have purchased a licensed option for the PNA of your choice. You must now use a Keysight Web page to request a license key for the instrument that will receive the option.

To enable the option product, you must request license key(s) (A models) or license key files(s) (B models) from the Keysight Software Manager:

<http://www.keysight.com/find/softwaremanager>.

To complete the request, you will need to gather the following information:

- From the certificate
 - Order number
 - Certificate number
- From your instrument

(Instrument information is available in the network analyzer - on the toolbar, click Help, then click About Network Analyzer.)

- Model number
 - Serial number
- **A models ONLY:** From the online Keysight HostID utility

Part of the OEC procedure to obtain the 12-digit license key online requires you to provide the HostID number of the PNA. This HostID number is NOT the one currently shown on the PNA. To find your new HostID, go to <http://mktwww.srs.is.keysight.com/field/service/network/pna/> and, using the HostID utility, enter the PNA serial number and your new, upgraded PNA-X model number - N5224A, N5225A.

Getting Prepared

– Host ID

Using the information just gathered, you must request license key(s) for your A model or for your B models, a license key file(s) from the Keysight Software Manager: <http://www.keysight.com/find/softwaremanager>.

You will need to provide an email address, Keysight will promptly email your A model license key(s) or a for a B model, license key file(s) attachment message. Refer to **“License Key Redemption” on page 6**.

Verify the License Contents

Refer to the license message you received from Keysight:

If the model number, serial number, or option number do not match those on the license message you received from Keysight, you will not be able to install the license key file. If this is the case, contact Keysight for assistance. Refer to **“Getting Assistance from Keysight” on page 4**.

Verify the Model/Version of HMA26.5 Installed

This upgrade kit contains components for use with PNA models using the legacy HMA26.5 part number 5086-7765. If your PNA has the newer HMA26.5 part number N5240-60101 installed you may discard these parts:

- A26 splitter 5067-4086
- W52 N5245-20013
- W53 N5245-20023
- W54 N5245-20022


(If you have the legacy 5086-7765 HMA26.5, please discard the N5245-20195 semi-rigid cables. Refer to **Figure 1 on page 8**.)

The new N5240-60101 HMA26.5 has the splitter integrated into the assembly. Refer to **Figure 1 on page 8**.

Figure 1 Comparison of Legacy HMA26.5 (5087-7765) and New HMA26.5 (N5240-60101)

New HMA26.5 -- N5240-60101
Requires (x1) Cable.

Legacy HMA26.5 -- 5087-7765
Requires A26 Splitter and (x3) Cables.

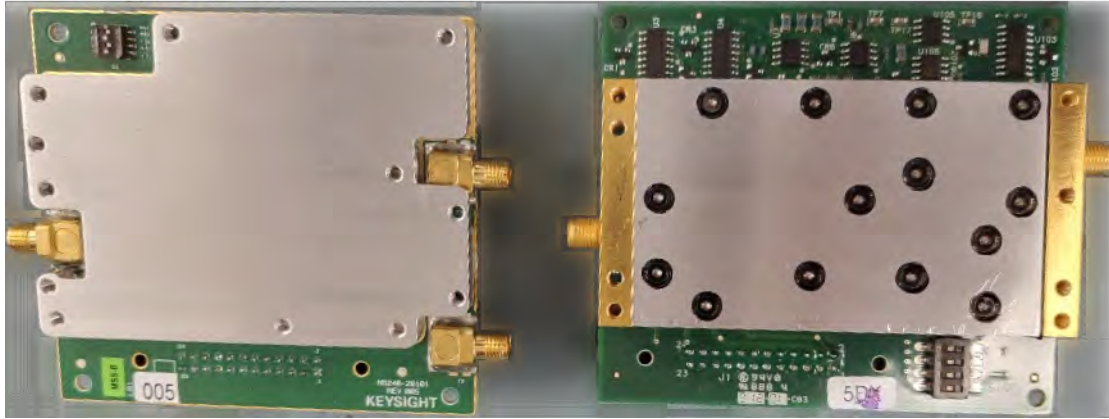

Verify the License Contents

Refer to the license message you received from Keysight:

If the model number, serial number, or option number do not match those on the license message you received from Keysight, you will not be able to install the license key file. If this is the case, contact Keysight for assistance. Refer to **“Getting Assistance from Keysight” on page 4.**

Downloading the Online PNA Service Guide

To view the online Service Guide for your PNA model number, use the following steps:

1. Go to www.keysight.com.
2. In the Search box, enter the model number of the analyzer (e.g., N5232B) and click **Search**.
3. Click **Support** > **Keysight Product Support**.
4. In the **Search Support** area type your instrument's model number (e.g., N2222B).
5. Press **Enter**.
6. Scroll down to the **PRINT DOCUMENTATION** section and click to select **Service Manual**.

The **Service Manual** for your instrument will be displayed near the top of the right column.

7. Click the hyperlink of the Service Guide title to download the PDF file.
8. When the PDF of the Service Guide is displayed, scroll through the Contents section bookmarks to locate the information needed.

Protecting Your Workspace from Electrostatic Discharge

For information, click on the Chapter 1 bookmark, “Electrostatic Discharge Protection” in the PDF Service Guide¹.

ESD Equipment Required for the Installation

Description	Keysight Part Number
ESD grounding wrist strap	9300-1367
5-ft grounding cord for wrist strap	9300-0980
2 x 4 ft conductive table mat and 15-ft grounding wire	9300-0797
ESD heel strap (for use with conductive floors)	9300-1308

Tools Required for the Installation

Description	Qty	Part Number
T-10 TORX driver - set to 9 in-lbs (1.02 N.m)	1	N/A
T-20 TORX driver - set to 21 in-lbs (2.38 N.m)	1	N/A
5/16-in (8 mm) nutsetter or open end torque wrench - set to 10 in-lbs (1.13 N.m)	1	N/A

CAUTION

Use a 5/16-in torque wrench set to 10 in-lbs on all cable connections except the front and rear panel bulkhead connectors. On these, use a 5/16 inch nutsetter or open end torque wrench set to 21 in-lb.

About Installing the Upgrade

Products affected	N5224A/B and N5225A/B Option 200
Installation to be performed by	Keysight service center or personnel qualified by Keysight
Estimated installation time	2 hours
Estimated adjustment time	0.5 hours
Estimated full instrument calibration time	4.5 hours

1. See “[Downloading the Online PNA Service Guide](#)” on page 9.

Items Included in the Upgrade Kit

Check the contents of your kit against the following list. If any part is missing or damaged, contact Keysight Technologies. Refer to **“Getting Assistance from Keysight” on page 4.**

Table 2 Contents of Upgrade Kit N5225-60101

Ref Desig.	Description	Qty	Part Number
--	Installation note (this document)	1	N5225-90101
--	Software Entitlement Certificate	1	5964-5145
--	China RoHS Addendum	1	9320-6722
A37	Reference mixer switch	1	5087-7759
--	Test set front plate	1	N5224-00004
--	Bracket (for A37 reference mixer switch)	1	N5245-00024
--	Machine screw, M3 x 8, pan head (2 to attach bracket to reference mixer switch; 2 to attach reference mixer switch assembly to deck)	5	0515-0372
--	Cable clamp	13	1400-1334
--	Guard, jumper cables, side 2 – Port (A models)	2	N5242-00029
--	Guard, jumper cables, side 2 – Port (B models)	2	N5242-00048
--	Front panel overlay – “A” Models	1	N5227-80009
--	Front panel overlay – “B” Models	1	N5227-80022
W19	RF cable, A29 port 1 receiver coupler to front-panel Port 1 SOURCE OUT	1	N5245-20039
W20	RF cable, port 1 CPLR THRU to A33 port 1 coupler	1	N5245-20045
W21	RF cable, A29 port 1 receiver coupler to A37 reference mixer switch	1	N5245-20120
W22	RF cable, A33 port 1 coupler to front-panel Port 1 CPLR ARM	1	N5245-20025
W31	RF cable, A32 port 2 receiver coupler to front-panel port 2 SOURCE OUT	1	N5245-20040
W32	RF cable, port 2 CPLR THRU to A36 port 2 coupler	1	N5245-20106
W33	RF cable, A32 port 2 receiver coupler to front-panel REF 2 SOURCE OUT	1	N5245-20121
W34	RF cable, A36 port 2 coupler to front-panel port 2 CPLR ARM	1	N5245-20024
W36	RF cable, Front panel jumper	6	N5245-20155
W37	RF cable, port 1 RCVR A IN to A27 mixer brick (A)	1	N5245-20041
W40	RF cable, port 2 RCVR B IN to A27 mixer brick (B)	1	N5245-20042
W41	RF cable, A37 reference mixer switch to front-panel REF 1 RCVR R1 IN	1	N5245-20007
W42	RF cable, REF 1 SOURCE OUT to A37 reference mixer switch	1	N5245-20006

Items Included in the Upgrade Kit

Table 2 **Contents of Upgrade Kit N5225-60101**

Ref Desig.	Description	Qty	Part Number
W43	RF cable, A37 reference mixer switch to A27 mixer brick (R1)	1	N5245-20009
W46	RF cable, REF 2 RCVR R2 IN to A27 mixer brick (R2)	1	N5245-20011
--	Ribbon cable, A23 test set motherboard J554 to A37 reference mixer switch	1	8121-0966

NOTE

Extra quantities of items such as protective plastic caps, screws, cable ties, and cable clamps may be included in this upgrade kit. It is normal for some of these items to remain unused after the upgrade is completed.

Installation Procedure for the Upgrade

The network analyzer must be in proper working condition prior to installing this option. Any necessary repairs must be made before proceeding with this installation.

WARNING

This installation requires the removal of the analyzer's protective outer covers. The analyzer must be powered down and disconnected from the mains supply before performing this procedure.

Overview of the Installation Procedure

- “Step 1. Obtain a Keyword and Verify the Information.”
- “Step 2. Remove the Outer Cover.”
- “Step 3. Remove the Front Panel Assembly.”
- “Step 4. Remove the Test Set Front Plate Assembly From the Test Set Deck.”
- “Step 5. Move the LED Boards and Couplers to the New Test Set Front Plate.”
- “Step 6. Install New Test Set Front Plate Assembly to Test Set Deck.”
- “Step 7. Remove Some Bottom-Side (Test Set) Cables.”
- “Step 8. Remove a 3 dB Pad.”
- “Step 9. Assemble the A37 Reference Mixer Switch Assembly.”
- “Step 10. Install the A37 Reference Mixer Switch Assembly.”
- “Step 11. Install Some Bottom-Side (Test Set) Cables.”
- “Step 12. Remove the Old Lower Front Panel Overlay.”
- “Step 13. Reinstall Front Panel Assembly.”
- “Step 14. Install the New Lower Front Panel Overlay.”
- “Step 15. Install Front Panel Jumpers.”
- “Step 16. Position the Cables and Wires to Prevent Pinching.”
- “Step 17. Reinstall the Outer Cover.”
- “Step 18. Remove Option 200 License.”
- “Step 19. Enable Options 201.”
- “Step 20. Perform Post-Upgrade Adjustments and Calibration.”
- “Step 21. Prepare the PNA for the User.”

Step 1. Obtain a Keyword and Verify the Information

Follow the instructions on the Software Entitlement Certificate supplied to obtain a license key for installation of this upgrade. Refer to **“License Key Redemption” on page 6**.

Verify that the model number, serial number, and option number information on the license key match those of the instrument on which this upgrade will be installed.

Once the license key (A models) or license key file (B models) has been received and the information verified, you can proceed with the installation at **“Step 2. Remove the Outer Cover” on page 14**.

NOTE

If the model number, serial number, or option number do not match those on your license key (A models) or license key file (B models), you will not be able to install the option. If this is the case, contact Keysight for assistance before beginning the installation of this upgrade. Refer to **“Contacting Keysight” on page 4**.

Step 2. Remove the Outer Cover

For instructions, click the Chapter 7 bookmark “Removing the Covers” in the PDF Service Guide.

Step 3. Remove the Front Panel Assembly

For instructions, click the Chapter 7 bookmark “Removing and Replacing the Front Panel Assembly” in the PDF Service Guide¹.

Step 4. Remove the Test Set Front Plate Assembly From the Test Set Deck


Refer to **Figure 2 on page 16** to see the screws that must be removed. Keep the screws for reuse later.

Step 5. Move the LED Boards and Couplers to the New Test Set Front Plate

Move the LED boards, test port couplers and their mounting nuts to the new test set front plate (part number N5224-00004).

Refer to **Figure 1** for this step of the procedure. New parts are listed in **Table 2 on page 11**.

Figure 1 Test Set Front Plate Assembly (0515-1521, 5022-1087, 5087-7793, N5224-00004, N5240-60058)

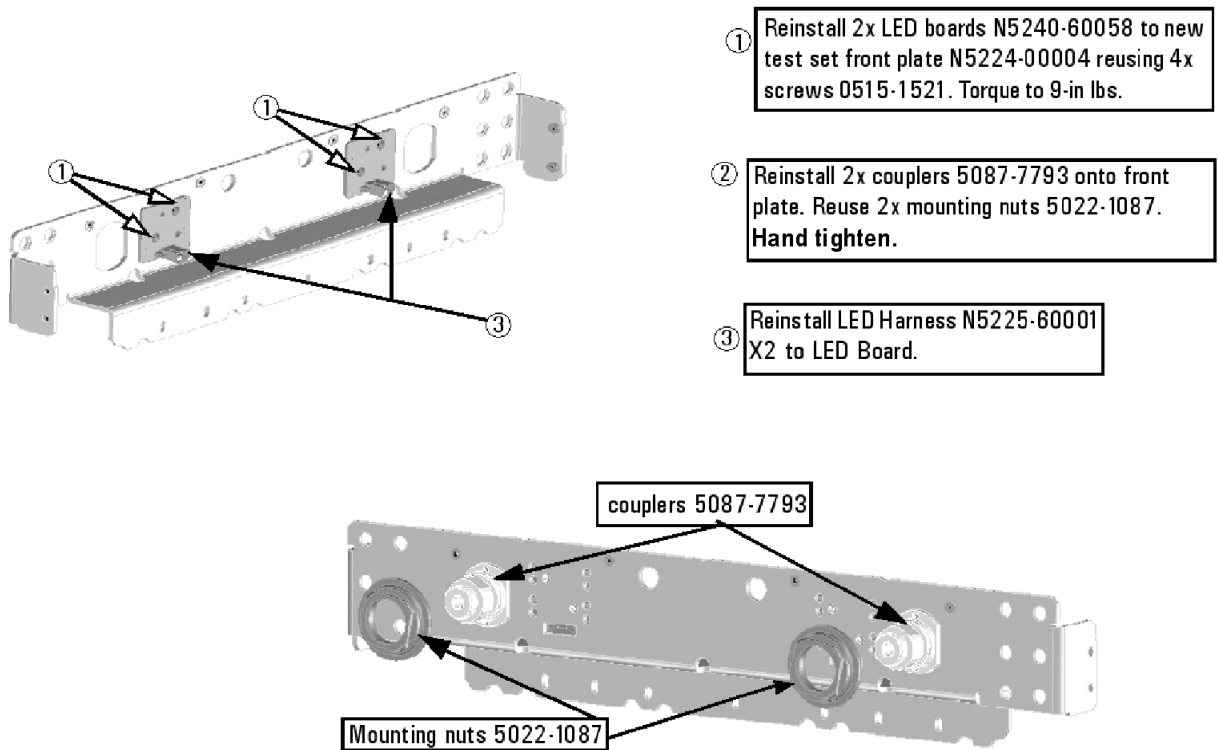


N5225-101-05

Step 6. Install New Test Set Front Plate Assembly to Test Set Deck

Refer to **Figure 2** for this step of the procedure. New parts are listed in **Table 2** on page 11.

Figure 2 Test Set Front Plate Assembly Installation (0515-0372, 0515-1227)

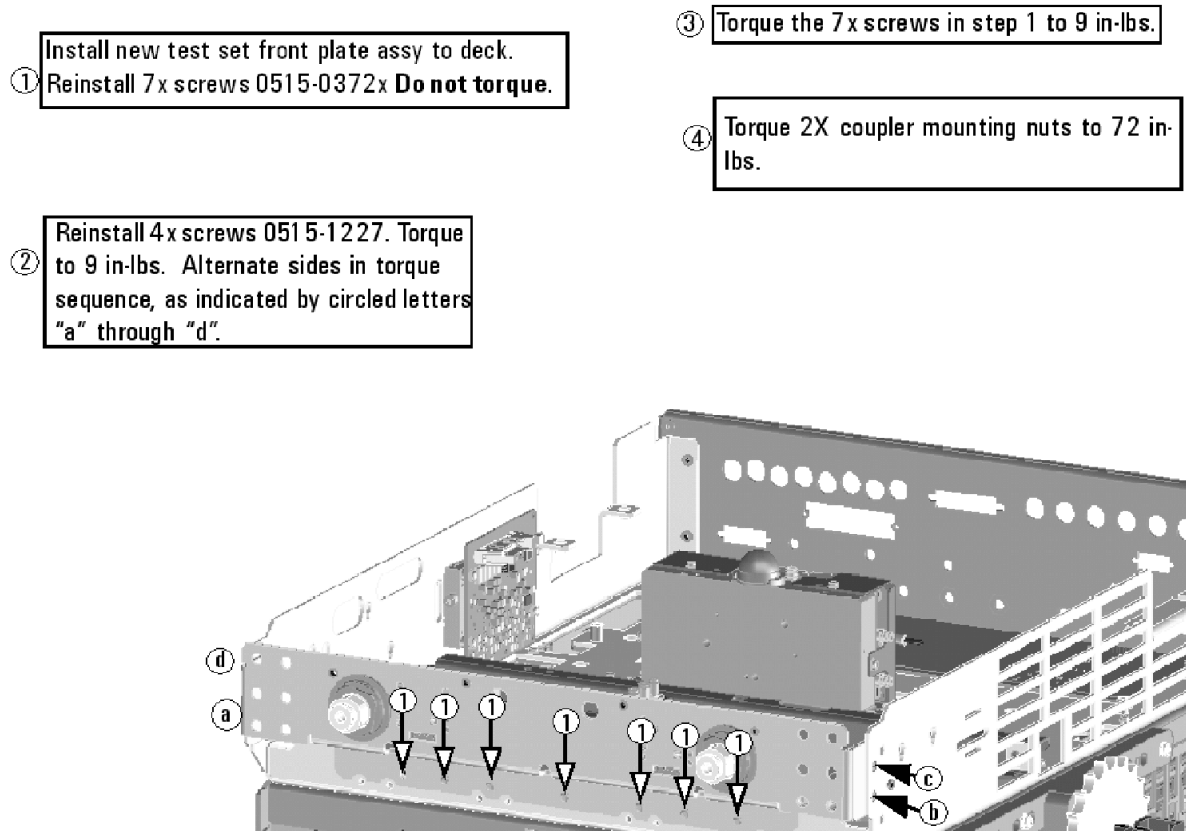

Step 7. Remove Some Bottom-Side (Test Set) Cables

CAUTION

Be careful not to damage the center pins of the semirigid cables. Some flexing of the cables may be necessary but do not over-bend them.

1. Place the analyzer bottom-side up on a flat surface.
2. Remove the following cables. To see an image showing the location of these cables, click the Chapter 6 bookmark “Bottom RF Cables, Standard 2-Port Configuration, Option 200 (S/N Prefixes <6021)” or “Bottom RF Cables, Standard 2-Port Configuration, Option 200 (S/N Prefixes ≥6021)” in the PDF Service Guide.

These cables may be discarded – they will not be reinstalled.

- W107 (N5224-20005) A29 port 1 receiver coupler to A27 mixer brick (R1)/3-dB pad
- W110 (N5224-20006) A32 port 2 receiver coupler to A27 mixer brick (R2)
- W111 (N5224-20012) A29 port 1 receiver coupler to A33 port 1 coupler
- W114 (N5224-20011) A32 port 2 receiver coupler to A36 port 2 coupler
- W115 (N5224-20010) A33 port 1 coupler to A27 mixer brick (A)
- W118 (N5224-20009) A36 port 2 coupler to A27 mixer brick (B)

These cables must be saved – they will be reinstalled.

- W12 (N5245-20109) A29 port 1 receiver coupler to W11
- W18 (N5245-20111) A32 port 2 receiver coupler to W17

Step 8. Remove a 3 dB Pad

Remove and discard the 3 dB pad connected to A27 mixer brick port R1.


Step 9. Assemble the A37 Reference Mixer Switch Assembly

Mount the bracket (N5245-00024) to the reference mixer switch (5087-7759) using two screws (0515-0372). Use a T-10 TORX driver to tighten the screws. New parts are listed in **Table 2 on page 11**.

Step 10. Install the A37 Reference Mixer Switch Assembly

Refer to **Figure 3** for this step of the procedure. New parts are listed in **Table 2 on page 11**. Use a T-10 TORX driver to tighten all screws.

Figure 3 Reference Mixer Switch Assembly (0515-0372, 8120-0966)

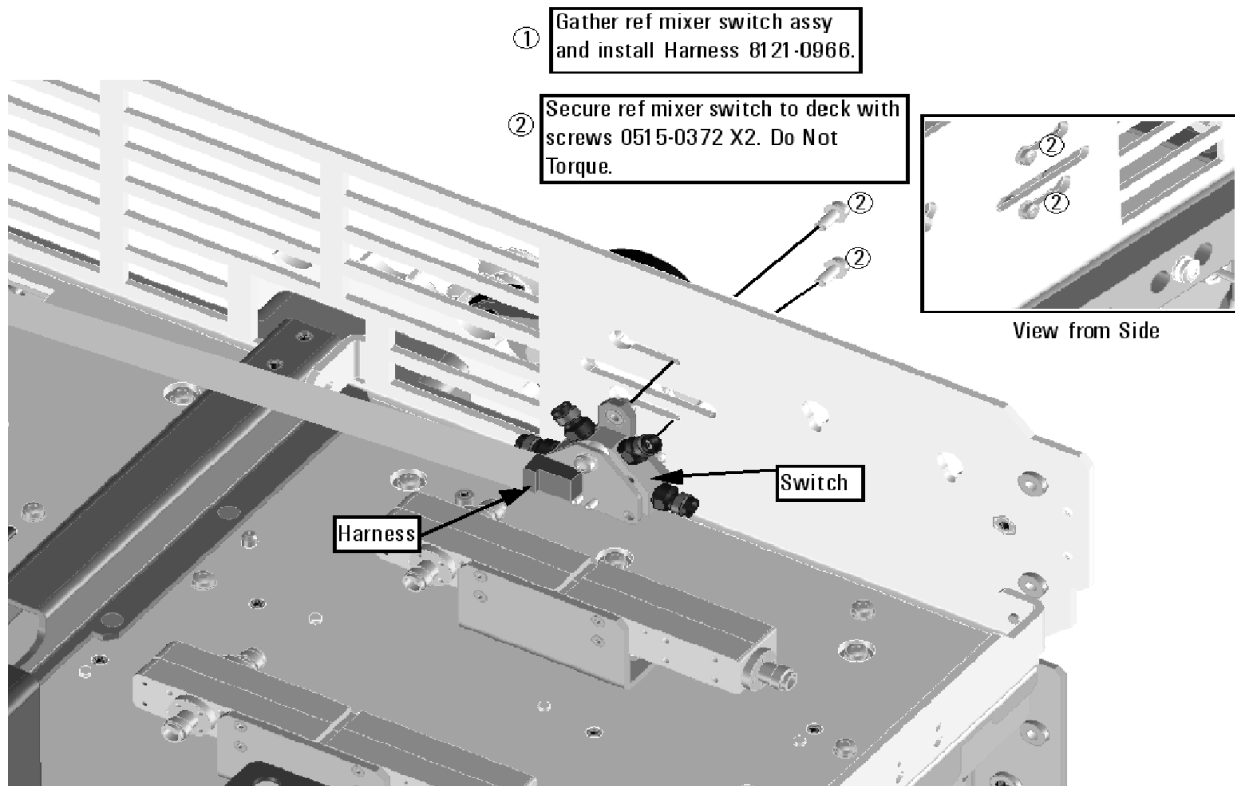

Step 11. Install Some Bottom-Side (Test Set) Cables

CAUTION

Follow instructions carefully when making cable connections, especially wire harness connections. Incorrect connections can destroy components, resulting in additional customer costs.

Install the Semirigid Cables

To see an image showing the location of these cables, click the Chapter 6 bookmarks “Bottom RF Cables, 2-Port Configuration, Option 201 (S/N Prefixes <6021)” or “Bottom RF Cables, 2-Port Configuration, Option 201 (S/N Prefixes ≥6021)” in the PDF Service Guide. New parts are listed in [Table 2 on page 11](#).


Install the following new cables in the order listed.

- W40 (N5245-20042) Port 2 RCVR B IN to A27 mixer brick (B)

* As shown in [Figure 4 on page 19](#), install x3 cable clamps (part number 1400-1334 to secure W33 (part number N5245-20121). Later, as shown in the graphic, three more cable clamps will be installed to secure W21 (part number N5245-20120).

Figure 4

Location of Cable Clamp to Secure W40 (1400-1334, N5245-20042, N5245-20121)

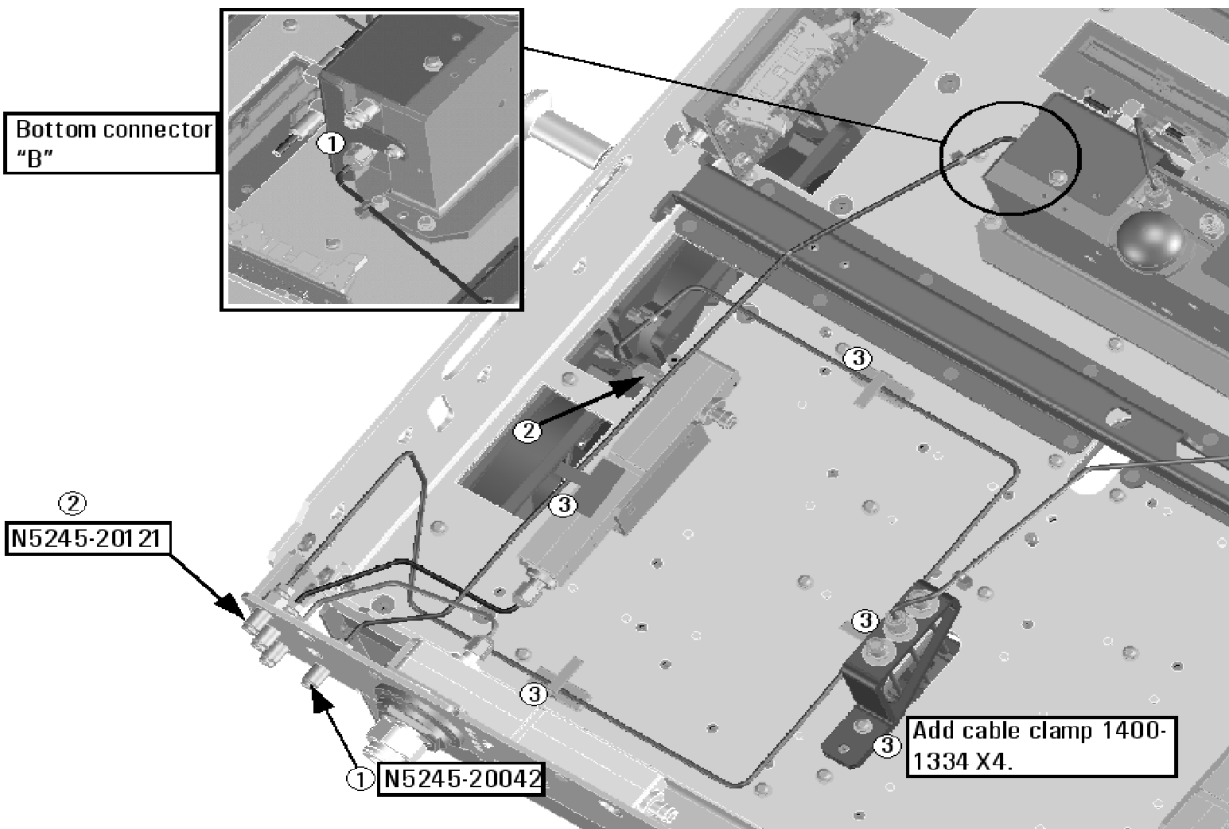

N5225_101_02

- W34 (N5245-20024) A36 port 2 coupler to front-panel port 2 CPLR ARM
- W31 (N5245-20040) A32 port 2 receiver coupler to front-panel port 2 SOURCE OUT


- W33 (N5245-20121) A32 port 2 receiver coupler to front-panel REF 2 SOURCE OUT

* As shown in **Figure 4 on page 19**, install three cable clamps (part number 1400-1334) to secure W33 (part number N5245-20121).

- W32 (N5245-20106) Port 2 CPLR THRU to A36 port 2 coupler
- W18 (reuse) (N5245-20111) A32 port 2 receiver coupler to W17
- W46 (N5245-20011) REF 2 RCVR R2 IN to A27 mixer brick (R2)

* As shown in **Figure 5 on page 20**, install one cable clamp (part number 1400-1334) to secure W46 (part number N5245-20011).

Figure 5 Location of Cable Clamp to Secure W46 (N5245-20011 and 1400-1334)

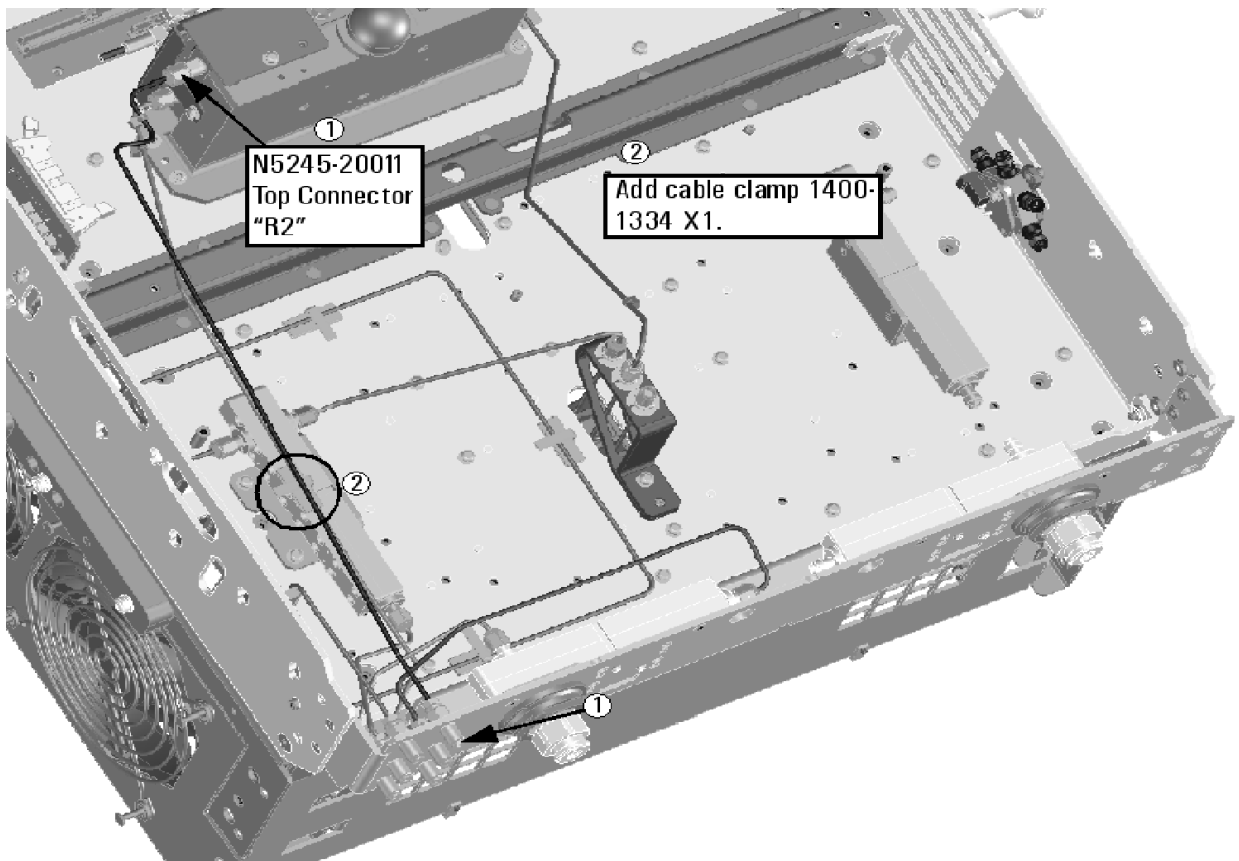


- W37 (N5245-20041) Port 1 RCVR A IN to A27 mixer brick (A)
- W22 (N5245-20025) A33 port 1 coupler to front-panel REF 1 CPLR ARM
- W20 (N5245-20045) Port 1 CPLR THRU to A33 port 1 coupler

Installation Procedure for the Upgrade

- W19 (N5245-20039) A29 port 1 receiver coupler to front-panel Port 1 SOURCE OUT
- W42 (N5245-20006) REF 1 RCVR R1 IN to A37 reference mixer switch
- W21 (N5245-20120) A29 port 1 receiver coupler to A37 reference mixer switch

* As shown in **Figure 6 on page 21**, install three cable clamps (part number 1400-1334) to secure W21 (part number N5245-20120).

Figure 6 Location of Cable Clamps to Secure W21 (N5245-20120 and 1400-1334)

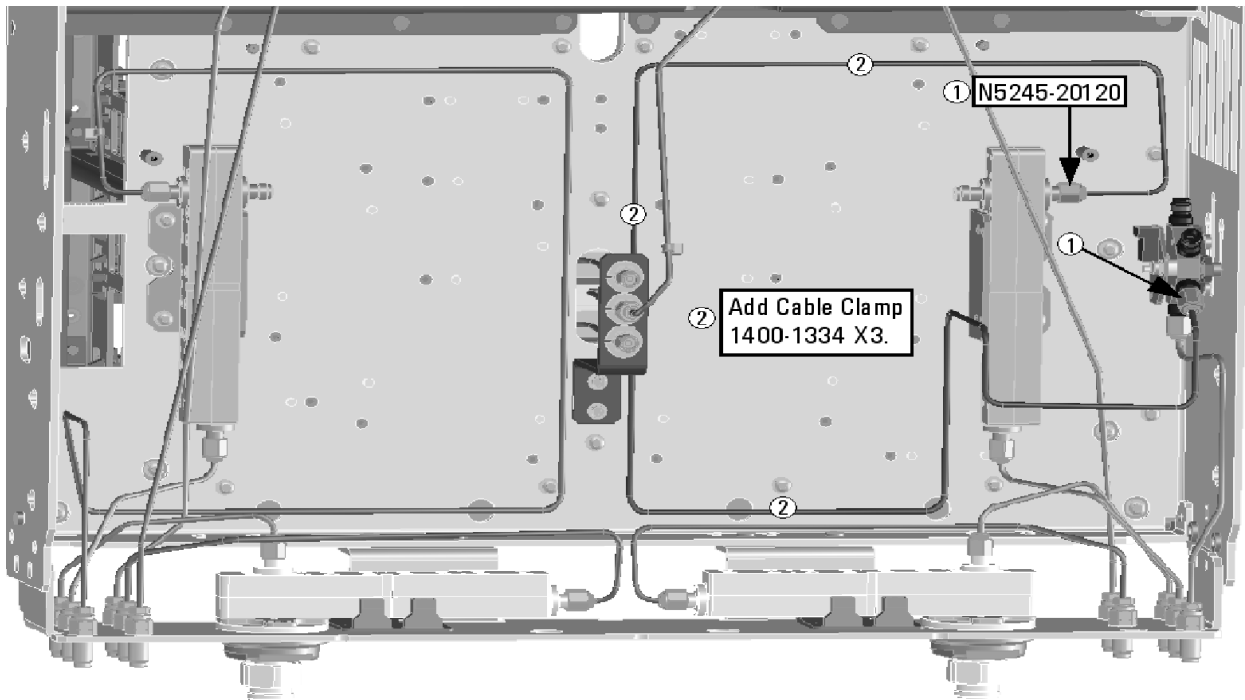

N5225_101_02

- W43 (N5245-20009) A37 reference mixer switch to A27 mixer brick (R1)
- W41 (N5245-20007) A37 reference mixer switch to front-panel REF 1 SOURCE OUT
- * **Figure 3 on page 18** shows two screws that attach the reference mixer switch to the test set deck. At this time, torque these two screws to 9 in-lbs.
- W12 (reuse) (N5245-20109) A29 port 1 receiver coupler to W11

Install the Ribbon Cable

To see an image showing the location of this cable, click the Chapter 6 bookmarks “Bottom Ribbon Cables and Wire Harnesses, 2-Port, Option 201 (S/N Prefixes <6021)” in the PDF Service Guide. New parts are listed in **Table 2 on page 11**.

If not already done, connect the reference mixer switch ribbon cable (8121-0966) as follows:

- A23 test set motherboard J554 to A37 reference mixer switch

Step 12. Remove the Old Lower Front Panel Overlay

Refer to **Figure 7** for this step of the procedure. Although this figure shows a 4-port PNA, the concept is the same for a 2-port PNA. New parts are listed in **Table 2 on page 11**.


1. From the back side of the front panel, use a blunt object in the cutouts in the lower front dress panel to push on the old overlay (item ①) and separate it from the front dress panel.
2. From the front side of the front panel, pull off the overlay completely and discard it.
3. Remove any adhesive remaining on the front panel.

CAUTION

To avoid possible damage to the lower front panel overlay (label), do not attempt to attach the lower front panel label until **“Step 14. Install the New Lower Front Panel Overlay” on page 23**.

Figure 7

Lower Front Panel Overlay Replacement

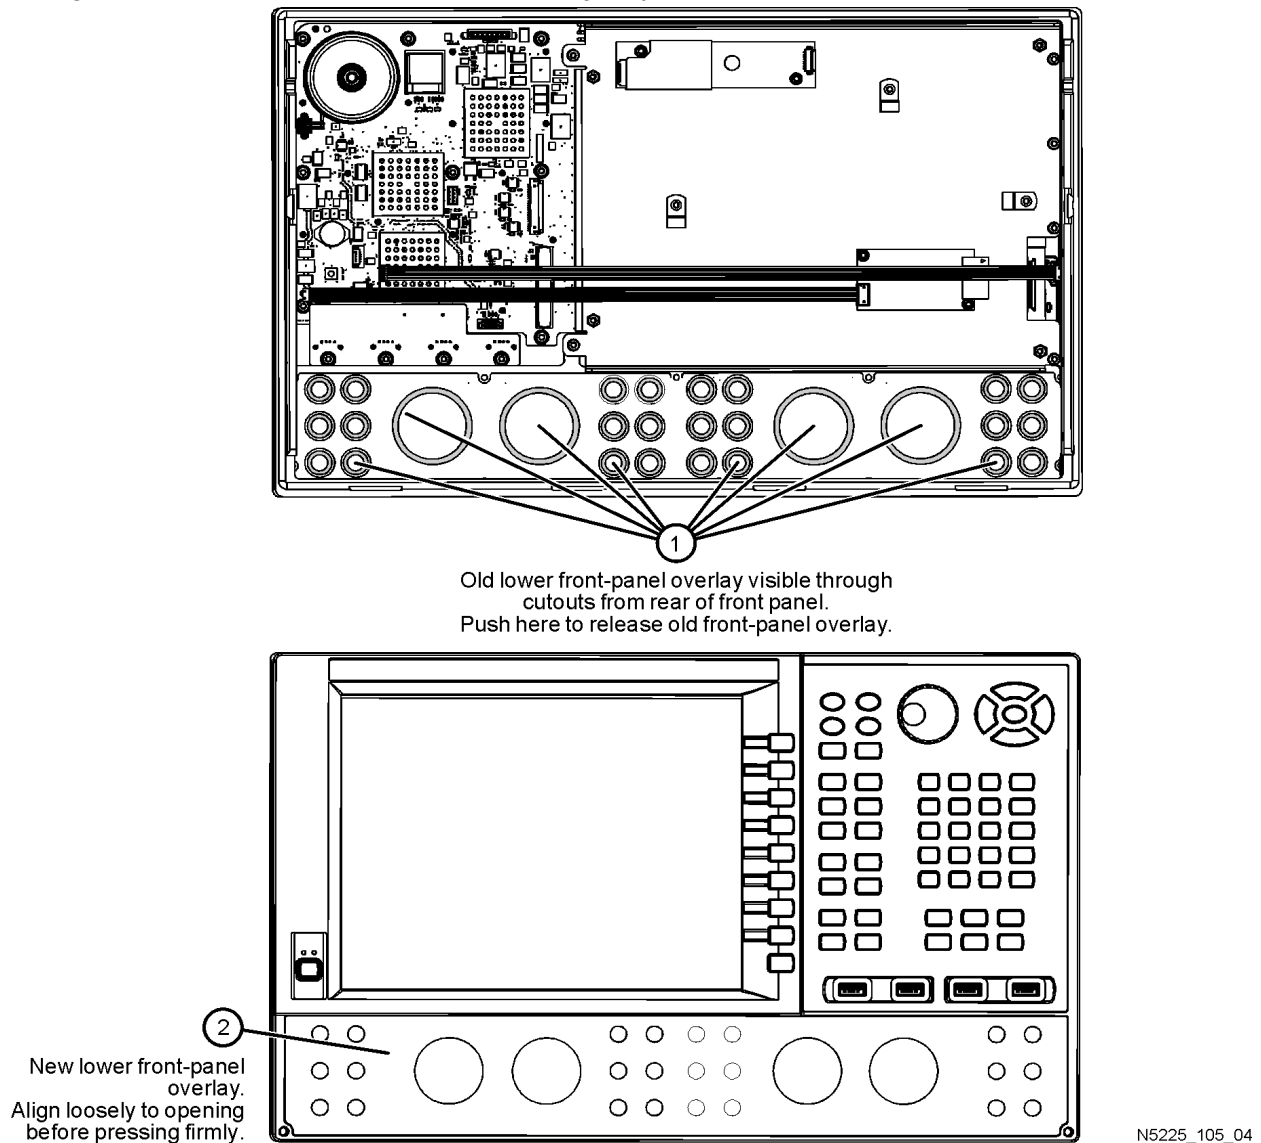

Step 13. Reinstall Front Panel Assembly

For instructions on reinstalling the front panel assembly, click the Chapter 7 bookmark “Removing and Replacing the Front Panel Assembly” in the PDF Service Guide¹.

Step 14. Install the New Lower Front Panel Overlay

Refer to **Figure 8 on page 24** for this step of the procedure. New parts are listed in **Table 2 on page 11**.

1. Remove the protective backing from the new front panel overlay,

1. See [“Downloading the Online PNA Service Guide” on page 9](#).


N5225-80002 (A models) or N5225-80014 (B models) – (item ①).

2. Starting from either side, *loosely* place the overlay in the recess on the lower front panel, ensuring that it fits tightly against the edges of the recess.
3. Once the overlay is in place, press it firmly onto the frame to secure it.

Step 15. Install Front Panel Jumpers

As shown in **Figure 8**, install 6 front panel jumper cables (part number N5245-20155).

Figure 8 Front Panel Jumper Cables Installation

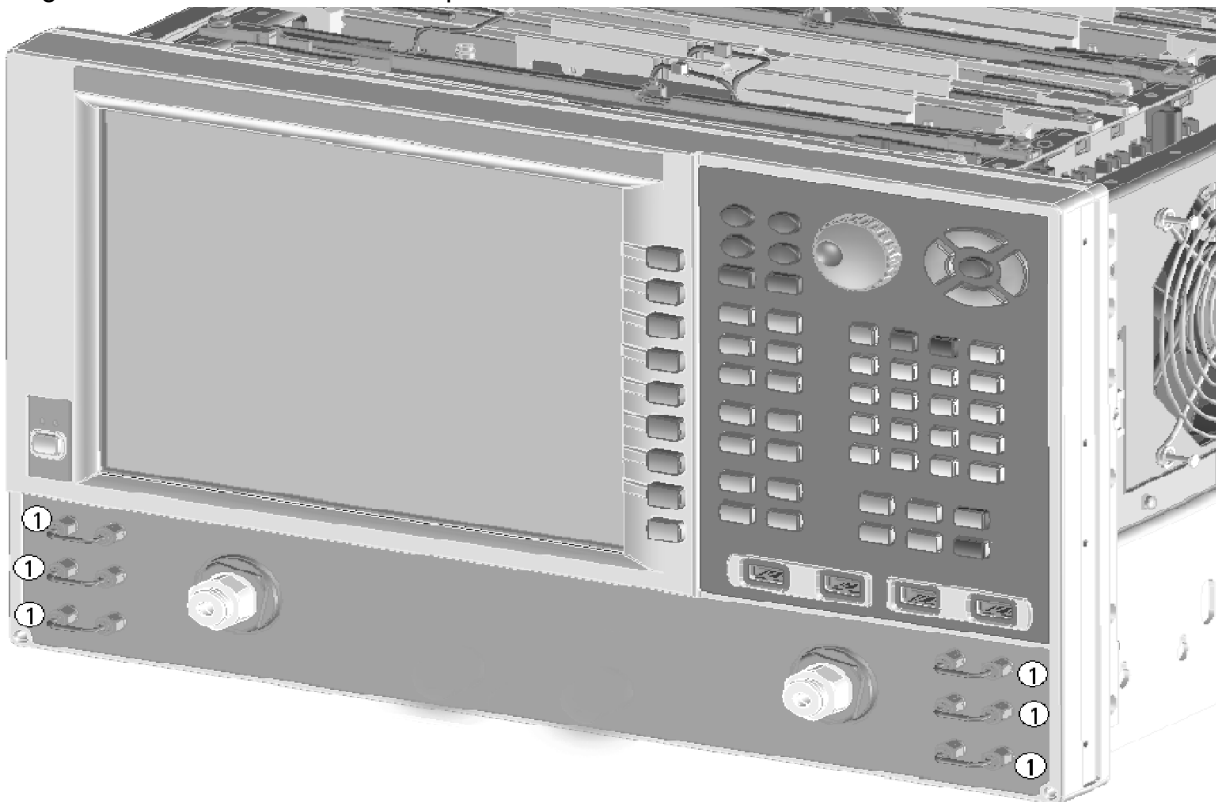

① **Install 6x jumper cables and torque to 10 in-lbs.**

N5225_101_04

Step 16. Position the Cables and Wires to Prevent Pinching

On the top side of the PNA, carefully position the gray flex cables so they can't be pinched between the covers and the rails.

On the bottom side of the PNA, carefully fold or push down the ribbon cables and wires so they can't be pinched between the hardware and the outer cover. Ribbon cables and wires must never be positioned on top of hardware.

Step 17. Reinstall the Outer Cover

For instructions, click the Chapter 7 bookmark “Removing the Covers” in the PDF Service Guide¹.

Step 18. Remove Option 200 License

Procedure Requirements

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must **not** be running.
- A keyboard and mouse must be connected to the network analyzer.

A Model Option 200 License Removal Procedure

For B models, refer to “**B Model Option 200 License Removal Procedure.**”

1. To start the option enable utility, press UTILITY **System**, then **Service**, then **Option Enable**. An option enable dialog box will appear.
2. Click the arrow in the **Select Desired Option** box. A list of available options will appear.
3. In the **Select Desired Option** list, click **200**.
4. Click **Remove**.

B Model Option 200 License Removal Procedure

For A models, refer to “**A Model Option 200 License Removal Procedure.**”

1. To start the Keysight License Manager, press **Start > Keysight License Manager > Keysight License Manager**. A Keysight License Manager dialog box will appear.
2. Right click the on the desired option and click **Delete**.
3. In the Keysight License Manager dialog box that appears, press or click **Yes** to confirm delete.
4. A message displays stating that the option removal was successful.

Step 19. Enable Options 201

Procedure Requirements

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must **not** be running.
- Refer to the license message you received from Keysight: Verify that the analyzer's model and serial numbers match those on the license message you received from Keysight.
- A keyboard and mouse must be connected to the network analyzer.

For "A" models, refer to **"Option Enable Procedure for "A" Model Instruments" on page 26.**

For "B" models refer to **"Option Enable Procedure for "B" Model Instruments " on page 27.**

Option Enable Procedure for "A" Model Instruments

1. To start the option enable utility, press UTILITY **System**, then **Service**, then **Option Enable**. An option enable dialog box will appear.
2. Click the arrow in the **Select Desired Option** box. A list of available options will appear.
3. In the **Select Desired Option** list, click **201 - Configurable Test Set**.
4. Using the keyboard, enter the license key in the box provided. The license key is printed on the license message you received from Keysight. Enter this key *exactly* as it is printed on the message.
5. Click **Enable**.
6. Click **Yes** in answer to the displayed question in the **Restart Analyzer?** box.
7. When the installation is complete, click **Exit**.

"A" Model Option Verification Procedure

Once the analyzer has restarted and the Network Analyzer program is again running:

1. On the analyzer's **Help** menu, click **About Network Analyzer**.
2. Verify that "201" is listed after "Options:" in the display. Click OK.

NOTE

If if the option(s) have not been enabled or if Option 200 has not been removed, contact Keysight Technologies. Refer to **"Getting Assistance from Keysight" on page 4.**

3. After successful installation of all upgrades, some features require some adjustments to ensure the instrument meets its specified performance. Refer to the following Web site:
<http://mktwww.srs.is.keysight.com/field/service/network/pna/>.

Option Enable Procedure for “B” Model Instruments

NOTE

For this step, you will need a USB flash drive.

A single license file may contain more than one feature.

1. Locate the email(s) from Keysight which contain license file attachments. These emails are a result of Step 3 on “[License Key Redemption](#)” on [page 6](#).
2. Copy the license file(s) from the email(s) to the root directory of the USB flash drive.
More than one license file may be copied to the USB flash drive.

NOTE

A license file may contain more than one feature.

3. Insert the USB flash drive to the PNA’s USB drive slot. Within 5 seconds, the PNA should display a small “New licenses installed” message.

Else, load the license key file(s), manually move your license file(s) to C:\Program Files\Agilent\licensing. It may take Keysight License Manager an extra ~5 seconds to enable the licenses.

NOTE

Attempting to re-install a license file that is already installed may generate a “Corrupt Media” error message. Ignore this message.

4. Disconnect the USB flash drive from the PNA.
5. On the analyzer, click or press to open the KLM software from your PNA’s Windows taskbar by pressing **Start > More Programs > Keysight License Manager folder > Keysight License Manager** and verify the options are correct.

“B” Model Option Verification Procedure

NOTE

If the option(s) have not been enabled or if your older options have not been removed, contact Keysight Technologies. Refer to “[Getting Assistance from Keysight](#)” on [page 4](#).

1. Start the Network Analyzer program.
2. Once the Network Analyzer program is running:
 - Press **Help** > **About NA** and verify that Option 201 is listed in the PNA application.
3. After successful installation of all upgrades, some features require some adjustments to ensure the instrument meets its specified performance. Refer to the following Web site:
<http://mktwww.srs.is.keysight.com/field/service/network/pna/>.

Step 20. Perform Post-Upgrade Adjustments and Calibration

Adjustments

The following adjustments must be made due to the hardware changes of the analyzer.

NOTE

IMPORTANT!

The 10 MHz reference crystal oscillator is the most accurate after running for three hours. The 10 MHz Frequency Reference Adjustment can be run after the PNA has warmed up for 90 minutes, and the other adjustments can be completed in the order presented, but then the 10 MHz Frequency Reference Adjustment should be repeated after the PNA has been able to warm up for three hours.

-
- 10 MHz frequency reference adjustment
 - EE default adjustment: Synth LO only (Version 6 synthesizers)
 - synthesizer bandwidth adjustment (only if EE default adjustment is insufficient)
 - IF gain adjustment
 - receiver characterization
 - receiver adjustment
 - IF Response adjustment (For A model: Options 090, 093, or 094 Only. For B models: Options S93090xA/B, S93093A/B, or S93094A/B Only.)

These adjustments are described in the PNA Service Guide and in the PNA on-line HELP. A list of equipment required to perform these adjustments is also found in the service guide.

To view this service guide information, click the Chapter 3 bookmark “Tests and Adjustments” in the PDF Service Guide¹.

After the specified adjustments have been performed, the analyzer should operate and phase lock over its entire frequency range.

EEPROM Backup

The analyzer uses arrays of correction constants to enable the analyzer to produce accurate, leveled source signals and receive clean test signals. These constants are stored in non-volatile EEPROM memory and in flash memory files.


The adjustments listed here generate new correction constants. The analyzer must have a backup of this new data in case any of the data becomes corrupted.

1. See [“Downloading the Online PNA Service Guide” on page 9](#).

To store the backup data, perform these steps:

- Navigate to the EEPROM Backup Utility, located at:
 - Windows 7 -- C:\Program Files (x86)\Keysight\Network Analyzer\Service\eebackup.exe
 - Windows 10 -- C:\Program Files\Keysight\Network Analyzer\Service\eebackup.exe
- Run the program.
- Click Backup EEPROM.
- Click Backup TSMB Mem.
- Click Backup Synth Mem. (Applies to Version 7 Synthesizers Only)
- Click Exit when the program has finished.

Figure 9 EEPROM Backup Menu

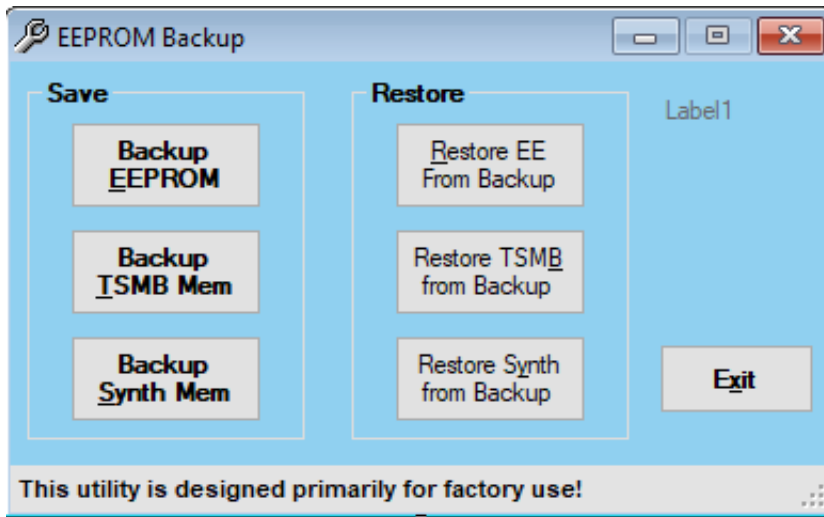

Operator's Check

Perform the Operator's Check to check the basic functionality of the analyzer. For instructions, click the Chapter 3 bookmark "Tests and Adjustments" in the PDF Service Guide¹.

If you experience difficulty with the basic functioning of the analyzer, contact Keysight. Refer to **"Contacting Keysight" on page 4**.

Calibration

Although the analyzer functions, its performance relative to its specifications has not been verified. It is recommended that a full instrument calibration be performed using the analyzer's internal performance test software. To view information on the performance test software, click the Chapter 3 bookmark "Tests and Adjustments" in the PDF Service Guide¹.

Step 21. Prepare the PNA for the User

1. If necessary, reinstall front jumper cables.
2. Install the cable guards, pushing them over the front jumper cables until the cushioning material touches the front panel of the PNA.
3. Install the dust caps on the test ports.
4. Clean the analyzer, as needed, using a damp cloth.

Installation Procedure for the Upgrade

