



Quick Reference Guide

Keysight FieldFox Microwave Analyzers

Contents

Do you have everything?	1
The Power Button and LED 	1
Connector Care.....	2
Battery Usage	2
Measure Return Loss (CAT Mode)	3
Measure 1-Port Cable Loss (CAT).....	4
Measure Distance to Fault (CAT)	5
Measure S-Parameters (NA Mode)	6
Multi-Trace Configurations (NA Mode)	8
Calibration (CAT, NA, VVM).....	9
Spectrum Analyzer (SA Mode)	10
Channel Measurements (SA).....	11
Record Playback (Opt 236)	12
RTSA Mode (Opt 350).....	13
Power Meter Mode	15
Save and Recall Files.....	16

Do you have everything?

- **FieldFox** –To check for installed options, press **System** then **System Configuration** then **Options** then **Show Options**
- **Cal Kit** – OSL Tee or other calibration devices.
- **USB Power Sensor** – For making Power Meter measurements. (Opt 302)
- **Battery charger** or extra battery

The Power Button and LED

- To turn power **ON**, briefly press the power button. The LED is green. The boot-up takes about 60 seconds.
- To switch to **Standby** power (low battery drain) briefly press the power button. A 10 second counter is displayed that allows you to choose **Standby** / **Shutdown** / **Restart** or to let the countdown counter expire after 10 seconds then perform the action. The LED is green and blinks slowly. To turn power ON, briefly press the power button. Power and settings are restored instantly.
- To turn Power **OFF** (very low battery drain) press the **Shutdown** softkey (For details, refer to previous Standby bullet). The LED is OFF, or solid amber, if AC power is connected.

Connector Care

To maintain optimum performance in your FieldFox:

<https://literature.cdn.keysight.com/litweb/pdf/08510-90360.pdf>.

Battery Usage

A fully charged battery should last about four hours.

Battery charge status is viewable:

- In the upper-right corner of the screen.



To conserve battery power:

- Use **Hold** (**Run/Hold**) mode to trigger a measurement only when needed. **Hold** is shown on the display.
- Press **System** then **Display** then **Brightness** then dim the FieldFox display as much as possible.
- Press the power button and press the **Standby** softkey when not being used. Press again to restore power. All current settings are preserved.

The FieldFox will shutdown automatically when battery power is very low to prevent it from being completely discharged.

Use ONLY a FieldFox charger to recharge a battery.

The battery can be fully charged while in the FieldFox in about 4 hours with the FieldFox either ON or OFF.

A fully discharged battery takes about 1.5 hours to recharge to 80%.

The battery can be fully charged in about 4 hours using the external battery charger (Opt 872).

Measure Return Loss (CAT Mode)

CAUTION Starting with A.11.25 firmware, for the B models, the FieldFox output power defaults to -15 dBm.

Return loss can be thought of as the absolute value of the reflected power as compared to the incident power. When measuring an OPEN or SHORT, all incident power is reflected and 0 dB return loss is displayed.

When measuring a LOAD, very little power is reflected and values of greater than 40 dB are displayed.

1. Connect the Device Under Test (DUT).
2. Select **Preset** then **Preset (Factory)** Returns the FieldFox to known settings.
3. Select **Mode** then **CAT** (Cable and Antenna Test)
4. Then **Measure 1** then **Return Loss**
5. Press **Freq/Dist** and enter **Start** and **Stop** frequency values of the measurement.
6. Press **Meas Setup 4** then **Settings** to make appropriate settings before calibrating.
7. Disconnect the DUT and press **Cal 5** then follow the calibration prompts.
8. Reconnect the DUT (cable to be tested).

Measure 1-Port Cable Loss (CAT Mode)

Required Equipment:

- LOAD with correct connector type and gender to terminate the end of the DUT.
- Optional phase stable jumper cable or adapter to connect the beginning of the DUT to the FieldFox.

1. Press **Preset** then **Preset**
2. Select **Mode** then **CAT** (Cable and Antenna Test)
3. Then **Measure 1**
4. Then **More** then **Cable Loss (1-Port)**
5. Connect the DUT.
6. Press **Freq/Dist** and enter **Start** and **Stop** frequency.
7. Connect the DUT (cable to be tested) to the FieldFox and connect a LOAD at the end of the DUT.
8. Press **Trace 6** then **Math and Memory**, then **Data->Mem**.
9. Remove the LOAD and leave the end of the DUT open.
10. Press **Data Math** then **Data - Mem**. Use Averaging for high-loss measurements. Press **BW 2** then **Averaging**
11. Read **Avg Cable Loss** on the FieldFox screen.

Measure Distance to Fault (CAT Mode)

CAUTION Starting with A.11.25 firmware, for the B models, the FieldFox output power defaults to -15 dBm.

Required Equipment:

- LOAD with correct connector type and gender to terminate the end of the DUT.
 - Known length and cable type or Cable Loss (dB/meter) and velocity factor of the DUT.
 - Optional phase stable jumper cable or adapter to connect the beginning of the DUT to the FieldFox.
1. Connect any necessary jumper cable or adapter to the FieldFox RF OUT port.
 2. Press **Preset** then **Preset (Factory)**
 3. Then **Mode** then **CAT**
 4. Then **Measure 1** then **Distance to Fault (dB)**
 5. Press **Freq/Dist** then **Stop Distance** and enter the length of the DUT.
 6. If a diplexer or other filter is in the measurement path, press **Meas Setup 4** then select **Freq Mode** then **Bandpass**. Then press **Freq/Dist** and manually type the **Min Start Freq** and **Max Stop Freq** frequencies.
 7. Press **Cal 5** and see the FieldFox User's Guide.
 8. Press **Meas Setup 4** then **DTF Cable Specifications**.
 9. Either press **Edit/Save/Recall Cables** or enter the **Velocity Factor** and **Cable Loss** manually--using **Cable Corr [Manual]**--of the DUT.
 10. Connect the start end of the DUT to the FieldFox. The DTF measurement is displayed.

Measure S-Parameters (NA Mode)

S-parameter syntax is described by the following:

S (out | in)

out = FieldFox receiver port

in = FieldFox source port

1. Press **Preset** then **Preset**
2. Press then **Mode** then **NA** then choose from the following:
 - **S11** 1-port reflection measurement.
 - **S21** 2-port transmission measurement.
 - **S12** Reverse 2-port transmission measurement.
Requires the full 2-port S-parameter option.
 - **S22** Reverse 1-port reflection measurement.
Requires the full 2-port S-parameter option.

OR Press **Trace 6** then **Num of Traces** then select a Multi-trace configuration. Learn more on page 8.

3. Press **Freq/Dist** then either **Start** and **Stop** or **Center** and **Freq Span** to enter a frequency range for the measurement.
4. Press **Cal 5** to calibrate the measurement. See page 9 to learn more.

Continued on following page...


Measure S-Parameters (NA Mode) continued

The following NA Mode settings can be made **before** or **after** calibrating without affecting measurement accuracy.

- Press **Measure 1** then **Format** to change the format for the measurement.
- Press **BW 2** then **Average** then enter a value for the number of trace sweeps to average.
- Press **Marker** then enter a value to move the marker to the X-axis position of interest.
- Press **Limit 8** then **Edit Limits** or **Recall Limits** to test measurement results against limit lines.

Multi-Trace Configurations (NA Mode)

You can display multiple traces on the FieldFox screen.

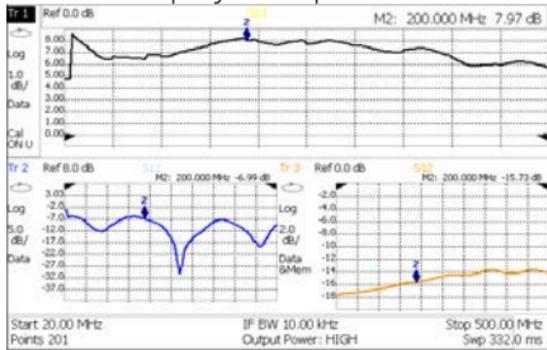

The above image shows a 3-trace configuration. **Tr1** is the **ACTIVE** trace as indicated by the highlighted **Tr1** annotation in the upper left corner.

The Frequency Range, IF BW, Resolution, Averaging, and Output power is common to all traces. All trace settings, such as format, markers, and limit lines, are applied to the **ACTIVE** trace in the same manner as when a single trace is present.

To select a multi-trace configuration:

- Press **Trace 6** then **Num of Traces**
- Then choose a multi-trace configuration.

Calibration (CAT, NA, VVM)

CAUTION Starting with A.11.25 firmware, for the B models, the FieldFox output power defaults to -15 dBm.

Calibration is performed in CAT, NA, and VVM Modes. A calibration is performed automatically when the FieldFox is powered ON, CalReady sets the reference plane at the test port connectors.

Press **Cal 5** then see the FieldFox User's Guide.

Cal Rdy is shown on the screen when a **CalReady** is correcting the measurement.

CAL ON U is shown on the screen when a User Cal is correcting the measurement.

When a calibration is being interpolated, an asterisk is added to the screen annotation as follows: **Cal ON***

Spectrum Analyzer (SA Mode)

SA measurements require NO calibration.

Check for a Compressed Measurement

1. Using a marker at the signal peak, make note of the signal power level.
2. Increase the RF Attenuation level by 5 dB.
 - If the signal level does NOT change, then NO compression exists. This indicates that the signal is in the linear region of the receiver.
 - If the signal level DOES increase with more attenuation, then compression DID exist. Set the RF Attenuation value at the setting when further increases no longer result in an increase in the displayed power level.

Set RF Attenuation

1. Press **Preset** then **Preset (Factory)**
2. Press **Mode** then **SA**
3. Press **Scale/Amptd** then **RF Atten**
 - **Auto** RF Attenuation is set by adjusting the Ref Level.
 - **Man** Change the RF Attenuation level manually.

Display up to four types of traces

SA settings are applied to all traces.

1. Press **Trace 6** then **Trace 1,2,3,4** repeatedly to select a trace number to display.
2. Then **State** to select a trace type.

Channel Measurements (SA Mode)

Optionally apply a Radio Standard which changes frequency settings, Res BW, and other relevant settings to that of the selected standard. Then change the frequency range by selecting channel numbers.

1. Press **Freq/Dist** then **More** then **Radio Standard**. Scroll to select the standard.
2. Then press **Back**.
3. Then press **Unit Freq Chan**.
4. If active, press **Chan Direction** to toggle between **Uplink** and **Downlink** frequencies.
5. Optionally, change the **Channel Step** size which allows you to use the **▲▼** arrows to increment the channel number by the specified value.
6. Then **Back** and **Center**, **Start**, or **Stop** channel.
7. Press **Measure 1** then **Channel Measurements** and choose from the following:
 - **Channel Power (CHP)** - Measures total power over the specified Integrated BW.
 - **Occupied Bandwidth (OBW)** - Measures the power of the current frequency span and displays vertical posts between which the specified percentage of power is contained.
 - **Adjacent Channel Power (ACPR)** - Measures the power of a carrier channel and one, two, or three adjacent (offset) channels.

Record Playback (Opt 236)

Allows you to record SA traces and play them back at a later time. You can change most SA settings during a recording. Setting changes are recorded along with the traces.

To record a new session:

Press **Trace 6** then **Record Playback**

Then **New Session**, **Recorder Player**, then **Record**

To play a session:

Press **Recall Session** select a session, press **Open**. Then **Recorder Player** then **Play**.

Run/Hold can be used to Pause and Resume during Record or Playback.

The maximum recording time is determined largely by the amount of available memory. To maximize recording time, select **Storage Device** then **Internal** or **USB** (flash drive) or **SD Card**.

RTSA (Real-time Spectrum Analyzer) Mode—Option 350


How to select RTSA Mode

- Press **Mode** then **Real-Time SA**

How to make real-time measurements

- Press **Measure 1** then press from the following:

Density Spectrum The signal displayed is a real-time spectrum with a histogram bitmap.

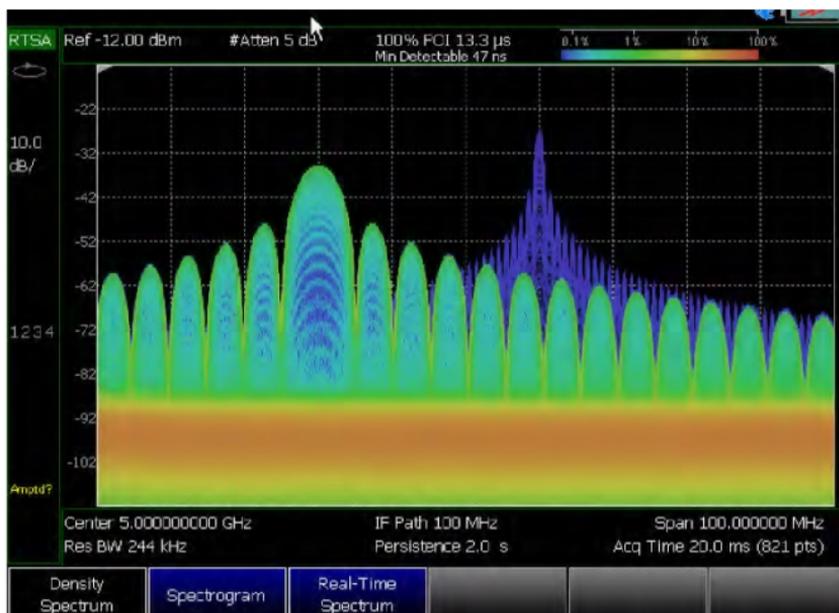

Spectrogram The signal displayed is a real-time spectrum with a spectrogram bitmap. Spectrogram views are valuable in capturing signals that include both time and frequency variations.

Real-time Spectrum The signal is displayed as a real-time spectrum. Use real-time spectrum to quickly display measurements.

Trigger Type

- Press **Sweep 3** then **Trigger Settings** then **Trig Type** then choose from the following:
- **Free Run** - Triggering is provided by the FieldFox internal circuitry. A new sweep begins when the previous sweep ends.
- **External** - A sweep is triggered on an external TTL signal at the Ref In/Trig In connector on the FieldFox top panel.
- **Periodic** - sets a trigger that repeats at the period rate entered.
- **Video** - A sweep is initiated when the amplitude of an incoming signal crosses the settable trigger level.
- **RF Burst** - A sweep is initiated when the signal at the third IF (analog) stage crosses the settable Trigger Level.

Acq Time

Use the Acq Time setting to adjust acquisition time interval for each trace update in Density or Real-time Spectrum measurements.

- Press **Sweep 3** then choose **Acq Time** that affects the quantity of information being captured during a density or real-time spectrum measurement.
- **Auto** (default) - FieldFox chooses the optimum Acq Time based on the span setting (default is 20 ms, when span is set to full span).
- **Manual** - enables user settable acquisition time values.

Power Meter Mode

Power Meter measurements are made using a **Keysight USB Power Sensor**.

For a complete list of supported Keysight USB Power Sensors, visit:

www.keysight.com/find/usbsensorsforfieldfox

Damage levels vary for each power sensor. For details, refer to the Data Sheet for your model power sensor.

Use an Attenuator between the DUT and the power sensor when measuring power levels that are higher than +20 dBm. The attenuator value can be subtracted from the measurement using Offset as follows:

Select Offset

- Press **Mode** then **Power Meter**
- Press **Scale / Amptd** then **Offset On Off**
- Then **Offset Val** Enter a value by which the power meter display is offset. A positive value compensates for a component with loss, such as an attenuator.

Zeroing

The Keysight USB Power Sensors perform internal zeroing automatically. Internal zeroing does NOT require that the power source be turned OFF.

Perform external zeroing when measuring power levels below -30 dBm. During external zeroing, the power source MUST either be turned OFF or the power sensor be disconnected from the DUT.

- Press **Cal 5** then see the FieldFox User's Guide.

Then **External Zero**

Save and Recall Files

Save current settings and calibration, trace data (CSV) and .S1P), or a picture of the FieldFox screen.

Press **Save/Recall 9**

1. Then **Device** to set the **LOCATION** where the file is to be saved. Choose from the following:

- **Internal** Saves/Recalls files to or from the FieldFox internal memory.
- **SD Card** Saves/Recalls files to or from the mini SD card.
- **USB** Saves/Recalls files to or from a USB Flash drive.

2. Then **File Type**

- **State** Saves ALL FieldFox instrument settings and calibration for ALL Modes to an *.sta file.
- **Trace + State** Saves the current trace (all traces in SA mode) and instrument settings to an *.sta file.
- **Picture (PNG)** Saves the FieldFox screen to a *.png file.
- **Data (S1P)** Saves **CAT** and **NA Mode** trace data to an *.S1P file.
- **Data (CSV)** Saves trace data from the current mode to a *.csv file.

3. Then press **Save** to save the specified **file type** to the specified **device location**.

4. Press **Recall** to read an *.sta file into the FieldFox.

This information is subject to change
without notice.

©Keysight Technologies 2012-2020
Edition 4 Print Date: September 2020
Supersedes: June 2019



N9927-90002



www.keysight.com