

E7495A/B Remote Operation

E7495A/B Firmware Version:A.03.00 and laterJava J2SE or VM Version:1.4.2

NOTE:

You must have J2SE 1.4.2 or later installed on your PC for the Remote GUI program to function properly. Please note that the Remote GUI was developed using J2SE 1.4.2, so if problems are encountered using a newer version you will need to re-install J2SE 1.4.2.

Configuring and controlling the E7495A/B via a PC Interface

The E7495A/B "Remote graphical user interface (GUI) program" is a simple tool that places a remote version of the E7495A/B GUI on a PC, allowing the user to control the E7495A/B from a PC. Application examples include the following:

- 1. Direct connect to PC to facilitate over the air measurements (e.g. place the E7495A/B in the rear of the vehicle and control it via a PC while driving the network.)
- 2. Remote monitoring of problematic/intermittent failure base stations
- 3. Trouble shooting base stations with limited resources (e.g. lead tech can easily monitor/assist other technicians remotely.)
- 4. Training



The following step-by-step procedure illustrates how to link the E7495A/B to a PC. It is broken down into two specific procedures:

- 1) <u>Connecting and controlling the E7495A/B with a remote PC via a</u> <u>network connection (LAN)</u>
- 2) <u>Connecting and controlling the E7495A/B with a remote PC via a *direct* <u>connection (LAN crossover cable)</u></u>

Firmware Note:

The Remote GUI utility only supports firmware version A.03.00 or above in the E7495A/B. The intent of this package is to provide a value added tool (at no charge) to our respected E7495A/B customers. Since this is a free SW utility, Agilent Technologies does not warrant that the operation of the software will be uninterrupted or error free. Additionally, this utility will be supported on a best effort basis.

Test Software Note:

The Remote GUI utility does not fully support Test

Software. When used with the E7495A/B Test Software menu, only use the Remote GUI for Training and Demonstration purposes, as full measurement functionality is not supported. To use the Remote GUI with the Test Software, one must perform additional setup steps outline in the Installing the Software on the PC section. Hardware Needed for Connecting the E7495A/B to a PC for Remote Operation





To Connect the E7495A/B to a PC, there are 3 items needed: A PC with a LAN adaptor (Windows 2000 or higher), an E7495A/B, and a CAT5 LAN cable (normal network connection) or a CAT5 LAN Cross-Over cable (used to connect the E7495A/B directly to the PC.)

Steps Required for Connecting the E7495A/B to a PC for Remote Operation

Setting up and Configuring the E7495A/B for Remote Operation (DHCP)

Installing the software on the PC.

Configuring the Software

Running the Software

NOTES:

This step-by-step document is written within the context of Windows 2000. Different operating systems like Windows XP may vary slightly in process.

1.) Configuring the E7495A/B for network connection

- 1. Connect the E7495A/B to a network connection or router with a standard RJ-45 Ethernet CAT5 cable, then cycle instrument power.
- 2. When the "Mode" screen appears the IP address will be displayed in the bottom left corner of the screen. If the IP address appears, proceed to the next section "Installing the Software on the PC." If the IP address does not appear (or reads all 0s), recycle power with the LAN cable connected. If it still does not appear, proceed to step 3 as DHCP settings need to be verified on the E7495A/B.



NOTES:

The E7495A/B will accept DHCP from a network or a router.

Checking for DHCP on the E7495A/B

- 3. On the E7495A/B, press the "System" button (next to the power switch).
- 4. On the left side of the E7495A/B, press the "Controls" Softkey.
- 5. On the right side of the E7495A/B, press the "IP Admin" Softkey.
- 6. Check to see if DHCP is ON. If it is on, and an IP address is still not displayed at the "mode screen," contact Agilent support. If it is set to OFF, then follow steps 7 through 9.




- 7. Press the DHCP Softkey to turn it to ON.
- 8. Press the SAVE Softkey on the screen.
- 9. Press the "yes" Softkey to restart the E7495A/B with DHCP.

Installing the Software on the PC

Software Download and Installation

 Download the "E7495xRemoteGui.zip" file from the Agilent Technologies website: http://www.agilent.com/find/E7495_software.



2. Extract the files to the PC. This will create a folder named "E7495xRemoteGui" that contains the following files needed to control the test set:

egclient.jar JimiProClasses.zip RemoteGui Readme.pdf RemoteGui.jar Xerces.jar

NOTE:

The file "JimiProClasses.zip" is required by the GUI for the **Print Screen** operation. The file "Xerces.jar" is required by the GUI for the **Test Software** operations.

Java Download and Installation

The remote GUI requires the installation of Sun Java for Windows version 1.4.2 to allow the E7495A/B screen to be viewed on the PC. The Java runtime environment (J2SE JRE or Java VM) is free from Sun Microsystems and can be downloaded over the web from:

http://java.sun.com/j2se/1.4.2/download.html

NOTE:

The Remote GUI program requires Java 2 Platform, Standard Edition (J2SE) release J2SE 1.4.2 to allow the E7495A/B screen to be viewed on the PC.

You must have J2SE 1.4.2 or later installed on your PC for the Remote GUI program to function properly. Please note that the Remote GUI was developed using J2SE 1.4.2, so if problems are encountered using a newer version you will need to re-install J2SE 1.4.2.

1. Select the "Download J2SE JRE" link, save the file to your disk drive, and then install the Java program that is contained in the zip file.

Test Software Files Download and Installation

To use the Remote GUI with any Test Software Options (330–380) that are licensed and installed on the E7495A/B, you must also install the Test Software on your PC. Follow these additional steps to install the Software Files onto the PC.

Detailed instructions can be found in the E7495A/B Base Station Test Set NEM Test Software Installation Instructions, Part Number E7495-90330. This document can be found at: <u>http://www.agilent.com/find/e7495_manuals</u>

NOTE:

The Test Software running on the PC must be the same version that is installed and running on the E7495A/B. If the versions of software do not match, download the latest Test Software files from the above website and install them on both the E7495A/B and PC.

NOTE:

<u>The Remote GUI utility does not fully support the Test</u> <u>Software screen.</u>

When using the Remote GUI with the Test Software menu, it should only be used for Training and Demonstration purposes, as the full measurement functionality is not supported.

- 1. Download the Test Software file from the Agilent Technologies website: http://www.agilent.com/find/e7495_software
- 2. Create a new directory named "flash" at the root level on the PC i.e. C:/flash
- 3. Extract the files contained in the zip file to the directory labeled "flash" on the \mbox{PC}

Running the Remote GUI Program

1. Locate the "RemoteGui.jar" file and double click it to start the E7495A/B remote interface.



This will bring up the launcher application.

Server	8		
Server	Name loo	calhost	
	ок	Cancel	

- 2. Highlight "localhost" and delete the text, type in the IP Address of the E7495A/B and then press OK. At this time, the Remote GUI launcher will verify that you have the correct version of the GUI for use with your instrument. If the correct version is found, it will then launch the Remote GUI application on your PC.
- 3. If there is a version mismatch or the egclient.jar file is missing, the launcher will offer to download the correct version of the GUI from the E7495A/B. (This will only occur if the GUI file is missing or if differences in GUI versions exist between the E7495A/B firmware and the GUI stored in the program.)
 - a. Select the "Yes" button to accept the file. The Remote GUI program WILL NOT work if the file is not downloaded!
 - b. The program will then start to download the egclient.jar file from the E7495A/B Test Set into the E7495xRemoteGui directory. When prompted to

save the file, ensure the directory path is correct and then select "Save."

c. The program will prompt you that a version of egclient.jar already exists in the E7495xRemoteGui directory and ask if you want to overwrite the file. Select "Yes" to finish loading the correct version of the GUI that is required for the program to operate properly.


Controlling The E7495A/B

Upon application initiation, the E7495A/B maintains default control. The screen on the PC will read "**REMOTE**" in the upper right corner. The GUI emulation on the PC will follow the commands entered directly to the E7495A/B.

1. To switch control from the instrument to the PC, use the mouse and click on the "Esc/Loc" Softkey. At this time, the E7495A/B will indicate "**REMOTE**" in the upper right corner of its display.

E.o	0.0	-	
ES	C/L	.0C	
	12002		

2. Use the mouse to select buttons and control the E7495A/B. Numbers can be selected with either the mouse or keyboard.

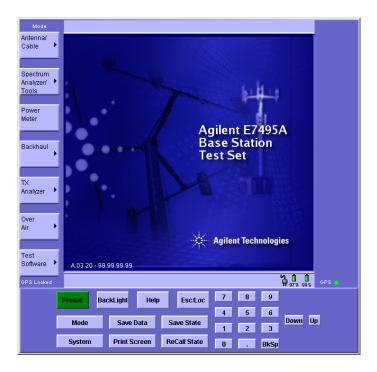

2.) Configuring the E7495A/B for direct connection

If a network is not available, or if the individual wants to directly connect to the instrument, (e.g. connect a PC to the E7495A/B to conduct over-the- air measurements in a vehicle, to provide demo via a projector in a training environment, etc.) connect the E7495A/B to a PC via a "Cross-over" LAN cable and assign a static IP addresses to both the E7495A/B and the PC.

The cross over cable is similar to a null modem cable in that the transmit and receive conductors have been crossed over at the connectors. This allows for communication between two devices without a node that assigns IP addresses.

The following steps will illustrate how to configure the E7495A/B and the PC for static IP addresses.

Configuring the E7495A/B for a Static IP

1. Power on the E7495A/B.

When the "Mode" screen appears, press the "System" button (under the Mode button).



On the left side of the E7495A/B, press the "Controls" Softkey.


On the right side of the E7495A/B, press the "IP Admin" Softkey.

Set the "DHCP" Softkey to "OFF".

Press the "IP Address" Softkey.

Configuring the E7495A/B for a Static IP (Cont.)

Press the "clear" Softkey and enter the following example as the IP address: **192.168.0.2**

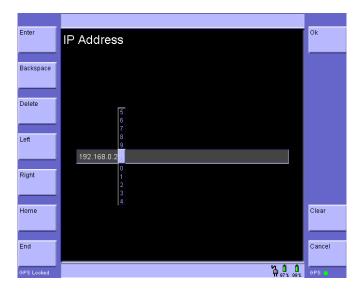

Press the "Ok" Softkey.

Press the "Net Mask" Softkey.

Press the "clear" Softkey and input the following as the net mask address: **255.255.255.0**

Enter	Net Mask	Ok
Backspace		
Delete		
Delete	5 6 7	
Left	6 9	
	255.255.255.0 .	
Right	0 1 2	
	2 3 4	
Home		Clear
End		Cancel
GPS Looked		GPS

Press the "Ok" Softkey.

Press the "SAVE" Softkey to accept changes. Press yes, *this will reboot the E7594A/B*.Configuring the PC for a Static IP

NOTES:

The PC's PROXY setting may have to be turned off in order for the PC to communicate with the E7495A/B.

This part of the step-by-step guide is written around Windows 2000. If a different operating system is being used, these steps may be different (but similar conceptually).

1. Open the Control Panel.

Double click on the



Right click on the Connection icon and select Properties form the list of choices.

omponents checked are used by this connec	Configure
	tion:
🖉 🥅 Claub fas Missas oft Maturalia	
🛛 📇 Client for Microsoft Networks	
🛛 🚐 Eacfilt Driver	
🛛 🚚 File and Printer Sharing for Microsoft Ne	etworks
Grant Protocol (TCP/IP)	
Install Uninstall	Properties
Description	
Transmission Control Protocol/Internet Proto	col. The default
Transmission Control Protocol/Internet Proto	
wide area network protocol that provides co across diverse interconnected networks.	mmunication

Select the Internet Protocol (TCP/IP) and go to its properties.

Configuring the PC for a Static IP (Cont.)

Click on the radial Softkey called "Use the following IP address:"

	l automatically if your network supp ed to ask your network administrat	
C Obtain an IP address autor	natically	
Use the following IP address	18:	
IP address;	192.168.0.1	
Subnet mask:	255 , 255 , 255 , 0	
Default gateway:		
C Obtain DNS server address	automatically	
 Use the following DNS service 	ver addresses:	
Preferred DNS server:	+ + +	
Alternate DNS server:		
	Advan	e e e e e e e e e e e e e e e e e e e

Enter the following example IP address: 192.168.0.1

Enter the following subnet mask: 255.255.255.0

Click "OK" twice.

Proceed to "Installing the Software on the PC" (page 7)

NOTES:

It is very important that you use the IP address listed. The first three sets of number **MUST** match exactly i.e. xxx.xxx. The last number **MUST** be different. The windows default IP address has been chosen for the PC and the E7495A/B is only different by one number.

DON'T FORGET TO CHANGE THE PC BACK TO DHCP, AUTOMATIC DNS, AND ENABLE THE PROXY SETTINGS FOR NETWORK CONNECTIVITY!!!!!!!

Uninstalling the Software on the PC

Software uninstall

From the folder named "E7495xRemoteGui," simply delete the following files and main folder:

E7495xRemoteGui.zip egclient.jar JimiProClasses.zip RemoteGui Readme.pdf RemoteGui.jar Xerces.jar E7495xRemoteGui folder Optional: desktop shortcut

NOTE:

No modifications were made to the Windows configuration (e.g. no registry entries) during this installation process.