
X-Series Signal Analyzers

5G NR Mode

E6680A E6680E E6681A E7515B
M9410A M9411A M9415A M9416A M9421A
M9410E M9411E M9415E M9416E
M8920B
N9010B N9020B N9021B N9030B N9032B N9040B N9041B N9042B
S9100A S9101A S9106A S9108A S9110A



Notices

Copyright Notice

© Keysight Technologies 2018-2024

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Trademarks

WiMAX and Mobile WiMAX are US trademarks of the WiMAX Forum.

Manual Part Number

N9085-90001

Edition

Edition: 6, March 2024

Published in USA

Published by:

Keysight Technologies, Inc.
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the US government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to US government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at

<http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the US government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the US government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Table Of Contents

5G NR Mode User's & Programmer's Reference	1
Table Of Contents	3
1 Documentation Roadmap	125
1.1 Products Covered by this Document	126
1.2 Additional Documentation	127
2 User Interface	129
2.1 Screen Tabs	130
2.1.1 Mode/Meas/View Dialog	131
2.1.1.1 Mode	132
2.1.1.2 Application Mode Remote Commands	135
Application Mode Catalog Query (Remote Command Only)	135
Current Application Model (Remote Command Only)	136
Current Application Revision (Remote Command Only)	136
Current Application Options (Remote Command Only)	137
Application Catalog Number of Entries (Remote Command Only)	137
Application Catalog Model Numbers (Remote Command Only)	137
Application Catalog Revision (Remote Command Only)	138
Application Catalog Options (Remote Command Only)	138
ESA SA compatibility command (Remote Command only)	138
GSM Mode compatibility command (Remote Command only)	139
SA compatibility command for EMC (Remote Command only)	139
Receiver compatibility command for EMC (Remote Command only)	139
APD compatibility command for EMC (Remote Command only)	139
IF Mode compatibility command for EMC (Remote Command only)	140
2.1.1.3 Measurement	140
2.1.1.4 View	140
2.1.1.5 Sequencer	142
2.1.1.6 Screen Name	145
2.1.1.7 Delete This Screen	146
2.1.1.8 Delete All But This Screen	146
2.1.1.9 89600 VSA	147
2.1.2 Add Screen	148
2.2 Meas Bar	150
2.3 Measurement Display	154

Table Of Contents

2.3.1 Window Title	154
2.3.2 Measurement Data	158
2.3.3 Annotation Hotspot	161
2.4 Menu Panel	163
2.4.1 Right-Click Menu	173
2.4.1.1 Add to User Menu	173
2.4.1.2 Help on this setting	173
2.4.1.3 Show SCPI Command	173
2.4.1.4 Add to SCPI Recorder	174
2.4.1.5 Start/Stop SCPI Recorder	174
2.4.1.6 Show SCPI Recorder	174
2.4.2 User Menu	174
2.5 Cancel key	175
2.6 Onscreen Keyboard key	176
2.7 Touch On/Off Key	177
2.8 Tab key	178
2.9 Local Button	179
2.10 Control Bar	180
2.11 Windows	181
2.12 Undo/Redo	182
2.13 File Functions	186
2.13.1 File Explorer	186
2.14 Help	187
2.15 Status Bar	188
2.16 Block Diagram	196
2.17 View Editor	198
2.17.1 To Create a User View	202
2.17.2 To Resize or Rearrange Windows in a View	207
2.17.3 To Delete a Window from a View	210
2.17.4 To Save a User View	211
2.17.5 To Rename a User View	216
2.17.6 To Delete a User View	216
2.17.7 To Delete All User Views	217

2.17.8 Use Case: Displaying Marker and Peak Tables	217
2.17.9 View Editor Remote Commands	218
2.18 Multiscreen	219
2.18.1 Select Screen	221
2.18.2 Screen List (Remote only command)	222
2.19 Fullscreen	223
3 5G NR Mode	224
3.1 Measurement Commands	225
3.2 Channel Power Measurement	226
3.2.1 Views	232
3.2.1.1 Normal	233
3.2.1.2 Carrier Info	233
3.2.2 Windows	234
3.2.2.1 Graph	234
3.2.2.2 Metrics	235
3.2.2.3 Gate	238
3.2.2.4 Marker Table	239
3.2.3 Amplitude	239
3.2.3.1 Y Scale	239
Ref Value	239
Scale/Div	240
Scale Range	240
Ref Position	241
Auto Scaling	241
3.2.3.2 Attenuation	242
Full Range Atten	244
Mech Atten	245
Elec Atten	248
Adjust Atten for Min Clipping	252
Restart Meas on Adjust Atten	252
Adjust Atten	253
Pre-Adjust for Min Clipping	253
Mech Atten Step	257
3.2.3.3 Range (Non-attenuator models)	258
Range	258
Adjust Range for Min Clipping	259
Restart Meas on Adjust Range	259
Pre-Adjust for Min Clipping	259
Peak-to-Average Ratio	260

Table Of Contents

Mixer Lvl Offset	261
3.2.3.4 Signal Path	261
Presel Center	261
Preselector Adjust	263
Internal Preamp	264
LNA	265
μ W Path Control	267
Allow Full Bypass in Auto	276
Software Preselection	277
SW Preselection Type	278
SW Preselection BW	279
High Freq Prefilter	280
3.2.4 BW	281
3.2.4.1 Settings	281
Res BW	282
Video BW	284
RBW Filter Type	286
3.2.5 Display	287
3.2.5.1 Meas Display	287
Bar Graph On/Off	287
Carrier Frequency Type	287
3.2.5.2 Annotation	288
Graticule	288
Screen Annotation	288
Trace Annotation	289
Control Annotation	289
Meas Bar	289
Display Enable (Remote Command Only)	290
3.2.5.3 View	291
View	291
User View	291
Restore Layout to Default	292
Save Layout as New View	292
Re-Save User View	293
Rename User View	293
Delete User View	293
Delete All User Views	294
View Editor Remote Commands	294
View Listing Query	294
User View Listing Query	295
3.2.6 Frequency	295
3.2.6.1 Settings	295
Carrier Reference Frequency	295
Span	297

CF Step	300
Full Span (Remote Command Only)	301
3.2.7 Marker	301
3.2.7.1 Select Marker	302
3.2.7.2 Settings	302
Marker Frequency	302
Marker Mode	304
Delta Marker (Reset Delta)	305
Marker Settings Diagram	305
All Markers Off	305
3.2.7.3 Peak Search	305
Marker Frequency	305
Peak Search	305
Marker Delta	306
3.2.7.4 Properties	306
Marker Frequency	306
Relative To	306
Marker Trace	307
Marker Settings Diagram	308
3.2.8 Meas Setup	308
3.2.8.1 Settings	308
Avg/Hold Number	308
Continue Averaging	309
Terminal Count (Remote Query Only)	309
Averaging On/Off	309
Avg Mode	310
Integ BW	310
PSD Unit	311
IF Gain	312
Spur Avoidance	312
Meas Setup Summary Table	313
Auto Couple	313
Meas Preset	315
3.2.8.2 Radio	315
Direction	315
Multi Channel Synchronous Acquisition (UXM Only)	316
Multi Channel Config	316
Multi Channel Configuration	316
Multi Channel Synchronous Acquisition (UXM Only)	317
Input Port (UXM)	317
Lock (UXM)	317
Trace Settings Table	318
Multi Channel Synchronous Acquisition (UXM Only)	318
Measure Trace	318
Channel Assignment	319

Table Of Contents

Input Port	319
EIRP (Synchronous Acquisition) (UXM Only)	320
Restore Defaults (UXM Only)	320
3.2.8.3 Component Carriers	321
Number of Component Carriers	321
Carrier Allocation	321
Non-Contiguous Break at	322
Configure Comp Carriers	322
Configure CCs	323
Number of Component Carriers	323
Auto Frequency Offset	323
Carrier Allocation	324
Non-Contiguous Break at	324
Measure Carrier	324
Sidelink	325
Bandwidth	325
Freq Range	326
Freq Offset	326
Cell ID Auto	327
Cell ID Value	327
Demod Spectrum	328
CHP Power Integration Bandwidth	328
ACP Power Integration Bandwidth	328
SEM Power Integration Bandwidth	330
SCS (Power Meas)	330
3.2.8.4 Meas Standard	330
Bandwidth	331
Frequency Range	332
Duplex Mode	333
TDD / User Def. Configuration	334
Duplex Mode	334
Transmission Periodicity	334
Number of Downlink Slots	334
Number of Downlink Symbols	335
Number of Uplink Slots	335
Number of Uplink Symbols	335
Number of Special Slots (Remote Query Only)	336
TDD Slot Allocation(Remote Query Only)	336
Ignore Duplex Mode for Fulfilled RB Alloc	336
SCS	336
RB Alloc Preset	338
Advanced Preset Parameters	341
Uplink Carrier Mode	341
DL FR1 NR-TM Reference Standard Selection	341
OFDM Type	342
Adjust Limit Mask for Freq Range	342
BS Type	344
BS Category	345

Assumed Adjacent Channels	346
UE Power Class	346
Uplink Channel Type	347
More Advanced Preset Parameters	348
Include RB Alloc Preset for Mod Analysis	348
Include Gate Source	348
Include Periodic Timer Period	348
Include Periodic Timer Sync Source	349
Include Periodic Timer Sync Holdoff	349
Ignore Duplex Mode for Fulfilled RB Alloc	349
Adjust Meas Time Length for TM	350
Apply Preset (to All CCs)	351
Apply Preset (to All CCs)	351
Values for Meas Standard	351
Meas Standard Setting Parameters for Apply Preset	351
Reference Standard version and ACP & SEM table indicator	353
Direction = Downlink	354
Direction = Uplink	357
Measurement-Global parameters	357
Configure Component Carriers	357
Trigger/Gate Parameters	358
Channel Power	359
3.2.8.5 Advanced	360
Phase Noise Optimization	360
Noise Floor Extension	366
3.2.8.6 Global	369
Global Center Freq	370
Global EMC Std	370
Extend Low Band	371
Restore Defaults	372
3.2.9 Sweep	372
3.2.9.1 Sweep/Control	372
Sweep Time	372
Minimum Acquisition Time	374
Sweep/Measure	375
Restart	377
Pause/Resume	380
Abort (Remote Command Only)	380
Sweep Time Annotation (Remote Query Only)	381
3.2.9.2 Sweep Config	381
Sweep Time Rules	381
Points	382
IF Dithering	383
Image Protection	383
3.2.10 Trace	384
3.2.10.1 Select Trace	384

Table Of Contents

3.2.10.2 Trace Control	384
Trace Type	385
Clear and Write Restart Averaging Restart Max/Min Hold	390
View/Blank	390
Trace Settings Table (UXM Only)	393
Multi Channel Configuration	393
Multi Channel Synchronous Acquisition (UXM Only)	393
Input Port (UXM)	393
Lock (UXM)	394
Trace Settings Table	394
Multi Channel Synchronous Acquisition (UXM Only)	395
Measure Trace	395
Channel Assignment	396
Input Port	396
3.2.10.3 Math	396
Math Function	397
Operand 1 / Operand 2	403
Offset	404
Reference	404
3.2.10.4 Detector	404
Detector	404
Detector Select Auto/Man	406
3.2.10.5 Trace Function	406
From Trace	406
To Trace	407
Copy	407
Exchange	407
Preset All Traces	408
Clear All Traces	408
Multiple Traces for EIRP	408
3.2.10.6 Advanced	409
Measure Trace	409
3.3 Occupied BW Measurement	410
3.3.1 Views	412
3.3.1.1 OBW Results	413
3.3.1.2 OBW Boundaries	414
3.3.1.3 Gate	414
3.3.2 Windows	414
3.3.2.1 Graph	414
3.3.2.2 Metrics - OBW Results	415
3.3.2.3 Metrics - OBW Boundaries	417
3.3.2.4 Gate	418

3.3.3 Amplitude	419
3.3.3.1 Y Scale	419
Ref Value	419
Scale/Div	419
Scale Range	420
Ref Position	421
Auto Scaling	421
3.3.3.2 Attenuation	422
Full Range Atten	424
Mech Atten	425
Elec Atten	427
Adjust Atten for Min Clipping	431
Restart Meas on Adjust Atten	432
Adjust Atten	432
Pre-Adjust for Min Clipping	433
Mech Atten Step	437
3.3.3.3 Range (Non-attenuator models)	438
Range	438
Adjust Range for Min Clipping	439
Restart Meas on Adjust Range	439
Pre-Adjust for Min Clipping	439
Peak-to-Average Ratio	440
Mixer Lvl Offset	441
3.3.3.4 Signal Path	441
Presel Center	441
Preselector Adjust	443
Internal Preamp	444
LNA	445
μ W Path Control	447
Allow Full Bypass in Auto	456
Software Preselection	457
SW Preselection Type	458
SW Preselection BW	459
High Freq Prefilter	460
3.3.4 BW	461
3.3.4.1 Settings	461
Res BW	462
Video BW	463
RBW Filter Type	464
3.3.5 Display	465
3.3.5.1 Meas Display	465
x dB BW Boundaries On/Off	465
Boundary Frequency	466
3.3.5.2 Annotation	466

Table Of Contents

Graticule	466
Screen Annotation	467
Trace Annotation	467
Control Annotation	468
Meas Bar	468
Display Enable (Remote Command Only)	468
3.3.5.3 View	470
View	470
User View	470
Restore Layout to Default	471
Save Layout as New View	471
Re-Save User View	471
Rename User View	472
Delete User View	472
Delete All User Views	472
View Editor Remote Commands	473
View Listing Query	473
User View Listing Query	473
3.3.6 Frequency	474
3.3.6.1 Settings	474
Carrier Reference Frequency	474
Span	475
Full Span (Remote Command Only)	476
3.3.7 Marker	477
3.3.7.1 Select Marker	477
3.3.7.2 Settings	477
Marker Frequency	477
Marker Mode	479
Delta Marker (Reset Delta)	480
Marker Settings Diagram	480
All Markers Off	480
3.3.7.3 Peak Search	480
Marker Frequency	481
Peak Search	481
Marker Delta	481
3.3.7.4 Properties	481
Marker Frequency	482
Relative To	482
Marker Trace	483
Marker Settings Diagram	483
3.3.8 Meas Setup	483
3.3.8.1 Settings	483
Avg/Hold Num	484
Continue Averaging	484

Terminal Count (Remote Query Only)	485
Averaging On/Off	485
Average Mode	486
% of OBW Power	486
Power Ref	486
x dB	487
Power Integration Method	487
Spur Avoidance	488
Meas Setup Summary Table	489
Auto Couple	489
Meas Preset	491
Max Hold (Remote Command Only)	491
3.3.8.2 Limits	491
Limit Test	491
Bandwidth	492
3.3.8.3 Radio	492
Direction	492
Multi Channel Synchronous Acquisition (UXM Only)	493
Multi Channel Config	494
Multi Channel Configuration	494
Multi Channel Synchronous Acquisition (UXM Only)	494
Input Port (UXM)	494
Lock (UXM)	495
Trace Settings Table	495
Multi Channel Synchronous Acquisition (UXM Only)	496
Measure Trace	496
Channel Assignment	496
Input Port	497
EIRP (Synchronous Acquisition) (UXM Only)	497
Restore Defaults (UXM Only)	498
Interfering Signal Present	498
Freq Offset From Edge	499
Span	499
Offset Side	499
Non-Contiguous Interference Region	500
Interfering Signal Exclude Range	500
3.3.8.4 Component Carriers	501
Number of Component Carriers	501
Carrier Allocation	501
Non-Contiguous Break at	502
Configure Comp Carriers	503
Configure CCs	503
Number of Component Carriers	503
Auto Frequency Offset	503
Carrier Allocation	504
Non-Contiguous Break at	505
Measure Carrier	505
Bandwidth	506

Table Of Contents

Freq Range	506
Freq Offset	507
Cell ID Auto	508
Cell ID Value	508
Demod Spectrum	508
CHP Power Integration Bandwidth	509
ACP Power Integration Bandwidth	509
SEM Power Integration Bandwidth	510
N_Grid_Size (Display Only)	511
SCS (Power Meas)	512
Resource Grid	512
Component Carrier (GUI only)	512
Bandwidth	513
Freq Range	513
Configuration Mode	513
SCS Enabled	514
N_grid_start	515
N_grid_size	515
k0 (Display Only)	516
Intra-Cell Guard Band	516
RB Set (Display Only)	516
Point A Frequency (Display Only)	517
LTE Coexistence	517
Add LTE (GUI only)	517
Delete LTE (GUI only)	517
Clear All (GUI only)	517
Effective LTE Number (Remote Command only)	517
State	518
Bandwidth	518
Carrier Offset to Point A	519
MBSFN Subframes	519
Number of CRS Antenna Ports	519
v-shift	520
Advanced Acquisition	520
Number of Component Carriers	520
Input Channel (GUI Only)	520
Use Advanced Acquisition Table	521
IF Path Auto	521
Mechanical Attenuation	521
Elec Attenuation	522
LNA	522
Internal Preamp	522
uW Path Control	523
IF Gain	523
IF Path	523
Measure CC	524
3.3.8.5 Meas Standard	525
Bandwidth	525
Frequency Range	525

Duplex Mode	527
TDD / User Def. Configuration	527
Duplex Mode	527
DL FR1 NR-TM Reference Standard Selection	528
Transmission Periodicity	528
Number of Downlink Slots	528
Number of Downlink Symbols	529
Number of Uplink Slots	529
Number of Uplink Symbols	530
Number of Special Slots (Remote Query Only)	530
TDD Slot Allocation(Remote Query Only)	530
Ignore Duplex Mode for Fulfilled RB Alloc	530
SCS	531
RB Alloc Preset	532
Advanced Preset Parameters	535
Uplink Carrier Mode	535
DL FR1 NR-TM Reference Standard Selection	535
OFDM Type	536
Adjust Limit Mask for Freq Range	536
BS Type	538
BS Category	539
Assumed Adjacent Channels	540
Uplink Channel Type	540
Apply Preset (to All CCs)	541
More Advanced Preset Parameters	541
Include RB Alloc Preset for Mod Analysis	541
Include Gate Source	542
Include Periodic Timer Period	542
Include Periodic Timer Sync Source	542
Include Periodic Timer Sync Holdoff	543
Ignore Duplex Mode for Fulfilled RB Alloc	543
Adjust Meas Time Length for TM	543
Apply Preset (to All CCs)	544
Values for Meas Standard	545
Meas Standard Setting Parameters for Apply Preset	545
Reference Standard version and ACP & SEM table indicator	547
Direction = Downlink	547
Direction = Uplink	550
Measurement-Global parameters	551
Configure Component Carriers	551
Trigger/Gate Parameters	551
ACP	553
BW Parameters	553
Trace Detector	553
Sweep Parameter	554
Frequency Parameters	554
Meas Setup: Settings Parameter	554
Meas Setup: Configure Component Carrier Parameters	555
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	557

Table Of Contents

Outer Offset Preset Case 1	558
Outer Offset Preset Case 2	564
Inner Offset Preset Case 1	568
Inner Offset Preset Case 2	576
Spectrum Emission Mask	578
BW Parameter	579
Offset RAT	579
Carrier Parameters	579
Reference Parameter	580
Configure Component Carrier Parameter	580
Outer/Inner Offset Parameters	581
Parameters common to all offsets in both downlink and uplink	581
Cumulate Mask (Inner Offset only)	581
Other Offset/Limit Parameters	582
Downlink, FR1, BS type = 1-C:	582
Downlink, FR1, BS type = 1-O:	587
Downlink, FR2, BS type = 2-O:	596
Uplink, FR1	600
Uplink, FR2	601
Spurious Emissions	603
Downlink, FR1 (BS type = 1-C & 1-O)	603
Downlink, FR2 (BS type = 2-O)	605
Uplink, FR1	608
Uplink, FR2	610
Modulation Analysis	612
Configure Component Carriers Channel Profile: Resource Grid	613
Meas Time: Meas Time parameter values	614
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	614
Advanced: Advanced Demod Setup	615
Transmit On Off Power	617
Meas Setup: Meas Time parameters for Downlink	618
Meas Setup: Meas Time parameters for Uplink	618
Meas Setup: Other Setting parameters	621
Meas Setup: Limit Parameters	622
Other parameters	628
Channel Power	628
Occupied BW	629
Monitor Spectrum	629
IQ Waveform	629
Power Stat CCDF	629
3.3.8.6 Advanced	630
Noise Floor Extension	630
IF Gain	635
3.3.8.7 Global	636
Global Center Freq	636
Global EMC Std	637
Extend Low Band	637
Restore Defaults	638

3.3.9 Sweep	638
3.3.9.1 Sweep/Control	638
Sweep Time	638
Minimum Acquisition Time	640
Sweep/Measure	641
Restart	643
Pause/Resume	646
Abort (Remote Command Only)	646
Sweep Time Annotation (Remote Query Only)	647
3.3.9.2 Sweep Config	647
Sweep Time Rules	647
Points	648
Auto Sweep Points	649
IF Dithering	650
Image Protection	650
3.3.10 Trace	650
3.3.10.1 Select Trace	656
3.3.10.2 Trace Control	656
Trace Type	657
Clear and Write Restart Averaging Restart Max/Min Hold	662
View/Blank	662
3.3.10.3 Math	665
Math Function	665
Operand 1 / Operand 2	671
Offset	672
Reference	672
3.3.10.4 Detector	672
Detector	672
Detector Select Auto/Man	674
3.3.10.5 Trace Function	674
From Trace	675
To Trace	675
Copy	675
Exchange	676
Preset All Traces	676
Clear All Traces	676
Multiple Traces for EIRP	677
3.3.10.6 Advanced	677
Measure Trace	677
3.4 ACP Measurement	679
3.4.1 Measurement Results for $n = 1$, or no Index Specified	682
3.4.2 Measurement Results for $n = 2$	685

Table Of Contents

3.4.3 Measurement Results for n = 3	686
3.4.4 Measurement Results for n = 7	687
3.4.5 Measurement Results for n = 8	688
3.4.6 Views	690
3.4.6.1 Normal	691
3.4.6.2 Carrier Info	691
3.4.7 Windows	691
3.4.7.1 Graph	691
3.4.7.2 Metrics	692
3.4.7.3 Gate	695
3.4.7.4 Marker Table	695
3.4.8 Amplitude	695
3.4.8.1 Y Scale	696
Ref Value	696
Scale/Div	696
Scale Range	697
Ref Position	697
Auto Scaling	698
3.4.8.2 Attenuation	698
Full Range Atten	700
Mech Atten	701
Elec Atten	704
Adjust Atten for Min Clipping	708
Restart Meas on Adjust Atten	708
Adjust Atten	709
Pre-Adjust for Min Clipping	709
Mech Atten Step	713
3.4.8.3 Range (Non-attenuator models)	714
Range	714
Adjust Range for Min Clipping	715
Restart Meas on Adjust Range	715
Pre-Adjust for Min Clipping	715
Peak-to-Average Ratio	716
Mixer Lvl Offset	717
3.4.8.4 Signal Path	717
Presel Center	717
Preselector Adjust	719
Internal Preamp	720
LNA	721
μW Path Control	723
Allow Full Bypass in Auto	732

Software Preselection	733
SW Preselection Type	734
SW Preselection BW	735
High Freq Prefilter	736
3.4.9 BW	737
3.4.9.1 Settings	737
Res BW	738
Video BW	740
RBW Filter Type	741
RBW Filter BW	742
3.4.10 Display	743
3.4.10.1 Meas Display	743
Bar Graph On/Off	743
Power Results	743
Carrier Frequency Type	744
3.4.10.2 Annotation	744
Graticule	744
Screen Annotation	745
Trace Annotation	745
Control Annotation	746
Meas Bar	746
Display Enable (Remote Command Only)	746
3.4.10.3 View	748
View	748
User View	748
Restore Layout to Default	749
Save Layout as New View	749
Re-Save User View	749
Rename User View	749
Delete User View	750
Delete All User Views	750
View Editor Remote Commands	750
View Listing Query	751
User View Listing Query	751
3.4.11 Frequency	751
3.4.11.1 Settings	752
Carrier Reference Frequency	752
Span	754
3.4.12 Marker	756
3.4.12.1 Select Marker	756
3.4.12.2 Settings	757
Marker Frequency	757
Marker Mode	758

Table Of Contents

Delta Marker (Reset Delta)	759
Marker Settings Diagram	759
All Markers Off	759
Couple Markers	760
3.4.12.3 Peak Search	760
Marker Frequency	760
Peak Search	760
Next Peak	761
Next Pk Right	761
Next Pk Left	761
Minimum Peak	762
Pk-Pk Search	762
Marker Delta	763
3.4.12.4 Properties	763
Marker Frequency	763
Relative To	763
Marker Trace	764
Marker Settings Diagram	765
3.4.13 Meas Setup	765
3.4.13.1 Settings	765
Avg Hold Number	765
Continue Averaging	766
Terminal Count (Remote Query Only)	766
Averaging On/Off	767
Avg Mode	767
Meas Method	768
Carrier/Offset/Limits Config	769
Component Carriers	769
Number of Component Carriers	770
Carrier Allocation	770
Non-Contiguous Break at	770
Configure Comp Carriers	771
Configure CCs	771
Number of Component Carriers	772
Auto Frequency Offset	772
Carrier Allocation	773
Non-Contiguous Break at	773
Measure Carrier	774
Bandwidth	774
Freq Range	775
Freq Offset	776
Cell ID Auto	776
Cell ID Value	776
Demod Spectrum	777
CHP Power Integration Bandwidth	777
ACP Power Integration Bandwidth	778
SEM Power Integration Bandwidth	779

N_Grid_Size (Display Only)	779
SCS (Power Meas)	780
Resource Grid	781
Component Carrier (GUI only)	781
Bandwidth	781
Freq Range	781
Configuration Mode	781
SCS Enabled	783
N_grid_start	783
N_grid_size	784
k0 (Display Only)	784
Intra-Cell Guard Band	785
RB Set (Display Only)	785
Point A Frequency (Display Only)	785
LTE Coexistence	785
Add LTE (GUI only)	786
Delete LTE (GUI only)	786
Clear All (GUI only)	786
Effective LTE Number (Remote Command only)	786
State	786
Bandwidth	787
Carrier Offset to Point A	787
MBSFN Subframes	788
Number of CRS Antenna Ports	788
v-shift	788
Advanced Acquisition	789
Number of Component Carriers	789
Input Channel (GUI Only)	789
Use Advanced Acquisition Table	789
IF Path Auto	789
Mechanical Attenuation	790
Elec Attenuation	790
LNA	791
Internal Preamp	791
uW Path Control	791
IF Gain	792
IF Path	792
Measure CC	793
Offset	793
Offset Frequency Define	793
Offset Freq	797
Integ BW	799
Offset Side	800
Method	801
Filter Alpha	802
Advanced (Offset)	802
Offset Freq	802
Res BW	803
Video BW	804

Table Of Contents

Filter Type	805
Filter BW	805
Limits	806
Limit Test	806
Offset Freq	806
Abs Limit	806
Rel Limit (Car)	807
Positive Offset Limit (Remote Command only)	808
Negative Offset Limit(Remote Command only)	809
Rel Limit (PSD)	810
Fail Mask	811
Inner Offset	812
Offset Frequency Define	812
Offset Freq	814
Integ BW	816
Offset Side	816
Method	817
Filter Alpha	818
Advanced (Inner Offset)	818
Offset Freq	818
Res BW	818
Video BW	819
Filter Type	820
Filter BW	820
Power Ref Type	821
Inner Limits	823
Limit Test	823
Offset Freq	823
Abs Limit	823
Rel Limit (Car)	824
Rel Limit (PSD)	824
Fail Mask	825
Max Num of Offsets	826
Limit Test	826
Spur Avoidance	827
Meas Setup Summary Table	828
Auto Couple	828
Meas Preset	830
3.4.13.2 Reference	830
Carrier/Offset/Limits Config	830
Configure CCs	830
Number of Component Carriers	831
Auto Frequency Offset	831
Carrier Allocation	832
Non-Contiguous Break at	832
Measure Carrier	832
Bandwidth	832
Freq Range	833
Freq Offset	833

Demod Spectrum	834
CHP Power Integration Bandwidth	834
ACP Power Integration Bandwidth	835
SEM Power Integration Bandwidth	836
Offset	836
Offset Frequency Define	836
Offset Freq	840
Integ BW	842
Offset Side	843
Method	844
Filter Alpha	845
Advanced (Offset)	845
Offset Freq	845
Res BW	846
Video BW	847
Filter Type	848
Filter BW	848
Limits	849
Limit Test	849
Offset Freq	849
Abs Limit	849
Rel Limit (Car)	850
Positive Offset Limit (Remote Command only)	851
Negative Offset Limit(Remote Command only)	852
Rel Limit (PSD)	853
Fail Mask	854
Inner Offset	855
Offset Frequency Define	855
Offset Freq	857
Integ BW	859
Offset Side	859
Method	860
Filter Alpha	861
Advanced (Inner Offset)	861
Offset Freq	861
Res BW	861
Video BW	862
Filter Type	863
Filter BW	863
Power Ref Type	864
Inner Limits	866
Limit Test	866
Offset Freq	866
Abs Limit	866
Rel Limit (Car)	867
Rel Limit (PSD)	867
Fail Mask	868
Reference Carrier (Carrier Index)	869
Measurement Type	871

Table Of Contents

Power Ref	871
Total Power Ref	875
PSD Ref	877
PSD Unit	879
3.4.13.3 Component Carriers	879
Number of Component Carriers	879
Carrier Allocation	880
Non-Contiguous Break at	880
Configure Comp Carriers	881
Configure CCs	881
Number of Component Carriers	882
Auto Frequency Offset	882
Carrier Allocation	883
Non-Contiguous Break at	883
Measure Carrier	883
Sidelink	883
Bandwidth	884
Freq Range	884
Freq Offset	885
Cell ID Auto	885
Cell ID Value	886
Demod Spectrum	886
CHP Power Integration Bandwidth	887
ACP Power Integration Bandwidth	887
SEM Power Integration Bandwidth	888
SCS (Power Meas)	889
3.4.13.4 Radio	889
Direction	889
Multi Channel Synchronous Acquisition (UXM Only)	890
Multi Channel Config	890
Multi Channel Configuration	891
Multi Channel Synchronous Acquisition (UXM Only)	891
Input Port (UXM)	891
Lock (UXM)	892
Trace Settings Table	892
Multi Channel Synchronous Acquisition (UXM Only)	892
Measure Trace	892
Channel Assignment	893
Input Port	894
EIRP (Synchronous Acquisition) (UXM Only)	894
Restore Defaults (UXM Only)	895
Interfering Signal Present	895
Freq Offset From Edge	895
Span	896
Offset Side	896
Non-Contiguous Interference Region	897
Interfering Signal Exclude Range	897
3.4.13.5 Meas Standard	898

Bandwidth	898
Frequency Range	899
Duplex Mode	900
TDD / User Def. Configuration	901
Duplex Mode	901
DL FR1 NR-TM Reference Standard Selection	901
Transmission Periodicity	901
Number of Downlink Slots	902
Number of Downlink Symbols	902
Number of Uplink Slots	902
Number of Uplink Symbols	903
Number of Special Slots (Remote Query Only)	903
TDD Slot Allocation(Remote Query Only)	903
Ignore Duplex Mode for Fulfilled RB Alloc	904
SCS	904
RB Alloc Preset	905
Advanced Preset Parameters	908
Uplink Carrier Mode	908
DL FR1 NR-TM Reference Standard Selection	908
OFDM Type	909
Adjust Limit Mask for Freq Range	910
BS Type	911
BS Category	912
Assumed Adjacent Channels	913
Uplink Channel Type	914
Apply Preset (to All CCs)	914
More Advanced Preset Parameters	914
Include RB Alloc Preset for Mod Analysis	914
Include Gate Source	915
Include Periodic Timer Period	915
Include Periodic Timer Sync Source	915
Include Periodic Timer Sync Holdoff	916
Ignore Duplex Mode for Fulfilled RB Alloc	916
Adjust Meas Time Length for TM	917
Apply Preset (to All CCs)	917
Values for Meas Standard	918
Meas Standard Setting Parameters for Apply Preset	918
Reference Standard version and ACP & SEM table indicator	920
Direction = Downlink	920
Direction = Uplink	923
Measurement-Global parameters	924
Configure Component Carriers	924
Trigger/Gate Parameters	924
ACP	926
BW Parameters	926
Trace Detector	927
Sweep Parameter	927
Frequency Parameters	927
Meas Setup: Settings Parameter	928

Table Of Contents

Meas Setup: Configure Component Carrier Parameters	928
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	930
Outer Offset Preset Case 1	931
Outer Offset Preset Case 2	938
Inner Offset Preset Case 1	942
Inner Offset Preset Case 2	949
Spectrum Emission Mask	951
BW Parameter	952
Offset RAT	952
Carrier Parameters	952
Reference Parameter	953
Configure Component Carrier Parameter	953
Outer/Inner Offset Parameters	954
Parameters common to all offsets in both downlink and uplink	954
Cumulate Mask (Inner Offset only)	954
Other Offset/Limit Parameters	954
Downlink, FR1, BS type = 1-C:	954
Downlink, FR1, BS type = 1-O:	960
Downlink, FR2, BS type = 2-O:	969
Uplink, FR1	972
Uplink, FR2	974
Spurious Emissions	975
Downlink, FR1 (BS type = 1-C & 1-O)	976
Downlink, FR2 (BS type = 2-O)	978
Uplink, FR1	980
Uplink, FR2	983
Modulation Analysis	985
Configure Component Carriers Channel Profile: Resource Grid	985
Meas Time: Meas Time parameter values	986
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	987
Advanced: Advanced Demod Setup	988
Transmit On Off Power	990
Meas Setup: Meas Time parameters for Downlink	990
Meas Setup: Meas Time parameters for Uplink	991
Meas Setup: Other Setting parameters	994
Meas Setup: Limit Parameters	995
Other parameters	1001
Channel Power	1001
Occupied BW	1002
Monitor Spectrum	1002
IQ Waveform	1002
Power Stat CCDF	1002
3.4.13.6 Advanced	1002
Phase Noise Opt	1003
Noise Correction	1008
Noise Floor Extension	1009
Fast Power RBW Mode	1014
Fast Power IF Gain Offset	1014
Integration BW	1015

3.4.13.7 Global	1015
Global Center Freq	1015
Global EMC Std	1016
Extend Low Band	1017
Restore Defaults	1017
3.4.13.8 Offset RRC Weighting (Backwards Compatibility SCPI)	1018
3.4.13.9 Offset Filter Alpha (Backward Compatibility SCPI)	1018
3.4.13.10 Method for Carrier (Backward Compatibility SCPI)	1018
3.4.14 Sweep	1019
3.4.14.1 Sweep/Control	1019
Sweep Time	1019
Minimum Acquisition Time	1021
Sweep/Measure	1022
Restart	1024
Pause/Resume	1027
Abort (Remote Command Only)	1027
Sweep Time Annotation (Remote Query Only)	1028
3.4.14.2 Sweep Config	1028
Sweep Time Rules	1028
Points	1029
Auto Sweep Points	1031
3.4.14.3 X Scale	1031
Auto Scaling	1031
3.4.15 Trace	1032
3.4.15.1 Select Trace	1032
3.4.15.2 Trace Control	1032
Trace Type	1033
Clear and Write Restart Averaging Restart Max/Min Hold	1038
View/Blank	1038
Trace Settings Table (UXM Only)	1041
Multi Channel Configuration	1041
Multi Channel Synchronous Acquisition (UXM Only)	1041
Input Port (UXM)	1042
Lock (UXM)	1042
Trace Settings Table	1043
Multi Channel Synchronous Acquisition (UXM Only)	1043
Measure Trace	1043
Channel Assignment	1044
Input Port	1044
3.4.15.3 Math	1045
Math Function	1045
Operand 1 / Operand 2	1051
Offset	1052

Table Of Contents

Reference	1052
3.4.15.4 Detector	1052
Detector	1052
Detector Select Auto/Man	1054
3.4.15.5 Trace Function	1055
From Trace	1055
To Trace	1055
Copy	1055
Exchange	1056
Preset All Traces	1056
Clear All Traces	1056
Multiple Traces for EIRP	1057
3.4.15.6 Advanced	1057
Measure Trace	1057
3.5 SEM Measurement	1059
3.5.1 Results for n = 1	1061
3.5.2 Results for n = 2-4	1064
3.5.3 Results for n = 5	1064
3.5.4 Results for n = 6	1067
3.5.5 Results for n = 7-11	1068
3.5.6 Results for n = 12	1070
3.5.7 Results for n = 13	1070
3.5.8 Results for n = 14	1072
3.5.9 Results for n = 15	1073
3.5.10 Results for n = 16	1074
3.5.11 Results for n = 17	1074
3.5.12 Results for n = 18-20	1074
3.5.13 Results for n = 21	1075
3.5.14 Results for n = 22	1080
3.5.15 Number of Offsets	1080
3.5.16 Views	1081
3.5.16.1 Abs Pwr Freq	1082
3.5.16.2 Rel Pwr Freq	1082
3.5.16.3 Integrated Power	1083
3.5.16.4 Carrier Info	1083
3.5.17 Windows	1083

3.5.17.1 Graph	1083
Graph Window in Abs Pwr Freq View	1084
Graph Window in Rel Pwr Freq View	1085
Graph Window in Integrated Power View	1086
Graph Window in Carrier Info View	1087
3.5.17.2 Table	1088
Table Window in Abs Pwr Freq View	1089
Table Window in Rel Pwr Freq View	1091
Table Window in Integrated Power View	1094
Table Window in Carrier Info View	1097
3.5.17.3 Gate	1098
3.5.18 Amplitude	1099
3.5.18.1 Y Scale	1099
Ref Value	1099
Scale/Div	1099
Scale Range	1100
Ref Position	1101
Auto Scaling	1101
3.5.18.2 Attenuation	1102
Full Range Atten	1104
Mech Atten	1105
Elec Atten	1107
Adjust Atten for Min Clipping	1111
Restart Meas on Adjust Atten	1112
Adjust Atten	1112
Pre-Adjust for Min Clipping	1113
Mech Atten Step	1117
3.5.18.3 Range (Non-attenuator models)	1118
Range	1118
Adjust Range for Min Clipping	1119
Restart Meas on Adjust Range	1119
Pre-Adjust for Min Clipping	1119
Peak-to-Average Ratio	1120
Mixer Lvl Offset	1121
3.5.18.4 Signal Path	1121
Presel Center	1121
Preselector Adjust	1123
Internal Preamp	1124
LNA	1125
μ W Path Control	1127
Allow Full Bypass in Auto	1136
Software Preselection	1137
SW Preselection Type	1138
SW Preselection BW	1139
High Freq Prefilter	1140

Table Of Contents

3.5.19 BW	1141
3.5.19.1 Settings	1141
RBW Filter Type	1141
3.5.20 Display	1142
3.5.20.1 Meas Display	1142
Limit Lines	1142
Carrier Frequency Type	1143
3.5.20.2 Annotation	1143
Graticule	1143
Screen Annotation	1144
Trace Annotation	1144
Control Annotation	1145
Meas Bar	1145
Display Enable (Remote Command Only)	1145
3.5.20.3 View	1147
3.5.21 Frequency	1147
3.5.21.1 Settings	1147
Carrier Reference Frequency	1147
3.5.22 Marker	1149
3.5.22.1 Select Marker	1149
3.5.22.2 Settings	1149
Marker Frequency	1150
Marker Mode	1151
All Markers Off	1152
Couple Markers	1152
3.5.22.3 Properties	1152
Marker Frequency	1152
Marker Trace	1152
3.5.23 Meas Setup	1153
3.5.23.1 Settings	1153
Avg/Hold Num	1153
Continue Averaging	1154
SEM Terminal Count (Remote Query Only)	1154
Averaging On/Off	1155
Meas Method	1155
RRC Filter Alpha	1155
Non-Contiguous Meas Region	1156
Sweep Type Rules	1156
Spur Avoidance	1157
Offset/Limits Config Table	1157
Offset (Bandwidth)	1159
Offset Freq Define	1159

Offset Detector	1163
Offset Average Type (Remote Command Only)	1164
Start Freq	1165
Stop Freq	1169
Res BW	1171
Meas BW	1173
Video BW	1174
VBW/RBW	1175
Offset (Sweep)	1176
Offset Freq Define	1176
Offset Detector	1177
Start Freq	1177
Stop Freq	1177
Sweep Time	1177
Minimum Acquisition Time	1178
Sweep Time Annotation (Remote Query Only)	1179
Sweep Type	1180
Offset Side	1181
Limits	1182
Start Freq	1182
Stop Freq	1183
Abs Start	1183
Abs Stop	1185
Rel Start	1189
Rel Stop	1191
Fail Mask	1193
Show Abs2 Limit	1195
Abs2 Start	1195
Abs2 Stop	1196
Fail Mask2	1197
Inner Offset (BW)	1198
Offset Freq Define	1198
Offset Detector	1201
Cumulate Mask	1201
Cumulate Mask Stop Frequency	1202
Start Freq	1202
Stop Freq	1203
Res BW	1204
Meas BW	1205
Video BW	1206
Inner Offset (Sweep)	1207
Offset Freq Define	1207
Offset Detector	1207
Cumulate Mask	1207
Cumulate Mask Stop Frequency	1207
Start Freq	1207
Stop Freq	1208
Sweep Time	1208
Minimum Acquisition Time	1209

Table Of Contents

Sweep Time Annotation (Remote Query Only)	1210
Sweep Type	1210
Offset Side	1211
Inner Offset (Limits)	1212
Start Freq	1212
Stop Freq	1213
Abs Start	1213
Abs Stop	1214
Rel Start	1215
Rel Stop	1216
Fail Mask	1216
Show Abs2 Limit	1217
Abs2 Start	1217
Abs2 Stop	1218
Fail Mask2	1219
Meas Setup Summary Table	1220
Auto Couple	1220
Meas Preset	1222
3.5.23.2 Carrier	1222
Integ BW	1222
Span	1223
Sweep Time	1225
Minimum Acquisition Time	1227
Sweep Time Annotation (Remote Query Only)	1228
Sweep Type	1228
Res BW	1229
Video BW	1231
VBW/RBW	1232
Channel Detector	1233
Reference Carrier Average Type (Remote Command Only)	1234
Offset/Limits Config Table	1234
3.5.23.3 Reference	1234
Measurement Type	1234
Power Ref	1235
Carrier Index	1241
Total Power Ref	1241
PSD Ref	1242
Spectrum Pk Ref	1242
Measure All Ref Carriers	1243
Offset/Limits Config Table	1243
3.5.23.4 Radio	1243
Direction	1244
Multi Channel Synchronous Acquisition (UXM Only)	1244
Multi Channel Config	1244
Multi Channel Configuration	1245
Multi Channel Synchronous Acquisition (UXM Only)	1245
Input Port (UXM)	1245
Lock (UXM)	1246

Trace Settings Table	1246
Multi Channel Synchronous Acquisition (UXM Only)	1246
Measure Trace	1247
Channel Assignment	1247
Input Port	1248
EIRP (Synchronous Acquisition) (UXM Only)	1248
Restore Defaults (UXM Only)	1249
Interfering Signal Present	1249
Freq Offset From Edge	1250
Span	1250
Offset Side	1250
Non-Contiguous Interference Region	1251
3.5.23.5 Component Carriers	1251
Number of Component Carriers	1251
Carrier Allocation	1252
Non-Contiguous Break at	1252
Configure Comp Carriers	1253
Configure CCs	1253
Number of Component Carriers	1254
Auto Frequency Offset	1254
Carrier Allocation	1255
Non-Contiguous Break at	1255
Measure Carrier	1255
Sidelink	1255
Bandwidth	1256
Freq Range	1256
Freq Offset	1257
Cell ID Auto	1257
Cell ID Value	1258
Demod Spectrum	1258
CHP Power Integration Bandwidth	1259
ACP Power Integration Bandwidth	1259
SEM Power Integration Bandwidth	1260
SCS (Power Meas)	1261
3.5.23.6 Meas Standard	1261
Bandwidth	1262
Frequency Range	1262
Duplex Mode	1263
TDD / User Def. Configuration	1264
Duplex Mode	1264
DL FR1 NR-TM Reference Standard Selection	1264
Transmission Periodicity	1265
Number of Downlink Slots	1265
Number of Downlink Symbols	1265
Number of Uplink Slots	1266
Number of Uplink Symbols	1266
Number of Special Slots (Remote Query Only)	1267
TDD Slot Allocation(Remote Query Only)	1267

Table Of Contents

Ignore Duplex Mode for Fulfilled RB Alloc	1267
SCS	1267
RB Alloc Preset	1269
Advanced Preset Parameters	1271
Uplink Carrier Mode	1272
DL FR1 NR-TM Reference Standard Selection	1272
OFDM Type	1272
Adjust Limit Mask for Freq Range	1273
BS Type	1275
BS Category	1275
Assumed Adjacent Channels	1276
Uplink Channel Type	1277
Apply Preset (to All CCs)	1278
More Advanced Preset Parameters	1278
Include RB Alloc Preset for Mod Analysis	1278
Include Gate Source	1278
Include Periodic Timer Period	1279
Include Periodic Timer Sync Source	1279
Include Periodic Timer Sync Holdoff	1279
Ignore Duplex Mode for Fulfilled RB Alloc	1280
Adjust Meas Time Length for TM	1280
Apply Preset (to All CCs)	1281
Values for Meas Standard	1281
Meas Standard Setting Parameters for Apply Preset	1282
Reference Standard version and ACP & SEM table indicator	1284
Direction = Downlink	1284
Direction = Uplink	1287
Measurement-Global parameters	1287
Configure Component Carriers	1288
Trigger/Gate Parameters	1288
ACP	1290
BW Parameters	1290
Trace Detector	1290
Sweep Parameter	1290
Frequency Parameters	1291
Meas Setup: Settings Parameter	1291
Meas Setup: Configure Component Carrier Parameters	1292
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	1294
Outer Offset Preset Case 1	1295
Outer Offset Preset Case 2	1301
Inner Offset Preset Case 1	1305
Inner Offset Preset Case 2	1313
Spectrum Emission Mask	1315
BW Parameter	1316
Offset RAT	1316
Carrier Parameters	1316
Reference Parameter	1317
Configure Component Carrier Parameter	1317
Outer/Inner Offset Parameters	1318

Parameters common to all offsets in both downlink and uplink	1318
Cumulate Mask (Inner Offset only)	1318
Other Offset/Limit Parameters	1318
Downlink, FR1, BS type = 1-C:	1318
Downlink, FR1, BS type = 1-O:	1324
Downlink, FR2, BS type = 2-O:	1333
Uplink, FR1	1336
Uplink, FR2	1338
Spurious Emissions	1339
Downlink, FR1 (BS type = 1-C & 1-O)	1340
Downlink, FR2 (BS type = 2-O)	1342
Uplink, FR1	1344
Uplink, FR2	1347
Modulation Analysis	1349
Configure Component Carriers Channel Profile: Resource Grid	1349
Meas Time: Meas Time parameter values	1350
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	1351
Advanced: Advanced Demod Setup	1352
Transmit On Off Power	1354
Meas Setup: Meas Time parameters for Downlink	1354
Meas Setup: Meas Time parameters for Uplink	1355
Meas Setup: Other Setting parameters	1358
Meas Setup: Limit Parameters	1359
Other parameters	1365
Channel Power	1365
Occupied BW	1366
Monitor Spectrum	1366
IQ Waveform	1366
Power Stat CCDF	1366
3.5.23.7 Advanced	1366
Noise Floor Extension	1367
Enable Wideband IF for FFT	1370
3.5.23.8 Global	1371
Global Center Freq	1371
Global EMC Std	1372
Extend Low Band	1373
Restore Defaults	1373
3.5.24 Sweep	1373
3.5.24.1 Sweep/Control	1374
Sweep/Measure	1374
Restart	1376
Pause/Resume	1378
Abort (Remote Command Only)	1379
3.5.24.2 X Scale	1379
Ref Value	1379
Scale/Div	1380
Ref Position	1380

Table Of Contents

Auto Scaling	1381
3.5.24.3 Sweep Config	1381
Points	1381
IF Dithering	1382
Image Protection	1382
3.5.25 Trace	1382
3.5.25.1 Select Trace	1382
3.5.25.2 Trace Control	1383
Trace Type	1383
Clear and Write Restart Averaging Restart Max/Min Hold	1389
View/Blank	1389
Trace Settings Table (UXM Only)	1392
Multi Channel Configuration	1392
Multi Channel Synchronous Acquisition (UXM Only)	1392
Input Port (UXM)	1392
Lock (UXM)	1393
Trace Settings Table	1393
Multi Channel Synchronous Acquisition (UXM Only)	1393
Measure Trace	1394
Channel Assignment	1394
Input Port	1395
3.5.25.3 Math	1395
Math Function	1395
Operand 1 / Operand 2	1402
Offset	1403
Reference	1403
3.5.25.4 Trace Function	1403
From Trace	1404
To Trace	1404
Copy	1404
Exchange	1405
Preset All Traces	1405
Clear All Traces	1405
Multiple Traces for EIRP	1406
3.5.25.5 Advanced	1406
Measure Trace	1406
3.6 Spurious Emissions Measurement	1408
3.6.1 Views	1410
3.6.1.1 Graph + Metrics	1410
3.6.1.2 All Ranges	1410
3.6.2 Windows	1411
3.6.2.1 Graph	1411

3.6.2.2 Table	1412
3.6.2.3 All Range Table	1413
3.6.2.4 Gate	1414
3.6.2.5 Marker Table	1414
3.6.3 Amplitude	1414
3.6.3.1 Y Scale	1414
Ref Value	1415
Scale/Div	1415
Scale Range	1416
Ref Position	1416
Auto Scaling	1416
3.6.3.2 Attenuation	1417
Full Range Atten	1419
Mech Atten	1420
Elec Atten	1423
Adjust Atten for Min Clipping	1427
Restart Meas on Adjust Atten	1427
Adjust Atten	1428
Pre-Adjust for Min Clipping	1428
Mech Atten Step	1432
3.6.3.3 Range (Non-attenuator models)	1433
Range	1433
Adjust Range for Min Clipping	1434
Restart Meas on Adjust Range	1434
Pre-Adjust for Min Clipping	1434
Peak-to-Average Ratio	1435
Mixer Lvl Offset	1436
3.6.3.4 Signal Path	1436
Presel Center	1436
Preselector Adjust	1438
Internal Preamp	1439
LNA	1440
μ W Path Control	1442
Allow Full Bypass in Auto	1451
Software Preselection	1452
SW Preselection Type	1453
SW Preselection BW	1454
High Freq Prefilter	1455
3.6.4 BW	1456
3.6.5 Display	1456
3.6.5.1 Meas Display	1456
Center Frequency On/Off	1456
3.6.5.2 Annotation	1457

Table Of Contents

Graticule	1457
Screen Annotation	1457
Trace Annotation	1458
Control Annotation	1458
Meas Bar	1459
Display Enable (Remote Command Only)	1459
3.6.5.3 View	1460
Views	1460
Graph + Metrics	1461
All Ranges	1461
User View	1461
Restore Layout to Default	1462
Save Layout as New View	1462
Re-Save User View	1463
Rename User View	1463
Delete User View	1463
Delete All User Views	1464
View Editor Remote Commands	1464
View Listing Query	1464
User View Listing Query	1465
3.6.6 Frequency	1465
3.6.6.1 Settings	1465
Carrier Reference Frequency	1465
3.6.7 Marker	1467
3.6.7.1 Select Marker	1467
3.6.7.2 Settings	1468
Marker Frequency	1468
Marker Mode	1469
Delta Marker (Reset Delta)	1470
Marker Settings Diagram	1470
All Markers Off	1471
Couple Markers	1471
3.6.7.3 Peak Search	1471
Marker Frequency	1472
Peak Search	1472
Next Peak	1472
Next Pk Right	1472
Next Pk Left	1473
Minimum Peak	1473
Pk-Pk Search	1473
Marker Delta	1474
3.6.7.4 Properties	1474
Marker Frequency	1474
Relative To	1474
Marker Trace	1475

Marker Settings Diagram	1476
3.6.8 Meas Setup	1476
3.6.8.1 Settings	1476
Avg/Hold Num	1476
Continue Averaging	1476
Terminal Count (Remote Query Only)	1477
Averaging On/Off	1477
Average Mode	1478
Average Type	1478
Meas Type	1479
Spur	1480
Range	1481
Spur Report Mode	1481
Range Settings	1482
Bandwidth	1482
Frequency Range	1482
Enabled	1483
Start Freq	1483
Stop Freq	1484
Span	1485
Res BW	1486
Meas BW	1488
Video BW	1488
Filter Type	1490
Enabled	1490
Frequency Type	1490
Abs Start Freq	1491
Abs Stop Freq	1492
Offset Start Freq	1493
Offset Stop Freq	1493
Offset Side	1494
Filter/Atten	1495
Frequency Range	1495
Enabled	1495
Start Freq	1495
Stop Freq	1495
Center Frequency	1496
Span	1496
Attenuation	1496
IF Gain	1496
Enabled	1497
Res BW	1498
Meas BW	1498
Video BW	1498
Filter Type	1499
Attenuation	1499
IF Gain	1500
Detector/Sweep	1500

Table Of Contents

Frequency Range	1500
Enabled	1501
Start Freq	1501
Stop Freq	1501
Center Frequency	1501
Span	1501
Sweep Time	1501
Points	1502
Detector 1	1503
Detector 2	1504
Limits	1505
Frequency Range	1505
Enabled	1505
Start Freq	1505
Stop Freq	1505
Center Frequency	1505
Span	1505
Abs Start Limit	1505
Abs Stop Limit	1506
Peak Excursion	1508
Pk Threshold	1508
Meas Setup Summary Table	1509
Auto Couple	1509
Meas Preset	1511
Fast Spurious Meas (Remote Command only)	1511
3.6.8.2 Radio	1511
Direction	1512
Interfering Signal Present	1512
Freq Offset From Edge	1513
Span	1513
Offset Side	1514
Non-Contiguous Interference Region	1514
3.6.8.3 Component Carriers	1514
Number of Component Carriers	1515
Carrier Allocation	1515
Non-Contiguous Break at	1515
Configure Comp Carriers	1516
Configure CCs	1516
Number of Component Carriers	1517
Auto Frequency Offset	1517
Carrier Allocation	1518
Non-Contiguous Break at	1518
Measure Carrier	1518
Sidelink	1518
Bandwidth	1519
Freq Range	1519
Freq Offset	1520
Cell ID Auto	1520

Cell ID Value	1521
Demod Spectrum	1521
CHP Power Integration Bandwidth	1522
ACP Power Integration Bandwidth	1522
SEM Power Integration Bandwidth	1523
SCS (Power Meas)	1524
3.6.8.4 Meas Standard	1524
Bandwidth	1525
Frequency Range	1525
Duplex Mode	1526
TDD / User Def. Configuration	1527
Duplex Mode	1527
DL FR1 NR-TM Reference Standard Selection	1527
Transmission Periodicity	1528
Number of Downlink Slots	1528
Number of Downlink Symbols	1528
Number of Uplink Slots	1529
Number of Uplink Symbols	1529
Number of Special Slots (Remote Query Only)	1530
TDD Slot Allocation(Remote Query Only)	1530
Ignore Duplex Mode for Fulfilled RB Alloc	1530
SCS	1530
RB Alloc Preset	1532
Advanced Preset Parameters	1535
Uplink Carrier Mode	1535
DL FR1 NR-TM Reference Standard Selection	1535
OFDM Type	1535
Adjust Limit Mask for Freq Range	1536
BS Type	1538
BS Category	1538
Assumed Adjacent Channels	1539
Uplink Channel Type	1540
Apply Preset (to All CCs)	1541
More Advanced Preset Parameters	1541
Include RB Alloc Preset for Mod Analysis	1541
Include Gate Source	1541
Include Periodic Timer Period	1542
Include Periodic Timer Sync Source	1542
Include Periodic Timer Sync Holdoff	1542
Ignore Duplex Mode for Fulfilled RB Alloc	1543
Adjust Meas Time Length for TM	1543
Apply Preset (to All CCs)	1544
Values for Meas Standard	1544
Meas Standard Setting Parameters for Apply Preset	1545
Reference Standard version and ACP & SEM table indicator	1547
Direction = Downlink	1547
Direction = Uplink	1550
Measurement-Global parameters	1550
Configure Component Carriers	1551

Table Of Contents

Trigger/Gate Parameters	1551
ACP	1553
BW Parameters	1553
Trace Detector	1553
Sweep Parameter	1553
Frequency Parameters	1554
Meas Setup: Settings Parameter	1554
Meas Setup: Configure Component Carrier Parameters	1555
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	1557
Outer Offset Preset Case 1	1558
Outer Offset Preset Case 2	1564
Inner Offset Preset Case 1	1568
Inner Offset Preset Case 2	1576
Spectrum Emission Mask	1578
BW Parameter	1579
Offset RAT	1579
Carrier Parameters	1579
Reference Parameter	1580
Configure Component Carrier Parameter	1580
Outer/Inner Offset Parameters	1581
Parameters common to all offsets in both downlink and uplink	1581
Cumulate Mask (Inner Offset only)	1581
Other Offset/Limit Parameters	1582
Downlink, FR1, BS type = 1-C:	1582
Downlink, FR1, BS type = 1-O:	1587
Downlink, FR2, BS type = 2-O:	1596
Uplink, FR1	1600
Uplink, FR2	1601
Spurious Emissions	1603
Downlink, FR1 (BS type = 1-C & 1-O)	1603
Downlink, FR2 (BS type = 2-O)	1605
Uplink, FR1	1608
Uplink, FR2	1610
Modulation Analysis	1612
Configure Component Carriers Channel Profile: Resource Grid	1613
Meas Time: Meas Time parameter values	1614
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	1614
Advanced: Advanced Demod Setup	1615
Transmit On Off Power	1617
Meas Setup: Meas Time parameters for Downlink	1618
Meas Setup: Meas Time parameters for Uplink	1618
Meas Setup: Other Setting parameters	1621
Meas Setup: Limit Parameters	1622
Other parameters	1628
Channel Power	1628
Occupied BW	1629
Monitor Spectrum	1629
IQ Waveform	1629
Power Stat CCDF	1629

3.6.8.5 Advanced	1629
Noise Floor Extension	1630
3.6.8.6 Global	1633
Global Center Freq	1634
Global EMC Std	1634
Extend Low Band	1635
Restore Defaults	1636
3.6.9 Sweep	1636
3.6.9.1 Sweep/Control	1636
Sweep/Measure	1636
Restart	1638
Pause/Resume	1641
Abort (Remote Command Only)	1641
3.6.9.2 Sweep Config	1642
Sweep Type	1642
Sweep Time Rules	1642
3.6.10 Trace	1643
3.6.10.1 Select Trace	1649
3.6.10.2 Trace Control	1649
Trace Type	1650
Clear and Write Restart Averaging Restart Max/Min Hold	1655
View/Blank	1655
3.6.10.3 Math	1658
Math Function	1658
Operand 1 / Operand 2	1664
Offset	1665
Reference	1665
3.6.10.4 Trace Function	1665
From Trace	1666
To Trace	1666
Copy	1666
Exchange	1667
Preset All Traces	1667
Clear All Traces	1667
Multiple Traces for EIRP	1668
3.6.10.5 Advanced	1668
Measure Trace	1668
3.7 Modulation Analysis Measurement	1670
3.7.1 Views	1697
3.7.1.1 Normal	1698
3.7.1.2 Normal 3x3	1698

Table Of Contents

3.7.1.3 In-Band Emission	1699
3.7.1.4 Result Summary	1699
3.7.1.5 CC Summary	1699
3.7.1.6 Decode Summary	1699
3.7.1.7 MISO Summary	1700
3.7.1.8 MIMO Summary	1700
3.7.1.9 Auto Detect Summary	1700
3.7.2 Windows	1700
3.7.2.1 Data	1702
Pre Demod	1704
Raw Main Time	1704
Spectrum	1705
Power vs Time	1705
OBW Spectrum	1705
ACP Spectrum	1705
SEM Spectrum	1705
Transmit On/Off Trace	1706
Demod	1706
IQ Meas Time	1706
IQ Ref	1706
Detected Allocation	1706
RMS Demod Power vs Time	1707
RMS Demod Power vs Spectrum	1707
RE Power 3D	1707
Demod Error	1707
Error Vector Time	1707
Error Vector Spectrum	1707
RMS Error Vector Time	1708
RMS Error Vector Spectrum	1708
In-band Emission	1708
Error Vector 3D	1708
IQ Imbalance	1708
Response	1709
CH Freq Response	1709
Spectrum Flatness	1709
MIMO Condition Number	1709
MIMO H/HW Matrix	1709
Tables	1710
Error Summary	1710
Frame Summary	1710
BWP Summary	1710
CC Summary	1710
User Summary	1711
MIMO Info	1711
Auto Detect Summary	1711

Slot Summary	1711
OBW Results	1711
ACP Results	1711
SEM Results	1712
Transmit On/Off Results	1712
Spectrum Flatness Results	1712
ccEVM Summary	1712
Decode	1712
Decoded Info	1712
Decoded Symbols	1713
Decoded Channels	1713
3.7.2.2 Format	1713
3.7.2.3 Component Carrier	1714
3.7.2.4 BWP/SS Block	1714
3.7.2.5 Input Channel	1715
3.7.2.6 Layer	1715
3.7.3 Amplitude	1715
3.7.3.1 Y Scale	1715
Ref Value	1716
Scale/Div	1716
Ref Position	1717
Auto Scale	1717
Auto Scale at Restart	1717
Horizontal Center	1718
3.7.3.2 Attenuation	1718
Full Range Atten	1720
Mech Atten	1721
Elec Atten	1724
Adjust Atten for Min Clipping	1728
Restart Meas on Adjust Atten	1728
Adjust Atten	1729
Pre-Adjust for Min Clipping	1729
Mech Atten Step	1733
3.7.3.3 Range (Non-attenuator models)	1734
Range	1734
Adjust Range for Min Clipping	1735
Restart Meas on Adjust Range	1735
Pre-Adjust for Min Clipping	1735
Peak-to-Average Ratio	1736
Mixer Lvl Offset	1737
3.7.3.4 Range (Baseband Input models)	1737
Range Auto/Man	1738
I Range	1739
Q Range	1740

Table Of Contents

Q Same as I	1741
3.7.3.5 Signal Path	1742
Presel Center	1742
Preselector Adjust	1743
Internal Preamp	1744
LNA	1746
μ W Path Control	1747
Allow Full Bypass in Auto	1756
Software Preselection	1757
SW Preselection Type	1759
SW Preselection BW	1759
High Freq Prefilter	1760
3.7.4 BW	1761
3.7.5 Display	1762
3.7.5.1 Meas Display	1762
Display Reference BWP/SSB	1762
Combine Trace w/ Same Numerology	1762
CC for All windows	1763
Display SCS Annotation	1763
3D Trace Reset (GUI only)	1763
3D Trace X-Y Plane (GUI only)	1763
3D Trace Z-Y Plane (GUI only)	1763
3D Trace X-Z Plane (GUI only)	1764
3.7.5.2 View	1764
Views	1764
Normal	1765
Normal 3x3	1766
In-Band Emission	1766
Result Summary	1766
CC Summary	1767
Decode Summary	1767
MISO Summary	1767
MIMO Summary	1767
Auto Detect Summary	1768
User View	1768
Restore Layout to Default	1769
Save Layout as New View	1769
Re-Save User View	1769
Rename User View	1770
Delete User View	1770
Delete All User Views	1770
3.7.5.3 Annotation	1771
Graticule	1771
Screen Annotation	1771
Trace Annotation	1772
Control Annotation	1772

Meas Bar	1772
Display Enable (Remote Command Only)	1773
3.7.6 Freq	1774
3.7.6.1 Settings	1774
Carrier Reference Frequency	1775
3.7.7 Marker	1775
3.7.7.1 Select Marker	1775
3.7.7.2 Settings	1776
Marker X	1776
Marker Z	1776
Marker Y	1777
Marker Y Imag	1778
Marker Y Annotation (Remote Query only)	1778
Marker Mode	1778
Delta Marker (Reset Delta)	1779
Marker Settings Diagram	1779
All Markers Off	1779
Couple Markers	1780
3.7.7.3 Peak Search	1780
Marker X	1780
Peak Search	1780
Next Peak (Next Lower Amp)	1781
Next Higher Amplitude	1781
Next Pk Right	1781
Next Pk Left	1782
Minimum Peak	1782
Pk-Pk Search	1782
Marker Delta	1783
3.7.7.4 Properties	1783
Marker X	1783
Relative To	1783
Marker Window	1784
Marker Trace	1785
Marker Settings Diagram	1785
3.7.7.5 Marker Function	1785
Marker X	1785
Marker Function/Interval Function	1785
Band Span/Interval Span	1786
Band Left/Interval Left	1787
Band Right/Interval Right	1787
3.7.7.6 Marker To	1788
Marker X	1788
Mkr -> CF	1789
3.7.8 Meas Setup	1789

Table Of Contents

3.7.8.1 Settings	1789
Component Carrier	1789
Avg Hold Number	1790
Continue Averaging	1790
Averaging On/Off	1791
Averaging Mode	1791
Acquisition Mode	1791
Copy CC To	1792
Copy CC Content	1793
Spur Avoidance (VXT2)	1793
Optimize EVM	1796
EVM Optimization Method	1797
Iterative EVM Optimization Target	1797
Allow Re-Calculation	1798
Restart Meas on Optimize EVM	1798
Auto Couple	1799
Meas Preset	1800
3.7.8.2 Radio	1801
Direction	1801
MIMO	1801
Reference Input Channel	1802
Multi Channel Config	1803
Multi Channel Configuration	1803
Input Port (UXM)	1803
Lock (UXM)	1804
Input Channel IP address	1804
Input Channel Instrument port	1804
Lock	1805
Channel Configuration Information (Remote Query only)	1805
Advanced Acquisition	1805
Number of Component Carriers	1805
Sweep/Measure	1806
Input Channel (GUI Only)	1807
Use Advanced Acquisition Table	1808
Acquisition Mode	1808
Elec Atten	1809
IF Path Auto	1812
Measure Carrier	1813
Mechanical Attenuation	1813
Elec Attenuation	1814
Internal Preamp	1814
LNA	1814
uW Path Control	1815
IF Gain	1815
IF Path	1815
Interfering Signal Present	1816
Freq Offset From Edge	1816
Span	1817

Offset Side	1817
Non-Contiguous Interference Region	1818
Interfering Signal Exclude Range	1818
3.7.8.3 Component Carriers	1819
Number of Component Carriers	1819
Carrier Allocation	1819
Non-Contiguous Break at	1820
Configure Comp Carriers	1820
Configure CCs	1821
Number of Component Carriers	1821
Auto Frequency Offset	1821
Carrier Allocation	1822
Non-Contiguous Break at	1822
Measure Carrier	1822
Sidelink	1823
Bandwidth	1823
Freq Range	1824
Freq Offset	1824
Cell ID Auto	1825
Cell ID Value	1825
Demod Spectrum	1826
ACP Power Integration Bandwidth	1826
SEM Power Integration Bandwidth	1827
N_Grid_Size (Display Only)	1828
Resource Grid	1829
Component Carrier (GUI only)	1829
Bandwidth	1829
Freq Range	1829
Sidelink	1829
Configuration Mode	1830
SCS Enabled	1831
N_grid_start	1832
N_grid_size	1832
k0 (Display Only)	1833
Point A Frequency (Display Only)	1833
LTE Coexistence	1833
Add LTE (GUI only)	1833
Delete LTE	1833
Clear All (GUI only)	1834
Effective LTE Number (Remote Command only)	1834
State	1834
Bandwidth	1835
Carrier Offset to Point A	1835
MBSFN Subframes	1835
Number of CRS Antenna Ports	1836
v-shift	1836
Advanced Acquisition	1837
Number of Component Carriers	1837
Sweep/Measure	1837

Table Of Contents

Input Channel (GUI Only)	1839
Use Advanced Acquisition Table	1839
Acquisition Mode	1839
Elec Atten	1840
IF Path Auto	1843
Mechanical Attenuation	1844
Elec Attenuation	1844
Internal Preamp	1845
LNA	1845
uW Path Control	1845
IF Gain	1846
IF Path	1846
3.7.8.4 Meas Time	1847
Search Length	1847
Result Length	1847
Meas Interval Subframe	1848
Meas Interval Slot	1848
Meas Interval Symbol	1849
Meas Offset Subframe	1849
Meas Offset Slot	1849
Meas Offset Symbol	1850
Analysis Start Boundary	1850
Frame/Subframe/Slot Trigger	1851
Analysis Subframe/Slot Offset	1851
Capture Time Diagram	1851
3.7.8.5 Meas Standard	1852
Bandwidth	1852
Frequency Range	1852
Duplex Mode	1854
TDD / User Def. Configuration	1854
Duplex Mode	1854
DL FR1 NR-TM Reference Standard Selection	1855
Transmission Periodicity	1855
Number of Downlink Slots	1855
Number of Downlink Symbols	1856
Number of Uplink Slots	1856
Number of Uplink Symbols	1857
Number of Special Slots (Remote Query Only)	1857
TDD Slot Allocation(Remote Query Only)	1857
Ignore Duplex Mode for Fulfilled RB Alloc	1858
SCS	1858
RB Alloc Preset	1859
Advanced Preset Parameters	1862
Uplink Carrier Mode	1862
DL FR1 NR-TM Reference Standard Selection	1862
OFDM Type	1863
Adjust Limit Mask for Freq Range	1863
BS Type	1865

BS Category	1866
Assumed Adjacent Channels	1867
Uplink Channel Type	1867
Apply Preset (to All CCs)	1868
More Advanced Preset Parameters	1868
Include RB Alloc Preset for Mod Analysis	1868
Include Gate Source	1869
Include Periodic Timer Period	1869
Include Periodic Timer Sync Source	1869
Include Periodic Timer Sync Holdoff	1870
Ignore Duplex Mode for Fulfilled RB Alloc	1870
Adjust Meas Time Length for TM	1870
Apply Preset (to All CCs)	1871
Values for Meas Standard	1872
Meas Standard Setting Parameters for Apply Preset	1872
Reference Standard version and ACP & SEM table indicator	1874
Direction = Downlink	1874
Direction = Uplink	1877
Measurement-Global parameters	1878
Configure Component Carriers	1878
Trigger/Gate Parameters	1878
ACP	1880
BW Parameters	1880
Trace Detector	1880
Sweep Parameter	1881
Frequency Parameters	1881
Meas Setup: Settings Parameter	1881
Meas Setup: Configure Component Carrier Parameters	1882
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	1884
Outer Offset Preset Case 1	1885
Outer Offset Preset Case 2	1891
Inner Offset Preset Case 1	1895
Inner Offset Preset Case 2	1903
Spectrum Emission Mask	1905
BW Parameter	1906
Offset RAT	1906
Carrier Parameters	1906
Reference Parameter	1907
Configure Component Carrier Parameter	1907
Outer/Inner Offset Parameters	1908
Parameters common to all offsets in both downlink and uplink	1908
Cumulate Mask (Inner Offset only)	1908
Other Offset/Limit Parameters	1908
Downlink, FR1, BS type = 1-C:	1908
Downlink, FR1, BS type = 1-O:	1914
Downlink, FR2, BS type = 2-O:	1923
Uplink, FR1	1926
Uplink, FR2	1928
Spurious Emissions	1929

Table Of Contents

Downlink, FR1 (BS type = 1-C & 1-O)	1930
Downlink, FR2 (BS type = 2-O)	1932
Uplink, FR1	1934
Uplink, FR2	1937
Modulation Analysis	1939
Configure Component Carriers Channel Profile: Resource Grid	1939
Meas Time: Meas Time parameter values	1940
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	1941
Advanced: Advanced Demod Setup	1942
Transmit On Off Power	1944
Meas Setup: Meas Time parameters for Downlink	1944
Meas Setup: Meas Time parameters for Uplink	1945
Meas Setup: Other Setting parameters	1948
Meas Setup: Limit Parameters	1949
Other parameters	1955
Channel Power	1955
Occupied BW	1956
Monitor Spectrum	1956
IQ Waveform	1956
Power Stat CCDF	1956
3.7.8.6 Channel Profile	1956
SSB Auto Detect	1957
PDCCH Auto Detect	1957
PDSCH Auto Detect	1958
PUSCH Auto Detect	1959
PRACH Occasion Auto Detect	1959
Copy Auto -> Manual	1960
Control and User Channels	1960
SS Block (Downlink)	1960
Resource Map Diagram	1960
Subcarrier Start (GUI Only)	1960
Subcarrier Stop (GUI Only)	1961
Symbol Start (GUI Only)	1962
Symbol Stop (GUI Only)	1962
Auto Zoom (GUI Only)	1963
Reset (GUI Only)	1963
Add SS Block (GUI only)	1963
Delete SS Block	1963
Clear All (GUI only)	1963
SS Block Frame Sync	1963
Effective SSB Number (Remote Command only)	1964
SS Block DL Parameter Group (Display only)	1964
State	1965
SCS	1965
Half Frame Index	1966
Block Pattern	1966
Block Pattern Symbol Start Sets (Remote Command only)	1967
Periodicity	1967
Lmax	1968

Active Indices	1968
RB Offset	1969
kSSB	1969
SCS Common	1970
P-SS Power Boosting	1970
PBCH Power Boosting	1971
S-SS Block (Sidelink)	1971
Add S-SS Block (GUI only)	1971
Delete S-SS Block	1971
Clear All (GUI only)	1972
Effective S-SSB Number (Remote Command only)	1972
State	1972
SCS	1973
Periodicity (Display only)	1973
Number per Period	1973
RB Offset	1973
Slot Offset	1974
Slot Interval	1974
S-SSB Power Boosting	1975
BWP (Downlink)	1975
Resource Map Diagram	1975
Add BWP (GUI only)	1975
Delete BWP	1976
Effective BWP Number (Remote Command only)	1976
BWP DL Parameter Group (Display only)	1976
State	1977
SCS	1977
Cyclic Prefix	1977
N_BWP_start (RB Offset)	1978
N_BWP_size (RB Number)	1978
Max RB Number (Display Only)	1979
CORESET Number	1979
CORESET ID	1979
CORESET RB Offset	1980
CORESET RB Number	1980
Allocated RBGs (6RBs)	1980
CORESET Symbol Number	1981
CORESET CCE to REG Mapping Type	1981
CORESET REG Bundle Size	1981
CORESET Interleave Size	1982
CORESET Shift Index	1982
BWP (Uplink)	1983
Add BWP (GUI only)	1983
Delete UL BWP	1983
Effective BWP Number (Remote Command only)	1983
State	1984
SCS	1984
Cyclic Prefix	1984
N_BWP_start (RB Offset)	1985

Table Of Contents

N_BWP_size (RB Number)	1985
Max RB Number (Display Only)	1985
BWP (Sidelink)	1985
Add BWP (GUI only)	1985
Delete BWP	1986
Effective BWP Number (Remote Command only)	1986
State	1986
SCS	1987
Cyclic Prefix	1987
N_BWP_start (RB Offset)	1987
N_BWP_size (RB Number)	1988
Max RB Number (Display Only)	1988
PDCCH	1988
Add PDCCH (GUI only)	1988
Delete PDCCH	1988
Clear All (GUI only)	1989
Effective PDCCH Number (Remote Command only)	1989
PDCCH Parameter Group (Display only)	1989
State	1990
RNTI	1990
RNTI Type	1991
BWP	1991
CORESET	1992
CORESET Index (Remote Command only)	1992
Allocated Slots	1993
Periodicity	1993
First Symbol	1993
Antenna Port	1994
Antenna Port Detection Threshold	1994
Power Boosting	1995
Search Space	1995
Aggregation Level	1995
Num Of Candidates	1996
Candidate Index	1996
PDCCH CCE Offset	1997
DCI Size	1998
DMRS Scrambling ID	1998
DMRS Power Boosting	1998
Num Of Candidates (Aggregation Level 1)	1999
Num Of Candidates (Aggregation Level 2)	1999
Num Of Candidates (Aggregation Level 4)	2000
Num Of Candidates (Aggregation Level 8)	2000
Num Of Candidates (Aggregation Level 16)	2000
PDSCH	2001
Resource Map Diagram	2001
Add PDSCH (GUI only)	2001
Delete PDSCH	2001
Clear All (GUI only)	2001
Effective PDSCH Number (Remote Command only)	2002

PDSCH Parameter Group (Display only)	2002
State	2004
RNTI	2004
n_ID	2005
MCS Table	2005
MCS	2006
Modulation	2006
RV Index	2012
TB Scaling Factor S	2012
TB Size (Display Only)	2012
Rate Match Coreset	2012
Precoder Group Size	2013
User Define Size	2013
BWP	2014
RA Type	2014
RBG Size	2014
Allocated RBGs	2015
RB Offset	2015
RB Number	2016
VRB to PRB Mapping	2016
VRB to PRB Mapping CORESET	2017
VRB to PRB Interleaver	2017
Allocated Slots	2017
Slot Format	2018
First Symbol	2018
Last Symbol	2018
Periodicity	2019
DMRS Configuration	2019
PDSCH Mapping	2020
DMRS-typeA-pos	2020
DMRS Max Len	2020
Front-load Symbols	2021
DMRS-add-pos	2021
n_SCID	2022
DMRSdownlink-r16	2022
N_ID_0	2022
N_ID_1	2023
N_ID_nSCID (SCPI only)	2023
DMRS Mapping Reference	2024
Antenna Port/Reference Antenna Port	2024
Antenna Port Detection Threshold	2024
Antenna Port Index	2025
DMRS Port (Display Only)	2030
Codewords Number	2030
DMRS CDM group w.o. data	2030
DMRS-DL-Alt	2031
PTRS Enable	2031
PTRS K	2032
PTRS L	2032

Table Of Contents

PTRS RE Offset	2032
PDSCH Power Boosting	2033
DMRS Power Boosting	2033
PTRS Power Boosting	2034
Precoder Matrix (Downlink)	2034
Reset Selected (GUI only)	2034
Reset All (GUI only)	2034
Reset Matrix (Remote Command only)	2034
PDSCH (GUI only)	2035
Rate Matching Pattern (Downlink)	2036
Add Rate Matching Pattern (GUI only)	2036
Delete Rate Matching Pattern	2036
Clear All (GUI only)	2036
Effective Rate Matching Pattern (Remote Command only)	2036
PDSCH (GUI only)	2037
CSI-RS	2040
Resource Map Diagram	2040
Add CSI-RS (GUI only)	2040
Delete CSI-RS	2040
Clear All (GUI only)	2040
Effective CSI-RS Number (Remote Command only)	2041
CSI-RS Parameter Group (Display only)	2041
State	2042
Zero Power	2042
n_ID	2042
Power Boosting	2043
BWP	2043
RB Offset	2043
RB Number	2044
Allocated Slots	2044
First Symbol	2045
First Symbol 2	2045
Freq Domain Bitmap	2045
Resource Element used for PDSCH	2046
Location Table Index	2047
Number of Antenna Ports	2048
Antenna Port	2049
Antenna Port Detection Threshold	2049
CDM Type (Display Only)	2049
Density	2050
RIM-RS	2050
Add RIM-RS (GUI only)	2050
Delete RIM-RS	2050
Clear All (GUI only)	2050
Effective RIM-RS Number (Remote Command only)	2051
RIM-RS Parameter Group (Display only)	2051
State	2051
Power Boosting	2052
BWP	2052

Allocated Slots	2053
RB Offset	2053
RB Number	2053
First Symbol	2054
n_SCID	2054
Sequence Generation Transmission Periods (n_t_RIM)	2055
Sequence Generation Multiple Factor	2055
Sequence Generation Offset	2055
PUCCH	2056
Resource Map Diagram	2056
Add PUCCH (GUI only)	2056
Delete PUCCH	2056
Clear All (GUI only)	2056
Effective PUCCH Number (Remote Command only)	2057
PUCCH Parameter Group (Display only)	2057
State	2058
Format	2058
BWP	2059
Interlaced Transmission	2059
RB Set Index	2059
Interlace0	2060
Interlace1	2060
Multiplex	2061
n_RNTI	2061
RB Offset	2062
RB Number	2062
Second hop RB Offset	2062
Allocated Slots	2063
First Symbol	2063
Last Symbol	2064
Antenna Port	2064
Power Boosting	2065
Modulation	2065
Initial Cyclic Shift (m0)	2065
Cyclic Shift MCS	2066
Group Hopping	2067
Hopping ID	2067
OCC Index	2068
OCC Length	2068
PUCCH UCI Size	2069
Intra-Slot Frequency Hopping	2069
Additional DMRS	2070
Scrambling ID	2070
N_ID_0	2070
DMRSuplinkTPPUCCH-r16	2071
DMRS Power Boosting	2071
PUSCH	2072
Resource Map Diagram	2072
Add PUSCH (GUI only)	2072

Table Of Contents

Delete PUSCH	2072
Clear All (GUI only)	2072
Effective PUSCH Number(Remote Command only)	2072
PUSCH Parameter Group (Display only)	2073
State	2074
RNTI	2075
n_ID	2075
Transform Precoding	2076
MCS Table	2076
MCS	2077
Modulation	2077
RV Index	2078
TB Size (Display Only)	2078
Precoder Group Size	2078
User Define Size	2079
BWP	2079
RA Type	2079
RBG Size	2080
Allocated RBGs	2080
RB Offset	2081
RB Number	2081
Allocated Slots	2082
Slot Format	2082
First Symbol	2082
Last Symbol	2083
DMRS Config	2083
PUSCH Mapping	2083
DMRS-typeA-pos	2084
DMRS Max Len	2084
Front-load Symbols	2085
DMRS-add-pos	2085
DMRS Sequence Hopping	2086
DMRS Group Hopping	2086
n_ID_PUSCH	2086
nSCID	2087
N_ID_nSCID (SCPI only)	2087
DMRSuplink-r16/DMRSuplinkTP-r16	2088
N_ID_0	2088
N_ID_1	2089
n_RAPID	2089
Antenna Port/Reference Antenna Port	2090
Antenna Port Detection Threshold	2090
PTRS Port	2090
Antenna Port Index	2091
DMRS Port (Display Only)	2098
Rank	2098
DMRS CDM groups w.o. data	2098
PTRS Enable	2099
PTRS K	2099

PTRS L	2099
PTRS RE Offset	2100
PTRS N_ID	2100
N_samp_group (Number of samples per PT-RS group)	2101
N_group_PTRS (Number of PT-RS groups)	2101
PUSCH Power Boosting	2101
DMRS Power Boosting	2102
PTRS Power Boosting	2102
Precoder Matrix (Uplink)	2103
Reset Selected (GUI only)	2103
Reset All (GUI only)	2103
Reset Matrix (Remote Command only)	2103
PUSCH (GUI only)	2103
Rate Matching Pattern (Uplink)	2104
Add Rate Matching Pattern (GUI only)	2104
Delete Rate Matching Pattern	2104
Clear All (GUI only)	2105
Effective Rate Matching Pattern (Remote Command only)	2105
PUSCH (GUI only)	2105
SRS	2109
Resource Map Diagram	2109
Add SRS (GUI only)	2109
Delete SRS	2109
SRS Parameter Group (Display only)	2109
State	2110
Number of Antenna Ports	2110
Antenna Port	2111
Power	2111
BWP	2111
Allocated Slots	2112
Symbol Start (Remote Command only)	2112
Start Position	2112
Number of Symbols	2113
Repetition Factor (R)	2113
Transmission Comb Number (K_TC)	2114
Transmission Comb Offset (k_TC)	2114
SRS Bandwidth Index (B_SRS)	2114
SRS Bandwidth Index (C_SRS)	2115
Frequency Hopping (b_hop)	2115
Frequency Domain Shift (n_shift)	2116
Frequency Domain Position (n_RRC)	2116
Frequency Hopping Mode	2116
Cyclic Shift Config (n_SRS_cs)	2117
Sequence Identity (n_ID_SRS)	2117
Start RB Hopping State	2117
Frequency Scaling Factor (P_F)	2118
Start RB Index (K_F)	2118
PRACH	2118
Resource Map Diagram	2119

Table Of Contents

Add PRACH (GUI only)	2119
Delete PRACH	2119
Effective PRACH Number(Remote Command only)	2119
PRACH Parameter Group (Display only)	2120
State	2120
Config Index	2121
Spectrum Type	2121
Format (Display Only)	2121
SCS	2156
Active BWP	2157
Restricted Set Config	2157
Msg1 FDM	2157
Power	2158
Cyclic Shift Index	2158
Root Sequence Index	2159
Zero Correlation Zone Config	2159
n_RA_start	2160
Occasion Index	2160
Frame Offset	2160
Subframe Index (Display Only)	2161
n_RA_t (Display Only)	2161
n_RA_slot (Display Only)	2161
n_RA_f (Display Only)	2161
L_RA	2161
PSCCH (Sidelink)	2162
Add PSCCH (GUI only)	2162
Delete PSCCH	2162
Clear All (GUI only)	2162
Effective PSCCH Number (Remote Command only)	2162
PSCCH Parameter Group (Display only)	2163
State	2163
BWP	2164
Allocated Slots	2164
First Symbol	2164
Number of Symbols	2165
RB Offset	2165
RB Number	2166
PSCCH Power Boosting	2166
DMRS Power Boosting	2166
DMRS Scrambling ID	2167
DMRS Parameter i	2167
Payload Size	2168
PSSCH (Sidelink)	2168
Add PSSCH (GUI only)	2168
Delete PSSCH	2168
Clear All (GUI only)	2168
Effective PSSCH Number (Remote Command only)	2169
PSSCH Parameter Group (Display only)	2169
State	2170

BWP	2170
PSCCH Duration	2171
n_ID	2171
Antenna Port	2172
PSSCH Power Boosting	2172
RB Offset	2172
RB Number	2173
Allocated Slots	2173
First Symbol	2174
Last Symbol	2174
MCS Table	2174
MCS	2175
Modulation (Display Only)	2175
DMRS Symbol Number (Remote Command only)	2175
DMRS Power Boosting	2176
PTRS Enable	2176
PTRS Power Boosting	2176
PTRS K	2177
PTRS L	2177
PTRS RE Offset	2178
SCI2 State	2178
SCI2 Scaling	2178
SCI2 Beta Offset Index	2179
SCI2 Payload Size	2179
xOverhead	2180
DMRS Time Pattern List	2180
Number of DMRS Symbols	2180
Summary (Downlink)	2181
Include All (GUI only)	2181
Exclude All (GUI only)	2181
Include PSS	2181
Include SSS	2181
Include PBCH	2182
Include PBCH DMRS	2182
Include PDCCH	2182
Include PDCCH DMRS	2183
Include PDSCH	2183
Include PDSCH DMRS	2183
Include PDSCH PTRS	2184
Include CSI-RS	2184
Include RIM-RS	2184
Edit Colors (GUI only)	2185
Reset (GUI Only)	2185
Summary (Uplink)	2185
Include All (GUI only)	2185
Exclude All (GUI only)	2185
Include PUCCH	2185
Include PUCCH DMRS	2186
Include PUSCH	2186

Table Of Contents

Include PUSCH DMRS	2186
Include SRS	2187
Edit Colors (GUI only)	2187
Reset (GUI only)	2187
Summary (Sidelink)	2187
Include All (GUI only)	2187
Exclude All (GUI only)	2187
Include S-PSS	2188
Include S-SSS	2188
Include PSBCH	2188
Include PSBCH DMRS	2189
Include PSCCH	2189
Include PSCCH DMRS	2189
Include PSSCH	2190
Include PSSCH DMRS	2190
Include PSSCH PTRS	2190
Edit Colors (GUI only)	2191
Reset (GUI only)	2191
3.7.8.7 Advanced	2191
IF Gain	2191
Other IF Gain	2192
LO Dither	2192
Phase Noise Optimization	2193
Mixing Mode	2198
Spur Avoidance (UXA H1G)	2199
Spectrum Stitching	2200
Advanced Demod Setup	2200
General	2200
Component Carrier (Display Only)	2201
Sync Mode	2201
Sync Source	2201
Sync Source Index	2201
Multi-Carrier Filter	2202
Extended Frequency Lock Range	2202
DC Punctured	2203
DC offset from CC center	2203
RF for Phase Compensation	2204
Channel Power Threshold	2205
Report EVM in DB	2205
Time Scale Factor	2205
Reference IQ Data	2206
PDSCH Reference Data	2206
Signal Repeat Pattern	2207
High Phase Noise Mode	2207
Phase Continues across Slots	2208
Magnitude & Phase Error Calculation	2208
IQ Imbalance Calculation	2208
IQ Imbalance Mode Calculation	2209
TAE Calculation Mode	2209

Symbol Clock Error Compensation	2209
IQ Imbalance Compensation	2210
EVM	2210
Component Carrier (Display Only)	2210
3GPP Conformance Test	2210
3GPP Pre FFT Minimization	2211
Tracking Mode	2211
Track Amplitude	2212
Track Phase	2212
Track Timing	2212
Equalizer Trainings	2213
EQ Time Basis	2213
EQ Freq Moving Avg Filter	2213
EVM Window	2214
EVM Window Length (Custom)	2215
Symbol Time Adjust	2215
% FFT Size	2216
IQ Offset Compensation	2216
Transient Capability	2216
Transient Period Power Change Threshold	2217
UL Flatness & IBE	2217
Component Carrier (Display Only)	2217
Channel Condition	2217
F_UL_Low	2218
F_UL_High	2218
Spectrum Flatness Test Tolerance	2218
UE Power Class	2219
UE Output Power	2219
In-Band Emission Test Tolerance	2220
IQ Image RBs & Carrier Leakage RBs	2220
IBE Limit Threshold from PRB	2220
Apply threshold from PRB to All Limit	2221
Apply threshold from PRB to General Limit	2221
Apply threshold from PRB to IQ Image Limit	2222
Apply threshold from PRB to Carrier Leakage Limit	2222
Cross Carrier	2222
TAE Reference CC	2223
Power Reference CC	2223
MIMO	2223
Condition Number Calculation	2223
RB Granularity	2224
Cross-Corelated EVM	2224
Multi Channel Config	2224
Multi Channel Configuration	2225
Input Port (UXM)	2225
Lock (UXM)	2226
Input Channel IP address	2226
Input Channel TCP port (Remote Command only)	2226
Lock	2227

Table Of Contents

Channel Configuration Information (Remote Query only)	2227
Advanced Acquisition	2227
3.7.8.8 Decode	2227
PBCH Bits	2228
PDCCH Bits	2228
PDSCH Bits	2229
PUCCH Bits	2230
PUSCH Bits	2230
PSSCH Bits	2231
PSCCH Bits	2232
Decode Iteration	2232
3.7.8.9 Power Meas	2233
OBW State	2233
ACP State	2233
SEM State	2233
Transmit On Off Power State	2234
MIMO Calculation Mode	2234
OBW Setup	2234
OBW State	2234
Points	2235
% of OBW Power	2235
Power Integration Method	2236
Limit Test	2236
ACP Setup	2237
General	2237
ACP State	2237
Reference Carrier (Carrier Index)	2237
Measurement Type	2240
Power Ref	2240
Total Power Ref	2244
PSD Ref	2245
PSD Unit	2247
Power Results	2248
Points	2248
Noise Correction	2249
Offset	2250
Offset Frequency Define	2250
Offset Freq	2253
Integ BW	2255
Offset Side	2256
Method	2257
Filter Alpha	2258
Limits	2258
Limit Test	2258
Offset Freq	2259
Abs Limit	2261
Rel Limit (Car)	2262
Rel Limit (PSD)	2263

Fail Mask	2264
Inner Offset	2265
Offset Frequency Define	2265
Offset Freq	2267
Integ BW	2269
Offset Side	2269
Method	2270
Filter Alpha	2271
Power Ref Type	2271
Inner Limits	2273
Limit Test	2273
Offset Freq	2273
Abs Limit	2275
Rel Limit (Car)	2275
Rel Limit (PSD)	2276
Fail Mask	2277
SEM Setup	2278
General	2278
SEM State	2278
Measurement Type	2278
Power Ref	2279
Carrier Index	2285
Total Power Ref	2285
PSD Ref	2286
Spectrum Pk Ref	2286
Points	2287
Non-Contiguous Meas Region	2287
Meas Method	2288
RRC Filter Alpha	2288
Result Table	2289
Offset	2289
Offset Freq Define	2289
Start Freq	2293
Stop Freq	2297
Res BW	2300
Meas BW	2302
Offset Side	2303
Limits	2304
Start Freq	2304
Stop Freq	2308
Abs Start	2311
Abs Stop	2313
Rel Start	2317
Rel Stop	2319
Fail Mask	2321
Show Abs2 Limit	2323
Abs2 Start	2323
Abs2 Stop	2324
Fail Mask2	2325

Table Of Contents

Inner Offset	2326
Offset Freq Define	2326
Cumulate Mask	2329
Cumulate Mask Stop Frequency	2330
Start Freq	2330
Stop Freq	2331
Res BW	2332
Meas BW	2333
Offset Side	2334
Inner Limits	2335
Start Freq	2335
Stop Freq	2336
Abs Start	2337
Abs Stop	2338
Rel Start	2339
Rel Stop	2340
Fail Mask	2341
Show Abs2 Limit	2342
Abs2 Start	2342
Abs2 Stop	2342
Fail Mask2	2343
Transmit On Off Power Setup	2344
Transmit On Off Power State	2344
Burst Repetition Period	2344
Meas Range	2345
Specific Burst Number	2346
Auto Timing Adjustment	2347
Measure CC	2347
UL Off Power Length	2348
Max Ramp Down Time	2348
Max Ramp Up Time	2349
Downlink Transient Period	2349
Downlink Off Power	2350
Uplink Off Power	2350
Uplink On Power Reference	2350
Uplink On Power Tolerance	2351
Uplink On Power Limit Test	2351
Burst Line	2352
Burst Timing Indicator Line	2352
Ramp Line	2353
Bar Graph	2353
Noise Correction	2353
MIMO Calculation Mode	2354
3.7.9 Sweep	2354
3.7.9.1 Sweep/Control	2354
Sweep/Measure	2354
Restart	2356
Pause/Resume	2359

Abort (Remote Command Only)	2359
3.7.9.2 X Scale	2360
Width	2360
Ref Value	2360
Ref Position	2361
Auto Scaling	2361
Time Unit	2362
Time Unit (Remote Command only)	2362
Frequency Unit	2363
Frequency Unit (Remote Command only)	2364
Ref Numerology	2364
3.7.9.3 Z Scale	2365
Width	2365
Ref Value	2365
Ref Position	2366
Auto Scaling	2366
Frequency Unit	2367
3.7.9.4 Recording	2367
Recording+State Mode	2368
3.7.9.5 Playback	2369
Playback Mode	2370
Playback Start	2370
Playback Stop	2371
Step Forward	2372
Sample Rate	2372
3.7.10 Trace	2373
3.7.10.1 Trace Control	2373
All (combined) Limit	2373
General Limit	2373
IQ Image Limit	2374
Carrier Leakage Limit	2374
3.8 Transmit On Off Power	2375
3.8.1 Views	2381
3.8.1.1 Burst	2382
3.8.1.2 Rise & Fall	2382
3.8.2 Windows	2382
3.8.2.1 RF Envelope	2382
3.8.2.2 Rise	2383
3.8.2.3 Fall	2383
3.8.2.4 Metrics	2383
3.8.2.5 Multiburst Results	2385

Table Of Contents

3.8.3 Amplitude	2386
3.8.3.1 Y Scale	2386
Ref Value	2386
Scale/Div	2387
Ref Position	2388
Auto Scaling	2389
3.8.3.2 Attenuation	2389
Full Range Atten	2391
Mech Atten	2392
Elec Atten	2395
Adjust Atten for Min Clipping	2399
Restart Meas on Adjust Atten	2399
Adjust Atten	2400
Pre-Adjust for Min Clipping	2400
Mech Atten Step	2404
3.8.3.3 Range (Non-attenuator models)	2405
Range	2405
Adjust Range for Min Clipping	2406
Restart Meas on Adjust Range	2406
Pre-Adjust for Min Clipping	2406
Peak-to-Average Ratio	2407
Mixer Lvl Offset	2408
3.8.3.4 Signal Path	2408
Presel Center	2408
Preselector Adjust	2410
Internal Preamp	2411
LNA	2412
μ W Path Control	2414
Allow Full Bypass in Auto	2423
Software Preselection	2424
SW Preselection Type	2425
SW Preselection BW	2426
High Freq Prefilter	2427
3.8.4 BW	2428
3.8.4.1 Settings	2428
Info BW	2428
3.8.5 Display	2429
3.8.5.1 Meas Display	2429
Trigger Line	2429
Burst Line	2430
Burst Timing Indicator Line	2430
Ramp Line	2431
Bar Graph	2431
70/N us RMS Trace	2431

3.8.5.2 View	2432
Views	2432
Burst	2432
Rise & Fall	2432
User View	2433
Restore Layout to Default	2433
Save Layout as New View	2434
Re-Save User View	2434
Rename User View	2434
Delete User View	2435
Delete All User Views	2435
3.8.5.3 Annotation	2435
Graticule	2435
Screen Annotation	2436
Trace Annotation	2436
Control Annotation	2437
Meas Bar	2437
Display Enable (Remote Command Only)	2437
3.8.6 Frequency	2439
3.8.6.1 Settings	2439
Carrier Reference Frequency	2439
3.8.7 Marker	2440
3.8.7.1 Select Marker	2440
3.8.7.2 Settings	2440
Marker Time	2441
Marker Mode	2443
Delta Marker (Reset Delta)	2444
Marker Settings Diagram	2444
All Markers Off	2444
Couple Markers	2445
3.8.7.3 Peak Search	2446
Marker Time	2446
Peak Search	2446
Marker Delta	2447
3.8.7.4 Properties	2447
Marker Time	2447
Relative To	2447
Marker Trace	2448
Marker Settings Diagram	2448
3.8.8 Meas Setup	2448
3.8.8.1 Settings	2449
Average Hold Number	2449
Continue Averaging	2449
Terminal Count (Remote Command Only)	2450

Table Of Contents

Averaging Mode	2450
Average Type	2451
Subcarrier Spacing (SCS)	2451
Auto Timing Adjustment	2452
Spur Avoidance	2453
Meas Setup Summary Table	2453
Meas Preset	2453
Ignore Burst Found (Remote Command Only)	2454
3.8.8.2 Radio	2454
Direction	2454
Multi Channel Synchronous Acquisition (UXM Only)	2455
Multi Channel Config	2455
Multi Channel Configuration	2455
Multi Channel Synchronous Acquisition (UXM Only)	2456
Input Port (UXM)	2456
Lock (UXM)	2456
Trace Settings Table	2457
Multi Channel Synchronous Acquisition (UXM Only)	2457
Measure Trace	2457
Channel Assignment	2458
Input Port	2458
EIRP (Synchronous Acquisition) (UXM Only)	2459
Restore Defaults (UXM Only)	2459
3.8.8.3 Component Carriers	2460
Number of Component Carriers	2460
Carrier Allocation	2460
Non-Contiguous Break at	2461
Configure Comp Carriers	2461
Configure CCs	2461
Number of Component Carriers	2462
Auto Frequency Offset	2462
Carrier Allocation	2463
Non-Contiguous Break at	2463
Measure Carrier	2463
Sidelink	2464
Bandwidth	2464
Freq Range	2465
Freq Offset	2465
Cell ID Auto	2466
Cell ID Value	2466
Demod Spectrum	2467
CHP Power Integration Bandwidth	2467
ACP Power Integration Bandwidth	2467
SEM Power Integration Bandwidth	2469
SCS (Power Meas)	2469
Measure CC	2469
3.8.8.4 Meas Standard	2470
Bandwidth	2470

Frequency Range	2471
Duplex Mode	2472
TDD / User Def. Configuration	2473
Duplex Mode	2473
DL FR1 NR-TM Reference Standard Selection	2473
Transmission Periodicity	2473
Number of Downlink Slots	2474
Number of Downlink Symbols	2474
Number of Uplink Slots	2475
Number of Uplink Symbols	2475
Number of Special Slots (Remote Query Only)	2475
TDD Slot Allocation(Remote Query Only)	2476
Ignore Duplex Mode for Fulfilled RB Alloc	2476
SCS	2476
RB Alloc Preset	2477
Advanced Preset Parameters	2480
Uplink Carrier Mode	2480
DL FR1 NR-TM Reference Standard Selection	2481
OFDM Type	2481
Adjust Limit Mask for Freq Range	2482
BS Type	2483
BS Category	2484
Assumed Adjacent Channels	2485
Uplink Channel Type	2486
Apply Preset (to All CCs)	2487
More Advanced Preset Parameters	2487
Include RB Alloc Preset for Mod Analysis	2487
Include Gate Source	2487
Include Periodic Timer Period	2488
Include Periodic Timer Sync Source	2488
Include Periodic Timer Sync Holdoff	2488
Ignore Duplex Mode for Fulfilled RB Alloc	2489
Adjust Meas Time Length for TM	2489
Apply Preset (to All CCs)	2490
Values for Meas Standard	2490
Meas Standard Setting Parameters for Apply Preset	2491
Reference Standard version and ACP & SEM table indicator	2493
Direction = Downlink	2493
Direction = Uplink	2496
Measurement-Global parameters	2496
Configure Component Carriers	2497
Trigger/Gate Parameters	2497
ACP	2499
BW Parameters	2499
Trace Detector	2499
Sweep Parameter	2499
Frequency Parameters	2500
Meas Setup: Settings Parameter	2500
Meas Setup: Configure Component Carrier Parameters	2501

Table Of Contents

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	2503
Outer Offset Preset Case 1	2504
Outer Offset Preset Case 2	2510
Inner Offset Preset Case 1	2514
Inner Offset Preset Case 2	2522
Spectrum Emission Mask	2524
BW Parameter	2525
Offset RAT	2525
Carrier Parameters	2525
Reference Parameter	2526
Configure Component Carrier Parameter	2526
Outer/Inner Offset Parameters	2527
Parameters common to all offsets in both downlink and uplink	2527
Cumulate Mask (Inner Offset only)	2527
Other Offset/Limit Parameters	2528
Downlink, FR1, BS type = 1-C:	2528
Downlink, FR1, BS type = 1-O:	2533
Downlink, FR2, BS type = 2-O:	2542
Uplink, FR1	2546
Uplink, FR2	2547
Spurious Emissions	2549
Downlink, FR1 (BS type = 1-C & 1-O)	2549
Downlink, FR2 (BS type = 2-O)	2551
Uplink, FR1	2554
Uplink, FR2	2556
Modulation Analysis	2558
Configure Component Carriers Channel Profile: Resource Grid	2559
Meas Time: Meas Time parameter values	2560
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	2560
Advanced: Advanced Demod Setup	2561
Transmit On Off Power	2563
Meas Setup: Meas Time parameters for Downlink	2564
Meas Setup: Meas Time parameters for Uplink	2564
Meas Setup: Other Setting parameters	2567
Meas Setup: Limit Parameters	2568
Other parameters	2574
Channel Power	2574
Occupied BW	2575
Monitor Spectrum	2575
IQ Waveform	2575
Power Stat CCDF	2575
3.8.8.5 Meas Time	2575
Burst Time	2576
Burst Repetition Period	2576
UL Off Power Length	2576
DL Meas Offset	2577
UL Meas Offset	2577
DL Meas Interval	2578
UL Meas Interval	2578

Meas Range	2579
Specific Burst Number	2580
3.8.8.6 Limits	2581
Max Ramp Up Time	2581
Max Ramp Down Time	2582
Downlink Transient Period	2582
Downlink Off Power	2583
Uplink Off Power	2583
Uplink On Power Reference	2583
Uplink On Power Tolerance	2584
Uplink On Power Limit Test	2584
3.8.8.7 Threshold	2585
Ramp Up Start Level	2585
Ramp Up End Level	2585
Ramp Down Start Level	2586
Ramp Down End Level	2586
3.8.8.8 Advanced	2586
Noise Floor Extension	2586
Noise Correction	2587
Ramp Time Length	2587
Off Power Meas Rules	2588
IF Gain	2588
3.8.8.9 Global	2589
Global Center Freq	2590
Extend Low Band	2590
Restore Defaults	2591
3.8.9 Sweep	2591
3.8.9.1 Sweep/Control	2591
Sweep/Measure	2591
Restart	2593
Pause/Resume	2596
Abort (Remote Command Only)	2596
3.8.9.2 X Scale	2597
Ref Value	2597
Scale/Div	2598
Ref Position	2598
Auto Scaling	2599
3.8.10 Trace	2600
3.8.10.1 Select Trace	2600
3.8.10.2 Trace Control	2600
Trace Type	2601
Clear and Write Restart Averaging Restart Max/Min Hold	2602
View/Blank	2602

Table Of Contents

3.8.10.3 Math	2604
Math Function	2604
Operand 1 / Operand 2	2610
Offset	2611
Reference	2611
3.8.10.4 Trace Function	2611
From Trace	2612
To Trace	2612
Copy	2612
Exchange	2613
Preset All Traces	2613
Clear All Traces	2613
Multiple Traces for EIRP	2614
3.8.10.5 Advanced	2614
Measure Trace	2614
3.9 Power Stat CCDF Measurement	2616
3.9.1 Views	2618
3.9.1.1 Normal	2619
3.9.1.2 Slot	2619
3.9.2 Windows	2619
3.9.2.1 Graph	2619
3.9.2.2 Slot	2621
3.9.2.3 Metrics	2622
3.9.3 Amplitude	2623
3.9.3.1 Y Scale	2623
Minimum Probability	2623
3.9.3.2 Attenuation	2624
Full Range Atten	2626
Mech Atten	2627
Elec Atten	2630
Adjust Atten for Min Clipping	2634
Restart Meas on Adjust Atten	2634
Adjust Atten	2635
Pre-Adjust for Min Clipping	2635
Mech Atten Step	2639
3.9.3.3 Range (Baseband Input models)	2640
Range Auto/Man	2640
I Range	2641
Q Range	2643
Q Same as I	2644
3.9.3.4 Range (Non-attenuator models)	2644

Range	2645
Adjust Range for Min Clipping	2645
Restart Meas on Adjust Range	2645
Pre-Adjust for Min Clipping	2646
Peak-to-Average Ratio	2646
Mixer Lvl Offset	2647
3.9.3.5 Signal Path	2648
Presel Center	2648
Preselector Adjust	2649
Internal Preamp	2650
LNA	2652
μ W Path Control	2653
Allow Full Bypass in Auto	2662
Software Preselection	2663
SW Preselection Type	2665
SW Preselection BW	2665
High Freq Prefilter	2666
3.9.4 BW	2667
3.9.4.1 Settings	2668
Info BW	2668
3.9.5 Display	2669
3.9.5.1 Settings	2669
Slot View	2670
3.9.5.2 View	2670
View	2670
User View	2670
Restore Layout to Default	2671
Save Layout as New View	2671
Re-Save User View	2672
Rename User View	2672
Delete User View	2672
Delete All User Views	2673
View Editor Remote Commands	2673
View Listing Query	2673
User View Listing Query	2673
3.9.5.3 Annotation	2674
Graticule	2674
Screen Annotation	2674
Trace Annotation	2675
Control Annotation	2675
Meas Bar	2676
Display Enable (Remote Command Only)	2676
3.9.6 Frequency	2677
3.9.6.1 Settings	2678

Table Of Contents

Carrier Reference Frequency	2678
Center Frequency	2679
Center Frequency Offset	2685
Adjust Center Frequency to Carrier Config	2685
3.9.7 Marker	2686
3.9.7.1 Select Marker	2686
3.9.7.2 Settings	2686
Marker X-Axis Value	2686
Marker Mode	2687
Delta Marker (Reset Delta)	2688
Marker Settings Diagram	2688
All Markers Off	2688
Couple Markers	2689
3.9.7.3 Properties	2689
Marker X-Axis Value	2689
Relative To	2689
Marker Trace	2690
Marker Settings Diagram	2690
3.9.8 Meas Setup	2691
3.9.8.1 Settings	2691
Counts	2691
Meas Cycles	2691
Meas Interval	2692
Meas Offset	2692
Meas Setup Summary Table	2692
Auto Couple	2692
Meas Preset	2694
3.9.8.2 Radio	2695
Direction	2695
3.9.8.3 Component Carriers	2695
Number of Component Carriers	2696
Carrier Allocation	2696
Non-Contiguous Break at	2696
Configure Comp Carriers	2697
Configure CCs	2697
Number of Component Carriers	2698
Auto Frequency Offset	2698
Carrier Allocation	2699
Non-Contiguous Break at	2699
Measure Carrier	2699
Sidelink	2699
Bandwidth	2700
Freq Range	2701
Freq Offset	2701
Cell ID Auto	2702

Cell ID Value	2702
Demod Spectrum	2702
CHP Power Integration Bandwidth	2703
ACP Power Integration Bandwidth	2703
SEM Power Integration Bandwidth	2705
SCS (Power Meas)	2705
3.9.8.4 Meas Standard	2705
Bandwidth	2706
Frequency Range	2706
Duplex Mode	2707
TDD / User Def. Configuration	2708
Duplex Mode	2708
DL FR1 NR-TM Reference Standard Selection	2708
Transmission Periodicity	2709
Number of Downlink Slots	2709
Number of Downlink Symbols	2710
Number of Uplink Slots	2710
Number of Uplink Symbols	2710
Number of Special Slots (Remote Query Only)	2711
TDD Slot Allocation(Remote Query Only)	2711
Ignore Duplex Mode for Fulfilled RB Alloc	2711
SCS	2711
RB Alloc Preset	2713
Advanced Preset Parameters	2716
Uplink Carrier Mode	2716
DL FR1 NR-TM Reference Standard Selection	2716
OFDM Type	2717
Adjust Limit Mask for Freq Range	2717
BS Type	2719
BS Category	2720
Assumed Adjacent Channels	2721
Uplink Channel Type	2721
Apply Preset (to All CCs)	2722
More Advanced Preset Parameters	2722
Include RB Alloc Preset for Mod Analysis	2722
Include Gate Source	2723
Include Periodic Timer Period	2723
Include Periodic Timer Sync Source	2723
Include Periodic Timer Sync Holdoff	2724
Ignore Duplex Mode for Fulfilled RB Alloc	2724
Adjust Meas Time Length for TM	2724
Apply Preset (to All CCs)	2725
Values for Meas Standard	2726
Meas Standard Setting Parameters for Apply Preset	2726
Reference Standard version and ACP & SEM table indicator	2728
Direction = Downlink	2728
Direction = Uplink	2731
Measurement-Global parameters	2732
Configure Component Carriers	2732

Table Of Contents

Trigger/Gate Parameters	2732
ACP	2734
BW Parameters	2734
Trace Detector	2734
Sweep Parameter	2735
Frequency Parameters	2735
Meas Setup: Settings Parameter	2735
Meas Setup: Configure Component Carrier Parameters	2736
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	2738
Outer Offset Preset Case 1	2739
Outer Offset Preset Case 2	2745
Inner Offset Preset Case 1	2749
Inner Offset Preset Case 2	2757
Spectrum Emission Mask	2759
BW Parameter	2760
Offset RAT	2760
Carrier Parameters	2760
Reference Parameter	2761
Configure Component Carrier Parameter	2761
Outer/Inner Offset Parameters	2762
Parameters common to all offsets in both downlink and uplink	2762
Cumulate Mask (Inner Offset only)	2762
Other Offset/Limit Parameters	2762
Downlink, FR1, BS type = 1-C:	2762
Downlink, FR1, BS type = 1-O:	2768
Downlink, FR2, BS type = 2-O:	2777
Uplink, FR1	2780
Uplink, FR2	2782
Spurious Emissions	2783
Downlink, FR1 (BS type = 1-C & 1-O)	2784
Downlink, FR2 (BS type = 2-O)	2786
Uplink, FR1	2788
Uplink, FR2	2791
Modulation Analysis	2793
Configure Component Carriers Channel Profile: Resource Grid	2793
Meas Time: Meas Time parameter values	2794
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	2795
Advanced: Advanced Demod Setup	2796
Transmit On Off Power	2798
Meas Setup: Meas Time parameters for Downlink	2798
Meas Setup: Meas Time parameters for Uplink	2799
Meas Setup: Other Setting parameters	2802
Meas Setup: Limit Parameters	2803
Other parameters	2809
Channel Power	2809
Occupied BW	2810
Monitor Spectrum	2810
IQ Waveform	2810
Power Stat CCDF	2810

3.9.8.5 Advanced	2810
IF Gain	2811
IF Upsampling Ratio	2811
3.9.8.6 Global	2812
Global Center Freq	2812
Global EMC Std	2813
Extend Low Band	2813
Restore Defaults	2814
3.9.9 Sweep	2814
3.9.9.1 Sweep/Control	2814
Sweep/Measure	2814
Restart	2816
Pause/Resume	2819
Abort (Remote Command Only)	2819
3.9.9.2 X Scale	2820
Scale/Div	2820
3.9.10 Trace	2820
3.9.10.1 Trace Control	2821
Store Ref Trace	2821
Ref Trace	2821
Gaussian Line	2821
3.10 Monitor Spectrum Measurement	2823
3.10.1 Views	2823
3.10.1.1 Normal	2824
3.10.1.2 Carrier Info	2825
3.10.2 Windows	2825
3.10.2.1 Spectrum	2825
3.10.2.2 Carrier Info	2827
3.10.3 Amplitude	2830
3.10.3.1 Y Scale	2830
Ref Value	2831
Scale/Div	2831
Scale Range	2832
Ref Position	2832
Auto Scaling	2833
3.10.3.2 Attenuation	2833
Full Range Atten	2835
Mech Atten	2836
Elec Atten	2839
Adjust Atten for Min Clipping	2843
Restart Meas on Adjust Atten	2843

Table Of Contents

Adjust Atten	2844
Pre-Adjust for Min Clipping	2844
Mech Atten Step	2848
3.10.3.3 Range (Non-attenuator models)	2849
Range	2849
Adjust Range for Min Clipping	2850
Restart Meas on Adjust Range	2850
Pre-Adjust for Min Clipping	2850
Peak-to-Average Ratio	2851
Mixer Lvl Offset	2852
3.10.3.4 Signal Path	2852
Presel Center	2852
Preselector Adjust	2854
Internal Preamp	2855
LNA	2856
μW Path Control	2858
Allow Full Bypass in Auto	2867
Software Preselection	2868
SW Preselection Type	2869
SW Preselection BW	2870
High Freq Prefilter	2871
3.10.4 BW	2872
3.10.4.1 Settings	2872
Res BW	2872
Video BW	2874
VBW:3dB RBW	2875
Span:3dB RBW	2877
3.10.5 Display	2878
3.10.5.1 Meas Display	2878
Carrier Attribute	2878
Sub-block Attribute	2879
Carrier Freq	2879
3.10.5.2 View	2880
View	2880
User View	2880
Restore Layout to Default	2881
Save Layout as New View	2881
Re-Save User View	2881
Rename User View	2881
Delete User View	2882
Delete All User Views	2882
View Editor Remote Commands	2882
View Listing Query	2883
User View Listing Query	2883
3.10.5.3 Annotation	2883

Graticule	2884
Screen Annotation	2884
Trace Annotation	2885
Control Annotation	2885
Meas Bar	2885
Display Enable (Remote Command Only)	2886
3.10.6 Frequency	2887
3.10.6.1 Settings	2887
Carrier Reference Frequency	2887
Center Frequency	2889
Center Frequency Offset	2896
Span	2896
CF Step	2899
Adjust Span to Carrier Config	2900
3.10.7 Marker	2900
3.10.7.1 Select Marker	2900
3.10.7.2 Settings	2901
Marker Frequency	2901
Marker Mode	2902
Delta Marker (Reset Delta)	2903
Marker Settings Diagram	2903
All Markers Off	2903
Couple Markers	2904
3.10.7.3 Peak Search	2904
Marker Frequency	2904
Peak Search	2904
Next Peak	2905
Marker Delta	2905
3.10.7.4 Properties	2906
Marker Frequency	2906
Relative To	2906
Marker Trace	2907
Marker Settings Diagram	2907
3.10.7.5 Marker Function	2907
Marker Frequency	2908
Marker Function	2908
Band Span	2908
Band Left	2909
Band Right	2909
3.10.8 Meas Setup	2910
3.10.8.1 Settings	2910
Avg Hold Num	2910
Averaging On/Off	2910
Average Mode	2911

Table Of Contents

Spur Avoidance	2911
Meas Setup Summary Table	2912
Auto Couple	2912
Meas Preset	2914
3.10.8.2 Radio	2914
Direction	2914
3.10.8.3 Component Carriers	2915
Number of Component Carriers	2915
Carrier Allocation	2915
Non-Contiguous Break at	2916
Configure Comp Carriers	2916
Configure CCs	2916
Number of Component Carriers	2917
Auto Frequency Offset	2917
Carrier Allocation	2918
Non-Contiguous Break at	2918
Measure Carrier	2918
Sidelink	2919
Bandwidth	2919
Freq Range	2920
Freq Offset	2920
Cell ID Auto	2921
Cell ID Value	2921
Demod Spectrum	2922
CHP Power Integration Bandwidth	2922
ACP Power Integration Bandwidth	2922
SEM Power Integration Bandwidth	2924
SCS (Power Meas)	2924
3.10.8.4 Meas Standard	2924
Bandwidth	2925
Frequency Range	2925
Duplex Mode	2926
TDD / User Def. Configuration	2927
Duplex Mode	2927
DL FR1 NR-TM Reference Standard Selection	2927
Transmission Periodicity	2928
Number of Downlink Slots	2928
Number of Downlink Symbols	2929
Number of Uplink Slots	2929
Number of Uplink Symbols	2929
Number of Special Slots (Remote Query Only)	2930
TDD Slot Allocation(Remote Query Only)	2930
Ignore Duplex Mode for Fulfilled RB Alloc	2930
SCS	2930
RB Alloc Preset	2932
Advanced Preset Parameters	2935
Uplink Carrier Mode	2935
DL FR1 NR-TM Reference Standard Selection	2935

OFDM Type	2936
Adjust Limit Mask for Freq Range	2936
BS Type	2938
BS Category	2939
Assumed Adjacent Channels	2940
Uplink Channel Type	2940
Apply Preset (to All CCs)	2941
More Advanced Preset Parameters	2941
Include RB Alloc Preset for Mod Analysis	2941
Include Gate Source	2942
Include Periodic Timer Period	2942
Include Periodic Timer Sync Source	2942
Include Periodic Timer Sync Holdoff	2943
Ignore Duplex Mode for Fulfilled RB Alloc	2943
Adjust Meas Time Length for TM	2943
Apply Preset (to All CCs)	2944
Values for Meas Standard	2945
Meas Standard Setting Parameters for Apply Preset	2945
Reference Standard version and ACP & SEM table indicator	2947
Direction = Downlink	2947
Direction = Uplink	2950
Measurement-Global parameters	2951
Configure Component Carriers	2951
Trigger/Gate Parameters	2951
ACP	2953
BW Parameters	2953
Trace Detector	2953
Sweep Parameter	2954
Frequency Parameters	2954
Meas Setup: Settings Parameter	2954
Meas Setup: Configure Component Carrier Parameters	2955
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	2957
Outer Offset Preset Case 1	2958
Outer Offset Preset Case 2	2964
Inner Offset Preset Case 1	2968
Inner Offset Preset Case 2	2976
Spectrum Emission Mask	2978
BW Parameter	2979
Offset RAT	2979
Carrier Parameters	2979
Reference Parameter	2980
Configure Component Carrier Parameter	2980
Outer/Inner Offset Parameters	2981
Parameters common to all offsets in both downlink and uplink	2981
Cumulate Mask (Inner Offset only)	2981
Other Offset/Limit Parameters	2982
Downlink, FR1, BS type = 1-C:	2982
Downlink, FR1, BS type = 1-O:	2987
Downlink, FR2, BS type = 2-O:	2996

Table Of Contents

Uplink, FR1	3000
Uplink, FR2	3001
Spurious Emissions	3003
Downlink, FR1 (BS type = 1-C & 1-O)	3003
Downlink, FR2 (BS type = 2-O)	3005
Uplink, FR1	3008
Uplink, FR2	3010
Modulation Analysis	3012
Configure Component Carriers Channel Profile: Resource Grid	3013
Meas Time: Meas Time parameter values	3014
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	3014
Advanced: Advanced Demod Setup	3015
Transmit On Off Power	3017
Meas Setup: Meas Time parameters for Downlink	3018
Meas Setup: Meas Time parameters for Uplink	3018
Meas Setup: Other Setting parameters	3021
Meas Setup: Limit Parameters	3022
Other parameters	3028
Channel Power	3028
Occupied BW	3029
Monitor Spectrum	3029
IQ Waveform	3029
Power Stat CCDF	3029
3.10.8.5 Advanced	3029
Noise Floor Extension	3030
Conversion	3032
Phase Noise Optimization	3033
3.10.8.6 Global	3033
Global Center Freq	3033
Global EMC Std	3034
Extend Low Band	3035
Restore Defaults	3035
3.10.9 Sweep	3036
3.10.9.1 Sweep/Control	3036
Sweep Time	3036
Minimum Acquisition Time	3038
Sweep/Measure	3039
Restart	3041
Pause/Resume	3043
Abort (Remote Command Only)	3044
Sweep Time Annotation (Remote Query Only)	3044
3.10.9.2 Sweep Config	3045
Points	3045
Auto Sweep Points	3046
3.10.10 Trace	3047
3.10.10.1 Select Trace	3047

3.10.10.2 Trace Control	3047
Trace Type	3048
Clear and Write Restart Averaging Restart Max/Min Hold	3053
View/Blank	3053
Trace Settings Table	3056
Clear All Traces	3056
3.10.10.3 Detector	3056
Detector	3056
Detector Select Auto/Man	3058
3.11 IQ Waveform Measurement	3059
3.11.1 Views	3061
3.11.1.1 RF Envelope	3061
3.11.1.2 I/Q Waveform	3062
3.11.2 Windows	3062
3.11.2.1 RF Envelope	3062
3.11.2.2 Metrics	3063
3.11.2.3 I/Q Waveform	3063
3.11.3 Amplitude	3064
3.11.3.1 Y Scale	3064
Ref Value	3064
Scale/Div	3065
Scale Range	3066
Ref Position	3067
Auto Scaling	3068
3.11.3.2 Attenuation	3069
Full Range Atten	3071
Mech Atten	3072
Elec Atten	3075
Adjust Atten for Min Clipping	3078
Restart Meas on Adjust Atten	3079
Adjust Atten	3079
Pre-Adjust for Min Clipping	3080
Mech Atten Step	3084
3.11.3.3 Range (Baseband Input models)	3085
Range Auto/Man	3085
I Range	3086
Q Range	3088
Q Same as I	3089
3.11.3.4 Range (Non-attenuator models)	3089
Range	3090
Adjust Range for Min Clipping	3090
Restart Meas on Adjust Range	3090

Table Of Contents

Pre-Adjust for Min Clipping	3091
Peak-to-Average Ratio	3091
Mixer Lvl Offset	3092
3.11.3.5 Signal Path	3093
Presel Center	3093
Preselector Adjust	3094
Internal Preamp	3095
LNA	3097
μW Path Control	3098
Allow Full Bypass in Auto	3107
Software Preselection	3108
SW Preselection Type	3110
SW Preselection BW	3110
High Freq Prefilter	3111
3.11.4 BW	3112
3.11.4.1 Settings	3113
Digital IF BW	3113
Filter Type	3115
Filter BW	3117
Filter Alpha	3117
Channel Filter Bandwidth (Backwards Compatibility Remote Command Only)	3118
3.11.5 Display	3118
3.11.5.1 View	3118
View	3118
User View	3118
Restore Layout to Default	3119
Save Layout as New View	3119
Re-Save User View	3120
Rename User View	3120
Delete User View	3120
Delete All User Views	3121
View Editor Remote Commands	3121
View Listing Query	3121
User View Listing Query	3122
3.11.5.2 Annotation	3122
Graticule	3122
Screen Annotation	3123
Trace Annotation	3123
Control Annotation	3124
Meas Bar	3124
Display Enable (Remote Command Only)	3124
3.11.6 Frequency	3126
3.11.6.1 Settings	3126
Carrier Reference Frequency	3126
Center Frequency	3128

Center Frequency Offset	3133
Adjust Center Frequency to Carrier Config	3134
3.11.7 Marker	3134
3.11.7.1 Select Marker	3134
3.11.7.2 Settings	3135
Marker Time	3135
Marker Mode	3137
Delta Marker (Reset Delta)	3138
Marker Settings Diagram	3138
All Markers Off	3138
Couple Markers	3138
3.11.7.3 Peak Search	3139
Marker Time	3139
Peak Search	3139
Next Peak	3140
Minimum Peak	3140
Marker Delta	3140
3.11.7.4 Pk Search Config	3140
Peak Search Range	3141
Peak Search Range Start	3141
Peak Search Range Stop	3141
3.11.7.5 Marker Function	3142
Marker Time	3142
Interval Function	3143
Interval Span	3143
Interval Left	3143
Interval Right	3144
3.11.7.6 Properties	3144
Marker Time	3144
Relative To	3144
Marker Trace	3145
Marker Settings Diagram	3146
3.11.8 Meas Setup	3146
3.11.8.1 Settings	3146
Avg/Hold Number (Averaging On/Off)	3146
Average Mode	3147
Average Type	3147
Time Avg Num	3148
Meas Time	3149
Sample Rate	3150
Meas Setup Summary Table	3151
Spur Avoidance	3151
Auto Couple	3154
Meas Preset	3156

Table Of Contents

3.11.8.2 Radio	3156
Direction	3156
3.11.8.3 Component Carriers	3157
Number of Component Carriers	3157
Carrier Allocation	3158
Non-Contiguous Break at	3158
Configure Comp Carriers	3159
Configure CCs	3159
Number of Component Carriers	3159
Auto Frequency Offset	3159
Carrier Allocation	3160
Non-Contiguous Break at	3160
Measure Carrier	3161
Sidelink	3161
Bandwidth	3161
Freq Range	3162
Freq Offset	3163
Cell ID Auto	3163
Cell ID Value	3163
Demod Spectrum	3164
CHP Power Integration Bandwidth	3164
ACP Power Integration Bandwidth	3165
SEM Power Integration Bandwidth	3166
SCS (Power Meas)	3166
3.11.8.4 Meas Standard	3167
Bandwidth	3167
Frequency Range	3168
Duplex Mode	3169
SCS	3170
RB Alloc Preset	3171
Advanced Preset Parameters	3174
Uplink Carrier Mode	3174
DL FR1 NR-TM Reference Standard Selection	3175
OFDM Type	3175
Adjust Limit Mask for Freq Range	3176
BS Type	3177
BS Category	3178
Assumed Adjacent Channels	3179
UE Power Class	3180
Uplink Channel Type	3181
More Advanced Preset Parameters	3181
Include RB Alloc Preset for Mod Analysis	3181
Include Gate Source	3182
Include Periodic Timer Period	3182
Include Periodic Timer Sync Source	3182
Include Periodic Timer Sync Holdoff	3183
Ignore Duplex Mode for Fulfilled RB Alloc	3183
Adjust Meas Time Length for TM	3183

Apply Preset (to All CCs)	3184
Apply Preset (to All CCs)	3184
Values for Meas Standard	3184
Meas Standard Setting Parameters for Apply Preset	3185
Reference Standard version and ACP & SEM table indicator	3187
Direction = Downlink	3187
Direction = Uplink	3190
Measurement-Global parameters	3190
Configure Component Carriers	3191
Trigger/Gate Parameters	3191
IQ Waveform	3193
3.11.8.5 Advanced	3193
Phase Noise Optimization	3193
ADC Dither	3199
LO Dither	3200
IF Gain	3200
IF Gain Offset	3202
Other IF Gain	3202
Mixing Mode	3203
Invert Spectrum	3205
Power Reference Plane	3205
Optimize EVM	3206
Mixing Mode State (Remote Command Only)	3206
IF Frequency (Remote Command Only)	3207
3.11.8.6 Global	3207
Global Center Freq	3207
Global EMC Std	3208
Extend Low Band	3209
Restore Defaults	3209
3.11.8.7 Sample Period (Aperture) Setting (Remote Query Only)	3210
3.11.9 Sweep	3210
3.11.9.1 Sweep/Control	3210
Restart	3210
Pause/Resume	3213
Sweep/Measure	3213
Abort (Remote Command Only)	3215
3.11.9.2 X Scale	3216
Ref Value	3216
Scale/Div	3216
Ref Position	3217
Auto Scaling	3217
3.11.10 Trace	3217
3.12 Phase and Amplitude vs Time Measurement	3218
3.12.1 Views	3220

Table Of Contents

3.12.1.1 Normal	3220
3.12.2 Windows	3221
3.12.2.1 Graph	3221
3.12.2.2 Results	3221
3.12.3 Amplitude	3221
3.12.3.1 Y Scale	3222
Scale	3222
Ref Value	3222
Scale/Div	3223
Ref Position	3224
3.12.3.2 Attenuation	3225
Full Range Atten	3227
Mech Atten	3228
Elec Atten	3231
Adjust Atten for Min Clipping	3234
Restart Meas on Adjust Atten	3235
Adjust Atten	3235
Pre-Adjust for Min Clipping	3236
Mech Atten Step	3240
3.12.3.3 Range (Baseband Input models)	3241
Range Auto/Man	3241
I Range	3242
Q Range	3244
Q Same as I	3245
3.12.3.4 Range (Non-attenuator models)	3245
Range	3246
Adjust Range for Min Clipping	3246
Restart Meas on Adjust Range	3246
Pre-Adjust for Min Clipping	3247
Peak-to-Average Ratio	3247
Mixer Lvl Offset	3248
3.12.3.5 Signal Path	3249
Presel Center	3249
Preselector Adjust	3250
Internal Preamp	3251
LNA	3253
μ W Path Control	3254
Allow Full Bypass in Auto	3263
Software Preselection	3264
SW Preselection Type	3266
SW Preselection BW	3266
High Freq Prefilter	3267
3.12.4 BW	3268

3.12.5 Display	3269
3.12.5.1 Meas Display	3269
Display Type	3269
3.12.5.2 View	3269
Views	3269
Normal	3270
User View	3270
Restore Layout to Default	3270
Save Layout as New View	3271
Re-Save User View	3271
Rename User View	3271
Delete User View	3272
Delete All User Views	3272
View Editor Remote Commands	3272
View Listing Query	3273
User View Listing Query	3273
3.12.5.3 Annotation	3273
Graticule	3273
Screen Annotation	3274
Trace Annotation	3274
Control Annotation	3275
Meas Bar	3275
Display Enable (Remote Command Only)	3275
3.12.6 Frequency	3277
3.12.6.1 Settings	3277
Center Frequency	3277
Carrier Reference Frequency	3282
CF Step	3283
Freq Offset	3284
Center Frequency Offset	3285
3.12.7 Marker	3285
3.12.8 Meas Setup	3285
3.12.8.1 Settings	3286
Segments	3286
Total Meas Time	3286
Meas Interval	3286
Meas Offset	3287
Meas Transient	3287
Measure Frequency Error	3287
Frequency Error	3288
Frequency Error Measurement Time	3288
Segment Frequency Error Correction	3289
Sync Type (Models with Multiple Receivers only)	3289
Auto Couple	3289
Meas Preset	3291

Table Of Contents

3.12.8.2 Radio	3291
Direction	3291
3.12.8.3 Component Carriers	3292
Number of Component Carriers	3292
Carrier Allocation	3293
Non-Contiguous Break at	3293
Configure Comp Carriers	3294
Configure CCs	3294
Number of Component Carriers	3295
Auto Frequency Offset	3295
Carrier Allocation	3296
Non-Contiguous Break at	3296
Measure Carrier	3296
Sidelink	3296
Bandwidth	3297
Freq Range	3297
Freq Offset	3298
Cell ID Auto	3298
Cell ID Value	3299
Demod Spectrum	3299
CHP Power Integration Bandwidth	3300
ACP Power Integration Bandwidth	3300
SEM Power Integration Bandwidth	3301
SCS (Power Meas)	3302
3.12.8.4 Meas Standard	3302
Bandwidth	3303
Frequency Range	3303
Duplex Mode	3304
TDD / User Def. Configuration	3305
Duplex Mode	3305
DL FR1 NR-TM Reference Standard Selection	3305
Transmission Periodicity	3306
Number of Downlink Slots	3306
Number of Downlink Symbols	3306
Number of Uplink Slots	3307
Number of Uplink Symbols	3307
Number of Special Slots (Remote Query Only)	3308
TDD Slot Allocation(Remote Query Only)	3308
Ignore Duplex Mode for Fulfilled RB Alloc	3308
SCS	3308
RB Alloc Preset	3310
Advanced Preset Parameters	3313
Uplink Carrier Mode	3313
DL FR1 NR-TM Reference Standard Selection	3313
OFDM Type	3313
Adjust Limit Mask for Freq Range	3314
BS Type	3316
BS Category	3316

Assumed Adjacent Channels	3317
Uplink Channel Type	3318
Apply Preset (to All CCs)	3319
More Advanced Preset Parameters	3319
Include RB Alloc Preset for Mod Analysis	3319
Include Gate Source	3319
Include Periodic Timer Period	3320
Include Periodic Timer Sync Source	3320
Include Periodic Timer Sync Holdoff	3320
Ignore Duplex Mode for Fulfilled RB Alloc	3321
Adjust Meas Time Length for TM	3321
Apply Preset (to All CCs)	3322
Values for Meas Standard	3322
Meas Standard Setting Parameters for Apply Preset	3323
Reference Standard version and ACP & SEM table indicator	3325
Direction = Downlink	3325
Direction = Uplink	3328
Measurement-Global parameters	3328
Configure Component Carriers	3329
Trigger/Gate Parameters	3329
ACP	3331
BW Parameters	3331
Trace Detector	3331
Sweep Parameter	3331
Frequency Parameters	3332
Meas Setup: Settings Parameter	3332
Meas Setup: Configure Component Carrier Parameters	3333
Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters	3335
Outer Offset Preset Case 1	3336
Outer Offset Preset Case 2	3342
Inner Offset Preset Case 1	3346
Inner Offset Preset Case 2	3354
Spectrum Emission Mask	3356
BW Parameter	3357
Offset RAT	3357
Carrier Parameters	3357
Reference Parameter	3358
Configure Component Carrier Parameter	3358
Outer/Inner Offset Parameters	3359
Parameters common to all offsets in both downlink and uplink	3359
Cumulate Mask (Inner Offset only)	3359
Other Offset/Limit Parameters	3360
Downlink, FR1, BS type = 1-C:	3360
Downlink, FR1, BS type = 1-O:	3365
Downlink, FR2, BS type = 2-O:	3374
Uplink, FR1	3378
Uplink, FR2	3379
Spurious Emissions	3381
Downlink, FR1 (BS type = 1-C & 1-O)	3381

Table Of Contents

Downlink, FR2 (BS type = 2-O)	3383
Uplink, FR1	3386
Uplink, FR2	3388
Modulation Analysis	3390
Configure Component Carriers Channel Profile: Resource Grid	3391
Meas Time: Meas Time parameter values	3392
Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values	3392
Advanced: Advanced Demod Setup	3393
Transmit On Off Power	3395
Meas Setup: Meas Time parameters for Downlink	3396
Meas Setup: Meas Time parameters for Uplink	3396
Meas Setup: Other Setting parameters	3399
Meas Setup: Limit Parameters	3400
Other parameters	3406
Channel Power	3406
Occupied BW	3407
Monitor Spectrum	3407
IQ Waveform	3407
Power Stat CCDF	3407
3.12.8.5 Advanced	3407
IF Gain	3408
3.12.8.6 Global	3408
Global Center Freq	3408
Global EMC Std	3409
Extend Low Band	3410
Restore Defaults	3410
3.12.9 Sweep	3411
3.12.9.1 Sweep/Control	3411
Sweep/Measure	3411
Restart	3413
Pause/Resume	3415
Abort (Remote Command Only)	3416
3.12.10 Trace	3416
4 System	3417
4.1 System	3418
4.1.1 Show System	3418
4.1.1.1 Show System contents (Remote Query Only)	3419
4.1.1.2 Computer System description (Remote Query Only)	3419
4.1.2 Show Hardware	3419
4.1.3 Show LXI	3419
4.1.4 Show Support Subscriptions	3420
4.1.5 Show Support ID	3420

4.1.6 Control Panel...	3421
4.1.7 Web Browser	3422
4.1.8 Application Controls	3422
4.1.9 Sounds	3422
4.2 I/O Config	3424
4.2.1 GPIB	3424
4.2.1.1 GPIB Address	3424
4.2.1.2 GPIB Controller	3424
4.2.2 SCPI LAN	3425
4.2.2.1 SCPI Telnet	3426
4.2.2.2 SCPI Socket	3426
4.2.2.3 SICL Server	3427
4.2.2.4 HiSLIP Server	3428
4.2.2.5 Verbose SCPI On/Off	3428
4.2.2.6 Device Clear on Disconnect	3429
4.2.2.7 SCPI Socket Control Port (Remote Query Only)	3430
4.2.2.8 SCPI Instrument Port (Remote Query Only)	3430
4.2.3 Web Password Reset	3430
4.2.4 System IDN Response	3431
4.2.4.1 System IDN Response	3431
4.2.4.2 User IDN	3432
4.2.4.3 SYSTem:PERSONa (Remote Commands Only)	3433
SYSTem:PERSONa:DEFAult	3433
SYSTem:PERSONa:MANUFACTURER	3434
SYSTem:PERSONa:MANUFACTURER:DEFAult	3434
SYSTem:PERSONa:MODEl	3434
SYSTem:PERSONa:MODEl:DEFAult	3435
4.2.5 LXI	3435
4.2.5.1 LAN Reset	3435
4.2.5.2 Device Identification (Remote Command Only)	3435
4.2.6 Restore I/O Config Defaults	3436
4.2.7 Query USB Connection (Remote Query Only)	3436
4.2.8 USB Connection Status (Remote Query Only)	3437
4.2.9 USB Packet Count (Remote Query Only)	3437
4.2.10 Lock Remote I/O Session (Remote Command only)	3438

Table Of Contents

4.2.10.1 Lock Remote I/O Request (Remote Query only)	3439
4.2.10.2 Unlock Remote I/O Session (Remote Command only)	3440
4.2.10.3 Remote I/O Session Lock Name (Remote Query only)	3441
4.2.10.4 Remote I/O Session Lock Owner (Remote Query only)	3441
4.2.11 Multiple Network Interface Card Configuration (Remote Commands Only)	3442
4.2.11.1 Multiple Network Adapters Enabled (Remote Query Only)	3442
4.2.11.2 Config IPV4 Address (Remote Command Only)	3443
4.2.11.3 Config IPV6 Address (Remote Command Only)	3443
4.2.11.4 List All Physical Network Adapter IP Addresses (Remote Query Only)	3443
4.3 Preload / Unload Modes	3445
4.3.1 Power-On Mode	3445
4.3.2 Table of Modes	3446
4.3.3 Preload: Select All, Preload: Deselect All	3446
4.3.4 Move Up, Move Down	3446
4.3.5 Unload	3446
4.3.6 Loaded Modes (Remote Query Only)	3447
4.3.7 User Interface	3447
4.3.7.1 Menu Panel Position	3447
4.3.7.2 Menu Panel Tabs	3448
4.3.7.3 Annotations Local Settings/All Off	3448
4.3.7.4 Display Theme	3448
4.3.7.5 Backlight	3449
4.3.7.6 Backlight Intensity	3450
4.3.7.7 Hints	3450
4.3.7.8 Numeric Entry Auto Open	3450
4.3.7.9 Touch On/Off	3451
4.3.7.10 Control Size	3451
4.3.7.11 Quick Save Mode	3451
4.3.7.12 Screen Tabs Left/Right	3452
4.3.7.13 Hide Screen Tabs in Full Screen	3453
4.3.7.14 2-Screen Orientation	3454

4.3.7.15 Clock Format	3455
4.3.7.16 Language	3456
4.3.7.17 Restore User Interface Defaults	3456
4.3.7.18 User Interface Type (Remote Query Only)	3457
4.4 Power On	3458
4.4.1 Power On State	3458
4.4.2 Power On Application	3460
4.4.3 FPGA Configuration	3460
4.4.3.1 FPGA Load Preference	3463
4.4.3.2 Load FPGA	3464
4.4.4 Restore Power On Defaults	3465
4.4.5 Configure Applications – Desktop application	3465
4.4.6 Configure Applications – Instrument boot-up	3468
4.4.7 Configure Applications – Remote Commands	3468
4.4.7.1 Configuration list (Remote Command Only)	3469
4.4.7.2 Configuration Memory Available (Remote Query Only)	3469
4.4.7.3 Configuration Memory Total (Remote Query Only)	3469
4.4.7.4 Configuration Memory Used (Remote Query Only)	3470
4.4.7.5 Configuration Application Memory (Remote Query Only)	3470
4.5 Restore Defaults	3471
4.5.1 Input/Output	3471
4.5.2 I/O Config	3472
4.5.3 User Interface	3472
4.5.4 Power On	3472
4.5.5 Alignments	3473
4.5.6 Misc	3473
4.5.7 All	3474
4.6 Alignments	3476
4.6.1 Auto Align	3476
4.6.1.1 Auto Align	3476
4.6.1.2 All but RF	3479
4.6.1.3 Alert	3479
4.6.2 Align Now	3481

Table Of Contents

4.6.2.1	Align Now All	3483
4.6.2.2	Align Now All but RF	3485
4.6.2.3	Align Now RF	3487
4.6.2.4	Align Now Expired	3488
4.6.2.5	Align Now Preselector	3489
4.6.2.6	Align Now All but RF Preselector	3490
4.6.2.7	Align Now RF Presel Only (20 Hz to 3.6 GHz)	3490
4.6.2.8	Align Now External Mixer	3491
4.6.2.9	Align Source	3492
4.6.2.10	Align Receiver	3493
4.6.2.11	Align Fast	3493
4.6.2.12	Align LO Leakage	3494
4.6.2.13	Align IF Cable	3494
4.6.2.14	Align RRH Amplitude	3494
4.6.2.15	Align Fast RRH Amplitude	3495
4.6.2.16	Align RRH LO Power	3495
4.6.2.17	Align LO Clock	3495
4.6.2.18	Align VXT Transceiver	3496
4.6.2.19	Align up down converter	3496
4.6.2.20	Align Selected Freq Ranges	3497
	Enable Extended Freq Range	3498
	Frequency Range	3498
	Enable	3500
4.6.2.21	Align External Mixer Path	3500
4.6.2.22	Align Low Band	3501
4.6.2.23	Align High Band	3501
4.6.3	MIMO	3502
4.6.3.1	Align MIMO All	3502
4.6.3.2	Align MIMO Phase	3503
4.6.3.3	Align MIMO Trigger Delay	3503
4.6.3.4	Align MIMO Residual Delay	3504
4.6.3.5	Start Freq	3505
4.6.3.6	Stop Frequency	3505
4.6.3.7	Secondary instrument IP address	3505

4.6.3.8 Secondary instrument selected	3506
4.6.4 Path Delay Calibration	3506
4.6.4.1 Source Path Delay Calibration	3506
4.6.4.2 Path Delay Correction On/Off(Remote Command only)	3507
4.6.5 Show Alignment Statistics	3508
4.6.6 Timebase DAC	3520
4.6.6.1 Timebase DAC	3520
4.6.6.2 User Value	3520
4.6.7 Advanced	3521
4.6.7.1 Characterize Preselector	3521
4.6.7.2 Characterize Reference Clock	3523
4.6.7.3 Characterize Noise Floor	3526
4.6.7.4 Calibration Temperature History	3528
4.6.7.5 TDS Alignment	3529
4.6.7.6 Backup or Restore Align Data...	3529
Alignment Data Wizard (without Flash)	3531
Perform Backup (without Flash) (Remote Command Only)	3540
Perform Restore (without Flash) (Remote Command Only)	3540
Alignment Data Wizard (with Flash)	3541
Perform Backup (with Flash) (Remote Command Only)	3546
Perform Restore (With Flash) (Remote Command Only)	3546
Restore Alignment Defaults	3546
4.6.7.7 oGRF Preselector	3547
Align Now, 20 Hz to 30 MHz	3547
Align Now, 30 MHz to 3.6 GHz	3548
Align Now, 20 Hz to 3.6 GHz	3549
Alert	3550
4.6.7.8 Scheduler	3551
Schedule Setup	3551
Task	3551
Date/Time	3552
Hour	3553
Minute	3553
Recurrence	3553
Number of Weeks	3553
Day	3554
4.7 Licensing	3555
4.7.1 License Manager	3555
4.7.2 System Software Version Date	3555

Table Of Contents

4.7.3 Software Support Expiration Date	3556
4.7.4 Network Licenses	3556
4.7.4.1 Application Licenses	3557
4.7.4.2 Instrument Software Options	3557
4.7.4.3 License Checked Out Query (Remote Query Only)	3557
4.7.4.4 List Licenses Checked Out (Remote Query Only)	3558
4.7.4.5 Borrowed Network Licenses	3558
4.7.4.6 Borrow a License	3559
4.7.4.7 Listing Borrowed Licenses and Return a Borrowed License	3560
List Borrowed Licenses (Remote Query Only)	3560
Return a Borrowed License (Remote Command Only)	3561
4.7.4.8 Enabling Network Checkouts While Borrowed	3561
4.7.5 USB Portable Licenses	3562
4.7.6 Configuring Network and USB Portable Licenses	3562
4.7.7 Floating License Manager	3562
4.7.8 Install License (Remote Command Only)	3563
4.7.9 Remove License (Remote Command Only)	3563
4.7.10 List Licenses (Remote Query Only)	3564
4.7.11 Validate License (Remote Query Only)	3565
4.7.12 Host ID Query (Remote Query Only)	3565
4.8 Security	3566
4.8.1 USB Write Protect	3566
4.8.2 Restore Security Defaults	3566
4.9 Diagnostics	3567
4.9.1 Show Hardware Statistics	3567
4.9.2 Pathwave Calibration Advisor...	3567
4.9.3 Query the Mechanical Relay Cycle Count (Remote Query Only)	3567
4.9.4 Query the Operating Temperature Extremes (Remote Query Only)	3568
4.9.5 Query the Elapsed Time since 1st power on (Remote Query Only)	3568
4.10 Service	3569
4.11 SCPI Recorder	3570
4.11.1 Continuous SCPI Recording	3570
4.11.2 Recording Limit	3571

4.11.3 Play All	3571
4.11.4 Play Selected	3571
4.11.5 Copy	3572
4.11.6 Insert *OPC? Below	3572
4.11.7 Move Up	3572
4.11.8 Move Down	3572
4.11.9 Delete Row	3572
4.11.10 Delete All	3572
4.12 System Remote Commands (Remote Commands Only)	3573
4.12.1 List installed Options (Remote Query Only)	3573
4.12.2 Lock the Front-panel keys (Remote Command Only)	3574
4.12.3 Lock Workstation (Remote Command Only)	3574
4.12.4 List SCPI Commands (Remote Query Only)	3576
4.12.5 Front Panel activity history (Remote Query only)	3576
4.12.6 SCPI activity history (Remote Query only)	3577
4.12.7 Instrument start time (Remote Query only)	3577
4.12.8 SCPI Version Query (Remote Query Only)	3578
4.12.9 Date (Remote Command Only)	3578
4.12.10 Time (Remote Command Only)	3578
4.12.11 Input Overload Enable (Remote Command Only)	3579
4.12.12 Power Up (Remote Query Only)	3579
5 Preset	3580
5.1 Preset Dropdown	3583
5.2 Mode Preset	3584
5.3 Restore Mode Defaults	3586
5.4 Input/Output Preset	3587
5.5 Full Mode Preset	3588
5.6 User Preset	3589
5.7 Save User Preset	3591
5.8 User Preset All Modes	3592
5.9 Restore Defaults All Modes	3593
5.10 User Preset All Screens	3594
5.11 Save User Preset All Screens	3595

Table Of Contents

5.12	Restore Screen Defaults	3596
5.13	Preset Type (Remote Command Only)	3597
5.14	Restart Instrument (Shutdown)	3598
5.15	Restart Application (Application Shutdown)	3599
5.16	System Log Off (Remote Command Only)	3600
5.17	Power Standby (Instrument Shutdown)	3601
6	Input/Output	3602
6.1	RF Source	3603
6.1.1	RF Output	3603
6.1.2	RF Output Port	3603
6.1.3	Half Duplex Output Port	3605
6.1.4	RF Power	3606
6.1.5	T/R Port High Power Attenuator	3606
6.1.6	Amplitude Setup	3606
6.1.6.1	RF Power	3606
6.1.6.2	Set Reference Power	3610
6.1.6.3	Power Ref	3611
6.1.6.4	Power Unit	3611
6.1.6.5	Amptd Offset	3612
6.1.6.6	Amplitude Increment	3613
6.1.7	Frequency	3613
6.1.8	List Sequencer	3613
6.1.8.1	Sequencer	3614
6.1.8.2	Initiate Sequence	3614
6.1.8.3	Repetition	3615
6.1.8.4	Trig Out Type	3615
6.1.8.5	Select Data Marker	3615
6.1.8.6	Manual Trigger Now	3616
6.1.8.7	List Sequencer Setup	3616
	Number of Steps	3616
	Go To Step	3616
	Insert Step Before	3617
	Delete Step	3617
	Clear List	3617
	Step Trigger	3617

Transition Time	3618
Band	3619
Device	3623
Freq/Chan	3624
Power	3625
Waveform	3625
Waveform File	3626
Step Duration	3626
Duration Time	3627
Play Count	3628
Trig Out	3629
Step Configuration (Remote Command Only)	3629
Step Configuration of Step Trigger parameter list (Remote Command Only)	3631
Step Configuration of Transition Time parameter list (Remote Command Only)	3632
Step Configuration of Radio Band parameter list (Remote Command Only)	3632
Step Configuration of Radio Band Link parameter list (Remote Command Only)	3633
Step Configuration of Frequency/Channel Number parameter list (Remote Command Only)	3634
Step Configuration of Power parameter list (Remote Command Only)	3634
Step Configuration of Waveform parameter list (Remote Command Only)	3635
Step Configuration of Step Duration parameter list (Remote Command Only)	3636
Step Configuration of Duration Time or Play Count parameter list (Remote Command Only)	3636
Step Configuration of Output Trigger parameter list (Remote Command Only)	3637
Clear List (Remote Command Only)	3637
6.1.8.8 Remote Software Trigger (Remote command Only)	3638
6.1.8.9 Query List Sequence Initiation Armed Status (Remote Query Only)	3638
6.1.9 Frequency Setup	3638
6.1.9.1 Frequency	3638
6.1.9.2 Channel	3641
6.1.9.3 Radio Setup	3645
Radio Standard/Radio Band	3646
Radio Band Link	3650
6.1.9.4 Set Reference Frequency	3650
6.1.9.5 Freq Reference	3651
6.1.9.6 Freq Offset	3652
6.1.9.7 Freq Increment	3653
6.1.9.8 Rx/Tx Coupling	3654
6.1.9.9 Rx/Tx Offset	3655
6.1.10 Modulation	3655
6.1.11 Modulation Setup	3656

Table Of Contents

6.1.11.1 AM	3656
6.1.11.2 AM Mod Depth	3656
6.1.11.3 AM Rate	3656
6.1.11.4 AM Rate Increment	3657
6.1.11.5 FM	3657
6.1.11.6 FM Deviation	3658
6.1.11.7 FM Rate	3658
6.1.11.8 FM Rate Increment	3658
6.1.11.9 PM	3659
6.1.11.10 PM Deviation	3659
6.1.11.11 PM Rate	3659
6.1.11.12 PM Rate Increment	3660
6.1.11.13 ARB Setup	3660
Basic Control	3660
ARB State	3660
Sample Rate	3661
Run-Time Scaling	3665
Baseband Freq Offs	3665
Baseband Power	3666
Mkr 1-4 Polarity	3666
Pulse/RF Blank	3666
ALC Hold	3667
Trigger Type	3668
Continuous trigger	3668
Single trigger	3669
Segment Advance trigger	3670
Trigger Source	3670
Bus Trigger Command (Remote Command Only)	3671
Sync to Trigger Source	3671
External Trigger Delay	3672
External Trigger Polarity	3674
Select PXI Line	3675
PXI Trigger Delay	3675
PXI Trigger Polarity	3676
I/Q Adjustments	3676
I/Q Gain	3677
I/Q Delay	3677
RMS	3678
RMS Calculation Mode	3678
Calculate	3679
Use Header RMS	3679
Real-Time 5G NR Compensation	3680
SCS	3681

Filter	3681
Filter Bandwidth	3681
Select Waveform	3682
Segments in ARB Memory	3683
Recall Waveform	3683
Delete Segment From ARB Mem	3683
Delete All From ARB Memory	3683
Query ARB Memory File List (Remote Query Only)	3683
Query ARB Memory Full File List (Remote Query Only)	3684
Waveform Sequences	3684
Build New Sequence	3684
Segment	3685
Waveform	3685
Repetitions	3685
Marker 1 – Marker 4	3685
Sync Seq File	3685
Insert Waveform	3686
Segments in ARB Memory	3686
Delete Segment From ARB Mem	3687
Delete All From ARB Memory	3687
Delete Segment	3687
Save Sequence	3687
Build New Sequence (Remote Command Only)	3687
Edit Selected Sequence	3690
Segment	3690
Waveform	3690
Repetitions	3690
Marker 1 – Marker 4	3690
Sync Seq File	3691
Insert Waveform	3691
Segments in ARB Memory	3692
Delete Segment From ARB Mem	3692
Delete All From ARB Memory	3692
Delete Segment	3692
Waveform Utilities	3692
Add Waveform	3692
Replace Selected Waveform	3693
Clear Waveform from Slot	3694
Lock Waveform in Slot	3694
Slot Status Query (Remote Command Only)	3695
Slots Free Query (Remote Query Only)	3695
Slots Used Query (Remote Query Only)	3695
Slot Waveform Name Query (Remote Command Only)	3696
Slot Waveform Unique ID Query (Remote Command Only)	3696
Locked Waveform Name List Query (Remote Query Only)	3697
Locked Waveform Unique ID List Query (Remote Query Only)	3697
Multi-Pack License multi-module control state (Remote Command Only)	3697
Header Utilities	3698
Clear Header	3698

Table Of Contents

Save Header	3698
Query Waveform Unique ID (Remote Query Only)	3698
Query Selected Waveform Header info (Remote Query Only)	3699
6.1.12 Trigger Initiate	3700
6.1.13 Source Sync	3700
6.1.13.1 Sync Config	3700
6.1.13.2 Sync Type	3701
6.1.13.3 Sync Settings	3702
Secondary Module List	3702
Sync Settings	3703
Sync Segment 2	3704
Segment 2 Frequency	3704
IP Address	3705
SCPI Socket Port	3705
Add Secondary Module	3705
Delete Secondary Module	3705
Sync Runtime Settings (Remote Command Only)	3706
6.1.13.4 Sync Start	3706
6.1.13.5 Sync Stop	3706
6.1.13.6 Sync Connected (Remote Query Only)	3707
6.1.14 Source Preset	3707
6.2 Input	3708
6.2.1 Select Input	3708
6.2.2 RF Input Port	3717
6.2.3 SA Frequency Extender Firmware Update (Front Panel Only)	3727
6.2.4 SA Frequency Extender Cable Correction	3728
6.2.5 Half Duplex Input Port	3728
6.2.6 Port Information (Remote Command Only)	3729
6.2.7 RF Preselector	3729
6.2.8 Notch Filter	3731
6.2.9 RF Calibrator	3731
6.2.10 RF Coupling	3732
6.2.11 Input Z Correction	3734
6.2.12 All Screens Use Same Input	3735
6.2.13 External Mixer Setup	3735
6.2.13.1 Mixer Presets	3739
6.2.13.2 Mixer Bias	3744

6.2.13.3 Table Type	3745
6.2.13.4 Select VDI CCD Correction	3746
6.2.13.5 Delete All VDI CCD Corrections	3747
6.2.13.6 Harmonic	3747
6.2.13.7 LO Doubler	3748
6.2.13.8 Refresh USB Mixer Connection	3748
6.2.14 Mixer Path	3749
6.2.15 User IF Freq	3750
6.2.16 Signal ID On/Off	3750
6.2.17 Signal ID Mode	3751
6.2.18 Cable IF Loss	3752
6.2.19 I/Q Path	3753
6.2.20 Reference Z	3755
6.2.21 I/Q Setup	3755
6.2.21.1 I Setup	3755
Differential	3755
Input Z	3756
Skew	3757
Combined Differential/Input Z (Remote Command Only)	3758
6.2.21.2 I Probe	3758
Attenuation	3759
Offset	3760
Coupling	3760
Clear Calibration	3761
6.2.21.3 Calibrate	3761
I/Q Isolation Calibration	3762
I/Q Isolation Calibration Time (Remote Query Only)	3763
I Port	3763
I Port Probe Calibration Time (Remote Query Only)	3763
I-bar Port	3764
I-bar Port Probe Calibration Time (Remote Query Only)	3764
6.2.21.4 Q Setup	3764
Q Same as I	3764
Differential	3765
Input Z	3766
Skew	3767
6.2.21.5 Q Probe	3767
Attenuation	3767
Offset	3768
Coupling	3768

Table Of Contents

Clear Calibration	3769
6.2.21.6 Calibrate	3769
Q Port	3770
Q Port Probe Calibration Time (Remote Query Only)	3770
Q-bar Port	3770
Q-bar Probe Calibration Time (Remote Query Only)	3771
6.2.22 I/Q Cable Calibrate	3771
6.2.22.1 I Port	3772
6.2.22.2 I-bar Port	3772
6.2.22.3 Q Port	3773
6.2.22.4 Q-bar Port	3773
6.2.22.5 I/Q Cable Calibration Time (Remote Query Only)	3774
6.2.23 Audio Input Channel	3774
6.2.24 Audio Calibrator	3774
6.2.25 Audio Coupling	3774
6.2.26 Audio Input Ground	3775
6.2.27 Audio In Impedance	3775
6.2.28 Input/Output Preset	3775
6.3 External Gain	3777
6.3.1 External Preamplifier	3777
6.3.2 External Gain - MS	3779
6.3.3 External Gain - BTS	3780
6.3.4 I Ext Gain	3781
6.3.5 Q Ext Gain	3782
6.3.6 Q Gain in I+jQ	3782
6.4 Data Source	3783
6.4.1 Data Source	3793
6.4.2 Current Meas -> Capture Buffer	3794
6.5 Corrections	3795
6.5.1 Select Correction	3796
6.5.2 Correction On/Off	3797
6.5.3 Correction Port	3797
6.5.4 Correction Direction	3799
6.5.5 Edit Correction	3800

6.5.5.1 Select Correction	3801
6.5.5.2 Frequency	3801
6.5.5.3 Amplitude	3802
6.5.5.4 Go to Row	3802
6.5.5.5 Insert Row Below	3802
6.5.5.6 Delete Row	3802
6.5.5.7 Scale X Axis	3802
6.5.5.8 Delete Correction	3803
6.5.5.9 Correction Graph	3803
6.5.6 Edit Correction Settings	3804
6.5.6.1 Select Correction	3804
6.5.6.2 Freq Interpolation	3804
6.5.6.3 Transducer Unit	3806
6.5.6.4 Description	3807
6.5.6.5 Comment	3807
6.5.7 Complex Corrections	3808
6.5.7.1 Go To Row (Select Correction)	3809
6.5.7.2 Delete Row	3809
6.5.7.3 Delete All	3809
6.5.7.4 Correction On	3810
6.5.7.5 Correction Port	3810
6.5.7.6 Direction	3811
6.5.7.7 Description	3812
6.5.7.8 Comment	3812
6.5.7.9 File	3813
6.5.7.10 Freq Interpolation (Remote Command Only)	3813
6.5.7.11 Set Data (Remote Command Only)	3814
6.5.8 Apply Corrections	3814
6.5.9 Delete All Corrections	3815
6.5.10 Correction Group On/Off	3816
6.5.11 Break	3816
6.5.12 Reload Corrections From Files	3819
6.5.13 Edit Correction Group	3819

Table Of Contents

6.5.13.1 Go to Row	3819
6.5.13.2 Insert Row Below	3819
6.5.13.3 Delete Row	3820
6.5.13.4 Select File	3820
6.5.13.5 Specify File	3820
6.5.13.6 Remove File	3820
6.5.13.7 Correction Trace Display	3820
6.5.13.8 Description	3821
6.5.13.9 Comment	3821
6.5.13.10 Start Frequency	3821
6.5.13.11 Stop Frequency	3822
6.5.14 Merge Correction Data (Remote Command Only)	3822
6.5.15 Set (Replace) Data (Remote Command Only)	3823
6.5.16 Correction Group Range Data (Remote Command Only)	3823
6.5.17 Delete Correction Group Range (Remote Command Only)	3824
6.6 Freq Ref Input	3825
6.6.1 Freq Ref Input	3825
6.6.2 Ext Ref Freq	3830
6.6.3 Default External Ref Freq	3831
6.6.4 LO Ref Input	3831
6.6.5 Ref Lock BW	3832
6.6.6 Reference Oscillator On/Off (Remote Command Only)	3833
6.6.6.1 Select Ref	3833
6.6.6.2 Freq Ref In	3834
6.6.6.3 External Freq Ref	3834
6.6.6.4 Ext Ref Locked (Remote Query Only)	3834
6.7 Output	3836
6.7.1 Analog Out	3836
6.7.2 Screen Video Level	3840
6.7.3 Digital Bus Out	3841
6.7.4 Wideband Digital Bus	3841
6.7.5 Data Stream	3844
6.7.6 I/Q Cal Out	3844

6.7.7 Aux IF Out	3845
6.7.8 Arbitrary IF Freq	3847
6.7.9 Ext/Wide IF Out	3847
6.7.10 IF2 Out	3848
6.7.11 REF Out	3849
6.7.12 LO Ref Out	3849
6.8 Trigger Output	3851
6.8.1 Trig 1 – 4 Out	3851
6.8.2 Trig 1 – 4 Out Polarity	3853
6.8.3 Trig 1 – 4 Out Device	3854
6.8.4 Src PXI Trig Out	3854
6.8.5 Src Trig Out Polarity	3855
6.8.6 Select Src PXI Line	3855
6.8.7 Analyzer PXI Trig Out	3856
6.8.8 Analyzer Trig Out Polarity	3857
6.8.9 Select Analyzer PXI Line	3857
6.8.10 Source Internal Trig Out	3857
6.8.11 Source Internal Trig Out Polarity	3858
6.9 Calibration	3860
6.9.1 Configuration	3860
6.9.1.1 Cal Group	3862
6.9.1.2 Calibrate Checked Rows	3862
6.9.1.3 Apply Cal Group	3863
6.9.1.4 Abort Calibration	3863
6.9.1.5 Copy From Cal Group	3864
6.9.1.6 Copy	3864
6.9.1.7 Cal Input	3865
6.9.1.8 Freq Offset	3865
6.9.1.9 Select Calibrator	3866
6.9.1.10 Identify RCal Module	3866
6.9.1.11 RCal Module Serial Number (Remote Query Only)	3866
6.9.1.12 RCal Reference	3866
6.9.1.13 RCal Status	3867

Table Of Contents

RCal Status (Remote Query Only)	3868
All RCal Status (Remote Query Only)	3868
6.9.1.14 Go to Row	3868
6.9.1.15 Insert Row Below	3869
6.9.1.16 Description	3869
6.9.1.17 Use Current Meas	3869
6.9.1.18 Duplicate Row	3870
6.9.1.19 Delete Row	3870
6.9.1.20 Delete All	3870
6.9.1.21 Calibrate	3870
6.9.1.22 Apply	3871
6.9.1.23 Name	3871
6.9.1.24 Last Cal	3872
6.9.1.25 Cal Applied	3872
6.9.1.26 Cal Type	3873
6.9.1.27 Start Freq	3873
6.9.1.28 Stop Freq	3874
6.9.1.29 Freq Step	3875
6.9.1.30 Freq Points	3875
6.9.1.31 Mech Atten Type	3876
6.9.1.32 Mech Atten Start	3876
6.9.1.33 Mech Atten Stop	3877
6.9.1.34 Mech Atten Step	3878
6.9.1.35 Elec Atten Type	3878
6.9.1.36 Elec Atten Start	3878
6.9.1.37 Elec Atten Stop	3879
6.9.1.38 Elec Atten Step	3880
6.9.1.39 Full Range Atten Type	3880
6.9.1.40 Full Range Atten Start	3881
6.9.1.41 Full Range Atten Stop	3881
6.9.1.42 Frequency Extender Attenuation Type	3882
6.9.1.43 Frequency Extender Attenuation Start	3883
6.9.1.44 Frequency Extender Attenuation Stop	3883

6.9.1.45 Frequency Extender Atten Step	3884
6.9.1.46 IF Path	3884
6.9.1.47 IF Gain	3885
6.9.1.48 Preamp	3886
6.9.1.49 Low Noise Amplifier (LNA)	3886
6.9.1.50 μ W Path Control	3887
6.9.1.51 Coupling	3887
6.9.1.52 Phase Noise Optimization	3888
6.9.1.53 Phase Noise Optimization All Option	3893
6.9.1.54 Mixing Mode	3894
6.9.1.55 Match State	3894
6.9.2 Cal Group	3895
6.9.3 Apply Cal Group	3895
6.9.4 All Apply Cal Group Off	3895
6.9.5 Connection	3896
6.10 Calibrator Control	3897
6.10.1 Select Cal Source	3897
6.10.2 Cal Output	3897
6.10.3 Cal Frequency	3898
6.10.4 Cal Signal Type	3898
6.10.5 Cal Comb Spacing	3898
6.10.6 Calibrator Reference	3899
6.11 Advanced	3900
6.11.1 T/R Port High Power Attenuator	3900
6.12 Aux I/O Control	3902
6.12.1 Data 0 – Data 7	3902
6.12.2 Aux IO Control (Remote Command Only)	3902
7 Save/Recall/Print	3903
7.1 Quick Save	3904
7.2 Recall	3907
7.2.1 Recall From File / Open	3908
7.2.2 State	3909
7.2.2.1 Recall Type	3910

Table Of Contents

7.2.2.2 Register 1 thru Register 16	3911
7.2.2.3 Edit Register Names	3912
7.2.3 Trace+State	3912
7.2.3.1 Recall To Trace	3913
7.2.3.2 Register 1 thru Register 16	3913
7.2.3.3 Edit Register Names	3914
7.2.4 Screen Config + State	3914
7.2.5 Measurement Data	3915
7.2.5.1 Data Type	3915
Trace	3915
7.2.6 Limit	3916
7.2.6.1 Select Limit	3917
7.2.7 Correction	3917
7.2.7.1 Select Correction	3918
7.2.8 Complex Correction	3918
7.2.8.1 Select Complex Correction	3919
7.2.9 Recall VDI CCD Correction	3919
7.2.10 SCPI Recorder	3919
7.2.10.1 Recall From File	3920
7.2.11 Mask	3920
7.2.12 Sequence	3920
7.2.13 Waveform	3920
7.2.13.1 Load Segment to ARB Memory	3923
7.2.13.2 Delete Segment From ARB Mem	3924
7.2.13.3 Delete All From ARB Memory	3924
7.2.13.4 Set Default Directory (Remote Command Only)	3925
7.2.13.5 Query ARB Memory File List (Remote Query Only)	3925
7.2.13.6 Query ARB Memory Full File List (Remote Query Only)	3925
7.2.14 Demod Info	3926
7.2.14.1 Data Type	3926
CC Setup	3926
Frame Index (.scp and .pws only)	3927
Close VSA after recall (.setx only)	3927
Custom IQ Constellation State	3928
Reference IQ data	3928

7.2.15 Power Sensor Cal Factor	3928
7.2.16 Recording	3929
7.2.16.1 Data Type	3930
7.2.16.2 Channel	3930
7.2.16.3 Reset	3931
7.2.16.4 Recalled data channel table (Display only)	3931
7.2.17 Recording + State	3931
7.2.17.1 CC Setup	3932
Frame Index (.scp and .pwsg only)	3932
Close VSA after recall (.setx only)	3933
7.2.17.2 Custom IQ Constellation State	3933
7.2.18 Loss Comp	3934
7.2.19 Data Pattern	3935
7.3 Save	3936
7.3.1 Save to File / Save As	3937
7.3.2 State	3939
7.3.2.1 Register 1 thru Register 16	3940
7.3.2.2 Edit Register Names	3940
7.3.3 Trace+State	3941
7.3.3.1 Save From Trace	3943
7.3.3.2 Register 1 thru Register 16	3944
7.3.3.3 Edit Register Names	3944
7.3.4 Screen Config + State	3945
7.3.5 Measurement Data	3945
7.3.5.1 Save From	3946
7.3.5.2 Data Type	3946
Meas Results	3947
CHP Meas Results File Contents	3948
OBW Meas Results File Contents	3951
ACP Meas Results File Contents	3953
SPUR Meas Results File Contents	3960
SEM Meas Results File Contents	3964
CCDF Meas Results File Contents	3970
IQ Waveform Meas Results File Contents	3974
5GNR EVM Meas Results	3975
Meas IQ Sub Meas Results File	3976
Reference IQ Sub Meas Results File	3976

Table Of Contents

Error Vector Sub Meas Results File	3977
RE Power Sub Meas Results File	3977
Channel Allocation Sub Meas Results File	3977
Decode Bits Sub Meas Results File	3977
Condition Number Sub Meas Results File	3978
H Matrix Sub Meas Results File	3978
Transmit On Off Power Meas Results File Contents	3978
7.3.6 Limit	3981
7.3.6.1 Select Limit	3985
7.3.7 Correction	3985
7.3.7.1 Select Correction	3989
7.3.8 SCPI Recorder	3989
7.3.8.1 Save To File	3989
Saving a SCPI Recording as a Python Script	3989
7.3.9 Mask	3991
7.3.10 Waveform Sequence	3991
7.3.11 Demod Info	3991
7.3.11.1 Data Type	3992
Channel Configure	3992
Reference IQ data	3993
7.3.12 Screen Image	3993
7.3.12.1 Theme	3995
7.3.13 Power Sensor Cal Factor	3996
7.3.14 Recording	3996
7.3.14.1 Data Type	3997
7.3.14.2 Channel	3998
7.3.15 Recording + State	3999
7.3.16 Component Carrier Setup	3999
7.3.17 Remote Only Commands	4000
7.3.17.1 Mass Storage Catalog (Remote Command Only)	4000
7.3.17.2 Mass Storage Change Directory (Remote Command Only)	4001
7.3.17.3 Mass Storage Copy (Remote Command Only)	4001
7.3.17.4 Mass Storage Device Copy (Remote Command Only)	4001
7.3.17.5 Mass Storage Delete (Remote Command Only)	4002
7.3.17.6 Mass Storage Data (Remote Command Only)	4002
7.3.17.7 Mass Storage Make Directory (Remote Command Only)	4002

7.3.17.8 Mass Storage Move (Remote Command Only)	4003
7.3.17.9 Mass Storage Remove Directory (Remote Command Only)	4003
7.3.17.10 Mass Storage Determine Removable Media (Remote Query Only)	4003
7.3.17.11 Mass Storage Determine Removable Media Label (Remote Command Only)	4004
7.3.17.12 Mass Storage Determine Removable Media Write-protect status (Remote Query Only)	4004
7.3.17.13 Mass Storage Determine Removable Media size (Remote Query Only)	4004
7.3.17.14 :SYSTem:SET (Remote Command Only)	4005
7.4 Print	4006
7.5 Page Setup	4007
8 Trigger	4009
8.1 Trigger	4010
8.1.1 Select Trig Source	4010
8.1.1.1 Free Run	4023
8.1.1.2 Video/ADC	4023
8.1.1.3 ADC Trigger	4024
8.1.1.4 Line	4025
8.1.1.5 External 1	4025
8.1.1.6 External 2	4026
8.1.1.7 External 3	4027
8.1.1.8 Audio External	4028
8.1.1.9 RF Burst	4028
8.1.1.10 Periodic	4029
8.1.1.11 I/Q Mag	4031
8.1.1.12 Input I	4031
8.1.1.13 Input Q	4032
8.1.1.14 I (Demodulated)	4032
8.1.1.15 Q (Demodulated)	4033
8.1.1.16 Aux I/Q Mag	4033
8.1.1.17 PXI	4034
8.1.1.18 Internal	4034

Table Of Contents

8.1.1.19 Prot Channel Detection	4035
8.1.1.20 Prot Frame Aligned	4035
8.1.1.21 Prot Event	4036
8.1.2 Trigger Level	4036
8.1.3 Trigger Delay	4038
8.1.4 Trigger Slope	4042
8.1.5 Trigger Level Absolute/Relative	4043
8.1.6 Absolute Trigger Level	4044
8.1.7 Relative Trigger Level	4044
8.1.8 Period	4046
8.1.9 Offset	4047
8.1.10 Reset Offset Display	4048
8.1.11 Offset Adjust (Remote Command Only)	4048
8.1.12 Sync Source	4049
8.1.13 TV Line	4049
8.1.14 Field	4050
8.1.15 Standard	4051
8.1.16 Trigger Center Frequency	4052
8.1.17 Trigger BW	4052
8.1.18 Zero Span Delay Compensation On/Off	4053
8.1.19 Select PXI Line	4053
8.1.20 Reset Sync Monitor	4054
8.1.21 Trigger Optimization	4055
8.1.22 Trigger Settings Diagram	4056
8.2 Gate Source	4057
8.2.1 Select Gate Source	4057
8.2.2 Sync Holdoff	4058
8.3 Gate Settings	4060
8.3.1 Gate On/Off	4060
8.3.2 Gate View On/Off	4061
8.3.3 Gate Delay	4063
8.3.4 Gate Length	4064
8.3.5 Gate Method	4065

8.3.6 Control Edge/Level	4066
8.3.7 Gate Holdoff	4067
8.3.8 Gate View Sweep Time	4068
8.3.9 Gate View Start Time	4069
8.3.10 Gate Delay Compensation	4070
8.3.11 Min Fast Position Query (Remote Query Only)	4071
8.3.12 Gate Preset (Remote Command Only)	4072
8.3.13 Gate Level (Remote Command Only)	4072
8.3.14 Gate Polarity (Remote Command Only)	4072
8.4 Enables the hardware accelerated stepped FFT gating feature (Display only)	4074
8.5 Periodic Sync Src	4075
8.5.1 Select Periodic Timer Sync Source	4075
8.6 Auto/Holdoff	4076
8.6.1 Trig Holdoff	4076
8.6.2 Auto Trig	4076
8.6.3 Holdoff Type	4077
9 Programming the Instrument	4079
9.1 List of Supported SCPI Commands	4080
*	4080
A	4080
C	4080
D	4088
F	4091
H	4091
I	4091
L	4093
M	4093
O	4094
R	4095
S	4095
T	4127
U	4128

Table Of Contents

9.2 IEEE 488.2 Common Commands	4129
9.2.1 *CAL? - Calibration Query	4129
9.2.2 *CLS - Clear Status	4130
9.2.3 *ESE - Standard Event Status Enable	4130
9.2.4 *ESR? - Standard Event Status Register Query	4131
9.2.5 *IDN? - Identification Query	4131
9.2.6 *OPC? - Operation Complete	4132
9.2.7 *OPT? - Query Instrument Options	4133
9.2.8 *RCL - Recall Instrument State	4133
9.2.9 *RST - Reset	4133
9.2.10 *SAV - Save Instrument State	4134
9.2.11 *SRE - Service Request Enable	4134
9.2.12 *STB? - Status Byte Query	4135
9.2.13 *TRG - Trigger	4135
9.2.14 *TST? - Self Test Query	4135
9.2.15 *WAI - Wait-to-Continue	4136
9.3 SCPI Operation and Results Query	4137
9.3.1 Mode Control	4137
9.3.2 Measurement Control	4137
9.3.2.1 CONFigure	4138
9.3.2.2 INITiate	4139
9.3.2.3 FETCh	4139
9.3.2.4 READ	4140
9.3.2.5 MEASure	4141
9.3.3 Trace Formatting Commands	4142
9.3.3.1 Clear Trace (Remote Command Only)	4142
9.3.3.2 Send/Query Trace Data (Remote Command Only)	4143
9.3.3.3 Format Data: Numeric Data (Remote Command Only)	4145
9.3.3.4 Format Data: Byte Order (Remote Command Only)	4146
9.3.3.5 Calculate/Compress Trace Data Query (Remote Command Only)	4146
9.3.3.6 Calculate Peaks of Trace Data (Remote Command Only)	4152
9.3.3.7 Smooth Trace Data (Remote Command Only)	4154

9.3.3.8 Number of Points for Smoothing (Remote Command Only)	4155
9.3.3.9 Mean Trace Data (Remote Command Only)	4156
9.4 Status Register System & STATus Subsystem	4157
9.4.1 Status Register System Diagram	4157
9.4.2 Status Register Hierarchy	4159
9.4.3 Status Register SCPI Commands	4161
9.4.4 How to Use Status Registers	4162
9.4.4.1 Polling Method	4162
Monitoring Options	4163
9.4.4.2 Service Request (SRQ) Method	4163
Using the Service Request (SRQ) Method	4163
9.4.5 Status Register Bit Parameters	4165
9.4.6 Status Subsystem Registers and Commands	4166
9.4.6.1 Status Byte Register	4166
Service Request Enable Register	4169
Preset the Status Byte	4169
9.4.6.2 Standard Event Status Register	4170
Standard Event Status Enable Register	4171
9.4.6.3 Operation Register	4172
Operation Condition Query	4173
Operation Enable	4174
Operation Event Query	4174
Operation Negative Transition	4175
Operation Positive Transition	4175
9.4.6.4 Operation Instrument Register	4176
Operation Instrument Condition	4176
Operation Instrument Enable	4177
Operation Instrument Event Query	4177
Operation Instrument Negative Transition	4178
Operation Instrument Positive Transition	4178
9.4.6.5 Questionable Register	4179
Questionable Condition	4180
Questionable Enable	4180
Questionable Event Query	4181
Questionable Negative Transition	4181
Questionable Positive Transition	4181
9.4.6.6 Questionable Power Register	4182
Questionable Power Condition	4183
Questionable Power Enable	4183
Questionable Power Event Query	4184
Questionable Power Negative Transition	4184

Table Of Contents

Questionable Power Positive Transition	4184
9.4.6.7 Questionable Temperature Register	4185
Questionable Temperature Condition	4186
Questionable Temperature Enable	4186
Questionable Temperature Event Query	4187
Questionable Temperature Negative Transition	4187
Questionable Temperature Positive Transition	4187
9.4.6.8 Questionable Frequency Register	4188
Questionable Frequency Condition	4189
Questionable Frequency Enable	4189
Questionable Frequency Event Query	4190
Questionable Frequency Negative Transition	4190
Questionable Frequency Positive Transition	4191
9.4.6.9 Questionable Calibration Register	4191
Questionable Calibration Condition	4192
Questionable Calibration Enable	4193
Questionable Calibration Event Query	4193
Questionable Calibration Negative Transition	4194
Questionable Calibration Positive Transition	4194
9.4.6.10 Questionable Calibration Extended Needed Register	4195
Questionable Calibration Extended Needed Condition	4196
Questionable Calibration Extended Needed Enable	4196
Questionable Calibration Extended Needed Event Query	4197
Questionable Calibration Extended Needed Negative Transition	4197
Questionable Calibration Extended Needed Positive Transition	4197
9.4.6.11 Questionable Calibration Extended Failure Register	4198
Questionable Calibration Extended Failure Condition	4199
Questionable Calibration Extended Failure Enable	4199
Questionable Calibration Extended Failure Event Query	4200
Questionable Calibration Extended Failure Negative Transition	4200
Questionable Calibration Extended Failure Positive Transition	4201
9.4.6.12 Questionable Calibration Skipped Register	4201
Questionable Calibration Skipped Condition	4202
Questionable Calibration Skipped Enable	4203
Questionable Calibration Skipped Event Query	4203
Questionable Calibration Skipped Negative Transition	4203
Questionable Calibration Skipped Positive Transition	4204
9.4.6.13 Questionable Integrity Register	4204
Questionable Integrity Condition	4206
Questionable Integrity Enable	4206
Questionable Integrity Event Query	4207
Questionable Integrity Negative Transition	4207
Questionable Integrity Positive Transition	4207
9.4.6.14 Questionable Integrity Signal Register	4208
Questionable Integrity Signal Condition	4209

Questionable Integrity Signal Enable	4209
Questionable Integrity Signal Event Query	4210
Questionable Integrity Signal Negative Transition	4210
Questionable Integrity Signal Positive Transition	4211
9.4.6.15 Questionable Integrity Output Register	4211
Questionable Integrity Output Condition	4212
Questionable Integrity Output Enable	4212
Questionable Integrity Output Event Query	4213
Questionable Integrity Output Negative Transition	4213
Questionable Integrity Output Positive Transition	4214
9.4.6.16 Questionable Integrity Uncalibrated Register	4214
Questionable Integrity Uncalibrated Condition	4215
Questionable Integrity Uncalibrated Enable	4216
Questionable Integrity Uncalibrated Event Query	4216
Questionable Integrity Uncalibrated Negative Transition	4216
Questionable Integrity Uncalibrated Positive Transition	4217
10 Hardware-Accelerated Fast Power Measurement (Remote Command Only)	4218
10.1 Reset Fast Power Measurement (Remote Command Only)	4219
10.2 Reset Fast Power Measurement (Remote Command Only)	4220
10.2.1 Acquisition Time	4220
10.2.2 Center Frequency	4220
10.2.3 DC Coupled	4220
10.2.4 Detector Type	4221
10.2.5 Do Noise Correction	4221
10.2.6 Do Spur Suppression	4221
10.2.7 Electronic Attenuator Bypass	4222
10.2.8 Electronic Attenuation	4222
10.2.9 External Reference Frequency	4222
10.2.10 Frequency Reference Source	4223
10.2.11 IF Gain	4223
10.2.12 IF Type	4223
10.2.13 Include Power Spectrum	4223
10.2.14 Mechanical Attenuation	4224
10.2.15 Preamplifier Mode	4224
10.2.16 Resolution Bandwidth Mode	4224
10.2.17 Resolution Bandwidth	4225

Table Of Contents

10.2.18 Trigger Delay	4225
10.2.19 Trigger Level	4225
10.2.20 Trigger Slope	4225
10.2.21 Trigger Source	4225
10.2.22 Trigger Timeout	4226
10.2.23 Signal Input	4226
10.2.24 Use Preselector	4226
10.2.25 Channel Bandwidth Array	4226
10.2.26 Channel Filter Type Array	4227
10.2.27 Channel Filter Alpha Array	4227
10.2.28 Channel Measurement Function Array	4227
10.2.29 Channel Offset Frequency Array	4228
10.2.30 Channel Occupied Bandwidth Percent Array	4228
10.2.31 Channel x-dB Bandwidth Array	4229
10.3 Define Fast Power Measurement Query (Remote Command Only)	4230
10.4 Configure Fast Power Measurement (Remote Command Only)	4231
10.5 Initiate Fast Power Measurement (Remote Command Only)	4232
10.6 Fetch Fast Power Measurement (Remote Command Only)	4233
10.7 Execute Fast Power Measurement (Remote Command Only)	4234
10.8 Binary Read Fast Power Measurement (Remote Command Only)	4235
10.9 Diagnostic Binary Read Fast Power Measurement (Remote Command Only)	4236

1 Documentation Roadmap

This section describes the Keysight products covered by this document, and provides links to related documentation.

- ["Products Covered by this Document" on page 126](#)
- ["Additional Documentation" on page 127](#)

1.1 Products Covered by this Document

For the full list of instrument models covered by this documentation, see the title page: ["5G NR ModeUser's & Programmer's Reference" on page 1](#).

1.2 Additional Documentation

If your instrument or computer has an internet connection, then you can access the latest editions of all relevant X-Series documentation via the links below.

This document is available in 3 formats:

- **Embedded Help**, in the instrument
- **Online Help**, at Keysight's web site

For information on this Mode, browse to:

<http://rfmw.em.keysight.com/wireless/helpfiles/5GNRMode/FlexUI.htm>

- **Users & Programmers Reference**, in downloadable PDF format

For information on this Mode, download from:

<http://literature.cdn.keysight.com/litweb/pdf/N9085-90001.pdf>

The following documents are available online at keysight.com:

[X-Series Messages Guide](#)

The following documents are in downloadable PDF format:

Getting Started Guides, Instrument Messages & Security

- [N90x0B Getting Started & Troubleshooting Guide](#)
- [N9041B Getting Started & Troubleshooting Guide](#)
- [X-Series Status Register System Diagram](#)
- [Security Features & Statement of Volatility](#)

Specifications Guides

- [N9000B CXA Specifications Guide](#)
- [N9010B EXA Specifications Guide](#)
- [N9020B MXA Specifications Guide](#)
- [N9030B PXA Specifications Guide](#)
- [N9040B UXA Specifications Guide](#)

- 1 Documentation Roadmap
- 1.2 Additional Documentation

- [N9041B UXA Specifications Guide](#)

Measurement Guides

- [Spectrum Analyzer Mode Measurement Guide](#)
- [Real-Time Spectrum Analyzer Measurement Guide](#)
- [Noise Figure Measurement Guide](#)
- [Analog Demod Measurement Application Measurement Guide](#)
- [Phase Noise Measurement Application Measurement Guide](#)
- [EMI Measurement Application Measurement Guide](#)
- [M9484C VXG Signal Generator and X-Series Signal Analyzers Measurement Guide](#)

Service Guides

- [N9010B EXA Service Guide](#)
- [N9020B MXA Service Guide](#)
- [N9030B PXA Service Guide](#)
- [N9040B UXA Service Guide](#)

2 User Interface

Here are the basic elements of the Multitouch User Interface. For more information, tap a topic.

Included in this section are also topics for several front panel keys not described in other topics. Tap one of these topics for more information.



"Cancel key" on
page 175



"Onscreen Keyboard key" on
page 176



"Touch On/Off Key" on
page 177



"Tab key" on
page 178

2.1 Screen Tabs

In the X-Series Multitouch User Interface (or Multitouch UI), you can run many different Measurement Applications, or “Modes”. Examples are Spectrum Analyzer Mode, LTE-A FDD Mode, IQ Analyzer Mode, and Real Time Spectrum Analyzer Mode. Each Mode has its own set of controls, windows and SCPI commands.

Each Mode runs within a “Screen”. The Multitouch UI supports multiple “Screens” (see ["Multiscreen" on page 219](#) for more information). Each screen displays one Measurement in one Mode. The set of configured screens is shown across the top of the display as a set of Screen Tabs, with a + tab at the right for adding new Screens:



You can see up to six tabs at a time on the UXA, and 4 at a time on the CXA, EXA, MXA and PXA. If there are more Screens configured than this, arrows appear to the left and right of the Screen Tabs; pressing the arrows scrolls the Screen Tabs to the left or right. A scroll bar also appears at the bottom of the Screen Tabs, indicating that you can scroll the tabs by dragging them with your finger; you can also scroll them by dragging the scroll bar.

Pressing a Screen Tab selects that screen for operation. Pressing the blue (selected) Screen Tab is the same as pressing the Mode/Meas front panel key.



Both actions open the ["Mode/Meas/View Dialog" on page 131](#). In addition, if you have a PC keyboard plugged in, the sequence CTL-SHIFT-M will open up this dialog.

The + tab at the right of the Screen Tabs bar adds a new Screen by cloning the current screen. The new Screen has the identical setup and settings as the current Screen. You can then change the Mode, Measurement and/or settings of the new Screen.

You can define up to 16 screens at once.

Example Multiscreen View

The example below shows a four-screen display in Multiscreen view.

The Screen called “Real-Time SA 2” is selected, as indicated by its blue tab. Touching any other screen or tab selects the screen for that tab and brings it to the foreground.




The following topics provide more information:

- "Mode/Meas/View Dialog" on page 131
- "Add Screen" on page 148
- "Multiscreen" on page 219

2.1.1 Mode/Meas/View Dialog

The Mode/Meas/View dialog opens when you press the selected (blue) Screen tab (see "Screen Tabs" on page 130) or the **Mode/Meas** front panel key.

This dialog displays lists of available Modes, Measurements and Views, as well as the "Sequencer" on page 142 control for configuring Screens.

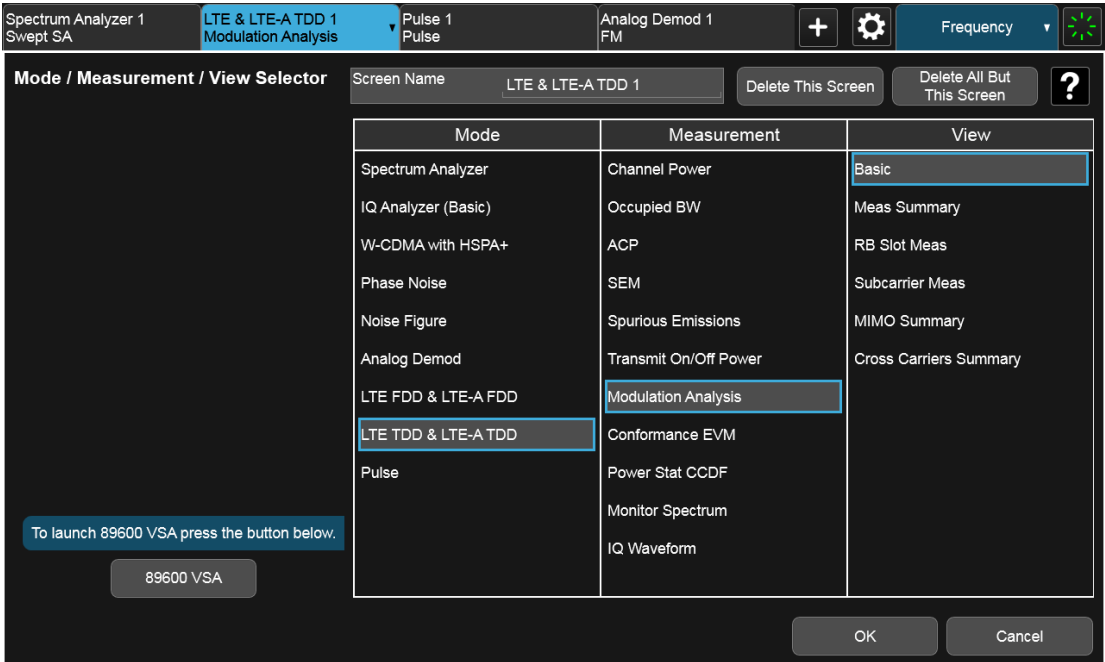

2.1.1.1 Mode

The first column in the Mode/Meas/View dialog allows you to select the desired Mode from those currently licensed in your instrument.

Modes, also known as “measurement applications”, are collections of measurement capabilities packaged together to provide you with an instrument personality specific to your measurement needs. Each Mode is ordered separately by Model Number and must be licensed in order for it to be available in the instrument.

You select the Mode you want to run using the Mode/Meas/View dialog. Once a Mode is selected, only the commands that are valid for that mode can be executed

For more information on Modes, preloading Modes, and memory requirements for Modes, see ["More Information" on page 135](#)

The `:INSTRUMENT[:SElect]` command is used to remotely select a Mode by sending the instrument a parameter which represents the name of the desired Mode. The Mode Names may be found in the table under ["Index to Modes" on page 134](#).

The `:INSTRUMENT:NSElect` command is used to remotely select a Mode by sending the Mode Number of the desired Mode. See ["Instrument Number Select" on page 133](#). The Mode Numbers may be found in the table under ["Index to Modes" on page 134](#).

The `:INSTRUMENT:CONFigure` command causes a Mode and Measurement switch at the same time. This generally results in faster overall switching than sending the

:INSTRument:SElect and **CONFigure** commands separately. See "Mode and Measurement Select" on page 133.

Remote Command	:INSTRument[:SElect] <mode_id> where <mode_id> is one of the values listed in "Index to Modes" on page 134 below :INSTRument[:SElect]?
Example	:INST SA
Notes	A list of the valid mode choices is returned by the :INST:CAT? query
Preset	The default Mode is set to SA on Restore System Defaults->All , unless noted below: For N8973B, N8974B, N8975B, or N8976B: NFIG
State Saved	Saved in instrument state
Annunciation	Application Title is in the Screen Tab

Instrument Number Select

Remote Command	:INSTRument:NSElect <integer> :INSTRument:NSElect?
Example	:INST:NSEL 1
Notes	The Mode Numbers may be found in the table under "Index to Modes" on page 134 SA mode is number 1 The command is sequential: that is, continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available
Preset	The default Mode is set to 1 by Restore System Defaults->All , unless noted in the table above
State Saved	Saved in instrument state

Mode and Measurement Select

Remote Command	:INSTRument:CONFigure:<mode_id>:<meas> where <mode_id> is a valid parameter for the :INST:SEL command and <meas> is a valid parameter for the :CONF command in the Mode specified by <mode>
Example	:INST:CONF:SA:SAN selects the Spectrum Analyzer mode and the Swept SA measurement :INST:CONF:WCDMA:RHO selects the WCDMA mode and the Mod Accuracy measurement
Notes	The available parameters for <mode_id> are dependent upon installed and licensed applications resident in the instrument. The available parameters for <meas> are dependent on the <mode_id> parameter and the valid measurements available for that mode, which can depend on model numbers and installed options In general this command will execute more quickly than sending the equivalent separate :INST:SEL

and **:CONF** commands


Index to Modes

The Mode Number in the table below is the parameter for use with the **:INSTrument:NSElect** command. The Mode Parameter is the parameter for use with the **:INSTrument[:SElect]** command. Your actual choices will depend upon which applications are installed in your instrument.

Mode	Mode Number	Mode Parameter <mode_id>
5G NR	109	NR5G
89601 VSA	101	VSA89601
Analog Demod	234	ADEMOD
Avionics	232	AVIONIC
Bluetooth	228	BTtooth
Channel Quality / Group Delay	161	CQM
EMI Receiver	141	EMI
GSM/EDGE/EDGE Evo	13	EDGE GSM
I/Q Analyzer (Basic)	8	BASIC
LTE FDD & LTE-A FDD	107	LTEAFDD
LTE TDD & LTE-A TDD	108	LTEATDD
Measuring Receiver	233	MRECEIVE
MSR	106	MSR
Noise Figure	219	NFIGure
Phase Noise	14	PNOISE
Power Amplifier	81	PA
Pulse	151	PULSEX
Radio Test	300	RTS
Real Time Spectrum Analyzer	2	RTSA
Remote Language Compatibility	266	RLC
SCPI Language Compatibility	270	SCPILC
Sequence Analyzer	123	SEQAN
Short Range Comms	218	SRCOMMS
Spectrum Analyzer	1	SA
Vector Modulation Analyzer	200	VMA
WCDMA with HSPA+	9	WCDMA
WLAN	217	WLAN

More Information

The Mode name appears on the Screen Tab, followed by a number identifying which instance of the Mode appears on that screen. Each Screen contains one Mode. For example, in the image below, there is one Real-Time Spectrum Analyzer screen, and two Spectrum Analyzer screens. The current Screen contains **Real-Time SA 1**.



It is possible to specify the order in which the Modes appear in the Mode menu, using the **Configure Applications** utility on the Desktop. Using the same utility, it is also possible to specify a subset of the available applications to load into memory at startup time, which can decrease the startup time of the instrument and the amount of memory consumed.

Each application (Mode) that runs in an X-Series instrument consumes virtual memory. The various applications consume varying amounts of virtual memory, and as more applications run, the memory consumption increases. Keysight characterizes each Mode and assigns a memory usage quantity based on a conservative estimate. The **Configure Applications** utility shows an estimate for how much memory each Mode will consume.

You can still run a Mode even if it is not preloaded into memory – during runtime, the first time an application that is not loaded into memory is selected (either by pressing that application's **Mode** key or by sending that application's **:INST:SEL** command), the Application will be loaded, but this takes a few seconds. The instrument will pause while loading the application while displaying a message box that says “Loading application, please wait...” Preloading the application eliminates this wait time *but* consumes additional memory.

2.1.1.2 Application Mode Remote Commands

This section contains a number of remote commands that are provided for programming convenience and remote compatibility.

Application Mode Catalog Query (Remote Command Only)

Returns a string containing a comma-separated list of names of all the installed and licensed measurement modes (applications). These names can only be used with **:INSTrument[:SElect]**.

Remote Command	:INSTrument:CATalog?
----------------	-----------------------------

Example	<code>:INST:CAT?</code>
Notes	Query returns a quoted string of the installed and licensed modes separated with a comma. Example: <code>"SA,PNOISE,WCDMA"</code>
Backwards Compatibility Notes	VSA (E4406A): <code>:INSTrument:CATalog?</code> returned a list of installed <code>INSTrument:SELECT</code> items as a comma separated list of string values, for example: <code>"BASIC", "GSM", "EDGE GSM", "CDMA", "SERVICE"</code> X-Series uses the ESA/PSA compatible query of a string contain comma separated values: <code>"SA,PNOISE,NFIG,BASIC"</code>

Current Application Model (Remote Command Only)

Returns a string that is the Model Number of the currently selected application (mode). This information is also displayed in the **Show System** screen.

Remote Command	<code>:SYSTem:APPLication[:CURRent][:NAME]?</code>
Example	<code>:SYST:APPL?</code>
Notes	Query returns a quoted string that is the Model Number of the currently selected application (Mode). Example: <code>"N9060A"</code> String length between 6 to 9 characters.
Preset	Not affected by Preset
State Saved	Not saved in state, the value will be the selected application when a Save is done.

Current Application Revision (Remote Command Only)

Returns a string that is the Revision of the currently selected application (mode). This information is also displayed in the Show System screen

Remote Command	<code>:SYSTem:APPLication[:CURRent]:REVisIon?</code>
Example	<code>:SYST:APPL:REV?</code>
Notes	Query returns a quoted string that is the Revision of the currently selected application (Mode). Example: <code>"1.0.0.0"</code> String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points) The format is Major.Minor.Build.Compile, where Major must correspond to the Integer portion of the Version in the license file for the application.
Preset	Not affected by a Preset
State Saved	Not saved in state, the value will be the selected application when a Save is done.

Current Application Options (Remote Command Only)

Returns a string that is the Options list of the currently selected application (Mode). This information is also displayed in the Show System screen

Remote Command	<code>:SYSTem:APPLication[:CURRent]:OPTion?</code>
Example	<code>:SYST:APPL:OPT?</code>
Notes	Query returns a quoted string that is the Option list of the currently selected application (Mode). The format is the name as the *OPT? or SYSTem:OPTion command: a comma separated list of option identifiers. Example: "1FP,2FP" String length is a maximum of 255 characters.
Preset	Not affected by a Preset
State Saved	Not saved in state per se, the value will be the selected application when a Save is invoked.

Application Catalog Number of Entries (Remote Command Only)

Returns the number of installed and licensed applications (Modes).

Remote Command	<code>:SYSTem:APPLication:CATalog[:NAME]:COUNT?</code>
Example	<code>:SYST:APPL:CAT:COUN?</code>
Preset	Not affected by Preset
State Saved	Not saved in instrument state.

Application Catalog Model Numbers (Remote Command Only)

Returns a list of Model Numbers for the installed and licensed applications (Modes).

Remote Command	<code>:SYSTem:APPLication:CATalog[:NAME]?</code>
Example	<code>:SYST:APPL:CAT?</code>
Notes	Returned value is a quoted string of a comma separated list of Model Numbers. Example, if SAMS and Phase Noise are installed and licensed: "N9060A,N9068A" String length varies based on licenses. Licenses are between 6 and 9 characters. So the string length will be between COUNT * 7 - 1 and COUNT * 10 - 1. (7 & 10 = Model Number length + 1 for comma. -1 = no comma for the 1st entry.)
Preset	Not affected by a Preset
State Saved	Not saved in instrument state.

Application Catalog Revision (Remote Command Only)

Returns the Revision of the provided Model Number.

Remote Command	<code>:SYSTem:APPLication:CATalog:REVision? <model></code>
Example	<code>:SYST:APPL:CAT:REV? 'N9060A'</code>
Notes	<p>Returned value is a quoted string of revision for the provided Model Number. The revision will be a null-string ("") if the provided Model Number is not installed, licensed, and loaded. Example, if SAMS is installed and licensed:</p> <p>"1.0.0.0"</p> <p>String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points)</p>
Preset	Not affected by a Preset.
State Saved	Not saved in instrument state.

Application Catalog Options (Remote Command Only)

Returns a list of Options for the provided Model Number

Remote Command	<code>:SYSTem:APPLication:CATalog:OPTion? <model></code>
Example	<code>:SYST:APPL:CAT:OPT? 'N9060A'</code>
Notes	<p>Returned value is a quoted string of a comma separated list of Options, in the same format as *OPT? or :SYSTem:OPTion?. If the provided Model Number is not installed and licensed a null-string ("") will be returned. Example, if SAMS is installed and licensed:</p> <p>"2FP"</p> <p>String length is a maximum of 255 characters.</p>
Preset	Not affected by a Preset
State Saved	Not saved in instrument state.

ESA SA compatibility command (Remote Command only)

Provided for backwards compatibility with ESA. When this command is received, the analyzer aliases it to the appropriate Mode.

Remote Command	<code>:INSTrument[:SElect] 'SA' 'PNOISE' 'EDGE' 'GSM' 'BASIC'</code>
Example	<code>:INST 'SA'</code>
Notes	The query is not a quoted string. It is an enumeration as indicated in the Instrument Select table above

GSM Mode compatibility command (Remote Command only)

Provided for backwards compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL EDGE GSM
```

Remote Command	:INSTrument[:SElect] GSM
----------------	--------------------------

Example	:INST GSM
---------	-----------

SA compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL SCPI LC
```

This results in the analyzer being placed in SCPI Language Compatibility Mode, in order to emulate the ESU Spectrum Analyzer Mode.

Remote Command	:INSTrument[:SElect] SANalyzer
----------------	--------------------------------

Example	:INST SAN
---------	-----------

Receiver compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the instrument aliases it to the following:

```
:INST:SEL EMI
```

```
:CONF FSC
```

This results in the instrument being placed in the EMI Receiver Mode, running the Frequency Scan measurement, in order to emulate the ESU Receiver Mode.

Remote Command	:INSTrument[:SElect] REceiver
----------------	-------------------------------

Example	:INST REC
---------	-----------

APD compatibility command for EMC(Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL EMI
```

```
:CONF APD
```

This results in the analyzer being placed in the EMI Receiver Mode, running the APD measurement, in order to emulate the ESU APD Mode.

Remote Command	:INSTrument[:SElect] APDistribution
Example	:INST APD

IF Mode compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL EMI  
:CONF MON
```

This results in the analyzer being placed in the EMI Receiver Mode, running the Monitor Spectrum measurement, in order to emulate the ESU IF Mode.

Remote Command	:INSTrument[:SElect] IFANalyzer
Example	:INST IFAN


2.1.1.3 Measurement

The Measurement column of the Mode/Meas/View dialog shows all the Measurements available for the Mode which is selected in the first column. Select a Measurement in the second column and the View column will show all the Views available for that measurement. Once you have the Mode, Measurement and View selected, press OK to change the current Screen to that Mode, Measurement and View.

2.1.1.4 View

A View is a collection of Result Windows. The View column of the "Mode/Meas/View Dialog" on page 131 shows all the Views available for the Measurement which is selected in the second column. Once you have the Mode, Measurement and View selected, press OK to change the current Screen to that Mode, Measurement and View.

The View may also be set by using the View tab on the Display menu. The View tab is the last tab on the Display menu for every measurement. The Views are the same as those listed in the "Mode/Meas/View Dialog" on page 131.

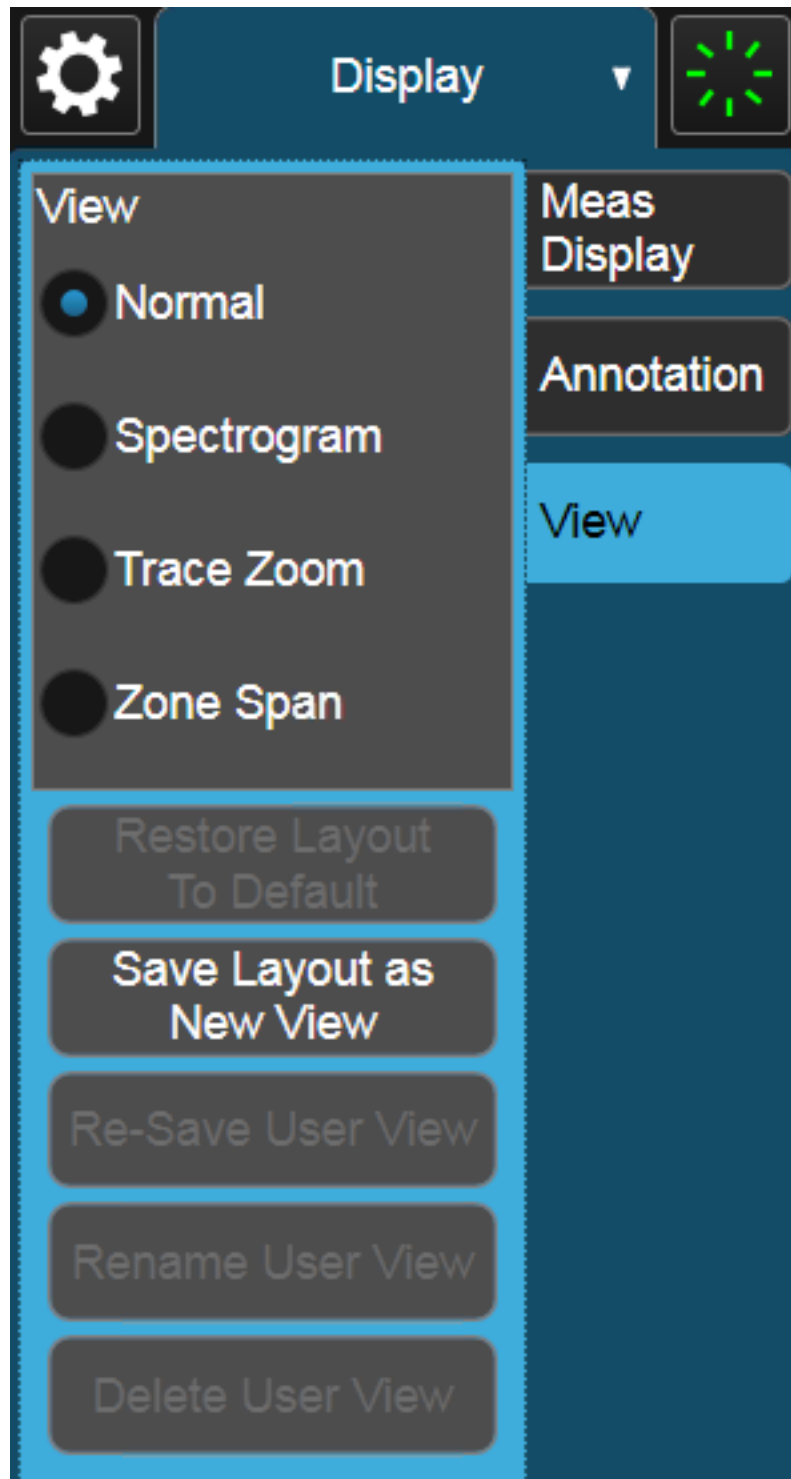

2.1.1.5 Sequencer

Allows multiple Screens to update sequentially while in "Multiscreen" on page 219 display mode. Each Screen updates in sequence, and when all have updated, the sequence will start again.

To start the Sequencer, you must have more than one Screen defined, and you must have Multiscreen selected (see "Screen Tabs" on page 130).

If you want each Screen to use a different input, you must turn off All Screens Use Same Input under Input/Output, Input.

CAUTION

Differences in hardware settings between the Screens may cause switches and/or attenuators to cycle as you go from one Screen to another. This could potentially reduce the life of these components. To avoid this, make sure **Attenuation**, **µW Path Control** and other switch settings are the same in each Screen.

NOTE

When the Sequencer is running, the destination of remote commands is unpredictable, so you should stop the Sequencer before sending any measurement-related commands. Once the Sequencer has stopped, select a specific Screen using `:INSTRument:SCReen:SElect`, before sending any further commands. See "Select Screen" on page 221

NOTE


When the Sequencer is running, Auto alignment is temporarily disabled. A pending auto alignment might be executed when the sequencer is stopped.

See "More Information" on page 142


Remote Command	<code>:SYSTem:SEQuencer ON OFF 1 0</code> <code>:SYSTem:SEQuencer?</code>
Example	<code>:SYST:SEQ ON</code>
Notes	If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” is generated
Dependencies	To start the Sequencer, you must have more than one Screen defined and you must have Multiscreen selected
Preset	<code>OFF</code>

More Information

To start the Sequencer, tap the current (blue) Screen tab to go into the Mode/Meas/View Dialog:

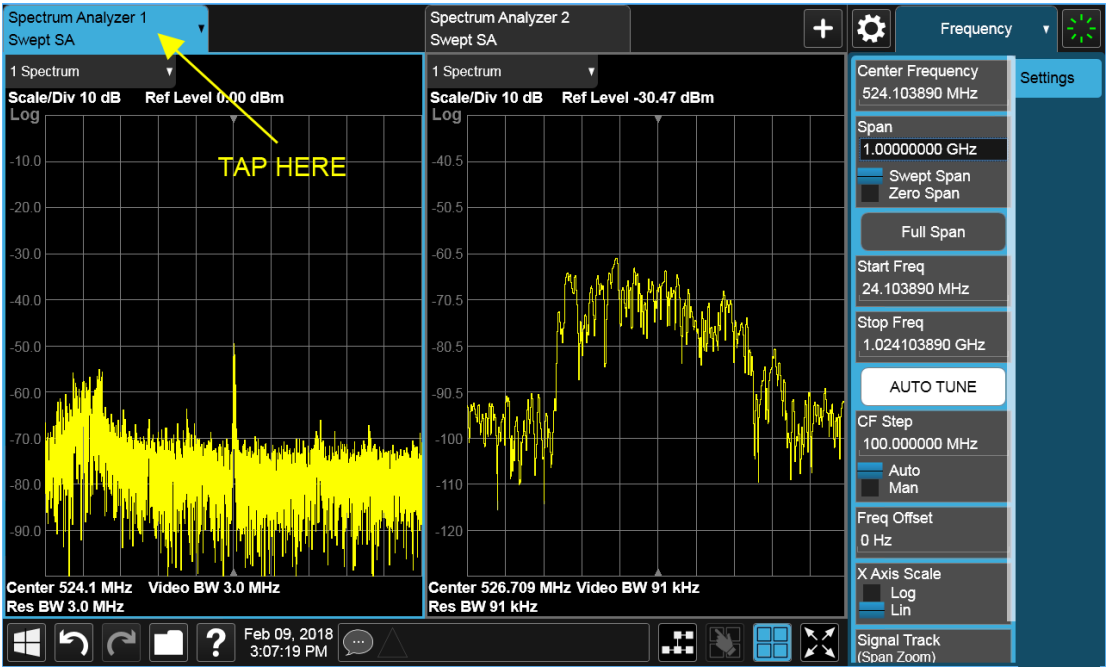


In the Sequencer block in the upper left hand corner, tap the Sequencing switch to turn it On:

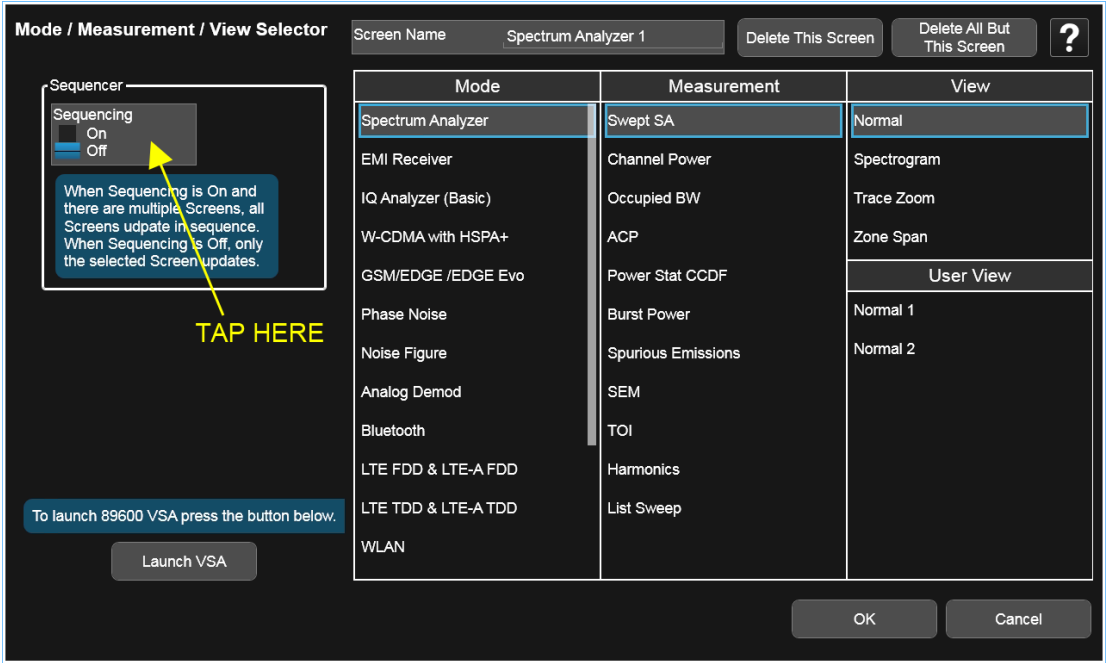


2 User Interface
2.1 Screen Tabs

The instrument will immediately exit the Mode/Meas/View Dialog and begin making measurements in each of the screens, one after the other. When a measurement is being made in a particular Screen, that Screen's tab will be blue.

Measurement being made in Screen 1:

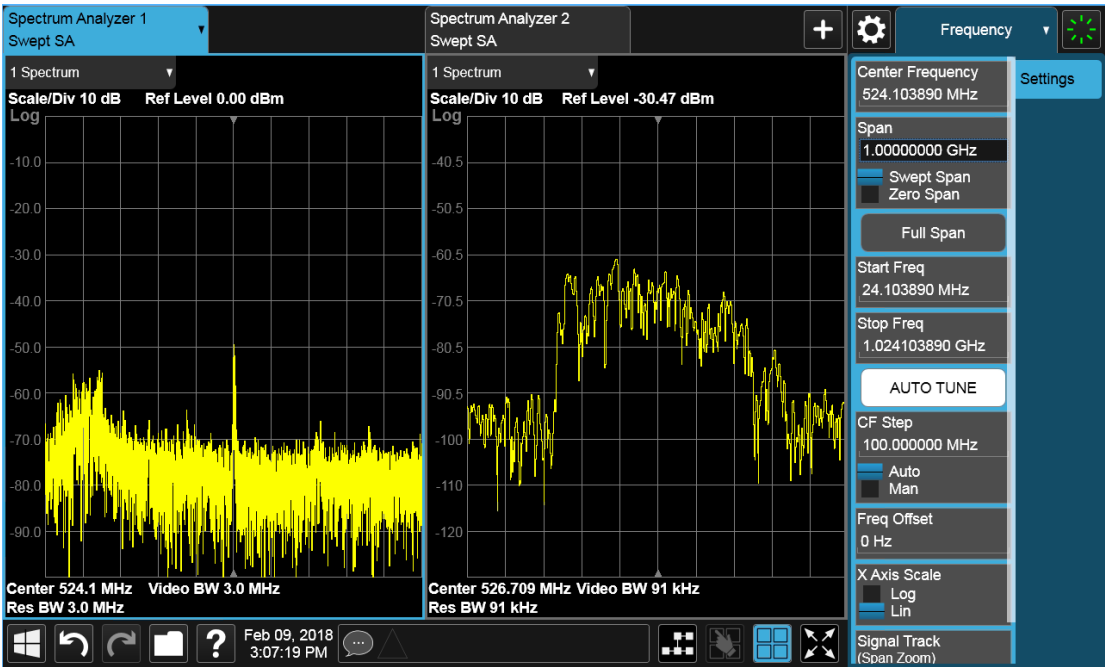

Measurement being made in Screen 2:

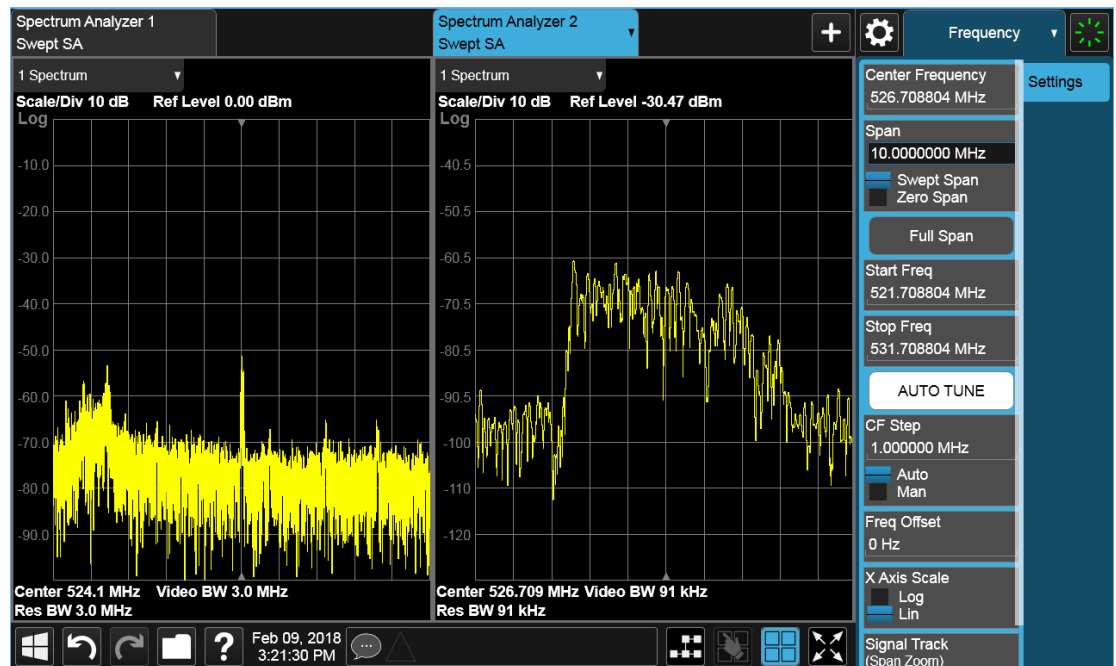

Touching any key or control on the display will cause the Sequencer to stop, so that you can make desired changes. When this happens, the message “Sequencer stopped” is displayed.


When the Sequencer is running, the screens update in the order in which they were created.

Each Screen takes one measurement then passes control to the next Screen. Each Screen updates as though it were in Single Sweep or Single Measurement mode. Thus, if Averaging is on, a Screen may take multiple sweeps before moving on to the next Screen.


2.1.1.6 Screen Name

By default, the screen name is the Mode (Application) name followed by a number indicating the instance of the application.

You may change the name displayed on the Screen Tab of any screen. The control to do this appears in the ["Mode/Meas/View Dialog" on page 131](#):



When you touch this control an onscreen keyboard appears, allowing you to change the name. Whatever you change it to appears on the Tab, even if you subsequently change the screen to a different Mode.



To reset the name, delete the screen name entirely.

Each Screen Name must be unique; you cannot give the same name to more than one screen.

Remote Command	<code>:INSTrument:SCReen:REName <alphanumeric></code>
Example	<code>:INST:SCR:REN "Baseband"</code>
Notes	<p>The currently active screen is renamed.</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of screen names, the error message “-224, Illegal parameter value; New name <name> already exists” appears</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears</p>

2.1.1.7 Delete This Screen

Pressing this button deletes the current Screen (the one with the blue tab). Deleting a screen removes it from view and selects the next lower screen in the list of screens. If only one screen is configured, it cannot be deleted.

If you press the **Delete This Screen** button, a prompt appears:

“This function will delete the current screen and its settings. This action cannot be undone. Do you want to proceed?”

Pressing **OK** or Enter deletes the screen, pressing **Cancel** or **ESC** does not.

Remote Command	<code>:INSTrument:SCReen:DELeTe</code>
Example	<code>:INST:SCR:DEL</code>
Notes	<p>The currently active screen is deleted</p> <p>If the screen you are attempting to delete is the only configured screen, the error message “-221, Settings conflict; Last screen cannot be deleted” is displayed</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” is generated</p>

2.1.1.8 Delete All But This Screen

Pressing this control deletes all the Screens except the current Screen (the one with the blue tab).

If you press the **Delete All But This Screen** button, a prompt appears:

“This function will delete all defined screens and their settings, except for the current screen. This action cannot be undone. Do you want to proceed?”

Pressing **OK** or Enter deletes the screen, pressing **Cancel** or ESC does not.

Remote Command	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Example	<code>:INST:SCR:DEL:ALL</code>
Notes	<p>You can reset the instrument to the power-on configuration by invoking <code>:INST:SCR:DEL:ALL</code> followed by <code>:SYSTem:DEFault ALL</code></p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears</p>

2.1.1.9 89600 VSA

Pressing this button launches the 89600 VSA software. The 89600 VSA software is powerful, PC-based software, offering the industry's most sophisticated general purpose and standards specific signal evaluation and troubleshooting tools for R&D engineers. Even for proprietary and non-standard signals in SATCOM or MILCOM applications, you can make signal quality measurements with customized IQ constellation.

The 89600 VSA software offers the following features:

- Over 35 general-purpose analog and digital demodulators ranging from 2FSK to 4096QAM
- Flexible and custom IQ and OFDM signal analysis for single carrier
- Standards specific modulation analysis including:
 - Cellular: GSM/EDGE, cdma2000, W-CDMA, TD-SCDMA, LTE(FDD/TDD),
 - LTE-Advanced and more
 - Wireless networking: 802.11a/b/g, 802.11n, 802.ac, 802.16 WiMAX (fixed/mobile), WiSUN (MR-FSK PHY)
 - RFID
 - Digital satellite video and other satellite signals, radar, LMDS
- Up to 400K bin FFT, for the highest resolution spectrum analysis
- A full suite of time domain analysis tools, including signal capture and playback, time gating, and CCDF measurements
- 20 simultaneous trace displays and the industry's most complete set of marker

functions

- Easy-to-use Microsoft Windows graphical user interface

For more information see the Keysight 89600 Series VSA web site at www.keysight.com/find/89600vsa

To learn more about how to use the 89600 VSA in the instrument, start the 89600 VSA software, then open the 89600 VSA Help and navigate to the topic "About Keysight X-Series Signal Analyzer with 89600 VSA Software".

Example	<code>:INST:SEL VSA89601</code> <code>:INST:NSEL 101</code>
---------	--

2.1.2 Add Screen

On X-Series analyzers you can configure up to 16 different Screens at one time. Each Screen contains one Mode, each Mode contains one Measurement, and each Measurement contains a number of Windows.

You can add screens by pressing the “+” icon in the "Screen Tabs" on page 130 panel. The icon is shown below:



Every time you add a Screen, the instrument “clones” or “copies” the current Screen into the new Screen. If desired, you can then use the "Mode/Meas/View Dialog" on page 131 to change the Mode, Measurement and/or View of the new Screen, or simply operate a second copy of your previous Screen, thus preserving the settings of your previous Screen.

When you have defined the maximum number of Screens (16), the “+” icon disappears.

For more information about operating the instrument with multiple screens configured, see "Multiscreen" on page 219.


Remote Command	<code>:INSTrument:SCReen:CREate</code>
Example	<code>:INST:SCR:CRE</code>
Notes	The maximum number of screens is 16. If an attempt to add a screen occurs when the maximum have been defined, the error message “-221, Settings conflict; Screen limit reached” appears When you create a new screen the Screen Name is the current Mode name followed by a number indicating the instance of the Mode.

If the display is disabled (via **:DISP:ENAB OFF**) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears

2.2 Meas Bar


The Meas Bar is used to display annotation for the current measurement. There are three primary uses for the Meas Bar:

1. To show annotation for the most important parameters in the measurement so you can see them at a glance
2. To show the annotation that you will most want to have recorded in a screen dump
3. To give you quick access to settings.



The Meas Bar is made up of a number of annotation panels, each of which, when pressed, opens up a dialog below it which contains controls for those settings.

For example, here is what the display looks like when you touch one of the regions of the Meas Bar:

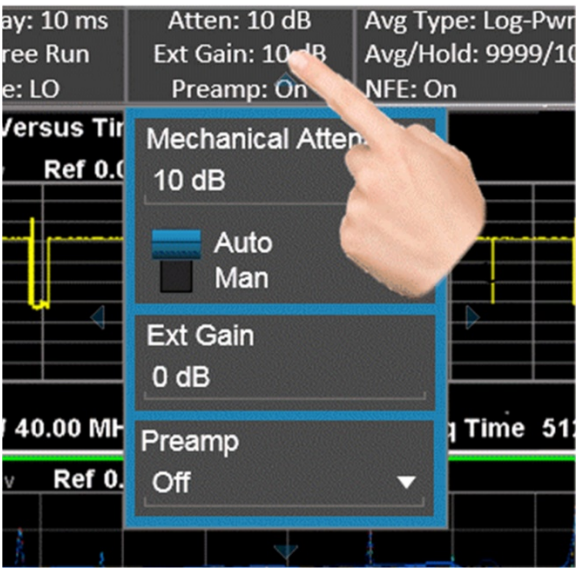

Touching anywhere off the hotspot panel or pressing any hardkey except **Save** or **Quick Save** closes the hotspot panel.

In a hotspot panel, the control in black with the blue border is the active function. Each panel may have its own default active function.

Settings that are colored amber are those that you need to be particularly aware of; for example, if Alignments are off, this is shown in amber, so you will know that you may not be meeting spec. Similarly, if DC coupling is on, this is shown amber, to alert you to be careful what voltage you put on the input.

You can turn the Meas Bar on and off with a switch on the Annotation tab of the Display menu.

System Control Panel

The leftmost panel holds the GPIB/Remote annunciators, the Single/Continuous symbol/control, the LXI indicator and the PASS/FAIL indicator. Tapping this panel drops down controls for Single/Continuous, Pause/Resume and restart.



GPIB/Remote annunciators

The GPIB/Remote annunciators are shown as the letters **KRLTS**. Each letter is shown if the state is true and is not shown if the state is false, as follows:

K	Keylock indicator	This is shown when the instrument is in the Keylock state (turned on and off by the SYST:KLOCK command)
R	Remote annunciator	Shown when the instrument is in the remote state, as when being controlled via the IEEE-488 bus (GPIB) or TCP/IP connections
L	GPIB Listen annunciator	Shown when addressed to listen via GPIB or TCP/IP
T	GPIB Talk annunciator	Shown when addressed to talk via GPIB or TCP/IP
S	GPIB SRQ annunciator	Shown when the instrument is asserting SRQ on GPIB. This annunciator is an amber color

Single/Continuous symbol/control

This annunciator shows as an arrow on an oval line when in Continuous, or an arrow on a straight line when in Single.

LXI indicator

This indicator displays in green when LAN is connected, in white when LAN is not connected, and in red when LAN is connected but has a connection problem.

PASS/FAIL indicator

This annunciator displays when Limits are turned on. It is green if all Limits are passing, and a red FAIL if any limit is not passing.

The following command queries the status of the current measurement limit testing. It returns a 0 if the measured results pass when compared with the current limits. It returns a 1 if the measured results fail any limit tests.

Remote Command	:CALCulate:CLIMits:FAIL?
Example	:CALC:CLIM:FAIL? queries the current measurement to see if it fails the defined limits Returns a 0 or 1: 0 it passes, 1 it fails

Trace Detector Settings Panel

In the Swept SA and some other measurements, there is a special panel summarizing the settings for the traces in the measurement:



There is one column for each trace. The rows are as follows:


- The top row shows the Trace Number, in the trace color.
- The second row shows the Trace Type for each trace (W=Clear/Write, A=Trace Average, M=Max Hold, m=Min Hold); this letter is in white if the trace is Active, in gray if the trace is inactive; there is a bar through the letter if the trace is not being displayed
- The third row shows the detector for each trace (N=Normal, S=Sample, A=Average, P=peak, p=negative peak, Q=Quasi Peak, E=EMI Average, R=RMS Average, f=math function)

In the example above, trace 1 is active, visible, and in Average using the Sample detector, the other traces are inactive, blanked and in Clear/Write using the Normal detector.

Tapping this panel drops down controls for the Traces.

2.3 Measurement Display

The Measurement Display contains one or more data windows displaying the result of the current measurement. These may be graphical or textual windows.

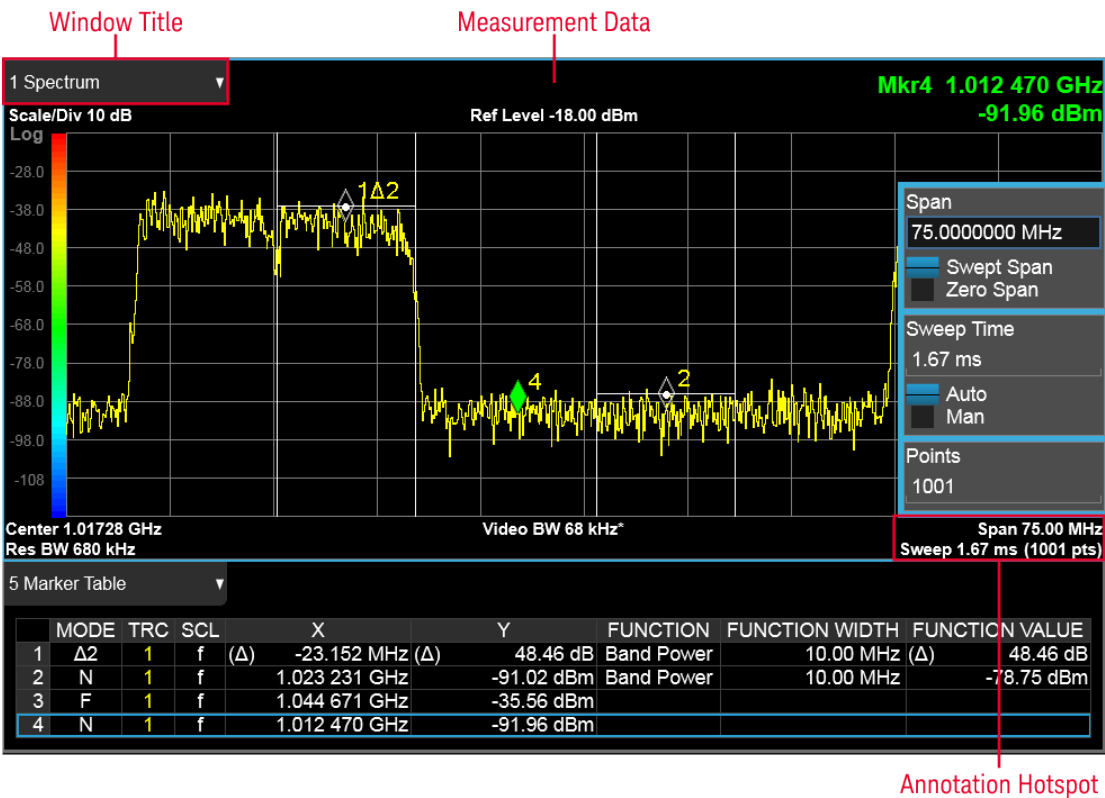

Each window in the Measurement display contains a "Window Title" on page 154, "Measurement Data" on page 158, and graphical windows also may contain "Annotation Hotspot" on page 161.


The selected window in the Measurement Display is indicated by a blue border. Window-dependent controls in the menu panel always refer to the selected window.

2.3.1 Window Title

The Window Title appears in the upper left hand corner of the window, and includes a title describing the measurement data currently being displayed in the window. The title may also contain additional information about the data in the window, for example in the LTE measurement supplication, the component carrier being displayed in the window will be indicated (e.g., "CC0").


Measurements that support User Views (see ["View Editor" on page 198](#)) also display the Window Number in the Window Title, to enable window addressing from SCPI. The number is the number that will be used in the SCPI command to address that window, for example, in the WCDMA Mod Accuracy measurement, Code Domain Power is assigned window number 6, so you address it with the following SCPI command:

```
:DISP:RHO:WIND6:TRAC:Y:RLEV 0.0
```



Note the arrow pointing down on the right side of the Window Title. This indicates that touching the Window Title will display a dropdown, which enables you to select the Measurement Data to be displayed in the window.


For example, if we wish to assign the results of the upper window in the display below to the Marker Table, we would touch the window title and then the “Data” control that is revealed, as shown:

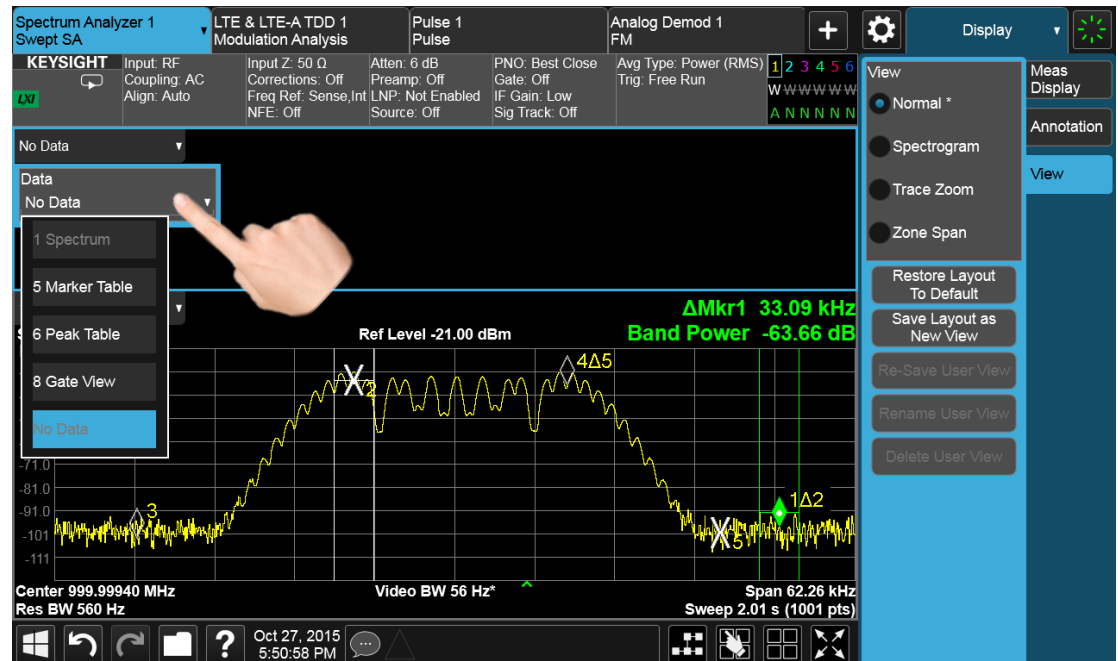


And then select Marker Table, yielding the result below:

2 User Interface


2.3 Measurement Display

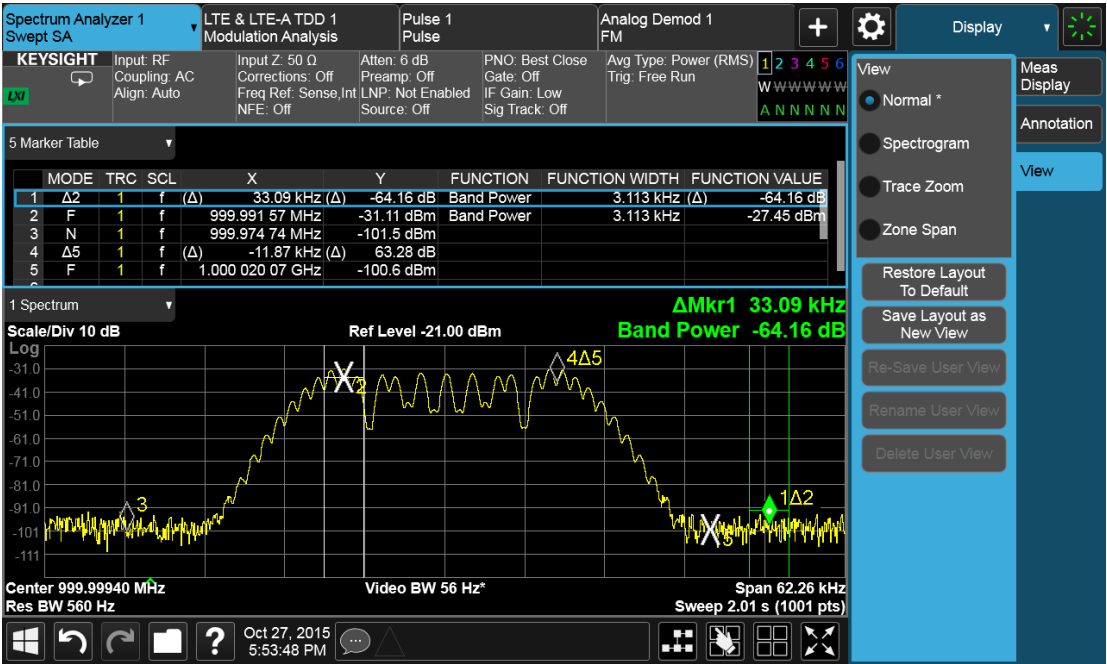

Note also that the Window Data dropdown can be a cascaded list, if the number of available results requires categorization to hold them all:

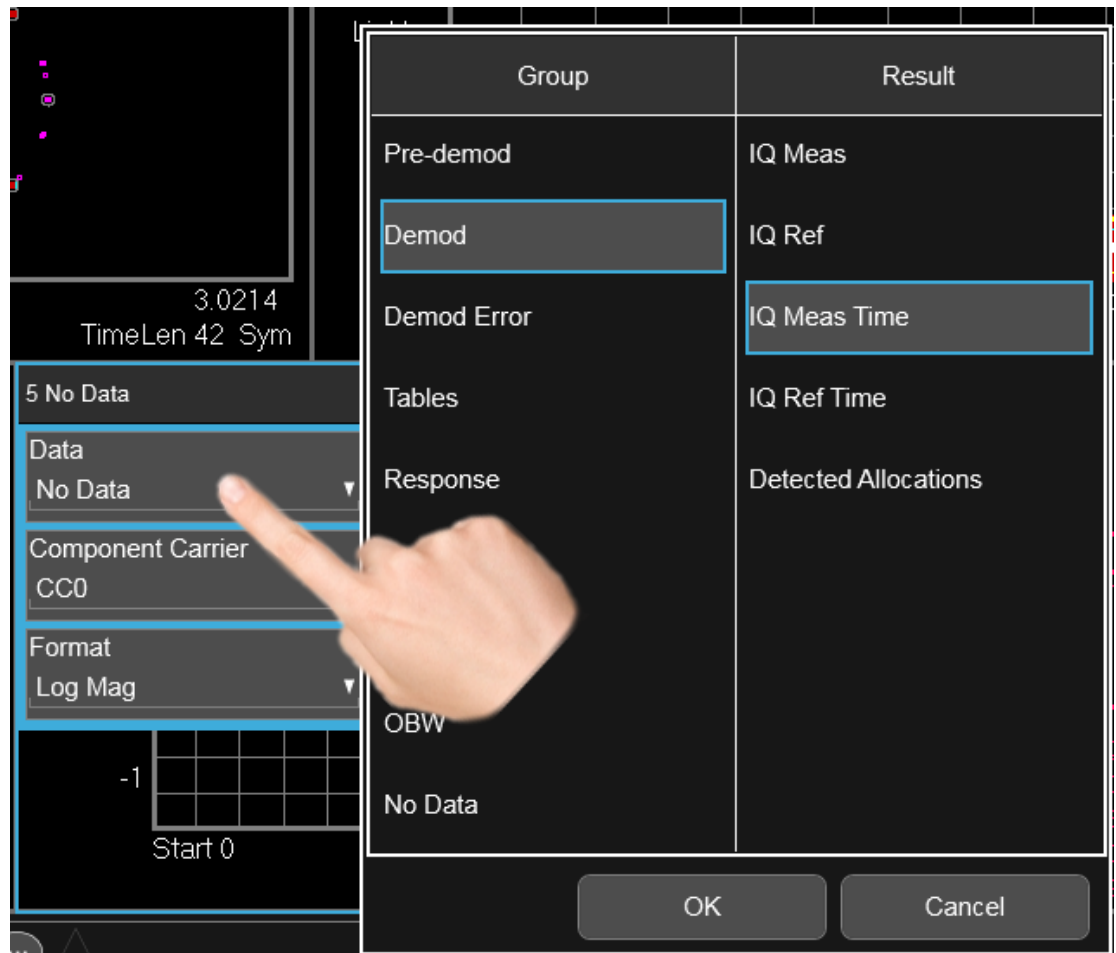

Note also that the Window Data dropdown sometimes includes controls for further configuring the window, for example, in LTE choosing the desired Component Carrier and Data format.

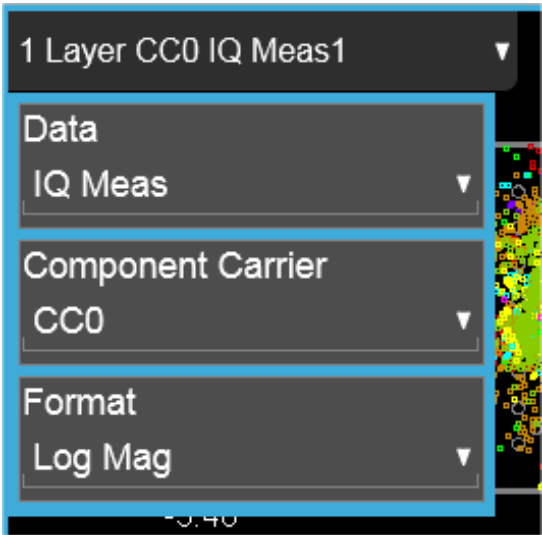

Touching a window's title dropdown also selects the window.

2.3.2 Measurement Data

The Measurement Data region shows graphical or textual data for the Data selected in the Window Title Data control. Below you can see examples of both graphical and textual windows in a four-window display.



There are many gestures which you can use to interact with a measurement display window. They are detailed below.

Swipe

There are several swipe actions, as listed below. One of the most important actions is swiping a spectrum window to the left or right, or up or down, to adjust the frequency and level of the spectrum, as shown below.



Swipe actions are summarized in the table below. Not all of these may be available, depending on the measurement.

Object	Action
Spectrum Trace Left/Right	Drag trace (change Center Frequency)
Spectrum Trace up/down	Drag trace (change Ref Level)
Marker Left/Right	Drag marker along trace
Fixed Marker Left/Right/Up/Down	Drag marker in space
Scrollable area	<p>Scroll vertically or horizontally. Scrollable areas include the Menu Panel (if overfull), tables and lists. A scrollable area is indicated by a vertical or horizontal translucent white bar which can also be dragged by a mouse</p> <p>When scrolling a table:</p> <ul style="list-style-type: none"> – Row headers remain in place when the table is scrolled horizontally, and scroll with the table when the table is scrolled vertically – Column headers remain in place when the table is scrolled vertically, and scroll with the table when the table is scrolled horizontally

Object	Action
Toggle control	Toggle in that direction


Pinch

You can also pinch in or out either horizontally or vertically to zoom in the x-axis or y-axis dimension. For example, a pinch horizontally lets you adjust the Span of the Spectrum window. Also, pinching on the wings of a Band Power or other Band Function allows you to widen or narrow that Band Function.

Pinching may sometimes be easier if you use the index finger of each hand, rather than pinching with one hand.

Touch-and-Hold

You can also touch-and-hold the display, that is, touch it and hold your finger on the display. A circle is drawn, and when the drawing completes, a right-click gesture is performed that depends on the screen feature touched, as listed in the table below.

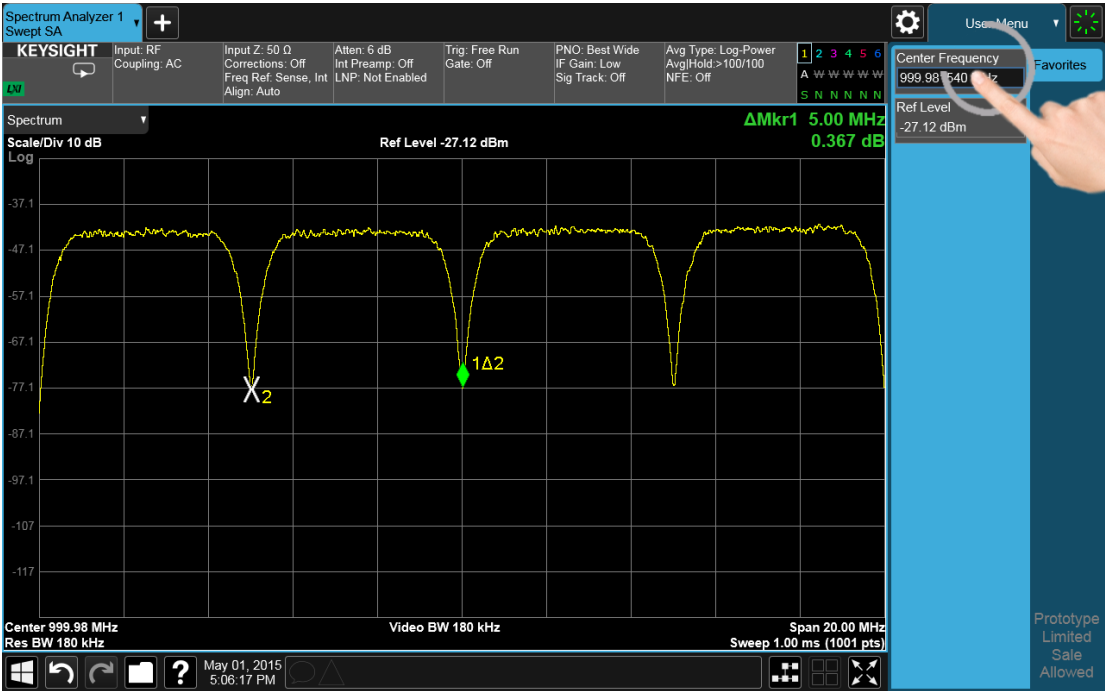

Right Click on a Trace	Peak Search, Trace Type (Clear/Write, Trace Average, Max Hold, Min Hold), Trace View/Blank (Active, View, Blank, Background). Not all of these may be available, depending on the measurement
Right Click on a Marker	Marker Mode (Normal, Delta, Fixed, Off), Peak Search, Next Peak, Next Pk Right, Next Pk Left). Not all of these may be available, depending on the measurement

Right Click on the Background	Lets you select Help
Right Click on a Menu Panel control	Lets you add or remove that control from the User Menu or get Help on that control

Tap

Tapping an object causes the actions defined in the table below:

Object	Action
Marker	Select
Marker (repeated taps on stacked)	Cycle through stacked markers
Trace	Select. In addition if Marker is the active function, move the selected marker to the point where you tapped
Trace (repeated taps on stacked)	Cycle through stacked traces
Window	Select if unselected
Screen	Select if unselected

Double Tap

Double-tapping an object causes the actions defined in the table below:


Object	Action
Window	Zoom/Unzoom

2.3.3 Annotation Hotspot

You can tap on a graticule annotation to modify one of the fields in that annotation. For example if you tap on the region with Center Freq and Res BW in it, a menu panel pops up with just those settings on it.

2 User Interface

2.3 Measurement Display

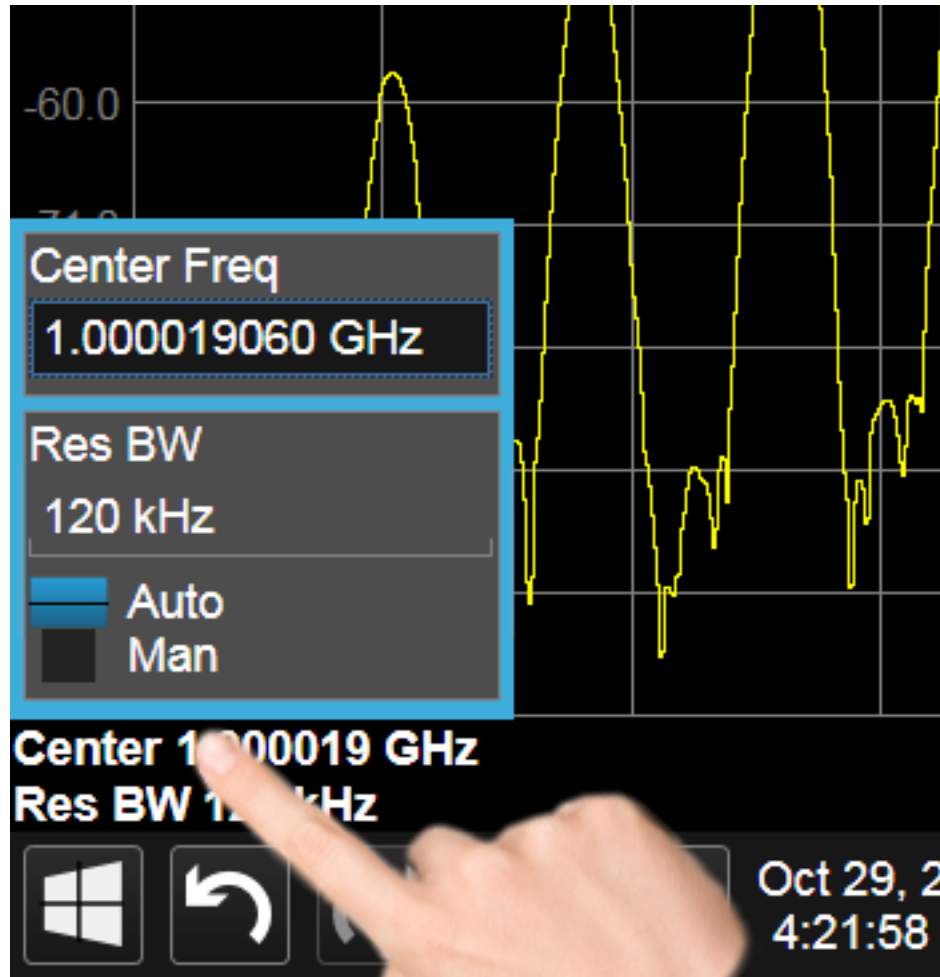

Touching anywhere off the hotspot panel or pressing any hardkey except **Save** or **Quick Save** closes the hotspot panel.

Annotation which is not currently able to be adjusted is not grayed out on the display, but the control in the hotspot that drops down or pops up is grayed out.

In a hotspot panel, the control in black with the blue border is the active function. Each panel may have its own default active function

2.4 Menu Panel

The menu panel is the main focus of the X-Series Multitouch user interface. The controls include active functions, dropdowns, action buttons, radio buttons and toggles.




The menu panel normally appears on the right side of the display and consists of a rectangular panel with multiple “sub-panels” lying on top of each other, each sub-panel being accessed by a tab on the right.

You press a front panel key (or “hardkey”) to access a particular menu. On the front panel there are twelve “measurement hardkeys” (the ones in the shaded region in the figures below) – these are the hardkeys that open up menus in the menu panel.

With a menu open, tap a tab to access the controls on its sub-panel. Whenever you press the front panel key associated with a menu, the default (top) tab is selected.

If the number of controls on a panel exceeds the height of the panel, scrolling is enabled, which is indicated by a white bar on the left that fades away after a few seconds. You swipe up or down with your finger to scroll the panel, or you can grab the white bar with a mouse.

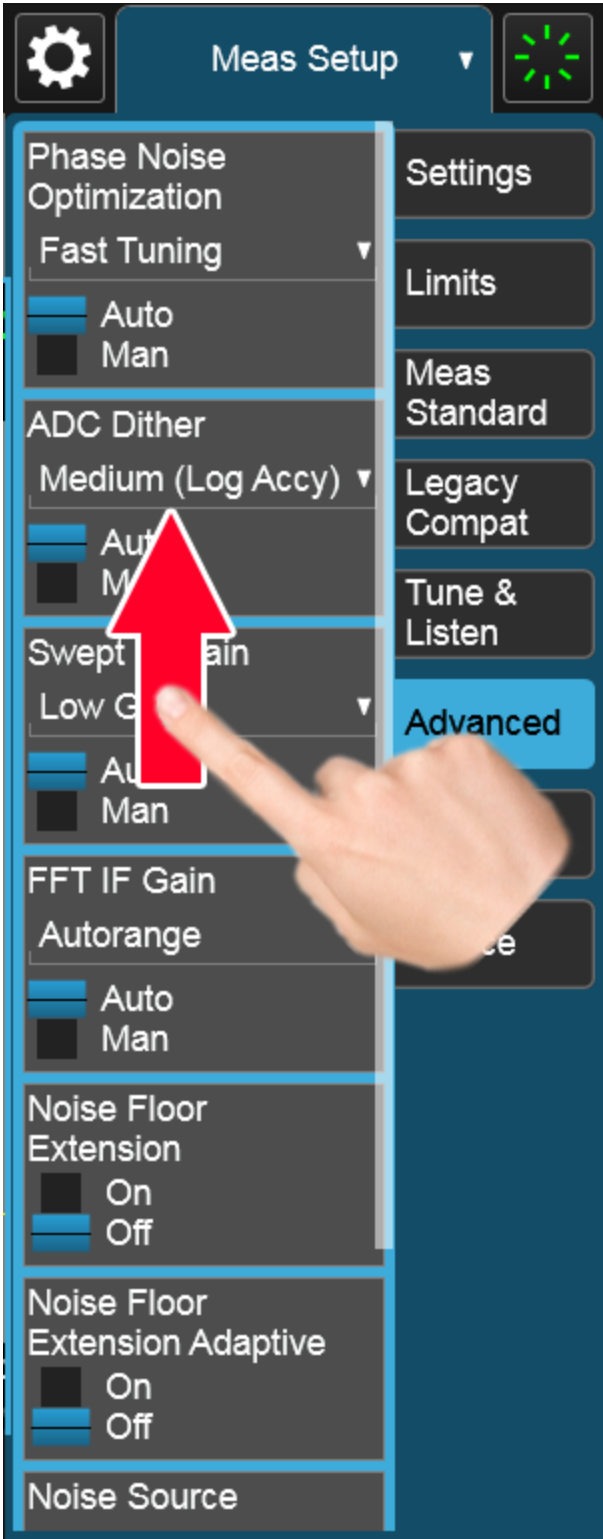

If you move to a different menu panel or sub-panel and then come back to a previous panel, the previous panel is always reset to be scrolled all the way back to the top.

Accessing Menus Without Using Front-Panel Keys

You can access the menu panels without using the front panel keys, as you would need to do if you were operating the instrument using Remote Desktop. Touch or click on the menu title, as shown below. A dropdown containing the twelve measurement hardkeys appears. Selecting a hardkey from the dropdown displays the corresponding menu, and the dropdown disappears.




Entering Numeric Values


Many controls on the menu panel allow you to enter numeric values. These are called “active functions.” An active function control displays a number and a suffix,

2 User Interface
2.4 Menu Panel

for example 13.255 GHz, as in the example below:

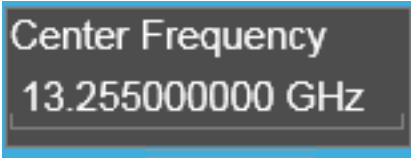

An active function is “active” if the numeric value is surrounded by a black background with a blue border, as below. In this state, it is ready to receive numeric input from the number pad on the front panel, the knob, or the step keys.



When an active function is in the active state, you can start typing or pressing the number keys on the front panel, which causes the Numeric Entry Panel to appear, as shown below. The Numeric Entry Panel displays the typed value, and the terminators to complete the entry.

Here we see a UXA with an active function control in the active state. Although no Numeric Entry Panel is displayed, you can just touch the “2” key:



This causes the Numeric Entry Panel to pop up to receive the numbers you are typing:



Type in as many digits as required, then touch one of the unit terminator buttons in the Numeric Entry Panel to complete the entry. In this case, 2 GHz was the desired entry, so you just touch the “GHz” terminator:

2 User Interface
2.4 Menu Panel



The Numeric Entry Panel disappears and, in the example, the active function value becomes 2 GHz.



It is important to note that you can always pop up the Numeric Entry Panel by touching an active function control while it is active; for example, if you were to touch it in the figure above, the Numeric Entry Panel would pop up right next to the control:

2 User Interface
2.4 Menu Panel



You can display the Numeric Entry Panel by touching any active function control while it is active, but you don't have to pop up the Numeric Entry Panel first, you can just start typing and it will pop up on its own, thus saving you a keystroke.

You can also adjust a value without displaying the Numeric Entry panel by turning the knob or using the step keys while an active function is active. If you turn the knob or use the step keys while the Numeric Entry Panel is displayed, it disappears, allowing you to see the entire screen while you are making the adjustment.

You can also drag the Numeric Entry Panel to another part of the display if it is covering something that you wish to see while it is on the screen.

2.4.1 Right-Click Menu

If you click with the right mouse button on any of the menus in measurements, a popup menu appears, which includes:

The items in this menu are:

- "Add to User Menu" on page 173
- "Help on this setting" on page 173
- "Show SCPI Command" on page 173
- "Add to SCPI Recorder" on page 174
- "Start/Stop SCPI Recorder" on page 174
- "Show SCPI Recorder" on page 174

2.4.1.1 Add to User Menu

For details, see "User Menu" on page 174.

2.4.1.2 Help on this setting

For details, see "Help" on page 187.

2.4.1.3 Show SCPI Command

Enabled/visible when the currently-active feature has an associated SCPI command or query. Displays a popup dialog that shows the active GUI selection's SCPI command.

To close the popup dialog, click **OK**

2.4.1.4 Add to SCPI Recorder

Adds SCPI to the recorder from User Interface features that have equivalent SCPI.

This is the manual mode for adding SCPI to the recorder when you do not wish to add SCPI continuously. This control is enabled only when the current active feature has an associated SCPI command or query.

Irrespective of the continuous recording state, clicking this control adds the active entry into the recorder, including the active value if it is a setting.

2.4.1.5 Start/Stop SCPI Recorder

Starts or stops continuous recording mode. After starting the recording, any changes to settings will be recorded.

After continuous recording is enabled, the button label changes to **Stop SCPI Recorder**, which is displayed while recording is in progress. Clicking **Stop SCPI Recorder** halts recording and switches the control label back to **Start SCPI Recorder**.

2.4.1.6 Show SCPI Recorder

This shortcut opens the dialog **"SCPI Recorder"** on page 3570.

2.4.2 User Menu

Lets you create your own menu, to include controls that you frequently use. You can have one **User Menu** for each measurement, and all User Menus survive a power cycle.

You add a control to the User Menu for the current measurement by right-clicking on the control, then selecting **"Add to User Menu"** on page 173. You can also remove the control from the User Menu using the same right-click menu item.

User Menu appears at the bottom of the menu drop-down panel.

2.5 Cancel key



This front-panel key has the same functions as the Windows **Esc** (Escape) key. It does the following:

- Cancels dialogs
- Cancels active functions (unless there is an entry in progress, in which case it cancels that, and reverts to the previous value)
- Resets input overloads
- Aborts print operations
- Cancels certain other operations (such as alignments)
- Returns you to Local Control (if in Remote)
- If the backlight is off, turns on the backlight, and does nothing else

Most of this functionality is the same as earlier X-Series models and similar to ESA and PSA operation.

When the instrument is in Remote, any hardkey that is pressed on the front panel displays this message:

Analyzer is in Remote. Press ESC to return to Local

The exception is the **Cancel (ESC)** key, which takes the instrument out of Remote.

When the instrument is also in the LLO (local lockout state), the **Local** key is locked out as well. When this is the case, and the **Local** key is pressed, this message is displayed:

Local key is locked out by remote computer. Cancel Local Lockout on computer or release remote control

When you see this message, you should disconnect the remote computer, or use it to take the instrument out of the Local Lockout state.

2.6 Onscreen Keyboard key



This key turns the onscreen alpha keyboard (OSK) on and off.

There are two onscreen keyboards:

- The Multitouch OSK, which pops up automatically if, while using the analyzer application, a text field becomes the active function
- The Windows OSK, which you must open manually when a text field must be entered while interacting with Windows or other apps

2.7 Touch On/Off Key



This front-panel key turns the display touch functionality on and off. If off, you can turn it back on using the front panel **Touch On/Off** key. When the touch functionality is off, you can still use a mouse as a pointer.

When toggled, a dialog box appears midscreen that confirms “Touchscreen On” or “Touchscreen Off”.

This function remains in effect until it is turned off or until the app shuts down. The app always starts up with Touch enabled.

2.8 Tab key



This key has the same function as the **Tab** key on a PC keyboard. You can use this key to display the Windows Taskbar, as follows.


- Alt-Tab to the Desktop
- Touch the desktop
- Touch **TAB**
- The Taskbar appears

2.9 Local Button

Appears in the Menu Panel when the instrument is in remote, and can be brought back to local via the **Local (ESC)** Key. See also "[Cancel key](#)" on page 175.

2.10 Control Bar

The Control Bar contains controls and readouts that let you control instrument functions independent of the current measurement.

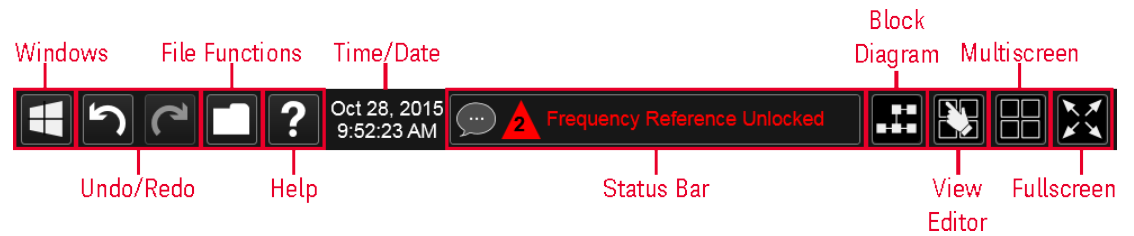

2.11 Windows

Pressing the Windows icon on the "Control Bar" on page 180 has the same effect as pressing the Windows icon on the Windows taskbar. It displays the Windows taskbar and Start Menu, which allows you to launch Windows programs and access features such as the Control Panel.

2.12 Undo/Redo

The Undo button in the "Control Bar" on page 180,



and the Undo front panel key,

Ctrl=Redo



are used to undo the most recently executed function.

If you Undo a function, and then decide you should not have done so, you can use the **Redo** button in the "Control Bar" on page 180 to put it back the way it was. The Redo function may also be executed by pressing **Ctrl+Undo** (holding the **Ctrl** key down while pressing the **Undo** front panel key).



Undo allows you to restore a setting, which you had previously set, back to its value before you changed it. When you press the Undo button or front panel key, the last setting you changed is "undone", that is, its previous setting is restored. You are notified of this fact with an advisory pop up message; for example, if the Center Frequency had been 300 MHz, and you changed it to 1 GHz and then pressed **Undo**, the message would show:

UNDO: Center Freq 1 GHz -> 300 MHz

The instrument can store 5 levels of action for Undo.

To truly understand Undo and Redo, it helps to think of two "stacks", an Undo stack and a Redo stack,

UNDO stack

REDO stack

Whenever you perform an action, it is placed on the Undo stack. So for example, if you set the Center Frequency to 1 GHz, then set the RBW to 1 MHz, then set the Detector to Peak, each of these actions gets "pushed" onto the Undo stack:

UNDO stack	REDO stack
Det = Peak	
RBW = 1MHz	
CF = 1 GHz	

When you press **Undo**, the top item on the Undo stack is removed, the action represented by that item is undone, and the item is placed on the Redo stack. So pressing **Undo** once in the above case would undo the setting of the peak detector, and the stacks would look like this:

UNDO stack	REDO stack
RBW = 1MHz	Det = Peak
CF = 1 GHz	

Now pressing **Undo** again would undo the RBW = 1 MHz action, and the stacks would look like this:

UNDO stack	REDO stack
CF = 1 GHz	RBW = 1MHz
	Det = Peak

Now pressing Redo would Redo the RBW = 1 MHz action, and the stacks would again look like this:

UNDO stack	REDO stack
RBW = 1MHz	Det = Peak
CF = 1 GHz	

Also, whenever you set a value, the Redo stack is cleared; you can't redo an action once you have interrupted the original flow of actions. Think of the Undo stack as the past, and the Redo stack as the future; if you have items in both stacks it means you have gone back to a time in the past; if you then *do* something you have changed the future, so the old future (the Redo stack) gets cleared.

For example, in the example above, if you now were to change another setting, such as VBW = 1 kHz, the Redo stack gets cleared, and the stacks would look like this:

UNDO stack	REDO stack
VBW = 1 kHz	
RBW = 1MHz	
CF = 1 GHz	

Undo can undo changes you make with the knob or step keys, however all contiguous events that affect the same parameter are aggregated into one event for the sake of Undo. For example, if CF is the active function and is 1 GHz, and you turn the knob back and forth, then enter a value, then use the step keys, when you press **Undo**, the instrument returns to CF = 1 GHz.

Actions that Cannot be Undone

There are some actions that cannot be undone, because these clear the Undo/Redo stack:

- Restore Mode Defaults clears the stack for that Mode in that Screen
- Sending SCPI commands clears the stack for that Mode in that Screen
- Loading a state file (including User Preset) clears the stack for that Mode in that Screen
- Deleting a Screen clears all the stacks in that screen
- Changing Views

Undo/Redo works within the context of a Mode. Each Mode in each Screen keeps its own record. Settings in the Control Panel or System Settings menus are not undoable.

There are several actions that may change many parameters. Among these are Auto Tune, and Adjust Atten for Min Clipping. After executing such a function, Undo sets all parameters back to their value before the function was selected. Auto Tune appears to be a single action, even though the instrument executes it in several steps.

Redo reverses the effect of the last Undo action, assuming that no other settings have been changed since the last Undo. Changing a setting after an Undo clears memory of all settings after that Undo, that is, it clears the Redo stack, as explained above.

When you press the **Redo** icon or **Ctrl** and the **Undo** hardkey, you are notified with an advisory popup message; for example, if the Center Frequency had been 300 MHz, and you changed it to 1 GHz and then pressed **Undo**, the message would say:

UNDO: Center Freq 1 GHz -> 300 MHz

If you then press **Redo**, the message will say:


REDO: Center Freq 300 MHz -> 1 GHz

Neither **Undo** nor **Redo** perform any navigation, and have no effect on which menu panel is displayed nor which function is active.

2.13 File Functions

The File Functions popup contains controls for executing Save, Recall, File and Print operations. You display the File Functions popup by tapping the File Functions icon in the "Control Bar" on page 180.

For more information on a control, tap an icon in the image below.

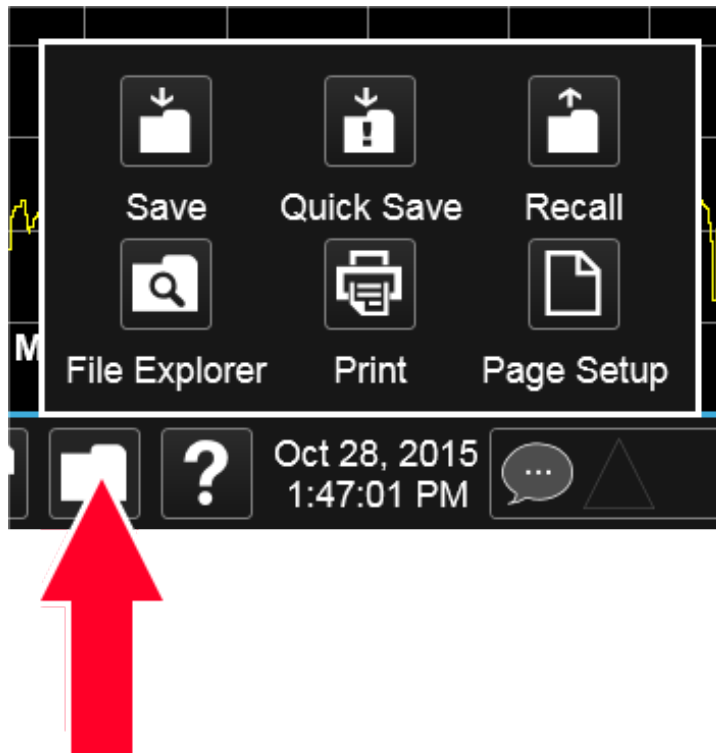

Tapping this folder icon displays the File Functions popup

2.13.1 File Explorer

Pressing the File Explorer button in the "File Functions" on page 186 dialog opens the Windows File Explorer, which allows you to perform operating system file functions such as Move, Copy and Delete.

File Explorer also allows you to map network drives to drive letters on your PC or intranet, in order to more easily save screen images, states and other data, and load them back into the instrument.

2.14 Help




Pressing the **Help** button in the "Control Bar" on page 180, the **Help** front panel key, or the **F1** key if you have a PC keyboard connected, opens the context-sensitive help system. The **Help** button appears in the "Control Bar" on page 180 and in the banner of full-screen dialogs

You can also use the Help window's Contents pane to navigate to Help for any function in the instrument

You can also touch-and-hold a specific control to display a "right-click" menu, in which one of the choices is **Help on this setting**

2.15 Status Bar

The Status Panel (or Status Bar) appears at the bottom of the display and contains three fields:

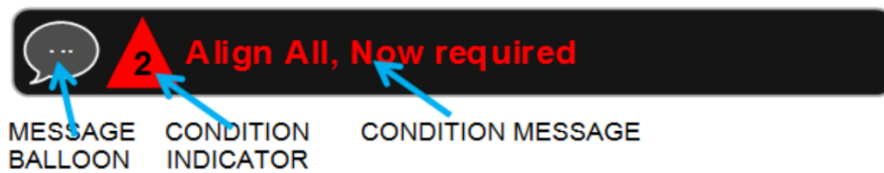

The Message Balloon appears on the left side of the Status Panel and lets you know when there is an unread message in the queue.



No unread messages

Unread messages

The Message Balloon has a gray outline and no fill if there are no unread messages; it has a gray fill and a white outline and displays a white ellipsis in the middle if there are unread messages.


The Condition Indicator appears to the right of the Message Balloon and shows the current number of open conditions. Below are some examples of what the Condition Indicator can look like:



The triangle is unfilled if there are no open conditions, filled with yellow if all open conditions are warnings, and filled with red if at least one open condition is an error. The number displayed is the total number of open conditions.

Touching the Condition Indicator opens up the Show Status dialog (see below) with the Current Conditions tab selected. Touching anywhere else on the Status Bar opens up the Show Status dialog with the History tab selected.

The Condition Message appears to the right of the Condition Indicator. In the example below, the cCondition Message is “Align All, Now required”:

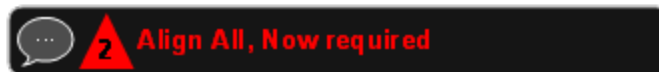

Warning condition messages display in yellow, error condition messages display in red.

If there is more than 1 open condition, the Condition Message cycles through the display of all of the open conditions, one at a time. Each message is displayed for 2 seconds, then the next for 2 seconds, and so on.

Show Status Dialog

The Show Status dialog appears if you tap anywhere in the Status Bar. Touching the Condition Indicator (the triangle in the Status Bar) opens up the Show Status dialog with the Current Conditions tab selected. Touching anywhere else on the Status Bar opens up the Show Status dialog with the History tab selected.

2 User Interface
2.15 Status Bar

Status	History					?	X
History	Type	ID	Message	Repeats	Time		
Current Conditions	✓	1064	Align Now All required - CLEARED		6:37:49 PM 2/24/2015		
Settings	✓	1301	Meas Uncal - CLEARED		6:37:37 PM 2/24/2015		
	✗	64	Align Now All required - DETECTED		6:36:59 PM 2/24/2015		
	⚠	301	Meas Uncal - DETECTED		6:33:27 PM 2/24/2015		
	✓	1301	Meas Uncal - CLEARED		6:31:27 PM 2/24/2015		
	⚠	301	Meas Uncal - DETECTED		6:33:27 PM 2/24/2015		
	✓	1141	Input Overload - CLEARED,ADC over range	47	1:07:56 PM 2/24/2015		
	✗	141	Input Overload - DETECTED,ADC over range	47	1:07:56 PM 2/24/2015		
	✗	780	No Peak Found		1:03:55 PM 2/24/2015		
					Press any row for more info about that Message		
					Clear Message Queue		
					i Informational ⚠ Warning ✗ Error		

If the display fills up, scrolling is enabled just as in other X-Series Multi-touch UI displays.

The Status dialog automatically refreshes as new messages and conditions occur.

At the bottom of the screen is a Clear Message Queue button. This button clears all errors in all error queues.

Note the following:

- Clear Message Queue does not affect the current status conditions
- Mode Preset does not clear the message queue
- Restore System Defaults (Super Preset) will clear all message queues
- *CLS only clears the queue if it is sent remotely and *RST does not affect any error queue
- Switching Modes does not affect any error queues

See "More Information" on page 191

Remote Command	:SYSTem:ERRor[:NEXT]?
Example	:SYST:ERR?
Notes	The return string has the format:

	<code><Error Number></code> , <code><Error></code>
	Where <code><Error Number></code> and <code><Error></code> are those shown on the Show Errors screen
Backwards Compatibility Notes	<p>In some legacy analyzers, the Repeat field shows the number of times the message has repeated since the last time the error queue was cleared. In the X-Series, the Repeat field shows the number of times the error has repeated since the last intervening error. So the count may very well be different than in the past even for identical signal conditions</p> <p>Unlike previous analyzers, in the X-Series all errors are reported through the Message or Status lines and are logged to the event queue. They never appear as text in the graticule area (as they sometimes do in previous analyzers) and they are never displayed in the settings panel at the top of the screen (as they sometimes do, by changing color, in previous analyzers)</p> <p>As a consequence of the above, the user can only see one status condition (the most recently generated) without looking at the queue. In the past, at least in the Spectrum Analyzer, multiple status conditions might display on the right side of the graticule</p> <p>In general, there is no backwards compatibility specified or guaranteed between the error numbers in the X-Series and those of earlier products. Error, event, and status processing code in customers' software will probably need to be rewritten to work with X-Series</p> <p>In the legacy analyzers, some conditions report as errors and others simply turn on status bits. Conditions that report as errors often report over and over as long as the condition exists. In the X-series, all conditions report as start and stop events. Consequently, software that repeatedly queries for a condition error until it stops reporting will have to be rewritten for the X-series</p>








More Information

The Status Dialog has two screens, selectable by the tabs on the right: **History** and **Current Conditions**:

History

History brings up a screen displaying the front panel message queue in chronological order, with the newest event at the top. Remember that the front panel queue contains all of the events generated by front panel actions as well as error events from all of the SCPI queues. A typical History display appears below:

2 User Interface
2.15 Status Bar

Status	History					? X
History	Type	ID	Message	Repeats	Time	
Current Conditions		301	Meas Uncal - DETECTED		5:36:35 PM 2/24/2015	
Settings		1141	Input Overload - CLEARED,ADC over range	49	1:07:56 PM 2/24/2015	
		141	Input Overload - DETECTED,ADC over range	49	1:07:56 PM 2/24/2015	
		1141	Input Overload - CLEARED,ADC over range		1:07:53 PM 2/24/2015	
<div> Informational  Warning  Error</div> <div>Press any row for more info about that Message</div> <div>Clear Message Queue</div>						

The fields on the History display are:

Type	Displays the icon identifying the event or condition as an error or warning
ID	Displays the error number
Message	Displays the message text
Repeat (RPT)	<p>This field shows the number of consecutive instances of the event, uninterrupted by other events. In other words, if an event occurs 5 times with no other intervening event, the value of repeat will be 5</p> <p>If the value of Repeat is 1 the field does not display. If the value of Repeat is >1, the time and date shown are those of the most recent occurrence. If the value of repeat reaches 999,999 it stops there. The Repeat field can run into some pretty large numbers when apps (like the GSM app) report things like “GSM sync burst not found” as events rather than conditions, which is actually fairly common</p> <p>Note that the repeat count is unavailable over SCPI</p>
Time	Shows the most recent time (including the date) at which the event occurred. Time is displayed to the second

To understand the History dialog, and to properly program the instrument’s messaging system, remember that there are two types of occurrences, events and conditions:

- An event is an occurrence of zero duration. Events generate messages which are displayed in the center of the display for a period of time and then fade away. These may be of an advisory nature or may represent errors, for example “No

peak found”

- A condition is an occurrence of finite duration, that is, it has a start and an end. Conditions are states of the analyzer characterized by some combination of settings or some kind of failure that the user needs to be told about while it is happening, but then can stop being told once it goes away; for example “Input overload; ADC over range”

The error queue contains error events as well as the DETECTED and CLEARED events for condition errors, as seen in the figure above.

DETECTED events have numbers less than 1000 and CLEARED events have the same number plus 1000. For example,

301, Meas Uncal – DETECTED

and later

1301, Meas Uncal – CLEARED






To detect a condition error over SCPI, you should read the error queue and note any DETECTED error which is not followed eventually by an associated CLEARED error. This means the condition is still in effect. It is not sufficient to simply read the error queue until you get “No Errors” back. You may still have the condition error; the condition may still be in effect, and if that is the case, all you have done by clearing the error queue is to remove the first event (the DETECTED event) from the queue. For a condition error, you have to read the error queue until you see the CLEARED event for that condition. THEN you know that the condition is gone.

Current Conditions

The **Current Conditions** display shows all of the open conditions in the instrument. An open condition is a condition error or warning for which a start (detected) event has occurred but for which no corresponding stop (cleared) event has occurred.

An example of the Current Conditions screen appears below:

2 User Interface
2.15 Status Bar


Status	Current Conditions			
History	Type	ID	Message	Time
Current Conditions		64	Align Now All required	6:36:59 PM 2/24/2015
Settings		301	Meas Uncal	6:33:27 PM 2/24/2015
<div> Informational  Warning  Error</div> <div>Press any row for more info about that Message</div>				

The fields on the Current Conditions display are:

Type	Displays the icon identifying the event or condition as an error or warning or informational
ID	Displays the error number
Message	Displays the message text
Time	Shows the most recent time (including the date) at which the event occurred. Time is displayed to the second

Touching a condition message expands the display of that message. Touching again collapses it. The description is the same as the one that appears on the message dialog. An example of this is shown in the History section, below.

When there are no open conditions, the display is as shown below:

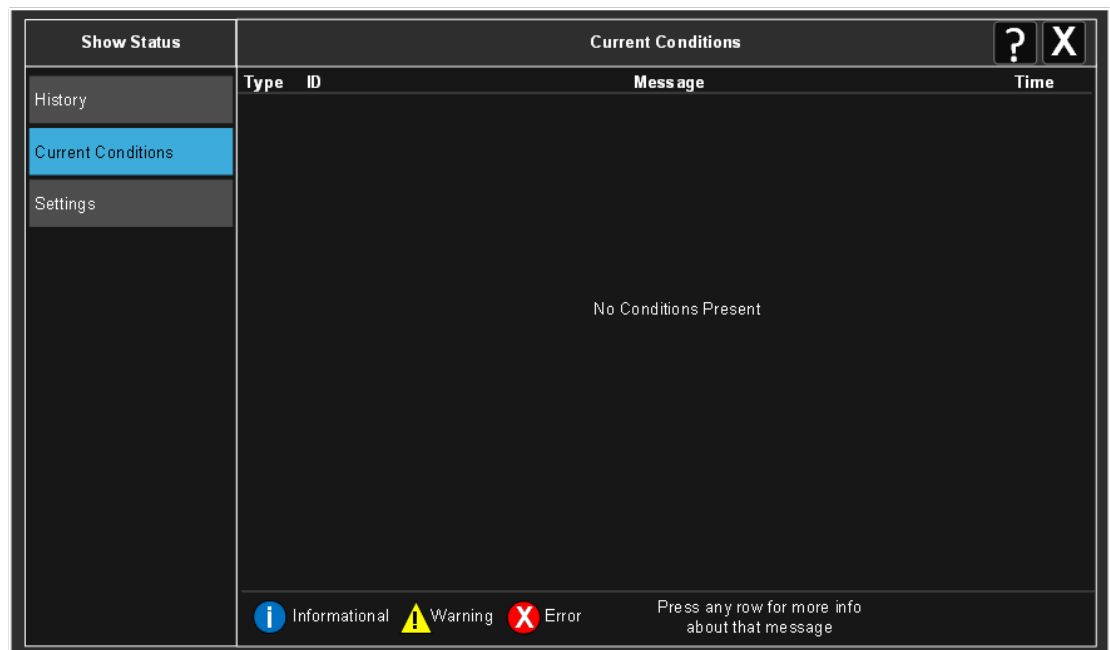

2.16 Block Diagram

When you press the Block Diagram button in the "Control Bar" on page 180, the display changes to a stylized pictorial representation of the current internal hardware setup and signal processing path. When you touch one of the blocks on the Block Diagram, the corresponding menu panel opens.




When you press the Block Diagram button, the display changes to a stylized pictorial representation of the current internal hardware setup and signal processing path. When you touch one of the blocks on the Block Diagram, the corresponding menu panel opens.

While in the Block Diagram display, the button is blue colored, as:




To exit the Block Diagram display, tap the button again.


The Block Diagram display is not meant to be a completely accurate representation, but one which can show differences as you change the hardware setup. For example, here is the basic RF Block Diagram:

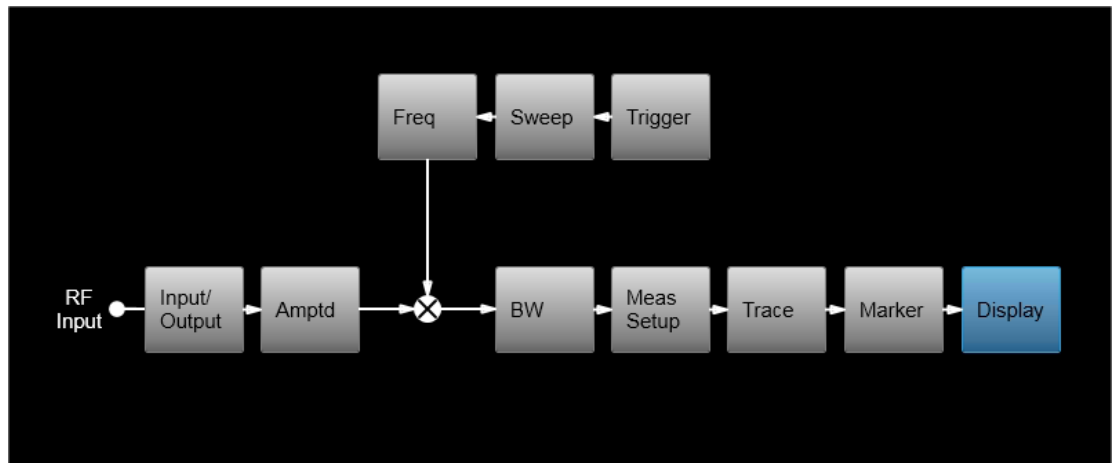

And here is the Block Diagram when External Mixing is selected:

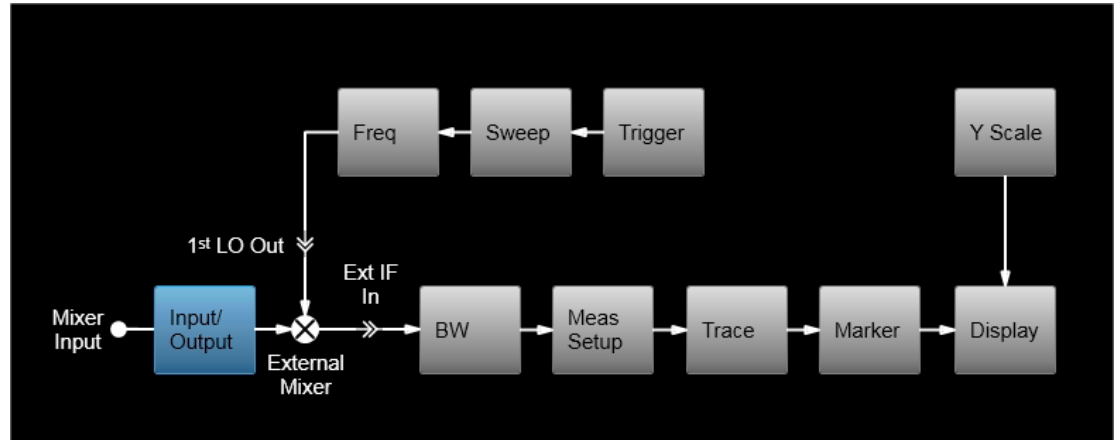

And here is the Block Diagram when the I/Q inputs are selected:

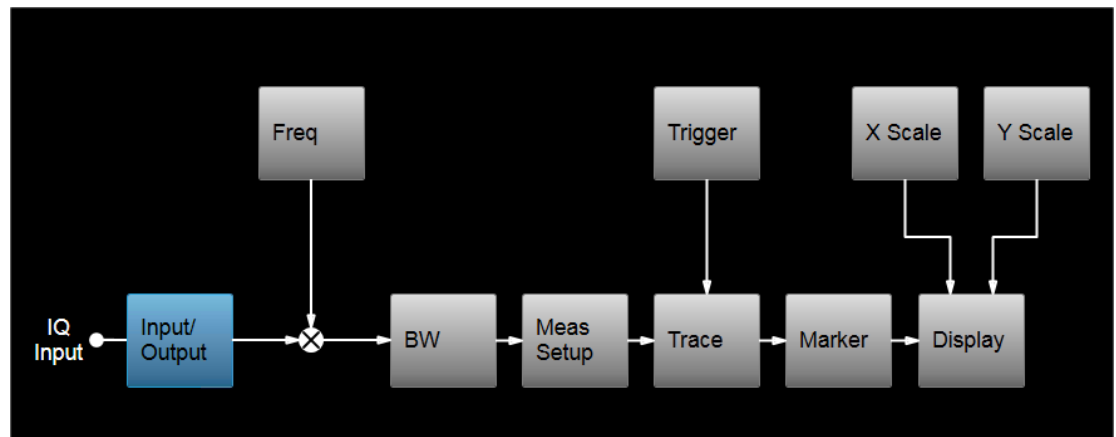


2.17 View Editor

This section describes the use of the View Editor, which allows you to:

- Add windows to and delete windows from the current measurement
- Resize and rearrange windows
- Create User Views

User Views are custom Views that you create by adding, deleting, rearranging, resizing, or changing the contents of the windows in an existing View, and then saving the edited View as a new View. The instrument lists the current User Views for a measurement after the Predefined Views, in the Mode/Meas dialog and on the View menu panel under Display:

ent	View
	Basic
	Meas Summary
	RB Slot Meas
	Subcarrier Meas
	MIMO Summary
	Cross Carriers Summary
	User View
	My New View

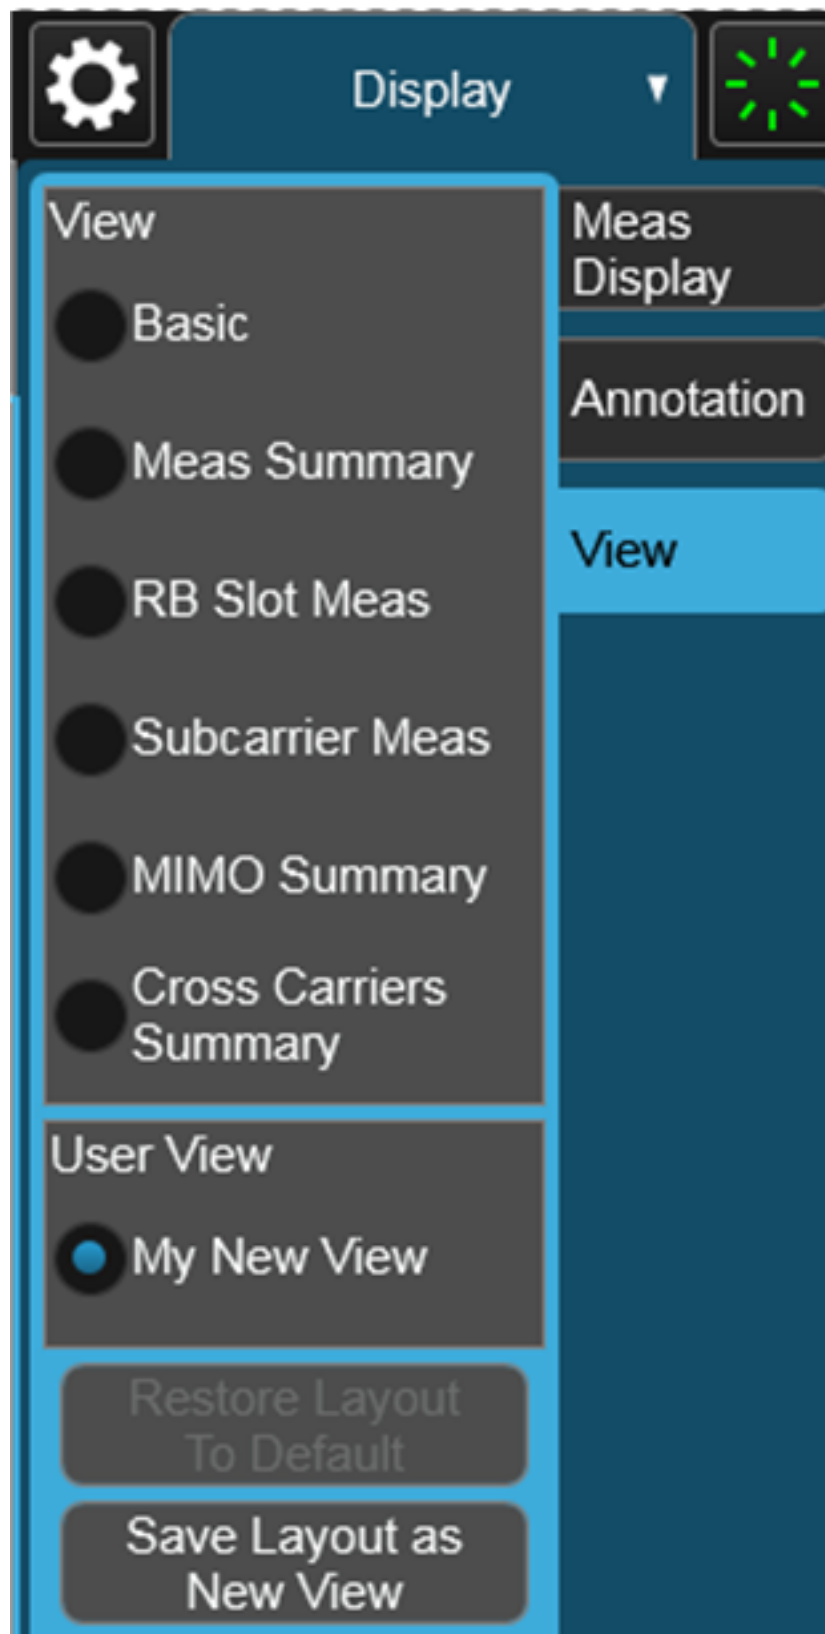


You can save an edited View using the **Save Layout as New View** control in the View menu (see ["To Save a User View" on page 211](#)).

On occasion, the instrument may automatically save an edited View for you. If you have edited a View, so that the * is displaying next to the View name, you must save that View as a User View before you save State or switch measurements. If you forget that you have made changes to a View, then to keep from losing your edited View when you switch measurements, the instrument will save it for you. If you have an edited View that has not been saved and you try to do any of the following:

- Enter the “Save” menu
- Switch Measurements
- Switch Modes
- Switch Screens

the edited view will be saved for you with the name “Autosaved”. When this happens, you will receive the following message:

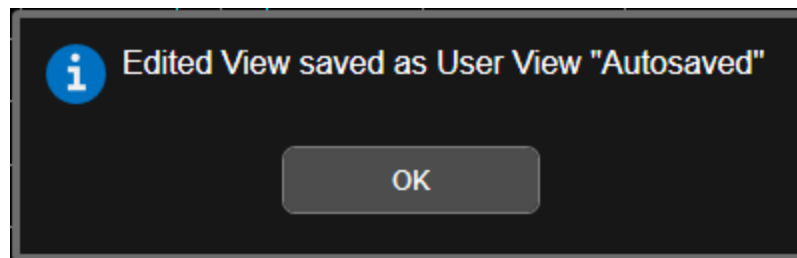

If an Autosaved User View already exists, the User View called “Autosaved” will be overwritten with the currently edited view. If you have multiple edited views, the selected edited view will be Autosaved. If there is not an edited view selected the last selected edited view will be Autosaved.

To Open the View Editor



Pressing the View Editor button (shown above) in the ["Control Bar" on page 180](#), at the bottom right of the screen, opens the View Editor.

While in the View Editor, the icon is blue colored, as:



Pressing the View Editor button again exits the View Editor.

To Close the View Editor

Tap the View Editor button again.

The user chooses the desired View through the use of the Mode/Meas/View dialog (see ["Mode/Meas/View Dialog" on page 131](#)) or the View menu (a tab under the **Display** key). The View menu allows the user to browse the views in the current measurement. The View menu contains a list of Predefined Views for you to use. If you wish to modify a Predefined View or create your own, new View, you use the View Editor.

User Views & Predefined Views


A User View is any View that is not in the list of predefined Views for the current measurement. For example, the Swept SA measurement has four predefined Views: Normal, Spectrogram, Zone Span, and Trace Zoom.

User Views allow you to add, delete, change and rearrange the windows of a predefined View, creating a new custom view.


2.17.1 To Create a User View

Whenever you add or delete a window to/from a predefined View, or change what is being displayed in a Predefined View's window, the Predefined View is marked with an asterisk (*), to show that it has been modified.

For example, to edit the View shown below, you press the Edit View icon.

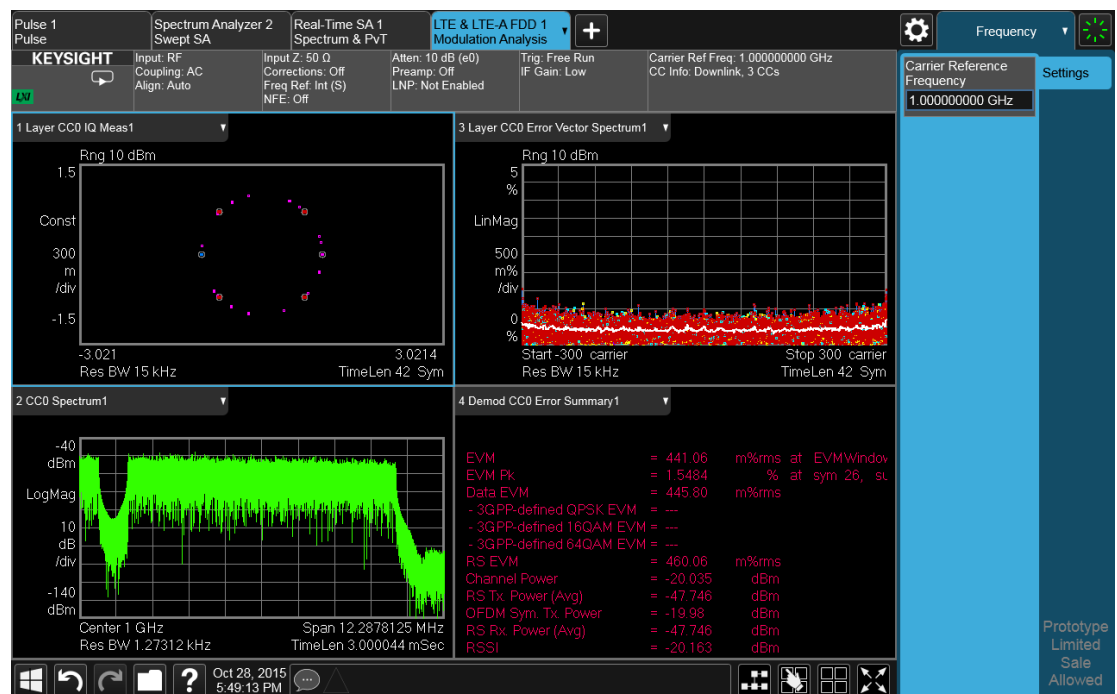

When you do this, you get the View Editor screen, which appears as below. The menu panel switches to the View menu. Here we see that we are in the Predefined View called “Basic”.

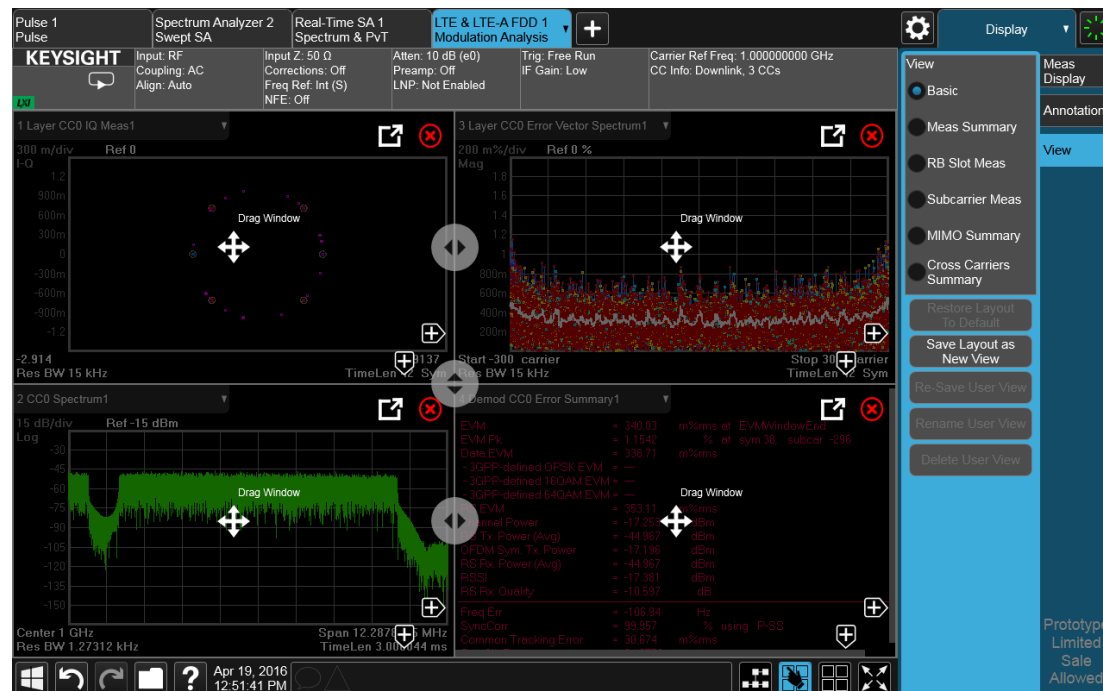


Each window has two arrows containing + signs. Pressing either of the “+” symbols adds a new window on that side. For example, let’s say you press the + symbol on the right of the lower left window:

You would then see this:

2 User Interface

2.17 View Editor

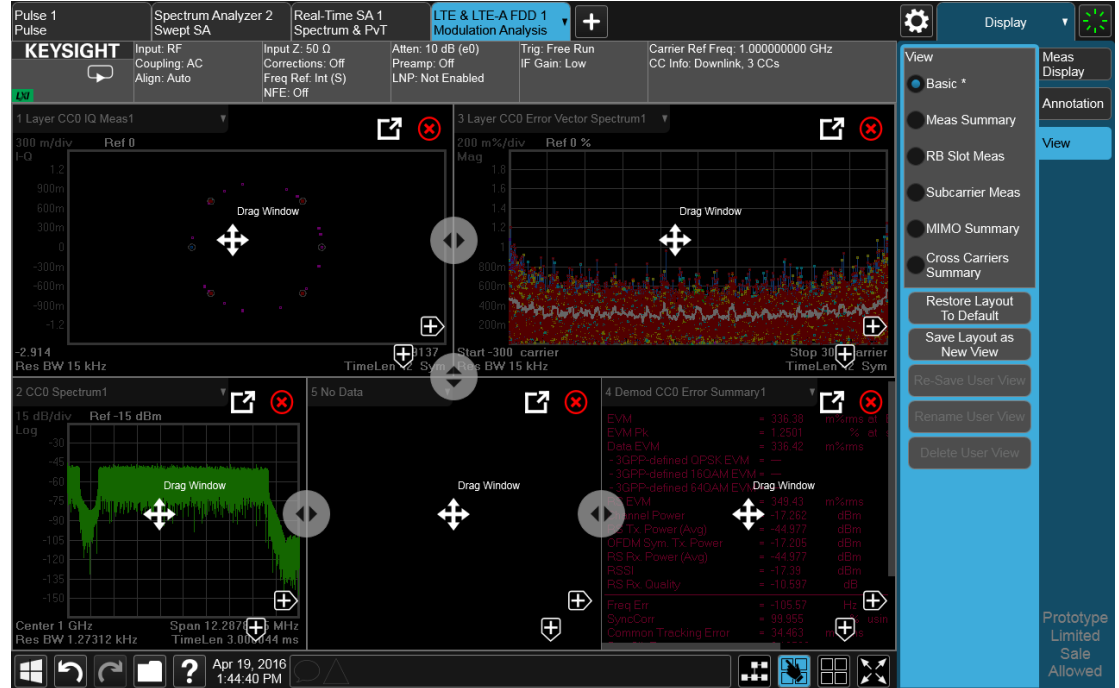

A fifth window has been added, and is automatically assigned the number 5. (The window number, which is displayed in the Window Title region, is used when sending SCPI commands to that window).


Note the * that now appears next to Basic in the View menu, indicating that you are now in the **modified** Basic View. You see the * if you add, delete or rearrange windows, but simply resizing windows does not display the *. The * means you are in a modified View, which must be saved as a User View before you leave the measurement (if you don't save it, the instrument will save it for you).

Note also that the Restore Layout to Default control is no longer grayed out. If you press this control it restores the Basic View to its default state. Restore Layout to Default becomes available when you add, delete or rearrange windows **and** when you resize them; otherwise it is grayed out.

You can add more windows with the "+" arrow symbols. Note that the "+" arrow symbols only appear if the current measurement has more windows available to display. If you are already displaying all the measurement's windows, the "+" symbols disappear.

You can exit the View Editor by again tapping the Edit View icon.

You can specify which result you want to see in the new window by tapping its title region.

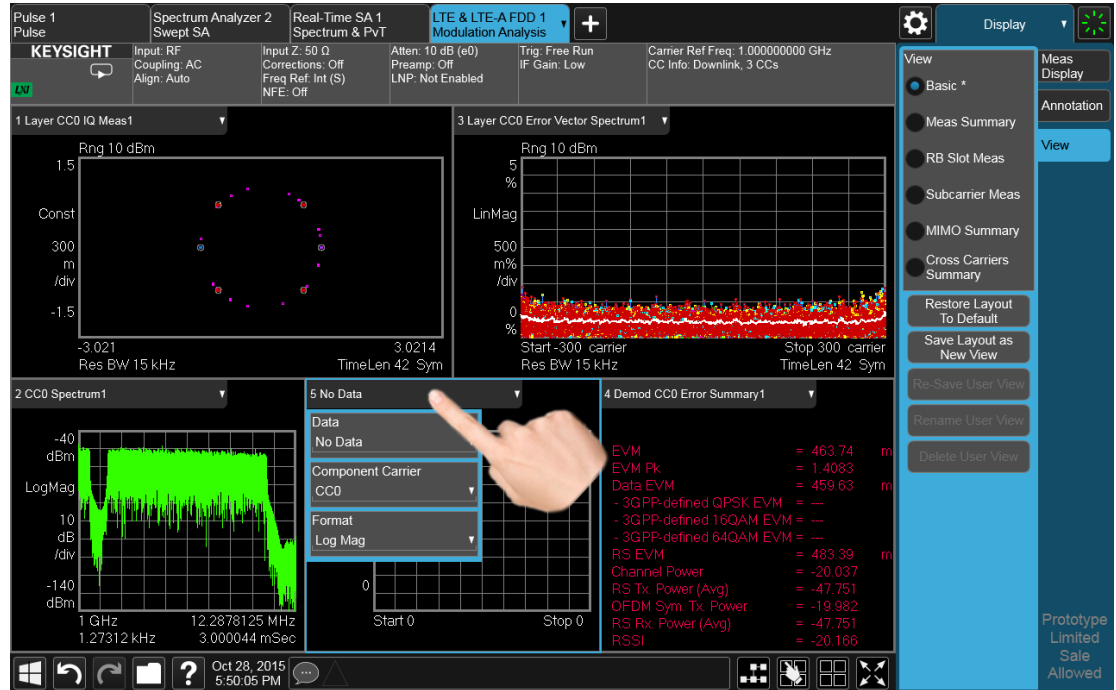

A panel drops down, containing a Data control for specifying window results. Some measurements, such as LTE-A in this example, also provide controls on this dropdown for specifying other window parameters, such as the Component Carrier and Data Format, Tap the Data control and you will see a list of available results for the window. In some cases, as in LTE-A, this will be a cascading list, due to the number of results available:

2 User Interface

2.17 View Editor




Choose the result you want and tap OK. Here we have chosen IQ Meas Time from the Demod group:



Your new, edited User View is now ready to use.

2.17.2 To Resize or Rearrange Windows in a View

Sometimes you may wish to resize a window. To do this go back into the View Editor and note the large, translucent white circles along the edges of the draggable borders. These are the “resize handles”. You can resize the windows by dragging these handles. Note that in their quiescent state they are slightly translucent; when you touch one it turns solid white, indicating that it is draggable. If you touch and drag one of them it moves the axis to which it is attached.

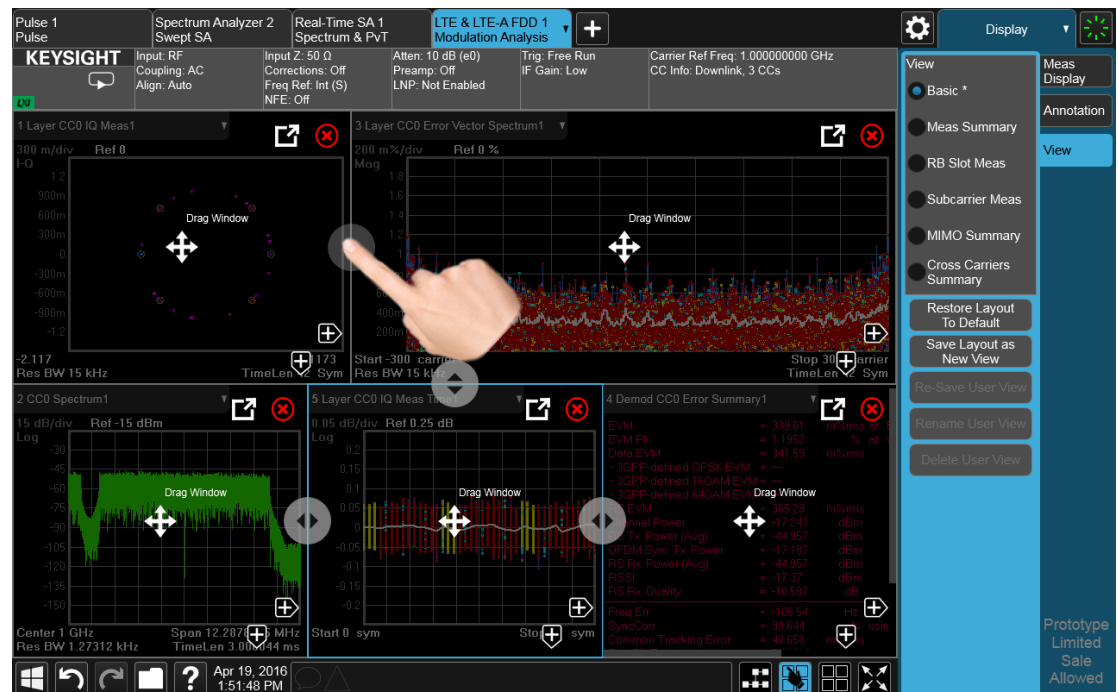

Another feature that comes with the View Editor is the ability to move windows around. You do this by dragging the four-arrow objects in the center of the window; the whole window goes along. Actually you can touch and drag anywhere in the window (except on one of the arrows or the delete circle) and it will drag, but the four-arrow objects give you an indication and a convenient finger target.




2 User Interface
2.17 View Editor



The outline of the window appears as it is being dragged. When you start to drag a window, target symbols appear in the other windows:



If you drop a window on one of the targets, it swaps positions with the target window. If you drag a window's center into another window, green stripes appear on the edges to show you where the window will go when you release it:

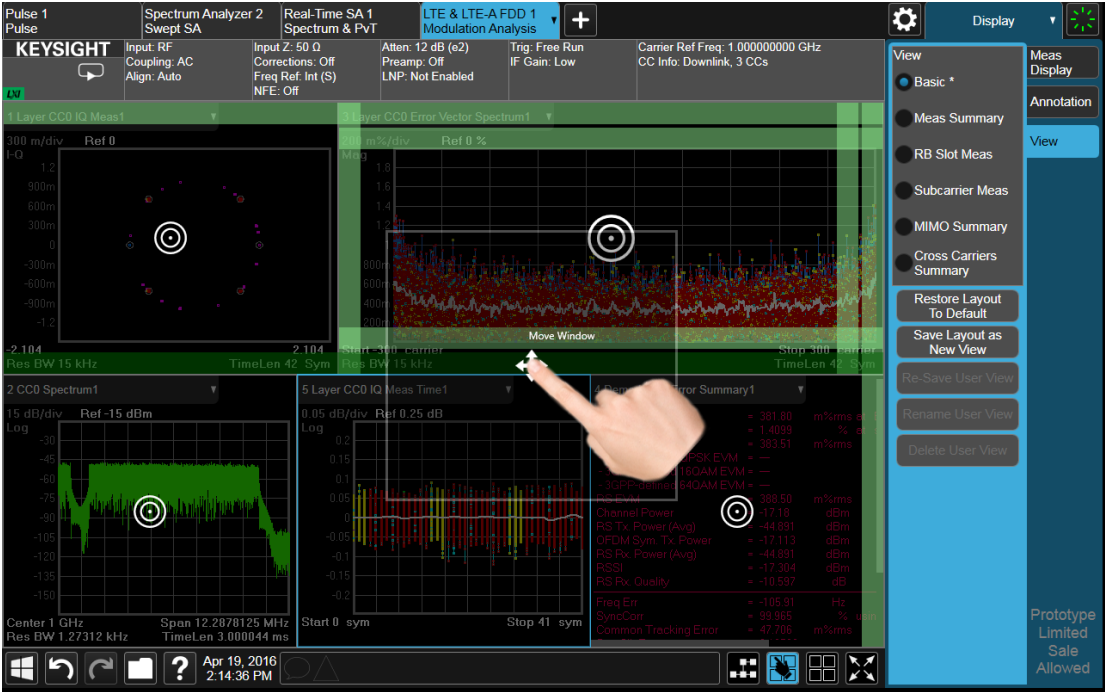

When you hover over one of the stripes it gets dimmer, to show the position the window being dragged will take on. If you release a window over an inner stripe, the window you are dragging and the window over which you were hovering resize to share the space the target window originally occupied. If you release a window over an outer stripe, as shown below, the window you are dragging takes on a new position outside the array of other windows:

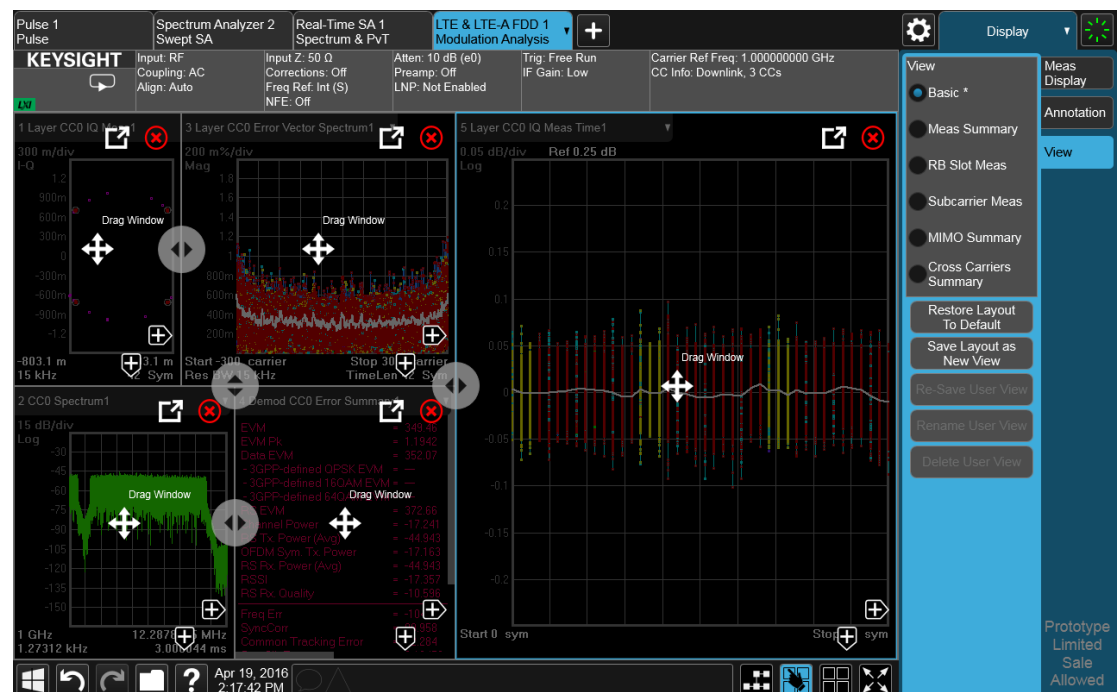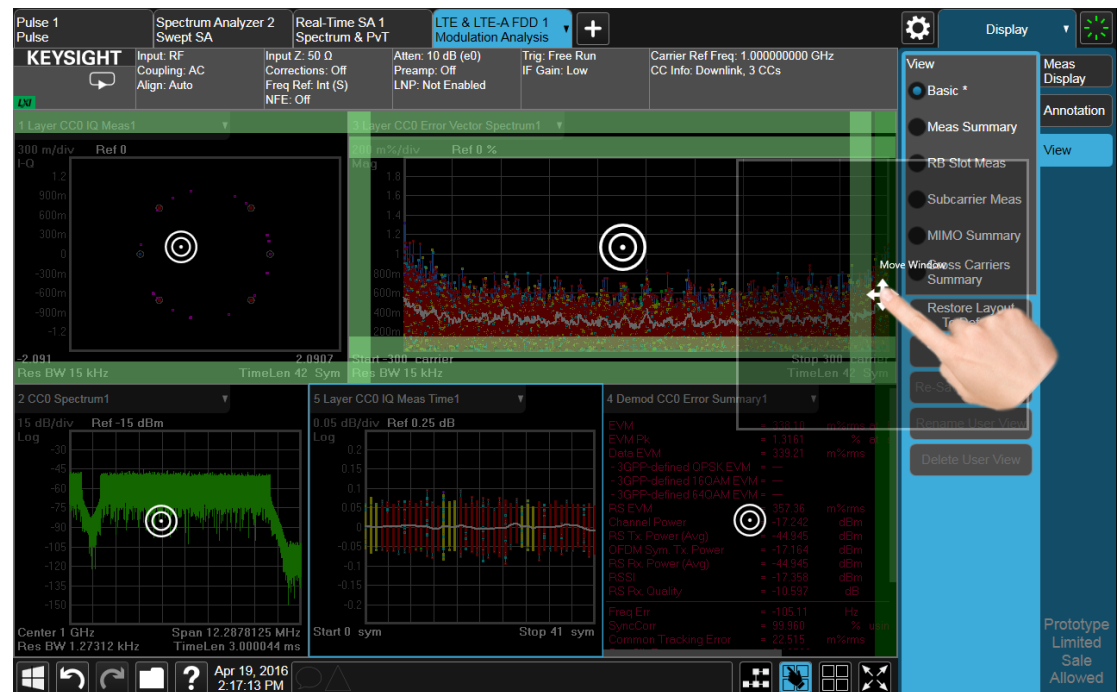

2 User Interface


2.17 View Editor

In either case, one or more of the remaining windows resize to occupy the space formerly occupied by the window you were dragging.


2.17.3 To Delete a Window from a View

The View Editor also lets you delete a window. To do this, tap one of the circled red X's, as shown below.

There has to be more than one window for you to see the circled red Xs.

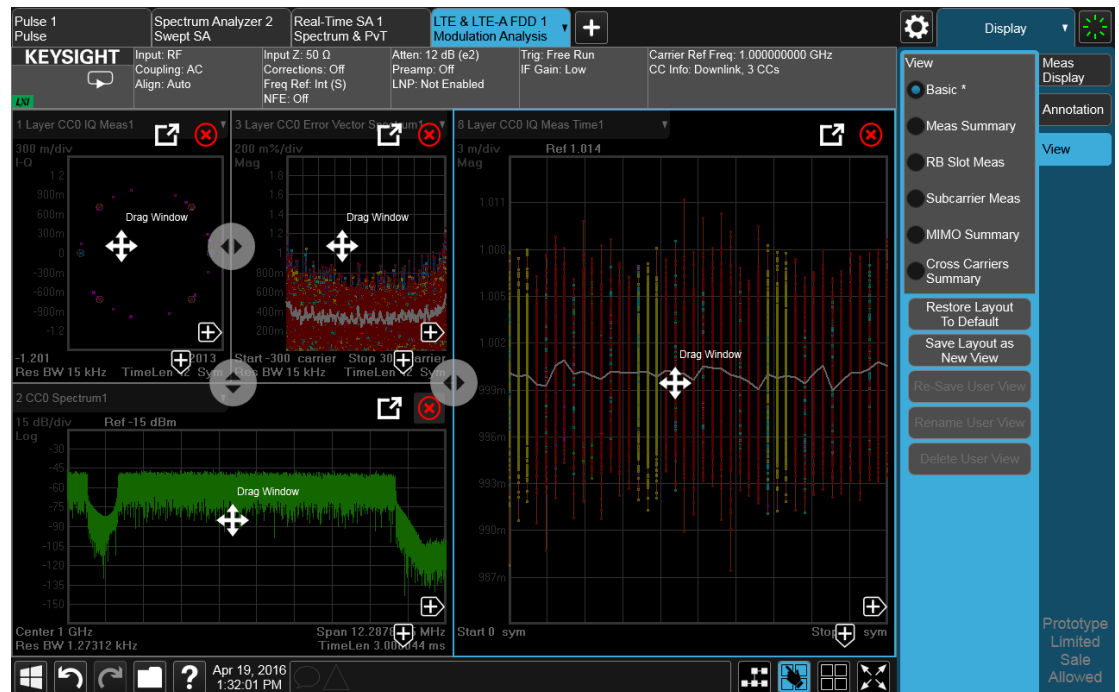

Now press the View Editor button (the blue hand) to exit the View Editor. At this point, you have an edited Predefined View, as shown by the * next to Basic:

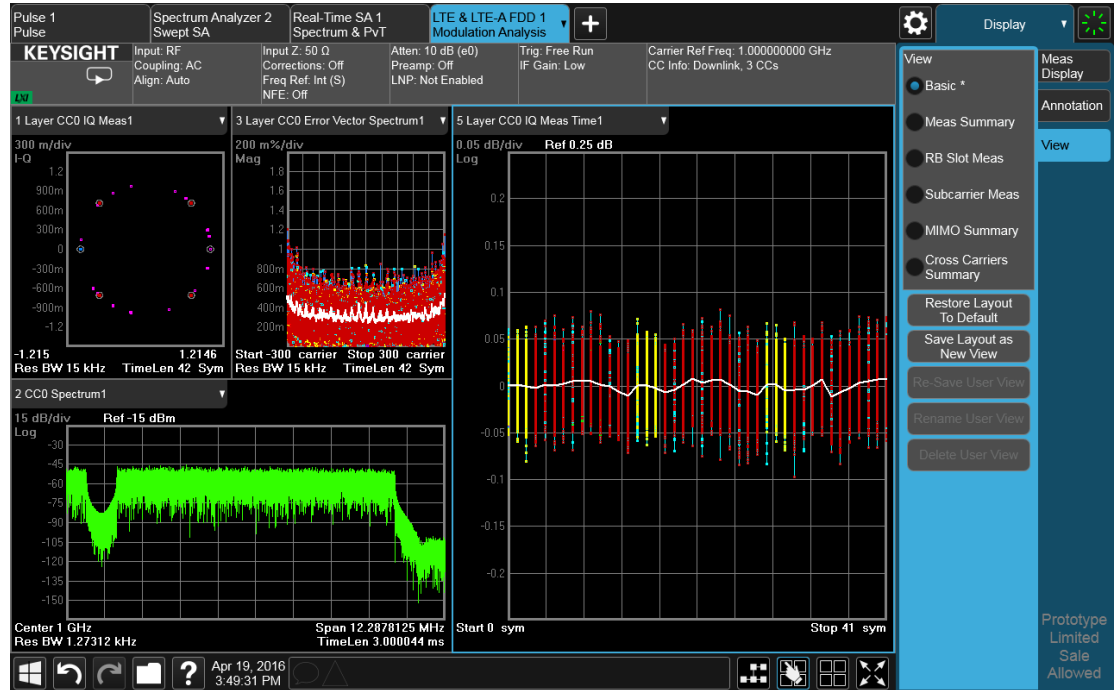

When you are finished with it, you can restore the Layout to the default for Basic by pressing “Restore Layout to Default”. Or you can save your edited View as a “User View” (if you exit the measurement without saving the edited View, the instrument will save it for you as a User View called “Autosaved”).

If you clone the current Screen by pressing the “+” tab, the modified Predefined View will be saved as a User View called “Autosaved”, and it will be available in the new Screen.


2.17.4 To Save a User View

See also ["Transferring User Views Between Instruments" on page 213](#)


To save your new View as a User View, tap the “Save Layout as New View” control. You will get an alpha keyboard that lets you name your new View; the default is the old View name with a number. Below, we have typed in “My New View”:

2 User Interface

2.17 View Editor

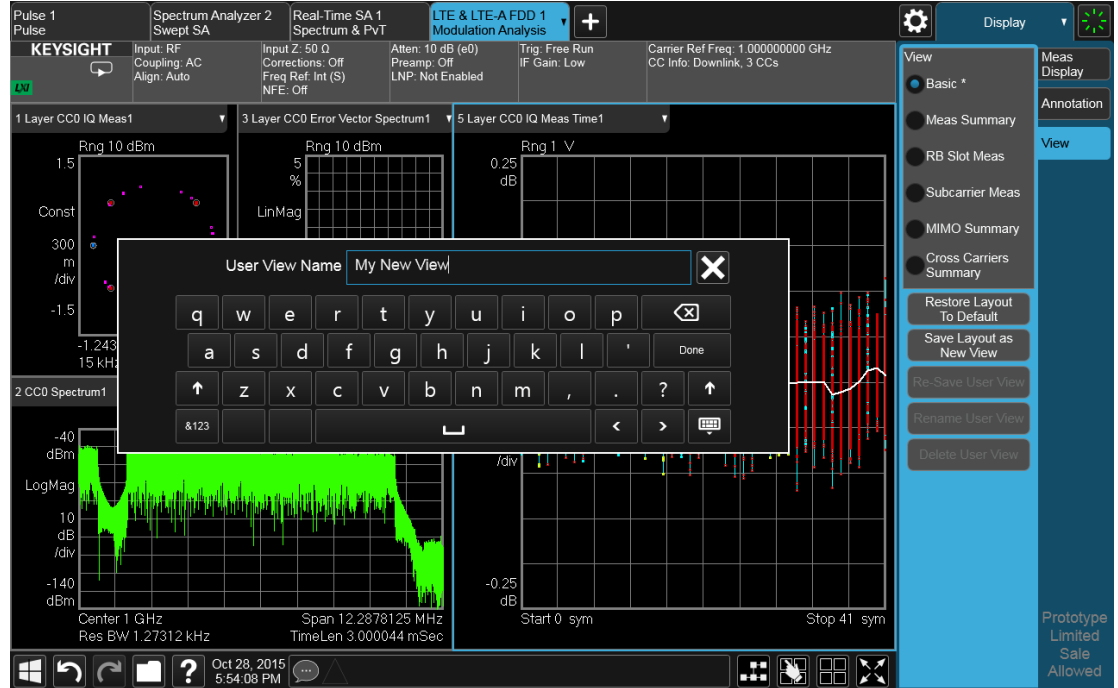


When you tap “Done”, the View is saved:

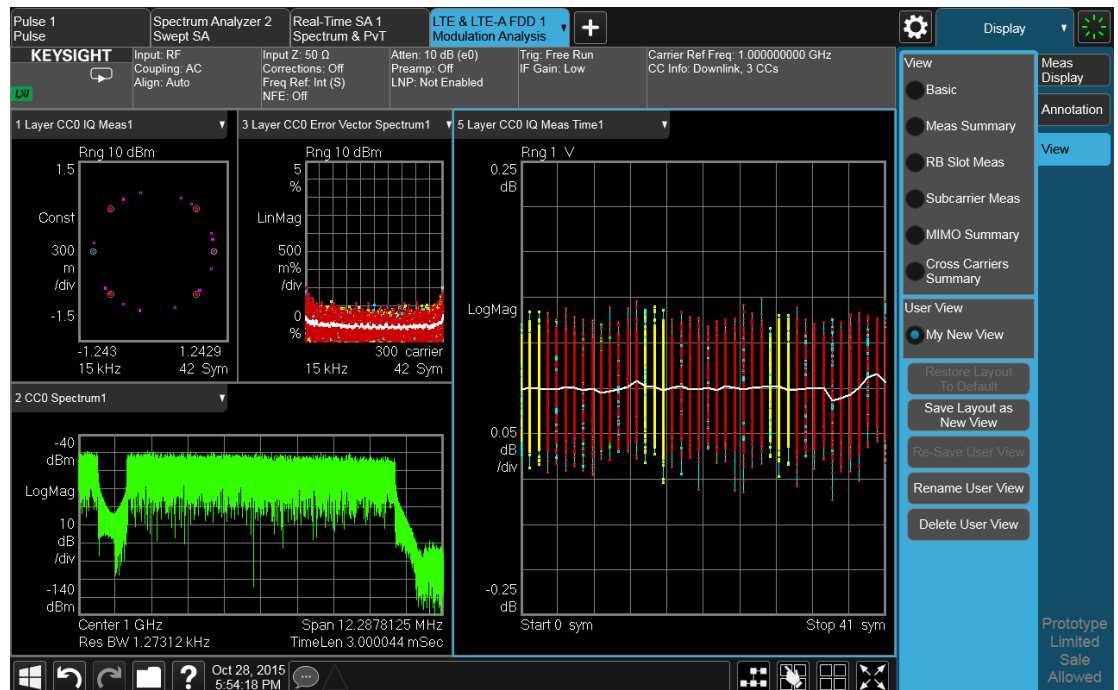

Notice the User View region which has appeared on the menu panel above, with the new User View called “My New View. Notice also that “Basic” has returned to its original, unedited state and the * is gone from its name. Note also that “Restore

Layout to Default” is grayed out. Note also that if you go to the Mode/Meas dialog, you will see the User View there as well:

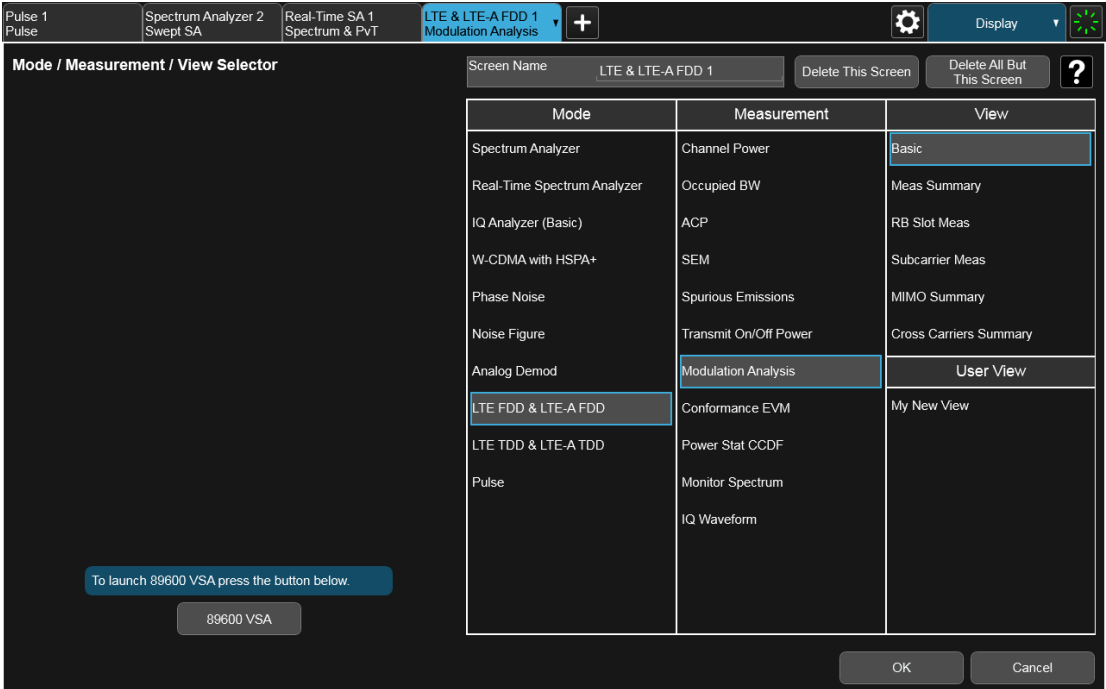

When naming a new View, you must choose a name that is not already in use for any User View in any measurement; this is because User Views get written to permanent memory and are available to all instances of the Measurement in any screen. They survive a Mode Preset and also survive shutdown and restart of the application.

Transferring User Views Between Instruments

To transfer a User View to another instrument, you must copy the desired file to a portable drive or to your network and then copy it to the target instrument.

When you save a User View, a file is created (or updated if it already exists) containing all the User Views for the current measurement. All of these files are saved on the D: drive in the instrument, in the folder:

D:\Users\Instrument\My Documents\UserViews

(assuming you are logged in as Instrument, which is the default).

Look for the file for your measurement. The file naming convention is:

ModeName.MeasName.layout

Where ModeName is the long-form SCPI parameter for the :INST:SEL command for your Mode, and MeasName is the long-form SCPI parameter for the :CONF command for your Measurement.

For a full list of all [ModeName](#) parameters, see [Index to Modes](#) in ["Mode" on page 132](#).

The following is a full list of all [MeasName](#) parameters.

Measurement Name	SCPI ID
ACP, Adjacent Channel Power	ACPower
AM	AM
AM Depth	AMD
Amplitude Probability Distribution	APD
Audio Distortion	AUDDist
Audio Frequency	AUDFreq
Audio Level	AUDLevel
Audio SINAD	AUDSinad
Automatic Direction Finder	ADF
Channel Power	CHPower
Code Domain	CDPower
Combined GSM	CGSM
Combined WCDMA	CWCDma
Complex Spectrum	SPECTrum
Conformance EVM	CEVM
Custom OFDM	OFDM
Digital Demod	DDEMod
Disturbance Analyzer	DANalyzer
EDR In-band Spurious Emissions	IBSPurious
EVM	EEVM
Fast Capture	FCAPture
Fast Spectrum	FSpectrum
FM	FM
FM Deviation	FMDeviation
FM Stereo	FMStereo
Frequency Counter	FCounter
Frequency Scan	FSCan
GMSK Phase & Freq Error	PFError
Group Delay	GDElay
Harmonics	HARMonics
HRP UWB Demodulation	HUWB
Instrument Landing System	ILS

Measurement Name	SCPI ID
IQ Waveform	WAVeform
LE In-band Emissions	IBEMissions
List Power Step	LPSTep
List Sequencer	LSEQuencer
List Sweep	LIST
Log Plot	LPLot
LoRa (CSS) Demodulation	LORA
Marker Beacon	MBE
Mod Accuracy	RHO
Modulation Analysis	EVM
Modulation Distortion	MODDist
Modulation Rate	MODRate
Modulation SINAD	MODSinad
Monitor Spectrum	MONitor
Noise Figure	NFIGure
Occupied BW /	OBWidth
Output Spectrum BW	
Output RF Spectrum	EORFspectr
Phase and Amplitude vs Time	PAVTime
PM	PM
PM Deviation	PMDeviation
Power Amplifier	PAMplifier
Power Control	PCONtrol
Power Stat CCDF	PSTatistic
Power vs Time	EPVTime
Pulse	PULSe
QPSK EVM	EVMQpsk
Real Time Scan	RTSC
RF Power	RFPower
SEM	SEMask
Spectral Flatness	FLATness
Spectrum & PvT	RTSA
Spot Frequency	SFRequency
Spurious Emissions	SPURious
Streaming	STReaming

Measurement Name	SCPI ID
Strip Chart	SCHart
Swept SA	SAnalyzer
TOI	TOI
Transmit Analysis	TX
Transmit On/Off Power	PVTime
Transmit Power (Burst Power)	TXPower
Tuned RF Level	TRFLevel
Tuned RF Level with Tracking	TTRF
Tx Band Spur	ETSPur
VHF Omni-Directional Range	VOR

Examples:

- The User View file for the Swept SA measurement is [SA.SAnalyzer.layout](#)
- The User View file for the ACP measurement in the WCDMA mode is [WCDMA.ACPower.layout](#)

Copy the desired file to a thumb drive or to your network. Then go to the target instrument and copy the file into the [D:\Users\Instrument\My Documents\UserViews](#) directory on that instrument (again, assuming you are logged in as Instrument).

Note that copying this file to another instrument will overwrite the file already in that instrument, if any, and will destroy any User Views that might have been created on that instrument.

Note that when you delete the last User View for a measurement, the file is removed.

2.17.5 To Rename a User View

You can rename a User View by selecting that View and tapping “Rename User View.” You can also re-edit a User View; if you do this, an asterisk will appear next to the User View’s name. You can then tap “Re-Save User View to save it back to its existing name, or “Save Layout as New View” to add another, new User View.

2.17.6 To Delete a User View

You can delete a User View by doing the following:


1. From the "Mode/Meas/View Dialog" on page 131, or from the **View** menu, select the User View that you want to delete
2. Switch to the **Display** menu
3. Select the **View** tab
4. Tap **Delete User View**

2.17.7 To Delete All User Views

You can delete all User Views by tapping "Delete All User Views." The default view becomes the current view for the Measurement if a User View was the current view when this control was pressed.

2.17.8 Use Case: Displaying Marker and Peak Tables

One common application for User Views is to create a View that allows the Spectrum Analyzer to display both a Marker Table and a Peak Table at the same time. To do this, simply add a Marker Table Window and a Peak Table window to the Spectrum window of the Swept SA measurement. The result is shown below; note that the new View has been named "Marker Table & Peak Table":

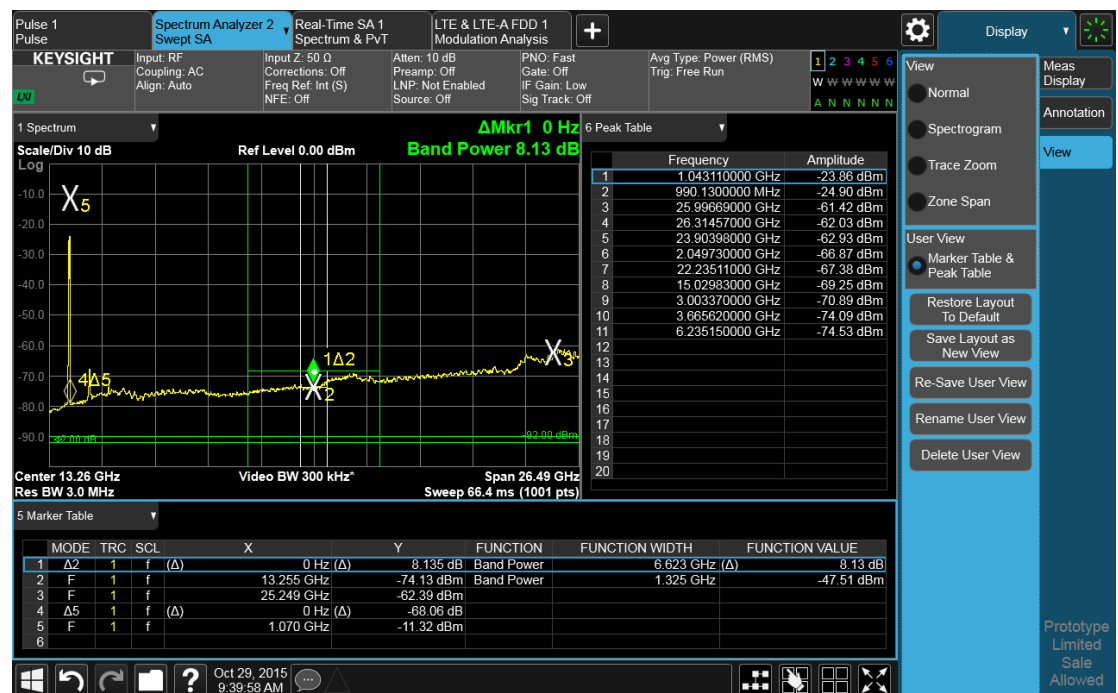

NOTE: There are legacy displays like Marker Table, Peak Table, Measure at Marker and Gate View, which are not Views but special display modes. These are retained for backwards compatibility, however they are turned on and off with switches and do not use the View system. Turning on one of these switches does not create a modified View, it merely adds the specified window to the current View; turning the switch back off removes the window. While the switch is on, NO View shows as selected in the View menu. These switches are grayed out if you are in a modified View or a User View. Since only one of these switches can be on at a time, and because these switches turn off on a Preset, User Views offer a superior way of adding windows than using the switches.


Some measurements do not support User Views; these do not allow adding, deleting or rearranging windows, however they do allow resizing windows. In these measurements you can get into the View Editor but the Add icons, Delete icons and Move icons will not appear. You can still resize the windows and in some cases (e.g. Noise Figure) you can still change window contents.

2.17.9 View Editor Remote Commands

Remote Commands for User Views can be found in the documentation for the **Display, View** tab.

2.18 Multiscreen

You can configure up to 16 different Screens at a time. Normally, you only see one Screen, and the set of configured screens is shown across the top of the display in a series of "Screen Tabs" on page 130. Touching any screen's tab brings it to the foreground, makes it the current Screen and starts it updating.

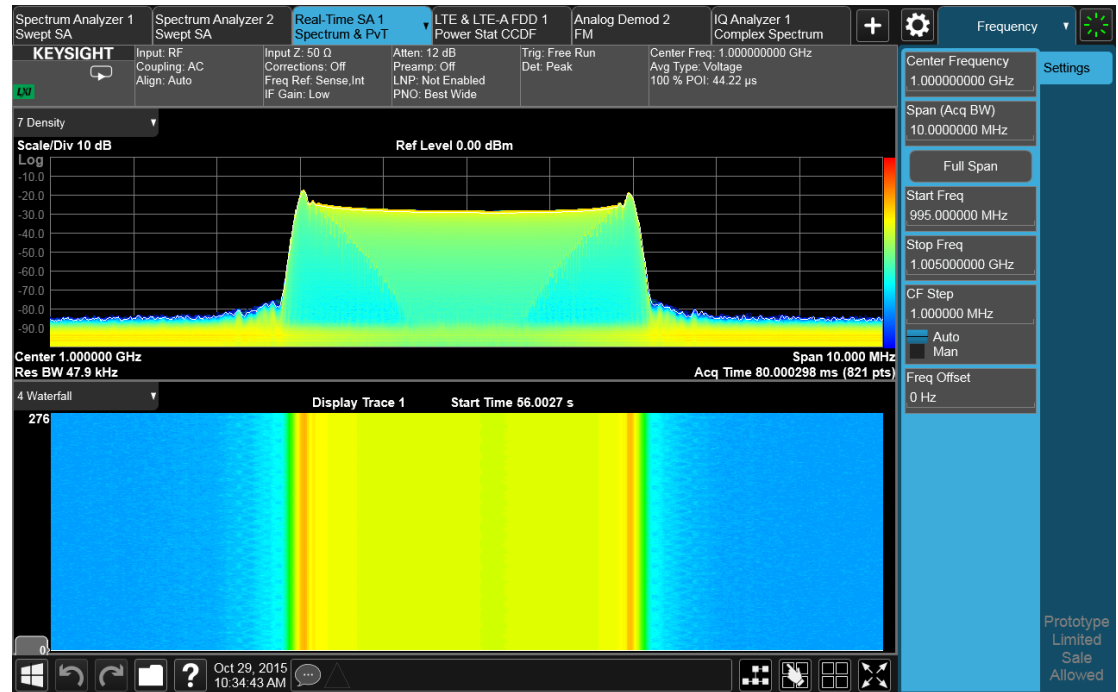

Multiscreen view lets you display all of the configured Screens at once.


You can switch to Multiscreen View by pressing this button in the "Control Bar" on page 180 at the bottom right of the screen:



Multiscreen View looks like this:

2 User Interface

2.18 Multiscreen

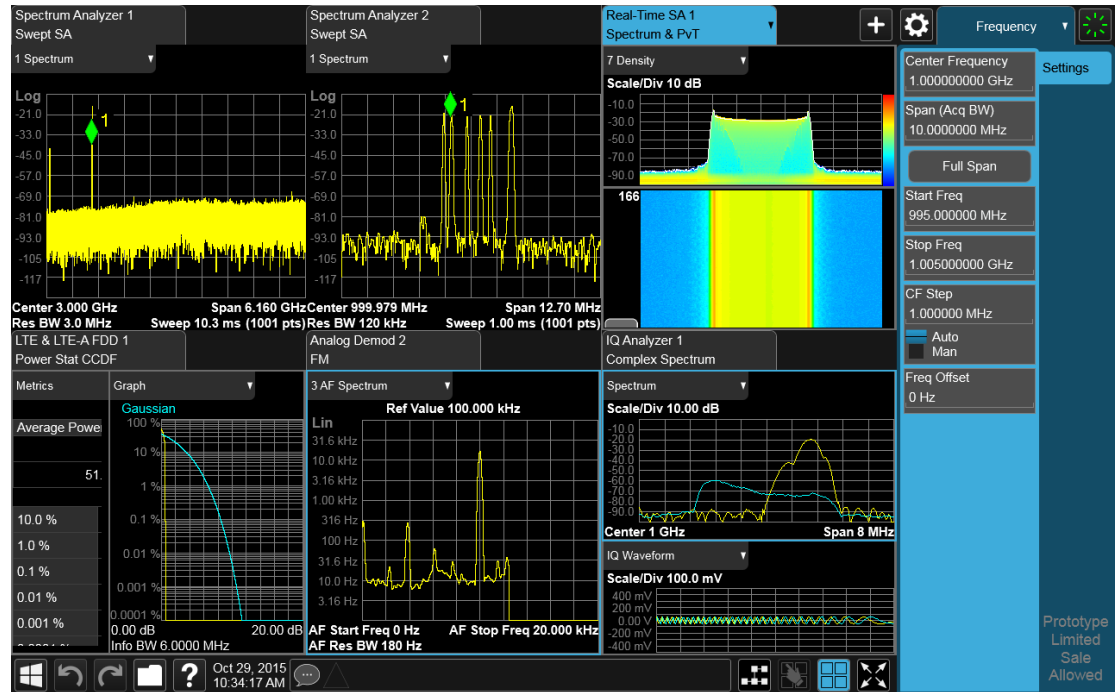

While in Multiscreen View, the button changes from a black background to a blue background:



To exit Multiscreen view, tap the button again.

Multiscreen View cannot be activated if only one screen is configured.

Each Screen contains one Mode, each Mode contains one Measurement, and each Measurement contains a number of Windows arranged in Views. You can configure multiple instances of the same Mode along with any combination of other Modes.

In Multiscreen View, just as in Single Screen View, only one screen is active.

You switch Screens by tapping the Screen Tab you want, or when in Multiscreen View, you can tap the Screen itself. When you switch Screens, the current Screen's state and measurement results are preserved, the new Screen's previous state and data are loaded, and the new Screen starts running its Mode.

In Multiscreen View:

- The Meas Bar does not display
- The Screens are presented in an array of equal size boxes, except where the number of Screens means some have to be different sizes (as when you have 3 Screens, 5 Screens, etc.).

- Each Screen has a tab that contains the name of the Mode and Measurement in the box and a number associated with the instance of that Mode. You can enter a custom Screen name that replaces the Mode name, by going into the Mode/Meas dialog
- There is always one and only one selected Screen. It is indicated by a blue tab. Only the selected Screen is actually running a measurement and updating its display
- The selected window in the selected screen is the context for the current menus. It is the only window on the display with a blue border
- As you go from screen to screen, each screen remembers the last menu that was active in that screen and restores it as the active menu

In Multiscreen View, as in Single Screen View, tapping the blue tab or pressing the Mode/Meas front panel key opens the ["Mode/Meas/View Dialog" on page 131](#) which allows you to change the Mode (or Measurement or View) being displayed in that Screen.

Remote Command	<code>:INSTrument:SCReen:MULTiple[:STATe] OFF ON 0 1</code> <code>:INSTrument:SCReen:MULTiple?</code>
Example	<code>:INST:SCR:MULT ON</code>
Notes	If only one screen is configured, attempting to set Multi-Screen ON generates the error “-221, Settings conflict; Multi-Screen requires >1 screen”
Preset	OFF

For more information, see the following:

- ["Select Screen" on page 221](#)
- ["Screen List \(Remote only command\)" on page 222](#)

2.18.1 Select Screen

You can select a screen by touching its tab or, in ["Multiscreen" on page 219](#) mode, touching the screen itself. Selecting the Screen activates the screen and suspends the previously selected screen (if any).

Remote Command	<code>:INSTrument:SCReen:SElect <screen name></code> <code>:INSTrument:SCReen:SElect?</code>
Example	<code>:INST:SCR:SEL "Baseband"</code>
Notes	If the <screen name> is specified but not found in the list of Screens, the error message “-224, Illegal parameter value; Screen Name not found” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” is generated

Preset	Returns the name of the active screen
--------	---------------------------------------

2.18.2 Screen List (Remote only command)

You can obtain a list of currently configured Screens. This permits your remote program to manage screens for selection, renaming, or deletion.

Remote Command	<code>:INSTrument:SCReen:CATalog?</code>
Example	<code>:INST:SCR:CAT?</code>
Notes	<p>The query response is a comma separated list of Screen Names. If only 1 Screen is configured, there is no trailing comma</p> <p>For R&S compatibility, the following query is also available:</p> <p><code>:INSTrument:SCReen:LIST?</code></p>
Preset	Returns list of currently configured Screens

2.19 Fullscreen

The Fullscreen button is in the "Control Bar" on page 180, at the lower right corner of the display.



When **Full Screen** is pressed the measurement window expands horizontally over the entire instrument display. The screen graticule area expands to fill the available display area.

It turns off the display of the menu panel, however the controls that drop down from the Meas Bar and on-screen annotation are still available, and you can still drag the trace and markers and perform a pinch zoom, so you can still operate the instrument.

Pressing **Full Screen** again while Full Screen is in effect cancels Full Screen.

You can get even more screen area for your data display by turning off the Meas Bar using the Annotation tab of the Display menu)

Full Screen is canceled by the **Preset** key.

Remote Command	<code>:DISPlay:FSCreen[:STATe] OFF ON 0 1</code> <code>:DISPlay:FSCreen[:STATe]?</code>
Notes	This was set to Off by :SYST:DEF MISC in MXA1, but not by Preset. It is no longer set Off by :SYST:DEF MISC, since it is now meas global instead of mode global
Preset	Unaffected by Preset but set to Off by Restore Misc Defaults or shutdown and restart
State Saved	Not saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:MENU[:STATe] OFF ON 0 1</code> This emulates ESA full screen functionality, which is the same as the FSCreen command in PSA except that the sense of on/off is reversed (that is, OFF means the menus are OFF, so Fullscreen is ON) and the default is ON (meaning Fullscreen is OFF)
Backwards Compatibility Notes	In ESA/PSA, Full Screen was turned on with a softkey, so pressing any other key turned Full Screen off. In the X-Series, because a hardkey is provided to turn this function on and off, pressing any other key no longer turns off Full Screen

3 5G NR Mode

The 5G NR Mode is targeted for testing the transmitter of both the Base Station and User Equipment according to following 3GPP standards.

The UE and BS radio transmission and reception definitions and their conformance testing requirements are listed in the specifications of the following table.

Standards	Version	Date
38.141-1 (gNB Conformance for Conducted)	17.7.0	2022-09
38.141-2 (gNB Conformance for Radiated)	17.7.0	2022-09
38.521-1 (UE Conformance for FR1)	17.6.1	2022-09
38.521-2 (UE Conformance for FR2)	17.0.0	2022-09

The 5G NR Modulation Analysis measurement refers to the following standards to support the demodulation of the signals.

Standards	Version	Date
38.211 (NR; Physical channels and modulation)	17.4.0	2022-12
38.212 (NR; Multiplexing and channel coding)	17.4.0	2022-12
38.213 (NR; Physical layer procedures for control)	17.4.0	2022-12
38.214 (NR; Physical layer procedures for data)	17.4.0	2022-12
38.215 (NR; Physical layer measurements)	17.2.0	2022-09

NOTE

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc control), select this mode, and re-access Help.

Example	<pre>:INSTRument[:SElect] NR5G :INSTRument[:SElect]? :INSTRument:NSElect 109 :INSTRument:NSElect?</pre>
Dependencies	The mode must be installed and licensed with option N9085EM0E in your instrument before it is available for use
Status Bits/OPC dependencies	Changing modes resets all SCPI status registers and mask registers to their power-on defaults. Therefore, event or condition register masks must be re-established after a mode change

When you select 5G NR Mode, the default Measurement is the Preset Measurement; the first View listed under each measurement is the Preset View for that measurement; and the first Window listed under each View is the window selected after a Preset.

3.1 Measurement Commands

The commands for selecting each measurement are shown below. Normally **:CONFigure** presets the measurement after selecting it, but if sent with the **NDEFault** parameter (for example, **:CONF:CHP:NDEF**), the measurement is selected without performing a Preset.

Commands relating to the Views and Windows for each measurement are described in the documentation for each measurement.

Example	Select Measurement	Command
	Adjacent Channel Power	:CONFigure:ACPower
	Channel Power	:CONFigure:CHPower
	IQ Waveform	:CONFigure:WAV
	Modulation Analysis	:CONFigure:EVM
	Monitor Spectrum	:CONFigure:MON
	Occupied Bandwidth	:CONFigure:OBWidth
	Phase and Amplitude vs Time	:CONFigure:PAVTime
	Power Statistics CCDF	:CONFigure:PSTatistic
	Spectrum Emissions Mask	:CONFigure:SEMask
	Spurious Emissions	:CONFigure:SPURious
	Transmit On/Off Power	:CONFigure:PVTime
	Query the current measurement: :CONFigure?	
Preset	MONitor	
State Saved	Instrument State	

3.2 Channel Power Measurement

This measurement is used to find the total power present in a specified bandwidth. Power Spectral Density (signal power normalized to 1 Hz) is also reported.

When in WLAN Mode, or when WLAN radio standard is selected in SA Mode, the peak Power Spectral Density for 1 MHz is reported.

Measurement Commands

The general functionality of "CONFigure" on page 4138, "INITiate" on page 4139, "FETCh" on page 4139, "MEASure" on page 4141, and "READ" on page 4140 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF:<Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list setup commands for this measurement and queries to retrieve results.

Command	Function
<code>:INITiate:CHPower</code>	Initiates a trigger cycle for the CHP measurement, but does not return any data. You must then use <code>:FETC:CHP[n]?</code> to retrieve data Does not change any measurement settings
<code>:CONFigure?</code>	Returns the long form name of current measurement, in this case, CHPower
<code>:CONFigure:CHPower</code>	Selects CHP measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 315
<code>:CONFigure:CHPower:NDEFault</code>	Selects CHP measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of `n`.

Query	Function
<code>:FETCh:CHPower[n]?</code>	Retrieves the data defined by <code>n</code>
<code>:MEASure:CHPower[n]?</code>	Switches to CHP measurement, restores default values, starts the measurement, then retrieves the data defined by <code>n</code>
<code>:READ:CHPower[n]?</code>	Starts the measurement, then retrieves the data defined by <code>n</code>

Backwards Compatibility Queries

Query	Return Value
<code>:FETCh:CHPower:CHPower?</code>	Returns the Channel Power (dBm)
<code>:MEASure:CHPower:CHPower?</code>	
<code>:READ:CHPower:CHPower?</code>	
<code>:FETCh:CHPower:DENSity?</code>	Returns the Power Spectral Density (dBm/Hz)
<code>:MEASure:CHPower:DENSity?</code>	
<code>:READ:CHPower:DENSity?</code>	

The results returned by the queries depend on the currently-selected Mode and the value of *n* (where required). The sections below provide mode-specific details for each Mode.

SA Mode Measurement Results

n	Results Returned
1 or not specified	Returns scalar results: <ul style="list-style-type: none"> 1 Channel Power A floating-point number representing the total channel power in the specified integration bandwidth 2 PSD (Power Spectral Density) The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311; either dBm/Hz or dBm/MHz
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 297
3	n/a
4	n/a
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by Span
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

MSR Mode Measurement Results

n	Results Returned
1 or not specified	Returns scalar results:

n

Results Returned

1

Channel Power

A floating-point number representing the total channel power in the specified integration bandwidth

2

PSD (Power Spectral Density)

The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311; either dBm/Hz or dBm/MHz

2

Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 297

3

Returns [Carriers] comma-separated scalar results, in the following order

#	Item	Unit
1	Total Power of Carrier 1	dBm
2	Total Power of Carrier 2	dBm
...	...	
[Carriers]	Total Power of Carrier [Carriers]	dBm

If the result is not available, NaN (9.91E+37) is returned. Number of returned values might be changed in future releases

4

Returns comma-separated scalar results, in the following order

#	Item	Unit
1	Total Power of LTE FDD carriers	dBm
2	Total Power of W-CDMA carriers	dBm
3	Total Power of GSM/EDGE carriers	dBm
4	Total Power of cdma2000 carriers	dBm
5	Total Power of 1xEV-DO carriers	dBm
6	...	

The number of results is incremented by one when a new format is supported

If the result is not available, NaN (9.91E+37) is returned. Number of returned values will be changed in future releases if the number of supported radio format is increased

5

Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by the Span control

6

Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by the Span control

7

Returns Marker Table data as a series of comma separated values in the following form:
<Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved>
Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

LTE-Advanced FDD/TDD Mode Measurement Results

n	Results Returned																				
1 or not specified	Returns scalar results:																				
	1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth																		
	2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311; either dBm/Hz or dBm/MHz																		
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 297																				
3	Returns comma-separated scalar results, in the following order																				
	<table><tr><th>#</th><th>Item</th><th>Unit</th></tr><tr><td>1</td><td>Total Power of Component Carrier 0</td><td>dBm</td></tr><tr><td>2</td><td>Total Power of Component Carrier 1</td><td>dBm</td></tr><tr><td>3</td><td>Total Power of Component Carrier 2</td><td>dBm</td></tr><tr><td>4</td><td>Total Power of Component Carrier 3</td><td>dBm</td></tr><tr><td>5</td><td>Total Power of Component Carrier 4</td><td>dBm</td></tr></table>			#	Item	Unit	1	Total Power of Component Carrier 0	dBm	2	Total Power of Component Carrier 1	dBm	3	Total Power of Component Carrier 2	dBm	4	Total Power of Component Carrier 3	dBm	5	Total Power of Component Carrier 4	dBm
#	Item	Unit																			
1	Total Power of Component Carrier 0	dBm																			
2	Total Power of Component Carrier 1	dBm																			
3	Total Power of Component Carrier 2	dBm																			
4	Total Power of Component Carrier 3	dBm																			
5	Total Power of Component Carrier 4	dBm																			
	If the result is not available, NaN (9.91E+37) is returned																				
4	Returns comma-separated scalar results, in the following order. The unit bandwidth is selected by "PSD Unit" on page 311, either dBm/Hz or dBm/MHz																				
	<table><tr><th>#</th><th>Item</th><th>Unit</th></tr><tr><td>1</td><td>Total Power Spectral Density of Component Carrier 0</td><td>PSD Unit</td></tr><tr><td>2</td><td>Total Power Spectral Density of Component Carrier 1</td><td>PSD Unit</td></tr><tr><td>3</td><td>Total Power Spectral Density of Component Carrier 2</td><td>PSD Unit</td></tr><tr><td>4</td><td>Total Power Spectral Density of Component Carrier 3</td><td>PSD Unit</td></tr><tr><td>5</td><td>Total Power Spectral Density of Component Carrier 4</td><td>PSD Unit</td></tr></table>			#	Item	Unit	1	Total Power Spectral Density of Component Carrier 0	PSD Unit	2	Total Power Spectral Density of Component Carrier 1	PSD Unit	3	Total Power Spectral Density of Component Carrier 2	PSD Unit	4	Total Power Spectral Density of Component Carrier 3	PSD Unit	5	Total Power Spectral Density of Component Carrier 4	PSD Unit
#	Item	Unit																			
1	Total Power Spectral Density of Component Carrier 0	PSD Unit																			
2	Total Power Spectral Density of Component Carrier 1	PSD Unit																			
3	Total Power Spectral Density of Component Carrier 2	PSD Unit																			
4	Total Power Spectral Density of Component Carrier 3	PSD Unit																			
5	Total Power Spectral Density of Component Carrier 4	PSD Unit																			
	If the result is not available, NaN (9.91E+37) is returned																				
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by Span																				
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span																				
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table																				

5G NR Mode Measurement Results

n	Results Returned																				
1 or not specified	Returns scalar results:																				
	1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth																		
	2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311; either dBm/Hz or dBm/MHz																		
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 297																				
3	Returns comma-separated scalar results, in the following order																				
	<table><tr><th>#</th><th>Item</th><th>Unit</th></tr><tr><td>1</td><td>Total Power of Component Carrier 0</td><td>dBm</td></tr><tr><td>2</td><td>Total Power of Component Carrier 1</td><td>dBm</td></tr><tr><td>3</td><td>Total Power of Component Carrier 2</td><td>dBm</td></tr><tr><td>...</td><td>...</td><td></td></tr><tr><td>16</td><td>Total Power of Component Carrier 15</td><td>dBm</td></tr></table>			#	Item	Unit	1	Total Power of Component Carrier 0	dBm	2	Total Power of Component Carrier 1	dBm	3	Total Power of Component Carrier 2	dBm		16	Total Power of Component Carrier 15	dBm
#	Item	Unit																			
1	Total Power of Component Carrier 0	dBm																			
2	Total Power of Component Carrier 1	dBm																			
3	Total Power of Component Carrier 2	dBm																			
...	...																				
16	Total Power of Component Carrier 15	dBm																			
	If the result is not available, NaN (9.91E+37) is returned																				
4	Returns comma-separated scalar results, in the following order. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz																				
	<table><tr><th>#</th><th>Item</th><th>Unit</th></tr><tr><td>1</td><td>Total Power of Component Carrier 0</td><td>PSD Unit</td></tr><tr><td>2</td><td>Total Power of Component Carrier 1</td><td>PSD Unit</td></tr><tr><td>3</td><td>Total Power of Component Carrier 2</td><td>PSD Unit</td></tr><tr><td>...</td><td>...</td><td></td></tr><tr><td>16</td><td>Total Power of Component Carrier 15</td><td>PSD Unit</td></tr></table>			#	Item	Unit	1	Total Power of Component Carrier 0	PSD Unit	2	Total Power of Component Carrier 1	PSD Unit	3	Total Power of Component Carrier 2	PSD Unit		16	Total Power of Component Carrier 15	PSD Unit
#	Item	Unit																			
1	Total Power of Component Carrier 0	PSD Unit																			
2	Total Power of Component Carrier 1	PSD Unit																			
3	Total Power of Component Carrier 2	PSD Unit																			
...	...																				
16	Total Power of Component Carrier 15	PSD Unit																			
	If the result is not available, NaN (9.91E+37) is returned																				
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by "Span" on page 297																				
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span																				
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table																				

WLAN Channel Power Measurement Results

n	Results Returned
1 or not specified	<p data-bbox="358 390 578 411">Returns scalar results:</p> <p data-bbox="358 428 1146 449">When the radio standard is <i>not</i> 802.11ac 80 + 80 MHz or 802.11ax 80 + 80 MHz:</p> <p data-bbox="358 485 509 506">Channel Power</p> <p data-bbox="358 522 1338 546">A floating-point number representing the total channel power in the specified integration bandwidth</p> <p data-bbox="358 564 704 588">Peak PSD (Power Spectral Density)</p> <p data-bbox="358 604 1338 661">The peak PSD over the integration bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311 in either dBm/Hz or dBm/MHz</p> <p data-bbox="358 678 711 701">Mean PSD (Power Spectral Density)</p> <p data-bbox="358 718 1330 774">The mean PSD over the integration bandwidth. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p data-bbox="358 806 1109 827">When the radio standard is 802.11ac 80 + 80 MHz or 802.11ax 80 + 80 MHz:</p> <p data-bbox="358 863 1240 886">Channel Power of the carrier of which the center frequency is indicated by Freq Segment 1</p> <p data-bbox="358 903 1313 959">A floating-point number representing the total channel power of the first segment in the specified integration bandwidth</p> <p data-bbox="358 976 1330 1033">Peak PSD (Power Spectral Density) of the carrier of which the center frequency is indicated by Freq Segment 1</p> <p data-bbox="358 1050 1349 1106">The power in the specified unit bandwidth of the first segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p data-bbox="358 1123 1243 1146">Channel Power of the carrier of which the center frequency is indicated by Freq Segment 2</p> <p data-bbox="358 1163 1346 1220">A floating-point number representing the total channel power of the second segment in the specified integration bandwidth</p> <p data-bbox="358 1236 1330 1293">Peak PSD (Power Spectral Density) of the carrier of which the center frequency is indicated by Freq Segment 2</p> <p data-bbox="358 1310 1338 1367">The power in the specified unit bandwidth of the second segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p data-bbox="358 1383 1338 1440">Mean PSD (Power Spectral Density) of the carrier of which the center frequency is indicated by Freq Segment 1</p> <p data-bbox="358 1457 1349 1514">The power in the specified unit bandwidth of the first segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p data-bbox="358 1530 1338 1587">Mean PSD (Power Spectral Density) of the carrier of which the center frequency is indicated by Freq Segment 2</p> <p data-bbox="358 1604 1338 1661">The power in the specified unit bandwidth of the second segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p>
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 297
3	n/a
4	n/a

n	Results Returned
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by Span
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

Additionally, WLAN Mode supports an **n** parameter for the following queries:

:FETCh:CHPower:DENSity[n]?

:MEASure:CHPower:DENSity[n]?

:READ:CHPower:DENSity[n]?

For these queries *in WLAN Mode only*, the results returned depend on the value of **n** as follows:

n	Radio Standard	Results Returned
1 or not specified	Not 802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	Peak PSD (Power Spectral Density) The Peak PSD over the integration bandwidth. The unit bandwidth is selected by "PSD Unit" on page 311 in either dBm/Hz or dBm/MHz
	802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	The first value is the peak PSD for segment 1, the second value is the peak PSD for segment 2
2	Not 802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	Mean PSD (Power Spectral Density) The Mean PSD over the integration bandwidth. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz
	802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	The first value is the mean PSD for segment 1, the second value is the mean PSD for segment 2

3.2.1 Views

In SA, WCDMA, WLAN, SRCOMMS, and VMA Modes, there is only one predefined view, the "Normal" on page 233 view.

In MSR, LTEAFDD, LTEATDD, and 5GNR Modes, this measurement has two predefined views:

View	SCPI	View Number
"Normal" on page 233	PREsult	1
"Carrier Info" on page 233	CINformation	2

View selection by name

Selects the results view by specifying the View name.

Remote Command	<code>:DISPlay:CHPower:VIEW[:SElect] PRESult CINformation</code> <code>:DISPlay:CHPower:VIEW[:SElect]?</code>
Example	<code>:DISP:CHP:VIEW PRES</code> <code>:DISP:CHP:VIEW?</code>
Preset	<code>PRESult</code>
State Saved	Saved in instrument state
Range	Power Results Carrier Info

View selection by number

Selects the results view by specifying the View number.

Remote Command	<code>:DISPlay:CHPower:VIEW:NSElect <integer></code> <code>:DISPlay:CHPower:VIEW:NSElect?</code>
Example	<code>:DISP:CHP:VIEW:NSEL 1</code> <code>:DISP:CHP:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1 / 2

3.2.1.1 Normal

Windows: "Graph" on page 234, "Metrics" on page 235

Dual window view: Channel Power graph and Channel Power metrics.

Example	<code>:DISP:CHP:VIEW PRES</code>
---------	----------------------------------

3.2.1.2 Carrier Info

Windows: "Graph" on page 234, "Metrics" on page 235

Dual window view: Channel Power graph and Carrier Info table.

Example	<code>:DISP:CHP:VIEW CINF</code>
Dependencies	Only available in MSR, LTE-A FDD/TDD and 5G NR Modes

3.2.2 Windows

This section describes the windows that are available in the Channel Power measurement:

Window	Number
"Graph" on page 234	1
"Metrics" on page 235	2
"Gate" on page 238	3
"Marker Table" on page 239	4

3.2.2.1 Graph


Window #1

Used to display the spectrum trace and power bars.

The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace. The Bar Graph appears between the markers that indicate the measured output power level. The bar graph is activated when the “Bar Graph” control is set to ON under the Display menu. The Graph window appears in the following views.


View	Size	Position
Normal	Two thirds, full width	Top
Gate View	One third, full width	Middle

Spectrum View with Bar Graph Off

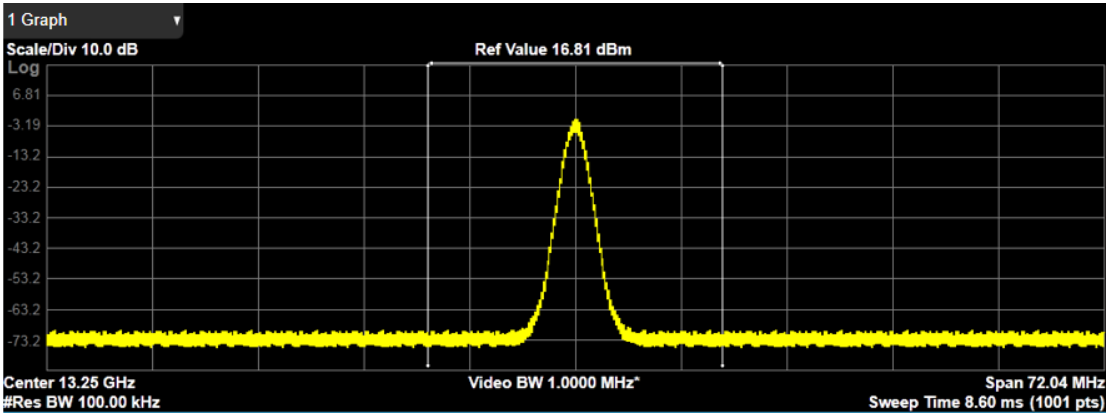

Spectrum View with Bar Graph On

This is the same as the **Spectrum** view, but has a blue bar between the markers that indicates the measured output power level. The bar graph is activated when the “Bar Graph” control is set to **ON** under the **Display** hardkey. The actual measured output power level is displayed on the display at the top of the bar.

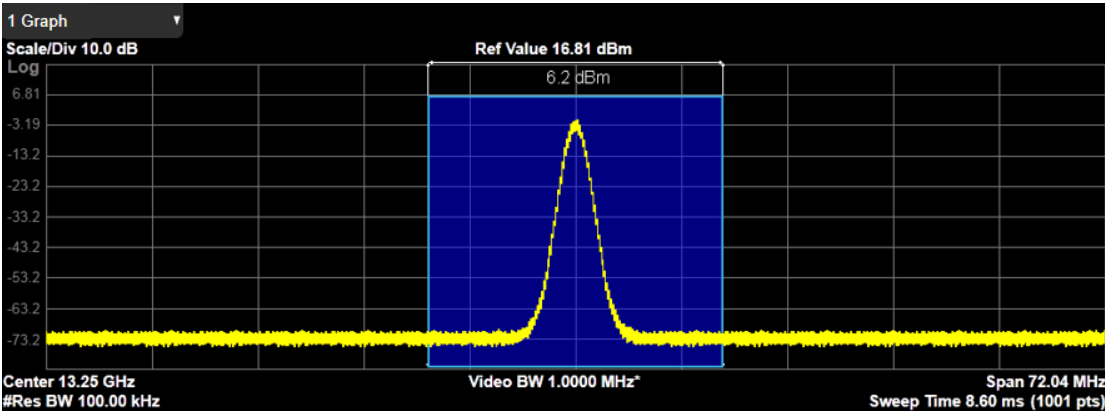

If the current Mode is WLAN and the format is WLAN 802.11ac 80+80 MHz, Spectrum View is slightly different so that the results of both carrier segments can be displayed.


3.2.2.2 Metrics

Window #2

The actual measured output power level is displayed in the Metrics window

The **Metrics** window appears in the following Views.

View	Size	Position
Normal	One third, full width	Bottom
Gate View	One third, full width	Bottom

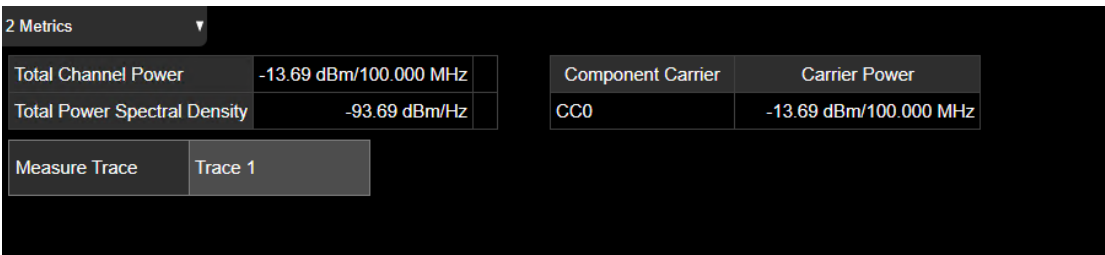

Measure Trace

See: "Measure Trace" on page 2614.

Power Results

Total carrier power, total PSD and total format carrier power are displayed in the lower window. Total format carrier power is total power of carriers of the same Radio Format. If there is no carrier of the corresponding format, it is not displayed. Thus, items in the total format power table changes depending on the carrier configuration. Since the metrics window of MSR, LTE-Advanced FDD/TDD and 5G NR is slightly denser than that for common CHP, the vertical positions of total power and power spectral density are raised.

Carrier Info: LTE-Advanced FDD/TDD and 5G NR Modes

The following diagram shows the Metrics Window in the Carrier Info view for LTE-Advanced FDD/TDD and 5G NR. The Power Results window is replaced by the carrier info table.

2 Carrier Info							
Total Car Pwr	-6.70 dBm/500.000 MHz						
Total PSD	-93.69 dBm/Hz						
RF-BW	99.970 MHz						
	Carrier Power	Carrier PSD	Integ BW	Filter	Offset Freq	Measure	
CC0	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On	
CC1	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On	
CC2	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On	
CC3	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On	
CC4	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On	

The text window displays the following results:

Total Carrier Power

This is the total power of all the carriers with carrier measure state setting to On. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$ multiplied by the number of carriers with carrier measure state setting to yes.

RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier, whether their measurement states are on or off.

Carrier Power

This is the power in all the currently defined carriers. If the carrier is with measurement state being on, the power will be absolute. If the carrier is defined as

3 5G NR Mode

3.2 Channel Power Measurement

not having power present, the power will be shown up as dash. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration.

Integration Bandwidth

Displays the channel bandwidth of each carrier.

Filter

Displays whether RRC filter is used or not.

Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block (LTE-Advanced FDD/TDD Modes only)

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. We support two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column is displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier power presents or not.

The highlighted row changes as either Carrier Result or Select Carrier is changed. The highlighted row and these keys are not coupled.

Carrier Info: MSR Mode

The text window displays the following results:

Total Carrier Power

This is the total power of all the carriers with carrier measure state setting to On. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$ multiplied by the number of carriers with carrier measure state setting to yes.

RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier, whether their measurement states are on or off.

Carrier Power

This is the power in all the currently defined carriers. If the carrier is with measurement state being on, the power will be absolute. If the carrier is defined as not having power present, the power will be shown up as dash. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration.

Integration Bandwidth

Displays the channel bandwidth of each carrier.

Filter

Displays whether RRC filter is used or not.

Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. We support two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column is displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier power presents or not.

The highlighted row changes according to whether Carrier Result or Select Carrier is changed. The highlighted row and these keys are not coupled.

Parameter Set

Displays which format parameter set is selected.

3.2.2.3 Gate

Window #3

Turning on **Gate** View displays the **Gate** Window, which allows you to see your gating signal at the same time as the measured data. See the description under ["Gate View On/Off" on page 4061](#) in **Trigger, Gate Settings**.

View	Size	Position
Gate View	One third, full width	Top

3.2.2.4 Marker Table

Window #4

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

3.2.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.2.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of ["Ref Position" on page 241](#).

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real></code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RLEV 10 dBm</code> <code>:DISP:CHP:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 241 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF Attenuation is not coupled to Ref Value

Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

Scale/Div

Sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule divisions on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl></code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:CHP:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 1416 as follows: Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 241 is ON , this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to OFF
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe <rel_ampl></code>
----------------	---

3 5G NR Mode

3.2 Channel Power Measurement

	<code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change this value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:CHP:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSition</code>

Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle 0 1 OFF ON</code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:CHP:WIND:TRAC:Y:COUP?</code>
Couplings	When Auto Scaling is ON , and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results

	When you change the value of Scale/Div , Ref Value , or Scale Range , Auto Scaling automatically changes to OFF
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	:DISP:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPle

3.2.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 242](#)
- See ["Single-Attenuator Configuration" on page 243](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations


Configuration 1: Mechanical attenuator + optional electronic attenuator

3 5G NR Mode

3.2 Channel Power Measurement

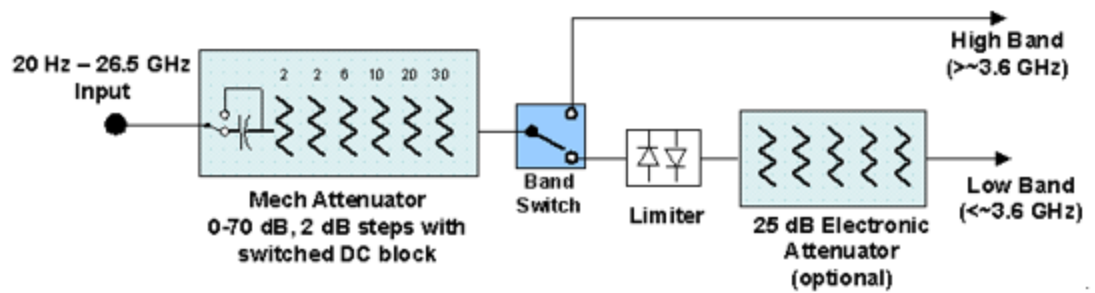


Configuration 2: Mechanical attenuator, no optional electronic attenuator

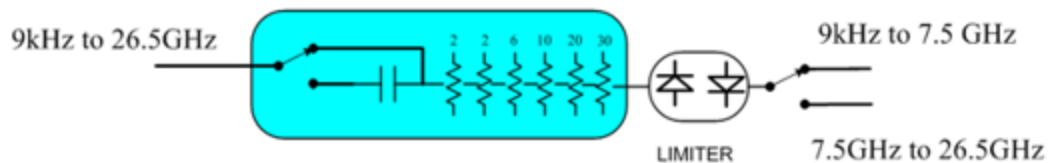

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


Single-Attenuator Configuration

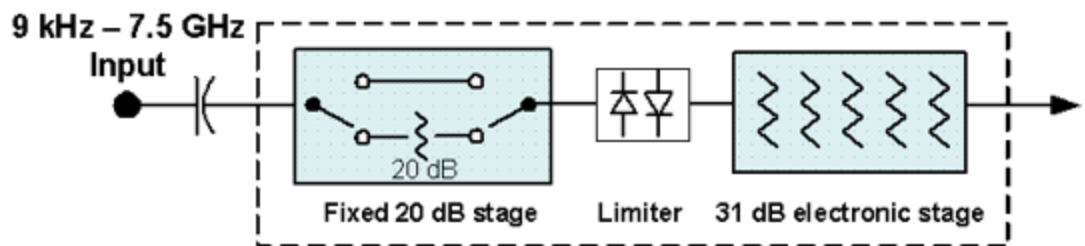

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator

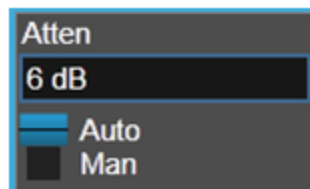

Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and " Mech Atten " on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten

In the **Amplitude**, "**Y Scale**" on page 3222 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten

"Total Atten above 50 GHz" followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 247

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " Elec Atten " on page 3231 See " Attenuator Configurations and Auto/Man " on page 247 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">- If the USB Preamp is connected to USB, use 0 dB for Mech Atten- Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp,

<p>External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</p> <ul style="list-style-type: none"> In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>							
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>						
State Saved	Saved in instrument state						
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>						
Max	<table> <tr> <td>CXA Option 503 or 507</td><td>50 dB</td></tr> <tr> <td>EXA</td><td>60 dB</td></tr> <tr> <td>All other models</td><td>70 dB</td></tr> </table> <p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the "soft" attenuation is at 14 dB (see below for definition of "soft" attenuation)</p>						

When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn Auto Mech Atten ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support Auto , such as Swept SA
Preset	ON

Attenuator Configurations and Auto/Man

As described under "Attenuation" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "Mech Atten" on page 245 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 3231 for more about "soft" attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

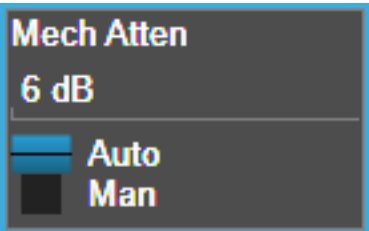

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

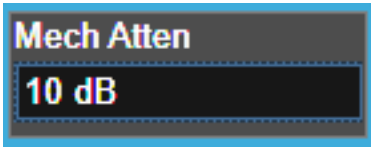

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 250](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the</p>

3 5G NR Mode

3.2 Channel Power Measurement

	<p>frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> – Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes – Transmit On Off Power measurement in 5GNR Mode – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 250
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1 [:SENSe]:POWer[:RF]:EATTenuation:STATe?</pre>
Example	<pre>:POW:EATT:STAT ON :POW:EATT:STAT?</pre>
Preset	<p>OFF (Disabled) for Swept SA measurement</p> <p>ON (Enabled) for all other measurements that support the electronic attenuator</p>
NOTE	<p>The maximum Center Frequency for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of</p>

3.3 GHz, and $1\text{ GHz} < \text{IFBW} \leq 1.5\text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5\text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 251](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled

3 5G NR Mode

3.2 Channel Power Measurement

- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANge:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANge:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANge:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 254

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECtrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<code>[:SENSe]:POWer[:RF]:RANge:OPTimize:ATTenuation OFF ON ELECtrical </code>	

	COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?
Notes	The parameter option ELECTrical sets this function to ON in Single-Attenuator models The parameter option COMBined is mapped to ELECTrical in Single-Attenuator models. If you send COMBined , it sets the function to ON and returns ELEC to a query For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " Elec Atten " on page 3231 is OFF or grayed-out, " Pre-Adjust for Min Clipping " on page 253 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC
State Saved	Saved in instrument state
Range	Dual-Attenuator models: Off Elec Atten Only Mech + Elec Atten Single-Attenuator models: Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

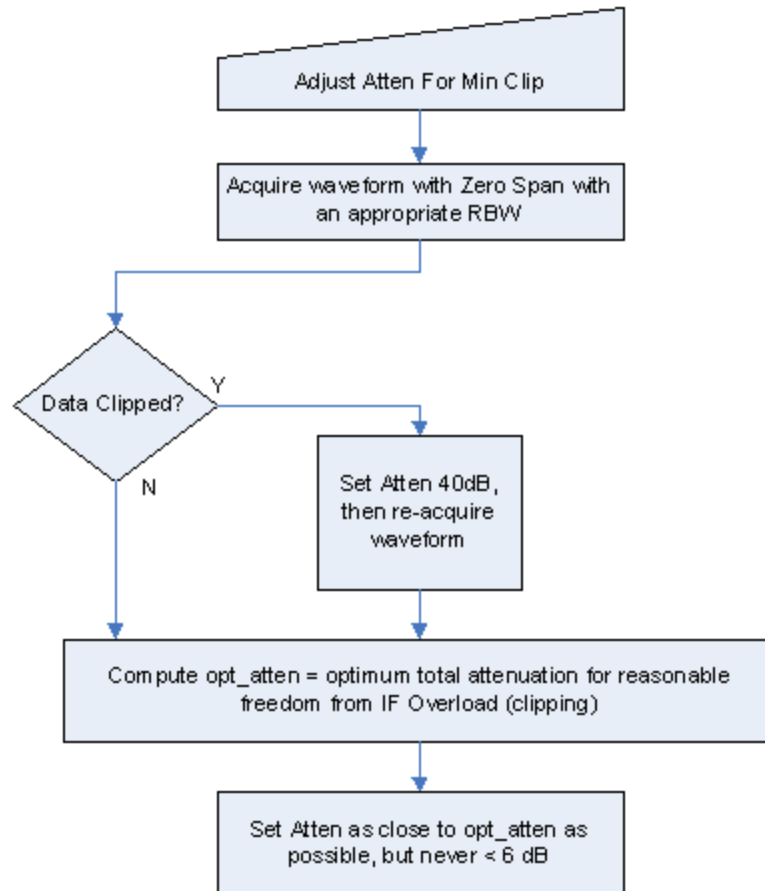


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 253 selection is Mech + Elec Atten:

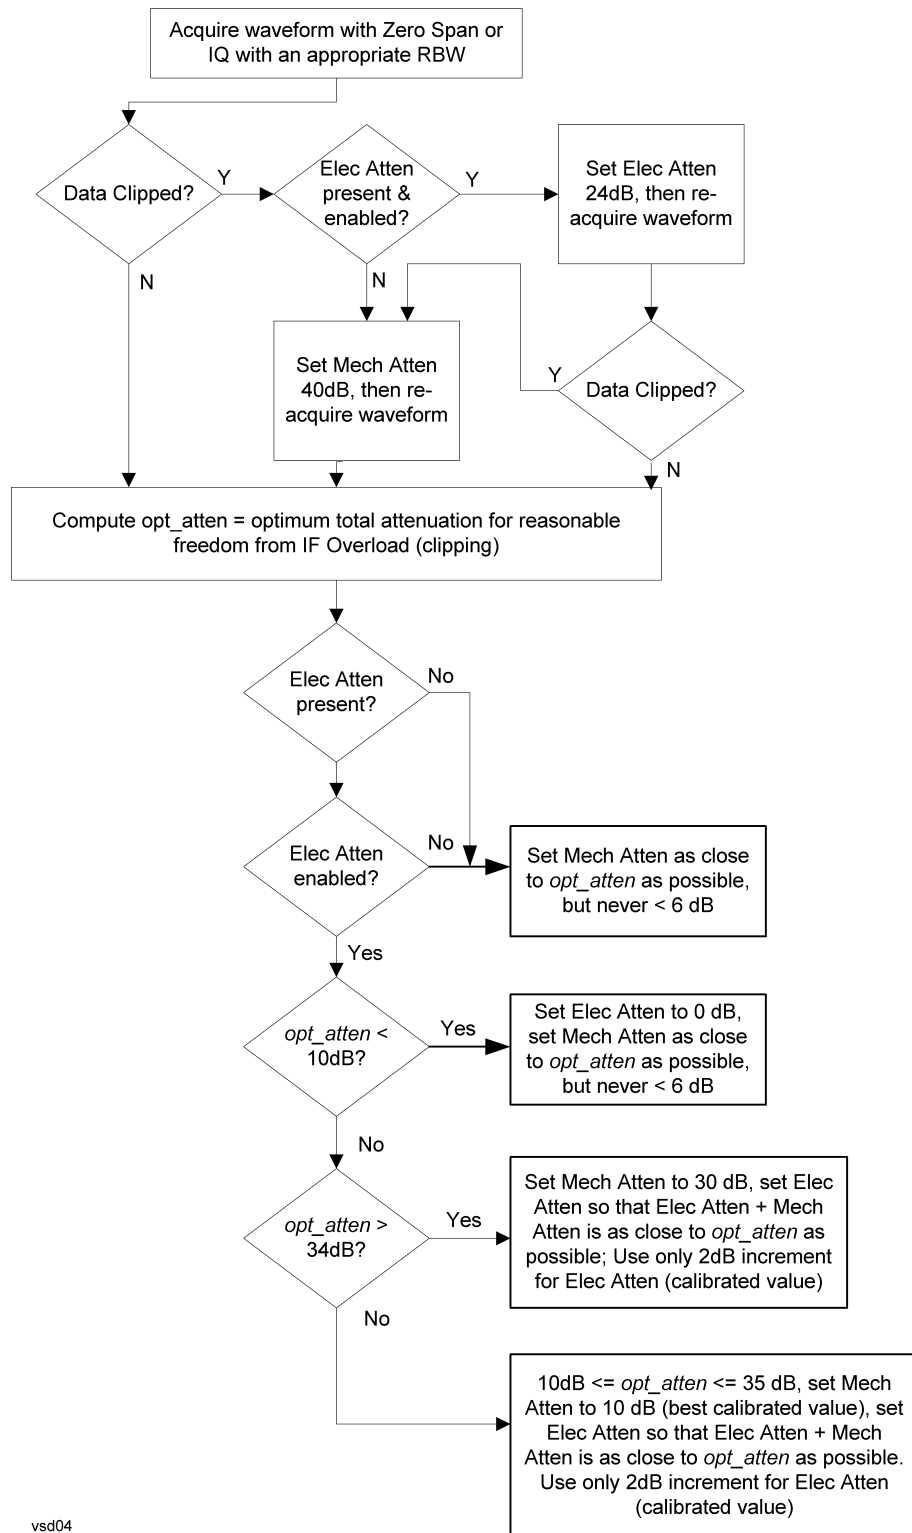

"Pre-Adjust for Min Clipping" on page 253 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

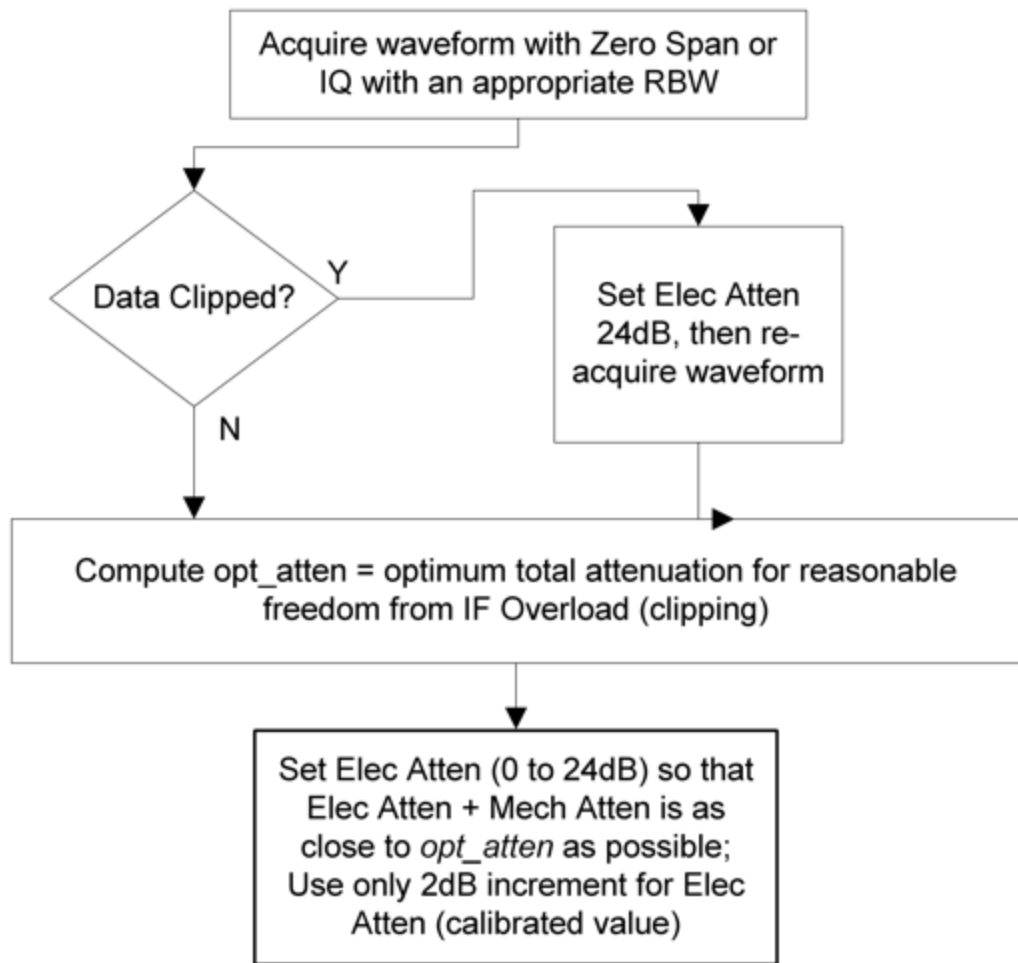

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.2.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

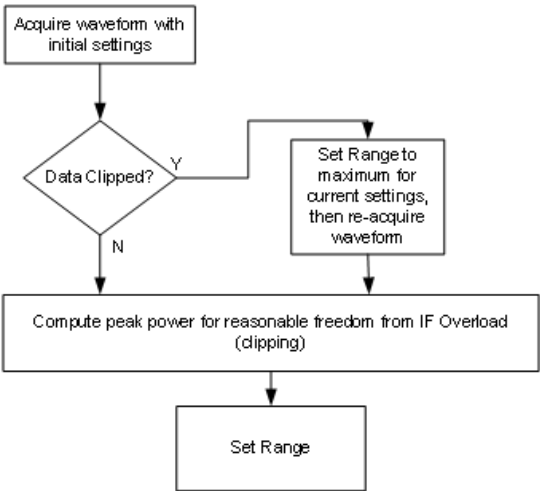

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:PARatio <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.2.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 262**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> – If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken – Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz – Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 – Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

- 2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
- 3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "Presel Center" on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none">- Does not appear in CXA-m- Does not appear in VXT Models M9410A/11A/15A/16A- Does not appear in M9410E/11E/15E/16E- Grayed-out if microwave preselector is off- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0- Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	–/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXternal</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to LOW instead of FULL , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp" on page 3251**. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with **"Internal Preamp" on page 3251**, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information" on page 266**

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 271
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 273
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 274

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error -241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														

Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>
------------	--

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 5G NR Mode

3.2 Channel Power Measurement

Measurement	μ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 269 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

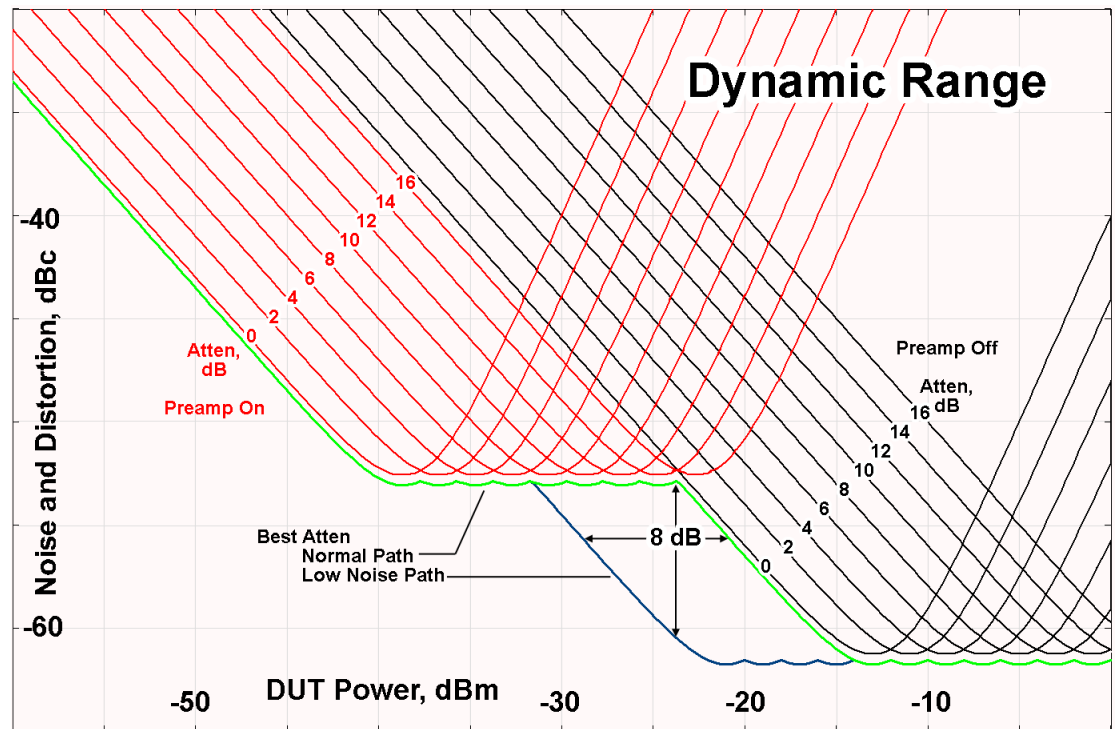

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and **"Y Scale" on page 3222** is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.

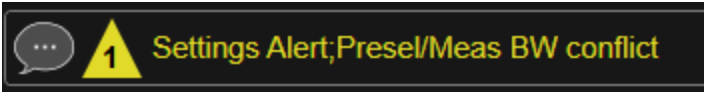

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">– 5GNRMode: Modulation Analysis and IQ Waveform– WLAN Mode: IQ Waveform– Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

3 5G NR Mode

3.2 Channel Power Measurement

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	N9041B
	N9042B+V3050A
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0</code> <code>[:SENSe]:<measurement>:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 280 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

3 5G NR Mode

3.2 Channel Power Measurement

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.2.4 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

The Resolution BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

3.2.4.1 Settings

Contains the basic bandwidth functions. In most measurements it is the only tab under Bandwidth.

Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW (Auto)** selects automatic coupling of **Res BW** to **"Span"** on page 297, using the ratio set by **Span:3 dB RBW** (some measurements do not have a Span:3 dB RBW control, in which case the measurement chooses the optimal ratio). To decouple the resolution bandwidth, press the **Auto/Man** toggle on **Res BW**, or simply enter a different value for **Res BW**.

When **Res BW** is manually selected, you can return it to the coupled state by pressing the **Auto/Man** toggle on **Res BW**. This may also be done by pressing **"Auto Couple"** on page 3289 or by performing a **Preset**.

For more details, see **"More Information"** on page 283

Remote Command	<code>[:SENSe]:CHPower:BANDwidth[:RESolution] <bandwidth></code> <code>[:SENSe]:CHPower:BANDwidth[:RESolution]?</code>
Example	<code>:CHP:BAND 5 MHz</code> <code>:CHP:BAND?</code>
Notes	For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered The setting and querying of values depend on the current bandwidth type
Couplings	Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1) When Res BW is set to Auto , the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings
Preset	See "RBW Presets" on page 283
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than –3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	For backwards compatibility, this command supports both the BANDwidth and BWIDth forms
	Auto Function
Remote	<code>[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO ON OFF 1 0</code>

Command	<code>[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO?</code>
Example	<code>:CHP:BAND:AUTO ON</code> <code>:CHP:BAND:AUTO?</code>

RBW Presets

Mode	Preset Value
LTEAFDD	Auto
LTEATDD	Auto
MSR	100 kHz
NR5G	Auto
SA	Auto
SRCOMMS	3.9 kHz
VMA	240 kHz
WCDMA	240 kHz
WLAN	100 kHz

More Information

When **Res BW** is set to **Auto**, the bandwidth selected depends on "RBW Filter Type" on page 286.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on **Filter Type** or **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

In some PowerSuite measurements, in the LTE-Advanced (both FDD and TDD) and 5G NR modes, when **Res BW** is in **Auto**, the resolution bandwidth is predefined based on the corresponding bandwidth of the single carrier, as shown in the table below. In the Multi-carrier case, the narrowest RBW among the active carriers is used.

LTE-A FDD/TDD Modes

Carrier BW	Auto RBW, kHz
1.4 MHz	20
3 MHz	43
5 MHz	68
10 MHz	150
15 MHz	220
20 MHz	270
200 kHz (NB-IoT in FDD)	10

5G NR Mode

Bandwidth	Auto RBW, kHz
5 MHz	68
10 MHz	150
15 MHz	220
20 MHz	270
25 MHz	360
30 MHz	430
35 MHz	510
40 MHz	560
45 MHz	620
50 MHz	680
60 MHz	820
70 MHz	1000
80 MHz	1100
90 MHz	1300
100 MHz	1500
200 MHz	2700
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

Video BW

Lets you change the instrument post-detection filter (VBW or “Video Bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to RBW using the ratio set by **VBW:3 dB RBW**. To decouple the resolution bandwidth, press the **Auto/Man** toggle on **Video BW**, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on **Video BW**. This may also be done by pressing **"Auto Couple"** on page 3289 or by performing a **Preset**.

Remote Command	<code>[:SENSe]:CHPower:BANdwidth:VIDeo <bandwidth></code> <code>[:SENSe]:CHPower:BANdwidth:VIDeo?</code>
Example	<code>:CHP:BAND:VID 2.4 MHz</code>

3 5G NR Mode

3.2 Channel Power Measurement

	:CHP:BAND:VID?
Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open” The values shown in this table reflect the conditions after a Mode Preset
Dependencies	Sometimes the displayed Video BW is not actually used to process the trace data: When the Average Detector is selected and Sweep Type is set to Swept , the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector When this is the case, VBW still acts to change the Sweep Time, if " Sweep Time " on page 3036 is in Auto , and still affects the data on other traces for which this is not the case
Couplings	Video bandwidth (VBW) is normally coupled to " Res BW " on page 282. If VBW is set to Auto , then VBW is changed as RBW changes, to maintain the ratio set by VBW:3 dB RBW (usually 10:1 for measurements that do not have a VBW:3 dB RBW control)
Preset	Auto (unless noted in table below)
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A “#” mark appears before “VBW” in the annotation when it is not coupled
Annotation	In the bottom center of the screen, “VBW <value> <units>” indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility, this command supports both the BANDwidth and BWIDth forms

Auto Function

Remote Command	[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO ON OFF 1 0 [:SENSe]:CHPower:BANDwidth:VIDeo:AUTO?
Example	:CHP:BAND:VID:AUTO OFF :CHP:BAND:VID:AUTO?
Preset	ON

VBW Presets

Unless noted in the table below, the Preset value of VBW is **Auto**.

Mode	Preset Value
WCDMA	2.40 MHz

RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the Res BW filters in HP/Agilent/Keysight spectrum instruments were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its –3 dB points 10 MHz apart. In X-Series, the **RBW Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

Filter Type	SCPI Example														
Gaussian	<code>:BAND:SHAP GAUS</code>														
Flattop	<code>:BAND:SHAP FLAT</code>														
Remote Command	<code>[:SENSe]:CHPower:BANDwidth:SHAPE GAUSSian FLATtop</code> <code>[:SENSe]:CHPower:BANDwidth:SHAPE?</code>														
Example	<code>:CHP:BAND:SHAP GAUS</code> <code>:CHP:BAND:SHAP?</code>														
Notes	<code>GAUSSian</code> = Gaussian <code>FLATtop</code> = Flattop We use <code>SHAPE</code> instead of <code>TYPE</code> (even though the control name uses Type) because <code>TYPE</code> is used for backwards compatibility														
Preset	"Auto Couple" on page 3289 selects the preset value														
State Saved	Saved in instrument state														
Annotation	The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this: <table> <tr> <td>–3 dB (Normal) filter BW</td><td>Res BW 300 Hz</td></tr> <tr> <td>–6 dB filter BW</td><td>Res BW (–6 dB) 422 Hz</td></tr> <tr> <td>Noise filter BW</td><td>Res BW (Noise) 317 Hz</td></tr> <tr> <td>Impulse filter BW</td><td>Res BW (Impulse) 444 Hz</td></tr> <tr> <td>CISPR filter BW</td><td>Res BW (CISPR) 200 Hz</td></tr> <tr> <td>MIL filter BW</td><td>Res BW (MIL) 1 kHz</td></tr> <tr> <td>Flattop filter type</td><td>Res BW (Flattop) 300 Hz</td></tr> </table>	–3 dB (Normal) filter BW	Res BW 300 Hz	–6 dB filter BW	Res BW (–6 dB) 422 Hz	Noise filter BW	Res BW (Noise) 317 Hz	Impulse filter BW	Res BW (Impulse) 444 Hz	CISPR filter BW	Res BW (CISPR) 200 Hz	MIL filter BW	Res BW (MIL) 1 kHz	Flattop filter type	Res BW (Flattop) 300 Hz
–3 dB (Normal) filter BW	Res BW 300 Hz														
–6 dB filter BW	Res BW (–6 dB) 422 Hz														
Noise filter BW	Res BW (Noise) 317 Hz														
Impulse filter BW	Res BW (Impulse) 444 Hz														
CISPR filter BW	Res BW (CISPR) 200 Hz														
MIL filter BW	Res BW (MIL) 1 kHz														
Flattop filter type	Res BW (Flattop) 300 Hz														
Backwards Compatibility SCPI	<code>[:SENSe]:CHPower:BWIDth:SHAPE</code>														

3.2.5 Display

Lets you configure display items for the current Mode, Measurement View or Window.

3.2.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Bar Graph On/Off

Turns the Bar Graph On or Off.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:BGRaph ON OFF 1 0</code> <code>:DISPlay:CHPower:WINDow[1]:BGRaph?</code>
Example	<code>:DISP:CHP:WIND:BGR ON</code> <code>:DISP:CHP:WIND:BGR?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph</code>

Carrier Frequency Type

Set the carrier frequency display type:

- **OFFSet**– The carrier center frequencies are displayed as offsets from Carrier Ref Freq
- **ABSolute**– The carrier center frequencies are displayed as absolute frequencies

Remote Command	<code>:DISPlay:CHPower:VIEW:WINDow:CINFormation:FREQuency OFFSet ABSolute</code> <code>:DISPlay:CHPower:VIEW:WINDow:CINFormation:FREQuency?</code>
Example	<code>:DISP:CHP:VIEW:WIND:CINF:FREQ ABS</code> <code>:DISP:CHP:VIEW:WIND:CINF:FREQ?</code>
Dependencies	Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	OFFSet

State Saved	Saved in instrument state
Range	OFFSet ABSolute

3.2.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	:DISPlay:GRATicule[:STATe] OFF ON 0 1 :DISPlay:GRATicule[:STATe]?
Example	:DISP:GRAT OFF
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1 :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]? This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1 :DISPlay:ANNotation:SCReen[:STATe]?
Example	:DISP:ANN:SCR OFF
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF

Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0 :DISPlay:ANNotation:TRACe[:STATe]?
Example	:DISP:ANN:TRAC OFF
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	:DISPlay:ACTivefunc[:STATe] ON OFF 1 0 :DISPlay:ACTivefunc[:STATe]?
Example	:DISP:ACT OFF
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly

occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>

3 5G NR Mode

3.2 Channel Power Measurement

Name	Command
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DELeTe</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.2.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "Views" on page 232.

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>

Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be TZOOM) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<pre>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></pre>
Example	<pre>:DISP:VIEW:ADV:NAME "Baseband"</pre> <p>Creates a new View named Baseband from the current View, and selects it as the current View</p>
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case

If **<alphanumeric>** name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated

If the display is disabled (via **:DISP:ENAB OFF**) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	:DISPlay:VIEW:ADVanced:REName <alphanumeric>
Example	:DISP:VIEW:ADV:REN “Baseband”
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <alphanumeric> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	:DISPlay:VIEW:ADVanced:DELeTe
Example	:DISP:VIEW:ADV:DEL
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p>

If the `<alphanumeric>` is not present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> does not exist” is generated

If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p><code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined</p>

3.2.6 Frequency

Contains controls that allow you to control the frequency and channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by ["Meas Preset" on page 315](#). For example, **Center Frequency** is the same for all measurements – it does not change as you change measurements.

3.2.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets **Carrier Reference Frequency**. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other

measurements, because Center Frequency can be a global parameter. It makes no sense for **Carrier Reference Frequency** to use the global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- **Number of Component Carriers** is 1
- **Center Freq Offset** is 0 Hz
- **Center Frequency** mode is Auto

then **Center Frequency** is equivalent to **Carrier Ref Frequency**. When **Center Frequency** changes in such conditions, its mode remains **Auto**, and **Carrier Reference Frequency** changes to the same value. The main purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See "More Information" on page 296

Remote Command	For LTE-A, 5G NR Modes <code>[:SENSe]:CCARrier:REFeRence <freq></code> <code>[:SENSe]:CCARrier:REFeRence?</code> For MSR Mode <code>[:SENSe]:CARRier:REFeRence <freq></code> <code>[:SENSe]:CARRier:REFeRence?</code>
Example	For LTE-A, 5G NR Modes <code>:CCAR:REF 2GHz</code> For MSR Mode <code>:CARR:REF 2GHz</code>
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	<code>1GHz</code>
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as Center Frequency

More Information

In most applications, **Center Frequency** is generally the location of the carrier center, and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and

focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it should be a separate setting from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of these measurements.

Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting **Span**, **Center Frequency** is held constant, which means that both Start Frequency and Stop Frequency will change.

If **Span** is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

The default (and minimum) **Span** is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

If the RRC Filter is on, then span is increased by a factor of 1 + Filter Alpha.

See "Span Presets" on page 299

Remote Command	<code>[:SENSe] :CHPower:FREQuency:SPAN <freq></code> <code>[:SENSe] :CHPower:FREQuency:SPAN?</code>
Example	<code>:CHP:FREQ:SPAN 10 MHz</code> <code>:CHP:FREQ:SPAN?</code>
Dependencies	<p>If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error</p> <p>In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is on in Continuous sweep, as there is a mechanical switch which bypasses the RF Preselector above 3.6 GHz. See the Stop Frequency control description for details of this limitation</p> <p>For MSR Mode, this control is not shown</p> <p>For WLAN 802.11ac (80 MHz + 80 MHz), the control is not enabled, and its value is coupled with the spacing between the center frequencies of the two carriers</p> <p>$\text{Span} = \text{Center Frequency 1} - \text{Center Frequency 2} + \text{Integ BW} + 40 \text{ MHz Margin}$</p>

	When the calculated span is over 1 GHz, it is still coupled to its maximum value, which is 1 GHz
Couplings	<p>Span affects "Res BW" on page 282, Sweep Time, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings)</p> <p>Any value of Center Frequency or Span that is within the frequency range of the instrument is allowed <i>when</i> the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the instrument's frequency range</p> <p>When using the knob or the step up/down keys or the UP DOWN keywords in SCPI, the value that is being changed, that is, Center Frequency or Span, is limited so that the other parameter is not forced to a new value</p> <p>When Res BW is set to Auto, the resolution bandwidth is auto-coupled to span. The ratio of span /RBW is approximately 106:1. When Res BW is set to Man, bandwidths are entered by the user, and these bandwidths are used regardless of other instrument settings</p> <p>Since Span is coupled to Integ BW in the factory default condition, if you change the Integ BW setting, the span setting changes by a proportional amount until a limit value is reached. However, the span can be individually set. The minimum value of the span is coupled with the integration bandwidth</p> <p>Span cannot be set less than the Integ BW value. When Span is changed, the ratio of Span/Integ BW is set, and retained when Integ BW is changed</p>
Preset	<p>Depends on instrument maximum frequency, mode, measurement, and selected input</p> <p>See "Span Presets" on page 299</p>
State Saved	Saved in instrument state
Min	<p>100 Hz</p> <p>In 5G NR, LTEAFDD, and LTEATDD Modes, this value is the minimum value required for the measurement, which depends on the Component Carrier configuration</p>
Max	<p>Depends on instrument maximum frequency, mode, measurement, and selected input. See "Span Presets" on page 299</p> <p>If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency</p>
Annunciation	Data out of range, value clipped to upper limit
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display
	LTE, 5G NR Modes only:
Remote Command	<pre>[:SENSe]:CHPower:FREQuency:SPAN:AUTO ON OFF 1 0 [:SENSe]:CHPower:FREQuency:SPAN:AUTO?</pre>
Example	<pre>:CHP:FREQ:SPAN:AUTO OFF :CHP:FREQ:SPAN:AUTO?</pre>
Notes	<p>The span value is adjusted when the relevant carrier parameters such as bandwidth, integration bandwidth, number of component carriers etc., are changed, whatever the span state (Auto or Man)</p> <p>When in Man state, if the input value is less than the required sum of total integration bandwidths and gaps of the multi-carriers, the required span value is set</p>
Dependencies	Only available in LTE/LTE-Advanced FDD/TDD Modes and 5G NR Mode, CHP measurement

3 5G NR Mode

3.2 Channel Power Measurement

Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
F06 (VXT models M9410A/11A)	5.75 GHz
F06 & EP6 (VXT models M9410A/11A)	6.27 GHz
F06 & LFE & EP6 (VXT models M9411A)	6.5999935 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

Model	Max Span (can't set higher than this)
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

Span Presets by Mode

Mode	Radio Std	Preset Value
SA		3 MHz
WCDMA		7.5 MHz
LTE		7.5 MHz
LTETDD		7.5 MHz
5G NR		150 MHz
WLAN	802.11a/g(OFDM/DSSS-OFDM)	30 MHz
	802.11b	37.5 MHz
	802.11n/ac/ax/be 20MHz	30 MHz
	802.11n/ac/ax/be 40MHz	60 MHz
	802.11n/ac/ax/be 80 MHz	120 MHz
	802.11n/ac/ax/be 160 MHz	240 MHz
	802.11n/ac/ax/be 80 MHz + 80 MHz	360 MHz
	802.11be 320 MHz	480MHz
	802.11be 160MHz + 160MHz	440MHz

CF Step

Changes the step size for **Center Frequency** and start and stop frequency functions. Once a step size has been selected and the center frequency function is active, the step keys (and the **UP | DOWN** parameters for **Center Frequency** from remote commands) change the center frequency by the step-size value. The step size function is useful for finding harmonics and sidebands beyond the current frequency span of the instrument.

Note that the start and stop frequencies also step by the **CF Step** value.

Remote Command [:SENSe]:FREQuency:CENTer:STEP[:INCRement] <freq>
 [:SENSe]:FREQuency:CENTer:STEP[:INCRement]?

3 5G NR Mode

3.2 Channel Power Measurement

Example	Increase the current center frequency value by 500 MHz: :FREQ:CENT:STEP 500 MHz :FREQ:CENT UP
Notes	Preset and Max values depend on Hardware Options
Dependencies	If the electronic/soft attenuator is enabled, any attempt to change the value of the center frequency >3.6 GHz by pressing the Up-arrow key, fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning Not available in the MSR, LTE-A FDD/TDD and 5G NR Modes
Couplings	When auto-coupled, the center frequency step size is set to 10% of the span
Preset	Auto
State Saved	Saved in instrument state
Min/Max	-/+ (the maximum frequency of the instrument) That is, 27 GHz max freq instrument has a CF step range of ± 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Status Bits/OPC dependencies	non-overlapped Auto Function
Remote Command	[:SENSe] :FREQuency:CENTer:STEP:AUTO OFF ON 0 1 [:SENSe] :FREQuency:CENTer:STEP:AUTO?
Example	:FREQ:CENT:STEP:AUTO ON :FREQ:CENT:STEP:AUTO?

Full Span (Remote Command Only)

Changes the span to show the full frequency range of the instrument. It maximizes the span within a range not changing the center frequency.

Remote Command	[:SENSe] :CHPower:FREQuency:SPAN:FULL
Example	:CHP:FREQ:SPAN:FULL
Couplings	Selecting full span changes the measurement span value

3.2.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is

set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

3.2.7.1 Select Marker

Specifies the *selected marker*. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. If you select a tab whose controls do *not* depend on the selected marker (for example, Counter), then this control is blanked.

For any menu that includes **Select Marker**, the first control is always **Marker Frequency**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal , Delta and Fixed markers

3.2.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Normal**, **Delta**, or **Off**) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:CHP:MARK3:X 0</code> <code>:CALC:CHP:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated The query returns the marker’s absolute X Axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time

3 5G NR Mode

3.2 Channel Power Measurement

Preset	After a preset, all markers are turned OFF , so Marker X-Axis Value query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**, except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X:POSiTion <real></code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X:POSiTion?</code>
Example	<code>:CALC:CHP:MARK10:X:POS 0</code> <code>:CALC:CHP:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points. When a marker is turned on, it is placed at the center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is Off , the response is Not A Number
Preset	After a preset, all markers are turned Off , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37

Marker Y Axis Value (Remote Query only)

Returns the marker Y Axis value in the current marker Y-Axis unit.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:CHP:MARK11:Y?</code>
Notes	Returns the marker Y-Axis result if the control mode is Normal or Delta If the marker is Off , then the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:FUNctIon:RESult?</code>

Marker Mode

Sets the marker control mode to **POSition** (Normal), **DELta**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:MODE POSition DELTa OFF</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:CHP:MARK3:MODE POS</code> <code>:CALC:CHP:MARK3:MODE?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELta OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **POSition** (Normal) mode and places it at the center of the screen.

Example	<code>:CALC:CHP:MARK3:STAT ON</code> <code>:CALC:CHP:MARK3:STAT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:STATe OFF ON 0 1</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:STATe?</code>

Delta Marker (Reset Delta)

This control has the same effect as pressing **Delta** in "Marker Mode" on page 304. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:CHPower:MARKer:AOff
Example	:CALC:CHP:MARK:AOff

3.2.7.3 Peak Search

The controls on this tab let you move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with "Marker Delta" on page 306.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.
Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Frequency" on page 302 in the **Settings** tab.

Peak Search

Moves the selected marker to the trace point that has the maximum Y-Axis value for that marker's trace.

NOTE Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu <i>and</i> performs a peak search.	
Remote Command	:CALCulate:CHPower:MARKer[1] 2 ... 12:MAXimum
Example	<div>:CALC:CHP:MARK2:MAX</div> <div>:SYST:ERR?</div> <div>can be used to query the errors to determine if a peak is found. Following an unsuccessful search, the message "No peak found" is returned</div>
Notes	<div>Sending this command selects the subopcoded marker</div> <div>In W-CDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored</div>

Marker Delta

Pressing this button has the same effect as pressing **Delta** in "**Marker Mode**" on [page 304](#) on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to **Delta** without having to access two separate menus.

3.2.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on [page 302](#) in the **Settings** tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

3 5G NR Mode

3.2 Channel Power Measurement

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:REfERENCE <integer></code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:REfERENCE?</code>
Example	<code>:CALC:CHP:MARK:REF 5</code> <code>:CALC:CHP:MARK:REF?</code>
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is Off , it is turned on in Normal mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then its default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . Not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off, and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** or **Delta** markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **Off**, it moves the marker from the trace it was on to the new trace. If the marker is **Off**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:TRACe 1 2 3</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:CHP:MARK2:TRAC 2</code> <code>:CALC:CHP:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number

Couplings	The state of Marker Trace is not affected by " Auto Couple " on page 3289 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "**Marker Settings Diagram**" on page 305 in the **Settings** tab.

3.2.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

3.2.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

Avg/Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Remote Command	<code>[:SENSe]:CHPower:AVERage:COUNT <integer></code> <code>[:SENSe]:CHPower:AVERage:COUNT?</code>
Example	<code>:CHP:AVER:COUN 15</code> <code>:CHP:AVER:COUN?</code>
Preset	SA, WLAN: 10 WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR: 200
State Saved	Saved in instrument state
Min/Max	1 / 10000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N where n is the current average and N is the average count

Continue Averaging

Designed for acquiring the trace average through multiple sets of DUT conditions, in order to meet requirements such as those for an OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Switch to **Single** and press **Restart** to get your first set of averages, then **Continue Averaging** will be available.

Use `:FETCh:<meas>?` to retrieve the data as it waits for completion of **Continue Averaging**. `*OPC?` does *not* wait for completion and returns true immediately.

Pressing this control adds (to the already averaged trace or measurement) a number of averages equal to the "Avg/Hold Number" on page 308. Every time you press it, the terminal count increases by the current value of **Avg | Hold Number**. You can change your test setup (for example, the DUT position or antenna) after each average count reaches the terminal count.

You can accomplish the same thing by manually increasing the **Avg | Hold Number**, but by using **Continue Averaging** you are guaranteed to get the same number of averages at each step in the process, and **Avg | Hold Number** stays the same, so you do not lose its value

Remote Command	<code>[:SENSe]:CHPower:AVERage:CONTinue</code>
Example	<code>:CHP:AVER:CONT</code>
Dependencies	Enabled when you change the Sweep mode to Single and Average Count reaches Average Number. Otherwise, grayed-out

Terminal Count (Remote Query Only)

Query only.

Returns the terminal count that shows the target average number after "**Continue Averaging**" on page 309 is pressed. Every time you press **Continue Averaging**, the terminal count increases to 2N, 3N and so on. The value is the same as the **Avg | Hold Number** unless **Continue Averaging** is pressed, and it is reset to match the **Avg | Hold Number** when **Restart** is pressed.

Remote Command	<code>[:SENSe]:CHPower:AVERage:COUNt:TERMinal?</code>
Example	<code>:CHP:AVER:COUN:TERM?</code>

Averaging On/Off

Turns averaging on or off for this measurement.

NOTE

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[:SENSe]:CHPower:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CHPower:AVERage[:STATe]?</code>
Example	<code>:CHP:AVER ON</code> <code>:CHP:AVER?</code>
Preset	ON
State Saved	Yes
Range	ON OFF

Avg Mode

Allows you to select the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. Options are:

- **EXPonential**: The measurement averaging continues using the specified number of averages to compute each exponentially-weighted averaged value. The average is displayed at the end of each sweep
- **REPeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:CHPower:AVERage:TCONtrol EXPonential REPeat</code> <code>[:SENSe]:CHPower:AVERage:TCONtrol?</code>
Example	<code>:CHP:AVER:TCON EXP</code> <code>:CHP:AVER:TCON?</code>
Preset	EXP
State Saved	Yes
Range	EXPonential REPeat

Integ BW

Specifies the range of integration used in calculating the power in the channel. The integration bandwidth (IBW) is displayed on the trace as two markers connected by an arrow.

Remote Command	<code>[:SENSe]:CHPower:BANDwidth:INTEgration <bandwidth></code> <code>[:SENSe]:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CHP:BAND:INT 10MHz</code>

3 5G NR Mode

3.2 Channel Power Measurement

	:CHP:BAND:INT?		
Dependencies	For LTE-Advanced FDD/TDD, 5G NR and MSR Modes, this control is not shown		
Couplings	The minimum value of the span is coupled with Integ BW When you change Integ BW, the span changes accordingly by keeping the same ratio of Span/Integ BW		
Preset	Mode	Radio Std	Integ BW
	SA		2 MHz
	WCDMA		5 MHz
	LTEAFDD, LTEATDD		5 MHz
	WLAN	802.11a/g(OFDM/DSSS-OFDM)	20 MHz
		802.11b	25 MHz
		802.11n/ac/ax/be (20MHz)	20 MHz
		802.11n/ac/ax/be (40MHz)	40 MHz
		802.11n/ac/ax/be (80MHz)	80 MHz
		802.11ax/be (80 MHz + 80 MHz)	80 MHz
		802.11ac/ax/be (160 MHz)	160 MHz
		802.11be (160 MHz + 160MHz)	160 MHz
		802.11be (320MHz)	320 MHz
State Saved	Saved in instrument state		
Min/Max	100 Hz / Hardware Maximum Span		
Backwards Compatibility SCPI	[:SENSe]:CHPower:BWIDth:INTEgration		

PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz (**DBMHZ**) and dBm/MHz (**DBMMHZ**).

Remote Command	:UNIT:CHPower:POWer:PSD DBMHZ DBMMHZ :UNIT:CHPower:POWer:PSD?
Example	:UNIT:CHP:POW:PSD DBMMHZ :UNIT:CHP:POW:PSD?
Couplings	When the PSD unit is changed, the response to :MEAS READ FETCH:CHP1? also changes by the PSD unit basis (either dBm/Hz or dBm/MHz)
Preset	WLAN mode or SA mode with WLAN radio standard: DBMMHZ Otherwise: DBMHZ

State Saved	Saved in instrument state
Range	dBm/Hz dBm/MHz

IF Gain

Sets **IF Gain** to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Remote Command	<code>[:SENSe]:CHPower:IF:GAIN[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CHPower:IF:GAIN[:STATe]?</code>
Example	<code>:CHP:IF:GAIN ON</code> <code>:CHP:IF:GAIN?</code>
Notes	ON = high gain OFF = low gain
Dependencies	The IF Gain controls (FFT IF Gain and Swept IF Gain) have no effect when the U7227A USB Preamp-lifier is connected. This is not annotated or reflected on any control; there are no controls grayed out nor any SCPI locked out. The instrument simply behaves as though both FFT IF Gain and Swept IF Gain are set to Low regardless of the setting on the controls Not available in VXT model M9421A
Preset	OFF
State Saved	Saved in instrument state
Range	Low Gain High Gain Auto Function
Remote Command	<code>[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:CHP:IF:GAIN:AUTO ON</code> <code>:CHP:IF:GAIN:AUTO?</code>
Couplings	Auto sets IF Gain to High Gain if the input attenuator is set to 0 dB, or if the preamp is turned on and the frequency range is under 3.6 GHz For other conditions, Auto sets IF Gain to Low Gain
Preset	OFF

Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is **Enabled** (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in the multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to **Disabled (OFF)**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message will appear in the status bar:

Settings Alert;Spur Avoidance Off

This is to alert you that measurement accuracy might be negatively impacted.

Remote Command	<code>[:SENSe]:CHPower:SAVoid[:STATe] ON OFF 0 1</code> <code>[:SENSe]:CHPower:SAVoid[:STATe]?</code>
Example	<code>:CHP:SAV ON</code> <code>:CHP:SAV?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "**Measurement-Specific Details**" on page 314 below.

Remote	<code>:COUPle ALL</code>
--------	--------------------------

Command	
Example	<code>:COUP ALL</code>
Backwards Compatibility SCPI	<code>:COUPLE ALL NONE</code>
Backwards Compatibility Notes	<code>:COUP:NONE</code> puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio

- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all measurement parameters to their default values.

Remote Command	:CONFigure:CHPower
Example	:CONF:CHP

3.2.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.
This control allows you to set the Direction of the signal being measured.

Remote Command	[:SENSe]:RADio:STANdard:DIRection DLINK ULINK [:SENSe]:RADio:STANdard:DIRection?
Example	:RAD:STAN:DIR DLIN

Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code>

	<code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace’s scalar results are displayed in the Metrics window, and retrieved by sending a `:READ` or `:FETCh` query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:<meas>:MTRace?</code>
----------------	--

3 5G NR Mode

3.2 Channel Power Measurement

	<meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at "Input Port (UXM)" on page 2456 is assigned to a trace. This setting is valid when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12 :TRACe[1] 2 3:<meas>:CHANne1?
Example	For the ACP measurement Trace 2 :TRAC2:ACP:CHAN CHAN2
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

EIRP (Synchronous Acquisition) (UXM Only)

Enables you to preset the following parameters. Preset is made such that Trace 3 becomes the sum of Trace 1 and Trace 2 to which data from Channel 1 and Channel 2 are assigned. The measurement result is calculated based on Trace 3.

This parameter is useful when performing the EIRP measurement by acquiring signals from two ports simultaneously.

Multi Channel Synchronous Acquisition	On
--	-----------

Target trace parameters are those of the PowerSuite measurements supporting multi channel synchronous acquisition in the UXM model E7515B.

	Trace 1	Trace 2	Trace 3
Channel Assignment	Channel 1	Channel 2	Channel 1
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	Active	Active
Math Function	Off	Off	Power Sum
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2
Math Trace	Trace 3		

Remote Command `[:SENSe]:RADio:MCHannel:PRESet:EIRP`

Example `:RAD:MCH:PRES:EIRP`

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Restore Defaults (UXM Only)

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition	Off
Measure Trace	Trace1

	Trace 1	Trace 2	Trace 3
View/Blank	Active	Blank	Blank
Math Function	Off	Off	Off

Remote Command	<code>[:SENSe]:RADio:MCHannel:PRESet:DEFault</code>
Example	<code>:RAD:MCH:PRES:DEF</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

3.2.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNt <integer></code> <code>[:SENSe]:CCARrier:COUNt?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>

Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

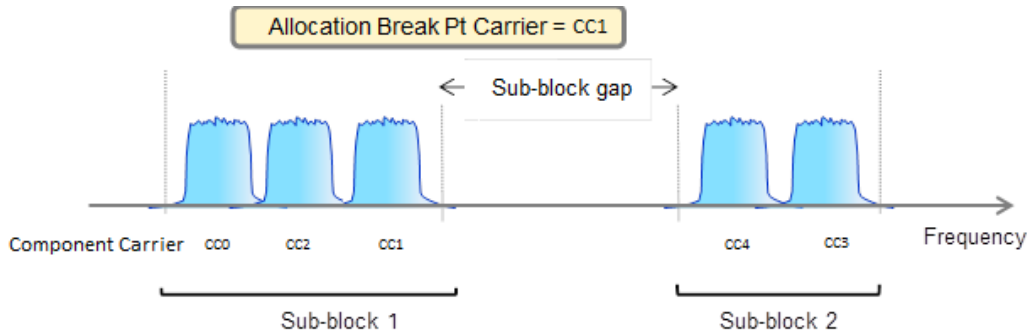

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	<code>[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K</code> <code>[:SENSe]:CCARrier:AFOffset?</code>
Example	<code>:CCAR:AFOF ACRA100K</code> <code>:CCAR:AFOF?</code>
Notes	When you change the value to OFF , nothing happens
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz
Preset	OFF

State Saved	Yes
Range	The cascading list is shown below
	Channel Spacing for Channel Raster
	Adjacent NR Carriers 100 kHz
	Carrier Aggregation 15 kHz
	Off 60 kHz
	Channel Spacing for Channel Raster
	Adjacent NR Carriers 100 kHz
	Carrier Aggregation 15 kHz
	Off 60 kHz
	Channel Spacing for Channel Raster
	Adjacent NR Carriers
	Carrier Aggregation
	Off

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed

3 5G NR Mode

3.2 Channel Power Measurement

Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when " Bandwidth " on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M

	– Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor

3 5G NR Mode

3.2 Channel Power Measurement

	<p>Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE This setting is available for EVM measurement only.

Remote Command	<pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1 [:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</pre>
Example	<pre>:EVM:CCAR:CID:MODE MAN :EVM:CCAR:CID:MODE?</pre>
Preset	MANua1
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE This setting is available for EVM measurement only.

Remote Command	<pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer> [:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</pre>
Example	<pre>:EVM:CCAR4:CID 0 :EVM:CCAR4:CID?</pre>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code>
----------------	---

3 5G NR Mode

3.2 Channel Power Measurement

	[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?		
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?		
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS		
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table		
	When Freq Range is FR1		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.500	4.515
	10 MHz	9.360	9.375
	15 MHz	14.220	14.235
	20 MHz	19.080	19.095
	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
	When Freq Range is FR2		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		

State Saved	Yes
Min	100 kHz
Max	2000 MHz

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.2.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs) or the values on the controls will *not* affect the Component Carriers.**

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Bandwidth" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:CARRier[:BANDwidth] B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M [:SENSe]:RADio:STANdard:PRESet:CARRier[:BANDwidth]?
Example	:RAD:STAN:PRES:CARR B5M :RAD:STAN:PRES:CARR?
Dependencies	Selections other than 10 MHz, 20 MHz, 30 MHz, and 40 MHz are unavailable when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X If you change "Uplink Carrier Mode" on page 3313 to Sidelink - V2X when this parameter is set to a value other than 10 MHz, 20 MHz, 30 MHz, or 40 MHz, it is forcefully set to 10 MHz
Preset	When N9085EM0E is not installed and N9085EM4E is installed: B10M Otherwise: B100M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Backwards Compatibility SCPI `[:SENSe]:RADio:STANdard:PRESet[:BANDwidth]`

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 | FR2 | FR21 | FR22`
`[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?`

Example `:RAD:STAN:PRES:FREQ:RANG FR1`
`:RAD:STAN:PRES:FREQ:RANG?`

Notes SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in **"Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 332** depending on the currently selected value.

Dependencies Available selections differ depending on Bandwidth as follows:

Bandwidth	FR
5 MHz, ..., 100 MHz	FR1
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2

When **"Uplink Carrier Mode" on page 3313** is Sidelink - V2X, FR2 is unavailable

Preset `FR1`

State Saved Yes

Range `FR1|FR2|FR2-1|FR2-2`

Backwards Compatibility SCPI `[:SENSe]:RADio:STANdard:PRESet:FRANge`

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

Bandwidth selection changes to:						
Current FR value	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMODE TDD</code> <code>:RAD:STAN:PRESet:DMODE?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available

Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "Duplex Mode" on page 3304 in the Meas Standard menu panel.

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRES:TRAN:PER P0_5MS :RAD:STAN:PRES:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer> [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1 :RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed

3 5G NR Mode

3.2 Channel Power Measurement

Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRESet:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRESet:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	“DDDDDDDSUU”

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this

control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</pre> <p>For option details, see "Selections & Dependencies" on page 337</p> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</pre>
Example	<pre>:RAD:STAN:PRE:SCS SCS30K</pre> <pre>:RAD:STAN:PRE:SCS?</pre> <pre>:RAD:STAN:PRE:SCS:AUTO 0</pre> <pre>:RAD:STAN:PRE:SCS:AUTO?</pre>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 337
Preset	SCS30K ON
State Saved	Yes Yes
Range	u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K

FR	Bandwidth	SCS	SCPI
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK | FQAM16 | FQAM64 | FQAM256 | FQAM1024 | DLTm1DOT1 | DLTm1DOT2 | DLTm2 | DLTm2Q16 | DLTm2QPS | DLTm2A | DLTm2B | DLTm3DOT1 | DLTm3DOT1Q16 | DLTm3DOT1QPS | DLTm3DOT1A | DLTm3DOT1B | DLTm3DOT2 | DLTm3DOT3 | FPIBPSK | DLTm1DOT1P1 | DLTm1DOT1L2`

For selection details, see **"Available Selections" on page 339**

`[:SENSe]:RADio:STANdard:PRESet:RBALloc?`

Example `:RAD:STAN:PRESet:RBAL DLTm1DOT1`
`:RAD:STAN:PRESet:RBAL?`

3 5G NR Mode

3.2 Channel Power Measurement

Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 339
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024				

3 5G NR Mode

3.2 Channel Power Measurement

	FR	FR1	FR2	FR2-1	FR2-2
	QAM				
	Fuifilled	✓	✓	✓	✓
	Pi/2				
	BPSK				
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:CARR NORM</code> <code>:RAD:STAN:PRESet:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRESet:DLIN:NRTM TS38</code> <code>RAD:STAN:PRESet:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.

Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press *Apply Preset (to all CCs)* or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 343</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PREs:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN?</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 343
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLINK:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLINK:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea

State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:ACH NR</code> <code>:RAD:STAN:PRESet:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:ACH NR</code> <code>:RAD:STAN:PRESet:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

UE Power Class

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you select the UE Power Class for preset from Power Class 1 to 4.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP and Mod Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:PCLass CLASS1 ... CLASS4</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:PCLass?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:PCL CLASS3</code> <code>:RAD:STAN:PRESet:ULIN:PCL?</code>
Dependencies	Grayed out when Radio Direction is Downlink Power Class 4 is grayed out when Frequency Range is FR1 Power Class 1, 2, and 4 are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	CLASS3
State Saved	Yes
Range	1 2 3 4

Uplink Channel Type

This control is part of the "Preset for Tx On|Off Power" section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the "Configure Preset" section, then press "Apply Preset (to all CCs)" to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRESet:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30

kHz SCS)|PRACH Config Index 12|PRACH Config Index 123 (15 kHz SCS)|PRACH Config Index 123 (30 kHz SCS)|PRACH Config Index 0 (60 kHz SCS)|PRACH Config Index 0 (120 kHz SCS)|SRS

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:PERiod?</code>
----------------	--

Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See "Apply Preset (to All CCs)" on page 3322.

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **"Apply Preset (to all CCs)"** or the values on the controls in the "Configure Presets" section of the menu panel will *not* affect the Component Carriers.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:IMMediate
Example	:RAD:STAN:PRES:IMM
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until "Apply Preset" is executed again <ul style="list-style-type: none">- Start-up- Mode Preset- Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection "FR2" in this chapter cover either or both "FR2-1" or/and "FR2-2" selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800,

		1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2:

3 5G NR Mode

3.2 Channel Power Measurement

UE IBE)		Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power
Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When **"Apply Preset (to All CCs)" on page 3322** is pressed, related measurement
parameters and Gate parameters are changed to the values described in the
following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM
table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None, $1.0 < f \leq 3.0$ GHz			Table 6.6.4.5.2-2
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat B WA BS	$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None, $1.0 < f \leq 3.0$ GHz			Table 6.6.4.5.3.1-2
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat A MR BS, Cat B MR BS	None, $f \leq 1.0$ GHz,			Table 6.6.4.5.4-1
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.4-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	None, $f \leq 1.0$ GHz,			Table 6.6.4.5.4-2
			$1.0 < f \leq 3.0$ GHz			

3 5G NR Mode

3.2 Channel Power Measurement

1-0			GHz			Table 6.6.4.5.4-4
			3.0 < f ≤ 4.2			
			GHz,			
			4.2 < f ≤ 6.0			
	Cat A LA BS, Cat B LA BS		GHz,			Table 6.6.4.5.5-1
			6.0 < f ≤ 7.125			
			GHz			
			None,			
			f ≤ 1.0 GHz,			Table 6.6.4.5.5-2
			1.0 < f ≤ 3.0			
			GHz			
			3.0 < f ≤ 4.2			
	Cat A WA BS	TS38.141-2 v.17.9.0 (2023-03)	GHz,	Table 6.7.3.5.1-1		Table 6.7.4.5.1.1-1
			4.2 < f ≤ 6.0			
			GHz,			
			6.0 < f ≤ 7.125			
			GHz			Table 6.7.4.5.1.1-2
			f ≤ 1.0 GHz			
			None,			
			1.0 < f ≤ 3.0			
	Cat B WA BS		GHz			Table 6.7.4.5.1.1-3
			3.0 < f ≤ 4.2			
			GHz			
			4.2 < f ≤ 6.0			
			GHz			Table 6.7.4.5.1.1-4
			f ≤ 1.0 GHz			
			None,			
			1.0 < f ≤ 3.0			
	Cat A MR BS, Cat B MR BS		GHz			Table 6.7.4.5.1.2-2
			3.0 < f ≤ 4.2			
			GHz			
			4.2 < f ≤ 6.0			
			GHz			Table 6.7.4.5.1.2-3
			6.0 < f ≤ 7.125			
			GHz			
			None,			
			f ≤ 1.0 GHz,			Table 6.7.4.5.1.2-4
			1.0 < f ≤ 3.0			
			GHz			
			3.0 < f ≤ 4.2			
	Cat A MR BS, Cat B MR BS		GHz			Table 6.7.4.5.1.2-5
			4.2 < f ≤ 6.0			
			GHz			
			6.0 < f ≤ 7.125			
			GHz			Table 6.7.4.5.1.2-6
			None,			
			f ≤ 1.0 GHz,			
			1.0 < f ≤ 3.0			
	Cat A MR BS, Cat B MR BS		GHz			Table 6.7.4.5.1.4-1
			3.0 < f ≤ 4.2			
			GHz			
			4.2 < f ≤ 6.0			

FR2	2-0	Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	3.0 < f ≤ 4.2 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.2-1	Table 6.7.4.5.1.4-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-3a
			None, f ≤ 1.0 GHz,			Table 6.7.4.5.1.4-4
			1.0 < f ≤ 3.0 GHz			
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.4-5
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-6
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-7
		Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz,			Table 6.7.4.5.1.5-1
			1.0 < f ≤ 3.0 GHz			
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.5-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.5-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.5-4
		Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS	None, 24.25 < f ≤ 29.5 GHz			Table 6.7.4.5.2.2-1
			37.0 < f ≤ 43.5 GHz			Table 6.7.4.5.2.2-2
			43.5 < f ≤ 48.2 GHz			Table 6.7.4.5.2.2-3
			52.6 < f ≤ 71.0 GHz			Table 6.7.4.5.2.2-4
		Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS	None, 24.25 < f ≤ 29.5 GHz			Table 6.7.4.5.2.3-1
			37.0 < f ≤ 43.5 GHz			Table 6.7.4.5.2.3-2
			43.5 < f ≤ 48.2 GHz			Table 6.7.4.5.2.3-3

52.6 < f ≤ 71.0 GHz	Table 6.7.4.5.2.3-4
------------------------	------------------------

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA, NR + UTRA	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
FR2		TS38.521-2 v.17.2.0 (2023-03)	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1 v.17.8.0 (2023-03)	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink

Normal Uplink Disabled (for all CCs)
Sidelink / V2X Enabled (for all CCs)

Trigger/Gate Parameters

When executing “Apply Preset”, preset the following parameters:

Trigger menu	Parameter	Preset values				
		TDD / FDD Duplex Mode		User Defined Duplex mode		
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
Periodic Sync Src	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

3 5G NR Mode

3.2 Channel Power Measurement

Auto Holdoff	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when **"RB Alloc Preset" on page 3310** is any of NR-TM and **"Duplex Mode" on page 3304** is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when **"Duplex Mode" on page 3304** is FDD

(*6) Gate Length preset value for DL FR1 depends on **"DL FR1 NR-TM Reference Standard Selection" on page 3305** under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "CHP Power Integration Bandwidth" on page 3300.

3.2.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

Does not appear in VXT.

Phase Noise Optimization

Lets you select the LO (local oscillator) phase noise behavior for various operating conditions. When in Auto, selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions.

For full details, see "Parameter Options, Installed Options & Ranges" on page 361 below.

Remote Command	<code>[:SENSe]:CHPower:FREQuency:SYNThesis[:STATe] 1 ... 5</code> For the meaning of each numeric option value, see "Parameter Options, Installed Options & Ranges" on page 361 below <code>[:SENSe]:CHPower:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:CHP:FREQ:SYNT 1</code> <code>:CHP:FREQ:SYNT?</code>
Dependencies	Does not appear in all models. For models in which the control is not displayed, the SCPI command is accepted for compatibility, although no action is taken
Preset	3
State Saved	Saved in instrument state
Range	See "Ranges" on page 365 below
Auto Function	
Remote Command	<code>[:SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe]?</code>
Example	<code>:CHP:FREQ:SYNT:AUTO 1</code> <code>:CHP:FREQ:SYNT:AUTO?</code>
Preset	OFF

Parameter Options, Installed Options & Ranges

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
"Balanced" on page 362	1	<ul style="list-style-type: none"> – In instruments with EPO, balances close-in phase noise with spur avoidance – In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 362	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 363	3	Optimizes LO for tuning speed
"Best Close-in" on page 361	4 or 1*	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 362	5	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

*Dependent on Option EPO installation. See "Best Close-in" on page 361 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 363 is identical in effect to "Best Close-in" on page 361.

Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EP0

:FREQ:SYNT 4

In instruments with Option EP0, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the **"Balanced" on page 362** setting, parameter 1 selects **"Balanced" on page 362** in EP0 instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects **"Best Close-in" on page 361**, which is usually not as good a choice as **"Balanced" on page 362**.

Balanced

:FREQ:SYNT 1

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Best Spurs

:FREQ:SYNT 5

In instruments with EP0, the LO is configured for better phase noise than the **"Best Wide-offset" on page 362** case close to the carrier, but the configuration has 11 dB worse phase noise than the **"Best Close-in" on page 361** case mostly within ± 1 octave around 300 kHz offset. Spurs are even lower than in the **"Balanced" on page 362** case at better than -90 dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term **"Fast Tuning" on page 363** refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as **"Best Spurs" on page 362**. It is available with the **"Fast Tuning" on page 363** label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a **"Fast Tuning" on page 363** option, the settings for **"Best Close-in" on page 361** are used if **"Fast Tuning" on page 363** is selected. This gives the fastest possible tuning for that hardware set.)

Auto

:FREQ:SYNT:AUTO ON

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
<p>EPO</p> <p>Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)</p>	<p>Center frequency is < 699.9 kHz</p> <p>Span > 114.1 MHz, <i>or</i> RBW > 800 kHz RBW > 290 kHz, <i>or</i> Span > 4.2 MHz</p> <p>Other conditions</p>	<p>"Balanced" on page 362</p> <p>"Fast Tuning" on page 363</p> <p>"Best Wide-offset" on page 362</p> <p>"Balanced" on page 362</p>
<p>EP1</p> <p>Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)</p>	<p>Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking"</p> <p>Center frequency is < 195 kHz, <i>or</i> CF ≥ 1 MHz <i>and</i> Span ≤ 1.3 MHz <i>and</i> RBW ≤ 75 kHz</p> <p>All other conditions</p>	<p>"Fast Tuning" on page 363</p> <p>"Best Close-in" on page 361</p> <p>"Best Wide-offset" on page 362</p>
<p>EP2</p> <p>Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 361; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)</p>	<p>CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz</p> <p>Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz</p> <p>All other conditions</p>	<p>"Best Close-in" on page 361</p> <p>"Fast Tuning" on page 363</p> <p>"Best Wide-offset" on page 362</p>
<p>EP4</p> <p>(available in CXA for improved phase noise)</p>	<p>Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking"</p> <p>CF is < 109 kHz <i>or</i> CF ≥ 4.95 MHz <i>and</i> Span ≤ 666 kHz <i>and</i> RBW < 28 kHz</p> <p>All other conditions</p>	<p>"Fast Tuning" on page 363</p> <p>"Best Close-in" on page 361</p> <p>"Best Wide-offset" on page 362</p>
All Other Models	<p>Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i></p>	"Fast Tuning" on page 363

3 5G NR Mode

3.2 Channel Power Measurement

Models with Option	Conditions	Selection
Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 363 are actually the same as "Best Close-in" on page 361, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Source Mode is set to "Tracking"	
	Center frequency is < 25 kHz, or CF >= 1 MHz and Span <= 141.4 kHz and RBW <= 5 kHz	"Best Close-in" on page 361
	All other conditions	"Best Wide-offset" on page 362

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
EP1	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
EP2, EP3, EP5	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
EP4	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

Noise Floor Extension

Lets you turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer Mode), support two states of NFE, Full and Adaptive. The **ON** state (in Modes which do not support Adaptive NFE) matches the **FULL** state (in Modes that *do* support Adaptive NFE).

In **ON** or **FULL** NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes which support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

Noise Floor Extension has no effect unless the RF Input is selected, so it does nothing when **External Mixing** is selected.

In Modes that support Adaptive NFE, the default state of NFE is Adaptive (**ON**). In Modes that do not support Adaptive NFE, the default state of NFE is **OFF**. Prior to

the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was **OFF** for all Modes.

With the introduction of Adaptive NFE, the menu control is changed from **On|Off** to **Full|Adaptive|Off**. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on or off was retained, and a new command was added to set the state to turn Adaptive On or Off:

- `[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, default changed to On for modes that support Adaptive NFE
- `[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default = On
- **FULL** = `:CORRection:NOISe:FLOor ON` plus `:CORRection:NOISe:FLOor:ADAPtive ON`

See "More Information" on page 368

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, does not appear, but the SCPI command will be accepted without error but has no effect
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset . Turned ON at startup and by Restore Mode Defaults in Modes that support Adaptive. Turned OFF at startup and by Restore Mode Defaults in Modes that do not support Adaptive
State Saved	No
Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive?</code>
Example	Turn NFE ON (Full mode): <code>:CORR:NOIS:FLO ON</code> Set to Adaptive: <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the SCPI command is accepted without error (but has no effect)
Couplings	For backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive OFF . To turn Adaptive ON , you must issue the commands in the proper order, as shown in the example above

Preset	Not affected by Mode Preset , but set to ON at startup and by Restore Mode Defaults
State Saved	No

More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus instrument noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average, and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the instrument noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with

the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and -off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

"This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week"

If you **Cancel**, you will be prompted again the next time you turn NFE **ON**. If you **Postpone**, you will be prompted again after a week passes and you then turn NFE **ON**.

3.2.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in

when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when **"Restore Defaults"** on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTRument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

3.2.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.2.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

NOTE

Significantly faster sweep times are available with Option FS1.

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[:SENSe]:<meas>:SWEEP:TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[:SENSe]:<meas>:SWEEP:TIME <time></code> <code>[:SENSe]:<meas>:SWEEP:TIME?</code>
Example	Channel Power measurement: <code>:CHP:SWE:TIME 25ms</code> <code>:CHP:SWE:TIME?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by Meas Method selection. Preset values are as follows: <ul style="list-style-type: none"> – IBW: 29 ms – IBWR: 108 ms – FAST 7.5 ms
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " Minimum Acquisition Time " on page 3038 is available
Couplings	Coupled to Span , RBW , VBW , and Sweep Time Rules when Sweep Time is set to Auto; Sweep Time changes when these parameters are changed When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically Calculated unless noted below WCDMA Mode <ul style="list-style-type: none"> – Channel Power: 1.0 msOBW: 32.6 ms – ACP: 29 ms

State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms Non-sweeping hardware: N/A In the ACP measurement, when Meas Method is Fast Power , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points) A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: STATus:QUESTionable:INTEgrity:UNCalibrated Auto Function
Remote Command	[:SENSe]:<meas>:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe]:<meas>:SWEep:TIME:AUTO?
Example	Channel Power measurement: :CHP:SWE:TIME:AUTO OFF :CHP:SWE:TIME:AUTO?
Preset	WCDMA Mode OFF
	All others ON

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

3 5G NR Mode

3.2 Channel Power Measurement

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME <time> [:SENSe]:<meas>:SWEep:ACQuisition:TIME? <meas> is the identifier for the current measurement; any one of CHPower- ACPower OBWidth MONitor</pre>
Example	<pre>Channel Power measurement :CHP:SWE:ACQ:TIME 500 ms :CHP:SWE:ACQ:TIME?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	<p>Coupled to Span, RBW, and VBW when in the Auto state</p> <p>When you manually set a value when in the Auto state, the state automatically changes to Man</p>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO OFF ON 0 1 [:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO? <meas> is the identifier for the current measurement; any one of CHPower- ACPower OBWidth MONitor</pre>
Example	<pre>Channel Power measurement: :CHP:SWE:ACQ:TIME:AUTO OFF</pre>
Preset	ON

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 376

Remote Command	<pre>:INITiate:CONTInuous OFF ON 0 1 :INITiate:CONTInuous?</pre>
Example	<pre>Put instrument into Single measurement operation: :INIT:CONT 0</pre>

	<pre>:INIT:CONT OFF</pre> <p>Put instrument into Continuous measurement operation:</p> <pre>:INIT:CONT 1</pre> <pre>:INIT:CONT ON</pre>
Preset	<p>ON</p> <p>Note that :SYST:PRES sets :INIT:CONT to ON, but *RST sets :INIT:CONT to OFF</p>
State Saved	Saved in instrument state
Annunciation	<p>The Single/Continuous icon in the Meas Bar changes depending on the setting:</p> <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	<p>X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and INIT:CONT ON) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep</p>

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of `:INIT:IMMediate`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "More Information" on page 378

Remote Command	<code>:INITiate[:IMMediate]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function

Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	<p>This is an Overlapped command</p> <p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared</p> <p>The SWEEPING bit is set</p> <p>The MEASURING bit is set</p>
Backwards Compatibility Notes	<p>For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write, but did not restart Max Hold and Min Hold</p> <p>In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average, but MaxHold and MinHold traces as well</p>

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger

condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is k . This k is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This k is used for comparisons with N , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, **K**, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value **K** changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is ON , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is OFF , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORT</code> is equivalent to the Restart key Not all measurements support this command
Status Bits/OPC dependencies	The <code>STATus:OPERation</code> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous

The **STATUS:QUESTIONable** register bit 9 (**INTEGRity** sum) is cleared
Since all the bits that feed into OPC are cleared by **:ABORT**, the Abort command will cause the ***OPC** query to return true

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	[:SENSe] : < meas > : SWEEp : ETIME ? < meas > is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor
Example	Channel Power measurement : CHP : SWE : ETIME ?
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

3.2.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

Sweep Time Rules

Switches the instrument between **NORMa1** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **ACCuracy** results in slower sweep times (usually about three times as long) but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **ACCuracy**.

Additional amplitude errors that occur when **Auto Sweep Time** is set to **NORMa1** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **NORMa1** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **NORMa1** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	[:SENSe] : CHPower : SWEEp : TIME : AUTO : RULEs NORMa1 ACCuracy
----------------	---

	<code>[:SENSe]:CHPower:SWEEP:TIME:AUTO:RULEs?</code>
Example	<code>:CHP:SWE:TIME:AUTO:RUL NORM</code> <code>:CHP:SWE:TIME:AUTO:RUL?</code>
Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9421A
Preset	<code>NORMa1</code>
State Saved	Saved in instrument state
Range	<code>NORMa1</code> <code>ACCuracy</code>

Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of **Points** is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if **"Sweep/Measure" on page 3411** is **Cont**, a new trace taken. If any trace is in average or hold, the averaging starts over.

Due to sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message is displayed, "Sweep points changed, all traces cleared."

Remote Command	<code>[:SENSe]:CHPower:SWEEP:POINTs <integer></code> <code>[:SENSe]:CHPower:SWEEP:POINTs?</code>
Example	<code>:CHP:SWE:POIN 501</code> <code>:CHP:SWE:POIN?</code>
Dependencies	Not available when Signal ID is ON in External Mixing

3 5G NR Mode

3.2 Channel Power Measurement

	Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in Modes that do not support Swept
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> – All trace data is erased – Any traces with Update Off also switch to Display Off (equivalent to switching from View to Blank in older instruments) – Sweep time is re-quantized – Any limit lines that are on will be updated – If averaging/hold is on, averaging/hold starts over <p>The resolution of setting the sweep time depends on the number of points selected</p>
Preset	1001
State Saved	Saved in instrument state
Min	11
Max	20001
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation

IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[:SENSe]:SWEep:IF:DITHer OFF ON 0 1</code> <code>[:SENSe]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	OFF
State Saved	Saved in instrument state

Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[:SENSe]:SWEep:IMAGeprot OFF ON 0 1</code>
----------------	---

	[:SENSe]:SWEep:IMAGeprot?
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	ON
State Saved	Saved in instrument state

3.2.10 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

3.2.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> – In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View – When you turn on Image Suppress, Update turns off for all traces except the selected trace For the ACP measurement, when Meas Method is RBW , FAST or FPOWer , Select Trace is disabled
Preset	Trace 1
State Saved	Yes

3.2.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**

- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the ["View/Blank" on page 3053](#) control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITE	:TRAC2:TYPE WRIT	See: "Clear/Write" on page 388
Trace Average	AVERage	:TRAC2:TYPE AVER	See: "Trace Average" on page 388
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 389
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 389

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the ["View/Blank" on page 3053](#) state must be set to **Active** (**Update: ON, Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: ["Trace Mode Backwards Compatibility Commands" on page 386](#)

Remote Command	<div>For Swept SA Measurement (in SA Mode): :TRACe[1] 2 ... 6:TYPE WRITE AVERage MAXHold MINHold :TRACe[1] 2 ... 6:TYPE? For all other measurements: :TRACe[1] 2 3:<meas>:TYPE WRITE AVERage MAXHold MINHold :TRACe[1] 2 3:<meas>:TYPE? where <meas> is the identifier for the current measurement</div>
Example	<div>:TRAC:TYPE WRIT :TRAC:TYPE?</div>

Couplings	<p>Selecting a Trace Type (by pressing any of the Trace Type selections or sending :TRAC:TYPE) sets the Trace to Active (Update: ON, Display: OFF), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" ([:SENSe]:<meas>:DETECTOR:AUTO?), Detector ([:SENSe]:<meas>:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: "NORMAL" with WRITE (Clear Write), "AVERAGE" with AVERAGE, "POSITIVE (peak)" with MAXHOLD, and "NEGATIVE (peak)" with MINHOLD</p>
Preset	<p>Swept SA and Monitor Spectrum: WRITE</p> <p>All other measurements: AVERAGE</p> <p>Following Preset, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "**View/Blank**" on page 3053.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRAC:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[:SENSe]:AVERAge[:STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	WRITE
State Saved	The trace mode is an alias only
Backwards	:TRACe[1] 2 ... 6:MODE WRITE MAXHOLD MINHOLD VIEW BLANK

Compatibility SCPI	<code>:TRACe[1] 2 ... 6:MODE?</code>
Backwards Compatibility Notes	<p>The legacy <code>:TRACe:MODE</code> command is retained for backwards compatibility. In conjunction with the legacy <code>:AVERage</code> command, it works as follows:</p> <ul style="list-style-type: none"> – <code>:AVERage ON OFF</code> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <code>[:SENSe]:AVERage[:STATe]</code> command description below – <code>:TRACe:MODE WRITe</code> sets <code>:TRACe:TYPE WRITe</code> (Clear/Write) unless average is true, in which case it sets it to <code>:TRACe:TYPE AVERage</code>. It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace – <code>:TRACe:MODE MAXHold</code> sets <code>:TRACe:TYPE MAXHold</code> (Max Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace – <code>:TRACe:MODE MINHold</code> sets <code>:TRACe:TYPE MINHold</code> (Min Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace – <code>:TRACe:MODE VIEW</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace – <code>:TRACe:MODE BLANK</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay OFF</code>, for the selected trace <p>The query returns the same value as <code>:TRACe:TYPE?</code>, meaning that if you set <code>:TRACe:MODE:VIEW</code> or <code>:TRACe:MODE:BLANK</code>, the query response will not be what you sent</p> <p><code>:TRACe[n]:MODE</code> was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new <code>:TRACe:TYPE</code> command should be used in the future, but <code>:TRACe:MODE</code> is retained to provide backwards compatibility</p> <p>In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has</p> <p>As the Average/Hold Number now affects Min Hold and Max Hold, the operations that restart Averaging (for example, the Restart key) now also restart Min Hold and Max Hold</p> <p>As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does</p> <p>Also, previous to X-Series:</p> <ul style="list-style-type: none"> – Pressing Max Hold while already in Max Hold (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence – Changing the vertical scale (Log/Lin or dB/div) of the display restarted Max Hold and Min Hold. This is no longer the case
Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:AVERage[:STATe]?</code>

Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[:SENSe]:AVERage [:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[:SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>
-------------------------------	---

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like Center Frequency or Attenuation), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending **:TRAC:TYPE MAXH** for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 3048 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

Active	Update and Display both ON
View	Update OFF ; Display ON
Blank	Update OFF ; Display OFF
Background	Update ON , Display OFF
	Allows a trace to be blanked <i>and</i> continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

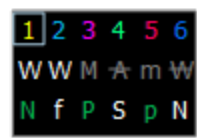

See: ["More Information" on page 392](#)

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 391 and "Trace Display State On/Off" on page 392 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[:SENS] :DET :TRAC</code>) puts the trace in Active (UpdateON and DisplayON), even if that detector was already selected</p> <p>Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (UpdateON and DisplayON), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange</p>

Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6 :UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6 :UPDate[:STATe] ?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre>

	ON for Trace 1; OFF for 2 & 3
State Saved	Saved in instrument state
Trace Display State On/Off	
Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <pre>:TRAC2:DISP 1</pre> <p>Blank trace 3:</p> <pre>:TRAC3:DISP 3</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage

- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

Trace Settings Table (UXM Only)

Lets you configure the Trace system using a visual utility.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "**Multi Channel Synchronous Acquisition (UXM Only)**" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFI01 ... RFI08</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
----------------	---

Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When " Lock (UXM) " on page 2456 is On, the selections are grayed out and cannot be changed. When " Lock (UXM) " on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

3.2 Channel Power Measurement

Configuration

Trace Settings Table

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCH** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:<meas>:MTRace?</code> <code><meas></code> is the identifier for the current measurement; any one of <code>CHPower</code> <code>ACPower</code> <code>OBWidth</code> <code>SEMask</code> <code>SPURious</code> <code>PVTime</code>
Example	Channel Power <code>:CALC:CHP:MTR TRAC1</code> <code>:CALC:CHP:MTR?</code>
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to <code>RBW</code> or <code>FAST</code> , and only Trace 1 is enabled
Preset	<code>TRACe1</code>
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at "Input Port (UXM)" on page 2456 is assigned to a trace. This setting is valid when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	<code>:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12</code> <code>:TRACe[1] 2 3:<meas>:CHANne1?</code>
Example	For the ACP measurement Trace 2 <code>:TRAC2:ACP:CHAN CHAN2</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

3.2.10.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the ["Operand 1 / Operand 2" on page 2610](#) controls.

- See ["How trace math is processed" on page 401](#)

Remote Command	<p>For option details, see "Trace Math Options" on page 399</p> <p>For Swept SA Measurement (in SA Mode):</p> <pre>:CALCulate:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate:MATH? <trace_num></pre> <p>where <trace_num> is any one of:</p> <pre>TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:CALCulate:<meas>:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate[:<meas>]:MATH? <trace_num></pre> <p>where:</p> <p><meas> is the identifier for the current measurement, and</p> <p><trace_num> is any one of:</p> <pre>TRACe1 TRACe2 TRACe3</pre> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre> <p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <pre>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</pre> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <pre>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</pre>

	Turns off trace math for trace 1
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: <code>TRACE1 ... TRACE6</code> - Set 2 defines the “function”: <code>PDIFference PSUM LOFFset LDIFference OFF</code> - Set 3 is a “trace operand” (1): <code>TRACE1 ... TRACE6</code> - Set 4 is a “trace operand” (2): <code>TRACE1 ... TRACE6</code> - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if Normalize is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>OFF, TRACE5, TRACE6, 0, 0 OFF, TRACE6, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0 </code> <code>OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE4, 0, 0 OFF, TRACE4, TRACE5, 0, 0</code></p> <p>For all other measurements:</p> <p><code>OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0</code></p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

DestinationTrace = $10 \log_{10}(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace})$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at –5 dBm, and the reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

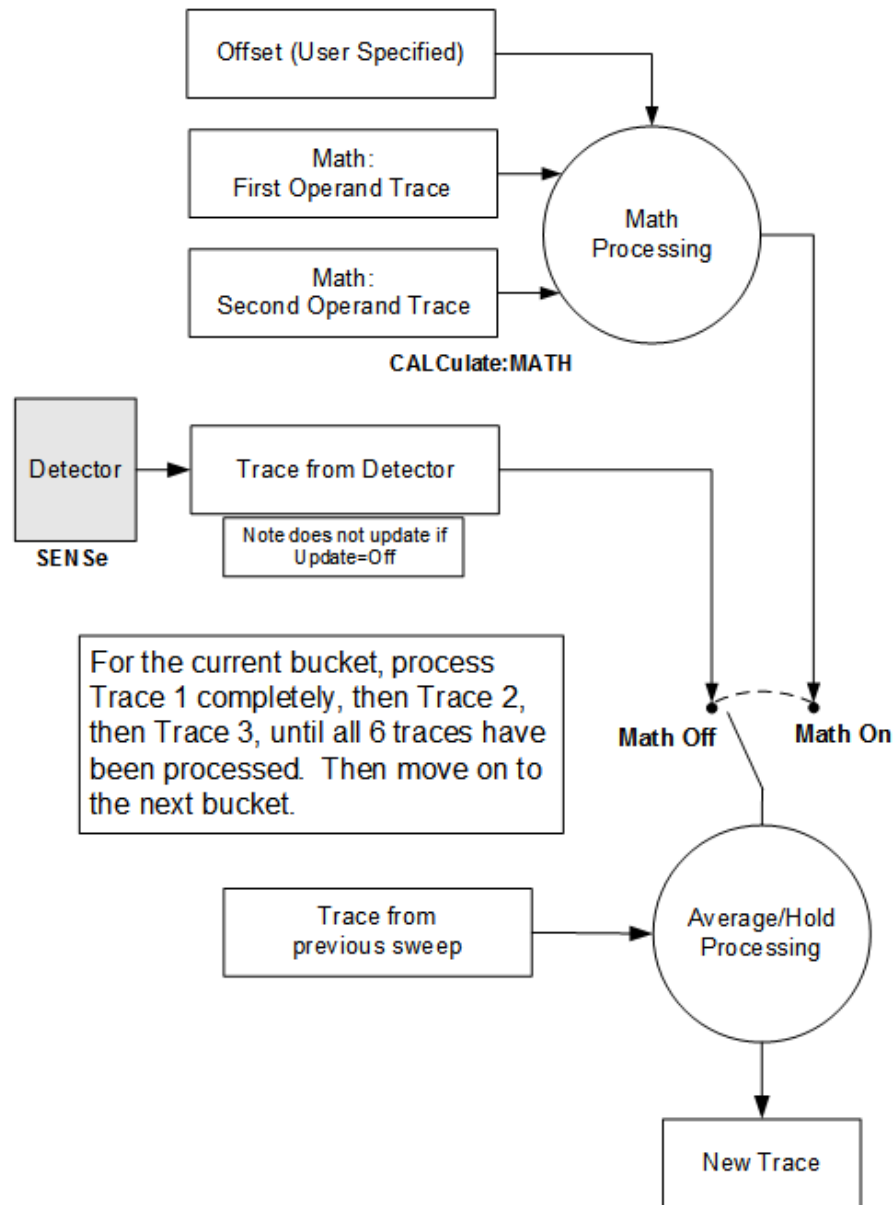

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have lower numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <p>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</p> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <p>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</p>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.2.10.4 Detector

Lets you choose and configure detectors for the selected trace.

Detector

Selects a detector to be used by the instrument for the current measurement. The following choices are available:

Option	Parameter	Detector Behavior
Auto	n/a	The detector selected depends on marker functions, trace

3 5G NR Mode

3.2 Channel Power Measurement

Option	Parameter	Detector Behavior
		functions, average type, and the trace averaging function This option is set using " Detector Select Auto/Man " on page 406
Normal	NORMa1	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
Average	AVERAge	The detector determines the average of the signal within the sweep points, using RMS averaging
Peak (Positive)	POSitive	The detector determines the maximum of the signal within the sweep points
Sample	SAMPle	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
Negative Peak	NEGative	The detector determines the minimum of the signal within the sweep points
RMS	RMS	Equivalent to Average . See Notes below

Because they may not find a spectral component's true peak, neither **Average** nor **Sample** detectors measure amplitudes of CW signals as accurately as **Peak** or **Normal**, but they do measure noise without the biases of peak detection.

Remote Command	<pre>[:SENSe]:CHPower:DETECTOR[:FUNCTION] NORMa1 AVERAge POSitive SAMPle NEGative RMS [:SENSe]:CHPower:DETECTOR[:FUNCTION]?</pre>												
Example	<pre>:CHP:DET NORM :CHP:DET?</pre> <p>Set the detector to Average, which uses RMS averaging, so this is equivalent to selecting an RMS detector:</p> <pre>:CHP:DET RMS</pre>												
Notes	<p>The query returns a name that corresponds to the detector type, as shown below</p> <p>The RMS selection sets the detector type to AVERAge with RMS averaging. Therefore, if RMS has been selected, the query returns AVER</p> <table> <tr> <th>String Returned</th><th>Definition</th></tr> <tr> <td>NORM</td><td>Normal</td></tr> <tr> <td>AVER</td><td>Average (RMS)</td></tr> <tr> <td>POS</td><td>Peak</td></tr> <tr> <td>SAMP</td><td>Sample</td></tr> <tr> <td>NEG</td><td>Negative Peak</td></tr> </table>	String Returned	Definition	NORM	Normal	AVER	Average (RMS)	POS	Peak	SAMP	Sample	NEG	Negative Peak
String Returned	Definition												
NORM	Normal												
AVER	Average (RMS)												
POS	Peak												
SAMP	Sample												
NEG	Negative Peak												
Couplings	<p>When the Detector setting is Auto, switches to align with "Trace Type" on page 3048:</p> <ul style="list-style-type: none"> – NORMa1 with Clear Write – AVERAge with AVERAge 												

	<ul style="list-style-type: none"> – POSitive (peak) with MAXHold – NEGative (peak) with MINHold
Preset	AVERage
State Saved	Saved in instrument state
Range	NORMa1 AVERage POSitive SAMPle NEGative RMS

Detector Select Auto/Man

Sets the Detector mode to **Auto** or **Manual**. In **Auto**, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you select any detector explicitly, this setting switches automatically to **Man** (manual).

Remote Command	[:SENSe]:CHPower:DETECTOR:Auto ON OFF 1 0 [:SENSe]:CHPower:DETECTOR:Auto?
Example	:CHP:DET:Auto ON :CHP:DET:Auto?
Couplings	When the Detector setting is Auto , switches to align with "Trace Type" on page 3048 : <ul style="list-style-type: none"> – NORMa1 with Clear Write – AVERage with AVERage – POSitive (peak) with MAXHold – NEGative (peak) with MINHold
Preset	ON
State Saved	Yes

3.2.10.5 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset 1

To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset 2

Copy

Executes a Trace Copy based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe:COPIY TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:COPIY TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <pre>:TRAC:COPIY TRACE1,TRACE3</pre>
Notes	<p>The command is of the form:</p> <pre>:TRACe:COPIY <source_trace>,<dest_trace></pre>
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	The destination trace is put in View (Update = Off, Display = On) after the copy
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>TRACE1, TRACE2</pre> <p>For all other measurements:</p> <pre>TRACe1, TRACe2</pre>

Exchange

Executes a Trace Exchange based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode): <code>:TRACe:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</code></p> <p>For all other measurements: <code>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code></p> <p>where <code><meas></code> is the identifier for the current measurement</p> <p>Note that the format of the <code>:TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON: <code>:TRAC:EXCH TRACE1,TRACE2</code></p>
Notes	<p>The command is of the form: <code>:TRACe:EXCHange <trace_1>,<trace_2></code></p>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:<meas>]:PRESet:ALL</code>
Example	<code>:TRAC:PRES:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces in **Min Hold**, in which case it loads `maxtracevalue`, even if **Update** = **OFF**.

Remote Command	<code>:TRACe[:<meas>]:CLEar:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition	Off
From Trace	Trace 1
To Trace	Trace 2

3 5G NR Mode

3.2 Channel Power Measurement

	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command	<code>:TRACe:<meas>:PRESet:EIRP</code>
Example	For OBW Meas: <code>:TRAC:OBW:PRES:EIRP</code>

3.2.10.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a `:READ` or `:FETCh` query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:<meas>:MTRace?</code> <code><meas></code> is the identifier for the current measurement; any one of <code>CHPower</code> <code>ACPower</code> <code>OBWidth</code> <code>SEMask</code> <code>SPURious</code> <code>PVTime</code>
Example	Channel Power <code>:CALC:CHP:MTR TRAC1</code> <code>:CALC:CHP:MTR?</code>
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to <code>RBW</code> or <code>FAST</code> , and only Trace 1 is enabled
Preset	<code>TRACe1</code>
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.3 Occupied BW Measurement

This measurement computes and displays the bandwidth occupied by a given percentage of the total mean power of a signal.

Measurement Commands

The general functionality of "CONFigure" on page 4138, "INITiate" on page 4139, "FETCh" on page 4139, "MEASure" on page 4141, and "READ" on page 4140 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF: <Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list setup commands for this measurement and queries to retrieve results.

Command	Function
<code>:INITiate:OBWidth</code>	Initiates a trigger cycle for the OBW measurement, but does not return any data. You must then use <code>:FETC:OBW[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings
<code>:CONFigure:OBWidth</code>	Returns the long form name of current measurement, in this case, OBWidth
<code>:CONFigure:OBWidth</code>	Selects OBW measurement with Meas Setup settings in preset state – same as Meas Preset
<code>:CONFigure:OBWidth:NDEFault</code>	Selects OBW measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of `n`, as detailed in "Remote Command Results" on page 411.

Command	Function
<code>:FETCh:OBWidth[n]?</code>	Retrieves the data defined by <code>n</code>
<code>:MEASure:OBWidth[n]?</code>	Switches to OBW measurement, restores default values, starts the measurement, then retrieves the data defined by <code>n</code>
<code>:READ:OBWidth[n]?</code>	Starts the measurement, then retrieves the data defined by <code>n</code>

Backwards Compatibility Queries

Command	Return Value
<code>:FETCh:OBWidth:OBWidth?</code>	Returns the Occupied Bandwidth (Hz)
<code>:MEASure:OBWidth:OBWidth?</code>	
<code>:READ:OBWidth:OBWidth?</code>	

3 5G NR Mode

3.3 Occupied BW Measurement

Command	Return Value
:FETCh:OBWidth:FERRor?	Returns the Transmit Frequency Error (Hz)
:MEASure:OBWidth:FERRor?	
:READ:OBWidth:FERRor?	
:FETCh:OBWidth:XDB?	Returns the xdB Bandwidth (Hz)
:MEASure:OBWidth:XDB?	
:READ:OBWidth:XDB?	

Remote Command Results

The following table describes the results returned by the **FETCh**, **MEASure**, and **READ** queries listed above, according to the index value **n**.

n	Results Returned																											
1, or not specified	Returns scalar results, in the following order: <table><tr><th>#</th><th>Item</th><th>Unit</th></tr><tr><td>1</td><td>Occupied Bandwidth</td><td>Hz</td></tr><tr><td>2</td><td>Total Power or OBW Power</td><td>dBm</td></tr><tr><td></td><td>Power reference type can be changed with "Power Ref" on page 486 in Meas Setup</td><td></td></tr><tr><td>3</td><td>Span</td><td>Hz</td></tr><tr><td>4</td><td>Spectrum Trace Points</td><td>points</td></tr><tr><td>5</td><td>Res BW</td><td>Hz</td></tr><tr><td>6</td><td>Transmit Frequency Error</td><td>Hz</td></tr><tr><td>7</td><td>7. x dB Bandwidth</td><td>Hz</td></tr></table>	#	Item	Unit	1	Occupied Bandwidth	Hz	2	Total Power or OBW Power	dBm		Power reference type can be changed with "Power Ref" on page 486 in Meas Setup		3	Span	Hz	4	Spectrum Trace Points	points	5	Res BW	Hz	6	Transmit Frequency Error	Hz	7	7. x dB Bandwidth	Hz
#	Item	Unit																										
1	Occupied Bandwidth	Hz																										
2	Total Power or OBW Power	dBm																										
	Power reference type can be changed with "Power Ref" on page 486 in Meas Setup																											
3	Span	Hz																										
4	Spectrum Trace Points	points																										
5	Res BW	Hz																										
6	Transmit Frequency Error	Hz																										
7	7. x dB Bandwidth	Hz																										
2	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 1																											
3	Only available in LTEAFDD, LTEATDD, 5GNR Modes 1. Number of active carriers Returns number of active carriers within Span in Auto detected mode, otherwise the command is out of scope																											
4	Returns OBW Boundaries table results in the following order: <table><tr><th>#</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td>Occupied bandwidth</td><td>Hz</td></tr><tr><td>2</td><td>Total Power or OBW Power</td><td>dBm</td></tr><tr><td></td><td>Power reference type can be changed with "Power Ref" on page 486 in Meas Setup</td><td></td></tr></table>	#	Item	Unit, if any	1	Occupied bandwidth	Hz	2	Total Power or OBW Power	dBm		Power reference type can be changed with "Power Ref" on page 486 in Meas Setup																
#	Item	Unit, if any																										
1	Occupied bandwidth	Hz																										
2	Total Power or OBW Power	dBm																										
	Power reference type can be changed with "Power Ref" on page 486 in Meas Setup																											

n	Results Returned		
	#	Item	Unit, if any
	3	x dB Reference Power	dBm
	4	x dB Reference Power Frequency - offset frequency	Hz
	5	x dB Reference Power Frequency - absolute frequency	Hz
	6	NaN (9.91E+37)	-
	7	NaN (9.91E+37)	-
	8	NaN (9.91E+37)	-
	9	Lower OBW boundary - offset frequency	Hz
	10	Lower OBW boundary - absolute frequency	Hz
	11	Lower OBW boundary - absolute power	dBm
	12	Lower OBW boundary - relative power	dBc
	13	Upper OBW boundary - offset frequency	Hz
	14	Upper OBW boundary - absolute frequency	Hz
	15	Upper OBW boundary - absolute power	dBm
	16	Upper OBW boundary - relative power	dBc
	17	Lower x dB BW boundary - offset frequency	Hz
	18	Lower x dB BW boundary - absolute frequency	Hz
	19	Lower x dB BW boundary - absolute power	dBm
	20	NaN (9.91E+37)	-
	21	Upper x dB BW boundary - offset frequency	Hz
	22	Upper x dB BW boundary - absolute frequency	Hz
	23	Upper x dB BW boundary - absolute power	dBm
	24	NaN (9.91E+37)	-
	Results 6, 7, 8, 20 and 24 always return NaN (9.91E+37)		
5	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 2		
6	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 3		

3.3.1 Views

This measurement has three predefined views:

Name	SCPI Name	SCPI #
"OBW Results" on page 413	OBWResults	1
"OBW Boundaries" on page 414	BOUNDaries	2

Name	SCPI Name	SCPI #
"Gate" on page 414	See "Gate View On/Off" on page 4061	

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the **View** changes, the default menu is **Frequency**, unless otherwise specified in the **View** description.

The following SCPI commands can be used to select any view other than **Gate**.

View Selection by Name

Remote Command	<code>:DISPlay:OBWidth:VIEW[:SElect] OBWResults BOUNDaries</code> <code>:DISPlay:OBWidth:VIEW[:SElect]?</code>
Example	<code>:DISP:OBW:VIEW OBWR</code> <code>:DISP:OBW:VIEW?</code>
Preset	<code>OBWResults</code>
State Saved	Saved in instrument state
Range	<code>OBWResults BOUNDaries</code>

View Selection by Number

Remote Command	<code>:DISPlay:OBWidth:VIEW:NSElect <integer></code> <code>:DISPlay:OBWidth:VIEW:NSElect?</code>
Example	<code>:DISP:OBW:VIEW:NSEL 2</code> <code>:DISP:OBW:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

3.3.1.1 OBW Results

Windows: "Graph" on page 414, "Metrics – OBW Results" on page 415

The spectrum trace is displayed in the upper window. Measurement results such as Occupied Bandwidth or Power are displayed in the lower window.

Example	<code>:DISP:OBW:VIEW OBWR</code>
---------	----------------------------------

3.3.1.2 OBW Boundaries

Windows: "Graph" on page 414, "Metrics - OBW Boundaries" on page 417

The spectrum trace is displayed in the upper window. The lower window of OBW Results view is replaced by the OBW boundaries table in this view. Occupied bandwidth and X dB bandwidth for both lower and upper boundaries are displayed.

Example `:DISP:OBW:VIEW BOUN`

3.3.1.3 Gate

See "Gate View On/Off" on page 4061

3.3.2 Windows

There are four available window types. The **Gate** window is available only when "Gate View On/Off" on page 4061 is **ON** in the **Gate Settings** menu under **Trigger**.

View	#
"Graph" on page 414	1
"OBW Results" on page 413	2
"OBW Boundaries" on page 414	3
"Gate" on page 418	4

3.3.2.1 Graph

Window #1

Appears in two Views, as follows:


View	Size	Position
"OBW Results" on page 413	Three fifth, full width	Top
"OBW Boundaries" on page 414	Half, full width	Top

Spectrum View


For SA, WCDMA, WLAN mode:

3 5G NR Mode

3.3 Occupied BW Measurement

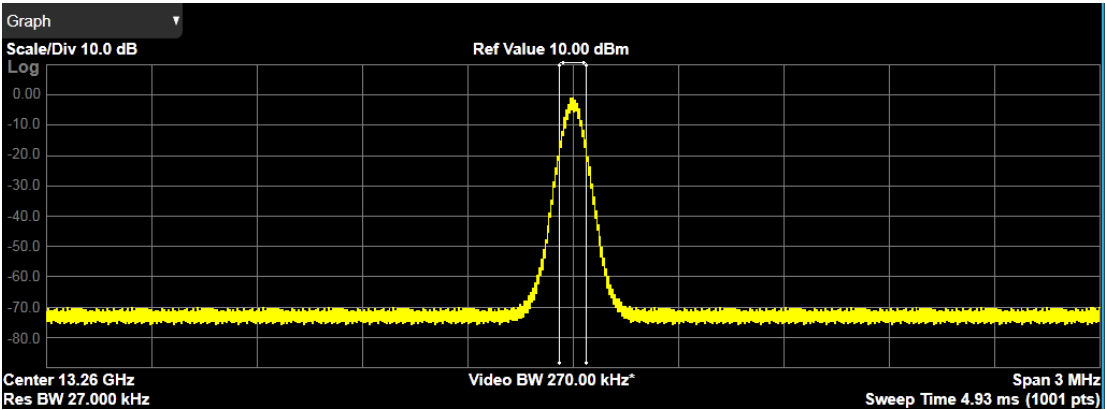

For LTE-Advanced FDD/TDD mode only

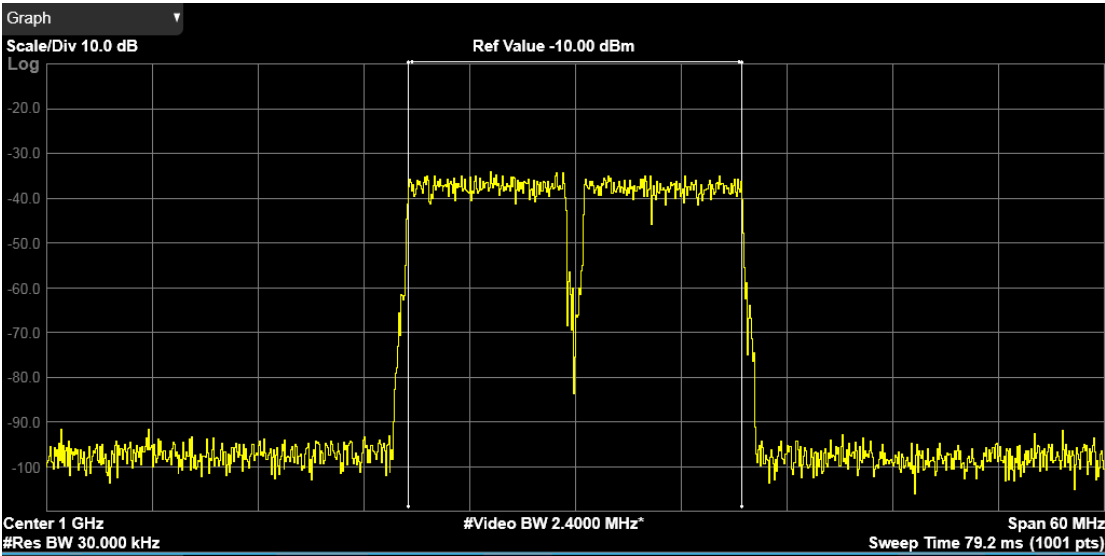

3.3.2.2 Metrics - OBW Results

Window #2

Displays the textual results of the Occupied BW measurement.

View	Size	Position
"OBW Results" on page 413	Two fifth, full width	Bottom
Gate	One third, full width	Bottom

Metrics			
Occupied Bandwidth	2.9730 MHz	Total Power	20.2 dBm
Transmit Freq Error	0 Hz	% of OBW Power	99.00 %
x dB Bandwidth	3.000 MHz	x dB	-26.00 dB

For the LTE-Advanced FDD/TDD and 5G NR modes, the metric result is shown as below:

Metrics			
Occupied Bandwidth	2.9730 MHz	Measure Trace	Trace 1
Transmit Freq Error	0 Hz	Total Power	20.2 dBm
x dB Bandwidth	3.000 MHz	% of OBW Power	99.00 %
		x dB	-26.00 dB

Occupied Bandwidth

The occupied bandwidth result is $f_2 - f_1$, where f_1 and f_2 are the lower and upper carrier boundary point. f_1 and f_2 are calculated with Occupied Bandwidth algorithms.

Total Power or OBW Power

The total power is the power integrated in the specified span setting. The OBW power is calculated from multiplying the total power by OBW percent power. The user can select the total power or the OBW power with the Power Ref control in Meas Setup.

Transmit Freq Error

The transmit freq error (transmit frequency error) result is calculated as the difference between $(f_2 + f_1)/2$ and the tuned center frequency of the signal, where f_1 and f_2 are the lower and upper carrier boundary point.

x dB Bandwidth

The x dB result is a bandwidth measured between two points on the signal which are a certain number of dBs down from the highest signal point within the OBW Span. For example, If the 'x dB' parameter is set to -26 dB, and the 'Occupied BW Span' is set to 10 MHz, then the maximum signal power level is first determined from the 10 MHz wide trace sweep. Next, the two furthest frequencies below (x_{db_f1}) and above (x_{db_f2}) the frequency of the maximum level occurrence are found where the signal level is 26 dB below the peak level. This calculation also uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points).

The x dB bandwidth is calculated to be $x_{db_f2} - x_{db_f1}$.

% of OBW Power

This is the setting parameter. See ["% of OBW Power" on page 2235](#)

x dB

This is the setting parameter. See ["x dB" on page 487](#).

Active Carriers

In the LTE-Advanced FDD/TDD and 5G NR modes, the number of active carriers is displayed to show how many carriers are identified as active in auto detected mode of span, otherwise “-” is displayed to indicate that it is out of scope. When there is one active carrier, Transmit Freq Error is displayed. Otherwise, “---” is displayed.

Measure Trace

See ["Measure Trace" on page 2614](#).

3.3.2.3 Metrics - OBW Boundaries

Window #3

Displays occupied bandwidth and X dB bandwidth for both lower and upper boundaries.

View	Size	Position
"OBW Boundaries" on page 414	Half, full width	Bottom
Gate	One third, full width	Bottom

Metrics	Occupied Bandwidth	x dB Reference	
	2.9730 MHz	x dB	-26.00 dB
Total Power	20.2 dBm	Power	0.00 dBm
		Offset Frequency	-1.5000 MHz
	Lower Boundary		
	Offset Freq	Abs Power	Rel Power
Occupied Bandwidth	-1.4865 MHz	0.00 dBm	-20.2 dBc
x dB Bandwidth	-1.5000 MHz	-26.0 dBm	
	Upper Boundary		
	Offset Freq	Abs Power	Rel Power
	1.4865 MHz	0.00 dBm	-20.2 dBc
	1.5000 MHz	-26.0 dBm	

Occupied Bandwidth

The occupied bandwidth result is $f_2 - f_1$, where f_1 and f_2 are the lower and upper carrier boundary point. f_1 and f_2 are calculated with Occupied Bandwidth algorithms.

Total Power or OBW Power

Total Power is the power integrated in the specified span setting. OBW Power is calculated from multiplying the total power by OBW percent power. The user can select the total power or the OBW power with the Power Ref control in Meas Setup.

x dB

This is the setting parameter. See ["x dB" on page 487](#).

x dB Ref Pwr

The x dB reference power result shows the power of the highest signal point within the OBW Span.

x dB At Freq

The x dB reference power frequency result shows the frequency of the highest signal point within the OBW Span. The frequency display type, either Offset or Absolute, can be selected with the Boundary Frequency control under Display.

OBW Boundary Results

Name	Unit	Corresponding Results
Lower OBW boundary - offset frequency	Hz	Offset frequency of the lower OBW boundary from center frequency
Lower OBW boundary - absolute power	dB	Absolute power on the point of lower OBW boundary
Lower OBW boundary - relative power	dBc	Relative power on the point of lower OBW boundary
Upper OBW boundary - offset frequency	Hz	Offset frequency of the upper OBW boundary from center frequency
Upper OBW boundary - absolute power	dB	Absolute power on the point of upper OBW boundary
Upper OBW boundary - relative power	dBc	Relative power on the point of upper OBW boundary
Lower x dB BW boundary - offset frequency	Hz	Offset frequency of the lower x dB BW boundary from center frequency
Lower x dB BW boundary - absolute power	dB	Absolute power on the point of lower x dB BW boundary
Upper x dB BW boundary - offset frequency	Hz	Offset frequency of the lower x dB BW boundary from center frequency
Upper x dB BW boundary - absolute power	dB	Absolute power on the point of lower x dB BW boundary

3.3.2.4 Gate

Window #4

Turning on **Gate** View shows the **Gate** Window, which lets you see your Gating signal at the same time as the measured data. See the description in "[Gate View On/Off](#)" on page 4061 under **Trigger, Gate Settings**.

Views in which this window appears:

View	Size	Position
Gate	One third, full width	Top

3.3.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.3.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real></code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:RLEV 125</code> <code>:DISP:OBW:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 421 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF "Attenuation" on page 3225 is not coupled to Ref Value
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl></code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:OBW:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to Scale Range as follows Scale/Div = Scale Range/10 (number of divisions) When the Auto Scaling is On, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to Off
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe <rel_ampl></code> <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change this value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:OBW:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition</code>

Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:OBW:WIND:TRAC:Y:COUP?</code>
Couplings	When Auto Scaling is ON , and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change a value of "Scale/Div" on page 419 , "Ref Value" on page 419 , or "Scale Range" on page 1416 , Auto Scaling automatically changes to OFF
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

3.3.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 422
- See ["Single-Attenuator Configuration"](#) on page 423


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.

Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations


Configuration 1: Mechanical attenuator + optional electronic attenuator

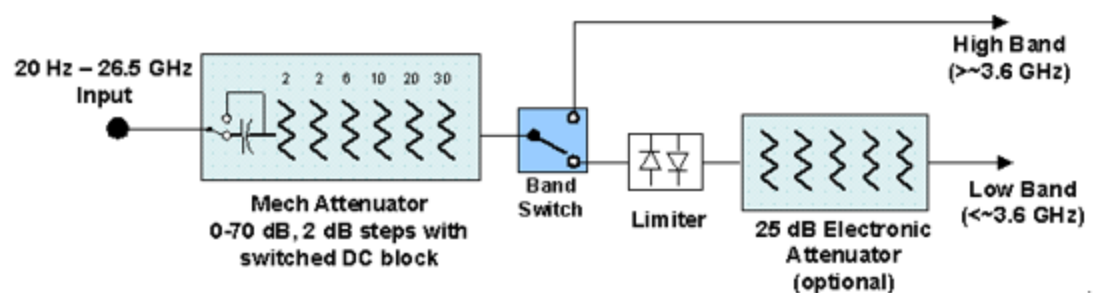

Configuration 2: Mechanical attenuator, no optional electronic attenuator


3 5G NR Mode

3.3 Occupied BW Measurement

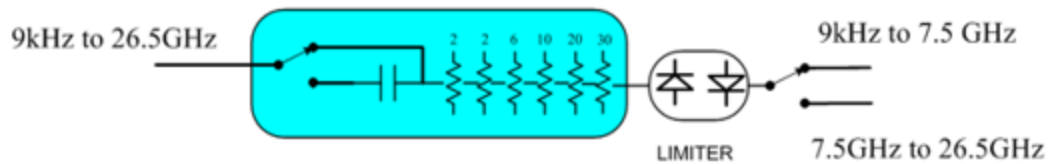

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


Single-Attenuator Configuration

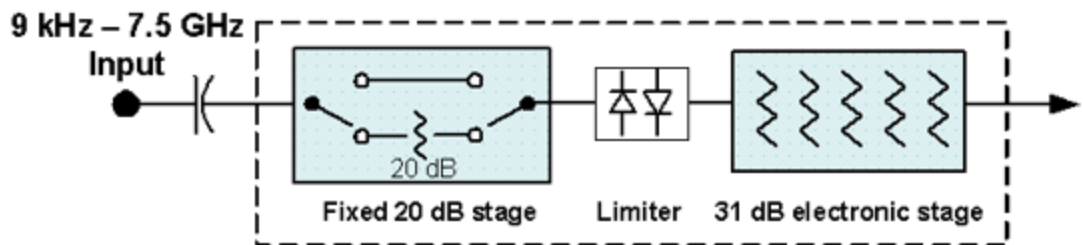

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator

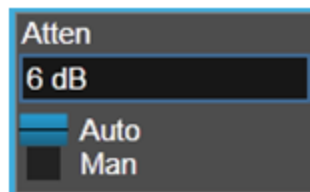

Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows:</p> <p>"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten</p> <p>"Total Atten above 50 GHz" followed by the value of Full Range Atten</p> <p>For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> – Attenuator summary: – Total Atten below 50 GHz: 30 dB – Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "[Internal Preamp](#)" on [page 3251](#) Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "[Attenuator Configurations and Auto/Man](#)" on [page 427](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " Elec Atten " on page 3231 See " Attenuator Configurations and Auto/Man " on page 427 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">– If the USB Preamp is connected to USB, use 0 dB for Mech Atten– Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)– In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto , but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <= 7.5 GHz. So, when the frequency is changed from below

	7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	Auto The Auto value is 10 dB	
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as: <i>Atten: <total> dB (e<elec>)</i> The e letter is in amber in Single-Attenuator configurations For example: Dual-Attenuator configuration: <i>Atten: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB Single-Attenuator configuration: <i>A: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation) When in Manual, a # sign appears in front of Atten in the annotation Auto Function	
Remote Command	[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?	
Example	Turn Auto Mech Atten ON: :POW:ATT:AUTO ON	
Dependencies	:POW:ATT:AUTO is only available in measurements that support Auto , such as Swept SA	
Preset	ON	

Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 425 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 3231 for more about "soft" attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 429](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> - Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes - Transmit On/Off Power measurement in 5G NR Mode - Power vs. Time and Transmit Power measurement in GSM/EDGE Mode - Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator"

3 5G NR Mode

3.3 Occupied BW Measurement

	Transition Rules" on page 430
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 431](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "Pre-Adjust for Min Clipping" on page 3236.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the "Adjust Atten for Min Clipping" on page 3234 function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStArt OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStArt?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 434

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 433 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	

Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	<code>ON</code> aliases to "Elec Atten Only" (<code>:POW:RANG:OPT:ATT ELEC</code>) <code>OFF</code> aliases to "Off" (<code>:POW:RANG:OPT:ATT OFF</code>) <code>:POW:RANG:AUTO?</code> returns true if <code>:POW:RANG:OPT:ATT</code> is not <code>OFF</code>
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:RANGe:AUTO?</code>

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

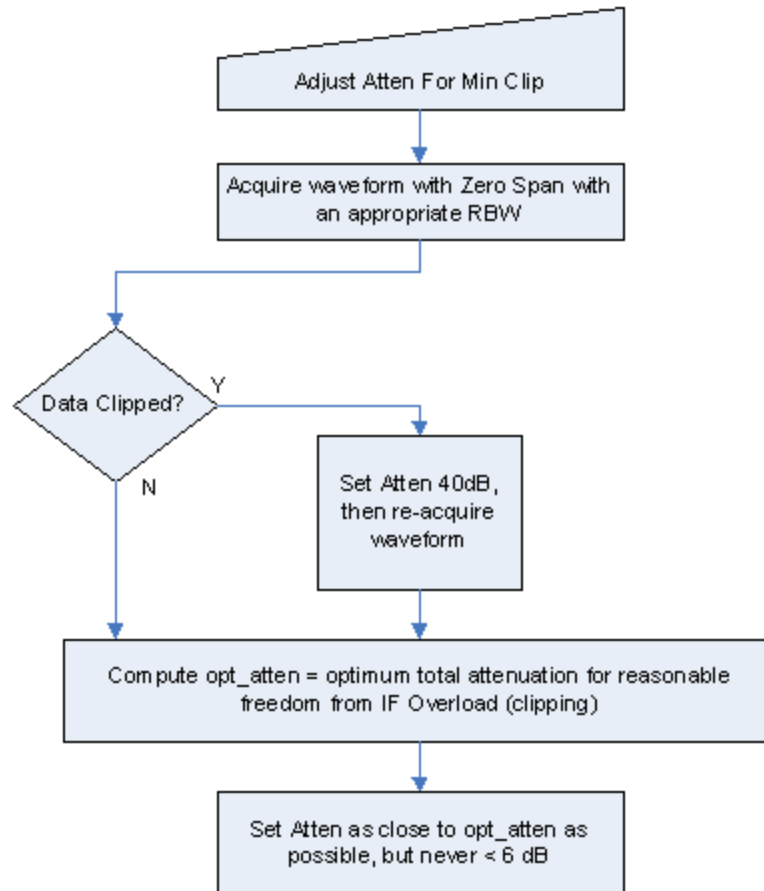

Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 433 selection is Mech + Elec Atten:

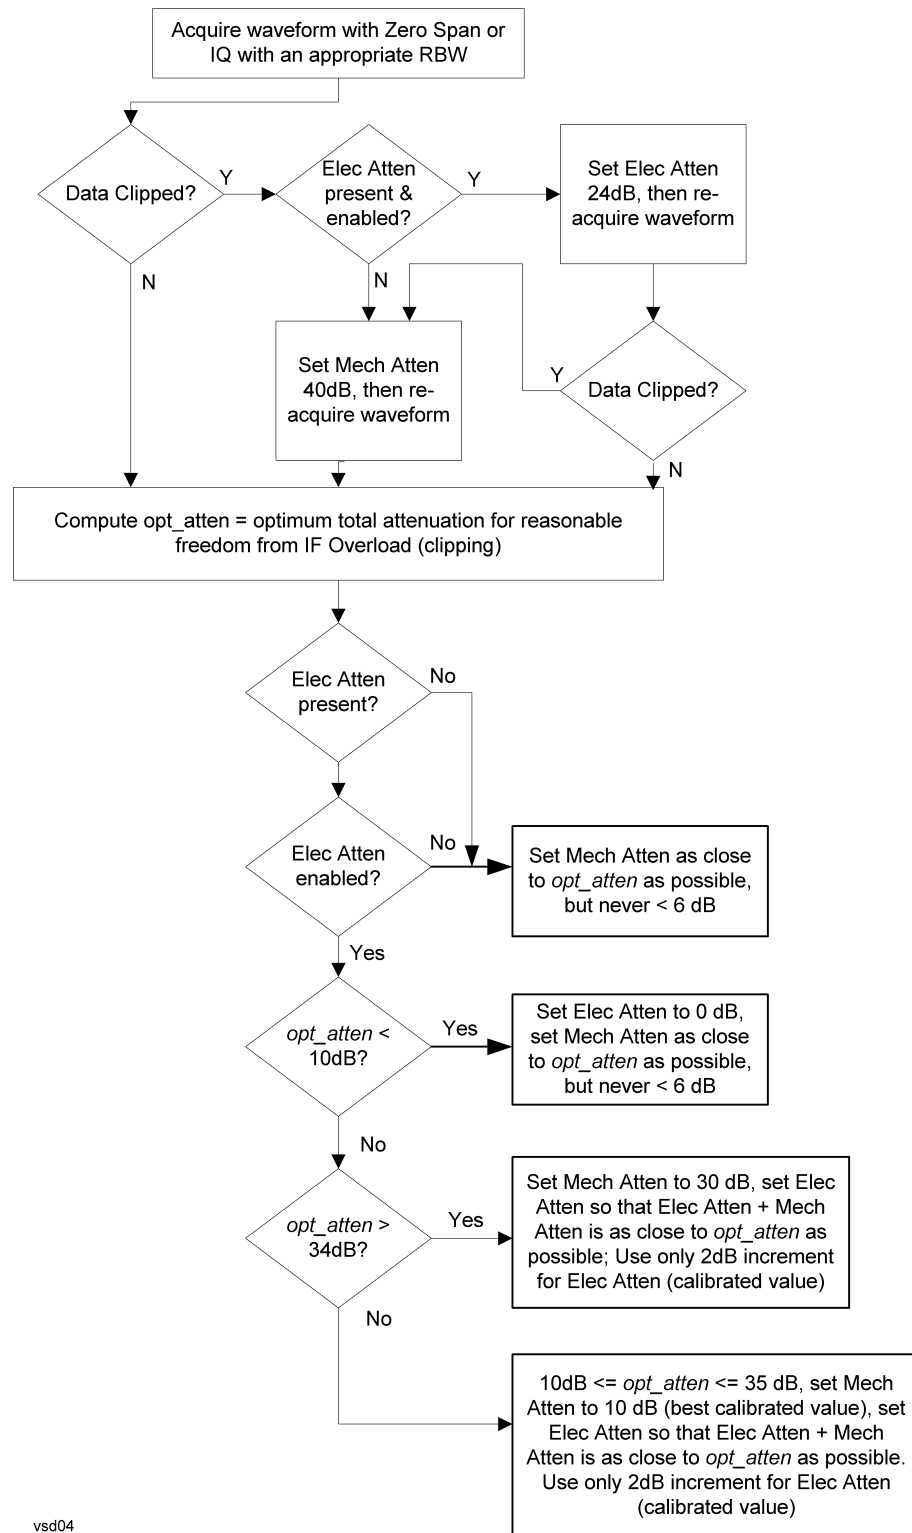

vsd04

"Pre-Adjust for Min Clipping" on page 433 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

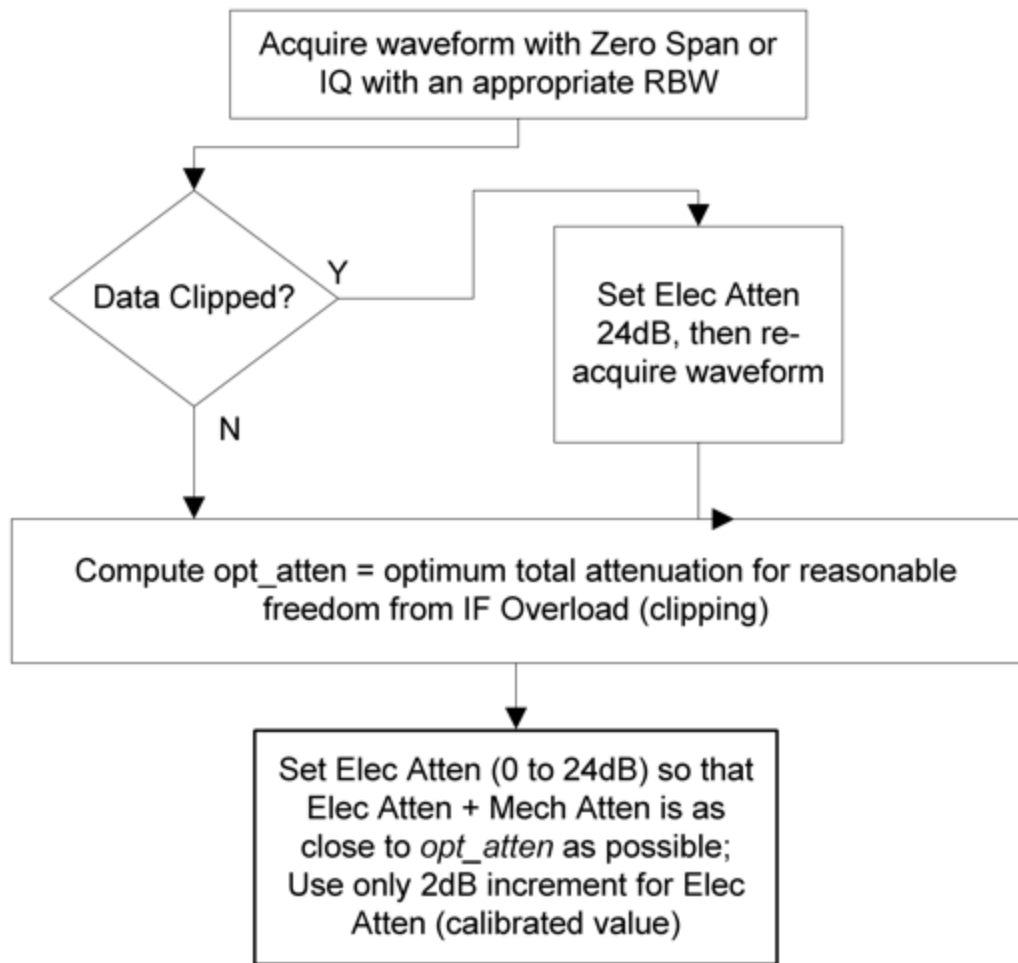

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.3.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

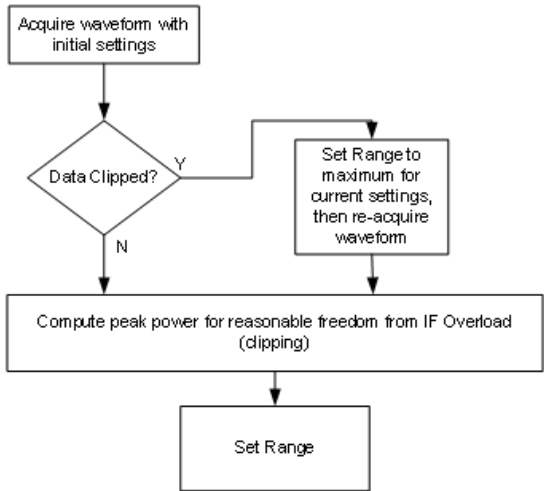

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:PARatio <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.3.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "**Preselector Adjust**" on page 3250 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "**Proper Preselector Operation**" on page 442.

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> – If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken – Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz – Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 – Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

- 2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
- 3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "Presel Center" on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none">- Does not appear in CXA-m- Does not appear in VXT Models M9410A/11A/15A/16A- Does not appear in M9410E/11E/15E/16E- Grayed-out if microwave preselector is off- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0- Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	–/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to LOW instead of FULL , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **Internal Preamp** on page 3251. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.


For best possible sensitivity, LNA can be turned on *together* with **Internal Preamp** on page 3251, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **More Information** on page 446


Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and **Internal Preamp**. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 451
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 453
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 454

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														

Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>
------------	--

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 5G NR Mode

3.3 Occupied BW Measurement

Measurement	μW Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μW Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 449 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

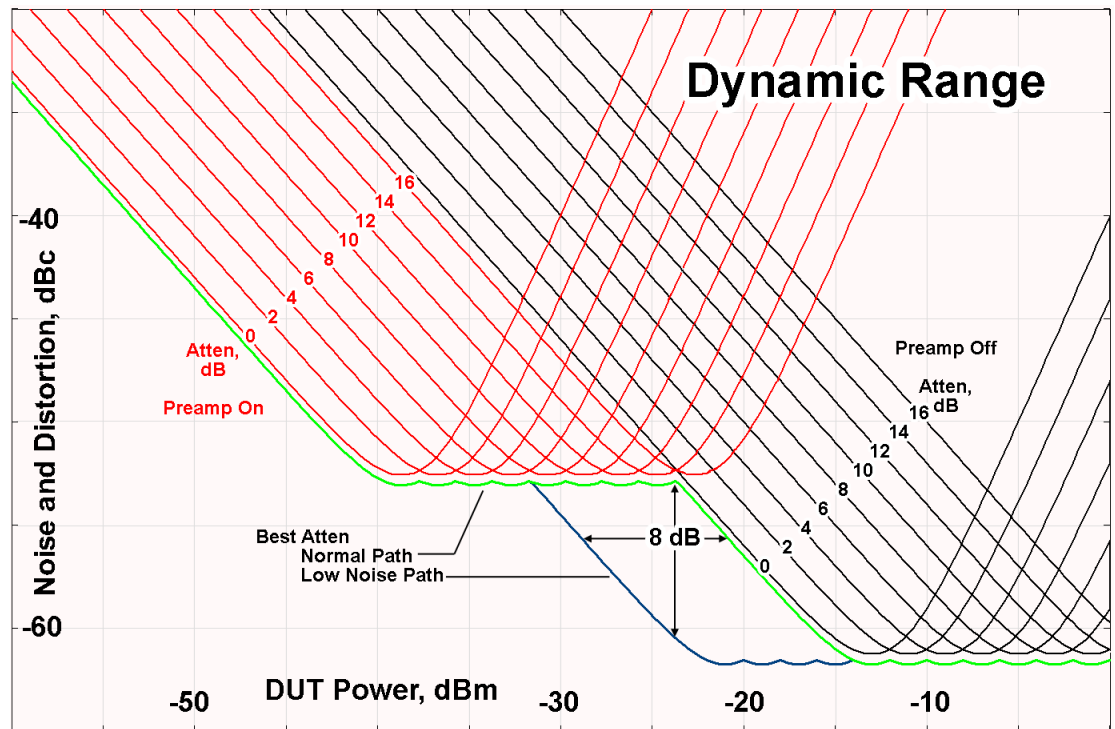

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and **"Y Scale" on page 3222** is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.

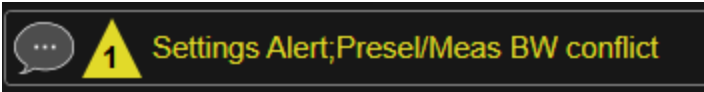

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See " [\$\mu\$ W Path Control](#)" on page 3254.

When this function is **ON**, and " [\$\mu\$ W Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">– 5GNRMode: Modulation Analysis and IQ Waveform– WLAN Mode: IQ Waveform– Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

3 5G NR Mode

3.3 Occupied BW Measurement

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	N9041B
	N9042B+V3050A
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0</code> <code>[:SENSe]:<measurement>:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 460 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

3 5G NR Mode

3.3 Occupied BW Measurement

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.3.4 BW

Opens the Bandwidth (BW) menu, which contains controls for "Res BW" on page 462 and "Video BW" on page 463.

The **Resolution BW** functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

3.3.4.1 Settings

Contains the basic bandwidth functions. In this measurement, it is the only tab under **BW**.

Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW** (Auto) selects automatic coupling of the **Res BW** to **"Span"** on [page 475](#) using the ratio set by **Span:3 dB RBW** (some measurements do not have a **Span:3 dB RBW** control, in which case the measurement chooses the optimal ratio). To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing **"Auto Couple"** on [page 3289](#) or by performing a **Preset**.

When **Res BW** is set to **Auto**, the bandwidth selected depends on **"RBW Filter Type"** on [page 464](#).

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on **Filter Type** or **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[:SENSe]:OBwidth:BANDwidth[:RESolution] <bandwidth> [:SENSe]:OBwidth:BANDwidth[:RESolution]? [:SENSe]:OBwidth:BANDwidth[:RESolution]:AUTO ON OFF 1 0 [:SENSe]:OBwidth:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:OBW:BAND 5 MHz :OBW:BAND? :OBW:BAND:AUTO ON :OBW:BAND:AUTO?</pre>
Notes	<p>For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered</p> <p>The setting and querying of values depend on the current bandwidth type</p>
Couplings	<p>Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration</p> <p>"Video BW" on page 463 is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1)</p> <p>When Res BW is set to Auto, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings</p>
Preset	<p>Auto, unless noted in "RBW Presets" on page 463 below</p> <p>See table below</p>
State Saved	Saved in instrument state

3 5G NR Mode

3.3 Occupied BW Measurement

Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the control etc.) can exceed 8 MHz if using a filter other than –3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	For backwards compatibility, this command supports both BANDwidth and BWIDth forms For ESA, the maximum Res BW was 5 MHz; for X-Series it is 8 MHz

RBW Presets

Unless noted in the table below, the Preset value of RBW is **Auto**.

Mode	Preset Value
WCDMA	30 kHz
BT	10 kHz
WLAN	100 kHz
MSR	30 kHz
LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR	30 kHz

Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz, in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Video BW (Auto) selects automatic coupling of **Video BW** to **"Res BW"** on page 462. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on **Video BW**. This may also be done by pressing **"Auto Couple"** on page 3289 or by performing a **Preset**.

Remote Command	<pre>[:SENSe]:OBWidth:BANDwidth:VIDeo <bandwidth> [:SENSe]:OBWidth:BANDwidth:VIDeo? [:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO ON OFF 1 0 [:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>:OBW:BAND:VID 2.4 MHz :OBW:BAND:VID? :OBW:BAND:VID:AUTO ON :OBW:BAND:VID:AUTO?</pre>

Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open” The values shown in this table reflect the conditions after a Mode Preset
Dependencies	Sometimes the displayed Video BW is not actually used to process the trace data: When the Average detector is selected, and Sweep Type is set to Swept , the video bandwidth filter cannot be used, because it uses the same hardware as the Average detector When the Quasi-Peak , EMI Average , or RMS Average detector is selected, Video BW is implemented by the digital IF as part of the detector In this case, Video BW still acts to change the Sweep Time, if Sweep Time is in Auto , and still affects the data on other traces for which this is not the case
Couplings	Normally coupled to Res BW . If Video BW is set to Auto , then video bandwidth is changed as Res BW changes, to maintain the preset ratio (normally 10:1)
Preset	Auto , unless noted in " Video BW Presets " on page 464 below ON
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A “#” mark appears before “VBW” in the annotation when it is not coupled
Annotation	In the bottom center of the screen, “VBW <value> <units>” indicates the current video bandwidth value. Note that for some detectors this is not the value used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility, this command supports both BANDwidth and BWIDth forms

Video BW Presets

Unless noted in the table below, the Preset value is **Auto**.

Mode ID	Preset Value
WCDMA	300 kHz
BT	30 kHz

RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the **Res BW** filters in HP/Agilent/Keysight spectrum analyzers were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz **Res BW** filter was a Gaussian shape with its –3 dB points 10 MHz apart. In X-Series, you can choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

3 5G NR Mode

3.3 Occupied BW Measurement

	Filter Type	SCPI
	Gaussian	GAUSSian
	Flattop	FLATtop
Remote Command	[:SENSe]:OBWidth:BANDwidth:SHAPE GAUSSian FLATtop [:SENSe]:OBWidth:BANDwidth:SHAPE?	
Example	:OBW:BAND:SHAP GAUS :OBW:BAND:SHAP?	
Preset	"Auto Couple" on page 3289 selects the preset value	
State Saved	Saved in instrument state	
Annotation	The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this:	
	-3 dB (Normal) filter BW	Res BW 300 Hz
	-6 dB filter BW	Res BW (-6 dB) 422 Hz
	Noise filter BW	Res BW (Noise) 317 Hz
	Impulse filter BW	Res BW (Impulse) 444 Hz
	CISPR filter BW	Res BW (CISPR) 200 Hz
	MIL filter BW	Res BW (MIL) 1 kHz
	Flattop filter type	Res BW (Flattop) 300 Hz
Backwards Compatibility SCPI	[:SENSe]:OBWidth:BWIDth:SHAPE	

3.3.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.3.5.1 Meas Display

Contains controls for setting the display for the current Measurement, View or Window.

x dB BW Boundaries On/Off

Turns the x dB BW Boundaries On or Off.

Remote Command	:DISPlay:OBWidth:WINDow[1]:XDB 0 1 OFF ON :DISPlay:OBWidth:WINDow[1]:XDB?
----------------	--

Example	<code>:DISP:OBW:WIND:XDB 1</code> <code>:DISP:OBW:WIND:XDB?</code>
Preset	0
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW:WINDow[1]:XDB</code>

Boundary Frequency

Selects frequency display type:

- **OFFSet**: offsets from Center Freq to OBW boundary frequency are displayed
- **ABSolute**: absolute frequencies are displayed

Remote Command	<code>:DISPlay:OBWidth:WINDow2:BOUNDaries:FREQuency OFFSet ABSolute</code> <code>:DISPlay:OBWidth:WINDow2:BOUNDaries:FREQuency?</code>
Example	<code>:DISP:OBW:WIND2:BOUN:FREQ ABS</code> <code>:DISP:OBW:WIND2:BOUN:FREQ?</code>
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet ABSolute
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW2:WINDow2:BOUNDaries:FREQuency</code>

3.3.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
----------------	--

Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

3 5G NR Mode

3.3 Occupied BW Measurement

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESet` enable the display)
- and you are using either the `:SYSTEM:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPLAY:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPLAY:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPLAY:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPLAY:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTRument:SCReen:SElect</code>
Delete Screen	<code>:INSTRument:SCReen:DElete</code>
Delete All But This Screen	<code>:INSTRument:SCReen:DElete:ALL</code>
Add Screen	<code>:INSTRument:SCReen:CREate</code>
Rename Screen	<code>:INSTRument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTEM:SEQUencer</code>

Remote Command	<code>:DISPLAY:ENABLE OFF ON 0 1</code> <code>:DISPLAY:ENABLE?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>

Preset	ON Set by :SYST:DEF MISC , but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

3.3.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "Views" on page 412

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	:DISPlay:VIEW:ADVanced:SElect <alphanumeric> :DISPlay:VIEW:ADVanced:SElect?
Example	Select Baseband as the current View :DISP:VIEW:ADV:SEL "Baseband"
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p>:DISP:VIEW:ADV:SEL "Trace Zoom"</p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be TZOom) with :DISP:VIEW:ADV:SEL</p> <p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p>:DISP:VIEW:ADV:SEL "Trace Zoom" :DISP:VIEW:ADV:SEL "TRACE ZOOM"</p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message "-221, Settings conflict;</p>

	View SCPI cannot be used while Display is disabled” is generated
Backwards Compatibility SCPI	The legacy node :DISPlay:VIEW[:SElect] is retained for backwards compatibility, but it only supports predefined views

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	:DISPlay:VIEW:ADVanced:NAME <alphanumeric>
Example	:DISP:VIEW:ADV:NAME “Baseband” Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
----------------	--

Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p><code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined</p>

3.3.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.3.6.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets **Carrier Reference Frequency**. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the Number of Component Carriers is 1
- the Center Freq Offset is 0 Hz
- the mode of the Center Freq is Auto

then Center Freq is equivalent to Carrier Ref Freq. When Center Freq changes in such conditions, the mode of Center Freq remains as Auto and Carrier Ref Freq will be changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See ["More Information" on page 475](#).

Remote Command	For LTE-A, 5G NR [:SENSe]:CCARrier:REFeRence <freq> [:SENSe]:CCARrier:REFeRence? For MSR [:SENSe]:CARRier:REFeRence <freq> [:SENSe]:CARRier:REFeRence?
Example	For LTE-A, 5G NR :CCAR:REF 2GHz :CCAR:REF? For MSR :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTEAFDD/LTEATDD, 5GNR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as Center Frequency

More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD mode, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determine absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

Span

Set the frequency of the occupied bandwidth span for the current measurement.

Remote Command	[:SENSe]:OBWidth:FREQuency:SPAN <freq> [:SENSe]:OBWidth:FREQuency:SPAN? [:SENSe]:OBWidth:FREQuency:SPAN:AUTO ON OFF 0 1 [:SENSe]:OBWidth:FREQuency:SPAN:AUTO?
Example	:OBW:FREQ:SPAN 2.4 MHz :OBW:FREQ:SPAN?

	<code>:OBW:FREQ:SPAN:AUTO 0</code>																																
	<code>:OBW:FREQ:SPAN:AUTO?</code>																																
Notes	Span Auto Detector (<code>[:SENSe]:OBWidth:FREQuency:SPAN:AUTO</code>) is only available in the MSR, LTEAFDD/LTEATDD and 5GNR modes																																
Dependencies	The Auto Detect functionality is only available in the MSR, LTEAFDD/LTEATDD and 5GNR modes																																
Preset	<table> <tr> <th>Mode</th><th>Value</th></tr> <tr> <td>SA</td><td>3 MHz</td></tr> <tr> <td>WCDMA</td><td>10 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>10 MHz</td></tr> <tr> <td>BT</td><td>2 MHz</td></tr> <tr> <td>5GNR</td><td>Automatically calculated</td></tr> <tr> <td>RTS</td><td>27 kHz</td></tr> <tr> <td>MSR</td><td>10 MHz</td></tr> <tr> <td>WLAN</td><td> <table> <tr> <th>Radio Std</th><th>Value</th></tr> <tr> <td>802.11b</td><td>30MHz</td></tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td><td>25 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td><td>50 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td><td>100 MHz</td></tr> <tr> <td>802.11ac/ax/be (160MHz)</td><td>200 MHz</td></tr> <tr> <td>802.11be (320MHz)</td><td>400 MHz</td></tr> </table> </td></tr> </table>	Mode	Value	SA	3 MHz	WCDMA	10 MHz	LTEAFDD, LTEATDD	10 MHz	BT	2 MHz	5GNR	Automatically calculated	RTS	27 kHz	MSR	10 MHz	WLAN	<table> <tr> <th>Radio Std</th><th>Value</th></tr> <tr> <td>802.11b</td><td>30MHz</td></tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td><td>25 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td><td>50 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td><td>100 MHz</td></tr> <tr> <td>802.11ac/ax/be (160MHz)</td><td>200 MHz</td></tr> <tr> <td>802.11be (320MHz)</td><td>400 MHz</td></tr> </table>	Radio Std	Value	802.11b	30MHz	802.11a/g/n/ac/ax/be (20MHz)	25 MHz	802.11n/ac/ax/be (40MHz)	50 MHz	802.11n/ac/ax/be (80MHz)	100 MHz	802.11ac/ax/be (160MHz)	200 MHz	802.11be (320MHz)	400 MHz
Mode	Value																																
SA	3 MHz																																
WCDMA	10 MHz																																
LTEAFDD, LTEATDD	10 MHz																																
BT	2 MHz																																
5GNR	Automatically calculated																																
RTS	27 kHz																																
MSR	10 MHz																																
WLAN	<table> <tr> <th>Radio Std</th><th>Value</th></tr> <tr> <td>802.11b</td><td>30MHz</td></tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td><td>25 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td><td>50 MHz</td></tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td><td>100 MHz</td></tr> <tr> <td>802.11ac/ax/be (160MHz)</td><td>200 MHz</td></tr> <tr> <td>802.11be (320MHz)</td><td>400 MHz</td></tr> </table>	Radio Std	Value	802.11b	30MHz	802.11a/g/n/ac/ax/be (20MHz)	25 MHz	802.11n/ac/ax/be (40MHz)	50 MHz	802.11n/ac/ax/be (80MHz)	100 MHz	802.11ac/ax/be (160MHz)	200 MHz	802.11be (320MHz)	400 MHz																		
Radio Std	Value																																
802.11b	30MHz																																
802.11a/g/n/ac/ax/be (20MHz)	25 MHz																																
802.11n/ac/ax/be (40MHz)	50 MHz																																
802.11n/ac/ax/be (80MHz)	100 MHz																																
802.11ac/ax/be (160MHz)	200 MHz																																
802.11be (320MHz)	400 MHz																																
State Saved	Yes																																
Min	100 Hz																																
Max	Hardware Maximum Span																																
Backwards Compatibility SCPI	<code>[:SENSe]:EBWidth:FREQuency:SPAN</code>																																

Full Span (Remote Command Only)

Changes the Occupied Bandwidth Span to show the full frequency range of the instrument. It maximizes the span within a range but does not change **Center Frequency**. When using external mixing, it changes the displayed frequency span to the frequency range specified for the selected external mixing band.

Remote Command	<code>[:SENSe]:OBWidth:FREQuency:SPAN:FULL</code>
----------------	--

Example	:OBW:FREQ:SPAN:FULL
Couplings	Selecting full span changes the measurement span value

3.3.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **Normal** mode (see "[Marker Mode](#)" on page 479), and places it at the center of the display. If the selected marker is **Off**, it is set to **Normal** and placed at the center of the screen, on the trace determined by the Marker Trace rules.

3.3.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

For any menu that includes **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal and Delta markers

3.3.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection for the marker control mode (**Normal**/**POSi**tion, **Delta** or **Off**; see "[Marker Mode](#)" on page 479) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. It has no effect if the control mode (see "[Marker Mode](#)" on page 479) is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:OBW:MARK3:X 0</code> <code>:CALC:OBW:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time
Preset	After a preset, all markers are turned OFF , so Marker X Axis Value query returns Not a Number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** – except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X:POSition <real></code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:OBW:MARK10:X:POS 0</code> <code>:CALC:OBW:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points . When a marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition If the marker is Off , the query response is Not A Number
Preset	After a preset, all markers are turned Off , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

Marker Y Axis Value (Remote Query only)

Returns the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:OBW:MARK11:Y?</code>
Notes	Returns the marker Y-Axis result, if the control mode is Normal or Delta If the marker is Off , the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:FUNCTION:RESult?</code>

Marker Mode

Sets the marker control mode to **Normal** (**POSition**), **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:MODE POSition DELTa OFF</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:OBW:MARK:MODE POS</code> <code>:CALC:OBW:MARK:MODE?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELTA OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

Backwards Compatibility SCPI Command

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1), puts it in **Normal** mode, and places it at the center of the screen.

Example	<code>:CALC:OBW:MARK3:STAT ON</code> <code>:CALC:OBW:MARK3:STAT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:STATe OFF ON 0 1</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:STATe?</code>
SCPI	

Delta Marker (Reset Delta)

Pressing this button has the same effect as pressing **Delta** in **Marker Mode**. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:OBWidth:MARKer:AOff</code>
Example	<code>:CALC:OBW:MARK:AOff</code>

3.3.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with ["Marker Delta" on page 481](#).

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.
Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Frequency" on page 477 on the Settings tab.

Peak Search

Moves the selected marker to the trace point which has the maximum y-axis value for that marker's trace.

NOTE Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	:CALCulate:OBWidth:MARKer[1] 2 ... 12:MAXimum
Example	:CALC:OBW:MARK2:MAX :SYST:ERR? can be used to query the errors to determine if a peak is found. The message "No peak found" (-200) will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In WCDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored

Marker Delta

Pressing this button has the same effect as pressing **Delta** in "Marker Mode" on page 479 on the Settings tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to **Delta** without having to access two separate menus.

3.3.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as **"Marker Frequency" on page 477** on the **Settings** tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:REference <integer></code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:REference?</code>
Example	<code>:CALC:OBW:MARK:REF 2</code> <code>:CALC:OBW:MARK:REF?</code>
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded, the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself” The query returns a single value (the specified marker number’s relative marker)
Couplings	The act of specifying the selected marker’s reference marker makes the selected marker a Delta marker If the reference marker is Off , it is turned on in Normal mode at the Delta marker location
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it’s default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** or **Delta** markers (see ["Marker Mode" on page 479](#)).

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **Off**, it moves from the trace it was on to the new trace. If the marker is **Off**, it stays off, but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:TRACe 1 2 3</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:OBW:MARK2:TRAC 2</code> <code>:CALC:OBW:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by "Auto Couple" on page 3289 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as ["Marker Settings Diagram" on page 480](#) on the **Settings** tab.

3.3.8 Meas Setup

Contains functions for setting up the measurement parameters and contains functions for setting up parameters global to all measurements in the mode.

3.3.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

Avg/Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

Initiates an averaging routine that averages the sweep points in several successive sweeps, resulting in trace smoothing.

After the specified number of average counts, "Average Mode" on page 486 (termination control) determines the average action.

Remote Command	<code>[:SENSe]:OBWidth:AVERage:COUNT <integer></code> <code>[:SENSe]:OBWidth:AVERage:COUNT?</code>
Example	<code>:OBW:AVER:COUN 1500</code> <code>:OBW:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min/Max	1/10000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N where n is the current average and N is the average count
Backwards Compatibility SCPI	<code>[:SENSe]:EBWidth:AVERage:COUNT</code>

Continue Averaging

Designed for acquiring the trace average through multiple sets of DUT conditions, to meet requirements such as those for an OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Go to **Single** and press **Restart** to obtain the first set of averages, then **Continue Averaging** will be available.

Use `:FETCh:<meas>?` to retrieve the data as it waits for completion of **Continue Averaging**. `*OPC?` does not wait for completion and returns true immediately.

Pressing this control adds (to the already averaged trace or measurement) several averages equal to "Avg/Hold Num" on page 484. Every time you press it, the terminal count increases by the current value of the **Avg|Hold Num**. You can change your test setup (for example, the DUT position or antenna) after each average count reaches the terminal count.

You could also accomplish the same thing by manually increasing **Avg|Hold Num**, but by using **Continue Averaging** you can guarantee the same number of averages

for each step in the process, while keeping **Avg|Hold Num** the same so you do not lose its value.

Remote Command	<code>[:SENSe]:OBWidth:AVERage:CONTinue</code>
Example	<code>:OBW:AVER:CONT</code>
Dependencies	Enabled when you change the Sweep mode to Single and the Average Count reaches the Average Number. Otherwise, it is grayed-out

Terminal Count (Remote Query Only)

Returns the terminal count that shows the target average number after "**Continue Averaging**" on page 484 is pressed. Every time you press **Continue Averaging**, the terminal count increases to 2N, 3N, and so on. The value is the same as the "**Avg/Hold Num**" on page 484 unless **Continue Averaging** is pressed. When **Restart** is pressed, it is reset to match **Avg|Hold Num**.

Remote Command	<code>[:SENSe]:OBWidth:AVERage:COUNt:TERMinal?</code>
Example	<code>:OBW:AVER:COUN:TERM?</code>

Averaging On/Off

Turns averaging on or off.

NOTE

In this measurement, **Average Type** is always preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[:SENSe]:OBWidth:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:OBWidth:AVERage[:STATe]?</code>
Example	<code>:OBW:AVER ON</code> <code>:OBW:AVER?</code>
Couplings	Averaging state is coupled to " Max Hold (Remote Command Only) " on page 491. If Max Hold is changed from OFF to ON , Averaging state is automatically set to ON
Preset	ON
State Saved	Yes
Range	ON OFF
Backwards Compatibility SCPI	<code>[:SENSe]:EBWidth:AVERage[:STATe]</code>

Average Mode

Lets you set the averaging mode.

EXPOnential	Measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
REPeat	The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:OBWidth:AVERage:TCONtrol EXPOnential REPeat</code> <code>[:SENSe]:OBWidth:AVERage:TCONtrol?</code>
Example	<code>:OBW:AVER:TCON REP</code> <code>:OBW:AVER:TCON?</code>
Preset	EXP
State Saved	Yes
Range	EXPOnential REPeat

% of OBW Power

Assigns the percentage of the total power that is measured within the Occupied Bandwidth for the current measurement. The resulting Occupied Bandwidth limits are displayed by markers placed on the frequencies of the specified percentage.

Remote Command	<code>[:SENSe]:OBWidth:PERCent <real></code> <code>[:SENSe]:OBWidth:PERCent?</code>
Example	<code>:OBW:PERC 75</code> <code>:OBW:PERC?</code>
Preset	99.00
State Saved	Yes
Min/Max	10/99.99

Power Ref

Lets you select Power Ref type:

Total Power	TPower	Total power in the current span is displayed
OBW Power	OBWPower	Occupied power is displayed

When **Power Ref** type is changed, the annotation in the lower window and Remote Command SCPI Results also change.

3 5G NR Mode

3.3 Occupied BW Measurement

Remote Command	<code>[:SENSe]:OBWidth:PREFERENCE OBWPower</code> <code>[:SENSe]:OBWidth:PREFERENCE?</code>
Example	<code>:OBW:PREF TPOW</code> <code>:OBW:PREF?</code>
Preset	<code>TPOWer</code>
State Saved	Saved in instrument state
Range	<code>TPOWer</code> <code>OBWPower</code>

x dB

Sets the x dB value used for the "x dB bandwidth" result that measures the bandwidth between two points on the signal that is x dB down from the highest signal point within the OBW Span.

Remote Command	<code>[:SENSe]:OBWidth:XDB <rel_amp1></code> <code>[:SENSe]:OBWidth:XDB?</code>
Example	<code>:OBW:XDB -20</code> <code>:OBW:XDB?</code>
Preset	BT Mode: -20.0 dB All other Modes: -26.0 dB
State Saved	Yes
Min/Max	-100.0 dB/-0.1 dB
Backwards Compatibility SCPI	<code>[:SENSe]:EBWidth:XDB</code>

Power Integration Method

Selects the power integration method:

Normal	<code>NORMal</code>	By integrating the linear power bucket values from the lower edge of the trace, and interpolating to find the point where the integrated power equals $(1 - [\text{Occ BW \% Pwr}]) / 2$ (0.5% if, for example, the 99% occupied bandwidth is to be found) of the total power, frequency f1 is obtained. This procedure is repeated from the upper trace edge to find frequency f2. This calculation uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points), f1 and f2
From Center	<code>ICENter</code>	Measures the power spectrum distribution within two times or more frequency range over the requirement for Occupied Bandwidth specification centering on the current carrier frequency

Remote Command	[:SENSe]:OBWidth:INTEgration[:METHod] NORMal ICENter [:SENSe]:OBWidth:INTEgration[:METHod]?	
Example	:OBW:INT NORM :OBW:INT?	
Preset	For 5GNR Mode, Uplink:	ICENter
	All other Modes	NORMal
State Saved	Yes	
Range	NORMal ICENter	

Spur Avoidance

Because VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in the multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to “Disabled.”

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message will appear in the status bar:

Settings Alert;Spur Avoidance Off

This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	[:SENSe]:OBWidth:SAVoid[:STATe] OFF ON 0 1 [:SENSe]:OBWidth:SAVoid[:STATe]?	
Example	:OBW:SAV ON	

	:OBW:SAV?
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see ["Measurement-Specific Details" on page 490](#) below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other

instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time

- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all measurement parameters to their default values.

Remote Command	:CONFigure:OBWidth
Example	:CONF:OBW

Max Hold (Remote Command Only)

When **ON**, **Max Hold** displays and holds the maximum responses of the current measurement. Turn **Max HoldOFF** to disable the maximum hold feature.

Remote Command	[:SENSe]:OBWidth:MAXHold ON OFF 1 0 [:SENSe]:OBWidth:MAXHold?
Example	:OBW:MAXH ON :OBW:MAXH?
Couplings	Max Hold is coupled to "Averaging On/Off" on page 485. Max Hold is activated only if Average state is ON . If Max Hold is changed to ON when Average state is OFF , Average state is automatically set to ON
Preset	OFF
State Saved	Yes
Range	OFF ON
Backwards Compatibility SCPI	[:SENSe]:EBWidth:MAXHold

3.3.8.2 Limits

Lets you set measurement limits and be alerted when they have been exceeded.

Limit Test

Toggles the limit test.

Remote Command	:CALCulate:OBWidth:LIMit[:TEST] ON OFF 1 0 :CALCulate:OBWidth:LIMit[:TEST]?
Example	:CALC:OBW:LIM 0

	<code>:CALC:OBW:LIM?</code>
Dependencies	Only appears in LTEAFDD/LTEATDD and 5GNR Modes
Preset	ON
State Saved	Saved in instrument state
Range	ON OFF

Bandwidth

Sets the limit bandwidth for OBW measurement.

Remote Command	<code>:CALCulate:OBWidth:LIMit:FBLimit <freq></code> <code>:CALCulate:OBWidth:LIMit:FBLimit?</code>
Example	<code>:CALC:OBW:LIM:FBL 10</code> <code>:CALC:OBW:LIM:FBL?</code>
Dependencies	Only appears in LTEAFDD/LTEATDD and 5GNR Modes
Preset	Automatically calculated
State Saved	Saved in instrument state
Min/Max	1 kHz/Depends on instrument maximum frequency
Remote Command	<code>:CALCulate:OBWidth:LIMit:FBLimit:AUTO ON OFF 1 0</code> <code>:CALCulate:OBWidth:LIMit:FBLimit:AUTO?</code>
Example	<code>:CALC:OBW:LIM:FBL:AUTO OFF</code> <code>:CALC:OBW:LIM:FBL:AUTO?</code>
Dependencies	Only available in LTE-A and 5G NR Modes
Couplings	When the state of limit bandwidth is ON , the bandwidth value is automatically determined by multi-carrier configuration (system bandwidth and freq offset of each component carrier). Otherwise, the bandwidth value depends on user input When the bandwidth value is set manually, the state of limit bandwidth automatically changes to OFF
Preset	ON
State Saved	Yes
Range	Auto Man

3.3.8.3 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.

3 5G NR Mode

3.3 Occupied BW Measurement

This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIREction DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIREction?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Multi Channel Synchronous Acquisition (UXM Only)

Enables you to perform multiple synchronous acquisition. When On, acquires signals simultaneously from multiple inputs specified in the Multi Channel Config dialog. The acquired data is assigned to each trace according to the Channel Assignment settings in the Trace Settings Table dialog.

Remote Command	<code>[:SENSe]:RADio:MCHannel:SACQuisition[:STATe] ON OFF 1 0</code> <code>[:SENSe]:RADio:MCHannel:SACQuisition[:STATe]?</code>
Example	<code>:RAD:MCH:SACQ ON</code> <code>:RAD:MCH:SACQ?</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
Preset	OFF
State Saved	Yes

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFI01 ... RFI08</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFI02</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	<p>This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B</p> <p>When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed.</p> <p>When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused"</p> <p>Selections are the same as those of RF Input Port and either RFI01 to RFI08 or RFI01 to RFI016</p>

	depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank		Math	
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as ["Multi Channel Synchronous Acquisition \(UXM Only\)" on page 890](#)

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCH** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCulate:<meas>:MTRace? <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at ["Input Port \(UXM\)" on page 2456](#) is assigned to a trace. This setting is valid when ["Multi Channel Synchronous Acquisition \(UXM Only\)" on page 2457](#) is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

3 5G NR Mode

3.3 Occupied BW Measurement

Remote Command	<code>:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12</code> <code>:TRACe[1] 2 3:<meas>:CHANne1?</code>
Example	For the ACP measurement Trace 2 <code>:TRAC2:ACP:CHAN CHAN2</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

EIRP (Synchronous Acquisition) (UXM Only)

Enables you to preset the following parameters. Preset is made such that Trace 3 becomes the sum of Trace 1 and Trace 2 to which data from Channel 1 and Channel 2 are assigned. The measurement result is calculated based on Trace 3.

This parameter is useful when performing the EIRP measurement by acquiring signals from two ports simultaneously.

Multi Channel Synchronous Acquisition	On
--	-----------

Target trace parameters are those of the PowerSuite measurements supporting multi channel synchronous acquisition in the UXM model E7515B.

	Trace 1	Trace 2	Trace 3
Channel Assignment	Channel 1	Channel 2	Channel 1
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	Active	Active
Math Function	Off	Off	Power Sum
Operand 1	N/A	N/A	Trace 1

	Trace 1	Trace 2	Trace 3
Operand 2	N/A	N/A	Trace 2
Math Trace	Trace 3		
Remote Command	[:SENSe]:RADio:MCHannel:PRESet:EIRP		
Example	:RAD:MCH:PRES:EIRP		
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition		

Restore Defaults (UXM Only)

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
Measure Trace		Trace1	
	Trace 1	Trace 2	Trace 3
View/Blank	Active	Blank	Blank
Math Function	Off	Off	Off
Remote Command	[:SENSe]:RADio:MCHannel:PRESet:DEFault		
Example	:RAD:MCH:PRES:DEF		
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition		

Interfering Signal Present

Sets whether interference signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in Adjacent Channel, Spectrum Emission Mask and Spurious Emissions measurements.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	[:SENSe]:RADio:IMODulation:INTerference[:STATe] OFF ON 0 1 [:SENSe]:RADio:IMODulation:INTerference[:STATe]?
Example	:RAD:IMOD:INT 1 :RAD:IMOD:INT?
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

Freq Offset From Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min	0 Hz
Max	400 MHz

Span

Sets the span of the interference signal for intermodulation tests.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SPAN <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min	200 kHz
Max	400 MHz

Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SIDE NEGative POSitive</code> <code>[:SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	<code>POSitive</code>
State Saved	Saved in instrument state

Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- Inner – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- Outer – The interfering signal exists at either of the outer regions

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:REGion INNER OUTER</code> <code>[:SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	<code>OUTer</code>
State Saved	Saved in instrument state

Interfering Signal Exclude Range

Enables you to select the offset range to be excluded from the measurement.

- Offset Integ BW (OIBW) – Exclude an entire ACP offset range where the interfering signal is allocated
- Interfering Signal Span (ISSP) – Exclude only the span where the interfering signal is occupied

NOTE

This setting is available only for the ACP and Modulation Analysis measurements.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2 OIBW ISSPan</code> <code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2?</code>
Example	<code>RAD:IMOD:INT:RANG:EXCL OIBW</code> <code>RAD:IMOD:INT:RANG:EXCL?</code>
Notes	Subopcode 1 for Downlink, 2 for Uplink. Default is Downlink.
Preset	Downlink: ISSPan Uplink: OIBW
State Saved	Saved in instrument state
Range	Offset Integ BW Interfering Signal Span

3.3.8.4 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ALlocation CONTiguous NCONtiguous</code> <code>[[:SENSe]:CCARrier:CONFig:ALlocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	<code>CONTiguous</code>
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

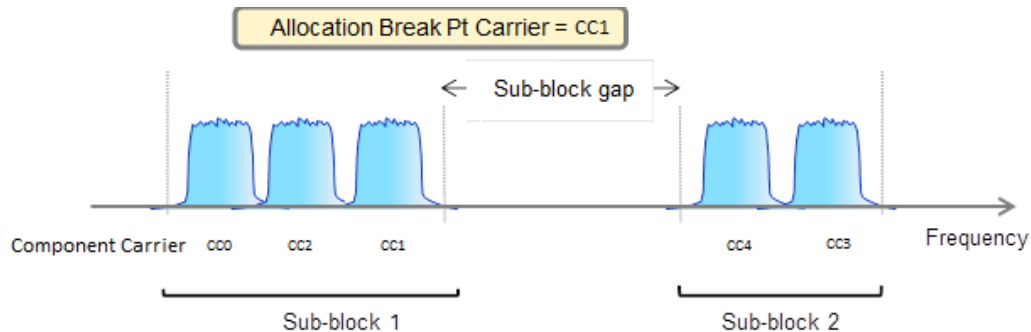

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2

Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?
Example	:CCAR:AFOF ACRA100K

	:CCAR:AFOF?																								
Notes	When you change the value to OFF , nothing happens																								
Dependencies	<p>Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected</p> <p>When CC's Frequency Offset is manually changed, this parameter is set to OFF</p> <p>This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CC0 Freq Offset is automatically adjusted to 0 Hz</p>																								
Preset	OFF																								
State Saved	Yes																								
Range	<p>The cascading list is shown below</p> <table> <tr> <td>Channel Spacing for</td><td>Channel Raster</td></tr> <tr> <td>Adjacent NR Carriers</td><td>100 kHz</td></tr> <tr> <td>Carrier Aggregation</td><td>15 kHz</td></tr> <tr> <td>Off</td><td>60 kHz</td></tr> </table> <table> <tr> <td>Channel Spacing for</td><td>Channel Raster</td></tr> <tr> <td>Adjacent NR Carriers</td><td>100 kHz</td></tr> <tr> <td>Carrier Aggregation</td><td>15 kHz</td></tr> <tr> <td>Off</td><td>60 kHz</td></tr> </table> <table> <tr> <td>Channel Spacing for</td><td>Channel Raster</td></tr> <tr> <td>Adjacent NR Carriers</td><td></td></tr> <tr> <td>Carrier Aggregation</td><td></td></tr> <tr> <td>Off</td><td></td></tr> </table>	Channel Spacing for	Channel Raster	Adjacent NR Carriers	100 kHz	Carrier Aggregation	15 kHz	Off	60 kHz	Channel Spacing for	Channel Raster	Adjacent NR Carriers	100 kHz	Carrier Aggregation	15 kHz	Off	60 kHz	Channel Spacing for	Channel Raster	Adjacent NR Carriers		Carrier Aggregation		Off	
Channel Spacing for	Channel Raster																								
Adjacent NR Carriers	100 kHz																								
Carrier Aggregation	15 kHz																								
Off	60 kHz																								
Channel Spacing for	Channel Raster																								
Adjacent NR Carriers	100 kHz																								
Carrier Aggregation	15 kHz																								
Off	60 kHz																								
Channel Spacing for	Channel Raster																								
Adjacent NR Carriers																									
Carrier Aggregation																									
Off																									

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous [:SENSe]:CCARrier:CONFig:ALLocation?
Example	:CCAR:CONF:ALL CONT

	:CCAR:CONF:ALL?
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

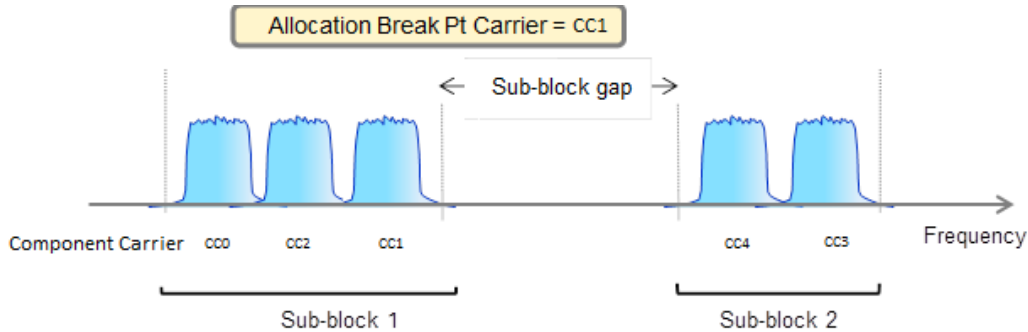

Remote Command	[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15 [:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?
Example	:CCAR:CONF:ALL:NCON:ABP CC0 :CCAR:CONF:ALL:NCON:ABP?
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> Option B25: B20M Option B40: B35M Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

3 5G NR Mode

3.3 Occupied BW Measurement

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly Also, in some cases, make sure if the "Non-Contiguous Break at" parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1 [:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN :EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer> [:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0 :EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMa1 INVert [:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
----------------	--

3 5G NR Mode

3.3 Occupied BW Measurement

Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>			
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>			
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS			
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1			
	<table><tr><td>Bandwidth</td><td>Downlink ACP Meas Noise BW</td><td>Uplink ACP Meas Noise BW</td></tr></table>	Bandwidth	Downlink ACP Meas Noise BW	Uplink ACP Meas Noise BW
Bandwidth	Downlink ACP Meas Noise BW	Uplink ACP Meas Noise BW		

	(MHz)	(MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310
When Freq Range is FR2		
Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
50 MHz	47.520	47.580
100 MHz	95.040	95.160
200 MHz	190.080	190.20
400 MHz	380.160	380.280
800 MHz	714.24	715.20
1600 MHz	1428.48	1429.44
2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz	
State Saved	Yes	
Min	100 kHz	
Max	2000 MHz	

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

3 5G NR Mode

3.3 Occupied BW Measurement

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq>[[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

N_Grid_Size (Display Only)

Display Max RB Number for each available numerology. To adjust this setting please switch to Resource Grid tab.

NOTE

This setting is available for EVM measurement only.

3GPP TS38.104 or TS38.101-1 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
															z
	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B
1	2	5	7	1	1	1	1	2	2	2	N.	N.	N.	N.	N.
5	5	2	9		3	6	8	1	4	7	A	A	A	A	A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2		0	1	3	6	8	1	4
								6	9	3	2	9	7	5	3
6	N.	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

3GPP TS38.104 Tables 5.3.2-2 and 5.3.2-3 or TS38.101-2 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz N_{RB}	100 MHz N_{RB}	200 MHz N_{RB}	400 MHz N_{RB}	800 MHz N_{RB}	1600 MHz N_{RB}	2000 MHz N_{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A
480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

NOTE: For the “N.A” value in above table, the value will be set to 0 and displayed as “---”.

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with "SCS Enabled" on page 1831.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

Resource Grid

Enables you to configure resource grid for each available numerology of each component carrier.

NOTE

This tab and the following controls are only available for Modulation Analysis measurement.

Component Carrier (GUI only)

Selects the Component Carrier to configure its resource grid for each available numerology.

Bandwidth

This is the same as the Bandwidth column in the Configure CCs table. See ["Bandwidth" on page 3297](#).

Freq Range

This is the same as the Freq Range column in the Configure CCs table. See ["Freq Range" on page 3297](#)

Configuration Mode

Selects the configuration mode for resource grid table:

- Auto – always reset N_grid_start and N_grid_size when the frequency range and bandwidth of component carrier are changed. SCS enable/disable state will not be changed, unless enabled SCS is invalid for new frequency range and bandwidth. If all enabled SCS are invalid for new frequency range and bandwidth, 30K SCS will be enabled for frequency range 1 and 120K SCS will be enabled for frequency range 2
- Man – keep the value in grid table when the frequency range and bandwidth of component carrier are changed, unless a value is invalid for new frequency range and bandwidth

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO?</code>
Example	<code>:EVM:CCAR:RGR:CONF:AUTO 0</code> <code>:EVM:CCAR:RGR:CONF:AUTO?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON 0 1

When the configuration mode is Auto, the default N_grid_start is set to 0 and N_grid_size is set according to tables below:

Table 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
															z

		N	N	N	N	N	N	N	N	N	N	N	N	N	N
		R	R	R	R	R	R	R	R	R	R	R	R	R	R
		B	B	B	B	B	B	B	B	B	B	B	B	B	B
1	2	5	7	1	1	1	1	2	2	2	N.	N.	N.	N.	N.
5	5	2	9	0	3	6	8	1	4	7	A	A	A	A	A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2	0	1	3	6	8	1	4	7
								6	9	3	2	9	7	5	3
6	N.	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A
480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

SCS Enabled

The Enabled column lets you enable or disable selected SCS for current component carrier.

Remote Command	<code>[:SENSe][:EVM]:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k[:STATe] OFF ON 0 1</code> <code>[:SENSe][:EVM]:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k [:STATe]?</code>
Example	<code>:EVM:CCAR:RGR:SCS15 ON</code> <code>:EVM:CCAR:RGR:SCS15?</code>
Notes	Only valid numerology for selected frequency range and bandwidth will be visible. Some SCS are disabled if they are "N.A" in Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104)" in the Section 3.2.5.1.15, N_{Grid_Size} (Display Only) In EVM, if Configuration Mode is Auto and Freq Range is changed, the Grid Start and Grid Size will be reset according to Table 5.3.2-1 or Table 5.3.2-2 In measurements other than EVM, when Freq Range is changed, the parameter will be reset according to Table 5.3.2-1 or Table 5.3.2-2
Preset	SCS 15k : OFF

3 5G NR Mode

3.3 Occupied BW Measurement

	SCS 30k : ON SCS 60k : OFF SCS 120k: OFF SCS240K: OFF SCS480K:OFF SCS960K:OFF
State Saved	Yes

N_grid_start

This column lets you set the Grid Start value for the selected numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt <integer></code> <code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt?</code>
Example	<code>:EVM:CCAR:RGRid:SCS15k:STAR 0</code> <code>:EVM:CCAR:RGRid:SCS15k:STAR?</code>
Preset	Depends on frequency range, bandwidth and numerology
State Saved	Yes
Min	0
Max	Depends on frequency range, bandwidth and numerology

N_grid_size

This column lets you set the Grid Size for the selected numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:SIZE 270</code> <code>:EVM:CCAR:RGR:SCS15k:SIZE?</code>
Notes	Grid Size should not exceed the Nrb in Table 5.3.2-1 or Table 5.3.2-2 of 3GPP TS38.104 and TS38.101-1 & -2
Preset	Depends on frequency range and bandwidth
State Saved	Yes
Min	6

Max	Depends on frequency range, bandwidth and numerology
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RBNumber:SCS15k SCS30k SCS60k SCS120k SCS240k</code>


k0 (Display Only)

This column displays the k0 value for the selected Numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k :K0?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:K0?</code>

More Information

See picture below for illustration how k0 is calculated.

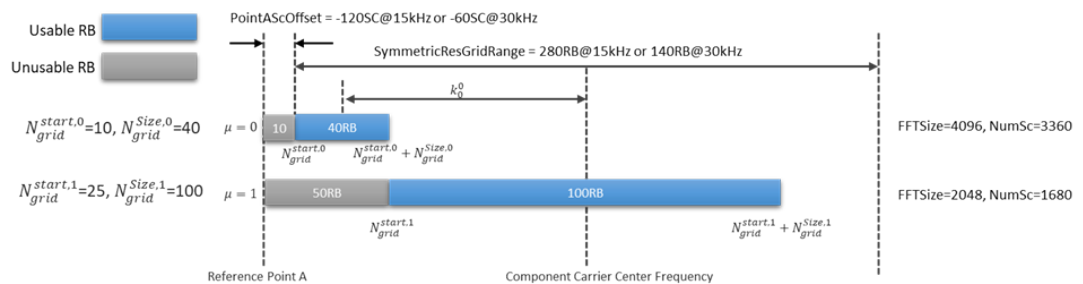

Intra-Cell Guard Band

Enter a comma-separated string to set guard band. Consecutive numbers will be merged into one guard band. At most, 4 guard bands are allowed and the rest will be omitted. Colon-separated numbers represent the start and stop of a guard band.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k:GBAND <string></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k:GBAND?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:GBAN "0:9"</code> <code>:EVM:CCAR:RGR:SCS15k:GBAN?</code>
Couplings	Only visible for Uplink and only available for 15kHz/30kHz numerology
State Saved	Yes

RB Set (Display Only)

Display the RB set according to Intra-Cell Guard Band setting.

Point A Frequency (Display Only)

This figure displays the Point A Freq for the resource grid.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:REFA?</code>
Example	<code>:EVM:CCAR:RGR:REFA?</code>

LTE Coexistence

This tab and the following controls are only available for Modulation Analysis measurement, and it will only appear for DL FR1 component carriers.

Add LTE (GUI only)

Pressing this control inserts a new LTE-CRS configuration into the list, the maximum number of LTE-CRS configurations is 4.

Delete LTE (GUI only)

Pressing this control deletes selected LTE-CRS configuration from the list.

Clear All (GUI only)

Pressing this control deletes all LTE-CRS configurations from the list.

Effective LTE Number (Remote Command only)

Specifies how many LTE-CRS configurations are effective. This SCPI only command is used to provide similar functions such as “Add LTE” and “Delete LTE”.

Note that all 4 LTE-CRS configurations can be modified through SCPI, but ineffective LTE-CRS configurations (index > Effective LTE Number) will not be included in the measurement no matter whether its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE?</code>
Example	<code>:EVM:CCAR:NUMB:LTE 2</code> <code>:EVM:CCAR:NUMB:LTE?</code>
Couplings	Max value is 4 If you attempt to remotely set the Count larger than 4, this will result in an error message

Preset	1
State Saved	Yes
Min	0
Max	4

State

Enable or disable the LTE coexistence.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe]?</code>
Example	<code>:EVM:CCAR:LTE1 OFF</code> <code>:EVM:CCAR:LTE1?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message This control is available only when 15K SCS is enabled in the resource grid
Preset	OFF
State Saved	Yes

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Carrier Offset to Point A

Sets the LTE carrier center subcarrier location determined by the offset from point A using 15K SCS.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset?</code>
Example	<code>:EVM:CCAR:LTE1:COFF 0</code> <code>:EVM:CCAR:LTE1:COFF?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	0
State Saved	Yes
Min	0
Max	16383

MBSFN Subframes

Sets the subframe index that can be configured as MBSFN subframes in LTE.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame <string></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame?</code>
Example	<code>:EVM:CCAR:LTE:MBSF:SFR "2:9"</code> <code>:EVM:CCAR:LTE:MBSF:SFR?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
State Saved	Yes

Number of CRS Antenna Ports

Set the number of antenna ports for LTE-CRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBER N1 N2 N4</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBER?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB N1</code> <code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB?</code>
Couplings	Max value for n=4 and Min value for n=1

	If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	N1
State Saved	Yes
Range	1 2 4

v-shift

Set the v-shift value for LTE-CRS; it is given by LTE Cell ID mod 6.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:VSH 0</code> <code>:EVM:CCAR:LTE1:CRS:VSH?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	0
State Saved	Yes
Min	0
Max	5

Advanced Acquisition

This menu is only available for the Modulation Analysis measurement. It enables you to configure selected RF settings for each component carrier and channel.

Number of Component Carriers

This is the same as the control on the menu panel. See "[Number of Component Carriers](#)" on page 3292.

Input Channel (GUI Only)

Select the input channel to configure its settings.

State Saved	No
-------------	----

Use Advanced Acquisition Table

Specify if the settings in Advanced Acquisition Table will be applied.

Remote Command	<code>[[:SENSe]:RF:ACQuistion:ATABle OFF ON 0 1 [:SENSe]:RF:ACQuistion:ATABle?</code>
Example	<code>:RF:ACQ:ATAB 1 :RF:ACQ:ATAB?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

IF Path Auto

Specify if the IF path in Advanced Acquisition Table will be automatically or manually selected.

Remote Command	<code>[[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO ON OFF 1 0 [:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO?</code>
Example	<code>:RF:ACQ:ATAB:IFP:AUTO 1 :RF:ACQ:ATAB:IFP:AUTO?</code>
Preset	ON
State Saved	Yes
Range	OFF ON

Mechanical Attenuation

Set mechanical attenuation for each component carriers.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation <rel_ampl> [:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:ATT 20</code>
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB

The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with

	the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB

Elec Attenuation

Set electronic attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:EATT 20</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual attenuator configuration: 24 dB Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

LNA

Turn on/off Low Noise Amplifier (LNA) for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:LNA ON</code>
Dependencies	Requires option LNA
Preset	OFF
State Saved	Saved in State

Internal Preamp

Turn on/off internal preamp for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp OFF LOW FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:PRE LOW</code> <code>:CCAR0:RF:CHAN1:GAIN:PRE?</code>

3 5G NR Mode

3.3 Occupied BW Measurement

Dependencies	Preamplifier is not available on all hardware platforms. If the preamp is not present or is unlicensed, the control is not shown
Preset	OFF
State Saved	Saved in instrument state

uW Path Control

Select uW Path for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH?</code>
Example	<code>:CCAR0:RF:CHAN1:MW:PATH LNP</code> <code>:CCAR0:RF:CHAN1:MW:PATH?</code>
Preset	MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved	Save in instrument state
Range	Standard Path Low Noise Path Enable uW Presel Bypass Full Bypass Enable

IF Gain

Set IF Gain for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel?</code>
Example	<code>:CCAR0:RF:CHAN1:IF:GAIN:LEV -10</code> <code>:CCAR0:RF:CHAN1:IF:GAIN:LEV?</code>
Notes	Not available for B25 IF bandwidth option
Preset	0
State Saved	Save in instrument state
Min	Depends on CC Bandwidth
Max	Depends on CC Bandwidth

IF Path

Specify IF path manually for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G</code> <code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath?</code>
----------------	--

Example	<code>:CCAR0:RF:CHAN1:IFP B160M</code> <code>:CCAR0:RF:CHAN1:IFP?</code>
Notes	B10M = 10 MHz B25M = 25 MHz B40M = 40 MHz B85M = 85 MHz B125M = 125 MHz B140M = 140 MHz B160M = 160 MHz B255M = 255 MHz B510M = 510 MHz B1G = 1 GHz B1500M = 1.5 GHz B2G = 2 GHz B4G = 4 GHz In cases where the path is not available but is selected from SCPI, it generates an error - 241, "Hardware missing; Option not installed"
Dependencies	Gray out if IF Path Auto is On
Preset	Automatically selected IF path according to measurement required IFBW and available HW bandwidth
State Saved	Saved in instrument state

Measure CC

Selects the component carrier to be measured in the uplink time mask measurement.

NOTE

The parameter is only available for the Transmit On|Off Power measurement.

Remote Command	<code>[:SENSe]:PVTtime:ULINK:CCARrier CC0 ... CC15</code> <code>[:SENSe]:PVTtime:ULINK:CCARrier?</code>
Example	<code>:PVT:ULINK:CCAR CC0</code> <code>:PVT:ULINK:CCAR?</code>
Dependencies	Available only when Radio Direction is Uplink
Preset	<code>CC0</code>
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15

3.3.8.5 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs) or the values on the controls will *not* affect the Component Carriers.**

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>								
Example	<code>:RAD:STAN:PRES:FREQ:RANG FR1</code> <code>:RAD:STAN:PRES:FREQ:RANG?</code>								
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 526 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table border="1"> <thead> <tr> <th>Bandwidth</th><th>FR</th></tr> </thead> <tbody> <tr> <td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr> <tr> <td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr> <tr> <td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr> </tbody> </table> <p>When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable</p>	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:STANdard:PRESet:FRANge</code>								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press” Apply Preset (to all CCs)”.

NOTE You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "Duplex Mode" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRE:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRE:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	<code>TS38</code>
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS</code> <code> P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRE:TRAN:PER P0_5MS</code> <code>:RAD:STAN:PRE:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	<code>P5MS</code>
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
----------------	---

3 5G NR Mode

3.3 Occupied BW Measurement

Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	"DDDDDDDSUU"

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

In 5G, subcarrier spacing is governed by $2^n \times 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 531 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRE:SCS SCS30K</code> <code>:RAD:STAN:PRE:SCS?</code> <code>:RAD:STAN:PRE:SCS:AUTO 0</code> <code>:RAD:STAN:PRE:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 531
Preset	<code>SCS30K</code> <code>ON</code>
State Saved	Yes Yes
Range	<code>u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz</code> <code>Auto Man</code> Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK | FQAM16 | FQAM64 | FQAM256 | FQAM1024 | DLTm1D0T1 | DLTm1D0T2 | DLTm2 | DLTm2Q16 | DLTm2QPS | DLTm2A | DLTm2B | DLTm3D0T1 | DLTm3D0T1Q16 | DLTm3D0T1QPS | DLTm3D0T1A | DLTm3D0T1B | DLTm3D0T2 | DLTm3D0T3 | FPIBPSK | DLTm1D0T1P1 | DLTm1D0T1L2`

For selection details, see **"Available Selections" on page 533**

3 5G NR Mode

3.3 Occupied BW Measurement

	[:SENSe]:RADio:STANdard:PRESet:RBALloc?
Example	:RAD:STAN:PRES:RBAL DLTMDOT1 :RAD:STAN:PRES:RBAL?
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action "Apply Preset (to All CCs)" is executed
Dependencies	See "Available Selections" on page 533
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024				

3 5G NR Mode

3.3 Occupied BW Measurement

	FR	FR1	FR2	FR2-1	FR2-2
	QAM				
	Fuifilled	✓	✓	✓	✓
	Pi/2				
	BPSK				
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PREs:ULIN:CARR NORM</code> <code>:RAD:STAN:PREs:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PREs:DLIN:NRTM TS38</code> <code>RAD:STAN:PREs:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.

Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

3 5G NR Mode

3.3 Occupied BW Measurement

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 537</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PRESet:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN?</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 537
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLINK:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLINK:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea

State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code> <code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTRa</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:ULIN:ACH NR</code> <code>:RAD:STAN:PRES:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

3 5G NR Mode

3.3 Occupied BW Measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRESet:ULINK:CTYP PUS</code> <code>:RAD:STAN:PRESet:ULINK:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRESet:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRESet:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel

Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODe OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODe?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a

BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:
 Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.
 Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.
 Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "**Apply Preset (to All CCs)**" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
			$4.2 < f \leq 6.0$ GHz,			

1-0	Cat A MR BS, Cat B MR BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-1
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-2
	Cat A LA BS, Cat B LA BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-4
	Cat A WA BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz	Table 6.6.4.5.5-1

TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
		Table 6.7.4.5.1.1-2
		Table 6.7.4.5.1.1-3
		Table 6.7.4.5.1.1-4

3 5G NR Mode

3.3 Occupied BW Measurement

FR2	2-0	Cat B WA BS	$f \leq 1.0$ GHz	TS38.141-2	Table	Table 6.7.4.5.1.2-1
			None,			Table 6.7.4.5.1.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.2-3
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.2-4
		Cat A MR BS, Cat B MR BS	$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.2-5
			None,			Table 6.7.4.5.1.4-1
			$f \leq 1.0$ GHz,			
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-2
		Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-3a
			None,			Table 6.7.4.5.1.4-4
			$f \leq 1.0$ GHz,			
			$1.0 < f \leq 3.0$ GHz			
		Cat A LA BS, Cat B LA BS	$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-5
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-6
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-7
			None,			Table 6.7.4.5.1.5-1
			$f \leq 1.0$ GHz,			
		Cat A WA BS,	$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.5-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.5-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.5-4
			None,			Table

Cat A MR BS,	24.25 < f ≤ 29.5	v.17.9.0	6.7.3.5.2-1	6.7.4.5.2.2-1
Cat A MR BS	GHz	(2023-03)		
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat A LA BS	GHz			6.7.4.5.2.2-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.2-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.2-4
Cat B WA BS,	None,			Table
Cat B MR BS,	24.25 < f ≤ 29.5			6.7.4.5.2.3-1
Cat B MR BS	GHz			
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat B LA BS	GHz			6.7.4.5.2.3-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.3-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values		User Defined Duplex mode		
		TDD / FDD Duplex Mode				
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
Periodic Sync Src	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section ["N_Grid_Size \(Display Only\)" on page 1828](#),

$$N_{sc}^{RB} = 12$$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: Stoc	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: Stoc	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: Stoc	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - Stoc: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR	
			Offset

3 5G NR Mode

3.3 Occupied BW Measurement

Offset Freq State	Downlink	FR1	A, B	On
			C, ... , L	Off
		FR2	A	On
			B, ... , L	Off
	Uplink		A	On
			B, ... , L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 \cdot BW_{CC}$
			C, ... , L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ... , L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC}
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ... , L	0 Hz
Integ BW	Downlink		All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1:
				$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \cdot BW_{GB}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \cdot BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode

3.3 Occupied BW Measurement

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		43.5 < f ≤ 48.2	Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		52.6 < f ≤ 71.0	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

FR2	1-O	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ..., 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-O	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
			None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
		100, 400, 800, 1600, 2000 MHz	37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
			52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

3 5G NR Mode

3.3 Occupied BW Measurement

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
				All	All	-11.04 dB (= -16 + TT 4.96)

$$52.6 < f \leq 71.0$$

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

3 5G NR Mode
3.3 Occupied BW Measurement

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)	Assumed Adj Chan	
Offset Frequency Define				EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ... , L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ... , L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State			All	Auto
Res BW			All	Automatically coupled with the Res BW value under the BW menu
Video BW State			All	Auto
Video BW			All	Automatically coupled with the Video BW value under the BW menu

Offset Side		All	Both
Method	Downlink	All	Integration BW
and	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
Filter Alpha		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BType	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat B MR BS,		
			$4.2 < f \leq 6.0$,	Cat A MR BS (Low Pr),		
		1-0	$6.0 < f \leq 7.125$	Cat B MR BS (Low Pr)	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS,		
				Cat B LA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat A WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat A MR BS,	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$4.2 < f \leq 6.0$,	Cat B MR BS,		
			$6.0 < f \leq 7.125$	Cat A MR BS (Low Pr),		
				Cat B MR BS (Low Pr)	All	
				Cat A LA BS,		
				Cat B LA BS	All	

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
--------------------------	----------------------	--	--	--	--------	--------------

3 5G NR Mode

3.3 Occupied BW Measurement

	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB (= -45 + TT 1.2)
	1-O		5, ... , 100 MHz	None, $f \leq 1.0$,	All	-44 dB = (-45 + TT 1.0)
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$,	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 569
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 569
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 569
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	C, ... , L	570 0 Hz
	A, B	See "Table 1 b Offset Freq and Integ BW Offset A/B" on page 570
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 569

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub- block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
				A	B	A	B

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration		Offset	Preset Value	
Direction	FR	Bandwidth	Offset Freq	Offset Integ BW (MHz)

3 5G NR Mode

3.3 Occupied BW Measurement

(MHz)					
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
Uplink		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz			

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$N_{sc}^{RB} = 12$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(

		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-32 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
	1-0	None,	Cat A WA BS	All	$-4 + 10 \text{ LOG}($
		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-6 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-16 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-23 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
FR2	2-0	None,	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}($
		$24.25 < f \leq$	Cat B WA BS		$BW_{\text{config}})$ dBm
		29.5,	Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}($
		$37.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		43.5	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
		$43.5 < f \leq$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}($
		48.2	Cat B WA BS		$BW_{\text{config}})$ dBm
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}($
			Cat B MR BS,		$BW_{\text{config}})$ dBm
			Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		

3 5G NR Mode

3.3 Occupied BW Measurement

52.6 < f ≤ 71.0 (**)	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)
	FR2	2-C	50, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)

FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	8.2)
					-25.7 dB = (-28 + TT 2.3)
					-23.4 dB = (-26 + TT 2.6)
		100, 400, 800, 1600, 2000 (**) MHz	$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
					-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

3 5G NR Mode

3.3 Occupied BW Measurement

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 577
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 577
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 577

3 5G NR Mode

3.3 Occupied BW Measurement

Integ BW	D, ... , L	0 Hz
	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 577
Offset Side	D, ... , L	Same value as Offset C
	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 577

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			5 ≤ Wgap < 10	✓		(+)	Norm	Norm	Norm
			10 ≤ Wgap	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth ≤ Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of “Wgap < Bandwidth” and “Bandwidth ≤ Wgap”.

(++) Same as the rows of “Wgap < 5”, “5 ≤ Wgap < 10”, and “5 ≤ Wgap”.

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	= 0.5 x Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC,FR,SCS}) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration		Offset	Preset Value	
	FR	Adjust Range(GHz)			UE Power Class
Fail Mask			All	Abs AND Rel	
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-50 dBm	
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW	
Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.3 Occupied BW Measurement

D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: f ≤ 1.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			1	1			
D	✓	40			100			1	1			
E-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category B.

BS Category = Cat B WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			1	1			
D	✓	40			100			1	1			
E-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands $> 3.0 \text{ GHz}$) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

3 5G NR Mode

3.3 Occupied BW Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

B	✓		5.05		10.05		0.1		1
C	✓		10.5		40		0.1		1
D	✓		40		100		0.1		1
E-L			100		500		0.1		1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1

3 5G NR Mode

3.3 Occupied BW Measurement

D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
--------	---------	------------------	--	-----------------	--	-----------	---------

A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			1		1	
D	✓		40			100			1		1	
E-L			100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1

3 5G NR Mode

3.3 Occupied BW Measurement

D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		1	1
D		200		500		1	1
E-L		200		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.3 Occupied BW Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled

B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (3 GHz < NR bands \leq 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (4.2 GHz < NR bands \leq 6 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			50.05			0.051			2
B	✓	50.05			100.05			0.1			1
C	✓	100.05			200			0.1			1
D		200			500			0.1			1
E-L		200			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (6.0 GHz < NR bands \leq 7.125 GHz),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.3 Occupied BW Measurement

A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm (NR bands ≤ 3.0 GHz).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB”

in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”.
Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			50.05			0.051			2		
B	✓	50.05			100.05			0.1			1		
C	✓	100.5			200			0.1			1		
D		200			500			0.1			1		
E-L		200			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125$ GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			5.05			0.051			2		
B	✓	5.05			10.05			0.1			1		
C	✓	10.5			40			0.1			1		
D	✓	40			100			0.1			1		
E-L		100			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

3 5G NR Mode

3.3 Occupied BW Measurement

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-19.2 dB” is typo and is supposed to be “-19.2 dBm”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 50.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			50.05			0.051			2	
B	✓	50.05			100.05			0.1			1	
C	✓	100.5			200			0.1			1	
D		200			500			0.1			1	
E-L		200			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5 \text{ GHz}$

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
			(*)			(*)						
A		✓	0.5			x + 0.5			1	1		
B		✓	x + 0.5			x + 1500			1	1		
C-L			100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range $24.25 - 33.4 \text{ GHz}$

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5 \text{ GHz}$

Offset	Enabled		Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)	
			(*)		(*)				
A	✓		0.5		x + 0.5		1		1
B	✓		x + 0.5		x + 1500		1		1
C-L			100		500		1		1
Offset	Enabled	Limit Abs	Limit Rel		FailMask	Limit Abs2		Fail	

3 5G NR Mode

3.3 Occupied BW Measurement

												Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW (Nx)		
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1		1		
B	✓	$x + 0.5$			$x + 1500$			1		1		
C-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW (Nx)		
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1		1		
B	✓	$x + 0.5$			$y + 0.5$			1		1		
C	✓	$y + 5$			$y + 1500$			5		2		
D-L		100			500			5		2		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

3 5G NR Mode

3.3 Occupied BW Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs Carrier Allocation $BW_{\text{contiguous}}$

1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{Channel,CA}$: Aggregated BW
> 1	Non-contiguous	$BW_{Channel,block[n]}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 * RBW(A) = 0.01 * BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 * RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

3 5G NR Mode

3.3 Occupied BW Measurement

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn’t miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz	Adjust Range: $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, and $6.0 < f \leq 7.125$ GHz
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled

B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 \cdot BW_{\text{Channel,CA}}$$

$$- y = 2 \cdot BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	-1.79 dBm = -5 + TT 3.21	-1.54 dBm = -5 + TT 3.46	TBD	TBD
B_{Lim}	-9.79 dBm = -13 + TT 3.21	-9.54 dBm = -13 + TT 3.46	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW ≤ 400 MHz)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off

4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS

3 5G NR Mode

3.3 Occupied BW Measurement

1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)
1	1-O					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz	Span/2	-	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Start Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)

3 5G NR Mode
3.3 Occupied BW Measurement

4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category							
		All “Cat A” BS				All “Cat B” BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = “All Cat A BS”: Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
BS Category = “All Cat B BS”: Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to “27 GHz”)

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the “Apply Preset” button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

- Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off

3 5G NR Mode

3.3 Occupied BW Measurement

5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

(*) Range “Enabled” state					Note:
#	Adjust Limit Mask for Freq Range (GHz)				
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	
1	✓	✓	✓	✓	
2	✓	✓	✓	✓	
3	✓	✓	✓	✓	
4	✓	✓	✓	✓	
5					Never “enabled” by the “Apply Preset” button A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1, TS38.521-1)
6		✓			
7			✓		
8				✓	
9					Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~					

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005	6 GHz			1 MHz	1	5 MHz	Gaussian

3 5G NR Mode

3.3 Occupied BW Measurement

		GHz							
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no	(no

						preset)	preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no preset)	(no preset)
8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	(no preset)	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the “RB Alloc Preset” selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters
- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to **"Adjust Meas Time Length for TM" on page 3321**

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

3 5G NR Mode

3.3 Occupied BW Measurement

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

– Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2

3 5G NR Mode

3.3 Occupied BW Measurement

v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for $\pi/2$ BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),
 - Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for $\pi/2$ BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for $\pi/2$ BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399

- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0 subframe	2 subframes
	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0.9286	1.250	n/a
	FR1/FR2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

3 5G NR Mode

3.3 Occupied BW Measurement

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2-m	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2-m	
			SRS	0.0714	10.0	2-m	
			PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
		FDD	PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PUSCH	2-m	10.0	2-m	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2-m (TBD)	10.0	2-m	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

3 5G NR Mode

3.3 Occupied BW Measurement

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu s$ RMS averaging window for making the OFF power. $N = SCS/15$, where SCS is in kHz.
- Uplink: Slot length = $2 \cdot \mu$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,	-82.5 dBm / MHz = -85 + TT 2.5

3 5G NR Mode

3.3 Occupied BW Measurement

		1-0	6.0 < f ≤ 7.125 GHz	
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
FR2		2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration				Preset Value
	FR	UL ChannelType	Bandwidth	Adjust Range (GHz)	
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	-48.3 dBm = -50 + TT 1.7	
				40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-48.2 dBm = -50 + TT 1.8
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.5 dB = ±(9 + TT 1.5)	
				± 10.8 dB = ±(9 + TT 1.8)		
				40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.7 dB = ±(9 + TT 1.7)
				± 10.8 dB = ±(9 + TT 1.8)		
FR2	PUSCH	All FR2 BW	± 14 dB (TT not yet)			
Parameter	Preset Configuration				Preset Value	
	FR	UL Channel Type	Bandwidth	SCS		
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm	
				30 kHz	-4.2 dBm	
			10 MHz	15 kHz	0.4 dBm	
				30 kHz	-0.8 dBm	
				60 kHz	-1.2 dBm	
			15 MHz	15 kHz	1.4 dBm	
				30 kHz	1.2 dBm	
				60 kHz	1.0 dBm	

3 5G NR Mode

3.3 Occupied BW Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

3 5G NR Mode

3.3 Occupied BW Measurement

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
			480 kHz	
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.3.8.6 Advanced

Contains controls for setting advanced functions of the instrument. This tab does not appear in EXM, nor in VXT models M9420A/10A/11A.

Noise Floor Extension

Lets you configure **Noise Floor Extension** (NFE). All Modes that support NFE let you set it on or off. Additionally, some Modes support two “on” states for NFE, **Full** and **Adaptive**, as described below.

Adaptive Option Support

At present (Release: X-Apps 2024), support for **Adaptive** NFE is as follows:

Mode	Measurements	Supports Adaptive NFE?
BT	ACP, IBEM, IBSP	No
CQM	MON	Yes
EDGE GSM	EORF, ETSP, MON	No
EMI	APD, DAN, FSC, MON, RTSC, SCH	Yes
LTEAFDD	PVT	No
LTEATDD	PVT	No
MSR	ACP, CHP, MON, OBW, SEM, SPUR	Yes
NR5G	PVT	No
PNOISE	LPL, MON, SFR	No
SA	SAN	Yes
SRCOMMS	ACP, CHP, MON, OBW, SEM, SPUR	Yes
VMA	ACP, CHP, OBW, SEM, SPUR	Yes
WCDMA	ACP, CHP, MON, OBW, SEM, SPUR	Yes
WLAN	CHP, MON, OBW, SEM, SPUR	Yes

The menus and command options are as follows:

NFE State	Modes with Adaptive NFE	Modes without Adaptive NFE	SCPI
Off	Off	Off	See "NFE On/Off Command" on page 632
On	Full	On	
Adaptive	Adaptive	n/a	See "Adaptive NFE Command" on page 632

As shown in the table above, the **On** state (in Modes that do not support **Adaptive NFE**) matches the **Full** state in Modes that *do* support **Adaptive NFE**.

To maintain SCPI backwards compatibility, the existing command to turn NFE on or off is retained, and a new command is added to set the state to turn **AdaptiveON** or **OFF**:

- `[[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0]` is retained, with the default changed to **ON** for Modes that support **Adaptive NFE**
- `[[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0]` is added (for certain Modes), default = **ON**

When NFE is **On** or **Full**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

NFE works with any RBW, VBW, detector, any setting of **Average Type**, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme amounts of smoothing, and with the average detector, with the **Average Type** set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the **Average** detector, results are better with long sweep times and fewer trace averages. When using the **Sample** detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

Noise Floor Extension has no effect unless the RF Input is selected, so when External Mixing is selected, it does nothing.

For more details, see ["Optimal Detector & Averaging Selections" on page 633](#) and ["Recalibration of Noise Floor" on page 634](#).

Pros & Cons of Adaptive NFE

Adaptive NFE provides an alternative to fully-on or fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. **Adaptive NFE** controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those

settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the fully-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

In **Adaptive** NFE, there is not the same dramatic visual impact on the noise floor as there is in **Full** NFE. **Adaptive** NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the fully-off case; and when lots of averaging is being performed, the signal displays more like the **Full** NFE case.

Adaptive NFE is recommended for general-purpose use. For fully-ATE (automatic test equipment) applications, where possible distraction of the instrument user is not a risk, **Full** NFE is recommended.

NFE On/Off Command

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear. In those cases, the SCPI command is accepted without error, but has no effect
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed When NFE is enabled through SCPI, and a Characterize Noise Floor operation is needed, an error is entered in the system error queue
Preset	Unaffected by Mode Preset . Turned ON at startup and by Restore Mode Defaults in Modes that support Adaptive . Turned OFF at startup and by Restore Mode Defaults in Modes that do <i>not</i> support Adaptive In Modes that support Adaptive NFE, the default (preset) state of NFE is Adaptive . In Modes that do not support Adaptive NFE, the default state of NFE is Off
State Saved	No

Adaptive NFE Command

Only effective in instruments with the NFE or NF2 license installed, and in Modes that support **Adaptive** NFE. For coverage, see ["Adaptive Option Support" on page 630](#) above.

For all other cases, the SCPI command below is accepted without error, but has no effect.

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive?</code>
Example	First turn NFE on, this is Full mode <code>:CORR:NOIS:FLO ON</code> Then set it to Adaptive <code>:CORR:NOIS:FLO:ADAP ON</code>
Couplings	To maintain backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE AdaptiveOFF . To turn Adaptive on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by Mode Preset , but set to ON at startup and by Restore Mode Defaults
State Saved	No

Optimal Detector & Averaging Selections

Note that some measurements do not allow you to switch the **Detector** type (which is set by default to **Average**), so the discussion of detector types here is irrelevant for those measurements. Similarly, some measurements do not allow you to set **Average Type** (set by default to **LOG**), so that discussion here is irrelevant in those cases.

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to obtain the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when **Detector** is **Average** and **Average Type** is set to **Power (RMS)**.

For best operation, **AverageDetector** (default) and **Average Type. = Power** are recommended, as already stated. In other cases, operation is often not quite as good but still highly effective. Other **Detector** options, when available, behave as follows:

Positive Peak The noise floor is estimated based on the RBW and the duration of the bucket using

the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage

Positive Peak is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise

For pulsed-RF, **Positive Peak** can still give excellent effectiveness

FFT analysis does not work well, and does not perform NFE well, with pulsed-RF signals, so this combination is *not* recommended

Negative Peak Not very useful

Sample Works well, but never better than **Average**, because it does not smooth as well

Normal A combination of peak and negative peak behaviors, and works about as well as these

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, **Average Type = Power (RMS)** is optimal (when this option is available). When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. Using NFE with **Average Type = Log-Power (LOG)** is not synergistic, though; NFE with **Average Type = Power (RMS)** works a little better than NFE with **LOG**.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that exceeds the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Recalibration of Noise Floor

In instruments with the NF2 license installed, the calibrated noise floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. To do this, use "**Characterize Noise Floor**" on page 3526, under **System, Alignments, Advanced**. If you have not done this yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog stating:

This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week

If you cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

IF Gain

Sets the **IF Gain** function to one of:

Setting	SCPI	Comments
Auto	AUTO = ON	Auto
Low	OFF	Low Gain
	AUTO = OFF	
High	ON	High Gain
	AUTO = OFF	

This setting affects sensitivity and IF overloads. It only applies to the RF input; not to the baseband I/Q input.

Remote Command	<pre>[:SENSe]:OBWidth:IF:GAIN[:STATe] ON OFF 1 0 [:SENSe]:OBWidth:IF:GAIN[:STATe]? [:SENSe]:OBWidth:IF:GAIN:AUTO[:STATe] ON OFF 1 0 [:SENSe]:OBWidth:IF:GAIN:AUTO[:STATe]?</pre>
Example	<pre>:OBW:IF:GAIN ON :OBW:IF:GAIN? :OBW:IF:GAIN:AUTO OFF :OBW:IF:GAIN:AUTO?</pre>
Dependencies	<p>Has no effect when the U7227A USB Preamplifier is connected. This is not annotated or reflected on any control; there are no controls grayed-out nor any SCPI locked out. The instrument simply behaves as though both IF Gain is set to Low regardless of the setting on the control</p> <p>Not available in VXT models M9420A/10A/11A, EXM, or UXM</p>
Couplings	<p>Auto sets IF Gain to High (ON) under any of the following conditions:</p> <ul style="list-style-type: none"> – The input attenuator is set to 0 dB, or – The preamp is turned on and the frequency range is under 3.6 GHz <p>For other conditions, Auto sets IF Gain to Low (OFF)</p>
Preset	<pre>OFF OFF</pre>
State Saved	Saved in instrument state
Range	Low Gain High Gain

3.3.8.7 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "[Restore Defaults](#)" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTRument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code>

	<code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.3.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.3.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

NOTE

Significantly faster sweep times are available with Option FS1.

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[:SENSe] :<meas> :SWEEp:TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[:SENSe] :<meas> :SWEEp:TIME <time></code> <code>[:SENSe] :<meas> :SWEEp:TIME?</code>
Example	Channel Power measurement: <code>:CHP:SWE:TIME 25ms</code> <code>:CHP:SWE:TIME?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by Meas Method selection. Preset values are as follows: <ul style="list-style-type: none"> – IBW: 29 ms – IBWR: 108 ms – FAST 7.5 ms
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " Minimum Acquisition Time " on page 3038 is available
Couplings	Coupled to Span , RBW , VBW , and Sweep Time Rules when Sweep Time is set to Auto; Sweep Time changes when these parameters are changed When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically Calculated unless noted below WCDMA Mode

	<ul style="list-style-type: none"> Channel Power: 1.0 msOBW: 32.6 ms ACP: 29 ms
State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms Non-sweeping hardware: N/A In the ACP measurement, when Meas Method is Fast Power , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points) A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: STATus:QUESTionable:INTEgrity:UNCalibrated Auto Function
Remote Command	[:SENSe]:<meas>:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe]:<meas>:SWEep:TIME:AUTO?
Example	Channel Power measurement: :CHP:SWE:TIME:AUTO OFF :CHP:SWE:TIME:AUTO?
Preset	WCDMA Mode OFF
	All others ON

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$\sim (> \sim \text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

3 5G NR Mode

3.3 Occupied BW Measurement

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[:SENSe]:<meas>:SWEEp:ACQuisition:TIME <time></pre> <pre>[:SENSe]:<meas>:SWEEp:ACQuisition:TIME?</pre> <p><meas> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor</p>
Example	Channel Power measurement <pre>:CHP:SWE:ACQ:TIME 500 ms</pre> <pre>:CHP:SWE:ACQ:TIME?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Span , RBW , and VBW when in the Auto state When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<pre>[:SENSe]:<meas>:SWEEp:ACQuisition:TIME:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:<meas>:SWEEp:ACQuisition:TIME:AUTO?</pre> <p><meas> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor</p>
Example	Channel Power measurement: <pre>:CHP:SWE:ACQ:TIME:AUTO OFF</pre>
Preset	ON

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 642

Remote Command	<pre>:INITiate:CONTInuous OFF ON 0 1</pre>
----------------	--

	:INITiate:CONTinuous?
Example	<p>Put instrument into Single measurement operation:</p> <pre>:INIT:CONT 0</pre> <pre>:INIT:CONT OFF</pre> <p>Put instrument into Continuous measurement operation:</p> <pre>:INIT:CONT 1</pre> <pre>:INIT:CONT ON</pre>
Preset	<p>ON</p> <p>Note that :SYST:PRES sets :INIT:CONT to ON, but *RST sets :INIT:CONT to OFF</p>
State Saved	Saved in instrument state
Annunciation	<p>The Single/Continuous icon in the Meas Bar changes depending on the setting:</p> <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	<p>X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and INIT:CONT ON) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep</p>

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 3413](#) for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See ["More Information" on page 644](#)

Remote `:INITiate[:IMMEDIATE]`

Command	<code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUEStionable</code> register bit 9 (<code>INTEgrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the <code>:INIT:REST</code> command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single

sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is **k**. This **k** is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This **k** is used for comparisons with N, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, **K**, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value **K** changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSe</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>

Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUESTionable register bit 9 (INTEGRity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<p>[:SENSe] : <meas> : SWEEp : ETIMe ?</p> <p><meas> is the identifier for the current measurement; any one of CHPower- ACPower OBWidth MONitor</p>
Example	<p>Channel Power measurement</p> <p>:CHP:SWEE:ETIMe?</p>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

3.3.9.2 Sweep Config

Accesses controls that let you configure the sweep and control functions of the instrument, such as "**Sweep Time Rules**" on page 647.

Sweep Time Rules

Switches the instrument between normal and accuracy sweep states:

Accy	ACCuracy
Norm	NORMal

Setting **Auto Sweep Time** to **Accy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[:SENSe]:OBWidth:SWEp:TIME:AUTO:RULes NORMa1 ACCuracy</code> <code>[:SENSe]:OBWidth:SWEp:TIME:AUTO:RULes?</code>
Example	<code>:OBW:SWE:TIME:AUTO:RUL NORM</code> <code>:OBW:SWE:TIME:AUTO:RUL?</code>
Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9420A
Preset	NORMa1
State Saved	Saved in instrument state
Range	NORMa1 ACCuracy

Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if **Sweep** is in **Cont**, a new trace taken. If any trace is in average or hold, the averaging starts over.

Due to sweep time quantization issues, the knob and up/down keys *cannot* be used to adjust the number of points.

When in a split-screen display, each window may have its own value for points.

3 5G NR Mode

3.3 Occupied BW Measurement

When sweep **Points** is changed, an informational message "Sweep points changed, all traces cleared" is displayed, and in 5G NR Mode, **Auto Sweep Points** is set to **OFF** (0).

Remote Command	<code>[:SENSe]:OBWidth:SWEep:POINts <integer></code> <code>[:SENSe]:OBWidth:SWEep:POINts?</code>								
Example	<code>:OBW:SWE:POIN 501</code> <code>:OBW:SWE:POIN?</code>								
Dependencies	Not available when Signal ID is set to On in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in Modes that do not support Swept								
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> – All trace data is erased – Any traces with Update Off will also go to Display Off Sweep time is re-quantized – Any limit lines that are on will be updated – If averaging/hold is on, averaging/hold starts over – Auto Sweep Points is set to OFF (5G NR Mode only) <p>The resolution of setting the sweep time depends on the number of points selected</p>								
Preset	<table> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>MSR, LTEAFDD, LTEATDD</td><td>2001</td></tr> <tr> <td>5G NR</td><td>Automatically calculated</td></tr> <tr> <td>All Others</td><td>1001</td></tr> </tbody> </table>	Mode	Value	MSR, LTEAFDD, LTEATDD	2001	5G NR	Automatically calculated	All Others	1001
Mode	Value								
MSR, LTEAFDD, LTEATDD	2001								
5G NR	Automatically calculated								
All Others	1001								
State Saved	Saved in instrument state								
Min	101								
Max	20001								
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation								

Auto Sweep Points

When **ON**, the instrument determines the points using the following calculation formula.

$$\# \text{ points} = \text{ceil}(\text{Span} / (\text{Rbw} * 1\text{e}3)) * 1000 + 1$$

Where $\text{ceil}(x)$ returns the smallest possible integer value that is greater than or equal to x .

Remote Command	<code>[:SENSe]:OBWidth:SWEep:POINts:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:OBWidth:SWEep:POINts:AUTO[:STATe]?</code>
Example	<code>:OBW:SWE:POIN:AUTO 0</code> <code>:OBW:SWE:POIN:AUTO?</code>
Dependencies	Available only in 5GNR Mode
Preset	ON
State Saved	Yes
Range	OFF ON

IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[:SENSe]:SWEep:IF:DITHer OFF ON 0 1</code> <code>[:SENSe]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	OFF
State Saved	Saved in instrument state

Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[:SENSe]:SWEep:IMAGeprot OFF ON 0 1</code> <code>[:SENSe]:SWEep:IMAGeprot?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	ON
State Saved	Saved in instrument state

3.3.10 Trace


Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces.

The "Trace Control" on page 3047 tab of this menu contains radio-button selections for the trace type (Clear/Write, Trace Average, Max Hold, Min Hold) and View/Blank setting for the selected trace.

A trace is a series of data points, each having an x and a y value. The x value is frequency (or time, in zero span) and the y value is amplitude. Each data point is referred to as a *trace point*. In any given trace, trace point 0 is the first point, and trace point (*sweep_points* – 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is *bucket*. A bucket is the frequency span of a trace point, equal to the point spacing. For swept analysis, the y value in each bucket is measured while the instrument is sweeping across the bucket. The selected detector determines how it is measured.

When in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true on multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

Invalid Data Indicator

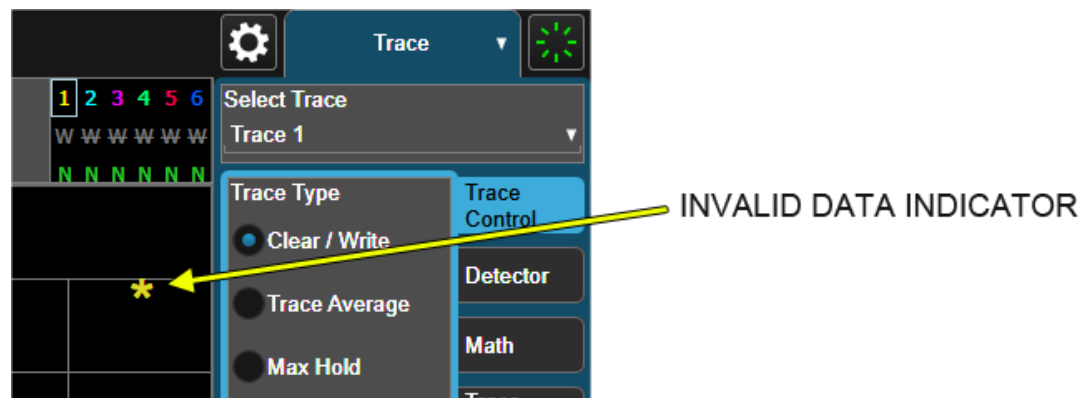

The Invalid Data Indicator is displayed whenever the data on the display does not match the settings of the instrument. The most common example of this is when instrument settings have changed in the time since the data in the traces on the display was taken. This means that the screen annotation cannot be guaranteed to match the trace data. For example, if you change **Center Frequency**, the Invalid Data Indicator will display until the trace has been retaken.

If any Trace is in View mode (displaying but not updating) and instrument settings are changed, the Invalid Data Indicator will display as long as that trace remains in View. Traces that are blanked do not turn on the Invalid Data Indicator.

Not all instrument settings require display of the invalid data indicator when they change; only changes that require a new acquisition will cause it to display. For example, changing the Y-Axis scale of the instrument does not cause the invalid data indicator to display, unless the attenuation changes.

The Invalid Data Indicator is also turned on:


- When the counter is turned on, until the completion of the first count
- When a trace is imported from mass storage and the trace's parameters do not match the current instrument settings
- When a trace is sent to the instrument from a remote interface (since there is no way to know if its settings match)

NOTE

The Invalid Data Indicator has an associated status bit that can be checked at any time to determine whether the indicator is on.

Trace right-click menu


If you right-click on a trace (or touch and hold a trace and wait for the circle to close) you will see the Trace Right-Click Menu:

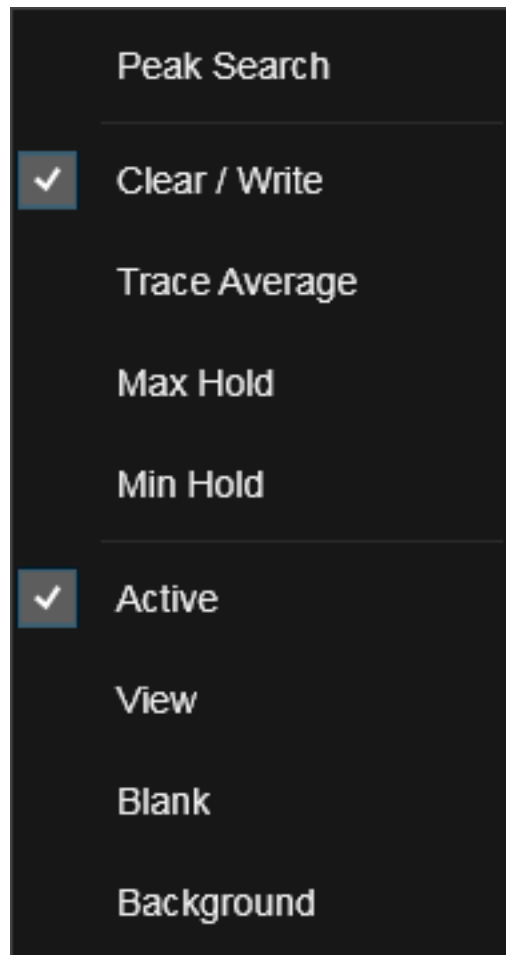

If you now tap or click on one of the items in this menu, the instrument will perform the corresponding function. **Peak Search** finds the highest peak on the selected Trace. **Clear/Write**, **Trace Average**, **Max Hold** and **Min Hold** set the "Trace Type" on page 3048. **Active**, **View**, **Blank**, and **Background** set the "View/Blank" on page 3053 type.

Waterfall Window

If you right-click on the trace (or touch and hold the trace and wait for the circle to close) in the **Waterfall** window (for example, in the Spectrogram View) you will see the Waterfall Trace Right-Click Menu:

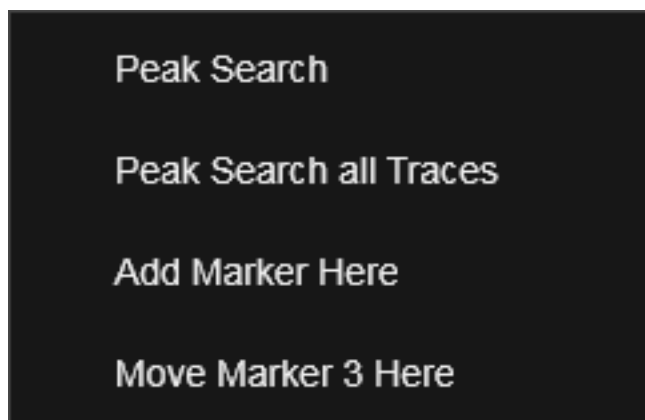

In this menu, **Peak Search** works as above. **Peak Search all Traces** finds the highest peak in the Waterfall window. **Add Marker Here** takes the lowest numbered Marker that is currently Off and turns it On as a **Normal** marker in the Waterfall window at the point where you right-clicked (or touched-and-held). **Move Marker n Here** moves the currently selected Marker to the point in the Waterfall window where you right-clicked (or touched-and-held).


Trace Update Indicator

Trace updates can take one of two forms:

1. The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace
2. The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This will be the case for slow sweeps, multi-chunk FFTs, gated sweeps, etc.


In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written. The indicator

is a green caret (^) , which moves across the bottom of the graticule showing the current trace point.



Trace Annunciator Panel

This panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel, as shown below:

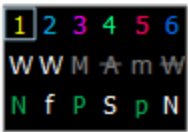

Top Line

On the top line, each trace number is shown, in the trace color. A box is drawn around the currently selected trace.

Middle Line

Below each trace number, is a letter signifying the trace type for that trace number, where

W	Clear/Write
A	Trace Average
M	Max Hold
m	Min Hold

If the letter is white, it means the trace is being updated (**Update = ON**); if the letter is dimmed , it means the trace is not being updated (**Update = OFF**). A strikethrough indicates that the trace is blanked (**Display = OFF**). Note that it is possible for a trace to be updating *and* blanked, which is useful if the trace is a trace math component.

Bottom Line

The third line shows the detector type for each trace, or, if trace math is on for that trace, it shows “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the instrument hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are

N	Normal
A	Average
P	peak

3 5G NR Mode
3.3 Occupied BW Measurement

P	negative peak
S	Sample
Q	Quasi Peak
E	EMI Average
R	RMS Average
f	math function

If the letter is green, the detector is in Auto. If white, the detector has been manually selected.

In the example above, the panel is indicating the following:

- Trace 1: Visible, being updated, in Clear/Write, with Normal detector auto selected
- Trace 2: Visible, being updated, in Clear/Write, being written to with a math function
- Trace 3: Visible, not updating, data was taken in Max Hold, with the peak detector auto selected
- Trace 4: Blanked, not updating, data was taken with Averaging turned on, Sample detector manually selected
- Trace 5: Visible, not updating, data was taken in Min Hold with Negative Peak detector auto selected
- Trace 6: Blanked, not updating, in Clear/Write, with Normal detector manually selected

Trace Annotation

When **Trace Annotation** (see **Display**) is **ON**, each non-blanked trace is labeled on the trace with the detector used to take it, unless a Trace Math function is on for that trace, in which case it is labeled with the "Math Function" on page 2604.

The detector labels are:

NORM	Normal
PEAK	Peak
SAMP	Sample
NPEAK	Negative Peak
RMS	Average detector with Power Average (RMS)
LG AVG	Average detector with Log-Pwr Average
VAVG	Average detector with Voltage Average
QPEAK	Quasi Peak

EMI AVG	EMI Average
RMS AVG	RMS Average

The trace math labels are:

PDIF	Power Difference
PSUM	Power Sum
LOFF	Log Offset
LDIF	Log Difference

3.3.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none">– In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View– When you turn on Image Suppress, Update turns off for all traces except the selected trace For the ACP measurement, when Meas Method is RBW , FAST or FPOwer , Select Trace is disabled
Preset	Trace 1
State Saved	Yes

3.3.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the ["View/Blank" on page 3053](#) control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITe	<code>:TRAC2:TYPE WRIT</code>	See: "Clear/Write" on page 660
Trace Average	AVERAge	<code>:TRAC2:TYPE AVER</code>	See: "Trace Average" on page 660
Maximum Hold	MAXHold	<code>:TRAC3:TYPE MAXH</code>	See: "Max Hold" on page 661
Minimum Hold	MINHold	<code>:TRAC5:TYPE MINH</code>	See: "Min Hold" on page 661

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the ["View/Blank" on page 3053](#) state must be set to **Active** (**Update**: **ON**, **Display**: **ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: ["Trace Mode Backwards Compatibility Commands" on page 658](#)

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe AVERAge MAXHold MINHold :TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:TYPE WRITe AVERAge MAXHold MINHold :TRACe[1] 2 3:<meas>:TYPE?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT :TRAC:TYPE?</pre>
Couplings	<p>Selecting a Trace Type (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to Active (Update: ON, Display: OFF), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[:SENSe]:<meas>:DETECTOR:AUTO?</code>), Detector (<code>[:SENSe]:<meas>:DETECTOR[:FUNCTION]?</code>) switches aligning with the switch of this parameter: "NORMAL" with WRITe (Clear Write), "AVERAge" with AVERAge, "POSitive (peak)" with MAXHold, and "NEGative (peak)" with MINHold</p>

Preset	Swept SA and Monitor Spectrum: WRITe All other measurements: AVERage Following Preset , all traces are cleared (all trace points set to mintracevalue)
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under **"View/Blank"** on page 3053.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRACe:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[:SENSe]:AVERage[:STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	WRITe
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	:TRACe[1] 2 ... 6:MODE WRITe MAXHold MINHold VIEW BLANK :TRACe[1] 2 ... 6:MODE?
Backwards Compatibility Notes	The legacy :TRACe:MODE command is retained for backwards compatibility. In conjunction with the legacy :AVERage command, it works as follows: <ul style="list-style-type: none"> – :AVERage ON OFF sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See

the [:SENSe]:AVERage[:STATe] command description below

- :TRACe:MODE WRITe sets :TRACe:TYPE WRITe (Clear/Write) unless average is true, in which case it sets it to :TRACe:TYPE AVERage. It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace
- :TRACe:MODE MAXHold sets :TRACe:TYPE MAXHold (Max Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace
- :TRACe:MODE MINHold sets :TRACe:TYPE MINHold (Min Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace
- :TRACe:MODE VIEW sets :TRACe:UPDate OFF, :TRACe:DISPlay ON, for the selected trace
- :TRACe:MODE BLANK sets :TRACe:UPDate OFF, :TRACe:DISPlay OFF, for the selected trace

The query returns the same value as :TRACe:TYPE?, meaning that if you set :TRACe:MODE:VIEW or :TRACe:MODE:BLANK, the query response will not be what you sent

:TRACe[n]:MODE was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new :TRACe:TYPE command should be used in the future, but :TRACe:MODE is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	OFF
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	[:SENSe]:AVERage[:STATe] ON OFF 1 0 [:SENSe]:AVERage[:STATe]?
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command [:SENSe]:AVERage[:STATe] ON OFF 1 0 was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy</p>

variable, turned on and off and queried by the legacy command `[:SENSe]:AVERage[:STATe] OFF|ON|0|1`. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old `:TRAC:MODE` command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending **:TRAC:TYPE MAXH** for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending **:TRAC:TYPE MINH** for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 3048 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold


View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

Active	Update and Display both ON
View	Update OFF ; Display ON
Blank	Update OFF ; Display OFF
Background	Update ON , Display OFF
	Allows a trace to be blanked <i>and</i> continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace

annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

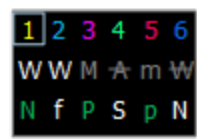

See: ["More Information" on page 664](#)

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 663 and "Trace Display State On/Off" on page 664 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[:SENS] :DET :TRAC</code>) puts the trace in Active (UpdateON and DisplayON), even if that detector was already selected</p> <p>Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (UpdateON and DisplayON), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange</p>

Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <pre>:TRAC2:DISP 1</pre> <p>Blank trace 3:</p> <pre>:TRAC3:DISP 3</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their

horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

3.3.10.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 2610 controls.

- See "How trace math is processed" on page 669

Remote Command	<p>For option details, see "Trace Math Options" on page 667</p> <p>For Swept SA Measurement (in SA Mode):</p> <pre>:CALCulate:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate:MATH? <trace_num></pre> <p>where <trace_num> is any one of:</p> <pre>TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:CALCulate:<meas>:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate[:<meas>]:MATH? <trace_num></pre> <p>where:</p> <p><meas> is the identifier for the current measurement, and</p> <p><trace_num> is any one of:</p> <pre>TRACe1 TRACe2 TRACe3</pre> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<pre>:CALC:MATH TRACe3,PDIF,TRACe1,TRACe2,0,0</pre> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p>

	<p>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</p> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <p>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</p> <p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: TRACE1 ... TRACE6 - Set 2 defines the “function”: PDIFference PSUM LOFFset LDIFference OFF - Set 3 is a “trace operand” (1): TRACE1 ... TRACE6 - Set 4 is a “trace operand” (2): TRACE1 ... TRACE6 - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if Normalize is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p>OFF,TRACE5,TRACE6,0,0 OFF,TRACE6,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0 OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE4,0,0 OFF,TRACE4,TRACE5,0,0</p>

	For all other measurements: <code>OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0</code>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

`DestinationTrace = 10 log(10(1/10)(FirstTrace) - 10(1/10)(SecondTrace))`

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

DestinationTrace = 10 log(10(1/10)(FirstTrace) + 10(1/10)(SecondTrace))

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

DestinationTrace = FirstTrace + Offset

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the

selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at –5 dBm, and the reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

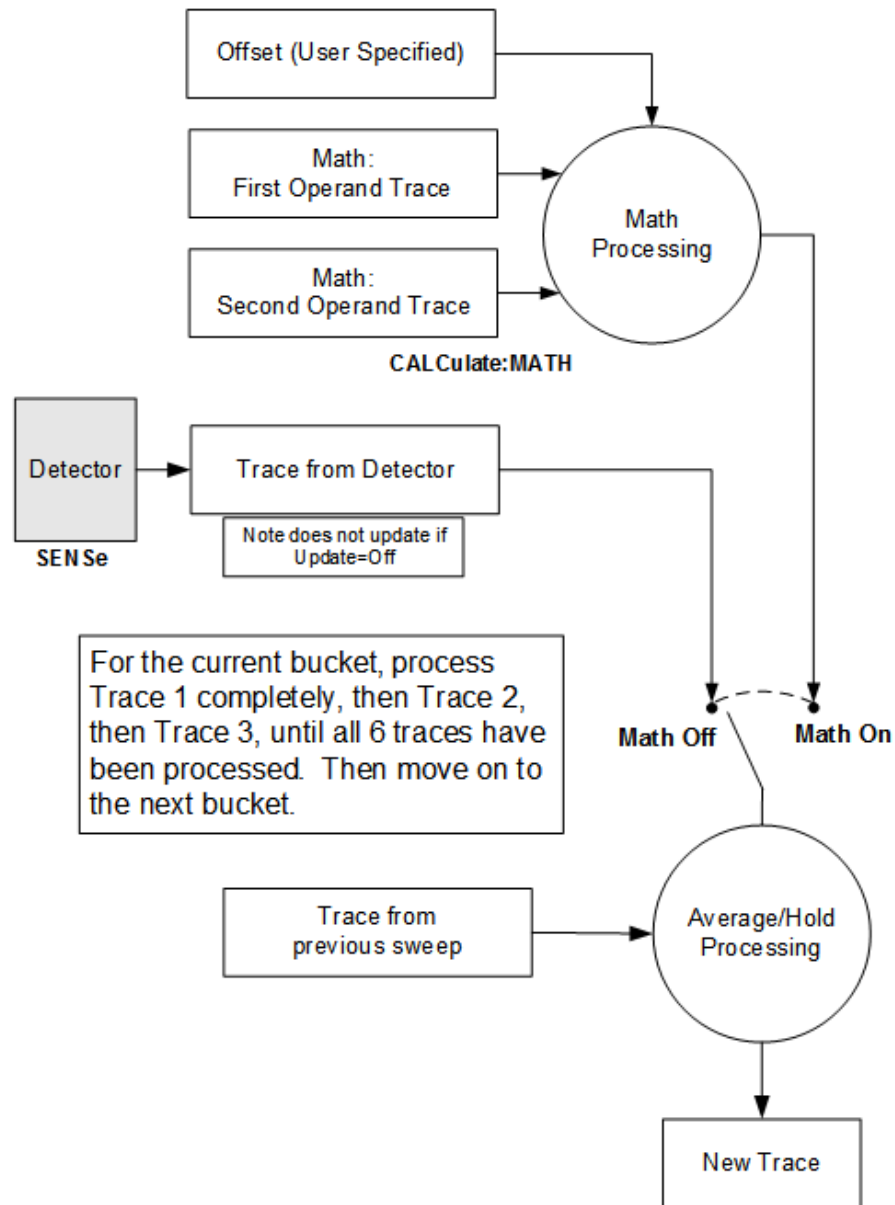

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have lower numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <p>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</p> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <p>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</p>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.3.10.4 Detector

Lets you select and configure detectors for the specified trace.

Detector

Selects a detector to be used by the instrument for the current measurement. The following selections are available:

Option	Behavior
<code>AUTO</code>	The detector selected depends on marker functions, trace functions, average type,

Option	Behavior
	and the trace averaging function For details, see "Detector Select Auto/Man" on page 674
NORMal	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
AVERage	The detector determines the average of the signal within the sweep points, using RMS averaging
POSitive	The detector determines the maximum of the signal within the sweep points
Peak	
SAMPle	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
NEGative	The detector determines the minimum of the signal within the sweep points
Peak	
RMS	Equivalent to AVERage

Because they may not find a spectral component's true peak, neither AVERage nor SAMPle detectors measure amplitudes of CW signals as accurately as POSitivePeak or NORMal, but they do measure noise without the biases of peak detection.

Remote Command	<code>[:SENSe]:OBWidth:DETEctor[:FUNCTION] NORMal AVERage POSitive SAMPle NEGative RMS</code> <code>[:SENSe]:OBWidth:DETEctor[:FUNCTION]?</code>												
Example	<code>:OBW:DET NORM</code> <code>:OBW:DET?</code> Set the detector to Average . Average uses RMS averaging, so this is equivalent to selecting an RMS detector: <code>:OBW:DET RMS</code>												
Notes	The query returns a name that corresponds to the detector type, as follows The RMS selection sets the detector type to AVERage , with RMS averaging. Therefore, if RMS had been selected, the query returns AVER <table><tr><th>String Returned</th><th>Definition</th></tr><tr><td>NORM</td><td>Normal</td></tr><tr><td>AVER</td><td>Average (RMS)</td></tr><tr><td>POS</td><td>Peak</td></tr><tr><td>SAMP</td><td>Sample</td></tr><tr><td>NEG</td><td>Negative Peak</td></tr></table>	String Returned	Definition	NORM	Normal	AVER	Average (RMS)	POS	Peak	SAMP	Sample	NEG	Negative Peak
String Returned	Definition												
NORM	Normal												
AVER	Average (RMS)												
POS	Peak												
SAMP	Sample												
NEG	Negative Peak												
Couplings	When "Detector Select Auto/Man" on page 674 is ON , the values returned by the query depend on the setting of "Trace Type" on page 3048 as follows:												

	Trace Type	Query Returns:
	WRITe	NORMa1
	AVERAge	AVERAge
	MAXHold	POSitive
	MINHold	NEGative
Preset	AVERAge	
State Saved	Saved in instrument state	
Range	NORMa1 AVERAge POSitive SAMPlE NEGative RMS	

Detector Select Auto/Man

Sets the Detector mode to **Auto** (ON) or **Man** (OFF). In **Auto**, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you select any "Detector" on page 672 manually, this setting reverts automatically to **Man** (manual).

Remote Command	[:SENSe]:OBWidth:DETECTOR:AUTO ON OFF 1 0 [:SENSe]:OBWidth:DETECTOR:AUTO?	
Example	:OBW:DET:AUTO ON :OBW:DET:AUTO?	
Couplings	When ON, the query "Detector" on page 672 returns values that depend on the setting of "Trace Type" on page 3048 as follows:	
	Trace Type	Query Returns:
	WRITe	NORMa1
	AVERAge	AVERAge
	MAXHold	POSitive
	MINHold	NEGative
Preset	ON	
State Saved	Yes	

3.3.10.5 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the "To Trace" on page 2612 when a "Copy" on page 2612 or "Exchange" on page 2613 is performed

Preset	1
--------	---

To Trace

Selects the trace to be copied from or exchanged with the "From Trace" on page 2612 when a "Copy" on page 2612 or "Exchange" on page 2613 is performed

Preset	2
--------	---

Copy

Executes a Trace Copy based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The copy operation is from the From Trace to the To Trace. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>:TRACE:COPY TRACE1 ... TRACE6, TRACE1 ... TRACE6</code></p> <p>For all other measurements:</p> <p><code>:TRACe:<meas>:COPY TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code></p> <p>where <code><meas></code> is the identifier for the current measurement</p> <p>Note that the format of the <code>TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <p><code>:TRAC:COPY TRACE1,TRACE3</code></p>
Notes	<p>The command is of the form:</p> <p><code>:TRACe:COPY <source_trace>,<dest_trace></code></p>
Dependencies	<p>When Signal ID is on, this key is grayed-out</p>
Couplings	<p>The destination trace is put in View (Update = Off, Display = On) after the copy</p>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>TRACE1, TRACE2</code></p> <p>For all other measurements:</p> <p><code>TRACe1, TRACe2</code></p>

Exchange

Executes a Trace Exchange based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the :TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON:</p> <pre>:TRAC:EXCH TRACE1,TRACE2</pre>
Notes	<p>The command is of the form:</p> <pre>:TRACe:EXCHange <trace_1>,<trace_2></pre>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<pre>:TRACe[:<meas>]:PRESet:ALL</pre>
Example	<pre>:TRAC:PRE:ALL</pre>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads **mintracevalue** into all of the points for all traces, except traces in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	<pre>:TRACe[:<meas>]:CLEar:ALL</pre>
Example	<pre>:TRAC:CLE:ALL</pre>
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
From Trace		Trace 1	
To Trace		Trace 2	
	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command	:TRACe:<meas>:PRESet:EIRP
Example	For OBW Meas: :TRAC:OBW:PRES:EIRP

3.3.10.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace’s scalar results are displayed in the **Metrics** window, and retrieved by sending a :READ or :FETCh query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCulate:<meas>:MTRace? <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?

Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.4 ACP Measurement

ACP is a measurement of the amount of interference, or power, in an adjacent frequency channel. The results are displayed as a bar graph or as spectrum data, with measurement data at specified offsets.

Measurement Commands

The general functionality of ["CONFigure" on page 4138](#), ["INITiate" on page 4139](#), ["FETCh" on page 4139](#), ["MEASure" on page 4141](#), and ["READ" on page 4140](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:ACPower</code>	Initiates a trigger cycle for the ACPower measurement, but does not return any data. You must then use <code>:FETC:ACP[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings Returns the long form name of current measurement, in this case, ACPower
<code>:CONFigure:ACPower</code>	Selects ACP measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 830
<code>:CONFigure:ACPower:NDEFault</code>	Selects ACP measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:ACPower?</code>	Retrieves the data specified by n
<code>:MEASure:ACPower[n]?</code>	Switches to ACP measurement, restores default values, starts the measurement, then retrieves the data specified by n
<code>:READ:ACPower[n]?</code>	Starts the measurement, then retrieves the data specified by n

Remote Command Results

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value **n**.

n	Results Returned
1, or not specified	Dependent on Mode , "Meas Method" on page 768 , "Power Ref" on page 2240 , and "Measurement Type" on page 2240 See "Measurement Results for n = 1, or no Index Specified" on page 682
2	Dependent on "Measurement Type" on page 2240 . See "Measurement Results for n = 2" on page 685
3	Dependent on Mode and "Measurement Type" on page 2240 . See "Measurement Results for n = 3" on page 685

n	Results Returned																				
	686																				
4	Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 1																				
5	Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 2																				
6	Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 3																				
7	Dependent on Mode and "Measurement Type" on page 2240. See "Measurement Results for n = 7" on page 687																				
8	Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes Dependent on "Measurement Type" on page 2240, "PSD Unit" on page 2247, and "Power Ref" on page 2240. See "Measurement Results for n = 8" on page 688																				
9	Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes Returns scalar pass/fail values (0 = passed, or 1 = failed) for the trace specified by "Measure Trace" on page 2614, determined by comparing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies																				
<table><tr><th>#</th><th>Item</th></tr><tr><td>1</td><td>Inner Lower offset A - relative limit result</td></tr><tr><td>2</td><td>Inner Lower offset A - absolute limit result</td></tr><tr><td>3</td><td>Inner Upper offset A - relative limit result</td></tr><tr><td>4</td><td>Inner Upper offset A - absolute limit result</td></tr><tr><td>5</td><td>Inner Lower offset B - relative limit result</td></tr><tr><td>6</td><td>Inner Lower offset B - absolute limit result</td></tr><tr><td>7</td><td>Inner Upper offset B - relative limit result</td></tr><tr><td>8</td><td>Inner Upper offset B - absolute limit result</td></tr><tr><td>...</td><td>...</td></tr></table>		#	Item	1	Inner Lower offset A - relative limit result	2	Inner Lower offset A - absolute limit result	3	Inner Upper offset A - relative limit result	4	Inner Upper offset A - absolute limit result	5	Inner Lower offset B - relative limit result	6	Inner Lower offset B - absolute limit result	7	Inner Upper offset B - relative limit result	8	Inner Upper offset B - absolute limit result
#	Item																				
1	Inner Lower offset A - relative limit result																				
2	Inner Lower offset A - absolute limit result																				
3	Inner Upper offset A - relative limit result																				
4	Inner Upper offset A - absolute limit result																				
5	Inner Lower offset B - relative limit result																				
6	Inner Lower offset B - absolute limit result																				
7	Inner Upper offset B - relative limit result																				
8	Inner Upper offset B - absolute limit result																				
...	...																				
	When "Max Num of Offsets" on page 826 is 6, returns 24 results (Offset A-F: 24 = 4*6) and when set to 12, returns 48 results (Offset A-L: 48 = 4 * 12)																				
10	Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes Returns scalar values of offset results for the trace specified by "Measure Trace" on page 2614 Numbers returned in this trace are 10 x the actual measured offsets. Note that upper and lower sides of an offset are returned separately. For example, when only outer offset A is measured with offset side both, 10 x 2 = 20 values are returned In the table below, f is the Number of Offsets. See "Max Num of Offsets" on page 826																				
<table><tr><th>#</th><th>Measurement Type</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td></td><td>Inner = 1 or Outer = 2</td><td></td></tr><tr><td>2</td><td></td><td>Offset A~L. (A = 1, B = 2, ... L = 12)</td><td></td></tr><tr><td>3</td><td></td><td>Offset Side. Lower = 1 or Upper = 2</td><td></td></tr></table>		#	Measurement Type	Item	Unit, if any	1		Inner = 1 or Outer = 2		2		Offset A~L. (A = 1, B = 2, ... L = 12)		3		Offset Side. Lower = 1 or Upper = 2					
#	Measurement Type	Item	Unit, if any																		
1		Inner = 1 or Outer = 2																			
2		Offset A~L. (A = 1, B = 2, ... L = 12)																			
3		Offset Side. Lower = 1 or Upper = 2																			

3 5G NR Mode

3.4 ACP Measurement

n	Results Returned			
	#	Measurement Type	Item	Unit, if any
	4	TPRef	Relative power or	dBc
		PSDRef	Relative PSD	dB
	5	TPRef	Absolute power	dBm
		PSDRef	Absolute PSD	dBm/Hz, dBm/MHz*
	6	TPRef	Reference power	dBm
		PSDRef	Reference PSD	dBm/Hz, dBm/MHz*
	7		Reference Index 1	
	8		Reference Index 2	
	9		0 (Reserved)	
	10		0 (Reserved)	
	...			
	10(f - 1) + 1		Inner = 1 or Outer = 2	
	10(f - 1) + 2		Offset A~L. (A = 1, B = 2, ... L = 12)	
	10(f - 1) + 3		Offset Side. Lower = 1 or Upper = 2	
	10(f - 1) + 4	TPRef	Relative power	dBc
		PSDRef	Relative PSD	dB
	10(f - 1) + 5	TPRef	Absolute power	dBm
		PSDRef	Absolute PSD	dBm/Hz, dBm/MHz*
	10(f - 1) + 6	TPRef	Reference power	dBm
		PSDRef	Reference PSD	dBm/Hz, dBm/MHz*
	10(f - 1) + 7		Reference Index 1	
	10(f - 1) + 8		Reference Index 2	
	10(f - 1) + 9		0 (Reserved)	
	10(f - 1) + 10		0 (Reserved)	

"Measurement Type" on page 2240 determines which type of power result is returned: Total Pwr Ref ([TPRef](#)) or PSD Ref ([PSDRef](#))

*For PSD results, the unit is determined by "PSD Unit" on page 2247: [DBMHZ](#) or [DBMMHZ](#)

If any result is not available, 9.91E+37 ([NaN](#)) is returned

11 Returns Marker Table data as a series of comma separated values in the following form:

<Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved>

Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

3.4.1 Measurement Results for n = 1, or no Index Specified

Mode = SA, Radio Std = None, Number of carriers = 1, Only Offset A is On

Returns 3 comma-separated values that correspond to:

#	Item	Unit, if any
1	Reference carrier power	
2	Lower-adjacent channel power of the trace specified by "Measure Trace" on page 2614	dBc
3	Upper-adjacent channel power of the trace specified by "Measure Trace" on page 2614	dBc

The values are in the current Y Axis Unit of the instrument

Meas Method = FAST

See also "Meas Method" on page 768

For the trace specified by "Measure Trace" on page 2614, returns 5 comma-separated scalar results in the following order:

#	Item	Result	Unit, if any
1	Reference carrier	Absolute power	dBm
2	Lower offset A	Absolute power	dBm
3	Upper offset A	Absolute power	dBm
4	Lower offset B	Absolute power	dBm
5	Upper offset B	Absolute power	dBm

Measurement Type = Total Power Reference

Conditions	Results
Mode: LTEAFDD, LTEATDD, 5GNR, MSR	For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:
"Power Ref" on page 2240:	
LRCarriers	
LRSubblocks	
MPCSubblock	
MINSubbloc	
For all other Power Ref settings, see All other Modes row below	

3 5G NR Mode

3.4 ACP Measurement

Conditions	Results		
	#	Item	Unit, if any
	5	Lower offset A - relative power	dB
	6	Lower offset A - absolute power	dBm
	7	Upper offset A - relative power	dB
	8	Upper offset A - absolute power	dBm
	9	Lower offset B - relative power	dB
	10	Lower offset B - absolute power	dBm
	11	Upper offset B - relative power	dB
	12	Upper offset B - absolute power	dBm
	
	When "Max Num of Offsets" on page 826 is 6, returns 28 results (Offset A-F: $28 = 4 + 4 \times 6$) and when set to 12, returns 52 results (Offset A-L: $52 = 4 + 4 \times 12$)		
	If any result is not available, -999.0 is returned		
	This trace includes only outer offset results and their reference value(s)		
	For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:		
All other Modes and Power Ref settings	#	Item	Unit, if any
	1	0.0	
	2	Total carrier power	dBm
	3	0.0	
	4	Reference power	dBm
	5	Lower offset A - relative power	dB
	6	Lower offset A - absolute power	dBm
	7	Upper offset A - relative power	dB
	8	Upper offset A - absolute power	dBm
	9	Lower offset B - relative power	dB
	10	Lower offset B - absolute power	dBm
	11	Upper offset B - relative power	dB
	12	Upper offset B - absolute power	dBm
	
	When "Max Num of Offsets" on page 826 is 6, returns 28 results (Offset A-F: $28 = 4 + 4 \times 6$) and when set to 12, returns 52 results (Offset A-L: $52 = 4 + 4 \times 12$)		
	If any result is not available, -999.0 is returned		
	For SA Mode, the values are in the current Y Axis Unit of the instrument		

Measurement Type = Power Spectral Density Reference

Conditions	Results																																							
Mode: LTEAFDD, LTEATDD, 5GNR, MSR "Power Ref" on page 2240: LRCarriers LRSubblocks MPCSubblock MINSubblock	<p>For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:</p> <table><tr><th>#</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td>0.0</td><td></td></tr><tr><td>2</td><td>Total carrier power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>3</td><td>Left reference power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>4</td><td>Right reference power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>5</td><td>Lower offset A - relative power</td><td>dB</td></tr><tr><td>6</td><td>Lower offset A - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>7</td><td>Upper offset A - relative power</td><td>dB</td></tr><tr><td>8</td><td>Upper offset A - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>9</td><td>Lower offset B - relative power</td><td>dB</td></tr><tr><td>10</td><td>Lower offset B - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>11</td><td>Upper offset B - relative power</td><td>dB</td></tr><tr><td>12</td><td>Upper offset B - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr></table> <p>When "Max Num of Offsets" on page 826 is 6, returns 28 results (Offset A-F: $28 = 4 + 4*6$) and when set to 12, returns 52 results (Offset A-L: $52 = 4 + 4 * 12$)</p> <p>*The unit is determined by "PSD Unit" on page 2247: DBMHZ or DBMMHZ</p> <p>If any result is not available, -999.0 is returned</p> <p>This trace includes only outer offset results and their reference value(s)</p>	#	Item	Unit, if any	1	0.0		2	Total carrier power	dBm/Hz or dBm/MHz*	3	Left reference power	dBm/Hz or dBm/MHz*	4	Right reference power	dBm/Hz or dBm/MHz*	5	Lower offset A - relative power	dB	6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*	7	Upper offset A - relative power	dB	8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*	9	Lower offset B - relative power	dB	10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*	11	Upper offset B - relative power	dB	12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*
#	Item	Unit, if any																																						
1	0.0																																							
2	Total carrier power	dBm/Hz or dBm/MHz*																																						
3	Left reference power	dBm/Hz or dBm/MHz*																																						
4	Right reference power	dBm/Hz or dBm/MHz*																																						
5	Lower offset A - relative power	dB																																						
6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*																																						
7	Upper offset A - relative power	dB																																						
8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*																																						
9	Lower offset B - relative power	dB																																						
10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*																																						
11	Upper offset B - relative power	dB																																						
12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*																																						
All other Modes and Power Ref settings	<p>For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:</p> <table><tr><th>#</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td>0.0</td><td></td></tr><tr><td>2</td><td>Total carrier power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>3</td><td>0.0</td><td></td></tr><tr><td>4</td><td>Reference power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>5</td><td>Lower offset A - relative power</td><td>dB</td></tr><tr><td>6</td><td>Lower offset A - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>7</td><td>Upper offset A - relative power</td><td>dB</td></tr><tr><td>8</td><td>Upper offset A - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr><tr><td>9</td><td>Lower offset B - relative power</td><td>dB</td></tr><tr><td>10</td><td>Lower offset B - absolute power</td><td>dBm/Hz or dBm/MHz*</td></tr></table>	#	Item	Unit, if any	1	0.0		2	Total carrier power	dBm/Hz or dBm/MHz*	3	0.0		4	Reference power	dBm/Hz or dBm/MHz*	5	Lower offset A - relative power	dB	6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*	7	Upper offset A - relative power	dB	8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*	9	Lower offset B - relative power	dB	10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*						
#	Item	Unit, if any																																						
1	0.0																																							
2	Total carrier power	dBm/Hz or dBm/MHz*																																						
3	0.0																																							
4	Reference power	dBm/Hz or dBm/MHz*																																						
5	Lower offset A - relative power	dB																																						
6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*																																						
7	Upper offset A - relative power	dB																																						
8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*																																						
9	Lower offset B - relative power	dB																																						
10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*																																						

Conditions	Results		
	#	Item	Unit, if any
	11	Upper offset B - relative power	dB
	12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*

<p>When "Max Num of Offsets" on page 826 is 6, returns 28 results (Offset A-F: $28 = 4 + 4 \times 6$) and when set to 12, returns 52 results (Offset A-L: $52 = 4 + 4 \times 12$)</p> <p>*The unit is determined by "PSD Unit" on page 2247: DBMHZ or DBMMHZ</p> <p>If any result is not available, -999.0 is returned</p> <p>For SA Mode, the values are in the current Y Axis Unit of the instrument</p>			

3.4.2 Measurement Results for n = 2

- For SA Mode, the values are in the current Y Axis Unit of the instrument
- For MSR, LTE Advanced FDD/TDD, and 5G NR Modes, this trace includes only outer offset results and their reference value(s)

Measurement Type = Total power reference

For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:

#	Item	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm
...
23	Channel (12)	Relative power	dB
24	Channel (12)	Absolute power	dBm
25	Lower offset A	Relative power	dB
26	Lower offset A	Absolute power	dBm
27	Upper offset A	Relative power	dB
28	Upper offset A	Absolute power	dBm
29	Lower offset B	Relative power	dB
30	Lower offset B	Absolute power	dBm
31	Upper offset B	Relative power	dB

#	Item	Result	Unit, if any
32	Upper offset B	Absolute power	dBm
...	

When "Max Num of Offsets" on page 826 is 6, returns 48 results (Offset A-F: $48 = 24 + 4 \times 6$) and when set to 12, returns 72 results (Offset A-L: $72 = 24 + 4 \times 12$)

If any result is not available, -999.0 is returned

Measurement Type = Power spectral density reference

For the trace specified by "Measure Trace" on page 2614, returns comma-separated scalar results in the following order:

#	Channel	Item	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm/Hz or dBm/MHz*
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm/Hz or dBm/MHz*
...	
23	Channel (12)	Relative power	dB
24	Channel (12)	Absolute power	dBm/Hz or dBm/MHz*
25	Lower offset A	Relative power	dB
26	Lower offset A	Absolute power	dBm/Hz or dBm/MHz*
27	Upper offset A	Relative power	dB
28	Upper offset A	Absolute power	dBm/Hz or dBm/MHz*
29	Lower offset B	Relative power	dB
30	Lower offset B	Absolute power	dBm/Hz or dBm/MHz*
31	Upper offset B	Relative power	dB
32	Upper offset B	Absolute power	dBm/Hz or dBm/MHz*
...	

When "Max Num of Offsets" on page 826 is 6, returns 48 results (Offset A-F: $48 = 24 + 4 \times 6$) and when set to 12, returns 72 results (Offset A-L: $72 = 24 + 4 \times 12$)

*The unit is determined by "PSD Unit" on page 2247: **DBMHZ** or **DBMMHZ**

If any result is not available, -999.0 is returned

3.4.3 Measurement Results for n = 3

For the trace specified by "Measure Trace" on page 2614, returns scalar pass/fail values (0 = passed, or 1 = failed) determined by comparing the relative to the

3 5G NR Mode

3.4 ACP Measurement

reference carrier and by testing the absolute power limit of the offset frequencies (measured as total power in dB if "Measurement Type" on page 2240 is Total Pwr Ref, or as power spectral density in dB if Measurement Type is PSD Ref).

When "Max Num of Offsets" on page 826 is 6, returns 24 results (Offset A-F: 24 = 4*6). When set to 12, returns 48 results (Offset A-L: 48 = 4 * 12).

For MSR, LTE-Advanced FDD/TDD, and 5G NR Modes, this trace includes only outer offset results.

#	Item
1	Lower offset A - relative limit result
2	Lower offset A - absolute limit result
3	Upper offset A - relative limit result
4	Upper offset A - absolute limit result
5	Lower offset B - relative limit result
6	Lower offset B - absolute limit result
7	Upper offset B - relative limit result
8	Upper offset B - absolute limit result
...	...

If any result is not available, 1 is returned.

3.4.4 Measurement Results for n = 7

In all cases below:

- for SA Mode, the values are in the current Y Axis Unit of the instrument
- if any result is not available, 9.91E+37 (NaN) is returned

Mode	Max Number of Carriers
MSR	100
LTEAFDD, LTEATDD	5
5G NR	16
All Others	18

Measurement Type = Total power reference

For the trace specified by "Measure Trace" on page 2614, returns (2 * Number of Carriers) comma-separated scalar results in the following order:

#	Channel	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm

#	Channel	Result	Unit, if any
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm
...	...		
2 * Number of Carriers – 1	Channel (Number of Carriers)	Relative power	dB
2 * Number of Carriers	Channel (Number of Carriers)	Absolute power	dBm

Measurement Type = Power spectral density reference

For the trace specified by "Measure Trace" on page 2614, returns (2 * Number of Carriers) comma-separated scalar results in the following order:

#	Channel	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm/Hz or dBm/MHz*
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm/Hz or dBm/MHz*
...	...		
2 * Number of Carriers – 1	Channel (Number of Carriers)	Relative power	dB
2 * Number of Carriers	Channel (Number of Carriers)	Absolute power	dBm/Hz or dBm/MHz*

*The unit is determined by "PSD Unit" on page 2247: DBMHZ or DBMMHZ

3.4.5 Measurement Results for n = 8

Only available in LTEAFDD, LTEATDD, 5G NR, MSR Modes

For the trace specified by "Measure Trace" on page 2614, returns scalar results in the following order:

#	Item	Unit, if any
1	0.0	
2	Total carrier power	dBm
3	Reference Power #1 (See "Reference Power Result Details" on page 689)	
4	Reference Power #2 (See "Reference Power Result Details" on page 689)	
5	Inner Lower offset A - relative power	dB
6	Inner Lower offset A - absolute power	dBm, dBm/Hz or dBm/MHz*
7	Inner Upper offset A - relative power	dB

3 5G NR Mode

3.4 ACP Measurement

#	Item	Unit, if any
8	Inner Upper offset A - absolute power	dBm, dBm/Hz or dBm/MHz*
9	Inner Lower offset B - relative power	dB
10	Inner Lower offset B - absolute power	dBm, dBm/Hz or dBm/MHz*
11	Inner Upper offset B - relative power	dB
12	Inner Upper offset B - absolute power	dBm, dBm/Hz or dBm/MHz*
...	...	

This trace includes only inner offset results

When "Max Num of Offsets" on page 826 is 6, returns 28 results (Offset A-F: $24 = 4 + 4 \times 6$) and when set to 12, returns 52 results (Offset A-L: $52 = 4 + 4 \times 12$)

Absolute Power Units

*For Absolute power results, the units depend on the "Measurement Type" on page 2240 and "PSD Unit" on page 2247 settings as follows:

Measurement Type	PSD Unit	Unit
Total Pwr Ref	All	dBm
PSD Reference	dBm/Hz, DBMHZ	dBm/Hz
	dBm/MHz, DBMMHZ	dBm/MHz

Reference Power Result Details

The values returned as Reference Power #1 and Reference Power #2 depend on "Power Ref" on page 2240:

Power Ref Setting	Option	Reference Power #1	Reference Power #2
Left & Right Carriers	LRCarriers	Left or Max Power Carrier in the lower sub-block	Right or Max Power Carrier in the upper sub-block
Max Power Carriers in Sub-block	MPCSubblock	dBm, dBm/Hz or dBm/MHz*	dBm, dBm/Hz or dBm/MHz*
Left & Right Sub-blocks	LRSubblocks	Integrated Power of the lower sub-block	Integrated Power of the upper sub-block
		dBm, dBm/Hz or dBm/MHz*	dBm, dBm/Hz or dBm/MHz*
Others		0.0	Reference carrier power
			dBm, dBm/Hz or dBm/MHz*

*For PSD results, the unit is determined by "PSD Unit" on page 2247. See "Absolute Power Units" on page 689 above

If any result is not available, 9.91E+37 (NaN) is returned

3.4.6 Views

This measurement has two predefined views:

View	Enumerated Parameter	SCPI Number
"Normal" on page 691	PRESult	1
"Carrier Info" on page 691	CINformation	2

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the view changes, the default menu is **Frequency**, unless otherwise specified in the view description.

NOTE

Y Scale/Div, Y Ref Position, Y Auto Scale, Y Ref Value and Bar Graph affect both views. For example, power bars on the traces in both views appear or disappear when Bar Graph is toggled.

View Selection by Name

Selects the results view. The following command allows you to select the desired measurement view by enumerated parameter.

Remote Command	<code>:DISPlay:ACPower:VIEW[:SElect] PRESult CINformation</code> For view names, see table above <code>:DISPlay:ACPower:VIEW[:SElect]?</code>
Example	<code>:DISP:ACP:VIEW PRES</code> <code>:DISP:ACP:VIEW?</code>
Preset	<code>PRESult</code>
State Saved	Saved in instrument state
Range	<code>PRESult CINformation</code>

View Selection by Number (Remote Command Only)

Selects the results view. The following command allows you to select the desired measurement view numerically.

Remote Command	<code>:DISPlay:ACPower:VIEW:NSElect <integer></code> For view numbers, see table above <code>:DISPlay:ACPower:VIEW:NSElect?</code>
Example	<code>:DISP:ACP:VIEW:NSEL 1</code> <code>:DISP:ACP:VIEW:NSEL?</code>
Dependencies	Available only for LTEAFDD, LTEATDD and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	1 / 2

3.4.6.1 Normal

Windows: "Graph" on page 691, "Metrics" on page 692,
Dual window view of the graph and the metrics.

Example	<code>:DISP:ACP:VIEW PRES</code>
---------	----------------------------------

3.4.6.2 Carrier Info

Windows: "Graph" on page 691, "Metrics" on page 692,
Dual window view of the graph and the metrics.

Example	<code>:DISP:ACP:VIEW CINF</code>
---------	----------------------------------


3.4.7 Windows

This section describes the windows that are available in this measurement.

3.4.7.1 Graph

Window #1
Used to display the spectrum being measured by the ACP measurement.
The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace.
The Graph window appears in several Views, as follows:

View	Size	Position
Normal	Half, full width	Top
Carrier Info	Half, full width	Top
Gate View	One third, full width	Middle

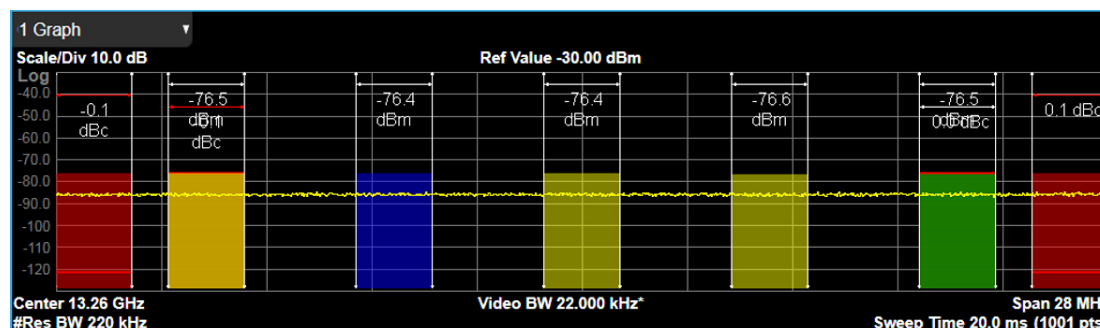

When the Bar Graph is **ON** and Limit Test is **ON**, the color of each bar graph reflects the limit test result. When the limit test fails, the bar color is red, and when limit test passes, the bar color is green.

When RBW is selected as the measurement method, the spectrum trace is not displayed, only the bar graph is displayed. In addition, the Bar Graph control (under the Display front-panel key) is set to **ON** and is grayed-out.

3.4.7.2 Metrics

Window # 2 & 3

Displays the textual results of the ACP measurement.

Views in which the Metrics window appears:

View	Size	Position
Normal	Half, full width	Bottom
Carrier Info	Half, full width	Bottom
Gate View	One Third, full width	Bottom

Metrics Window in Normal view:

3 5G NR Mode

3.4 ACP Measurement

2 Metrics												
Total Car Pwr		36.66 dBm/491.400 MHz						Measure Trace		Trace 1		
Total PSD		---						Trace Type		Trace Average (Active)		
				Lower				Upper				Filter
				ACP		Reference		ACP		Reference		
				dBc	dBm	dBm	Car #	dBc	dBm	dBm	Car #	
A	100.000 MHz	98.280 MHz	-47.03	-75.67	-28.64	1	-53.80	-82.43	-28.64	1	-3 dB	
B	200.000 MHz	98.280 MHz	-45.32	-73.96	-28.64	1	-55.30	-83.94	-28.64	1	-3 dB	
C	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB	
D	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB	
E	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB	

Metrics Window in Carrier Info view:

3 Carrier Info

Total Car Pwr	-66.97 dBm/22.58 MHz	Ref Pwr	-28.87 dBm/98.280 MHz		---
Total PSD	---	Ref PSD		---	---
RF-BW	5.000 MHz	Reference	Carrier#6: Sub-block Left	Carrier#---	Sub-block Right

	Carrier Power	Carrier PSD	Integ BW	Filter	Offset Freq	Measure
CC0	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On
CC1	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On
CC2	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On
CC3	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On
CC4	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On
CC5	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On

The text window displays the following results:

Total Carrier Power

This is the total power of all the carriers with carrier power present set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ BW parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ BW})$ multiplied by the number of carriers with carrier power present set to yes.

Ref Power

This is the power of the reference. The power is calculated by integrating across the bandwidth defined by the Reference Type. The integration bandwidth is shown as a part of the result. For some Power Reference Type, this is the value of the Carrier Integ BW for that carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ BW})$.

Reference

In multi-carrier applications, this row displays what is used as a reference power.

Carrier Power

This is the power in all the currently defined carriers. If the carrier has carrier power present, the power will be absolute. If the carrier is defined as not having power

present, the power will be relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ BW parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ BW for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ BW})$.

Offset Relative Power

This is the power in the offsets relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Offset Integ BW parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ BW menu unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Offset Integ BW})$.

Offset Absolute Power

This is the absolute power in the offsets. The power is calculated by integrating across the bandwidth declared by the Offset Integ BW parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ BW menu unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Offset Integ BW})$.

RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier whatever their measurement states are on or off.

Integration Bandwidth

Displays the noise bandwidth of each carrier to be measured in the ACP measurement

Measure Trace

See ["Measure Trace" on page 2614](#).

Trace Type

This is the trace type (and view/blank parameter) of a trace specified by Measure Trace.

Measure Trace and Trace Type are displayed only when Meas Method is set to "Integration BW", "Filtered IBW", or "Fast Power"

Filter

Indicates whether RRC filter is used for ACP measurement or not.

Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier power presents or not.

3.4.7.3 Gate

Window # 4

Turning on Gate View displays the Gate Window, which allows you to see your gating signal at the same time as the measured data. See the description under **Gate View** in the **Trigger, Gate Settings** section.

View	Size	Position
Gate View	One third, full width	Top

3.4.7.4 Marker Table

Window# 5

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

3.4.8 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.4.8.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the **Ref Position** function.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real></code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:RLEV 100</code> <code>:DISP:ACP:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 698 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF "Attenuation" on page 3225 is not coupled to Ref Value
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp1></code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:ACP:WIND:TRAC:Y:PDIV?</code>

Couplings	<p>Coupled to "Scale Range" on page 1416 as follows: Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 698 is ON, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to Off</p>
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision</code>

Scale Range

Sets the Y-Axis scale range.

Remote Command	<p>Replace <meas> with the identifier for the current measurement <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe <rel_amp1></code> <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe?</code></p>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	<p>Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change this value, Auto Scaling automatically changes to OFF</p>
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition TOP CENTER BOTTOM</code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:RPOS CENT</code>

	<code>:DISP:ACP:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition</code>

Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:ACP:WIND:TRAC:Y:COUP?</code>
Couplings	When Auto Scaling is ON , and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change the value of "Scale/Div" on page 696 , "Ref Value" on page 696 , or "Scale Range" on page 1416 , Auto Scaling automatically changes to OFF
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

3.4.8.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 699
- See ["Single-Attenuator Configuration"](#) on page 700


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

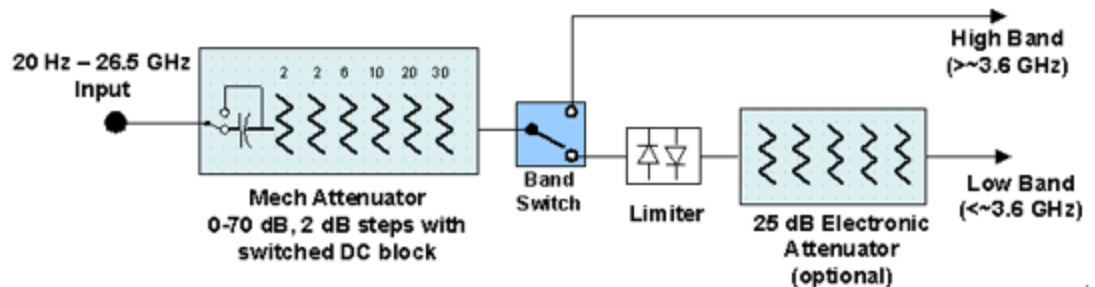


Configuration 2: Mechanical attenuator, no optional electronic attenuator

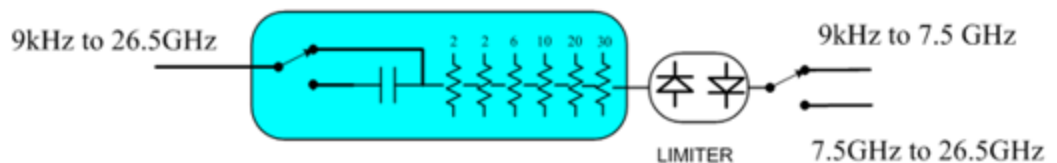

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


Single-Attenuator Configuration

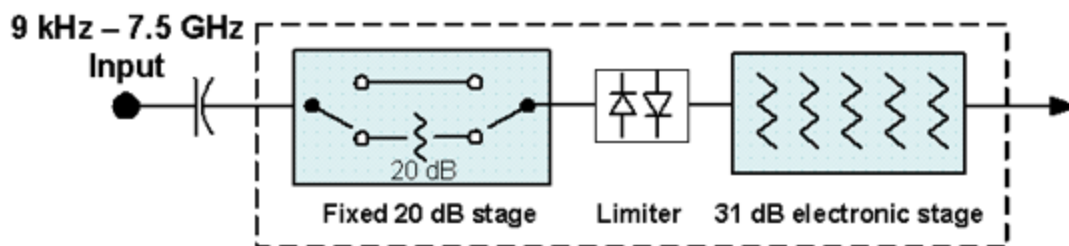

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator

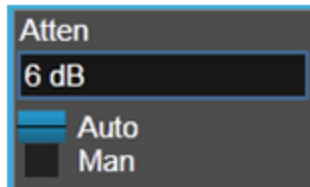

Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command `[:SENSe]:POWer[:RF]:FRATten <rel_amp>`
 `[:SENSe]:POWer[:RF]:FRATten?`

Example `:POW:FRAT 14`

:POW:FRAT?	
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and " Mech Atten " on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows: "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten "Total Atten above 50 GHz" followed by the value of Full Range Atten For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> – Attenuator summary: – Total Atten below 50 GHz: 30 dB – Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamplifier**" on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 703

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231 See "Attenuator Configurations and Auto/Man" on page 703 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">– If the USB Preamp is connected to USB, use 0 dB for Mech Atten– Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)– In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto , but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB
Preset	Auto The Auto value is 10 dB
State Saved	Saved in instrument state
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased

3 5G NR Mode

3.4 ACP Measurement

Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>		
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p> <p>Auto Function</p>	
Remote Command	<pre>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>	
Example	<p>Turn Auto Mech AttenON:</p> <pre>:POW:ATT:AUTO ON</pre>	
Dependencies	<pre>:POW:ATT:AUTO</pre> <p>is only available in measurements that support Auto, such as Swept SA</p>	
Preset	<pre>ON</pre>	

Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.


In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 701 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in

the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 3231 for more about “soft” attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

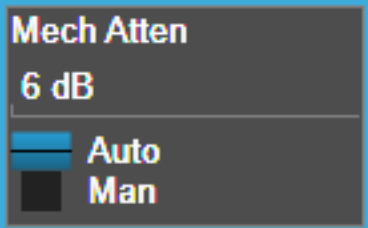

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

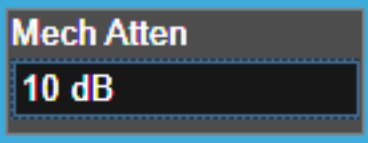

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see "More Information" on page 706

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB

3 5G NR Mode

3.4 ACP Measurement

Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the Attenuation control or :POW:ATT, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> – Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes – Transmit On Off Power measurement in 5GNR Mode – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 706
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 707](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or

knob, and it behaves as it normally would in manual mode

- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-

decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 711

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 709 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	<p>ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p>OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

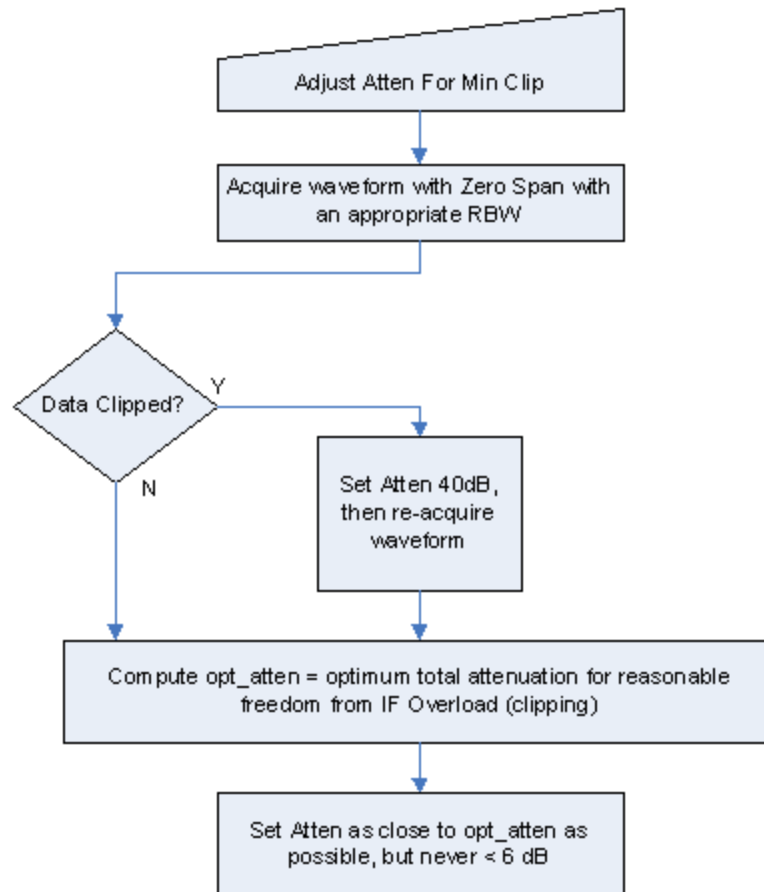

Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 709 selection is Mech + Elec Atten:

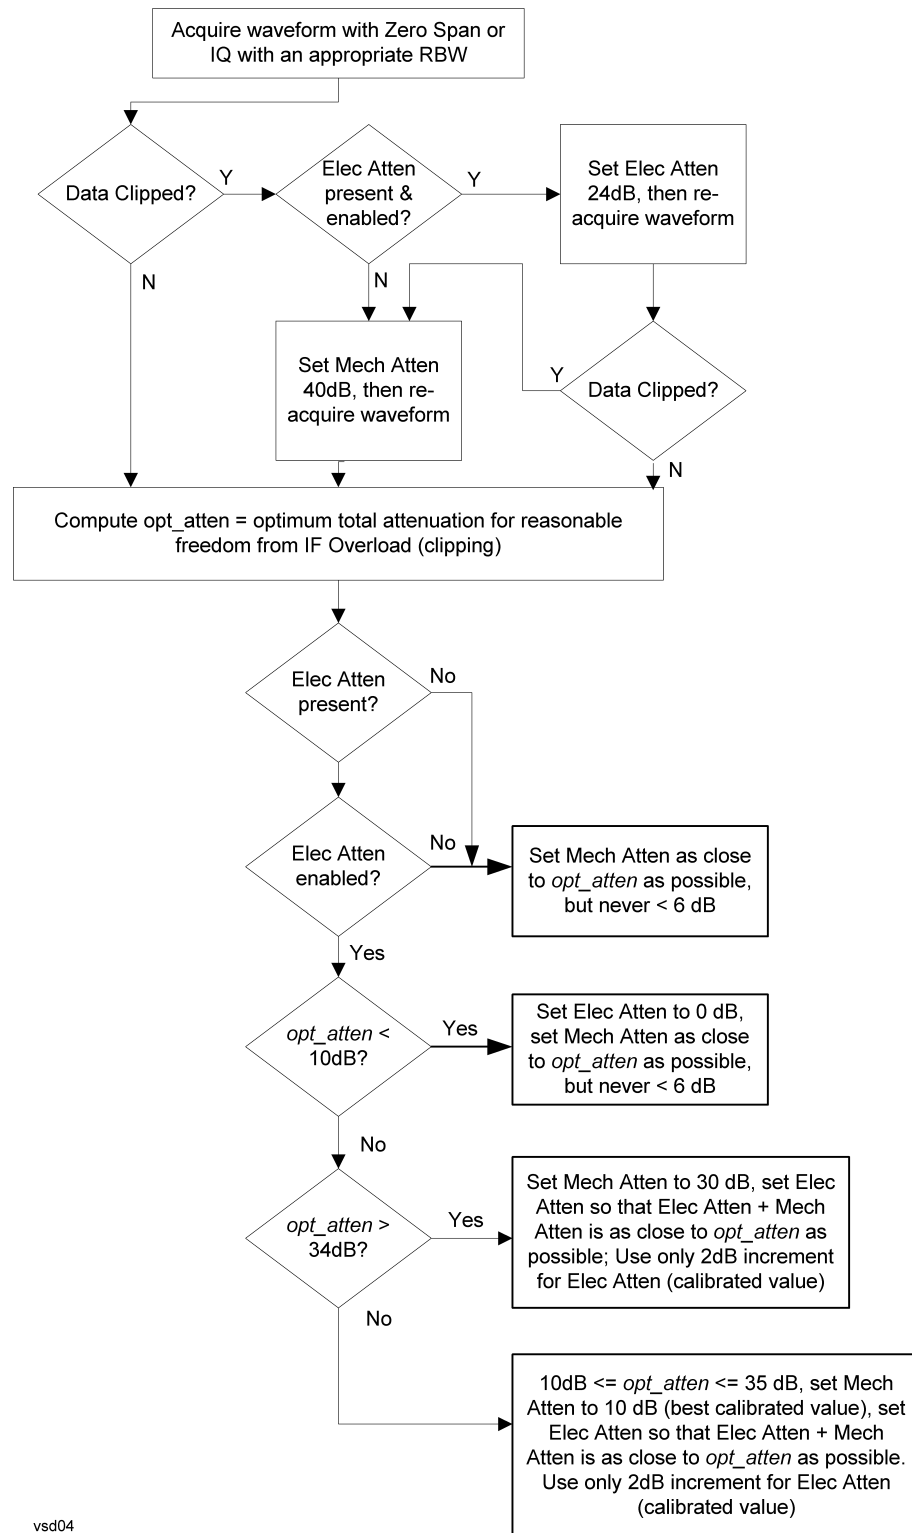

vsd04

"Pre-Adjust for Min Clipping" on page 709 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

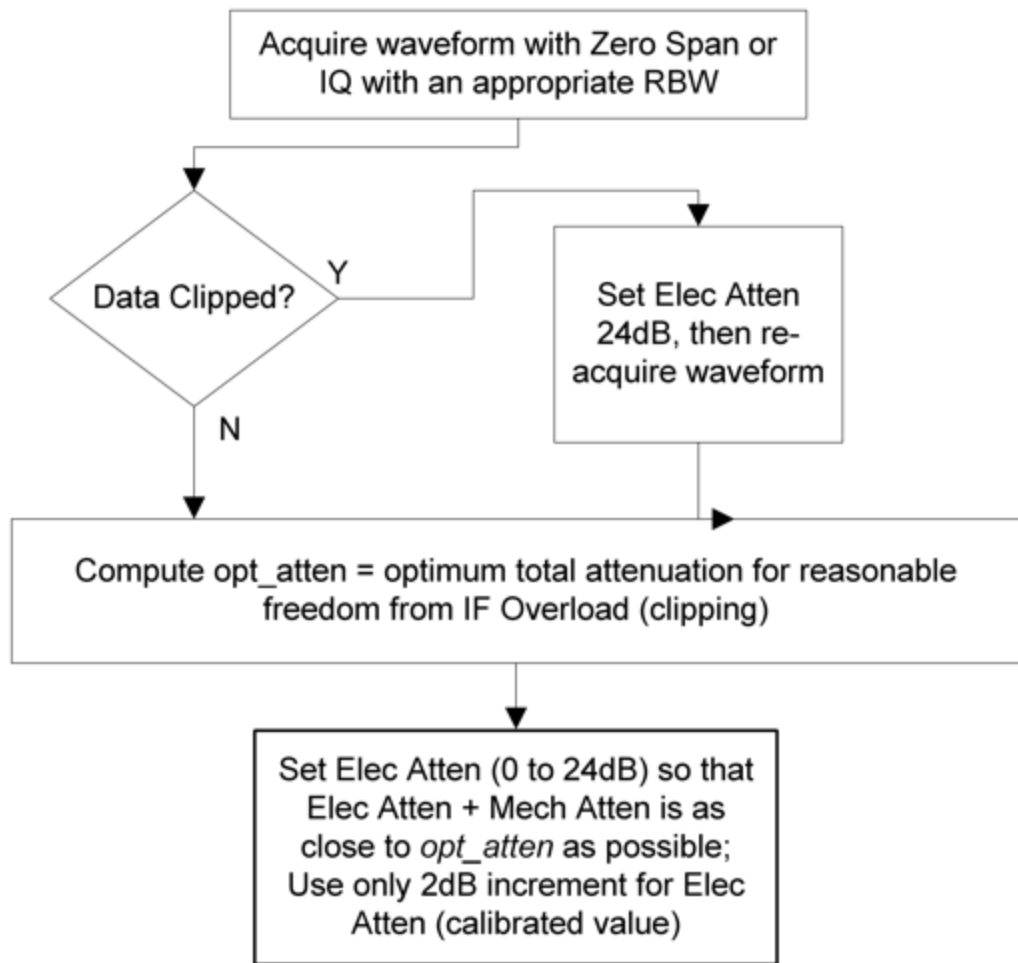

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.4.8.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

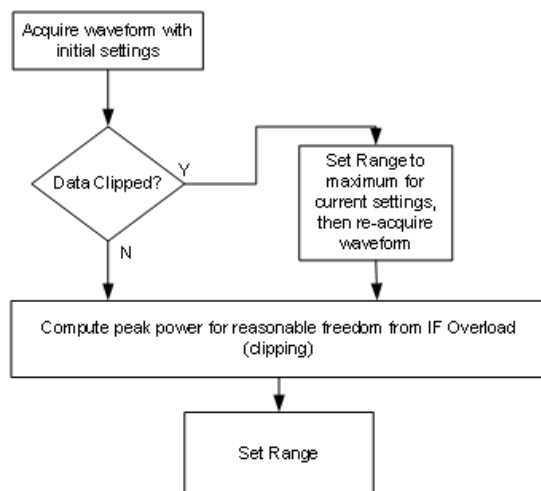

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.4.8.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 718**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

- 2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
- 3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "Presel Center" on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none">- Does not appear in CXA-m- Does not appear in VXT Models M9410A/11A/15A/16A- Does not appear in M9410E/11E/15E/16E- Grayed-out if microwave preselector is off- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0- Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to LOW instead of FULL , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp" on page 3251**. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with **"Internal Preamp" on page 3251**, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information" on page 722**

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 727
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 729
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 730

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error -241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														

Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>
------------	--

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 5G NR Mode

3.4 ACP Measurement

Measurement	μ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 725 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

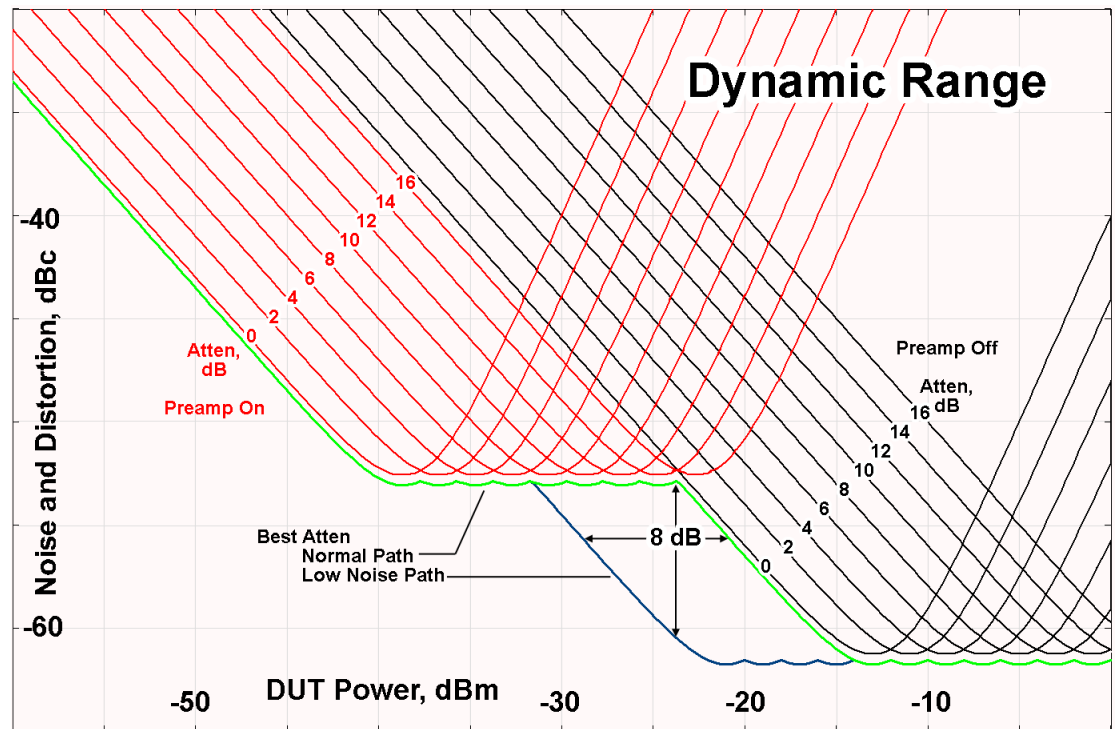

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and **"Y Scale" on page 3222** is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (<code>:POW:MW:PATH STD</code>) The OFF parameter sets path MPB (<code>:POW:MW:PATH MPB</code>)
Preset	ON
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1</code> <code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.

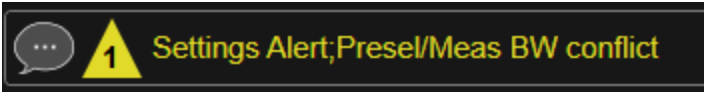

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">– 5GNRMode: Modulation Analysis and IQ Waveform– WLAN Mode: IQ Waveform– Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

3 5G NR Mode

3.4 ACP Measurement

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	N9041B
	N9042B+V3050A
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0</code> <code>[:SENSe]:<measurement>:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 736 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

3 5G NR Mode

3.4 ACP Measurement

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.4.9 BW

Opens the **BW** menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

The Resolution BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

3.4.9.1 Settings

Contains the basic Bandwidth functions. In most measurements it is the only tab under Bandwidth.

Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW (Auto)** selects automatic coupling of **Res BW** to **"Span"** on page 754. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing **"Auto Couple"** on page 3289 or by performing a **Preset**.

For more Mode-specific details, see: **"More Information"** on page 739

Remote Command	<code>[:SENSe]:ACPower:BANDwidth[:RESolution] <bandwidth></code> <code>[:SENSe]:ACPower:BANDwidth[:RESolution]?</code>												
Example	<code>:ACP:BAND 5 MHz</code> <code>:ACP:BAND?</code>												
Notes	<p>For numeric entries, all Res BW Types choose the nearest (arithmetically, on a linear scale, rounding up) available Res BW to the value entered</p> <p>The setting and querying of values depend on the current bandwidth type</p> <p>This parameter is preset by "Meas Method" on page 768. Preset values are:</p> <table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td rowspan="2">5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM</td><td>IBW 100 kHz</td></tr> <tr> <td>IBWR 30 kHz</td></tr> <tr> <td rowspan="2">SA</td><td>IBW 220 kHz</td></tr> <tr> <td>IBWR 30 kHz</td></tr> <tr> <td rowspan="3">WCDMA</td><td>IBW 100 kHz</td></tr> <tr> <td>IBWR 27 kHz</td></tr> <tr> <td>FAST 390 kHz</td></tr> </table> <p>When Meas Method is FPOwer and Fast Power RBW mode is "Best Speed," RBW is calculated as follows:</p> $RBW = \text{Span} \times 2.442 \times 10^{-3}$	Modes	Values	5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM	IBW 100 kHz	IBWR 30 kHz	SA	IBW 220 kHz	IBWR 30 kHz	WCDMA	IBW 100 kHz	IBWR 27 kHz	FAST 390 kHz
Modes	Values												
5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM	IBW 100 kHz												
	IBWR 30 kHz												
SA	IBW 220 kHz												
	IBWR 30 kHz												
WCDMA	IBW 100 kHz												
	IBWR 27 kHz												
	FAST 390 kHz												
Dependencies	<p>Disabled when Meas Method is RBW, FAST, or FPOwer, and Fast Power RBW mode is Best Speed</p> <p>If pressed, an advisory message is generated. If the equivalent SCPI command is sent, a "Setting conflict" warning is generated</p>												
Couplings	<p>Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration</p> <p>"Video BW" on page 740 is coupled to Res BW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1)</p>												

3 5G NR Mode

3.4 ACP Measurement

	When Res BW is set to Auto , the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man , and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings
Preset	Auto, unless noted in "RBW Presets" on page 739
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than –3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	For backwards compatibility, this command accepts both the BANDwidth and BWIDth forms For ESA, the maximum Res BW was 5 MHz; for X-Series it is 8 MHz The following command is supported [:SENSe]:ACPower:SWEep:BANDwidth BWIDth[:RESolution] Auto Function
Remote Command	<code>[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO ON OFF 1 0</code> <code>[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO?</code>
Example	<code>:ACP:BAND:AUTO ON</code> <code>:ACP:BAND:AUTO?</code>
Preset	See "RBW Presets" on page 739

RBW Presets

Unless noted in the table below, the Preset value of **Res BW** is **Auto**.

Mode	Preset Value
WCDMA	100 kHz
MSR	100 kHz
SA	220 kHz
5G NR	100 kHz

More Information

When **Res BW** is set to **Auto**, the bandwidth selected depends on "RBW Filter Type" on page 741.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **RBW Filter Type** or the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

In some PowerSuite measurements, in the LTE-Advanced (both FDD and TDD) Modes, when **Res BW** is **Auto**, the resolution bandwidth is predefined based on the

corresponding bandwidth of the single LTE carrier, as shown in the table below. In the Multi-carrier case, the narrowest **Res BW** among the active carriers is used.

LTEAFDD, LTEATDD Modes

Carrier BW	Auto Res BW, kHz
1.4 MHz	51
3 MHz	51
5 MHz	100
10 MHz	100
15 MHz	100
20 MHz	100
200 kHz (NB-IoT in FDD)	10

5G NR Mode

100 kHz for all carrier bandwidths.

Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to **"Res BW"** on page 738. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Video BW** control. This may also be done by pressing **"Auto Couple"** on page 3289 or by performing a **Preset**.

For more information, see **"VBW Presets"** on page 741

Remote Command	<code>[:SENSe]:ACPower:BANDwidth:VIDeo <bandwidth></code> <code>[:SENSe]:ACPower:BANDwidth:VIDeo?</code>
Example	<code>:ACP:BAND:VID 2.4 MHz</code> <code>:ACP:BAND:VID?</code>
Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open” The values shown in this table reflect the conditions after Mode Preset
Dependencies	Sometimes the displayed Video BW is not actually used to process the trace data: <ul style="list-style-type: none"> – When the Average Detector is selected and Sweep Type is set to Swept, the video bandwidth filter

3 5G NR Mode

3.4 ACP Measurement

	<p>cannot be used, because it uses the same hardware as the Average Detector</p> <ul style="list-style-type: none"> – When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector <p>When this is the case, the VBW still acts to change the sweep time, if Sweep Time is in Auto, and still affects the data on other traces for which this is not the case</p> <p>Disabled when "Meas Method" on page 768 is RBW, FAST, FPOwer</p> <p>If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated</p>
Couplings	Video bandwidth (VBW) is normally coupled to RBW. If VBW is set to Auto , then the VBW is changed as the RBW changes, to maintain the ratio (usually 10:1)
Preset	See " VBW Presets " on page 741 below
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A "#" mark appears before "VBW" in the annotation when it is not coupled
Annotation	In the bottom center of the screen, "VBW <value> <units>" indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility this command accepts both the BANDwidth and BWIDth forms

Auto Function

Remote Command	<code>[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO ON OFF 1 0</code>
	<code>[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO?</code>
Example	<code>:ACP:BAND:VID:AUTO ON</code>

VBW Presets

Unless noted in the table below, the Preset value of **Video BW** is **Auto**.

Mode	Preset Value
WCDMA	1 MHz

RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the Res BW filters in HP/Agilent/Keysight spectrum analyzers were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its –3 dB points 10 MHz apart. In X-Series, the **RBW Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

	Filter Type	SCPI Example
	Gaussian	:BAND:SHAP GAUS
	Flattop	:BAND:SHAP FLAT
Remote Command	[:SENSe]:ACPower:BANDwidth:SHAPE GAUSSian FLATtop [:SENSe]:ACPower:BANDwidth:SHAPE?	
Example	:ACP:BAND:SHAP GAUS :ACP:BAND:SHAP?	
Notes	GAUSSian= Gaussian FLATtop = Flattop	
Dependencies	Disabled when "Meas Method" on page 768 is FAST or FPOWer If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated	
Preset	"Auto Couple" on page 3289 selects the preset value	
State Saved	Saved in instrument state	
Annotation	The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used	
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:SHAPE	

RBW Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	[:SENSe]:ACPower:BANDwidth:TYPE DB3 DB6 [:SENSe]:ACPower:BANDwidth:TYPE?	
Example	:ACP:BAND:TYPE DB3 :ACP:BAND:TYPE?	
Dependencies	Disabled when "RBW Filter Type" on page 741 is FLATtop or "Meas Method" on page 768 is RBW, FAST, or Fast Power If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated	
Preset	DB3	
State Saved	Saved in instrument state	
Range	–3 dB (Normal) –6 dB	
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:TYPE	

3.4.10 Display

Lets you configure display items for the current Mode, Measurement, View, or Window.

3.4.10.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Bar Graph On/Off

Turns the Bar Graph On or Off.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:BGRaph OFF ON 0 1</code> <code>:DISPlay:ACPower:WINDow[1]:BGRaph?</code>
Example	<code>:DISP:ACP:WIND:BGR OFF</code> <code>:DISP:ACP:WIND:BGR?</code>
Dependencies	Always set to ON and grayed-out when the method is RBW
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph</code>

Power Results

Lets you select Power Result Type:

- **OUTer** – Results of outer offsets and carrier powers are shown in this view. Inner offset results are not shown even when Carrier Allocation is Non-Contiguous
- Outer & Inner (**OINNER**) – Results of both inner and outer offsets are shown in this view

Remote Command	<code>:DISPlay:ACPower:VIEW:RTYPE OUTer OINNER</code> <code>:DISPlay:ACPower:VIEW:RTYPE?</code>
Example	<code>:DISP:ACP:VIEW:RTYP OUT</code> <code>:DISP:ACP:VIEW:RTYP?</code>
Dependencies	Only available in MSR, LTEAFDD, LTEATDD and 5G NR Modes

Preset	OUTer
State Saved	Saved in instrument state
Range	Outer Outer & Inner

Carrier Frequency Type

Sets the carrier frequency display type:

- **OFFSet** – The carrier center frequencies are displayed as offset from Carrier Ref Freq
- **ABSolute** – The carrier center frequencies are displayed as absolute frequency

Remote Command	:DISPlay:ACPower:VIEW:WINDow:CINFormation:FREQuency OFFSet ABSolute :DISPlay:ACPower:VIEW:WINDow:CINFormation:FREQuency?
Example	:DISP:ACP:VIEW:WIND:CINF:FREQ ABS :DISP:ACP:VIEW:WIND:CINF:FREQ?
Dependencies	Only available in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet ABSolute

3.4.10.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	:DISPlay:GRATicule[:STATe] OFF ON 0 1 :DISPlay:GRATicule[:STATe]?
Example	:DISP:GRAT OFF
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state

Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored
------------------------------	--

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNOtation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNOtation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNOtation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNOtation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

3 5G NR Mode

3.4 ACP Measurement

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DElete:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.4.10.3 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "Views" on page 690.

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	:DISPlay:VIEW:ADVanced:NAME <alphanumeric>
Example	:DISP:VIEW:ADV:NAME “Baseband” Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	:DISPlay:VIEW:ADVanced:REName <alphanumeric>
----------------	--

Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy

nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement Example: <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code> No distinction is made between Predefined and User Views If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined

3.4.11 Frequency

Contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the

Center Frequency setting is the same for all measurements – it does not change as you change measurements.

3.4.11.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

The center frequencies of carriers are defined as offsets from the **Carrier Reference Frequency** value. This frequency is also the reference for carrier configuration preset.

Because LTEAFDD, LTEATDD, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, because **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to take on this global value.

In LTEAFDD, LTEATDD and 5G NR Modes, if the following conditions are satisfied at the same time:

- **Number of Component Carriers** is 1
- Center Freq Offset is 0 Hz
- mode of **Center Frequency** is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, the mode of **Center Frequency** remains as Auto, and **Carrier Reference Frequency** changes to the same value. The major purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD, in which `:SENSe:FREQUENCY:CENTer` is used to set up the frequency of the measurement.

See ["More Information" on page 753](#).

Remote Command	For LTEAFDD, LTEATDD, 5G NR Modes: <code>[:SENSe]:CCARrier:REference <freq></code> <code>[:SENSe]:CCARrier:REference?</code>
	For MSR Mode: <code>[:SENSe]:CARRier:REference <freq></code>

	<code>[:SENSe]:CARRier:REference?</code>
Example	<p>For LTEAFDD, LTEATDD, 5G NR Modes:</p> <pre><code>:CCAR:REF 2GHz</code></pre> <pre><code>:CCAR:REF?</code></pre> <p>For MSR Mode:</p> <pre><code>:CARR:REF 2GHz</code></pre> <pre><code>:CARR:REF?</code></pre>
Dependencies	Only available in LTEAFDD, LTEATDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency

More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTEAFDD and LTEATDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency which determines absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of these measurements.

When the mode of **Center Frequency** is Auto, **Number of Component Carriers** is 1, and **Center Frequency Offset** is 0 Hz, the Center Frequency is equivalent to Carrier Reference Frequency, which is used to set up the Frequency of all the measurements.

Span

Changes the displayed frequency range symmetrically about **Center Frequency**. While adjusting **Span**, **Center Frequency** is held constant, which means that both start and stop frequencies will change.

If **Span** is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

The default (and minimum) **Span** is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

Span is increased by a factor of $1 + \text{Filter Alpha}$ if the RRC Filter is on.

Remote Command	<code>[:SENSe]:ACPower:FREQUENCY:SPAN <freq></code> <code>[:SENSe]:ACPower:FREQUENCY:SPAN?</code>
Example	<code>:ACP:FREQ:SPAN 10 MHz</code> <code>:ACP:FREQ:SPAN?</code>
Notes	In Bluetooth Mode, the value of Span has to be an odd MHz
Dependencies	<p>If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error</p> <p>In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is on in Continuous sweep, as there is a mechanical switch that bypasses the RF Preselector above 3.6 GHz</p>
Couplings	<p>Span affects RBW, sweeptime, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings)</p> <ul style="list-style-type: none"> Any value of Center Frequency or Span that is within the frequency range of the instrument is allowed <i>when</i> the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the start and stop frequencies within the instrument's frequency range When using the knob or the step up/down keys or the UP DOWN keywords in SCPI, the value that is being changed, that is, Center Frequency or Span, is limited so that the other parameter is not forced to a new value In Bluetooth Mode, if Meas Method is FFT, the max value of Span is coupled to the MAX IFBW of the platform <p>The Span value is clipped when the carrier settings and/or the offset settings are changed. The value is changed to satisfy following formula:</p> $\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$

3 5G NR Mode

3.4 ACP Measurement

	This parameter is unavailable when Meas Method is Fast Power. In that case, the span is fixed by the formula above
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See "Span Presets" on page 755
State Saved	Saved in instrument state
Min/Max	Depends on instrument maximum frequency, mode, measurement, and selected input. See "Span Presets" on page 755
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display

Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
F06 & EP6 (VXT models M9410A/11A)	6.27 GHz
F06 & LFE & EP6 (VXT models M9411A)	6.5999935 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

Model	Max Span (can't set higher than this)
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

Span Presets by Mode

Mode	Preset Value
SA	8 MHz
WCDMA	24.6848 MHz
LTE, LTETDD, LTEAFDD, LTEATDD, MSR	25 MHz
5G NR	500 MHz
Radio Test	175 kHz

3.4.12 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **POSition** (Normal) and places it at the center of the display. If the selected marker is **OFF**, it is set to **POSition** and placed at the center of the screen on the trace determined by the **Marker Trace** rules.

Note that this hard key and all sub keys are unavailable when "**Meas Method**" on page 768 is RBW.

3.4.12.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

On any menu tab in which **Select Marker** appears, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal , Delta and Fixed markers

3.4.12.2 Settings

The controls on this tab include the **Marker** active function and a radio button selection of the marker control mode (**POSition**, **DELTA**, or **OFF**) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. Has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering an X value if the control mode is **POSition** or **DELTA**.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:ACP:MARK3:X 0</code> <code>:CALC:ACP:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is POSition , or the offset from the marker's reference marker if the control mode is DELTA . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time
Dependencies	Unavailable when " Meas Method " on page 768 is RBW
Preset	After a preset, all markers are turned OFF , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering a value if the control mode is **POSition** or **DELTA**, except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X:POSition <real></code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:ACP:MARK10:X:POS 0</code> <code>:CALC:ACP:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is POSition ,

	or the offset from the marker's reference marker in trace points if the control mode is DELTA . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points. When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is OFF , the response is Not A Number
Dependencies	Unavailable when Meas Method is RBW
Preset	After a preset, all markers are turned OFF , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

Marker Y Axis Value (Remote Query only)

Returns the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:Y?
Example	:CALC:ACP:MARK11:Y?
Notes	Returns the marker Y-axis result, if the control mode is POSition or DELTA . If the marker is OFF , the response is Not A Number
Dependencies	Unavailable when " Meas Method " on page 768 is RBW
Preset	Depends on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:ACPower:MARKer[1] 2 ... 12:FUNCTION:RESult?

Marker Mode

Sets the marker control mode to **POSition** (Normal), **DELTA**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition**, and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:MODE POSition DELTA OFF :CALCulate:ACPower:MARKer[1] 2 ... 12:MODE?
Example	:CALC:ACP:MARK3:MODE POS :CALC:ACP:MARK3:MODE?

3 5G NR Mode

3.4 ACP Measurement

Dependencies	Unavailable when Meas Method is RBW
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELta OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **POSition** mode and places it at the center of the screen.

Example	:CALC:ACP:MARK2:STAT ON :CALC:ACP:MARK2:STAT?
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	:CALCulate:ACPower:MARKer[1] 2 ... 12:STATe OFF ON 0 1 :CALCulate:ACPower:MARKer[1] 2 ... 12:STATe?

Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as pressing **DELta** in **Marker Mode**. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:ACPower:MARKer:AOff
Example	:CALC:ACP:MARK:AOff
Dependencies	Unavailable when " Meas Method " on page 768 is RBW

Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental X-Axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

Remote Command	<code>:CALCulate:ACPower:MARKer:COUPle[:STATe] ON OFF 1 0</code> <code>:CALCulate:ACPower:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:ACP:MARK:COUP ON</code> <code>:CALC:ACP:MARK:COUP?</code>
Dependencies	Unavailable when "Meas Method" on page 768 is RBW
Preset	OFF Presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.4.12.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the Peak Search page of the **Marker** menu *and* performs a Peak Search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a Peak Search.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as **"Marker Frequency"** on page 757 on the **Settings** tab.

Peak Search

Pressing the **Peak Search** control moves the selected marker to the trace point which has the maximum Y-Axis value for that marker’s trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:ACP:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. The message "No peak found" will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker

Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:ACP:MARK2:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Pk Right

Moves the selected marker to the nearest peak right of the current marker.

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:RIGHT</code>
Example	<code>:CALC:ACP:MARK2:MAX:RIGH</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Pk Left

Moves the selected marker to the nearest peak left of the current marker.

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:LEFT</code>
Example	<code>:CALC:ACP:MARK2:MAX:LEFT</code>
State Saved	Not part of saved state

Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned on before the minimum search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MINimum</code>
Example	<code>:CALC:ACP:MARK:MIN</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest Y-Axis value. It places the selected marker on the minimum value on its selected trace, and places that marker's reference marker on the peak of its selected trace.

This function turns on the reference marker and sets its mode to **POSITION** if it is not already on. (These markers may be on two different traces.)

If the selected marker is **OFF**, a delta type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a delta marker, then it is changed to delta, which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:PTPeak</code>
Example	<code>:CALC:ACP:MARK:PTP</code>
Notes	Turns on the Marker D active function Sending this command selects the subopcoded marker
Dependencies	Pk-Pk Search is not available when Coupled Markers is on
Couplings	The selected marker becomes a delta marker if not already in delta mode
State Saved	Not part of saved state

Marker Delta

Pressing this button has exactly the same effect as pressing **DEL**Ta in **Marker Mode** on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker’s control mode to **Delta** without having to access two separate menus.

3.4.12.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Frequency" on page 757 on the **Settings** tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:REFerence <integer> :CALCulate:ACPower:MARKer[1] 2 ... 12:REFerence?
Example	:CALC:ACP:MARK2:REF 6 :CALC:ACP:MARK2:REF?
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Dependencies	Unavailable when "Meas Method" on page 768 is RBW
Couplings	If the reference marker is OFF, it is turned on in POSition mode at the delta marker location

Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then its default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:TRACe 1 2 3</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:ACP:MARK2:TRAC 2</code> <code>:CALC:ACP:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by "Auto Couple" on page 3289 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state
Min	1
Max	3

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "Marker Settings Diagram" on page 759 on the **Settings** tab.

3.4.13 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

3.4.13.1 Settings

Contains frequently-used functions to which you will want the fastest access.

Avg | Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

Remote Command	<code>[:SENSe]:ACPower:AVERage:COUNT <integer></code> <code>[:SENSe]:ACPower:AVERage:COUNT?</code>
Example	<code>:ACP:AVER:COUN 250</code> <code>:ACP:AVER:COUN?</code>
Notes	The BAF backwards Compatibility SCPI command, <code>[:SENSe]:ACPR:AVERage[:STATe]</code> , is provided to support same functionality as <code>[:SENSe]:ACPr:AVERage[:STATe]</code> (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to ACPr node conflicts with ACPower node
Preset	10
State Saved	Saved in instrument state
Min/Max	1/1000
Annotation	Avg Number is displayed in the Measurement Bar
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:AVERage:COUNT</code> <code>[:SENSe]:MCPower:AVERage:COUNT</code> Power Suite, W-CDMA

Continue Averaging

Continue Averaging is designed for acquiring the trace average through multiple sets of DUT conditions, in order to meet requirements such as those for an OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Go to **Single** and press **Restart** to get your first set of averages, then **Continue Averaging** will be available.

Use **:FETCh:<meas>?** to retrieve the data as it waits for completion of **Continue Averaging**. ***OPC?** doesn't wait for completion and returns true immediately.

Pressing this control adds (to the already averaged trace or measurement) a number of averages equal to "**Avg | Hold Number**" on page 765. Every time you press it, the terminal count increases by the current value of **Avg | Hold Number**. You can change your test setup (for example, the DUT position or antenna) after each average count reaches the terminal count.

You could also accomplish the same thing by manually increasing **Avg | Hold Number**, but by using **Continue Averaging** you are guaranteed to get the same number of averages at each step in the process, and you always keep **Avg | Hold Number** the same so you do not lose its value.

Remote Command	[:SENSe] :ACPower :AVERage :CONTinue
Example	:ACP :AVER :CONT
Dependencies	Enabled when you change the Sweep mode to Single and the Average Count reaches the Average Number . Otherwise, grayed-out

Terminal Count (Remote Query Only)

Query only.

Returns the terminal count that shows the target average number after **Continue Averaging** is pressed. Every time you press **Continue Averaging**, the terminal count increases to 2N, 3N and so on. The value is the same as "**Avg | Hold Number**" on page 765 unless **Continue Averaging** is pressed, and is reset to match **Avg | Hold Number** when **Restart** is pressed.

Remote Command	[:SENSe] :ACPower :AVERage :COUNt :TERMinal?
Example	:ACP :AVER :COUN :TERM?

Averaging On/Off

Turns averaging on or off.

NOTE

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[:SENSe]:ACPower:AVERage[:STATe] OFF ON 0 1</code> <code>[:SENSe]:ACPower:AVERage[:STATe]?</code>
Example	<code>:ACP:AVER OFF</code> <code>:ACP:AVER?</code>
Preset	ON
State Saved	Yes
Range	OFF ON
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:AVERage[:STATe]</code> <code>[:SENSe]:MCPower:AVERage[:STATe]</code> Power Suite, W-CDMA

Avg Mode

Sets the Averaging Mode. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

- When set to **EXPonential**, the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep
- When set to **REPeat**, the measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:ACPower:AVERage:TCONtrol EXPonential REPeat</code> <code>[:SENSe]:ACPower:AVERage:TCONtrol?</code>
Example	<code>:ACP:AVER:TCON EXP</code> <code>:ACP:AVER:TCON?</code>
Notes	The backwards-compatibility SCPI command, <code>[:SENSe]:ACPR:AVERage:TCONtrol</code> , is provided to support same functionality as <code>[:SENSe]:ACPr:AVERage:TCONtrol</code> (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to ACPr node conflicts with ACPower node
Preset	EXPonential
State Saved	Saved in instrument state

Range	EXPOnential REPeat
Backwards Compatibility SCPI	[:SENSe] :ACPR :AVERage :TCONtrol Power Suite, W-CDMA: [:SENSe] :MCPower :AVERage :TCONtrol

Meas Method

Sets the desired method to measure ACP. The options are:

Integration BW IBW	One sweep of the trace is taken, and the band power for each offset is computed. Depending on "Measurement Type" on page 2240 (Total Power Reference or PSD Reference), results are displayed relative to the total power or the power spectral density. The display reflects either the current trace or a bar graph view
Filtered IBW IBWRange (max dynamic range)	The ACP Path is used to compute ACP when an ACP path is available. This method increases dynamic range, but increases measurement time as it limits the resolution bandwidth. This method is useful for improving dynamic range on a W-CDMA signal because a sharp cutoff bandpass filter is used. The accuracy of the adjacent channel power ratio is not degraded by this method, but the absolute accuracy of both adjacent channel power and carrier power are degraded by up to about 0.5 dB
RBW RBW	The algorithm uses zero-span and an appropriate RBW setting to capture all of the power in the carrier channel and the offsets. The zero-span algorithm (RBW method) is slower than the IBW method, but greatly improves repeatability
Fast FAST	WCDMA Mode or SA Mode with 3GPP WCDMA radio standard selected: Provides the same method as the Integration BW method, but is optimized for speed to measure a W-CDMA signal SA Mode with CDMA2K radio standard selected: Provides faster measurement using the FFT method with a limited parameter flexibility. When this is selected, CDMA2K preset offsets are given and control of the following are unavailable: <ul style="list-style-type: none"> – BW menu – Sweep/Control menu except Pause/Resume – Trace/Detector menu – Carrier Setup, Offset Limit, RRC Weighting, Filter Alpha, and Noise Correction in Meas Setup menu
Fast Power FPOwer (Option FP2 required)	This provides faster measurement using the Hardware accelerated FFT method with a limited parameter flexibility. When this is selected, the following parameters are not available: <ul style="list-style-type: none"> – Points and Auto Sweep Points under Sweep <ul style="list-style-type: none"> – When changing Meas Method to Fast Power, Auto Sweep Points is turned on and grayed-out (Sweep Points will change according to the Fast Power setting) – When returning Meas Method to any setting other than Fast Power, Auto Sweep Points stays on and becomes available (Sweep Points will change according to the auto sweep points calculation algorithm) – Trace Type, Restart Averaging and View/Blank under Trace when Select Trace is Trace 2 or Trace3

3 5G NR Mode

3.4 ACP Measurement

- Span under Frequency
- Res BW, Video BW, Filter Type and Filter BW of Offset > Advanced dialog of Carr/Offset/Limits Config control under Meas Setup
- For Trigger, only Free Run, External 1 and External 2 are supported

When in microwave frequency and measurement span is > 40MHz, RF preselector must be turned off

Remote Command	<code>[:SENSe]:ACPower:METHod IBW IBWRange FAST RBW FPOwer</code> <code>[:SENSe]:ACPower:METHod?</code>
Example	<code>:ACP:METH IBW</code> <code>:ACP:METH?</code>
Notes	FAST mode is only supported for WCDMA and C2K signals. You must be in WCDMA or SA Modes, with 3GPP WCDMA or CDMA2K radio standard. Otherwise, a setting conflict error message is reported MSR, LTEAFDD, LTEATDD and 5G NR Modes support only Integration BW, Filtered IBW and Fast Power methods
Dependencies	When RBW , FAST or FPOwer is selected, Gate function is not available. If you try to turn GateON while Meas Method is RBW , FAST or FPOwer , an error is generated When Gate function is ON , RBW , FAST and FPOwer are not available. If you try to change Meas Method to RBW , FAST or FPOwer , an error is generated VXT Models M9420A/10A/11A support only the Integration BW method
Couplings	IBW (Range) restricts the Res BW available for making this measurement to 30 kHz. When selected, Res BW is clipped to this value if required and an error number displayed
Preset	IBW
State Saved	Saved in instrument state
Range	IBW IBWRange FAST RBW FPOwer
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:SWEep:TYPE</code> (Power Suite, WCDMA) <code>[:SENSe]:MCPower:METHod</code>

Carrier/Offset/Limits Config

Opens a dialog that lets you set Carriers, Offset, and Limits parameters.

Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONtiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

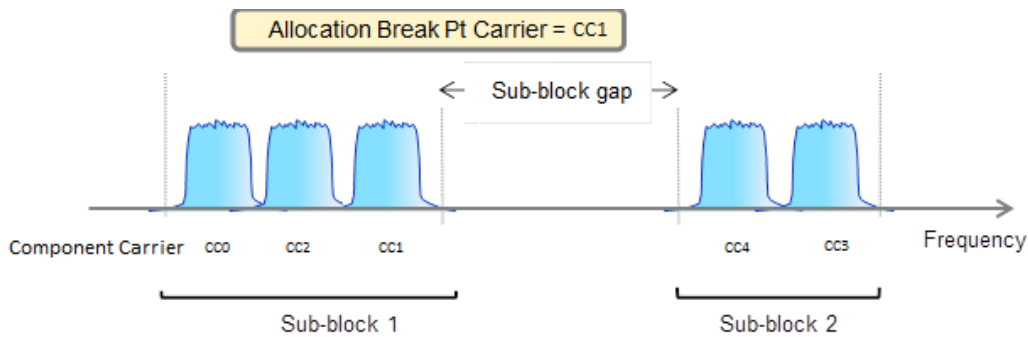

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299

"CHP Power
Integration Bandwidth"
on page 3300

"ACP Power
Integration Bandwidth"
on page 3300

"SEM Power
Integration Bandwidth"
on page 3301

"N_Grid_Size
(Display Only)" on
page 1828

"SCS (Power Meas)" on
page 3302

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CC0 Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz

Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for Adjacent NR Carriers	Channel Raster
Carrier Aggregation	
Off	

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	<code>CONTiguous</code>
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

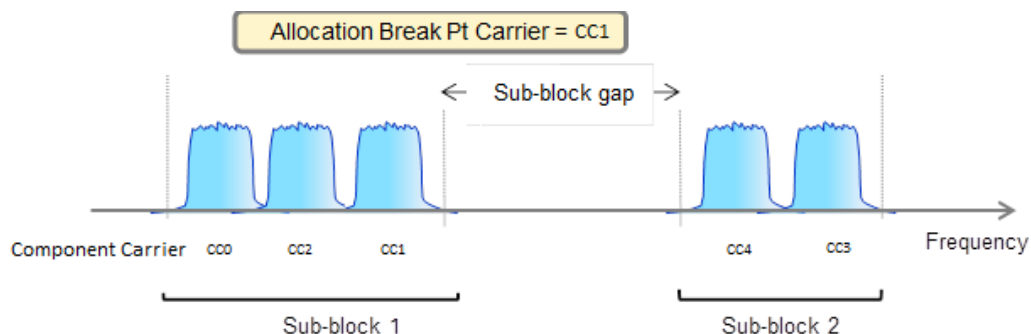

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

3 5G NR Mode

3.4 ACP Measurement

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on " Bandwidth " on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly Also, in some cases, make sure if the "Non-Contiguous Break at" parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANual</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANual</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE

This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>

Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS

Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1
-----------	---

Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310

When Freq Range is FR2

3 5G NR Mode

3.4 ACP Measurement

	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq> [[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

N_Grid_Size (Display Only)

Display Max RB Number for each available numerology. To adjust this setting please switch to Resource Grid tab.

NOTE

This setting is available for EVM measurement only.

3GPP TS38.104 or TS38.101-1 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
															z
	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B
1	2	5	7	1	1	1	1	2	2	2	N	N	N	N	N
5	5	2	9	0	3	6	8	1	4	7	.A	.A	.A	.A	.A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2	0	1	3	6	8	1	4	7
								6	9	3	2	9	7	5	3
6	N	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	.A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

3GPP TS38.104 Tables 5.3.2-2 and 5.3.2-3 or TS38.101-2 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A
480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

NOTE: For the “N.A” value in above table, the value will be set to 0 and displayed as “---”.

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

Resource Grid

Enables you to configure resource grid for each available numerology of each component carrier.

NOTE This tab and the following controls are only available for Modulation Analysis measurement.

Component Carrier (GUI only)

Selects the Component Carrier to configure its resource grid for each available numerology.

Bandwidth

This is the same as the Bandwidth column in the Configure CCs table. See ["Bandwidth" on page 3297](#).

Freq Range

This is the same as the Freq Range column in the Configure CCs table. See ["Freq Range" on page 3297](#)

Configuration Mode

Selects the configuration mode for resource grid table:

- Auto – always reset N_grid_start and N_grid_size when the frequency range and bandwidth of component carrier are changed. SCS enable/disable state will not be changed, unless enabled SCS is invalid for new frequency range and bandwidth. If all enabled SCS are invalid for new frequency range and bandwidth, 30K SCS will be enabled for frequency range 1 and 120K SCS will be enabled for frequency range 2

- Man – keep the value in grid table when the frequency range and bandwidth of component carrier are changed, unless a value is invalid for new frequency range and bandwidth

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO?</code>
Example	<code>:EVM:CCAR:RGR:CONF:AUTO 0</code> <code>:EVM:CCAR:RGR:CONF:AUTO?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON 0 1

When the configuration mode is Auto, the default N_grid_start is set to 0 and N_grid_size is set according to tables below:

Table 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
		N	N	N	N	N	N	N	N	N	N	N	N	N	N
		R	R	R	R	R	R	R	R	R	R	R	R	R	R
		B	B	B	B	B	B	B	B	B	B	B	B	B	B
1	2	5	7	1	1	1	1	2	2	2	N	N	N	N	N
5	5	2	9	0	3	6	8	1	4	7	.A	.A	.A	.A	.A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2	0	1	3	6	8	1	4	7
								6	9	3	2	9	7	5	3
6	N	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	.A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A
480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

SCS Enabled

The Enabled column lets you enable or disable selected SCS for current component carrier.

Remote Command	<pre>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k[:STATe] OFF ON 0 1 [:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k [:STATe]?</pre>
Example	<pre>:EVM:CCAR:RGR:SCS15 ON :EVM:CCAR:RGR:SCS15?</pre>
Notes	<p>Only valid numerology for selected frequency range and bandwidth will be visible. Some SCS are disabled if they are "N.A" in Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104)" in the Section 3.2.5.1.15, N_Grid_Size (Display Only)</p> <p>In EVM, if Configuration Mode is Auto and Freq Range is changed, the Grid Start and Grid Size will be reset according to Table 5.3.2-1 or Table 5.3.2-2</p> <p>In measurements other than EVM, when Freq Range is changed, the parameter will be reset according to Table 5.3.2-1 or Table 5.3.2-2</p>
Preset	<pre>SCS 15k : OFF SCS 30k : ON SCS 60k : OFF SCS 120k: OFF SCS240K: OFF SCS480K: OFF SCS960K: OFF</pre>
State Saved	Yes

N_grid_start

This column lets you set the Grid Start value for the selected numerology.

Remote Command	<pre>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt <integer> [:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt?</pre>
Example	<pre>:EVM:CCAR:RGRid:SCS15k:STAR 0 :EVM:CCAR:RGRid:SCS15k:STAR?</pre>
Preset	Depends on frequency range, bandwidth and numerology

State Saved	Yes
Min	0
Max	Depends on frequency range, bandwidth and numerology

N_grid_size

This column lets you set the Grid Size for the selected numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:SIZE 270</code> <code>:EVM:CCAR:RGR:SCS15k:SIZE?</code>
Notes	Grid Size should not exceed the Nrb in Table 5.3.2-1 or Table 5.3.2-2 of 3GPP TS38.104 and TS38.101-1 & -2
Preset	Depends on frequency range and bandwidth
State Saved	Yes
Min	6
Max	Depends on frequency range, bandwidth and numerology
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RBNumber:SCS15k SCS30k SCS60k SCS120k SCS240k</code>

k0 (Display Only)

This column displays the k0 value for the selected Numerology.


Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:k0?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:k0?</code>

More Information

See picture below for illustration how k0 is calculated.

3 5G NR Mode

3.4 ACP Measurement

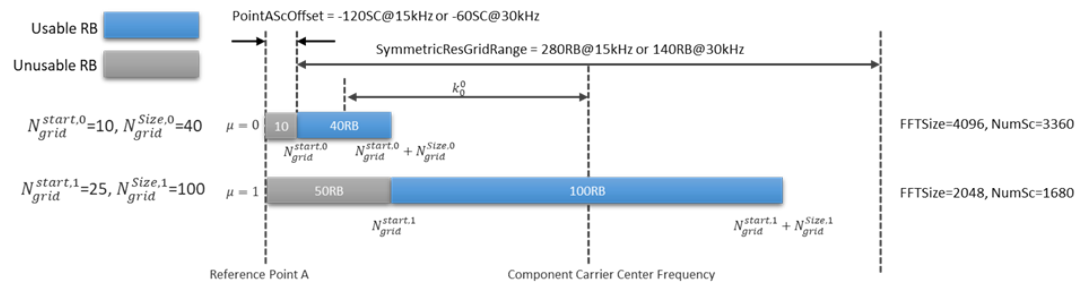

Intra-Cell Guard Band

Enter a comma-separated string to set guard band. Consecutive numbers will be merged into one guard band. At most, 4 guard bands are allowed and the rest will be omitted. Colon-separated numbers represent the start and stop of a guard band.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k:GBAND <string></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k:GBAND?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:GBAN "0:9"</code> <code>:EVM:CCAR:RGR:SCS15k:GBAN?</code>
Couplings	Only visible for Uplink and only available for 15kHz/30kHz numerology
State Saved	Yes

RB Set (Display Only)

Display the RB set according to Intra-Cell Guard Band setting.

Point A Frequency (Display Only)

This figure displays the Point A Freq for the resource grid.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:REFA?</code>
Example	<code>:EVM:CCAR:RGR:REFA?</code>

LTE Coexistence

This tab and the following controls are only available for Modulation Analysis measurement, and it will only appear for DL FR1 component carriers.

Add LTE (GUI only)

Pressing this control inserts a new LTE-CRS configuration into the list, the maximum number of LTE-CRS configurations is 4.

Delete LTE (GUI only)

Pressing this control deletes selected LTE-CRS configuration from the list.

Clear All (GUI only)

Pressing this control deletes all LTE-CRS configurations from the list.

Effective LTE Number (Remote Command only)

Specifies how many LTE-CRS configurations are effective. This SCPI only command is used to provide similar functions such as “Add LTE” and “Delete LTE”.

Note that all 4 LTE-CRS configurations can be modified through SCPI, but ineffective LTE-CRS configurations (index > Effective LTE Number) will not be included in the measurement no matter whether its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE?</code>
Example	<code>:EVM:CCAR:NUMB:LTE 2</code> <code>:EVM:CCAR:NUMB:LTE?</code>
Couplings	Max value is 4 If you attempt to remotely set the Count larger than 4, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	4

State

Enable or disable the LTE coexistence.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe]?</code>
Example	<code>:EVM:CCAR:LTE1 OFF</code>

3 5G NR Mode

3.4 ACP Measurement

	:EVM:CCAR:LTE1?
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message This control is available only when 15K SCS is enabled in the resource grid
Preset	OFF
State Saved	Yes

Bandwidth

Set the LTE bandwidth.

Remote Command	[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M [:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?
Example	:EVM:CCAR:LTE1:BW B20M :EVM:CCAR:LTE1:BW?
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Carrier Offset to Point A

Sets the LTE carrier center subcarrier location determined by the offset from point A using 15K SCS.

Remote Command	[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset <integer> [:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset?
Example	:EVM:CCAR:LTE1:COFF 0 :EVM:CCAR:LTE1:COFF?
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	0
State Saved	Yes
Min	0
Max	16383

MBSFN Subframes

Sets the subframe index that can be configured as MBSFN subframes in LTE.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame <string></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame?</code>
Example	<code>:EVM:CCAR:LTE:MBSF:SFR "2:9"</code> <code>:EVM:CCAR:LTE:MBSF:SFR?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
State Saved	Yes

Number of CRS Antenna Ports

Set the number of antenna ports for LTE-CRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBer N1 N2 N4</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBer?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB N1</code> <code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	N1
State Saved	Yes
Range	1 2 4

v-shift

Set the v-shift value for LTE-CRS; it is given by LTE Cell ID mod 6.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:VSH 0</code> <code>:EVM:CCAR:LTE1:CRS:VSH?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message

Preset	0
State Saved	Yes
Min	0
Max	5

Advanced Acquisition

This menu is only available for the Modulation Analysis measurement. It enables you to configure selected RF settings for each component carrier and channel.

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Input Channel (GUI Only)

Select the input channel to configure its settings.

State Saved	No
-------------	----

Use Advanced Acquisition Table

Specify if the settings in Advanced Acquisition Table will be applied.

Remote Command	<code>[:SENSe]:RF:ACQuistion:ATABle OFF ON 0 1</code> <code>[:SENSe]:RF:ACQuistion:ATABle?</code>
Example	<code>:RF:ACQ:ATAB 1</code> <code>:RF:ACQ:ATAB?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

IF Path Auto

Specify if the IF path in Advanced Acquisition Table will be automatically or manually selected.

Remote Command	<code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO ON OFF 1 0</code> <code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO?</code>
----------------	--

Example	<code>:RF:ACQ:ATAB:IFP:AUTO 1</code> <code>:RF:ACQ:ATAB:IFP:AUTO?</code>
Preset	ON
State Saved	Yes
Range	OFF ON

Mechanical Attenuation

Set mechanical attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:ATT 20</code>
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB

Elec Attenuation

Set electronic attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:EATT 20</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual attenuator configuration: 24 dB Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

LNA

Turn on/off Low Noise Amplifier (LNA) for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:LNA ON</code>
Dependencies	Requires option LNA
Preset	OFF
State Saved	Saved in State

Internal Preamp

Turn on/off internal preamp for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp OFF LOW FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:PRE LOW</code> <code>:CCAR0:RF:CHAN1:GAIN:PRE?</code>
Dependencies	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the control is not shown
Preset	OFF
State Saved	Saved in instrument state

uW Path Control

Select uW Path for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH?</code>
Example	<code>:CCAR0:RF:CHAN1:MW:PATH LNP</code> <code>:CCAR0:RF:CHAN1:MW:PATH?</code>
Preset	MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved	Save in instrument state
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable

IF Gain

Set IF Gain for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel?</code>
Example	<code>:CCAR0:RF:CHAN1:IF:GAIN:LEV -10</code> <code>:CCAR0:RF:CHAN1:IF:GAIN:LEV?</code>
Notes	Not available for B25 IF bandwidth option
Preset	0
State Saved	Save in instrument state
Min	Depends on CC Bandwidth
Max	Depends on CC Bandwidth

IF Path

Specify IF path manually for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G</code> <code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath?</code>
Example	<code>:CCAR0:RF:CHAN1:IFP B160M</code> <code>:CCAR0:RF:CHAN1:IFP?</code>
Notes	B10M = 10 MHz B25M = 25 MHz B40M = 40 MHz B85M = 85 MHz B125M = 125 MHz B140M = 140 MHz B160M = 160 MHz B255M = 255 MHz B510M = 510 MHz B1G = 1 GHz B1500M = 1.5 GHz B2G = 2 GHz B4G = 4 GHz In cases where the path is not available but is selected from SCPI, it generates an error - 241, "Hardware missing; Option not installed"

Dependencies	Gray out if IF Path Auto is On
Preset	Automatically selected IF path according to measurement required IFBW and available HW bandwidth
State Saved	Saved in instrument state

Measure CC

Selects the component carrier to be measured in the uplink time mask measurement.

NOTE

The parameter is only available for the Transmit On|Off Power measurement.

Remote Command	<code>[:SENSe]:PVTTime:ULINK:CCARrier CC0 ... CC15</code> <code>[:SENSe]:PVTTime:ULINK:CCARrier?</code>
Example	<code>:PVT:ULINK:CCAR CC0</code> <code>:PVT:ULINK:CCAR?</code>
Dependencies	Available only when Radio Direction is Uplink
Preset	<code>CC0</code>
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15

Offset

Lets you configure the spacing of the offset regions.

Offset Frequency Define

Lets you select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “From Carrier Center to Integ BW Closer Edge” definition. LTE conformance test requires “From Carrier Edge to Integ BW Center” and/or “From Carrier Edge to Integ BW Closer Edge” definition.

<code>CTOCenter</code>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
<code>CTOEdge</code>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
<code>ETOCenter</code>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW

ETOEEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge of each Offset Integ BW
RTOCenter 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the center frequency of each Offset Integ BW
RTOEdge 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the closest edge frequency of each Offset Integ BW
RTOCenter 5G NR Mode only	From the center frequency of RF BW** to the center frequency of each Offset Integ BW
SCTOCenter 5G NR Mode only	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

** RF BW = $BW_{channel,CA}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier = 1, RF BW = $BW_{channel} = 2 \times F_{offset,RAT}$

** sub-block (bandwidth) = $BW_{channel,block}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{channel} = 2 \times F_{offset,RAT}$.

See "Diagrams for Offset Freq Define" on page 795.

Modes other than MSR, LTEAFDD, LTEATDD, 5G NR

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:TYPE ETOC</pre> <pre>:ACP:OFFS:TYPE?</pre>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: 5G NR

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter SCTOCenter</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:TYPE ETOC</pre> <pre>:ACP:OFFS:TYPE?</pre>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter SCTOCenter</code>

Diagrams for Offset Freq Define

Details depend on the selected mode.

Diagram for Modes other than MSR, LTEAFDD, LTEATDD, 5G NR


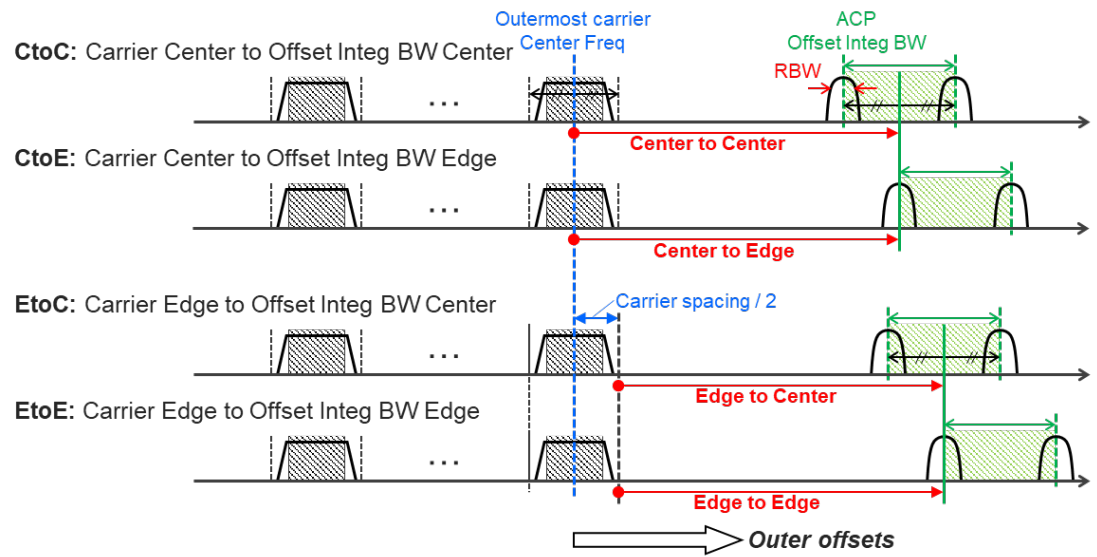


Diagram for MSR, LTEAFDD, LTEATDD, 5G NR

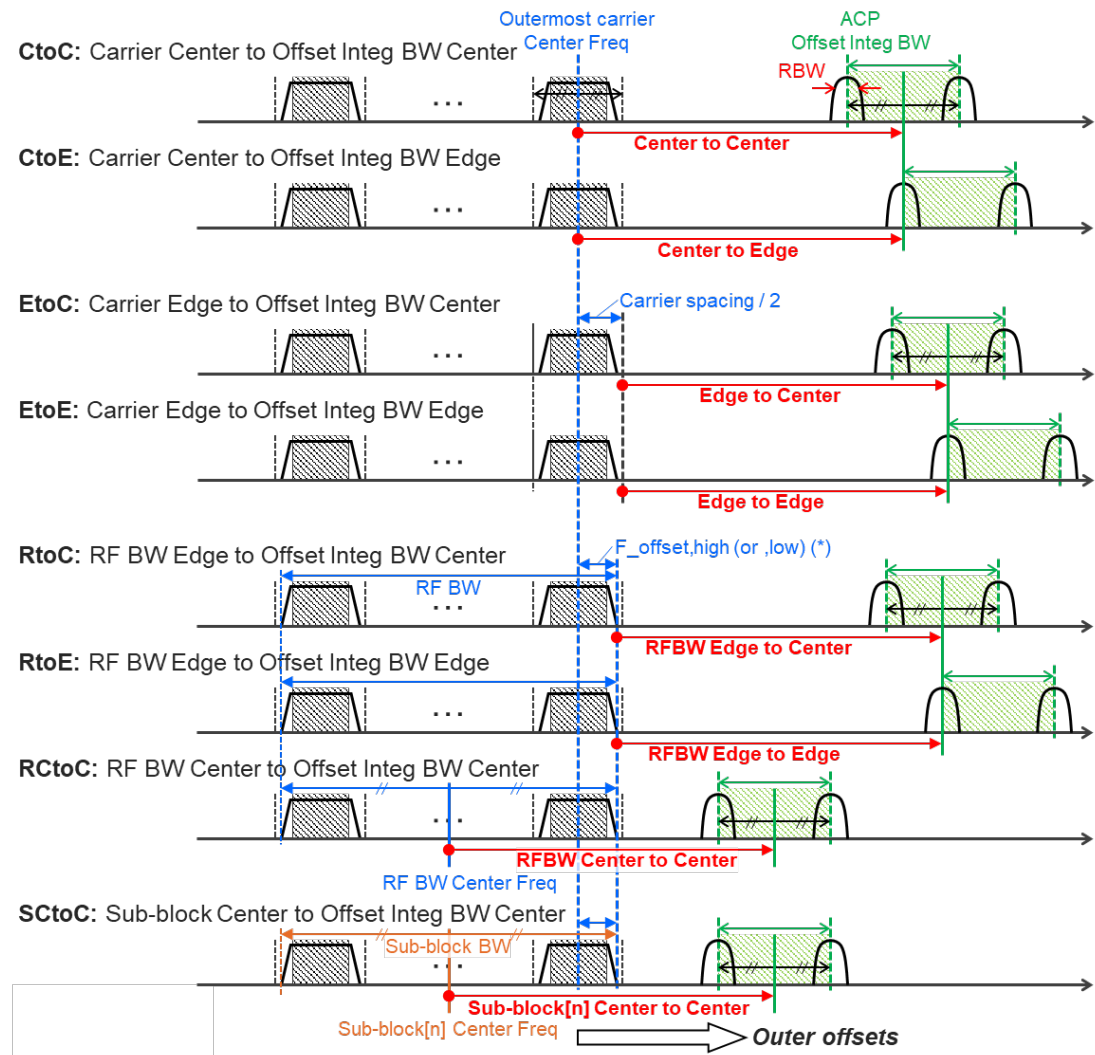

Note:

RF BW Edge and Outermost Carrier Edge are not always the same.
e.g.) 5G NR (3GPP) defines BW_channel, CA which calculates F_offset,high and F_offset,low asymmetrically with SCS shift.

(*) For MSR, F_offset,high (or ,low) = F_offset,RAT,high (or ,low)

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREQuency] <freq>,...`

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS1:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:LIST?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored												
Couplings	Changing Offset Frequency might affect "Span" on page 754												
Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>WCDMA</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>5G NR</td><td>100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>Radio Test</td><td>25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz</td></tr> </tbody> </table>	Modes	Values	SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code> Auto Function												
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code>												

3 5G NR Mode

3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>WCDMA</td><td>ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5G NR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>Radio Test</td><td>ON, ON, ON, OFF, OFF, OFF</td></tr> </tbody> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF ON												

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset, then enter the Offset Integration Bandwidth.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:STATe`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:LIST:BAND?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value, you must send all values up to that. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values is ignored
Couplings	Changing Integ BW might affect "Span" on page 754

Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value
Modes	Values
SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz
WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz
LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz
5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz
State Saved	Saved in instrument state
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement
Backwards Compatibility SCPI	[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration] [:SENSe]:ACPR:OFFSet[1] 2:LIST:BANDwidth [:SENSe]:ACPR:OFFSet[1] 2:LIST:BWIDth [:SENSe]:MCPower:OFFSet[1] 2:LIST:BANDwidth[:INTEgration] [:SENSe]:MCPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration]

Offset Side

Specifies which offset side to measure.


You can turn off (not use) specific offsets with [:SENSe]:ACPower:OFFSet[1]|2 [:OUTer]:LIST:SIDE.

NEGative	Negative (lower) sideband only
BOTH	Both of the negative (lower) and positive (upper) sidebands
POSitive	Positive (upper) sideband only

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in MSR, LTEAFDD and LTEATDD Modes.

3 5G NR Mode

3.4 ACP Measurement

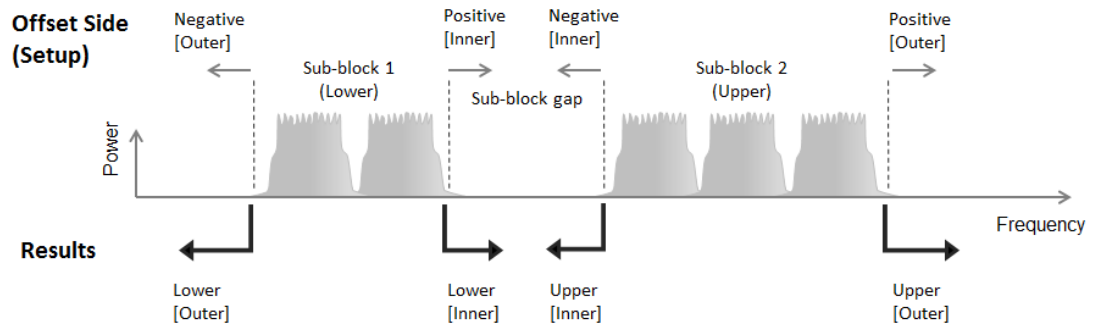

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE NEGative BOTH POSitive, ...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:LIST:SIDE BOTH</pre> <pre>:ACP:OFFS:LIST:SIDE?</pre>
Notes	<p>Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p> <p>If you set POS or NEG in an offset, result of the inactive side returns -999</p>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is BOTH</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p>
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the **Filter Alpha** parameter.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE] ON OFF 1 0,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE]?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:LIST:FILT 1,0,0</pre> <pre>:ACP:OFFS:LIST:FILT?</pre>
Notes	<p>1 ON = RRC Weighted, 0 OFF = Integ BW</p> <p>Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p>

	Mode	Values
	SA	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	WCDMA	1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1
	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	Radio Test	0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state	
Range	Integ BW RRC Weighted	

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa <real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa?</code>	
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	<code>:ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</code> <code>:ACP:OFFS:LIST:FILT:ALPH?</code>	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	SA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	WCDMA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	LTEAFDD, LTEATDD, 5G NR, MSR	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	

Advanced (Offset)

Opens a further menu page, which lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, and Filter parameters.

Offset Freq

This column is the same as "Offset Freq" on page 2259 in the main **Offset** menu.

Res BW

Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution <freq>,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>						
Example	<pre>:ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz :ACP:OFFS2:LIST:BAND:RES?</pre>						
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored						
Dependencies	When "Meas Method" on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated						
Couplings	When Res BW Mode is Auto , this value is exactly same as Res BW . When you change this value, Res BW Mode also changes to Man						
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <td>SA</td><td>220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz</td></tr> <tr> <td>WCDMA</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> </table>	SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz	WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz	LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz						
WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
State Saved	Saved in instrument state						
Min/Max	1 Hz/8 MHz						
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:RESolution</pre>						

Auto Function

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO ON OFF 1 0,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1 :ACP:OFFS2:LIST:BAND:RES:AUTO?</pre>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 1</p> <p>1, 1, 1, 1, 1, 1</p>
State Saved	Yes

Backwards Compatibility SCPI
`[:SENSe]:ACPower:OFFSet[1] | 2:LIST:BWIDth:RESolution:AUTO`

Video BW

Enables you to change the instrument post-detection filter (VBW).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:LIST:BAND:VID?</code>								
Notes	The values shown in this table reflect the conditions after Mode Preset Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored								
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated								
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz</td></tr> <tr> <td>WCDMA</td><td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td></tr> </tbody> </table>	Modes	Values	SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz	WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz	LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz
Modes	Values								
SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz								
WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
State Saved	Saved in instrument state								
Min/Max	1 Hz/50 MHz								
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:VIDeo</code>								

Auto Function

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:LIST:BAND:VID:AUTO?</code>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is ON ON, ON, ON, ON, ON, ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:VIDeo:AUTO</code>

Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE GAUSSian FLATtop,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:LIST:BAND:SHAP?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Dependencies	When " Res BW " on page 738 Mode for the offset is Auto , this cell is grayed out and disabled. Since Res BW Mode for the offset is preset to Auto on changing " Meas Method " on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is GAUSSian GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian
State Saved	Saved in instrument state
Range	GAUSSian FLATtop
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2[:LIST:BWIDth:SHAPE</code>

Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE DB3 DB6,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:LIST:BAND:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored

Dependencies	When "RBW Filter Type" on page 741 is Flattop, or "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is DB3 DB3, DB3, DB3, DB3, DB3, DB3
State Saved	Saved in instrument state
Range	-3 dB (Normal) -6 dB
Backwards Compatibility SCPI	[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:TYPE

Limits

Lets you configure the limits that are used to determine whether the offset regions **PASS** or **FAIL** the limit test.

Limit Test

This checkbox is the same as "Limit Test" on page 806 in the **Meas Setup, Settings** tab.

Offset Freq

This column is the same as "Offset Freq" on page 2259 in the **Offset** index tab.

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. **[:SENSe]:ACPower:OFFSet[n] [:OUTer]:LIST:TEST** selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the **[:SENSe]:ACPower:OFFSet[n] [:OUTer]:LIST:STATE** command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute < real>,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute?
----------------	---

3 5G NR Mode

3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:LIST:ABS?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</td></tr> <tr> <td>WCDMA</td><td>50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> <tr> <td>5G NR</td><td>4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> </tbody> </table>	Modes	Values	SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm	WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm	LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values										
SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm										
WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm										
LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
State Saved	Saved in instrument state										
Min/Max	-200.0 dBm/50.0 dBm										
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA <code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA										

Rel Limit (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RCARrier <real>,...</code>
--------	---

Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:LIST:RCAR?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0</td></tr> <tr> <td>WCDMA</td><td>-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>5G NR</td><td>-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>Radio Test</td><td>-60, -60, -60, 0, 0, 0</td></tr> </tbody> </table>	Modes	Values	SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0	WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2	LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values												
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0												
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2												
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
Radio Test	-60, -60, -60, 0, 0, 0												
State Saved	Saved in instrument state												
Min/Max	-150/50.0												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:RCARrier</code>												

Positive Offset Limit (Remote Command only)

Enables you to set the upper limit for the upper segment of the specified offset pair.

Remote Command	<code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA <real>,...</code> <code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA 0,0,0,0,0,0</code> <code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	:CALCulate:MCPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA (Power Suite)

Negative Offset Limit(Remote Command only)

Enables you to set the upper limit for the lower segment of the specified offset pair.

Remote Command	:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA <real>, ... :CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:CALC:ACP:OFFS:LIST:LIM:NEG:DATA 0,0,0,0,0,0 :CALC:ACP:OFFS:LIST:LIM:NEG:DATA?
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	<code>:CALCulate:MCPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA</code> (Power Suite, WCDMA)

Rel Limit (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACP:Power:OFFSet[1] 2[:OUTer]:LIST:RPSDensity <rel_ampl>,...</code> <code>[:SENSe]:ACP:Power:OFFSet[1] 2[:OUTer]:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:LIST:RPSD?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB
WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB
LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

Fail Mask

Accesses a menu that lets you select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n]` `[:OUTer]:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n]:OUTer]:LIST:RPSDensity` and `[:SENSe]:ACP:OFFSet[n]` `[:OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]` `[:OUTer]:LIST:STATE`.

Absolute	ABSolute	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	RELative	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	AND	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit and one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	OR	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit or one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1]2[:OUTer]:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACPower:OFFSet[1]2[:OUTer]:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:LIST:TEST?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA, WCDMA	<code>REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL</code>
LTEAFDD, LTEATDD, 5G NR, MSR	<code>AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND</code>

	Modes	Values
	Radio Test	REL, REL, REL, REL, REL, REL
State Saved	Saved in instrument state	
Range	ABSolute AND OR RELative	
Backwards Compatibility SCPI	[:SENSe]:MCPower:OFFSet[1] 2:LIST:TEST	

Inner Offset

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

Offset Frequency Define

Allows you to select “Offset” definition:

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge frequency of each Offset Integ BW
STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of each Offset Integ BW
STOEdge	From either the lower or upper sub-block edge frequency to the closest edge frequency of each Offset Integ BW
SCTOCenter	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

5G NR Mode only

** sub-block (bandwidth) = $BW_{\text{channel,block}}$ which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$.

See "Diagram for Offset Freq Define" on page 814


Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:TYPE ETOC</pre> <pre>:ACP:OFFS:INN:TYPE?</pre>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</code>

Mode: 5G NR

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:TYPE ETOC</pre> <pre>:ACP:OFFS:INN:TYPE?</pre>
Preset	<code>STOCenter CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code>

Diagram for Offset Freq Define

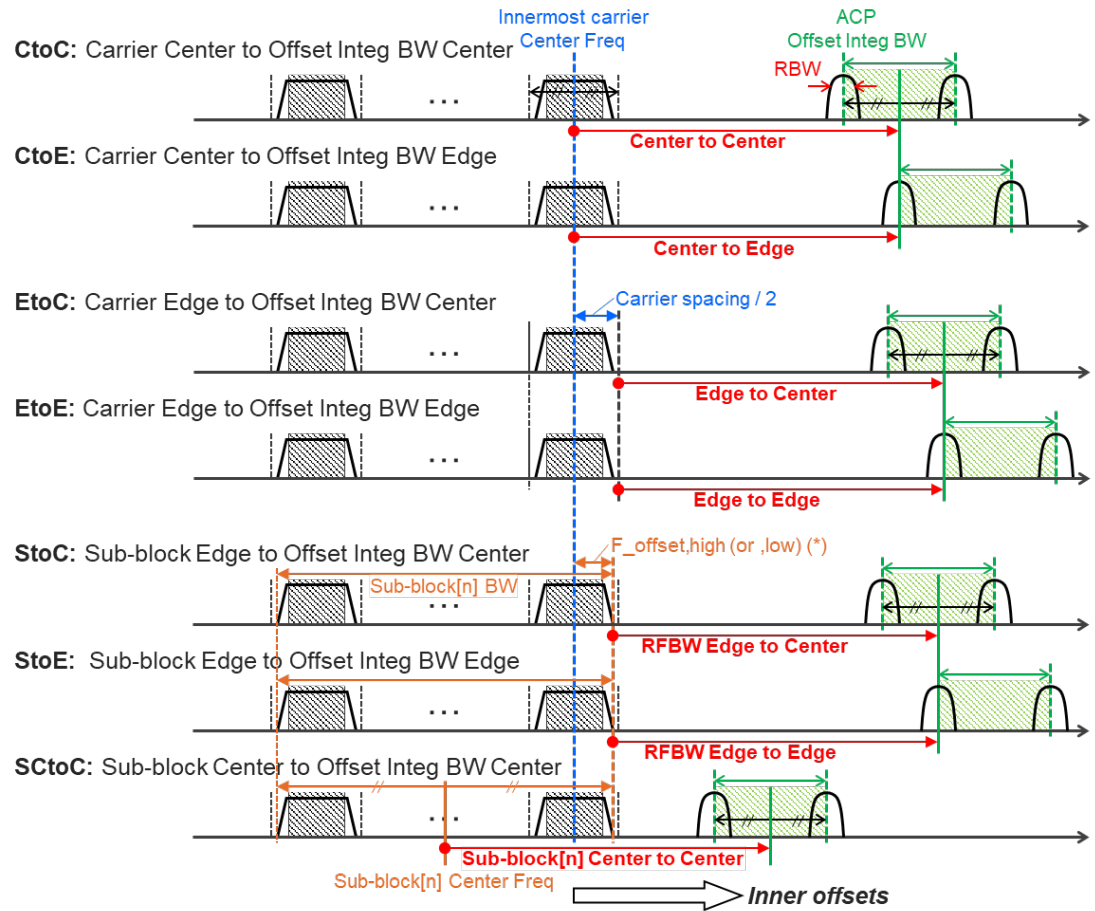

Note:

RF BW Edge and Outermost Carrier Edge are not always same.
e.g.) 5G NR (3GPP) defines BW_channel,CA which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift

(*) For MSR, $F_{\text{offset,high (or,low)}} = F_{\text{offset,RAT,high (or,low)}}$

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the frequency difference between the center of the main channel and the near edge of the offset.

3 5G NR Mode

3.4 ACP Measurement

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect "Span" on page 754						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>All Others</td><td>2.5MHz, 7.5MHz, 0, 0, 0, 0 2.5MHz, 7.5MHz, 0, 0, 0, 0</td></tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz, 7.5MHz, 0, 0, 0, 0 2.5MHz, 7.5MHz, 0, 0, 0, 0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz, 7.5MHz, 0, 0, 0, 0 2.5MHz, 7.5MHz, 0, 0, 0, 0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement Auto Function						
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <code>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</code>						
State Saved	Yes						

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset on the **Offset** menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the **Offset Integration Bandwidth** menu key.

You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST:STATE`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTEgration] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:INN:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND?</code>								
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value you must send all values up to it. Subsequent values remain unchanged								
Couplings	Changing Integ BW might affect "Span" on page 754								
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD</td><td>3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz</td></tr> <tr> <td>MSR, LTEATDD</td><td>4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</td></tr> <tr> <td>5G NR</td><td>19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td></tr> </tbody> </table>	Modes	Values	LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz	MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz	5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Modes	Values								
LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz								
MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz								
5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz								
State Saved	Saved in instrument state								
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement								


Offset Side

Lets you turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:SIDE`.

- **NEGative** – The upper side in the sub-block gap only (that is, negative sideband of the upper sub-block) is enabled

- **BOTH** - Both sides in the sub-block gap are enabled
- **POSitive** - The lower side in the sub-block gap only (that is, positive sideband of the lower sub-block) is enabled

The diagram below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTEAFDD and LTEATDD Modes.

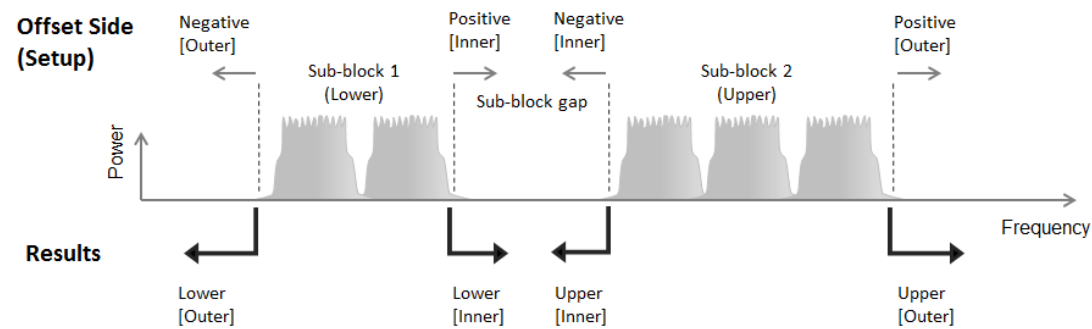

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE NEGative BOTH POSitive, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:SIDE BOTH</code> <code>:ACP:OFFS:INN:LIST:SIDE?</code>
Notes	If you set POS or NEG in an offset, result of the inactive side returns -999
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Lets you turn RRC filtering of each offset on or off. The value (roll off) for the filter is set to the value of the Filter Alpha parameter.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe] ON OFF 1 0,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:INN:LIST:FILT?</code>
Notes	1 ON = RRC Weighted, 0 OFF = Integ BW

Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td>LTEAFDD</td><td>1,1,1,1,1,1 1,1,1,1,1,1</td></tr> <tr> <td>MSR, LTEATDD, 5G NR</td><td>0,0,0,0,0,0 0,0,0,0,0,0</td></tr> </table>	Modes	Values	LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1	MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0
Modes	Values						
LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1						
MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0						
State Saved	Saved in instrument state						
Range	Integ BW RRC Weighted						

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FiLTeR:ALPHa <real>,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FiLTeR:ALPHa?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:LIST:FiLT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</pre> <pre>:ACP:OFFS:INN:LIST:FiLT:ALPH?</pre>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 0.22 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00

Advanced (Inner Offset)

Opens a further menu page that lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, Filter and "Power Ref" on page 2240 parameters.

Offset Freq

The same as "Offset Freq" on page 2273 in the main Inner Offset menu.

Res BW

Sets the Resolution Bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BA NDwidth:RESolution <freq>,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BA NDwidth:RESolution?</pre>
----------------	---

3 5G NR Mode

3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES?</code>
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this control is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated
Couplings	When " Res BW " on page 738 Mode is Auto , this value is exactly the same as Res BW . When you change this value, Res BW Mode also changes to Man
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 100 kHz 100 kHz, 100 kHz, 100k Hz, 100 kHz 100 kHz,100 kHz, 100 kHz,100 kHz, 100 kHz, 100 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/8 MHz

Auto Function

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO ON OFF 1 0,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO?</code>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

Video BW

Lets you change the instrument post-detection filter (VBW).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID?</code>
Notes	The values shown in this table reflect the conditions after Mode Preset
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 1 MHz 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz

State Saved	Yes
Min/Max	1 Hz/50 MHz
	Auto Function
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is ON ON, ON, ON, ON, ON, ON
State Saved	Yes

Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE GAUSSian FLATtop,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:INN:LIST:BAND:SHAP?</code>
Dependencies	When "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is GAUSSian GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian
State Saved	Saved in instrument state
Range	GAUSSian FLATtop

Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE DB3 DB6,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE?</code>
----------------	---

3 5G NR Mode

3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:OFFS2:INN:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3 :ACP:OFFS2:INN:LIST:BAND:TYPE?
Dependencies	When "RBW Filter Type" on page 741 is FLATtop or "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is also grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is DB3 DB3, DB3, DB3, DB3, DB3, DB3
State Saved	Saved in instrument state
Range	-3 dB (Normal) -6 dB

Power Ref Type

Lets you set reference types of inner offsets.

CUMulative Cumulated power of the upper and lower sub-block carriers is the reference level. This selection is effective only when one of the following "Power Ref" on page 2240 values is selected:

Left & Right Carriers	LRCarriers
Max Power Carrier in Sub-block	MPCSubblock
Min Power Carrier in Sub-block	MINSubblock
Left & Right Sub-blocks	LRSubblocks
Manual	MANual

When one of the other **Power Ref** values is selected, carrier powers are not cumulated, and the reference level is equivalent to Normal

NORMal Power of specified carrier or the manual reference level is the reference level

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference CUMulative NORMal, ... [:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:OFFS:INN:LIST:PREF CUM,CUM,NORM,NORM,NORM,NORM :ACP:OFFS:INN:LIST:PREF?
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is NORMal NORMal, NORMal, NORMal, NORMal, NORMal, NORMal
State Saved	Saved in instrument state
Range	CUMulative NORMal Auto Function

Remote Command	<div>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFereNce:AUTO OFF ON 0 1, ... [:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFereNce:AUTO?</div> <div>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</div>																												
Example	<div>:ACP:OFFS:INN:LIST:PREF:AUTO OFF,OFF,OFF,OFF,OFF,OFF</div> <div>:ACP:OFFS:INN:LIST:PREF:AUTO?</div>																												
Dependencies	Available only in LTEAFDD, LTEATDD and 5G NR Modes																												
Couplings	<div>When in the LTEAFDD, LTEATDD Modes, the inner power ref type is set automatically when the power ref type state is auto according to the scopes of the sub-block gap in the following table</div> <table><thead><tr><th>Sub-block Gap</th><th>Inner ACP offset</th><th>Power Ref Type</th></tr></thead><tbody><tr><td rowspan="2">Wgap <5MHz</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr><tr><td rowspan="2">5MHz≤ Wgap <10MHz</td><td>1st (2.5MHz)</td><td>Cumulative</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr><tr><td rowspan="2">10MHz≤ Wgap <15MHz</td><td>1st (2.5MHz)</td><td>Cumulative</td></tr><tr><td>2nd (7.5MHz)</td><td>Cumulative</td></tr><tr><td rowspan="2">15MHz≤ Wgap <20MHz</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Cumulative</td></tr><tr><td rowspan="2">20MHz≤ Wgap</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr></tbody></table> <div>When in 5G NR Mode, Power Ref Type “Auto” sets the power reference type of inner-ACLR offset automatically</div> <div>Downlink: “Cumulative” or “Normal” is selected accordingly when the inner-offsets are configured to meet the test requirements as follows:</div> <div>FR1, 3GPP TS 38.141-1 v16.5.0 (2020-09) Section 6.6.3.5.3 BS type 1-C:</div> <div><div>- Table 6.6.3.5.2-3: Base Station ACLR limit in non-contiguous spectrum or multiple bands</div><div>- Table 6.6.3.5.2-4: Base station CACLR limit</div></div> <div>FR2, 3GPP TS 38.141-2 v16.5.0 (2020-09) Section 6.7.3.5.3 BS type 2-O:</div> <div><div>- Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum</div><div>- Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum</div></div> <div>Uplink: “Normal” is always selected</div>	Sub-block Gap	Inner ACP offset	Power Ref Type	Wgap <5MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal	5MHz≤ Wgap <10MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Normal	10MHz≤ Wgap <15MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Cumulative	15MHz≤ Wgap <20MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Cumulative	20MHz≤ Wgap	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal
Sub-block Gap	Inner ACP offset	Power Ref Type																											
Wgap <5MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
5MHz≤ Wgap <10MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Normal																											
10MHz≤ Wgap <15MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Cumulative																											
15MHz≤ Wgap <20MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Cumulative																											
20MHz≤ Wgap	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
Preset	<div>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</div> <div>ON, ON, ON, ON, ON, ON OFF, OFF, OFF, OFF, OFF, OFF</div>																												
State Saved	Saved in instrument state																												
Range	Auto Man																												

Inner Limits

Accesses a menu of functions that contains Select Offset, Abs Limit, Rel Limit and Fail Mask parameters.

Limit Test

This checkbox is the same as "Limit Test" on page 849 in the Settings tab.

Offset Freq

This column is the same as "Offset Freq" on page 2273 in the Offset tab.

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. [:SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with [:SENSe]:ACP:OFFSet[n]:INNER:LIST:STATE.

The query returns the 6 sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<div><div>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:ABSolute < real>,...</div><div>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:ABSolute?</div></div> <div>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</div>						
Example	<div>:ACP:OFFS2:INN:LIST:ABS -10,-10,-10,-10,-10,-10</div> <div>:ACP:OFFS2:INN:LIST:ABS?</div>						
Preset	<div>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</div> <table><tr><th>Modes</th><th>Values</th></tr><tr><td>5G NR</td><td>-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td></tr><tr><td>All Others</td><td>-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td></tr></table>	Modes	Values	5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0	All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0
Modes	Values						
5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
State Saved	Saved in instrument state						
Min/Max	-200.0 dBm/50.0 dBm						

Rel Limit (Car)

Specifies a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STaTe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACP:Power:OFFSet[1] 2:INNeR:LIST:RCARrier <real>,...</code> <code>[:SENSe]:ACP:Power:OFFSet[1] 2:INNeR:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:RCAR?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>All Others</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> </tbody> </table>	Modes	Values	5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Modes	Values						
5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
State Saved	Saved in instrument state						
Min/Max	-150/50.0						

Rel Limit (PSD)

Specifies a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STaTe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity <rel_amp1>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:INN:LIST:RPSD?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 0 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

Fail Mask

Accesses a menu that enables you to select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:RPSDensity` and `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

Option	SCPI	Description
Absolute	<code>ABSolute</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	<code>RELative</code>	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	<code>AND</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>and</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	<code>OR</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>or</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST?</code>
----------------	--

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:INN:LIST:TEST?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is AND AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND
State Saved	Saved in instrument state
Range	ABSolute AND OR RELative

Max Num of Offsets

Sets the max number of offsets: either 6 or 12.

This setting applies only to SCPI operations. To specify the same behavior as that of the previous version, selecting 6 offsets is recommended. If you select 12 offsets, the results returned by the **:READ|:FETCh** queries increase accordingly.

Example:

When you select 6 offsets, querying the offset state returns 6 values, as below.

```
-> :SENSe:ACPower:OFFSet:LIST:STATe?
```

```
<- 1,0,0,0,0,0
```

When you select 12 offsets, sending the same query returns 12 values, as below.

```
-> :SENSe:ACPower:OFFSet:LIST:STATe?
```

```
<- 1,0,0,0,0,0,0,0,0,0,0,0
```

If your program depends on the number of returned values, you should select 6 offsets, or else change your program.

Remote Command	<code>[:SENSe]:ACPower:OFFSet:MAXNumber NUM6 NUM12</code> <code>[:SENSe]:ACPower:OFFSet:MAXNumber?</code>
Example	<code>:ACP:OFFS:MAXN NUM12</code> <code>:ACP:OFFS:MAXN?</code>
Preset	NUM6
State Saved	Saved in instrument state
Range	6 12

Limit Test

Turns limit checking for each offset On or Off. The limits may be specified in the **Offset** menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In the **Combined** view, the bar turns red.

Remote Command	:CALCulate:ACPower:LIMit:STATe OFF ON 0 1 :CALCulate:ACPower:LIMit:STATe?	
Example	:CALC:ACP:LIM:STAT OFF :CALC:ACP:LIM:STAT?	
Preset	SA	OFF
	WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR	ON
State Saved	Saved in instrument state	
Range	ON OFF	
Backwards Compatibility SCPI	[:SENSe]:MCPower:LIMit[:STATe] [:SENSe]:ACPower:LIMit[:STATe]	

Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to **Disabled**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message appears in the status bar:

Settings Alert;Spur Avoidance Off

This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

Remote Command	[:SENSe]:ACPower:SAVoid[:STATe] ON OFF 0 1 [:SENSe]:ACPower:SAVoid[:STATe]?	
Example	:ACP:SAVoid ON :ACP:SAVoid?	
Dependencies	Only appears in VXT models M9410A/11A/15A	
Preset	OFF	

State Saved	Saved in instrument state
Range	ON OFF

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 829 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all measurement parameters to their default values.

Remote Command	:CONFigure:ACPower
Example	:CONF:ACP
Couplings	Selecting Meas Preset restores all measurement parameters to their default values

3.4.13.2 Reference

All ACP measurements are taken relative to a specific carrier frequency, relative to whose power the offset channel power is measured.

The controls on this tab let you specify the reference carrier frequency and other parameters relevant to the reference carrier.

Carrier/Offset/Limits Config

This is the same dialog as "Carrier/Offset/Limits Config" on page 769 in the **Settings** menu.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	
	Carrier Aggregation	
	Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed

3 5G NR Mode

3.4 ACP Measurement

Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>

Notes	<p>Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers</p> <p>Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<pre>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert [:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</pre>
Example	<pre>:CCAR0:SPEC INV :CCAR0:SPEC?</pre>
Preset	NORM
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<pre>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq> [:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</pre>
Example	<pre>:CCAR0:CHP:BAND:INT 20MHz :CCAR0:CHP:BAND:INT?</pre>

3 5G NR Mode

3.4 ACP Measurement

Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS

Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1
-----------	---

Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310

When Freq Range is FR2

	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

Offset

Lets you configure the spacing of the offset regions.

Offset Frequency Define

Lets you select offset frequency definition. Each standard defines each offset frequency from Carrier.

3 5G NR Mode

3.4 ACP Measurement

For example, 3GPP2 requires the “From Carrier Center to Integ BW Closer Edge” definition. LTE conformance test requires “From Carrier Edge to Integ BW Center” and/or “From Carrier Edge to Integ BW Closer Edge” definition.

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge of each Offset Integ BW
RTOCenter 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the center frequency of each Offset Integ BW
RTOEdge 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the closest edge frequency of each Offset Integ BW
RCTOCenter 5G NR Mode only	From the center frequency of RF BW** to the center frequency of each Offset Integ BW
SCTOCenter 5G NR Mode only	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

** RF BW = $BW_{channel,CA}$ which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier = 1, $RF\ BW = BW_{channel} = 2 \times F_{offset,RAT}$

** sub-block (bandwidth) = $BW_{channel,block}$ which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{channel} = 2 \times F_{offset,RAT}$.

See "Diagrams for Offset Freq Define" on page 838.

Modes other than MSR, LTEAFDD, LTEATDD, 5G NR

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>

Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: 5G NR

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter SCTOCenter</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter SCTOCenter</code>

Diagrams for Offset Freq Define

Details depend on the selected mode.

Diagram for Modes other than MSR, LTEAFDD, LTEATDD, 5G NR


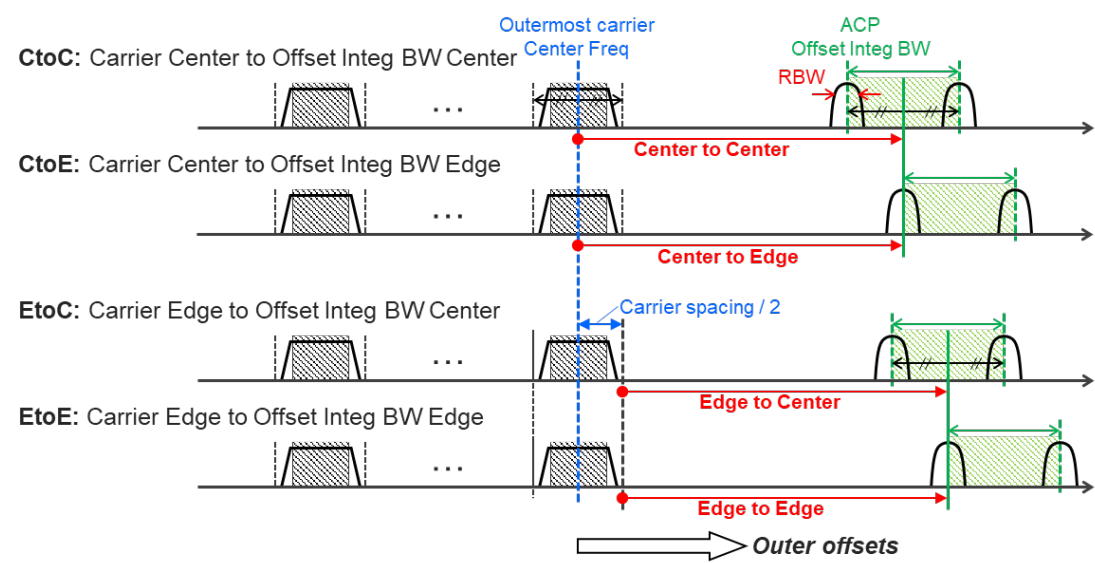


Diagram for MSR, LTEAFDD, LTEATDD, 5G NR

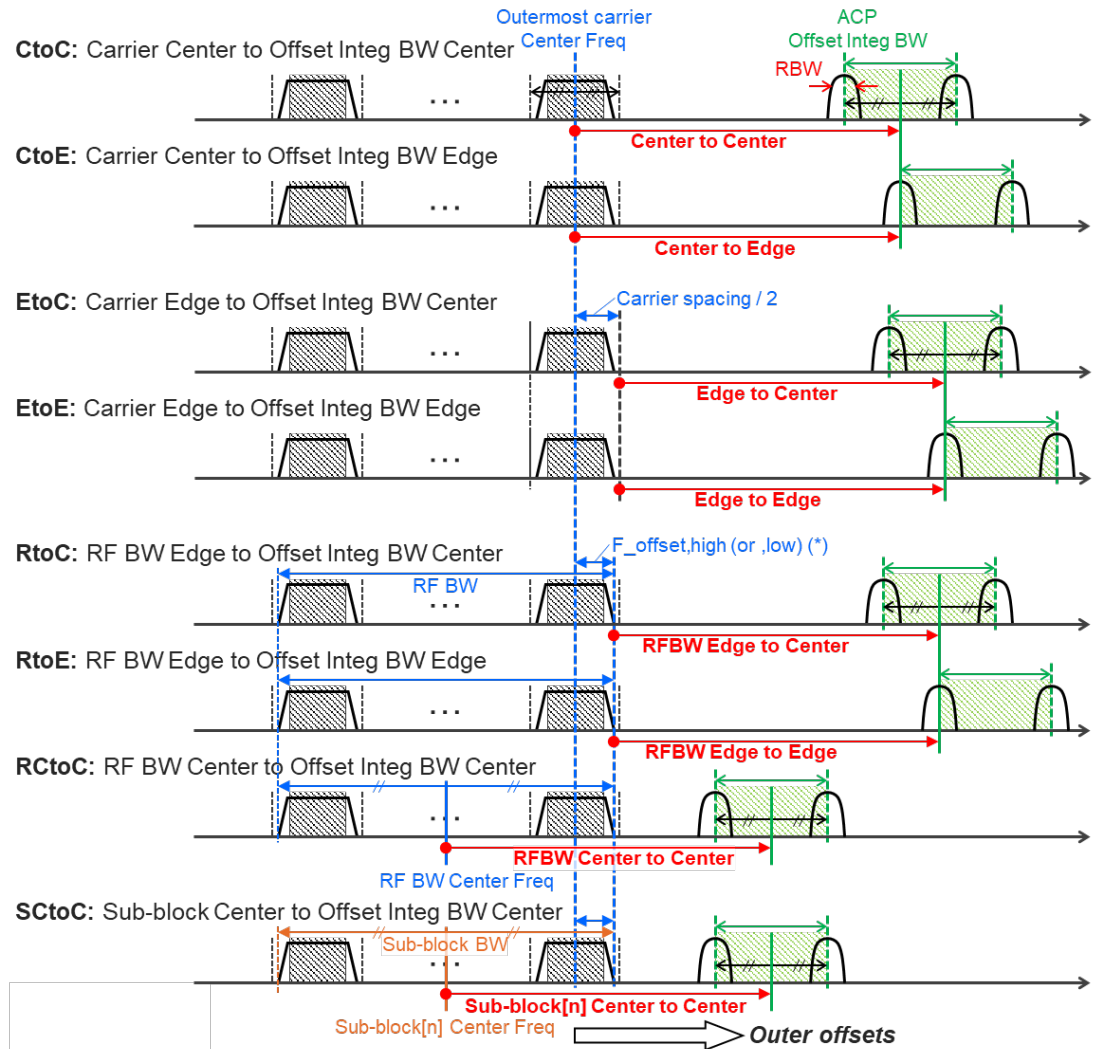

Note:

RF BW Edge and Outermost Carrier Edge are not always the same.
e.g.) 5G NR (3GPP) defines BW_{channel} , CA which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift.

(*) For MSR, $F_{\text{offset,high (or ,low)}} = F_{\text{offset,RAT,high (or ,low)}}$

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

3 5G NR Mode

3.4 ACP Measurement

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREQuency]`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS1:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:LIST?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored												
Couplings	Changing Offset Frequency might affect "Span" on page 754												
Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>WCDMA</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>5G NR</td><td>100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>Radio Test</td><td>25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz</td></tr> </tbody> </table>	Modes	Values	SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code> Auto Function												
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code>												

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>WCDMA</td><td>ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5G NR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>Radio Test</td><td>ON, ON, ON, OFF, OFF, OFF</td></tr> </tbody> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF ON												

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST[:FREquency]`.

Enter each value individually by selecting the desired offset, then enter the Offset Integration Bandwidth.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:STATe`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:LIST:BAND?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value, you must send all values up to that. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values is ignored
Couplings	Changing Integ BW might affect "Span" on page 754

3 5G NR Mode

3.4 ACP Measurement

Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value
Modes	Values
SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz
WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz
LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz
5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz
State Saved	Saved in instrument state
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration]</pre> <pre>[:SENSe]:ACPR:OFFSet[1] 2:LIST:BANDwidth</pre> <pre>[:SENSe]:ACPR:OFFSet[1] 2:LIST:BWIDth</pre> <pre>[:SENSe]:MCPower:OFFSet[1] 2:LIST:BANDwidth[:INTEgration]</pre> <pre>[:SENSe]:MCPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration]</pre>


Offset Side

Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:SIDE`.

NEGative	Negative (lower) sideband only
BOTH	Both of the negative (lower) and positive (upper) sidebands
POSitive	Positive (upper) sideband only

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in MSR, LTEAFDD and LTEATDD Modes.

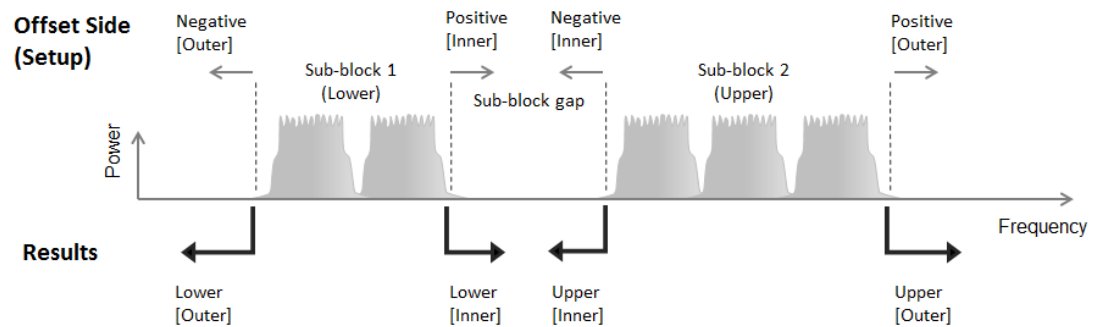

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE NEGative BOTH POSitive, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:SIDE BOTH</code> <code>:ACP:OFFS:LIST:SIDE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored If you set POS or NEG in an offset, result of the inactive side returns -999
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the **Filter Alpha** parameter.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE] ON OFF 1 0, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:LIST:FILT?</code>
Notes	1 ON = RRC Weighted, 0 OFF = Integ BW Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

	Mode	Values
	SA	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	WCDMA	1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1
	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	Radio Test	0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state	
Range	Integ BW RRC Weighted	

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa <real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	<code>:ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</code> <code>:ACP:OFFS:LIST:FILT:ALPH?</code>	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	SA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	WCDMA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	LTEAFDD, LTEATDD, 5G NR, MSR	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	

Advanced (Offset)

Opens a further menu page, which lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, and Filter parameters.

Offset Freq

This column is the same as "Offset Freq" on page 2259 in the main **Offset** menu.

Res BW

Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution <freq>,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>						
Example	<pre>:ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz :ACP:OFFS2:LIST:BAND:RES?</pre>						
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored						
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated						
Couplings	When Res BW Mode is Auto , this value is exactly same as Res BW . When you change this value, Res BW Mode also changes to Man						
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <td>SA</td><td>220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz</td></tr> <tr> <td>WCDMA</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> </table>	SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz	WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz	LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz						
WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
State Saved	Saved in instrument state						
Min/Max	1 Hz/8 MHz						
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:RESolution</pre>						

Auto Function

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO ON OFF 1 0,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1 :ACP:OFFS2:LIST:BAND:RES:AUTO?</pre>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

Backwards
Compatibility
SCPI

`[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:RESolution:AUTO`

Video BW

Enables you to change the instrument post-detection filter (VBW).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:LIST:BAND:VID?</code>								
Notes	The values shown in this table reflect the conditions after Mode Preset Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored								
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated								
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz</td></tr> <tr> <td>WCDMA</td><td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td></tr> </tbody> </table>	Modes	Values	SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz	WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz	LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz
Modes	Values								
SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz								
WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
State Saved	Saved in instrument state								
Min/Max	1 Hz/50 MHz								
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2[:LIST:BANDwidth:VIDeo</code>								

Auto Function

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:LIST:BAND:VID:AUTO?</code>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is ON ON, ON, ON, ON, ON, ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:VIDeo:AUTO</code>

Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE GAUSSian FLATtop,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:LIST:BAND:SHAP?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Dependencies	When " Res BW " on page 738 Mode for the offset is Auto , this cell is grayed out and disabled. Since Res BW Mode for the offset is preset to Auto on changing " Meas Method " on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is GAUSSian GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian
State Saved	Saved in instrument state
Range	GAUSSian FLATtop
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:SHAPE</code>

Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE DB3 DB6,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:LIST:BAND:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored

Dependencies	When "RBW Filter Type" on page 741 is Flattop, or "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is DB3 DB3, DB3, DB3, DB3, DB3, DB3
State Saved	Saved in instrument state
Range	-3 dB (Normal) -6 dB
Backwards Compatibility SCPI	[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:TYPE

Limits

Lets you configure the limits that are used to determine whether the offset regions **PASS** or **FAIL** the limit test.

Limit Test

This checkbox is the same as "Limit Test" on page 849 in the **Meas Setup, Settings** tab.

Offset Freq

This column is the same as "Offset Freq" on page 2259 in the **Offset** index tab.

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. **[:SENSe]:ACPower:OFFSet[n][:OUTer]:LIST:TEST** selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the **[:SENSe]:ACPower:OFFSet[n][:OUTer]:LIST:STATE** command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute < real>,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute?
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:ABS -10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:LIST:ABS?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</td></tr> <tr> <td>WCDMA</td><td>50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> <tr> <td>5G NR</td><td>4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> </tbody> </table>	Modes	Values	SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm	WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm	LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values										
SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm										
WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm										
LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
State Saved	Saved in instrument state										
Min/Max	-200.0 dBm/50.0 dBm										
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA <code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA										

Rel Limit (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote	<code>[:SENSe]:ACP:Power:OFFSet[1] 2[:OUTer]:LIST:RCARrier <real>,...</code>
--------	---

3 5G NR Mode

3.4 ACP Measurement

Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:LIST:RCAR?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0</td></tr> <tr> <td>WCDMA</td><td>-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>5G NR</td><td>-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>Radio Test</td><td>-60, -60, -60, 0, 0, 0</td></tr> </tbody> </table>	Modes	Values	SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0	WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2	LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values												
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0												
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2												
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
Radio Test	-60, -60, -60, 0, 0, 0												
State Saved	Saved in instrument state												
Min/Max	-150/50.0												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:RCARrier</code>												

Positive Offset Limit (Remote Command only)

Enables you to set the upper limit for the upper segment of the specified offset pair.

Remote Command	<code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA<real>,...</code> <code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA 0,0,0,0,0,0</code> <code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	:CALCulate:ACPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA (Power Suite)

Negative Offset Limit(Remote Command only)

Enables you to set the upper limit for the lower segment of the specified offset pair.

Remote Command	:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA <real>, ... :CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:CALC:ACP:OFFS:LIST:LIM:NEG:DATA 0,0,0,0,0,0 :CALC:ACP:OFFS:LIST:LIM:NEG:DATA?
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	<code>:CALCulate:MCPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA</code> (Power Suite, WCDMA)

Rel Limit (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity <rel_ampl>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:LIST:RPSD?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB
WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB
LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

Fail Mask

Accesses a menu that lets you select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:RPSDensity` and `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:STATE`.

Absolute	ABSolute	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	RELative	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	AND	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit and one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	OR	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit or one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2 [:OUTer]:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2 [:OUTer]:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:LIST:TEST?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA, WCDMA	<code>REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL</code>
LTEAFDD, LTEATDD, 5G NR, MSR	<code>AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND</code>

	Modes	Values
	Radio Test	REL, REL, REL, REL, REL, REL
State Saved	Saved in instrument state	
Range	ABSolute AND OR RELative	
Backwards Compatibility SCPI	[:SENSe]:MCPower:OFFSet[1] 2:LIST:TEST	

Inner Offset

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

Offset Frequency Define

Allows you to select "Offset" definition:

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge frequency of each Offset Integ BW
STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of each Offset Integ BW
STOEdge	From either the lower or upper sub-block edge frequency to the closest edge frequency of each Offset Integ BW
SCTOCenter	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

5G NR Mode only

** sub-block (bandwidth) = $BW_{\text{channel,block}}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$.

See "Diagram for Offset Freq Define" on page 857


Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:TYPE ETOC</pre> <pre>:ACP:OFFS:INN:TYPE?</pre>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</code>

Mode: 5G NR

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:TYPE ETOC</pre> <pre>:ACP:OFFS:INN:TYPE?</pre>
Preset	<code>STOCenter CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code>

Diagram for Offset Freq Define

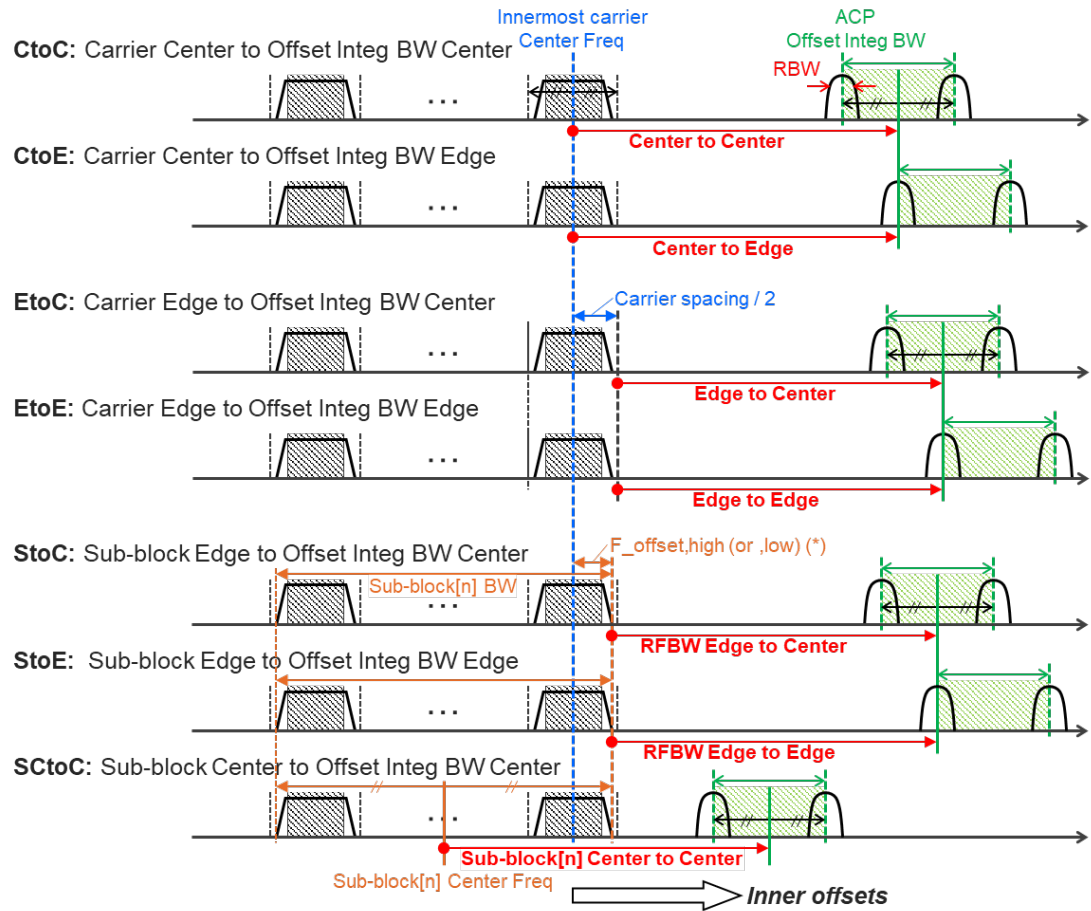

Note:

RF BW Edge and Outermost Carrier Edge are not always same.
e.g.) 5G NR (3GPP) defines BW_channel,CA which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift

(*) For MSR, $F_{\text{offset,high}} \text{ (or ,low)} = F_{\text{offset,RAT,high}} \text{ (or ,low)}$

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the frequency difference between the center of the main channel and the near edge of the offset.

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect "Span" on page 754						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>All Others</td><td>2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0</td></tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement Auto Function						
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF						
State Saved	Yes						

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset on the **Offset** menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the **Offset Integration Bandwidth** menu key.

You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST:STATe`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTeGration] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTeGration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:INN:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND?</code>								
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value you must send all values up to it. Subsequent values remain unchanged								
Couplings	Changing Integ BW might affect " Span " on page 754								
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value								
	<table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td>LTEAFDD</td><td>3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz</td></tr> <tr> <td>MSR, LTEATDD</td><td>4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</td></tr> <tr> <td>5G NR</td><td>19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td></tr> </table>	Modes	Values	LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz	MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz	5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Modes	Values								
LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz								
MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz								
5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz								
State Saved	Saved in instrument state								
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement								


Offset Side

Lets you turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:SIDE`.

- **NEGative** - The upper side in the sub-block gap only (that is, negative sideband of the upper sub-block) is enabled

- **BOTH** - Both sides in the sub-block gap are enabled
- **POSitive** - The lower side in the sub-block gap only (that is, positive sideband of the lower sub-block) is enabled

The diagram below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTEAFDD and LTEATDD Modes.

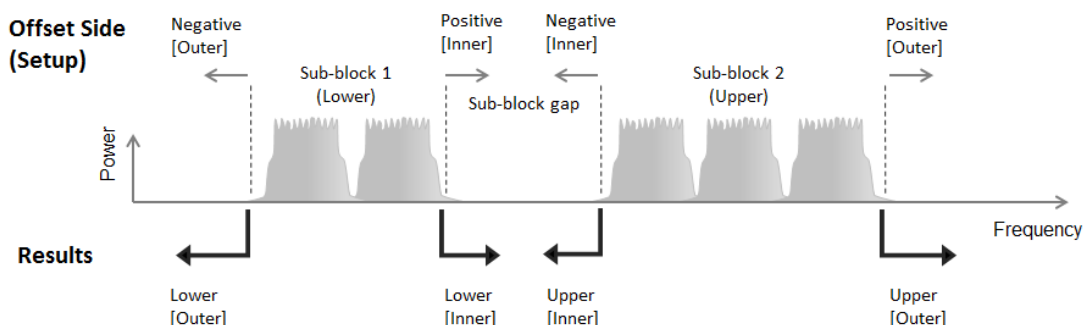

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE NEGative BOTH POSitive, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:SIDE BOTH</code> <code>:ACP:OFFS:INN:LIST:SIDE?</code>
Notes	If you set POS or NEG in an offset, result of the inactive side returns -999
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Lets you turn RRC filtering of each offset on or off. The value (roll off) for the filter is set to the value of the Filter Alpha parameter.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe] ON OFF 1 0, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:INN:LIST:FILT?</code>
Notes	1 ON = RRC Weighted, 0 OFF = Integ BW

Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD</td><td>1,1,1,1,1,1 1,1,1,1,1,1</td></tr> <tr> <td>MSR, LTEATDD, 5G NR</td><td>0,0,0,0,0,0 0,0,0,0,0,0</td></tr> </tbody> </table>	Modes	Values	LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1	MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0
Modes	Values						
LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1						
MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0						
State Saved	Saved in instrument state						
Range	Integ BW RRC Weighted						

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FiLTeR:ALPHa <real>,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FiLTeR:ALPHa?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:LIST:FiLT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</pre> <pre>:ACP:OFFS:INN:LIST:FiLT:ALPH?</pre>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 0.22 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00

Advanced (Inner Offset)

Opens a further menu page that lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, Filter and "Power Ref" on page 2240 parameters.

Offset Freq

The same as "Offset Freq" on page 2273 in the main Inner Offset menu.

Res BW

Sets the Resolution Bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BAWdth:RESolution <freq>,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BAWdth:RESolution?</pre>
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES?</code>
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this control is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated
Couplings	When " Res BW " on page 738 Mode is Auto , this value is exactly the same as Res BW . When you change this value, Res BW Mode also changes to Man
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 100 kHz 100 kHz, 100 kHz, 100k Hz, 100 kHz 100 kHz,100 kHz, 100 kHz,100 kHz, 100 kHz, 100 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/8 MHz
Auto Function	
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO ON OFF 1 0,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO?</code>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

Video BW

Lets you change the instrument post-detection filter (VBW).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID?</code>
Notes	The values shown in this table reflect the conditions after Mode Preset
Dependencies	When " Meas Method " on page 768 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 1 MHz 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz

3 5G NR Mode

3.4 ACP Measurement

State Saved	Yes
Min/Max	1 Hz/50 MHz
	Auto Function
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is ON ON, ON, ON, ON, ON, ON
State Saved	Yes

Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE GAUSSian FLATtop,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:INN:LIST:BAND:SHAP?</code>
Dependencies	When "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is GAUSSian GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian
State Saved	Saved in instrument state
Range	GAUSSian FLATtop

Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE DB3 DB6,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE?</code>
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:INN:LIST:BAND:TYPE?</code>
Dependencies	When "RBW Filter Type" on page 741 is FLATtop or "Res BW" on page 738 Mode for the offset is Auto , this cell is grayed-out and disabled. Since Res BW Mode for the offset is preset to Auto on changing "Meas Method" on page 768 to RBW, FAST or Fast Power, this cell is also grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is DB3 DB3, DB3, DB3, DB3, DB3, DB3
State Saved	Saved in instrument state
Range	-3 dB (Normal) -6 dB

Power Ref Type

Lets you set reference types of inner offsets.

CUMulative Cumulated power of the upper and lower sub-block carriers is the reference level. This selection is effective only when one of the following "Power Ref" on page 2240 values is selected:

Left & Right Carriers	LRCarriers
Max Power Carrier in Sub-block	MPCSubblock
Min Power Carrier in Sub-block	MINSubbloc
Left & Right Sub-blocks	LRSubblocks
Manual	MANual

When one of the other **Power Ref** values is selected, carrier powers are not cumulated, and the reference level is equivalent to Normal

NORMal Power of specified carrier or the manual reference level is the reference level

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference CUMulative NORMal, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:PREF CUM,CUM,NORM,NORM,NORM,NORM</code> <code>:ACP:OFFS:INN:LIST:PREF?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is NORMal NORMal, NORMal, NORMal, NORMal, NORMal, NORMal
State Saved	Saved in instrument state
Range	CUMulative NORMal Auto Function

3 5G NR Mode

3.4 ACP Measurement

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFeRence:AUTO OFF ON 0 1, ... [:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFeRence:AUTO?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>																												
Example	<pre>:ACP:OFFS:INN:LIST:PREF:AUTO OFF,OFF,OFF,OFF,OFF,OFF :ACP:OFFS:INN:LIST:PREF:AUTO?</pre>																												
Dependencies	Available only in LTEAFDD, LTEATDD and 5G NR Modes																												
Couplings	<p>When in the LTEAFDD, LTEATDD Modes, the inner power ref type is set automatically when the power ref type state is auto according to the scopes of the sub-block gap in the following table</p> <table><tr><th>Sub-block Gap</th><th>Inner ACP offset</th><th>Power Ref Type</th></tr><tr><td rowspan="2">Wgap <5MHz</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr><tr><td rowspan="2">5MHz≤ Wgap <10MHz</td><td>1st (2.5MHz)</td><td>Cumulative</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr><tr><td rowspan="2">10MHz≤ Wgap <15MHz</td><td>1st (2.5MHz)</td><td>Cumulative</td></tr><tr><td>2nd (7.5MHz)</td><td>Cumulative</td></tr><tr><td rowspan="2">15MHz≤ Wgap <20MHz</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Cumulative</td></tr><tr><td rowspan="2">20MHz≤ Wgap</td><td>1st (2.5MHz)</td><td>Normal</td></tr><tr><td>2nd (7.5MHz)</td><td>Normal</td></tr></table> <p>When in 5G NR Mode, Power Ref Type “Auto” sets the power reference type of inner-ACLR offset automatically</p> <p>Downlink: “Cumulative” or “Normal” is selected accordingly when the inner-offsets are configured to meet the test requirements as follows:</p> <p>FR1, 3GPP TS 38.141-1 v16.5.0 (2020-09) Section 6.6.3.5.3 BS type 1-C:</p> <ul style="list-style-type: none">– Table 6.6.3.5.2-3: Base Station ACLR limit in non-contiguous spectrum or multiple bands– Table 6.6.3.5.2-4: Base station CACLR limit <p>FR2, 3GPP TS 38.141-2 v16.5.0 (2020-09) Section 6.7.3.5.3 BS type 2-O:</p> <ul style="list-style-type: none">– Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum– Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum <p>Uplink: “Normal” is always selected</p>	Sub-block Gap	Inner ACP offset	Power Ref Type	Wgap <5MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal	5MHz≤ Wgap <10MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Normal	10MHz≤ Wgap <15MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Cumulative	15MHz≤ Wgap <20MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Cumulative	20MHz≤ Wgap	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal
Sub-block Gap	Inner ACP offset	Power Ref Type																											
Wgap <5MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
5MHz≤ Wgap <10MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Normal																											
10MHz≤ Wgap <15MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Cumulative																											
15MHz≤ Wgap <20MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Cumulative																											
20MHz≤ Wgap	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <pre>ON, ON, ON, ON, ON, ON OFF, OFF, OFF, OFF, OFF, OFF</pre>																												
State Saved	Saved in instrument state																												
Range	Auto Man																												

Inner Limits

Accesses a menu of functions that contains Select Offset, Abs Limit, Rel Limit and Fail Mask parameters.

Limit Test

This checkbox is the same as "Limit Test" on page 849 in the **Settings** tab.

Offset Freq

This column is the same as "Offset Freq" on page 2273 in the **Offset** tab.

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:ABSolute < real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:ABSolute?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:INN:LIST:ABS?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td></tr> <tr> <td>All Others</td><td>-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td></tr> </tbody> </table>	Modes	Values	5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0	All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0
Modes	Values						
5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
State Saved	Saved in instrument state						
Min/Max	-200.0 dBm/50.0 dBm						

Rel Limit (Car)

Specifies a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RCARrier <real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:RCAR?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>All Others</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> </tbody> </table>	Modes	Values	5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Modes	Values						
5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
State Saved	Saved in instrument state						
Min/Max	-150/50.0						

Rel Limit (PSD)

Specifies a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDeNsity <rel_amp1>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDeNsity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:INN:LIST:RPSD?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 0 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

Fail Mask

Accesses a menu that enables you to select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:RPSDeNsity` and `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

Option	SCPI	Description
Absolute	<code>ABSolute</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	<code>RELative</code>	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	<code>AND</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>and</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	<code>OR</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>or</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST?</code>
----------------	--

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:INN:LIST:TEST?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is AND AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND
State Saved	Saved in instrument state
Range	ABSolute AND OR RELative

Reference Carrier (Carrier Index)

Sets the reference carrier. Relative power measurements are made from the reference carrier.

If set to **Auto**, the measurement selects the carrier with the highest power as the reference carrier and the Ref Carrier parameter is updated. If a value is entered when Ref Carrier Mode is set to **Auto**, the mode changes to **Man**.

If set to **Man**, the value that you enter for the Ref Carrier is used as the reference carrier.

In MSR, LTEAFDD, LTEATDD and 5G NR Modes, this control is called **Carrier Index** and has a different SCPI command. In these Modes, it sets the carrier index of the reference power. The power of the carrier selected by this index becomes reference power when "Power Ref" on page 2240 is **Carrier Index**. Any value up to the MAX can be set, though the measurement only deals with number of carriers specified by Carrier. If the index is larger than Carrier, reference power in this measurement becomes **NaN** and therefore all relative power results are **NaN**.

For more information, see "Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5GNR)" on page 870.

Remote Command	<code>[[:SENSe]:ACPower:CARRier[1] 2:RCARrier <integer></code> <code>[[:SENSe]:ACPower:CARRier[1] 2:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR 1</code> <code>:ACP:CARR:RCAR?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored For LTEAFDD and LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Dependencies	Grayed-out if there is only one carrier Does not appear in MSR, LTEAFDD, LTEATDD and 5G NR Modes

Couplings	If you enter a carrier value that is currently configured as having no power present, that carrier changes to having power present
Preset	Auto determined
State Saved	Saved in instrument state
Min/Max	1/Number of available carriers
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:RCARrier[1] 2</code> Auto Function
Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO OFF ON 0 1</code> <code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR:AUTO OFF</code> <code>:ACP:CARR:RCAR:AUTO?</code>
Couplings	If you enter a ref carrier this parameter will be set to manual
Preset	1
State Saved	Yes
Range	Auto Man
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:RCARrier[1] 2:AUTO</code> (Power Suite)

Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5G NR)

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:INDeX <integer></code> <code>[:SENSe]:ACPower:CARRier[1] 2:INDeX?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:IND 1</code> <code>:ACP:CARR:IND?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Only appears in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	LTEAFDD, LTEATDD: 1/Dependent on Num Component Carriers 5G NR: 1/Dependent on Num Component Carriers MSR: 1/100

Carrier Index Zero Base (Remote Command Only)

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBASe <integer></code> <code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBASe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR:ZBAS 1</code> <code>:ACP:CARR:RCAR:ZBAS?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Not available in multicarrier applications (MSR, 5GNR, LTE Modes)
Couplings	Coupled with: <code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier <integer></code>
Preset	0
State Saved	Saved in instrument state
Min	0
Max	9

Measurement Type

Changes the reference used for the measurement. This allows you to make absolute and relative power measurements of either total power or the power normalized to the measurement bandwidth.

- Total Pwr Ref (**TPRef**) sets the reference to the total carrier power
- PSD Ref (**PSDRef**) sets the reference to the power spectral density of the carrier

Remote Command	<code>[:SENSe]:ACPower:TYPE TPRef PSDRef</code> <code>[:SENSe]:ACPower:TYPE?</code>
Example	<code>:ACP:TYPE PSDR</code> <code>:ACP:TYPE?</code>
Preset	TPRef
State Saved	Saved in instrument state
Range	Total Power Ref PSD Ref

Power Ref

Selects the power reference type. This control has two different forms, depending on the currently-selected Mode:

- "Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 872
- "Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 872

Power Ref (Modes: SA, WCDMA, VMA, SRComms)

Type	Option	Description
Ref Carrier	RCARrier	Power of the specified carrier is the reference of measurement. Use the Reference Carrier control to select Carrier Index
Manual Power	MANual	Power or PSD specified by the user is the reference of measurement
Total Multicarriers	TMCarrriers	Total Power of multi carriers is the power reference of measurement. Each carrier power is calculated with its own carrier configuration settings
Remote Command	[:SENSe]:ACPower:CARRier[1] 2:PREFERENCE:TYPE RCARrier MANual TMCarrriers [:SENSe]:ACPower:CARRier[1] 2:PREFERENCE:TYPE? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	:ACP:CARR:PREF:TYPE RCARrier :ACP:CARR:PREF:TYPE?	
Notes	Available only in SA, WCDMA, VMA and Short-Range Comms Modes Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored	
Preset	RCARrier	
State Saved	Saved in instrument state	
Range	RCARrier MANual TMCarrriers	

Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)

Selects the power reference type:

Type	Option	Description
Left & Right Carriers	LRCarriers	Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Left and right carriers are determined based on the carrier center frequencies. If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are NaN. Relative limits are not evaluated
Max Power Carrier	MPCarrier	Maximum carrier power among the carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN . Relative limits are not evaluated
Min Power	MINPcarrier	Minimum carrier power among the carriers of Measure Carrier On is the


3 5G NR Mode

3.4 ACP Measurement


Type	Option	Description
Carrier 5G NR only		reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NAN . Relative limits are not evaluated
Carrier Index	CINdex	Power of the specified carrier is the reference of measurement. If Measure Carriers of this carrier index is off, the reference power and all the relative power results are NAN . Relative limits are not evaluated
Manual	MANual	Power or PSD specified by the user is the reference of measurement
Aggregated Chan BW LTEAFDD, LTEATDD, 5G NR only	ACBandwidth	The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NAN . Relative limits are not evaluated
Max Power Carrier in Sub- block	MPCSubblock	Maximum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NAN , and these relative limits are not evaluated
Total Multicarriers MSR only	TMCarrriers	Total power of multi carriers is the power reference of measurement. Each carrier power is calculated with its own carrier configuration settings
Min Power Carrier in Sub- block 5G NR only	MINSubbloc	Minimum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NAN , and these relative limits are not evaluated
Left & Right Sub- blocks 5G NR only	LRSubblocks	The reference depends on the number of Component Carriers (CC) and Carrier Allocation as follows: <ul style="list-style-type: none"> – Num of CC is 1: the carrier power is the reference – Num of CC is 2 or more & Carrier Allocation is Contiguous: Aggregated Channel power is the reference – Num of CC is 2 or more & Carrier Allocation is Non-Contiguous: Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration

The powers of carriers are not included in the reference power when their Measure Carriers are Off. When Measure Carriers of all the carriers in a sub-block are Off, the reference power and all the relative power results are **NaN**. Therefore, relative limits are not evaluated.

Measurement Type = Total Power Ref

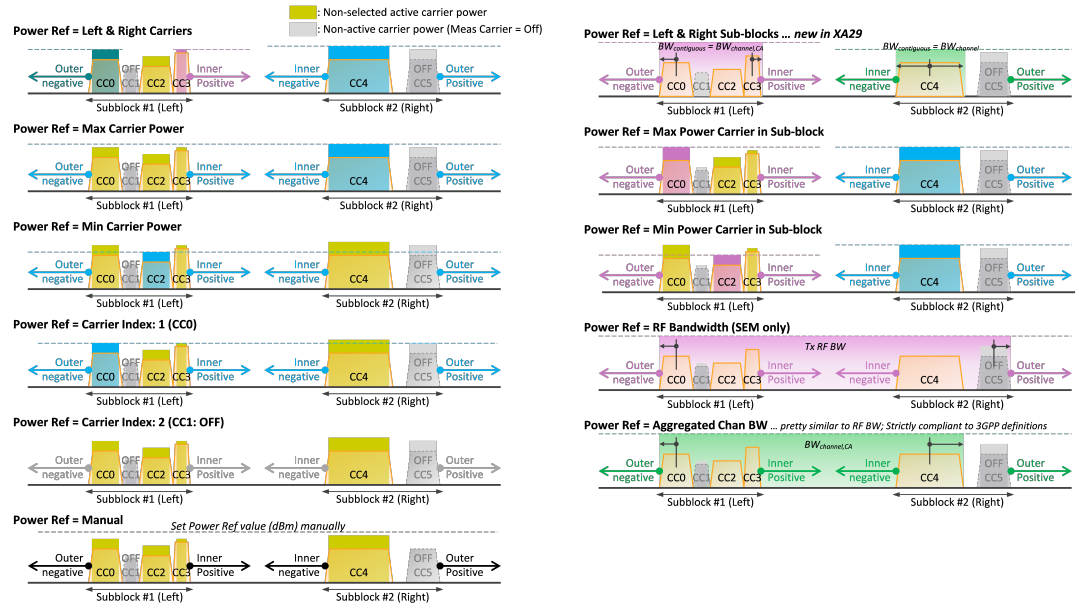

Measurement Type = PSD Ref

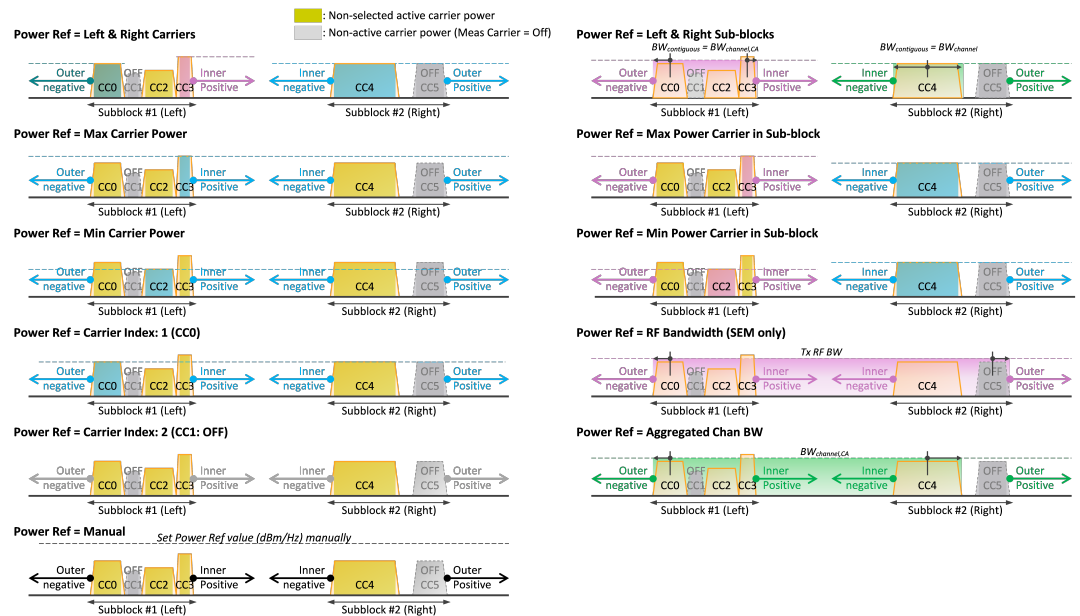

Remote

[:SENSe] :ACPower:CARRier[1] | 2:PREference:TYPE LRCarriers | MPCarrier | CINDEX

3 5G NR Mode

3.4 ACP Measurement

Command	<code> MANual MPCSubblock ACBandwidth TMCarrriers MINPcarrier MINSubblock LRSubblocks</code> <code>[:SENSe]:ACPpower:CARRier[1] 2:PREference:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:PREF:TYPE CIND</code> <code>:ACP:CARR:PREF:TYPE?</code>
Notes	Available only in MSR, LTEAFDD, LTEATDD and 5G NR Modes <code>ACBandwidth</code> is available only in LTEAFDD, LTEATDD and 5G NR Modes <code>TMCarrriers</code> is available only in MSR Mode <code>MINPcarrier</code> , <code>MINSubblock</code> , and <code>LRSubblocks</code> are available only in 5G NR Mode Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Preset	<code>MPCarrier</code>
State Saved	Saved in instrument state

Power Ref State (Remote Command Only)

Remote Command	<code>[:SENSe]:ACPpower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:ACPpower:CARRier[1] 2:AUTO[:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:AUTO OFF</code> <code>:ACP:CARR:AUTO?</code>
Preset	<code>ON</code>
State Saved	Saved in instrument state
Range	Auto Man
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe]</code>

Total Power Ref

Sets manual total power reference.

This control has two different forms, depending on the currently-selected Mode:

- "Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 876
- "Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 876

Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when Power Ref is Manual and "Measurement Type" on page 2240 is Total Power.

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2[:POWer] <real></code> <code>[:SENSe]:ACPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected
Dependencies	Available only when Measurement Type is TPRef , otherwise grayed-out
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2[:POWer]</code>

Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)

Sets the multi-carrier power reference. This is used when Power Ref is Manual and "Measurement Type" on page 2240 is Total Power.

When set to **Auto**, the carrier power result reflects the measured power value in the selected reference carrier.

When set to **Man**, the result is referenced to the last measured value, or you may specify the reference for the multi-carrier power measurement. Relative values are displayed, referenced to the "Power Reference" value.

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2[:POWer] <real></code> <code>[:SENSe]:ACPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>

Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p> <p>The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected</p>
Dependencies	Enabled when "Measurement Type" on page 2240 is Total Power and "Power Ref" on page 2240 is Manual
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2[:PWEr]</code>

PSD Ref

Sets manual PSD reference.

This control has two different forms, depending on the currently-selected Mode:

- "PSD Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 877
- "PSD Ref (Modes: LTEAFDD, LTEATDD, 5GNR, MSR)" on page 878

PSD Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when "Power Ref" on page 2240 is Manual and "Measurement Type" on page 2240 is PSD.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is PSD Ref.

Remote Command	<code>[:SENSe]:ACPPower:CARRier[1] 2:CPSD <real></code> <code>[:SENSe]:ACPPower:CARRier[1] 2:CPSD?</code> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<code>:ACP:CARR:CPSD 25</code> <code>:ACP:CARR:CPSD?</code>
Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p>

Dependencies	Available only when Measurement Type is PSDRef , otherwise grayed-out
Couplings	The value of PSD Ref is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-999/999

Power Ref State (Backwards Compatibility SCPI)

Sets the Power Reference State to auto or manual.

Example	<pre>:ACP:CARR:AUTO OFF :ACP:CARR:AUTO? :MCP:CARR:AUTO ON :MCP:CARR:AUTO?</pre>
Notes	<p>For backwards compatibility with legacy SA and WCDMA, this command is supported</p> <p>When ON, corresponds to the Ref Carrier of the "Power Ref" on page 2240 selection</p> <p>When OFF, corresponds to the Manual of the Power Ref selection</p>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe]? [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe]?</pre>

PSD Ref (Modes: LTEAFDD, LTEATDD, 5GNR, MSR)

Sets manual PSD reference. This is used when "Power Ref" on page 2240 is **Manual** and "Measurement Type" on page 2240 is **PSD**.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is set to **PSD Ref**. When the **PSD Ref** state is set to **Auto**, this will be set to the measured carrier power spectral density.

Remote Command	<pre>[:SENSe]:ACPower:CARRier[1] 2:CPSD <real> [:SENSe]:ACPower:CARRier[1] 2:CPSD?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:CPSD 25</pre>

3 5G NR Mode

3.4 ACP Measurement

	:ACP:CARR:CPSD?
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Enabled when " Measurement Type " on page 2240 is PSD Reference and Power Ref is Manual
Couplings	The value of PSD is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-/+999

PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz (**DBMHZ**) and dBm/MHz (**DBMMHZ**).

Remote Command	:UNIT:ACPower:POWer:PSD DBMHZ DBMMHZ :UNIT:ACPower:POWer:PSD?
Example	:UNIT:ACP:POW:PSD DBMMHZ :UNIT:ACP:POW:PSD?
Dependencies	Enabled when " Measurement Type " on page 2240 is PSD Reference
Couplings	When the PSD unit is changed, the PSD reference result of :MEAS READ FETCH:ACP[n]? is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz)
Preset	DBMHZ
State Saved	Saved in instrument state
Range	dBm/Hz dBm/MHz

3.4.13.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	[:SENSe]:CCARrier:COUnT <integer> [:SENSe]:CCARrier:COUnT?
----------------	---

Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

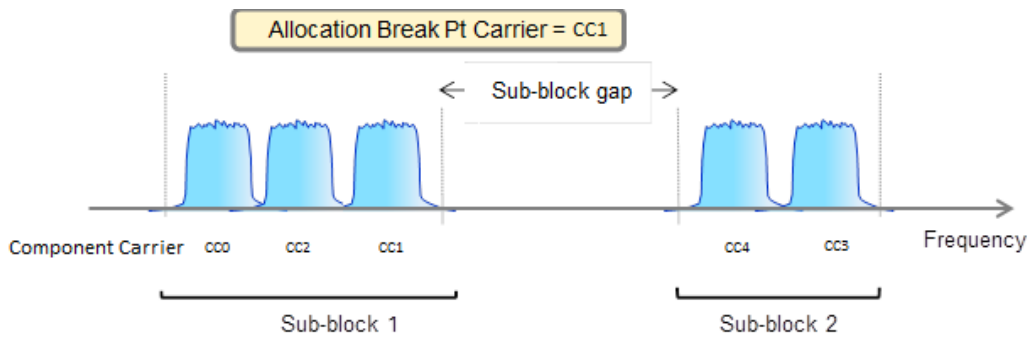

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	
	Carrier Aggregation	
	Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink

	Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> Option B25: B20M Option B40: B35M Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> 50 MHz and 100 MHz: FR1 and FR2

3 5G NR Mode

3.4 ACP Measurement

	<ul style="list-style-type: none"> – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action “Apply Preset (to All CCs)” is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq> [:SENSe]:CCARrier<n>:FREQuency:OFFSet?
Example	:CCAR4:FREQ:OFFS 10MHz :CCAR4:FREQ:OFFS?
Notes	<p>Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers</p> <p>Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1 [:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?
----------------	---

Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>	
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>	
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS	
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1	
	Bandwidth	Downlink ACP Meas Noise BW (MHz)
		Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.500
	10 MHz	9.360
	15 MHz	14.220
	20 MHz	19.080

	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
When Freq Range is FR2			
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS

Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with "SCS Enabled" on page 1831.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.4.13.4 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.

This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	Changing the direction affects the gate source as follows <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1

	<p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Multi Channel Synchronous Acquisition (UXM Only)

Enables you to perform multiple synchronous acquisition. When On, acquires signals simultaneously from multiple inputs specified in the Multi Channel Config dialog. The acquired data is assigned to each trace according to the Channel Assignment settings in the Trace Settings Table dialog.

Remote Command	<code>[:SENSe]:RADio:MCHannel:SACQuisition[:STATe] ON OFF 1 0</code> <code>[:SENSe]:RADio:MCHannel:SACQuisition[:STATe]?</code>
Example	<code>:RAD:MCH:SACQ ON</code> <code>:RAD:MCH:SACQ?</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
Preset	OFF
State Saved	Yes

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-

channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHanne1:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHanne1:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "[Multi Channel Synchronous Acquisition \(UXM Only\)](#)" on page 890

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a `:READ` or `:FETCh` query:

3 5G NR Mode

3.4 ACP Measurement

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:<meas>:MTRace?</code> <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power <code>:CALC:CHP:MTR TRAC1</code> <code>:CALC:CHP:MTR?</code>
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at ["Input Port \(UXM\)" on page 2456](#) is assigned to a trace. This setting is valid when ["Multi Channel Synchronous Acquisition \(UXM Only\)" on page 2457](#) is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	<code>:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12</code> <code>:TRACe[1] 2 3:<meas>:CHANne1?</code>
Example	For the ACP measurement Trace 2 <code>:TRAC2:ACP:CHAN CHAN2</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out

Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	<p>Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition</p> <p>Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On</p> <p>This column is blank when Math Function is other than Off</p>
--------------	--

EIRP (Synchronous Acquisition) (UXM Only)

Enables you to preset the following parameters. Preset is made such that Trace 3 becomes the sum of Trace 1 and Trace 2 to which data from Channel 1 and Channel 2 are assigned. The measurement result is calculated based on Trace 3.

This parameter is useful when performing the EIRP measurement by acquiring signals from two ports simultaneously.

Multi Channel Synchronous Acquisition	On
--	-----------

Target trace parameters are those of the PowerSuite measurements supporting multi channel synchronous acquisition in the UXM model E7515B.

	Trace 1	Trace 2	Trace 3
Channel Assignment	Channel 1	Channel 2	Channel 1
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	Active	Active
Math Function	Off	Off	Power Sum
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2
Math Trace	Trace 3		

Remote Command	<code>[:SENSe]:RADio:MCHannel:PRESet:EIRP</code>
Example	<code>:RAD:MCH:PRES:EIRP</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

Restore Defaults (UXM Only)

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
Measure Trace		Trace1	
	Trace 1	Trace 2	Trace 3
View/Blank	Active	Blank	Blank
Math Function	Off	Off	Off
Remote Command	[:SENSe]:RADio:MCHannel:PRESet:DEFault		
Example	:RAD:MCH:PRES:DEF		
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition		

Interfering Signal Present

Sets whether interference signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in Adjacent Channel, Spectrum Emission Mask and Spurious Emissions measurements.

NOTE This setting is available for ACP, EVM, SEM and Spur.

Remote Command	[:SENSe]:RADio:IMODulation:INTerference[:STATe] OFF ON 0 1 [:SENSe]:RADio:IMODulation:INTerference[:STATe]?
Example	:RAD:IMOD:INT 1 :RAD:IMOD:INT?
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

Freq Offset From Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

NOTE This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min	0 Hz
Max	400 MHz

Span

Sets the span of the interference signal for intermodulation tests.

NOTE This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SPAN <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min	200 kHz
Max	400 MHz

Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

NOTE This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SIDE NEGative POSitive</code> <code>[:SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>

Preset	POSitive
State Saved	Saved in instrument state

Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- Inner – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- Outer – The interfering signal exists at either of the outer regions

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:REGion INNER OUTER</code> <code>[:SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

Interfering Signal Exclude Range

Enables you to select the offset range to be excluded from the measurement.

- Offset Integ BW (OIBW) – Exclude an entire ACP offset range where the interfering signal is allocated
- Interfering Signal Span (ISSP) – Exclude only the span where the interfering signal is occupied

NOTE

This setting is available only for the ACP and Modulation Analysis measurements.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2 OIBW ISSPan</code> <code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2?</code>
Example	<code>RAD:IMOD:INT:RANG:EXCL OIBW</code> <code>RAD:IMOD:INT:RANG:EXCL?</code>
Notes	Subopcode 1 for Downlink, 2 for Uplink. Default is Downlink.

Preset	Downlink: ISSPan Uplink: OIBW
State Saved	Saved in instrument state
Range	Offset Integ BW Interfering Signal Span

3.4.13.5 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs) or the values on the controls will *not* affect the Component Carriers.**

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the **Component Carriers**.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>								
Example	<code>:RAD:STAN:PREs:FREQ:RANG FR1</code> <code>:RAD:STAN:PREs:FREQ:RANG?</code>								
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 899 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table><tr><th>Bandwidth</th><th>FR</th></tr><tr><td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr><tr><td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr><tr><td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr></table> <p>When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable</p>	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:STANdard:PRESet:FRANge</code>								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz

	60,...90 MHz					
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "Duplex Mode" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRES:TRAN:PER P0_5MS</code> <code>:RAD:STAN:PRES:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	P5MS

State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code>
----------------	---

	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	“DDDDDDDSUU”

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as ["Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321](#).

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the ["Number of Component Carriers" on page 3292](#) will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 905 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRES:SCS SCS30K</code> <code>:RAD:STAN:PRES:SCS?</code> <code>:RAD:STAN:PRES:SCS:AUTO 0</code> <code>:RAD:STAN:PRES:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 905
Preset	<code>SCS30K</code> <code>ON</code>

State Saved

Yes

Yes

Range

u = 0: 15 kHz | u = 1: 30 kHz | u = 2: 60 kHz | u = 3: 120 kHz | u = 5: 480 kHz | u = 6: 960 kHz

Auto|Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and

“DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1D0T1 DLTm1D0T2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3D0T1 DLTm3D0T1Q16 DLTm3D0T1QPS DLTm3D0T1A DLTm3D0T1B DLTm3D0T2 DLTm3D0T3 FPIBPSK DLTm1D0T1P1 DLTm1D0T1L2 For selection details, see "Available Selections" on page 907 [:SENSe]:RADio:STANdard:PRESet:RBALloc?
Example	:RAD:STAN:PRES:RBAL DLTm1D0T1 :RAD:STAN:PRES:RBAL?
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 907
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)

3 5G NR Mode
3.4 ACP Measurement

Group	Configuration
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM	CP-	DFT-s-	CP-	DFT-s-

	FR	FR1		FR2		FR2-1		FR2-2	
	Type	OFDM	OFDM	OFDM	OFDM	OFDM	OFDM	OFDM	OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓	✓	✓	✓	✓
	Fulfilled 1024 QAM								
	Fulfilled Pi/2 BPSK		✓		✓		✓		✓
DL NR-TMxx	All								

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the

other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSoFdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRES:OTYP CPOF</code> <code>:RAD:STAN:PRES:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	CPOFdm

State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press *Apply Preset (to all CCs)* or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 911</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PREs:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN?</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 911
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>

State Saved

Yes

Yes

Range

None| $f \leq 1.0$ GHz| $1.0 < f \leq 3.0$ GHz| $3.0 < f \leq 4.2$ GHz| $4.2 < f \leq 6.0$ GHz| $6.0 < f \leq 7.125$ GHz| $24.25 < f \leq 29.5$ GHz| $37.0 < f \leq 43.5$ GHz| $43.5 < f \leq 48.2$ GHz| $52.6 < f \leq 71.0$ GHz

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command `[:SENSe]:RADio:STANDard:PRESet:DLINK:BS:TYPE FR1C | FR1O | FR2O`

	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRES:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>FR1C</code>
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code>

	:RAD:STAN:PRES:DLIN:BS:CAT?
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWArea
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra [:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?
Example	:RAD:STAN:PRES:DLIN:ACH NR :RAD:STAN:PRES:DLIN:ACH?
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra [:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?
Example	:RAD:STAN:PRES:ULIN:ACH NR :RAD:STAN:PRES:ULIN:ACH?
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINk:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINk:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	<code>PUS</code>
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAME:SYNC[:SOURce]?</code>
----------------	--

Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAMe GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press “**Apply Preset (to all CCs)**” or the values on the controls in the “Configure Presets” section of the menu panel will *not* affect the Component Carriers.

Remote	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
--------	--

Command	
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	<p>Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again</p> <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	<p>Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM</p> <p>NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3</p>	<p>Fulfilled Pi/2-BPSK (for DFT-s-OFDM only),</p> <p>Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM</p>
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	<p>None,</p> <p>$f \leq 1.0$ GHz (FR1),</p> <p>$1.0 < f \leq 3.0$ GHz (FR1),</p> <p>$3.0 < f \leq 4.2$ GHz (FR1),</p> <p>$4.2 < f \leq 6.0$ GHz (FR1),</p>	<p>None,</p> <p>$f \leq 1.0$ GHz (FR1),</p> <p>$1.0 < f \leq 3.0$ GHz (FR1),</p> <p>$3.0 < f \leq 4.2$ GHz (FR1),</p> <p>$4.2 < f \leq 6.0$ GHz (FR1),</p>

3 5G NR Mode

3.4 ACP Measurement

	6.0 < f ≤ 7.125 GHz (FR1), 24.25 < f ≤ 29.5 GHz (FR2-1), 37.0 < f ≤ 43.5 GHz (FR2-1), 43.5 < f ≤ 48.2 GHz (FR2-1), 52.6 < f ≤ 71.0 GHz (FR2-2)	6.0 < f ≤ 7.125 GHz (FR1), 24.25 < f ≤ 29.5 GHz (FR2-1), 37.0 < f ≤ 43.5 GHz (FR2-1), 43.5 < f ≤ 48.2 GHz (FR2-1), 52.6 < f ≤ 71.0 GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS),

PRACH Config Index 0 (120 kHz SCS),
SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "**Apply Preset (to All CCs)**" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			Table 6.6.4.5.2-3
			$3.0 < f \leq 4.2$ GHz,			
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			

3 5G NR Mode

3.4 ACP Measurement

Cat B WA BS	GHz	
	$f \leq 1.0$ GHz	Table 6.6.4.5.3.1-1
	None,	Table 6.6.4.5.3.1-2
Cat A MR BS, Cat B MR BS	$1.0 < f \leq 3.0$ GHz	
	$3.0 < f \leq 4.2$ GHz,	Table 6.6.4.5.3.1-3
	$4.2 < f \leq 6.0$ GHz,	
	$6.0 < f \leq 7.125$ GHz	
	None,	Table 6.6.4.5.4-1
Cat A MR BS, Cat B MR BS	$f \leq 1.0$ GHz,	
	$1.0 < f \leq 3.0$ GHz	
	$3.0 < f \leq 4.2$ GHz,	Table 6.6.4.5.4-3
	$4.2 < f \leq 6.0$ GHz,	
	$6.0 < f \leq 7.125$ GHz	
Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	None,	Table 6.6.4.5.4-2
	$f \leq 1.0$ GHz,	
	$1.0 < f \leq 3.0$ GHz	
	$3.0 < f \leq 4.2$ GHz,	Table 6.6.4.5.4-4
	$4.2 < f \leq 6.0$ GHz,	
Cat A LA BS, Cat B LA BS	$6.0 < f \leq 7.125$ GHz	
	None,	Table 6.6.4.5.5-1
	$f \leq 1.0$ GHz,	
	$1.0 < f \leq 3.0$ GHz	
	$3.0 < f \leq 4.2$ GHz,	Table 6.6.4.5.5-2
	$4.2 < f \leq 6.0$ GHz,	
	$6.0 < f \leq 7.125$ GHz	
	GHz	

1-0	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
		None,			Table 6.7.4.5.1.1-2
		$1.0 < f \leq 3.0$ GHz			
		$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.1-3
	Cat B WA BS	$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.1-4
		$f \leq 1.0$ GHz			Table 6.7.4.5.1.2-1
		None,			Table 6.7.4.5.1.2-2
		$1.0 < f \leq 3.0$ GHz			
	Cat A MR BS, Cat B MR BS	$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.2-3
		$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.2-4
		$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.2-5
		None,			Table 6.7.4.5.1.4-1
	Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	$f \leq 1.0$ GHz,			
		$1.0 < f \leq 3.0$ GHz			
		$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-2
		$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-3
	Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-3a
		None,			Table 6.7.4.5.1.4-4
		$f \leq 1.0$ GHz,			
		$1.0 < f \leq 3.0$ GHz			
	Cat A LA BS,	$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-5
		$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-6
		$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-7
		None,			Table

3 5G NR Mode

3.4 ACP Measurement

FR2	2-0	Cat B LA BS	$f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz $4.2 < f \leq 6.0$ GHz $6.0 < f \leq 7.125$ GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.2-1	6.7.4.5.1.5-1 Table 6.7.4.5.1.5-2 Table 6.7.4.5.1.5-3 Table 6.7.4.5.1.5-4
		Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS	None, $24.25 < f \leq 29.5$ GHz $37.0 < f \leq 43.5$ GHz $43.5 < f \leq 48.2$ GHz $52.6 < f \leq 71.0$ GHz			Table 6.7.4.5.2.2-1 Table 6.7.4.5.2.2-2 Table 6.7.4.5.2.2-3 Table 6.7.4.5.2.2-4
		Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS	None, $24.25 < f \leq 29.5$ GHz $37.0 < f \leq 43.5$ GHz $43.5 < f \leq 48.2$ GHz $52.6 < f \leq 71.0$ GHz			Table 6.7.4.5.2.3-1 Table 6.7.4.5.2.3-2 Table 6.7.4.5.2.3-3 Table 6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1 v.17.8.0 (2023-03)	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA, NR + UTRA		Table 6.5.2.4.2.5-2	
FR2		TS38.521-2 v.17.2.0 (2023-03)	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1 v.17.8.0 (2023-03)	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values				
		TDD / FDD Duplex Mode		Uplink	User Defined Duplex mode	
		Downlink (*1) FR1	Downlink (*1) FR2		Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

3 5G NR Mode

3.4 ACP Measurement

Gate Source	(*4)					
	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
Gate Settings	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when **"RB Alloc Preset" on page 3310** is any of NR-TM and **"Duplex Mode" on page 3304** is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous

allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “ $52.6 < f \leq 71.0$ GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,

$$N_{sc}^{RB} = 12$$

3 5G NR Mode

3.4 ACP Measurement

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,

$$N_{sc}^{RB} = 12$$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
		Non-Contiguous	NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.
- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(erence) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - StoC: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration			Preset Value
	Direction	FR	Offset	
Offset Freq State	Downlink	FR1	A, B	On
			C, ..., L	Off
		FR2	A	On
			B, ..., L	Off
	Uplink		A	On
			B, ..., L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 * BW_{CC}$
			C, ..., L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ..., L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC} When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ..., L	0 Hz

3 5G NR Mode

3.4 ACP Measurement

Integ BW	Downlink		All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1: $\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \times BW_{GB}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \times BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$$N_{sc}^{RB} = 12$$

Res BW State		All	Auto
Res BW		All	Automatically coupled with the Res BW value under the BW menu
Video BW State		All	Auto
Video BW		All	Automatically coupled with the Video BW value under the BW menu
Offset Side		All	Both
Method		All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(BW_{config}) dBm

FR2	1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A WA BS, Cat B WA BS	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A LA BS, Cat B LA BS	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A WA BS, Cat B WA BS	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode

3.4 ACP Measurement

52.6 < f ≤ 71.0	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz		All	-43.8 dB (= -45 + TT 1.2)
			5, ... , 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
				3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
				6.0 < f ≤ 7.125	All	-36.8 dB = (-45 + TT 8.2)
	FR2	2-0	50, 100, 200 400 MHz	None, 24.25 < f ≤ 29.5	All	-25.7 dB = (-28 + TT 2.3)
				37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
				43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
			100, 400, 800, 1600, 2000 MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$,	All	All	-36.2 dB (= -37 + TT 0.8)

3 5G NR Mode

3.4 ACP Measurement

FR2	Power Class 2	1.0 < f ≤ 3.0,	All	All	-30.2 dB (= -31 + TT 0.8)
		3.0 < f ≤ 4.2,			
	Power Class 3	4.2 < f ≤ 6.0,	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
		6.0 < f ≤ 7.125			
	Power Class 1,2,3,4	None, 24.25 < f ≤ 29.5	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
			100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
		37.0 < f ≤ 43.5,	All	All	-11.04 dB (= -16 + TT 4.96)
		43.5 < f ≤ 48.2,			
		52.6 < f ≤ 71.0			

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance

- Num of CCs > 1: Table 6.A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR1 (only)	Assumed Adj Chan		
Offset Frequency Define					EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On	
			C, ..., L	Off	
		NR + E-UTRA	A, ..., D	On	
			E, ..., L	Off	
	Uplink	UTRA	A, B	On	
			C, ..., L	Off	
		NR + UTRA	A, B, C	On	
			D, ..., L	Off	

3 5G NR Mode

3.4 ACP Measurement

Offset Freq		A	= 2.5 MHz
		B	= 7.5 MHz
		C	= 0.5 x Bandwidth
		D	= 1.5 x Bandwidth
		E, F	0 Hz
Integ BW	Downlink	A, B	4.50 MHz
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	A, B	3.84 MHz
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

Bandwidth: Applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in the Section "[N_Grid_Size \(Display Only\)](#)" on page 1828, "[N_Grid_Size \(Display Only\)](#)" on page 1828,

$$N_{sc}^{RB} = 12$$

Res BW State		All	Auto
Res BW		All	Automatically coupled with the Res BW value under the BW menu
Video BW State		All	Auto
Video BW		All	Automatically coupled with the Video BW value under the BW menu
Offset Side		All	Both
Method and Filter Alpha	Downlink	All	Integration BW
	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, $f \leq 1.0$,	All	$-44.2 \text{ dB} (= -45 + \text{TT } 0.8)$
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	$-43.8 \text{ dB} (= -45 + \text{TT } 1.2)$
	1-0		5, ..., 100 MHz	None, $4.2 < f \leq 6.0$, $f \leq 1.0$, $6.0 < f \leq 7.125$	All	$-44 \text{ dB} = (-45 + \text{TT } 1.0)$
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$	All	$-43.8 \text{ dB} = (-45 + \text{TT } 1.2)$
				$6.0 < f \leq 7.125$	All	$-36.8 \text{ dB} = (-45 + \text{TT } 8.2)^{(*)}$

3 5G NR Mode

3.4 ACP Measurement

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm
Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non-Contiguous	A, B	See "Table 1a Offset Freq State" on page 942
				C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non-Contiguous	A	See "Table 1a Offset Freq State" on page 942
				B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non-Contiguous	A	See "Table 1a Offset Freq State" on page 942
				B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 944
				C, ..., L	0 Hz
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 944
Integ BW				C, ..., L	Same value as Offset A and B
				All	Both
				All	Integration BW
	Method			All	Auto
				All	Auto
				All	Auto
Res BW State				All	Auto
				All	Auto
Video BW State				All	Auto
				All	Auto
Power Ref Type				All	See "Table 1a Offset Freq State" on page 942
				All	See "Table 1a Offset Freq State" on page 942

Table 1a Offset Freq State

Preset Configuration	Wgap(Sub-	Preset Value
----------------------	-----------	--------------

3 5G NR Mode
3.4 ACP Measurement

Direction	FR	Bandwidth	block gap) (MHz)	Offset Enabled		Power Ref Type(*)	
				A	B	A	B
Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
Uplink	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz	B	= 2 x Bandwidth	

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

- Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration		Offset	Preset Value
	FR	BSType	Adjust Range(GHz)	BS Category

3 5G NR Mode
3.4 ACP Measurement

Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
	FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS		
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$43.5 < f \leq 48.2$	Cat A WA BS, Cat B WA BS	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr),	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

52.6 < f ≤ 71.0 (**)	Cat B MR BS (Low Pr)		
	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BSType	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0,	All	-44.2 dB (= -45 + TT 0.8)
				3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
				3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)

3 5G NR Mode

3.4 ACP Measurement

			$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)
FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	-25.7 dB = (-28 + TT 2.3)
			$37.0 < f \leq 43.5$	All	-23.4 dB = (-26 + TT 2.6)
			$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
		100, 400, 800, 1600, 2000 (**) MHz	$52.6 < f \leq 71.0$	All	-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameterfor
Uplink

Preset Configuration

Preset Value

FR	UE Power Class	Adjust Range	Bandwidth	Offset
----	----------------	--------------	-----------	--------

			(GHz)			
Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$,	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$,	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA, NR + UTRA	All	Set to default values
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 950
			C, ... , L	Off
		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 950
Offset Freq			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset

					A/B/C" on page 950
			D, ... , L	0 Hz	
Integ BW			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 950	
			D, ... , L	Same value as Offset C	
Offset Side			All	Both	
Method and Filter Alpha			A, B	RRC Weighted, Filter Alpha = 0.22	
			C, ... , L	Integration BW	
Res BW State			All	Auto	
Video BW State			All	Auto	
Power Ref Type			All	See "Table 2a Offset Freq State" on page 950	

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			$5 \leq Wgap < 10$	✓		(+)	Norm	Norm	Norm
			$10 \leq Wgap$	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth $\leq Wgap$	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth $\leq Wgap$ ".

(++) Same as the rows of "Wgap < 5", " $5 \leq Wgap < 10$ ", and " $5 \leq Wgap$ ".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	$= 0.5 \times$ Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC,FR,SCS}) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

3 5G NR Mode

3.4 ACP Measurement

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameter for Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range (GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm
Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357
- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW

Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680

3 5G NR Mode

3.4 ACP Measurement

80 MHz	750
90 MHz	820
100 MHz	910
200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		Preset Value	
	FR	Bandwidth	SCS	SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

3 5G NR Mode

3.4 ACP Measurement

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
--------	---------	------------------	--	--	-----------------	--	--	-----------	--	---------	--	--

A	✓		0.05		5.05		0.051	2				
B	✓		5.05		10.05		0.1	1				
C	✓		10.5		40		1	1				
D	✓		40		100		1	1				
E-L			100		500		1	1				

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			1	1
D	✓	40			100			1	1
E-L		100			500			1	1

3 5G NR Mode

3.4 ACP Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and f ≤ 1.0 GHz & 1.0 < f ≤ 3.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start	Stop	Coupling	Start	Stop	Coupling		Start	Stop	Coupling	

		(dBm)	(dBm)		(dB)	(dB)			(dBm)	(dBm)		
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.4 ACP Measurement

B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.4 ACP Measurement

A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			1			1
D	✓	40			100			1			1
E-L		100			500			1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			1			1
D	✓	40			100			1			1
E-L		100			500			1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			1			1
D	✓	40			100			1			1
E-L		100			500			1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.4 ACP Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.5			200			1		1		
D		200			500			1		1		
E-L		200			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

3 5G NR Mode

3.4 ACP Measurement

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.05			200			0.1		1		
D		200			500			0.1		1		
E-L		200			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated,x}} \leq 40$ dBm (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-11.2 \text{ dB} - (7/5) \cdot ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the

Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			0.1	1			
D	✓	40			100			0.1	1			
E-L		100			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – $(7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”. Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			50.05			0.051	2			
B	✓	50.05			100.05			0.1	1			
C	✓	100.5			200			0.1	1			
D		200			500			0.1	1			
E-L		200			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode

3.4 ACP Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-19.2 \text{ dB} - (7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “ -19.2 dB ” is typo and is supposed to be “ -19.2 dBm ”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		

B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	50.05	0.051	2
B	✓	50.05	100.05	0.1	1
C	✓	100.5	200	0.1	1
D		200	500	0.1	1
E-L		200	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.4 ACP Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$x + 1500$			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

3 5G NR Mode

3.4 ACP Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	y + 0.5			1	1
C	✓	y + 5	y + 1500			5	2
D-L		100	500			5	2

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	x + 1500			1	1
C-L		100	500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block[n]}}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

3 5G NR Mode

3.4 ACP Measurement

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn't miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range:	Adjust Range:
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,

		None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$	and $6.0 < f \leq 7.125 \text{ GHz}$
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled
B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 * BW_{\text{Channel,CA}}$$

$$- y = 2 * BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

3 5G NR Mode

3.4 ACP Measurement

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	$-1.79 \text{ dBm} = -5 + TT \cdot 3.21$	$-1.54 \text{ dBm} = -5 + TT \cdot 3.46$	TBD	TBD
B_{Lim}	$-9.79 \text{ dBm} = -13 + TT \cdot 3.21$	$-9.54 \text{ dBm} = -13 + TT \cdot 3.46$	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW $\leq 400\text{MHz}$)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode

3.4 ACP Measurement

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS
1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)

1	1-0					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz		-	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz		Start Freq	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz			(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode

3.4 ACP Measurement

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category
---	---------	-------------

		All "Cat A" BS			(**) Abs Start Limit	All "Cat B" BS			(**) Abs Start Limit
		(*)RBW	(*)Meas BW	(*)VBW		(*)RBW	(*) Meas BW	(*) VBW	
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = "All Cat A BS": Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,

BS Category = "All Cat B BS": Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to "27 GHz")

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the "Apply Preset" button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
---	---------	---------------	--------------	------------	------	-----	----------------------	-----	----------------

3 5G NR Mode

3.4 ACP Measurement

1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off

10~ (*) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

#	(*) Range “Enabled” state			
	Adjust Limit Mask for Freq Range (GHz)			
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$
1	✓	✓	✓	✓
2	✓	✓	✓	✓
3	✓	✓	✓	✓
4	✓	✓	✓	✓
5				

Note:

Never “enabled” by the “Apply Preset” button
A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1,

3 5G NR Mode
3.4 ACP Measurement

				TS38.521-1)
6	✓			
7		✓		
8			✓	
9				Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~				

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005 GHz	6 GHz			1 MHz	1	5 MHz	Gaussian
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no	(no

3 5G NR Mode

3.4 ACP Measurement

8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	preset)	preset)
						(no preset)	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to "27 GHz")

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the "RB Alloc Preset" selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters

- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

- Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	

3 5G NR Mode

3.4 ACP Measurement

General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2 v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for pi/2 BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),

- Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for Pi/2 BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for Pi/2 BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399
- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
	FR2	TDD	n/a	0 subframe	2 subframes

3 5G NR Mode

3.4 ACP Measurement

Fulfilled-xx / NR-TMx.x	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity	
----------------------------	-------------	-----------------	-----	------------	--	--

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
	FR2	TDD	n/a	0.9286	1.250	n/a
Fulfilled-xx / NR-TMx.x	RF1/RF2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

3 5G NR Mode
3.4 ACP Measurement

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2 ^{-m}	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2 ^{-m}	
			SRS	0.0714	10.0	2 ^{-m}	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2 ^{-m}	10.0	2 ^{-m}	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2 ^{-m} (TBD)	10.0	2 ^{-m}	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu\text{s}$ RMS averaging window for making the OFF power. $N = \text{SCS}/15$, where SCS is in kHz.
- Uplink: Slot length = $2^{-\mu}$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$,	-82.5 dBm / MHz = -85 + TT 2.5

		1-0	6.0 < f ≤ 7.125 GHz None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
	FR2	2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration			Adjust Range (GHz)	Preset Value
	FR	UL ChannelType	Bandwidth		
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

3 5G NR Mode

3.4 ACP Measurement

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	-48.3 dBm = -50 + TT 1.7
					3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-48.2 dBm = -50 + TT 1.8	
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	± 10.5 dB = ±(9 + TT 1.5)	
					3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.8 dB = ±(9 + TT 1.8)	
					40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	± 10.7 dB = ±(9 + TT 1.7)
					3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.8 dB = ±(9 + TT 1.8)	
FR2	PUSCH	All FR2 BW	GHz	± 14 dB (TT not yet)			
Parameter	Preset Configuration					Preset Value	
	FR	UL Channel Type	Bandwidth	SCS			
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm		
				30 kHz	-4.2 dBm		
			10 MHz	15 kHz	0.4 dBm		
				30 kHz	-0.8 dBm		
			15 MHz	60 kHz	-1.2 dBm		
				15 kHz	1.4 dBm		
				30 kHz	1.2 dBm		
				60 kHz	1.0 dBm		

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

3 5G NR Mode

3.4 ACP Measurement

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.4.13.6 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does *not* appear in the following instruments:

- EXM
- VXT model M9420A

Phase Noise Opt

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Remote Command	<code>[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe] 1 ... 5</code> For the meaning of each numeric option value, see "Parameter Options, Installed Options, Auto Rules & Ranges" on page 1003 below <code>[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:ACP:FREQ:SYNT 1</code> <code>:ACP:FREQ:SYNT?</code>
Dependencies	Does not appear in all models. For models that do not display this control, the SCPI command is accepted for compatibility (although no action is taken) Not available in VXT models M9410A/11A/15A
Preset	Because this function is in Auto after preset, the state of this function after Preset will be automatically calculated
State Saved	Saved in instrument state
Range	See "Ranges" on page 1008 below Auto Function
Remote Command	<code>[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]?</code>
Example	<code>:ACP:FREQ:SYNT:AUTO 1</code> <code>:ACP:FREQ:SYNT:AUTO?</code>
Preset	ON

Parameter Options, Installed Options, Auto Rules & Ranges

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
"Balanced" on page 1005	1	<ul style="list-style-type: none"> – In instruments with EPO, balances close-in phase noise with spur avoidance – In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 1005	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 1006	3	Optimizes LO for tuning speed
"Best Close-in" on page 1004	4 or 1*	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 1005	5	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

*Dependent on Option EPO installation. See "Best Close-in" on page 1004 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 1006 is identical in effect to "Best Close-in" on page 1004.

Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

:FREQ:SYNT 4

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for

close-in measurements than the "Balanced" on page 1005 setting, parameter 1 selects "Balanced" on page 1005 in EP0 instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects "Best Close-in" on page 1004, which is usually not as good a choice as "Balanced" on page 1005.

Balanced

:FREQ:SYNT 1

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Best Spurs

:FREQ:SYNT 5

In instruments with EP0, the LO is configured for better phase noise than the "Best Wide-offset" on page 1005 case close to the carrier, but the configuration has 11 dB worse phase noise than the "Best Close-in" on page 1004 case mostly within ± 1 octave around 300 kHz offset. Spurs are even lower than in the "Balanced" on page 1005 case at better than -90 dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term **"Fast Tuning" on page 1006** refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as **"Best Spurs" on page 1005**. It is available with the **"Fast Tuning" on page 1006** label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a **"Fast Tuning" on page 1006** option, the settings for **"Best Close-in" on page 1004** are used if **"Fast Tuning" on page 1006** is selected. This gives the fastest possible tuning for that hardware set.)

Auto

:FREQ:SYNT:AUTO ON

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EP0	Center frequency is < 699.9 kHz	"Balanced" on page 1005
Models with option EP0 have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Span > 114.1 MHz, <i>or</i>	"Fast Tuning" on page 1006
	RBW > 800 kHz	
	RBW > 290 kHz, <i>or</i>	"Best Wide-offset" on page 1005
	Span > 4.2 MHz	
	Other conditions	"Balanced" on page 1005

3 5G NR Mode

3.4 ACP Measurement

Models with Option	Conditions	Selection
EP1 Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz All other conditions	"Fast Tuning" on page 1006 "Best Close-in" on page 1004 "Best Wide-offset" on page 1005
EP2 Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 1004; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz All other conditions	"Best Close-in" on page 1004 "Fast Tuning" on page 1006 "Best Wide-offset" on page 1005
EP4 (available in CXA for improved phase noise)	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking" CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz All other conditions	"Fast Tuning" on page 1006 "Best Close-in" on page 1004 "Best Wide-offset" on page 1005
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 1006 are actually the same as "Best Close-in" on page 1004, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 25 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 141.4 kHz <i>and</i> RBW <= 5 kHz All other conditions	"Fast Tuning" on page 1006 "Best Close-in" on page 1004 "Best Wide-offset" on page 1005

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
EP1	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
EP2, EP3, EP5	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
EP4	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

Noise Correction

Sets the measurement noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the instrument. Off turns these corrections off.

In instruments with the noise floor extensions option (option NFE) enabled, there are two ways to compensate for the analyzer noise floor: through the NFE and through this noise corrections control. The techniques and results are similar but not identical. NFE uses a model of the analyzer noise floor, adapted to the current conditions such as center frequency, RBW and ambient temperature. The parameters of this model are measured in the factory or field calibration in a highly averaged measurement. So, they are consistent. However, because the model is

imperfect, the corrections are imperfect. Using NFE is very convenient; the user need not wait for the ACP noise corrections calibration to occur. The ACP NC calibration, though, has advantages of being measured very recently, at the current ambient, and the exact center frequency, with no requirement that the model be perfect. So, it will often (but not always) have slightly better dynamic range. If both ACP NC is turned on and NFE is turned on, the instrument uses only the ACP NC. When ACP NC is turned off, but NFE is on, NFE is used, and performance should still be excellent.

When **Meas Method** is Fast Power, HW supported noise correction works when either or both of Noise Correction and NFE is on.

Remote Command	<code>[:SENSe]:ACPower:CORRection:NOISe[:AUTO] OFF ON 0 1</code> <code>[:SENSe]:ACPower:CORRection:NOISe[:AUTO]?</code>
Example	<code>:ACP:CORR:NOIS OFF</code> <code>:ACP:CORR:NOIS?</code>
Dependencies	Not available when " Meas Method " on page 768 is RBW or Fast
Preset	0
State Saved	Saved in instrument state
Range	<code>OFF ON</code>

Noise Floor Extension

Lets you configure **Noise Floor Extension** (NFE). All Modes that support NFE let you set it on or off. Additionally, some Modes support two “on” states for NFE, **Full** and **Adaptive**, as described below.

Adaptive Option Support

At present (Release: X-Apps 2024), support for **Adaptive** NFE is as follows:

Mode	Measurements	Supports Adaptive NFE?
BT	ACP, IBEM, IBSP	No
CQM	MON	Yes
EDGE GSM	EORF, ETSP, MON	No
EMI	APD, DAN, FSC, MON, RTSC, SCH	Yes
LTEAFDD	PVT	No
LTEATDD	PVT	No
MSR	ACP, CHP, MON, OBW, SEM, SPUR	Yes
NR5G	PVT	No
PNOISE	LPL, MON, SFR	No
SA	SAN	Yes

Mode	Measurements	Supports Adaptive NFE?
SRCOMMS	ACP, CHP, MON, OBW, SEM, SPUR	Yes
VMA	ACP, CHP, OBW, SEM, SPUR	Yes
WCDMA	ACP, CHP, MON, OBW, SEM, SPUR	Yes
WLAN	CHP, MON, OBW, SEM, SPUR	Yes

The menus and command options are as follows:

NFE State	Modes with Adaptive NFE	Modes without Adaptive NFE	SCPI
Off	Off	Off	See "NFE On/Off Command" on page 1011
On	Full	On	
Adaptive	Adaptive	n/a	See "Adaptive NFE Command" on page 1012

As shown in the table above, the **On** state (in Modes that do not support **Adaptive NFE**) matches the **Full** state in Modes that *do* support **Adaptive NFE**.

To maintain SCPI backwards compatibility, the existing command to turn NFE on or off is retained, and a new command is added to set the state to turn **AdaptiveON** or **OFF**:

- `[[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0]` is retained, with the default changed to **ON** for Modes that support **Adaptive NFE**
- `[[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0]` is added (for certain Modes), default = **ON**

When NFE is **On** or **Full**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

NFE works with any RBW, VBW, detector, any setting of **Average Type**, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme amounts of smoothing, and with the average detector, with the **Average Type** set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the **Average** detector, results are better with long sweep times and fewer trace averages. When using the **Sample** detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE **Noise Floor Extension** has no effect unless the RF Input is selected, so when External Mixing is selected, it does nothing.

For more details, see "Optimal Detector & Averaging Selections" on page 1012 and "Recalibration of Noise Floor" on page 1014.

Pros & Cons of Adaptive NFE

Adaptive NFE provides an alternative to fully-on or fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the fully-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

In **Adaptive** NFE, there is not the same dramatic visual impact on the noise floor as there is in **Full** NFE. **Adaptive** NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the fully-off case; and when lots of averaging is being performed, the signal displays more like the **Full** NFE case.

Adaptive NFE is recommended for general-purpose use. For fully-ATE (automatic test equipment) applications, where possible distraction of the instrument user is not a risk, **Full** NFE is recommended.

NFE On/Off Command

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear. In those cases, the SCPI command is accepted without error, but has no effect
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed When NFE is enabled through SCPI, and a Characterize Noise Floor operation is needed, an error is

	entered in the system error queue
Preset	Unaffected by Mode Preset . Turned ON at startup and by Restore Mode Defaults in Modes that support Adaptive . Turned OFF at startup and by Restore Mode Defaults in Modes that do <i>not</i> support Adaptive In Modes that support Adaptive NFE, the default (preset) state of NFE is Adaptive . In Modes that do not support Adaptive NFE, the default state of NFE is Off
State Saved	No

Adaptive NFE Command

Only effective in instruments with the NFE or NF2 license installed, and in Modes that support **Adaptive** NFE. For coverage, see "[Adaptive Option Support](#)" on page 1009 above.

For all other cases, the SCPI command below is accepted without error, but has no effect.

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor:ADaptive ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor:ADaptive?</code>
Example	First turn NFE on, this is Full mode <code>:CORR:NOIS:FLO ON</code> Then set it to Adaptive <code>:CORR:NOIS:FLO:ADAP ON</code>
Couplings	To maintain backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE AdaptiveOFF . To turn Adaptive on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by Mode Preset , but set to ON at startup and by Restore Mode Defaults
State Saved	No

Optimal Detector & Averaging Selections

Note that some measurements do not allow you to switch the **Detector** type (which is set by default to **Average**), so the discussion of detector types here is irrelevant for those measurements. Similarly, some measurements do not allow you to set **Average Type** (set by default to **LOG**), so that discussion here is irrelevant in those cases.

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to obtain the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when **Detector** is **Average** and **Average Type** is set to **Power (RMS)**.

For best operation, **AverageDetector** (default) and **Average Type. = Power** are recommended, as already stated. In other cases, operation is often not quite as good but still highly effective. Other **Detector** options, when available, behave as follows:

Positive Peak	<p>The noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage</p> <p>Positive Peak is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise</p> <p>For pulsed-RF, Positive Peak can still give excellent effectiveness</p> <p>FFT analysis does not work well, and does not perform NFE well, with pulsed-RF signals, so this combination is <i>not</i> recommended</p>
Negative Peak	Not very useful
Sample	Works well, but never better than Average , because it does not smooth as well
Normal	A combination of peak and negative peak behaviors, and works about as well as these

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, **Average Type = Power (RMS)** is optimal (when this option is available). When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. Using NFE with **Average Type = Log-Power (LOG)** is not synergistic, though; NFE with **Average Type = Power (RMS)** works a little better than NFE with **LOG**.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that exceeds the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes

with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Recalibration of Noise Floor

In instruments with the NF2 license installed, the calibrated noise floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. To do this, use **"Characterize Noise Floor" on page 3526**, under **System, Alignments, Advanced**. If you have not done this yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog stating:

This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week

If you cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

Fast Power RBW Mode

Specifies RBW behavior of Fast Power under **Meas Method**.

Option	SCPI	Description
Best Speed	SPEEd	The acquisition RBW is set to be configured for best speed. The RBW is automatically calculated, and is not configurable
Explicit	EXPLicit	You can configure RBW manually
Remote Command	[:SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE SPEEd EXPLicit [:SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE?	
Example	:ACP:BAND:FPOW:MODE EXPL :ACP:BAND:FPOW:MODE?	
Dependencies	Grayed-out when "Meas Method" on page 768 is not Fast Power Not available in VXT models M9410A/11A/15A	
Couplings	If EXPLicit is selected, "Res BW" on page 738 is configurable. If not, Res BW is grayed-out	
Preset	SPEEd	
State Saved	Saved in instrument state	

Fast Power IF Gain Offset

Lets you optimize for dynamic range versus input signal level.

3 5G NR Mode

3.4 ACP Measurement

Remote Command	<code>[:SENSe]:ACPower:IF:GAIN:FPOWer <integer></code> <code>[:SENSe]:ACPower:IF:GAIN:FPOWer?</code>
Example	<code>:ACP:IF:GAIN:FPOW 10</code> <code>:ACP:IF:GAIN:FPOW?</code>
Dependencies	Grayed-out when "Meas Method" on page 768 is not Fast Power Not available in VXT models M9410A/11A/15A
Preset	0
State Saved	Saved in instrument state
Min/Max	-20/20

Integration BW

Selects an Integration BW passband from either -3 dB ([DB3](#)) or -6 dB ([DB6](#)).

Remote Command	<code>[:SENSe]:ACPower:FILTer:BANDwidth[:INTEgration] DB3 DB6</code> <code>[:SENSe]:ACPower:FILTer:BANDwidth[:INTEgration]?</code>
Example	<code>:ACP:FILT:BAND DB3</code> <code>:ACP:FILT:BAND?</code>
Dependencies	Applicable for carriers and offsets whose filter method is not RRC, and when "Meas Method" on page 768 is other than RBW
Preset	DB3
State Saved	Saved in instrument state
Range	-3 dB -6 dB

3.4.13.7 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to [ON](#), it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "Restore Defaults" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF :GLOBal:FREQuency:CENTer[:STATe]?

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "Restore Defaults" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTRument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.4.13.8 Offset RRC Weighting (Backwards Compatibility SCPI)

Example	<pre>:ACP:FILT OFF</pre> <pre>:ACP:FILT?</pre>	
Couplings	<p>This command is an alias of:</p> <pre>[:SENSe]:ACPower:OFFSet[1] 2:LIST:FILTer[:RRC][:STATe]</pre> <p>Sending the command sets values of all offsets for BS and MS, but the query always returns a value of BS Offset A</p>	
Preset	SA, LTEAFDD, LTEATDD, MSR	OFF
	WCDMA	ON
State Saved	Yes	
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:FILTer[:RRC][:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:ACPower:FILTer[:RRC][:STATe]?</pre> <pre>[:SENSe]:ACPR:FILTer[:RRC][:STATe]</pre> <pre>[:SENSe]:MCPower:FILTer[:RRC][:STATe]</pre>	

3.4.13.9 Offset Filter Alpha (Backward Compatibility SCPI)

Example	<pre>:ACP:FILT:ALPH 0.5</pre> <pre>:ACP:FILT:ALPH?</pre>	
Couplings	<p>This command is an alias of:</p> <pre>[:SENSe]:ACPower:OFFSet[1] 2:LIST:FILTer:ALPHa</pre> <p>Sending the command sets values of all offsets for BS and MS, but the query always returns a value of BS Offset A</p>	
Preset	0.22	
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	
Backwards Compatibility SCPI	<pre>[:SENSe]:ACPower:FILTer[:RRC]:ALPHa <real></pre> <pre>[:SENSe]:ACPower:FILTer[:RRC]:ALPHa?</pre> <pre>[:SENSe]:ACPR:FILTer[:RRC]:ALPHa</pre> <pre>[:SENSe]:MCPower:FILTer[:RRC]:ALPHa</pre>	

3.4.13.10 Method for Carrier (Backward Compatibility SCPI)

Example	<pre>:ACP:CARR2:LIST:METH RRC</pre>
---------	-------------------------------------

	:ACP:CARR2:LIST:METH?								
Notes	Maximum of Array length depends on the number of carriers								
Couplings	<p>This command is an alias of: [:SENSe]:ACPower:CARRier[1] 2:LIST:FILTER[:RRC][:STATE]</p> <p>The enum value translates as follows:</p> <ul style="list-style-type: none"> - RRC Weighted = 1 ON - Integ BW = 0 OFF <p>Maximum of Array length depends on the number of carriers</p>								
Preset	<table> <tr> <th>Modes</th><th>Value</th></tr> <tr> <td>SA</td><td>IBW</td></tr> <tr> <td>WCDMA</td><td>RRC</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>IBW</td></tr> </table>	Modes	Value	SA	IBW	WCDMA	RRC	LTEAFDD, LTEATDD, MSR	IBW
Modes	Value								
SA	IBW								
WCDMA	RRC								
LTEAFDD, LTEATDD, MSR	IBW								
State Saved	Saved in instrument state								
Backwards Compatibility SCPI	[:SENSe]:ACPower:CARRier[1] 2:LIST:METHod IBW RRC, ... [:SENSe]:ACPower:CARRier[1] 2:LIST:METHod?								

3.4.14 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.4.14.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

NOTE

Significantly faster sweep times are available with Option FS1.

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[:SENSe] :<meas> :SWEEP:TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[:SENSe] :<meas> :SWEEP:TIME <time></code> <code>[:SENSe] :<meas> :SWEEP:TIME?</code>
----------------	--

Example	Channel Power measurement: <code>:CHP:SWEEP:TIME 25ms</code> <code>:CHP:SWEEP:TIME?</code>
---------	--

Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by Meas Method selection. Preset values are as follows: <ul style="list-style-type: none"> – IBW: 29 ms – IBWR: 108 ms – FAST 7.5 ms
-------	---

Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " Minimum Acquisition Time " on page 3038 is available
--------------	--

Couplings	Coupled to Span , RBW , VBW , and Sweep Time Rules when Sweep Time is set to Auto; Sweep Time
-----------	---

3 5G NR Mode

3.4 ACP Measurement

	<p>changes when these parameters are changed</p> <p>When you manually set a value when in the Auto state, the state automatically changes to Man</p>	
Preset	<p>Automatically Calculated unless noted below</p> <p>WCDMA Mode</p> <ul style="list-style-type: none"> Channel Power: 1.0 msOBW: 32.6 ms ACP: 29 ms 	
State Saved	Saved in instrument state	
Min	<p>Other than non-sweeping hardware: Typically, 1 ms</p> <p>Non-sweeping hardware: N/A</p> <p>In the ACP measurement, when Meas Method is Fast Power, the minimum sweep time is span-dependent and automatically calculated</p>	
Max	<p>Other than non-sweeping hardware: 4000 s</p> <p>Non-sweeping hardware: N/A</p>	
Annotation	<p>The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as:</p> <p>Sweep 13.3 ms (1001 points)</p> <p>A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling</p>	
Status Bits/OPC dependencies	<p>Meas Uncal is Bit 0 in the register:</p> <p>STATus:QUESTionable:INTegrity:UNCalibrated</p> <p>Auto Function</p>	
Remote Command	<p>[:SENSe]:<meas>:SWEep:TIME:AUTO OFF ON 0 1</p> <p>[:SENSe]:<meas>:SWEep:TIME:AUTO?</p>	
Example	<p>Channel Power measurement:</p> <p>:CHP:SWE:TIME:AUTO OFF</p> <p>:CHP:SWE:TIME:AUTO?</p>	
Preset	WCDMA Mode	OFF
	All others	ON

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$\sim (> \sim \text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in Auto, this parameter's value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME <time></pre> <pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME?</pre> <p><meas> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor</p>
Example	Channel Power measurement <pre>:CHP:SWE:ACQ:TIME 500 ms</pre> <pre>:CHP:SWE:ACQ:TIME?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Span , RBW , and VBW when in the Auto state When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO?</pre> <p><meas> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor</p>
Example	Channel Power measurement: <pre>:CHP:SWE:ACQ:TIME:AUTO OFF</pre>
Preset	ON

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 1023](#)

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 3413](#) for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVR:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See ["More Information" on page 1025](#)

Remote Command	<code>:INITiate[:IMMEDIATE]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 (<code>INTEgrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the <code>:INIT:REST</code> command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is *k*. This *k* is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This *k* is used for comparisons with N, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, *K*, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value *K* changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	:INITiate:PAUSE :INITiate:RESume
Example	:INIT:PAUS :INIT:RES
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when :ABORT is sent, the alignment finishes *before* the abort function is performed, so :ABORT does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command	:ABORT
Example	:ABOR

Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<p>[:SENSe] : <meas> : SWEep : ETIme ?</p> <p><meas> is the identifier for the current measurement; any one of CHPower- ACPower OBWidth MONitor</p>
Example	<p>Channel Power measurement</p> <p>:CHP:SWE:ETIme?</p>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

3.4.14.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument.

Sweep Time Rules

Switches the instrument between **NORMal** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **ACCuracy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The

instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **ACCuracy**.

Additional amplitude errors that occur when **Auto Sweep Time** is set to **NORMa1** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **NORMa1** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **NORMa1** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	[:SENSe]:ACPower:SWEEp:TIME:AUTO:RULEs NORMa1 ACCuracy [:SENSe]:ACPower:SWEEp:TIME:AUTO:RULEs?	
Example	:ACP:SWE:TIME:AUTO:RUL NORM :ACP:SWE:TIME:AUTO:RUL?	
Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9420A	
Preset	Modes, Instruments	Value
	SA, WCDMA, LTEAFDD, LTEATDD, MSR	ACCuracy
	5G NR	NORMa1
	5G NR in VXT models M9410A/11A/15A	ACCuracy
State Saved	Saved in instrument state	
Range	NORMa1 ACCuracy	

Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution changes. Trace data for all the traces is cleared and, if **Sweep** is in

Cont, a new trace is taken. If any trace is in average or hold, the averaging starts over.

Because of sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message "Sweep points changed, all traces cleared" is displayed and in 5G NR Mode, **Auto Sweep Points** is set to **OFF** (0).

Remote Command	[:SENSe]:ACPower:SWEp:POINts <integer> [:SENSe]:ACPower:SWEp:POINts?	
Example	:ACP:SWE:POIN 500 :ACP:SWE:POIN?	
Dependencies	Not available when Signal ID is On in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in Modes that do not support Swept This parameter is automatically calculated and not configurable when Meas Method is set to Fast Power	
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> - All trace data is erased - Any traces with Update Off will also go to Display OffSweep time is re-quantized - Any limit lines that are on will be updated - If averaging/hold is on, averaging/hold starts over - Auto Sweep Points is set to OFF (5G NR Mode only) The resolution of setting the sweep time depends on the number of points selected	
Preset	5G NR Mode, in all models except M9410A/11A/15A	5001
	All others	1001
State Saved	Saved in instrument state	
Min	1	
Max	20001	
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation	

Auto Sweep Points

When **Auto Sweep Points** is **ON**, the instrument determines the points using the following calculation formula.

$$\# \text{ points} = \text{ceil}(\text{Span} / (\text{Rbw} * 1\text{e3})) * 1000 + 1$$

Where *ceil(x)* returns the smallest possible integer value that is greater than or equal to x.

Remote Command	<code>[:SENSe]:ACPower:SWEep:POINts:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:ACPower:SWEep:POINts:AUTO[:STATe]?</code>
Example	<code>:ACP:SWE:POIN:AUTO 0</code> <code>:ACP:SWE:POIN:AUTO?</code>
Dependencies	Available only in 5G NR Mode
Preset	ON
State Saved	Yes
Range	OFF ON

3.4.14.3 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

Auto Scaling

Toggles the scale coupling function On or Off.

Remote Command	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPle?</code>
Example	<code>:DISP:ACP:WIND:TRAC:X:COUP ON</code> <code>:DISP:ACP:WIND:TRAC:X:COUP?</code>
Couplings	When Auto Scaling is ON and the "Restart" on page 3413 front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to OFF
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPle</code>

SCPI

3.4.15 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

For the Spectrum Analyzer Mode, when in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true for multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

3.4.15.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none">- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View- When you turn on Image Suppress, Update turns off for all traces except the selected trace For the ACP measurement, when Meas Method is RBW , FAST or FPOwer , Select Trace is disabled
Preset	Trace 1
State Saved	Yes

3.4.15.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "View/Blank" on page 3053 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITe	:TRAC2:TYPE WRIT	See: "Clear/Write" on page 1036
Trace Average	AVERage	:TRAC2:TYPE AVER	See: "Trace Average" on page 1036
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 1037
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 1038

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "View/Blank" on page 3053 state must be set to **Active** (**Update**: **ON**, **Display**: **ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "Trace Mode Backwards Compatibility Commands" on page 1034

Remote Command	<div>For Swept SA Measurement (in SA Mode):</div> <div>:TRACe[1] 2 ... 6:TYPE WRITe AVERage MAXHold MINHold</div> <div>:TRACe[1] 2 ... 6:TYPE?</div> <div>For all other measurements:</div> <div>:TRACe[1] 2 3:<meas>:TYPE WRITe AVERage MAXHold MINHold</div> <div>:TRACe[1] 2 3:<meas>:TYPE?</div>
----------------	--

	where <meas> is the identifier for the current measurement
Example	:TRAC:TYPE WRIT :TRAC:TYPE?
Couplings	Selecting a Trace Type (by pressing any of the Trace Type selections or sending :TRAC:TYPE) sets the Trace to Active (Update: ON , Display: OFF), even if the same trace type was already selected When Detector setting is "Auto" ([:SENSe] :<meas>:DETECTOR:AUTO?), Detector ([:SENSe] :<meas>:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: " NORMAL " with WRITE (Clear Write), " AVERage " with AVERage , " POSitive (peak)" with MAXHold , and " NEGative (peak)" with MINHold
Preset	Swept SA and Monitor Spectrum: WRITE All other measurements: AVERage Following Preset , all traces are cleared (all trace points set to mintracevalue)
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "**View/Blank**" on page 3053.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRAC:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[:SENSe] :AVERage[:STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

3 5G NR Mode

3.4 ACP Measurement

Preset	WRITE
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	:TRACe[1] 2 ... 6:MODE WRITE MAXHold MINHold VIEW BLANK :TRACe[1] 2 ... 6:MODE?
Backwards Compatibility Notes	<p>The legacy :TRACe:MODE command is retained for backwards compatibility. In conjunction with the legacy :AVERage command, it works as follows:</p> <ul style="list-style-type: none"> - :AVERage ON OFF sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the [:SENSe]:AVERage[:STATe] command description below - :TRACe:MODE WRITE sets :TRACe:TYPE WRITE (Clear/Write) unless average is true, in which case it sets it to :TRACe:TYPE AVERage. It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace - :TRACe:MODE MAXHold sets :TRACe:TYPE MAXHold (Max Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace - :TRACe:MODE MINHold sets :TRACe:TYPE MINHold (Min Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace - :TRACe:MODE VIEW sets :TRACe:UPDate OFF, :TRACe:DISPlay ON, for the selected trace - :TRACe:MODE BLANK sets :TRACe:UPDate OFF, :TRACe:DISPlay OFF, for the selected trace <p>The query returns the same value as :TRACe:TYPE?, meaning that if you set :TRACe:MODE:VIEW or :TRACe:MODE:BLANK, the query response will not be what you sent</p> <p>:TRACe[n]:MODE was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new :TRACe:TYPE command should be used in the future, but :TRACe:MODE is retained to provide backwards compatibility</p> <p>In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has</p> <p>As the Average/Hold Number now affects Min Hold and Max Hold, the operations that restart Averaging (for example, the Restart key) now also restart Min Hold and Max Hold</p> <p>As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does</p> <p>Also, previous to X-Series:</p> <ul style="list-style-type: none"> - Pressing Max Hold while already in Max Hold (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence - Changing the vertical scale (Log/Lin or dB/div) of the display restarted Max Hold and Min Hold. This is no longer the case
Preset	OFF

State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[:SENSe]:AVERage [:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[:SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like Center Frequency or Attenuation), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending **:TRAC:TYPE MINH** for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the **"Trace Type" on page 3048** had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold


View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

Active Update and Display both **ON**

View	Update OFF ; Display ON
Blank	Update OFF ; Display OFF
Background	Update ON , Display OFF Allows a trace to be blanked <i>and</i> continue to update “in the background”, which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

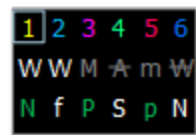

See: ["More Information" on page 1040](#)

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 1039 and "Trace Display State On/Off" on page 1040 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected Selecting a detector for a trace (pressing the key or sending <code>[:SENS] :DET :TRAC</code>) puts the trace in Active (Update ON and Display ON), even if that detector was already selected Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that Math Mode was already selected Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange

Trace Update State On/Off

Remote Command	For Swept SA Measurement (in SA Mode): <code>:TRACe[1] 2 ... 6 :UPDate[:STATe] ON OFF 1 0</code> <code>:TRACe[1] 2 ... 6 :UPDate[:STATe] ?</code> For all other measurements: <code>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ON OFF 1 0</code> <code>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ?</code> where <meas> is the identifier for the current measurement
Example	Make trace 2 inactive (stop updating): <code>:TRAC2:UPD 0</code>

Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	For Swept SA Measurement (in SA Mode): 1 0 0 0 0 0 ON for Trace 1; OFF for 2–6 For all other measurements: 1 0 0 ON for Trace 1; OFF for 2 & 3
State Saved	Saved in instrument state

Trace Display State On/Off

Remote Command	For Swept SA Measurement (in SA Mode): :TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0 :TRACe[1] 2 ... 6:DISPlay[:STATe]? For all other measurements: :TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0 :TRACe[1] 2 3:<meas>:DISPlay[:STATe]? where <meas> is the identifier for the current measurement
Example	Make trace 1 visible: :TRAC2:DISP 1 Blank trace 3: :TRAC3:DISP 3

Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	For Swept SA Measurement (in SA Mode): 1 0 0 0 0 0 ON for Trace 1; OFF for 2–6 For all other measurements: 1 0 0 ON for Trace 1; OFF for 2 & 3
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

Trace Settings Table (UXM Only)

Lets you configure the Trace system using a visual utility.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "**Multi Channel Synchronous Acquisition (UXM Only)**" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCH** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCulate:<meas>:MTRace? <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled

Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at "Input Port (UXM)" on page 2456 is assigned to a trace. This setting is valid when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	:TRACe[1] 2 3:<meas>:CHANnel CHANne11 CHANne12 :TRACe[1] 2 3:<meas>:CHANne1?
Example	For the ACP measurement Trace 2 :TRAC2:ACP:CHAN CHAN2
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

3.4.15.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 2610 controls.

- See "How trace math is processed" on page 1049

Remote Command	<p>For option details, see "Trace Math Options" on page 1047</p> <p>For Swept SA Measurement (in SA Mode):</p> <pre>:CALCulate:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate:MATH? <trace_num></pre> <p>where <trace_num> is any one of:</p> <pre>TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:CALCulate:<meas>:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate[:<meas>]:MATH? <trace_num></pre> <p>where:</p> <p><meas> is the identifier for the current measurement, and</p> <p><trace_num> is any one of:</p> <pre>TRACe1 TRACe2 TRACe3</pre> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre> <p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p>

	<pre>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</pre> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <pre>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</pre> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: <code>TRACE1 ... TRACE6</code> - Set 2 defines the “function”: <code>PDifference PSUM LOFFset LDifference OFF</code> - Set 3 is a “trace operand” (1): <code>TRACE1 ... TRACE6</code> - Set 4 is a “trace operand” (2): <code>TRACE1 ... TRACE6</code> - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if Normalize is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>OFF,TRACE5,TRACE6,0,0 OFF,TRACE6,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0 OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE4,0,0 OFF,TRACE4,TRACE5,0,0</pre> <p>For all other measurements:</p> <pre>OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0</pre>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “P” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

DestinationTrace = $10 \log_{10}(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace})$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at –5 dBm, and the reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

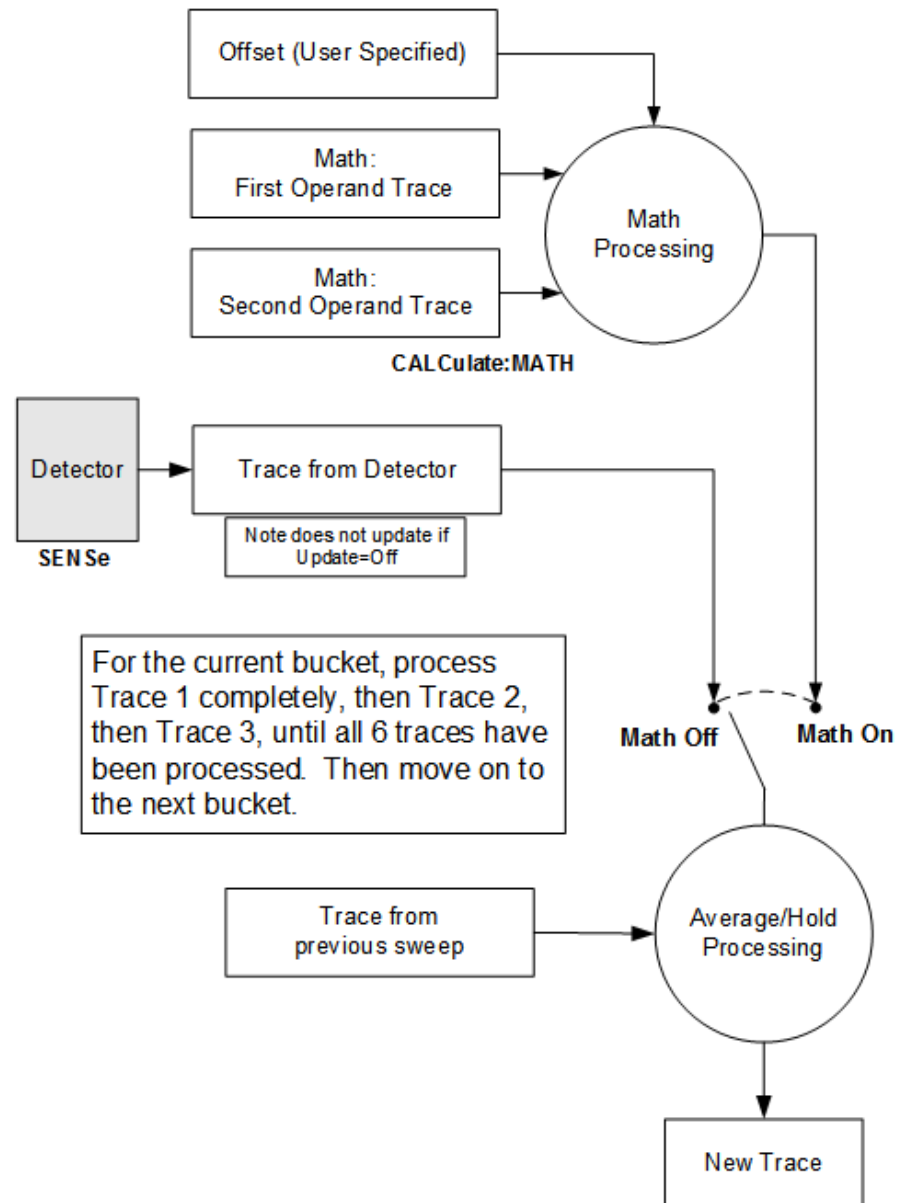

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <p>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</p> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <p>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</p>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.4.15.4 Detector

Lets you choose and configure detectors for the selected trace.

Detector

Selects a detector to be used by the instrument for the current measurement. Allows up to three (3) traces, but each use the same detector type choice. The following choices are available:

3 5G NR Mode

3.4 ACP Measurement

Option	Parameters	Description
Auto	See "Detector Select Auto/Man" on page 1054	Detector selected depends on marker functions, trace functions, average type, and the trace averaging function When in AUTO , the detector selected is set to AVERage , unless the Radio Standard defaults state otherwise, for example, it is set to POS for Radio Standard = PDC when Device = both MS and BTS, and when Radio Standard = NADC and Device = MS
Normal	NORMa1	Detector determines the peak of the CW-like signals, and yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
Average	AVERage RMS	Detector determines the average of the signal within the sweep points, using RMS averaging
Peak (Positive)	POSitive	Detector determines the maximum of the signal within the sweep points
Sample	SAMPle	Detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
Negative Peak	NEGative	Detector determines the minimum of the signal within the sweep points

Because they may not find a spectral component's true peak, neither Average nor Sample detectors measure amplitudes of CW signals as accurately as Peak or Normal, but they do measure noise without the biases of peak detection.

When **Meas Method** is Fast Power, Auto, Peak and Average are selectable.

Remote Command	<code>[:SENSe]:ACPower:DETECTOR[:FUNCTION] NORMa1 AVERage POSitive SAMPle NEGative RMS</code> <code>[:SENSe]:ACPower:DETECTOR[:FUNCTION]?</code>
Example	<code>:ACP:DET NORM</code> <code>:ACP:DET?</code> <code>:ACP:DET RMS</code> Sets the detector to AVERage . In ACP, AVERage uses RMS averaging, so this is equivalent to selecting an RMS detector

Notes

The query returns a name that corresponds to the detector type, as shown below

The **RMS** selection sets the detector type to **AVERage** with RMS averaging. Therefore, if **RMS** has been selected, the query returns **AVER**

String Returned	Definition
NORM	Normal
AVER	Average (RMS)
POS	Peak
SAMP	Sample
NEG	Negative Peak

Couplings	<p>When "Detector Select Auto/Man" on page 1054 is Auto, Detector switches aligning with the switch of this parameter: NORMal with Clear Write, AVERage with AVERage, POSitive (Peak) with MAXHold, and NEGative (Peak) with MINHold</p> <p>When Detector Select Auto/Man is Auto, Detector is set to what the Radio Standard defaults states for all conditions of Trace Type and for all traces</p> <p>When Detector Select Auto/Man is set to Manual, all Traces use the same detector type</p> <p>When Average State = Off then Trace Types AVERage, MaxHold and MinHold do not function, since Averaging must be 'on' for them to operate. Only one Detector type for all 3 traces is allowed</p> <p>When "Meas Method" on page 768 is RBW or FAST, Detector is disabled</p>
Preset	AVERage
State Saved	Saved in instrument state
Range	NORMal AVERage POSitive SAMPle NEGative RMS
Annotation	The four-letter mnemonic for the detector appears in the trace window next to the referenced trace
Backwards Compatibility SCPI	[:SENSe] :ACPR :SWEep :DETector [:FUNction]

Detector Select Auto/Man

Sets the Detector mode to Auto (**ON** | **1**) or Manual (**OFF** | **0**). In Auto, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you manually select any detector, this toggle is automatically set to Manual (**OFF**).

Remote Command	[:SENSe] :ACPower :DETector :AUTO ON OFF 1 0 [:SENSe] :ACPower :DETector :AUTO?
Example	:ACP:DET:AUTO 1 :ACP:DET?
Notes	When "Meas Method" on page 768 is Fast Power, Peak and Average are selectable
Couplings	<p>When Detector Select Auto/Man is Auto, "Detector" on page 1052 switches aligning with the switch of this parameter: NORMal with Clear Write, AVERage with AVERage, POSitive with MAXHold, and NEGative with MINHold</p> <p>When Detector Select Auto/Man is Auto, Detector is set to what the Radio Standard defaults states for all conditions of Trace Type and for all traces</p> <p>When Detector Select Auto/Man is set to Manual, all Traces use the same detector type</p> <p>When Average State = Off then Trace Types AVERage, MaxHold and MinHold do not function, since Averaging must be ON for them to operate</p>
Preset	ON
State Saved	Yes

3.4.15.5 Trace Function

- Contains controls to:
- Copy and Exchange traces
 - Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	1
--------	---

To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	2
--------	---

Copy

Executes a Trace Copy based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>:TRACe:COpy TRACE1 ... TRACE6, TRACE1 ... TRACE6</code></p> <p>For all other measurements:</p> <p><code>:TRACe:<meas>:COpy TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code></p> <p>where <code><meas></code> is the identifier for the current measurement</p> <p>Note that the format of the <code>TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <p><code>:TRAC:COpy TRACE1,TRACE3</code></p>
Notes	<p>The command is of the form:</p> <p><code>:TRACe:COpy <source_trace>,<dest_trace></code></p>
Dependencies	<p>When Signal ID is on, this key is grayed-out</p>

Couplings	The destination trace is put in View (Update = Off, Display = On) after the copy
Preset	For Swept SA Measurement (in SA Mode): <code>TRACE1, TRACE2</code> For all other measurements: <code>TRACe1, TRACe2</code>

Exchange

Executes a Trace Exchange based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	For Swept SA Measurement (in SA Mode): <code>:TRACe:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</code> For all other measurements: <code>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code> where <code><meas></code> is the identifier for the current measurement Note that the format of the <code>:TRACe<n></code> parameter differs from that for the Swept SA Measurement
Example	Exchange Trace 1 and Trace 2 and put both traces in Update= OFF , Display= ON : <code>:TRAC:EXCH TRACE1,TRACE2</code>
Notes	The command is of the form: <code>:TRACe:EXCHange <trace_1>,<trace_2></code>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:<meas>]:PRESet:ALL</code>
Example	<code>:TRAC:PRESet:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces

in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	:TRACe[:<meas>]:CLEAr:ALL
Example	:TRAC:CLE:ALL
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition	Off		
From Trace	Trace 1		
To Trace	Trace 2		
	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command	:TRACe:<meas>:PRESet:EIRP
Example	For OBW Meas: :TRAC:OBW:PRES:EIRP

3.4.15.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace’s scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	:CALCuLate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCuLate:<meas>:MTRace?
----------------	--

	<meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.5 SEM Measurement

The Spectrum Emission Mask measurement analyzes spurious signal levels in up to six pairs of offset frequencies and relates them to the carrier power.

SEM Measurement Commands

The following commands and queries can be used to configure the measurement, then retrieve measurement results:

The general functionality of ["CONFigure" on page 4138](#), ["INITiate" on page 4139](#), ["FETCh" on page 4139](#), ["MEASure" on page 4141](#), and ["READ" on page 4140](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF:<measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

```
:CONFfigure:SEMask  
:CONFfigure:SEMask:NDEFault  
:INITiate:SEMask  
:FETCh:SEMask[n]?  
:MEASure:SEMask[n]?  
:READ:SEMask[n]?
```

Remote Command Results Overview

The following table provides an overview of the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value `n`. For Mode-specific details, click on the appropriate link for each `n` value.

Offsets that are turned off (inactive) return -999.0 or `NAN` when their results are queried via SCPI. The value of `NAN` is 9.91E+37.

n	Results
1	Result summary (Offsets A - F) Note that n = 1 returns results of 6 offsets (Offset A to F) See "Results for n = 1" on page 1061
2	Displayed frequency domain spectrum trace data for Trace 1 See "Results for n = 2-4" on page 1064
3	Displayed frequency domain absolute limit trace data See "Results for n = 2-4" on page 1064
4	Displayed frequency domain relative limit trace data

n	Results
	See "Results for n = 2-4" on page 1064
5	Offset abs power, Offset abs PSD, Offset abs peak power depending on "Measurement Type" on page 2278 (Offset A- L) See "Results for n = 5" on page 1064
6	Offset rel power, Offset rel PSD, Offset rel peak power depending on "Measurement Type" on page 2278 (Offset A- L)
7, 8	Offset pass/fail (Offset A- L) See "Results for n = 7-11" on page 1068
9	Offset peak power freq (Offset A- L) See "Results for n = 7-11" on page 1068
10	Offset abs peak power (Offset A- L) See "Results for n = 7-11" on page 1068
11	Offset rel peak power (Offset A- L) See "Results for n = 7-11" on page 1068
12	Peak power of the signal in the ref channel when "Measurement Type" on page 2278 is Spectrum Peak Reference See "Results for n = 12" on page 1070
13	Ref channel summary Available only in LTEAFDD, LTEATDD, MSR and 5GNR Modes See "Results for n = 13" on page 1070
14	Offset result summary (Offset A- L) See "Results for n = 14" on page 1072
15	Offset limit margins (Offset A- L) See "Results for n = 15" on page 1073
16	Carrier powers Available only in LTEAFDD, LTEATDD, MSR, 5GNR, and WLAN Modes See "Results for n = 16" on page 1074
17	Displayed frequency domain combined limit trace data Available only in LTEAFDD, LTEATDD, MSR and 5GNR Modes See "Results for n = 17" on page 1074
18	Displayed frequency domain spectrum trace data for Trace 2 See "Results for n = 18-20" on page 1074
19	Displayed frequency domain spectrum trace data for Trace 3 See "Results for n = 18-20" on page 1074
20	Displayed frequency domain absolute 2 limit trace data See "Results for n = 18-20" on page 1074
21	Result Summary (Offset A – L, Outer and Inner) Available only in LTEAFDD, LTEATDD, and 5GNR Modes

n	Results
	See "Results for n = 21" on page 1075
22	Offset pass/fail (Offset A- L) Available only in LTEAFDD, LTEATDD, and 5GNR Modes See "Results for n = 22" on page 1080

3.5.1 Results for n = 1

Returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer** or **Outer & Inner** (5GNR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**, in the following order:

Available Power Ref selections differ depending on the mode. For details, see "Power Ref" on page 2279

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 6 (A-F).

#	Item	Unit										
1	Total Absolute power of carriers of Measure Carrier On if available Otherwise, -999.0											
2	Reference power	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the left reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Power^(*1) power at the reference carrier of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Power^(*2) power in the left sub-block</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the left reference carrier	Max Power Carrier in Sub-block	Power ^(*1) power at the reference carrier of the left sub-block	Left & Right Sub-blocks	Power ^(*2) power in the left sub-block			
Power Ref	Result											
Left & Right Carriers	Power ^(*1) at the left reference carrier											
Max Power Carrier in Sub-block	Power ^(*1) power at the reference carrier of the left sub-block											
Left & Right Sub-blocks	Power ^(*2) power in the left sub-block											
3	Reference power	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the right reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Power^(*1) at the reference carrier of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Power^(*2) in the right sub-block</td></tr><tr><td>All others</td><td>-999.0</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the right reference carrier	Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the right sub-block	Left & Right Sub-blocks	Power ^(*2) in the right sub-block	All others	-999.0	
Power Ref	Result											
Left & Right Carriers	Power ^(*1) at the right reference carrier											
Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the right sub-block											
Left & Right Sub-blocks	Power ^(*2) in the right sub-block											
All others	-999.0											
4	Reserved for future use, returns -999.0											

#	Item	Unit										
5	Peak frequency in the reference channel spacing frequency range											
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the left ref carrier frequency range</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Peak frequency in the ref carrier frequency range of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Peak frequency in the left reference sub-block frequency range</td></tr><tr><td>RF Bandwidth & Aggregated Channel Bandwidth</td><td>Peak frequency in the reference channel bandwidth frequency range</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the left ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range	
Power Ref	Result											
Left & Right Carriers	Peak frequency in the left ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block											
Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range											
RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range											
6	Peak frequency in the right reference channel spacing frequency range											
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the right ref carrier frequency range</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Peak frequency in the ref carrier frequency range of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Peak frequency in the right reference sub-block frequency range</td></tr><tr><td>All others</td><td>-999.0</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the right ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block	Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range	All others	-999.0	
Power Ref	Result											
Left & Right Carriers	Peak frequency in the right ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block											
Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range											
All others	-999.0											
7~10	Reserved for future use, returns -999.0											
11	Relative integrated power on the negative offset A	dBc										
10k + 11, k = 0												
12	Absolute integrated power on the negative offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm										
10k + 12, k = 0												
13	Relative peak power on the negative offset A	dBc										
10k + 13, k = 0												
14	Absolute peak power on the negative offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm										
10k + 14, k = 0												
15	Peak power offset frequency from the center or carrier edge frequency in the negative offset A	Hz										
10k + 15,												

3 5G NR Mode

3.5 SEM Measurement

#	Item	Unit
k = 0	Depends on the setting of "Offset Freq Define" on page 1176	
16	Relative integrated power on the positive offset A	dBc
10k + 16, k = 0		
17	Absolute integrated power on the positive offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
10k + 17, k = 0		
18	Relative peak power on the positive offset A	dBc
10k + 18, k = 0		
19	Absolute peak power on the positive offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
10k + 19, k = 0		
20	Peak power offset frequency from the center or carrier edge frequency in the positive offset A	Hz
10k + 20, k = 0	Depends on the setting of "Offset Freq Define" on page 1176	

70	Peak power offset frequency from the center or carrier edge frequency in the positive offset F	Hz
10k + 20, k = 5	Depends on the setting of "Offset Freq Define" on page 1176	
71	Minimum margin from limit line on the negative offset A	dB
2k + 71, k = 0		
72	Minimum margin from limit line on the positive offset A	dB
2k + 72, k = 0		

82	Minimum margin from limit line on the positive offset F	dB
2k + 72, k = 5		

*1: Absolute power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 2278 is Spectrum Peak Ref

*2: Integrated power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 2278 is Spectrum Peak Ref

3.5.2 Results for n = 2-4

n	Data
2	Returns the displayed frequency domain spectrum trace data for Trace 1 separated by commas
3	Returns the displayed frequency domain absolute limit trace data separated by commas
4	Returns the displayed frequency domain relative limit trace data separated by commas

3.5.3 Results for n = 5

The results returned depend on "Measurement Type" on page 2278:

- "Total Power Reference" on page 1064
- "Power Spectral Density Reference" on page 1065
- "Spectrum Peak Reference" on page 1066

Total Power Reference

Returns comma-separated scalar values (in dBm) of the absolute integrated power of the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)

#	Item	Unit
1	Total power reference	dBm
2	Reserved for future use, returns -999.0	
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	

25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see "Power Ref" on page 2279

#	Item	Unit
1	Reference power	dBm

3 5G NR Mode

3.5 SEM Measurement

#	Item	Unit
2	Power Ref	Result
	Left & Right Carriers	Left ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the left sub-block
	Left & Right Sub-blocks	Integrated power in the left sub-block
	Right reference power	
	Power Ref	Result
	Left & Right Carriers	Right ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the right sub-block
	Left & Right Sub-blocks	Integrated power in the right sub-block
	All others	-999.0
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	

25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

Power Spectral Density Reference

Returns comma-separated scalar values (in dBm/Hz) of the absolute integrated power of the segment frequencies. The length of the result depends on the number of available offset (See ["Number of Offsets" on page 1080](#))

#	Item	Unit
1	Power spectral density reference	dBm/Hz
2	Reserved for future use, returns -999.0	
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	

25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when ["Non-Contiguous Meas Region" on page 2287](#) is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see ["Power Ref" on page 2279](#)

#	Item	Unit										
1	Reference power	dBm/Hz										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Left ref carrier power</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Ref carrier power of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Integrated power in the left sub-block</td></tr></table>	Power Ref	Result	Left & Right Carriers	Left ref carrier power	Max Power Carrier in Sub-block	Ref carrier power of the left sub-block	Left & Right Sub-blocks	Integrated power in the left sub-block			
Power Ref	Result											
Left & Right Carriers	Left ref carrier power											
Max Power Carrier in Sub-block	Ref carrier power of the left sub-block											
Left & Right Sub-blocks	Integrated power in the left sub-block											
2	Right reference power	dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Right ref carrier power</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Ref carrier power of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Integrated power in the right sub-block</td></tr><tr><td>All others</td><td>999.0</td></tr></table>	Power Ref	Result	Left & Right Carriers	Right ref carrier power	Max Power Carrier in Sub-block	Ref carrier power of the right sub-block	Left & Right Sub-blocks	Integrated power in the right sub-block	All others	999.0	
Power Ref	Result											
Left & Right Carriers	Right ref carrier power											
Max Power Carrier in Sub-block	Ref carrier power of the right sub-block											
Left & Right Sub-blocks	Integrated power in the right sub-block											
All others	999.0											
3	Absolute integrated power at negative offset frequency A											
4	Absolute integrated power at positive offset frequency A											

25	Absolute integrated power at negative offset frequency L											
26	Absolute integrated power at positive offset frequency L											

Spectrum Peak Reference

Returns comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies. The length of the result depends on the number of available offset (See ["Number of Offsets" on page 1080](#))

#	Item	Unit
1	Spectrum Peak Power reference	dBm
2	Reserved for future use, returns -999.0	
3	Absolute peak power at negative offset frequency A	
4	Absolute peak power at positive offset frequency A	

25	Absolute peak power at negative offset frequency L	
26	Absolute peak power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when ["Non-Contiguous Meas Region" on page 2287](#) is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see ["Power Ref" on page 2279](#)

#	Item	Unit										
1	Spectrum Peak Power reference	dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Spectrum Peak Power reference at the left reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Spectrum Peak Power reference of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Spectrum Peak Power reference in the left sub-block</td></tr></table>	Power Ref	Result	Left & Right Carriers	Spectrum Peak Power reference at the left reference carrier	Max Power Carrier in Sub-block	Spectrum Peak Power reference of the left sub-block	Left & Right Sub-blocks	Spectrum Peak Power reference in the left sub-block			
Power Ref	Result											
Left & Right Carriers	Spectrum Peak Power reference at the left reference carrier											
Max Power Carrier in Sub-block	Spectrum Peak Power reference of the left sub-block											
Left & Right Sub-blocks	Spectrum Peak Power reference in the left sub-block											
2	Spectrum Peak Power reference	dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Spectrum Peak Power reference at the right reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Spectrum Peak Power reference of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Spectrum Peak Power reference in the right sub-block</td></tr><tr><td>All others</td><td>-999.0</td></tr></table>	Power Ref	Result	Left & Right Carriers	Spectrum Peak Power reference at the right reference carrier	Max Power Carrier in Sub-block	Spectrum Peak Power reference of the right sub-block	Left & Right Sub-blocks	Spectrum Peak Power reference in the right sub-block	All others	-999.0	
Power Ref	Result											
Left & Right Carriers	Spectrum Peak Power reference at the right reference carrier											
Max Power Carrier in Sub-block	Spectrum Peak Power reference of the right sub-block											
Left & Right Sub-blocks	Spectrum Peak Power reference in the right sub-block											
All others	-999.0											
3	Absolute peak power at negative offset frequency A											
4	Absolute peak power at positive offset frequency A											

25	Absolute peak power at negative offset frequency L											
26	Absolute peak power at positive offset frequency L											

3.5.4 Results for n = 6

When "Measurement Type" on page 2278 is Total Power Ref or PSD Ref, returns comma-separated scalar values (in dBc or dBc/Hz) of the integrated power relative to the carrier at the segment frequencies

When "Measurement Type" on page 2278 is Spectrum Peak Ref, returns comma-separated scalar values (in dB) of the peak power relative to the carrier at the segment frequencies

The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L).

#	Item
1	Reserved for future use, returns -999.0
2	Reserved for future use, returns -999.0
3	Power ^(*1) at negative offset A
2k + 3, k = 0	
4	Power ^(*1) at positive offset A
2k + 4, k = 0	

26	Power ^(*1) at positive offset L
2k + 4, k = 11	

*1: Relative integrated power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Relative peak power when "Measurement Type" on page 2278 is Spectrum Peak Ref

3.5.5 Results for n = 7-11

n	Data																				
7, 8	<p>Returns comma-separated pass/fail test results (0 = passed, or 1 = failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting. The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)</p> <p>For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to Outer or Outer & Inner (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to Inner</p> <p>The results are in the following order:</p> <table> <tr> <th>#</th><th>Item</th></tr> <tr> <td>1</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>2</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>3</td><td>At negative offset A</td></tr> <tr> <td>2k + 3, k = 0</td><td></td></tr> <tr> <td>4</td><td>At positive offset A</td></tr> <tr> <td>2k + 4, k = 0</td><td></td></tr> <tr> <td>---</td><td></td></tr> <tr> <td>26</td><td>At positive offset L</td></tr> <tr> <td>2k + 4, k = 11</td><td></td></tr> </table>	#	Item	1	Reserved for future use, returns -999.0	2	Reserved for future use, returns -999.0	3	At negative offset A	2k + 3, k = 0		4	At positive offset A	2k + 4, k = 0		---		26	At positive offset L	2k + 4, k = 11	
#	Item																				
1	Reserved for future use, returns -999.0																				
2	Reserved for future use, returns -999.0																				
3	At negative offset A																				
2k + 3, k = 0																					
4	At positive offset A																				
2k + 4, k = 0																					

26	At positive offset L																				
2k + 4, k = 11																					
9	<p>Returns comma-separated scalar values of frequency (in Hz) that have peak power from center or carrier edge frequency in each offset, depending on the setting of "Offset Freq Define" on page 1176. The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)</p>																				

n	Data																				
	<p>For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to Outer or Outer & Inner (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to Inner</p> <p>The results are in the following order:</p> <table> <tr> <th>#</th><th>Item</th></tr> <tr> <td>1</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>2</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>3</td><td>Negative offset A</td></tr> <tr> <td>$2k + 3, k = 0$</td><td></td></tr> <tr> <td>4</td><td>Positive offset A</td></tr> <tr> <td>$2k + 4, k = 0$</td><td></td></tr> <tr> <td>---</td><td>---</td></tr> <tr> <td>26</td><td>Positive offset L</td></tr> <tr> <td>$2k + 4, k = 11$</td><td></td></tr> </table>	#	Item	1	Reserved for future use, returns -999.0	2	Reserved for future use, returns -999.0	3	Negative offset A	$2k + 3, k = 0$		4	Positive offset A	$2k + 4, k = 0$		---	---	26	Positive offset L	$2k + 4, k = 11$	
#	Item																				
1	Reserved for future use, returns -999.0																				
2	Reserved for future use, returns -999.0																				
3	Negative offset A																				
$2k + 3, k = 0$																					
4	Positive offset A																				
$2k + 4, k = 0$																					
---	---																				
26	Positive offset L																				
$2k + 4, k = 11$																					
10	<p>Returns comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)</p> <p>For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to Outer or Outer & Inner (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to Inner</p> <p>The results are in the following order:</p> <table> <tr> <th>#</th><th>Item</th></tr> <tr> <td>1</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>2</td><td>Reserved for future use, returns -999.0</td></tr> <tr> <td>3</td><td>At negative offset A</td></tr> <tr> <td>$2k + 3, k = 0$</td><td></td></tr> <tr> <td>4</td><td>At positive offset A</td></tr> <tr> <td>$2k + 4, k = 0$</td><td></td></tr> <tr> <td>---</td><td>---</td></tr> <tr> <td>26</td><td>At positive offset L</td></tr> <tr> <td>$2k + 4, k = 11$</td><td></td></tr> </table>	#	Item	1	Reserved for future use, returns -999.0	2	Reserved for future use, returns -999.0	3	At negative offset A	$2k + 3, k = 0$		4	At positive offset A	$2k + 4, k = 0$		---	---	26	At positive offset L	$2k + 4, k = 11$	
#	Item																				
1	Reserved for future use, returns -999.0																				
2	Reserved for future use, returns -999.0																				
3	At negative offset A																				
$2k + 3, k = 0$																					
4	At positive offset A																				
$2k + 4, k = 0$																					
---	---																				
26	At positive offset L																				
$2k + 4, k = 11$																					
11	<p>Returns comma-separated scalar values in dBc (dB if MeasType = PSD) of the peak power relative to the carrier at the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 1080)</p> <p>For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to Outer or Outer & Inner (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to Inner</p> <p>The results are in the following order:</p>																				

n	Data
#	Item
1	Reserved for future use, returns -999.0
2	Reserved for future use, returns -999.0
3	At negative offset A
2k + 3, k = 0	
4	At positive offset A
2k + 4, k = 0	

26	At positive offset L
2k + 4, k = 11	

3.5.6 Results for n = 12

When "Measurement Type" on page 2278 is Spectrum Peak reference, returns the peak power of the signal in the ref channel

Otherwise, the value returned is -999.0

3.5.7 Results for n = 13

Returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer** or **Outer & Inner** (5GNR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**, in the following order:

#	Item	Unit
1	Power Ref	dBm
	Result	
	Max Power Carrier	
	Max Power Carrier in Sub-block	
	RF Bandwidth	
	All others	NaN
2	Absolute reference power	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
	Power Ref	
	Result	
	Left & Right	Power ^(*1) at the left reference

3 5G NR Mode

3.5 SEM Measurement

#	Item	Unit
	Power Ref	Result
	Carriers	carrier
	Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the left sub-block
	Left & Right Sub-blocks	Power ^(*2) in the left sub-block
	Absolute reference power	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
3	Power Ref	Result
	Left & Right Carriers	Power ^(*1) at the right reference carrier
	Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the right sub-block
	Left & Right Sub-blocks	Power ^(*2) in the right sub-block
	All others	NaN
4	Peak frequency in the reference channel spacing frequency range	
	Power Ref	Result
	Left & Right Carriers	Peak frequency in the left ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block
	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range
	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range
5	Peak frequency in the right reference channel spacing frequency range	
	Power Ref	Result
	Left & Right Carriers	Peak frequency in the right ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block

#	Item	Unit
	Power Ref	Result
	Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range
	All others	NaN

*1: Absolute power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 2278 is Spectrum Peak Ref

*2: Integrated power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 2278 is Spectrum Peak Ref

If the result is not available, NaN (9.91E+37) is returned

The number of values returned is subject to change in future releases

3.5.8 Results for n = 14

Returns comma-separated scalar results

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer** or **Outer & Inner** (5GNR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L)

#	Item	Unit
1	Relative integrated power on the negative offset A	When "Measurement Type" on page 2278 is Total Power Ref: dBc
10k + 1, k = 0	Returns NaN when "Measurement Type" on page 2278 is Spectrum Peak Ref	When PSD: dB
2	Absolute integrated power on the negative offset A	When "Measurement Type" on page 2278 is Total Power Ref: dBm
10k + 2, k = 0	Returns NaN when "Measurement Type" on page 2278 is Spectrum Peak Ref	When PSD: dBm/Hz
3	Relative peak power on the negative offset A	When "Measurement Type" on page 2278 is Total Power Ref PSD: dBc
10k + 3, k = 0		Others: dB
4	Absolute peak power on the negative offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz
10k + 4, k = 0		Others: dBm

#	Item	Unit
5 10k + 5, k = 0	Peak power offset frequency from the center or carrier edge frequency in the negative offset A Depends on the setting of "Offset Freq Define" on page 1176	Hz
6 10k + 6, k = 0	Relative integrated power on the positive offset A Returns NaN when "Measurement Type" on page 2278 is Spectrum Peak Ref	When "Measurement Type" on page 2278 is Total Power Ref: dBc When PSD: dB
7 10k + 7, k = 0	Absolute integrated power on the positive offset A Returns NaN when "Measurement Type" on page 2278 is Spectrum Peak Ref	When "Measurement Type" on page 2278 is Total Power Ref: dBm When PSD: dBm/Hz
8 10k + 8, k = 0	Relative peak power on the positive offset A	When "Measurement Type" on page 2278 is Total Power Ref: dBc Others: dB
9 10k + 9, k = 0	Absolute peak power on the positive offset A	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
10 10k + 10, k = 0	Peak power offset frequency from the center or carrier edge frequency in the positive offset A Depends on the setting of "Offset Freq Define" on page 1176	Hz

120 10k + 10, k = 11	Peak power offset frequency from the center or carrier edge frequency in the positive offset L Depends on the setting of "Offset Freq Define" on page 1176	Hz

If the result is not available, NaN (9.91E+37) is returned

3.5.9 Results for n = 15

Results available only when "Measurement Type" on page 2278 is Total Power Reference.

Returns comma-separated scalar results

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 2287 is set to **Outer** or **Outer & Inner** (5GNR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L).

#	Item	Unit
1	Minimum margin from limit line on the negative offset A	dB
$2k + 1, k = 0$		
2	Minimum margin from limit line on the positive offset A	dB
$2k + 2, k = 0$		
3	Minimum margin from limit line on the negative offset B	dB
$2k + 1, k = 1$		
4	Minimum margin from limit line on the positive offset B	dB
$2k + 2, k = 1$		

24	Minimum margin from limit line on the positive offset L	dB
$2k + 2, k = 11$		

3.5.10 Results for n = 16

Returns number of carriers comma-separated scalar results, in the following order:

#	Item	Unit
1	Absolute power of carrier 1	dBm
2	Absolute power of carrier 2	dBm

number of carriers - 1	Absolute power of carrier (number of carriers) - 1	dBm
number of carriers	Absolute power of carrier (number of carriers)	dBm

If Measure Carrier of the corresponding carrier is no, **NaN** (9.91E+37) is returned

If the result is not available, **NaN** (9.91E+37) is returned

3.5.11 Results for n = 17

Returns the displayed frequency domain combined limit trace data separated by comma. Combined trace is a mixed trace of both absolute limit trace and relative limit trace according to the fail mask condition

3.5.12 Results for n = 18-20

n	Return Value
18	Returns the displayed frequency domain spectrum trace data for Trace 2 separated by commas
19	Returns the displayed frequency domain spectrum trace data for Trace 3 separated by commas
20	Returns the displayed frequency domain absolute 2 limit trace data, separated by commas

3.5.13 Results for n = 21

The results consist of seven categories:

- 1-10 (outer reference powers)
- 11-130 (outer offset results)
- 131-154 (outer minimum margins)
- 155-170 (reserved)
- 171-180 (inner reference powers)
- 181-300 (inner offset results)
- 301-324 (inner minimum margins)

"Non-Contiguous Meas Region" on page 2287	Results returned
Outer	Outer offset results. For items returning an inner offset result, returns NaN
Inner	Inner offset results. For items returning an outer offset result, returns NaN
Outer & Inner	Both outer and inner offset results

Available Power Ref selections differ depending on the mode. For details, see ["Power Ref" on page 2279](#)

Below, k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. For these Modes, the number of offsets is always 12 (A-L).

#	Item	Unit, if any								
1	Total Absolute power of carriers of Measure Carrier On if available Otherwise, NaN									
2	Reference power for outer offset	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm								
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the left reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Power^(*1) at the reference carrier of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Power^(*2) in the left sub-block</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the left reference carrier	Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the left sub-block	Left & Right Sub-blocks	Power ^(*2) in the left sub-block	
Power Ref	Result									
Left & Right Carriers	Power ^(*1) at the left reference carrier									
Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the left sub-block									
Left & Right Sub-blocks	Power ^(*2) in the left sub-block									

#	Item	Unit, if any										
3	Reference power for outer offset	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the right reference carrier</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Power^(*1) at the reference carrier of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Power^(*2) in the right sub-block</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the right reference carrier	Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the right sub-block	Left & Right Sub-blocks	Power ^(*2) in the right sub-block	All others	NaN	
Power Ref	Result											
Left & Right Carriers	Power ^(*1) at the right reference carrier											
Max Power Carrier in Sub-block	Power ^(*1) at the reference carrier of the right sub-block											
Left & Right Sub-blocks	Power ^(*2) in the right sub-block											
All others	NaN											
4	Reserved for future use, returns NaN											
5	Peak frequency in the reference channel spacing frequency range for outer offset	Hz										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the left ref carrier frequency range</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Peak frequency in the ref carrier frequency range of the left sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Peak frequency in the left reference sub-block frequency range</td></tr><tr><td>RF Bandwidth & Aggregated Channel Bandwidth</td><td>Peak frequency in the reference channel bandwidth frequency range</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the left ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range	
Power Ref	Result											
Left & Right Carriers	Peak frequency in the left ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block											
Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range											
RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range											
6	Peak frequency in the right reference channel spacing frequency range for outer offset	Hz										
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the right ref carrier frequency range</td></tr><tr><td>Max Power Carrier in Sub-block</td><td>Peak frequency in the ref carrier frequency range of the right sub-block</td></tr><tr><td>Left & Right Sub-blocks</td><td>Peak frequency in the right reference sub-block frequency range</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the right ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block	Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range	All others	NaN	
Power Ref	Result											
Left & Right Carriers	Peak frequency in the right ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block											
Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range											
All others	NaN											
7~10	Reserved for future use, returns NaN											
11	Relative integrated power on the negative offset A for outer	dB										
10k + 11, k = 0												

3 5G NR Mode

3.5 SEM Measurement

#	Item	Unit, if any
12 10k + 12, k = 0	Absolute integrated power on the negative offset A for outer	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
13 10k + 13, k = 0	Relative peak power on the negative offset A for outer	dB
14 10k + 14, k = 0	Absolute peak power on the negative offset A for outer	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
15 10k + 15, k = 0	Peak power offset frequency from the center or carrier edge frequency in the negative offset A for outer Depends on the setting of "Offset Freq Define" on page 1176	Hz
16 10k + 16, k = 0	Relative integrated power on the positive offset A for outer	dB
17 10k + 17, k = 0	Absolute integrated power on the positive offset A for outer	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
18 10k + 18, k = 0	Relative peak power on the positive offset A for outer	dB
19 10k + 19, k = 0	Absolute peak power on the positive offset A for outer	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm
20 10k + 20, k = 0	Peak power offset frequency from the center or carrier edge frequency in the positive offset A for outer Depends on the setting of "Offset Freq Define" on page 1176	Hz
130 10k + 20, k = 11	Peak power offset frequency from the center or carrier edge frequency in the positive offset L for outer Depends on the setting of Offset Freq Define	dB
...		
131 2k + 131, k = 0	Minimum margin from limit line on the negative offset A for outer	dB
132 2k + 132, k = 0	Minimum margin from limit line on the positive offset A for outer	dB

154 2k + 132	Minimum margin from limit line on the positive offset L for outer	dB

#	Item	Unit, if any						
K = 11								
155~171	Reserved for future use, returns NaN							
172	Reference power for inner offset	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm						
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the left reference carrier</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the left reference carrier	All others	NaN	
Power Ref	Result							
Left & Right Carriers	Power ^(*1) at the left reference carrier							
All others	NaN							
173	Reference power for inner offset	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm						
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Power^(*1) at the right reference carrier</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Power ^(*1) at the right reference carrier	All others	NaN	
Power Ref	Result							
Left & Right Carriers	Power ^(*1) at the right reference carrier							
All others	NaN							
174	Reserved for future use, returns NaN							
175	Peak frequency in the reference channel spacing frequency range for inner offset	Hz						
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the left ref carrier frequency range</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the left ref carrier frequency range	All others	NaN	
Power Ref	Result							
Left & Right Carriers	Peak frequency in the left ref carrier frequency range							
All others	NaN							
176	Peak frequency in the right reference channel spacing frequency range for inner offset	Hz						
	<table><tr><th>Power Ref</th><th>Result</th></tr><tr><td>Left & Right Carriers</td><td>Peak frequency in the right ref carrier frequency range</td></tr><tr><td>All others</td><td>NaN</td></tr></table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the right ref carrier frequency range	All others	NaN	
Power Ref	Result							
Left & Right Carriers	Peak frequency in the right ref carrier frequency range							
All others	NaN							
177~180	Reserved for future use, returns NaN							
181	Relative integrated power on the negative offset A for inner	dB						
10k + 181, k = 0								
182	Absolute integrated power on the negative offset A for inner	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz Others: dBm						
10k + 182, k = 0								
183	Relative peak power on the negative offset A for inner	dB						
10k + 183, k = 0								
184	Absolute peak power on the negative offset A for inner	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz						
10k + 184, k								

3 5G NR Mode

3.5 SEM Measurement

#	Item	Unit, if any
= 0		Others: dBm
185	Peak power offset frequency from the center or carrier edge frequency in the negative offset A for inner	Hz
10k + 185, k = 0	Depends on the setting of "Offset Freq Define" on page 1176	
186	Relative integrated power on the positive offset A for inner	dB
10k + 186, k = 0		
187	Absolute integrated power on the positive offset A for inner	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz
10k + 187, k = 0		Others: dBm
188	Relative peak power on the positive offset A for inner	dB
10k + 188, k = 0		
189	Absolute peak power on the positive offset A for inner	When "Measurement Type" on page 2278 is PSD Ref: dBm/Hz
10k + 189, k = 0		Others: dBm
190	Peak power offset frequency from the center or carrier edge frequency in the positive offset A for inner	Hz
10k + 190, k = 0	Depends on the setting of "Offset Freq Define" on page 1176	

300	Peak power offset frequency from the center or carrier edge frequency in the positive offset L for inner	
10k + 190, k=11	Depends on the setting of Offset Freq Define	
301	Minimum margin from limit line on the negative offset A for inner	dB
2k + 301, k = 0		
302	Minimum margin from limit line on the positive offset A for inner	dB
2k + 302, k = 0		

324	Minimum margin from limit line on the positive offset L for inner	dB
2k + 302, k = 11		
<p>*1: Absolute power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak Power when "Measurement Type" on page 2278 is Spectrum Peak Ref</p> <p>*2: Integrated power when "Measurement Type" on page 2278 is Total Power Ref or PSD Ref; Peak Power when "Measurement Type" on page 2278 is Spectrum Peak Ref</p>		

3.5.14 Results for n = 22

Returns comma-separated pass/fail test results (0 = passed, or 1 = failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.

"Non-Contiguous Meas Region" on page 2287	Results returned
Outer	Outer offset results. For items returning an inner offset result, returns NaN
Inner	Inner offset results. For items returning an outer offset result, returns NaN
Outer & Inner	Both outer and inner offset results

Below, k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. For these Modes, the number of offsets is always 12 (A-L).

#	Item
1	Reserved for future use, returns NaN
2	Reserved for future use, returns NaN
3	At negative offset A for outer
$2k + 3, k = 0$	
4	At positive offset A for outer
$2k + 4, k = 0$	

26	At positive offset L for outer
$2k + 4, k = 11$	
27~32	Reserved for future use, returns NaN
33	At negative offset A for inner
$2k + 33, k = 0$	
34	At positive offset A for inner
$2k + 34, k = 0$	

56	At positive offset L for inner
$2k + 34, k = 11$	

3.5.15 Number of Offsets

The number of available offsets varies depending on the mode and option as below.

Mode	Number of available offsets
MSR LTEAFDD, LTEATDD, 5G NR	12 (Offset A to L)
WLAN	14 (Offset A to N)
Other Modes with option: N9060A-7FP, N9060B-2FP, N9060C-2FP, N9060EM1D, N9060EM1E, or N90EMPSPMB	12 (Offset A to L)
Other Modes without option N9060A-7FP, N9060B-2FP, N9060C-2FP, N9060EM1D, N9060EM1E, or N90EMPSPMB	6 (Offset A to F)

3.5.16 Views

All Modes provide three predefined views. In MSR, LTE-Advanced FDD/TDD and 5G NR Modes, there is also a fourth predefined view. The views are listed in the table below.

In the following table:

- The Enumerated ID is used with **:DISP:SEM:VIEW**
- The Numeric ID is used with **:DISP:SEM:VIEW:NSEL**

View Name	Enumerated ID	Numeric ID	Details
"Abs Pwr Freq" on page 1082	APFReq	1	Displays the absolute power levels in dBm and the corresponding frequencies in the text window
"Rel Pwr Freq" on page 1082	RPFReq	2	Displays the relative power levels in dBc and the corresponding frequencies in the text window
"Integrated Power" on page 1083	IPOwer	3	Displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window
"Carrier Info" on page 1083	CINformation	4	Displays the carrier info table Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes MSR is not supported in UXM

View Selection by Name

Remote Command	:DISPlay:SEMask:VIEW[:SElect] APFReq RPFReq IPOwer CINformation :DISPlay:SEMask:VIEW[:SElect]?
Example	:DISP:SEM:VIEW IPOW

	:DISP:SEM:VIEW?
Dependencies	In SA Mode, when Radio Standard is set to WLAN, IPower is not available CINformation is available only in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	APFReq unless noted below RPFReq WLAN
State Saved	Saved in instrument state
Range	Abs Pwr Freq Rel Pwr Freq Integrated Power Carrier Info

Views Selection by Number

Remote Command	:DISPlay:SEMask:VIEW:NSElect <integer> :DISPlay:SEMask:VIEW:NSElect?
Example	:DISP:SEM:VIEW:NSEL 2 :DISP:SEM:VIEW:NSEL?
Dependencies	In SA Mode, when Radio Standard is set to WLAN, Option 3 is not available Option 4 is available only in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	1 unless noted below: 2 WLAN
State Saved	Saved in instrument state
Min/Max	MSR, LTEAFDD, LTEATDD, 5G NR Modes 1/4 All other Modes 1/3

3.5.16.1 Abs Pwr Freq

Displays the absolute power levels in dBm and the corresponding frequencies in the text window.

Windows: "Graph" on page 1083, "Table" on page 1088

Example	:DISP:SEM:VIEW APFR
---------	----------------------------

3.5.16.2 Rel Pwr Freq

Displays the relative power levels in dBc and the corresponding frequencies in the text window.

Windows: "Graph" on page 1083, "Table" on page 1088

Example	:DISP:SEM:VIEW RPFR
---------	----------------------------

3.5.16.3 Integrated Power

Displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

Windows: "Graph" on page 1083, "Table" on page 1088

Example	:DISP:SEM:VIEW IPOW
---------	---------------------

3.5.16.4 Carrier Info

Only available in MSR, LTE-Advanced and 5G NR Modes.

Displays the carrier configuration information with measure powers. Sets the display to the **Carrier Info** view. The lower window is the carrier info table in this view.

Windows: "Graph" on page 1083, "Table" on page 1088

Example	:DISP:SEM:VIEW CINF
Dependencies	Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes

3.5.17 Windows

There are four available window types:

- In all Modes, the "Graph" on page 1083 and "Table" on page 1088 windows are available
- In the MSR, LTE-Advanced FDD/TDD and 5G NR Modes, an additional window, **Carrier Info**, is available. For details, see the **View** topic for "Carrier Info" on page 1083
- When **Gate View** is on, the "Gate" on page 1098 window is available

This section describes the windows.

3.5.17.1 Graph

Used to display the spectrum being measured by the SEM measurement.

This window appears in several Views, as follows:

View	Size	Position
Abs Pwr Freq	Three fifth, full width	Top


View	Size	Position
Rel Pwr Freq	Three fifth, full width	Top
Integrated Power	Three fifth, full width	Top
Gate View	One third, full width	Middle

The Graph differs depending on which View you are in. The views differ depending on the setting of the measurement type ("**Measurement Type**" on page 2278) under the **Meas Setup** menu


Graph Window in Abs Pwr Freq View

Corresponding Trace yellow - Combined trace from carrier and each offset


Abs Peak Pwr & Freq (Total Pwr Ref)

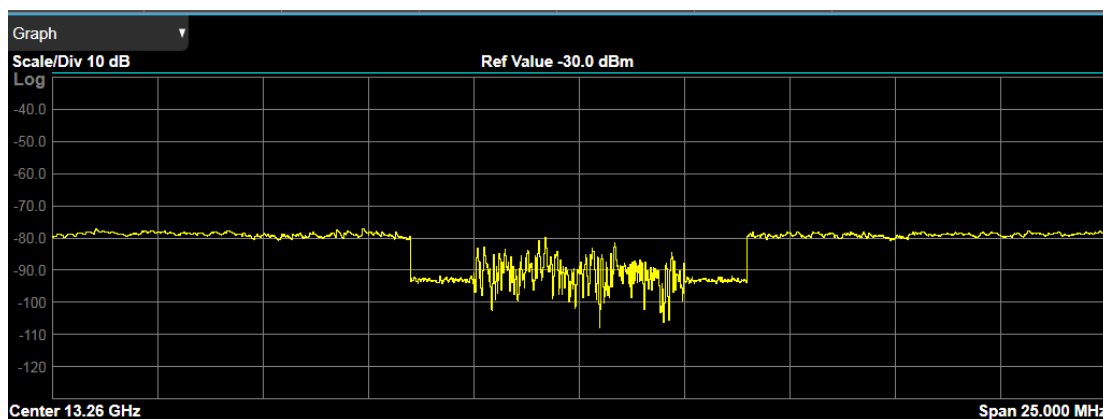

Abs Peak Pwr & Freq (PSD Ref)

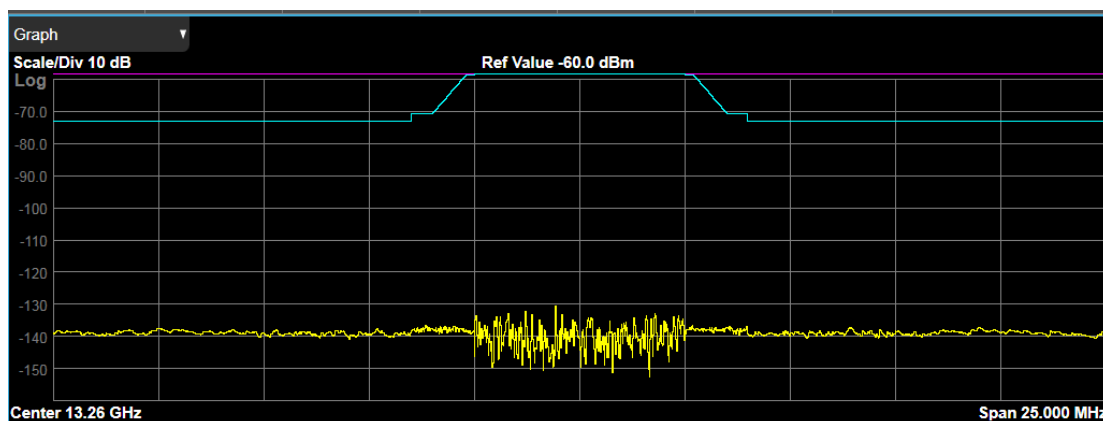


Abs Peak Pwr & Freq (Spectrum Pk Ref)

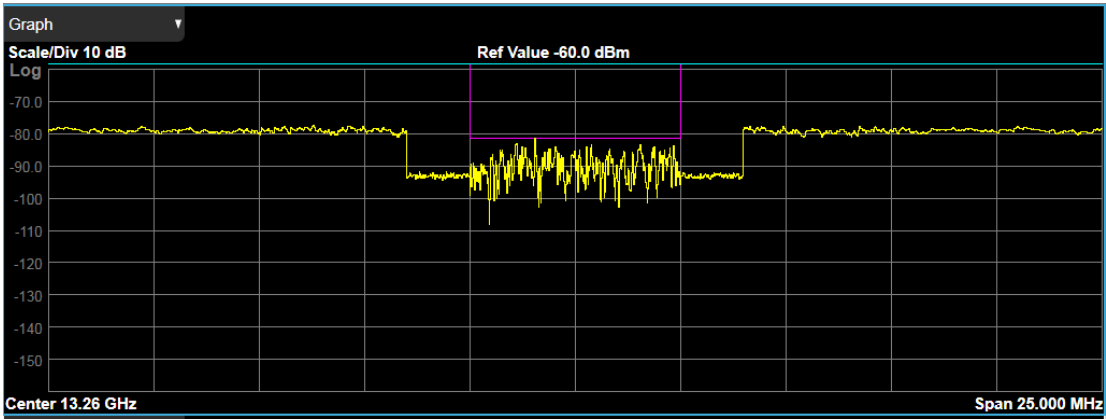


Graph Window in Rel Pwr Freq View

Corresponding Trace yellow - Combined trace from carrier and each offset


Rel Peak Pwr & Freq (Total Pwr Ref)

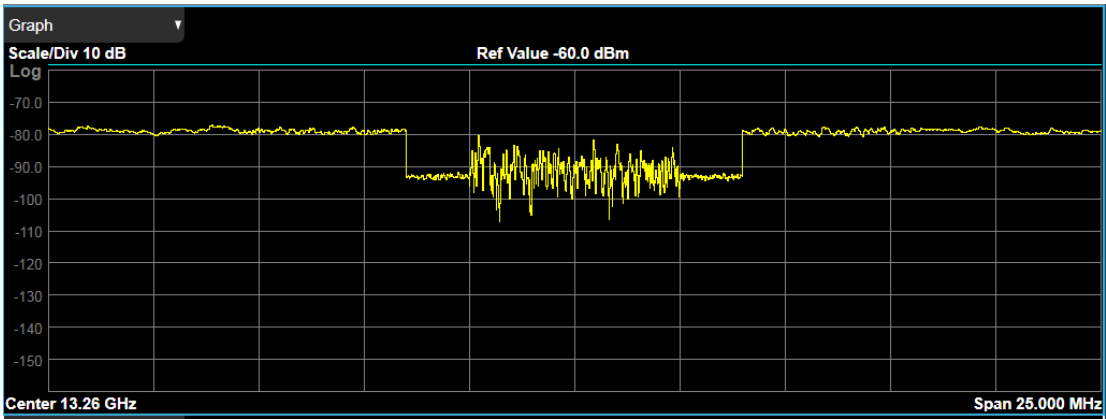

Rel Peak Pwr & Freq (PSD Ref)

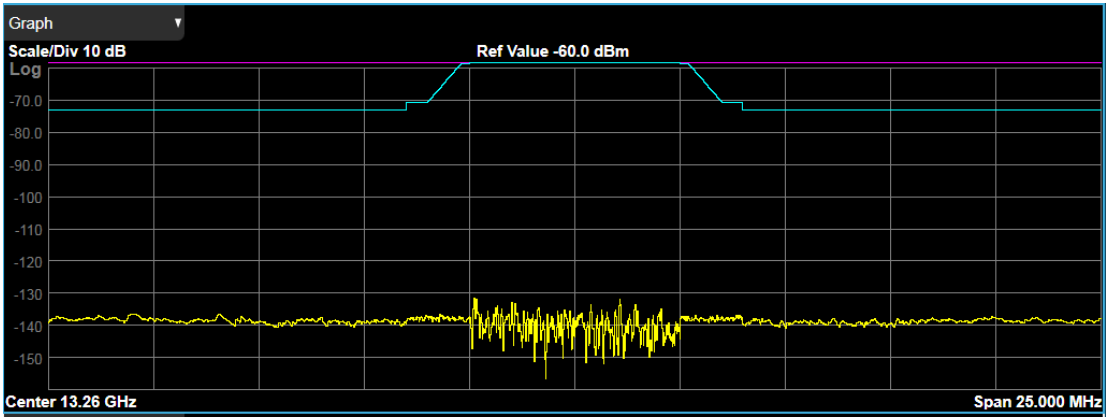


Rel Peak Pwr & Freq (Spectrum Pk Ref)

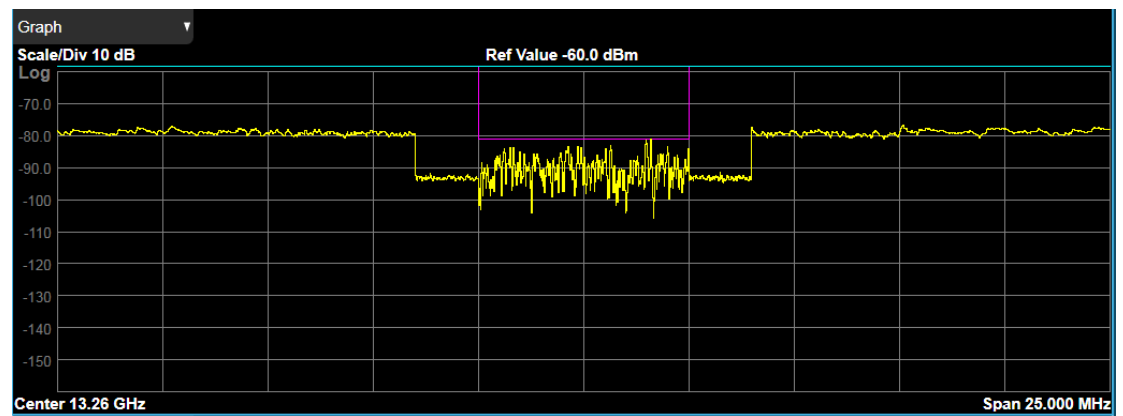


Graph Window in Integrated Power View

Corresponding Trace yellow - Combined trace from carrier and each offset

Integrated Power (Total Pwr Ref)

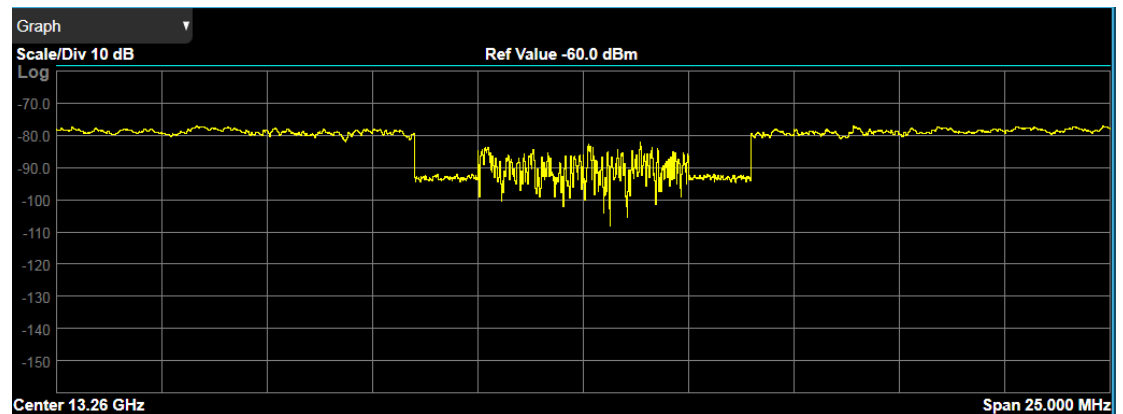


Integrated Power (PSD Ref)

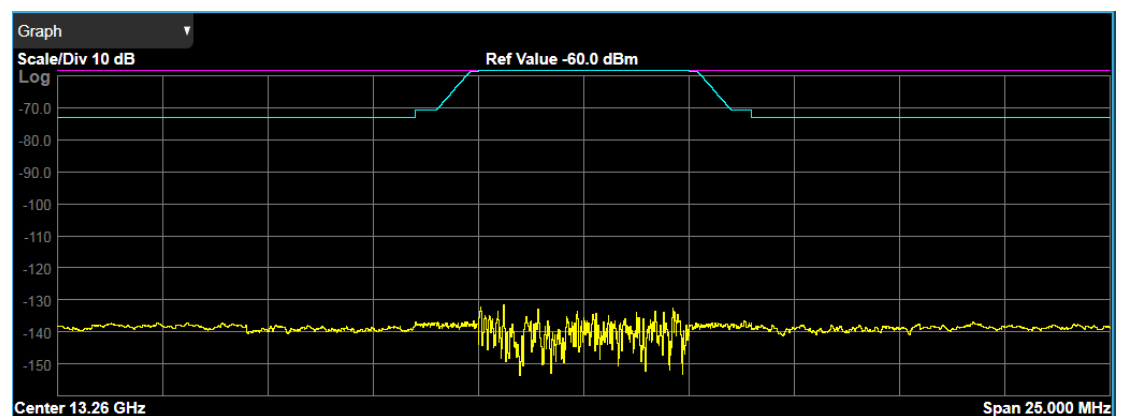

- 3 5G NR Mode
- 3.5 SEM Measurement


Integrated Power (Spectrum Pk Ref)

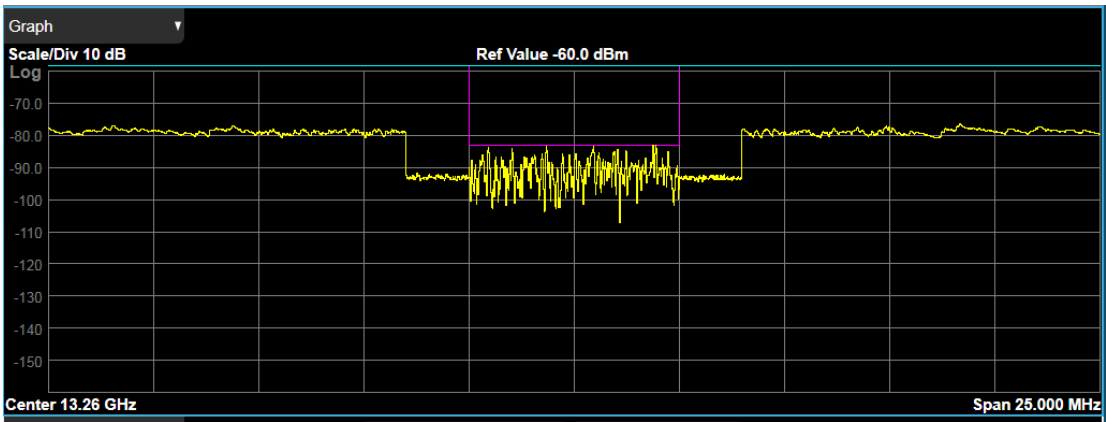


Graph Window in Carrier Info View

Sets the display to the carrier info view. The views differ depending on the setting of "Measurement Type" on page 2278.


Spectrum trace (Total Pwr Ref)

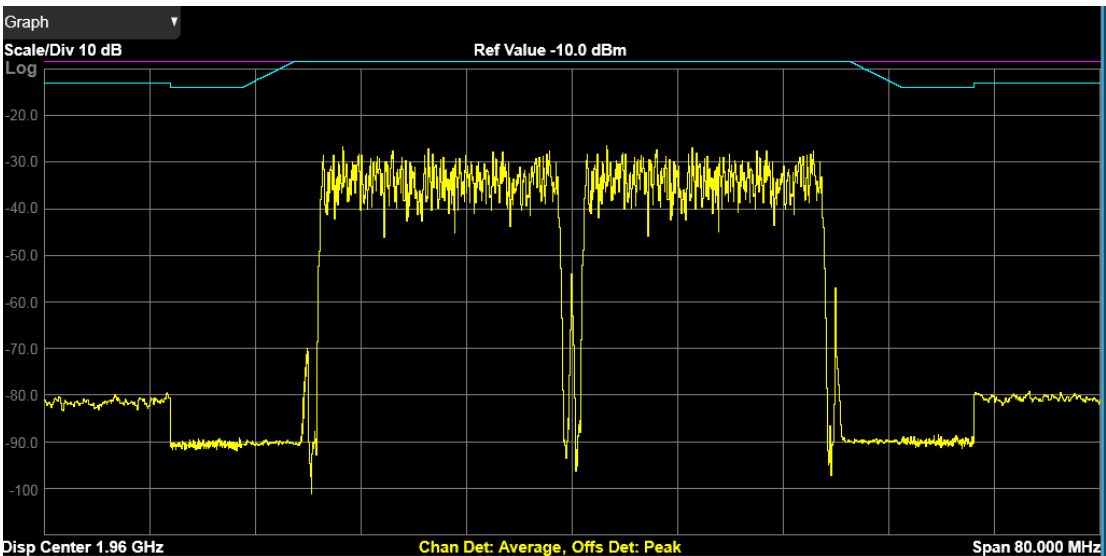

Spectrum trace (PSD Ref)

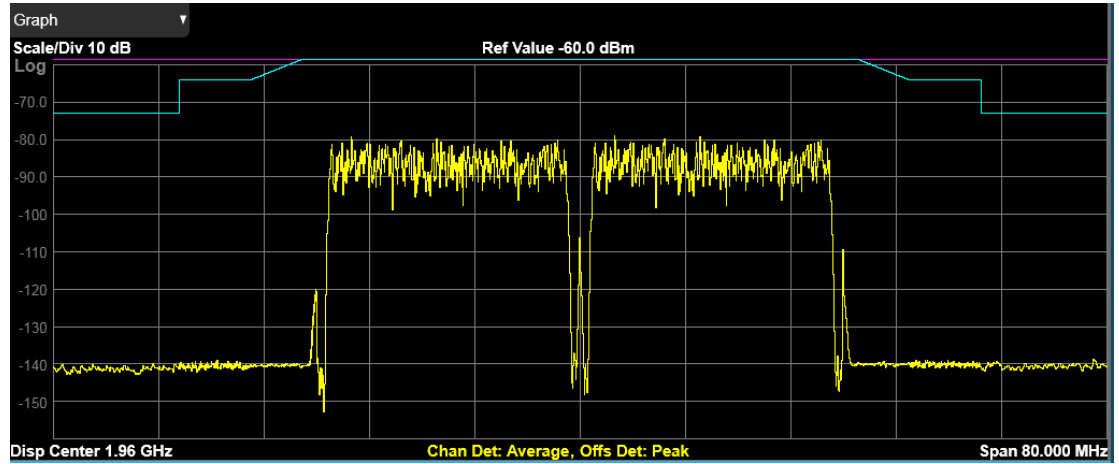

Spectrum trace (Spectrum Pk Ref)

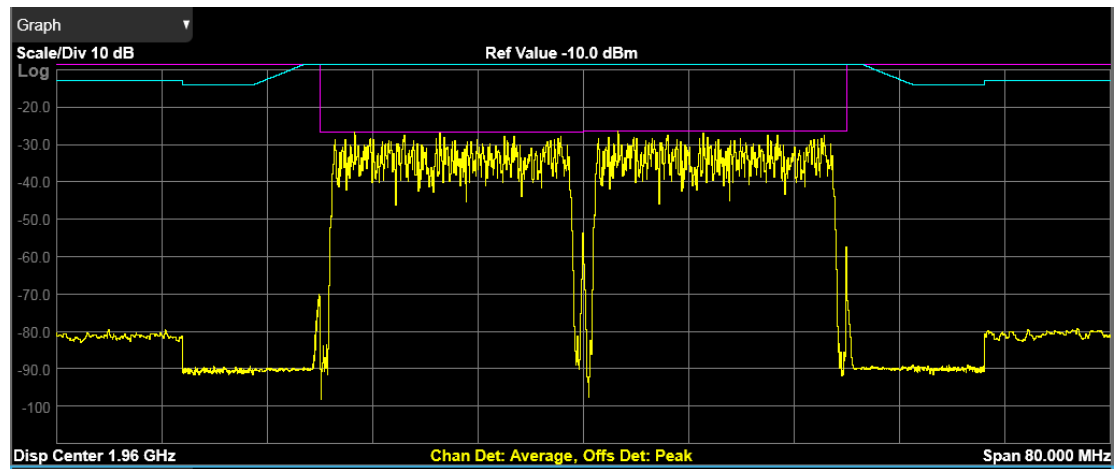

3.5.17.2 Table

Displays textual results for the measurement. The Table differs depending on which View you are in.

The views differ depending on the setting of "[Measurement Type](#)" on page 2278.

View	Size	Position
Abs Pwr Freq	Two fifth, full width	Bottom
Rel Pwr Freq	Two fifth, full width	Bottom
Integrated Power	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

Table Window in Abs Pwr Freq View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref (PSD Ref)		n = 5 1st element Power spectral density reference at the reference area
Spectrum Peak ref (Spectrum Pk Ref)		n = 5 1st element Spectrum peak power reference at the reference area
Measure Trace		See "Measure Trace" on page 2614
Start Freq	Hz	Start frequency for offset
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Peak (Total Power Ref, Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the negative offset
Lower (PSD Ref)	dBm/Hz	Absolute power spectrum density of the negative offset
Lower Δ lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq	Hz	Frequency on minimum margin point of the negative offset
Upper Peak (Total Power Ref, Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the positive offset
Upper (PSD Ref)	dBm/Hz	Absolute power spectrum density of the positive offset
Upper Δ lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq	Hz	Frequency on minimum margin point of the positive offset

When Measurement Type is Total Power Ref

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Measure Trace	
		-75.08 dBm / 3.84 MHz		Trace 1	
Start Freq	Stop Freq	Integ BW	dBm	Lower Δ Limit(dB)	Upper Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-97.53	(-83.53)	-2.650 M
2.715 MHz	3.515 MHz	30.00 kHz	-99.02	(-73.17)	-3.505 M
3.515 MHz	4.000 MHz	30.00 kHz	-98.01	(-72.01)	-3.595 M
4.000 MHz	8.000 MHz	1.000 MHz	-84.11	(-71.11)	-6.488 M
8.000 MHz	12.50 MHz	1.000 MHz	-82.36	(-69.36)	-9.300 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Measure Trace			
		Sub-block Left		-60.63 dBm / 99.97 MHz		Trace 1			
		Sub-block Right		-60.63 dBm / 99.97 MHz					
				Lower			Upper		
Start Freq	Stop Freq	Integ BW	dBm	Δ Limit(dB)	Freq (Hz)	dBm	Δ Limit(dB)	Freq (Hz)	
50.00 kHz	5.050 MHz	102.0 kHz	-89.50	(-77.23)	-4.884 M	-89.58	(-77.08)	5.050 M	
5.050 MHz	10.05 MHz	100.0 kHz	-87.86	(-75.36)	-6.725 M	-87.98	(-75.48)	7.675 M	
10.50 MHz	40.00 MHz	1.000 MHz	-20.42	(-5.42)	-14.80 M	-78.24	(-63.24)	35.65 M	
40.00 MHz	100.0 MHz	1.000 MHz	-77.73	(-62.73)	-57.55 M	-77.94	(-62.94)	59.95 M	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

When Measurement Type is PSD Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		PSD Ref		Measure Trace		
		-75.55 dBm / 3.84 MHz		-141.39 dBm/Hz		Trace 1		
				Lower		Upper		
Start Freq	Stop Freq	Integ BW	dBm/Hz	ΔLimit(dB)	Freq (Hz)	dBm/Hz	ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-145.39	(-84.46)	-2.553 M	-144.42	(-82.94)	2.658 M
2.715 MHz	3.515 MHz	30.00 kHz	-144.96	(-73.59)	-3.515 M	-144.86	(-72.24)	3.513 M
3.515 MHz	4.000 MHz	30.00 kHz	-144.92	(-70.74)	-3.843 M	-145.04	(-71.79)	3.558 M
4.000 MHz	8.000 MHz	1.000 MHz	-146.73	(-71.41)	-5.950 M	-146.24	(-70.80)	7.525 M
8.000 MHz	12.50 MHz	1.000 MHz	-145.26	(-69.37)	-11.89 M	-145.49	(-69.12)	8.388 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---	---	(--)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---	---	(--)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table	Reference		Power		PSD Ref		Measure Trace	
	Sub-block Left	-60.39 dBm / 99.97 MHz			-140.39 dBm/Hz		Trace 1	
	Sub-block Right	-60.39 dBm / 99.97 MHz			-140.39 dBm/Hz			
Start Freq	Stop Freq	Integ BW	dBm/Hz	Lower ΔLimit(dB)	Freq (Hz)	dBm/Hz	Upper ΔLimit(dB)	Freq (Hz)
50.00 kHz	5.050 MHz	102.0 kHz	-139.82	(-77.24)	-5.050 M	-139.86	(-77.14)	5.050 M
5.050 MHz	10.05 MHz	100.0 kHz	-139.53	(-75.14)	-6.375 M	-139.45	(-75.05)	8.900 M
10.50 MHz	40.00 MHz	1.000 MHz	-94.24	(-5.41)	-14.80 M	-139.59	(-62.92)	34.00 M
40.00 MHz	100.0 MHz	1.000 MHz	-139.81	(-62.31)	-69.55 M	-139.88	(-62.73)	54.70 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---

When Measurement Type is Spectrum Pk Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Spectrum Peak Ref		Measure Trace		
		-74.79 dBm / 3.84 MHz		-82.60 dBm		Trace 1		
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	dBm	Upper ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-99.47	(-85.47)	-2.545 M	-98.13	(-84.13)	2.538 M
2.715 MHz	3.515 MHz	30.00 kHz	-98.92	(-73.18)	-3.498 M	-97.29	(-71.55)	3.498 M
3.515 MHz	4.000 MHz	30.00 kHz	-98.39	(-72.39)	-3.835 M	-97.40	(-71.40)	3.723 M
4.000 MHz	8.000 MHz	1.000 MHz	-84.06	(-71.06)	-5.250 M	-83.22	(-70.22)	6.663 M
8.000 MHz	12.50 MHz	1.000 MHz	-82.52	(-69.52)	-9.313 M	-82.16	(-69.16)	12.26 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Spectrum Peak Ref		Measure Trace	
		Sub-block Left		-60.60 dBm / 99.97 MHz		-74.10 dBm		Trace 1	
		Sub-block Right		-60.60 dBm / 99.97 MHz		-74.10 dBm			
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	dBm	Upper ΔLimit(dB)	Freq (Hz)	
50.00 kHz	5.050 MHz	102.0 kHz	-89.75	(-77.34)	-4.986 M	-89.69	(-77.19)	5.050 M	
5.050 MHz	10.05 MHz	100.0 kHz	-87.79	(-75.29)	-8.875 M	-87.91	(-75.41)	8.975 M	
10.50 MHz	40.00 MHz	1.000 MHz	-20.42	(-5.42)	-14.80 M	-77.91	(-62.91)	31.00 M	
40.00 MHz	100.0 MHz	1.000 MHz	-77.44	(-62.44)	-47.80 M	-78.05	(-63.05)	41.35 M	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

Table Window in Rel Pwr Freq View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref		n=5 1st element Power spectral density reference at the reference area
Spectrum Peak Ref		n = 5 1st element Spectrum peak power reference at the reference area
Measure Trace		See "Measure Trace" on page 2614
Start Freq	Hz	Start frequency for offset

Name (Measurement Type)	Unit, if any	Corresponding Results
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Peak (Total Pwr Ref, Spectrum Pk Ref)	dBc (Total Pwr Ref) dB (Spectrum Pk Ref)	Relative peak power on minimum margin point of the negative offset
Lower (PSD Ref)	dB	Relative power spectrum density of the negative offset
Lower Δ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq	Hz	Frequency on minimum margin point of the negative offset
Upper Peak (Total Pwr Ref, Spectrum Pk Ref)	dBc (Total Pwr Ref) dB (Spectrum Pk Ref)	Relative peak power on minimum margin point of the positive offset
Upper (PSD Ref)	dB	Relative power spectrum density of the positive offset
Upper Δ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq	Hz	Frequency on minimum margin point of the positive offset

When Measurement Type is Total Power Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power			Measure Trace			
		-75.54 dBm / 3.84 MHz			Trace 1			
Start Freq	Stop Freq	Integ BW	dBc	Lower ΔLimit(dB)	Freq (Hz)	dBc	Upper ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-23.32	(-84.86)	-2.515 M	-22.02	(-83.56)	2.703 M
2.715 MHz	3.515 MHz	30.00 kHz	-21.35	(-71.38)	-3.483 M	-21.76	(-71.57)	3.498 M
3.515 MHz	4.000 MHz	30.00 kHz	-21.68	(-71.22)	-3.633 M	-22.23	(-71.77)	3.790 M
4.000 MHz	8.000 MHz	1.000 MHz	-8.29	(-70.83)	-6.488 M	-5.96	(-68.50)	5.900 M
8.000 MHz	12.50 MHz	1.000 MHz	-6.02	(-68.56)	-8.100 M	-6.17	(-68.71)	8.775 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

3 5G NR Mode

3.5 SEM Measurement

2 Table		Reference	Power				Measure Trace	
		Sub-block Left	-60.67 dBm / 99.97 MHz				Trace 1	
		Sub-block Right	-60.67 dBm / 99.97 MHz					
Start Freq	Stop Freq	Integ BW	Lower		Freq (Hz)	Upper		Freq (Hz)
			dBc	ΔLimit(dB)		dBc	ΔLimit(dB)	
50.00 kHz	5.050 MHz	102.0 kHz	-28.81	(-76.98)	-5.050 M	-28.69	(-76.99)	4.961 M
5.050 MHz	10.05 MHz	100.0 kHz	-27.13	(-75.30)	-9.275 M	-27.07	(-75.25)	6.200 M
10.50 MHz	40.00 MHz	1.000 MHz	40.24	(-5.43)	-14.80 M	-17.50	(-63.17)	16.30 M
40.00 MHz	100.0 MHz	1.000 MHz	-17.42	(-63.09)	-71.65 M	-17.24	(-62.91)	81.10 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

When Measurement Type is PSD Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		PSD Ref				Measure Trace
		-75.32 dBm / 3.84 MHz		-141.16 dBm/Hz				Trace 1
Start Freq	Stop Freq	Integ BW	Lower		Freq (Hz)	Upper		Freq (Hz)
			dB	ΔLimit(dB)		dB	ΔLimit(dB)	
2.515 MHz	2.715 MHz	30.00 kHz	-3.38	(-82.66)	-2.553 M	-4.49	(-85.02)	2.680 M
2.715 MHz	3.515 MHz	30.00 kHz	-3.71	(-73.61)	-3.490 M	-3.79	(-73.81)	3.515 M
3.515 MHz	4.000 MHz	30.00 kHz	-3.79	(-71.26)	-3.588 M	-3.48	(-70.88)	3.865 M
4.000 MHz	8.000 MHz	1.000 MHz	-5.66	(-69.72)	-4.300 M	-5.37	(-71.05)	8.000 M
8.000 MHz	12.50 MHz	1.000 MHz	-4.17	(-69.03)	-11.44 M	-4.36	(-68.82)	12.50 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference	Power		PSD Ref		Measure Trace	
		Sub-block Left	-60.58 dBm / 99.97 MHz		-140.58 dBm/Hz		Trace 1	
		Sub-block Right	-60.58 dBm / 99.97 MHz		-140.58 dBm/Hz			
Start Freq	Stop Freq	Integ BW	Lower		Freq (Hz)	Upper		Freq (Hz)
			dB	ΔLimit(dB)		dB	ΔLimit(dB)	
50.00 kHz	5.050 MHz	102.0 kHz	0.72	(-77.17)	-5.050 M	0.72	(-77.34)	4.859 M
5.050 MHz	10.05 MHz	100.0 kHz	1.02	(-75.25)	-6.025 M	1.00	(-75.39)	6.450 M
10.50 MHz	40.00 MHz	1.000 MHz	46.32	(-5.39)	-14.80 M	0.90	(-62.81)	26.50 M
40.00 MHz	100.0 MHz	1.000 MHz	0.70	(-62.71)	-72.55 M	0.60	(-63.26)	67.00 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

When Measurement Type is Spectrum Pk Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Spectrum Peak Ref				Measure Trace	
		-75.00 dBm / 3.84 MHz		-82.77 dBm				Trace 1	
Start Freq	Stop Freq	Integ BW	dB	Lower ΔLimit(dB)	Freq (Hz)	dB	Upper ΔLimit(dB)	Freq (Hz)	
2.515 MHz	2.715 MHz	30.00 kHz	-14.59	(-83.37)	-2.530 M	-15.11	(-83.88)	2.575 M	
2.715 MHz	3.515 MHz	30.00 kHz	-15.41	(-72.22)	-3.513 M	-14.67	(-71.45)	3.515 M	
3.515 MHz	4.000 MHz	30.00 kHz	-14.73	(-71.51)	-3.528 M	-12.62	(-69.39)	3.700 M	
4.000 MHz	8.000 MHz	1.000 MHz	0.62	(-69.16)	-6.450 M	-0.56	(-70.33)	7.813 M	
8.000 MHz	12.50 MHz	1.000 MHz	-0.34	(-70.12)	-11.18 M	0.72	(-69.05)	11.44 M	
12.50 MHz	15.00 MHz	1.000 MHz	--	(--)	--	--	(--)	--	

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Spectrum Peak Ref		Measure Trace	
		Sub-block Left		-60.58 dBm / 99.97 MHz		-74.09 dBm		Trace 1	
		Sub-block Right		-60.58 dBm / 99.97 MHz		-74.09 dBm			
Start Freq	Stop Freq	Integ BW	dB	Lower ΔLimit(dB)	Freq (Hz)	dB	Upper ΔLimit(dB)	Freq (Hz)	
50.00 kHz	5.050 MHz	102.0 kHz	-15.34	(-77.14)	-4.897 M	-15.66	(-77.27)	5.037 M	
5.050 MHz	10.05 MHz	100.0 kHz	-13.91	(-75.50)	-5.475 M	-13.91	(-75.50)	7.775 M	
10.50 MHz	40.00 MHz	1.000 MHz	53.62	(-5.47)	-14.80 M	-3.87	(-62.96)	18.85 M	
40.00 MHz	100.0 MHz	1.000 MHz	-3.51	(-62.60)	-99.25 M	-3.65	(-62.74)	96.70 M	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

Table Window in Integrated Power View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref		n = 5 1st element Power spectral density reference at the reference area
Spectrum Peak Ref		n = 5 1st element Peak power at the reference area
Measure Trace		See " Measure Trace " on page 2614
Start Freq	Hz	Start frequency for offset
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Integ (Total Power Ref)	dBc	Relative integrated power on the negative offset
Lower (PSD Ref)	dB	Relative power spectrum density of the negative offset
Lower Peak (Spectrum Pk Ref)	dB	Relative peak power on minimum margin point of the negative offset

3 5G NR Mode

3.5 SEM Measurement

Name (Measurement Type)	Unit, if any	Corresponding Results
Lower Δ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Integ (Total Power Ref)	dBm	Absolute integrated power on the negative offset
Lower (PSD Ref)	dBm/Hz	Absolute power spectrum density of the negative offset
Lower Peak (Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the negative offset
Upper Integ (Total Power Ref)	dBc	Relative integrated power on the positive offset
Upper (PSD Ref)	dB	Relative power spectrum density of the positive offset
Upper Peak (Spectrum Pk Ref)	dB	Relative peak power on minimum margin point of the positive offset
Upper Δ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Integ (Total Power Ref)	dBm	Absolute integrated power on the positive offset
Upper (PSD Ref)	dBm/Hz	Absolute power spectrum density of the positive offset
Upper Peak (Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the positive offset

When Measurement Type is Total Power Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power				Measure Trace			
		-74.97 dBm / 3.84 MHz				Trace 1			
		Lower				Upper			
Start Freq	Stop Freq	Integ BW	dBc	ΔLimit(dB)	dBm	dBc	ΔLimit(dB)	dBm	
2.515 MHz	2.715 MHz	30.00 kHz	-17.16	(-84.04)	-92.13	-17.07	(-83.72)	-92.04	
2.715 MHz	3.515 MHz	30.00 kHz	-11.02	(-73.04)	-85.99	-10.76	(-70.18)	-85.73	
3.515 MHz	4.000 MHz	30.00 kHz	-12.97	(-71.13)	-87.94	-13.10	(-70.37)	-88.07	
4.000 MHz	8.000 MHz	1.000 MHz	-5.58	(-67.90)	-80.55	-5.64	(-69.89)	-80.61	
8.000 MHz	12.50 MHz	1.000 MHz	-4.10	(-68.15)	-79.07	-4.15	(-69.25)	-79.12	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---	

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Measure Trace		
		Sub-block Left		-60.67 dBm / 99.97 MHz		Trace 1		
		Sub-block Right		-60.67 dBm / 99.97 MHz				
Start Freq	Stop Freq	Integ BW	Lower			Upper		
			dBc	ΔLimit(dB)	dBm	dBc	ΔLimit(dB)	dBm
50.00 kHz	5.050 MHz	102.0 kHz	-12.20	(-77.41)	-72.87	-12.22	(-77.51)	-72.89
5.050 MHz	10.05 MHz	100.0 kHz	-11.85	(-75.50)	-72.51	-11.79	(-74.79)	-72.45
10.50 MHz	40.00 MHz	1.000 MHz	40.90	(-5.49)	-19.77	-4.24	(-62.77)	-64.90
40.00 MHz	100.0 MHz	1.000 MHz	-1.43	(-63.23)	-62.09	-1.48	(-63.24)	-62.14
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

When Measurement Type is PSD Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		PSD Ref		Measure Trace			
		-75.62 dBm / 3.84 MHz		-141.47 dBm/Hz		Trace 1			
		Lower				Upper			
Start Freq	Stop Freq	Integ BW	dB	ΔLimit(dB)	dBm/Hz	dB	ΔLimit(dB)	dBm/Hz	
2.515 MHz	2.715 MHz	30.00 kHz	-3.69	(-82.69)	-145.16	-3.85	(-83.76)	-145.32	
2.715 MHz	3.515 MHz	30.00 kHz	-3.46	(-73.42)	-144.92	-3.53	(-71.41)	-145.00	
3.515 MHz	4.000 MHz	30.00 kHz	-3.62	(-71.73)	-145.09	-3.32	(-70.57)	-144.79	
4.000 MHz	8.000 MHz	1.000 MHz	-5.13	(-69.13)	-146.59	-5.20	(-69.79)	-146.66	
8.000 MHz	12.50 MHz	1.000 MHz	-4.73	(-70.43)	-146.19	-4.20	(-69.28)	-145.67	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---	

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		PSD Ref		Measure Trace			
		Sub-block Left		-60.69 dBm / 99.97 MHz		-140.69 dBm/Hz		Trace 1			
		Sub-block Right		-60.69 dBm / 99.97 MHz		-140.69 dBm/Hz					
Start Freq	Stop Freq	Integ BW	Lower			Upper					
			dB	ΔLimit(dB)	dBm/Hz	dB	ΔLimit(dB)	dBm/Hz			
			50.00 kHz	5.050 MHz	102.0 kHz	0.86	(-76.90)	-139.83	0.89	(-77.15)	-139.80
			5.050 MHz	10.05 MHz	100.0 kHz	1.08	(-75.27)	-139.61	1.07	(-75.63)	-139.62
			10.50 MHz	40.00 MHz	1.000 MHz	46.46	(-5.39)	-94.23	0.92	(-63.00)	-139.77
40.00 MHz	100.0 MHz	1.000 MHz	0.80	(-63.20)	-139.89	0.77	(-62.95)	-139.92			
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---			

When Measurement Type is Spectrum Pk Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Spectrum Peak Ref		Measure Trace		
		-75.44 dBm / 3.84 MHz		-84.03 dBm		Trace 1		
				Lower			Upper	
Start Freq	Stop Freq	Integ BW	dB	ΔLimit(dB)	dBm	dB	ΔLimit(dB)	dBm
2.515 MHz	2.715 MHz	30.00 kHz	-12.79	(-82.82)	-96.82	-13.07	(-83.10)	-97.10
2.715 MHz	3.515 MHz	30.00 kHz	-14.32	(-72.50)	-98.35	-15.22	(-73.62)	-99.25
3.515 MHz	4.000 MHz	30.00 kHz	-12.82	(-70.85)	-96.85	-12.95	(-70.98)	-96.98
4.000 MHz	8.000 MHz	1.000 MHz	0.61	(-70.42)	-83.42	0.58	(-70.45)	-83.45
8.000 MHz	12.50 MHz	1.000 MHz	2.05	(-68.98)	-81.98	-0.18	(-71.21)	-84.21
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---	---	---	(---	---

3 5G NR Mode

3.5 SEM Measurement

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table	Reference		Power		Spectrum Peak Ref		Measure Trace	
	Sub-block Left	-60.52 dBm / 99.97 MHz		-73.53 dBm		Trace 1		
	Sub-block Right	-60.52 dBm / 99.97 MHz		-73.53 dBm				
Start Freq	Stop Freq	Integ BW	dB	Lower ΔLimit(dB)	dBm	dB	Upper ΔLimit(dB)	dBm
50.00 kHz	5.050 MHz	102.0 kHz	-16.13	(-77.17)	-89.67	-15.70	(-76.91)	-89.23
5.050 MHz	10.05 MHz	100.0 kHz	-14.00	(-75.03)	-87.53	-14.14	(-75.17)	-87.67
10.50 MHz	40.00 MHz	1.000 MHz	53.13	(-5.40)	-20.40	-4.35	(-62.88)	-77.88
40.00 MHz	100.0 MHz	1.000 MHz	-4.44	(-62.97)	-77.97	-4.43	(-62.96)	-77.96
100.0 MHz	500.0 MHz	1.000 MHz	---	(---	---	---	(---	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---	---	---	(---	---

Table Window in Carrier Info View

Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes. Carrier center frequency can be displayed in either offset or absolute frequency depending on Carrier Freq.

LTE-Advanced FDD/TDD has a different carrier info table from that in MSR in this view, which displays with measured component carrier powers and its power spectral density in the order of component carrier index in one of the view windows.

Name	Unit, if any	Corresponding Results
Total Carrier Power		The total power of all the carriers with carrier measure state set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$ multiplied by the number of carriers with carrier measure state set to yes
RF-BW		Displays the total bandwidth from the lowest carrier to uppermost carrier
Carrier Power	dBm	The power in all the currently defined carriers with measure state is on. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$
Integration Bandwidth	Hz	Shows carrier transmission bandwidth
Filter		Displays whether RRC filter is used or not
Offset Frequency	Hz	Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type

Name	Unit, if any	Corresponding Results
		determines whether the relative frequency or absolute frequency will be displayed
Sub-block		Displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when Carrier Allocation is Non-contiguous
Measure		Indicates whether the carrier power is present or not

MSR

2 Carrier Info						
Total Car Pwr	-66.71 dBm / 22.575 MHz			Ref Carrier Power		
Total PSD	---			Carrier #1: Left	-73.70 dBm / 4.515 MHz	
RF-BW	5.000 MHz			Carrier #--: Right	--- dBm / ---	
	Carrier Power	Integ BW	Filter	Offset Freq	Measure	Parameter Set
1	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
2	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
3	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
4	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
5	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	

LTE-Advanced FDD/TDD and 5G NR

2 Carrier Info						
Total Car Pwr	-49.83 dBm / 1.199280 GHz			Reference		
Total PSD	---			Sub-block Left	-60.62 dBm / 99.97 MHz	
RF-BW	99.970 MHz			Sub-block Right	-60.62 dBm / 99.97 MHz	
	Carrier Power	Integ BW	Filter	Offset Freq	Sub-block	Measure
CC0	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC1	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC2	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC3	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC4	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC5	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On

3.5.17.3 Gate

Allows you to see your Gating signal at the same time as the measured data. See the description under **"Gate View On/Off" on page 4061** in **Trigger, Gate Settings**.

Views in which the **Gate** window appears:

View	Size	Position
Gate View	One third, full width	Top

3.5.18 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.5.18.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of **"Ref Position" on page 1101**.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real></code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:RLEV 100</code> <code>:DISP:SEM:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 1101 is ON (default), this value is automatically determined by the measurement result. If you set a value manually, Auto Scaling changes to OFF Attenuation is not coupled to Ref Value
Preset	0.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl></code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:PDIV 15dB</code> <code>:DISP:SEM:WIND:TRAC:Y:PDIV?</code>
Couplings	When "Auto Scaling" on page 1101 is ON , this value is automatically determined by the measurement result. If you set a value manually, "Auto Scaling" on page 1101 automatically changes to OFF
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe <rel_ampl></code> <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change this value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change "Ref Value" on page 1099.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:SEM:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition</code>

Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:SEM:WIND:TRAC:Y:COUP?</code>
Couplings	When Auto Scaling is ON , and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you set the value of either Scale/Div , Ref Value , or Scale Range manually, Auto Scaling automatically changes to OFF
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

3.5.18.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 1102
- See ["Single-Attenuator Configuration"](#) on page 1103


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

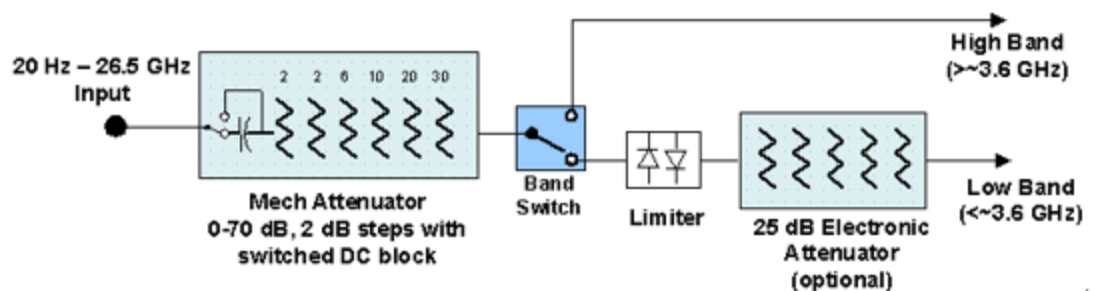


Configuration 2: Mechanical attenuator, no optional electronic attenuator

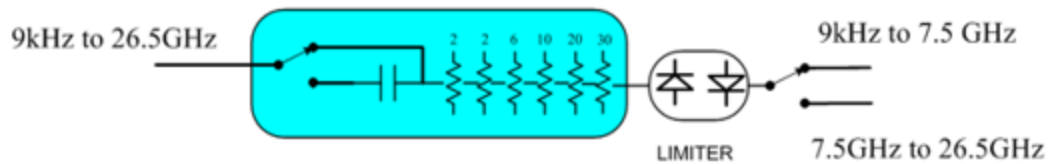

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


Single-Attenuator Configuration

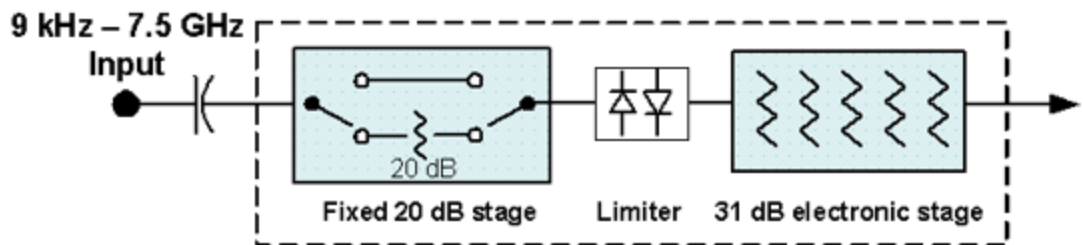

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator

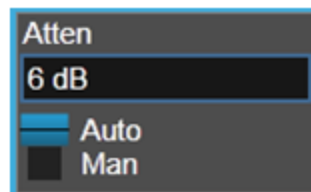

Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows:</p> <p>"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten</p> <p>"Total Atten above 50 GHz" followed by the value of Full Range Atten</p> <p>For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> – Attenuator summary: – Total Atten below 50 GHz: 30 dB – Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, ["Internal Preamp" on page 3251](#) Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See ["Attenuator Configurations and Auto/Man" on page 1107](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231 See "Attenuator Configurations and Auto/Man" on page 1107 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">– If the USB Preamp is connected to USB, use 0 dB for Mech Atten– Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)– In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto , but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <= 7.5 GHz. So, when the frequency is changed from below

	7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	Auto The Auto value is 10 dB	
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as: <i>Atten: <total> dB (e<elec>)</i> The e letter is in amber in Single-Attenuator configurations For example: Dual-Attenuator configuration: <i>Atten: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB Single-Attenuator configuration: <i>A: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation) When in Manual, a # sign appears in front of Atten in the annotation Auto Function	
Remote Command	[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?	
Example	Turn Auto Mech Atten ON: :POW:ATT:AUTO ON	
Dependencies	:POW:ATT:AUTO is only available in measurements that support Auto , such as Swept SA	
Preset	ON	

Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 1105 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 3231 for more about "soft" attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

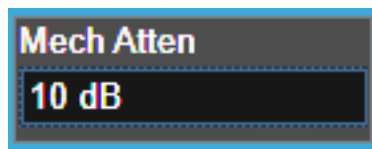

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1109](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> – Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes – Transmit On/Off Power measurement in 5G NR Mode – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator"

Transition Rules" on page 1110	
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:StAtE OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:StAtE?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1111](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "Pre-Adjust for Min Clipping" on page 3236.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the "Adjust Atten for Min Clipping" on page 3234 function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStArt OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStArt?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1114

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 1113 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	

Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

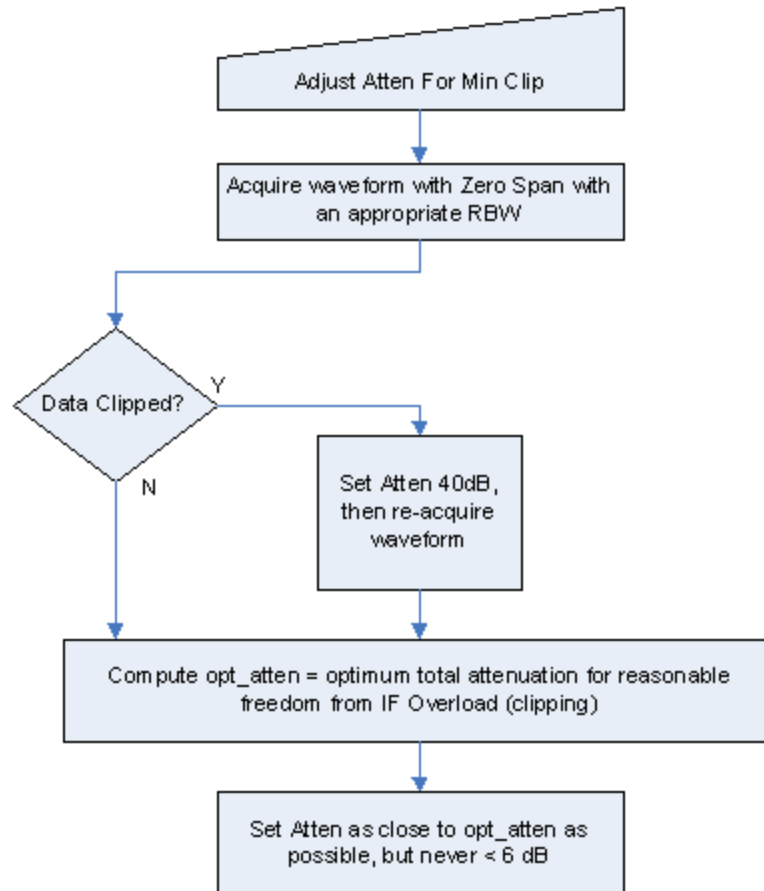

Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 1113 selection is Mech + Elec Atten:

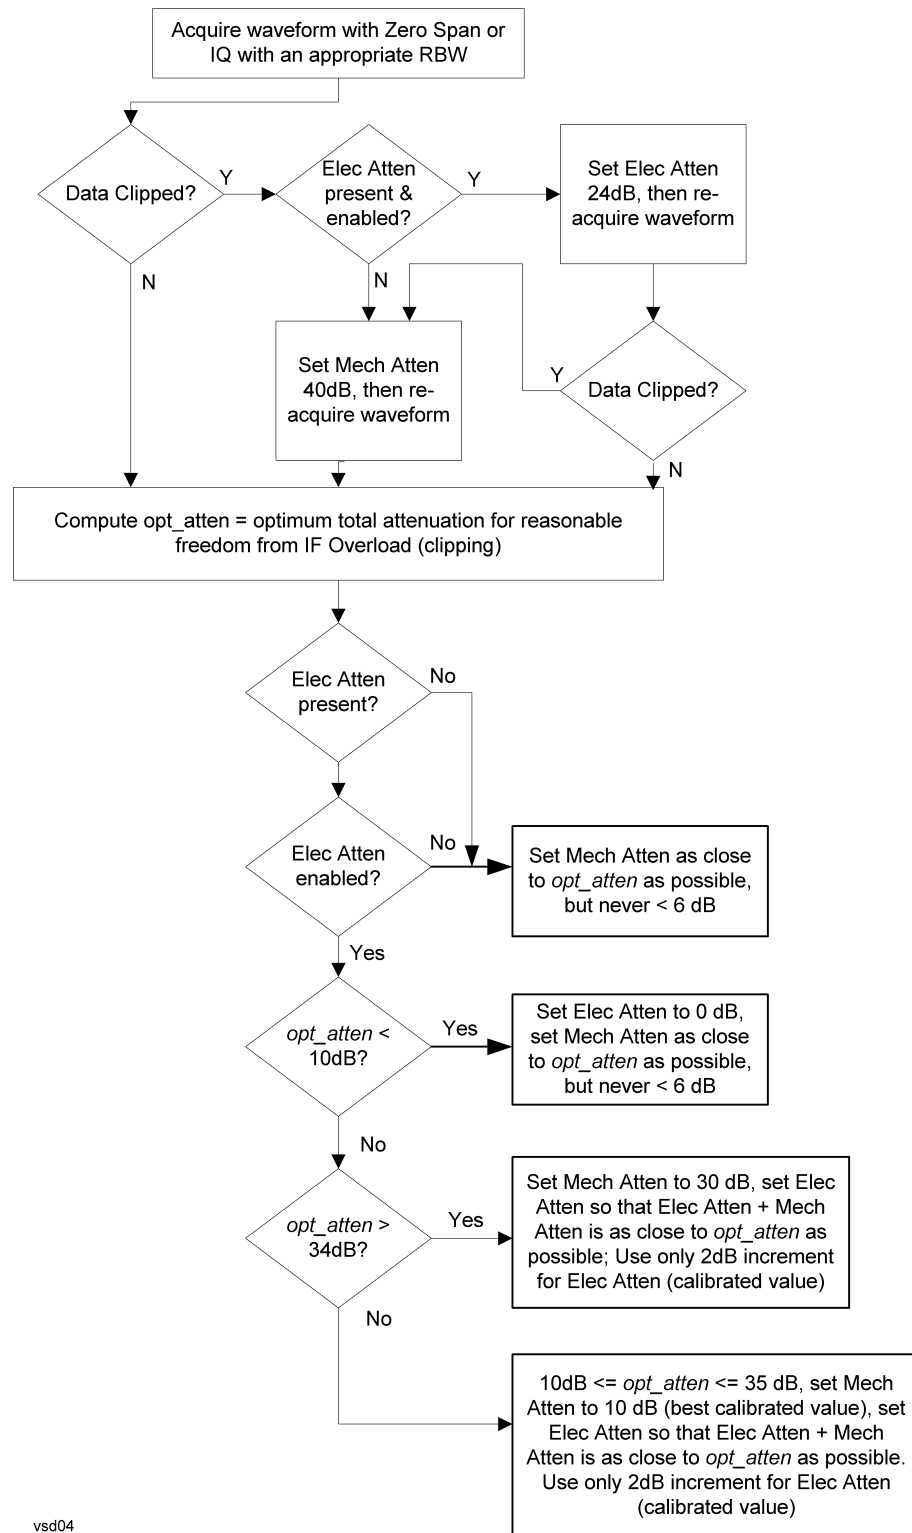

vsd04

"Pre-Adjust for Min Clipping" on page 1113 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

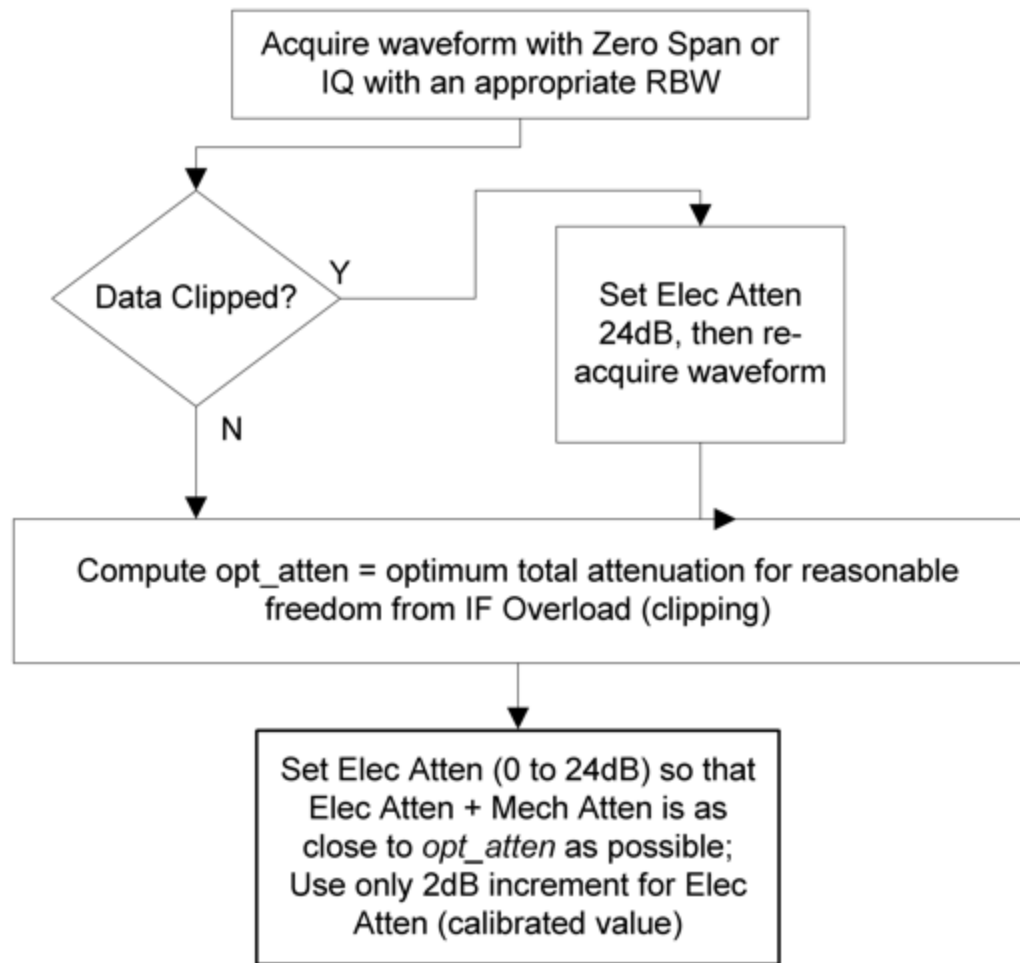

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.5.18.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

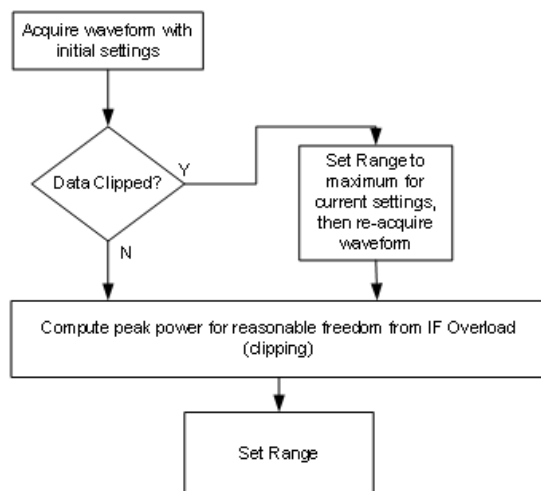

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.5.18.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 1122**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

- 2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
- 3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "Presel Center" on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none">- Does not appear in CXA-m- Does not appear in VXT Models M9410A/11A/15A/16A- Does not appear in M9410E/11E/15E/16E- Grayed-out if microwave preselector is off- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0- Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to LOW instead of FULL , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp" on page 3251**. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.


For best possible sensitivity, LNA can be turned on *together* with **"Internal Preamp" on page 3251**, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information" on page 1126**

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State


More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and **Internal Preamp**. Below is an example:



Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:



Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off

μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 1131
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 1133
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 1134

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														

Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>
------------	--

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 5G NR Mode

3.5 SEM Measurement

Measurement	μW Path Control Auto behavior
-------------	-------------------------------

Emissions

Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
-----------------------	--

Channel Quality Mode

Measurement	μW Path Control Auto behavior
-------------	-------------------------------

Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
-------------	---

Monitor Spectrum	Always Standard Path
------------------	----------------------

IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
-------------	---

CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
------	---

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 1129 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

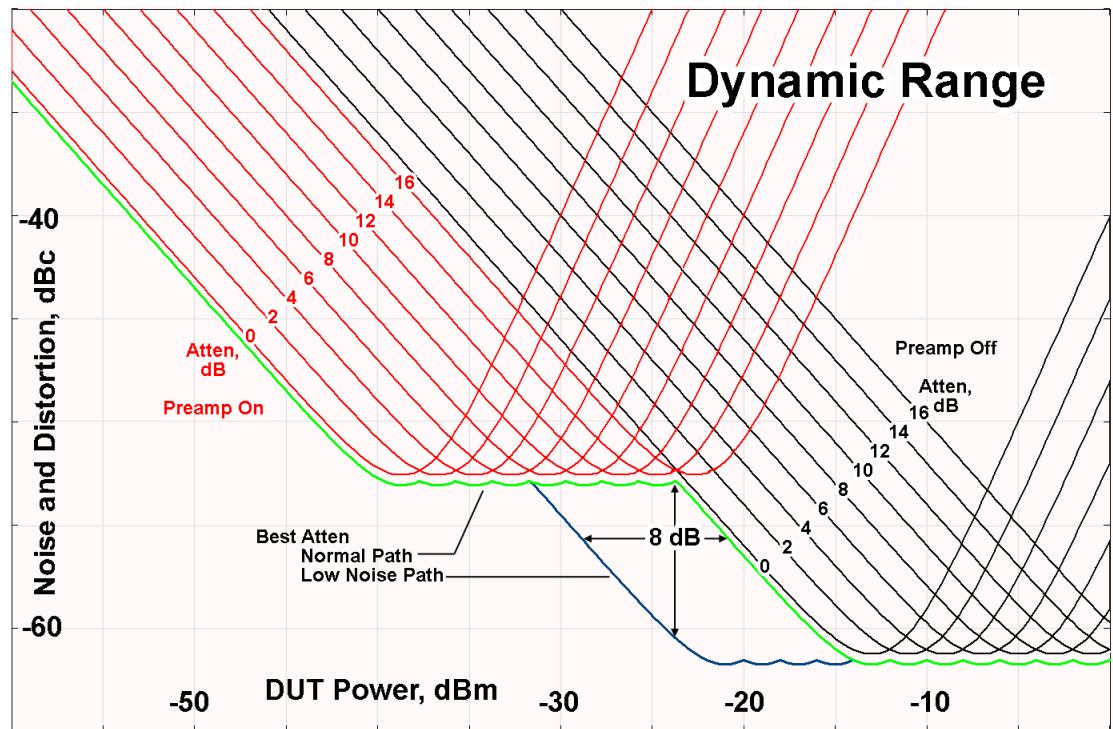

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and **"Y Scale" on page 3222** is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.

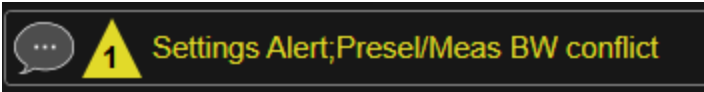

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See " [\$\mu\$ W Path Control](#)" on page 3254.

When this function is **ON**, and " [\$\mu\$ W Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none"> – 5GNRMode: Modulation Analysis and IQ Waveform – WLAN Mode: IQ Waveform – Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

3 5G NR Mode

3.5 SEM Measurement

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	N9041B
	N9042B+V3050A
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0</code> <code>[:SENSe]:<measurement>:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 1140 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

3 5G NR Mode

3.5 SEM Measurement

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.5.19 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth functions of the instrument.

The Resolution BW functions control filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

3.5.19.1 Settings

Contains basic Bandwidth functions. The only tab under **BW**.

RBW Filter Type

Selects the type of bandwidth filter that is used in Carriers and Offsets:

Option	SCPI	Behavior
Gaussian	GAUSSian	The selected filter is applied to carriers and all offsets
Flattop	FLATtop	
Auto Sense	ASENSE	
		The filter type is automatically selected for each carrier and offset in a way such that measurement speed and accuracy are optimized
		Filter Auto Sense Rules:
		<ul style="list-style-type: none">– Flattop is selected when "Enable Wideband IF for FFT" on page 1370 is ON– Flattop is selected for offsets close to the reference carrier– For all other cases, Gaussian is selected
Remote Command	[:SENSe]:SEMask:BANDwidth:SHAPE ASENSe GAUSSian FLATtop [:SENSe]:SEMask:BANDwidth:SHAPE?	
Example	:SEM:BAND:SHAP GAUS :SEM:BAND:SHAP?	
Preset	ASENSE	
State Saved	Saved in instrument state	
Range	Auto Sense (each offset and carrier) Gaussian (all offsets and carriers) Flattop (all offsets and carriers)	

3.5.20 Display

Lets you configure display items for the current Mode, Measurement View or Window.

3.5.20.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Limit Lines

Toggles Limit Lines display for this measurement On or Off.

Remote Command	:CALCulate:SEMask:LLINe:STATe ON OFF 1 0 :CALCulate:SEMask:LLINe:STATe?
Example	:CALC:SEM:LLIN:STAT OFF :CALC:SEM:LLIN:STAT?

Preset	ON
State Saved	Saved in instrument state
Range	ON OFF

Carrier Frequency Type

Sets the carrier frequency display type.

- **OFFSet**– The carrier center frequencies are displayed as offset from Carrier Ref Freq
- **ABSolute**– The carrier center frequencies are displayed as absolute frequency

Remote Command	:DISPlay:SEMask:VIEW[1]:WINDow[1]:CINformation:FREQuency OFFSet ABSolute :DISPlay:SEMask:VIEW[1]:WINDow[1]:CINformation:FREQuency?
Example	:DISP:SEM:VIEW:WIND:CINF:FREQ ABS :DISP:SEM:VIEW:WIND:CINF:FREQ?
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet ABSolute

3.5.20.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	:DISPlay:GRATicule[:STATe] OFF ON 0 1 :DISPlay:GRATicule[:STATe]?
Example	:DISP:GRAT OFF
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards	:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1

Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored
-----------------------	---

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DElete:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.5.20.3 View

See "Views" on page 1081

3.5.21 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the **Center Freq** setting is the same for all measurements – it does not change as you change measurements.

3.5.21.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed, and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

The center frequencies of carriers are defined as offset frequency from the **Carrier Reference Frequency** value. This reference frequency is also the reference for carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most measurements does *not* apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, because **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to use this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the **Number of Component Carriers** is 1
- the **Center Freq Offset** is 0 Hz
- **Center Frequency** (SA Mode) is in **Auto** mode

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, its mode remains as **Auto**, and **Carrier**

Reference Frequency is changed to the same value. The main purpose of this coupling is for backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** was used to set up the measurement frequency.

For more details, see ["More Information" on page 1148](#).

Remote Command	For LTE-A, 5G NR <code>[:SENSe]:CCARrier:REFeRence <freq></code> <code>[:SENSe]:CCARrier:REFeRence?</code> For MSR <code>[:SENSe]:CARRier:REFeRence <freq></code> <code>[:SENSe]:CARRier:REFeRence?</code>
Example	For LTE-A, 5G NR <code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code> For MSR <code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency. Same as Center Frequency

More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, measurements are done based on carrier center frequencies and bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers, or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it must be separate from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency** which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in the Monitor Spectrum, IQ Waveform and CCDF measurements, this control only appears on the **Frequency** menu for these measurements.

To maintain legacy LTE usability in the converged LTE & LTE-A application, when **Center Frequency** mode is **Auto** and **Number of Component Carriers** is 1, and **Center Frequency Offset** is 0 Hz, **Center Frequency** is equivalent to **Carrier Reference Frequency**, which is used to set up the frequencies of all measurements.

3.5.22 Marker

Enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects Marker 1, sets it to **Normal (POSiTion)** and places it at the center of the display. If the selected marker is **OFF**, it is set to **Normal** and placed at the center of the screen, on the trace determined by the **Marker Trace** rules.

3.5.22.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

In any menu that includes **Select Marker**, the first control is always **Marker Frequency|Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal marker

3.5.22.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Normal**, **Delta** or **Off**) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. Has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:SEM:MARK3:X 1.0 GHz</code> <code>:CALC:SEM:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X-Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time
Preset	After a preset, all markers are turned OFF , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X:POsition <real></code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X:POsition?</code>
Example	<code>:CALC:SEM:MARK10:X:POS 1001</code> <code>:CALC:SEM:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points. When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is Off , the response is Not A Number
Preset	After a preset, all markers are turned OFF , so the query returns Not A Number (NAN)
State Saved	Saved in instrument state

Min	-9.9E+37
Max	9.9E+37
Marker Y Axis Value (Remote Command only)	
Returns the marker Y-Axis value in the current marker Y Axis unit.	
Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:SEM:MARK11:Y?</code>
Notes	The query returns the marker Y-Axis result, if the control mode is Normal . If the marker is Off , the response is Not A Number
Preset	Result depends on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:FUNCTION:RESult?</code>

Marker Mode

Sets the marker control mode to **POSiTion** (Normal) or **OFF**.

If the selected marker is **OFF**, pressing **Marker** sets it to **POSiTion** and places it at the center of the screen, on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area. If the current control mode for the measurement is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:MODE POSition OFF</code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:SEM:MARK:MODE POS</code> <code>:CALC:SEM:MARK:MODE?</code>
Notes	Default Active Function: the active function for the selected marker's current control mode. If the current control mode is OFF , there is no active function, and the active function is turned off
Preset	<code>OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF</code>
State Saved	Saved in instrument state
Range	<code>POSiTion OFF</code>
Annotation	Mkr# <X value> and <Marker value> upper right of graph

All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:SEMask:MARKer:AOff</code>
Example	<code>:CALC:SEM:MARK:AOff</code>

Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental X-Axis units of the trace that marker is on) and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

Remote Command	<code>:CALCulate:SEMask:MARKer:COUPle[:STATe] ON OFF 1 0</code> <code>:CALCulate:SEMask:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:SEM:MARK:COUP ON</code> <code>:CALC:SEM:MARK:COUP?</code>
Preset	OFF Preset by Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.5.22.3 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as **"Marker Frequency" on page 1150** in the **Settings** tab.

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a Marker Trace manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF** it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:TRACe 1 2 3</code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:SEM:MARK2:TRAC 2</code> <code>:CALC:SEM:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by "Auto Couple" on page 3289 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

3.5.23 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

3.5.23.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

Avg/Hold Num

Toggles averaging On or Off, in addition to enabling you to set the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

In the remote mode, use **"Averaging On/Off" on page 1155** to turn Averaging on or off.

Remote Command	<code>[:SENSe]:SEMask:AVERage:COUNT <integer></code> <code>[:SENSe]:SEMask:AVERage:COUNT?</code>
Example	<code>:SEM:AVER:COUN 100</code>

	:SEM:AVER:COUN?
Preset	10
State Saved	Saved in instrument state
Min/Max	1/10000

Continue Averaging

Designed for acquiring the trace averaging multiple sets of DUT conditions, in order to meet requirements such as OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Go to **Single** and press **Restart** to get your first set of averages, then **Continue Averaging** will be available.

Use **:FETCh:<meas>?** to retrieve the data as it waits for completion of **Continue Averaging**. ***OPC?** Does *not* wait for completion and returns true immediately.

Pressing this control adds a number of Averages that matches the "Avg/Hold Num" on page 1153 to the already averaged trace or measurement. Every time you press it, the terminal count increases to 2N, 3N and so on. You can change the DUT position or antenna when each set of average count is reached to the terminal count and the measurement is complete.

Since the measurement results are valid for each completed set of average conditions, there is no need to predetermine the number of sets of DUT conditions.

Remote Command	[:SENSe] :SEMAsk:AVERage:CONTinue
Example	:SEM:AVER:CONT
Dependencies	Enabled when you change the Sweep mode to Single , and the Average Count reaches the Average Number. Otherwise, grayed-out

SEM Terminal Count (Remote Query Only)

Returns the terminal count that shows the target average number after **Continue Averaging** is pressed. Every time you press **Continue Averaging**, the terminal count increases to 2N, 3N and so on. The value is the same as "Avg/Hold Num" on page 1153 unless **Continue Averaging** is pressed, and it is reset to match the Avg|Hold Number when **Restart** is pressed.

Remote Command	[:SENSe] :SEMAsk:AVERage:COUNT:TERMinal?
Example	:SEM:AVER:COUN:TERM?

Averaging On/Off

Turns Averaging on or off.

NOTE

In this measurement, **Average Type** is preset to the [Log-Pwr Avg \(Video\)](#) method. Other averaging methods are not available.

Remote Command	[:SENSe]:SEMask:AVERage[:STATe] ON OFF 1 0 [:SENSe]:SEMask:AVERage[:STATe]?
Example	:SEM:AVER ON :SEM:AVER?
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF

Meas Method

Sets the measurement method:

Method	Option	Description
Integration BW	0 OFF	Enables you to set the channel integration bandwidth
RRC Weighted	1 ON	Selects Root Raised Cosine (RRC) filtering of the carriers. The a value (rolloff) for the filter is set to the value of the Filter Alpha parameter

Remote Command	[:SENSe]:SEMask:FILTer[:RRC][:STATe] OFF ON 0 1 [:SENSe]:SEMask:FILTer[:RRC][:STATe]?
Example	:SEM:FILT ON :SEM:FILT?
Dependencies	WLAN: RRC Weight is not supported when the radio standard is WLAN 802.11ac (80+80MHz)
Preset	SA, LTEAFDD, LTEATDD, 5G NR, WLAN, MSR Modes OFF WCDMA Mode ON
State Saved	Saved in instrument state
Range	Integration BW RRC Weighted

RRC Filter Alpha

Sets the alpha value for the RRC Filter.

Remote Command	<code>[:SENSe]:SEMask:FILTer[:RRC]:ALPHa <real></code> <code>[:SENSe]:SEMask:FILTer[:RRC]:ALPHa?</code>
Example	<code>:SEM:FILT:ALPH 0.3</code> <code>:SEM:FILT:ALPH?</code>
Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.0

Non-Contiguous Meas Region

Selects the region to measure for the non-contiguous frequency allocation.

Option	SCPI	Comments
Outer	<code>OUTer</code>	
Inner	<code>INNer</code>	
Outer & Inner	<code>OINNer</code>	Available only in 5G NR and LTE-Advanced FDD/TDD Modes

Remote Command	<code>[:SENSe]:SEMask:NCONtiguous:REGion INNer OUTer OINNer</code> <code>[:SENSe]:SEMask:NCONtiguous:REGion?</code>
Example	<code>:SEM:NCON:REG INN</code> <code>:SEM:NCON:REG?</code>
Dependencies	Available only in MSR, 5G NR and LTE-Advanced FDD/TDD Modes <code>OINNer</code> is available only in 5G NR and LTE-Advanced FDD/TDD Modes
Preset	<code>INNer</code>
State Saved	Yes
Range	Inner Outer Outer & Inner

Sweep Type Rules

Selects which set of rules will be used for automatic selection of "Sweep Type" on [page 1180](#) when **Sweep Type** mode is **Auto**.

Rule	Option	Description
Best Dynamic Range	<code>DRANge</code>	The instrument selects either swept or FFT analysis with the primary goal of dynamic range optimization. If the dynamic range of swept and FFT is very close, then it chooses the faster one. In determining the Swept or FFT setting, the auto rules use the following approach: <ul style="list-style-type: none"> – If the RBW > 210 Hz, use swept; for the RBW ≤ 210 Hz, use FFT

Rule	Option	Description
		– If Sweep Time Mode is Man, the Sweep Type is always Swept for backwards compatibility
Best Speed	SPEed	The instrument selects either FFT or swept analysis based on the fastest instrument speed
Remote Command	[:SENSe]:SEMask:SWEep:TYPE:AUTO:RULEs SPEed DRANge [:SENSe]:SEMask:SWEep:TYPE:AUTO:RULEs?	
Dependencies	In modular products such as VXT, the value is always set to Best Dynamic Range and this control does not appear	
Preset	DRANge	
State Saved	Saved in instrument state	

Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the Center Frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed. For Spur Avoidance, the instrument uses a software algorithm to remove this spur from the displayed measurement data.

Some measurements allow you to turn off **Spur Avoidance**, but in this measurement it is always enabled. Therefore, the **Spur Avoidance** switch is unavailable (grayed-out) and set to **ON**.

If you press the grayed-out switch, a popup message appears stating:

Always enabled in this measurement. See manual for details

Remote Command	[:SENSe]:SEMask:SAVoid[:STATe]?	
Example	:SEM:SAV? Always returns ON	
Dependencies	Only appears in VXT models M9410A/11A/15A	
Preset	ON	
State Saved	Saved in instrument state	
Range	ON	

Offset/Limits Config Table

Enables you to set up the measurement parameters for offset pairs and to set the power limits for start and stop frequencies of the selected offsets. For example, you

can assign the start and stop frequencies, select the resolution bandwidth, and set the sweep time.

Before UE, the LTE-Advanced FDD/TDD standards gave the test specification requirements for BS intra-band contiguous aggregation and intra-band non-contiguous aggregation modes. However, for UE, only the requirements of intra-band contiguous aggregation modes are defined. So, the standards don't support making the measurement in UE intra-band non-contiguous aggregation mode for LTE-Advanced FDD/TDD. As a result, the preset values of Inner Offset/Limits are temporarily set as those of Outer Offset/Limits for UE.


Limits for Inner Offsets

Since inner offsets are defined from the sub-block edges to the gap, limits from two sub-blocks overlap each other. Therefore, the limit used for inner offsets are the cumulative sum of limits from both sub-blocks. Offsets can have different RBWs, which must be compensated when accumulated.

For example, when offset A and D overlap, the limit of offset A is calculated as follows.

$$\text{Cumulated Limit of Offset A} = 10^{\frac{[\text{Offset A Limit in dBm}]}{10}} + \frac{\text{Offset A RBW}}{\text{Offset D RBW}} 10^{\frac{[\text{Offset D Limit in dBm}]}{10}}$$

The diagram below depicts what inner offset limits look like.

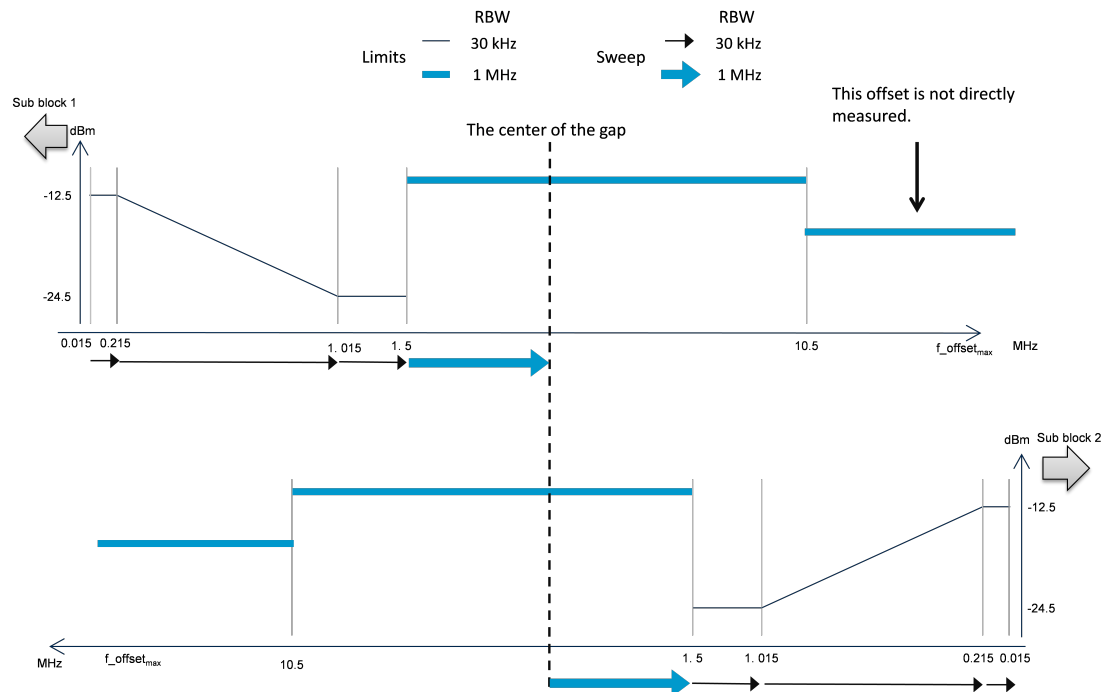

Offset (Bandwidth)

Enables you to set up the bandwidth measurement parameters for offset pairs. For example, you can assign the start and stop frequencies, and select the resolution bandwidth.

Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition. LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. The MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center frequency of Meas BW and the limit line have $\frac{1}{2}$ Meas BW offset when the Meas BW Edge is selected.

Note that the outermost (lowermost, uppermost) carrier at each side is determined by which carrier edge frequency is located outermost within the RF BW or each sub-block bandwidth, instead of which carrier center frequency is located outermost.

See also ["Diagrams for Offset Freq Define" on page 1161](#).

Modes other than MSR, LTE-A, 5G NR

Options:

CTOCenter	From carrier center to the center of offset measuring filter*
CTOEdge	From carrier center to the nominal -3 dB point of the offset measuring filter* closer to the carrier
ETOCenter	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the center of offset measuring filter *
ETOEdge	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the nominal -3 dB point of the offset measuring filter * closer to the carrier

*Measuring filter = Meas BW (N) x Res BW

** RF BW = $BW_{\text{channel,CA}}$ which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or

Disabled. When **Number of Component Carriers** = 1, $RF\ BW = BW_{channel} = 2 \times F_{offset, RAT}$

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code> <code>:SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS
Preset	CTOCenter
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge

Mode: MSR, LTEAFDD, LTEATDD

Options:

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center of offset measuring filter*
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
RTOCenter	From either the lower or upper RF BW** edge frequency to the center frequency of offset measuring filter*
RTOEdge	From either the lower or upper RF BW** edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
RCTOCenter 5G NR Mode only	From the center frequency of RF BW to the center frequency of offset measuring filter*

*Measuring filter = Meas BW (N) x Res BW

** RF BW = $BW_{channel, CA}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or

3 5G NR Mode

3.5 SEM Measurement

Disabled. When **Number of Component Carriers** = 1, $RF\ BW = BW_{channel} = 2 \times F_{offset, RAT}$

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ET0Center ET0Edge RTOCenter RTOEdge [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC :SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	MSR: RTOCenter LTEAFDD, LTEATDD: ET0Center
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge

Mode: 5G NR


Options: see "**Mode: MSR, LTEAFDD, LTEATDD**" on page 1160 above.

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ET0Center ET0Edge RTOCenter RTOEdge RCT0Center [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC :SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	ET0Center
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge RF BW Center to Meas BW Center


Diagrams for Offset Freq Define

Details depend on the selected mode.

Diagrams for Modes other than MSR, LTEAFDD/LTEATDD, 5G NR

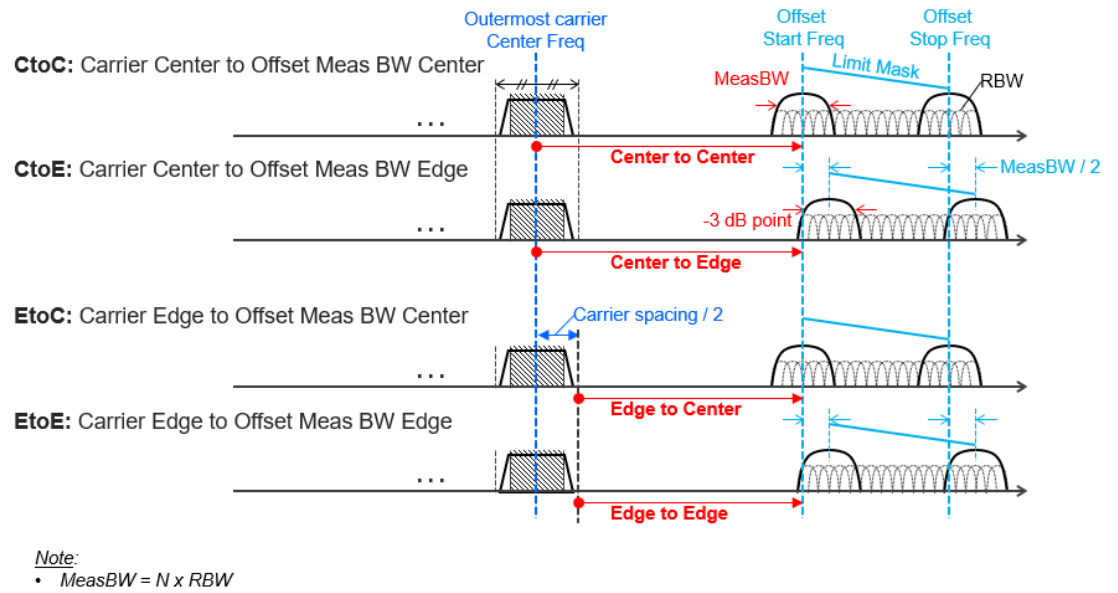

Diagrams for MSR, LTEAFDD/LTEATDD, 5G NR

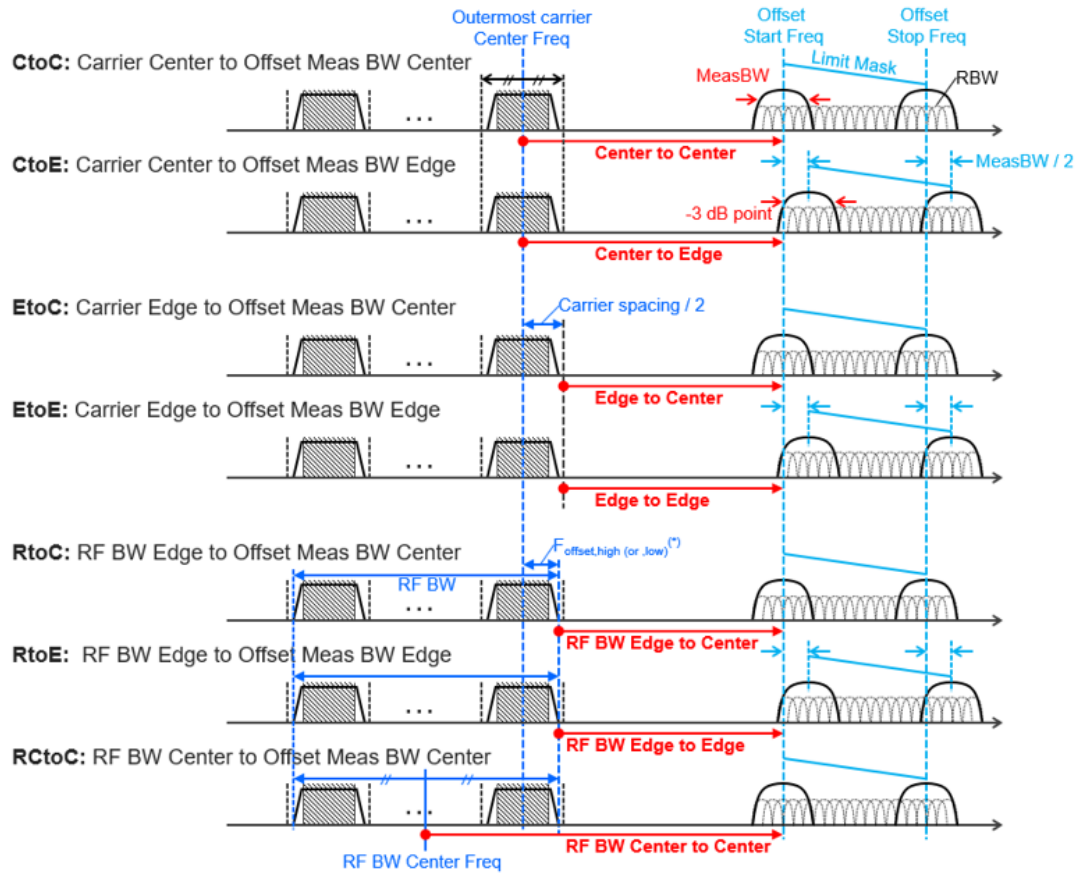

Notes:

- $\text{MeasBW} = N \times \text{RBW}$
- RF BW Edge and Outermost Carrier Edge are not always same.
e.g.) 5G NR (3GPP) defines $\text{BW}_{\text{channel}}$, CA which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift.
(*) For MSR, $F_{\text{offset,high (or ,low)}} = F_{\text{offset,RAT,high (or ,low)}}$

Offset Detector

Enables you to control the detector for offsets. The following choices are available:

- AUTO** The detector selected depends on marker functions, trace functions, average type, and the trace averaging function
- NORMa1** The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
- AVERage** The detector determines the average of the signal within the sweep points. The

	<p>averaging method depends upon the Average Type selection (voltage, power or log scales)</p> <p>POSitive Peak The detector determines the maximum of the signal within the sweep points</p> <p>SAMPlE The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point</p> <p>NEGative Peak The detector determines the minimum of the signal within the sweep points</p>
Remote Command	<pre>[:SENSe]:SEMask:DETECTOR:OFFSet[:FUNCTION] AVERage NEGative NORMa1 POSitive SAMPlE</pre> <pre>[:SENSe]:SEMask:DETECTOR:OFFSet[:FUNCTION]?</pre> <pre>[:SENSe]:SEMask:DETECTOR:OFFSet:AUTO ON OFF 1 0</pre> <pre>[:SENSe]:SEMask:DETECTOR:OFFSet:AUTO?</pre>
Example	<pre>:SEM:DET:OFFS AVER</pre> <pre>:SEM:DET:OFFS?</pre> <pre>:SEM:DET:OFFS:AUTO OFF</pre> <pre>:SEM:DET:OFFS:AUTO?</pre>
Notes	<p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other instrument settings</p> <p>Note that this detector setting affects all offsets; there is no per-trace detector</p>
Couplings	See Couplings in "Trace Type" on page 3048
Preset	POSitive ON
State Saved	Saved in instrument state
Range	AVERage NEGative NORMa1 POSitive SAMPlE

Offset Average Type (Remote Command Only)

Select trace average type for the offsets.

Remote Command	<pre>[:SENSe]:SEMask:AVERage:OFFSet:TYPE RMS LOG</pre> <pre>[:SENSe]:SEMask:AVERage:OFFSet:TYPE?</pre>
Example	<pre>:SEM:AVER:OFFS:TYPE LOG</pre> <pre>:SEM:AVER:OFFS:TYPE?</pre>
Preset	RMS
State Saved	Saved in instrument state

Start Freq

Specifies the start frequency for the currently selected offset. Also enables you to toggle that offset between On and Off.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt <freq>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe?</pre>												
Example	<pre>:SEM:OFFS2:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz :SEM:OFFS2:LIST:FREQ:STAR? :SEM:OFFS:LIST:STAT ON, ON, ON, OFF, OFF, OFF :SEM:OFFS:LIST:STAT?</pre>												
Notes	<p>Comma-separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p> <p>If the offset is outside of the frequency range, the result spectrum will be invalid</p>												
Couplings	Coupled to Stop Freq. When the start freq goes above the stop freq, the stop freq is automatically adjusted to the start freq plus 100 Hz												
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</td></tr> <tr> <td>WCDMA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz</td></tr> <tr> <td>LTEAFDD,</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz,40 MHz, 40</td></tr> </tbody> </table>	Mode	Values	SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz	WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz	Mode	Values	MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz	LTEAFDD,	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz,40 MHz, 40
Mode	Values												
SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz												
WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz												
Mode	Values												
MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz												
LTEAFDD,	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz,40 MHz, 40												

Mode	Values
LTEATDD	MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "WLAN Mode Presets" on page 1166 below

When the max number of offsets is 6:

Mode	Values
SA	ON, ON, ON, ON, ON, OFF
WCDMA	ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

Mode	Values
WLAN	See the table of "WLAN Mode Auto Function Presets" on page 1168 below

State Saved	Saved in instrument state Saved in instrument state
Min/Max	0 Hz/Depends on instrument maximum frequency Always Offset Stop Freq - 100 Hz

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)/802.11n (20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz

3 5G NR Mode

3.5 SEM Measurement

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	11 MHz, 22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ac(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ac(80MHz)	39 MHz, 41 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz
802.11ac(160MHz)	79 MHz, 81 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ac(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11ah(1MHz)	0.45 MHz, 0.6 MHz, 1 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz
802.11ah(2MHz)	0.9 MHz, 1.1 MHz, 2 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz
802.11ah(4MHz)	1.9 MHz, 2.1 MHz, 4 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz
802.11ah(8MHz)	3.9 MHz, 4.1 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz
802.11ah(16MHz)	7.9 MHz, 8.1 MHz, 16 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz
802.11j/p(10MHz)	4.5 MHz, 5MHz, 5.5 MHz, 10 MHz, 15 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11p(5MHz)	2.25 MHz, 2.5MHz, 2.75 MHz, 5 MHz, 7.5 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11ax/be(20MHz)	9.75 MHz, 10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ax/be(40MHz)	19.5 MHz, 20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ax/be(80MHz)	39.5 MHz, 40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz
802.11ax/be(160MHz):	79.5 MHz, 80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ax(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11af(6MHz)	2.85 MHz, 3.15 MHz, 6 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz

Radio Std	Presets
	9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz
802.11af(7MHz)	3.325 MHz, 3.675 MHz, 7 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz
802.11af(8MHz)	3.8 MHz, 4.2 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz
802.11be (320MHz)	159.5 MHz, 160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz

WLAN Mode Auto Function Presets

For X Series:

Radio Std	Presets
802.11b/g(DSSS/CCK/PBCC)	ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11a/g/j/p 20MHz (OFDM/DSSS-OFDM)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11j/p 10MHz	
802.11p 5MHz/802.11n (20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	OFF, ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF
802.ah (1MHz/ 2MHz/ 4MHz/ 8MHz/ 16MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

For E6630A, E6640A, and M90XA:

Radio Std	Presets
802.11a/g(OFDM/DSSS-OFDM)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11n(20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	ON, ON, ON, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:LIST:FREQ:STOP?</code>
Notes	Comma separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS If the offset is outside of the frequency range, the result spectrum will be invalid
Couplings	Coupled to Start Freq. When Stop Freq goes below Start Freq, Start Freq is automatically adjusted to Stop Freq minus 100 Hz
Preset	When the max number of offsets is 6:

Mode	Values
SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz
WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as

	the Offset F value
	WLAN Mode: See table of " WLAN Mode Presets " on page 1170 below
State Saved	Saved in instrument state
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span in Swept SA Measurement

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11n (20MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz
802.11n (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11n (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz
802.11ac (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ac (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ac (80MHz)	41 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac (160MHz)	81 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ac (80 MHz + 80MHz)	100MHz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ah (1MHz)	0.6MHz, 1 MHz, 1.5 MHz, 2.5MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz
802.11ah (2MHz)	1.1 MHz, 2 MHz, 3 MHz, 5MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz
802.11ah (4MHz)	2.1 MHz, 4 MHz, 6 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz
802.11ah (8MHz)	4.1 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11ah (16MHz)	8.1 MHz, 16 MHz, 24 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11j/p (20MHz)	10MHz, 11 MHz, 20 MHz, 30 MHz, 50MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11j/p (10MHz)	5MHz, 5.5 MHz, 10 MHz, 15 MHz, 25MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz

Radio Std	Presets
802.11p (5MHz)	2.5MHz, 2.75MHz, 5 MHz, 7.5 MHz, 12.5MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11ax/be (20MHz)	10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ax/be (40MHz)	20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ax/be (80MHz)	40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ax/be (160MHz)	80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ax (80 MHz + 80MHz)	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11af (6MHz)	3.15MHz, 6 MHz, 9 MHz, 15MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz
802.11af (7MHz)	3.675 MHz, 7 MHz, 10.5 MHz, 17.5MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz
802.11af (8MHz)	4.2 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11be (320MHz)	160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz

Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset.. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$,

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution] <bandwidth>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO OFF ON 1 0, ...</pre>
----------------	--

	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO?</code>																
Example	<code>:SEM:OFFS2:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz</code> <code>:SEM:OFFS2:LIST:BAND?</code> <code>:SEM:OFFS:LIST:BAND:AUTO 1,1,1,1,1,1</code> <code>:SEM:OFFS:LIST:BAND:AUTO?</code>																
Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>																
Couplings	<p>Coupled to Start and Stop offset and Meas BW multiplier. This parameter must adhere to the rule (N x Res BW) <= (Stop freq of the offset - Start freq of the offset), where N is the multiplier. If the multiplier is changed, the Res BW will change to ensure this. When set manually, Res BW Coupling is set to manual</p> <p>The resolution bandwidth is coupled to the offset width determined by the start frequency and stop frequency</p>																
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz</td></tr> <tr> <td>WCDMA</td><td>30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td>MSR</td><td>30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>WLAN</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> </tbody> </table> <p>When the max number of offsets is 6: <code>OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF</code></p> <p>When the max number of offsets is 12: <code>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF,</code></p>	Mode	Values	SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz	WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz	Mode	Values	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz	MSR	30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz	Mode	Values	WLAN	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
Mode	Values																
SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz																
WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz																
Mode	Values																
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz																
MSR	30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz																
Mode	Values																
WLAN	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz																

	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF When the max number of offsets is 14: OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min	1 Hz
Max	Option FS1 or FS2 is installed: 10 MHz Otherwise: 8 MHz
Backwards Compatibility SCPI	[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth[:RESolution] [:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth[:RESolution]:AUTO

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result.

$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and Meas BW compensates sweep resolution bandwidth to Integration BW.

If you set this value greater than 1, you can set Resolution BW narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:IMULTi <integer>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:IMULTi?
Example	:SEM:OFFS2:LIST:BAND:IMUL 1,1,1,1,1,1 :SEM:OFFS2:LIST:BAND:IMUL?
Notes	Comma separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS

Preset	When the max number of offsets is 6:																
	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>1, 1, 1, 1, 1, 1</td></tr> <tr> <td>WCDMA</td><td>1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>WLAN</td><td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> </table>	Mode	Values	SA	1, 1, 1, 1, 1, 1	WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	Mode	Values	WLAN	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values																
SA	1, 1, 1, 1, 1, 1																
WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1																
Mode	Values																
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
Mode	Values																
WLAN	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
State Saved	Yes																
Min/Max	1/1000																
Backwards Compatibility SCPI	<code>[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth:IMULti</code>																

Video BW

Changes the instrument post-detection filter.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO?</code>
Example	<code>:SEM:OFFS2:LIST:BAND:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0 kHz, 100.0 kHz</code> <code>:SEM:OFFS2:LIST:BAND:VID?</code> <code>:SEM:OFFS2:LIST:BAND:VID:AUTO ON, ON, ON, ON, ON, ON</code> <code>:SEM:OFFS2:LIST:BAND:VID:AUTO?</code>

3 5G NR Mode

3.5 SEM Measurement

Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>
Preset	<p>Automatically Calculated</p> <p>When the max number of offsets is 6:</p> <p>ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON</p> <p>When the max number of offsets is 12:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p> <p>When the max number of offsets is 14:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	1 Hz/50 MHz
Backwards Compatibility SCPI	<p>[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth:VIDeo</p> <p>[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth:VIDeo:AUTO</p>

VBW/RBW

Selects the ratio between the video and resolution bandwidths.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:RATio <real>, ...</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:RATio?</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1, ...</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:VIDeo:RATio:AUTO?</p>
Example	<p>:SEM:OFFS2:LIST:BAND:VID:RAT 0.1, 0.1, 0.1, 0.1, 0.1, 0.1</p> <p>:SEM:OFFS2:LIST:BAND:VID:RAT?</p> <p>:SEM:OFFS2:LIST:BAND:VID:RAT:AUTO ON, ON, ON, ON, ON, ON</p> <p>:SEM:OFFS2:LIST:BAND:VID:RAT:AUTO?</p>
Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p>

	Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS
Preset	<p>Modes other than LTEAFDD, LTEATDD, 5G NR, MSR, WLAN:</p> <p>When the max number of offsets is 6: 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01</p> <p>When the max number of offsets is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <p>LTEAFDD, LTEATDD, 5G NR, MSR Modes:</p> <p>0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01</p> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode:</p> <p>802.11 ax/be: 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075</p> <p>All other formats: 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3</p> <p>Modes other than WLAN</p> <p>When the max number of offsets is 6: OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF</p> <p>When the max number of offsets is 12: OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</p> <p>WLAN Mode: OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	0.00001/3000000
Backwards Compatibility SCPI	<p>[:SENSe] :SEMask:OFFSet[1] 2:LIST:BWIDth:VIDeo:RATio</p> <p>[:SENSe] :SEMask:OFFSet[1] 2:LIST:BWIDth:VIDeo:RATio:AUTO</p>

Offset (Sweep)

Accesses a menu that enables you to set up the sweep measurement parameters for offset pairs.

Offset Freq Define

Same as "Offset Freq Define" on page 2289 under Offset (Bandwidth).

Offset Detector

Same as "Offset Detector" on page 1163 under Offset (Bandwidth).

Start Freq

Same as "Start Freq" on page 2304 under Offset (Bandwidth).

Stop Freq

Same as "Stop Freq" on page 2308 under Offset (Bandwidth).

Sweep Time

Specifies the **Sweep Time** for the currently selected offset and enables you to toggle the Sweep Time mode between Auto and Man.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

NOTE

On non-sweeping hardware, this column is grayed out. The value shown on this column is an estimate. It is the turnaround time to complete the measurement of the entire offset span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same “Sweep Time” as you would for sweeping hardware, send `[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEep:TIME <time>`. The measurement emulates the “Sweep Time” effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using **Minimum Acquisition Time**, which provides better control.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TIME <time>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TIME?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TIME:AUTO ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TIME:AUTO?</code>
Example	<code>:SEM:OFFS2:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms</code> <code>:SEM:OFFS2:LIST:SWE:TIME?</code> <code>:SEM:OFFS2:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:LIST:SWE:TIME:AUTO?</code>

Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>
Dependencies	<p>On non-sweeping hardware, this column is grayed out and the Auto/Man checkbox is invisible. The read-only value shows the estimated sweep time</p> <p>In those instruments, "Minimum Acquisition Time" on page 1178 is available</p>
Couplings	When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	<p>Automatically calculated</p> <p>Modes other than LTEAFDD, LTEATDD, 5G NR, MSR, WLAN:</p> <p>When the max number of offsets is 6:</p> <p>ON, ON, ON, ON, ON, ON</p> <p>When the max number of offsets is 12:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p> <p>Modes LTEAFDD, LTEATDD, 5G NR, MSR:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p> <p>When the max number of offsets is 14:</p> <p>Mode WLAN:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	<p>Other than non-sweeping hardware</p> <p>Depends on Sweep Type:</p> <ul style="list-style-type: none"> – Sweep Type "Swept": 1 ms – Sweep Type "FFT": 100 ns <p>Non-sweeping hardware: N/A</p>
Max	<p>Other than non-sweeping hardware: 4000 s</p> <p>Non-sweeping hardware: N/A</p>
Backwards Compatibility SCPI	<p>[:SENSe] :SEMask :OFFSet [1] 2 :LIST :SWEEP [:TIME]</p> <p>[:SENSe] :SEMask :OFFSet [1] 2 :LIST :SWEEP [:TIME] :AUTO</p>

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each "chunk" of the measurement result. The instrument automatically divides Span into multiple chunks if needed.

Therefore, the total signal acquisition time for the entire offset span is $\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$.

When in Auto, this parameter's value is determined by other parameters, such as Offset Start, Offset Stop, RBW and VBW.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on Detector settings.

Note that the actual acquisition time for each chunk may exceed the Minimum Acquisition Time value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME <time>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME:AUTO ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME:AUTO?</pre>
Example	<pre>:SEM:OFFS2:LIST:SWE:ACQ:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms :SEM:OFFS2:LIST:SWE:ACQ:TIME? :SEM:OFFS2:LIST:SWE:ACQ:TIME:AUTO ON, ON, ON, ON, OFF, OFF :SEM:OFFS2:LIST:SWE:ACQ:TIME:AUTO?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Offset Start Freq, Offset Stop Freq, RBW, and VBW when in the Auto state When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated ON
State Saved	Saved in instrument state
Min	100 ns
Max	4000 s

Sweep Time Annotation (Remote Query Only)

Returns the Sweep Time Annotation value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire offset span of each measurement cycle.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:ETIME?</pre>
----------------	---

Example	<code>:SEM:OFFS2:LIST:SWE:ETIM?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

Sweep Type

Specifies the **Sweep Type** for the currently selected offset, and enables you to toggle the **Sweep Type** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

How to define Sweep Time and Sweep Type:

Sweep Type mode	Behavior
Auto	Sweep Type is automatically selected according to "Sweep Type Rules" on page 1156 Sweep Time is automatically calculated according to the selected Sweep Type
Man	Sweep Type is user-selected
—	

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE SWEep FFT, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE:AUTO ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE:AUTO?</code>
Example	<code>:SEM:OFFS2:LIST:SWE:TYPE FFT,FFT,SWE</code> <code>:SEM:OFFS2:LIST:SWE:TYPE?</code> <code>:SEM:OFFS2:LIST:SWE:TYPE:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:LIST:SWE:TYPE:AUTO?</code>
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes In SA Mode, Offset sub op code 1 is used for both BTS and MS
Dependencies	Not available in modular products, such as VXT
Couplings	When Sweep Type is set manually, Sweep Type mode is set to OFF (Manual) When Sweep Type mode is Auto , Sweep Type is automatically selected according to Sweep Type Rules

Preset	Automatically calculated LTEAFDD, LTEATDD, 5G NR, MSR Modes: ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON When the max number of offsets is 14: WLAN Mode: ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON All Other Modes: When the max number of offsets is 6: ON, ON, ON, ON, ON, ON When the max number of offsets is 12: ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state
Range	Auto Man

Offset Side


Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[:SENSe]:SEMask:OFFSet[n]`
`[:OUTer]:LIST:STATe`.

<code>BOTH</code>	Both of the negative (lower) and positive (upper) sidebands
<code>NEGative</code>	Negative (lower) sideband only
<code>POSitive</code>	Positive (upper) sideband only

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, and 12 values for other Modes.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTE-Advanced FDD/TDD and 5G NR Modes.

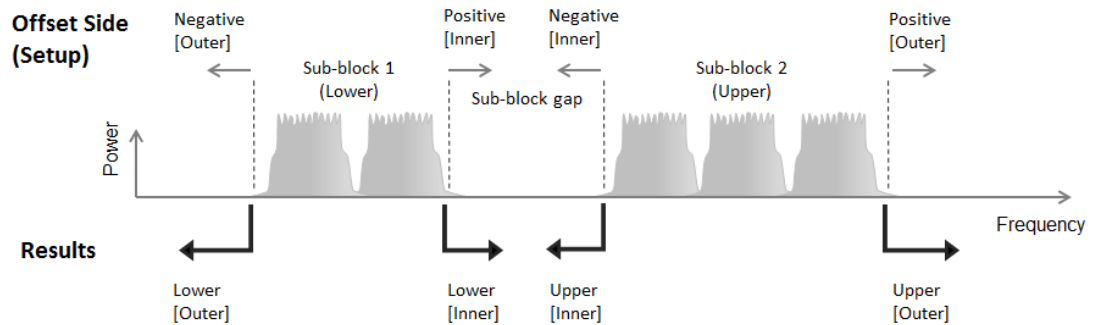

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE BOTH NEGative POSitive, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE?</code>
Example	<code>:SEM:OFFS:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS</code> <code>:SEM:OFFS:LIST:SIDE?</code>
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS
Preset	Modes LTEAFDD,LTEATDD, 5G NR, MSR: <code>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</code> When the max number of offsets is 14: Mode WLAN: <code>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</code> All Other Modes: When the max number of offsets is 6: <code>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</code> When the max number of offsets is 12: <code>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</code>
State Saved	Saved in instrument state
Range	<code>BOTH NEGative POSitive</code>

Limits

Enables you to set the power limits for start and stop frequencies of the selected offsets.

Start Freq

Same as "Start Freq" on page 2304 under Offset (Bandwidth).

Stop Freq

Same as "Stop Freq" on page 2308 under **Offset (Bandwidth)**.

Abs Start

Sets the absolute power level limit at the start frequency for the selected offset. The absolute power level limit ranges from –200 to +50 dBm.

The fail condition for each offset channel is set remotely by
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:TEST`.

You can turn off (not use) specific offset channels remotely with
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute?</code>								
Example	<code>:SEM:OFFS2:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS2:LIST:STAR:ABS?</code>								
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS								
Preset	When the max number of offsets is 6: <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm</td></tr> <tr> <td>WCDMA</td><td>-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</td></tr> <tr> <td>LTE, LTETDD</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm	WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm	LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
SA	-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm								
WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm								
LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								

Mode	Values
LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm

When the max number of offsets is 14 in these Modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "[WLAN Mode Presets](#)" on page 1184 below

State Saved	Saved in instrument state
Min/Max	-200 dBm/50 dBm

WLAN Mode Presets

[illegible]

Radio Std	Presets
	60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11ah (4MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11j/p (20MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11j/p (10MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11p (5MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm
802.11af (6MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (7MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (8MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm

Abs Stop

Sets the absolute power level limit at the stop frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the **Abs Stop** power level limit is coupled to **Abs Start** to result in a flat limit line. If set to **Man**, Abs Start and Abs Stop take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle?</pre>																
Example	<pre>:SEM:OFFS:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS1:LIST:STOP:ABS? :SEM:OFFS:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:ABS:COUP?</pre>																
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p>																
Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value																
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</td></tr> <tr> <td>WCDMA</td><td>-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</td></tr> <tr> <td>LTE, LTETDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>5G NR</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>MSR</td><td>-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p>	Mode	Values	SA	-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm	WCDMA	-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm	LTE, LTETDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	Mode	Values	LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm
Mode	Values																
SA	-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm																
WCDMA	-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm																
LTE, LTETDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
Mode	Values																
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm																

WLAN Mode: See the table of "[WLAN Mode Presets](#)" on page 1187 below

When the max number of offsets is 6:

Mode	Values
SA	ON, OFF, ON, ON, ON, ON
WCDMA	ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON
LTE, LTETDD	OFF, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "[WLAN Mode Auto Function Presets](#)" on page 1188 below

State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dBm/50 dBm

WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm
802.11a/g (OFDM/DSSS-OFDM)	-10 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm
802.11n/ac/ax/be (20MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11n/ac/ax/be (40MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ac/ax (80MHz/160MHz)	-69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm

Radio Std	Presets
	69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11be (80MHz/160MHz/320MHz)	-49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm
802.11ac/ax (80 + 80 MHz)	-69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11ah (1MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11ah (4MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11j/p (10MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11j/p (5MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm
802.11af (6MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (7MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (8MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm

WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11n (20MHz/40MHz)	ON, ON, ON, ON
802.11 ac/ax/be (20MHz/40MHz/80MHz/160MHz)	

Radio Std	Presets
802.11 be (320MHz)	
802.11ah (1MHz/2MHz/4MHz/8MHz/16MHz)	
802.11af (6MHz/7MHz/8MHz)	
802.11 ac/ax (80+80 MHz)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11j/p 20M, j/p 10M, p5M	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

Rel Start

Sets a relative power level limit at the start frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]`
`[:OUTer]:LIST:TEST` for each offset channel test.

You can turn off (not use) specific offset channels remotely with
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier <rel_amp1>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier?</code>						
Example	<code>:SEM:OFFS:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30</code> <code>:SEM:OFFS:LIST:STAR:RCAR?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS						
Preset	When the max number of offsets is 6: <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td></tr> <tr> <td>WCDMA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td></tr> </table>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD, 5G NR, MSR	0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See table of "WLAN Mode Presets" on page 1190 below

State Saved	Saved in instrument state
Min/Max	-200 dB/50 dB

WLAN Mode Presets

802.11a/g (OFDM/DSSS-OFDM)	0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -47.00 dB, -47.00 dB, - -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, - 47.00 dB
802.11b/g (DSSS/CCK/PBCC)	-30 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, - 50 dB, -50 dB, -50 dB, -50 dB, -50 dB
802.11n (20MHz/40MHz)	0 dB, -20.00 dB, -28.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, - 45.00 dB
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, - 40.00 dB
802.11ac/ax (80 MHz + 80 MHz)	-40dB, -40.00 dB, -28.00 dB, -20 dB, 0 dB, -20 dB, -28 dB, -40 dB, -40 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11ah (1 MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, - 40.00 dB
802.11j/p 20M, j/p 10M, p5M	0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, - 40.00 dB
802.11af (6MHz/ 7MHz/ 8MHz)	0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, - 40.00 dB
802.11be (320MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm,-69.00 dBm, -69.00 dBm, -69.00 dBm,-69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm

Rel Stop

Sets a relative power level limit at the stop frequency for the selected offset. The relative power level limit ranges from –200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]`
`[:OUTer]:LIST:TEST` for each offset channel.

You can turn off (not use) specific offset channels remotely with
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

The query returns values currently set to the offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier <rel_ampl>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle?</pre>						
Example	<pre>:SEM:OFFS:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:LIST:STOP:RCAR? :SEM:OFFS:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:RCAR:COUP?</pre>						
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS</p>						
Couplings	Coupled to Rel Start if “Auto” is selected, that is, Start is made the same as Stop						
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td></tr> <tr> <td>WCDMA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						

Mode	Values
LTEAFDD, LTEATDD, 5G NR, MSR	0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See table of "WLAN Mode Presets" on page 1192 below

When the max number of offsets is 6:

Mode	Values
SA	ON, ON, ON, ON, ON, ON
WCDMA	ON, ON, ON, ON, ON, ON OFF, OFF, OFF, ON, ON, ON

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD, 5G NR, MSR	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See table of "WLAN Mode Auto Function Presets" on page 1193 below

State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dB/50 dB

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -47.00 dB, -47.00 dB, - 47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB
802.11b/g (DSSS/CCK/PBCC)	-30 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, -50 dB, - 50 dB, -50 dB, -50 dB, -50 dB, -50 dB
802.11n (20MHz/40MHz)	-20.00 dB, -28.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, - 45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB, -45.00 dB
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, - 40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00

3 5G NR Mode

3.5 SEM Measurement

Radio Std	Presets
160 MHz)	dB, -40.00 dB
802.11be (320 MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11ac/ax (80 MHz + 80MHz)	-40dB, -28.00 dB, -20.00 dB, 0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11 j/p 10M, p5M	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -40.00 dB, -40.00 dB
802.11af (6MHz/ 7MHz/ 8MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB

WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11n (20MHz/ 40MHz)	ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11be (320 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11ac/ax (80 MHz + 80MHz)	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ah (1MHz/2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11j/p (20M/ 10M) /11p(5M)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11af (6 MHz/ 7 MHz/ 8 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each offset channel can be set remotely with `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:ABSolute` or `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offset channels remotely with `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST ABSolute AND OR RELative, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST?</code>												
Example	<code>:SEM:OFFS:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>:SEM:OFFS:LIST:TEST?</code>												
Notes	Comma-separated list of values Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS												
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>ABS, ABS, ABS, ABS, ABS, ABS</td></tr> <tr> <td>WCDMA</td><td>ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND</td></tr> <tr> <td>LTE, LTETDD</td><td>ABS, ABS, ABS, ABS, ABS, ABS</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See the table of "WLAN Mode Presets" on page 1195 below</p>	Mode	Values	SA	ABS, ABS, ABS, ABS, ABS, ABS	WCDMA	ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND	LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS	Mode	Values	LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS
Mode	Values												
SA	ABS, ABS, ABS, ABS, ABS, ABS												
WCDMA	ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND												
LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS												
Mode	Values												
LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS												
State Saved	Saved in instrument state												
Range	Absolute Relative Abs AND Rel Abs OR Rel												

WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL
802.11a/g (OFDM/DSSS-OFDM)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11n/ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/80 MHz + 80MHz / 160 MHz/320MHz)	AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11j/p 10M, p5M	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11af (6 MHz/ 7 MHz/ 8 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND

Show Abs2 Limit

Shows or hides Abs2 limit parameters.

Remote Command	:DISPlay:SEMask:OFFSet:SABSolute ON OFF 1 0 :DISPlay:SEMask:OFFSet:SABSolute?
Example	:DISP:SEM:OFFS:SABS 1 :DISP:SEM:OFFS:SABS?
Preset	0
State Saved	Yes
Range	ON OFF

Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected offset, ranging from –200 to +50 dBm.

The fail condition for each offset channel is set remotely using:

[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:TEST:SABSolute

You can turn off (not use) specific offset channels remotely using:

[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:SABSolute?</code>
Example	<code>:SEM:OFFS:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:LIST:STAR:SABS?</code>
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	For WLAN Mode: 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm For other Modes: 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If **Couple** = **ON**, the **Abs2 Stop** power level limit is coupled to "**Abs2 Start**" on page 2323, resulting in a flat limit line. If set to **Man** (**Couple** = **OFF**), **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute2 power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPle ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPle?</code>
Example	<code>:SEM:OFFS:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code>

	<pre>:SEM:OFFS:LIST:STOP:SABS? :SEM:OFFS:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:SABS:COUP?</pre>
Notes	<p>Comma separated list of values</p> <p>Offset 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	Coupled to Abs2 Start if Auto is selected, that is, the Stop value is equal to the Start value
Preset	<p>For WLAN Mode:</p> <p>0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</p> <p>For other Modes:</p> <p>0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</p> <p>For WLAN Mode:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p> <p>For other Modes:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	-200 dBm
Max	50 dBm

Fail Mask2

Selects the logic operation for fail conditions between the measurement results and the test limits:

(Primary Fail Mask selection) OR Abs2	OR	Checks against both Primary and Abs2 limits. The test fails if either of the limits is broken
(Primary Fail Mask selection) AND Abs2	AND	Checks against both Primary and Abs2 limits. The test fails if both of the limits are broken
Abs2 Disabled	OFF	Fail Mask2 is disabled

Note that the Primary Fail Mask selection is set by **"Fail Mask" on page 2321**.

Examples:

- when Fail Mask is Abs **AND** Rel and Fail Mask2 is **OR** Abs2, “(Abs AND Rel) OR Abs2” is displayed in the column
- when Fail Mask is Absolute and Fail Mask2 is And Abs2, “(Absolute) AND Abs2” is displayed in the column

You can turn off (not use) specific offset channels remotely using:

```
[ :SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATE
```

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute AND OR OFF, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute?</pre>
Example	<pre>:SEM:OFFS:LIST:TEST:SABS AND, AND, OR, OFF, OFF, OFF :SEM:OFFS:LIST:TEST:SABS?</pre>
Notes	Comma-separated list of values
Preset	For WLAN: <pre>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> For other Modes: <pre>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre>
State Saved	Saved in instrument state
Range	OR Abs2 AND Abs2 Abs2 Disabled

Inner Offset (BW)

Accesses a menu that enables you to set up the bandwidth measurement parameters for inner offset pairs.

Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition, and LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center frequency of Meas BW and the limit line have ½ Meas BW offset when the Meas BW Edge is selected.

Option	SCPI	Definition
Carrier Center to	CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the

3 5G NR Mode

3.5 SEM Measurement

Option	SCPI	Definition
Meas BW Center		center of offset measuring filter*
Carrier Center to Meas BW Edge	CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Carrier Edge to Meas BW Center	ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
Carrier Edge to Meas BW Edge	ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Edge to Meas BW Center	STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of offset measuring filter*
Sub-block Edge to Meas BW Edge	STOEdge	From either the lower or upper sub-block edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Center to Meas BW Center	SCTOCenter	From the center frequency of sub-block to the center frequency of offset measuring filter*
5G NR Mode only		

*Measuring filter = Meas BW (N) x Res BW

** sub-block (bandwidth) = $BW_{\text{channel,block}}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the **Number of Component Carriers** within each sub-block = 1, sub-block (bandwidth) = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$.

See "Diagrams for Offset Freq Define" on page 1201.

Mode: MSR, LTEAFDD, LTEATDD


Remote Command
`[:SENSe]:SEMask:OFFSet[1]|2:INNeR:TYPE CTOCenter | CTOEdge | ETOCenter | ETOEdge | STOCenter | STOEdge`
`[:SENSe]:SEMask:OFFSet[1]|2:INNeR:TYPE?`

Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge Sub-block Edge to Meas BW Center Sub-block Edge to Meas BW Edge

Mode: 5G NR

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code> <code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:TYPE?</code>
Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge Sub-block Edge to Meas BW Center Sub-block Edge to Meas BW Edge Sub-block Center to Meas BW Center

Diagrams for Offset Freq Define

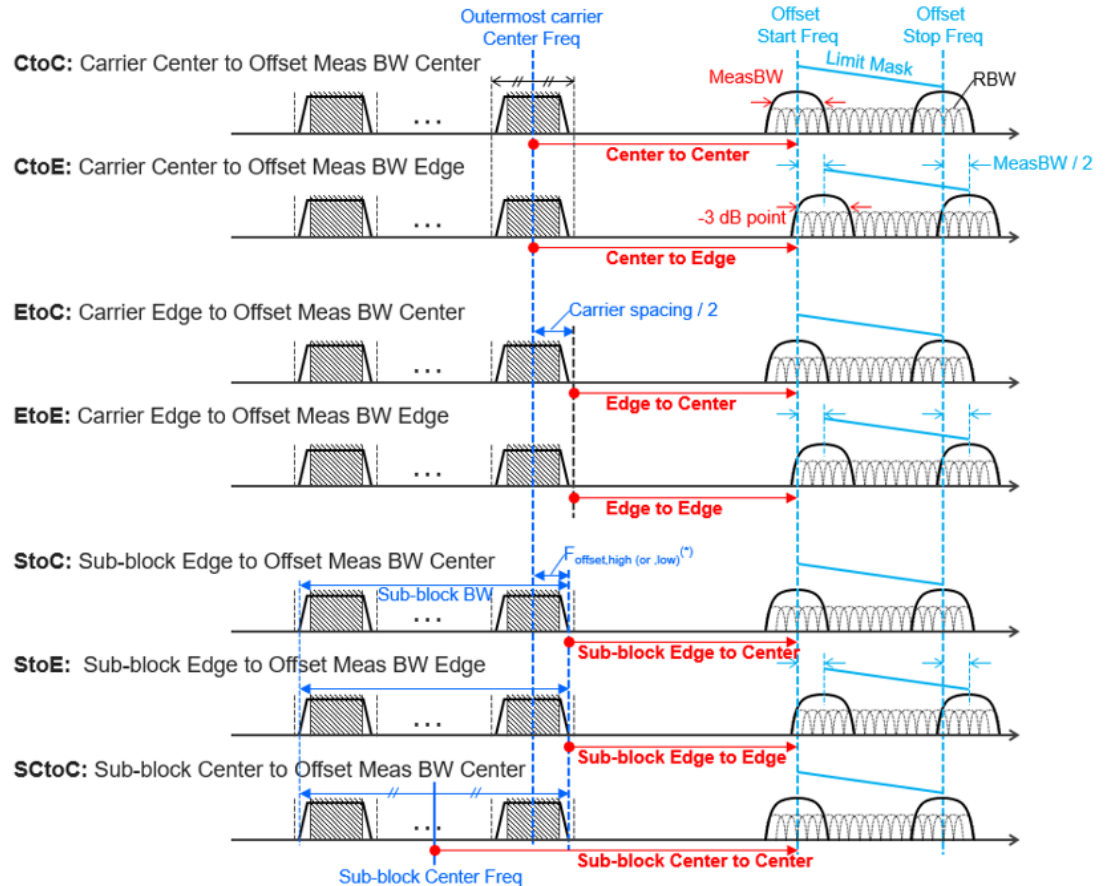

Notes:

- $MeasBW = N \times RBW$
- Sub-block Edge and Outermost Carrier Edge in the Sub-block are not always same. e.g.) 5G NR (3GPP) defines $BW_{channel,block}$ which calculates $F_{offset,high}$ and $F_{offset,low}$ asymmetrically with SCS shift.
- (*) For MSR, $F_{offset,high (or ,low)} = F_{offset,RAT,high (or ,low)}$

Offset Detector

See "Offset Detector" on page 1163.

Cumulate Mask

Selects whether inner offset limit masks are cumulated or not.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk[:STATe] ON OFF 0 1</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk[:STATe]?</code>
Example	<code>:SEM:OFFS:INN:CMAS 0</code> <code>:SEM:OFFS:INN:CMAS?</code>
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	1 0
State Saved	Yes
Range	ON OFF

Cumulate Mask Stop Frequency

Specifies stop frequency of summing limit masks. For outside of the stop frequency, the limit masks are not cumulated.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk:FREQuency:STOP <freq></code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:INN:CMAS:FREQ:STOP 500E6</code> <code>:SEM:OFFS:INN:CMAS:FREQ:STOP?</code>
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS
Dependencies	Valid only when "Cumulate Mask " on page 2329 is ON
Preset	10.5 MHz
State Saved	Yes
Min/Max	0 Hz/10 GHz

Start Freq

Specifies the start frequency for the currently selected offset. Also, enables you to toggle that offset between On and Off. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe?</code>
Example	<code>:SEM:OFFS2:INN:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</code> <code>:SEM:OFFS2:INN:LIST:FREQ:STAR?</code>

3 5G NR Mode

3.5 SEM Measurement

	<code>:SEM:OFFS:INN:LIST:STAT ON, ON, ON, OFF, OFF, OFF</code> <code>:SEM:OFFS:INN:LIST:STAT?</code>																
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid																
Couplings	Coupled to "Stop Freq" on page 2336 . If Start Freq exceeds Stop Freq , Stop Freq is automatically adjusted to (Start Freq + 100 Hz)																
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz</td></tr> <tr> <td>5G NR</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz</td></tr> </table> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5G NR</td><td>ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> </table>	Mode	Values	MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz	Mode	Values	MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
Mode	Values																
MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz																
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz																
LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz																
Mode	Values																
MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
State Saved	Saved in instrument state Saved in instrument state																
Range	ON OFF																
Min/Max	0 Hz/Depends on instrument maximum frequency. It's always Offset Stop Freq -100 Hz																

Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP <freq>, ...</code>
----------------	---

	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP?</code>								
Example	<code>:SEM:OFFS:INN:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:INN:LIST:FREQ:STOP?</code>								
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid								
Couplings	Coupled to "Start Freq" on page 2335 . If Stop Freq is lower than Start Freq , Start Freq is automatically adjusted to (Stop Freq - 100 Hz)								
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>5G NR</td><td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz</td></tr> </tbody> </table>	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
Mode	Values								
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz								
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz								
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz								
State Saved	Saved in instrument state								
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span on Swept SA Measurement								

Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset. using front panel and all the offsets using SCPI. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$,

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution] <bandwidth>, ...</code>
----------------	--

3 5G NR Mode

3.5 SEM Measurement

	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO OFF ON 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO?</pre>								
Example	<pre>:SEM:OFFS2:INN:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz :SEM:OFFS2:INN:LIST:BAND? :SEM:OFFS:INN:LIST:BAND:AUTO 1,1,1,1,1,1 :SEM:OFFS:INN:LIST:BAND:AUTO?</pre>								
Notes	<p>Comma-separated list of values</p> <p>Offset 1 is for BTS, 2 for MS. Default is BTS</p>								
Couplings	<p>Coupled to Start and Stop offset and "Meas BW" on page 2333 multiplier. This parameter must adhere to the rule:</p> <p>$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$, where N is the multiplier</p> <p>If the multiplier is changed, the Res BW changes to ensure conformance to the rule. When set manually, Res BW Coupling is set to manual</p> <p>The resolution bandwidth is coupled to the offset width, determined by "Start Freq" on page 2335 and "Stop Freq" on page 2336</p>								
Preset	<table> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td></td><td>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> </tbody> </table>	Mode	Values	MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz		OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
Mode	Values								
MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz								
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz								
	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF								
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>								
Range	Auto Man								
Min	1 Hz								
Max	<p>When Option FS1 or FS2 is installed:10 MHz</p> <p>Otherwise: 8 MHz</p>								

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer, which defines a ratio between Integration BW and **Res BW** of the measurement result:

Integration BW = Meas BW * "Res BW" on page 2332

Integration BW is the desired resolution bandwidth, and **Res BW** is the actual bandwidth for sweep. Measurement sweeps with **Res BW**, and **Meas BW** compensates sweep resolution bandwidth to Integration BW.

If you set this parameter greater than 1, you can set **Res BW** narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:IMULti <integer>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:IMULti?</code>						
Example	<code>:SEM:OFFS2:INN:LIST:BAND:IMUL 1,1,1,1,1,1</code> <code>:SEM:OFFS2:INN:LIST:BAND:IMUL?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS						
Couplings	This parameter must adhere to the rule: (N x Res BW) <= (Stop freq of the offset - Start freq of the offset), where N is the multiplier If Res BW is changed, the multiplier changes to conform to the rule						
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> </tbody> </table>	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values						
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
State Saved	Yes						
Min/Max	1/1000						

Video BW

Changes the instrument post-detection filter.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO?</code>
Example	<code>:SEM:OFFS2:INN:LIST:BAND:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0</code>

	<p>kHz, 100.0 kHz</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID?</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID:AUTO ON, ON, ON, ON, ON, ON</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID:AUTO?</p>
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	When the Auto state is ON , Video BW is basically coupled with other parameters
Preset	<p>Automatically Calculated</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	1 Hz/50 MHz

Inner Offset (Sweep)

Accesses a menu that enables you to set up the sweep measurement parameters for inner offset pairs.

Offset Freq Define

Same as ["Offset Freq Define" on page 2326](#) under **Inner Offset (BW)**

Offset Detector

Same as ["Offset Detector" on page 1163](#) under **Inner Offset (BW)**

Cumulate Mask

Same as ["Cumulate Mask " on page 2329](#) under **Inner Offset (BW)**

Cumulate Mask Stop Frequency

Same as ["Cumulate Mask Stop Frequency" on page 2330](#), under **Inner Offset (BW)**

Start Freq

Same as ["Start Freq" on page 2335](#), under **Inner Offset (BW)**

Stop Freq

Same as "Stop Freq" on page 2336, under Inner Offset (BW)

Sweep Time

Specifies the sweep time for the currently selected offset and enables you to toggle the **Sweep Time** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

NOTE

On non-sweeping hardware, this column is grayed-out. The value shown on this column is an estimate of the turnaround time to complete the measurement of the entire offset span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same **Sweep Time** as you would for sweeping hardware, send `[:SENSe]:SEMask:OFFSet[1]|2:INNeR:LIST:SWEep:TIME <time>`. The measurement emulates the **Sweep Time** effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using "Minimum Acquisition Time" on page 1209, which provides better control.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:TIME <time>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:TIME?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:TIME:AUTO ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:TIME:AUTO?</code>
Example	<code>:SEM:OFFS2:INN:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME?</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME:AUTO?</code>
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS
Dependencies	<p>On non-sweeping hardware, this column is grayed-out and the Auto/Man checkbox is invisible. The read-only column shows estimated sweep time</p> <p>In those instruments, "Minimum Acquisition Time" on page 1209 is available</p>
Couplings	When you manually set a value while in Auto , the state automatically changes to Man
Preset	Automatically calculated

	Mode	Values
	MSR	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
	LTEAFDD, LTEATDD, 5G NR	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state Saved in instrument state	
Min	Other than non-sweeping hardware Depends on Sweep Type: <ul style="list-style-type: none"> – Sweep Type “Swept”: 1 ms – Sweep Type “FFT”: 100 ns Non-sweeping hardware: N/A	
Max	Sweeping hardware: 10 s Non-sweeping hardware: N/A	
Min/Max	Depends on "Sweep Type" on page 1180:	
	Sweep Type	Min/Max
	Swept	1ms/10 s
	FFT	100ns/10 s

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides **Span** into multiple chunks if needed. Therefore, the total signal acquisition time for the entire offset span is:

$\sim (> \sim \text{Minimum Acquisition Time}) * (\text{The number of chunks})$.

When in **Auto**, this parameter’s value is determined by other parameters, such as **Offset Start**, **Offset Stop**, **RBW** and **VBW**.

You can manually increase this parameter value from this **Auto** value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INner:LIST:SWEEP:ACQuisition:TIME <time>, ...</code>
----------------	---

	[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME:AUTO ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME:AUTO?
Example	:SEM:OFFS2:INN:LIST:SWE:ACQ:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME? :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME:AUTO ON, ON, ON, OFF, OFF :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME:AUTO?
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Offset Start Freq , Offset Stop Freq , RBW , and VBW when in the Auto state When you manually set a value while in Auto , the state automatically changes to Man
Preset	Automatically calculated ON
State Saved	Saved in instrument state
Min	100 ns
Max	4000 s

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire offset span of each measurement cycle.

Remote Command	[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEep:ETIMe?
Example	:SEM:OFFS2:INN:LIST:SWE:ETIM?
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

Sweep Type

Specifies the **Sweep Type** for the currently selected offset and enables you to toggle **Sweep Type** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

How to define Sweep Time and Sweep Type

Sweep Type Mode	Behavior
Auto	Sweep Type is automatically selected depending on Rules Sweep Time is automatically calculated, according to the selected Sweep Type
Man	Sweep Type is user-selected
—	
Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEEp:TYPE SWEEp FFT, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEEp:TYPE?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEEp:TYPE:AUTO ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SWEEp:TYPE:AUTO?</code>
Example	<code>:SEM:OFFS2:INN:LIST:SWE:TYPE FFT,FFT,SWE</code> <code>:SEM:OFFS2:INN:LIST:SWE:TYPE?</code> <code>:SEM:OFFS2:INN:LIST:SWE:TYPE:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:INN:LIST:SWE:TYPE:AUTO?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Dependencies	Not available in modular products, such as VXT
Couplings	When Sweep Type is set manually, Sweep Type Mode is set to MANual When Sweep Type Mode is Auto , Sweep Type is automatically selected according to " Sweep Type Rules " on page 1156
Preset	Automatically calculated <code>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</code>
State Saved	Saved in instrument state
Range	Auto Man

Offset Side


Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[:SENSe]:SEMask:OFFSet [n]:INNeR:LIST:STATe`.

BOTH	Both sides in the sub-block gap are enabled.
NEGative	The upper side in the sub-block gap only (i.e., negative sideband of the upper sub-block) is enabled
POSitive	The lower side in the sub-block gap only (i.e., positive sideband of the lower sub-block) is enabled.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR and LTE-Advanced FDD/TDD Modes.

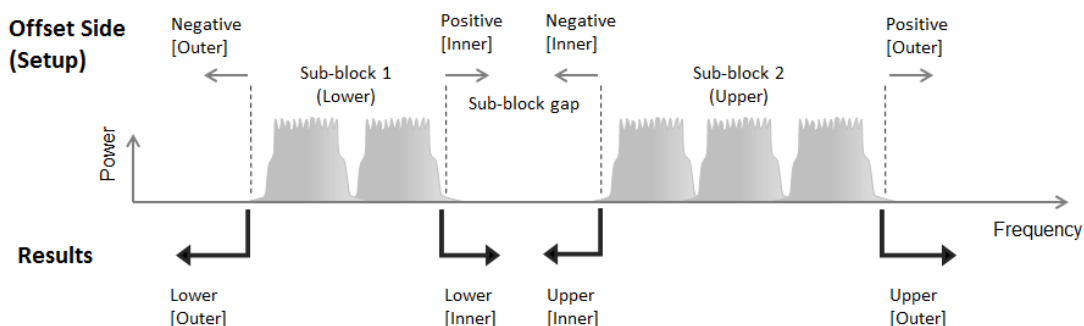

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:SIDE BOTH NEGative POSitive, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:SIDE?</code>						
Example	<code>:SEM:OFFS:INN:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS</code> <code>:SEM:OFFS:INN:LIST:SIDE?</code>						
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS						
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</td></tr> <tr> <td>LTEAFDD, LPEATDD, 5G NR</td><td>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</td></tr> </tbody> </table>	Mode	Values	MSR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH	LTEAFDD, LPEATDD, 5G NR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
Mode	Values						
MSR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH						
LTEAFDD, LPEATDD, 5G NR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH						
State Saved	Saved in instrument state						
Range	<code>BOTH NEGative POSitive</code>						

Inner Offset (Limits)

Accesses a menu that enables you to set the power limits for start and stop frequencies of the selected inner offsets.

Start Freq

Same as "Start Freq" on page 2335 under Inner Offset (BW)

Stop Freq

Same as "Stop Freq" on page 2336 under Inner Offset (BW)

Abs Start

Sets the absolute power level limit at the start frequency for the selected inner offset, ranging from –200 to +50 dBm.

The fail condition for each inner offset channel is set remotely by
[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:TEST.

You can turn off (not use) specific inner offset channels remotely with
[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATe.

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STARt:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STARt:ABSolute?									
Example	:SEM:OFFS2:INN:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS2:INN:LIST:STAR:ABS?									
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS									
Preset	<table><tr><th>Mode</th><th>Values</th></tr><tr><td>MSR</td><td>-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr><tr><td>5G NR</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr><tr><td>LTEAFDD, LTEATDD</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr></table>		Mode	Values	MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm	5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values									
MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm									
5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm									
LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm									
State Saved	Saved in instrument state									
Min/Max	-200 dBm/50 dBm									

Abs Stop

Sets the absolute power level limit at the stop frequency for the selected inner offset, ranging from –200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the Abs Stop power level limit is coupled to Abs Start to result in a flat limit line. If set to **Man**, Abs Start and Abs Stop take different values to result in a sloped limit line.

The query returns values currently set to the inner offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPle?</pre>								
Example	<pre>:SEM:OFFS:INN:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, - 11.50 dBm, -11.50 dBm :SEM:OFFS1:INN:LIST:STOP:ABS? :SEM:OFFS:INN:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:ABS:COUP?</pre>								
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>								
Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value								
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr> <tr> <td>5G NR</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </table>	Mode	Values	MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm	5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm								
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								

Mode	Values
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dBm/50 dBm

Rel Start

Sets a relative power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet [n]:INNER:LIST:TEST` for each inner offset channel test.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet [n]:INNER:LIST:STATe`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:RCARrier <rel_ampl>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:RCARrier?</code>
Example	<code>:SEM:OFFS:INN:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30</code> <code>:SEM:OFFS:INN:LIST:STAR:RCAR?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB
State Saved	Saved in instrument state
Min/Max	-200 dB/50 dB

Rel Stop

Sets a relative power level limit at the stop frequency for the selected inner offset, ranging from –200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]:INNer:LIST:TEST` for each inner offset channel.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNer:LIST:STATE`.

The query returns values currently set to the inner offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:STOP:RCARrier <rel_ampl>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:STOP:RCARrier? [:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:STOP:RCARrier:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:STOP:RCARrier:COUPle?</pre>
Example	<pre>:SEM:OFFS:INN:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:INN:LIST:STOP:RCAR? :SEM:OFFS:INN:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:RCAR:COUP?</pre>
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	Coupled to Rel Start if “Auto” is selected, that is, Start is made the same as Stop
Preset	<p>0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	-200 dB/50 dB

Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each inner offset channel can be set remotely with `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:ABSolute` or `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:RCARrier`.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATe`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:TEST ABSolute AND OR RELative, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:TEST?</code>
Example	<code>:SEM:OFFS:INN:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>:SEM:OFFS:INN:LIST:TEST?</code>
Notes	Comma-separated list of values
Preset	<code>ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS</code>
State Saved	Saved in instrument state
Range	Absolute Relative Abs AND Rel Abs OR Rel

Show Abs2 Limit

Same as ["Show Abs2 Limit" on page 1217](#) under Limits.

Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected inner offset, ranging from –200 to +50 dBm.

The fail condition for each inner offset channel is set remotely using:

`[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:TEST:SABSolute`

You can turn off (not use) specific inner offset channels remotely using:

`[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATe`

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STARt:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STARt:SABSolute?</code>
Example	<code>:SEM:OFFS:INN:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:INN:LIST:STAR:SABS?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If set to **Couple** = **ON**, the **Abs2 Stop** power level limit is coupled to "**Abs2 Start**" on page 2342, resulting in a flat limit line. If set to **Man** (**Couple** = **OFF**), **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop 2nd absolute power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute:COUPle ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute:COUPle?</code>
Example	<code>:SEM:OFFS:INN:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS?</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS:COUP?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS

Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value
Preset	0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min	-200 dBm
Max	50 dBm

Fail Mask2

Selects one of the logical operations for fail conditions between the measurement results and the test limits:

(Primary Fail Mask selection) OR Abs2	OR	Checks against both Primary and Abs2 limits. The test fails if either of the limits is broken
(Primary Fail Mask selection) AND Abs2	AND	Checks against both Primary and Abs2 limits. The test fails if both of the limits are broken
Abs2 Disabled	OFF	Fail Mask2 is disabled

For examples, see "Fail Mask2" on page 2325.

Note that the Primary Fail Mask selection is set by "Fail Mask" on page 2341.

You can turn off (not use) specific inner offset channels remotely using:

[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATe

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:TEST:SABSolute AND OR OFF, ...</code> <code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:LIST:TEST:SABSolute?</code>
Example	<code>:SEM:OFFS:INN:LIST:TEST:SABS AND, AND, OR, OFF, OFF, OFF</code> <code>:SEM:OFFS:INN:LIST:TEST:SABS?</code>
Notes	Comma-separated list of values
Preset	<code>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</code>
State Saved	Saved in instrument state
Range	OR Abs2 AND Abs2 Abs2 Disabled

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "**Measurement-Specific Details**" on page 1221 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONF:SEMsk</code>
Example	<code>:CONF:SEM</code>
Couplings	Restores all measurement parameters to their default values

3.5.23.2 Carrier

Used to set up parameters that define how the reference channel is measured.

Integ BW

Specifies the integration bandwidth used to calculate the power in the reference channel.

Remote Command	<code>[:SENSe]:SEMsk:BANDwidth[1] 2:INTEgration <bandwidth></code> <code>[:SENSe]:SEMsk:BANDwidth[1] 2:INTEgration?</code>								
Example	<code>:SEM:BAND:INT 10 MHz</code> <code>:SEM:BAND:INT?</code>								
Notes	10% . 100% of Channel Span Parameter Value Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS If the ref channel is outside the frequency range, the result spectrum will be invalid								
Dependencies	Not shown in MSR, LTE-Advanced FDD/TDD and 5G NR Modes In order to maintain backwards compatible with legacy LTE FDD/TDD Modes, the remote command is supported in LTE & LTE-A converged application								
Couplings	Cannot be higher than the channel Span . If lower than 1/10 of channel Span , then the channel Span is reduced to be 10 times the Integ BW								
Preset	<table> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>SA</td><td>3.84 MHz</td></tr> <tr> <td>WCDMA</td><td>3.84 MHz 3.84 MHz</td></tr> <tr> <td>WLAN</td><td>See the table of "WLAN Mode Presets" on page 1223 below</td></tr> </tbody> </table>	Mode	Value	SA	3.84 MHz	WCDMA	3.84 MHz 3.84 MHz	WLAN	See the table of "WLAN Mode Presets" on page 1223 below
Mode	Value								
SA	3.84 MHz								
WCDMA	3.84 MHz 3.84 MHz								
WLAN	See the table of "WLAN Mode Presets" on page 1223 below								
State Saved	Saved in instrument state								
Min/Max	1 kHz/Depends on instrument maximum frequency								

Backwards `[:SENSe]:SEMask:BWIDth[1]|2:INtegration`
Compatibility SCPI

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	18 MHz
802.11n/ac (20 MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz
802.11n (40MHz)/ 802.11ac (40 MHz)	38 MHz
802.11ac (80 MHz)	78 MHz
802.11ac (160 MHz)	158 MHz
802.11ac (80 MHz + 80 MHz)	78 MHz
802.11ah (1 MHz)	0.9 MHz
802.11ah (2 MHz)	1.8 MHz
802.11ah (4 MHz)	3.8 MHz
802.11ah (8 MHz)	7.8 MHz
802.11ah (16 MHz)	15.8 MHz
802.11j/p (20 MHz)	18 MHz
802.11j/p (10 MHz)	9 MHz
802.11p (5 MHz)	4.5 MHz
802.11ax/be (20 MHz)	19.5 MHz
802.11ax/be (40 MHz)	39.0 MHz
802.11ax/be (80 MHz)	79.0 MHz
802.11ax/be (160 MHz)	159.0 MHz
802.11be (320 MHz)	319.0 MHz
802.11ax (80 MHz + 80 MHz)	79.0 MHz
802.11af (6 MHz)	5.7 MHz
802.11af (7 MHz)	6.65 MHz
802.11af (8 MHz)	7.6 MHz

Span

Specifies the span used to calculate the power in the reference channel.

Remote Command `[:SENSe]:SEMask:FREQuency[1]|2:SPAN <freq>`
`[:SENSe]:SEMask:FREQuency[1]|2:SPAN?`
`[:SENSe]:SEMask:FREQuency[1]|2:SPAN:AUTO ON | OFF | 1 | 0`

	<code>[:SENSe]:SEMask:FREQuency[1] 2:SPAN:AUTO?</code>														
Example	<code>:SEM:FREQ:SPAN 3MHz</code> <code>:SEM:FREQ:SPAN?</code> <code>:SEM:FREQ:SPAN:AUTO OFF</code> <code>:SEM:FREQ:SPAN:AUTO?</code>														
Notes	<p>Frequency sub op code, 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Frequency sub op code 2 is supported only in non-SA Modes. In SA Mode, Frequency sub op code 1 is used for both BTS and MS</p> <p>If the ref channel is outside the frequency range, the result spectrum will be invalid</p>														
Dependencies	<p>Not shown in MSR Mode</p> <p>In order to maintain backwards compatible with legacy LTE FDD/TDD Modes, the channel span key is supported in LTE & LTE-A converged application. The Auto/Man toggle is added to this key. This key is enabled and can be changed only in single carrier. The span state is always Auto in Multi-carriers</p> <p>Span Auto/Man state is only available in LTE/LTE-Advanced FDD/TDD and 5G NR Modes</p>														
Couplings	<p>Range 1 kHz to 50 MHz (although restricted by Chan Integ BW). If you set the channel Span lower than channel Integ BW, they will both track each other. As you increase the channel Span, Integ BW also increases if it is less than 1/10 of the channel Span</p> <p>For WLAN 802.11ac (80 + 80 MHz), the channel span is coupled with the difference between the center frequencies of the two carriers. When the difference is either less than 80 MHz, or greater than 565 MHz, a "setting conflict" error message is displayed</p> <p>Chan Span = Carrier Spacing + Chan IntegBW</p> <p>When the state of Span is Auto, the span value is automatically determined by multi-carrier configuration. Otherwise, the span value depends on user input</p> <p>When the span value is set manually, the state of span is automatically changes to Man</p> <p>This key is enabled and can be changed only in single carrier. The span state is always Auto in Multi-carriers</p>														
Preset	<table> <thead> <tr> <th>Mode</th><th>Value</th></tr> </thead> <tbody> <tr> <td>SA</td><td>5.0 MHz</td></tr> <tr> <td>WCDMA</td><td>5.0 MHz 5.0 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5 MHz</td></tr> <tr> <td>5G NR</td><td>Automatically calculated</td></tr> <tr> <td>WLAN</td><td>See the table of "WLAN Mode Presets" on page 1225 below</td></tr> <tr> <td>ON</td><td></td></tr> </tbody> </table>	Mode	Value	SA	5.0 MHz	WCDMA	5.0 MHz 5.0 MHz	LTEAFDD, LTEATDD	5 MHz	5G NR	Automatically calculated	WLAN	See the table of "WLAN Mode Presets" on page 1225 below	ON	
Mode	Value														
SA	5.0 MHz														
WCDMA	5.0 MHz 5.0 MHz														
LTEAFDD, LTEATDD	5 MHz														
5G NR	Automatically calculated														
WLAN	See the table of "WLAN Mode Presets" on page 1225 below														
ON															
State Saved	<p>Saved in instrument state</p> <p>Yes</p>														
Range	Auto Man														
Min/Max	1 kHz/Depends on instrument maximum frequency														

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	18 MHz
802.11n/ac (20 MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz
802.11n/ac (40 MHz)	38 MHz
802.11ac (80 MHz)	78 MHz
802.11ac (160 MHz)	158 MHz
802.11ac (80 MHz + 80 MHz)	320 MHz
802.11ah (1 MHz)	0.9 MHz
802.11ah (2 MHz)	1.8 MHz
802.11ah (4 MHz)	3.8 MHz
802.11ah (8 MHz)	7.8 MHz
802.11ah (16 MHz)	15.8 MHz
802.11j/p (20 MHz)	18 MHz
802.11j/p (10 MHz)	9 MHz
802.11p (5 MHz)	4.5 MHz
802.11ax/be (20 MHz)	19.5 MHz
802.11ax/be (40 MHz)	39.0 MHz
802.11ax/be (80 MHz)	79.0 MHz
802.11ax/be (160 MHz)	159.0 MHz
802.11be (320 MHz)	319.0 MHz
802.11ax (80 MHz + 80 MHz)	320.0 MHz
802.11af (6 MHz)	5.7 MHz
802.11af (7 MHz)	6.65 MHz
802.11af (8 MHz)	7.6 MHz

Sweep Time

Used to calculate the power in the reference channel. **Sweep Time** can be set manually or put into **Auto** mode.

For instruments with non-sweeping acquisitions, such as VXT, the time value is the acquisition time for an individual FFT segment, not the cumulated time for all FFT segments in the channel.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate, which is the turnaround time to complete the measurement of the entire carrier span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same **Sweep Time** as you would for sweeping hardware, send `[:SENSe]:SEMask:SWEEP [1]|2:TIME <time>`. The measurement emulates the **Sweep Time** effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using **"Minimum Acquisition Time" on page 1227**, which provides better control.

Remote Command	<code>[:SENSe]:SEMask:SWEEP[1] 2:TIME <time></code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TIME?</code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TIME:AUTO OFF 0 ON 1</code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TIME:AUTO?</code>						
Example	<code>:SEM:SWE:TIME 9ms</code> <code>:SEM:SWE:TIME?</code> <code>:SEM:SWE:TIME:AUTO OFF</code> <code>:SEM:SWE:TIME:AUTO?</code>						
Notes	Sub op code 1 is for BTS, 2 for MS. Default is BTS Note that Sweep sub op code 2 is supported only in non-SA Modes. In SA Mode, Sweep sub op code 1 is used for both BTS and MS						
Dependencies	On non-sweeping hardware, this control is grayed out and the Auto/Man checkbox is invisible. The read-only value shows the estimated sweep time In those instruments, "Minimum Acquisition Time" on page 1227 is available						
Couplings	When the time is set manually, Auto is set to OFF If state is Auto , coupled with Channel Detector selection, Channel Resolution BW , Channel Video BW When set to Auto , the Time is automatically calculated						
Preset	Automatically calculated ON						
State Saved	Saved in instrument state Yes						
Range	OFF ON						
Min	Sweeping hardware Depends on Channel "Sweep Type" on page 1228 : <table border="1"> <thead> <tr> <th>Sweep Type</th><th>Min</th></tr> </thead> <tbody> <tr> <td>Swept</td><td>1 ms</td></tr> <tr> <td>FFT</td><td>100 ns</td></tr> </tbody> </table> Non-sweeping hardware: N/A	Sweep Type	Min	Swept	1 ms	FFT	100 ns
Sweep Type	Min						
Swept	1 ms						
FFT	100 ns						

Max	Sweeping hardware: 4000 s Non-sweeping hardware: N/A
Backwards	<code>[:SENSe]:SEMask:SWEEP[1] 2[:TIME]</code>
Compatibility SCPI	<code>[:SENSe]:SEMask:SWEEP[1] 2[:TIME]:AUTO</code>

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides **Span** into multiple chunks if needed. Therefore, the total signal acquisition time for the entire carrier span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in **Auto**, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this **Auto** value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[:SENSe]:SEMask:SWEEP:ACQuisition:TIME <time></code> <code>[:SENSe]:SEMask:SWEEP:ACQuisition:TIME?</code> <code>[:SENSe]:SEMask:SWEEP:ACQuisition:TIME:AUTO OFF ON 0 1</code> <code>[:SENSe]:SEMask:SWEEP:ACQuisition:TIME:AUTO?</code>
Example	<code>:SEM:SWE:ACQ:TIME 500 ms</code> <code>:SEM:SWE:ACQ:TIME?</code> <code>:SEM:SWE:ACQ:TIME:AUTO OFF</code> <code>:SEM:SWE:ACQ:TIME:AUTO?</code>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Span , RBW , and VBW when in the Auto state If you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated ON
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire carrier span of each measurement cycle.

Remote Command	<code>[:SENSe]:SEMask:SWEEP:ETIME?</code>
Example	<code>:SEM:SWE:ETIM?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

Sweep Type

Sets the **Sweep Type** used to calculate the power in the reference channel. **Sweep Type** can be set manually or put into **Auto** mode.

How to define Channel Sweep Time and Channel Sweep Type:

Channel Sweep Type Mode	Behavior
Auto	Channel Sweep Type is automatically selected depending on Sweep Type Rules Channel Sweep Time is automatically calculated depending on the selected sweep type
Man	Channel Sweep Type is user-selected
—	

Remote Command	<code>[:SENSe]:SEMask:SWEEP[1] 2:TYPE SWEEP FFT</code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TYPE?</code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TYPE:AUTO OFF 0 ON 1</code> <code>[:SENSe]:SEMask:SWEEP[1] 2:TYPE:AUTO?</code>
Example	<code>:SEM:SWE:TYPE FFT</code> <code>:SEM:SWE:TYPE?</code> <code>:SEM:SWE:TYPE:AUTO OFF</code> <code>:SEM:SWE:TYPE:AUTO?</code>
Notes	Sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Sweep sub op code 2 is supported only in non-SA Modes. In SA Mode, Sweep sub op code 1 is used for both BTS and MS

Dependencies	Grayed-out in VXT models M9410A/11A
Couplings	If Sweep Type is set manually, Sweep Type mode is set to MANua1 When Channel Sweep Type mode is Auto , Sweep Type is automatically selected according to Sweep Type Rules
Preset	Automatically calculated ON
State Saved	Saved in instrument state Yes
Range	OFF ON

Res BW

Sets the resolution bandwidth used to calculate the power in the reference channel. The Channel Resolution BW can be set manually or put into auto mode.

MSR Auto RBW:

In the MSR Mode, resolution bandwidth is predefined for each radio format. When carriers are configured with multiple radio formats, the narrowest RBW is selected.

Radio Format		RBW (kHz)
LTE	1.4 MHz	13 kHz
	3 MHz	27 kHz
	5 MHz	47 kHz
	10 MHz	91 kHz
	15 MHz	150 kHz
	20 MHz	180 kHz
	200 kHz (NB-IoT, only available in FDD)	10 kHz
W-CDMA		75 kHz

5G NR Auto RBW:

Radio Format		RBW
5G NR	5 MHz	47 kHz
	10 MHz	91 kHz
	15 MHz	150 kHz
	20 MHz	180 kHz
	25 MHz	240 kHz
	30 MHz	270 kHz
	35 MHz	330 kHz
	40 MHz	390 kHz
	45 MHz	430 kHz
	50 MHz	470 kHz
	60 MHz	560 kHz
	70 MHz	680 kHz
	80 MHz	750 kHz
	90 MHz	820 kHz
	100 MHz	910 kHz
	200MHz	1.8 MHz
	400 MHz	3 MHz
	800 MHz	3 MHz
	1600 MHz	3 MHz
	2000 MHz	3 MHz

In the LTE-Advanced (both FDD and TDD) and 5G NR modes, the resolution bandwidth is predefined based on the corresponding bandwidth of the single carrier, which is listed above. When **Res BW** mode is **Auto**, the narrowest RBW is selected.

Remote Command	<pre>[:SENSe]:SEMask:BANDwidth[1] 2[:RESolution] <bandwidth> [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]? [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]:AUTO OFF ON 1 0 [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]:AUTO?</pre>
Example	<pre>:SEM:BAND 100 kHz :SEM:BAND? :SEM:BAND:AUTO ON :SEM:BAND:AUTO?</pre>
Notes	<p>Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Bandwidth sub op code 2 is supported only in non-SA modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS</p>
Couplings	If Res BW is set manually, Channel Resolution BW mode is set to MANual

3 5G NR Mode

3.5 SEM Measurement

Coupled with Channel Detector selection, Channel Sweep Time and Channel Video BW When set to Auto , the resolution bandwidth is automatically calculated													
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>100 kHz</td></tr> <tr> <td>WCDMA</td><td>75 kHz</td></tr> <tr> <td>LTE, LTETDD, MSR, LTEAFDD, LTEATDD</td><td>Auto (47 kHz)</td></tr> <tr> <td>5G NR</td><td>Auto</td></tr> <tr> <td>WLAN</td><td>100 kHz</td></tr> </table>	Mode	Values	SA	100 kHz	WCDMA	75 kHz	LTE, LTETDD, MSR, LTEAFDD, LTEATDD	Auto (47 kHz)	5G NR	Auto	WLAN	100 kHz
Mode	Values												
SA	100 kHz												
WCDMA	75 kHz												
LTE, LTETDD, MSR, LTEAFDD, LTEATDD	Auto (47 kHz)												
5G NR	Auto												
WLAN	100 kHz												
	ON												
State Saved	Saved in instrument state Saved in instrument state												
Range	Auto Man												
Min	1 Hz												
Max	When Option FS1 or FS2 is installed: 10 MHz Otherwise: 8 MHz												
Backwards Compatibility SCPI	[:SENSe]:SEMask:BWIDth[1] 2[:RESolution] [:SENSe]:SEMask:BWIDth[1] 2[:RESolution]:AUTO												

Video BW

Sets the video bandwidth used to calculate the power in the reference channel. The **Channel Video BW** can be set manually or put into **Auto** mode.

Remote Command	[:SENSe]:SEMask:BANDwidth[1] 2:VIDeo <bandwidth> [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo? [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:AUTO OFF ON 1 0 [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:AUTO?
Example	:SEM:BAND:VID 100 kHz :SEM:BAND:VID? :SEM:BAND:VID:AUTO ON :SEM:BAND:VID:AUTO?
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS
Couplings	If Video BW is set manually, Channel Video BW mode is set to MANual Coupled with Channel Detector selection, Channel Sweep Time and Channel Resolution BW When set to Auto , the video bandwidth is automatically calculated

Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>100 kHz</td></tr> <tr> <td>WCDMA</td><td>75 kHz</td></tr> <tr> <td>LTE, LTEAFDD, LTETDD, LTEATDD, 5G NR, WLAN, MSR</td><td>Auto</td></tr> <tr> <td>ON</td><td></td></tr> </table>	Mode	Values	SA	100 kHz	WCDMA	75 kHz	LTE, LTEAFDD, LTETDD, LTEATDD, 5G NR, WLAN, MSR	Auto	ON	
Mode	Values										
SA	100 kHz										
WCDMA	75 kHz										
LTE, LTEAFDD, LTETDD, LTEATDD, 5G NR, WLAN, MSR	Auto										
ON											
State Saved	Saved in instrument state Yes										
Range	Auto Man										
Min/Max	1 Hz/50 MHz										
Backwards Compatibility SCPI	[:SENSe]:SEMask:BWIDth[1] 2:VIDeo [:SENSe]:SEMask:BWIDth[1] 2:VIDeo:AUTO										

VBW/RBW

Sets the Video BW/Resolution BW ratio to calculate the Channel Resolution BW and Channel Video BW. The VBW/RBW Ratio can be set manually or put into **Auto** mode.

Remote Command	[:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:RATio <real> [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:RATio [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:RATio:AUTO OFF ON 1 0 [:SENSe]:SEMask:BANDwidth[1] 2:VIDeo:RATio:AUTO?
Example	:SEM:BAND:VID:RAT 0.1 :SEM:BAND:VID:RAT? :SEM:BAND:VID:RAT:AUTO ON :SEM:BAND:VID:RAT:AUTO?
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS
Couplings	When Video BW/Res BW is set manually, Channel VBW/RBW Ratio mode is set to MANual When set to Auto , the VBW/RBW Ratio is automatically calculated
Preset	SA, WCDMA: 1.0 LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR, WLAN, MSR: Auto ON
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man

Min/Max	0.00001/3000000
Backwards Compatibility SCPI	<code>[:SENSe]:SEMask:BWIDth[1] 2:VIDeo:RATio</code> <code>[:SENSe]:SEMask:BWIDth[1] 2:VIDeo:RATio:AUTO</code>

Channel Detector

Accesses a menu of functions that enable you to control the detectors for reference channel. The following choices are available:

AUTO	The detector selected depends on marker functions, trace functions, average type, and the trace averaging function
NORMal	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
AVERage	The detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales)
POSitive Peak	The detector determines the maximum of the signal within the sweep points
SAMPLE	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
NEGative Peak	The detector determines the minimum of the signal within the sweep points

Remote Command	<code>[:SENSe]:SEMask:DETECTOR:CARRier[:FUNCTION] AVERage NEGative NORMal POSitive SAMPLE</code> <code>[:SENSe]:SEMask:DETECTOR:CARRier[:FUNCTION]?</code> <code>[:SENSe]:SEMask:DETECTOR:CARRier:AUTO ON OFF 1 0</code> <code>[:SENSe]:SEMask:DETECTOR:CARRier:AUTO?</code>
Example	<code>:SEM:DET:CARR NEG</code> <code>:SEM:DET:CARR?</code> <code>:SEM:DET:CARR:AUTO OFF</code> <code>:SEM:DET:CARR:AUTO?</code>
Notes	When you manually select a detector (instead of selecting Auto), that detector is used regardless of other instrument settings Note: This detector setting affects the reference channel. There is no per-trace detector
Couplings	See Couplings in "Trace Type" on page 3048
Preset	AVERage ON
State Saved	Saved in instrument state
Range	AVERage NEGative NORMal POSitive SAMPLE

Reference Carrier Average Type (Remote Command Only)

Select trace average type for the reference carrier.

Remote Command	<code>[:SENSe]:SEMask:AVERage:CARRier:TYPE RMS LOG</code> <code>[:SENSe]:SEMask:AVERage:CARRier:TYPE?</code>
Example	<code>:SEM:AVER:CARR:TYPE LOG</code> <code>:SEM:AVER:CARR:TYPE?</code>
Preset	<code>RMS</code>
State Saved	Saved in instrument state

Offset/Limits Config Table

This function is the same as "Offset/Limits Config Table" on page 1157 under the "Settings" on page 1153 tab.

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

3.5.23.3 Reference

Lets you set the Reference Power and parameters related to the Reference Power for SEM measurements.

Measurement Type

Accesses a menu that enables you to select one of the following measurement reference types:

Total Pwr Ref	<code>TPRef</code>	Sets the reference to the total carrier power and the measured data is shown in dBc and dBm
PSD Ref	<code>PSDRef</code>	Sets the reference to the mean power spectral density of the carrier and the measured data is shown in dB and dBm/Hz
Spectrum Peak Ref	<code>SPRef</code>	Sets the reference to the spectrum peak power of the carrier and the measured data is shown in dB and dBm

Remote Command	<code>[:SENSe]:SEMask:TYPE PSDRef TPRef SPRef</code> <code>[:SENSe]:SEMask:TYPE?</code>
Example	<code>:SEM:TYPE PSDR</code> <code>:SEM:TYPE?</code>
Preset	WLAN Mode: <code>SPRef</code>

	All other Modes: TPRef
State Saved	Saved in instrument state
Range	Total Pwr Reference PSD Reference Spectrum Peak Reference

Power Ref


Selects the power reference type:


Option	SCPI	Description
Left & Right Carriers	LRCarriers	<p>Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Only the frequency ranges of leftmost and rightmost carriers are swept and measured. Other frequency ranges in the RFBW are not measured. Left and right carriers are determined based on the carrier center frequencies</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are NaN. Relative limits are not evaluated</p>
Max Power Carrier	MPCarrier	<p>Maximum carrier power is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN. Relative limits are not evaluated</p>
Carrier Index	CINdex	<p>Power of the specified carrier is the reference of measurement. Only the frequency range of the specified carrier is swept and measured, and other frequency ranges in the RFBW are not measured</p> <p>If Measure Carriers of this carrier index is off, the reference power and all the relative power results are NaN. Relative limits are not evaluated</p>
Manual	MANual	<p>Power or PSD specified by the user is the reference of measurement. No carriers are measured and the manually specified value is used as reference</p>
Max Power Carrier in Sub-block	MPCSubblock	<p>Maximum carrier power among the sub-block carriers with Measure Carrier On is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NaN, and these relative limits are not evaluated</p>
RF Bandwidth	RFBandwidth	<p>Power or PSD of total of the RF bandwidth is the reference of measurement. Power not only in the carrier bands but also carrier gaps is integrated into the reference power. Measure Carrier On/Off does not affect the reference power frequency range because RF bandwidth is determined by the carrier configuration</p>
Aggregated Chan BW LTE-A and 5G NR Modes only	ACBandwidth	<p>The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. Measure Carrier On/Off affects the reference power frequency range</p>

Option	SCPI	Description								
Left & Right Sub-blocks 5G NR Mode only	LRSubblocks	If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN and Relative limits are not evaluated								
		The reference depends on the Number of Component Carriers (CC) and Carrier Allocation as follows:								
		<table><tr><th>Number of CCs</th><th>Reference</th></tr><tr><td>1</td><td>The carrier power is the reference</td></tr><tr><td>2 or more, and Carrier Allocation is Contiguous</td><td>Aggregated Channel power is the reference</td></tr><tr><td>2 or more, and Carrier Allocation is Non-Contiguous</td><td>Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration</td></tr></table>	Number of CCs	Reference	1	The carrier power is the reference	2 or more, and Carrier Allocation is Contiguous	Aggregated Channel power is the reference	2 or more, and Carrier Allocation is Non-Contiguous	Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration
		Number of CCs	Reference							
		1	The carrier power is the reference							
2 or more, and Carrier Allocation is Contiguous	Aggregated Channel power is the reference									
2 or more, and Carrier Allocation is Non-Contiguous	Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration									


The powers of carriers are not included in the reference power when their Measure Carriers are **Off**. When Measure Carriers of all the carriers in a sub-block are **Off**, the reference power and all the relative power results are **NaN**. Therefore, relative limits are not evaluated.


Meas Type = Total Power Ref

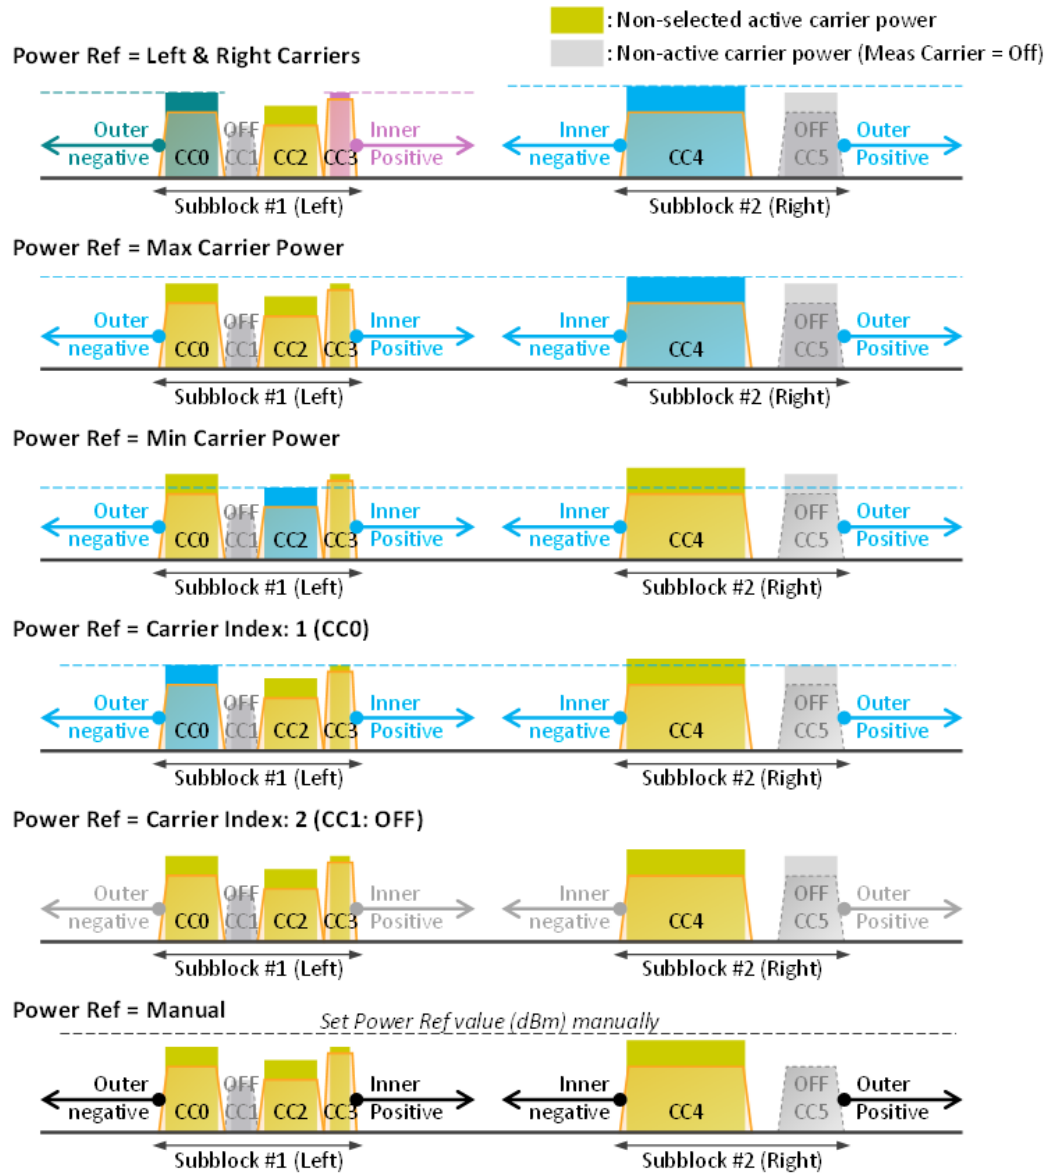

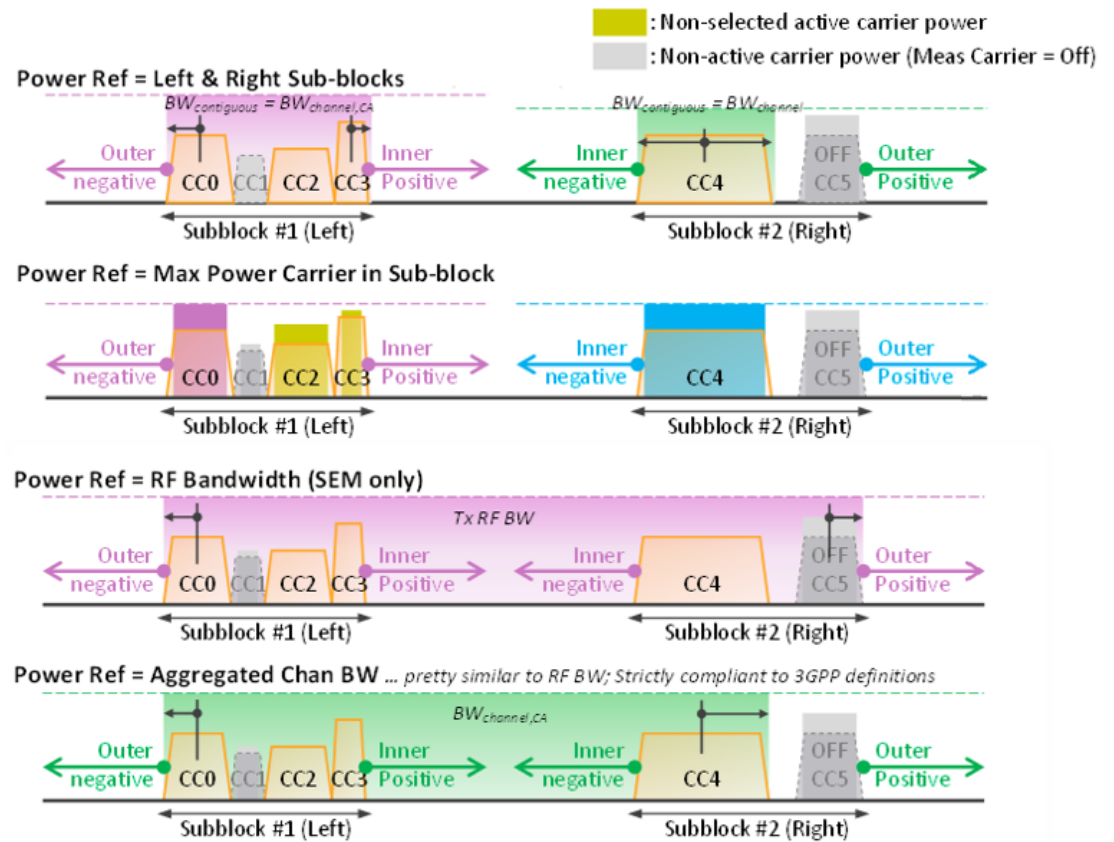

Meas Type = PSD Ref

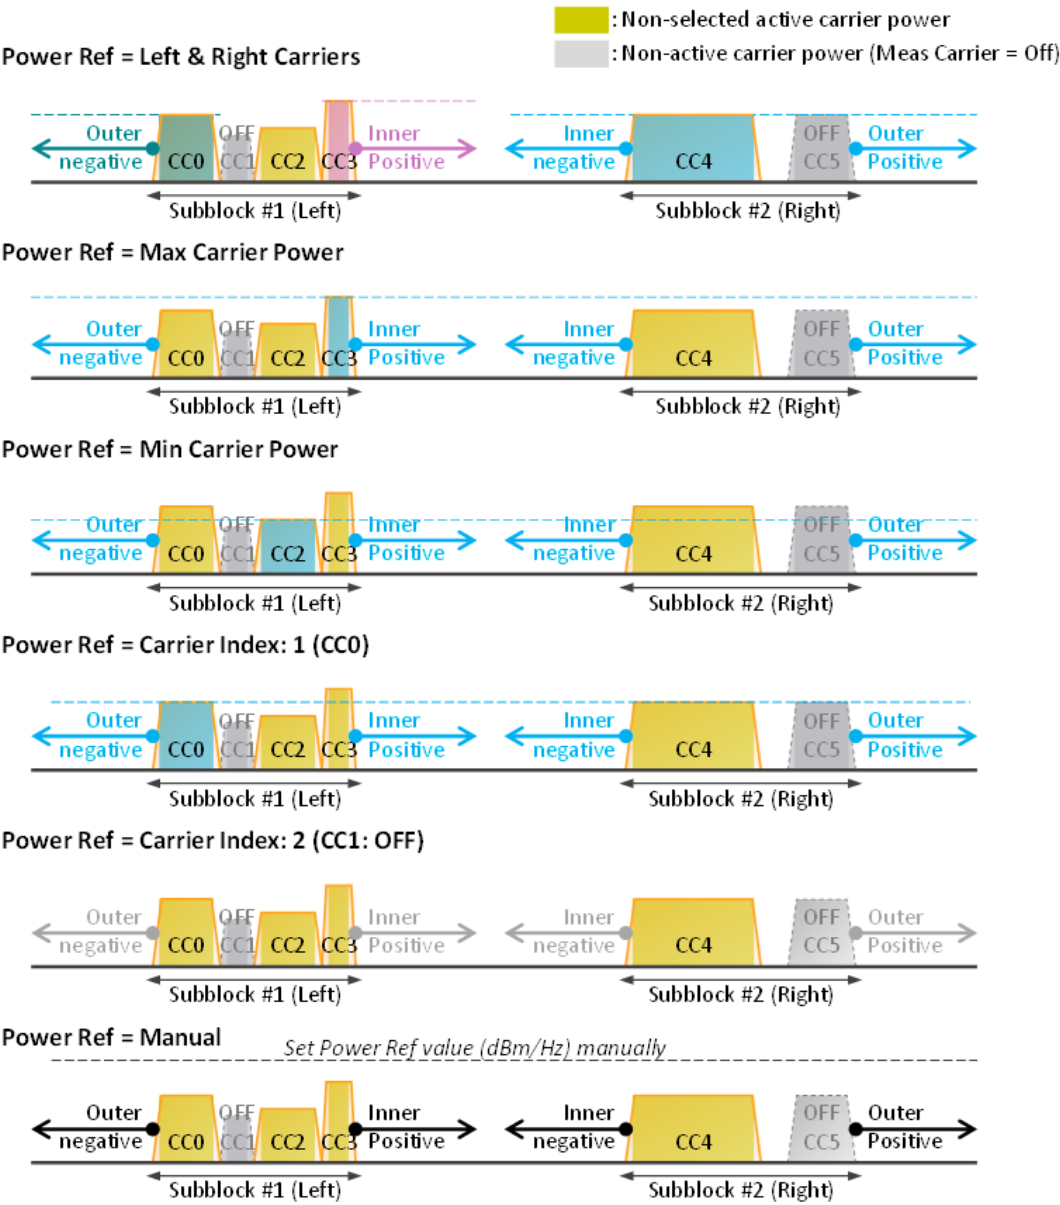

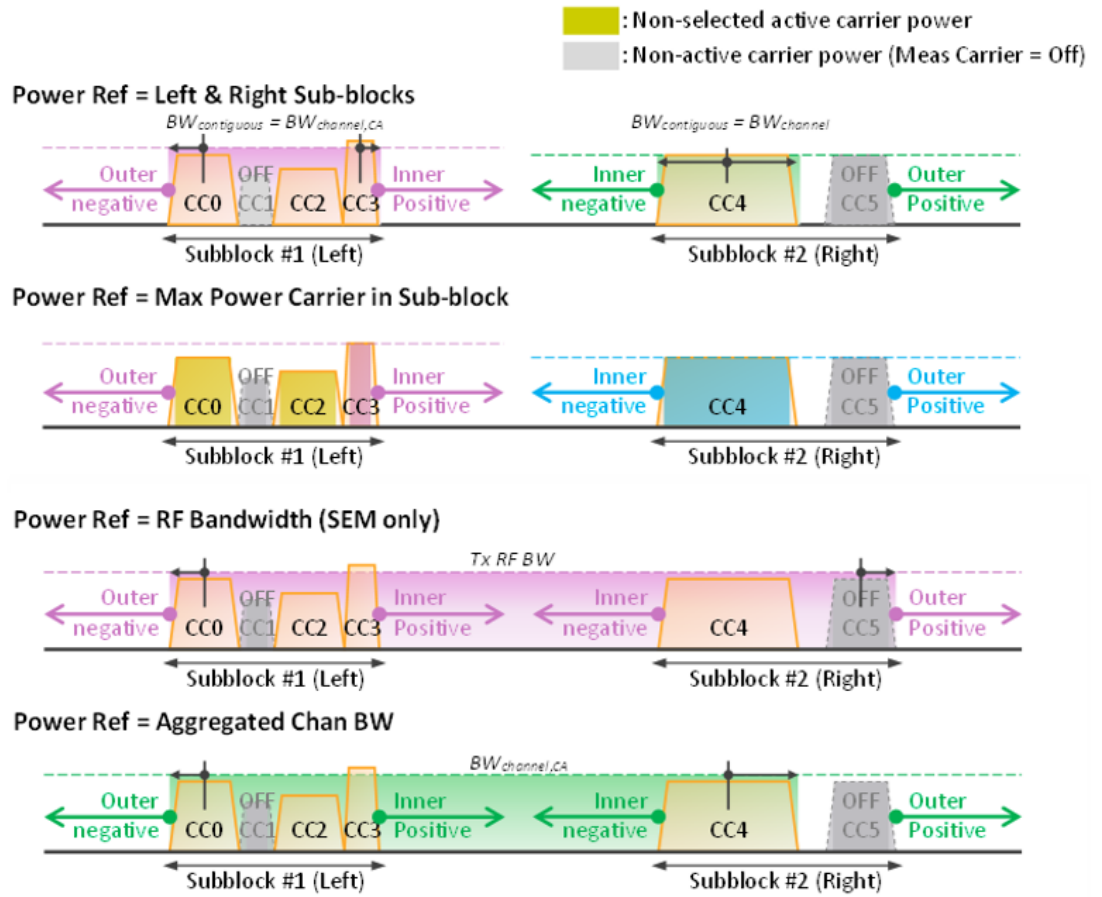

Remote Command	<pre>[:SENSe]:SEMask:CARRier:PREference:TYPE LRCarriers MPCarrier CINDEX MANual MPCSubblock RFBandwidth ACBbandwidth LRSubblocks</pre> <p>For option details, see above</p> <pre>[:SENSe]:SEMask:CARRier:PREference:TYPE?</pre>
Example	<pre>:SEM:CARR:REF:TYPE CIND</pre> <pre>:SEM:CARR:REF:TYPE?</pre>
Notes	<p>LRSubblocks is available only in 5G NR Mode</p> <p>ACBbandwidth is available only in LTE-A and 5G NR Modes</p>
Dependencies	Only available in MSR, LTE-A and 5G NR Modes
Preset	MPCarrier
State Saved	Saved in instrument state
Range	Left & Right Carriers Max Power Carriers Carrier Index Manual Max Power Carrier in Sub-block RF Bandwidth Aggregated Chan BW Left & Right Sub-blocks
Remote Command	<pre>[:SENSe]:SEMask:CARRier:AUTO[:STATE] OFF ON 1 0</pre> <pre>[:SENSe]:SEMask:CARRier:AUTO[:STATE]?</pre>

3 5G NR Mode

3.5 SEM Measurement

Example	<code>:SEM:CARR:AUTO OFF</code> <code>:SEM:CARR:AUTO?</code>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

Carrier Index

Sets carrier index of the reference power. The power of the carrier selected by this index becomes reference power when "Power Ref" on page 2279 is Carrier Index.

Remote Command	<code>[:SENSe]:SEMask:CARRier:INDex <integer></code> <code>[:SENSe]:SEMask:CARRier:INDex?</code>
Example	<code>:SEM:CARR:IND 1</code> <code>:SEM:CARR:IND?</code>
Dependencies	Available only in MSR, LTE-A and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	MSR Mode: 1/100 LTEAFDD,LTEATDD Mode:1/5 5G NR Mode: 16

Total Power Ref

Sets the power in the carrier (ref channel) that is used to compute the relative power values for the offsets. For modes other than MSR, LTEAFDD, LTEATDD, and 5G NR, when **Reference Power** is set to Measured, this value is set to the measured carrier reference power. When set to Manual, the result takes on the last measured value, or can be manually entered.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power readouts of the two carriers is used for computing the relative power values for the offset.

Remote Command	<code>[:SENSe]:SEMask:CARRier[:POWer] <real></code> <code>[:SENSe]:SEMask:CARRier[:POWer]?</code>
Example	<code>:SEM:CARR 100dBm</code> <code>:SEM:CARR?</code>
Notes	The min and max values given are for "Measurement Type" on page 2278 = Total Pwr Ref
Couplings	Coupled with Measurement Type . Active when Measurement Type is set to Total Power Ref. Otherwise, grayed-out

	In MSR, LTE-A and 5G NR Modes, the control is active when Measurement Type is set to Total Power and Power Ref is set to Manual
Preset	Measured carrier reference power
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Annotation	Value is displayed on the left top of the Results window with the Channel Integ BW

PSD Ref

Sets the power spectral density in the carrier that is used to compute the relative power spectral density values for the offsets when "**Measurement Type**" on page 2278 is set to PSD Ref. When the state is set to **Auto**, this will be set to the measured carrier power spectral density.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power density readouts of the two carriers is used for computing the relative PSD values for the offset.

Remote Command	<code>[:SENSe]:SEMask:CARRier:CPsD <real></code> <code>[:SENSe]:SEMask:CARRier:CPsD?</code>
Example	<code>:SEM:CARR:CPsD -80</code> <code>:SEM:CARR:CPsD?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with " Measurement Type " on page 2278. Active if Measurement Type is PSD. Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when Measurement Type is PSD and Power Ref is Manual
Preset	Measured carrier PSD reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is PSD Ref, the string is "PSD Ref" with BOLD font, otherwise, hide annotation

Spectrum Pk Ref

Sets the spectrum peak power in the carrier that is used to compute the relative power spectral density values for the offsets when "**Measurement Type**" on page 2278 is Spectrum Peak. When the state is set to **Auto**, this is set to the measured carrier spectrum peak power. When set to **Manual**, the result takes on the last measured value, or can be manually entered

3 5G NR Mode

3.5 SEM Measurement

Remote Command	<code>[:SENSe]:SEMAsk:CARRier:PEAK[:POWer] <real></code> <code>[:SENSe]:SEMAsk:CARRier:PEAK[:POWer]?</code>
Example	<code>:SEM:CARR:PEAK -80</code> <code>:SEM:CARR:PEAK:POWER?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with "Measurement Type" on page 2278. Active when Measurement Type is "Spectrum Peak Ref". Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when Measurement Type is Spectrum Peak Ref and Power Ref is Manual
Preset	Measured carrier Spectrum Peak reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is Spectrum Peak Ref, the string is "Spectrum Peak Ref" with BOLD font, otherwise, hide annotation

Measure All Ref Carriers

When **ON**, all reference carriers configured are always measured irrespective of Measure Carrier on/off settings.

Remote Command	<code>[:SENSe]:SEMAsk:CARRier:MEASure:ALL ON OFF 1 0</code> <code>[:SENSe]:SEMAsk:CARRier:MEASure:ALL?</code>
Example	<code>:SEM:CARR:MEAS:ALL 1</code> <code>:SEM:CARR:MEAS:ALL?</code>
Dependencies	Only available in MSR, LTE-A and 5G NR Modes
Preset	0
State Saved	Saved in instrument state

Offset/Limits Config Table

This function is the same as "Offset/Limits Config Table" on page 1157 under the "Settings" on page 1153 tab.

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

3.5.23.4 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal. This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "[Multi Channel Synchronous Acquisition \(UXM Only\)](#)" on page 890

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	<p>This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B</p> <p>When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed.</p> <p>When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused"</p> <p>Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration</p>
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO

	13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCulate:<meas>:MTRace? <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at **"Input Port (UXM)" on page 2456** is assigned to a trace. This setting is valid when **"Multi Channel Synchronous Acquisition (UXM Only)" on page 2457** is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12 :TRACe[1] 2 3:<meas>:CHANne1?
Example	For the ACP measurement Trace 2 :TRAC2:ACP:CHAN CHAN2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

EIRP (Synchronous Acquisition) (UXM Only)

Enables you to preset the following parameters. Preset is made such that Trace 3 becomes the sum of Trace 1 and Trace 2 to which data from Channel 1 and Channel 2 are assigned. The measurement result is calculated based on Trace 3.

This parameter is useful when performing the EIRP measurement by acquiring signals from two ports simultaneously.

Multi Channel Synchronous Acquisition	On
--	-----------

Target trace parameters are those of the PowerSuite measurements supporting multi channel synchronous acquisition in the UXM model E7515B.

	Trace 1	Trace 2	Trace 3
Channel Assignment	Channel 1	Channel 2	Channel 1
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	Active	Active
Math Function	Off	Off	Power Sum
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2
Math Trace	Trace 3		

Remote Command	<code>[:SENSe] :RADio: MCHannel :PRESet :EIRP</code>
----------------	--

Example	<code>:RAD:MCH:PRES:EIRP</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

Restore Defaults (UXM Only)

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off		
Measure Trace		Trace1		
	Trace 1	Trace 2	Trace 3	
View/Blank	Active	Blank	Blank	
Math Function	Off	Off	Off	

Remote Command	<code>[:SENSe]:RADio:MCHannel:PRESet:DEFault</code>
Example	<code>:RAD:MCH:PRES:DEF</code>
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

Interfering Signal Present

Sets whether interference signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in Adjacent Channel, Spectrum Emission Mask and Spurious Emissions measurements.

NOTE This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

Freq Offset From Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min	0 Hz
Max	400 MHz

Span

Sets the span of the interference signal for intermodulation tests.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SPAN <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min	200 kHz
Max	400 MHz

Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SIDE NEGative POSitive</code> <code>[:SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	<code>POSitive</code>
State Saved	Saved in instrument state

Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- Inner – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- Outer – The interfering signal exists at either of the outer regions

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:REGion INNER OUTER</code> <code>[:SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	<code>OUTer</code>
State Saved	Saved in instrument state

3.5.23.5 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code>
----------------	---

	<code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONtiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	<code>CONtiguous</code>
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

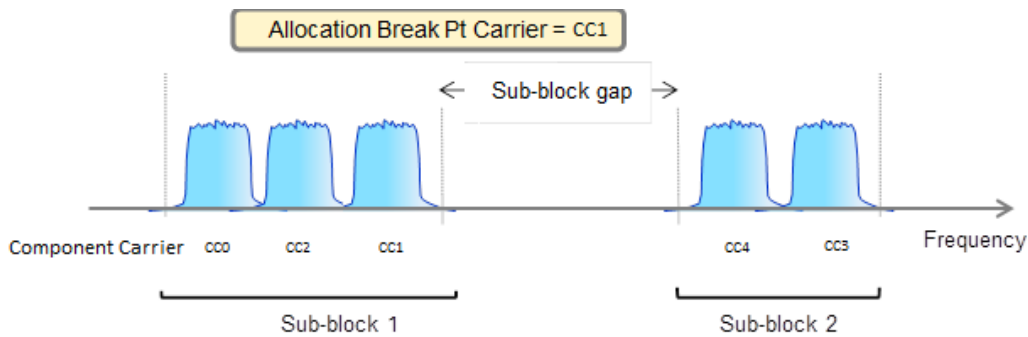

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	
	Carrier Aggregation	
	Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink

	Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> Option B25: B20M Option B40: B35M Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> 50 MHz and 100 MHz: FR1 and FR2

	<ul style="list-style-type: none"> – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action “Apply Preset (to All CCs)” is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	<p>Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers</p> <p>Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANual</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
----------------	---

Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE

This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq> [:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?		
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?		
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS		
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table		
	When Freq Range is FR1		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.500	4.515
	10 MHz	9.360	9.375
	15 MHz	14.220	14.235
	20 MHz	19.080	19.095

	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
When Freq Range is FR2			
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS

Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with "SCS Enabled" on page 1831.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.5.23.6 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>
Example	<code>:RAD:STAN:PRES:FREQ:RANG FR1</code> <code>:RAD:STAN:PRES:FREQ:RANG?</code>
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 1263 depending on the currently selected value.
Dependencies	Available selections differ depending on Bandwidth as follows:

	Bandwidth	FR
	5 MHz, ..., 100 MHz	FR1
	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1
	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
	When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable	
Preset	FR1	
State Saved	Yes	
Range	FR1 FR2 FR2-1 FR2-2	
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet:FRANge	

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
	60,...90 MHz					
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press” Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEfined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "Duplex Mode" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRESet:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2

3 5G NR Mode

3.5 SEM Measurement

Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?
Example	:RAD:STAN:PRES:TRAN:PER P0_5MS :RAD:STAN:PRES:TRAN:PER?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer> [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?
Example	:RAD:STAN:PRES:DLIN:SLOT:COUN 1 :RAD:STAN:PRES:DLIN:SLOT:COUN?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4

State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	“DDDDDDDSUU”

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</pre> <p>For option details, see "Selections & Dependencies" on page 1268</p> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</pre>
Example	<pre>:RAD:STAN:PRESet:SCS SCS30K</pre> <pre>:RAD:STAN:PRESet:SCS?</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO 0</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO?</pre>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 1268
Preset	<pre>SCS30K</pre> <pre>ON</pre>
State Saved	Yes Yes
Range	u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTM1DOT1 DLTM1DOT2 DLTM2 DLTM2Q16 DLTM2QPS DLTM2A DLTM2B DLTM3DOT1 DLTM3DOT1Q16 DLTM3DOT1QPS DLTM3DOT1A DLTM3DOT1B DLTM3DOT2 DLTM3DOT3 FPIBPSK DLTM1DOT1P1 DLTM1DOT1L2</code> For selection details, see "Available Selections" on page 1270 <code>[:SENSe]:RADio:STANdard:PRESet:RBALloc?</code>
Example	<code>:RAD:STAN:PREs:RBAL DLTM1DOT1</code> <code>:RAD:STAN:PREs:RBAL?</code>
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 1270
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM

Group	Configuration
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓

3 5G NR Mode
3.5 SEM Measurement

	FR	FR1	FR2	FR2-1	FR2-2
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP- OFDM	DFT-s- OFDM	CP- OFDM	DFT-s- OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM				
	Fulfilled Pi/2 BPSK		✓	✓	✓
DL NR- TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPE CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPE?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 1274</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PRESet:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN?</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PRESet:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 1274
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	f ≤ 1.0 GHz	FT01
	< f ≤ 3.0 GHz	F1T03
	3.0 < f ≤ 4.2 GHz	F3T04P2
	4.2 < f ≤ 6.0 GHz	F4P2T06
	6.0 < f ≤ 7.125 GHz	F6T07
FR2	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
	52.6 < f ≤ 71.0 GHz	F52T071
FR2-1	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
FR2-2	52.6 < f ≤ 71.0 GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRES:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS

- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	<code>BWARea</code>
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code>

	<code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	<code>NR</code>
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA
	Uplink
Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:ULIN:ACH NR</code> <code>:RAD:STAN:PRES:ULIN:ACH?</code>
Preset	<code>NR</code>
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	<code>PUS</code>
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot

3 5G NR Mode

3.5 SEM Measurement

FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAMe GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr),	n/a

3 5G NR Mode

3.5 SEM Measurement

Assumed Adj Channels (for ACP, FR1)	Cat A Local Area BS, Cat B Local Area BS NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When **"Apply Preset (to All CCs)" on page 3322** is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat A MR BS, Cat B MR BS	None, $f \leq 1.0$ GHz,			Table 6.6.4.5.4-1

3 5G NR Mode
3.5 SEM Measurement

1-0		1.0 < f ≤ 3.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.6.4.5.4-3	
		3.0 < f ≤ 4.2 GHz,				
		4.2 < f ≤ 6.0 GHz,				
		6.0 < f ≤ 7.125 GHz				
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz,			Table 6.6.4.5.4-2	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.4-4
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz,			Table 6.6.4.5.5-1	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.5-2
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A WA BS	f ≤ 1.0 GHz			Table 6.7.4.5.1.1-1	
		None, 1.0 < f ≤ 3.0 GHz				Table 6.7.4.5.1.1-2
3.0 < f ≤ 4.2 GHz						
4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.1-3				
f ≤ 1.0 GHz			Table 6.7.4.5.1.1-4			
Cat B WA BS		f ≤ 1.0 GHz		Table 6.7.4.5.1.2-1		
		None, 1.0 < f ≤ 3.0	Table 6.7.4.5.1.2-2			

			GHz			
			3.0 < f ≤ 4.2			Table
			GHz			6.7.4.5.1.2-3
			4.2 < f ≤ 6.0			Table
			GHz			6.7.4.5.1.2-4
			6.0 < f ≤ 7.125			Table
			GHz			6.7.4.5.1.2-5
		Cat A MR BS, Cat B MR BS	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-1
			3.0 < f ≤ 4.2			Table
			GHz			6.7.4.5.1.4-2
			4.2 < f ≤ 6.0			Table
			GHz			6.7.4.5.1.4-3
			6.0 < f ≤ 7.125			Table
			GHz			6.7.4.5.1.4-3a
		Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-4
			3.0 < f ≤ 4.2			Table
			GHz			6.7.4.5.1.4-5
			4.2 < f ≤ 6.0			Table
			GHz			6.7.4.5.1.4-6
			6.0 < f ≤ 7.125			Table
			GHz			6.7.4.5.1.4-7
		Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.5-1
			3.0 < f ≤ 4.2			Table
			GHz			6.7.4.5.1.5-2
			4.2 < f ≤ 6.0			Table
			GHz			6.7.4.5.1.5-3
			6.0 < f ≤ 7.125			Table
			GHz			6.7.4.5.1.5-4
FR2	2-0	Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P _r), Cat A LA BS	None, 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.2-1	Table 6.7.4.5.2.2-1 Table 6.7.4.5.2.2-2

3 5G NR Mode

3.5 SEM Measurement

	43.5 < f ≤ 48.2 GHz	Table 6.7.4.5.2.2-3
	52.6 < f ≤ 71.0 GHz	Table 6.7.4.5.2.2-4
Cat B WA BS,	None,	Table
Cat B MR BS,	24.25 < f ≤ 29.5	6.7.4.5.2.3-1
Cat B MR BS (Low P _r),	GHz	Table
Cat B LA BS	37.0 < f ≤ 43.5 GHz	6.7.4.5.2.3-2
	43.5 < f ≤ 48.2 GHz	Table 6.7.4.5.2.3-3
	52.6 < f ≤ 71.0 GHz	Table 6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA, NR + UTRA	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
FR2		TS38.521-2 v.17.2.0 (2023-03)	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1 v.17.8.0 (2023-03)	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values		User Defined Duplex mode		
		TDD / FDD Duplex Mode				
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)

3 5G NR Mode

3.5 SEM Measurement

Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope =

Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1 ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1 ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

3 5G NR Mode
3.5 SEM Measurement

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section ["N_Grid_Size \(Display Only\)" on page 1828](#),
 $N_{sc}^{RB} = 12$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel,CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - StoC: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR Offset	

Offset Freq State	Downlink	FR1	A, B	On
			C, ..., L	Off
		FR2	A	On
			B, ..., L	Off
	Uplink		A	On
			B, ..., L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 \cdot BW_{CC}$
			C, ..., L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ..., L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC} When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
Integ BW	Downlink		All	$\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{SC}^{RB} \}$
	Uplink	FR1	All	$\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz] \}$
		FR2	All	When Num of CCs = 1: $\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz] \}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \cdot BW_{GB}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \cdot BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$$N_{sc}^{RB} = 12$$

Res BW State	All	Auto
-----------------	-----	------

3 5G NR Mode

3.5 SEM Measurement

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
		1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
		$43.5 < f \leq 48.2$	Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$52.6 < f \leq 71.0$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

3 5G NR Mode

3.5 SEM Measurement

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
			None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
			37.0 < f ≤ 43.5		
			43.5 < f ≤ 48.2		
		100, 400, 800, 1600, 2000 MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$,	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66)
						When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB (= -16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

3 5G NR Mode

3.5 SEM Measurement

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset		Assumed Adj Chan		EtoC: Carrier Edge to Meas BW Center

Frequency Define				
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ..., L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ..., L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq		A	= 2.5 MHz	
		B	= 7.5 MHz	
		C	= 0.5 x Bandwidth	
		D	= 1.5 x Bandwidth	
		E, F	0 Hz	
Integ BW	Downlink	A, B	4.50 MHz	
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$	
	Uplink	A, B	3.84 MHz	
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$	
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State		All	Auto	
Res BW		All	Automatically coupled with the Res BW value under the BW menu	
Video BW State		All	Auto	
Video BW		All	Automatically coupled with the Video BW value under the BW menu	
Offset Side		All	Both	
Method and Filter Alpha	Downlink	All	Integration BW	
	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22	
		C, ..., L	Integration BW	

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
		1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$,	All	$-44.2 \text{ dB} (= -45 + \text{TT } 0.8)$

1-O	25, ..., 100 MHz	3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
		3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
		6.0 < f ≤ 7.125	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for 6.0 < f ≤ 7.125 GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm

3 5G NR Mode

3.5 SEM Measurement

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = "NR (same BW)" for DL/UL, "E-UTRA" or "NR + E-UTRA" for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 1306
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1306
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1306
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	C, ... , L	1307 0 Hz
	A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 1307
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 1306

Table 1a Offset Freq State

Preset Configuration			Preset Value			
Direction	FR	Bandwidth	Wgap(Sub- block gap) (MHz)		Power Ref Type(*)	
				Offset Enabled A B	A B	

3 5G NR Mode
3.5 SEM Measurement

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration	Offset	Preset Value
----------------------	--------	--------------

Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
Uplink	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			100, 400, 800, 1600, 2000(**) MHz	B	

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BSType	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel

3 5G NR Mode
3.5 SEM Measurement

Abs Limit	FR1	1-C	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Cat A WA BS	All	-13 + 10 LOG(BW _{config}) dBm		
				Cat B WA BS	All	-15 + 10 LOG(BW _{config}) dBm		
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-25 + 10 LOG(BW _{config}) dBm		
				Cat A LA BS, Cat B LA BS	All	-32 + 10 LOG(BW _{config}) dBm		
				1-0		Cat A WA BS	All	-4 + 10 LOG(BW _{config}) dBm
						Cat B WA BS	All	-6 + 10 LOG(BW _{config}) dBm
						Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-16 + 10 LOG(BW _{config}) dBm
						Cat A LA BS, Cat B LA BS	All	-23 + 10 LOG(BW _{config}) dBm
		FR2	2-0	None, 24.25 < f ≤ 29.5, 37.0 < f ≤ 43.5	Cat A WA BS, Cat B WA BS	All	-10.3 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-17.3 + 10 LOG(BW _{config}) dBm	
					Cat A LA BS, Cat B LA BS	All	-17.3 + 10 LOG(BW _{config}) dBm	
				43.5 < f ≤ 48.2	Cat A WA BS, Cat B WA BS	All	-10.1 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS	All	-17.1 + 10 LOG(BW _{config}) dBm	

52.6 < f ≤ 71.0 (**)	(Low Pr)		
	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BSType	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤	All	-43.8 dB = (-45 + TT 1.2)
				6.0 < f ≤	All	-36.8 dB =

3 5G NR Mode

3.5 SEM Measurement

FR2	2-O	50, 100, 200 400 MHz	7.125		(-45 + TT 8.2)
			None, 24.25 < f ≤ 29.5	All	-25.7 dB = (-28 + TT 2.3)
			37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
		100, 400, 800, 1600, 2000 (**) MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 1314
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 1314
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1314
			D, ... , L	0 Hz

Integ BW	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1314
	D, ... , L	Same value as Offset C
Offset Side	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 1314

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			$5 \leq \text{Wgap} < 10$	✓		(+)	Norm	Norm	Norm
			$10 \leq \text{Wgap}$	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth \leq Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth \leq Wgap".

(++) Same as the rows of "Wgap < 5", " $5 \leq \text{Wgap} < 10$ ", and " $5 \leq \text{Wgap}$ ".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	$= 0.5 \times \text{Bandwidth}$	$\max_{SCS}\{N_{RB}(\text{BW}_{CC,FR,SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

3 5G NR Mode

3.5 SEM Measurement

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameter for Uplink	Preset Configuration		Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class	
Fail Mask			All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	-50 dBm
Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A -32.2 dB (= -33 + TT 0.8)
			B	-35.2 dB (= -36 + TT 0.8)
			C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A -32.2 dB (= -33 + TT 0.8)
			B	-35.2 dB (= -36 + TT 0.8)
			C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A -32.2 dB (= -33 + TT 0.8)
			B	-35.2 dB (= -36 + TT 0.8)
			C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW

Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

3 5G NR Mode
3.5 SEM Measurement

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

3 5G NR Mode
3.5 SEM Measurement

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
--------	---------	------------------	--	--	-----------------	--	--	-----------	--	---------	--	--

A	✓		0.05		5.05		0.051		2		
B	✓		5.05		10.05		0.1		1		
C	✓		10.5		40		1		1		
D	✓		40		100		1		1		
E-L			100		500		1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			1	1
D	✓	40			100			1	1
E-L		100			500			1	1

3 5G NR Mode
3.5 SEM Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and f ≤ 1.0 GHz & 1.0 < f ≤ 3.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start	Stop	Coupling	Start	Stop	Coupling		Start	Stop	Coupling	

		(dBm)	(dBm)		(dB)	(dB)			(dBm)	(dBm)		
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.5 SEM Measurement

B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode
3.5 SEM Measurement

A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			1			1
D	✓	40			100			1			1
E-L		100			500			1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.5 SEM Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			50.05			0.051		2	
B	✓	50.05			100.05			0.1		1	
C	✓	100.5			200			1		1	
D		200			500			1		1	
E-L		200			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

3 5G NR Mode

3.5 SEM Measurement

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.05			200			0.1		1		
D		200			500			0.1		1		
E-L		200			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated,x}} \leq 40$ dBm (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-11.2 \text{ dB} - (7/5) \cdot ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the

Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			0.1	1			
D	✓	40			100			0.1	1			
E-L		100			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – $(7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”. Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			50.05			0.051	2			
B	✓	50.05			100.05			0.1	1			
C	✓	100.5			200			0.1	1			
D		200			500			0.1	1			
E-L		200			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode

3.5 SEM Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-19.2 \text{ dB} - (7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “ -19.2 dB ” is typo and is supposed to be “ -19.2 dBm ”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2

B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		0.1	1
D		200		500		0.1	1
E-L		200		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$x + 1500$			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

3 5G NR Mode
3.5 SEM Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	y + 0.5			1	1
C	✓	y + 5	y + 1500			5	2
D-L		100	500			5	2

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	x + 1500			1	1
C-L		100	500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 * BW_{\text{contiguous}}$
- $y = 2 * BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block[n]}}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

3 5G NR Mode

3.5 SEM Measurement

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn't miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range:	Adjust Range:
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,

		None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$	and $6.0 < f \leq 7.125 \text{ GHz}$
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled
B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 * BW_{\text{Channel,CA}}$$

$$- y = 2 * BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

3 5G NR Mode

3.5 SEM Measurement

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	$-1.79 \text{ dBm} = -5 + TT \text{ 3.21}$	$-1.54 \text{ dBm} = -5 + TT \text{ 3.46}$	TBD	TBD
B_{Lim}	$-9.79 \text{ dBm} = -13 + TT \text{ 3.21}$	$-9.54 \text{ dBm} = -13 + TT \text{ 3.46}$	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW $\leq 400\text{MHz}$)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode
3.5 SEM Measurement

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS
1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)

1	1-0					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+ Span/2	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz		- Start	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode
3.5 SEM Measurement

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category
---	---------	-------------

		All "Cat A" BS				All "Cat B" BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = "All Cat A BS": Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,

BS Category = "All Cat B BS": Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to "27 GHz")

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the "Apply Preset" button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
---	---------	---------------	--------------	------------	------	-----	----------------------	-----	----------------

3 5G NR Mode
3.5 SEM Measurement

1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off

10~ (*) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

#	(*) Range “Enabled” state			
	Adjust Limit Mask for Freq Range (GHz)			
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$
1	✓	✓	✓	✓
2	✓	✓	✓	✓
3	✓	✓	✓	✓
4	✓	✓	✓	✓
5				

Note:

Never “enabled” by the “Apply Preset” button
A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1,

3 5G NR Mode
3.5 SEM Measurement

				TS38.521-1)
6	✓			
7		✓		
8			✓	
9				Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~				

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005 GHz	6 GHz			1 MHz	1	5 MHz	Gaussian
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no	(no

3 5G NR Mode

3.5 SEM Measurement

8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	preset) (no preset)	preset) (no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to "27 GHz")

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the "RB Alloc Preset" selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration NRB for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration NRB for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration NRB for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration NRB for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration NRB for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration NRB for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters

- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

- Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	

3 5G NR Mode

3.5 SEM Measurement

General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2 v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for pi/2 BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),

- Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for Pi/2 BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for Pi/2 BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399
- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
	FR2	TDD	n/a	0 subframe	2 subframes

3 5G NR Mode

3.5 SEM Measurement

Fulfilled-xx / NR-TMx.x	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity	
----------------------------	-------------	-----------------	-----	------------	--	--

Preset Configuration			Preset Value			
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
	FR2	TDD	n/a	0.9286	1.250	n/a
Fulfilled-xx / NR-TMx.x	RF1/RF2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

3 5G NR Mode
3.5 SEM Measurement

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2 ^{-m}	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2 ^{-m}	
			SRS	0.0714	10.0	2 ^{-m}	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2 ^{-m}	10.0	2 ^{-m}	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2 ^{-m} (TBD)	10.0	2 ^{-m}	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu s$ RMS averaging window for making the OFF power. $N = SCS/15$, where SCS is in kHz.
- Uplink: Slot length = $2^{-\mu}$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration			Preset Value
	FR	BS type	Adjust Range (GHz)	
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,	-82.5 dBm / MHz = -85 + TT 2.5

		1-0	6.0 < f ≤ 7.125 GHz None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
	FR2	2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration			Adjust Range (GHz)	Preset Value
	FR	UL ChannelType	Bandwidth		
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

3 5G NR Mode
3.5 SEM Measurement

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	-48.3 dBm = -50 + TT 1.7	
					-48.2 dBm = -50 + TT 1.8	
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	-30 + TT + R dBm (TT, R not yet)	
					± 10.5 dB = $\pm(9 + TT 1.5)$	
					± 10.8 dB = $\pm(9 + TT 1.8)$	
					± 10.7 dB = $\pm(9 + TT 1.7)$	
				40 MHz < BW ≤ 100 MHz	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	± 10.8 dB = $\pm(9 + TT 1.8)$
						± 14 dB (TT not yet)
	Parameter	Preset Configuration				Preset Value
		FR	UL Channel Type	Bandwidth	SCS	
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm	
				30 kHz	-4.2 dBm	
				10 MHz	15 kHz	0.4 dBm
				30 kHz	-0.8 dBm	
			15 MHz	60 kHz	-1.2 dBm	
				15 kHz	1.4 dBm	
				30 kHz	1.2 dBm	
				60 kHz	1.0 dBm	

3 5G NR Mode
3.5 SEM Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

3 5G NR Mode

3.5 SEM Measurement

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
			480 kHz	
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.5.23.7 Advanced

Contains controls for setting advanced instrument functions.

This tab does not appear in EXM, VXT.

Noise Floor Extension

Allows you to turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer Mode), support two states of NFE, Full and Adaptive. The **ON** state (in Modes that do not support Adaptive NFE) matches the FULL state (in Modes that *do* support Adaptive NFE).

In **ON** or FULL NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This usually reduces the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes that support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme amounts of smoothing, and with the average detector, with Average Type set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** **ON**.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

Noise Floor Extension has no effect unless the RF Input is selected, therefore it does nothing when External Mixing is selected.

In Modes that support Adaptive NFE, the default state of NFE is Adaptive. In Modes that do not support Adaptive NFE, the default state of NFE is **OFF**. Prior to the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was **OFF** for all Modes.

With the introduction of Adaptive NFE, the menu control is changed from On|Off to Full|Adaptive|Off. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on and off was retained, and a new command was added to set the state to turn Adaptive On and Off

`[[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0]` is retained, default changed to On for modes which support Adaptive NFE

`[[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0]` is added (for certain Modes), default=On

FULL = `:CORRection:NOISe:FLOor ON` plus
`:CORRection:NOISe:FLOor:ADAPtive ON`

Remote Command	<code>[[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0]</code> <code>[[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the remote command will be accepted without error (but has no effect)
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled via SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset . Turned ON at startup and by Restore Mode Defaults in Modes that support Adaptive. Turned OFF at startup and by Restore Mode Defaults in Modes that do not support Adaptive
State Saved	No
Remote Command	<code>[[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON OFF 1 0]</code> <code>[[:SENSe]:CORRection:NOISe:FLOor:ADAPtive?</code>
Example	First turn NFE on, this is FULL mode: <code>:CORR:NOIS:FLO ON</code> Then set it to Adaptive: <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the remote command is accepted without error (but has no effect)
Couplings	Sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive OFF for backwards compatibility. To turn Adaptive ON , you must issue the commands in the proper order, as shown in the example above

Preset	Not affected by Mode Preset , but set to ON at startup and by Restore Mode Defaults
State Saved	No

More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is **Average**, and the Average Type is set to **Power**.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. **Peak** detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. **Negative peak** detection is not very useful, either. **Sample** detection works well but is never better than the average detector because it does not smooth as well. The **Normal** detector is a combination of peak and negative peak behaviors and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, the power scale (Average Type = **Power**) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with

the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement – those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog that says:

“This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week”

If you **Cancel**, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

Enable Wideband IF for FFT

When **OFF**, the maximum FFT BW is limited to 40 MHz. When **ON**, FFT with more wideband IF is supported depending on the instrument. For example, the max FFT BW is 510 MHz with option B5X. When ON for R10/R20/R40, the max FFT BW is 1GHz.

When this parameter is on and the following conditions are met, the measurement is performed with a single I/Q acquisition.

- Stop Freq of the outermost Offset range is within the available IQ acquisition BW
- Same RBW, VBW, Detector Type settings across all Offset ranges and Carrier
- Sweep Type = FFT and Sweep Time = Auto across all Offset ranges and Carrier

Remote Command	<code>[:SENSe]:SEMask:WBFFt:ENABle ON OFF 1 0</code> <code>[:SENSe]:SEMask:WBFFt:ENABle?</code>
Example	<code>:SEM:WBFF:ENAB 1</code> <code>:SEM:WBFF:ENAB?</code>
Dependencies	The maximum FFT BW depends on the μ W preselector and the current frequency. In hi-band, the μ W preselector must be disabled to apply the FFT with wideband IF. Otherwise, the maximum FFT BW is limited to 40 MHz
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF

3.5.23.8 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "Global Center Freq" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to ON, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched ON, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is ON, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when **"Restore Defaults"** on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.5.24 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time, Continuous/Single, Pause/Resume, X Scale and Number of Points**.

3.5.24.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 1374](#)

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num , the count stops incrementing, but the instrument keeps sweeping
-----------------	--

3 5G NR Mode

3.5 SEM Measurement

	See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep
	The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average , Max Hold , or Min Hold
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVR:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "More Information" on page 1376

Remote Command	<code>:INITiate[:IMMediate]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATus:QUEStionable</code> register bit 9 (<code>INTEgrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the <code>:INIT:REST</code> command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue

Event	Trace Effect
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is k . This k is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This k is used for comparisons with N , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, K , shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N . The displayed value K changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when **:ABORT** is sent, the alignment finishes *before* the abort function is performed, so **:ABORT** does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an **:INIT:IMM** command is received.

Remote Command	:ABORT
Example	:ABOR
Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATUS:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATUS:QUESTionable register bit 9 (INTEgrity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

3.5.24.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

Ref Value

Sets the X reference value.

Remote Command	:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RLEVel <freq> :DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RLEVel?
Example	:DISP:SEMask:WIND:TRAC:X:RLEV 10 :DISP:SEMask:WIND:TRAC:X:RLEV?
Couplings	If " Auto Scaling " on page 1101 is ON , this value is automatically determined by the measurement result.

	If you set this value manually, Auto Scaling automatically changes to OFF
Preset	1.0 GHz
State Saved	Saved in instrument state
Min	-1000 GHz
Max	1000 GHz
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RLEVel</code>

Scale/Div

Sets the horizontal scale.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:PDIVision <freq></code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:PDIVision?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:PDIV 500</code> <code>:DISP:SEM:WIND:TRAC:X:PDIV?</code>
Couplings	If Auto Scaling is ON , this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to OFF
Preset	Automatically Calculated
State Saved	Yes Saved in instrument state
Min	1 Hz
Max	100 GHz
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision</code>

Ref Position

Sets the reference position for the X axis to Left, Center or Right.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:RPOStion?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:RPOS LEFT</code> <code>:DISP:SEM:WIND:TRAC:X:RPOS?</code>
Preset	CENTer
State Saved	Saved in instrument state
Range	Left Center Right
Backwards	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RPOStion</code>

Compatibility
SCPI

Auto Scaling

Toggles the scale coupling function On or Off.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:COUPle?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:COUP ON</code> <code>:DISP:SEM:WIND:TRAC:X:COUP?</code>
Couplings	When Auto Scaling is ON and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set a value to either "Scale/Div" on page 1380 or "Ref Value" on page 1379 manually, Auto Scaling automatically changes to OFF
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPle</code>

3.5.24.3 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

Points

Sets the number of points displayed in the traces. The current value of points is displayed in the bottom-right corner of the display.

Remote Command	<code>[:SENSe]:SEMask:SWEEp:POINts <integer></code> <code>[:SENSe]:SEMask:SWEEp:POINts?</code>
Example	<code>:SEM:SWE:POIN 4001</code> <code>:SEM:SWE:POIN?</code>
Preset	2001
State Saved	Saved in instrument state
Min	201

Max	10001
Annotation	On second line of annotations in bottom right corner

IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[:SENSe]:SWEep:IF:DITHer OFF ON 0 1</code> <code>[:SENSe]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	OFF
State Saved	Saved in instrument state

Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[:SENSe]:SWEep:IMAGeProt OFF ON 0 1</code> <code>[:SENSe]:SWEep:IMAGeProt?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT model M9421A
Preset	ON
State Saved	Saved in instrument state

3.5.25 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

3.5.25.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none">– In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View– When you turn on Image Suppress, Update turns off for all traces except the selected trace For the ACP measurement, when Meas Method is RBW , FAST or FPOwer , Select Trace is disabled
Preset	Trace 1
State Saved	Yes

3.5.25.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "View/Blank" on page 3053 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITe	:TRAC2:TYPE WRIT	See: "Clear/Write" on page 1386
Trace Average	AVERage	:TRAC2:TYPE AVER	See: "Trace Average" on page 1387

Option	Parameter	SCPI Example	Details
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 1388
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 1388

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "View/Blank" on page 3053 state must be set to **Active** (Update: **ON**, Display: **ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "Trace Mode Backwards Compatibility Commands" on page 1384

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 3:<meas>:TYPE?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a Trace Type (by pressing any of the Trace Type selections or sending :TRAC:TYPE) sets the Trace to Active (Update: ON, Display: OFF), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" ([:SENSe] :<meas>:DETECTOR:AUTO?), Detector ([:SENSe] :<meas>:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: "NORMal" with WRITe (Clear Write), "AVERAge" with AVERAge, "POSitive (peak)" with MAXHold, and "NEGative (peak)" with MINHold</p>
Preset	<p>Swept SA and Monitor Spectrum: WRITe</p> <p>All other measurements: AVERAge</p> <p>Following Preset, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under **"View/Blank" on page 3053**.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRACe:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[:SENSe] :AVERage [:STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	WRITE
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	:TRACe[1] 2 ... 6:MODE WRITE MAXHold MINHold VIEW BLANK :TRACe[1] 2 ... 6:MODE?
Backwards Compatibility Notes	<p>The legacy :TRACe:MODE command is retained for backwards compatibility. In conjunction with the legacy :AVERage command, it works as follows:</p> <ul style="list-style-type: none"> – :AVERage ON OFF sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the [:SENSe] :AVERage [:STATe] command description below – :TRACe:MODE WRITE sets :TRACe:TYPE WRITE (Clear/Write) unless average is true, in which case it sets it to :TRACe:TYPE AVERage. It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace – :TRACe:MODE MAXHold sets :TRACe:TYPE MAXHold (Max Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace – :TRACe:MODE MINHold sets :TRACe:TYPE MINHold (Min Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace – :TRACe:MODE VIEW sets :TRACe:UPDate OFF, :TRACe:DISPlay ON, for the selected trace

-
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[:SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending **:TRAC:TYPE WRIT** for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending **:TRAC:TYPE AVER** (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending **:TRAC:TYPE MAXH** for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending **:TRAC:TYPE MINH** for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 3048 had just been selected. The effect is exactly the same as reselecting the current Trace Type again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- Clear/Write: Clear and Write
- Trace Average: Restart Averaging
- Max Hold: Restart Max Hold
- Min Hold: Restart Min Hold

View/Blank

Lets you set the state of the two trace variables: Update and Display. The choices available in this dropdown menu are:

Active	Update and Display both ON
View	Update OFF; Display ON
Blank	Update OFF; Display OFF
Background	Update ON, Display OFF
	Allows a trace to be blanked and continue to update “in the background”, which was not possible in the past

In the Swept SA measurement, a trace with DisplayOFF is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with UpdateOFF is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have UpdateOFF, and Traces 4 and 6 have DisplayOFF.

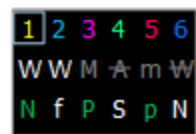

See: "More Information" on page 1391

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 1390 and "Trace Display State On/Off" on page 1390 below
Dependencies	When Signal ID is on, this key is grayed-out

Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending [:SENS] :DET :TRAC) puts the trace in Active (UpdateON and DisplayON), even if that detector was already selected</p> <p>Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (UpdateON and DisplayON), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange</p>
-----------	--

Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
----------------	--

Example	Make trace 1 visible: :TRAC2:DISP 1 Blank trace 3: :TRAC3:DISP 3
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	For Swept SA Measurement (in SA Mode): 1 0 0 0 0 0 ON for Trace 1; OFF for 2–6 For all other measurements: 1 0 0 ON for Trace 1; OFF for 2 & 3
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the :SENSe system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

Trace Settings Table (UXM Only)

Lets you configure the Trace system using a visual utility.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO

	13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3 :CALCulate:<meas>:MTRace? <meas> is the identifier for the current measurement; any one of CHPower ACPower OBWidth SEMask SPURious PVTime
Example	Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at **"Input Port (UXM)" on page 2456** is assigned to a trace. This setting is valid when **"Multi Channel Synchronous Acquisition (UXM Only)" on page 2457** is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12 :TRACe[1] 2 3:<meas>:CHANne1?
Example	For the ACP measurement Trace 2 :TRAC2:ACP:CHAN CHAN2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

3.5.25.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 2610 controls.

- See "How trace math is processed" on page 1400

Remote Command	For option details, see "Trace Math Options" on page 1397 For Swept SA Measurement (in SA Mode): :CALCulate:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real> :CALCulate:MATH? <trace_num> where <trace_num> is any one of: TRACE1 ... TRACE6 For all other measurements: :CALCulate:<meas>:MATH <trace_num>, PDIFference PSUM LOFFset
----------------	---

	<p><code>LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></code></p> <p><code>:CALCulate[:<meas>]:MATH? <trace_num></code></p> <p>where:</p> <p><code><meas></code> is the identifier for the current measurement, and</p> <p><code><trace_num></code> is any one of:</p> <p><code>TRACe1 TRACe2 TRACe3</code></p> <p>Note that the format of the <code>TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p><code>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</code></p> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <p><code>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</code></p> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <p><code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code></p> <p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p><code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code></p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p><code>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</code></p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: <p><code>TRACe1 ... TRACe6</code></p> <ul style="list-style-type: none"> -Set 2 defines the “function”: <p><code>PDIFference PSUM LOFFset LDIFference OFF</code></p> <ul style="list-style-type: none"> - Set 3 is a “trace operand” (1): <p><code>TRACe1 ... TRACe6</code></p> <ul style="list-style-type: none"> - Set 4 is a “trace operand” (2): <p><code>TRACe1 ... TRACe6</code></p> <ul style="list-style-type: none"> - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p>

	The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas
Dependencies	Trace Math is not available if Normalize is on Trace Math is not available if Signal ID is on None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	For Swept SA Measurement (in SA Mode): OFF, TRACE5, TRACE6, 0, 0 OFF, TRACE6, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0 OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE4, 0, 0 OFF, TRACE4, TRACE5, 0, 0 For all other measurements: OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An "f" is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

If neither of the above is true for a given point, then:


- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

3 5G NR Mode
3.5 SEM Measurement

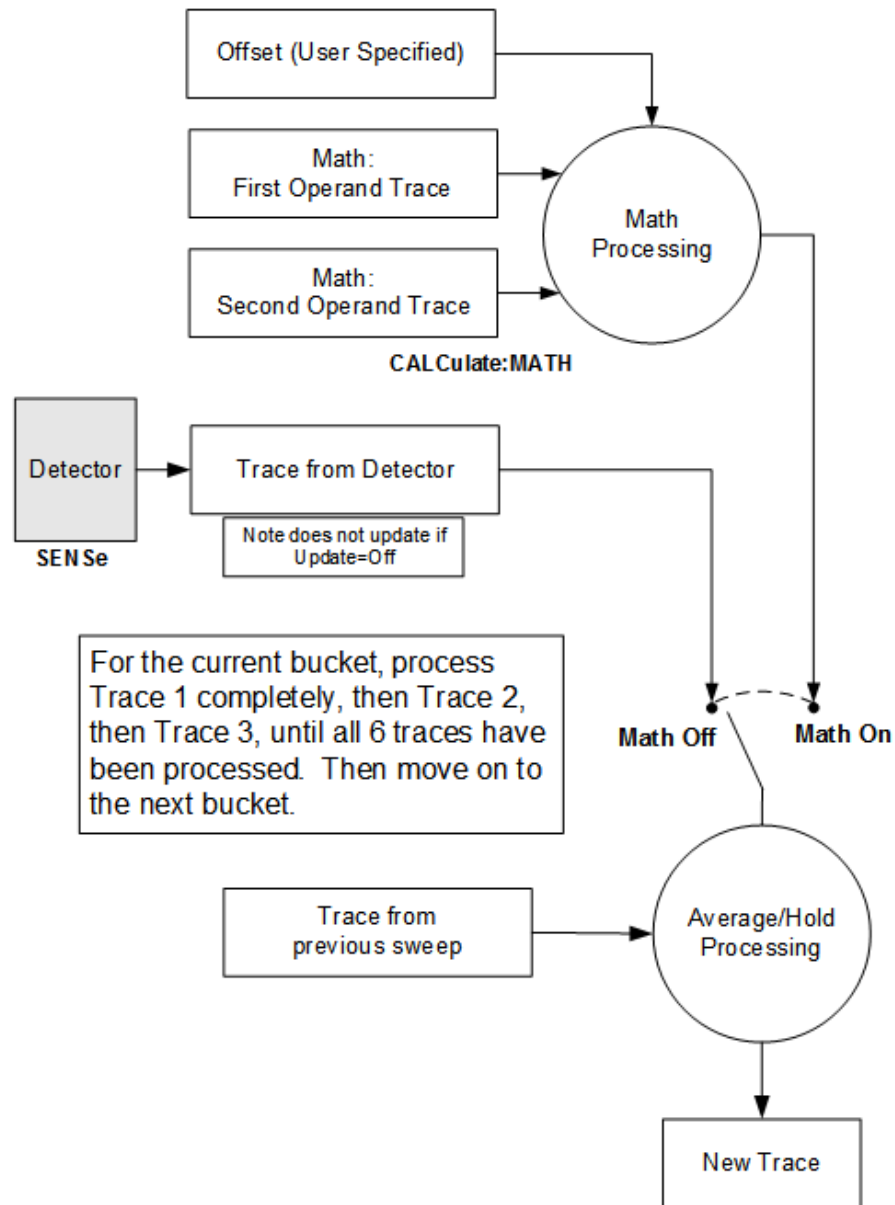

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.5.25.4 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	1
--------	---

To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	2
--------	---

Copy

Executes a Trace Copy based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe:COPIY TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:COPIY TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <pre>:TRAC:COPIY TRACE1,TRACE3</pre>
Notes	<p>The command is of the form:</p> <pre>:TRACe:COPIY <source_trace>,<dest_trace></pre>
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	The destination trace is put in View (Update = Off, Display = On) after the copy
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>TRACE1, TRACE2</pre> <p>For all other measurements:</p> <pre>TRACe1, TRACe2</pre>

Exchange

Executes a Trace Exchange based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode): <code>:TRACe:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</code></p> <p>For all other measurements: <code>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code></p> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the <code>:TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON: <code>:TRAC:EXCH TRACE1,TRACE2</code></p>
Notes	<p>The command is of the form: <code>:TRACe:EXCHange <trace_1>,<trace_2></code></p>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:<meas>]:PRESet:ALL</code>
Example	<code>:TRAC:PRE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads **mintracevalue** into all of the points for all traces, except traces in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	<code>:TRACe[:<meas>]:CLEar:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
From Trace		Trace 1	
To Trace		Trace 2	
	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command :TRACe:<meas>:PRESet:EIRP

Example For OBW Meas:
:TRAC:OBW:PRES:EIRP

3.5.25.5 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a :READ or :FETCh query:

- Trace 1
- Trace 2
- Trace 3

Remote Command :CALCulate:<meas>:MTRace TRACe1 | TRACe2 | TRACe3
:CALCulate:<meas>:MTRace?

<meas> is the identifier for the current measurement; any one of CHPower | ACPower | OBWidth | SEMask | SPURious | PVTime

Example Channel Power
:CALC:CHP:MTR TRAC1
:CALC:CHP:MTR?

3 5G NR Mode
3.5 SEM Measurement

Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.6 Spurious Emissions Measurement

The Spurious Emissions measurement identifies and determines the power level of spurious emissions in certain frequency bands.

Measurement Commands

The general functionality of "CONFigure" on page 4138, "INITiate" on page 4139, "FETCh" on page 4139, "MEASure" on page 4141, and "READ" on page 4140 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF:<Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list measurement commands for this measurement.

Command	Function
<code>:INITiate:SPURious</code>	Initiates a trigger cycle for the <code>SPUR</code> measurement, but does not return any data. You must then use <code>:FETC:SPUR[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings
<code>:CONFigure:SPURious</code>	Returns the long form name of current measurement, in this case, <code>SPURious</code>
<code>:CONFigure:SPURious</code>	Selects <code>SPUR</code> measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 1511
<code>:CONFigure:SPURious:NDEFault</code>	Selects <code>SPUR</code> measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of `n`.

Command	Function
<code>:FETCh:SPURious[n]?</code>	Retrieves the data defined by <code>n</code>
<code>:MEASure:SPURious[n]?</code>	Switches to <code>SPUR</code> measurement, restores default values, starts the measurement, then retrieves the data defined by <code>n</code>
<code>:READ:SPURious[n]?</code>	Starts the measurement, then retrieves the data defined by <code>n</code>

Remote Command Results

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value `n`. Note that these queries are *not* available when viewing the Range Table.

The value of the constant `SCPI_NAN`, mentioned below, is 9.91E37.

3 5G NR Mode

3.6 Spurious Emissions Measurement

n	Return Value
1 or omitted	Returns a variable-length (1 + 6 * Spurs – up to 1201 entries) comma-separated list containing detailed information in the following format: Number of spurs in following list (Integer) <i>[Repeat the following for each spur]</i> <ul style="list-style-type: none"> – Spur # – Range # Spur was located (Integer) – Frequency of Spur (Hz, Float64) – Amplitude of Spur (dBm, Float32) – Absolute Limit (dBm, Float32) – Pass or Fail (1 0, Boolean)
2 – 21 (Average Trace)	Regardless of the Trace selection, returns a comma-separated list of the average trace data for the selected range (where range number = n – 1) using Detector 1. If selected range is not active, SCPI_NAN is returned for each trace data element
22	Returns the number of spurs found for the selected Measured Trace
23 – 42 (Average Trace)	Regardless of the Trace selection, returns a comma-separated list of the average trace data for the selected range (where range number = n – 22) using Detector 2. If selected range is not active or Detector 2 selection is off, SCPI_NAN is returned for each trace data element
43 – 62 (Maximum Hold Trace)	Regardless of the Trace selection, returns a comma-separated list of the maximum hold trace data for the selected range (where range number = n – 42) using Detector 1. If selected range is not active, SCPI_NAN is returned for each trace data element
63 – 82 (Minimum Hold Trace)	Regardless of the Trace selection, returns a comma-separated list of the minimum hold trace data for the selected range (where range number = n – 62) using Detector 1. If selected range is not active, SCPI_NAN is returned for each trace data element
83-102	Reserved
103-122	Reserved
123-142 (Clear/Write Trace)	Regardless of the Trace selection, returns a comma-separated list of the clear/write trace data for the selected range (where range number = n – 122) using Detector 1. If selected range is not active, SCPI_NAN is returned for each trace data element
143-162 (Clear/Write Trace)	Regardless of the Trace selection, returns a comma-separated list of the clear/write trace data for the selected range (where range number = n – 142) using Detector 2. If selected range is not active or Detector 2 selection is off, SCPI_NAN is returned for each trace data element
163-182 (Trace 1)	Returns a comma-separated list of the trace data of Trace 1 for the selected range (where range number = n – 162). If selected range is not active, SCPI_NAN is returned for each trace data element
183-202 (Trace 2)	Returns a comma-separated list of the trace data of Trace 2 for the selected range (where range number = n – 182). If selected range is not active, SCPI_NAN is returned for each trace data element
203-222 (Trace 3)	Returns a comma-separated list of the trace data of Trace 3 for the selected range (where range number = n – 202). If selected range is not active, SCPI_NAN is returned for each trace data element
223	Returns "Marker Table" on page 1414 data as a series of comma separated values in the following form:

n	Return Value
	<code><Marker Number></code> , <code><Marker Trace></code> , <code><X></code> , <code><Y></code> , <code><Reserved></code> , <code><Reserved></code>
	Only markers that are enabled are included. <code><Reserved></code> items are returned as <code>SCPI_NAN</code>
	The data is returned in the current sort order as displayed in the Marker Table

3.6.1 Views

This measurement has two predefined views:

#	Name	SCPI
1	"Graph + Metrics" on page 1461	<code>RESult</code>
2	"All Ranges" on page 1461	<code>ALL</code>

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change, depending on which window is selected.

Remote Command	<code>:DISPlay:SPURious:VIEW[:SElect] RESult ALL</code> <code>:DISPlay:SPURious:VIEW[:SElect]?</code>
Example	<code>:DISP:SPUR:VIEW RANG</code> <code>:DISP:SPUR:VIEW?</code>
Preset	<code>RESult</code>
State Saved	No
Range	Graph + Metrics All Ranges

3.6.1.1 Graph + Metrics

Windows: "Graph" on page 1411, "Table" on page 1412

Select Graph + Metrics to view measurement results.

- The upper window displays a trace of the range that contains the currently selected spur
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

Example	<code>:DISP:SPUR:VIEW RES</code>
---------	----------------------------------

3.6.1.2 All Ranges

Windows: "Graph" on page 1411,

Select All Ranges to view measurement results for all the ranges.

- The upper window displays a merged trace of all the ranges
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

Example :DISP:SPUR:VIEW ALL

3.6.2 Windows

The following windows are available in this measurement:

1. "Graph" on page 1411
2. "Table" on page 1412
3. "All Range Table" on page 1413
4. "Gate" on page 1414
5. "Marker Table" on page 1414

The **Gate** Window is available only when "Gate View On/Off" on page 4061 is **ON** in **Gate Settings** under **Trigger**.


3.6.2.1 Graph

Window #1 & #3

Appears in several Views, as follows:

View	Size	Position
Graph + Metrics	Three fifth, full width	Top
All Ranges	Three fifth, full width	Top
Gate View	One third, full width	Middle

When Graph + Metrics is selected

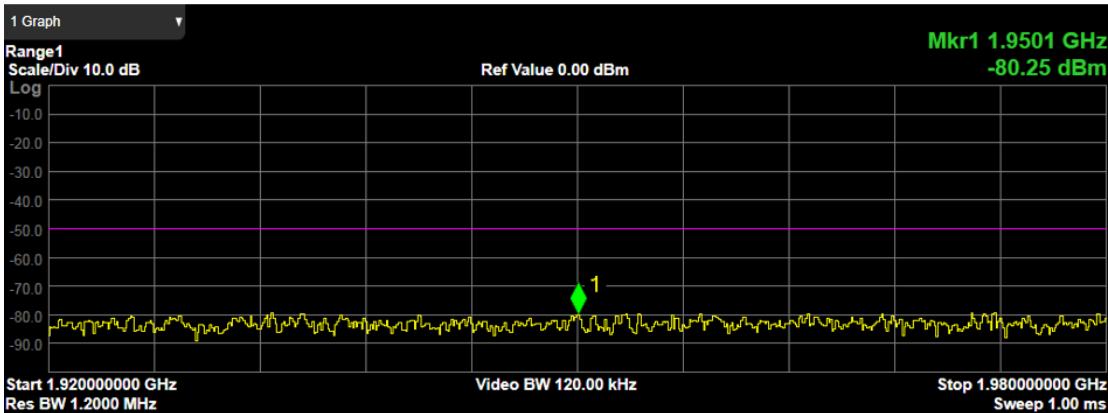

When All Ranges is selected



3.6.2.2 Table

Window #2

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All the spurs listed passed. Any spur that has failed the absolute limit has an 'F' beside it.

Result	Units	Min	Max
Spur	N/A	0	200
Range	N/A	1	20
Frequency	Hz	Analyzer Min	Analyzer Max
Amplitude	dBm	Analyzer Min	Analyzer Max
Limit	dBm	-200	50
Δ Limit	dBm	(Limit - Amplitude)	

Views in which the **Table** window appears:

3 5G NR Mode

3.6 Spurious Emissions Measurement

View	Size	Position
Graph + Metrics	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

2 Table					
					Measure Trace
					Trace Type
					Trace 1
					Trace Average (Active)
Spur	Range	Frequency	Amplitude	Limit	Δ Limit
1	1	1.966 GHz	-77.10 dBm	-50.00 dBm	-27.10 dB
2	1	1.946 GHz	-77.23 dBm	-50.00 dBm	-27.23 dB
3	1	1.935 GHz	-77.29 dBm	-50.00 dBm	-27.29 dB
4	1	1.950 GHz	-77.43 dBm	-50.00 dBm	-27.43 dB
5	1	1.958 GHz	-77.50 dBm	-50.00 dBm	-27.50 dB
6	1	1.973 GHz	-77.60 dBm	-50.00 dBm	-27.60 dB
7	1	1.948 GHz	-77.82 dBm	-50.00 dBm	-27.82 dB

Measure Trace

See ["Measure Trace" on page 2614](#).

Trace Type

This is the trace type (and view/blank parameter) of a trace specified by Measure Trace.

3.6.2.3 All Range Table

Window #4

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All the spurs listed passed. Any spur that has failed the absolute limit displays 'F' beside it.

Result	Units	Min	Max
Spur	N/A	0	200
Range	N/A	1	20
Start Freq	See "Start Freq" on page 1483 under Meas Setup		
Stop Freq	See "Stop Freq" on page 1484 under Meas Setup		
RBW	See "Res BW" on page 1486 under Meas Setup		
Frequency	Hz	Analyzer Min	Analyzer Max
Amplitude	dBm	Analyzer Min	Analyzer Max
Limit	dBm	-200	50
Δ Limit	dBm	(Limit - Amplitude)	

Views in which the **All Range Table** window appears:

View	Size	Position
All Ranges	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

4 All Range Table ▼

Measure Trace							Trace 1
Trace Type							Trace Average (Active)
Spur	Range	Start Freq	Stop Freq	RBW	Frequency	Amplitude	ΔLimit
1	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.965500000 GHz	-77.10 dBm	-27.10 dB
2	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.945600000 GHz	-77.23 dBm	-27.23 dB
3	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.934900000 GHz	-77.29 dBm	-27.29 dB
4	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.949800000 GHz	-77.43 dBm	-27.43 dB
5	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.958000000 GHz	-77.50 dBm	-27.50 dB
6	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.972500000 GHz	-77.60 dBm	-27.60 dB
7	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.947600000 GHz	-77.82 dBm	-27.82 dB

3.6.2.4 Gate

Window #5

Turning on "[Gate View On/Off](#)" on [page 4061](#) displays the **Gate** Window, which allows you to see your gating signal at the same time as the measured data.

Views in which the **Gate** window appears:

View	Size	Position
Gate View	One third, full width	Top

3.6.2.5 Marker Table

Window# 6

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

3.6.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.6.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real></code> <code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:SPUR:WIND:TRAC:Y:RLEV 10 dBm</code> <code>:DISP:SPUR:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 1416 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF . Attenuation is not coupled to "Ref Value" on page 1415.
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>[:SENSe]:SPURious:POWer[:RF]:LEVel</code> <code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl></code> <code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:SPUR:WIND:TRAC:Y:PDIV 10 dB</code> <code>:DISP:SPUR:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 1416 as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 1416 is ON , this value is automatically determined by the measurement result. When you change a value, Auto Scaling automatically changes to OFF .

Preset	Automatically calculated
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision</code>

Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe <rel_ampl></code> <code>:DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change this value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Preset	TOP
State Saved	Saved in instrument state
Range	Top Center Bottom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:SPUR:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:SPUR:WIND:TRAC:Y:COUP?</code>
Couplings	<p>When Auto Scaling is ON, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results</p> <p>When you change the value of "Scale/Div" on page 1415, "Ref Value" on page 1415 or "Scale Range" on page 1416, Auto Scaling automatically changes to OFF</p> <p>When Auto Scaling is OFF, the measurement uses the current reference level settings</p> <p>When Auto Scaling is ON, the instrument automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is $\text{Ref Level} = \text{Absolute Limit} + (2 * \text{Scale/Div})$. All other reference level settings are left as the current base instrument settings</p>
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>[:SENSe]:SPURious:POWer[:RF]:RANGe:AUTO</code> <code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

3.6.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See **"Dual-Attenuator Configurations" on page 1418**
- See **"Single-Attenuator Configuration" on page 1418**

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected

input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

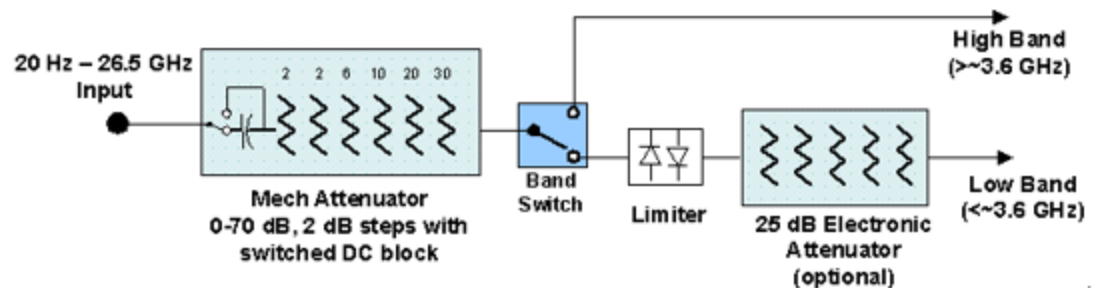


Configuration 2: Mechanical attenuator, no optional electronic attenuator

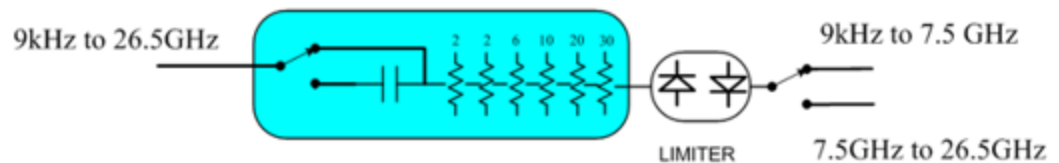

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

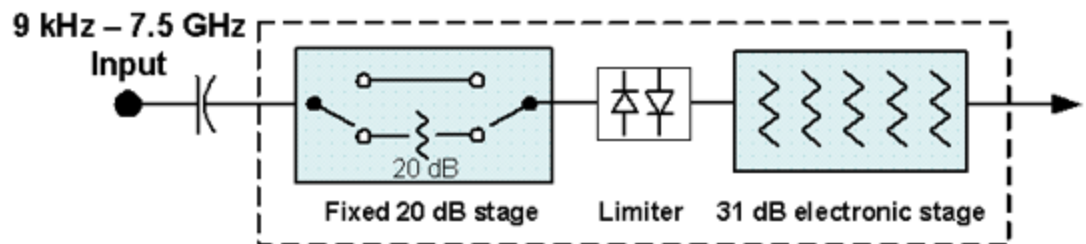

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed:

On the Meas Bar, the field “Atten” displays as follows:

- If the sweep is entirely < 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten
- If the sweep is entirely > 50 GHz, the value shown after “Atten:” is equal to Full Range Atten
- If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “>=” and is equal to Full Range Atten

In the **Amplitude**, **"Y Scale"** on page 3222 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

“Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten

“Total Atten above 50 GHz” followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp"** on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man"** on page 1422

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of

3 5G NR Mode

3.6 Spurious Emissions Measurement

	<p>Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231</p> <p>See "Attenuator Configurations and Auto/Man" on page 1422 for more information on the Auto/Man functionality</p>	
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> – If the USB Preamp is connected to USB, use 0 dB for Mech Atten – Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto) – In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>	
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>	
State Saved	Saved in instrument state	
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p>	

For example:
Dual-Attenuator configuration:
Atten: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB
Single-Attenuator configuration:
A: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)
When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn Auto Mech Atten ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support Auto , such as Swept SA
Preset	<code>ON</code>

Attenuator Configurations and Auto/Man

As described under ["Attenuation" on page 3225](#), there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using ["Mech Atten" on page 1420](#) (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.


See ["Elec Atten" on page 3231](#) for more about “soft” attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

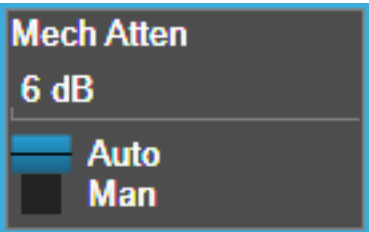

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.
In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

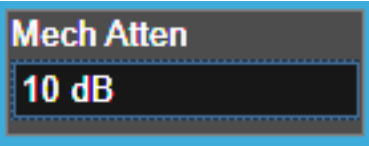

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1425](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the Attenuation

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If **"Internal Preamp"** on page 3251 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If **"LNA"** on page 3253 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 1425
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description

Auto Function

Remote Command	[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1 [:SENSe]:POWer[:RF]:EATTenuation:STATe?
Example	:POW:EATT:STAT ON

	:POW:EATT:STAT?
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator
NOTE	The maximum Center Frequency for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a Center Frequency that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1426](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>

Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWER[:RF]:RANge:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWER[:RF]:RANge:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWER[:RF]:RANge:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1429

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELEctrical	Selects only the electric attenuator to participate in auto

3 5G NR Mode

3.6 Spurious Emissions Measurement

Selection	SCPI	Note
Elec+Mech Atten	COMBined	ranging. This offers less wear on the mechanical attenuator and is usually faster In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</pre> <pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF</pre> <pre>:POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 1428 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	<p>ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p>OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0</pre> <pre>[:SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

Adjustment Algorithm

The algorithms for the adjustment are documented below:

Single-Attenuator Models

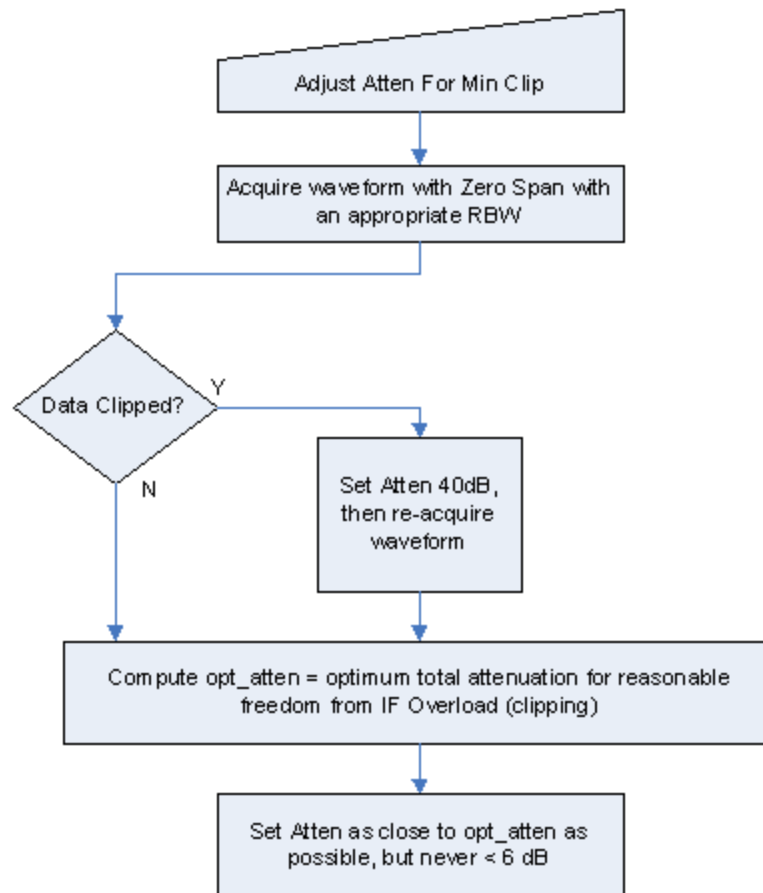


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 1428 selection is Mech + Elec Atten:

3 5G NR Mode


3.6 Spurious Emissions Measurement

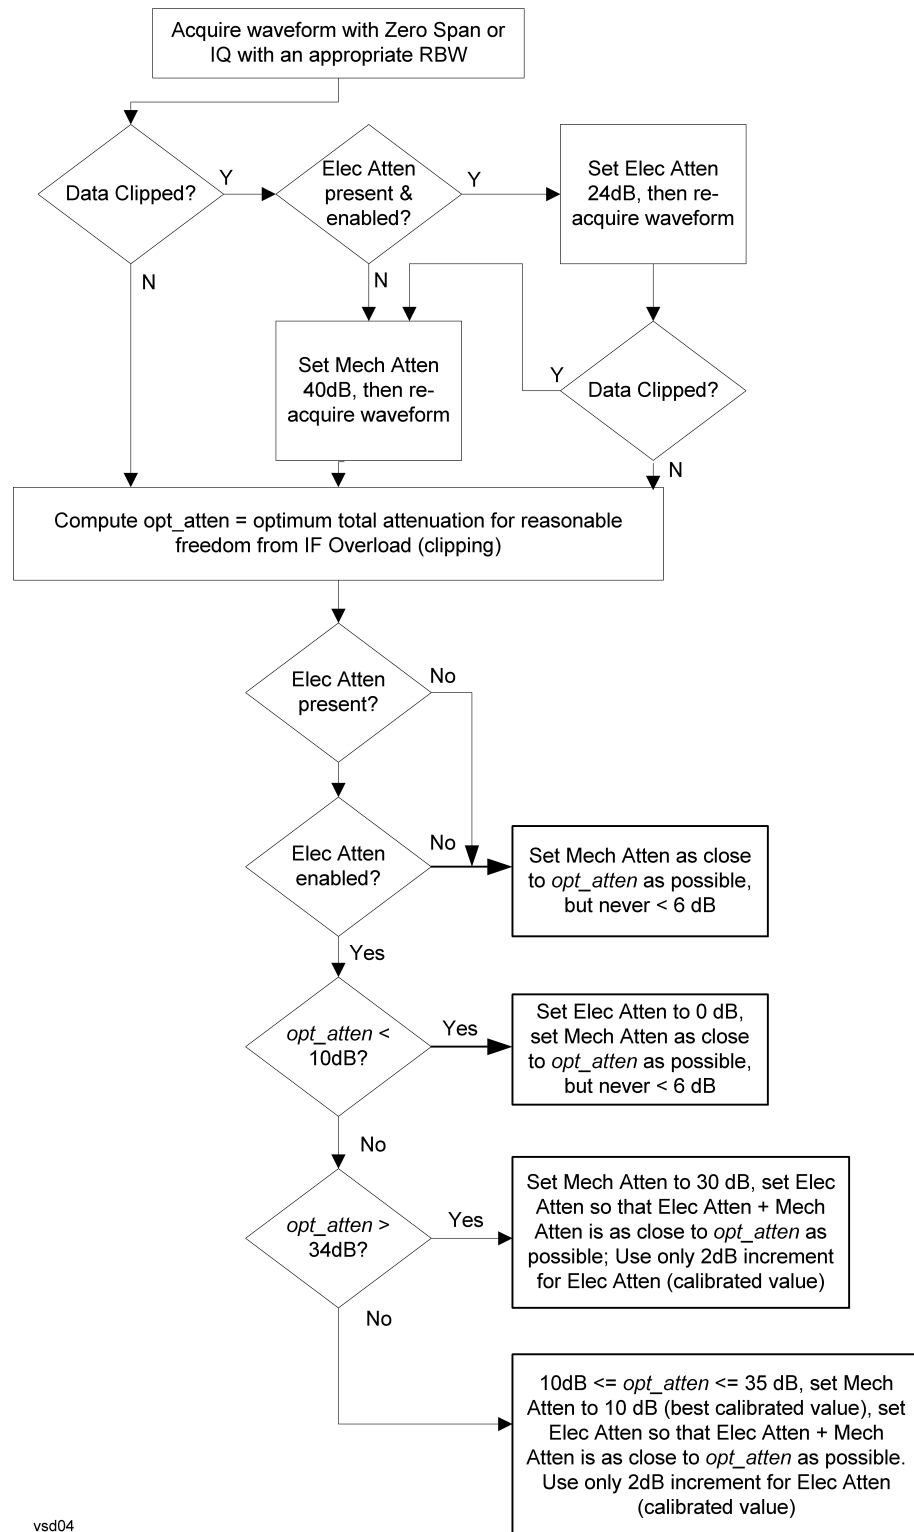

vsd04

"Pre-Adjust for Min Clipping" on page 1428 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

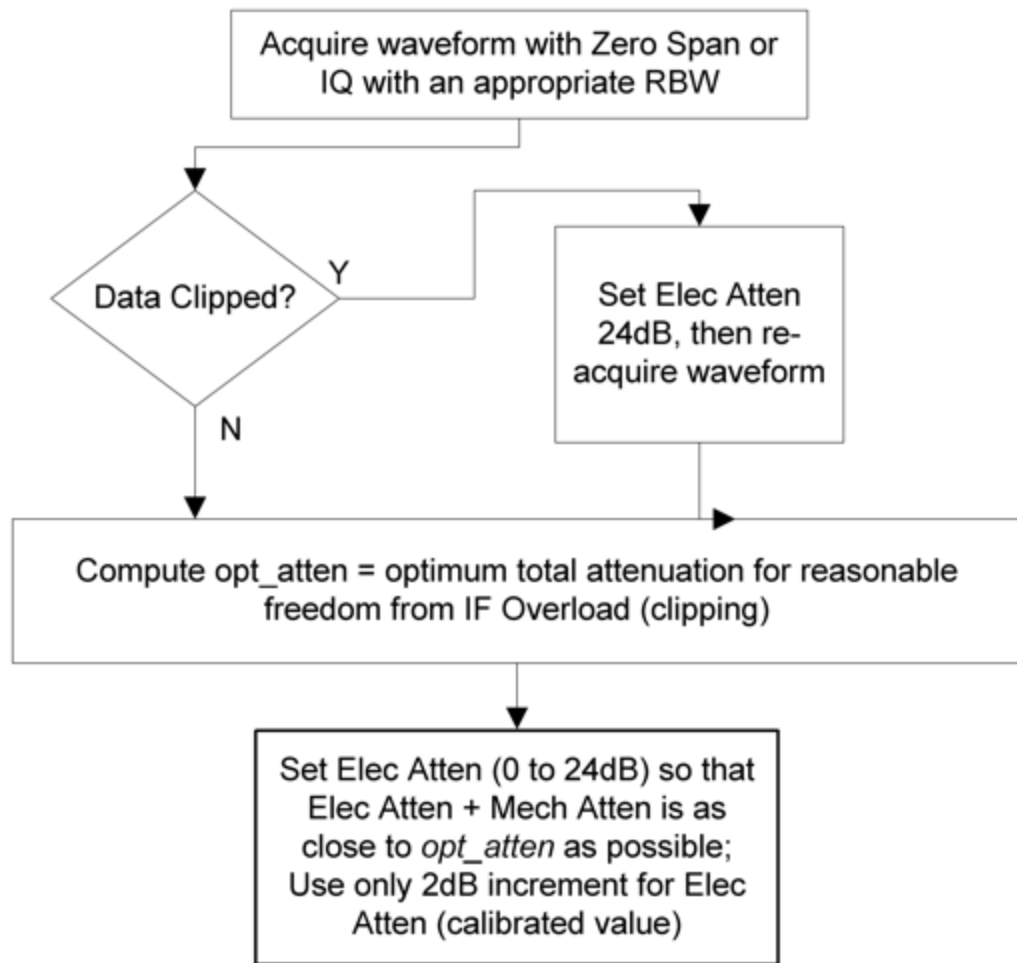

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

3 5G NR Mode

3.6 Spurious Emissions Measurement

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.6.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELEctrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELEctrical , COMBined , and ON) are honored and all are mapped to ELEctrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

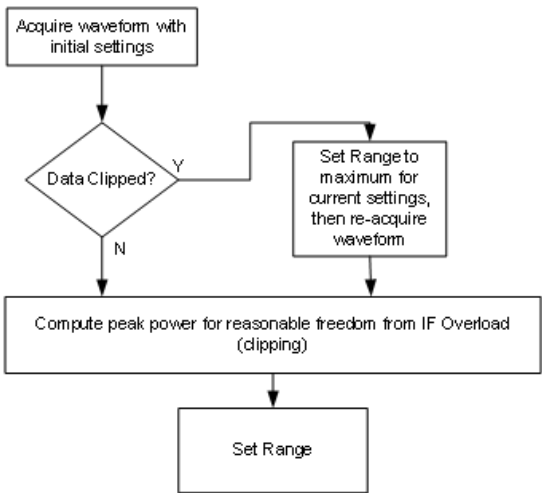

Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 3245 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:PARatio <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.6.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 1437**.

Remote Command	<code>[:SENSe] :POWer [:RF] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> – If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken – Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz – Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 – Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> - Does not appear in CXA-m - Does not appear in VXT Models M9410A/11A/15A/16A - Does not appear in M9410E/11E/15E/16E - Grayed-out if microwave preselector is off - Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz - Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz - Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	–/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXternal</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 3251. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.


For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 3251, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 1441


Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 1446
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 1448
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 1449

3 5G NR Mode

3.6 Spurious Emissions Measurement

Remote Command	[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL [:SENSe]:POWer[:RF]:MW:PATH?															
Example	:POW:MW:PATH LNP Enables the Low Noise path :POW:MW:PATH?															
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>															
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none">– The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed– The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed– The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>															
Preset	<table><tr><th>Mode</th><th>Value</th></tr><tr><td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr><tr><td>Pulse</td><td>MPB option not present and licensed: STD</td></tr><tr><td>RTSA</td><td></td></tr><tr><td>Avionics</td><td></td></tr><tr><td>All other Modes</td><td>STD</td></tr><tr><td>–</td><td></td></tr></table>		Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	–	
Mode	Value															
IQ Analyzer	MPB option present and licensed: MPB															
Pulse	MPB option not present and licensed: STD															
RTSA																
Avionics																
All other Modes	STD															
–																
State Saved	Save in instrument state															
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable															

Annotation	<p>In the Meas Bar, if the Standard path is chosen: μW Path: Standard If Low Noise Path is enabled but the LNP switch is not thrown: μW Path: LNP,Off If the Low Noise Path is enabled and the LNP switch is thrown: μW Path: LNP,On If the preselector is bypassed: μW Path: Bypass If Full Bypass Enable is selected but the LNP switch is not thrown: μW Path: FByp,Off If Full Bypass Enable is selected and the LNP switch is thrown: μW Path: FByp,On</p>
------------	--

μ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to μ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 5G NR Mode

3.6 Spurious Emissions Measurement

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	μW Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	μW Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 1444 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

3 5G NR Mode

3.6 Spurious Emissions Measurement

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

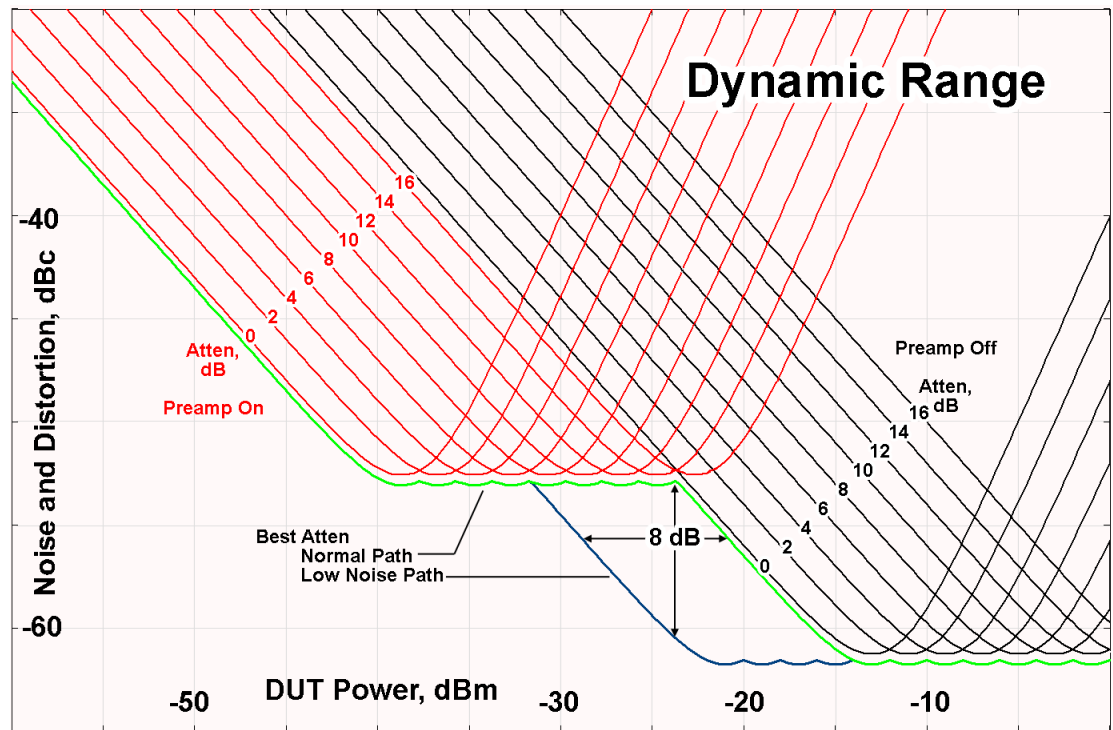

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (<code>:POW:MW:PATH STD</code>) The OFF parameter sets path MPB (<code>:POW:MW:PATH MPB</code>)
Preset	ON
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1</code> <code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">5GNRMode: Modulation Analysis and IQ WaveformWLAN Mode: IQ WaveformChannel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF</code> <code>[:SENSe]:POWer[:RF]:SWPrese1:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

3 5G NR Mode

3.6 Spurious Emissions Measurement

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	<div>N9041B NORMa1</div> <div>N9042B+V3050A NARRow</div>
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 1455 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.6.4 BW

There is no **BW** functionality in this measurement.

3.6.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.6.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View, or Window.

Center Frequency On/Off

Turns the display of **Center Frequency** on the **Meas Bar** On or Off.

Remote Command	<code>:DISPlay:SPURious:FREQuency:CENTer[:STATe] ON OFF 1 0</code> <code>:DISPlay:SPURious:FREQuency:CENTer[:STATe]?</code>
Example	<code>:DISP:SPUR:FREQ:CENT ON</code> <code>:DISP:SPUR:FREQ:CENT?</code>
Preset	ON
State Saved	Yes

3.6.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	:DISPlay:VIEW:ADVanced:SElect
Rename User View	:DISPlay:VIEW:ADVanced:REName
Delete User View	:DISPlay:VIEW:ADVanced:DELeTe
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DELeTe
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF ON 0 1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

3.6.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

Views

This measurement has two predefined views:

#	Name	SCPI
1	"Graph + Metrics" on page 1461	RESult
2	"All Ranges" on page 1461	ALL

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change, depending on which window is selected.

Remote Command	<code>:DISPlay:SPURious:VIEW[:SElect] RESult ALL</code> <code>:DISPlay:SPURious:VIEW[:SElect]?</code>
Example	<code>:DISP:SPUR:VIEW RANG</code> <code>:DISP:SPUR:VIEW?</code>
Preset	<code>RESult</code>
State Saved	No
Range	Graph + Metrics All Ranges

Graph + Metrics

Windows: "Graph" on page 1411, "Table" on page 1412

Select Graph + Metrics to view measurement results.

- The upper window displays a trace of the range that contains the currently selected spur
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

Example	<code>:DISP:SPUR:VIEW RES</code>
---------	----------------------------------

All Ranges

Windows: "Graph" on page 1411,

Select All Ranges to view measurement results for all the ranges.

- The upper window displays a merged trace of all the ranges
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

Example	<code>:DISP:SPUR:VIEW ALL</code>
---------	----------------------------------

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
----------------	--

Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOom</code>) with <code>:DISP:VIEW:ADV:SEL</code></p> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p><code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node <code>:DISPlay:VIEW[:SElect]</code></p> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></code>
Example	<p><code>:DISP:VIEW:ADV:NAME "Baseband"</code></p> <p>Creates a new View named Baseband from the current View, and selects it as the current View</p>

Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated</p>
-------	---

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	:DISPlay:VIEW:ADVanced:REName <alphanumeric>
Example	:DISP:VIEW:ADV:REN “Baseband”
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <alphanumeric> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	:DISPlay:VIEW:ADVanced:DELeTe
----------------	-------------------------------

Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p>

If you switch measurements with the display disabled (via `:DISP:ENAB OFF`), then query the list of available Views, the result is undefined

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p><code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined</p>

3.6.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some settings in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by ["Meas Preset" on page 1511](#). For example, Center Frequency is the same for all measurements – it does not change as you change measurements.

3.6.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets Carrier Reference Frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most

measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- Number of Component Carriers is 1
- Center Freq Offset is 0 Hz
- Center Frequency mode is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, **Center Frequency** mode remains Auto, and **Carrier Reference Frequency** changes to the same value. The major purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See ["More Information" on page 1466](#)

Remote Command	For LTE-A, 5G NR Modes: :SENSe:CCARrier:REFeRence <freq> :SENSe:CCARrier:REFeRence? For MSR Mode: :SENSe:CARRier:REFeRence <freq> :SENSe:CARRier:REFeRence?
Example	For LTE-A, 5G NR Modes: :CCAR:REF 2GHz :CCAR:REF? For MSR Mode: :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as Center Frequency

More Information

In most applications, **Center Frequency** is generally where the carrier center is located, and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are based on carrier center frequencies and bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these are general type measurements and focus

on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers, or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it is a separate setting from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determine absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the Frequency menu of these measurements.

3.6.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

3.6.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

On any menu tab that displays **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done, or a Band Function is turned on, or for Signal Track, or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal and Delta markers

3.6.7.2 Settings

The controls on this tab include the **Marker** active function and a radio button selection for the marker control mode (**Normal**, **Delta**, or **Off**) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. It has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** (**POSition**) or **DELta**.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:SPUR:MARK2:X 25 kHz</code> <code>:CALC:SPUR:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time
Preset	After a preset, all markers are turned OFF , so Marker X-Axis Value query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** – except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X:POSition <real></code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:SPUR:MARK10:X:POS 300</code> <code>:CALC:SPUR:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to

3 5G NR Mode

3.6 Spurious Emissions Measurement

	trace points . When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is OFF , the response is Not A Number
Preset	After a preset, all markers are turned OFF , so Marker X-Axis Value query returns Not A Number (NAN)
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37

Marker Y Axis Value (Remote Query only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:Y?
Example	:CALC:SPUR:MARK11:Y?
Notes	<p>Returns the marker Y-Axis result, if the control mode is Normal or Delta. If the marker is OFF, the response is Not A Number</p> <p>In the Complex Spectrum measurement, when the marker is on and Marker Trace is set to IQ, it returns I and Q values</p> <p>Case #1 - MarkerTrace SPEC, I or Q: returns a single double value</p> <ul style="list-style-type: none"> - >:CALC:SPEC:MARK1:Y? - -2.402406506109E+001 <p>Case #2 - MarkerTrace IQ: returns a double array of two values, the first is I, and the second is Q</p> <ul style="list-style-type: none"> - >:CALC: SPEC:MARK1:Y? - -3.006944493834E-003, +9.9870666467354E-004 <p>The IQ selection is for backward compatibility purposes. It is recommended that the users use the I and/or Q selection instead</p>
Preset	Result dependent on Marker setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:SPURious:MARKer[1] 2 ... 12:FUNCTION:RESult?

Marker Mode

Sets the marker control mode to **POSition** (**Normal**), **DELta**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MODE POSition DELTa OFF</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:SPUR:MARK:MODE POS</code> <code>:CALC:SPUR:MARK:MODE?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELTA OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **POSition** mode and places it at the center of the screen.

Example	<code>:CALC:SPUR:MARK3:STAT 1</code> <code>:CALC:SPUR:MARK3:STAT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:STATe OFF ON 0 1</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:STATe?</code>

Delta Marker (Reset Delta)

Pressing this control has exactly the same effect as selecting **Delta** in **"Marker Mode" on page 1469**. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:SPURious:MARKer:AOff
Example	:CALC:SPUR:MARK:AOff

Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:SPURious:MARKer:COUPle[:STATe] ON OFF 1 0
Example	:CALCulate:SPURious:MARKer:COUPle[:STATe]? :CALC:SPUR:MARK:COUP ON :CALC:SPUR:MARK:COUP?
Preset	OFF Preset by Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.6.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.
Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Frequency" on page 1468 on the **Settings** tab.

Peak Search

Moves the selected marker to the trace point that has the maximum y-axis value for that marker's trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum
Example	:CALC:SPUR:MARK2:MAX :SYST:ERR?
	can be used to query the errors to determine if a peak is found. The message "No peak found" will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In W-CDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored

Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned on as a **POSiTion** marker and a peak search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:NEXT
Example	:CALC:SPUR:MARK2:MAX:NEXT
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Pk Right

Moves the selected marker to the nearest peak right of the current marker.

If the selected marker was **OFF**, then it is turned on as a **POSiTion** marker and a peak search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:RIGHT
Example	:CALC:SPUR:MARK2:MAX:RIGH
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Pk Left

Moves the selected marker to the nearest peak left of the current marker.

If the selected marker was **OFF**, then it is turned on as a **POSiTion** marker and a peak search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:LEFT
Example	:CALC:SPUR:MARK2:MAX:LEFT
State Saved	Not part of saved state

Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned **ON** before the minimum search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MINimum
Example	:CALC:SPUR:MARK:MIN
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Pk-Pk Search

Finds and displays the amplitude and frequency differences between the highest and lowest y-axis value. It places the selected marker on the minimum value on its selected trace, and places that marker's reference marker on the peak of its selected trace.

This function turns on the reference marker and sets its mode to **Fixed** or **Normal** if it is not already on. (These markers may be on two different traces.)

If the selected marker is **OFF**, a **Delta** type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a **Delta** marker, then it is

changed to delta, which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:PTPeak
Example	:CALC:SPUR:MARK:PTP
Notes	Turns on the Marker D active function Sending this command selects the subopcoded marker
Dependencies	Pk-Pk Search is not available when Coupled Markers is ON
Couplings	The selected marker becomes a Delta marker if not already in Delta mode
State Saved	Not part of saved state

Marker Delta

Pressing this control has the same effect as selecting **Delta** in "**Marker Mode**" on [page 1469](#) on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search, and change the marker’s control mode to **Delta**, without having to access two separate menus.

3.6.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on [page 1468](#) on the **Settings** tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** control. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote	:CALCulate:SPURious:MARKer[1] 2 ... 12:REference <integer>
--------	--

Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:SPUR:MARK3:REF 5</code> <code>:CALC:SPUR:MARK:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself, so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is off it is turned on in Normal mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Markers Off , hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:TRACe:ATTached TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:TRACe:ATTached?</code>
Example	<code>:CALC:SPUR:MARK2:TRAC:ATT TRAC2</code> <code>:CALC:SPUR:MARK2:TRAC:ATT?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by "Auto Couple" on page 3289

	Sending the remote command causes the addressed marker to become selected
Preset	TRACe1
State Saved	Saved in instrument state
Range	TRACe1 TRACe2 TRACe3

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "**Marker Settings Diagram**" on page 1470 under **Settings**.

3.6.8 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

3.6.8.1 Settings

Contains frequently-used **Meas Setup** functions, to which you will want the fastest access.

Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep.

Remote Command	[:SENSe]:SPURious:AVERage:COUNT <integer> [:SENSe]:SPURious:AVERage:COUNT?
Example	:SPUR:AVER:COUN 2500 :SPUR:AVER:COUN?
Preset	10
State Saved	Saved in instrument state
Min/Max	1/10000

Continue Averaging

Continue Averaging is designed for acquiring the trace average through multiple sets of DUT conditions, to meet requirements such as those for an OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Go to Single and press **Restart** to get your first set of averages, then Continue Averaging will be available.

Use **:FETCh:<meas>?** to retrieve the data as it waits for completion of Continue Averaging. ***OPC?** doesn't wait for completion and returns true immediately.

Pressing this control adds a number of Averages that matches "Avg/Hold Num" on page 1476 to the already averaged trace or measurement. Every time you press it, the terminal count increases to 2N, 3N and so on. You can change the DUT position or antenna when each set of average count is reached to the terminal count and the measurement is complete.

Since the measurement results are valid for each completed average conditions, you do not have to pre-determine the number of sets of DUT conditions.

Remote Command	:SENSe]:SPURious:AVERage:CONTinue
Example	:SPUR:AVER:CONT
Dependencies	Enabled when you change Sweep mode to Single , and Average Count reaches Average Number, otherwise it is grayed-out

Terminal Count (Remote Query Only)

Query only.

This returns the terminal count that shows the target average number after "Continue Averaging" on page 1476 is pressed. Every time you press **Continue Averaging**, the terminal count increases to 2N, 3N and so on. The value is the same as "Avg/Hold Num" on page 1476, unless **Continue Averaging** is pressed, and it is reset to match Avg/Hold Num when **Restart** is pressed.

Remote Command	:SENSe]:SPURious:AVERage:COUNT:TERMinal?
Example	:SPUR:AVER:COUN:TERM?

Averaging On/Off

Turns Averaging on or off.

NOTE

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	:SENSe]:SPURious:AVERage[:STATe] ON OFF 1 0
----------------	--

	<code>[:SENSe]:SPURious:AVERage[:STATe]?</code>
Example	<code>:SPUR:AVER ON</code> <code>:SPUR:AVER?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>

Average Mode

Lets you set the Averaging Mode. Options are:

- **EXPonential**: The measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep
- **REPeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:SPURious:AVERage:TCONtrol EXPonential REPeat</code> <code>[:SENSe]:SPURious:AVERage:TCONtrol?</code>
Example	<code>:SPUR:AVER:TCON REP</code> <code>:SPUR:AVER:TCON?</code>
Preset	<code>EXPonential</code>
State Saved	Saved in instrument state
Range	<code>EXPonential REPeat</code>

Average Type

Enables you to control the way averaging is done by choosing one of the following averaging scales: Log-Power (Video) or Power (RMS).

There are three different averaging processes in the measurement, and all of them are affected by this setting: Trace Averaging, the Average detector, and VBW filtering.

Control Selection	SCPI	Type
Log-Pwr (Video)	<code>LOG</code>	Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power
Power (RMS)	<code>RMS</code>	True power averaging that is equivalent to taking the RMS value of the voltage. This is the most accurate type of averaging

Remote	<code>[:SENSe]:SPURious:AVERage:TYPE LOG RMS</code>
--------	--

Command	<code>[:SENSe]:SPURious:AVERage:TYPE?</code>
Example	<code>:SPUR:AVER:TYPE LOG</code> <code>:SPUR:AVER:TYPE?</code>
Couplings	Sending this command will affect the VBW Average Type
Preset	<code>LOG</code>
State Saved	Yes
Range	Log-Pwr (Video) Power (RMS)

Meas Type

Selects either `EXAMine` or `FULL` measurement type. This parameter is coupled to "Average Mode" on page 1478. Therefore, if the `EXAMine` measurement type is selected, the measurement sets the Average Mode to exponential. If the `FULL` measurement type is selected, the measurement sets the Average Mode to repeat. The behavior of each measurement type is described in the table below. When averaging is on, trace averaging is used as each active range is measured. Averaging is not used at any other time.

Type	Single		Continuous	
	No Spurs Found	Spurs Found	No Spurs Found	Spurs Found
<code>EXAMine</code>	All active ranges are measured. On completion the measurement is set to the idle state and the 'No Spurs' happening is displayed	All active ranges are measured, and the spurs found reported. On completion the measurement is set to the idle state and the trace containing the worst spur restored. The spur control is enabled. A marker is also added which is set to the frequency of the worst spur	All active ranges are measured. On completion the SA remains set to last range checked with an active trace and the 'No Spurs' happening is displayed	All active ranges are measured, and the spurs found reported. On completion the SA is set to the range containing the worst spur found and continually sweeps this range. Note that the trace is continually updated but the metrics results aren't updated until restart to keep the initial results as references. Use marker

Type	Single	Spurs Found	Continuous	Spurs Found
	No Spurs Found		No Spurs Found	
				readouts to refer the latest results. The spur control is enabled. A marker is also added which is set to the frequency of the worst spur
FULL	All active ranges are measured. On completion measurement is set to idle state and the 'No Spurs' happening is displayed	All active ranges are measured, and spurs found reported. On completion the measurement is set to the idle state, displaying the trace of the last active range	Measurement continually cycles through all active ranges	All active ranges are measured, and spurs found reported. On each cycle of the active ranges the spurs found are reset. This ensures any remote queries retrieve the trace data that matches the currently displayed results

Remote Command **[:SENSe]:SPURious:TYPE EXAMine | FULL**
[:SENSe]:SPURious:TYPE?

Example **:SPUR:TYPE FULL**
:SPUR:TYPE?

Preset **EXAMine**

State Saved Saved in instrument state

Range **EXAMine|FULL**

Spur

Displays any spurs found. Only enabled when the measurement type is set to **EXAMine**, and turns on upon completion of a measurement. Once the **Spur** control has been enabled, you can view any spur. The measurement sets the instrument to the range in which the currently selected spur was found. The range settings only

change if the spur selected is in a range that is different from the current range settings. A marker is used to identify the currently selected spur on the trace.

Remote Command	<code>[:SENSe]:SPURious:SPUR <integer></code> <code>[:SENSe]:SPURious:SPUR?</code>
Example	<code>:SPUR:SPUR 55</code> <code>:SPUR:SPUR?</code>
Preset	1
State Saved	No
Min/Max	1/200

Range

Selects the sweep range of the display trace. **Marker** operation, such as peak search is performed in the selected range.

For more details, see ["Range Settings" on page 1482](#).

Preset	1
State Saved	No
Min/Max	1/20

Spur Report Mode

Selects the spurious report mode. Options are:

Limit Line Test	<code>LIMTest</code>	Report only spurs above the limit line. Any spurs reported will cause the measurement to fail. See Abs Start Limit for more information
All Spurs	<code>ALL</code>	Report all spurs detected by Peak Threshold and Peak Excursion
Minimum Margin	<code>MMARgin</code>	Report only the spur with the minimum margin from the limit line. For the spur above the limit, its margin is defined as the negative margin. If there are more than one spurs above the limit, only one spur with the largest negative margin is reported

Remote Command	<code>[:SENSe]:SPURious:REPT:MODE ALL LIMTest MMARgin</code> <code>[:SENSe]:SPURious:REPT:MODE?</code>
Example	<code>:SPUR:REPT:MODE LIMT</code> <code>:SPUR:REPT:MODE?</code>
Dependencies	<code>MMARgin</code> is available only when option N9060A-7FP is installed
Preset	<code>ALL</code>
State Saved	Saved in instrument state
Range	All Spurs Limit Test Minimum Margin

Range Settings

This dialog enables you to set range parameters. As you change values, the instrument settings are updated with the new parameter values.

In SA Mode, and most other Modes, each **Range** is defined by its Start Freq and Stop Freq. The index tabs that appear on the left side of this dialog let you change different sets of **Range** parameters; the **Ranges** themselves (Start Freq and Stop Freq) are the same in each of these tabs. In some measurements, **Center Frequency** and **Span** are also shown, but these depend on the Start Freq and Stop Freq parameters for each **Range**.

In MSR Mode, each **Range** is defined by the parameters under the **Frequency** Index tab. The parameters for each **Range** are defined using the other index tabs, tied to the **Frequency** tab by the **Range** number, which appears in the leftmost column of each table.

Each **Range** has an **Enabled** checkbox, which lets you decide whether to use the **Range** or not. The checkbox state is the same for all tabs.

Bandwidth

Lets you set RBW and VBW parameters for each range, as well as Filter Type. The **Bandwidth** tab appears in all Modes except MSR.

Frequency Range

Allows you to switch the displayed **Frequency Range** columns. When **ALL** is selected, Start Frequency, Stop Frequency, Center Frequency, and Span are displayed.

This control appears only in instruments with a 4U size front panel.

Remote Command	<code>:DISPlay:SPURious:VIEW:RANGe:TABLE:FMODe ALL SStop CSPan</code> <code>:DISPlay:SPURious:VIEW:RANGe:TABLE:FMODe?</code>
Example	<code>:DISP:SPUR:VIEW:RANG:TABL:FMOD ALL</code> <code>:DISP:SPUR:VIEW:RANG:TABL:FMOD?</code>
Preset	<code>SStop</code>
State Saved	Saved in instrument state
Range	All Start/Stop Frequency Center Frequency/Span

Enabled

Turns on/off each Range. If Range is **ON**, it will be used as part of the measurement. If it is **OFF**, it will be excluded. This parameter can send up to 20 values. The location in the list sent corresponds to the range number. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:STATe ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0</pre> <pre>[:SENSe]:SPURious[:RANGe][:LIST]:STATe?</pre>
Example	<pre>:SPUR:STAT ON</pre> <pre>:SPUR:STAT?</pre>
Preset	<pre>SA: ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> <pre>WCDMA: ON, ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> <pre>LTETDD, LTEATDD, 5G NR: OFF, OFF, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> <pre>LTE, LTEAFDD: ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> <pre>MSR: ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre>
State Saved	Yes
Range	ON OFF

Start Freq

Sets the start frequency of the instrument. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt?</pre>
Example	<pre>:SPUR:FREQ:STAR 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz :SPUR:FREQ:STAR?</pre>
Preset	<p>SA: +1.92000000E+009, +1.89350000E+009, +2.10000000E+009, +2.17500000E+009, +8.00000000E+008, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009, +1.50000000E+009</p> <p>WCDMA: 9kHz, 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz, 1.5GHz</p> <p>LTETDD, LTEATDD, 5G NR: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.90GHz, 2.01 GHz, 2.025 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</p> <p>LTE, LTEAFDD: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.92GHz, 1.98 GHz, 2.18 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</p> <p>WLAN:</p> <p>9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</p> <p>MSR: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.92GHz, 1.98 GHz, 2.18 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</p>
State Saved	Saved in instrument state
Min/Max	<p>-80 MHz/Hardware Dependent:</p> <ul style="list-style-type: none"> Option 503: 3699999990 Option 508: 8499999990 Option 513: 13799999990 Option 526: 26999999990

Stop Freq

Sets the stop frequency of the instrument. This parameter can send up to 20 values.

3 5G NR Mode

3.6 Spurious Emissions Measurement

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP?</pre>
Example	<pre>:SPUR:FREQ:STOP 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz :SPUR:FREQ:STOP?</pre>
Preset	<p>SA Mode: +1.98000000E+009, +1.91960000E+009, +2.10150000E+009, +2.18000000E+009, +1.00000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009</p> <p>WCDMA Mode: 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p> <p>LTETDD, LTEATDD, 5G NR Modes: 150kHz, 30MHz, 1GHz, 1.90GHz, 2.01GHz, 2.025GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p> <p>LTE, LTEAFDD Modes: 150kHz, 30MHz, 1GHz, 1.92GHz, 1.98GHz, 2.1GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p> <p>WLAN Mode: 150kHz, 30 MHz, 1GHz, 12.75GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz</p> <p>MSR Mode: 150kHz, 30MHz, 1GHz, 1.92GHz, 1.98GHz, 2.1GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p>
State Saved	Yes
Min/Max	<p>-79999990/Hardware Dependent:</p> <ul style="list-style-type: none"> - Option 503: 3.7 GHz - Option 508: 8.5 GHz - Option 513: 13.8 GHz - Option 526: 27.0 GHz

Span

Sets the span of the instrument. This parameter can send up to 20 values. The location where the span occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></code> <code>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN?</code>
Example	<code>:SPUR:FREQ:SPAN 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</code> <code>:SPUR:FREQ:SPAN?</code>
Preset	(Preset of Stop Freq) - (Preset of Start Freq)
State Saved	No
Min/Max	0Hz/Instrument maximum frequency + 80MHz

Res BW

Sets the resolution bandwidth of the instrument. This parameter can send up to 20 values.

The location of where the resolution bandwidth occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. In other words, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	[:SENSe]:SPURious[:RANGE][:LIST]:BANDwidth[:RESolution] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:SPURious[:RANGE][:LIST]:BANDwidth[:RESolution]?	
Example	:SPUR:BAND 1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz :SPUR:BAND?	
Preset	SA Mode	1.2MHz, 0.51MHz, 0.1MHz, 0.1MHz, 4MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz
	WCDMA Mode	1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz
	LTETDD,	1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz, 3MHz,
	LTEATDD, 5G	3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz

3.6 Spurious Emissions Measurement

[illegible]

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result:

Integ BW = **Meas BW** * Resolution BW

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and **Meas BW** compensates sweep resolution bandwidth to Integration BW.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain as they were. The query always returns 20 values.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti <integer>, ... [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti?</code>
Example	<code>:SPUR:BAND:IMUL 1,1,1,1,1,1 :SPUR:BAND:IMUL?</code>
Notes	Comma-separated list of values
Preset	<code>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</code>
State Saved	Yes
Max	1000
Min/Max	1
Backwards Compatibility SCPI	<code>[:SENSe]:SPURious[:RANGe][:LIST]:BWIDth:IMULti</code>

Video BW

Sets the **Video BW** mode of the instrument. This can be Auto, where the instrument determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></code>
----------------	---

When Offset Side is Positive:

$$[\text{Abs Start Freq}] = [\text{OB Stop Freq}] + [\text{Offset Start Freq}]$$

$$[\text{Abs Stop Freq}] = [\text{OB Stop Freq}] + [\text{Offset Stop Freq}]$$

When changing OB Start/Stop Freq, Abs Start/Stop Freq is changed and Offset Start/Stop Freq remains unchanged.

When changing Offset Start/Stop Freq, Abs Start/Stop Freq is changed and OB Start/Stop Freq remains unchanged.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:TYPE ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet, ABSolute OFFSet</pre> <pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:TYPE?</pre>
Example	<pre>:SPUR:FREQ:TYPE OFFS, OFFS, ABS, ABS, ABS</pre> <pre>:SPUR:FREQ:TYPE?</pre>
Couplings	Freq Type automatically changes to OFFSet when you change a value of Offset Start Freq, Offset Stop Freq or Offset Side, and automatically changes to ABSolute when you change a value of Abs Start Freq or Abs Stop Freq
Preset	ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute, ABSolute
State Saved	Saved in instrument state
Range	ABSolute OFFSet

Abs Start Freq

Sets the start frequency of the instrument. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

This parameter is coupled with either Offset Start Freq or Offset Stop Freq. The coupling equations are shown in ["Enabled" on page 1490](#).

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:START <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></pre> <pre>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:START?</pre>
----------------	---

-
- Option 503: 3.7 GHz
 - Option 508: 8.5 GHz
 - Option 513: 13.8 GHz
 - Option 526: 27.0 GHz

Offset Start Freq

Sets the range frequency as offset from one of the operating band edges. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

This parameter is coupled with either ["Abs Start Freq" on page 1491](#) or ["Abs Stop Freq" on page 1492](#) using the coupling equations shown in ["Enabled" on page 1490](#).

This value is clipped to keep Abs Start/Stop Freq within the available frequency range. This clipping applies even when OB Start Freq, OB Stop Freq or Offset Side is changed.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:STARt <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></code>
	<code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:STARt?</code>
Example	<code>:SPUR:OFFS:FREQ:STAR 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz,1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz</code> <code>:SPUR:OFFS:FREQ:STAR?</code>
Preset	10 MHz, 20 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz
State Saved	Saved in instrument state
Min/Max	-80 MHz/SA Max Freq - 10Hz (Hardware Dependent)

Offset Stop Freq

Sets the range frequency as offset from one of operating band edges. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with.

The location of where the stop frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were. The query always returns 20 values.

This parameter is coupled with either ["Abs Start Freq" on page 1491](#) or ["Abs Stop Freq" on page 1492](#) using the coupling equations shown in ["Enabled" on page 1490](#).

This value is clipped to keep Abs Start/Stop Freq inside the available frequency range. This clipping applies even when OB Start Freq, OB Stop Freq or Offset Side is changed.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></code> <code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:STOP?</code>
Example	<code>:SPUR:OFFS:FREQ:STOP 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</code> <code>:SPUR:OFFS:FREQ:STOP?</code>
Preset	20 MHz,30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz
State Saved	Yes
Min/Max	-79999990/SA Max Frequency (Hardware Dependent)

Offset Side

Sets the offset side to either Negative or Positive. This parameter indicates which side of the operation band the specified range is on. It also determines which coupling equations defined in Frequency Type section are used to couple the absolute frequencies and the offset frequencies. This setting is effective only when ["Frequency Type" on page 1490](#) is **OFFset**.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:SIDE NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative POSitive, NEGative</code> <code>[:SENSe]:SPURious[:RANGe][:LIST]:OFFSet:SIDE?</code>
Example	<code>:SPUR:OFFS:SIDE NEG, NEG, POS, POS</code> <code>:SPUR:OFFS:SIDE?</code>
Preset	NEG, NEG, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS

State Saved	Saved in instrument state
Range	Negative (From Op. Band Start Edge) Positive (From Op. Band Stop Edge)

Filter/Atten

Lets you set Attenuation and IF Gain values for each Range. This tab appears in all Modes except MSR.

Frequency Range

Allows you to switch the displayed **Frequency Range** columns. When **ALL** is selected, Start Frequency, Stop Frequency, Center Frequency, and Span are displayed.

This control appears only in instruments with a 4U size front panel.

Remote Command	:DISPlay:SPURious:VIEW:RANGe:TABLE:FMODE ALL SStop CSPAN :DISPlay:SPURious:VIEW:RANGe:TABLE:FMODE?
Example	:DISP:SPUR:VIEW:RANG:TABL:FMOD ALL :DISP:SPUR:VIEW:RANG:TABL:FMOD?
Preset	SStop
State Saved	Saved in instrument state
Range	All Start/Stop Frequency Center Frequency/Span

Enabled

Same as Enabled under the **Bandwidth** index tab. See ["Enabled" on page 1483](#).

Start Freq

Same as the Start Freq column under the **Bandwidth** index tab. See ["Start Freq" on page 1483](#).

Stop Freq

Same as the Stop Freq column under the **Bandwidth** index tab. See ["Stop Freq" on page 1484](#).

Center Frequency

Sets the center frequency of the instrument. This parameter can send up to 20 values. The location where the center frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:CENTer <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq></code> <code>[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:CENTer?</code>
Example	<code>:SPUR:FREQ:CENT 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz</code> <code>:SPUR:FREQ:CENT?</code>
Preset	(Preset of Start Freq + Preset of Stop Freq)/2
State Saved	No
Min/Max	-79.999995 MHz/ Instrument maximum frequency – 5 Hz

Span

Same as the Span column under the **Bandwidth** index tab. See ["Span" on page 1485](#).

Attenuation

PP_Substitute: cmn_mode_amptdatten_pp.flto

IF Gain

Sets **IF Gain** to: **Auto**, **On** (the extra 10 dB) or **Off**. These settings affect sensitivity and IF overloads. A switched IF amplifier with approximately 10 dB of gain is available. This amplifier takes full advantage of the RF dynamic range of the instrument. When it can be turned on without an overload, the dynamic range is always better with the amplifier on than off.

Dependencies	The IF Gain controls (FFT IF Gain and Swept IF Gain) have no effect when the U7227A USB Preamp-lifier is connected. This is not annotated or reflected on any control; there are no controls grayed out
--------------	---

nor any SCPI locked out. The instrument simply behaves as though both FFT IF Gain and Swept IF Gain are set to Low regardless of the setting on the controls

IF Gain Auto

Activates the rules for auto IF Gain.

Remote Command	[[:SENSe]:SPURious:IF:GAIN:AUTO[:STATe] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1] [:SENSe]:SPURious:IF:GAIN:AUTO[:STATe]?
Example	:SPUR:IF:GAIN:AUTO ON,ON :SPUR:IF:GAIN:AUTO?
Couplings	When the sweep type is Swept, ‘Auto’ sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is –20 dBm or lower. For other settings using the swept sweep type, auto sets IF Gain to Low Gain
Preset	OFF, OFF
State Saved	Saved in instrument state

IF Gain State

Selects the range of IF Gain.

[illegible]

Enabled

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "**Enabled**" on page 1483.

Res BW

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Res BW](#)" on page 1486.

Meas BW

Same as the Meas BW column under the **Bandwidth** tab. See "[Meas BW](#)" on page 1488.

Video BW

Sets the **Video BW** mode of the instrument. This can be Auto, where the instrument determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo?</pre>
Example	<pre>:SPUR:BAND:VID 1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz, 3MHz :SPUR:BAND:VID?</pre>
Preset	<p>SA, WCDMA, WLAN Modes: Automatically calculated</p> <p>LTE, LTEAFDD, MSR Modes: 4.7kHz, 47kHz, 470kHz, 5MHz, 470kHz, 5MHz, 5MHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz</p> <p>LTETDD, LTEATDD Modes:</p> <p>4.7kHz, 47kHz, 470kHz, 5MHz, 5MHz, 5MHz, 5MHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz</p> <p>5G NR Mode:</p> <p>100 Hz, 1 kHz, 10 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz, 300 kHz</p>
State Saved	Saved in instrument state
Min/Max	1 Hz/50 MHz
Backwards Compatibility SCPI	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:BWIDth:VIDeo</pre>

3.6 Spurious Emissions Measurement

Auto Function

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1</pre> <pre>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>:SPUR:BAND:VID:AUTO ON, ON, OFF, OFF, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, ON</pre> <pre>:SPUR:BAND:VID:AUTO?</pre>
Preset	<pre>ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON</pre> <p>unless noted below</p> <p>LTE, LTEAFDD, LTETDD, LTEATDD, MSR:</p> <pre>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</pre>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:BWIDth:VIDeo:AUTO</pre>

Filter Type

Same as the Filter Type column under the **Bandwidth** tab. See "Filter Type" on page 1490.

Attenuation

Defines attenuation value for each range:

ON	The Attenuation value under AMPTD Y Scale is used
OFF	This value is used as mechanical attenuation value without electric attenuation

Remote Command	<pre>[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation?</pre>
Example	<pre>:SPUR:ATT 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB, 10dB :SPUR:ATT?</pre>
Couplings	<p>“---” is displayed as value when Auto state is ON, to indicate attenuation value under AMPTD Y Scale is being used</p>

Range	All Start/Stop Frequency Center Frequency/Span
Enabled	Same as the Enabled checkbox under the Bandwidth tab. See " Enabled " on page 1483.
Start Freq	Same as the Start Freq column under the Bandwidth tab. See " Start Freq " on page 1483. This column does not appear in MSR mode.
Stop Freq	Same as the Stop Freq column under the Bandwidth tab. See " Stop Freq " on page 1484. This column does not appear in MSR mode.
Center Frequency	Same as the Center column under the Bandwidth index tab. See " Center Frequency " on page 1496.
Span	Same as the Span column under the Bandwidth tab. See " Span " on page 1485. This column does not appear in MSR mode.
Sweep Time	<p>Sets the Sweep Time mode of the instrument. This can be Auto, where the instrument determines the optimum setting, or Manual, where you determine the setting.</p> <p>This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.</p> <p>The query always returns 20 values.</p>
Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:SWEEp:TIME <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time>, <time></code>

3.6 Spurious Emissions Measurement

Preset	SA, 5G NR Modes: +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601, +601 WCDMA Mode: 601, 2985, 9700, 1100, 601, 601, 601, 10570, 601, 601, 601, 601, 601, 601, 601, 601, 601, 601, 601 LTE, LTETDD, LTEAFDD, LTEATDD, WLAN, MSR Modes: Automatically calculated						
State Saved	Saved in instrument state						
Min/Max	101/20001 Auto Function						
Remote Command	[:SENSe]:SPURious[:RANGE][:LIST]:SWEep:POINts:AUTO OFF ON 0 1, OFF ON 0 1						
	[:SENSe]:SPURious[:RANGE][:LIST]:SWEep:POINts:AUTO?						
Example	:SPUR:SWE:POIN:AUTO ON,ON,ON :SPUR:SWE:POIN:AUTO?						
Preset	<table border="1"><thead><tr><th>Modes</th><th>Values</th></tr></thead><tbody><tr><td>LTEAFDD, LTEATDD, MSR</td><td>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</td></tr><tr><td>All others</td><td>OFF, OFF</td></tr></tbody></table>	Modes	Values	LTEAFDD, LTEATDD, MSR	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON	All others	OFF, OFF
Modes	Values						
LTEAFDD, LTEATDD, MSR	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON						
All others	OFF, OFF						
State Saved	Saved in instrument state						
Range	OFF ON						

Detector 1

Sets the detector to be used by the trace for spur detection and limit line testing.

[illegible]

	<pre> NEGative NORMal POSitive SAMPlE RMS, AVERage NEGative NORMal POSitive SAMPlE RMS, AVERage NEGative NORMal POSitive SAMPlE RMS, AVERage NEGative NORMal POSitive SAMPlE RMS, AVERage NEGative NORMal POSitive SAMPlE RMS [:SENSe]:SPURious[:RANGe][:LIST]:DETector[1][:FUNCTION]? </pre>
Example	<pre> :SPUR:DET NORM, :SPUR:DET? </pre>
Notes	For backwards compatibility, NORMal is available as a command parameter. However, this is treated the same as RMS internally, so the query never returns NORMal
Preset	POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS, POS
State Saved	Saved in instrument state
Range	Normal Average Peak Sample Negative Peak

Detector 2

Sets the detector to be used by the trace for display purposes only.

Remote Command	<pre> [:SENSe]:SPURious[:RANGe][:LIST]:DETector2[:FUNCTION] OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS, OFF AVERage NEGative NORMal POSitive SAMPlE RMS </pre>
	<pre> [:SENSe]:SPURious[:RANGe][:LIST]:DETector2[:FUNCTION]? </pre>
Example	<pre> :SPUR:DET2 AVER, :SPUR:DET2? </pre>
Notes	For backward compatibility, “ NORMal ” is available as a SCPI command parameter. However, this is treated same as “ RMS ” internally, so the query never returns “ NORMal ” as its results
Preset	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
State Saved	Saved in instrument state
Range	Off Normal Average Peak Sample Negative Peak

Limits

Lets you set Start and Stop Limits and Threshold values for each Range.

Frequency Range

Same as **Frequency Range** under the **Bandwidth** tab. See "[Frequency Range](#)" on [page 1500](#). This control does not appear in MSR mode.

Enabled

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Enabled](#)" on [page 1483](#).

Start Freq

Same as the Start Freq column under the **Bandwidth** tab. See "[Start Freq](#)" on [page 1483](#). This column does not appear in MSR.

Stop Freq

Same as the Stop Freq column under the **Bandwidth** tab. See "[Stop Freq](#)" on [page 1484](#). This column does not appear in MSR.

Center Frequency

Same as the Center column under the **Bandwidth** tab. See "[Center Frequency](#)" on [page 1496](#). This column does not appear in MSR mode.

Span

Same as the Span column under the **Bandwidth** tab. See "[Span](#)" on [page 1485](#). This column does not appear in MSR mode.

Abs Start Limit

Determines the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to **Auto**, this is coupled to **Abs Stop Limit** to make a flat limit line. If set to **Man**, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

If the Limit Line Test parameter is off, then any spurs that are found to be above the current 'Peak Excursion' are added to the results table. From these spurs, the amplitude is checked using the abs limit start and abs limit stop parameters, then the limit is calculated. An 'F' is appended to the amplitude value of the spur if the measured amplitude is above the limit. If the Limit Line Test is on, only the spurs whose amplitudes exceed the limit are reported.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START] <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START]?</pre>
Example	<pre>:CALC:SPUR:LIM:ABS:DATA 0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0 :CALC:SPUR:LIM:ABS:DATA?</pre>
Preset	<p>SA Mode: -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001</p> <p>WCDMA Mode: -36dBm, -36dBm, -36dBm, -30dBm, -25dBm, -15dBm, -25dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>LTE, LTEAFDD, MSR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -96dBm, -30dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>LTETDD, LTEATDD, 5G NR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -30dBm, -30dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>WLAN Mode:</p> <p>-36dBm, -36dBm, -36dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p>
State Saved	Saved in instrument state
Min/Max	-200.0 dBm/50.0 dBm

Abs Stop Limit

Determines the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to **Auto**, this is coupled to **Abs Start Limit** to make a flat limit line. If set to **Man**, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

3 5G NR Mode

3.6 Spurious Emissions Measurement

Abs Stop Limit Mode, when set to Couple, couples Abs Start Limit and Abs Stop Limit to make a flat limit line. If set to Man, Abs Start and Abs Stop can take different values to make a sloped limit line.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Remote Command	<pre>:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP?</pre>
Example	<pre>:CALC:SPUR:LIM:ABS:DATA:STOP -25, -25, -25, -25, -25, -25, -25, -25, -25, - 25, -25, -25, -25, -25, -25, -25, -25, -25, -25 :CALC:SPUR:LIM:ABS:DATA:STOP?</pre>
Preset	<p>SA Mode: -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001</p> <p>WCDMA Mode: -36dBm, -36dBm, -36dBm, -30dBm, -25dBm, -15dBm, -25dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>LTETDD, LTEATDD, 5G NR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -30dBm, -30dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>LTE, LTEAFDD, MSR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -96dBm, -30dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p> <p>WLAN Mode:</p> <p>-36dBm, -36dBm, -36dBm, -30dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm, -50dBm</p>
State Saved	Saved in instrument state
Min/Max	-200.0 dBm/50.0 dBm
	Auto Function
Remote Command	<pre>:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO?</pre>
Example	<pre>:CALC:SPUR:LIM:ABS:DATA:STOP:AUTO ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</pre>

	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON :CALC:SPUR:LIM:ABS:DATA:STOP:AUTO?
Preset	ON, ON
State Saved	Saved in instrument state

Peak Excursion

Sets the minimum amplitude variation of signals that can be identified as peaks. If a value of 6 dB is selected, peaks that rise and fall more than 6 dB above the peak threshold value are identified.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query for this parameter always returns 20 values.

Remote Command	[:SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCursion <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCursion?
Example	:SPUR:PEAK:EXC 20,20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20 :SPUR:PEAK:EXC?
Preset	+6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000
State Saved	Saved in instrument state
Min/Max	0.0 dB/100.0 dB

Pk Threshold

Sets the minimum amplitude of signals that can be identified as peaks. For example, if a value of -90 dBm is selected, only peaks that rise and fall more than the peak excursion value which are above -90 dBm are identified.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[:SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real></code> <code>[:SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold?</code>
Example	<code>:SPUR:PEAK:THR 0,0,0</code> <code>:SPUR:PEAK:THR?</code>
Preset	<code>-9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001, -9.00000000E+001</code>
State Saved	Saved in instrument state
Min/Max	-200/0

Meas Setup Summary Table

Lets you view and access many of the parameters in the Meas Setup menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see ["Measurement-Specific Details" on page 1510](#) below.

Remote Command	<code>:COUPle ALL</code>
Example	<code>:COUP ALL</code>
Backwards Compatibility SCPI	<code>:COUPLE ALL NONE</code>
Backwards Compatibility Notes	<code>:COUP:NONE</code> puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all measurement parameters to their default values.

Remote Command	:CONFigure:SPURious
Example	:CONF:SPUR

Fast Spurious Meas (Remote Command only)

This command is the backward compatibility command for the Fast Spurious Measurement. Since this command is another representation of Spurious Report Mode, it is coupled with that command.

- When set to **ON**, only spurs above the limit line are reported. This is the same as Spurious Report Mode **LIMTest**
- When set to **OFF**, all detected spurs are reported. This is the same as Spurious Report Mode **ALL**

Remote Command	[:SENSe]:SPURious:FSMeas ON OFF 1 0 [:SENSe]:SPURious:FSMeas?
Example	:SPUR:FSM ON :SPUR:FSM?
Couplings	If :SPUR:REPT:MODE is ALL , this parameter is OFF If :SPUR:REPT:MODE is LIMTest , this parameter is ON
Preset	OFF
State Saved	Saved in instrument state

3.6.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal. This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Interfering Signal Present

Sets whether interference signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in Adjacent Channel, Spectrum Emission Mask and Spurious Emissions measurements.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference[:STATE] OFF ON 0 1</code> <code>[:SENSe]:RADio:IMODulation:INTerference[:STATE]?</code>
----------------	--

3 5G NR Mode

3.6 Spurious Emissions Measurement

Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

Freq Offset From Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min	0 Hz
Max	400 MHz

Span

Sets the span of the interference signal for intermodulation tests.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SPAN <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min	200 kHz
Max	400 MHz

Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SIDE NEGative POSitive</code> <code>[:SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	<code>POSitive</code>
State Saved	Saved in instrument state

Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- Inner – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- Outer – The interfering signal exists at either of the outer regions

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:REGion INNER OUTER</code> <code>[:SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	<code>OUTer</code>
State Saved	Saved in instrument state

3.6.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNt <integer></code> <code>[:SENSe]:CCARrier:COUNt?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

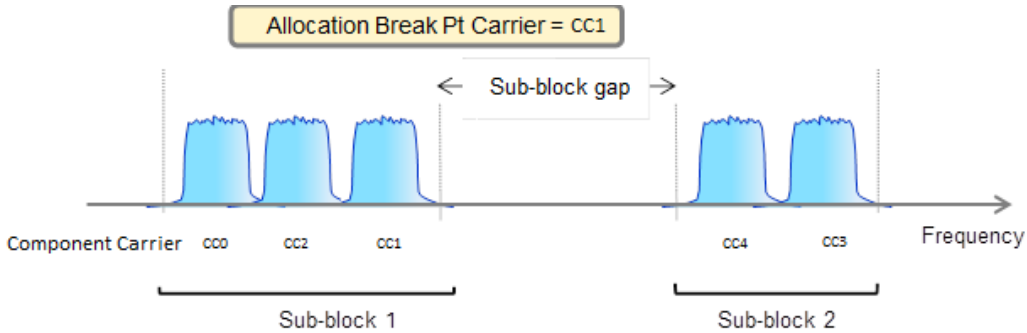

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power	"ACP Power	"SEM Power	"N_Grid_Size

Integration Bandwidth" on page 3300 Integration Bandwidth" on page 3300 Integration Bandwidth" on page 3301 (Display Only)" on page 1828

"SCS (Power Meas)" on page 3302

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CC0 Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz

Channel Spacing for Adjacent NR Carriers	Channel Raster
Carrier Aggregation	
Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

3 5G NR Mode

3.6 Spurious Emissions Measurement

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	<code>FR1</code>
State Saved	Yes
Range	<code>FR1 FR2</code>

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly Also, in some cases, make sure if the "Non-Contiguous Break at" parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMa1 INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>

State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPpower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPpower:BANDwidth[1] 2:INTEgration?</code>	
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>	
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS	
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table	
	When Freq Range is FR1	
	Bandwidth	Downlink ACP Meas Noise BW (MHz)
		Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.515

3 5G NR Mode

3.6 Spurious Emissions Measurement

	10 MHz	9.360	9.375
	15 MHz	14.220	14.235
	20 MHz	19.080	19.095
	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
When Freq Range is FR2			
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
----------------	--

Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with "SCS Enabled" on page 1831.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.6.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled "Configure Preset" lets you configure the preset values for the Component Carriers. Once you have set all the controls in the "Configure Preset" section to the desired value, press the "Apply Preset (to all CCs)" control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs) or the values on the controls will *not* affect the Component Carriers.**

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>
Example	<code>:RAD:STAN:PRESet:FREQ:RANG FR1</code> <code>:RAD:STAN:PRESet:FREQ:RANG?</code>
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 1526 depending on the currently selected value.

Dependencies	Available selections differ depending on Bandwidth as follows:								
	<table> <tr> <th>Bandwidth</th><th>FR</th></tr> <tr> <td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr> <tr> <td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr> <tr> <td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr> </table>	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
	When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	[:SENSe] :RADio:STANdard:PRESet:FRANge								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the "Configure Preset" section then press "Apply Preset (to all CCs)".

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

3 5G NR Mode

3.6 Spurious Emissions Measurement

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "**Duplex Mode**" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRESet:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2

Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?
Example	:RAD:STAN:PRES:TRAN:PER P0_5MS :RAD:STAN:PRES:TRAN:PER?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer> [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?
Example	:RAD:STAN:PRES:DLIN:SLOT:COUN 1 :RAD:STAN:PRES:DLIN:SLOT:COUN?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

3 5G NR Mode

3.6 Spurious Emissions Measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4

State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALlocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	"DDDDDDDSUU"

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the "Configure Preset" section then press "Apply Preset (to all CCs)".

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

3 5G NR Mode

3.6 Spurious Emissions Measurement

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</pre> <p>For option details, see "Selections & Dependencies" on page 1531</p> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</pre>
Example	<pre>:RAD:STAN:PRESet:SCS SCS30K</pre> <pre>:RAD:STAN:PRESet:SCS?</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO 0</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO?</pre>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 1531
Preset	<pre>SCS30K</pre> <pre>ON</pre>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz</p> <p>Auto Man</p>

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **“Number of Component Carriers”** on page 3292 will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1DOT1 DLTm1DOT2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3DOT1 DLTm3DOT1Q16 DLTm3DOT1QPS DLTm3DOT1A DLTm3DOT1B DLTm3DOT2 DLTm3DOT3 FPIBPSK DLTm1DOT1P1 DLTm1DOT1L2</pre> <p>For selection details, see “Available Selections” on page 1533</p> <pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc?</pre>
Example	<pre>:RAD:STAN:PREs:RBAL DLTm1DOT1</pre> <pre>:RAD:STAN:PREs:RBAL?</pre>
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See “Available Selections” on page 1533
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM

3 5G NR Mode

3.6 Spurious Emissions Measurement

Group	Configuration
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				

	FR	FR1	FR2	FR2-1	FR2-2
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM				
	Fulfilled Pi/2 BPSK		✓	✓	✓
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the "Preset for Mod Analysis" section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for

the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

3 5G NR Mode

3.6 Spurious Emissions Measurement

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 1537</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PREs:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN?</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 1537
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	f ≤ 1.0 GHz	FT01
	< f ≤ 3.0 GHz	F1T03
	3.0 < f ≤ 4.2 GHz	F3T04P2
	4.2 < f ≤ 6.0 GHz	F4P2T06
	6.0 < f ≤ 7.125 GHz	F6T07
FR2	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
	52.6 < f ≤ 71.0 GHz	F52T071

Frequency Range	Selection	SCPI
FR2-1	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
FR2-2	52.6 < f ≤ 71.0 GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press *Apply Preset (to all CCs)* or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	<code>BWARea</code>
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in

the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code> <code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:ULIN:ACH NR</code> <code>:RAD:STAN:PRES:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS

	When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1 [:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?
Example	:RAD:STAN:PRES:INCL:EVM:RBAL 1 :RAD:STAN:PRES:INCL:EVM:RBAL?
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1 [:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?
Example	:RAD:STAN:PRES:INCL:EGAT:SOUR 1

	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot

	FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
	FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot
Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?				
Example	:RAD:STAN:PRES:RBAL:TIME:LENG GPP :RAD:STAN:PRES:RBAL:TIME:LENG?				
Notes	Only apply to Modulation Analysis measurement				
State Saved	Yes				

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:IMMediate				
Example	:RAD:STAN:PRES:IMM				
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall 				

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	μ = 0 (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	μ = 0 (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr),	n/a

Assumed Adj Channels (for ACP, FR1)	Cat A Local Area BS, Cat B Local Area BS NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When **"Apply Preset (to All CCs)" on page 3322** is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat A MR BS, Cat B MR BS	None, $f \leq 1.0$ GHz,			Table 6.6.4.5.4-1

1-0		1.0 < f ≤ 3.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.6.4.5.4-3	
		3.0 < f ≤ 4.2 GHz,				
		4.2 < f ≤ 6.0 GHz,				
		6.0 < f ≤ 7.125 GHz				
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz,			Table 6.6.4.5.4-2	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.4-4
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz,			Table 6.6.4.5.5-1	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.5-2
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
Cat A WA BS	f ≤ 1.0 GHz	Table 6.7.4.5.1.1-1				
	None, 1.0 < f ≤ 3.0 GHz		Table 6.7.4.5.1.1-2			
	3.0 < f ≤ 4.2 GHz					
	4.2 < f ≤ 6.0 GHz					
Cat B WA BS	f ≤ 1.0 GHz	Table 6.7.4.5.1.2-1				
	None, 1.0 < f ≤ 3.0 GHz		Table 6.7.4.5.1.2-2			

3 5G NR Mode

3.6 Spurious Emissions Measurement

FR2	2-0	Cat A MR BS, Cat B MR BS	3.0 < f ≤ 4.2 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.2-1	Table 6.7.4.5.1.2-3
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.2-4
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.2-5
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-1
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.4-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-3a
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-4
		Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.4-5
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-6
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-7
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.5-1
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.5-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.5-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.5-4
			None, 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2			Table 6.7.4.5.2.2-1 Table 6.7.4.5.2.2-2 Table

	GHz	6.7.4.5.2.2-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.2-4
Cat B WA BS,	None,	Table
Cat B MR BS,	24.25 < f ≤ 29.5	6.7.4.5.2.3-1
Cat B MR BS	GHz	
(Low P _r),	37.0 < f ≤ 43.5	Table
Cat B LA BS	GHz	6.7.4.5.2.3-2
	43.5 < f ≤ 48.2	Table
	GHz	6.7.4.5.2.3-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values TDD / FDD Duplex Mode			User Defined Duplex mode	
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff Gate (*5)	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate Delay	On	On	(no preset)	On	On
		5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)

Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope =

Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

Uplink	FR2		960 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times \text{SCS [kHz]} \times N_{sc}^{RB} + \text{SCS [kHz]}\}$
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
		100 MHz	120 kHz	
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,
 $N_{sc}^{RB} = 12$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - Stoc: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR	
			Offset

3 5G NR Mode

3.6 Spurious Emissions Measurement

Offset Freq State	Downlink	FR1	A, B	On
			C, ... , L	Off
		FR2	A	On
			B, ... , L	Off
	Uplink		A	On
			B, ... , L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 \cdot BW_{CC}$
			C, ... , L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ... , L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC}
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ... , L	0 Hz
Integ BW	Downlink		All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1:
				$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \cdot BW_{GB}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \cdot BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode

3.6 Spurious Emissions Measurement

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$43.5 < f \leq 48.2$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		$52.6 < f \leq 71.0$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ..., 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
			None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
		100, 400, 800, 1600, 2000 MHz	37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
			52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

3 5G NR Mode

3.6 Spurious Emissions Measurement

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
				All	All	-11.04 dB (= -16 + TT 4.96)

$$52.6 < f \leq 71.0$$

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

3 5G NR Mode
3.6 Spurious Emissions Measurement

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset Frequency Define				EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ... , L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ... , L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State			All	Auto
Res BW			All	Automatically coupled with the Res BW value under the BW menu
Video BW State			All	Auto
Video BW			All	Automatically coupled with the Video BW value under the BW menu

Offset Side		All	Both
Method	Downlink	All	Integration BW
and	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
Filter Alpha		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BType	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,			
			$3.0 < f \leq 4.2$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$4.2 < f \leq 6.0$,	Cat B MR BS,		
			$6.0 < f \leq 7.125$	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
		1-0		Cat A LA BS,	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B LA BS		
			None,	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,			
			$3.0 < f \leq 4.2$,	Cat A MR BS,	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$4.2 < f \leq 6.0$,	Cat B MR BS,		
			$6.0 < f \leq 7.125$	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
				Cat A LA BS,	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B LA BS		

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
--------------------------	----------------------	--	--	--	--------	--------------

3 5G NR Mode
3.6 Spurious Emissions Measurement

	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB (= -45 + TT 1.2)
	1-O		5, ... , 100 MHz	None, $f \leq 1.0$,	All	-44 dB = (-45 + TT 1.0)
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$,	All	-44 dB = (-45 + TT 1.0)
				$6.0 < f \leq 7.125$	All	-44 dB = (-45 + TT 1.0)
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB = (-45 + TT 1.2)
				$4.2 < f \leq 6.0$	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 1569
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1569
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1569
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	C, ... , L	1570 0 Hz
	A, B	See "Table 1 b Offset Freq and Integ BW Offset A/B" on page 1570
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 1569

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub- block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
			A	B	A	B	

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			5 ≤ Wgap < 10	✓		Auto (Cum)	Auto (Cum)
			10 ≤ Wgap < 15	✓	✓	Auto (Cum)	Auto (Cum)
			15 ≤ Wgap < 20	✓	✓	Auto (Norm)	Auto (Cum)
			20 ≤ Wgap	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			20 ≤ Wgap < 40	✓		Auto (Cum)	Auto (Cum)
			40 ≤ Wgap < 60	✓	✓	Auto (Cum)	Auto (Cum)
			60 ≤ Wgap < 80	✓	✓	Auto (Norm)	Auto (Cum)
			80 ≤ Wgap	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			50 ≤ Wgap < 100	✓		Auto (Cum)	Auto
			100 ≤ Wgap	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			200 ≤ Wgap < 400	✓		Auto (Cum)	Auto
			400 ≤ Wgap	✓		Auto (Norm)	Auto

Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth ≤ Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth ≤ Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration		Offset	Preset Value	
Direction	FR	Bandwidth	Offset Freq	Offset Integ BW (MHz)

3 5G NR Mode

3.6 Spurious Emissions Measurement

(MHz)					
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
Uplink		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz			

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$N_{sc}^{RB} = 12$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(

		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$3.0 < f \leq 4.2$,			
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$6.0 < f \leq$ 7.125	Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-32 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat B LA BS		
	1-0	None,	Cat A WA BS	All	$-4 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$f \leq 1.0$,			
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-6 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$3.0 < f \leq 4.2$,			
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-16 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$6.0 < f \leq$ 7.125	Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-23 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat B LA BS		
FR2	2-0	None,	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
		$24.25 < f \leq$ 29.5 ,	Cat B WA BS		
		$37.0 < f \leq$ 43.5	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-17.3 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat B LA BS		
		$43.5 < f \leq$ 48.2	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}($ $BW_{\text{config}})$ dBm
			Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		

3 5G NR Mode

3.6 Spurious Emissions Measurement

52.6 < f ≤ 71.0 (**)	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)
	FR2	2-C	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)

FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	8.2)
					-25.7 dB = (-28 + TT 2.3)
					-23.4 dB = (-26 + TT 2.6)
		100, 400, 800, 1600, 2000 (**) MHz	$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
					-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

3 5G NR Mode

3.6 Spurious Emissions Measurement

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 1577
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 1577
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1577

3 5G NR Mode

3.6 Spurious Emissions Measurement

Integ BW	D, ... , L	0 Hz
	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1577
Offset Side	D, ... , L	Same value as Offset C
	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 1577

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value			Power Ref Type (*)		
Direction	FR	Bandwidth		Offset Enabled			A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			5 ≤ Wgap < 10	✓		(+)	Norm	Norm	Norm
			10 ≤ Wgap	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth ≤ Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth ≤ Wgap".

(++) Same as the rows of "Wgap < 5", "5 ≤ Wgap < 10", and "5 ≤ Wgap".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	= 0.5 x Bandwidth	$\max\{N_{RB}^{SCS}(BW_{CC,FR,SCS}) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW	
Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.6 Spurious Emissions Measurement

D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: f ≤ 1.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category B.

BS Category = Cat B WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands $> 3.0 \text{ GHz}$) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

3 5G NR Mode

3.6 Spurious Emissions Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

B	✓		5.05		10.05		0.1		1
C	✓		10.5		40		0.1		1
D	✓		40		100		0.1		1
E-L			100		500		0.1		1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1

3 5G NR Mode

3.6 Spurious Emissions Measurement

D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
--------	---------	------------------	--	-----------------	--	-----------	---------

3 5G NR Mode
3.6 Spurious Emissions Measurement

A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			1		1	
D	✓		40			100			1		1	
E-L			100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1

3 5G NR Mode

3.6 Spurious Emissions Measurement

D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		1	1
D		200		500		1	1
E-L		200		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.6 Spurious Emissions Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled

B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.05			200			0.1		1		
D		200			500			0.1		1		
E-L		200			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.6 Spurious Emissions Measurement

A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm (NR bands ≤ 3.0 GHz).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB”

in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”.
Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			50.05			0.051	2			
B	✓	50.05			100.05			0.1	1			
C	✓	100.5			200			0.1	1			
D		200			500			0.1	1			
E-L		200			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125$ GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			0.1	1			
D	✓	40			100			0.1	1			
E-L		100			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

3 5G NR Mode

3.6 Spurious Emissions Measurement

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-19.2 dB” is typo and is supposed to be “-19.2 dBm”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			50.05			0.051			2	
B	✓	50.05			100.05			0.1			1	
C	✓	100.5			200			0.1			1	
D		200			500			0.1			1	
E-L		200			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and 24.25 < f ≤ 29.5 GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
			(*)			(*)						
A		✓	0.5			x + 0.5			1	1		
B		✓	x + 0.5			x + 1500			1	1		
C-L			100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: 37.0 < f ≤ 43.5 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)		(*)			
A	✓	0.5		x + 0.5		1	1
B	✓	x + 0.5		x + 1500		1	1
C-L		100		500		1	1

Offset	Enabled	Limit Abs	Limit Rel	FailMask	Limit Abs2	Fail
--------	---------	-----------	-----------	----------	------------	------

3 5G NR Mode

3.6 Spurious Emissions Measurement

												Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$x + 1500$			1	1		
C-L		100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$y + 0.5$			1	1		
C	✓	$y + 5$			$y + 1500$			5	2		
D-L		100			500			5	2		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

3 5G NR Mode

3.6 Spurious Emissions Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs Carrier Allocation $BW_{\text{contiguous}}$

1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{Channel,CA}$: Aggregated BW
> 1	Non-contiguous	$BW_{Channel,block[n]}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

3 5G NR Mode

3.6 Spurious Emissions Measurement

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn’t miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz	Adjust Range: $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, and $6.0 < f \leq 7.125$ GHz
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled

B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 \cdot BW_{\text{Channel,CA}}$$

$$- y = 2 \cdot BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	-1.79 dBm = -5 + TT 3.21	-1.54 dBm = -5 + TT 3.46	TBD	TBD
B_{Lim}	-9.79 dBm = -13 + TT 3.21	-9.54 dBm = -13 + TT 3.46	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW ≤ 400 MHz)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off

4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS

3 5G NR Mode

3.6 Spurious Emissions Measurement

1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)
1	1-O					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz	Span/2	-	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Start Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)

3 5G NR Mode

3.6 Spurious Emissions Measurement

4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category				BS Category			
		All “Cat A” BS				All “Cat B” BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = “All Cat A BS”: Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
 BS Category = “All Cat B BS”: Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to “27 GHz”)

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the “Apply Preset” button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

- Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off

3 5G NR Mode

3.6 Spurious Emissions Measurement

5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

(*) Range “Enabled” state					Note:
#	Adjust Limit Mask for Freq Range (GHz)				
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	
1	✓	✓	✓	✓	
2	✓	✓	✓	✓	
3	✓	✓	✓	✓	
4	✓	✓	✓	✓	
5					Never “enabled” by the “Apply Preset” button A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1, TS38.521-1)
6		✓			
7			✓		
8				✓	
9					Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~					

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005	6 GHz			1 MHz	1	5 MHz	Gaussian

3 5G NR Mode

3.6 Spurious Emissions Measurement

		GHz						
5	✓	6 GHz	12.75 GHz		1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz		1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz		1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz		1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)		(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no	(no

						preset)	preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no preset)	(no preset)
8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	(no preset)	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the “RB Alloc Preset” selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters
- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

3 5G NR Mode

3.6 Spurious Emissions Measurement

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

– Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2

3 5G NR Mode

3.6 Spurious Emissions Measurement

v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for $\pi/2$ BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),
 - Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for $\pi/2$ BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for $\pi/2$ BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399

- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0 subframe	2 subframes
	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0.9286	1.250	n/a
	FR1/FR2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

3 5G NR Mode

3.6 Spurious Emissions Measurement

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2-m	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2-m	
			SRS	0.0714	10.0	2-m	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2-m	10.0	2-m	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2-m (TBD)	10.0	2-m	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

3 5G NR Mode

3.6 Spurious Emissions Measurement

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu s$ RMS averaging window for making the OFF power. $N = SCS/15$, where SCS is in kHz.
- Uplink: Slot length = $2 \cdot \mu$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,	-82.5 dBm / MHz = -85 + TT 2.5

3 5G NR Mode

3.6 Spurious Emissions Measurement

	1-0	6.0 < f ≤ 7.125 GHz		
		None,	-102.6 dBm / MHz	
		f ≤ 1.0 GHz,	= -106 + TT 3.4	
		1.0 < f ≤ 3.0 GHz		
		3.0 < f ≤ 4.2 GHz,	-102.4 dBm / MHz	
		4.2 < f ≤ 6.0 GHz,	= -106 + TT 3.6	
		6.0 < f ≤ 7.125 GHz		
FR2	2-0	None,	-33.1 dBm / MHz	
		24.25 < f ≤ 29.5 GHz,	= -36 + TT 2.9	
		37.0 < f ≤ 43.5,	-32.7 dBm / MHz	
		43.5 < f ≤ 48.2,	= -36 + TT 3.3	
		52.6 < f ≤ 71.0		

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration				Preset Value
	FR	UL ChannelType	Bandwidth	Adjust Range (GHz)	
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	-48.3 dBm = -50 + TT 1.7	
				40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-48.2 dBm = -50 + TT 1.8
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.5 dB = ±(9 + TT 1.5)	
				± 10.8 dB = ±(9 + TT 1.8)		
			40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.7 dB = ±(9 + TT 1.7)	
				± 10.8 dB = ±(9 + TT 1.8)		
	FR2	PUSCH	All FR2 BW		± 14 dB (TT not yet)	
	Parameter	Preset Configuration				Preset Value
		FR	UL Channel Type	Bandwidth	SCS	
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm	
				30 kHz	-4.2 dBm	
			10 MHz	15 kHz	0.4 dBm	
				30 kHz	-0.8 dBm	
				60 kHz	-1.2 dBm	
			15 MHz	15 kHz	1.4 dBm	
				30 kHz	1.2 dBm	
				60 kHz	1.0 dBm	

3 5G NR Mode

3.6 Spurious Emissions Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

3 5G NR Mode

3.6 Spurious Emissions Measurement

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.6.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does not appear in VXT.

Noise Floor Extension

Allows you to turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer), support two states of NFE, Full and Adaptive. The **ON** state (in Modes that do not support Adaptive NFE) matches the **FULL** state (in Modes that *do* support Adaptive NFE).

In **ON** or **FULL** NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes that support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact in having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

Noise Floor Extension has no effect unless the RF Input is selected, therefore it does nothing when **External Mixing** is selected.

In Modes that support Adaptive NFE, the default state of NFE is **Adaptive**. In Modes that do not support Adaptive NFE, the default state of NFE is **OFF**. Prior to the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was **OFF** for all Modes.

With the introduction of Adaptive NFE, the menu control is changed from **On/Off** to **Full/Adaptive/Off**. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on and off was retained, and a new command was added to set the state to turn Adaptive On and Off

`[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, default changed to On for modes which support Adaptive NFE

`[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default=On

FULL = `:CORRection:NOISe:FLOor ON` plus
`:CORRection:NOISe:FLOor:ADAPtive ON`

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the SCPI command is accepted without error (but has no effect)
Couplings	If NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed If NFE is enabled via SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset . Turned ON at startup and by Restore Mode Defaults in Modes that support Adaptive. Turned OFF at startup and by Restore Mode Defaults in Modes that do not support Adaptive
State Saved	No
Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor:ADAPtive?</code>
Example	First turn NFE on, this is Full mode <code>:CORR:NOIS:FLO ON</code> Then set it to Adaptive <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command is accepted without error, but has no effect
Couplings	Sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive OFF for backwards compatibility, so to turn

	Adaptive on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by Mode Preset , but set to ON at startup and by Restore Mode Defaults
State Saved	No

More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average, and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE,

the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and -off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

“This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week”

If you Cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

3.6.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, ["Global Center Freq" on page 3408](#)) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in

when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when **"Restore Defaults"** on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTRument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

3.6.9 Sweep

PP_Substitute: cmn_sweep/Sweep.htm

3.6.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 1637](#)

Remote Command	:INITiate:CONTinuous OFF ON 0 1 :INITiate:CONTinuous?
Example	Put instrument into Single measurement operation: :INIT:CONT 0 :INIT:CONT OFF Put instrument into Continuous measurement operation: :INIT:CONT 1 :INIT:CONT ON
Preset	ON Note that :SYST:PRES sets :INIT:CONT to ON, but *RST sets :INIT:CONT to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting:

	<ul style="list-style-type: none">- A line with an arrow is Single- A loop with an arrow is Continuous
Backwards Compatibility Notes	<p>X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and INIT:CONT ON) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep</p>

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of **:INIT:IMMediate**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single**

does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See ["More Information" on page 1639](#)

Remote Command	:INITiate[:IMMEDIATE] :INITiate:REStart
Example	:INIT:IMM :INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared The SWEEPING bit is set The MEASURING bit is set
Backwards	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command

Compatibility Notes	restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average , but MaxHold and MinHold traces as well
---------------------	---

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is k . This k is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This k is used for comparisons with N , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, K , shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N . The displayed value K changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is ON , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is OFF , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORT</code> is equivalent to the Restart key Not all measurements support this command
Status Bits/OPC dependencies	The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATus:QUEStionable</code> register bit 9 (INTEgrity sum) is cleared Since all the bits that feed into OPC are cleared by <code>:ABORT</code> , the Abort command will cause the <code>*OPC</code> query to return true

3.6.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

Sweep Type

Sets the **Sweep Type** of the spurious measurement to either **Auto** or **Swept**.

When in **Auto**, the selections of swept type of ranges are governed by the Best Speed Sweep Type Rule, and FFT analysis might be chosen for some ranges if it speeds up the measurement.

Remote Command	<code>[:SENSe]:SPURious[:RANGe]:ALL:SWEep:TYPE:AUTO OFF ON 0 1</code> <code>[:SENSe]:SPURious[:RANGe]:ALL:SWEep:TYPE:AUTO?</code>
Example	<code>:SPUR:ALL:SWE:TYPE:AUTO 1</code> <code>:SPUR:ALL:SWE:TYPE:AUTO?</code>
Dependencies	Available only when Option N9060A-7FP is installed
Preset	ON
State Saved	Saved in instrument state
Range	Auto Swept
Annotation	When in Auto , and the instrument is in FFT analysis, an indicator, “FFT” is displayed at the right bottom of range spectrum trace window

Sweep Time Rules

Switches the instrument between **NORMal** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **Accy** (**ACCuracy**) results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[:SENSe]:SPURious:SWEep:TIME:AUTO:RULEs NORMal ACCuracy</code> <code>[:SENSe]:SPURious:SWEep:TIME:AUTO:RULEs?</code>
Example	<code>:SPUR:SWE:TIME:AUTO:RUL ACC</code>

	<code>:SPUR:SWE:TIME:AUTO:RUL?</code>
Notes	This command is implemented as <code>[:SENSe]:SPURious[:RANGe]</code> <code>[:LIST]:SWEep:TIME:AUTO:RULEs</code> to avoid illegal SCPI node definition, so this command should be used as <code>[:SENSe]:SPURious:SWEep:TIME:AUTO:RULEs</code>
Dependencies	Does not appear in SA Mode in VXT
Preset	<code>NORMa1</code>
State Saved	Saved in instrument state
Range	<code>NORMa1 ACCuracy</code>

3.6.10 Trace


Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces.

The "Trace Control" on page 3047 tab of this menu contains radio-button selections for the trace type (Clear/Write, Trace Average, Max Hold, Min Hold) and View/Blank setting for the selected trace.

A trace is a series of data points, each having an x and a y value. The x value is frequency (or time, in zero span) and the y value is amplitude. Each data point is referred to as a *trace point*. In any given trace, trace point 0 is the first point, and trace point (*sweep_points* – 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is *bucket*. A bucket is the frequency span of a trace point, equal to the point spacing. For swept analysis, the y value in each bucket is measured while the instrument is sweeping across the bucket. The selected detector determines how it is measured.

When in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true on multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

Invalid Data Indicator

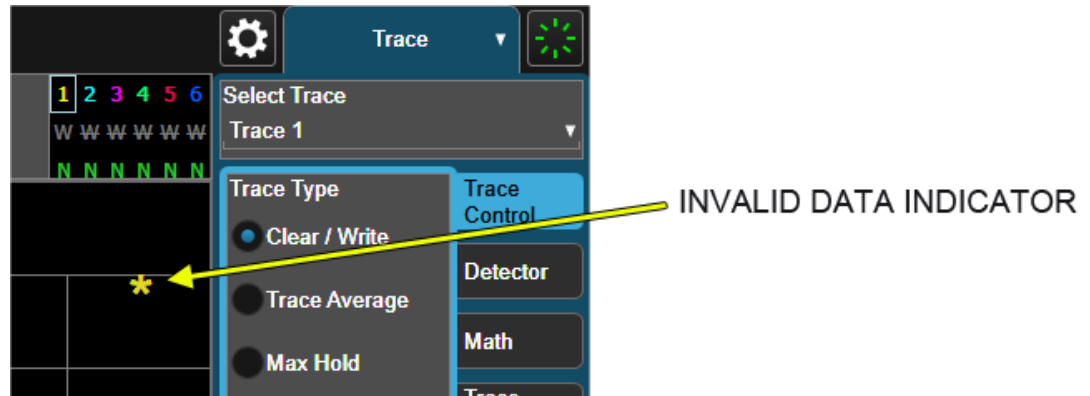

The Invalid Data Indicator is displayed whenever the data on the display does not match the settings of the instrument. The most common example of this is when instrument settings have changed in the time since the data in the traces on the display was taken. This means that the screen annotation cannot be guaranteed to match the trace data. For example, if you change **Center Frequency**, the Invalid Data Indicator will display until the trace has been retaken.

If any Trace is in View mode (displaying but not updating) and instrument settings are changed, the Invalid Data Indicator will display as long as that trace remains in View. Traces that are blanked do not turn on the Invalid Data Indicator.

Not all instrument settings require display of the invalid data indicator when they change; only changes that require a new acquisition will cause it to display. For example, changing the Y-Axis scale of the instrument does not cause the invalid data indicator to display, unless the attenuation changes.

The Invalid Data Indicator is also turned on:


- When the counter is turned on, until the completion of the first count
- When a trace is imported from mass storage and the trace's parameters do not match the current instrument settings
- When a trace is sent to the instrument from a remote interface (since there is no way to know if its settings match)

NOTE

The Invalid Data Indicator has an associated status bit that can be checked at any time to determine whether the indicator is on.

Trace right-click menu


If you right-click on a trace (or touch and hold a trace and wait for the circle to close) you will see the Trace Right-Click Menu:

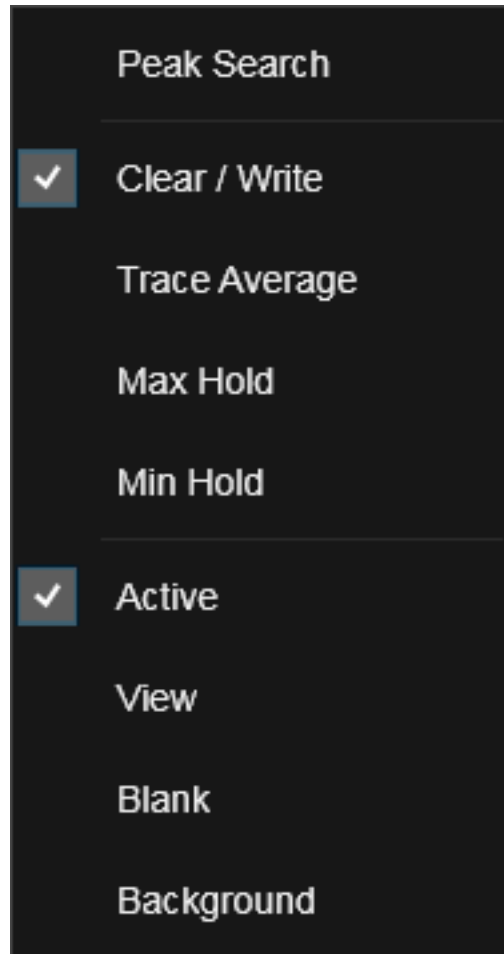

If you now tap or click on one of the items in this menu, the instrument will perform the corresponding function. **Peak Search** finds the highest peak on the selected Trace. **Clear/Write**, **Trace Average**, **Max Hold** and **Min Hold** set the "Trace Type" on [page 3048](#). **Active**, **View**, **Blank**, and **Background** set the "View/Blank" on [page 3053](#) type.

Waterfall Window

If you right-click on the trace (or touch and hold the trace and wait for the circle to close) in the **Waterfall** window (for example, in the Spectrogram View) you will see the Waterfall Trace Right-Click Menu:

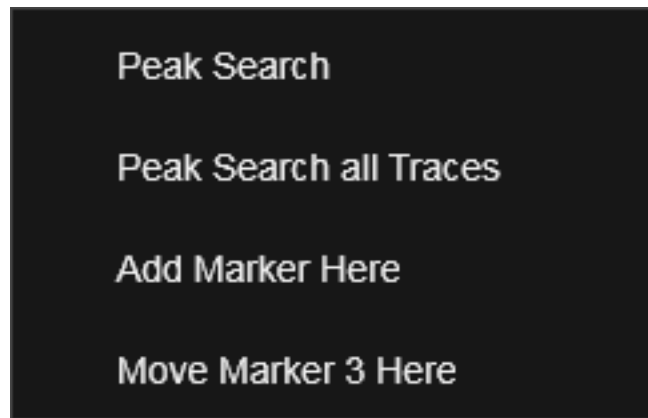


In this menu, **Peak Search** works as above. **Peak Search all Traces** finds the highest peak in the Waterfall window. **Add Marker Here** takes the lowest numbered Marker that is currently Off and turns it On as a **Normal** marker in the Waterfall window at the point where you right-clicked (or touched-and-held). **Move Marker n Here** moves the currently selected Marker to the point in the Waterfall window where you right-clicked (or touched-and-held).

Trace Update Indicator

Trace updates can take one of two forms:


1. The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace
2. The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This will be the case for slow sweeps, multi-chunk FFTs, gated sweeps, etc.

In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written. The indicator is a green caret (^) , which moves across the bottom of the graticule showing the current trace point.



Trace Annunciator Panel

This panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel, as shown below:

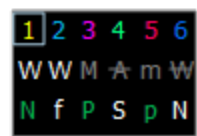

Top Line

On the top line, each trace number is shown, in the trace color. A box is drawn around the currently selected trace.

Middle Line

Below each trace number, is a letter signifying the trace type for that trace number, where

W	Clear/Write
A	Trace Average
M	Max Hold
m	Min Hold

If the letter is white, it means the trace is being updated (**Update = ON**); if the letter is dimmed, it means the trace is not being updated (**Update = OFF**). A strikethrough indicates that the trace is blanked (**Display = OFF**). Note that it is possible for a trace to be updating *and* blanked, which is useful if the trace is a trace math component.

Bottom Line

The third line shows the detector type for each trace, or, if trace math is on for that trace, it shows “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the instrument hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are

N	Normal
A	Average
P	peak
p	negative peak
S	Sample
Q	Quasi Peak
E	EMI Average
R	RMS Average
f	math function

If the letter is green, the detector is in Auto. If white, the detector has been manually selected.

In the example above, the panel is indicating the following:

- Trace 1: Visible, being updated, in Clear/Write, with Normal detector auto selected
- Trace 2: Visible, being updated, in Clear/Write, being written to with a math function
- Trace 3: Visible, not updating, data was taken in Max Hold, with the peak detector auto selected
- Trace 4: Blanked, not updating, data was taken with Averaging turned on, Sample detector manually selected
- Trace 5: Visible, not updating, data was taken in Min Hold with Negative Peak detector auto selected
- Trace 6: Blanked, not updating, in Clear/Write, with Normal detector manually selected

Trace Annotation

When **Trace Annotation** (see **Display**) is **ON**, each non-blanked trace is labeled on the trace with the detector used to take it, unless a Trace Math function is on for that trace, in which case it is labeled with the **"Math Function"** on page 2604.

The detector labels are:

NORM	Normal
PEAK	Peak
SAMP	Sample
NPEAK	Negative Peak
RMS	Average detector with Power Average (RMS)
LG AVG	Average detector with Log-Pwr Average
VAVG	Average detector with Voltage Average
QPEAK	Quasi Peak
EMI AVG	EMI Average
RMS AVG	RMS Average

The trace math labels are:

PDIF	Power Difference
PSUM	Power Sum
LOFF	Log Offset
LDIF	Log Difference

3.6.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	<p>For the Swept SA measurement:</p> <ul style="list-style-type: none">- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View- When you turn on Image Suppress, Update turns off for all traces except the selected trace <p>For the ACP measurement, when Meas Method is RBW, FAST or FPOwer, Select Trace is disabled</p>
Preset	Trace 1
State Saved	Yes

3.6.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "View/Blank" on page 3053 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	<code>WRITe</code>	<code>:TRAC2:TYPE WRIT</code>	See: "Clear/Write" on page 1653
Trace Average	<code>AVERAge</code>	<code>:TRAC2:TYPE AVER</code>	See: "Trace Average" on page 1653
Maximum Hold	<code>MAXHold</code>	<code>:TRAC3:TYPE MAXH</code>	See: "Max Hold" on page 1654
Minimum Hold	<code>MINHold</code>	<code>:TRAC5:TYPE MINH</code>	See: "Min Hold" on page 1654

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "**View/Blank**" on page 3053 state must be set to **Active** (Update: **ON**, Display: **ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "**Trace Mode Backwards Compatibility Commands**" on page 1651

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 3:<meas>:TYPE?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a Trace Type (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to Active (Update: ON, Display: OFF), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[:SENSe]:<meas>:DETECTOR:AUTO?</code>), Detector (<code>[:SENSe]:<meas>:DETECTOR[:FUNCTION]?</code>) switches aligning with the switch of this parameter: "NORMAL" with <code>WRITe</code> (Clear Write), "AVERAge" with <code>AVERAge</code>, "POSitive (peak)" with <code>MAXHold</code>, and "NEGative (peak)" with <code>MINHold</code></p>
Preset	<p>Swept SA and Monitor Spectrum: <code>WRITe</code></p> <p>All other measurements: <code>AVERAge</code></p> <p>Following Preset, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under **"View/Blank" on page 3053**.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRACe:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[:SENSe]:AVERage[:STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	WRITE
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	:TRACe[1] 2 ... 6:MODE WRITE MAXHold MINHold VIEW BLANK :TRACe[1] 2 ... 6:MODE?
Backwards Compatibility Notes	<p>The legacy :TRACe:MODE command is retained for backwards compatibility. In conjunction with the legacy :AVERage command, it works as follows:</p> <ul style="list-style-type: none"> – :AVERage ON OFF sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the [:SENSe]:AVERage[:STATe] command description below – :TRACe:MODE WRITE sets :TRACe:TYPE WRITE (Clear/Write) unless average is true, in which case it sets it to :TRACe:TYPE AVERage. It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace – :TRACe:MODE MAXHold sets :TRACe:TYPE MAXHold (Max Hold). It also sets :TRACe:UPDate ON, :TRACe:DISPlay ON, for the selected trace

- `:TRACe:MODE MINHold` sets `:TRACe:TYPE MINHold` (Min Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE VIEW` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	OFF
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[:SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated

- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending **:TRAC:TYPE MAXH** for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count *k* is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending **:TRAC:TYPE MINH** for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 3048 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

Active	Update and Display both ON
View	Update OFF ; Display ON
Blank	Update OFF ; Display OFF
Background	Update ON , Display OFF Allows a trace to be blanked <i>and</i> continue to update “in the background”, which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

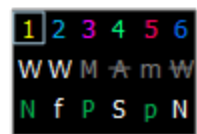

See: ["More Information" on page 1657](#)

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 1656 and "Trace Display State On/Off" on page 1656 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[:SENS] :DET :TRAC</code>) puts the trace in Active (UpdateON and DisplayON), even if that detector was already selected</p> <p>Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (UpdateON and DisplayON), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange</p>

Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 3:<meas>:UPDate[:STATe]?</pre> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p>
----------------	--

	<pre>:TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0 :TRACe[1] 2 3:<meas>:DISPlay[:STATe]?</pre> where <meas> is the identifier for the current measurement
Example	Make trace 1 visible: :TRAC2:DISP 1 Blank trace 3: :TRAC3:DISP 3
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	For Swept SA Measurement (in SA Mode): 1 0 0 0 0 0 ON for Trace 1; OFF for 2–6 For all other measurements: 1 0 0 ON for Trace 1; OFF for 2 & 3
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

3.6.10.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 2610 controls.

- See "How trace math is processed" on page 1662

Remote Command	<p>For option details, see "Trace Math Options" on page 1660</p> <p>For Swept SA Measurement (in SA Mode):</p> <pre>:CALCulate:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate:MATH? <trace_num></pre> <p>where <trace_num> is any one of:</p> <pre>TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:CALCulate:<meas>:MATH <trace_num>, PDIFference PSUM LOFFset LDIFference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate[:<meas>]:MATH? <trace_num></pre> <p>where:</p> <p><meas> is the identifier for the current measurement, and</p> <p><trace_num> is any one of:</p> <pre>TRACe1 TRACe2 TRACe3</pre> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre>

3 5G NR Mode

3.6 Spurious Emissions Measurement

	<p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: TRACE1 ... TRACE6 - Set 2 defines the “function”: PDIFference PSUM LOFFset LDIFference OFF - Set 3 is a “trace operand” (1): TRACE1 ... TRACE6 - Set 4 is a “trace operand” (2): TRACE1 ... TRACE6 - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if Normalize is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p>OFF,TRACE5,TRACE6,0,0 OFF,TRACE6,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0 OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE4,0,0 OFF,TRACE4,TRACE5,0,0</p> <p>For all other measurements:</p> <p>OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0</p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on;

	and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(1/10)(\text{FirstTrace}) - 10 \log_{10}(1/10)(\text{SecondTrace})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-

B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at –5 dBm, and the reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.


How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

3 5G NR Mode

3.6 Spurious Emissions Measurement

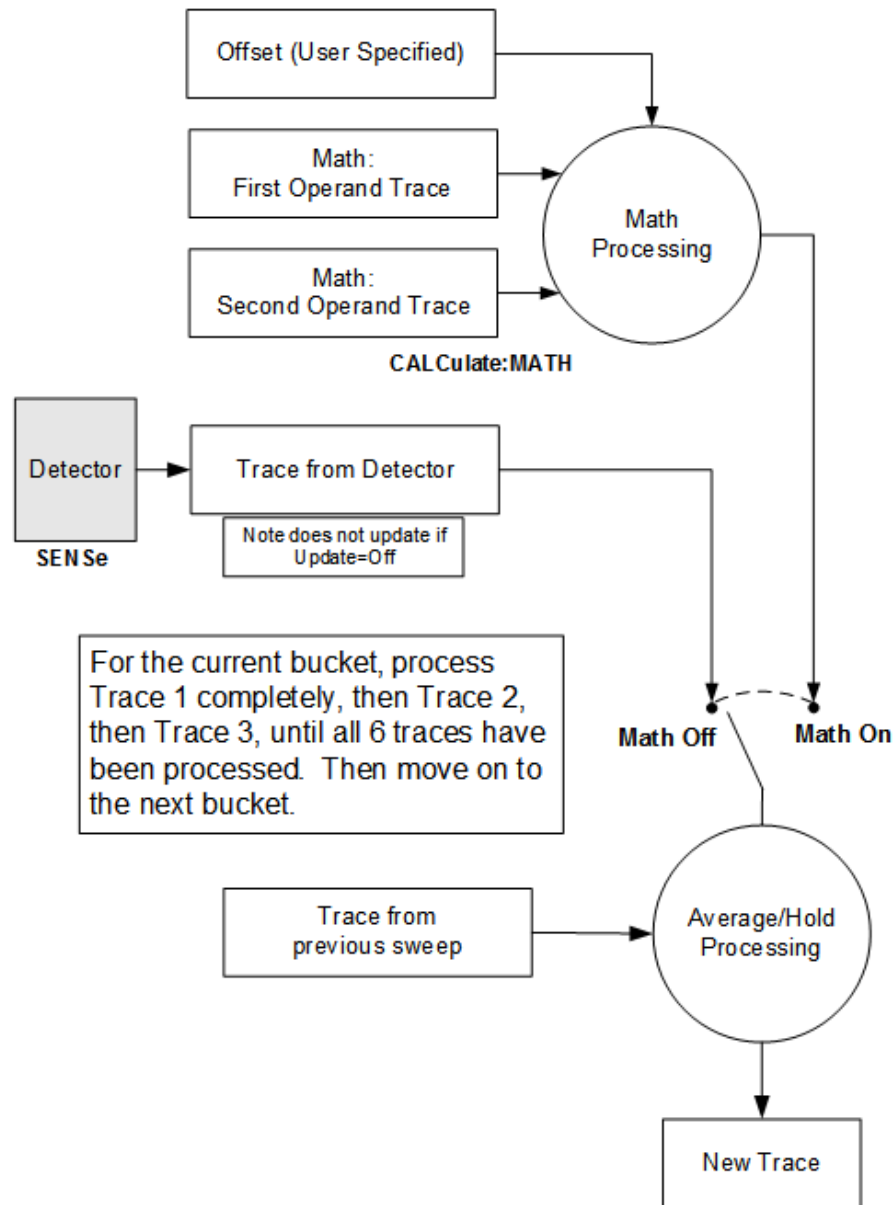

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.6.10.4 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	1
--------	---

To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	2
--------	---

Copy

Executes a Trace Copy based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe:COPIY TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:COPIY TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <pre>:TRAC:COPIY TRACE1,TRACE3</pre>
Notes	<p>The command is of the form:</p> <pre>:TRACe:COPIY <source_trace>,<dest_trace></pre>
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	The destination trace is put in View (Update = Off, Display = On) after the copy
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>TRACE1, TRACE2</pre> <p>For all other measurements:</p> <pre>TRACe1, TRACe2</pre>

Exchange

Executes a Trace Exchange based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACE:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the :TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON:</p> <pre>:TRAC:EXCH TRACE1,TRACE2</pre>
Notes	<p>The command is of the form:</p> <pre>:TRACe:EXCHange <trace_1>,<trace_2></pre>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<pre>:TRACe[:<meas>]:PRESet:ALL</pre>
Example	<pre>:TRAC:PRE:ALL</pre>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads **mintracevalue** into all of the points for all traces, except traces in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	<pre>:TRACe[:<meas>]:CLEar:ALL</pre>
Example	<pre>:TRAC:CLE:ALL</pre>
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
From Trace		Trace 1	
To Trace		Trace 2	
	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command `:TRACe:<meas>:PRESet:EIRP`

Example For OBW Meas:
`:TRAC:OBW:PRES:EIRP`

3.6.10.5 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a `:READ` or `:FETCh` query:

- Trace 1
- Trace 2
- Trace 3

Remote Command `:CALCulate:<meas>:MTRace TRACe1 | TRACe2 | TRACe3`
`:CALCulate:<meas>:MTRace?`

`<meas>` is the identifier for the current measurement; any one of `CHPower` | `ACPower` | `OBWidth` | `SEMask` | `SPURious` | `PVTime`

Example Channel Power
`:CALC:CHP:MTR TRAC1`
`:CALC:CHP:MTR?`

3 5G NR Mode

3.6 Spurious Emissions Measurement

Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.7 Modulation Analysis Measurement

The 5G NR Modulation Analysis measurement is used to test the Transmitted signal quality for both Base station and User equipment for E-UTRA according to 3GPP Specifications.

Once required parameters are specified, the demodulator will automatically lock onto the signal, and calculate various metrics, the output results of measurement include Frequency Error, Error Vector Magnitude, Time Alignment Error, Carrier Leakage, In-Band Emission, Equalizer Spectrum Flatness and so on.

Baseband I/Q Inputs Support

Baseband I/Q Input functionality is a hardware option and provides the ability to analyze baseband I/Q signal characteristics of mobile and base station transmitters. If the option is installed, this functionality is available in this measurement.

Because the measurement acquires the data in I/Q form regardless of RF or I/Q input selection, all the calculations for the measurement are the same regardless of RF or I/Q input selection.

Modulation Analysis Measurement Commands

The general functionality of ["CONFigure" on page 4138](#), ["INITiate" on page 4139](#), ["FETCh" on page 4139](#), ["MEASure" on page 4141](#), and ["READ" on page 4140](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

The following commands and queries are used to configure the measurement, then retrieve the results:

```
:CONFigure:EVM
:CONFigure:EVM:NDEFault
:INITiate:EVM
:FETCh:EVM[n]?
:READ:EVM[n]?
:MEASure:EVM[n]?
```

Remote Command Results for Modulation Analysis Measurement

For the [FETCh](#), [MEASure](#), and [READ](#) queries listed above, the results returned depend on the value of **n**. For this measurement, the value of **n** is derived by concatenating three 2-digit sub-fields, as follows:

Sub-field	Variable	Definition
Most Significant 2 Digits	CC	The CC index. The current valid range is 00-15 and 99 See "CC Index" on page 1671 below

3 5G NR Mode

3.7 Modulation Analysis Measurement

Sub-field	Variable	Definition
Middle 2 Digits	BI	The SSB and BWP index See "SSB and BWP Index" on page 1671 below
Least Significant 2 Digits	RI	The result index for each CC See "Result Index" on page 1672 below

The general formula for calculating the desired value of **n** is:

$$n = 10000 * \text{CC} + 100 * \text{BI} + \text{RI}$$

Note that certain result types cannot be retrieved in this way. See "Complex Results" on page 1696.

CC Index

The **CC** digits specify:

00-15	CC0 to CC15
99	Results not for a specific CC

SSB and BWP Index

The **BI** digits specify:

00	Results not specific for SSB and BWP	
01	Results specific to SSB with 15 kHz SCS for FR1 or 120 kHz SCS for FR2 Obsolete: indexes 41-44 provide results for each SSB allocation, although indexes 01-02 remain valid for backwards compatibility	
02	Results specific to SSB with 30 kHz SCS for FR1 or 240 kHz SCS for FR2 Obsolete: indexes 41-44 provide results for each SSB allocation, although indexes 01-02 remain valid for backwards compatibility	
03	First Sidelink SSB	
04	Second Sidelink SSB	
10	Results specific to PRACH	
11-14	Results specific to UL BWP1-BWP4	
	BWP1	11
	BWP2	12
	BWP3	13
	BWP4	14
20	DL initial BWP (BWP0)	
21-24	Results specific to DL BWP1-BWP4	
	BWP1	21

	BWP2	22
	BWP3	23
	BWP4	24
31-34	Results specific to Sidelink BWP1-BWP4	
	BWP1	31
	BWP2	32
	BWP3	33
	BWP4	34
41-44	Results specific to SSB1-SSB4	
	SSB1	41
	SSB2	42
	SSB3	43
	SSB4	44

Result Index

The current valid range for the **RI** digits is 01-31.

01	Demod Summary
02	Frame Summary
03	BWP Summary
04	In-Band Emission Limit (All)
05	In-Band Emission Trace
06	Component Carrier Summary
07	RMS Error Vector Time
08	RMS Error Vector Spectrum
09	Power vs Time
10	Flatness Limit
11	Flatness Trace
12	User Summary
13	MIMO Info
	Obsolete: index 30 provides these and additional results in a new format, although index 13 remains valid for backwards compatibility
14	Slot Summary
15	RMS Demod Power vs Time
16	RMS Demod Power vs Spectrum
17	OBW Results
18	ACP Results

3.7 Modulation Analysis Measurement

19	SEM Results
20	Frequency Error per Sub-Frame
21	Channel Magnitude Frequency Response Trace
22	Channel Phase Frequency Response Trace
23	Channel Group Delay Trace
24	Transmit On/Off Results
25	Additional per channel MIMO Results
26	IQ Gain Imbalance Trace
27	IQ Quad Error Trace
28	Additional In-Band Emission Limit (General, IQ Image and Carrier Leakage)
29	Flatness Results
30	MIMO Info
	Updated replacement for index 13 above, with additional results
31	ccEVM summary
32	ccEVM vs symbol magnitude
33	Decoded Info

Use the following table to construct the desired value of index n .

CC	BI	RI	Result Details
00-15	00	01 Or not specified	Returns demod summary results for CC ("Component Carrier" on page 1789) when it is active All the return values are floating-point If no result is available, NaN (9.91E+37) is returned
#	Result	Unit, if any	
1	Channel Power	dBm	
2	EVM	%	
3	EVM Peak	%	
4	Freq Error (RMS)	Hz	
5	Symbol Clock Error	ppm	
6	IQ Offset	dB	
7	Time Offset	s	
8	Sync Corr		
9	Sync Source:		
	– 1: PSS, SSS		
	– 2: PDSCH DMRS		
	– 3: PUSCH DMRS		

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			10	Cell ID	
			11	Flatness results:	
				– 0: Pass	
				– 1: Fail	
			12	Flatness Widest Fail Margin	dB
			13	Flatness Widest Fail Slot	
			14	Flatness Widest Fail subcarrier	
			15	Flatness Ripple Range1	dB
			16	Flatness Ripple Range2	dB
			17	Flatness Max Range1 – Min Range2	dB
			18	Flatness Max Range2 – Min Range1	dB
			19	Flatness Min Range1	dB
			20	Flatness Max Range1	dB
			21	Flatness Min Range2	dB
			22	Flatness Max Range2	dB
			23	Channel Power (Active)	dBm
			24	Mag Error	%
			25	Phase Error	radian
			26	Gain Imbalance	dB
			27	Quad Error	degree
			28	Timing Skew	ps
			29	Freq Error (Worst)	Hz
			30	MIMO TAE	s
			31	Reserved	-

If “Report EVM in dB” is true, then the EVM result is in “dB”

For MIMO, Channel Power and Channel Power Active are summary of all channels

IQ Offset, Gain Imbalance, Quad Error and Timing Skew are only available in SISO mode. MIMO IQ Offset will be provided separately (RI=06)

MIMO TAE result is available for MIMO/MISO modes

BWP1 Flatness results will be returned here for backwards compatibilities

00-15 01-02 02

Obsolete: BI indexes 41-44 provide results for each SSB allocation, although BI indexes 01-02 remain valid for backwards compatibility

Returns frame summary results of first and second SSB numerology for **CC** ("**Component Carrier**" on page 1789) when it is active

All the return values are floating-point

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details																																							
			<p>If no result is available, NaN (9.91E+37) is returned</p> <table><thead><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr></thead><tbody><tr><td>1</td><td>P-SS EVM</td><td>%</td></tr><tr><td>2</td><td>P-SS Power</td><td>dBm</td></tr><tr><td>3</td><td>P-SS RB Num</td><td></td></tr><tr><td>4</td><td>S-SS EVM</td><td>%</td></tr><tr><td>5</td><td>S-SS Power</td><td>dBm</td></tr><tr><td>6</td><td>S-SS RB Num</td><td></td></tr><tr><td>7</td><td>PBCH EVM</td><td>%</td></tr><tr><td>8</td><td>PBCH Power</td><td>dBm</td></tr><tr><td>9</td><td>PBCH RB Num</td><td></td></tr><tr><td>10</td><td>PBCH DMRS EVM</td><td>%</td></tr><tr><td>11</td><td>PBCH DMRS Power</td><td>dBm</td></tr><tr><td>12</td><td>PBCH DMRS RB Num</td><td></td></tr></tbody></table>	#	Result	Unit, if any	1	P-SS EVM	%	2	P-SS Power	dBm	3	P-SS RB Num		4	S-SS EVM	%	5	S-SS Power	dBm	6	S-SS RB Num		7	PBCH EVM	%	8	PBCH Power	dBm	9	PBCH RB Num		10	PBCH DMRS EVM	%	11	PBCH DMRS Power	dBm	12	PBCH DMRS RB Num	
#	Result	Unit, if any																																								
1	P-SS EVM	%																																								
2	P-SS Power	dBm																																								
3	P-SS RB Num																																									
4	S-SS EVM	%																																								
5	S-SS Power	dBm																																								
6	S-SS RB Num																																									
7	PBCH EVM	%																																								
8	PBCH Power	dBm																																								
9	PBCH RB Num																																									
10	PBCH DMRS EVM	%																																								
11	PBCH DMRS Power	dBm																																								
12	PBCH DMRS RB Num																																									
00-15	03-04	02	<p>If “Report EVM in dB” is true, then the EVM result is in “dB”</p> <p>Returns frame summary results of first and second Sidelink SSB for CC ("Component Carrier" on page 1789) when it is active</p> <p>All the return values are floating-point</p> <p>If no result is available, NaN (9.91E+37) is returned</p> <table><thead><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr></thead><tbody><tr><td>1</td><td>S-PSS EVM</td><td>%</td></tr><tr><td>2</td><td>S-PSS Power</td><td>dBm</td></tr><tr><td>3</td><td>S-PSS RB Num</td><td></td></tr><tr><td>4</td><td>S-SSS EVM</td><td>%</td></tr><tr><td>5</td><td>S-SSS Power</td><td>dBm</td></tr><tr><td>6</td><td>S-SSS RB Num</td><td></td></tr><tr><td>7</td><td>PSBCH EVM</td><td>%</td></tr><tr><td>8</td><td>PSBCH Power</td><td>dBm</td></tr><tr><td>9</td><td>PSBCH RB Num</td><td></td></tr><tr><td>10</td><td>PSBCH DMRS EVM</td><td>%</td></tr><tr><td>11</td><td>PSBCH DMRS Power</td><td>dBm</td></tr><tr><td>12</td><td>PSBCH DMRS RB Num</td><td></td></tr></tbody></table>	#	Result	Unit, if any	1	S-PSS EVM	%	2	S-PSS Power	dBm	3	S-PSS RB Num		4	S-SSS EVM	%	5	S-SSS Power	dBm	6	S-SSS RB Num		7	PSBCH EVM	%	8	PSBCH Power	dBm	9	PSBCH RB Num		10	PSBCH DMRS EVM	%	11	PSBCH DMRS Power	dBm	12	PSBCH DMRS RB Num	
#	Result	Unit, if any																																								
1	S-PSS EVM	%																																								
2	S-PSS Power	dBm																																								
3	S-PSS RB Num																																									
4	S-SSS EVM	%																																								
5	S-SSS Power	dBm																																								
6	S-SSS RB Num																																									
7	PSBCH EVM	%																																								
8	PSBCH Power	dBm																																								
9	PSBCH RB Num																																									
10	PSBCH DMRS EVM	%																																								
11	PSBCH DMRS Power	dBm																																								
12	PSBCH DMRS RB Num																																									
00-15	41-44	02	<p>If “Report EVM in dB” is true, then the EVM result is in “dB”</p> <p>Returns frame summary results of SSB allocations for CC ("Component Carrier" on page 1789) when it is active</p> <p>All the return values are floating-point</p>																																							

CC	BI	RI	Result Details																																							
			<p>If no result is available, NaN (9.91E+37) is returned</p> <table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>P-SS EVM</td><td>%</td></tr><tr><td>2</td><td>P-SS Power</td><td>dBm</td></tr><tr><td>3</td><td>P-SS RB Num</td><td></td></tr><tr><td>4</td><td>S-SS EVM</td><td>%</td></tr><tr><td>5</td><td>S-SS Power</td><td>dBm</td></tr><tr><td>6</td><td>S-SS RB Num</td><td></td></tr><tr><td>7</td><td>PBCH EVM</td><td>%</td></tr><tr><td>8</td><td>PBCH Power</td><td>dBm</td></tr><tr><td>9</td><td>PBCH RB Num</td><td></td></tr><tr><td>10</td><td>PBCH DMRS EVM</td><td>%</td></tr><tr><td>11</td><td>PBCH DMRS Power</td><td>dBm</td></tr><tr><td>12</td><td>PBCH DMRS RB Num</td><td></td></tr></table>	#	Result	Unit, if any	1	P-SS EVM	%	2	P-SS Power	dBm	3	P-SS RB Num		4	S-SS EVM	%	5	S-SS Power	dBm	6	S-SS RB Num		7	PBCH EVM	%	8	PBCH Power	dBm	9	PBCH RB Num		10	PBCH DMRS EVM	%	11	PBCH DMRS Power	dBm	12	PBCH DMRS RB Num	
#	Result	Unit, if any																																								
1	P-SS EVM	%																																								
2	P-SS Power	dBm																																								
3	P-SS RB Num																																									
4	S-SS EVM	%																																								
5	S-SS Power	dBm																																								
6	S-SS RB Num																																									
7	PBCH EVM	%																																								
8	PBCH Power	dBm																																								
9	PBCH RB Num																																									
10	PBCH DMRS EVM	%																																								
11	PBCH DMRS Power	dBm																																								
12	PBCH DMRS RB Num																																									
00-15	10	02	<p>If “Report EVM in dB” is true, then the EVM result is in “dB”</p> <p>Returns frame summary results of PRACH for CC ("Component Carrier" on page 1789) when it is active</p> <p>All the return values are floating points</p> <p>If no result is available, NaN (9.91E+37) is returned</p> <table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>PRACH EVM</td><td>%</td></tr><tr><td>2</td><td>PRACH Power</td><td>dBm</td></tr><tr><td>3</td><td>PRACH RB Num</td><td></td></tr></table>	#	Result	Unit, if any	1	PRACH EVM	%	2	PRACH Power	dBm	3	PRACH RB Num																												
#	Result	Unit, if any																																								
1	PRACH EVM	%																																								
2	PRACH Power	dBm																																								
3	PRACH RB Num																																									
00-15	11-14	02	<p>If “Report EVM in dB” is true, then the EVM result is in “dB”</p> <p>Returns frame summary results of UL BWP1 - UL BWP4 (see "SSB and BWP Index" on page 1671) for CC ("Component Carrier" on page 1789) when it is active</p> <p>All the return values are floating points</p> <p>If no result is available, NaN (9.91E+37) is returned</p> <table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>PUSCH EVM</td><td>%</td></tr><tr><td>2</td><td>PUSCH Power</td><td>dBm</td></tr><tr><td>3</td><td>PUSCH RB Num</td><td></td></tr><tr><td>4</td><td>PUSCH DMRS EVM</td><td>%</td></tr><tr><td>5</td><td>PUSCH DMRS Power</td><td>dBm</td></tr></table>	#	Result	Unit, if any	1	PUSCH EVM	%	2	PUSCH Power	dBm	3	PUSCH RB Num		4	PUSCH DMRS EVM	%	5	PUSCH DMRS Power	dBm																					
#	Result	Unit, if any																																								
1	PUSCH EVM	%																																								
2	PUSCH Power	dBm																																								
3	PUSCH RB Num																																									
4	PUSCH DMRS EVM	%																																								
5	PUSCH DMRS Power	dBm																																								

3 5G NR Mode
3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
00-15	20-24	02	6	PUSCH DMRS RB Num	
			7	PUSCH PTRS EVM	%
			8	PUSCH PTRS Power	dBm
			9	PUSCH PTRS RB Num	
			10	PUCCH EVM	%
			11	PUCCH Power	dBm
			12	PUCCH RB Num	
			13	PUCCH DMRS EVM	%
			14	PUCCH DMRS Power	dBm
			15	PUCCH DMRS RB Num	
			16	SRS EVM	%
			17	SRS Power	dBm
			18	SRS RB Num	
			If "Report EVM in dB" is true, then the EVM result is in "dB"		
			Returns frame summary results of initial BWP (BWPO), DL BWP1 – DL BWP4 (see "SSB and BWP Index" on page 1671) for CC ("Component Carrier" on page 1789) when it is active		
			All the return values are floating points		
			If no result is available, NaN (9.91E+37) is returned		
			#	Result	Unit, if any
			1	PDSCH EVM	%
			2	PDSCH Power	dBm
			3	PDSCH RB Num	
			4	PDSCH DMRS EVM	%
			5	PDSCH DMRS Power	dBm
			6	PDSCH DMRS RB Num	
			7	PDSCH PTRS EVM	%
			8	PDSCH PTRS Power	dBm
			9	PDSCH PTRS RB Num	
			10	PDCCH EVM	%
			11	PDCCH Power	dBm
			12	PDCCH RB Num	
			13	PDCCH DMRS EVM	%
			14	PDCCH DMRS Power	dBm

CC	BI	RI	Result Details																																																	
00-15	31-34	02	<table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>15</td><td>PDCCH DMRS RB Num</td><td></td></tr><tr><td>16</td><td>CSI-RS EVM</td><td>%</td></tr><tr><td>17</td><td>CSI-RS Power</td><td>dBm</td></tr><tr><td>18</td><td>CSI-RS RB Num</td><td></td></tr><tr><td>19</td><td>RIM-RS EVM</td><td>%</td></tr><tr><td>20</td><td>RIM-RS Power</td><td>dBm</td></tr><tr><td>21</td><td>RIM-RS RB Num</td><td></td></tr></table>	#	Result	Unit, if any	15	PDCCH DMRS RB Num		16	CSI-RS EVM	%	17	CSI-RS Power	dBm	18	CSI-RS RB Num		19	RIM-RS EVM	%	20	RIM-RS Power	dBm	21	RIM-RS RB Num																										
			#	Result	Unit, if any																																															
			15	PDCCH DMRS RB Num																																																
			16	CSI-RS EVM	%																																															
			17	CSI-RS Power	dBm																																															
			18	CSI-RS RB Num																																																
			19	RIM-RS EVM	%																																															
			20	RIM-RS Power	dBm																																															
			21	RIM-RS RB Num																																																
			If “Report EVM in dB” is true, then the EVM result is in “dB”																																																	
			Returns frame summary results of Sidelink BWP1 - BWP4 (see "SSB and BWP Index" on page 1671) for CC ("Component Carrier" on page 1789) when it is active																																																	
			All the return values are floating points																																																	
			If no result is available, NaN (9.91E+37) is returned																																																	
			<table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>PSSCH EVM</td><td>%</td></tr><tr><td>2</td><td>PSSCH Power</td><td>dBm</td></tr><tr><td>3</td><td>PSSCH RB Num</td><td></td></tr><tr><td>4</td><td>PSSCH DMRS EVM</td><td>%</td></tr><tr><td>5</td><td>PSSCH DMRS Power</td><td>dBm</td></tr><tr><td>6</td><td>PSSCH DMRS RB Num</td><td></td></tr><tr><td>7</td><td>PSSCH PTRS EVM</td><td>%</td></tr><tr><td>8</td><td>PSSCH PTRS Power</td><td>dBm</td></tr><tr><td>9</td><td>PSSCH PTRS RB Num</td><td></td></tr><tr><td>10</td><td>PSCCH EVM</td><td>%</td></tr><tr><td>11</td><td>PSCCH Power</td><td>dBm</td></tr><tr><td>12</td><td>PSCCH RB Num</td><td></td></tr><tr><td>13</td><td>PSCCH DMRS EVM</td><td>%</td></tr><tr><td>14</td><td>PSCCH DMRS Power</td><td>dBm</td></tr><tr><td>15</td><td>PSCCH DMRS RB Num</td><td></td></tr></table>	#	Result	Unit, if any	1	PSSCH EVM	%	2	PSSCH Power	dBm	3	PSSCH RB Num		4	PSSCH DMRS EVM	%	5	PSSCH DMRS Power	dBm	6	PSSCH DMRS RB Num		7	PSSCH PTRS EVM	%	8	PSSCH PTRS Power	dBm	9	PSSCH PTRS RB Num		10	PSCCH EVM	%	11	PSCCH Power	dBm	12	PSCCH RB Num		13	PSCCH DMRS EVM	%	14	PSCCH DMRS Power	dBm	15	PSCCH DMRS RB Num		
			#	Result	Unit, if any																																															
			1	PSSCH EVM	%																																															
			2	PSSCH Power	dBm																																															
			3	PSSCH RB Num																																																
			4	PSSCH DMRS EVM	%																																															
			5	PSSCH DMRS Power	dBm																																															
			6	PSSCH DMRS RB Num																																																
7	PSSCH PTRS EVM	%																																																		
8	PSSCH PTRS Power	dBm																																																		
9	PSSCH PTRS RB Num																																																			
10	PSCCH EVM	%																																																		
11	PSCCH Power	dBm																																																		
12	PSCCH RB Num																																																			
13	PSCCH DMRS EVM	%																																																		
14	PSCCH DMRS Power	dBm																																																		
15	PSCCH DMRS RB Num																																																			
00-15	01-02	03	<p>If “Report EVM in dB” is true, then the EVM result is in “dB”</p> <p>Obsolete: BI indexes 41-44 provide results for each SSB allocation, although BI indexes 01-02 remain valid for backwards compatibility</p> <p>Returns BWP summary results of first and second SSB numerology for CC ("Component Carrier" on page 1789) when it is active</p> <p>All the return values are floating points</p> <p>If no result is available, NaN (9.91E+37) is returned</p>																																																	

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			1	SSS-RSRP	dBm
			2	SSS-RSSI	dBm
			3	SSS-RSRQ	dB
			4	SSS-SINR	dB
			5	Mag Error	%
			6	Phase Error	radian
00-15	41-44	03	Returns BWP summary results of SSB allocations for CC ("Component Carrier" on page 1789) when it is active All the return values are floating points If no result is available, NaN (9.91E+37) is returned		
			#	Result	Unit, if any
			1	SSS-RSRP	dBm
			2	SSS-RSSI	dBm
			3	SSS-RSRQ	dB
			4	SSS-SINR	dB
			5	Mag Error	%
			6	Phase Error	radian
00-15	11-14	03	Returns BWP summary results of UL BWP1 - UL BWP4 (see "SSB and BWP Index" on page 1671) for CC ("Component Carrier" on page 1789) when it is active All the return values are floating points If no result is available, NaN (9.91E+37) is returned		
			#	Result	Unit, if any
			1	In-Band Emission Pass/Fail	
				– 0: Pass	
				– 1: Fail	
			2	In-Band Emission Worst Margin	dB
			3	In-Band Emission Worst Margin Position	RB
			4	OSTP (OFDM Symbol Tx Power)	dBm
			5	In-Band Emission General Pass/Fail	
				– 0: Pass	
				– 1: Fail	

CC	BI	RI	Result Details		
			#	Result	Unit, if any
00-15	20-24	03	6	In-Band Emission General Worst Margin	dB
			7	In-Band Emission General Worst Margin Position	RB
			8	In-Band Emission IQ Image Pass/Fail	
				– 0: Pass	
				– 1: Fail	
			9	In-Band Emission IQ Image Worst Margin	dB
			10	In-Band Emission IQ Image Worst Margin Position	RB
			11	In-Band Emission Carrier Leakage Pass/Fail	
				– 0: Pass	
				– 1: Fail	
			12	In-Band Emission Carrier Leakage Worst Margin	dB
			13	In-Band Emission Carrier Leakage Worst Margin Position	RB
			14	Mag Error	%
			15	Phase Error	radian
			Returns BWP summary results of initial BWP (BWP0), DL BWP1 – DL BWP4 (see "SSB and BWP Index" on page 1671) for CC ("Component Carrier" on page 1789) when it is active		
00-15	11-14	04	All the return values are floating points		
			If no result is available, NaN (9.91E+37) is returned		
			#	Result	Unit, if any
			1	OSTP (OFDM Symbol Tx Power)	dBm
			2	CSI-RSRP	dBm
			3	CSI-RSSI	dBm
			4	CSI-RSRQ	dB
			5	CSI-SINR	dB
00-15	11-14	05	6	Mag Error	%
			7	Phase Error	radian
00-15	11-14	05	Returns CC ("Component Carrier" on page 1789) UL BWP1 – UL BWP4 (see "SSB and BWP Index" on page 1671) In-Band Emission limit (ALL) data as limit value (dB)		
			Returns CC ("Component Carrier" on page 1789) UL BWP1 – UL BWP4 (see "SSB and BWP Index" on page 1671) In-Band Emission trace data as normalized RB power (dB)		

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details																																																																														
00-15	00	06	Returns Component Carrier summary results for CC ("Component Carrier" on page 1789) when it is active																																																																														
			<table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>TAE to reference CC</td><td></td></tr><tr><td>2</td><td>Relative Channel Power to reference CC</td><td>dB</td></tr><tr><td>3</td><td>MAX TAE</td><td></td></tr><tr><td>4</td><td>First CC index for MAX TAE</td><td></td></tr><tr><td>5</td><td>Second CC index for MAX TAE</td><td></td></tr><tr><td>6</td><td>Total Channel Power</td><td>dBm</td></tr><tr><td>7</td><td>Total Channel Power (Active)</td><td>dBm</td></tr><tr><td>8</td><td>Relative Channel Power (Active) to reference CC</td><td>dB</td></tr><tr><td>9</td><td>Port0 TAE</td><td>s</td></tr><tr><td>10</td><td>Port1 TAE</td><td>s</td></tr><tr><td>11</td><td>Port2 TAE</td><td>s</td></tr><tr><td>12</td><td>Port3 TAE</td><td>s</td></tr><tr><td>13</td><td>Port4 TAE</td><td>s</td></tr><tr><td>14</td><td>Port5 TAE</td><td>s</td></tr><tr><td>15</td><td>Port6 TAE</td><td>s</td></tr><tr><td>16</td><td>Port7 TAE</td><td>s</td></tr><tr><td>17</td><td>Layer 0 IQ Offset</td><td>dB</td></tr><tr><td>18</td><td>Layer 1 IQ Offset</td><td>dB</td></tr><tr><td>19</td><td>Layer 2 IQ Offset</td><td>dB</td></tr><tr><td>20</td><td>Layer 3 IQ Offset</td><td>dB</td></tr><tr><td>21</td><td>Layer 4 IQ Offset</td><td>dB</td></tr><tr><td>22</td><td>Layer 5 IQ Offset</td><td>dB</td></tr><tr><td>23</td><td>Layer 6 IQ Offset</td><td>dB</td></tr><tr><td>24</td><td>Layer 7 IQ Offset</td><td>dB</td></tr><tr><td>25</td><td>Total composite EVM</td><td>%</td></tr></table>	#	Result	Unit, if any	1	TAE to reference CC		2	Relative Channel Power to reference CC	dB	3	MAX TAE		4	First CC index for MAX TAE		5	Second CC index for MAX TAE		6	Total Channel Power	dBm	7	Total Channel Power (Active)	dBm	8	Relative Channel Power (Active) to reference CC	dB	9	Port0 TAE	s	10	Port1 TAE	s	11	Port2 TAE	s	12	Port3 TAE	s	13	Port4 TAE	s	14	Port5 TAE	s	15	Port6 TAE	s	16	Port7 TAE	s	17	Layer 0 IQ Offset	dB	18	Layer 1 IQ Offset	dB	19	Layer 2 IQ Offset	dB	20	Layer 3 IQ Offset	dB	21	Layer 4 IQ Offset	dB	22	Layer 5 IQ Offset	dB	23	Layer 6 IQ Offset	dB	24	Layer 7 IQ Offset	dB	25	Total composite EVM	%
#	Result	Unit, if any																																																																															
1	TAE to reference CC																																																																																
2	Relative Channel Power to reference CC	dB																																																																															
3	MAX TAE																																																																																
4	First CC index for MAX TAE																																																																																
5	Second CC index for MAX TAE																																																																																
6	Total Channel Power	dBm																																																																															
7	Total Channel Power (Active)	dBm																																																																															
8	Relative Channel Power (Active) to reference CC	dB																																																																															
9	Port0 TAE	s																																																																															
10	Port1 TAE	s																																																																															
11	Port2 TAE	s																																																																															
12	Port3 TAE	s																																																																															
13	Port4 TAE	s																																																																															
14	Port5 TAE	s																																																																															
15	Port6 TAE	s																																																																															
16	Port7 TAE	s																																																																															
17	Layer 0 IQ Offset	dB																																																																															
18	Layer 1 IQ Offset	dB																																																																															
19	Layer 2 IQ Offset	dB																																																																															
20	Layer 3 IQ Offset	dB																																																																															
21	Layer 4 IQ Offset	dB																																																																															
22	Layer 5 IQ Offset	dB																																																																															
23	Layer 6 IQ Offset	dB																																																																															
24	Layer 7 IQ Offset	dB																																																																															
25	Total composite EVM	%																																																																															
			If “Report EVM in dB” is set to true, then the EVM result is in “dB”																																																																														
			Note that, for MIMO, Total Channel Power and Total Channel Power Active are summary of all channels																																																																														
			3-7, 9-16 and 25 are cross CC results, so they will return same value for each CC																																																																														
			17-24 are available only for MIMO mode. SISO IQ offset is provided separately (RI = 01)																																																																														
00-15	01-02 11-14 20-24	07	Returns CC ("Component Carrier" on page 1789) RMS Error Vector Time data as Error Vector value(%)																																																																														
			The units of the returned results are EVM vs symbol or EVM vs slot, depending on																																																																														

CC	BI	RI	Result Details
	41-44		the value of "Time Unit" on page 2362 MIMO mode will return all layers results together For the significance of the BI values, see "SSB and BWP Index" on page 1671
00-15	01-02 11-14 20-24 41-44	08	Returns CC ("Component Carrier" on page 1789) RMS Error Vector Spectrum data as Error Vector value(%) The units of the returned results are EVM vs subcarrier or EVM vs RB, depending on the value of "Frequency Unit" on page 2363 MIMO mode returns all layers results together For the significance of the BI values, see "SSB and BWP Index" on page 1671
00-15	00	09	Returns CC ("Component Carrier" on page 1789) Power vs Time data as power (dBm) The units of the returned results are power vs symbol or power vs slot, depending on the value of "Time Unit" on page 2362 Reference SCS determines the resource grid in which the symbol/slot is defined MIMO mode returns all channels results together
00-15	00	10	Returns CC ("Component Carrier" on page 1789) Flatness limit data as power(dB) MIMO mode will return all layer result together
00-15	00	11	Returns CC ("Component Carrier" on page 1789) Flatness trace data as power(dB) MIMO mode will return all layer result together
00-15	00	12	Returns User Summary results for CC ("Component Carrier" on page 1789) when it is active

#	Result	Unit, if any
1	Allocation Index	
2	Indicator for layer and DMRS	
	<ul style="list-style-type: none"> - -1 represents average results of all layers - 0-7 represent layer 0-7 - 10 represent DMRS - 11 represent PTRS 	
3	EVM	%
4	Power per RE	dBm
5	Modulation	
	<ul style="list-style-type: none"> - Pi/2 BPSK - QPSK - 16 QAM 	

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
				- 64 QAM	
				- 256 QAM	
			6	RB Number	
			7	RNTI	
			8	PRACH Burst Time Offset	S
			9	Reserved	
			10	Reserved	
			This repeats for each line in User Summary		
			If "Report EVM in dB" is true, then the EVM result is in "dB"		
00-15	00	13	<p>Obsolete: RI index 30 provides these and additional results in a new format, although RI index 13 remains valid for backwards compatibility</p> <p>Returns MIMO Info results for CC ("Component Carrier" on page 1789) when it is active</p>		
			#	Result	Unit, if any
			1	Allocation Index	
			2	Input Channel	
			3	DMRS Port	
			4	EVM	%
			5	Power	dBm
			6	Time Offset	s
			7	Frequency Offset	Hz
			8	Phase Offset	degree
			9	Time Offset to reference CC	s
			10	Channel:	
				- PDSCH = 1000 - 1100	
				- PDSCH_DMRS = 2000 - 2100	
				- PUSCH = 4000 - 4100	
				- PUSCH_DMRS = 5000 - 5100	
				- CSIRS = 13000 - 13100	
				- PDCCH = 9000-9900	
				- PDCCH_DMRS = 10000-10900	
			This repeats for each line in MIMO Info		

CC	BI	RI	Result Details																																																																								
00-15	01-02	14	If “Report EVM in dB” is true, then the EVM result is in “dB”																																																																								
	11-14		Obsolete: BI indexes 41-44 provide results for each SSB allocation with new channel type definition, although BI indexes 01-02 remain valid for backwards compatibility																																																																								
	20-24		Returns Slot Summary results for CC ("Component Carrier" on page 1789)																																																																								
	31-34		BWP/SSB when it is active																																																																								
	41-44																																																																										
			<table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>Column Number</td><td></td></tr><tr><td></td><td>7 for current version</td><td></td></tr><tr><td>2</td><td>Slot Index</td><td></td></tr><tr><td>3</td><td>Channel:</td><td></td></tr><tr><td></td><td>– PSS = 27000 - 27003</td><td></td></tr><tr><td></td><td>– SSS = 28000 - 28003</td><td></td></tr><tr><td></td><td>– PBCH =29000 - 29003</td><td></td></tr><tr><td></td><td>– PBCH DMRS = 30000 - 30003</td><td></td></tr><tr><td></td><td>– PRACH = 6 – 106</td><td></td></tr><tr><td></td><td>– PDSCH = 1000 – 1100</td><td></td></tr><tr><td></td><td>– PDSCH_DMRS = 2000 – 2100</td><td></td></tr><tr><td></td><td>– PDSCH_PTRS = 3000 – 3100</td><td></td></tr><tr><td></td><td>– PUSCH = 4000 – 4100</td><td></td></tr><tr><td></td><td>– PUSCH_DMRS = 5000 – 5100</td><td></td></tr><tr><td></td><td>– PUSCH_PTRS = 6000 – 6100</td><td></td></tr><tr><td></td><td>– PUCCH = 7000 – 7100</td><td></td></tr><tr><td></td><td>– PUCCH_DMRS = 8000 – 8100</td><td></td></tr><tr><td></td><td>– PDCCH = 9000 – 9100</td><td></td></tr><tr><td></td><td>– PDCCH_DMRS = 10000 - 10100</td><td></td></tr><tr><td></td><td>– CSIRS = 13000 – 13100</td><td></td></tr><tr><td></td><td>– SRS = 15000 – 15100</td><td></td></tr><tr><td></td><td>– RIM-RS = 17000 - 17100</td><td></td></tr><tr><td></td><td>– SPSS = 20000</td><td></td></tr></table>	#	Result	Unit, if any	1	Column Number			7 for current version		2	Slot Index		3	Channel:			– PSS = 27000 - 27003			– SSS = 28000 - 28003			– PBCH =29000 - 29003			– PBCH DMRS = 30000 - 30003			– PRACH = 6 – 106			– PDSCH = 1000 – 1100			– PDSCH_DMRS = 2000 – 2100			– PDSCH_PTRS = 3000 – 3100			– PUSCH = 4000 – 4100			– PUSCH_DMRS = 5000 – 5100			– PUSCH_PTRS = 6000 – 6100			– PUCCH = 7000 – 7100			– PUCCH_DMRS = 8000 – 8100			– PDCCH = 9000 – 9100			– PDCCH_DMRS = 10000 - 10100			– CSIRS = 13000 – 13100			– SRS = 15000 – 15100			– RIM-RS = 17000 - 17100			– SPSS = 20000	
#	Result	Unit, if any																																																																									
1	Column Number																																																																										
	7 for current version																																																																										
2	Slot Index																																																																										
3	Channel:																																																																										
	– PSS = 27000 - 27003																																																																										
	– SSS = 28000 - 28003																																																																										
	– PBCH =29000 - 29003																																																																										
	– PBCH DMRS = 30000 - 30003																																																																										
	– PRACH = 6 – 106																																																																										
	– PDSCH = 1000 – 1100																																																																										
	– PDSCH_DMRS = 2000 – 2100																																																																										
	– PDSCH_PTRS = 3000 – 3100																																																																										
	– PUSCH = 4000 – 4100																																																																										
	– PUSCH_DMRS = 5000 – 5100																																																																										
	– PUSCH_PTRS = 6000 – 6100																																																																										
	– PUCCH = 7000 – 7100																																																																										
	– PUCCH_DMRS = 8000 – 8100																																																																										
	– PDCCH = 9000 – 9100																																																																										
	– PDCCH_DMRS = 10000 - 10100																																																																										
	– CSIRS = 13000 – 13100																																																																										
	– SRS = 15000 – 15100																																																																										
	– RIM-RS = 17000 - 17100																																																																										
	– SPSS = 20000																																																																										

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
				– SSSS = 20001	
				– PSBCH = 20002	
				– PSBCH_DMRS = 20003	
				– PSSCH = 21000 – 21100	
				– PSSCH_DMRS = 22000 – 22100	
				– PSSCH_PTRS = 23000 – 23100	
				– PSCCH = 24000 – 24100	
				– PSCCH_DMRS = 25000 – 25100	
			4	EVM	%
			5	Power per RE	dBm
			6	Modulation:	
				– 1 – Pi/2 BPSK	
				– 2 – QPSK	
				– 3 – 16 QAM	
				– 4 – 64 QAM	
				– 5 – 256 QAM	
			7	Num Of RB	
			8	SINR (dB)	
			Items 2 - 8 repeat for each slot		
			If "Report EVM in dB" is true, then the EVM result is in "dB"		
00-15	01-02 11-14 20-24 41-44	15	For the significance of the BI values, see "SSB and BWP Index" on page 1671		
			Returns CC (" Component Carrier " on page 1789) RMS Demod Power vs Time data (dBm)		
			The units of the returned results are power vs symbol or power vs slot, depending on the value of "Time Unit" on page 2362		
			For the significance of the BI values, see "SSB and BWP Index" on page 1671		
00-15	01-02 11-14 20-24 41-44	16	Returns CC (" Component Carrier " on page 1789) RMS Demod Power vs Spectrum data (dBm)		
			The units of the returned results are power vs subcarrier or power vs RB, depending on the value of "Frequency Unit" on page 2363		
			For the significance of the BI values, see "SSB and BWP Index" on page 1671		
			Returns OBW results:		
99	00	17			

CC	BI	RI	Result Details		
99	00	18	#	Result	Unit, if any
			1	Column Number 5 for current version	
			2	Channel Index	1-8
			3	Occupied Bandwidth	Hz
			4	Limit	Hz
			5	Limit Test: - 0: Pass - 1: Fail	
			6	Total Power	dBm
			Items 2- 6 repeat for each input channel		
			Returns ACP results:		
			#	Result	Unit, if any
			1	Column Number 249 for current version	
			2	Channel Index	
			3	Total Carrier Power	dBm
			4	Total Carrier Bandwidth	Hz
			5	Total PSD	dBm/Hz
			6	RF-BW	Hz
			7	Reserved	
			8	Reserved	
			9	Reserved	
			10	Reserved	
			11	Offset 1 frequency	Hz
			12	Offset 1 Integration BW	Hz
			13	Offset 1 Lower Relative limit result	dBc
			14	Offset 1 Lower Absolute limit result power or PSD	dBm or dBm/Hz
			15	Offset 1 Lower Limit Test: - 0: Pass - 1: Fail	
			16	Offset 1 Lower Reference Carrier power or PSD	dBm or dBm/Hz

3 5G NR Mode
3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			17	Offset 1 Lower Reference Carrier1 index	
			18	Offset 1 Lower Reference Carrier2 index	
			19	Offset 1 Upper Relative limit result	dBc
			20	Offset 1 Upper Absolute limit result power or PSD	dBm or dBm/Hz
			21	Offset 1 Upper Limit Test:	
				– 0: Pass	
				– 1: Fail	
			22	Offset 1 Upper Reference Carrier power or PS	dBm or dBm/Hz
			23	Offset 1 Upper Reference Carrier1 index	
			24	Offset 1 Upper Reference Carrier2 index	
			25	Offset 1 Type:	
				– 0: Normal	
				– 1: Cumulative	
			26	Offset 1 reserved	
			27	Offset 1 reserved	
			28	Offset 1 reserved	
			29	Offset 1 reserved	
			30	Offset 1 reserved	
			31 - 250	11 – 30 will repeat for each offset, maximum of offset is 12 (6 outer and 6 inner)	
			Items 2 - 250 repeat for each input channel		
			Offset power or PSD results depend on "Measurement Type" on page 2240		
99	00	19	Returns SEM results:		
			#	Result	Unit, if any
			1	Column Number	
				509 for current version	
			2	Channel Index	
			3	Total Carrier Power	dBm
			4	Total Carrier Bandwidth	Hz
			5	Total PSD	dBm/Hz

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			6	RF-BW	Hz
			7	Ref Carrier1 index	
			8	Ref Carrier1 Power	dBm
			9	Ref Carrier1 Bandwidth	Hz
			10	Ref Carrier1 PSD	dBm/Hz
			11	Ref Carrier1 Peak Power	dBm
			12	Ref Carrier2 index	
			13	Ref Carrier2 Power	dBm
			14	Ref Carrier2 Bandwidth	Hz
			15	Ref Carrier2 PSD	dBm/Hz
			16	Ref Carrier2 Peak Power	dBm
			17	Reserved	
			18	Reserved	
			19	Reserved	
			20	Reserved	
			21	Offset A Start frequency	Hz
			22	Offset A Stop frequency	Hz
			23	Offset A Integration BW	Hz
			24	Minimum margin from limit line on negative offset A	dB
			25	Absolute peak power on the negative offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBm, dBm/Hz, dBm
			26	Peak power offset frequency from the center or carrier edge frequency in the negative offset A, depending on Offset Frequency Define settings	Hz
			27	Negative offset A Limit Test – 0: Pass – 1: Fail	
			28	Minimum margin from limit line on the positive offset A	dB
			29	Absolute peak power on the positive offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference,	dBm, dBm/Hz, dBm

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
				Spectrum Peak Reference	
			30	Peak power offset frequency from the center or carrier edge frequency in the positive offset A, depending on Offset Frequency Define settings	Hz
			31	Positive offset A Limit Test	
				– 0: Pass	
				– 1: Fail	
			32	Relative peak power on the negative offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBc, dB, dB
			33	Relative peak power on the positive offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBc, dB, dB
			34	Absolute integrated power on the negative offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBm, dBm/Hz, dBm
			35	Absolute integrated power on the positive offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBm, dBm/Hz, dBm
			36	Relative integrated power on the negative offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBc, dB, dB
			37	Relative integrated power on the positive offset A The unit differs depending on Measurement Type; Total Power Reference, PSD Reference, Spectrum Peak Reference	dBc, dB, dB
			38	Offset A reserved	
			39	Offset A reserved	

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			40	Offset A reserved	
			41 ~ 500	Items 21 – 40 repeat for each offset, maximum of offset is 24	
				– Non-Contiguous Meas Region = Inner & Outer	
				12 outer offset (A-L)	
				12 inner offset (A-L)	
				– Other cases	
				12 offset (A-L)	
				Repeat above 12 offset (A-L)	
			501	Ref Carrier3 index	
			502	Ref Carrier3 Power	
			503	Ref Carrier3 Bandwidth	
			504	Ref Carrier3PSD	
			505	Ref Carrier3 Peak Power	
			506	Ref Carrier4 index	
			507	Ref Carrier4 Power	
			508	Ref Carrier4 Bandwidth	
			509	Ref Carrier4 PSD	
			510	Ref Carrier4 Peak Power	
			Items 2- 510 repeat for each input channel		
			Offset integrated power/peak power/PSD results depend on "Measurement Type" on page 2278		
00-15	00	20	Returns Frequency Error per sub-frame for CC ("Component Carrier" on page 1789) when it is active		
			#	Result	Unit, if any
			1	Column Number	
				2 for current version	
			2	Sub Frame Index	
			3	Frequency Error	Hz
			Items 2- 3 repeat for each sub-frame in Meas Interval		
			This result is only available when "3GPP Pre-FFT Minimization" is On		
00-15	01-02 11-14 20-24	21	Returns CC ("Component Carrier" on page 1789) Channel Magnitude Frequency Response as Log Mag vs subcarrier data (dB)		
			For the significance of the BI values, see "SSB and BWP Index" on page 1671		

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details																																																																														
00-15	41-44	22	Returns CC (" Component Carrier " on page 1789) Channel Phase Frequency Response as Phase vs subcarrier data (deg)																																																																														
	01-02		For the significance of the BI values, see " SSB and BWP Index " on page 1671																																																																														
	11-14																																																																																
	20-24																																																																																
41-44																																																																																	
00-15	01-02	23	Returns CC (" Component Carrier " on page 1789) Channel Frequency Response as Group Delay vs subcarrier data (sec)																																																																														
	11-14		For the significance of the BI values, see " SSB and BWP Index " on page 1671																																																																														
	20-24																																																																																
	41-44																																																																																
99	00	24		Returns Transmit On/Off results:																																																																													
			<table><tr><th>#</th><th>Result</th><th>Unit, if any</th></tr><tr><td>1</td><td>Column Number</td><td></td></tr><tr><td></td><td>19 for current version</td><td></td></tr><tr><td>2</td><td>Channel Index</td><td></td></tr><tr><td>3</td><td>On Power/Mean Power</td><td>dBm</td></tr><tr><td>4</td><td>Burst Width</td><td>sec</td></tr><tr><td>5</td><td>Ramp up time</td><td>sec</td></tr><tr><td>6</td><td>Ramp down time</td><td>sec</td></tr><tr><td>7</td><td>Off power/Off power before</td><td>dBm</td></tr><tr><td>8</td><td>Maximum Power</td><td>dBm</td></tr><tr><td>9</td><td>Minimum Power</td><td>dBm</td></tr><tr><td>10</td><td>Off power after</td><td>dBm</td></tr><tr><td>11</td><td>DL/UL Off Power Limit Test</td><td></td></tr><tr><td></td><td>0 = passed, or 1 = failed</td><td></td></tr><tr><td>12</td><td>DL/UL Ramp Up Limit Test</td><td></td></tr><tr><td></td><td>0 = passed, or 1 = failed</td><td></td></tr><tr><td>13</td><td>DL/UL Ramp Down Limit Test</td><td></td></tr><tr><td></td><td>0 = passed, or 1 = failed</td><td></td></tr><tr><td>14</td><td>UL Off Power After Limit Test</td><td></td></tr><tr><td></td><td>0 = passed, or 1 = failed</td><td></td></tr><tr><td>15</td><td>UL On Power Limit Test</td><td></td></tr><tr><td></td><td>0 = passed, or 1 = failed</td><td></td></tr><tr><td>16</td><td>Capture Center Frequency</td><td>Hz</td></tr><tr><td>17</td><td>Reserved</td><td></td></tr><tr><td>18</td><td>Reserved</td><td></td></tr><tr><td>19</td><td>Reserved</td><td></td></tr></table>	#	Result	Unit, if any	1	Column Number			19 for current version		2	Channel Index		3	On Power/Mean Power	dBm	4	Burst Width	sec	5	Ramp up time	sec	6	Ramp down time	sec	7	Off power/Off power before	dBm	8	Maximum Power	dBm	9	Minimum Power	dBm	10	Off power after	dBm	11	DL/UL Off Power Limit Test			0 = passed, or 1 = failed		12	DL/UL Ramp Up Limit Test			0 = passed, or 1 = failed		13	DL/UL Ramp Down Limit Test			0 = passed, or 1 = failed		14	UL Off Power After Limit Test			0 = passed, or 1 = failed		15	UL On Power Limit Test			0 = passed, or 1 = failed		16	Capture Center Frequency	Hz	17	Reserved		18	Reserved		19	Reserved	
#	Result	Unit, if any																																																																															
1	Column Number																																																																																
	19 for current version																																																																																
2	Channel Index																																																																																
3	On Power/Mean Power	dBm																																																																															
4	Burst Width	sec																																																																															
5	Ramp up time	sec																																																																															
6	Ramp down time	sec																																																																															
7	Off power/Off power before	dBm																																																																															
8	Maximum Power	dBm																																																																															
9	Minimum Power	dBm																																																																															
10	Off power after	dBm																																																																															
11	DL/UL Off Power Limit Test																																																																																
	0 = passed, or 1 = failed																																																																																
12	DL/UL Ramp Up Limit Test																																																																																
	0 = passed, or 1 = failed																																																																																
13	DL/UL Ramp Down Limit Test																																																																																
	0 = passed, or 1 = failed																																																																																
14	UL Off Power After Limit Test																																																																																
	0 = passed, or 1 = failed																																																																																
15	UL On Power Limit Test																																																																																
	0 = passed, or 1 = failed																																																																																
16	Capture Center Frequency	Hz																																																																															
17	Reserved																																																																																
18	Reserved																																																																																
19	Reserved																																																																																

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			20	Reserved	
			Items 2- 20 repeat for each input channel		
00-15	00	25	Returns additional per channel results in MIMO Info table for CC ("Component Carrier" on page 1789):		
			#	Result	Unit, if any
			1	Column Number	
			3 for current version		
			2	Channel Index	
			3	Channel Power	dBm
			4	Channel Power (Active)	dBm
			Items 2- 4 repeat for each input channel		
00-15	00	26	Returns CC ("Component Carrier" on page 1789) IQ Gain Imbalance per subcarrier results		
00-15	00	27	Returns CC ("Component Carrier" on page 1789) IQ Quad Error per subcarrier results		
00-15	11-14	28	Returns CC ("Component Carrier" on page 1789) UL BWP1 – UL BWP4 additional In-Band Emission limit data as limit value(dB), three limit lines will be provided in sequence: General Limit, IQ image limit and Carrier Leakage Limit		
			For the significance of the BI values, see "SSB and BWP Index" on page 1671		
00-15	00	29	Returns CC ("Component Carrier" on page 1789) UL Flatness Results		
			#	Result	Unit, if any
			1	Column Number	
			14 for current version		
			2	BWP index:	
			– 5: UL BWP1		
			– 6: UL BWP2		
			– 7: UL BWP3		
			– 8: UL BWP4		
			3	Layer index	
			4	Flatness results:	
			– 0: Pass		
			– 1: Fail		

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details		
			#	Result	Unit, if any
			5	Flatness Widest Fail Margin	dB)
			6	Flatness Widest Fail Slot	
			7	Flatness Widest Fail subcarrier	
			8	Flatness Ripple Range1	dB)
			9	Flatness Ripple Range2	dB)
			10	Flatness Max Range1 – Min Range2	dB)
			11	Flatness Max Range2 – Min Range1	dB)
			12	Flatness Min Range1	dB)
			13	Flatness Max Range1	dB)
			14	Flatness Min Range2	dB)
			15	Flatness Max Range2	dB)
			Items 2-15 repeat for each line in Flatness Results table		
			Returns MIMO Info results for CC (" Component Carrier " on page 1789) when it is active		
			#	Result	Unit, if any
00-15	00	30	1	Column Number 11 for current version	
			2	Allocation Index	
			3	Input Channel	
			4	DMRS Port	
			5	EVM	%
			6	Power	dBm
			7	TAE to reference Port	s
			8	Frequency Offset	Hz
			9	Phase Offset	degree
			10	TAE to reference CC	s
			11	Channel: – PDSCH = 1000 – 1100 – PDSCH_DMRS = 2000 – 2100 – PUSCH = 4000 – 4100 – PUSCH_DMRS = 5000 – 5100 – CSIRS = 13000 – 13100	

CC	BI	RI	Result Details		
00-15	00	31	#	Result	Unit, if any
				– PDCCH = 9000-9900	
				– PDCCH_DMRS = 10000-10900	
			12	Clock Error	ppm
			Items 2-12 repeat for each line in MIMO Info		
			If “Report EVM in dB” is true, then the EVM result is in “dB”		
			Returns ccEVM results for CC (“Component Carrier” on page 1789) when it is active		
			#	Result	Unit, if any
			1	Column Number	
				5 for current version	
			2	BWP Index	
				– 0: DL Initial BWP	
				– 1: DL BWP1	
				– 2: DL BWP2	
				– 3: DL BWP3	
				– 4: DL BWP4	
				– 5: UL BWP1	
				– 6: UL BWP2	
				– 7: UL BWP3	
				– 8: UL BWP4	
				– 9: SSB1	
				– 10: SSB2	
				– 11: SSB3	
				– 12: SSB4	
				– 100: Composite	
			3	ccEVM	%
			4	Valid Points	
			5	Total Points	
			6	Improvement Factor	dB

3 5G NR Mode

3.7 Modulation Analysis Measurement

CC	BI	RI	Result Details
00-15	01-02	32	Items 2-6 repeat for each line in ccEVM summary table
	11-14		If "Report EVM in dB" is true, then the EVM result is in "dB"
	20-24		Returns ccEVM per symbol magnitude results for each BWP
	41-44		
00-15	00	33	Returns Decoded Info results for CC ("Component Carrier" on page 1789) when it is active
#	Result		Unit, if any
1	Column Number		
	5 for current version		
2	Channel:		
	– PSS = 27000 - 27003		
	– SSS = 28000 - 28003		
	– PBCH = 29000 - 29003		
	– PBCH DMRS = 30000 - 30003		
	– PRACH = 6 - 106		
	– PDSCH = 1000 - 1100		
	– PDSCH_DMRS = 2000 - 2100		
	– PDSCH_PTRS = 3000 - 3100		
	– PUSCH = 4000 - 4100		
	– PUSCH_DMRS = 5000 - 5100		
	– PUSCH_PTRS = 6000 - 6100		
	– PUCCH = 7000 - 7100		
	– PUCCH_DMRS = 8000 - 8100		
	– PDCCH = 9000 - 9100		
	– PDCCH_DMRS = 10000 - 10100		
	– CSIRS = 13000 - 13100		
	– SRS = 15000 - 15100		

CC	BI	RI	Result Details		
			#	Result	Unit, if any
				- RIM-RS = 17000 - 17100	
				- SPSS = 20000	
				- SSSS = 20001	
				- PSBCH = 20002	
				- PSBCH_DMRS = 20003	
				- PSSCH = 21000 - 21100	
				- PSSCH_DMRS = 22000 - 22100	
				- PSSCH_PTRS = 23000 - 23100	
				- PSCCH = 24000 - 24100	
				- PSCCH_DMRS = 25000 - 25100	
			3	Slot Index	
			4	RV Index	
			5	Length	
			6	CRC Result	

Items 2-6 repeat for each line in Decoded Info table

Complex Results

Some results are too lengthy and complex for SCPI, so instead they are returned via "Save Meas Results" as CSV files:

- Meas IQ
- Reference IQ
- Error Vector
- RE Power
- Channel Allocation
- Decode Bits
- Condition Number
- H Matrix

3.7.1 Views

The Modulation Analysis measurement has nine pre-defined views as follows.

View	Result
"Normal" on page 1765	"IQ Meas Time" on page 1706 "Detected Allocation" on page 1706 "Spectrum" on page 1705 "Raw Main Time" on page 1704 "Frame Summary" on page 1710 "Error Summary" on page 1710
"Normal 3x3" on page 1766	"IQ Meas Time" on page 1706 "Spectrum" on page 1705 "Raw Main Time" on page 1704 "Detected Allocation" on page 1706 "RE Power 3D" on page 1707 "Error Vector 3D" on page 1708 "Frame Summary" on page 1710 "Error Summary" on page 1710 "User Summary" on page 1711
"In-Band Emission" on page 1766	"In-band Emission" on page 1708 "BWP Summary" on page 1710
"Result Summary" on page 1766	"Error Summary" on page 1710 "Frame Summary" on page 1710 "User Summary" on page 1711 "BWP Summary" on page 1710
"CC Summary" on page 1767	"CC Summary" on page 1710
"Decode Summary" on page 1767	"Decoded Info" on page 1712 "Decoded Channels" on page 1713 "Decoded Symbols" on page 1713
"MISO Summary" on page 1767	"Spectrum" on page 1705 "Raw Main Time" on page 1704 "MIMO Info" on page 1711
"MIMO Summary" on page 1767	"User Summary" on page 1711 "MIMO Info" on page 1711
"Auto Detect Summary" on page 1768	"IQ Meas Time" on page 1706 "Frame Summary" on page 1710 "Auto Detect Summary" on page 1711

Some of these are multiple-window Views. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is **Frequency**, unless otherwise specified in the View description.

View – Selection by Enum

Remote Command	<code>:DISPlay:EVM:VIEW[:SElect] NORMal IBEMission NRESults CCResults DECode MIMO ADEtect N3X3 MISO</code> <code>:DISPlay:EVM:VIEW[:SElect]?</code>
Example	Set Normal view: <code>:DISP:EVM:VIEW NORM</code>
Preset	NORM
State Saved	Saved in instrument state

3.7.1.1 Normal

This view has six windows:

- "IQ Meas Time" on page 1706
- "Detected Allocation" on page 1706
- "Spectrum" on page 1705
- "Raw Main Time" on page 1704
- "Frame Summary" on page 1710
- "Error Summary" on page 1710

Example	<code>:DISP:EVM:VIEW NORM</code>
---------	----------------------------------

3.7.1.2 Normal 3x3

This view has nine windows:

- "IQ Meas Time" on page 1706
- "Spectrum" on page 1705
- "Raw Main Time" on page 1704
- "Detected Allocation" on page 1706

- "RE Power 3D" on page 1707
- "Error Vector 3D" on page 1708
- "Frame Summary" on page 1710
- "Error Summary" on page 1710
- "User Summary" on page 1711

Example `:DISP:EVM:VIEW N3X3`

3.7.1.3 In-Band Emission

This view has two windows:

- "In-band Emission" on page 1708
- "BWP Summary" on page 1710

Example `:DISP:EVM:VIEW IBEM`

3.7.1.4 Result Summary

This view has four windows:

- "Error Summary" on page 1710
- "Frame Summary" on page 1710
- "User Summary" on page 1711
- "BWP Summary" on page 1710

Example `:DISP:EVM:VIEW NRES`

3.7.1.5 CC Summary

This view has a single window: "CC Summary" on page 1710

Example `:DISP:EVM:VIEW CCR`

3.7.1.6 Decode Summary

This view has three windows:

- "Decoded Info" on page 1712
- "Decoded Channels" on page 1713
- "Decoded Symbols" on page 1713

Example `:DISP:EVM:VIEW DEC`

3.7.1.7 MISO Summary

This view has three windows:

- "Spectrum" on page 1705
- "Raw Main Time" on page 1704
- "MIMO Info" on page 1711

Example `:DISP:EVM:VIEW MISO`

3.7.1.8 MIMO Summary

This view has two windows:

- "User Summary" on page 1711
- "MIMO Info" on page 1711

Example `:DISP:EVM:VIEW MIMO`

3.7.1.9 Auto Detect Summary

This view has three windows:

- "IQ Meas Time" on page 1706
- "Frame Summary" on page 1710
- "Auto Detect Summary" on page 1711

Example `:DISP:EVM:VIEW ADET`

3.7.2 Windows

The Modulation Analysis measurement can display up to 16 Windows.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Each window may have up to five properties:

Property	Description
Data	Allows you to select the trace data format
Format	Allows you to select the trace display format The Format key is hidden if the selected Data doesn't support any format
Component Carrier	Allows you to select which CC's trace data is displayed
BWP/SS Block	Some trace data should be displayed for specific SSB numerology (downlink only) or BWP. This property allows you to select the trace data of which BWP or SSB numerology to be displayed. The BWP/SS Block property is hidden for other trace data
Channel/Layer	In MIMO mode, some results are provided per-layer (DMRS port) or per-channel

Remote Configuration Commands

Command	Purpose & Example
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:DATA <enum></code>	Configures the trace data For example, the following command sets the first window data to Spectrum <code>:DISP:EVM:WIND1:DATA SPEC</code>
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:FORMat <enum></code>	Configures the trace display format For example, the following command sets the first window trace display format to Log Mag <code>:DISP:EVM:WIND1:FORM MLOG</code>
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:CCARier <enum></code>	Configures the trace data of which CC to be displayed For example, the following command sets CC0 trace data to be displayed <code>:DISP:EVM:WIND1:CCAR CC0</code>
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:BWP <enum></code>	Configures the trace data of which BWP or SSB Numerology (downlink only) to be displayed For example, the following command sets BWP1 trace data to be displayed <code>:DISP:EVM:WIND1:BWP BWP1</code>
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:CHANnel <enum></code>	Configures the trace data of which channel to be displayed For example, the following command sets channel1 trace data to be displayed <code>:DISP:EVM:WIND1:CHAN CHAN1</code>
<code>:DISPlay:EVM:WINDow[1] 2 ... 16:LAYer <enum></code>	Configures the trace data of which layer to be displayed For example, the following command sets layer0 trace data to be displayed <code>:DISP:EVM:WIND1:LAY LAYER0</code>

3.7.2.1 Data

Provides a menu of trace data choices for the selected window.

Remote Command	:DISPlay:EVM:WINDow[1] 2 ... 16[:TRACe]:DATA RMTIME SPECTrum MTIME RTIME EVTime EVSpectrum REVTime REVpectrum CHFResponse DRESults FRESults BWPResults IBEMission DALLocations DINfo DSYMBOLs CCResults PVT FLATness DChannel DPVT DPVS SLResults OBWSpectrum OBWResults ACPSpectrum ACPResults SEMSpectrum SEMResults TOOTrace TOOResults POW3D ERR3D CNUMBER HMAtrix IQIMbalance SFSummary MIMO USER ADET CCEVm CESymbol NONE :DISPlay:EVM:WINDow[1] 2 ... 16[:TRACe]:DATA?
Example	:DISP:EVM:WIND2:DATA SPECT sets the second window data to Spectrum :DISP:EVM:WIND2:DATA?
Couplings	Depends on window
Preset	Depends on window
State Saved	Yes
Range	Raw Main Time Spectrum IQ Meas IQ Ref Error Vector Time Error Vector Spectrum RMS Error Vector Time RMS Error Vector Spectrum CH Freq Response Error Summary Frame Summary BWP Summary In-band Emissions Detected Allocations Decoded Info Decoded Symbols CC Summary Power vs Time Spectrum Flatness Decoded Channels RMS Demod Power vs Time RMS Demod Power vs Spectrum Slot Summary OBW Spectrum OBW Results ACP Spectrum ACP Results SEM Spectrum SEM Results Transmit On/Off Trace Transmit On/Off Results RE Power 3D Error Vector 3D MIMO Condition Number MIMO H Matrix IQ Imbalance Spectrum Flatness Summary MIMO Info User Summary Auto Detect ccEVM Summary ccEVM vs Symbol No Data

The following trace data results are available:

#	Trace Data	SCPI Parameter	Description
1	Raw Main Time	RMTIME	The envelope of the captured data record
2	Spectrum	SPECTrum	Spectrum is the FFT of the Raw Main Time waveform
3	Power vs Time	PVT	Power vs Time with either symbol or slot as X unit
4	OBW Spectrum	OBWSpectrum	OBW spectrum and indicator lines
5	ACP Spectrum	ACPSpectrum	ACP spectrum and indicator bars
6	SEM Spectrum	SEMSpectrum	SEM spectrum and mask
7	Transmit On/Off Trace	TOOTrace	Transmit On/Off trace and mask
8	IQ Meas	MTIME	IQ Meas trace is the measured IQ symbol values used to calculate the EVM data results. There is one complex value for each subcarrier for each OFDM symbol in the measurement

3 5G NR Mode

3.7 Modulation Analysis Measurement

#	Trace Data	SCPI Parameter	Description
9	IQ Ref	RTIME	burst IQ Ref trace is the reference IQ values for computing the signal EVM values. There is one complex value for each subcarrier for each symbol in the measurement burst
10	Detected Allocations	DALlocation	Detected Allocation trace
11	RMS Demod Power vs Time	DPVT	RMS demodulated power vs time (symbol or slot)
12	RMS Demod Power vs Spectrum	DPVS	RMS demodulated power vs spectrum (sub-carrier or RB)
13	RE Power 3D	POW3D	RE Power 3D trace
14	Error Vector Time	EVTime	Error Vector Time trace shows the OFDM symbol and subcarrier Error Vector Magnitude vs. Symbol (time) and Subcarrier (frequency)
15	Error Vector Spectrum	EVSpectrum	Error Vector Spectrum trace shows the OFDM symbol and subcarrier Error Vector Magnitude (EVM) vs. subcarrier (frequency) and Symbol (time)
16	RMS Error Vector Time	REVTime	RMS EVM vs time (symbol or slot)
17	RMS Error Vector Spectrum	REVSpectrum	RMS EVM vs spectrum (sub-carrier or RB)
18	In-band Emission	IBEMission	In-band emission trace and limit
19	Error Vector 3D	ERR3D	Error Vector 3D trace
20	IQ Imbalance	IQIMbalance	IQ Imbalance per subcarrier
21	CH Freq Response	CHFResponse	Ch Frequency Response trace for Custom modulation is the channel frequency response
22	Spectrum Flatness Trace	FLATness	Spectrum Flatness trace
23	MIMO Condition Number	CNUMBER	MIMO Condition Number trace
24	MIMO H/HW Matrix	HMATrix	MIMO H/HW matrix results
25	Error Summary	DRESults	Demodulation metrics results
26	Frame Summary	FRESults	Frame Summary is metrics results of each physics channel

#	Trace Data	SCPI Parameter	Description
27	BWP Summary	BWPResults	BWP is metrics results of each bandwidth part
28	Component Carrier Summary	CCResults	Key measurement results of all component carriers, and cross carrier results
29	User Summary	USER	Key PDSCH/PUSCH measurement results of all users
30	MIMO Info	MIMO	Key measurement results of all channel and DMRS ports
31	Auto Detect Summary	ADET	Auto detection mode and key detected parameters
32	Slot Summary	SLResults	Slot Summary is metrics results of each slot
33	OBW Results	OBWResults	OBW numeric results
34	ACP Results	ACResults	ACP numeric results
35	SEM Results	SEResults	SEM numeric results
36	Transmit On/Off Results	TOOResults	Transmit On/Off numeric results
37	Spectrum Flatness Results	SFSummary	Spectrum Flatness numeric results
38	Decoded Info	DINFo	Decode information
39	Decoded Symbols	DSYMBOLs	Decode symbols
40	Decoded Channels	DCHannel	Decode channels
41	ccEVM Summary	CCEVm	ccEVM summary
42	ccEVM vs Symbol	CESymbol	ccEVM per symbol trace
43	No Data	NONE	Blank Trace

Pre Demod

Displays the trace data choices that show pre-demodulation results.

Raw Main Time

Raw Main Time is the envelope of the captured raw data. This data is unprocessed and includes additional points acquired for settling of the filters involved in subsequent processing, such as the demodulation filtering.

Example `:DISP:EVM:WIND2:DATA RMT`
sets the second window data to Raw Main Time

Spectrum

Spectrum shows the FFT of the Meas Interval part of Raw Main Time waveform, note when synchronization failed Meas Interval part will start from captured IQ data.

Example `:DISP:EVM:WIND3:DATA SPEC`
sets the third window data to Spectrum

Power vs Time

Power vs Time provide power of each symbol or each slot, depends on setting of "Time Unit" on page 2362.

Example `:DISP:EVM:WIND4:DATA PVT`
sets the fourth window data to Power vs Time

OBW Spectrum

OBW Spectrum shows the FFT of the active part within Meas Interval of Raw Main Time waveform, and OBW indicator lines.

Example `:DISP:EVM:WIND3:DATA OBWS`
sets the third window data to OBW Spectrum

ACP Spectrum

ACP Spectrum shows the FFT of the active part within Meas Interval of Raw Main Time waveform, and ACP indicator bars.

Example `:DISP:EVM:WIND3:DATA ACPS`
sets the third window data to ACP Spectrum

SEM Spectrum

SEM Spectrum shows the FFT of the active part within Meas Interval of Raw Main Time waveform, and SEM mask.

Example `:DISP:EVM:WIND3:DATA SEMS`

sets the third window data to SEM Spectrum

Transmit On/Off Trace

Transmit On/Off trace shows the waveform of active burst used for Transmit On/Off measurement.

Example `:DISP:EVM:WIND3:DATA TOOT`
sets the third window data to Transmit On/Off trace

Demod

Displays the general demodulation results.

IQ Meas Time

IQ Meas Time is the measured time data results for the input signal.

Example `:DISP:EVM:WIND:DATA MTIM`
sets the first window data to IQ Meas Time
`:DISP:EVM:WIND:FORM CONS`
selects Constellation as the first window data format

IQ Ref

IQ Ref Time is the reconstructed ideal time waveform to compare IQ Meas Time against.

Example `:DISP:EVM:WIND:DATA RTIM`
sets the first window data to IQ Ref Time
`:DISP:EVM:WIND:FORM CONS`
selects Constellation as the first window data format

Detected Allocation

Detected Allocation is the detected resource allocation in both frequency and time domain.

Example `:DISP:EVM:WIND:DATA DALL`
sets the first window data to Detected Allocation

RMS Demod Power vs Time

The trace contains the demodulated power at each point in time domain. Time domain unit could be switched between symbol and slot.

Example `:DISP:EVM:WIND4:DATA DPVT`
sets the fourth window data to RMS Demod Power vs Time

RMS Demod Power vs Spectrum

The trace contains the demodulated power at each point in frequency domain. Frequency domain unit could be switched between sub-carrier and RB.

Example `:DISP:EVM:WIND4:DATA DPVS`
sets the fourth window data to RMS Demod Power vs Spectrum

RE Power 3D

RE Power 3D trace shows power for each resource element

Example `:DISP:EVM:WIND3:DATA POW3D`
sets the third window data to RE Power 3D trace

Demod Error

Displays the general demodulation error results.

Error Vector Time

This trace shows the time domain error vector trace data results. The trace contains the computed error vectors between IQ Meas Time and IQ Ref Time at each point in time. The values of the error vectors are usually plotted as a magnitude.

Example `:DISP:EVM:WIND2:DATA EVT`
sets the second window data to Error Vector Time

Error Vector Spectrum

Error Vector Spectrum is the frequency spectrum of the Error Vector Time trace data. The demodulator produces the spectrum by windowing and FFT the Error

Vector Time data. On this trace, the individual error vectors are plotted vs frequency.

Example `:DISP:EVM:WIND2:DATA EVSP`
sets the second window data to Error Vector Spectrum

RMS Error Vector Time

This trace shows the time domain error vector trace data results. The trace contains the computed error vectors between IQ Meas Time and IQ Ref Time at each point in time. The values of the error vectors are usually plotted as a magnitude.

Example `:DISP:EVM:WIND2:DATA REVT`
sets the second window data to RMS Error Vector Time

RMS Error Vector Spectrum

This trace shows the frequency domain error vector trace data results. The trace contains the computed error vectors at each point in the frequency domain. The values of the error vectors are usually plotted as a magnitude. Frequency domain unit could be switched between sub-carrier and RB.

Example `:DISP:EVM:WIND2:DATA REVS`
sets the second window data to RMS Error Vector Spectrum

In-band Emission

This trace shows the In-band Emission trace and limit.

Example `:DISP:EVM:WIND2:DATA IBEM`
sets the second window data to In-band Emission

Error Vector 3D

Error Vector 3D trace shows modulation error for each resource element

Example `:DISP:EVM:WIND3:DATA ERR3D`
sets the third window data to Error Vector 3D trace

IQ Imbalance

IQ imbalance per subcarrier trace with two formats: Gain Imbalance and Quad Error

sets the second window data to IQ Imbalance

Response

Displays the trace data choices that show equalizer response results.

CH Freq Response

The CH Frequency Response trace shows the channel frequency response for which the equalizer is correcting. It's computed as the inverse of the equalization filter's frequency response.

sets the second window data to CH Freq Response

Spectrum Flatness

This trace shows the Spectrum Flatness trace and limit.

sets the second window data to Spectrum Flatness

MIMO Condition Number

This trace shows the "condition number" of the equalizer channel frequency response matrices, it is only valid for MIMO. It is defined as the ratio of the maximum singular value to the minimum singular value of a matrix. The value is always real and always greater than or equal to one. Larger values indicate a more ill-conditioned matrix. If the condition number is larger than the SNR Signal-to-Noise Ratio of the signal, it is likely that MIMO separation of the multiple data streams will not work correctly.

sets the second window data to MIMO Condition Number

MIMO H/HW Matrix

This table shows the H or HW matrix results, it is only valid for MIMO. If W matrix is defined in Channel Profile, it will be removed from channel response and only H

matrix will be displayed. Otherwise, this table will display combined HW matrix results.

Example **:DISP:EVM:WIND2:DATA HMAT**
sets the second window data to MIMO H/HW Matrix

Tables

Displays the trace data choices that are in tabular form, including Error Summary, Frame Summary, BWP summary and CC Summary.

Error Summary

This table shows the general measurement numeric results.

Example **:DISP:EVM:WIND4:DATA DRES**
sets the fourth window data to Error Summary

Frame Summary

This table shows the measurement numeric results for each physical channel.

Note: Freq Error per Sub-Frame results will only be available when “3GPP Pre-FFT Minimization” is On.

Example **:DISP:EVM:WIND4:DATA FRES**
sets the fourth window data to Frame Summary

BWP Summary

This table shows the measurement numeric results for each bandwidth part.

Example **:DISP:EVM:WIND4:DATA BWPR**
sets the fourth window data to BWP Summary

CC Summary

This table shows the key measurement results of all component carriers, and cross carrier results like TAE.

Example **:DISP:EVM:WIND4:DATA CCR**
sets the fourth window data to CC Summary

User Summary

This table shows the key PDSCH/PUSCH measurement results of all users.

Example	<code>:DISP:EVM:WIND4:DATA USER</code> sets the fourth window data to User Summary
---------	---

MIMO Info

This table shows the key measurement results of all channel and DMRS ports.

Example	<code>:DISP:EVM:WIND4:DATA MIMO</code> sets the fourth window data to MIMO Info
---------	--

Auto Detect Summary

This table shows the auto detection mode and key detected parameters

Example	<code>:DISP:EVM:WIND4:DATA ADET</code> sets the fourth window data to Auto Detect Summary
---------	--

Slot Summary

This table shows Slot Summary.

Example	<code>:DISP:EVM:WIND4:DATA SLResults</code> sets the fourth window data to Slot Summary
---------	--

OBW Results

This table shows the OBW numeric results.

Example	<code>:DISP:EVM:WIND4:DATA OBWR</code> sets the fourth window data to OBW Results
---------	--

ACP Results

This table shows the ACP numeric results.

Example	<code>:DISP:EVM:WIND4:DATA ACPR</code>
---------	--

sets the fourth window data to ACP Results

SEM Results

This table shows the SEM numeric results.

Example `:DISP:EVM:WIND4:DATA SEMR`
sets the fourth window data to SEM Results

Transmit On/Off Results

This table shows the Transmit On/Off numeric results.

Example `:DISP:EVM:WIND4:DATA TOOR`
sets the fourth window data to Transmit On/Off Results

Spectrum Flatness Results

This table shows Flatness metric results.

Example `:DISP:EVM:WIND4:DATA SFS`
sets the fourth window data to Spectrum Flatness Summary

ccEVM Summary

This table shows the key measurement results when cross-correlated EVM is enabled.

Example `:DISP:EVM:WIND4:DATA CCEVm`
sets the fourth window data to ccEVM summary

Decode

Displays decoded information and bits in tabular form, including Decoded Info and Decoded Symbols.

Decoded Info

This table shows the decoded information.

Example	<code>:DISP:EVM:WIND4:DATA DINF</code>
sets the fourth window data to Decoded Info	

Decoded Symbols

This table shows decoded symbols.

Example	<code>:DISP:EVM:WIND4:DATA DSYM</code>
sets the fourth window data to Decoded Symbols	

Decoded Channels

Shows decoded channels.

Example	<code>:DISP:EVM:WIND4:DATA DCH</code>
sets the fourth window data to Decoded Channels	

3.7.2.2 Format

Enables you to choose the available format of the selected trace.

The valid formats depends on Data:

Format name	Data	Description
Log Mag (dB)	Ch Freq Response	Data is converted to decibel units and shown on a linear Y axis
Phase	Ch Freq Response	Phase of complex data is shown on Y axis
Group Delay	Ch Freq Response	Useful for frequency response displays. Shows the derivative of phase response with respect to frequency
Gain Imbalance	IQ Imbalance	Gain Imbalance per subcarrier
Quad Error	IQ Imbalance	Quad Imbalance per subcarrier
Log Mag (dB)	ccEVM vs Symbol	Magnitude part of ccEVM per symbol
Real (I)	ccEVM vs Symbol	Real part of ccEVM per symbol
Imaginary (Q)	ccEVM vs Symbol	Imaginary part of ccEVM per symbol
None	Others	

Remote	<code>:DISPlay:EVM:WINDow[1] 2 ... 9[:TRACe]:FORMat MLOG PHASE GDElay </code>
--------	--

Command	<code>GIMBalance QERRor REAL IMAGinary</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9[:TRACe]:FORMat?</code>
Example	<code>:DISP:EVM:WIND2:FORM MLOG</code> sets the second window data format to Log Mag <code>:DISP:EVM:WIND2:FORM?</code>
Notes	Log Mag, Phase and Group Delay are available for Channel Frequency Response trace
Preset	Depends on trace
State Saved	Yes
Range	Log Mag (dB) Phase Group Delay Gain Imbalance Quad Error Real Imaginary

3.7.2.3 Component Carrier

This control provides a menu of component carrier choices for the selected window.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:CCARrier CC0 ... CC15</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:CCARrier?</code>
Example	<code>:DISP:EVM:WIND2:CCAR CC0</code> <code>:DISP:EVM:WIND2:CCAR?</code>
Couplings	Depends on window
Preset	Depends on window
State Saved	Yes
Range	<code>CC0 ... CC15</code>

3.7.2.4 BWP/SS Block

Provides a menu of BWP and SSB numerology (downlink only) choices for the selected window.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:BWP DBWP0 DBWP1 DBWP2 DBWP3 DBWP4 UBWP1 UBWP2 UBWP3 UBWP4 SSB1 SSB2</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:BWP?</code>
Example	<code>:DISP:EVM:WIND2:BWP DBWP1</code> <code>:DISP:EVM:WIND2:BWP?</code>
Couplings	Depends on window
Preset	Depends on window
State Saved	Yes
Range	Initial BWP DL BWP1 DL BWP2 DL BWP3 DL BWP4 UL BWP1 UL BWP2 UL BWP3 UL BWP4 SS Block1 SS Block2

3.7.2.5 Input Channel

Provides a menu of channel choices for the selected window.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:CHANne1 CHAN1 ... CHAN8</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:CHANne1?</code>
Example	<code>:DISP:EVM:WIND2:CHAN CHAN1</code> <code>:DISP:EVM:WIND2:CHAN?</code>
Couplings	Depends on window
Preset	Depends on window
State Saved	Yes
Range	<code>CHAN1 ... CHAN8</code>

3.7.2.6 Layer

Provides a menu of layer choices for the selected window.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:LAYer LAYER0 ... LAYER7</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:LAYer?</code>
Example	<code>:DISP:EVM:WIND2:LAY LAYER1</code> <code>:DISP:EVM:WIND2:LAY?</code>
Couplings	Depends on window
Preset	Depends on window
State Saved	Yes
Range	<code>LAYER0 ... LAYER7</code>

3.7.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.7.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control

instrument settings that affect the vertical axis.

Ref Value

Specifies the amplitude of a signal displayed on the reference graticule line. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

The Ref Value control applies only to the selected window. If the table type window is selected, the Ref Value control is unavailable. The functionality depends on the selected window.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVel <real></code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVel?</code>
Example	<code>:DISP:EVM:WIND3:Y:RLEV 20</code> set the Y ref value of the third window to 20 <code>:DISP:EVM:WIND3:Y:RLEV?</code> query the Y ref value of the third window
Preset	Depends on trace data
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	The reference value is displayed above the graticule with the title "Ref Value"

Scale/Div

Controls the Y scale per division of the selected trace.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:PDIVision <real></code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:PDIVision?</code>
Example	<code>:DISP:EVM:WIND3:Y:PDIV 10</code> set the Y scale/div of the third window to 10 <code>:DISP:EVM:WIND3:Y:PDIV?</code> query the Y scale/div of the third window
Preset	Depends on trace data
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Annotation	Upper left corner of trace grid, same gray as grid

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:EVM:WIND3:Y:RPOS TOP</code> set the Y ref position of the third window to TOP <code>:DISP:EVM:WIND3:Y:RPOS?</code> query the Y ref position of the third window
Preset	Depends on trace data
State Saved	Saved in instrument state
Range	Top Center Bottom

Auto Scale

Changes the Y reference value and Scale per Division so the full trace is displayed without clipping.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALe]:AUTO:ONCE</code>
Example	<code>:DISP:EVM:WIND3:Y:AUTO:ONCE</code> do the Y auto scale for the third window

Auto Scale at Restart

Enable and disable automatic Y Auto Scale with measurement restart:

- On – will do automatic Y Auto Scale when measurement restarted, to let you see complete trace
- Off – will not do automatic Y Auto Scale when measurement restarted, to keep user setting for Y scale

Remote Command	<code>:DISPlay:EVM:Y[:SCALe]:AUTO:REStart 0 1 OFF ON</code> <code>:DISPlay:EVM:Y[:SCALe]:AUTO:REStart?</code>
Example	<code>:DISP:EVM:Y:AUTO:REST ON</code> <code>:DISP:EVM:Y:AUTO:REST?</code>
Preset	OFF
State Saved	Yes

Horizontal Center

Specifies the offset of horizontal center for constellation display.

Remote Command	<code>:DISP: EVM: WINDow[1] 2 ... 9: Y: POLar: HCEnter <real></code> <code>:DISP: EVM: WINDow[1] 2 ... 9: Y: POLar: HCEnter?</code>
Example	<code>:DISP: EVM: WIND3: Y: POL: HCEn 0.01</code> <code>:DISP: EVM: WIND3: Y: POL: HCEn?</code>
Preset	0
State Saved	Saved in instrument state
Min	-500
Max	500

3.7.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 1718](#)
- See ["Single-Attenuator Configuration" on page 1719](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.

Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--


Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

3 5G NR Mode
3.7 Modulation Analysis Measurement

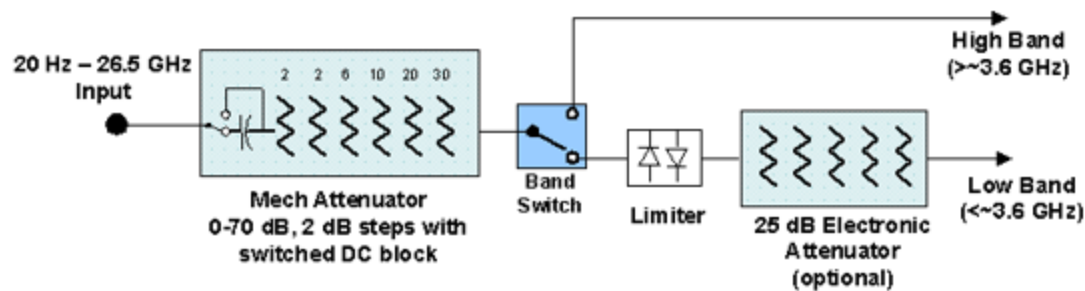


Configuration 2: Mechanical attenuator, no optional electronic attenuator

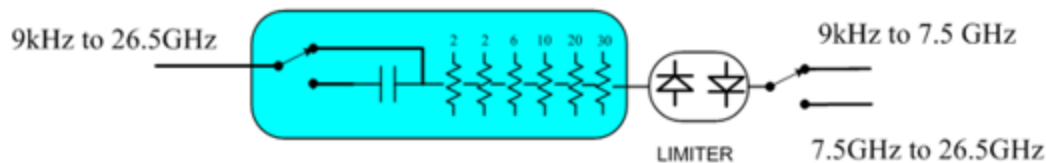

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

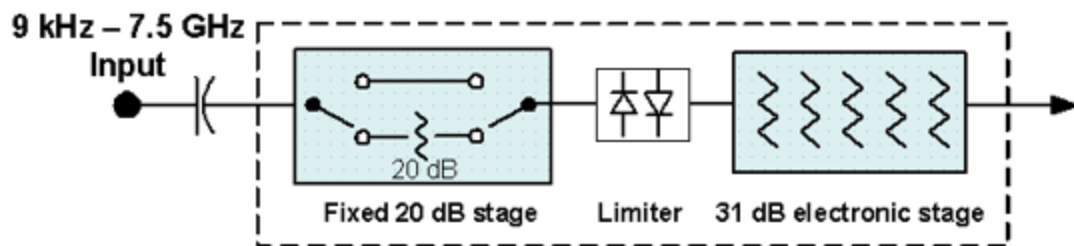

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator



Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and " Mech Atten " on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten

In the **Amplitude**, "**Y Scale**" on page 3222 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten

"Total Atten above 50 GHz" followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 1723

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " Elec Atten " on page 3231 See " Attenuator Configurations and Auto/Man " on page 1723 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">- If the USB Preamp is connected to USB, use 0 dB for Mech Atten- Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp,

	<p>External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</p> <ul style="list-style-type: none"> In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>	
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>	
State Saved	<p>Saved in instrument state</p>	
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the "soft" attenuation is at 14 dB (see below for definition of "soft" attenuation)</p>	

When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn Auto Mech Atten ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support Auto , such as Swept SA
Preset	ON

Attenuator Configurations and Auto/Man

As described under "Attenuation" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "Mech Atten" on page 1721 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 3231 for more about "soft" attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

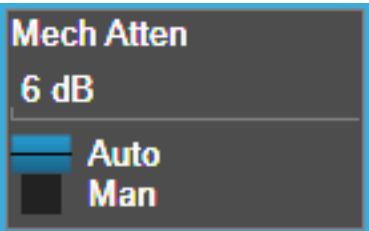

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

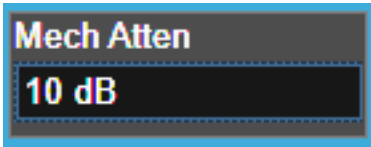

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1726](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation’s specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the</p>

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<p>frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> – Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes – Transmit On Off Power measurement in 5GNR Mode – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 1726
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1 [:SENSe]:POWer[:RF]:EATTenuation:STATe?</pre>
Example	<pre>:POW:EATT:STAT ON :POW:EATT:STAT?</pre>
Preset	<p>OFF (Disabled) for Swept SA measurement</p> <p>ON (Enabled) for all other measurements that support the electronic attenuator</p>
NOTE	<p>The maximum Center Frequency for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of</p>

3.3 GHz, and $1\text{ GHz} < \text{IFBW} \leq 1.5\text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5\text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1727](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled

- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANge:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANge:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANge:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1730

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECtrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[:SENSe]:POWer[:RF]:RANge:OPTimize:ATTenuation OFF ON ELECtrical </code>
----------------	--

	COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?
Notes	The parameter option ELECTrical sets this function to ON in Single-Attenuator models The parameter option COMBined is mapped to ELECTrical in Single-Attenuator models. If you send COMBined , it sets the function to ON and returns ELEC to a query For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " Elec Atten " on page 3231 is OFF or grayed-out, " Pre-Adjust for Min Clipping " on page 1729 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC
State Saved	Saved in instrument state
Range	Dual-Attenuator models: Off Elec Atten Only Mech + Elec Atten Single-Attenuator models: Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

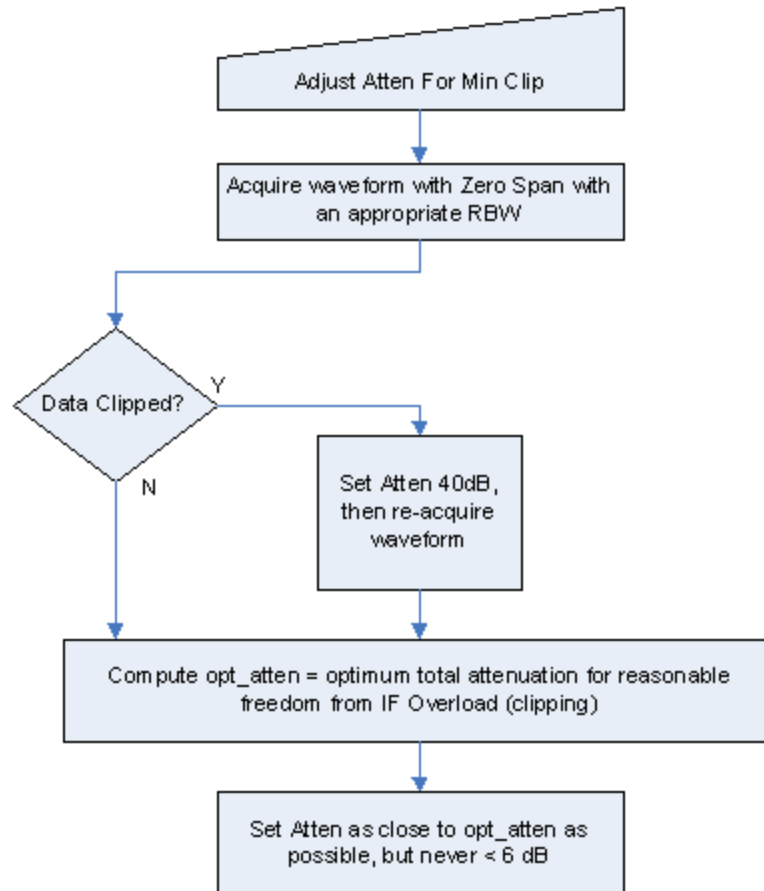

Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 1729 selection is Mech + Elec Atten:

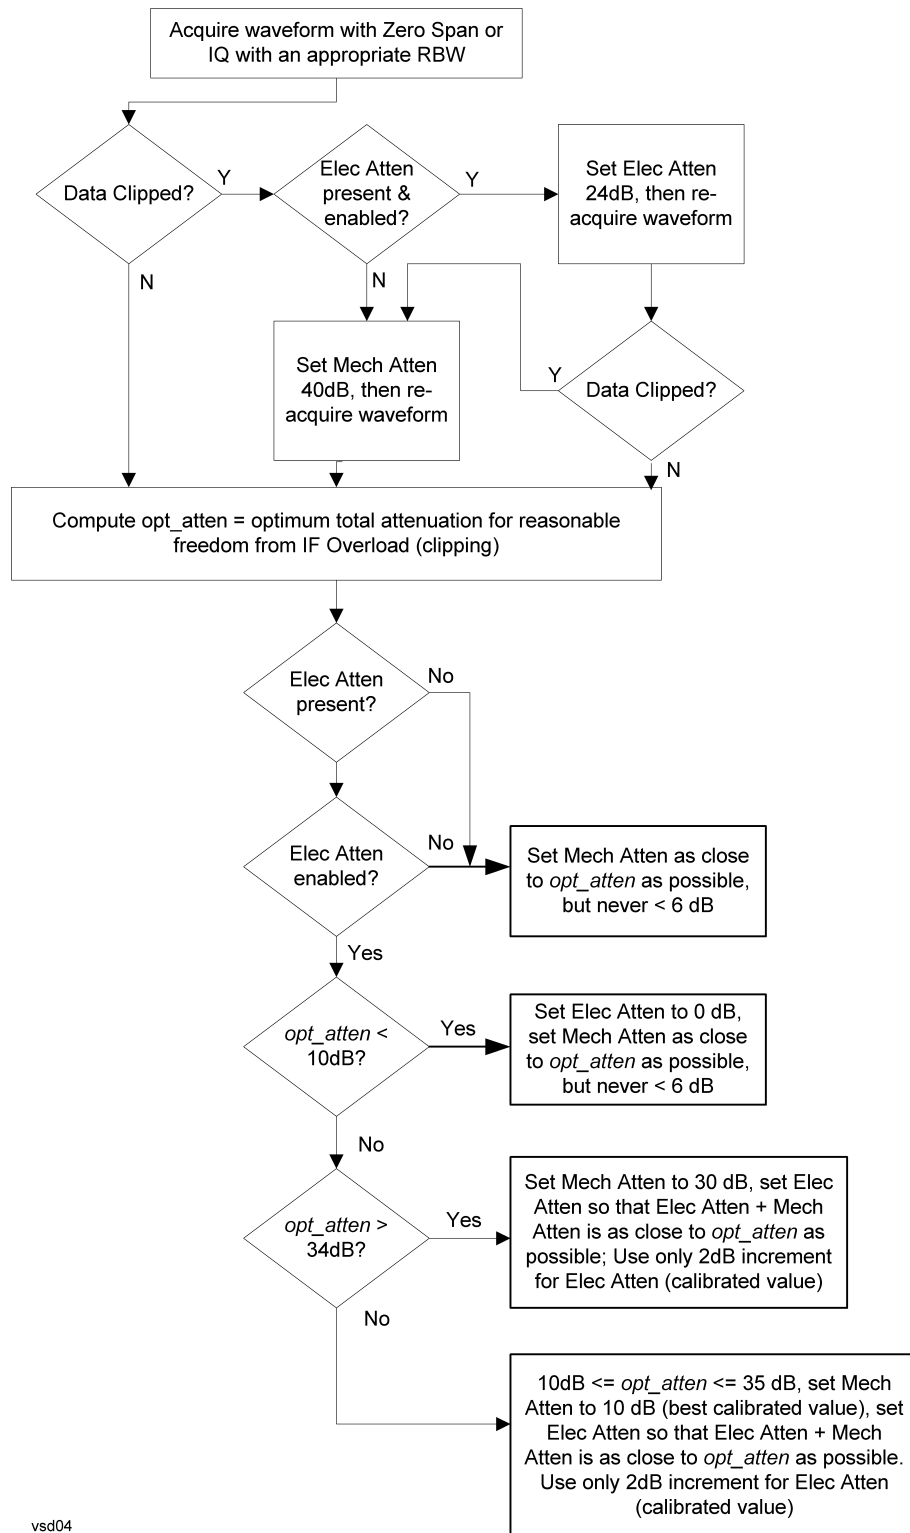

vsd04

"Pre-Adjust for Min Clipping" on page 1729 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

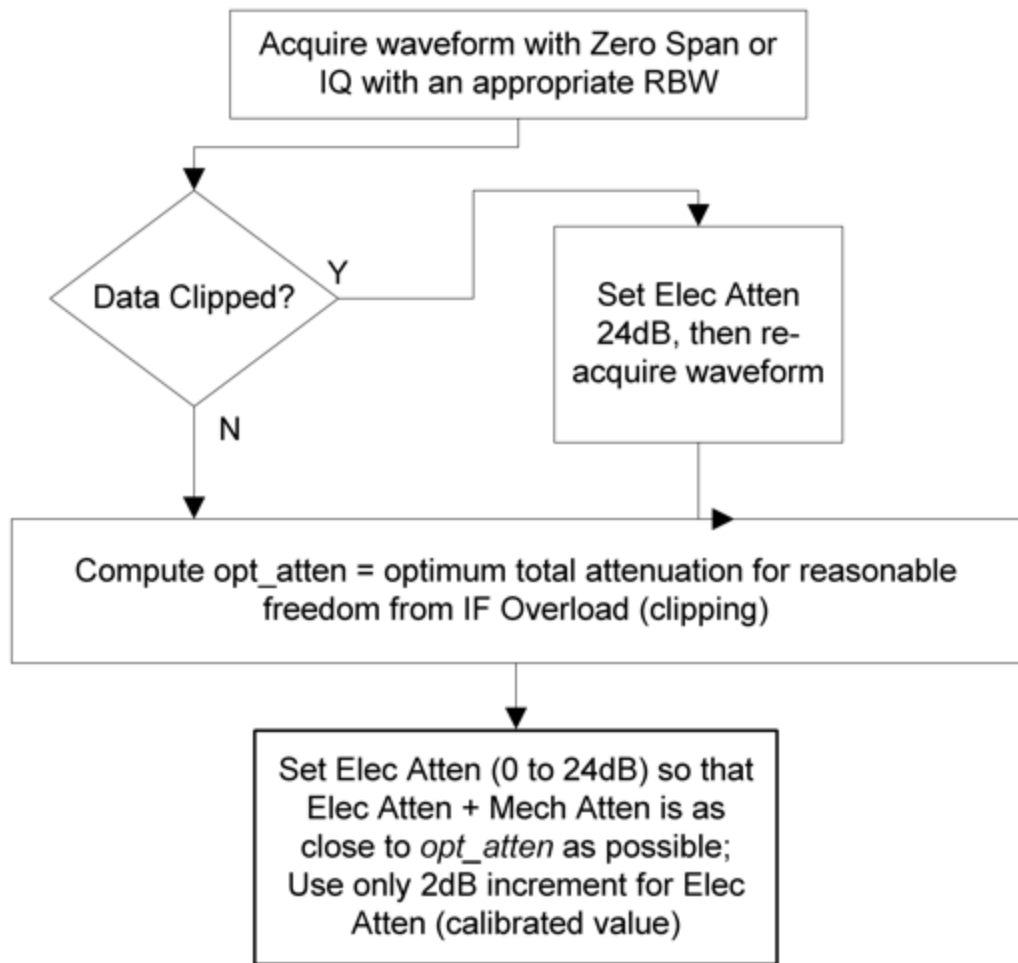

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.7.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECTrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECTrical , COMBined , and ON) are honored and all are mapped to ELECTrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

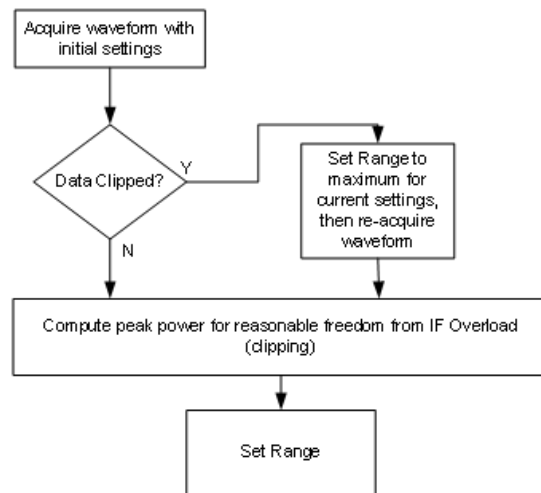

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 3247. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.7.3.4 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak
Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"				
State Saved	No				

Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If Auto is not supported, sending the SCPI command generates an error
Couplings	When in Auto , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	ON
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#" This is an alternate form of the command to match the POWer form of the I Range and Q Range SCPI.
Remote Command	<code>[:SENSe]:POWer:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the POWer and VOLTage forms of the command
Preset	ON
Range	Auto Man

I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code> <code>:VOLT:IQ:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When " Q Same as I " on page 3245 is On, the I Range value will be copied to " Q Range " on page 3244 Changing the value also sets Range = Man
Preset	Complex SPECTrum Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω) 0.5 V Peak (4 dBm @ 50Ω) 0.25 V Peak (-2 dBm @ 50Ω) 0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl></code> <code>[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω <code>:POW:IQ:RANG 4 dBm</code> <code>:POW:IQ:RANG?</code>
Notes	The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range

	states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω : 10, 4, -2, -8 75 Ω : 8.2, 2.2, -3.8, -9.8 600 Ω : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ "**I Range**" on page 3242 determines both I and Q channel range settings.

Remote Command	<code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ, " I Range " on page 3242 determines both I and Q channel range settings
Couplings	When " Q Same as I " on page 3245 is On, the " I Range " on page 3242 value is copied to Q Range and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω) 0.5 V Peak (4 dBm @ 50 Ω) 0.25 V Peak (-2 dBm @ 50 Ω) 0.125 V Peak (-8 dBm @ 50 Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak

3 5G NR Mode

3.7 Modulation Analysis Measurement

"Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak

This is an alternate form of the command to allow entry as a power.

Remote Command	<code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <amp;1></code> <code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω , and to 1.0 V Peak when Reference Z is 75 Ω : <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω : 10, 4, -2, -8 75 Ω : 8.2, 2.2, -3.8, -9.8 600 Ω : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[:SENSe]:VOLTage POWer:IQ:MIRRored OFF ON 0 1</code> <code>[:SENSe]:VOLTage POWer:IQ:MIRRored?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When ON , the "I Range" on page 3242 value is mirrored (copied) to the "Q Range" on page 3244
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

3.7.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 3250](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 1743](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command

	is sent in these instruments, accepted without error, and the query always returns 0
	– Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to :READ or :MEASure queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> - Does not appear in CXA-m - Does not appear in VXT Models M9410A/11A/15A/16A - Does not appear in M9410E/11E/15E/16E - Grayed-out if microwave preselector is off - Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz - Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz - Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Preset	0 MHz
State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

3 5G NR Mode

3.7 Modulation Analysis Measurement

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated

	Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)</p>
	Auto Function
Remote Command	[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN[:STATe]?
Example	:POW:GAIN OFF :POW:GAIN?
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to ["Internal Preamp" on page 3251](#). LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with ["Internal Preamp" on page 3251](#), although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).


For more details about annotation, see ["More Information" on page 1747](#)

Remote Command	[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?
Example	:POW:GAIN:LNA ON
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p>LNA is not available when the electronic/soft attenuator is enabled</p>


Preset	OFF
State Saved	Saved in State

More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the **μW Preselector** is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the **μW Preselector**'s bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 1752
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 1754
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 1754

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " Presel Center " on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing <ul style="list-style-type: none"> – The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed – The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed – The Full Bypass Enable selection does not appear unless options LNP and MPB are both present

3 5G NR Mode

3.7 Modulation Analysis Measurement

as well as option FBP

In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated

Low Noise Path Enable and **Full Bypass Enable** are grayed-out if the current measurement does not support them

Low Noise Path Enable and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	<table> <tr> <th>Mode</th><th>Value</th></tr> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μ W Presel Bypass Full Bypass Enable														
Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>														

μ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μ W Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypasss
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

3 5G NR Mode

3.7 Modulation Analysis Measurement

Measurement	μ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto μ W path is standard
	For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command `[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`
`[:SENSe]:POWer[:RF]:MW:PATH:AUTO?`

Example `:POW:MW:PATH:AUTO ON`

	<code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 1749 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

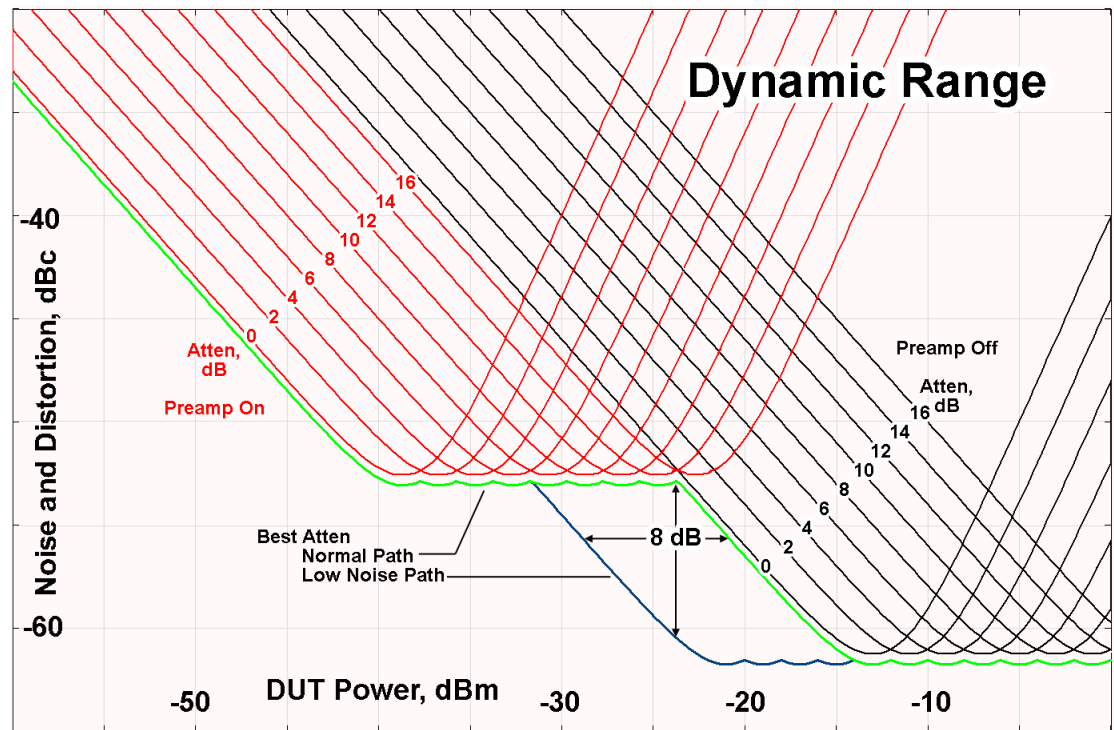

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger

amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none"> – 5GNRMode: Modulation Analysis and IQ Waveform – WLAN Mode: IQ Waveform – Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The

specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPreSel:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPreSel:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON

State Saved	Saved in instrument state
-------------	---------------------------

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled	
Preset	N9041B	NORMa1
	N9042B+V3050A	NARRow
State Saved	Saved in instrument state	

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?	
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON	

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<p>Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON</p> <p>Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON</p>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " Prefilter Presets " on page 1761 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.7.4 BW

BW is not supported in the 5G NR Modulation Analysis measurement.

3.7.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.7.5.1 Meas Display

Display Reference BWP/SSB

Enable and disable the display of reference BWP/SSB trace on Constellation, Error Vector Time and Error Vector Spectrum result windows.

Remote Command	<code>:DISPlay:EVM:REFeRence:BWP OFF ON 0 1</code> <code>:DISPlay:EVM:REFeRence:BWP?</code>
Example	<code>:DISP:EVM:REF:BWP OFF</code> <code>:DISP:EVM:REF:BWP?</code>
Preset	OFF
State Saved	Yes
Range	Off On

Combine Trace w/ Same Numerology

Enable and disable combine BWP/SSB specific traces with same numerology.

Note: this feature only combine display and should not impact measurement results, so it only applies to IQ Meas Time, Detected Allocations, Error Vector Time and Error Vector Spectrum.

Remote Command	<code>:DISPlay:EVM:COMBine:BWP OFF ON 0 1</code> <code>:DISPlay:EVM:COMBine:BWP?</code>
Example	<code>:DISP:EVM:COMB:BWP OFF</code> <code>:DISP:EVM:COMB:BWP?</code>
Preset	OFF
State Saved	Yes
Range	Off On

CC for All windows

Changes all traces/tables to specific "Component Carrier" on page 1789, note some traces/tables are not CC specific so they will not be affected.

Remote Command	<code>:DISPlay:EVM:CC:SElected CC0 ... CC15</code>
Example	<code>:DISP:EVM:CC:SEL CC1</code>
Couplings	Activated value is based on number of component carriers
Preset	<code>CC0</code>
State Saved	Yes
Range	<code>CC0 ... CC15</code>

Display SCS Annotation

Enable or disable the display of SCS annotation in result windows.

Remote Command	<code>:DISPlay:EVM:TRACe:SCS:ANnotation OFF ON 0 1</code> <code>:DISPlay:EVM:TRACe:SCS:ANnotation?</code>
Example	<code>:DISP:EVM:TRAC:SCS:ANN OFF</code> <code>:DISP:EVM:TRAC:SCS:ANN?</code>
Preset	<code>ON</code>
State Saved	Yes
Range	Off On

3D Trace Reset (GUI only)

Reset selected 3D trace.

State Saved	No
-------------	----

3D Trace X-Y Plane (GUI only)

Switch selected 3D trace to X-Y plane (EVM/Power vs symbol)

State Saved	No
-------------	----

3D Trace Z-Y Plane (GUI only)

Switch selected 3D trace to X-Y plane (EVM/Power vs subcarrier)

State Saved No

3D Trace X-Z Plane (GUI only)

Switch selected 3D trace to X-Y plane (symbol vs subcarrier)

State Saved No

3.7.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

Views

The Modulation Analysis measurement has nine pre-defined views as follows.

View	Result
"Normal" on page 1765	"IQ Meas Time" on page 1706 "Detected Allocation" on page 1706 "Spectrum" on page 1705 "Raw Main Time" on page 1704 "Frame Summary" on page 1710 "Error Summary" on page 1710
"Normal 3x3" on page 1766	"IQ Meas Time" on page 1706 "Spectrum" on page 1705 "Raw Main Time" on page 1704 "Detected Allocation" on page 1706 "RE Power 3D" on page 1707 "Error Vector 3D" on page 1708 "Frame Summary" on page 1710 "Error Summary" on page 1710 "User Summary" on page 1711
"In-Band Emission" on page 1766	"In-band Emission" on page 1708 "BWP Summary" on page 1710
"Result Summary" on page 1766	"Error Summary" on page 1710 "Frame Summary" on page 1710 "User Summary" on page 1711 "BWP Summary" on page 1710

View	Result
"CC Summary" on page 1767	"CC Summary" on page 1710
"Decode Summary" on page 1767	"Decoded Info" on page 1712
	"Decoded Channels" on page 1713
	"Decoded Symbols" on page 1713
"MISO Summary" on page 1767	"Spectrum" on page 1705
	"Raw Main Time" on page 1704
	"MIMO Info" on page 1711
"MIMO Summary" on page 1767	"User Summary" on page 1711
	"MIMO Info" on page 1711
"Auto Detect Summary" on page 1768	"IQ Meas Time" on page 1706
	"Frame Summary" on page 1710
	"Auto Detect Summary" on page 1711

Some of these are multiple-window Views. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is **Frequency**, unless otherwise specified in the View description.

View – Selection by Enum

Remote Command	<code>:DISPlay:EVM:VIEW[:SElect] NORMal IBEMission NRESults CCResults DECode MIMO ADEtect N3X3 MISO</code> <code>:DISPlay:EVM:VIEW[:SElect]?</code>
Example	Set Normal view: <code>:DISP:EVM:VIEW NORM</code>
Preset	<code>NORM</code>
State Saved	Saved in instrument state

Normal

This view has six windows:

- "IQ Meas Time" on page 1706
- "Detected Allocation" on page 1706
- "Spectrum" on page 1705
- "Raw Main Time" on page 1704

- "Frame Summary" on page 1710
- "Error Summary" on page 1710

Example `:DISP:EVM:VIEW NORM`

Normal 3x3

This view has nine windows:

- "IQ Meas Time" on page 1706
- "Spectrum" on page 1705
- "Raw Main Time" on page 1704
- "Detected Allocation" on page 1706
- "RE Power 3D" on page 1707
- "Error Vector 3D" on page 1708
- "Frame Summary" on page 1710
- "Error Summary" on page 1710
- "User Summary" on page 1711

Example `:DISP:EVM:VIEW N3X3`

In-Band Emission

This view has two windows:

- "In-band Emission" on page 1708
- "BWP Summary" on page 1710

Example `:DISP:EVM:VIEW IBEM`

Result Summary

This view has four windows:

- "Error Summary" on page 1710
- "Frame Summary" on page 1710
- "User Summary" on page 1711
- "BWP Summary" on page 1710

Example `:DISP:EVM:VIEW NRES`

CC Summary

This view has a single window: "CC Summary" on page 1710

Example `:DISP:EVM:VIEW CCR`

Decode Summary

This view has three windows:

- "Decoded Info" on page 1712
- "Decoded Channels" on page 1713
- "Decoded Symbols" on page 1713

Example `:DISP:EVM:VIEW DEC`

MISO Summary

This view has three windows:

- "Spectrum" on page 1705
- "Raw Main Time" on page 1704
- "MIMO Info" on page 1711

Example `:DISP:EVM:VIEW MISO`

MIMO Summary

This view has two windows:

- "User Summary" on page 1711

- "MIMO Info" on page 1711

Example	<code>:DISP:EVM:VIEW MIMO</code>
---------	----------------------------------

Auto Detect Summary

This view has three windows:

- "IQ Meas Time" on page 1706
- "Frame Summary" on page 1710
- "Auto Detect Summary" on page 1711

Example	<code>:DISP:EVM:VIEW ADET</code>
---------	----------------------------------

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
----------------	--

Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
---------	---

Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOom</code>) with <code>:DISP:VIEW:ADV:SEL</code></p> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p><code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
-------	---

Backwards Compatibility SCPI	The legacy node <code>:DISPlay:VIEW[:SElect]</code> is retained for backwards compatibility, but it only supports predefined views
------------------------------	--

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:NAME “Baseband”</code> Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code><alphanumeric></code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
----------------	--

Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

3.7.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF

Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0 :DISPlay:ANNotation:TRACe[:STATe]?
Example	:DISP:ANN:TRAC OFF
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	:DISPlay:ACTivefunc[:STATe] ON OFF 1 0 :DISPlay:ACTivefunc[:STATe]?
Example	:DISP:ACT OFF
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly

occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

- 1. To increase speed as much as possible by freeing the instrument from having to update the display
- 2. To reduce emissions from the display, drive circuitry
- 3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>

Name	Command
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DElete
Delete All But This Screen	:INSTrument:SCReen:DElete:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF ON 0 1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

3.7.6 Freq

Opens the **Frequency** menu, which contains controls that allow you to control the frequency parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.7.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets the reference frequency of all the carriers. The center frequencies of carriers are defined as offset frequency from this value.

Remote Command	<code>[:SENSe]:CCARrier:REference <freq></code> <code>[:SENSe]:CCARrier:REference?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1 GHz
State Saved	Saved in instrument state
Min	Depends on instrument minimum center frequency. Same as Center Frequency
Max	Depends on instrument maximum center frequency. Same as Center Frequency

3.7.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **Normal** and places it at the center of the display. If the selected marker is Off, it is set to **Normal** and placed it at the center of the screen on the trace determined by the **Marker Window** rules.

3.7.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do *not* depend on the selected marker (e.g., Counter).

On any menu tab for which Select Marker displays, the first control is always Marker X.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state

3.7.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, Fixed or Off) for the selected marker, as well as additional functions that help you use markers.

Marker X

Set the X Axis value of the selected marker in the current X Axis Scale unit. If the marker mode is off, the SCPI command has no affect other than to cause the marker to become selected. Note that the X value can change if the marker is moved to a trace with a different domain.

The Marker X position is absolute if the marker mode is Normal or Fixed. If the mode is Delta, then the X position is relative to the reference marker. The valid X positions are the actual data points in the trace; the marker cannot be located between points. If a SCPI command attempts to place the marker between two points, the X value snaps to the closest point.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:X <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:EVM:MARK:X 0.325</code> <code>:CALC:EVM:MARK:X?</code>
Notes	Marker X does not go outside the bounds of the data unless it is Fixed. If you attempt to set it to a value outside the bounds, it is clipped at the closest limit and error -222 Data Out of Range is generated If suffix is sent, it must match the X units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated If you try to read or set the position of a Delta marker, remember that the position is in relative units
Couplings	Coupling of Delta and Reference Markers
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

Marker Z

Set the selected markers Z Axis value in the current Z Axis Scale unit for markers on traces with a 2-dimensional domain. In each case the marker that is addressed becomes the selected marker. It has no affect (other than to cause the marker to become selected) if the control mode is **Off** or if the trace has no Z domain. Note that the Z value can change or become irrelevant if the marker is moved to a trace with a different Z domain or no Z domain.

Note that this Z value is affected if the SCPI command to set marker point position is used.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Z <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Z?</code>
Example	<code>:CALC:EVM:MARK:Z 0.325</code> <code>:CALC:EVM:MARK:Z?</code>
Notes	Marker Z does not go outside the bounds of the data unless it is Fixed. If you attempt to set it to a value outside the bounds it is clipped at the closest limit, and error -222 Data Out of Range is generated If suffix is sent, it must match the Z units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated
Couplings	Coupling of Delta and Reference Markers
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

Marker Y

Enables you to set or read back the selected marker's Y Axis value in the current Y Axis Scale unit.

Setting the Y value is enabled when the Marker Mode is Fixed.

The query form generates an error if the marker mode is Off. Note that the Y value can change if the Y-axis units change, either from a change in format of the trace the marker is on or if the marker is moved to a different trace.

If the selected marker is on a trace that is displayed with Vector or Constellation format, this function controls only the real part of the Y value (i.e., the horizontal axis value). Use "[Marker Y Imag](#)" on page 1778 to change the imaginary (vertical) value. Marker Y and Marker Y Imag always set or get the rectangular form of Y, regardless of whether the marker readout is polar or rectangular.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y[:REAL] <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y[:REAL]?</code>
Example	<code>:CALC:EVM:MARK2:Y 0.325</code> <code>:CALC:EVM:MARK2:Y?</code>
Notes	You cannot set Y unless the marker type is fixed. If the marker becomes fixed after a marker function is turned on, it is set to whatever the Y value was when the marker became fixed If suffix is sent, it must match the Y units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated
Couplings	Changes if marker is relative to a Delta marker that is turned on

Preset	None until marker is turned on
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Marker Y Imag

Enables you to set or read back the selected marker's quadrature (imaginary) Y value in the current Y Axis Scale unit.

Setting the Y value is enabled when the Marker Mode is Fixed, and the current trace format is not complex (Vector or Constellation). The query form generates an error if it is used for a marker that is not on a complex trace. Marker Y Imag is not affected by whether the marker readout is polar or rectangular.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:IMAGinary <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:IMAGinary?</code>
Example	<code>:CALC:EVM:MARK1:Y:IMAG 0.435</code> <code>:CALC:EVM:MARK1:Y:IMAG?</code>
Notes	Grayed-out unless the marker is fixed and on a vector display If suffix is sent, it must match the Y units for the trace the marker is on. Otherwise, an Invalid Suffix error is generated. Otherwise, error -138, "Suffix not allowed" is generated If query is sent while the marker is on a trace whose format is not vector or constellation, NaN (9.91E+37) is returned
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace format
Max	Depends on trace format

Marker Y Annotation (Remote Query only)

Query marker Y annotation in string format.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:ANNotation?</code>
Example	<code>:CALC:EVM:MARK2:Y:ANN?</code>

Marker Mode

There are four control modes for markers:

- Normal** (POSition) – A marker that can be moved to any point on the X Axis by specifying its X Axis value, and whose absolute Y Axis value is then the value of the trace point at that X Axis value
- Delta** (DELTA) – A marker that can be moved to any point on the X Axis by specifying its X Axis offset from a reference marker, and whose absolute Y Axis value is then the value of the trace point at that X Axis value
- Fixed** (FIXed) – A marker whose X Axis and Y Axis values may be directly or indirectly specified by you, but whose Y Axis value remains fixed, once specified, and does not follow the trace. Fixed markers are useful as reference markers for Delta markers, as operands in a Peak Search operation, and as arbitrary reference points settable by you. These markers are represented on the display by an “X” rather than a diamond
- Off** (OFF) – A marker that is not in use

The SCPI command in the table below selects the marker and sets the marker control mode as described under **Normal**, **Delta**, **Fixed** and **Off**, below. All interactions and dependencies detailed under the control description are enforced when the remote command is sent.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MODE POSition DELTa FIXed =OFF</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:EVM:MARK2:MODE POS</code> <code>:CALC:EVM:MARK2:MODE?</code>
Couplings	The marker addressed by this command becomes the selected marker on the front panel
Preset	OFF
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X Axis value are saved in instrument state
Range	Normal Delta Fixed Off

Delta Marker (Reset Delta)

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:EVM:MARKer:AOff</code>
Example	<code>:CALC:EVM:MARK:AOff</code>

Couple Markers

When this function is On, moving any marker causes an equal X Axis movement of every other marker that is not Fixed or Off. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Note that **Fixed** markers do not couple. They stay where they were while all the other markers move. Of course, if a **Fixed** marker is being moved, all the non-fixed markers do move with it.

This may result in markers going off screen.

Remote Command	<code>:CALCulate:EVM:MARKer:COUPle[:STATe] ON OFF 1 0</code> <code>:CALCulate:EVM:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:EVM:MARK:COUP ON</code> <code>:CALC:EVM:MARK:COUP?</code>
Notes	In general, when coupling is turned on then all Normal or Delta markers with the same (or equivalent) domain as the selected marker move in the same manner as the selected marker
Preset	OFF , presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.7.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

Marker X

Set the X Axis value of the selected marker in the current X Axis Scale unit. This is the same as the Marker X control on the Settings tab.

Peak Search

Moves the selected marker to the trace point which has the maximum y-axis value for that trace.

NOTE

Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:EVM:MARK2:MAX</code>
Notes	Sending this command selects the subopcoded marker

Next Peak (Next Lower Amp)

Moves the selected marker to the peak that is next lower in amplitude than the current marker's value. Only peaks which meet all enabled peak criteria are considered. If there is no valid peak lower than the current marker position, a "No peak found" message is generated and the marker is not moved.

In the Digital Demod measurements, if the format is complex (vector or constellation) then the marker moves to the closest point that has a lower magnitude than the marker's current position.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:EVM:MARK2:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Higher Amplitude

Moves the marker to the peak next higher in Y value than the peak it is currently on. If the format is complex (vector or constellation) then the marker moves to the closest point that has a higher magnitude than the marker's current position. If this function is invoked via SCPI on a marker that is off, the result is the same as if you sent a Peak Search command.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:PREVious</code>
Example	<code>:CALC:EVM:MARK2:MAX:PREV</code>

Next Pk Right

Moves the selected marker to the nearest peak right of the current marker that meets all enabled peak criteria. If there is no valid peak to the right of the current

marker position, a “No peak found” message is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:RIGHT</code>
Example	<code>:CALC:EVM:MARK2:MAX:RIGH</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Next Pk Left

Moves the selected marker to the nearest peak left of the current marker that meets all enabled peak criteria. If there is no valid peak to the left of the current marker position, a “No peak found” message is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:LEFT</code>
Example	<code>:CALC:EVM:MARK2:MAX:LEFT</code>
State Saved	Not part of saved state

Minimum Peak

Moves the selected marker to the minimum y-axis value on the current trace. Minimum (negative) peak searches do not have to meet the peak search criteria. It just looks for the lowest y-axis value. If the selected marker is Off, it is turned on before the minimum search is performed.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MINimum</code>
Example	<code>:CALC:EVM:MARK2:MIN</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Pk-Pk Search

Finds and displays the amplitude and frequency (or time) differences between the highest and lowest y-axis value. It places the selected marker on the minimum value on its selected trace. And it places that marker's reference marker on the peak of its selected trace.

This function turns on the reference marker and sets its mode to Fixed or Normal if it is not already on. (These markers may be on two different traces.)

The rules for finding the maximum peak are exactly the same as for **Peak Search**, including the use of the peak criteria rules. However, the minimum trace value is not required to meet any criteria other than being the minimum y-axis value in the trace.

If the selected marker is off, a delta type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a delta marker, then it is changed to delta which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Remote Command	:CALCulate:EVM:MARKer[1] 2 ... 12:PTPeak
Example	:CALC:EVM:MARK:PTP
Notes	Turns on the Marker D active function Sending this command selects the subopcoded marker
Couplings	The selected marker becomes a delta marker if not already in delta mode
State Saved	Not part of saved state

Marker Delta

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button on the Settings tab. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

The control is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the marker’s control mode to Delta without having to access two separate menus.

3.7.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker X

This is the fundamental control that you use to move a marker around on the trace. This is the same as the Marker X control on the Settings tab. See ["Marker X" on page 1776](#).

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:REFerence <integer></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:EVM:MARK2:REF 4</code> <code>:CALC:EVM:MARK2:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself” When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is off it is turned on in Fixed or Normal mode at the delta marker location
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it’s default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12

Marker Window

Assigns the specified marker to the designated trace.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:WINDow <int></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:WINDow?</code>
Example	<code>:CALC:EVM:MARK:WIND 2</code> set the first marker’s trace to window 2 <code>:CALC:EVM:MARK:WIND?</code> query the first marker’s trace
Notes	Assigns the specified marker to the designated window
Preset	1
State Saved	Yes
Min	1
Max	6

Marker Trace

Assigns the specified marker to the designated trace (result and limit lines) when selected window is In-Band Emissions.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:TRACe:IBEM POWer ALL GENeral IMAGe DC</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:TRACe:IBEM?</code>
Example	<code>:CALC:EVM:MARK:TRAC:IBEM ALL</code> set the first marker's trace to IBE All limit line <code>:CALC:EVM:MARK:TRAC:IBEM?</code> query the first marker's trace in IBE window
Notes	Assigns the specified marker to the designated trace (result and limit lines)
Couplings	Only valid when the In-Band Emissions window is selected
Preset	<code>POWer</code>
State Saved	Yes
Range	RB Power All (combined) Limit General Limit IQ Image Limit Carrier Leakage Limit

Marker Settings Diagram

Lets you configure the Marker system using a visual utility. This is the same as "Marker Settings Diagram" on page 1779 on the **Settings** tab.

3.7.7.5 Marker Function

The controls on this tab allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data.

Marker X

Sets the X Axis value of the selected marker in the current X Axis Scale unit. This is the same as the Marker X control on the Settings tab

Marker Function/Interval Function

Sets the marker control function type to one of the following:

<code>NOISe</code>	Marker Noise
<code>BPOWer</code>	Band Power/Interval Power
<code>BDENsity</code>	Band Density/Interval Density
<code>OFF</code>	Marker Function Off

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION NOISe BPOWer BDENsity OFF</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION?</code>
Example	<code>:CALC:EVM:MARK:FUNC BPOW</code> <code>:CALC:EVM:MARK:FUNC?</code>
Notes	The label on the control is Marker Function for Frequency Domain traces and Interval Function for Time Domain traces
Preset	OFF
State Saved	Yes
Range	Marker Noise Band Power Band Density Off
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Band Span/Interval Span

Band Span

Sets the width of the span for the selected marker. This function defines the span of frequencies. The marker position does not change when you adjust the span.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:SPAN 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:BAND:SPAN?</code>
Preset	When marker turned on, 1/20 th of current span
State Saved	Yes
Min	100
Max	9.9E+37

Interval Span

Sets the width of the span for the selected marker. This function defines the span of time. The marker position does not change when you adjust the span.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:SPAN <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:SPAN?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:INT:SPAN 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:INT:SPAN?</code>
Preset	When marker turned on, 1/20 th of current displayed time length
State Saved	Yes
Min	100
Max	9.9E+37

Band Left/Interval Left

Band Left

Enables you to adjust the left side of the band. In order to remain centered in the band, the marker position must also change as you change the left edge. The right edge is unaffected.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:LEFT 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:BAND:LEFT?</code>
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40 th of current span left of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Interval Left

Enables you to adjust the left side of the band. In order to remain centered in the band, the marker position must also change as you change the left edge. The right edge is unaffected.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:LEFT <real></code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:LEFT?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:INT:LEFT 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:INT:LEFT?</code>
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40 th of current displayed time length left of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Band Right/Interval Right

Band Right

Enables you to adjust the right side of the band. In order to remain centered in the band, the marker position must also change as you change the right edge. The left edge is unaffected.

Remote Command	:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT <real> :CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT?
Example	:CALC:EVM:MARK2:FUNC:BAND:RIGHT 1.23E+06 :CALC:EVM:MARK2:FUNC:BAND:RIGHT?
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40 th of current span right of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Interval Right

Enables you to adjust the right side of the band. In order to remain centered in the band, the marker position must also change as you change the right edge. The left edge is unaffected.

Remote Command	:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:RIGHT <real> :CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:INTERval:RIGHT?
Example	:CALC:EVM:MARK2:FUNC:INT:RIGHT 1.23E+06 :CALC:EVM:MARK2:FUNC:INT:RIGHT?
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40 th of current displayed time length right of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

3.7.7.6 Marker To

The controls on this tab enable you to copy the current marker's value into other instrument parameters (for example, Center Freq). The currently selected marker is made the active function on entry to this menu (if the currently selected marker is not on when you press this front panel key, it will be turned on at the center of the screen as a normal type marker and then made the active function).

Marker X

Sets the X Axis value of the selected marker in the current X Axis Scale unit. This is the same as the Marker X control on the Settings tab.

Mkr -> CF

Sets the center frequency of the analyzer to the frequency of the selected marker. The marker stays at this frequency, so it moves to the center of the display. In delta marker mode, this function sets the center frequency to the x-axis value of the delta marker. When the frequency scale is in log mode, the center frequency is not at the center of the display.

If the currently selected marker is not on when this control is pressed, it will be turned on at the center of the screen as a normal type marker.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12[:SET]:CENTer</code>
Example	<code>:CALC:EVM:MARK4:CENT</code>
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker
Dependencies	This function is not available (control is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Center Frequency apply

3.7.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

3.7.8.1 Settings

Enables you to set measurement parameters.

Component Carrier

Allows you to select which component carrier settings should be accessible on GUI.

You can select any CC index that is less than the Number of Component Carriers. The inactive carriers are disabled.

Remote Command	<code>[[:SENSe]:EVM:SElected CC0 ... CC15 [:SENSe]:EVM:SElected?</code>
Example	<code>:EVM:SEL CC0 :EVM:SEL?</code>
Dependencies	Coupled to Number of Component Carriers. For example, if Number of Component Carriers is 2, then Component Carrier list includes CC0~CC1

Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Avg|Hold Number

Specifies the number of N averages that will be used for the measurement. After the specified number (average counts) have been averaged, the averaging mode (termination control) setting determines the averaging action.

Remote Command	<code>[:SENSe]:EVM:AVERage:COUNT <integer></code> <code>[:SENSe]:EVM:AVERage:COUNT?</code>
Example	<code>:EVM:AVER:COUN 1000</code> <code>:EVM:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min	1
Max	10000

Continue Averaging

Continue Averaging is designed for acquiring the trace average through multiple sets of DUT conditions, in order to meet requirements such as those for an OTA measurement.

NOTE

You must be in **Single** sweep/measurement to use **Continue Averaging**. Go to **Single** and press **Restart** to get your first set of averages, then **Continue Averaging** will be available.

Use `FETCh:<meas>?` to retrieve the data as it waits for completion of Continue Averaging. `*OPC?` does not wait for completion and returns true immediately.

Pressing this control adds (to the already averaged trace or measurement) a number of averages equal to the Avg|Hold number. Every time you press it, the terminal count increases by the current value of the Avg|Hold number. You can change your test setup (e.g., the DUT position or antenna) after each average count reaches the terminal count.

You could also accomplish the same thing by manually increasing the Avg|Hold number, but using Continue Averaging you are guaranteed to get the same number of averages at each step in the process and you always keep the Avg|Hold number the same so you don't lose its value

Remote Command	<code>[:SENSe]:EVM:AVERage:CONTinue</code>
Example	<code>:EVM:AVER:CONT</code>
Dependencies	Becomes enabled when you change Sweep mode to Single and the Average Count reaches the Average Number. Otherwise, grayed-out

Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[:SENSe]:EVM:AVERage[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:AVERage[:STATe]?</code>
Example	<code>:EVM:AVER OFF</code> <code>:EVM:AVER?</code>
Preset	OFF
State Saved	Yes
Range	Off On

Averaging Mode

Toggles the averaging mode between Exp (exponential) and Repeat. This selection only affects the averaging result after the number of N averages is reached. The N is set using the control “Avg|Hold Number.”

Exponential	Each successive data acquisition after the average count is reached, is exponentially weighted and then combined with the existing average
Repeat	After reaching the average count, the averaging is reset, and a new average is started

Remote Command	<code>[:SENSe]:EVM:AVERage:TCONtrol EXPonential REPeat</code> <code>[:SENSe]:EVM:AVERage:TCONtrol?</code>
Example	<code>:EVM:AVER:TCON REP</code> <code>:EVM:AVER:TCON?</code>
Notes	Selects the type of termination control used for averaging. This determines the averaging action after the specified number of frames (average count) is reached
Preset	EXPonential
State Saved	Yes
Range	Exponential Repeat

Acquisition Mode

Specifies the data acquisition mode that will be used by analyzer to capture IQ data.

When Acquisition mode is Sequential, data capture is done for each enabled CC sequentially. The acquisition center frequency is adjusted to the Carrier Ref Freq + CC Freq Offset, and acquisition IFBW is the CC BW. All the pre-demod traces will show results based on individual CC BW. For example, the Span of spectrum trace for CC0 will be based on BW setting of CC0.

When Acquisition mode is Simultaneous, data capture is done for all enabled CCs simultaneously using a bandwidth less than Max IF BW supported by HW. The acquisition center freq is the Carrier Ref Freq, and acquisition IFBW is adjusted to the aggregated CC BW (not exceeding the HW Max IFBW). If one enabled CC frequency range is out of the acquisition frequency range, the warning "Required Bandwidth is beyond hardware capability" is prompted, and there will be no EVM results available for such CC. All the pre-demod traces will show results based on aggregated BW rather than individual CC BW.

Remote Command	<code>[:SENSe]:EVM:ACQuisition SIMultaneous SEQuential</code> <code>[:SENSe]:EVM:ACQuisition?</code>
Example	<code>:EVM:ACQ SEQ</code> <code>:EVM:ACQ?</code>
Preset	<code>SEQuential</code>
State Saved	Saved in instrument state
Range	<code>Simultaneous SeQuential</code>

Copy CC To

Copies the selected "Component Carrier" on page 1789 to another Component Carrier, or all Component Carriers.

This parameter copies 5GNR demodulation parameters from one Component Carrier to other Component Carrier or all Component Carriers.

For GUI operation, which parameters will be copied is specified by Copy CC Content.

For SCPI operation, which parameters will be copied is specified by optional node:

- **ALL**: All Component Carrier specific parameters under Meas Setup panel
- **TIME**: All parameters under Meas Setup – Meas Time tab
- **ADVanced**: All Component Carrier specific parameters under Meas Setup – Advanced tab
- **DECode**: All parameters under Meas Setup – Decode tab

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:COPY:ALL TIME ADVanced DECode CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15 ALL</code>
----------------	---

Example	:EVM:CCAR0:COPY:ADV ALL
Couplings	Enabled when Component Carrier number is greater than one
Preset	ALL
State Saved	Yes
Range	ALL CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15

Copy CC Content

Specifies the Meas Setup parameter group for "Copy CC To" on page 1792:

- **All:** All Component Carrier specific parameters under Meas Setup panel
- **Meas Time:** All parameters under Meas Setup – Meas Time tab
- **Advanced:** All Component Carrier specific parameters under Meas Setup – Advanced tab
- **Decode:** All parameters under Meas Setup – Decode tab

Couplings	Enabled when "Component Carrier" on page 1789 number is greater than one
Preset	All
State Saved	Saved in instrument state
Range	All Meas Time Advanced Decode

Spur Avoidance (VXT2)

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The Spur Avoidance function is provided to eliminate this spur, at the expense of some measurement speed.

When Spur Avoidance is enabled (the default), the analyzer uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the $BW \leq \text{maxBW}/2.5$. See [More Information](#).

You can disable this function in order to speed up your measurement. When Spur Avoidance is turned Off, a warning message will appear in the status bar as "Settings Alert; Spur Avoidance Off". This is to alert you that measurement accuracy might be impacted because you have defeated the spur avoidance algorithm.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	<code>[:SENSe]:EVM:SAVoid[:STATe] ON OFF 0 1</code> <code>[:SENSe]:EVM:SAVoid[:STATe]?</code>
Example	<code>:EVM:SAV ON</code> <code>:EVM:SAV?</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A and M9410E/11E/15E/16E
Preset	ON
State Saved	Saved in instrument state
Range	On Off

More Information

The Maximum Digital IF BW depends on the installed options, and selected Center Frequency.

VXT models M9410A/11A

Option limitation:

Option	Max Digital IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 5480 MHz (without Option EP6)	1200 MHz
5480 MHz ~ 6080 MHz (without Option EP6)	(6080 MHz – CF) * 2
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 6000 MHz (Option EP6)	1200 MHz
6000 MHz ~ 6600 MHz (Option EP6)	(6600 MHz – CF) * 2

VXT model M9415A

3 5G NR Mode

3.7 Modulation Analysis Measurement

Option limitation:

Option	Max Digital IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 12300 MHz	1200 MHz
12300 MHz ~ 12900 MHz	$(12900 \text{ MHz} - CF) * 2$

M9410E/11E

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 25.9 GHz (without Option EP6)	1200 MHz
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 25.9 GHz (Option EP6)	1200 MHz
25.9 GHz ~ 26.5 GHz	$\text{Min}(\text{Max BW by option}, 2 * (26.5 \text{ GHz} - \text{Center Freq}))$

M9415E/16E

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 25.9 GHz	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

Optimize EVM

This is an "immediate action" function to optimize EVM for active Component Carriers. It is used to set the combination of preamp, mechanical and electronic attenuation and IF gain value based on measured signal peak level. Its purpose is to get better EVM results by improving SNR and avoid ADC overload at the same time.

After this control is pressed, Pre-Adjust or Min Clipping is changed to Off and IF Gain Auto is changed to Manual.

Note: for multiple Component Carriers in sequential mode, after optimization, `separate optimized settings (attenuation, preamp, IF Gain) for each CC will be used before measurement restart. And selected component carrier's optimized setting will be displayed on panel. After measurement restart the displayed setting (optimized for selected CC) will be used for all active CC.

Remote Command	<code>[:SENSe]:EVM:OPTimize</code>
Example	<code>:EVM:OPT</code>
Dependencies	Does not appear in VXT Models M9410A/11A/15A/16A/20A/21A and M9410E/11E/15E/16E

EVM Optimization Method

“Optimize EVM” is an immediate action to adjust hardware settings to minimize EVM, before the action, the EVM Optimization Method should be selected.

There are 2 methods for EVM Optimization:

Normal	NORMa1	Captures input signal, measures its peak power, then the algorithm finds the proper setting combination for attenuation, preamp and IF Gain
Iterative	ITERative	Captures input signal multiple times in an iteration process, demodulates the signal and calculates EVM for each iteration, then finds the setting combination for attenuation, preamp and IF Gain with minimum EVM

For 5GNR signal, Iterative method is significantly slower than Normal method but it can always get better EVM.

Remote Command	<code>[:SENSe]:EVM:OPTMethod NORMa1 ITERative</code> <code>[:SENSe]:EVM:OPTMethod?</code>
Example	<code>:EVM:OPTM NORM</code> <code>:EVM:OPTM?</code>
Dependencies	Does not appear in VXT Models M9410A/11A/15A/16A/20A/21A and M9410E/11E/15E/16E
Couplings	Disabled when "Component Carrier" on page 1789 number is greater than one
Preset	NORMa1
State Saved	Saved in instrument state
Range	Normal Iterative

Iterative EVM Optimization Target

Specify the component carrier will be used as iterative EVM optimization target.

Remote Command	<code>[:SENSe]:EVM:OPTimize:ITERative:TARGet CC0 ... CC15</code> <code>[:SENSe]:EVM:OPTimize:ITERative:TARGet?</code>
Example	<code>:EVM:OPT:ITER:TARG CC0</code> <code>:EVM:OPT:ITER:TARG?</code>
Dependencies	This control is invalid when EVM Optimization Method is Normal
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Allow Re-Calculation

In single mode, turn on/off result recalculation and update (without measurement restart) when you change specific parameters:

Remote Command	<code>:CALCulate:EVM:RECalculate OFF ON 0 1</code> <code>:CALCulate:EVM:RECalculate?</code>
Example	<code>:CALC:EVM:REC OFF</code> <code>:CALC:EVM:REC?</code>
Couplings	This control will be disabled when: <ul style="list-style-type: none"> – Measurement in continuous mode – Or Multiple CC with Sequential Acquisition mode
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>Off On</code>

Restart Meas on Optimize EVM

Toggles the force restart switch for the immediate action of "[Optimize EVM](#)" on page 1796.

When ON, pressing the control Optimize EVM or sending `[:SENSe]:EVM:OPTimize` restarts the measurement and then executes the function.

When OFF, pressing Optimize EVM or sending the SCPI command neither restarts the measurement nor executes the function. The function is executed when you restart the measurement or execute continuing averaging. In this case, pressing **Optimize EVM** generates the following advisory message:

"The immediate action is deferred until "Restart" or "Continue Averaging" is executed"

This message is not generated when the SCPI command is sent.

Remote Command	<code>[:SENSe]:EVM:IACTion:REStart OFF ON 0 1</code> <code>[:SENSe]:EVM:IACTion:REStart?</code>
Example	<code>:EVM:IACT:REST OFF</code> <code>:EVM:IACT:REST?</code>
Preset	ON
State Saved	Saved

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see ["Measurement-Specific Details" on page 1800](#) below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	: COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter’s coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFigure:EVM</code>
Example	<code>:CONF:EVM</code>
Notes	Restore all defaults of parameters

3.7.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal. This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none">- If changed to uplink: RF burst- If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none">- If changed to uplink: Periodic- If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows.<ul style="list-style-type: none">- External 1, when Info BW \leq 255 MHz- External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

MIMO

Indicates input Signal is MIMO (including MISO) or SISO.

NOTE This setting is available for EVM.

Remote Command	<code>[:SENSe]:RADio:MIMO[:STATe] ON OFF 0 1</code> <code>[:SENSe]:RADio:MIMO[:STATe]?</code>
Example	<code>:RAD:MIMO ON</code> <code>:RAD:MIMO?</code>
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>ON OFF</code>

When input signal is MIMO, there are two use models depends on input data channel number.

- Input data channel number = 1

This means the MIMO signal has been combined into one channel (MISO), in this condition only part of measurements results are valid:

MIMO Info table

Spectrum trace

Raw Main Time trace

- Input data channel number > 1

Input data channels may come from:

Recall IQ data for multiple channels

Reference Input Channel

Specifies reference channel in MIMO mode.

NOTE

This setting is available for EVM when "MIMO" on page 1801 is set to On.

Remote Command	<code>[:SENSe]:RADio:MIMO:CHANnel:REFeRence CHANnel1 ... CHANnel8</code> <code>[:SENSe]:RADio:MIMO:CHANnel:REFeRence?</code>
Example	<code>:RAD:MIMO:CHAN:REF CHAN1</code> <code>:RAD:MIMO:CHAN:REF?</code>
Couplings	This key is grayed-out when MIMO is off The available selections depend on Total input channel number
Preset	<code>CHAN1</code>
State Saved	Yes

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	<p>This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B</p> <p>When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed.</p> <p>When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused"</p> <p>Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration</p>
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO

	13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Input Channel IP address

Set instrument IP address for channel configuration, “local” is used for current instrument.

Remote Command	<code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4 <String></code> <code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4?</code>
Example	<code>:RAD:MCH:IPAD '192.168.1.2'</code>
Dependencies	Appears only in the EVM measurement
Preset	local
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:IPAddress[1] 2 ... 4</code>

Input Channel Instrument port

Set instrument port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4:PORT <int></code> <code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4:PORT?</code>
----------------	---

3 5G NR Mode

3.7 Modulation Analysis Measurement

Example	<code>:RAD:MCH:IPAD:PORT 3574</code>
Dependencies	Available only for the EVM measurement. Only visible on VXT platforms
Preset	3574
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:IPADdress[1] 2 ... 4:PORT</code>

Lock

Lock instrument and assign to a channel in sequence.

Remote Command	<code>[:SENSe]:RADio:MCHannel:IPADdress[1] 2 ... 4:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:IPADdress[1] 2 ... 4:LOCKed?</code>
Example	<code>:RAD:MCH:IPAD1:LOCK 1</code> <code>:RAD:MCH:IPAD1:LOCK?</code>
Dependencies	Appears only in the EVM measurement
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:IPADdress[1] 2 ... 4:LOCKed</code>

Channel Configuration Information (Remote Query only)

This SCPI query reads back channel configuration information.

Remote Command	<code>[:SENSe]:RADio:MCHannel:CHANnel:INFO?</code>
Example	<code>:RAD:MCH:CHAN:INFO?</code>
Dependencies	Available only for the EVM measurement
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:CHANnel:INFO</code>

Advanced Acquisition

This menu is only available for the Modulation Analysis measurement. It enables you to configure selected RF settings for each component carrier and channel.

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 1806

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
-----------------	---

Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
-------------	---

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go to the idle state

See **"Restart" on page 3413** for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Input Channel (GUI Only)

Select the input channel to configure its settings.

State Saved	No
-------------	----

Use Advanced Acquisition Table

Specify if the settings in Advanced Acquisition Table will be applied.

Remote Command	<code>[:SENSe]:RF:ACQuistion:ATABle OFF ON 0 1</code> <code>[:SENSe]:RF:ACQuistion:ATABle?</code>
Example	<code>:RF:ACQ:ATAB 1</code> <code>:RF:ACQ:ATAB?</code>
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>OFF ON</code>

Acquisition Mode

Specifies the data acquisition mode that will be used by analyzer to capture IQ data.

When Acquisition mode is Sequential, data capture is done for each enabled CC sequentially. The acquisition center frequency is adjusted to the Carrier Ref Freq + CC Freq Offset, and acquisition IFBW is the CC BW. All the pre-demod traces will show results based on individual CC BW. For example, the Span of spectrum trace for CC0 will be based on BW setting of CC0.

When Acquisition mode is Simultaneous, data capture is done for all enabled CCs simultaneously using a bandwidth less than Max IF BW supported by HW. The acquisition center freq is the Carrier Ref Freq, and acquisition IFBW is adjusted to the aggregated CC BW (not exceeding the HW Max IFBW). If one enabled CC frequency range is out of the acquisition frequency range, the warning "Required Bandwidth is beyond hardware capability" is prompted, and there will be no EVM results available for such CC. All the pre-demod traces will show results based on aggregated BW rather than individual CC BW.

Remote Command	<code>[:SENSe]:EVM:ACQuisition SIMultaneous SEquential</code> <code>[:SENSe]:EVM:ACQuisition?</code>
Example	<code>:EVM:ACQ SEQ</code> <code>:EVM:ACQ?</code>
Preset	<code>SEquential</code>
State Saved	Saved in instrument state
Range	<code>Simultaneous Sequential</code>

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1810](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none">- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes- Transmit On/Off Power measurement in 5G NR Mode

	<ul style="list-style-type: none"> – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " Mechanical Attenuator Transition Rules " on page 1811
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</pre> <pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</pre>
Example	<pre>:POW:EATT:STAT ON</pre> <pre>:POW:EATT:STAT?</pre>
Preset	<p>OFF (Disabled) for Swept SA measurement</p> <p>ON (Enabled) for all other measurements that support the electronic attenuator</p>

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily

aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1812](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

IF Path Auto

Specify if the IF path in Advanced Acquisition Table will be automatically or manually selected.

Remote Command	<code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO ON OFF 1 0</code> <code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO?</code>
Example	<code>:RF:ACQ:ATAB:IFP:AUTO 1</code> <code>:RF:ACQ:ATAB:IFP:AUTO?</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	ON
State Saved	Yes
Range	OFF ON

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Mechanical Attenuation

Set mechanical attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:ATT 20</code>
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB

Elec Attenuation

Set electronic attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:EATTenuation <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:EATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:EATT 20</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual attenuator configuration: 24 dB Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

Internal Preamp

Turn on/off internal preamp for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:GAIN:PREamp OFF LOW FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:GAIN:PREamp?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:PRE LOW</code> <code>:CCAR0:RF:CHAN1:GAIN:PRE?</code>
Dependencies	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the control is not shown
Preset	OFF
State Saved	Saved in instrument state

LNA

Turn on/off Low Noise Amplifier (LNA) for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:GAIN:LNA OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANne11 ... 8:GAIN:LNA?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:LNA ON</code>
Dependencies	Requires option LNA
Preset	OFF
State Saved	Saved in State

uW Path Control

Select uW Path for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH?</code>
Example	<code>:CCAR0:RF:CHAN1:MW:PATH LNP</code> <code>:CCAR0:RF:CHAN1:MW:PATH?</code>
Preset	MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved	Save in instrument state
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable

IF Gain

Set IF Gain for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel?</code>
Example	<code>:CCAR0:RF:CHAN1:IF:GAIN:LEV -10</code> <code>:CCAR0:RF:CHAN1:IF:GAIN:LEV?</code>
Notes	Not available for B25 IF bandwidth option
Preset	0
State Saved	Save in instrument state
Min	Depends on CC Bandwidth
Max	Depends on CC Bandwidth

IF Path

Specify IF path manually for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G</code> <code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath?</code>
Example	<code>:CCAR0:RF:CHAN1:IFP B160M</code> <code>:CCAR0:RF:CHAN1:IFP?</code>
Notes	B10M = 10 MHz B25M = 25 MHz

	B40M = 40 MHz B85M = 85 MHz B125M = 125 MHz B140M = 140 MHz B160M = 160 MHz B255M = 255 MHz B510M = 510 MHz B1G = 1 GHz B1500M = 1.5 GHz B2G = 2 GHz B4G = 4 GHz In cases where the path is not available but is selected from SCPI, it generates an error - 241, "Hardware missing; Option not installed"
Dependencies	Gray out if IF Path Auto is On
Preset	Automatically selected IF path according to measurement required IFBW and available HW bandwidth
State Saved	Saved in instrument state

Interfering Signal Present

Sets whether interference signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in Adjacent Channel, Spectrum Emission Mask and Spurious Emissions measurements.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

Freq Offset From Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference

Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min	0 Hz
Max	400 MHz

Span

Sets the span of the interference signal for intermodulation tests.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SPAN <freq></code> <code>[:SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min	200 kHz
Max	400 MHz

Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:SIDE NEGative POSitive</code> <code>[:SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code>

	<code>:RAD:IMOD:INT:SIDE?</code>
Preset	<code>POSitive</code>
State Saved	Saved in instrument state

Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- Inner – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- Outer – The interfering signal exists at either of the outer regions

NOTE

This setting is available for ACP, EVM, SEM and Spur.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:REGion INNER OUTer</code> <code>[:SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	<code>OUTer</code>
State Saved	Saved in instrument state

Interfering Signal Exclude Range

Enables you to select the offset range to be excluded from the measurement.

- Offset Integ BW (OIBW) - Exclude an entire ACP offset range where the interfering signal is allocated
- Interfering Signal Span (ISSP) - Exclude only the span where the interfering signal is occupied

NOTE

This setting is available only for the ACP and Modulation Analysis measurements.

Remote Command	<code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2 OIBW ISSPan</code> <code>[:SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLude[1] 2?</code>
Example	<code>RAD:IMOD:INT:RANG:EXCL OIBW</code> <code>RAD:IMOD:INT:RANG:EXCL?</code>

Notes	Subopcode 1 for Downlink, 2 for Uplink. Default is Downlink.
Preset	Downlink: ISSPan Uplink: OIBW
State Saved	Saved in instrument state
Range	Offset Integ BW Interfering Signal Span

3.7.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>

Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

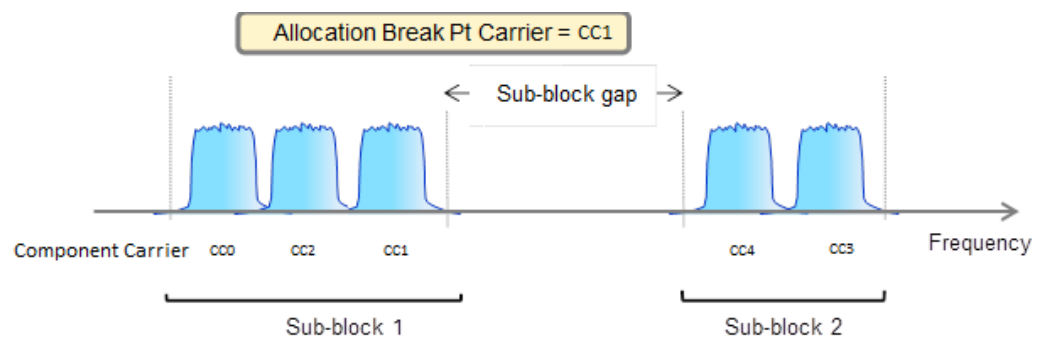

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	<code>[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K</code> <code>[:SENSe]:CCARrier:AFOffset?</code>
Example	<code>:CCAR:AFOF ACRA100K</code> <code>:CCAR:AFOF?</code>
Notes	When you change the value to OFF , nothing happens
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz
Preset	OFF

State Saved	Yes
Range	The cascading list is shown below
	Channel Spacing for Channel Raster
	Adjacent NR Carriers 100 kHz
	Carrier Aggregation 15 kHz
	Off 60 kHz
	Channel Spacing for Channel Raster
	Adjacent NR Carriers 100 kHz
	Carrier Aggregation 15 kHz
	Off 60 kHz
	Channel Spacing for Channel Raster
	Adjacent NR Carriers
	Carrier Aggregation
	Off

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when " Bandwidth " on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M

	– Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action “Apply Preset (to All CCs)” is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<p>Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE This setting is available for EVM measurement only.

Remote Command	<pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1</pre> <pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</pre>
Example	<pre>:EVM:CCAR:CID:MODE MAN</pre> <pre>:EVM:CCAR:CID:MODE?</pre>
Preset	MANua1
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE This setting is available for EVM measurement only.

Remote Command	<pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></pre> <pre>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</pre>
Example	<pre>:EVM:CCAR4:CID 0</pre> <pre>:EVM:CCAR4:CID?</pre>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal Invert

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1

Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815

3 5G NR Mode

3.7 Modulation Analysis Measurement

	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
When Freq Range is FR2			
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value

Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

N_Grid_Size (Display Only)

Display Max RB Number for each available numerology. To adjust this setting please switch to Resource Grid tab.

NOTE

This setting is available for EVM measurement only.

3GPP TS38.104 or TS38.101-1 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
		N	N	N	N	N	N	N	N	N	N	N	N	N	N
		R	R	R	R	R	R	R	R	R	R	R	R	R	R
		B	B	B	B	B	B	B	B	B	B	B	B	B	B
1	2	5	7	1	1	1	1	2	2	2	N	N	N	N	N
5	5	2	9	0	3	6	8	1	4	7	.A	.A	.A	.A	.A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2	0	1	3	6	8	1	4	7
								6	9	3	2	9	7	5	3
6	N	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	.A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

3GPP TS38.104 Tables 5.3.2-2 and 5.3.2-3 or TS38.101-2 Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A

480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

NOTE: For the “N.A” value in above table, the value will be set to 0 and displayed as “---”.

Resource Grid

Enables you to configure resource grid for each available numerology of each component carrier.

NOTE

This tab and the following controls are only available for Modulation Analysis measurement.

Component Carrier (GUI only)

Selects the Component Carrier to configure its resource grid for each available numerology.

Bandwidth

This is the same as the Bandwidth column in the Configure CCs table. See ["Bandwidth" on page 3297](#).

Freq Range

This is the same as the Freq Range column in the Configure CCs table. See ["Freq Range" on page 3297](#)

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK?</code>
----------------	--

Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Configuration Mode

Selects the configuration mode for resource grid table:

- Auto – always reset N_grid_start and N_grid_size when the frequency range and bandwidth of component carrier are changed. SCS enable/disable state will not be changed, unless enabled SCS is invalid for new frequency range and bandwidth. If all enabled SCS are invalid for new frequency range and bandwidth, 30K SCS will be enabled for frequency range 1 and 120K SCS will be enabled for frequency range 2
- Man – keep the value in grid table when the frequency range and bandwidth of component carrier are changed, unless a value is invalid for new frequency range and bandwidth

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:CONFig:AUTO?</code>
Example	<code>:EVM:CCAR:RGR:CONF:AUTO 0</code> <code>:EVM:CCAR:RGR:CONF:AUTO?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON 0 1

When the configuration mode is Auto, the default N_grid_start is set to 0 and N_grid_size is set according to tables below:

Table 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1

S	5	1	1	2	2	3	3	4	4	5	6	7	8	9	1
C	M	0	5	0	5	0	5	0	5	0	0	0	0	0	0
S	H	M	M	M	M	M	M	M	M	M	M	M	M	M	0
	z	H	H	H	H	H	H	H	H	H	H	H	H	H	M
		z	z	z	z	z	z	z	z	z	z	z	z	z	H
															z
	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B

3 5G NR Mode

3.7 Modulation Analysis Measurement

1	2	5	7	1	1	1	1	2	2	2	N	N	N	N	N
5	5	2	9	0	3	6	8	1	4	7	.A	.A	.A	.A	.A
				6	3	0	8	6	2	0					
3	1	2	3	5	6	7	9	1	1	1	1	1	2	2	2
0	1	4	8	1	5	8	2	0	1	3	6	8	1	4	7
								6	9	3	2	9	7	5	3
6	N	1	1	2	3	3	4	5	5	6	7	9	1	1	1
0	.A	1	8	4	1	8	4	1	8	5	9	3	0	2	3
													7	1	5

Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2

SCS	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	N.A	N.A	N.A	N.A
120	32	66	132	264	N.A	N.A	N.A
480	N.A	N.A	N.A	66	124	248	N.A
960	N.A	N.A	N.A	33	62	124	148

SCS Enabled

The Enabled column lets you enable or disable selected SCS for current component carrier.

Remote Command	<pre>[:SENSe][:EVM]:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k[:STATe] OFF ON 0 1 [:SENSe][:EVM]:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k [:STATe]?</pre>
Example	<pre>:EVM:CCAR:RGR:SCS15 ON :EVM:CCAR:RGR:SCS15?</pre>
Notes	<p>Only valid numerology for selected frequency range and bandwidth will be visible. Some SCS are disabled if they are "N.A" in Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104)" in the Section 3.2.5.1.15, N_{Grid_Size} (Display Only)</p> <p>In EVM, if Configuration Mode is Auto and Freq Range is changed, the Grid Start and Grid Size will be reset according to Table 5.3.2-1 or Table 5.3.2-2</p> <p>In measurements other than EVM, when Freq Range is changed, the parameter will be reset according to Table 5.3.2-1 or Table 5.3.2-2</p>
Preset	<p>SCS 15k : OFF</p> <p>SCS 30k : ON</p> <p>SCS 60k : OFF</p>

	SCS 120k: OFF SCS240K: OFF SCS480K:OFF SCS960K:OFF
State Saved	Yes

N_grid_start

This column lets you set the Grid Start value for the selected numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt <integer></code> <code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:STARt?</code>
Example	<code>:EVM:CCAR:RGRid:SCS15k:STAR 0</code> <code>:EVM:CCAR:RGRid:SCS15k:STAR?</code>
Preset	Depends on frequency range, bandwidth and numerology
State Saved	Yes
Min	0
Max	Depends on frequency range, bandwidth and numerology

N_grid_size

This column lets you set the Grid Size for the selected numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier [0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:SIZE?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:SIZE 270</code> <code>:EVM:CCAR:RGR:SCS15k:SIZE?</code>
Notes	Grid Size should not exceed the Nrb in Table 5.3.2-1 or Table 5.3.2-2 of 3GPP TS38.104 and TS38.101-1 & -2
Preset	Depends on frequency range and bandwidth
State Saved	Yes
Min	6
Max	Depends on frequency range, bandwidth and numerology
Backwards Compatibility	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RBNumber:SCS15k SCS30k SCS60k SCS120k SCS240k</code>

SCPI


k0 (Display Only)

This column displays the k0 value for the selected Numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:SCS15k SCS30k SCS60k SCS120k SCS240k SCS480k SCS960k:k0?</code>
Example	<code>:EVM:CCAR:RGR:SCS15k:k0?</code>

More Information

See picture below for illustration how k0 is calculated.

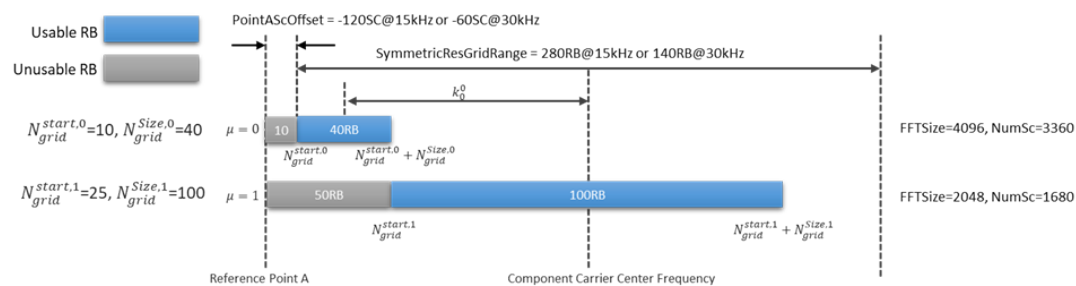

Point A Frequency (Display Only)

This figure displays the Point A Freq for the resource grid.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:RGRid:REFA?</code>
Example	<code>:EVM:CCAR:RGR:REFA?</code>

LTE Coexistence

This tab and the following controls are only available for Modulation Analysis measurement, and it will only appear for DL FR1 component carriers.

Add LTE (GUI only)

Pressing this control inserts a new LTE-CRS configuration into the list, the maximum number of LTE-CRS configurations is 4.

Delete LTE

Pressing this control deletes selected LTE-CRS configuration from the list.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:DELeTe:LTE <integer></code>
Example	<code>:EVM:CCAR0:DEL:LTE 1</code>

Clear All (GUI only)

Pressing this control deletes all LTE-CRS configurations from the list.

Effective LTE Number (Remote Command only)

Specifies how many LTE-CRS configurations are effective. This SCPI only command is used to provide similar functions such as “Add LTE” and “Delete LTE”.

Note that all 4 LTE-CRS configurations can be modified through SCPI, but ineffective LTE-CRS configurations (index > Effective LTE Number) will not be included in the measurement no matter whether its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:NUMBer:LTE?</code>
Example	<code>:EVM:CCAR:NUMB:LTE 2</code> <code>:EVM:CCAR:NUMB:LTE?</code>
Couplings	Max value is 4 If you attempt to remotely set the Count larger than 4, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	4

State

Enable or disable the LTE coexistence.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>[:STATe]?</code>
Example	<code>:EVM:CCAR:LTE1 OFF</code> <code>:EVM:CCAR:LTE1?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message This control is available only when 15K SCS is enabled in the resource grid

Preset	OFF
State Saved	Yes

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Carrier Offset to Point A

Sets the LTE carrier center subcarrier location determined by the offset from point A using 15K SCS.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<4>:COFFset?</code>
Example	<code>:EVM:CCAR:LTE1:COFF 0</code> <code>:EVM:CCAR:LTE1:COFF?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	0
State Saved	Yes
Min	0
Max	16383

MBSFN Subframes

Sets the subframe index that can be configured as MBSFN subframes in LTE.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame <string></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:MBSFn:SFRame?</code>
Example	<code>:EVM:CCAR:LTE:MBSF:SFR "2:9"</code> <code>:EVM:CCAR:LTE:MBSF:SFR?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
State Saved	Yes

Number of CRS Antenna Ports

Set the number of antenna ports for LTE-CRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBer N1 N2 N4</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:ANTenna:PORT:NUMBer?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB N1</code> <code>:EVM:CCAR:LTE1:CRS:ANT:PORT:NUMB?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	N1
State Saved	Yes
Range	1 2 4

v-shift

Set the v-shift value for LTE-CRS; it is given by LTE Cell ID mod 6.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:CRS:VSHift?</code>
Example	<code>:EVM:CCAR:LTE1:CRS:VSH 0</code> <code>:EVM:CCAR:LTE1:CRS:VSH?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	0
State Saved	Yes
Min	0
Max	5

Advanced Acquisition

This menu is only available for the Modulation Analysis measurement. It enables you to configure selected RF settings for each component carrier and channel.

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "More Information" on page 1838

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none">- A line with an arrow is Single- A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while

Average/Hold Num is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Input Channel (GUI Only)

Select the input channel to configure its settings.

State Saved	No
-------------	----

Use Advanced Acquisition Table

Specify if the settings in Advanced Acquisition Table will be applied.

Remote Command	[:SENSe]:RF:ACQuistion:ATABle OFF ON 0 1 [:SENSe]:RF:ACQuistion:ATABle?
Example	:RF:ACQ:ATAB 1 :RF:ACQ:ATAB?
Preset	OFF
State Saved	Yes
Range	OFF ON

Acquisition Mode

Specifies the data acquisition mode that will be used by analyzer to capture IQ data.

When Acquisition mode is Sequential, data capture is done for each enabled CC sequentially. The acquisition center frequency is adjusted to the Carrier Ref Freq + CC Freq Offset, and acquisition IFBW is the CC BW. All the pre-demod traces will show results based on individual CC BW. For example, the Span of spectrum trace for CC0 will be based on BW setting of CC0.

When Acquisition mode is Simultaneous, data capture is done for all enabled CCs simultaneously using a bandwidth less than Max IF BW supported by HW. The acquisition center freq is the Carrier Ref Freq, and acquisition IFBW is adjusted to the aggregated CC BW (not exceeding the HW Max IFBW). If one enabled CC frequency range is out of the acquisition frequency range, the warning "Required Bandwidth is beyond hardware capability" is prompted, and there will be no EVM results available for such CC. All the pre-demod traces will show results based on aggregated BW rather than individual CC BW.

Remote Command	[:SENSe]:EVM:ACQuisition SIMultaneous SEquential [:SENSe]:EVM:ACQuisition?
----------------	---

Example	<code>:EVM:ACQ SEQ</code> <code>:EVM:ACQ?</code>
Preset	<code>SEQuential</code>
State Saved	Saved in instrument state
Range	<code>Simultaneous</code> <code>Sequential</code>

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1842](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <code>EATT</code> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p>

If "LNA" on page 3253 is **ON**, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 1842
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these

cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1843](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled

- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

IF Path Auto

Specify if the IF path in Advanced Acquisition Table will be automatically or manually selected.

Remote Command	<code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO ON OFF 1 0</code> <code>[:SENSe]:RF:ACQuistion:ATABle:IFPath:AUTO?</code>
Example	<code>:RF:ACQ:ATAB:IFP:AUTO 1</code> <code>:RF:ACQ:ATAB:IFP:AUTO?</code>
Preset	ON
State Saved	Yes
Range	OFF ON

Mechanical Attenuation

Set mechanical attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation <rel_ampl></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:ATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:ATT 20</code>
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB

Elec Attenuation

Set electronic attenuation for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation <rel_ampl></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:EATTenuation?</code>
Example	<code>:CCAR0:RF:CHAN1:EATT 20</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual attenuator configuration: 24 dB Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to

24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

Internal Preamp

Turn on/off internal preamp for each component carriers.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp OFF LOW FULL [:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:PREamp?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:PRE LOW :CCAR0:RF:CHAN1:GAIN:PRE?</code>
Dependencies	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the control is not shown
Preset	OFF
State Saved	Saved in instrument state

LNA

Turn on/off Low Noise Amplifier (LNA) for each component carriers.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA OFF ON 0 1 [:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:GAIN:LNA?</code>
Example	<code>:CCAR0:RF:CHAN1:GAIN:LNA ON</code>
Dependencies	Requires option LNA
Preset	OFF
State Saved	Saved in State

uW Path Control

Select uW Path for each component carriers.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH STD LNPath MPBypass FULL [:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:MW:PATH?</code>
Example	<code>:CCAR0:RF:CHAN1:MW:PATH LNP :CCAR0:RF:CHAN1:MW:PATH?</code>
Preset	MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved	Save in instrument state
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable

IF Gain

Set IF Gain for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel <rel_amp1></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RF:CHANnel1 ... 8:IF:GAIN:LEVel?</code>
Example	<code>:CCAR0:RF:CHAN1:IF:GAIN:LEV -10</code> <code>:CCAR0:RF:CHAN1:IF:GAIN:LEV?</code>
Notes	Not available for B25 IF bandwidth option
Preset	0
State Saved	Save in instrument state
Min	Depends on CC Bandwidth
Max	Depends on CC Bandwidth

IF Path

Specify IF path manually for each component carriers.

Remote Command	<code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G</code> <code>[:SENSe]:CCARrier0 ... 15:RF:CHANnel1 ... 8:IFPath?</code>
Example	<code>:CCAR0:RF:CHAN1:IFP B160M</code> <code>:CCAR0:RF:CHAN1:IFP?</code>
Notes	<p>B10M = 10 MHz B25M = 25 MHz B40M = 40 MHz B85M = 85 MHz B125M = 125 MHz B140M = 140 MHz B160M = 160 MHz B255M = 255 MHz B510M = 510 MHz B1G = 1 GHz B1500M = 1.5 GHz B2G = 2 GHz B4G = 4 GHz</p> <p>In cases where the path is not available but is selected from SCPI, it generates an error - 241, "Hardware missing; Option not installed"</p>

Dependencies	Gray out if IF Path Auto is On
Preset	Automatically selected IF path according to measurement required IFBW and available HW bandwidth
State Saved	Saved in instrument state

3.7.8.4 Meas Time

Enables you to set measurement time parameters.

Search Length

Specifies the amount or length of Search Time input data that is included in the measurement pulse search.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:TIME:LENGth:SEARCh <time></code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:TIME:LENGth:SEARCh?</code>
Example	<code>:EVM:CCAR0:TIME:LENG:SEAR 1ms</code> <code>:EVM:CCAR0:TIME:LENG:SEAR?</code>
Preset	22 ms
State Saved	Yes
Min	Depends on Result Length
Max	200 msec

Result Length

Used to specify the amount of acquired time data (in subframe) that is available for measurement analysis.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:TIME:LENGth:RESult <integer></code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:TIME:LENGth:RESult?</code>
Example	<code>:EVM:CCAR0:TIME:LENG:RES 10</code> <code>:EVM:CCAR0:TIME:LENG:RES?</code>
Preset	10
State Saved	Yes
Min	1 subframe
Max	40 subframes

Meas Interval Subframe

Specifies subframe number in Meas Interval. Meas Interval Subframe/Slot/Symbol are used together to specify how much time data within the Result Length that is used for measurement analysis data (computing the trace and scalar results). Measurement Interval is entered as an integer number of subframe.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTerval[:SFRame] <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTerval[:SFRame]?</code>
Example	<code>:EVM:CCAR0:TIME:INT:SFR 5</code> <code>:EVM:CCAR0:TIME:INT:SFR?</code>
Preset	10
State Saved	Yes
Min	0
Max	40 subframes

Meas Interval Slot

Specifies slot number in Meas Interval, note this parameter is only settable for minimum enabled numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTerval:SLOT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTerval:SLOT?</code>	
Example	<code>:EVM:CCAR0:TIME:INT:SLOT 1</code> <code>:EVM:CCAR0:TIME:INT:SLOT?</code>	
Preset	0	
State Saved	Yes	
Min	0	
Max	Depends on Result Length and minimum enabled numerology	
	SCS	Max
	0	9
	1	19
	2	39
	3	79
	4	159
	5	319

Meas Interval Symbol

Specifies symbol number in Meas Interval, note this parameter is only settable for minimum enabled numerology.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTERval:SYMBol <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:INTERval:SYMBol?</code>
Example	<code>:EVM:CCAR0:TIME:INT:SYMB 1</code> <code>:EVM:CCAR0:TIME:INT:SYMB?</code>
Preset	0
State Saved	Yes
Min	0
Max	13 NOTE: For 60 kHz with Extended CP, it is coupled with the 60kHz Normal CP Symbol with extended CP = floor(Symbol with Normal CP * 6 / 7)

Meas Offset Subframe

Specifies subframe number in Meas Offset. Meas Offset Subframe/Slot/Symbol are used together to specify the start position of the Measurement Interval with respect to first subframe within the Result Length. Measurement Interval is entered as an integer number of subframes. The sum of the Measurement Interval plus Measurement Offset must fit within the measurement Result Length.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet[:SFRame] <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet[:SFRame]?</code>
Example	<code>:EVM:CCAR0:TIME:OFFS:SFR 0</code> <code>:EVM:CCAR0:TIME:OFFS:SFR?</code>
Preset	0
State Saved	Yes
Min	0
Max	Depends on Result Length, Meas Interval Time

Meas Offset Slot

Specifies slot number in Meas Offset.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet:SLOT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet:SLOT?</code>
----------------	---

Example	<code>:EVM:CCAR0:TIME:OFFS:SLOT 0</code> <code>:EVM:CCAR0:TIME:OFFS:SLOT?</code>
Preset	0
State Saved	Yes
Min	0
Max	Same as Meas Interval Slot

Meas Offset Symbol

Specifies symbol number in Meas Offset.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet:SYMBol <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:OFFSet:SYMBol?</code>
Example	<code>:EVM:CCAR0:TIME:OFFS:SYMB 0</code> <code>:EVM:CCAR0:TIME:OFFS:SYMB?</code>
Preset	0
State Saved	Yes
Min	0
Max	13 NOTE: For 60 kHz with Extended CP, it is coupled with the 60kHz Normal CP Symbol with extended CP = floor(Symbol with Normal CP * 6 / 7)

Analysis Start Boundary

Sets the Analysis Start Boundary. Analysis Start Boundary specifies the alignment boundary of the Result Length time data. To ensure that this alignment can be achieved, the total amount of data acquired by the analyzer is equal to the Result Length plus the length of the alignment boundary specified by Analysis Start Boundary. For example, if Analysis Start Boundary were set to subframe, the total acquisition will be equal to ResultLength + 1 subframe (and the Measurement Interval will start at a subframe boundary).

Once the Result Length is located within the time capture, Measurement Offset and Measurement Interval determine the data that is to be analyzed. This data is also displayed on the Time trace.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:ASBoundary FRAME SUB SLOT</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TIME:ASBoundary?</code>
Example	<code>:EVM:CCAR0:TIME:ASB FRAM</code> <code>:EVM:CCAR0:TIME:ASB?</code>

Preset	FRAMe
State Saved	Yes
Range	Frame Subframe Slot

Frame/Subframe/Slot Trigger

If Frame/Subframe/Slot Trigger is present and accurate (-50 usec to 50 usec), turning this parameter on may reduce required Search Length, which will help to improve measurement speed.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:FRAMe:TRIGger OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:FRAMe:TRIGger?</code>
Example	<code>:EVM:CCAR0:FRAM:TRIG 1</code> <code>:EVM:CCAR0:FRAM:TRIG?</code>
Preset	OFF
State Saved	Yes
Range	Off On

Analysis Subframe/Slot Offset

Specifies the offset of target analysis subframe/slot in whole frame.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SFRame:TRIGger:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SFRame:TRIGger:OFFSet?</code>
Example	<code>:EVM:CCAR0:SFR:TRIG:OFFS 0</code> <code>:EVM:CCAR0:SFR:TRIG:OFFS?</code>
Couplings	Grayed-out when Analysis Start Boundary is Frame
Preset	0
State Saved	Yes
Min	0
Max	9

Capture Time Diagram

Allows you to view and configure the Meas Time parameters in the table.

For more information about the parameters, see

3.7.8.5 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>								
Example	<code>:RAD:STAN:PRES:FREQ:RANG FR1</code> <code>:RAD:STAN:PRES:FREQ:RANG?</code>								
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 1853 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table><thead><tr><th>Bandwidth</th><th>FR</th></tr></thead><tbody><tr><td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr><tr><td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr><tr><td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr></tbody></table> When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:STANdard:PRESet:FRANge</code>								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

Bandwidth selection changes to:						
Current FR value	5,...,45 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
	60,...90 MHz					
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRES:DMOD TDD</code> <code>:RAD:STAN:PRES:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as **"Duplex Mode" on page 3304** in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRESet:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRESet:TRAN:PER P0_5MS</code> <code>:RAD:STAN:PRESet:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer></code>
----------------	---

	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	2
State Saved	Yes

Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	"DDDDDDDSUU"

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as ["Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321](#).

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the ["Number of Component Carriers" on page 3292](#) will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 1859 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRESet:SCS SCS30K</code> <code>:RAD:STAN:PRESet:SCS?</code> <code>:RAD:STAN:PRESet:SCS:AUTO 0</code> <code>:RAD:STAN:PRESet:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 1859
Preset	SCS30K ON
State Saved	Yes Yes
Range	$u = 0: 15 \text{ kHz} \mid u = 1: 30 \text{ kHz} \mid u = 2: 60 \text{ kHz} \mid u = 3: 120 \text{ kHz} \mid u = 5: 480 \text{ kHz} \mid u = 6: 960 \text{ kHz}$ Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1D0T1 DLTm1D0T2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3D0T1 DLTm3D0T1Q16 DLTm3D0T1QPS DLTm3D0T1A DLTm3D0T1B DLTm3D0T2 DLTm3D0T3 FPIBPSK DLTm1D0T1P1 DLTm1D0T1L2
----------------	---

	For selection details, see "Available Selections" on page 1860 [:SENSe]:RADio:STANdard:PRESet:RBALloc?
Example	:RAD:STAN:PRES:RBAL DLTMDOT1 :RAD:STAN:PRES:RBAL?
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action "Apply Preset (to All CCs)" is executed
Dependencies	See "Available Selections" on page 1860
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

3 5G NR Mode
3.7 Modulation Analysis Measurement

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled				

	FR	FR1	FR2	FR2-1	FR2-2
	1024 QAM				
	Fuifilled Pi/2 BPSK	✓	✓	✓	✓
DL NR- TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.

Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe] :RADio:STANdard:PRESet:OTYPe CPOFdm DFTSoFdm</code> <code>[:SENSe] :RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PREs:OTYP CPOF</code> <code>:RAD:STAN:PREs:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE | FT01 | F1T03 | F3T04P2 | F4P2T06 | F6T07 | F24P25T029P5 | F37T040 | F43T048 | F52T071`

For option details, see ["Selections & Dependencies" on page 1864](#)

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?`

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF | ON | 0 | 1`

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?`

Example `:RAD:STAN:PRESet:ADJ:FRAN F1T03`
`:RAD:STAN:PRESet:ADJ:FRAN?`
`:RAD:STAN:PRESet:ADJ:FRAN:AUTO 1`
`:RAD:STAN:PRESet:ADJ:FRAN:AUTO?`

Dependencies Available selections depend on Frequency Range. See ["Selections & Dependencies" on page 1864](#)

Couplings When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0
 Not preset to the selection until **Apply Preset (to All CCs)** is executed

Preset Automatically selected
 The selection depends on which listed range the CC0 center freq is in
ON

State Saved Yes
 Yes

Range None|f ≤ 1.0 GHz|1.0 < f ≤ 3.0 GHz|3.0 < f ≤ 4.2 GHz|4.2 < f ≤ 6.0 GHz|6.0 < f ≤ 7.125 GHz|24.25 < f ≤ 29.5 GHz|37.0 < f ≤ 43.5 GHz|43.5 < f ≤ 48.2 GHz|52.6 < f ≤ 71.0 GHz

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea

State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:ACH NR</code> <code>:RAD:STAN:PRESet:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:ACH NR</code> <code>:RAD:STAN:PRESet:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

3 5G NR Mode

3.7 Modulation Analysis Measurement

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a

3 5G NR Mode

3.7 Modulation Analysis Measurement

BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:
 Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.
 Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.
 Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "Apply Preset (to All CCs)" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			
			$4.2 < f \leq 6.0$ GHz,			Table 6.6.4.5.3.1-3

3 5G NR Mode

3.7 Modulation Analysis Measurement

1-0	Cat A MR BS, Cat B MR BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-1
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-3
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-2
	Cat A LA BS, Cat B LA BS	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-4
Cat A LA BS, Cat B LA BS	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.5-1	
Cat A LA BS, Cat B LA BS	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.5-2	
Cat A WA BS	f ≤ 1.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
Cat A WA BS	None, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.1-2
Cat A WA BS	None, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.1-3
Cat A WA BS	None, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.1-4

FR2	2-0	Cat B WA BS	$f \leq 1.0$ GHz	TS38.141-2	Table	Table 6.7.4.5.1.2-1
			None, $1.0 < f \leq 3.0$ GHz			Table 6.7.4.5.1.2-2
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.2-3
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.2-4
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.2-5
		Cat A MR BS, Cat B MR BS	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz			Table 6.7.4.5.1.4-1
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-3a
			None, $f \leq 1.0$ GHz, Cat B MR BS (Low P_r) $1.0 < f \leq 3.0$ GHz			Table 6.7.4.5.1.4-4
		Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-5
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-6
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-7
		Cat A LA BS, Cat B LA BS	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz			Table 6.7.4.5.1.5-1
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.5-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.5-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.5-4
		Cat A WA BS,	None,			Table

3 5G NR Mode

3.7 Modulation Analysis Measurement

Cat A MR BS,	24.25 < f ≤ 29.5	v.17.9.0	6.7.3.5.2-1	6.7.4.5.2.2-1
Cat A MR BS	GHz	(2023-03)		
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat A LA BS	GHz			6.7.4.5.2.2-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.2-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.2-4
Cat B WA BS,	None,			Table
Cat B MR BS,	24.25 < f ≤ 29.5			6.7.4.5.2.3-1
Cat B MR BS	GHz			
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat B LA BS	GHz			6.7.4.5.2.3-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.3-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values		User Defined Duplex mode		
		TDD / FDD Duplex Mode		Uplink	Downlink	Uplink
		Downlink (*1) FR1	Downlink (*1) FR2			
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

3 5G NR Mode

3.7 Modulation Analysis Measurement

Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
Periodic Sync Src	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on ["DL FR1 NR-TM Reference Standard Selection" on page 3305](#) under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1 ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1 ms

ACP

The following parameters are preset when Apply Preset is executed.

- ["BW Parameters" on page 3331](#)
- ["Trace Detector" on page 3331](#)
- ["Sweep Parameter" on page 3331](#)
- [Frequency Parameters](#)
- [Meas Setup: Settings Parameter](#)
- ["Meas Setup: Configure Component Carrier Parameters" on page 3333](#)
- ["Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335](#)

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz	NR (same BW),	$= 4 \times \text{Bandwidth} + \text{RFBW} (*2)$
		35, 45 MHz	NR + E-UTRA	
			E-UTRA	
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	$= 2 \times \text{Bandwidth} + \text{RFBW} (*2)$
Uplink	FR1	5, ..., 100 MHz	NR (same BW)	$= 2 \times \text{Bandwidth} + \text{RFBW} (*2)$
		35, 45 MHz	UTRA	$= 20 \text{ MHz} + \text{RFBW} (*2)$
			NR + UTRA	$= \max(2 \times \text{Bandwidth}, 20 \text{ MHz}) + \text{RFBW} (*2)$
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	$= 3 \times \text{RFBW} (*2)$

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

3 5G NR Mode

3.7 Modulation Analysis Measurement

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section ["N_Grid_Size \(Display Only\)" on page 1828,](#)
 $N_{sc}^{RB} = 12$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

3 5G NR Mode

3.7 Modulation Analysis Measurement

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel,CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(erence) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - StoC: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR Offset	

Offset Freq State	Downlink	FR1	A, B	On
			C, ..., L	Off
		FR2	A	On
			B, ..., L	Off
Offset Freq	Downlink		A	On
			B, ..., L	Off
			A	On
			B, ..., L	Off
	Uplink	FR1	A	BW _{CC}
			B, ..., L	0 Hz
		FR2	A	When Num of CCs = 1: BW _{CC}
				When Num of CCs > 1 with Contiguous allocation: BW _{Channel,CA} When Num of CCs > 1 with Non-Contiguous allocation: BW _{Channel,block[n]}
Integ BW	Downlink		All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{SC}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1: $\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$ When Num of CCs > 1 with Contiguous allocation: BW _{Channel,CA} - 2*BW _{GB} When Num of CCs > 1 with Non-Contiguous allocation: BW _{Channel,block[n]} - 2*BW _{GB}

where:

BW_{CC}: "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

BW_{Channel,CA}: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

BW_{Channel,block[n]}: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB}: Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB}^{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

3 5G NR Mode

3.7 Modulation Analysis Measurement

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

FR2	2-O	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
		$43.5 < f \leq 48.2$	Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$52.6 < f \leq 71.0$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

3 5G NR Mode

3.7 Modulation Analysis Measurement

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)		
			6.0 < f ≤ 7.125				
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)		
			f ≤ 1.0,				
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)		
			3.0 < f ≤ 4.2,				
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)		
			6.0 < f ≤ 7.125				
					None,	All	-25.7 dB = (-28 + TT 2.3)
					24.25 < f ≤ 29.5		
37.0 < f ≤ 43.5							
43.5 < f ≤ 48.2							
	100, 400, 800, 1600, 2000 MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)			

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$,	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66)
						When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB (= -16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

3 5G NR Mode

3.7 Modulation Analysis Measurement

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset		Assumed Adj Chan		EtoC: Carrier Edge to Meas BW Center

Frequency Define				
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ..., L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ..., L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq		A	= 2.5 MHz	
		B	= 7.5 MHz	
		C	= 0.5 x Bandwidth	
		D	= 1.5 x Bandwidth	
		E, F	0 Hz	
Integ BW	Downlink	A, B	4.50 MHz	
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$	
	Uplink	A, B	3.84 MHz	
		C, ..., L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$	
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State		All	Auto	
Res BW		All	Automatically coupled with the Res BW value under the BW menu	
Video BW State		All	Auto	
Video BW		All	Automatically coupled with the Video BW value under the BW menu	
Offset Side		All	Both	
Method and Filter Alpha	Downlink	All	Integration BW	
	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22	
		C, ..., L	Integration BW	

3 5G NR Mode
3.7 Modulation Analysis Measurement

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
		1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$,	All	$-44.2 \text{ dB} (= -45 + \text{TT } 0.8)$

1-O	25, ..., 100 MHz	3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
		3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
		6.0 < f ≤ 7.125	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for 6.0 < f ≤ 7.125 GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm

3 5G NR Mode

3.7 Modulation Analysis Measurement

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = "NR (same BW)" for DL/UL, "E-UTRA" or "NR + E-UTRA" for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 1896
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1896
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 1896
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 1896

					1897
				C, ... , L	0 Hz
Integ BW				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 1897
				C, ... , L	Same value as Offset A and B
Offset Side				All	Both
Method				All	Integration BW
Res BW State				All	Auto
Video BW State				All	Auto
Power Ref Type				All	See "Table 1a Offset Freq State" on page 1896

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
				A	B	A	B

3 5G NR Mode

3.7 Modulation Analysis Measurement

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration	Offset	Preset Value
----------------------	--------	--------------

Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)	
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50	
			B	7.5		
		25, ..., 100 MHz	A	10	19.08	
			B	30		
	FR2	50, 100 MHz	A	25	47.52	
			B	75		
		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08	
			B	300		
Uplink	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$	
			B	= 2 x Bandwidth		
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$	
			B	= 2 x Bandwidth		
		100, 400, 800, 1600, 2000(**) MHz				

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel

3 5G NR Mode

3.7 Modulation Analysis Measurement

Abs Limit	FR1	1-C	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Cat A WA BS	All	-13 + 10 LOG(BW _{config}) dBm		
				Cat B WA BS	All	-15 + 10 LOG(BW _{config}) dBm		
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-25 + 10 LOG(BW _{config}) dBm		
				Cat A LA BS, Cat B LA BS	All	-32 + 10 LOG(BW _{config}) dBm		
				1-0		Cat A WA BS	All	-4 + 10 LOG(BW _{config}) dBm
						Cat B WA BS	All	-6 + 10 LOG(BW _{config}) dBm
						Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-16 + 10 LOG(BW _{config}) dBm
						Cat A LA BS, Cat B LA BS	All	-23 + 10 LOG(BW _{config}) dBm
		FR2	2-0	None, 24.25 < f ≤ 29.5, 37.0 < f ≤ 43.5	Cat A WA BS, Cat B WA BS	All	-10.3 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-17.3 + 10 LOG(BW _{config}) dBm	
					Cat A LA BS, Cat B LA BS	All	-17.3 + 10 LOG(BW _{config}) dBm	
				43.5 < f ≤ 48.2	Cat A WA BS, Cat B WA BS	All	-10.1 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS	All	-17.1 + 10 LOG(BW _{config}) dBm	

52.6 < f ≤ 71.0 (**)	(Low Pr)		
	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BSType	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
				3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
				6.0 < f ≤	All	-36.8 dB =

3 5G NR Mode

3.7 Modulation Analysis Measurement

FR2	2-O	50, 100, 200 400 MHz	7.125		(-45 + TT 8.2)
			None, 24.25 < f ≤ 29.5	All	-25.7 dB = (-28 + TT 2.3)
			37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
		100, 400, 800, 1600, 2000 (**) MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 1904
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 1904
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1904
			D, ... , L	0 Hz

Integ BW	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 1904
	D, ... , L	Same value as Offset C
Offset Side	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 1904

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			$5 \leq \text{Wgap} < 10$	✓		(+)	Norm	Norm	Norm
			$10 \leq \text{Wgap}$	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth $\leq \text{Wgap}$	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth \leq Wgap".

(++) Same as the rows of "Wgap < 5", " $5 \leq \text{Wgap} < 10$ ", and " $10 \leq \text{Wgap}$ ".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	$= 0.5 \times \text{Bandwidth}$	$\max_{SCS}\{N_{RB}(\text{BW}_{CC}, \text{FR}, \text{SCS}) \times \text{SCS} [\text{kHz}] \times N_{sc}^{RB} + \text{SCS} [\text{kHz}]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

3 5G NR Mode

3.7 Modulation Analysis Measurement

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW

Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

3 5G NR Mode
3.7 Modulation Analysis Measurement

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		Preset Value	
	FR	Bandwidth	SCS	SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

3 5G NR Mode

3.7 Modulation Analysis Measurement

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
--------	---------	------------------	--	--	-----------------	--	--	-----------	--	---------	--	--

3 5G NR Mode
3.7 Modulation Analysis Measurement

A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1
D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			0.1		1	
D	✓		40			100			0.1		1	
E-L			100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1
D	✓	40	100	1	1
E-L		100	500	1	1

3 5G NR Mode

3.7 Modulation Analysis Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1
D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and f ≤ 1.0 GHz & 1.0 < f ≤ 3.0 GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start	Stop	Coupling	Start	Stop	Coupling		Start	Stop	Coupling	

		(dBm)	(dBm)		(dB)	(dB)			(dBm)	(dBm)		
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.7 Modulation Analysis Measurement

B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.7 Modulation Analysis Measurement

A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			1			1	
D	✓	40			100			1			1	
E-L		100			500			1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.7 Modulation Analysis Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			5.05			0.051			2		
B	✓	5.05			10.05			0.1			1		
C	✓	10.5			40			1			1		
D	✓	40			100			1			1		
E-L		100			500			1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			50.05			0.051			2		
B	✓	50.05			100.05			0.1			1		
C	✓	100.5			200			1			1		
D		200			500			1			1		
E-L		200			500			1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

3 5G NR Mode

3.7 Modulation Analysis Measurement

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.05			200			0.1		1		
D		200			500			0.1		1		
E-L		200			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated,x}} \leq 40$ dBm (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-11.2 \text{ dB} - (7/5) \cdot ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the

Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			5.05			0.051			2		
B	✓	5.05			10.05			0.1			1		
C	✓	10.5			40			0.1			1		
D	✓	40			100			0.1			1		
E-L		100			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – $(7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”. Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			50.05			0.051			2		
B	✓	50.05			100.05			0.1			1		
C	✓	100.5			200			0.1			1		
D		200			500			0.1			1		
E-L		200			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode

3.7 Modulation Analysis Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-19.2 \text{ dB} - (7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “ -19.2 dB ” is typo and is supposed to be “ -19.2 dBm ”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		0.1	1
D		200		500		0.1	1
E-L		200		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.7 Modulation Analysis Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$x + 1500$			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

3 5G NR Mode

3.7 Modulation Analysis Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	y + 0.5			1	1
C	✓	y + 5	y + 1500			5	2
D-L		100	500			5	2

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	x + 1500			1	1
C-L		100	500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block[n]}}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

3 5G NR Mode

3.7 Modulation Analysis Measurement

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn't miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range:	Adjust Range:
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,

		None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$	and $6.0 < f \leq 7.125 \text{ GHz}$
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled
B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 * BW_{\text{Channel,CA}}$$

$$- y = 2 * BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

3 5G NR Mode

3.7 Modulation Analysis Measurement

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	$-1.79 \text{ dBm} = -5 + TT \cdot 3.21$	$-1.54 \text{ dBm} = -5 + TT \cdot 3.46$	TBD	TBD
B_{Lim}	$-9.79 \text{ dBm} = -13 + TT \cdot 3.21$	$-9.54 \text{ dBm} = -13 + TT \cdot 3.46$	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW $\leq 400\text{MHz}$)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode
3.7 Modulation Analysis Measurement

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS
1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)

1	1-0					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz		-	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz		Start Freq	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz			(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode

3.7 Modulation Analysis Measurement

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category
---	---------	-------------

All "Cat A" BS					All "Cat B" BS				
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = "All Cat A BS": Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,

BS Category = "All Cat B BS": Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to "27 GHz")

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the "Apply Preset" button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
---	---------	---------------	--------------	------------	------	-----	----------------------	-----	----------------

3 5G NR Mode

3.7 Modulation Analysis Measurement

1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off

10~ (*) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

#	(*) Range “Enabled” state			
	Adjust Limit Mask for Freq Range (GHz)			
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$
1	✓	✓	✓	✓
2	✓	✓	✓	✓
3	✓	✓	✓	✓
4	✓	✓	✓	✓
5				

Note:

Never “enabled” by the “Apply Preset” button
A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1,

3 5G NR Mode

3.7 Modulation Analysis Measurement

				TS38.521-1)
6	✓			
7		✓		
8			✓	
9				Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~				

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005 GHz	6 GHz			1 MHz	1	5 MHz	Gaussian
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no	(no

3 5G NR Mode

3.7 Modulation Analysis Measurement

8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	preset) (no preset)	preset) (no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to "27 GHz")

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the "RB Alloc Preset" selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters

- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

- Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	

3 5G NR Mode

3.7 Modulation Analysis Measurement

General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2 v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for pi/2 BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),

- Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for Pi/2 BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for Pi/2 BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399
- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
	FR2	TDD	n/a	0 subframe	2 subframes

3 5G NR Mode

3.7 Modulation Analysis Measurement

Fulfilled-xx / NR-TMx.x	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity	
----------------------------	-------------	-----------------	-----	------------	--	--

Preset Configuration			Preset Value			
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
	FR2	TDD	n/a	0.9286	1.250	n/a
Fulfilled-xx / NR-TMx.x	RF1/RF2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

3 5G NR Mode
3.7 Modulation Analysis Measurement

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2 ^{-m}	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2 ^{-m}	
			SRS	0.0714	10.0	2 ^{-m}	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2 ^{-m}	10.0	2 ^{-m}	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2 ^{-m} (TBD)	10.0	2 ^{-m}	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu\text{s}$ RMS averaging window for making the OFF power. $N = \text{SCS}/15$, where SCS is in kHz.
- Uplink: Slot length = $2^{-\mu}$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$,	-82.5 dBm / MHz = -85 + TT 2.5

		1-0	6.0 < f ≤ 7.125 GHz None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
	FR2	2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration			Adjust Range (GHz)	Preset Value
	FR	UL ChannelType	Bandwidth		
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

3 5G NR Mode

3.7 Modulation Analysis Measurement

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	-48.3 dBm = -50 + TT 1.7
					3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-48.2 dBm = -50 + TT 1.8	
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz, 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-30 + TT + R dBm (TT, R not yet)	
						± 10.5 dB = ±(9 + TT 1.5)	
						± 10.8 dB = ±(9 + TT 1.8)	
						± 10.7 dB = ±(9 + TT 1.7)	
	FR2	PUSCH	All FR2 BW	GHz	40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz, 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.8 dB = ±(9 + TT 1.8)
							± 14 dB (TT not yet)
Parameter	Preset Configuration						Preset Value
	FR	UL Channel Type		Bandwidth	SCS		
UL On Pwr Reference	FR1	PUSCH		5 MHz	15 kHz	-3.6 dBm	
					30 kHz	-4.2 dBm	
				10 MHz	15 kHz	0.4 dBm	
					30 kHz	-0.8 dBm	
					60 kHz	-1.2 dBm	
				15 MHz	15 kHz	1.4 dBm	
					30 kHz	1.2 dBm	
					60 kHz	1.0 dBm	

3 5G NR Mode
3.7 Modulation Analysis Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

3 5G NR Mode

3.7 Modulation Analysis Measurement

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
			480 kHz	
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.7.8.6 Channel Profile

Enables you to configure parameters for user and physical channels.

SSB Auto Detect

Enables or disables channel profile SSB auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:SSB:AUTO[:DETECT] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:SSB:AUTO[:DETECT]?</code>
Example	<code>:EVM:CCAR0:PROF:SSB:AUTO OFF</code> <code>:EVM:CCAR0:PROF:SSB:AUTO?</code>
Couplings	Only valid with Downlink Grayed-out when MIMO is on
Preset	OFF
State Saved	Yes

PDCCH Auto Detect

Enables or disables channel profile PDCCH auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PDCCh:AUTO[:DETECT] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PDCCh:AUTO[:DETECT]?</code>
Example	<code>:EVM:CCAR0:PROF:PDCC:AUTO OFF</code> <code>:EVM:CCAR0:PROF:PDCC:AUTO?</code>
Couplings	Only valid with Downlink Grayed-out when MIMO is on
Preset	OFF
State Saved	Yes

The performance and stability of PDCCH Auto Detection will be variable depending on input signal quality and setting of key parameters.

These parameters need to be set correctly:

- Component Carrier frequency and bandwidth
- N_grid_start and N_grid_size
- N_BWP_start and N_BWP_size

These additional parameters are also needed (Auto Detection Settings parameter group):

- Numerology
- RNTI

- RNTI Type
- BWP CORESET settings
- Search Space Type
- Num of PDCCH Candidates per Aggregation Level
- Allocated Slots

PDSCH Auto Detect

Enables or disables channel profile PDSCH auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PDSCh:AUTO[:DETECT] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PDSCh:AUTO[:DETECT]?</code>
Example	<code>:EVM:CCAR0:PROF:PDSC:AUTO OFF</code> <code>:EVM:CCAR0:PROF:PDSC:AUTO?</code>
Couplings	Only valid with Downlink Grayed-out when MIMO is on
Preset	OFF
State Saved	Yes

The performance and stability of PDSCH Auto Detection will be variable depending on input signal quality and setting of key parameters.

At least these parameters need to be set correctly:

- Component Carrier frequency and bandwidth
- N_grid_start and N_grid_size
- N_BWP_start and N_BWP_size

If these additional parameters are set correctly too, the performance and stability of PDSCH Auto Detection could be improved significantly:

- Numerology

Known limitations for PDSCH Auto Detection:

- Not working well for multiple numerologies
- Not working well if there is no gap in time or frequency domain between PDCCH and PDSCH allocations
- Not working well for RA type0

PUSCH Auto Detect

Enables or disables channel profile PUSCH auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PUSCh:AUTO[:DETECT] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PUSCh:AUTO[:DETECT]?</code>
Example	<code>:EVM:CCAR0:PROF:PUSC:AUTO OFF</code> <code>:EVM:CCAR0:PROF:PUSC:AUTO?</code>
Couplings	Only valid with Uplink Grayed-out when MIMO is on
Preset	OFF
State Saved	Yes

The performance and stability of PUSCH Auto Detection will be variable depending on input signal quality and setting of key parameters.

At least these parameters need to be set correctly:

- Component Carrier frequency and bandwidth
- N_grid_start and N_grid_size
- N_BWP_start and N_BWP_size

If these additional parameters are set correctly too, the performance and stability of PUSCH Auto Detection could be improved significantly:

- Numerology

Known limitations for PUSCH Auto Detection:

- Not working well for multiple numerologies
- Not working well if there is no gap in time or frequency domain between PUCCH and PUSCH allocations
- Not working well for RA type0

PRACH Occasion Auto Detect

Enables or disables PRACH occasions auto detect.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PRACH:OCCasion:AUTO[:DETECT] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PROFile:PRACH:OCCasion:AUTO[:DETECT]?</code>
----------------	--

Example	<code>:EVM:CCAR0:PROF:PRAC:OCC:AUTO OFF</code> <code>:EVM:CCAR0:PROF:PRAC:OCC:AUTO?</code>
Preset	<code>OFF</code>
State Saved	Yes

Copy Auto -> Manual

Copies reliably auto-detected parameters into channel profile. These parameters are also displayed in “Auto Detect Summary” window.

Note those parameters detected based on power are not regarded as reliably auto-detected, so they will not be displayed or copied into channel profile.

Remote Command	<code>[:SENSe]:EVM:PROFile:COPY[:IMMediate]</code>
Example	<code>:EVM:PROF:COPY</code>
Notes	Available when Detection is Auto

Control and User Channels

Configure parameters for user and physical channels.

SS Block (Downlink)

View and configure SS Block.

Resource Map Diagram


Display all physical channel allocations on Time and Frequency domain resource map.

Subcarrier Start (GUI Only)

Set start subcarrier for resource map display.

3 5G NR Mode


3.7 Modulation Analysis Measurement

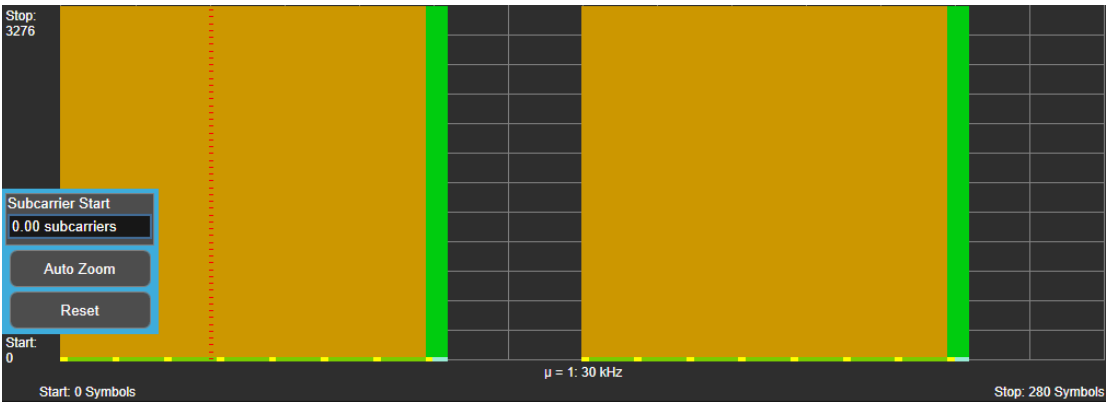

Couplings	If the value entered is greater than Subcarrier Stop, Subcarrier Stop is set to the value of Subcarrier Start
Preset	0
State Saved	No
Min	0
Max	Depends on reference numerology

Subcarrier Stop (GUI Only)


Set stop subcarrier for resource map display.

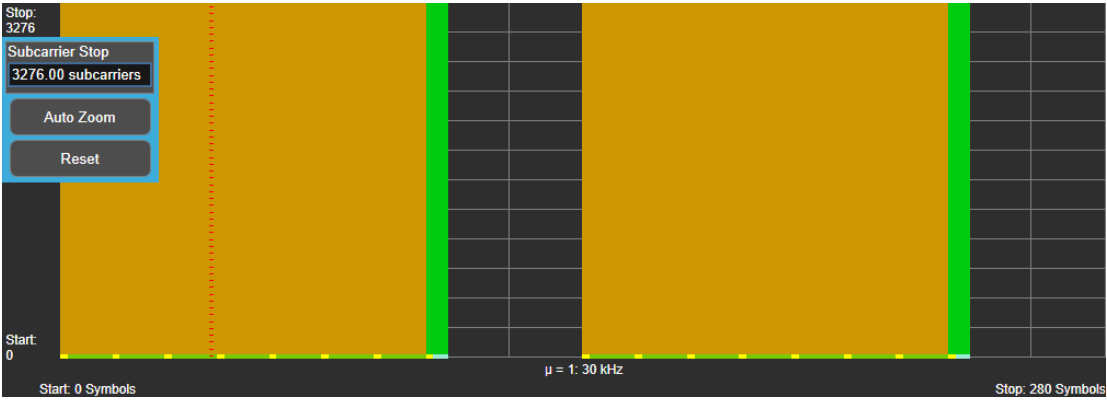

Couplings	If the value entered is lower than Subcarrier Start, Subcarrier Start is set to the value of Subcarrier Stop
Preset	Depends on reference numerology
State Saved	No
Min	0
Max	Depends on reference numerology

Symbol Start (GUI Only)


Set start symbol for resource map display.

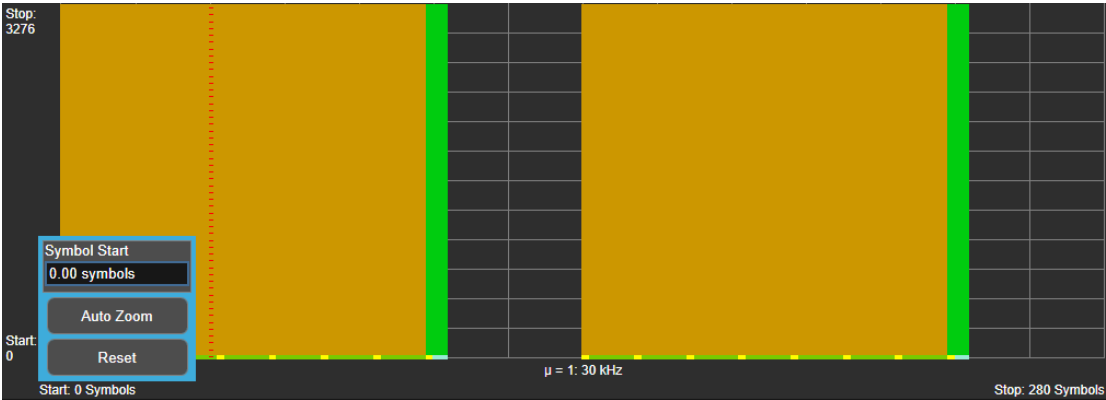

Couplings	If the value entered is greater than Symbol Stop, Symbol Stop is set to the value of Symbol Start
Preset	0
State Saved	No
Min	0
Max	Depends on reference numerology

Symbol Stop (GUI Only)

Set stop symbol for resource map display.

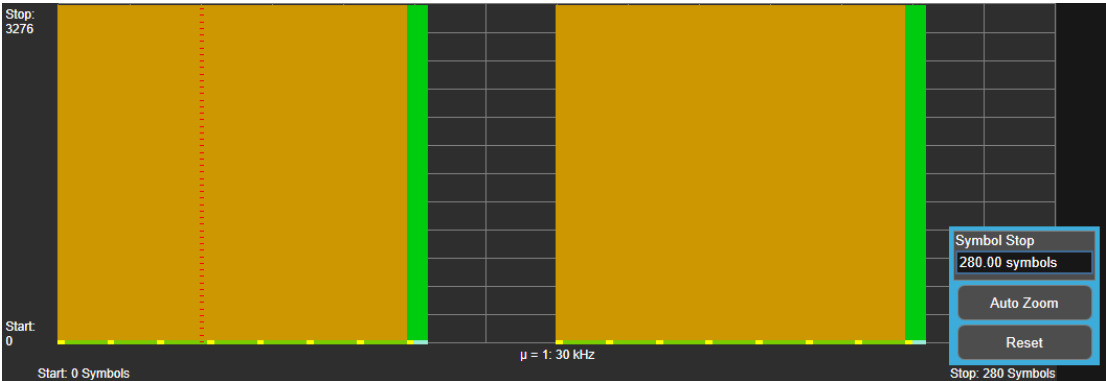

Couplings	If the value entered is lower than Symbol Start, Symbol Start is set to the value of Symbol Stop
Preset	Depends on reference numerology
State Saved	No

Min	0
Max	Depends on reference numerology

Auto Zoom (GUI Only)

Auto zoom for selected BWP/physical channel allocation.

Reset (GUI Only)

Reset resource map with current reference numerology.

Add SS Block (GUI only)

Inserts a new SS Block into the list. The maximum number of SS Block lists is 2.
See "Effective SSB Number (Remote Command only)" on page 1964 for SCPI to provide similar function.

Delete SS Block

Deletes the selected SS Block from the list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:SSB <integer></code>
Example	<code>:EVM:CCAR0:DEL:SSB 1</code>

Clear All (GUI only)

Deletes all SS Blocks from the list.
See "Effective SSB Number (Remote Command only)" on page 1964 for SCPI to provide similar function.

SS Block Frame Sync

Specifies SS Block Frame Sync. As some test signals may not carry a real MIB message in PBCH payload (PN bits sequence is used sometimes), we provide this parameter for clients to choose:

When it is “MIB”, frame sync should be always correct for L=4/8/64. The ssb-index-msb and half-frame-index are parsed from MIB.

Otherwise, frame sync should be correct for L=4, but not always correct for L=8/64:

- for L=4, both ssb-index and half-frame-index can be detected from PBCH DMRS matching
- for L=8, assuming half-frame-index = 0, and ssb-index can be detected from PBCH DMRS matching
- for L=64, assuming half-frame-index = 0 and ssb-index-msb = 0, and ssb-index-lsb can be detected from PBCH DMRS matching

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SSB DMRS MIB</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SSB?</code>
Example	<code>:EVM:CCAR:SYNC:SSB MIB</code> <code>:EVM:CCAR:SYNC:SSB?</code>
Preset	<code>MIB</code>
State Saved	Yes
Range	DMRS MIB + DMRS

Effective SSB Number (Remote Command only)

Specifies how many SSB configurations are effective, this SCPI only command is used to provide similar function as “Add SS Block” and “Delete SS Block”.

Note all 2 SSB configurations can be modified through SCPI, but ineffective SSB configurations (index > SSB Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:SSB <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:SSB?</code>
Example	<code>:EVM:CCAR0:NUMB:SSB 2</code> <code>:EVM:CCAR0:NUMB:SSB?</code>
Preset	<code>1</code>
State Saved	Yes
Min	0
Max	2

SS Block DL Parameter Group (Display only)

Allows you to configure the allocation and power parameters for SS Blocks.

This control is for UI display only. You can select one of the following two groups:

Allocation Parameters

"State" on page
"SCS" on page 1965
"Half Frame"
"Block Pattern" on
"Periodicity" on page
"Lmax" on page 1968

1965		Index" on page 1966	page 1966	1967
"Active Indices" on page 1968	"RB Offset" on page 1969	"SCS Common" on page 1970	"kSSB" on page 1969	
Power Setting				
"State" on page 1965	"SCS" on page 1965		"P-SS Power Boosting" on page 1970	"PBCH Power Boosting" on page 1971

State

Enable or disable selected SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:SSB1 OFF</code> <code>:EVM:CCAR0:SSB1?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

SCS

Select numerology for current SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SCS SCS15K SCS30K SCS120K SCS240K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SCS?</code>
Example	<code>:EVM:CCAR0:SSB1:SCS SCS15K</code> <code>:EVM:CCAR0:SSB1:SCS?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The SCS setting depends on the CC Bandwidth and Frequency Range. Also, if the Max RB Num for the SCS is less than 20, the SCS is not available
Preset	SCS30K
State Saved	Yes
Range	SCS15K SCS30K SCS120K SCS240K

Half Frame Index

Set the SSB location to the first half frame or the second half frame when SSB period is not 5ms. This setting will be ignored when valid half-frame information could be obtained from MIB or PBCH DMRS.

0: SSB is in first half frame

1: SSB is in second half frame

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:HFIndex <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:HFIndex?</code>
Example	<code>:EVM:CCAR0:SSB1:HFIN 0</code> <code>:EVM:CCAR0:SSB1:HFIN?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	1

Block Pattern

Specifies the SSB Block Pattern (3GPP TS 38.213 section 4.1, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3215>) to choose Symbol Start sets.

Case A	15 kHz subcarrier spacing: the first symbols of the candidate SS/PBCH blocks have indexes of $\{2, 8\} + 14*n$. For carrier frequencies smaller than or equal to 3 GHz, $n = 0, 1$. For carrier frequencies larger than 3 GHz and smaller than or equal to 6 GHz, $n = 0, 1, 2, 3$
Case B	30 kHz subcarrier spacing: the first symbols of the candidate SS/PBCH blocks have indexes $\{4, 8, 16, 20\} + 28*n$. For carrier frequencies smaller than or equal to 3 GHz, $n = 0$. For carrier frequencies larger than 3 GHz and smaller than or equal to 6 GHz, $n = 0, 1$
Case C	30 kHz subcarrier spacing: the first symbols of the candidate SS/PBCH blocks have indexes $\{2, 8\} + 14*n$. For carrier frequencies smaller than or equal to 3 GHz, $n = 0, 1$. For carrier frequencies larger than 3 GHz and smaller than or equal to 6 GHz, $n = 0, 1, 2, 3$
Case D	120 kHz subcarrier spacing: the first symbols of the candidate SS/PBCH blocks have indexes $\{4, 8, 16, 20\} + 28*n$. For carrier frequencies larger than 6 GHz, $n = 0, 1, 2, 3, 5, 6, 7, 8, 10, 11, 12, 13, 15, 16, 17, 18$
Case E	240 kHz subcarrier spacing: the first symbols of the candidate SS/PBCH blocks have indexes $\{8, 12, 16, 20, 32, 36, 40, 44\} + 56*n$. For carrier frequencies larger than 6 GHz, $n = 0, 1, 2, 3, 5, 6, 7, 8$

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PATtern A B C D E</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PATtern?</code>
Example	<code>:EVM:CCAR0:SSB1:PATT B</code> <code>:EVM:CCAR0:SSB1:PATT?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	B
State Saved	Yes
Range	Case A Case B Case C Case D Case E

Block Pattern Symbol Start Sets (Remote Command only)

Specifies Symbol Start sets and corresponding SSB Block Pattern for 30kHz SCS (3GPP TS 38.213 section 4.1

<https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3215>).

- Set1 – Case B: the first symbols of the candidate SS/PBCH blocks have indexes \{4, 8, 16, 20\} + 28*n. For carrier frequencies smaller than or equal to 3 GHz, n = 0. For carrier frequencies larger than 3 GHz and smaller than or equal to 6 GHz, n = 0, 1.
- Set2 – Case C: the first symbols of the candidate SS/PBCH blocks have indexes \{2, 8\} + 14*n. For carrier frequencies smaller than or equal to 3 GHz, n = 0, 1. For carrier frequencies larger than 3 GHz and smaller than or equal to 6 GHz, n = 0, 1, 2, 3.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SYMBol:STARt SET1 SET2</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SYMBol:STARt?</code>
Example	<code>:EVM:CCAR0:SSB1:SYMB:STAR SET2</code> <code>:EVM:CCAR0:SSB1:SYMB:STAR?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	SET1
State Saved	Yes
Range	SET1 SET2

Periodicity

Specifies the periodicity of SS Block transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PERiodicity P5MS P10MS P20MS P40MS P80MS P160MS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PERiodicity?</code>
Example	<code>:EVM:CCAR0:SSB1:PER P10MS</code> <code>:EVM:CCAR0:SSB1:PER?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	P10MS
State Saved	Yes
Range	5 ms 10 ms 20 ms 40ms 80ms 160ms

Lmax

Specifies the maximum number of candidate SS Block in a half frame.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:LMAX L4 L8 L64</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:LMAX?</code>
Example	<code>:EVM:CCAR0:SSB1:LMAX L4</code> <code>:EVM:CCAR0:SSB1:LMAX?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message If the SS Block SCS is 120kHz or 240kHz, the Lmax will be set to L64; L64 is not available for SCS less than 120kHz. If Lmax will be reset to the default value if the current value is invalid
Preset	L4
State Saved	Yes
Range	4 8 64

Active Indices

Specifies the indices of active candidate SS Block in a half frame. There are 3 ways to configure:

- To configure by individual index, use ',' as the delimiter, e.g., 0,1,2,3
- To configure by a range of index, use ':' to indicate the start index and the last index, e.g., 3:10 means 3,4,5,6,7,8,9,10
- To configure by a certain step, use two ':' to indicate the start index, the step and the last index, e.g., 0:4:12 means 0, 4, 8, 12

These 3 configuration methods can be used in combination, by using ',' as the delimiter, e.g., 0,1,4:7,8:2:19 means index 0,1,4,5,6,7,8,10,12,14,16,18.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:ACTive:INDices <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:ACTive:INDices?</code>
Example	<code>:EVM:CCAR0:SSB1:ACT:IND "0:3"</code> <code>:EVM:CCAR0:SSB1:ACT:IND?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting is coupled with Lmax, the max index should be less than Lmax. For example, the max index should be 7 if Lmax = L8 If the max index is out of range, it will be reset according to the Lmax: Lmax = L8 Active Indices set to "0:7" Lmax = L4 Active Indices set to "0:3"
Preset	0:3
State Saved	Yes

RB Offset

Specifies the RB Offset of SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:SSB1:RB:OFFS 253</code> <code>:EVM:CCAR0:SSB1:RB:OFFS?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The setting range depends on the MaxRbNum and SCS The band label will be changed according to SCS setting: <ul style="list-style-type: none"> – It will be "15 kHz SCS" if SCS is below 60 kHz – It will be "60 kHz SCS" if SCS is above 60 kHz
Preset	253
State Saved	Yes
Min	0
Max	Max RB in CC setup for SSB SCS – SSB RB Number

kSSB

Specifies the k0 Offset of SS Block. For FR1 this will be specified in 15 kHz SCS, for FR2 this will be specified in common SCS (RMSI-SCS).

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:K0 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:K0?</code>
Example	<code>:EVM:CCAR0:SSB1:K0 6</code> <code>:EVM:CCAR0:SSB1:K0?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The setting range is coupled with MaxRbNum and SCS The band label will be changed according to SCS setting: <ul style="list-style-type: none"> – It will be “15 kHz” for FR1 – It will be “SCS Common” for FR2
Preset	0
State Saved	Yes
Min	0
Max	12 or 24 depends on SCS

SCS Common

Specifies common SCS for FR2 and FR1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SCS:COMMOn SCS15K SCS30K SCS60K SCS120K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SCS:COMMOn?</code>
Example	<code>:EVM:CCAR0:SSB1:SCS:COMM SCS60K</code> <code>:EVM:CCAR0:SSB1:SCS:COMM?</code>
Couplings	The sub-opcode <n> max value 2 For FR1, SCS15K and SCS30K are available For FR2, SCS60K and SCS120K are available Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	<code>SCS15K</code>
State Saved	Yes
Range	<code>SCS15K SCS30K SCS60K SCS120K</code>

P-SS Power Boosting

Specifies Power Boost value for the PSS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PSS:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PSS:POWer?</code>
----------------	--

Example	<code>:EVM:CCAR0:SSB1:PSS:POW 0.0</code> <code>:EVM:CCAR0:SSB1:PSS:POW?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0.0 dB
State Saved	Yes
Min	-100
Max	100

PBCH Power Boosting

Specifies Power Boost value for the PBCH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:POWer?</code>
Example	<code>:EVM:CCAR0:SSB1:PBCH:POW 0.0</code> <code>:EVM:CCAR0:SSB1:PBCH:POW?</code>
Couplings	The range of sub-opcode <n> values is determined by the number of SS Block configured Max value for n = 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0.0 dB
State Saved	Yes
Min	-100
Max	100

S-SS Block (Sidelink)

View and configure S-SS Block.

Add S-SS Block (GUI only)

Inserts a new SS Block into list, the maximum number of S-SS Block list is 2.

See "[Effective SSB Number \(Remote Command only\)](#)" on page 1964 for SCPI to provide similar function.

Delete S-SS Block

Deletes selected S-SS Block from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:SSSB <integer></code>
Example	<code>:EVM:CCAR0:DEL:SSSB 1</code>

Clear All (GUI only)

Deletes all S-SS Blocks from list.

See ["Effective SSB Number \(Remote Command only\)" on page 1964](#) for SCPI to provide similar function.

Effective S-SSB Number (Remote Command only)

Specifies how many S-SSB configurations are effective, this SCPI only command is used to provide similar function as “Add S-SS Block” and “Delete S-SS Block”.

Note all 2 S-SSB configurations can be modified through SCPI, but ineffective S-SSB configurations (index > S-SSB Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:SSSB <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:SSSB?</code>
Example	<code>:EVM:CCAR0:NUMB:SSSB 2</code> <code>:EVM:CCAR0:NUMB:SSSB?</code>
Preset	1
State Saved	Yes
Min	0
Max	2

State

Enable or disable selected S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:SSSB1 OFF</code> <code>:EVM:CCAR0:SSSB1?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	Off
State Saved	Yes

SCS

Select numerology for current S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SCS SCS15K SCS30K SCS60K SCS120K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SCS?</code>
Example	<code>:EVM:CCAR0:SSSB1:SCS SCS15K</code> <code>:EVM:CCAR0:SSSB1:SCS?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The SCS setting depends on the CC Bandwidth and Frequency Range. Also if the Max RB Num for the SCS is less than 20, the SCS is not available
Preset	SCS30K
State Saved	Yes
Range	<code>SCS15K SCS30K SCS60K SCS120K</code>

Periodicity (Display only)

Display the periodicity of S-SS Block transmission

Number per Period

Specifies number of S-SS Blocks per period.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PERiod:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PERiod:NUMBer?</code>
Example	<code>:EVM:CCAR0:SSSB1:PER:NUMB 1</code> <code>:EVM:CCAR0:SSSB1:PER:NUMB?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	16

RB Offset

Specifies the RB Offset of S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:SSSB1:RB:OFFS 253</code> <code>:EVM:CCAR0:SSSB1:RB:OFFS?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The setting range depends on the MaxRbNum and SCS
Preset	253
State Saved	Yes
Min	0
Max	Max RB in CC setup for S-SSB SCS – S-SSB RB Number

Slot Offset

Specifies the slot Offset (from the start of S-SSB period to the first S-SSB) of S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SLOT:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SLOT:OFFSet?</code>
Example	<code>:EVM:CCAR0:SSSB1:SLOT:OFFS 253</code> <code>:EVM:CCAR0:SSSB1:SLOT:OFFS?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message The setting range depends on the SCS
Preset	0
State Saved	Yes
Min	0
Max	Max slot number in CC setup for S-SSB SCS - 1

Slot Interval

Specifies the slot interval between neighboring S-SS Blocks.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SLOT:INTeval <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SLOT:INTeval?</code>
Example	<code>:EVM:CCAR0:SSSB1:SLOT:INT 1</code> <code>:EVM:CCAR0:SSSB1:SLOT:INT?</code>
Couplings	The sub-opcode <n> max value 2

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message The setting range depends on the SCS
Preset	1
State Saved	Yes
Min	1
Max	Max slot number in CC setup for S-SSB SCS - 1

S-SSB Power Boosting

Specifies Power Boost value for the S-SSB.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:POWer?</code>
Example	<code>:EVM:CCAR0:SSSB1:POW 0.0</code> <code>:EVM:CCAR0:SSSB1:POW?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0.0 dB
State Saved	Yes
Min	-100
Max	100

BWP (Downlink)

View and configure the BWP parameters.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See ["Resource Map Diagram" on page 1960](#).

Add BWP (GUI only)

Inserts a new BWP into table, the maximum number of BWP is 5 (including Initial BWP).

See ["Effective BWP Number \(Remote Command only\)" on page 1976](#) for SCPI to provide similar function.

Delete BWP

Deletes selected BWP from table, except Initial BWP (BWP0).

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:DELeTe:BWP <integer></code>
Example	<code>:EVM:CCAR0:DLIN:DEL:BWP 1</code>

Effective BWP Number (Remote Command only)

Specifies how many UL/DL BWP configurations are effective, this SCPI only command is used to provide similar function as “Add BWP” and “Delete BWP”.

Note all 4 UL/DL BWP configurations can be modified through SCPI, but ineffective UL/DL BWP configurations (index > Effective BWP Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:NUMBer:BWP <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:NUMBer:BWP?</code>
Example	<code>:EVM:CCAR0:DLINK:NUMB:BWP 2</code> <code>:EVM:CCAR0:DLINK:NUMB:BWP?</code>
Couplings	Max value is 4 for both Uplink and Downlink If you attempt to remotely set the Count larger than 4, this will result in an error message
Preset	1
State Saved	Yes
Min	1
Max	4

BWP DL Parameter Group (Display only)

Allows you to configure the allocation and power parameters for BWP (DL).

This control is for UI display only. You can select one of the following two groups:

General Settings

"State" on page 1977	"CORESET Number" on page 1979	"SCS" on page 1977	"Cyclic Prefix" on page 1977
"N_BWP_start (RB Offset)" on page 1978	"N_BWP_size (RB Number)" on page 1978	"Max RB Number (Display Only)" on page 1979	

3 5G NR Mode

3.7 Modulation Analysis Measurement

CORESET 0

"State" on page 1977	"CORESET Number" on page 1979	"CORESET ID" on page 1979	"CORESET RB Offset" on page 1980	"CORESET RB Number" on page 1980
"Allocated RBGs (6RBs)" on page 1980	"CORESET Symbol Number" on page 1981	"CORESET CCE to REG Mapping Type" on page 1981	"CORESET REG Bundle Size" on page 1981	"CORESET Interleave Size" on page 1982
"CORESET Shift Index" on page 1982				

State

Enable or disable selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4[:STATe]?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1 OFF</code> <code>:EVM:CCAR0:DLIN:BWP1?</code>
Preset	ON
State Saved	Yes

SCS

Specifies the SCS of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:SCS SCS15K SCS30K SCS60K SCS120K SCS240K [:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:SCS?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:SCS SCS30K</code> <code>:EVM:CCAR0:DLIN:BWP1:SCS?</code>
Couplings	This setting is couple with Freq Range Freq Range = FR1, the available SCSs: SCS 15K , SCS 30K , SCS 60K Freq Range = FR2, the available SCSs: SCS 60K , SCS 120K , SCS 240K
Preset	SCS30K
State Saved	Yes

Cyclic Prefix

Specifies the cyclic prefix of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:CPLength NORMa1 EXTended</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:CPLength?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:CPL NORM</code> <code>:EVM:CCAR0:DLIN:BWP1:CPL?</code>
Couplings	If SCS is not 60kHz, the CP length will be fixed to Normal For Initial BWP(BWP0), only Normal CP is supported
Preset	NORMa1
State Saved	Yes
Range	Normal Extended

N_BWP_start (RB Offset)

Specifies the RB Offset relative to CRB0 of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:RB:OFFS 0</code> <code>:EVM:CCAR0:DLIN:BWP1:RB:OFFS?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	0 for BWP1-4 126 for Initial BWP (BWP0)
State Saved	Yes
Min	N_grid_start
Max	Depends on frequency range, bandwidth and numerology

N_BWP_size (RB Number)

Specifies the RB Number of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:RB:NUMB 126</code> <code>:EVM:CCAR0:DLIN:BWP1:RB:NUMB?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	273 for BWP1-4 24 for Initial BWP (BWP0)
State Saved	Yes
Min	6
Max	N_grid_size

Max RB Number (Display Only)

Display the maximum RB for selected Component Carrier and Numerology.

CORESET Number

Set the number of CORESET of the BWP

Initial BWP (BWP0): Display only and always 1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:NUMBER:COReset <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:NUMBER:COReset?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:NUMB:COR 1</code> <code>:EVM:CCAR0:DLIN:BWP1:NUMB:COR?</code>
Preset	1
State Saved	Yes
Min	1
Max	3

CORESET ID

Specifies the ID of CORESET:

Initial BWP (BWP0): Display only and always 0

BWP1-4: Settable and could not be 0

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:ID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:ID?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR1:ID 2</code> <code>:EVM:CCAR0:DLIN:BWP1:COR1:ID?</code>
Couplings	The ID should be unique for all CORESETs in a BWP
Preset	0
State Saved	Yes
Min	0
Max	11

CORESET RB Offset

For CORESET0: Display the RB Offset of the CORESET0 relative to the start of InitialBWP.

For Other CORESET: Set the RB Offset of the first group of 6 RBs relative to the start of BWP, -1 means not configured.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINk:BWP0 ... 4:COReSet0 1 2:RB:OFFSet:R16 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINk:BWP0 ... 4:COReSet0 1 2:RB:OFFSet:R16?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR1:RB:OFFS:R16 0</code> <code>:EVM:CCAR0:DLIN:BWP1:COR1:RB:OFFS:R16?</code>
Preset	0 for CORESET0 -1 for other CORESET
State Saved	Yes
Min	-1
Max	5

CORESET RB Number

Specifies the RB Number of CORESET. Note this number should be multiple of 6.

BWP1-4: Remote Command only

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINk:BWP0 ... 4:COReSet0 1 2:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINk:BWP0 ... 4:COReSet0 1 2:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR1:RB:NUMB 270</code> <code>:EVM:CCAR0:DLIN:BWP1:COR1:RB:NUMB?</code>
Couplings	For CORESET0 with initial BWP (BWP0), only 24, 48, 96 are valid
Preset	270
State Saved	Yes
Min	24 for CORESET 0 with Initial BWP (BWP0) 6 for other CORESETS
Max	96 for CORESET 0 with initial BWP (BWP0), For other CORESET $\text{Int}(\text{RB Number of selected BWP} / 6) * 6 - \text{CORESET RB Offset}$

Allocated RBGs (6RBs)

Specifies the allocated RBG of CORESET.

Initial BWP (BWP0): NA

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:RBG:ALlocated<string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:RBG:ALlocated?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:RBG:ALL "2:9"</code> <code>:EVM:CCAR0:DLIN:BWP1:RBG:ALL?</code>
Couplings	The setting is NOT applied for CORESET0 with initial BWP (BWP0)
Preset	"0:44"
State Saved	Yes

CORESET Symbol Number

Specifies the Symbol Length of CORESET.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:SYMBol:LENGth<integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:SYMBol:LENGth?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR1:SYMB:LENG 2</code> <code>:EVM:CCAR0:DLIN:BWP1:COR1:SYMB:LENG?</code>
Preset	1
State Saved	Yes
Min	1
Max	3

CORESET CCE to REG Mapping Type

Specifies the CCE to REG Mapping Type of CORESET.

Initial BWP (BWP0): Display only and always be Interleaved.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:REG:MAPPING INTERleave NONE [:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReset0 1 2:REG:MAPPING?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:MAPP NONE</code> <code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:MAPP?</code>
State Saved	Yes
Range	Interleaved Non-interleaved

CORESET REG Bundle Size

Specifies the REG bundle size of CORESET when the REG mapping is interleaved.

Initial BWP (BWP0): Display only and always be 6.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:REG:BUNDle <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:REG:BUNDle?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:BUND 2</code> <code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:BUND?</code>
Preset	6
State Saved	Yes
Range	If number of Symbol is 1, only 2 and 6 are allowed. Otherwise, the number of Symbol and 6 are allowed

CORESET Interleave Size

Specifies the Interleave Size of CORESET when the REG mapping is interleaved.

Initial BWP (BWP0): Display only and always be 2.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:REG:INterleave <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:REG:INterleave?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:INT 3</code> <code>:EVM:CCAR0:DLIN:BWP1:COR0:REG:INT?</code>
Preset	2
State Saved	Yes
Range	Only 2,3,6 are allowed

CORESET Shift Index

Specifies the Shift Index of CORESET when the REG mapping is interleaved.

Initial BWP (BWP0): Display only and always be Cell ID.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:SHIFt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DLINK:BWP0 ... 4:COReSet0 1 2:SHIFt?</code>
Example	<code>:EVM:CCAR0:DLIN:BWP1:COR0:SHIF 1</code> <code>:EVM:CCAR0:DLIN:BWP1:COR0:SHIF?</code>
Preset	0
State Saved	Yes
Range	The range is 0-274
Min	0
Max	274

BWP (Uplink)

View and configure the BWP parameters.

Add BWP (GUI only)

Inserts a new BWP into table, the maximum number of BWP is 4.

See "Effective BWP Number (Remote Command only)" on page 1983 for SCPI to provide similar function.

Delete UL BWP

Deletes selected BWP from table.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:DELeTe:BWP <integer></code>
Example	<code>:EVM:CCAR0:ULIN:DEL:BWP 1</code>

Effective BWP Number (Remote Command only)

Specifies how many UL/DL BWP configurations are effective, this SCPI only command is used to provide similar function as “Add BWP” and “Delete BWP”.

Note all 4 UL/DL BWP configurations can be modified through SCPI, but ineffective UL/DL BWP configurations (index > Effective BWP Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:NUMBer:BWP <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:NUMBer:BWP?</code>
Example	<code>:EVM:CCAR0:ULINk:NUMB:BWP 2</code> <code>:EVM:CCAR0:ULINk:NUMB:BWP?</code>
Couplings	Max value is 4 for both Uplink and Downlink If you attempt to remotely set the Count larger than 4, this will result in an error message
Preset	1
State Saved	Yes
Min	1
Max	4

State

Enables or disables selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4[:STATe]?</code>
Example	<code>:EVM:CCAR0:ULIN:BWP1:STAT OFF</code> <code>:EVM:CCAR0:ULIN:BWP1:STAT?</code>
Preset	ON
State Saved	Yes

SCS

Specifies the SCS of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:SCS SCS15K SCS30K SCS60K SCS120K SCS240K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:SCS?</code>
Example	<code>:EVM:CCAR0:ULIN:BWP1:SCS SCS30K</code> <code>:EVM:CCAR0:ULIN:BWP1:SCS?</code>
Couplings	This setting is couple with Freq Range Freq Range = FR1, the available SCSs: SCS 15K , SCS 30K , SCS 60K Freq Range = FR2, the available SCSs: SCS 60K , SCS 120K , SCS 240K
Preset	SCS30K
State Saved	Yes

Cyclic Prefix

Specifies the cyclic prefix of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:CPLength NORMa1 EXTended</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:CPLength?</code>
Example	<code>:EVM:CCAR0:ULIN:BWP1:CPL NORM</code> <code>:EVM:CCAR0:ULIN:BWP1:CPL?</code>
Couplings	If SCS is not 60kHz, the CP length will be fixed to Normal
Preset	NORMa1
State Saved	Yes
Range	NORMa1 EXTended

N_BWP_start (RB Offset)

Specifies the RB Offset relative to CRB0 of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:ULIN:BWP1:RB:OFFS 0</code> <code>:EVM:CCAR0:ULIN:BWP1:RB:OFFS?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	0
State Saved	Yes
Min	N_grid_start
Max	Depends on frequency range, bandwidth and numerology

N_BWP_size (RB Number)

Specifies the RB Number of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:BWP1 ... 4:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:ULIN:BWP1:RB:NUMB 126</code> <code>:EVM:CCAR0:ULIN:BWP1:RB:NUMB?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	273
State Saved	Yes
Min	1
Max	N_grid_size

Max RB Number (Display Only)

Display the maximum RB for selected Component Carrier and Numerology.

BWP (Sidelink)

View and configure the BWP parameters.

Add BWP (GUI only)

Inserts a new BWP into table, the maximum number of BWP is 4.

See "Effective BWP Number (Remote Command only)" on page 1976 for SCPI to provide similar function.

Delete BWP

Deletes selected BWP from table.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:DELeTe:BWP <integer></code>
Example	<code>:EVM:CCAR0:SLIN:DEL:BWP 1</code>

Effective BWP Number (Remote Command only)

Specifies how many sidelink BWP configurations are effective, this SCPI only command is used to provide similar function as "Add BWP" and "Delete BWP".

Note all 4 sidelink BWP configurations can be modified through SCPI, but ineffective sidelink BWP configurations (index > Effective BWP Number) will not be included in the measurement no matter its state is "On" or "Off".

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:NUMBer:BWP <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:NUMBer:BWP?</code>
Example	<code>:EVM:CCAR0:SLINK:NUMB:BWP 2</code> <code>:EVM:CCAR0:SLINK:NUMB:BWP?</code>
Couplings	Max value is 4 for sidelink If you attempt to remotely set the Count larger than 4, this will result in an error message
Preset	1
State Saved	Yes
Min	1
Max	4

State

Enables or disables selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4[:STATe]?</code>
Example	<code>:EVM:CCAR0:SLIN:BWP1 OFF</code> <code>:EVM:CCAR0:SLIN:BWP1?</code>
Preset	ON
State Saved	Yes

SCS

Specifies the SCS of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:SCS SCS15K SCS30K SCS60K SCS120K [:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:SCS?</code>
Example	<code>:EVM:CCAR0:SLIN:BWP1:SCS SCS30K</code> <code>:EVM:CCAR0:SLIN:BWP1:SCS?</code>
Couplings	All sidelink BWP have same SCS
Preset	<code>SCS30K</code>
State Saved	Yes

Cyclic Prefix

Specifies the cyclic prefix of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:CPLength NORMal EXTended [:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:CPLength?</code>
Example	<code>:EVM:CCAR0:SLIN:BWP1:CPL NORM</code> <code>:EVM:CCAR0:SLIN:BWP1:CPL?</code>
Couplings	If SCS is not 60kHz, the CP length will be fixed to Normal
Preset	<code>NORMal</code>
State Saved	Yes
Range	Normal Extended

N_BWP_start (RB Offset)

Specifies the RB Offset relative to CRB0 of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:RB:OFFSet <integer> [:SENSe]:EVM:CCARrier0 ... 15:SLINK:BWP1 ... 4:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:SLIN:BWP1:RB:OFFS 0</code> <code>:EVM:CCAR0:SLIN:BWP1:RB:OFFS?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	<code>0</code>
State Saved	Yes
Min	<code>0</code>
Max	Depends on frequency range, bandwidth and numerology

N_BWP_size (RB Number)

Specifies the RB Number of selected BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLINk:BWP1 ... 4:RB:NUMBer <integer></code>
Example	<code>:EVM:CCAR0:SLIN:BWP1:RB:NUMB 126</code> <code>:EVM:CCAR0:SLIN:BWP1:RB:NUMB?</code>
Couplings	The range is coupled with Freq Range and BWP SCS setting
Preset	273
State Saved	Yes
Min	6
Max	N_grid_size

Max RB Number (Display Only)

Display the maximum RB for selected Component Carrier and Numerology.

PDCCH

View and configure the PDCCH parameters.

Add PDCCH (GUI only)

Inserts a new PDCCH configuration into list, the maximum number of PDCCH configurations is 16.

See ["Effective PDCCH Number \(Remote Command only\)" on page 1989](#) for SCPI to provide similar function.

Delete PDCCH

Deletes selected PDCCH configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PDCCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PDCC 1</code>

Clear All (GUI only)

Deletes all PDCCH configuration from list.

See "Effective PDCCH Number (Remote Command only)" on page 1989 for SCPI to provide similar function.

Effective PDCCH Number (Remote Command only)

Specifies how many PDCCH configurations are effective, this SCPI only command is used to provide similar function as “Add PDCCH” and “Delete PDCCH”.

Note all 16 PDCCH configurations can be modified through SCPI, but ineffective PDCCH configurations (index > Effective PDCCH Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PDCCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PDCCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PDCC 2</code> <code>:EVM:CCAR0:NUMB:PDCC?</code>
Couplings	Max value is 16 If you attempt to remotely set the Count larger than 16, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	16

PDCCH Parameter Group (Display only)

Allows you to configure the PDCCH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings						
"State" on page 1990	"RNTI" on page 1990	"Power Boosting" on page 1995	"Antenna Port" on page 1994	"Antenna Port Detection Threshold" on page 1994	"DMRS Power Boosting" on page 1998	"DMRS Scrambling ID" on page 1998
Resource Allocation						

"State" on page 1990	"BWP" on page 1991	"CORESET Index (Remote Command only)" on page 1992	"CORESET" on page 1992	
"First Symbol" on page 1993	"Allocated Slots" on page 1993	"Periodicity" on page 1993		
PDCCH Settings				
"State" on page 1990	"Search Space" on page 1995	"Aggregation Level" on page 1995	"Num Of Candidates" on page 1996	
"Candidate Index" on page 1996	"PDCCH CCE Offset" on page 1997	"DCI Size" on page 1998		
Auto Detection Settings				
"State" on page 1990	"RNTI" on page 1990	"RNTI Type" on page 1991	"BWP" on page 1991	"CORESET" on page 1992
"First Symbol" on page 1993	"Allocated Slots" on page 1993	"Search Space" on page 1995	"Num Of Candidates (Aggregation Level 1)" on page 1999	"Num Of Candidates (Aggregation Level 2)" on page 1999
"Num Of Candidates (Aggregation Level 4)" on page 2000	"Num Of Candidates (Aggregation Level 8)" on page 2000	"Num Of Candidates (Aggregation Level 16)" on page 2000		

State

Enables or disables PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCC<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCC<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PDCC1 OFF</code> <code>:EVM:CCAR0:PDCC1?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

RNTI

Specifies the user RNTI of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:RNTI <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:RNTI?</code>
Example	<code>:EVM:CCAR0:PDCC1:RNTI 1</code> <code>:EVM:CCAR0:PDCC1:RNTI?</code>
Couplings	Max value for n = 16 and Min value for n = 1 When RNTI Type is P-RNTI, RNTI will be fixed to 65534; if RNTI Type is SI_RNTI, RNTI is fixed to 65535 For other RNTI types, Max value is 65533. If RNTI > 65533 for these RNTI Types, RNTI will be set to 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	65535

RNTI Type

Specifies the user RNTI Type of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:RNTI:TYPE CRNTI CSRNTI MCSRNTI PRNTI SIRNTI RARNTI TCRNTI</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:RNTI:TYPE?</code>
Example	<code>:EVM:CCAR0:PDCC1:RNTI:TYPE CSRNTI</code> <code>:EVM:CCAR0:PDCC1:RNTI:TYPE?</code>
Couplings	Max value for n = 16 and Min value for n = 1 If you attempt to remotely set or query a sub-opcode that is out of range, this results in an error message
Preset	CRNTI
State Saved	Yes

BWP

Specifies the BWP of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:BWP BWP0 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PDCC1:BWP BWP1</code> <code>:EVM:CCAR0:PDCC1:BWP?</code>
Couplings	Max value for n = 16 and Min value for n = 1 If you attempt to remotely set or query a sub-opcode that is out of range, this results in an error message

Preset	BWP1
State Saved	Yes
Range	Initial BWP BWP 01 BWP 02 BWP 03 BWP 04

CORESET

Sets the CORESET in selected BWP for the PDCCH.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:C0Reset:ID C0 C1 C2 [:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:C0Reset:ID?
Example	:EVM:CCAR0:PDCC1:COR:ID C0 :EVM:CCAR0:PDCC1:COR:ID?
Couplings	Max value for n = 16 and Min value for n = 1 If you attempt to remotely set or query a sub-opcode that is out of range, this results in an error message It is coupled with CORESET Index
Preset	C0
State Saved	Yes
Range	CORESET 0 CORESET 1 CORESET 2

CORESET Index (Remote Command only)

Sets the CORESET index in selected BWP for the PDCCH.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PDCCh1 16:C0Reset <int> [:SENSe]:EVM:CCARrier0 ... 15:PDCCh1 16:C0Reset?
Example	:EVM:CCAR0:PDCC1:COR 0 :EVM:CCAR0:PDCC1:COR?
Couplings	Max value for n = 16 and Min value for n = 1 If you attempt to remotely set or query a sub-opcode that is out of range, this results in an error message Coupled with PDCCH CORESET
Preset	0
State Saved	Yes
Min	0
Max	2

Allocated Slots

Specifies the Slots allocated to PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SLOT:ALlocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SLOT:ALlocated?</code>
Example	<code>:EVM:CCAR0:PDCC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PDCC1:SLOT:ALL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"2:9,12:19"
State Saved	Yes

Periodicity

Specifies the periodicity of PDCCH transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:PERiodicity <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:PERiodicity?</code>
Example	<code>:EVM:CCAR0:PDCC1:PER 2</code> <code>:EVM:CCAR0:PDCC1:PER?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	4

First Symbol

Specifies the First Symbol of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SYMBol:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SYMBol:FIRSt?</code>
Example	<code>:EVM:CCAR0:PDCC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PDCC1:SYMB:FIRS?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

Preset	0
State Saved	Yes
Min	0
Max	13

Antenna Port

Specifies the Antenna Port of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:PDCC1:ANT:PORT 2000</code> <code>:EVM:CCAR0:PDCC1:ANT:PORT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2000
State Saved	Yes
Min	2000
Max	2011

Antenna Port Detection Threshold

Specifies threshold for Antenna Port Detection, when the power of one port is lower than the threshold comparing with reference port, it will be detected as inactive and not included in MIMO demodulation processing.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:ANTenna:PORT:THReshold <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:ANTenna:PORT:THReshold?</code>
Example	<code>:EVM:CCAR0:PDCC1:ANT:PORT:THR 0</code> <code>:EVM:CCAR0:PDCC1:ANT:PORT:THR?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-36 dB
State Saved	Yes
Min	-100
Max	100

Power Boosting

Specifies Power Boost value for the PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PDCC1:POW 0</code> <code>:EVM:CCAR0:PDCC1:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

Search Space

Specifies the Search Space type of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SEARch:SPACe UESpecific COMMON</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:SEARch:SPACe?</code>
Example	<code>:EVM:CCAR0:PDCC1:SEAR:SPAC COMM</code> <code>:EVM:CCAR0:PDCC1:SEAR:SPAC?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	UESpecific
State Saved	Yes
Range	UE Specific Common

Aggregation Level

Specifies the Aggregation Level of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:AGGRegation L1 L2 L4 L8 L16</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:AGGRegation?</code>
Example	<code>:EVM:CCAR0:PDCC1:AGGR L2</code> <code>:EVM:CCAR0:PDCC1:AGGR?</code>
Couplings	Max value for n = 16 and Min value for n = 1

	The Aggregation Level should NOT be greater than the CORESET RBG number. For example, if CORESET has 2 RBGs, only aggregation level 1 and aggregation level 2 are available Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	L4
State Saved	Yes
Range	1 2 4 8 16

Num Of Candidates

Specifies the number of PDCCH candidates.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:NUMBer?</code>
Example	<code>:EVM:CCAR0:PDCC:CAND:NUMB 3</code> <code>:EVM:CCAR0:PDCC:CAND:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message If search space is common, and Num Of candidates will be fixed according to the Aggregation Level in "CCE Aggregation Levels and Num of Candidates" on page 1996
Preset	4
State Saved	Yes
Range	1,2,3,4,5,6,8
Min	1
Max	8

CCE Aggregation Levels and Num of Candidates

Maximum number of PDCCH candidates per CCE aggregation level for common search space sets configured by searchSpace-SIB1

CCE Aggregation Level	Number of Candidates
4	4
8	2
16	1

Candidate Index

Specifies the index of PDCCH candidate. Note when Candidate Index is -1, you can input CCE Offset manually, this is default PDCCH allocation configure mode. In this mode, Search Space and Num Of Candidates will become invalid.

When Candidate Index > -1, you can set Search Space, Number of Candidates and Candidate Index. In this mode, CCE Offset will become display only.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:INDex <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:INDex?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:IND 0</code> <code>:EVM:CCAR0:PDCC1:CAND:IND?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-1
State Saved	Yes
Min	-1
Max	Candidates Number - 1

PDCCH CCE Offset

Specifies the CCE Offset of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CCE:OFFSet <String></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CCE:OFFSet?</code>
Example	<code>:EVM:CCAR0:PDCC1:CCE:OFFSet "2"</code> <code>:EVM:CCAR0:PDCC1:CCE:OFFSet?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is display only if the PDCCH Candidate Index is NOT -1: <ul style="list-style-type: none"> The CCE Offset result depends on CORESET and PDCCH parameters, see 38.211 for details When PDCCH Candidate Index is -1, you can input the CCE Offset: <ul style="list-style-type: none"> If the string is not valid for numeric input, it will be reset to its default value If some values are out of range (greater than the max CCE Offset), it will be adjusted accordingly: $\text{maxCceOffset} = ((\text{coresetRbNum} / 6) * \text{coresetSymLen} / \text{aggLevel} - 1) * \text{aggLevel};$ If the input length is longer than allocated slots length, the values after allocated slots length will be discarded If the input length is shorter than allocated slots length, the last value will be used for slots after input length Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"0"
State Saved	Yes

DCI Size

Specifies the DCI Size of PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DCI:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DCI:SIZE?</code>
Example	<code>:EVM:CCAR0:PDCC1:DCI:SIZE 10</code> <code>:EVM:CCAR0:PDCC1:DCI:SIZE?</code>
Preset	20
State Saved	Yes
Min	1
Max	CCE Number * 108 - 24

DMRS Scrambling ID

Specifies the PDCCH DMRS Scrambling ID.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:SCID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:SCID?</code>
Example	<code>:EVM:CCAR0:PDCC:DMRS:SCID 0</code> <code>:EVM:CCAR0:PDCC:DMRS:SCID?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-1
State Saved	Yes
Min	-1
Max	65535

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PDCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PDCC1:DMRS:POW 0</code> <code>:EVM:CCAR0:PDCC1:DMRS:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

Preset	0 dB
State Saved	Yes
Min	-100
Max	100

Num Of Candidates (Aggregation Level 1)

Specifies the Num Of Candidates (Aggregation Level 1) of PDCCH configuration for auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel1 <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel1?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:ALEV1 1</code> <code>:EVM:CCAR0:PDCC1:CAND:ALEV1?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message NOTE: 7 is an invalid value for this setting
Preset	4
State Saved	Yes
Min	0
Max	8

Num Of Candidates (Aggregation Level 2)

Specifies the Num Of Candidates (Aggregation Level 2) of PDCCH configuration for auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel2 <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel2?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:ALEV2 1</code> <code>:EVM:CCAR0:PDCC1:CAND:ALEV2?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message NOTE: 7 is an invalid value for this setting
Preset	4
State Saved	Yes
Min	0
Max	8

Num Of Candidates (Aggregation Level 4)

Specifies the Num Of Candidates (Aggregation Level 4) of PDCCH configuration for auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel4 <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel4?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:ALEV4 1</code> <code>:EVM:CCAR0:PDCC1:CAND:ALEV4?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message NOTE: 7 is an invalid value for this setting
Preset	4
State Saved	Yes
Min	0
Max	8

Num Of Candidates (Aggregation Level 8)

Specifies the Num Of Candidates (Aggregation Level 8) of PDCCH configuration for auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel8 <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCCh<n>:CANDidate:ALEVel8?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:ALEV8 1</code> <code>:EVM:CCAR0:PDCC1:CAND:ALEV8?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message NOTE: 7 is an invalid value for this setting
Preset	4
State Saved	Yes
Min	0
Max	8

Num Of Candidates (Aggregation Level 16)

Specifies the Num Of Candidates (Aggregation Level 16) of PDCCH configuration for auto detection.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:ALEVel16 <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:CANDidate:ALEVel16?</code>
Example	<code>:EVM:CCAR0:PDCC1:CAND:ALEV16 1</code> <code>:EVM:CCAR0:PDCC1:CAND:ALEV16?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message NOTE: 7 is an invalid value for this setting
Preset	4
State Saved	Yes
Min	0
Max	8

PDSCH

View and configure the PDSCH parameters.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See "Resource Map Diagram" on page 1960.

Add PDSCH (GUI only)

Pressing this control inserts a new PDSCH allocation into list, the maximum number of PDSCH allocations is 250.

See "Effective PDSCH Number (Remote Command only)" on page 2002 for SCPI to provide similar function.

Delete PDSCH

Pressing this control deletes selected PDSCH allocation from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PDSCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PDSC 1</code>

Clear All (GUI only)

Pressing this control deletes all PDSCH from list.

See ["Effective PDSCH Number \(Remote Command only\)" on page 2002](#) for SCPI to provide similar function.

Effective PDSCH Number (Remote Command only)

Specifies how many PDSCH configurations are effective, this SCPI only command is used to provide similar function as "Add PDSCH" and "Delete PDSCH".

Note all 250 PDSCH configurations can be modified through SCPI, but ineffective PDSCH configurations (index > Effective PDSCH Number) will not be included in the measurement no matter its state is "On" or "Off".

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PDSCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PDSCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PDSCh 2</code> <code>:EVM:CCAR0:NUMB:PDSCh?</code>
Couplings	Max value is 250 If you attempt to remotely set the Count larger than 250, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	250

PDSCH Parameter Group (Display only)

Allows you to configure the PDSCH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings

"State" on page 2004	"RNTI" on page 2004	"n_ID" on page 2005	"MCS Table" on page 2005	"MCS" on page 2006	"Modulation" on page 2006
"TB Scaling Factor" on page 2012	"RV Index" on page 2012	"TB Size (Display Only)" on page 2012	"Rate Match Coreset" on page 2012	"Precoder Group Size" on page 2013	"User Define Size" on page 2013

pag
e
201
2

Resource Allocation

"State" on page 2004	"BWP" on page 2014	"RA Type" on page 2014
"RBG Size" on page 2014	"Allocated RBGs" on page 2015	"RB Offset" on page 2015
"RB Number" on page 2016	"VRB to PRB Mapping" on page 2016	"VRB to PRB Mapping CORESET" on page 2017
"VRB to PRB Interleaver" on page 2017	"Allocated Slots" on page 2017	"Slot Format" on page 2018
"First Symbol" on page 2018	"Last Symbol" on page 2018	"Periodicity" on page 2019

DMRS Settings

"State" on page 2004	"DMRS Configuration" on page 2019	"PDSCH Mapping" on page 2020	"DMRS-typeA-pos" on page 2020
"DMRS Max Len" on page 2020	"DMRS-add-pos" on page 2021	"n_SCID" on page 2022	"DMRSdownlink-r16" on page 2022
"N_ID_0" on page 2022	"N_ID_1" on page 2023	"N_ID_nSCID (SCPI only)" on page 2023	"DMRS Mapping Reference" on page 2024
"DMRS-DL-Alt" on page 2031			

Antenna Settings

"State" on page 2004	"Antenna Port Index" on page 2025	"DMRS Port (Display Only)" on page 2030	"Antenna Port/Reference Antenna Port" on page 2024
"Antenna Port Detection Threshold" on page 2024	"Codewords Number" on page 2030	"DMRS CDM group w.o. data" on page 2030	"Front-load Symbols" on page 2021

PTRS Settings

"State" on page 2004	"PTRS Enable" on page 2031	"PTRS K" on page 2032	"PTRS L" on page 2032	"PTRS Offset" on
----------------------	----------------------------	-----------------------	-----------------------	------------------

Power Settings

"State" on page 2004

"PDSCH Power Boosting" on page 2033

"DMRS Power Boosting" on page 2033

"PTRS Power Boosting" on page 2034

State

Enables or disables selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PDSC1 OFF</code> <code>:EVM:CCAR0:PDSC1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	ON
State Saved	Yes

RNTI

Specifies the user RNTI of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RNTI <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RNTI?</code>
Example	<code>:EVM:CCAR0:PDSC1:RNTI 1</code> <code>:EVM:CCAR0:PDSC1:RNTI?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	1
State Saved	Yes
Min	0
Max	65535

n_ID

Specifies n_ID for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:NID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:NID?</code>
Example	<code>:EVM:CCAR0:PDSC1:NID 0</code> <code>:EVM:CCAR0:PDSC1:NID?</code>
Notes	-1 means using Cell ID as n_ID
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-1
State Saved	Yes
Min	-1
Max	1023

MCS Table

Specifies which MCS table is used to configure MCS for selected PDSCH configuration. See 38.214 clause 5.1.3 for complete MCS table.

- Table 1 – Table 5.1.3.1-1 (64QAM)
- Table 2 – Table 5.1.3.1-2 (256QAM)
- Table 3 – Table 5.1.3.1-3 (64QAMLowSE)
- Table 4 – Table 5.1.3.1-4 (1024QAM)

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:MCS:TABLE TABLE1 ... TABLE4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:MCS:TABLE?</code>
Example	<code>:EVM:CCAR0:PDSC1:MCS:TABLE TABLE2</code> <code>:EVM:CCAR0:PDSC1:MCS:TABLE?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	TABLE1
State Saved	Yes
Range	64QAM 256QAM 64QAMLowSE 1024QAM

MCS

Specifies the MCS index for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:MCS <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:MCS?</code>
Example	<code>:EVM:CCAR0:PDSC1:MCS 1</code> <code>:EVM:CCAR0:PDSC1:MCS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When MCS is -1, you can specify Modulation manually, MCS table and TB Size will be invalid and no decoding results for this PDSCH
Preset	0
State Saved	Yes
Min	-1
Max	31

Modulation

Display the modulation for selected PDSCH configuration.

The modulation is derived from MCS Table and MCS settings 38.214 clause 5.1.3.

Modulation Order = 2, Modulation = QPSK

Modulation Order = 4, Modulation = 16QAM

Modulation Order = 6, Modulation = 64QAM

Modulation Order = 8, Modulation = 256QAM

See ["More Information" on page 2007](#).

Only when MCS = -1, you can specify Modulation manually (including Custom IQ mode). Custom IQ mode means customized constellation definition recalled from file.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:MODulation QPSK QAM16 QAM64 QAM256 QAM1024</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:MODulation?</code>
Example	<code>:EVM:CCAR0:PDSC1:MOD QPSK</code> <code>:EVM:CCAR0:PDSC1:MOD?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

3 5G NR Mode
3.7 Modulation Analysis Measurement

	Display only when MCS is not -1
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM

More Information

Table 5.1.3.1-1: MCS index table 1 for PDSCH

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate x [1024] R	Spectral efficiency
0	2	120	0.2344
1	2	157	0.3066
2	2	193	0.3770
3	2	251	0.4902
4	2	308	0.6016
5	2	379	0.7402
6	2	449	0.8770
7	2	526	1.0273
8	2	602	1.1758
9	2	679	1.3262
10	4	340	1.3281
11	4	378	1.4766
12	4	434	1.6953
13	4	490	1.9141
14	4	553	2.1602
15	4	616	2.4063
16	4	658	2.5703
17	6	438	2.5664
18	6	466	2.7305
19	6	517	3.0293
20	6	567	3.3223
21	6	616	3.6094
22	6	666	3.9023
23	6	719	4.2129
24	6	772	4.5234
25	6	822	4.8164
26	6	873	5.1152
27	6	910	5.3320

28	6	948	5.5547
29	2	reserved	
30	4	reserved	
31	6	reserved	

Table 5.1.3.1-2: MCS index table 2 for PDSCH

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate x [1024] R	Spectral efficiency
0	2	120	0.2344
1	2	193	0.3770
2	2	308	0.6016
3	2	449	0.8770
4	2	602	1.1758
5	4	378	1.4766
6	4	434	1.6953
7	4	490	1.9141
8	4	553	2.1602
9	4	616	2.4063
10	4	658	2.5703
11	6	466	2.7305
12	6	517	3.0293
13	6	567	3.3223
14	6	616	3.6094
15	6	666	3.9023
16	6	719	4.2129
17	6	772	4.5234
18	6	822	4.8164
19	6	873	5.1152
20	8	682.5	5.3320
21	8	711	5.5547
22	8	754	5.8906
23	8	797	6.2266
24	8	841	6.5703
25	8	885	6.9141
26	8	916.5	7.1602
27	8	948	7.4063
28	2	reserved	

3 5G NR Mode

3.7 Modulation Analysis Measurement

29	4	reserved
30	6	reserved
31	8	reserved

Table 5.1.3.1-3: MCS index table 3 for PDSCH

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	2	30	0.0586
1	2	40	0.0781
2	2	50	0.0977
3	2	64	0.1250
4	2	78	0.1523
5	2	99	0.1934
6	2	120	0.2344
7	2	157	0.3066
8	2	193	0.3770
9	2	251	0.4902
10	2	308	0.6016
11	2	379	0.7402
12	2	449	0.8770
13	2	526	1.0273
14	2	602	1.1758
15	4	340	1.3281
16	4	378	1.4766
17	4	434	1.6953
18	4	490	1.9141
19	4	553	2.1602
20	4	616	2.4063
21	6	438	2.5664
22	6	466	2.7305
23	6	517	3.0293
24	6	567	3.3223
25	6	616	3.6094
26	6	666	3.9023
27	6	719	4.2129
28	6	772	4.5234
29	2	reserved	

30	4	reserved
31	6	reserved

Table 6.1.4.1-1: MCS index table for PUSCH with transform precoding and 64QAM

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times 1024$	Spectral efficiency
0	q	240/ q	0.2344
1	q	314/ q	0.3066
2	2	193	0.3770
3	2	251	0.4902
4	2	308	0.6016
5	2	379	0.7402
6	2	449	0.8770
7	2	526	1.0273
8	2	602	1.1758
9	2	679	1.3262
10	4	340	1.3281
11	4	378	1.4766
12	4	434	1.6953
13	4	490	1.9141
14	4	553	2.1602
15	4	616	2.4063
16	4	658	2.5703
17	6	466	2.7305
18	6	517	3.0293
19	6	567	3.3223
20	6	616	3.6094
21	6	666	3.9023
22	6	719	4.2129
23	6	772	4.5234
24	6	822	4.8164
25	6	873	5.1152
26	6	910	5.3320
27	6	948	5.5547
28	q	reserved	
29	2	reserved	
30	4	reserved	
31	6	reserved	

3 5G NR Mode

3.7 Modulation Analysis Measurement

Table 6.1.4.1-2: MCS index table 2 for PUSCH with transform precoding and 64QAM

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times 1024$	Spectral efficiency
0	q	60/q	0.0586
1	q	80/q	0.0781
2	q	100/q	0.0977
3	q	128/q	0.1250
4	q	156/q	0.1523
5	q	198/q	0.1934
6	2	120	0.2344
7	2	157	0.3066
8	2	193	0.3770
9	2	251	0.4902
10	2	308	0.6016
11	2	379	0.7402
12	2	449	0.8770
13	2	526	1.0273
14	2	602	1.1758
15	2	679	1.3262
16	4	378	1.4766
17	4	434	1.6953
18	4	490	1.9141
19	4	553	2.1602
20	4	616	2.4063
21	4	658	2.5703
22	4	699	2.7305
23	4	772	3.0156
24	6	567	3.3223
25	6	616	3.6094
26	6	666	3.9023
27	6	772	4.5234
28	q	reserved	
29	2	reserved	
30	4	reserved	
31	6	reserved	

RV Index

Specifies the RV index for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RV <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RV?</code>
Example	<code>:EVM:CCAR0:PDSC1:RV 1</code> <code>:EVM:CCAR0:PDSC1:RV?</code>
Notes	-1 means this parameter is changing in signal and therefore need to be auto detected for each burst
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	-1
Max	3

TB Scaling Factor S

Specifies the TB Scaling Factor (S) to calculate TB size.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:TB:SFACTOR S1 SDOT5 SDOT25</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:TB:SFACTOR?</code>
Example	<code>:EVM:CCAR0:PDSC1:TB:SFAC SDOT5</code> <code>:EVM:CCAR0:PDSC1:TB:SFAC?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	S1
State Saved	Yes
Range	1 0.5 0.25

TB Size (Display Only)

Display TB Size for the selected PDSCH configuration.

Rate Match Coreset

Select the CORESET index of current BWP for PDSCH rate matching.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:RMATch:COReSet NONE CORESET0 CORESET1 CORESET2 [:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:RMATch:COReSet?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMAT:COR CORESET0</code> <code>:EVM:CCAR0:PDSC1:RMAT:COR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
State Saved	Yes
Range	<code>None CORESET0 CORESET1 CORESET2</code>

Precoder Group Size

Select PRB group size for precoding matrix.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PBGRoup RB2 RB4 WIDE USER</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PBGRoup?</code>
Example	<code>:EVM:CCAR0:PDSC1:PBGR RB4</code> <code>:EVM:CCAR0:PDSC1:PBGR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>WIDE</code>
State Saved	Yes
Range	<code>2 RB 4 RB Wideband User Defined</code>

User Define Size

Set user defined value when Precoder Group Size = User Define.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PBGRoup:USER <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PBGRoup:USER?</code>
Example	<code>:EVM:CCAR0:PDSC1:PBGR:USER 1</code> <code>:EVM:CCAR0:PDSC1:PBGR:USER?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message This parameter is only visible when Precoder Group Size = User Define
Preset	<code>1</code>
State Saved	Yes
Min	<code>1</code>
Max	RB Number of selected BWP

BWP

Specifies the BWP of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:BWP BWP0 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PDSC1:BWP BWP1</code> <code>:EVM:CCAR0:PDSC1:BWP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>BWP1</code>
State Saved	Yes
Range	Initial BWP BWP1 BWP2 BWP3 BWP4

RA Type

Specifies RA Type for the selected PDSCH configuration, there are two methods to allocate RB resources:

Type 0: RBG Size and Allocated RBG

Type 1: RB Offset and RB Number

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RAType TYPE0 TYPE1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RAType?</code>
Example	<code>:EVM:CCAR0:PDSC1:RATY TYPE0</code> <code>:EVM:CCAR0:PDSC1:RATY?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>TYPE1</code>
State Saved	Yes
Range	<code>Type0 Type1</code>

RBG Size

Specifies RBG Size for the selected PDSCH configuration, this parameter is only valid for RA Type 0.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RBG:SIZE RB2 RB4 RB8 RB16</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RBG:SIZE?</code>
----------------	--

Example	<code>:EVM:CCAR0:PDSC1:RBG:SIZE RB16</code> <code>:EVM:CCAR0:PDSC1:RBG:SIZE?</code>																	
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message Available values are determined by BWP size according to table 5.1.2.2.1-1 in TS38.214: <table><tr><th>Bandwidth Part Size</th><th>Configuration 1</th><th>Configuration 2</th></tr><tr><td>1 – 36</td><td>2</td><td>4</td></tr><tr><td>37 – 72</td><td>4</td><td>8</td></tr><tr><td>73 – 144</td><td>8</td><td>16</td></tr><tr><td>145 – 275</td><td>16</td><td>16</td></tr></table>			Bandwidth Part Size	Configuration 1	Configuration 2	1 – 36	2	4	37 – 72	4	8	73 – 144	8	16	145 – 275	16	16
Bandwidth Part Size	Configuration 1	Configuration 2																
1 – 36	2	4																
37 – 72	4	8																
73 – 144	8	16																
145 – 275	16	16																
Preset	RB16																	
State Saved	Yes																	
Range	2 RB 4 RB 8 RB 16 RB																	

Allocated RBGs

Specifies the RBGs allocated to selected PDSCH configuration, this parameter is only valid for RA Type 0.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RBG:ALlocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RBG:ALlocated?</code>
Example	<code>:EVM:CCAR0:PDSC1:RBG:ALL "0:15"</code> <code>:EVM:CCAR0:PDSC1:RBG:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"0:15"
State Saved	Yes

RB Offset

Specifies the RB Offset of selected PDSCH configuration, this parameter is only valid for RA Type 1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:PDSC1:RB:OFFSet 0</code> <code>:EVM:CCAR0:PDSC1:RB:OFFSet?</code>
Couplings	Max value for n = 250 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Range	The range is coupled with BWP
Min	0
Max	RB Number of selected BWP – PDSCH RB Number

RB Number

Specifies the RB Number of selected PDSCH configuration, this parameter is only valid for RA Type 1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RB:NUMBER <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RB:NUMBER?</code>
Example	<code>:EVM:CCAR0:PDSC1:RB:NUMB 273</code> <code>:EVM:CCAR0:PDSC1:RB:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	273
State Saved	Yes
Range	The range is coupled with BWP and RB Start
Min	1
Max	RB Number of selected BWP

VRB to PRB Mapping

Specifies VRB to PRB mapping type: Non-Interleaved | Interleaved

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping INTERleave NONE</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping?</code>
Example	<code>:EVM:CCAR0:PDSC1:VPM INT</code> <code>:EVM:CCAR0:PDSC1:VPM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
State Saved	Yes
Range	Interleaved Non-interleaved

VRB to PRB Mapping CORESET

Specifies the VRB to PRB Mapping CORESET of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping:COReset CORESET0 NONE</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping:COReset?</code>
Example	<code>:EVM:CCAR0:PDSC1:VPM:COR NONE</code> <code>:EVM:CCAR0:PDSC1:VPM:COR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When the selected BWP is not initial BWP (BWPO), the CORESET0 should be unavailable When VRB to PRB Mapping is interleaved, this key should be invisible
State Saved	Yes
Range	<code>CORESET0 None</code>

VRB to PRB Interleaver

Specifies VRB to PRB Interleaver bundle size.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping:SIZE N2 N4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:VPMapping:SIZE?</code>
Example	<code>:EVM:CCAR0:PDSC1:VPM:SIZE 4</code> <code>:EVM:CCAR0:PDSC1:VPM:SIZE?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When VRB to PRB Mapping is Non-Interleaved, this key should be invisible
Preset	2
State Saved	Yes
Range	2 4

Allocated Slots

Specifies the slots allocated to selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SLOT:ALLocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SLOT:ALLocated?</code>
Example	<code>:EVM:CCAR0:PDSC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PDSC1:SLOT:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"2:9,12:19"
State Saved	Yes

Slot Format

Specifies the Slot Format of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SLOT:FORMat SF0 SF1 ... SF55</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SLOT:FORMat?</code>
Example	<code>:EVM:CCAR0:PDSC1:SLOT:FORM SF4</code> <code>:EVM:CCAR0:PDSC1:SLOT:FORM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>SF0</code>
State Saved	Yes

First Symbol

Specifies the First Symbol of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SYMBOL:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SYMBOL:FIRSt?</code>
Example	<code>:EVM:CCAR0:PDSC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PDSC1:SYMB:FIRS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	1
State Saved	Yes
Min	0
Max	13

Last Symbol

Specifies the Last Symbol of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SYMBOL:LAST <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SYMBOL:LAST?</code>
Example	<code>:EVM:CCAR0:PDSC1:SYMB:LAST 4</code>

	<code>:EVM:CCAR0:PDSC1:SYMB:LAST?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	13
State Saved	Yes
Min	First Symbol
Max	13

Periodicity

Specifies the periodicity of PDSCH transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:PERiodicity <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:PERiodicity?</code>
Example	<code>:EVM:CCAR0:PDSC1:PER 2</code> <code>:EVM:CCAR0:PDSC1:PER?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	4

DMRS Configuration

Specifies DMRS Configuration for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:CONFigure TYPE1 TYPE2</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:CONFigure?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:CONF TYPE1</code> <code>:EVM:CCAR0:PDSC1:DMRS:CONF?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>TYPE1</code>
State Saved	Yes
Range	<code>Type 1 Type2</code>

PDSCH Mapping

Specifies PDSCH Mapping for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PDSCh:MAP TYPEA TYPEB</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PDSCh:MAP?</code>
Example	<code>:EVM:CCAR0:PDSC1:PDSC:MAP TYPEA</code> <code>:EVM:CCAR0:PDSC1:PDSC:MAP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	TYPEA
State Saved	Yes
Range	Type A Type B

DMRS-typeA-pos

Specifies the DMRS-typeA-pos value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:TAPos <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:TAPos?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:TAP 2</code> <code>:EVM:CCAR0:PDSC1:DMRS:TAP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	2
State Saved	Yes
Min	2
Max	3

DMRS Max Len

Specifies DMRS Max Len value for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:MLEN <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:MLEN?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:MLEN 2</code> <code>:EVM:CCAR0:PDSC1:DMRS:MLEN?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	1
State Saved	Yes
Min	1
Max	2

Front-load Symbols

Specifies DMRS Duration for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:DURation SINGLE DOUBLe</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:DURation?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:DUR DOUB</code> <code>:EVM:CCAR0:PDSC1:DMRS:DUR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When Antenna Port Index is -1, this parameter will be enabled and you need to ensure the settings are valid according to TS38.212, table 7.3.1.2.2-1 to table 7.3.1.2.2-4, otherwise demodulation may not work When Antenna Port Index is not -1, this parameter is display only, the value will be set automatically according to Antenna Port Index and TS38.212 table 7.3.1.2.2-1 to table 7.3.1.2.2-4
Preset	SINGLE
Range	1 2

DMRS-add-pos

Specifies the DMRS-add-pos value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:ADDPos <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:ADDPos?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:ADDP 2</code> <code>:EVM:CCAR0:PDSC1:DMRS:ADDP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 See 3GPP TS 38.211 Table 7.4.1.1.2-3/4 for coupling rule (https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3213) Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	3

n_SCID

Specifies the nSCID value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SCIDn <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:SCIDn?</code>
Example	<code>:EVM:CCAR0:PDSC1:SCID 1</code> <code>:EVM:CCAR0:PDSC1:SCID?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	1

DMRSdownlink-r16

Set whether higher-layer parameter DMRSdownlink-r16 is provided.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:R16[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:R16[:STATe]?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:R16 OFF</code> <code>:EVM:CCAR0:PDSC1:DMRS:R16?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

N_ID_0

Specifies the N_ID_0 value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:NID0 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:NID0?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:NID0 1</code> <code>:EVM:CCAR0:PDSC1:DMRS:NID0?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

3 5G NR Mode

3.7 Modulation Analysis Measurement

	When set to -1, the N_ID_0 value equals to Cell ID
Preset	-1
State Saved	Yes
Min	-1
Max	65535

N_ID_1

Specifies the N_ID_1 value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCch<n>:DMRS:NID1 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCch<n>:DMRS:NID1?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:NID1 1</code> <code>:EVM:CCAR0:PDSC1:DMRS:NID1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When set to -1, the N_ID_0 value equals to Cell ID
Preset	-1
State Saved	Yes
Min	-1
Max	65535

N_ID_nSCID (SCPI only)

Specifies the N_ID_nSCID value for selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCch<n>:SCIDn:NID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCch<n>:SCIDn:NID?</code>
Example	<code>:EVM:CCAR0:PDSC1:SCID:NID 1</code> <code>:EVM:CCAR0:PDSC1:SCID:NID?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When set to -1, the N_ID_nSCID value equals to Cell ID
Preset	-1
State Saved	Yes
Min	-1
Max	65535

DMRS Mapping Reference

Specifies the DMRS mapping reference of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:MREference CORESET0 CRB0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:DMRS:MREference?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:MREF CRB0</code> <code>:EVM:CCAR0:PDSC1:DMRS:MREF?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When the selected BWP is not initial BWP (BWPO), the CORESET0 should be unavailable
Preset	CRB0
State Saved	Yes
Range	CORESET0 CRB0

Antenna Port/Reference Antenna Port

Specifies the Antenna Port in SISO mode and Reference Antenna Port in MIMO/MISO modes of selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:PDSC1:ANT:PORT 1000</code> <code>:EVM:CCAR0:PDSC1:ANT:PORT?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message It is coupled with Antenna Port Index, DMRS Config Type, DMRS Max Len and Rank See table 7.3.1.2.2-1, 7.3.1.2.2-2, 7.3.1.2.2-3, 7.3.1.2.2-4 in 3GPP TS38.212. The Antenna Port should be related with the "DMRS Port" + 1000 column in the table
Preset	1000
State Saved	Yes
Min	1000
Max	1011

Antenna Port Detection Threshold

Specifies threshold for Antenna Port Detection, when the power of one port is lower than the threshold comparing with reference port, it will be detected as inactive and not included in MIMO demodulation processing.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:ANTenna:PORT:THReshold <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:ANTenna:PORT:THReshold?</code>
Example	<code>:EVM:CCAR0:PDSC1:ANT:PORT:THR 0</code> <code>:EVM:CCAR0:PDSC1:ANT:PORT:THR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-36 dB
State Saved	Yes
Min	-100
Max	100

Antenna Port Index

Specifies Antenna Port Index for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:ANTenna:PORT:INDeX <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:ANTenna:PORT:INDeX?</code>
Example	<code>:EVM:CCAR0:PDSC1:ANT:PORT:IND 1</code> <code>:EVM:CCAR0:PDSC1:ANT:PORT:IND?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Range	It is coupled with DMRS Config Type, DMRS Max Len . See table 7.3.1.2.2-1, 7.3.1.2.2-2, 7.3.1.2.2-3, 7.3.1.2.2-4 in 3GPP TS38.212
Min	-1
Max	63

Table 7.3.1.2.2-1: Antenna port(s) (1000 + DMRS port), DL-DMRS-config-type=1, DL-DMRS-max-len = 1

One Codeword:

Codeword 0 enabled,

Codeword 1 disabled

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	1	0
1	1	1
2	1	0,1
3	2	0

4	2	1
5	2	2
6	2	3
7	2	0,1
8	2	2,3
9	2	0-2
10	2	0-3
11	2	0,2
12-15	Reserved	Reserved

Table 7.3.1.2.2-2: Antenna port(s) (1000 + DMRS port), DL-DMRS-config-type=1, DL-DMRS-max-len = 2

One Codeword: Codeword 0 enabled, Codeword 1 disabled				Two Codewords: Codeword 0 enabled, Codeword 1 enabled			
Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front- load symbols	Value	Number of DMRS CDM group(s) without data	DMRS port (s)	Number of front- load symbols
0	1	0	1	0	2	0-4	2
1	1	1	1	1	2	0,1,2,3,4,6	2
2	1	0,1	1	2	2	0,1,2,3,4,5,6	2
3	2	0	1	3	2	0,1,2,3,4,5,6 ,7	2
4	2	1	1	4-31	reserved	reserved	reserved
5	2	2	1				
6	2	3	1				
7	2	0,1	1				
8	2	2,3	1				
9	2	0-2	1				
10	2	0-3	1				
11	2	0,2	1				
12	2	0	2				
13	2	1	2				
14	2	2	2				
15	2	3	2				

3 5G NR Mode

3.7 Modulation Analysis Measurement

16	2	4	2
17	2	5	2
18	2	6	2
19	2	7	2
20	2	0,1	2
21	2	2,3	2
22	2	4,5	2
23	2	6,7	2
24	2	0,4	2
25	2	2,6	2
26	2	0,1,4	2
27	2	2,3,6	2
28	2	0,1,4,5	2
29	2	2,3,6,7	2
30	2	0,2,4,6	2
31	Reserved	Reserved	Reserved

Table 7.3.1.2.2-3: Antenna port(s) (1000 + DMRS port), DL-DMRS-config-type=2, DL-DMRS-max-len = 1

One codeword: Codeword 0 enabled, Codeword 1 disabled			Two codewords: Codeword 0 enabled, Codeword 1 enabled		
Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Value	Number of DMRS CDM group(s) without data	DMRS port (s)
0	1	0	0	3	0-4
1	1	1	1	3	0-5
2	1	0,1	2-31	reserved	reserved
3	2	0			
4	2	1			
5	2	2			
6	2	3			
7	2	0,1			
8	2	2,3			
9	2	0-2			
10	2	0-3			

11	3	0
12	3	1
13	3	2
14	3	3
15	3	4
16	3	5
17	3	0,1
18	3	2,3
19	3	4,5
20	3	0-2
21	3	3-5
22	3	0-3
23	2	0,2
24-31	Reserved	Reserved

Table 7.3.1.2.2-4: Antenna port(s) (1000 + DMRS port), DL-DMRS-config-type=2, DL-DMRS-max-len = 2

One codeword: Codeword 0 enabled, Codeword 1 disabled				Two Codewords: Codeword 0 enabled, Codeword 1 enabled			
Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front- load symbols	Value	Number of DMRS CDM group(s) without data	DMRS port (s)	Number of front- load symbols
0	1	0	1	0	3	0-4	1
1	1	1	1	1	3	0-5	1
2	1	0,1	1	2	2	0,1,2,3,6	2
3	2	0	1	3	2	0,1,2,3,6,8	2
4	2	1	1	4	2	0,1,2,3,6,7,8	2
5	2	2	1	5	2	0,1,2,3,6,7,8 ,9	2
6	2	3	1	6-63	Reserved	Reserved	Reserved
7	2	0,1	1				
8	2	2,3	1				
9	2	0-2	1				
10	2	0-3	1				

3 5G NR Mode

3.7 Modulation Analysis Measurement

11	3	0	1
12	3	1	1
13	3	2	1
14	3	3	1
15	3	4	1
16	3	5	1
17	3	0,1	1
18	3	2,3	1
19	3	4,5	1
20	3	0-2	1
21	3	3-5	1
22	3	0-3	1
23	2	0,2	1
24	3	0	2
25	3	1	2
26	3	2	2
27	3	3	2
28	3	4	2
29	3	5	2
30	3	6	2
31	3	7	2
32	3	8	2
33	3	9	2
34	3	10	2
35	3	11	2
36	3	0,1	2
37	3	2,3	2
38	3	4,5	2
39	3	6,7	2
40	3	8,9	2
41	3	10,11	2
42	3	0,1,6	2
43	3	2,3,8	2
44	3	4,5,10	2
45	3	0,1,6,7	2
46	3	2,3,8,9	2
47	3	4,5,10,1	2
		1	

48	1	0	2
49	1	1	2
50	1	6	2
51	1	7	2
52	1	0,1	2
53	1	6,7	2
54	2	0,1	2
55	2	2,3	2
56	2	6,7	2
57	2	8,9	2
58-63	Reserved	Reserved	Reserved

DMRS Port (Display Only)

Display available DMRS Ports according to Antenna Port Index for the selected PDSCH configuration.

Codewords Number

Specifies Number of Codewords for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:CWORD:NUMBER <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:CWORD:NUMBER?</code>
Example	<code>:EVM:CCAR0:PDSC1:CWOR:NUMB 2</code> <code>:EVM:CCAR0:PDSC1:CWOR:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When DMRS Configuration is Type 1, 2 is only available when DMRS Max Len is 2 There is no limitation when DMRS Configuration is Type 2
Preset	1
State Saved	Yes
Range	1 2
Min	1
Max	2

DMRS CDM group w.o. data

Specifies DMRS CDM groups without data for the selected PDSCH configuration.

3 5G NR Mode

3.7 Modulation Analysis Measurement

It is coupled with DMRS Config Type, DMRS Max Len . See table 7.3.1.2.2-1, 7.3.1.2.2-2, 7.3.1.2.2-3, 7.3.1.2.2-4 in 3GPP TS38.212. The column “Number of DMRS CDM group(s) without data” specifies the value for this result.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:CDMGroups:COUNt <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:CDMGroups:COUNt?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:CDMG:COUN 2</code> <code>:EVM:CCAR0:PDSC1:DMRS:CDMG:COUN?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message When Antenna Port Index is -1, this parameter become settable, you need to make sure valid setting according TS38.212 table 7.3.1.2.2-1 to table 7.3.1.2.2-4, otherwise demodulation may not work When Antenna Port Index is not -1, this parameter is display only, the value will be set automatically according to Antenna Port Index and TS38.212 table 7.3.1.2.2-1 to table 7.3.1.2.2-4
Preset	1
State Saved	Yes
Min	1
Max	2 for DMRS Config Type 1, 3 for DMRS Config Type 2

DMRS-DL-Alt

Indicates whether the 5GNR UE supports the alternative additional DMRS position for co-existence with LTE CRS

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:DALT OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:DMRS:DALT?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:DALT OFF</code> <code>:EVM:CCAR0:PDSC1:DMRS:DALT?</code>
Couplings	Max value for n = 250 and Min value for n = 1
Preset	OFF
State Saved	Yes

PTRS Enable

Enable or disable PTRS for selected PDSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:PTRS[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:PTRS[:STATe]?</code>
Example	<code>:EVM:CCAR0:PDSC1:PTRS OFF</code> <code>:EVM:CCAR0:PDSC1:PTRS?</code>

Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

PTRS K

Specifies PTRS frequency density (K_PTRS) for selected PDSCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:K K2 K4 [:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:K?
Example	:EVM:CCAR0:PDSC1:PTRS:K K2 :EVM:CCAR0:PDSC1:PTRS:K?
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	K2
State Saved	Yes
Range	2 4

PTRS L

Specifies PTRS time density (L_PTRS) for selected PDSCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:L L1 L2 L4 [:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:L?
Example	:EVM:CCAR0:PDSC1:PTRS:L L2 :EVM:CCAR0:PDSC1:PTRS:L?
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	L1
State Saved	Yes
Range	1 2 4

PTRS RE Offset

Specifies PTRS RE Offset for selected PDSCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:RE:OFFSet BIT00 BIT01 BIT10 BIT11
----------------	--

	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PTRS:RE:OFFSet?</code>
Example	<code>:EVM:CCAR0:PDSC1:PTRS:RE:OFFS BIT00</code> <code>:EVM:CCAR0:PDSC1:PTRS:RE:OFFS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>BIT00</code>
State Saved	Yes
Range	00 01 10 11

PDSCH Power Boosting

Specifies Power Boost value for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PDSC1:POW 0</code> <code>:EVM:CCAR0:PDSC1:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:DMRS:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:POW 0</code> <code>:EVM:CCAR0:PDSC1:DMRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message It is coupled with "PDSCH DMRS CDM group w.O. data" $\text{dmrsBoostingValue} = 10 * (1.0 - \text{Math.Log}(\text{DrmsCdmGroup}))$
Preset	0 dB
State Saved	Yes

Min	-100
Max	100

PTRS Power Boosting

Specifies PTRS Power Boost value for the selected PDSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:PTRS:POWer?</code>
Example	<code>:EVM:CCAR0:PDSC1:PTRS:POW 0</code> <code>:EVM:CCAR0:PDSC1:PTRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

Precoder Matrix (Downlink)

View and configure the Precoder Matrix parameters.

Reset Selected (GUI only)

Reset W matrix for selected precoder block.

Reset All (GUI only)

Reset W matrix for all precoder blocks.

Reset Matrix (Remote Command only)

Resets the specified precoder matrix. To reset *all* matrices, specify the value -1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch1 250:PMATrix:RESet<integer></code>
Example	<code>:EVM:CCAR0:PDSC1:PMAT:RES 2</code>
State Saved	Yes

Min	-1
Max	PRBG number of each PDSCH allocation

PDSCH (GUI only)

Allows you to choose the PDSCH allocation to configure its W Matrix

"W Matrix" on page 2035 "I Value (GUI only)" on page 2035 "Q Value (GUI only)" on page 2035

W Matrix

Specifies the W Matrix for selected precoder block.

Example: 1,1,0,0,0,0,1,1 represent below matrix

$1+j, 0$

$0, 1+j$

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:PMATrix:PBGroup<m> <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:PMATrix:PBGroup<m>?</code>
Example	<code>:EVM:CCAR0:PDSC1:PMAT:PBG1 "1,0,0,0,1,0,0,0"</code> <code>:EVM:CCAR0:PDSC1:PMAT:PBG1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 275 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
State Saved	Yes I Value (GUI only) Specifies I value for selected W matrix cell.
Preset	0.0
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37 Q Value (GUI only) Specifies Q value for selected W matrix cell.
Preset	0.0
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Rate Matching Pattern (Downlink)

View and configure the Rate Matching Pattern parameters.

Add Rate Matching Pattern (GUI only)

Inserts a new PDSCH Rate Matching Pattern into list. The maximum number of PDSCH Rate Matching Pattern is 8.

Delete Rate Matching Pattern

Deletes the selected PDSCH Rate Matching Pattern from list.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:PDSch1 250:RMPattern:DELeTe <integer></code>
Example	<code>:EVM:CCAR0:PDSCh1:RMP:DEL 1</code>

Clear All (GUI only)

Deletes *all* PDSCH Rate Matching Patterns from list.

For a remote command that provides a similar function, see ["Effective PDSCH Number \(Remote Command only\)" on page 2002](#).

Effective Rate Matching Pattern (Remote Command only)

Specifies how many PDSCH Rate Matching Patterns are effective. This remote command provides similar functionality to “Add Rate Matching Pattern” and “Delete Rate Matching Pattern”.

Note that all 8 PDSCH Rate Matching Patterns can be modified through SCPI, but ineffective PDSCH Rate Matching Pattern (index > Effective PDSCH Rate Matching Pattern Number) will not be included in the measurement, no matter whether it is “On” or “Off”.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern:NUMBer <integer></code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern:NUMBer?</code>
Example	<code>:EVM:CCAR0:PDSCh1:RMP:NUMB 2</code> <code>:EVM:CCAR0:PDSCh1:RMP:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

Preset	0
State Saved	Yes
Min	0
Max	8

PDSCH (GUI only)

Allows you to choose the PDSCH allocation to configure its Rate Matching Pattern.

"State" on page 2037 "Level" on page 2037 "SCS" on page 2038 "RB Bitmap Index" on page 2038
"Symbol Bitmap Span" on page 2038 "Symbol Bitmap" on page 2039 "Periodicity" on page 2039 "Periodicity Pattern Bitmap" on page 2039

State

Enables or disables the selected PDSCH Rate Matching Pattern.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RMPattern<m>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RMPattern<m>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1 OFF</code> <code>:EVM:CCAR0:PDSC1:RMP1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

Level

Selects the level for PDSCH Rate Matching Pattern.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RMPattern<m>:LEVe1 BWP CELL</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSC<n>:RMPattern<m>:LEVe1?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1:LEV CELL</code> <code>:EVM:CCAR0:PDSC1:RMP1:LEV?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	BWP
State Saved	Yes
Range	BWP Cell

SCS

Specifies the SCS for PDSCH Rate Matching Pattern when Level = Cell Level. Only valid SCSs with the Freq Range are available.

- For Freq Range 1: SCS15K, SCS30K and SCS60K
- For Freq Range 2: SCS60K, SCS120K and SCS240K

When Level = BWP level, SCS is same as PDSCH allocation selected.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:SCS SCS15K SCS30K SCS60K SCS120K SCS240K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:SCS?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1:SCS SCS30K</code> <code>:EVM:CCAR0:PDSC1:RMP1:SCS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>SCS30K</code>
State Saved	Yes
Range	<code>15K 30K 60K 120K 240K</code>

RB Bitmap Index

Specifies the RB Bitmap Index to selected PDSCH Rate Matching Pattern

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:RB:INdex <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:RB:INdex?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1:RB:IND "0:272"</code> <code>:EVM:CCAR0:PDSC1:RMP1:RB:IND?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>"0:272"</code>
State Saved	Yes

Symbol Bitmap Span

Selects the Symbol Bitmap Span for PDSCH Rate Matching Pattern.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:SYMBol:BSpan SLOT1 SLOT2</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:SYMBol:BSpan?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1:SYMB:BSpan SLOT1</code> <code>:EVM:CCAR0:PDSC1:RMP1:SYMB:BSpan?</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	One Slot
State Saved	Yes
Range	One Slot Two Slots Symbol Bitmap Specifies the Symbol Bitmap for the selected PDSCH Rate Matching Pattern. The length should match the Symbol Bitmap Span: <ul style="list-style-type: none"> – 14 bit when Symbol Bitmap Span = One Slot – 28 bit when Symbol Bitmap Span = Two Slots
Remote Command	<pre>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:RMPattern<m>:SYMBOL:BITMap <string></pre> <pre>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:RMPattern<m>:SYMBOL:BITMap?</pre>
Example	<pre>:EVM:CCAR0:PDSC1:RMP1:SYMB:BITM "0000"</pre> <pre>:EVM:CCAR0:PDSC1:RMP1:SYMB:BITM?</pre>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"0000"
State Saved	Yes Periodicity Selects the Periodicity for Symbol Bitmap
Remote Command	<pre>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:RMPattern<m>:PERiodicity <int></pre> <pre>[:SENSe]:EVM:CCARrier0 ... 15:PDSCn>:RMPattern<m>:PERiodicity?</pre>
Example	<pre>:EVM:CCAR0:PDSC1:RMP1:PER 5</pre> <pre>:EVM:CCAR0:PDSC1:RMP1:PER?</pre>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message Note that if an invalid value is entered, it will be automatically adjusted
Preset	1
State Saved	Yes
Range	1 2 4 5 8 10 20 40 Periodicity Pattern Bitmap

Specifies the Periodicity Pattern Bitmap to selected PDSCH Rate Matching Pattern. The length should match the Periodicity.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:PERiodicity:BITMap <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSch<n>:RMPattern<m>:PERiodicity:BITMap?</code>
Example	<code>:EVM:CCAR0:PDSC1:RMP1:PER:BITM "1"</code> <code>:EVM:CCAR0:PDSC1:RMP1:PER:BITM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"1"
State Saved	Yes

CSI-RS

View and configure the CSI-RS parameters.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See ["Resource Map Diagram" on page 1960](#).

Add CSI-RS (GUI only)

Pressing this control inserts a new CSI-RS configuration into list, the maximum number of CSI-RS configurations is 8.

See ["Effective CSI-RS Number \(Remote Command only\)" on page 2041](#) for SCPI to provide similar function.

Delete CSI-RS

Pressing this control deletes selected CSI-RS configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:CSIRs <integer></code>
Example	<code>:EVM:CCAR0:DEL:CSIR 1</code>

Clear All (GUI only)

Pressing this control deletes all CSI-RS configuration from list.

See ["Effective CSI-RS Number \(Remote Command only\)" on page 2041](#) for SCPI to provide similar function.

Effective CSI-RS Number (Remote Command only)

Specifies how many CSI-RS configurations are effective, this SCPI only command is used to provide similar function as “Add CSI-RS” and “Delete CSI-RS”.

Note all 8 CSI-RS configurations can be modified through SCPI, but ineffective CSI-RS configurations (index > CSI-RS Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:CSIRs <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:CSIRs?</code>
Example	<code>:EVM:CCAR0:NUMB:CSIR 2</code> <code>:EVM:CCAR0:NUMB:CSIR?</code>
Preset	1
State Saved	Yes
Min	0
Max	8

CSI-RS Parameter Group (Display only)

Allows you to configure the allocation and power parameters for CSI-RS.

This control is for UI display only.

General Settings

"State" on page 2042	"Zero Power" on page 2042	"n_ID" on page 2042	"Power Boosting" on page 2043
--------------------------------------	---	-------------------------------------	---

Resource Allocation

"State" on page 2042	"BWP" on page 2043	"RB Offset" on page 2043	"RB Number" on page 2044	"Allocated Slots" on page 2044
"First Symbol" on page 2045	"First Symbol 2" on page 2045	"Freq Domain Bitmap" on page 2045	"Resource Element used for PDSCH" on page 2046	

Antenna Settings

"State" on page 2042	"Location Table Index" on page 2047	"Number of Antenna Ports" on page 2048	"Antenna Port" on page 2049	"Antenna Port Detection Threshold" on page 2049
"CDM	"Density" on page			

Type 2050
(Display
Only)" on
page
2049

State

Enable or disable CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:STATe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:STATe?</code>
Example	<code>:EVM:CCAR0:CSIR1:STAT OFF</code> <code>:EVM:CCAR0:CSIR1:STAT?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

Zero Power

Enable or disable zero power mode of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ZPOWer OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ZPOWer?</code>
Example	<code>:EVM:CCAR0:CSIR1:ZPOW OFF</code> <code>:EVM:CCAR0:CSIR1:ZPOW?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

n_ID

Specifies the user n_ID of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:NID <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:NID?</code>
Example	<code>:EVM:CCAR0:CSIR1:NID 1</code> <code>:EVM:CCAR0:CSIR1:NID?</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	65535

Power Boosting

Specifies Power Boost value for the CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:POWer?</code>
Example	<code>:EVM:CCAR0:CSIR1:POW 0</code> <code>:EVM:CCAR0:CSIR1:POW?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

BWP

Specifies the BWP of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:BWP BWP0 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:BWP?</code>
Example	<code>:EVM:CCAR0:CSIR1:BWP BWP1</code> <code>:EVM:CCAR0:CSIR1:BWP?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	BWP1
State Saved	Yes
Range	Initial BWP BWP1 BWP2 BWP3 BWP4

RB Offset

Specifies the RB Offset of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:CSIR1:RB:OFFSet 0</code> <code>:EVM:CCAR0:CSIR1:RB:OFFSet?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	RB Number of selected BWP – CSI-RS RB Number

RB Number

Specifies the RB Number of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:CSIR1:RB:NUMB 272</code> <code>:EVM:CCAR0:CSIR1:RB:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message This value must be a multiple of 4
Preset	272
State Saved	Yes
Min	1
Max	RB Number of selected BWP (must be a multiple of 4)

Allocated Slots

Specifies the Slots allocated to CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SLOT:ALLocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SLOT:ALLocated?</code>
Example	<code>:EVM:CCAR0:CSIR1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:CSIR1:SLOT:ALL?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"2"
State Saved	Yes

First Symbol

Specifies the start symbol of the first CDM group of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SYMBOL:FIRSt[:ONE] <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SYMBOL:FIRSt[:ONE]?</code>
Example	<code>:EVM:CCAR0:CSIR1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:CSIR1:SYMB:FIRS?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	12
State Saved	Yes
Min	0
Max	13

First Symbol 2

Specifies the start symbol of the second CDM group of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs1 8:SYMBOL:FIRSt:TWO <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs1 8:SYMBOL:FIRSt:TWO?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SYMBOL:FIRSt:TWO <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:SYMBOL:FIRSt:TWO?</code>
Example	<code>:EVM:CCAR0:CSIR1:SYMB:FIRS:TWO 4</code> <code>:EVM:CCAR0:CSIR1:SYMB:FIRS:TWO?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message This parameter is only visible when Row Index of CSI-RS Location Table is 13/14/16/17. Also the First symbol – First symbol 2 >= 2
Preset	10
State Saved	Yes
Min	2
Max	12

Freq Domain Bitmap

Specifies the frequency domain allocation bitmap of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:FREQuency:BITMap <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:FREQuency:BITMap?</code>
Example	<code>:EVM:CCAR0:CSIR1:FREQ:BITM "001"</code> <code>:EVM:CCAR0:CSIR1:FREQ:BITM?</code>
Couplings	<p>Max value for n=8 and Min value for n = 1</p> <p>Attempting to remotely set or query a sub-opcode that is out of range results in an error message</p> <p>The setting is coupled with Location Table Index. See Table 7.4.1.5.3-1 in TS38.211</p> <ul style="list-style-type: none"> – if the index = 1, The bitmap length = 4 – if the index = 2, The bitmap length = 12 – if the index = 4, The bitmap length = 3 – else, bitmap length = 6 <p>For the bitmap, the occurrence of '1' should meet the minimum requirements (indexed by location table index):</p> <pre>\{1, 1, 1, 1, 1, 4, 2, 2, 6, 3, 4, 4, 3, 3, 3, 4, 4, 4\}</pre> <p>If the bitmap is invalid, the default bitmap will apply. The default bitmap is also determined by the location table index:</p> <ul style="list-style-type: none"> – Length is the bitmap length – Contains minimum '1's
Preset	"001"
State Saved	Yes

Resource Element used for PDSCH

Sets whether the resource elements assigned to CSI-RS can be used for PDSCH if CSI-RS collides with PDSCH.

- **ON** - PDSCH will be mapped to the resource element and CSI-RS will overwrite the values
- **OFF** - PDSCH will not be mapped to the resource elements

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:REUSed:PDSCh OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:REUSed:PDSCh?</code>
Example	<code>:EVM:CCAR0:CSIR1:REUS:PDSC OFF</code> <code>:EVM:CCAR0:CSIR1:REUS:PDSC?</code>
Couplings	<p>Max value for n = 8 and Min value for n = 1</p> <p>Attempting to remotely set or query a sub-opcode that is out of range results in an error message</p>

Preset	OFF
State Saved	Yes

Location Table Index

Specifies Location Table (Table 7.4.1.5.3-1 in TS38.211) Index for the selected CSI-RS configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:TABLe:INDex <int> [:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:TABLe:INDex?
Example	:EVM:CCAR0:CSIR1:TABL:IND 1 :EVM:CCAR0:CSIR1:TABL:IND?
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	4
State Saved	Yes
Min	1
Max	18

Table 7.4.1.5.3-1: CSI-RS locations within a slot.

Row	Ports	Density ρ	CDMtype	(\tilde{k}, \tilde{l})	CDM group index j	\tilde{k}'	\tilde{l}'
1	1	3	No CDM	$(\tilde{k}_0, l_0), (\tilde{k}_0 + 4, l_0), (\tilde{k}_0 + 8, l_0)$	0,0,0	0	0
2	1	1, 0.5	No CDM	(\tilde{k}_0, l_0)	0	0	0
3	2	1, 0.5	FD-CDM2	(\tilde{k}_0, l_0)	0	0, 1	0
4	4	1	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_0 + 2, l_0)$	0,1	0, 1	0
5	4	1	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_0, l_0 + 1)$	0,1	0, 1	0
6	8	1	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0)$	0,1,2,3	0, 1	0
7	8	1	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_0, l_0 + 1), (\tilde{k}_1, l_0 + 1)$	0,1,2,3	0, 1	0
8	8	1	CDM4 (FD2,TD2)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0)$	0,1	0, 1	0, 1
9	12	1	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0), (\tilde{k}_4, l_0), (\tilde{k}_5, l_0)$	0,1,2,3,4,5	0, 1	0
10	12	1	CDM4 (FD2,TD2)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0)$	0,1,2	0, 1	0, 1
11	16	1, 0.5	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0),$ $(\tilde{k}_0, l_0 + 1), (\tilde{k}_1, l_0 + 1), (\tilde{k}_2, l_0 + 1), (\tilde{k}_3, l_0 + 1)$	0,1,2,3, 4,5,6,7	0, 1	0
12	16	1, 0.5	CDM4 (FD2,TD2)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0)$	0,1,2,3	0, 1	0, 1
13	24	1, 0.5	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_0, l_0 + 1), (\tilde{k}_1, l_0 + 1), (\tilde{k}_2, l_0 + 1),$ $(\tilde{k}_0, l_1), (\tilde{k}_1, l_1), (\tilde{k}_2, l_1), (\tilde{k}_0, l_1 + 1), (\tilde{k}_1, l_1 + 1), (\tilde{k}_2, l_1 + 1)$	0,1,2,3,4,5, 6,7,8,9,10,11	0, 1	0
14	24	1, 0.5	CDM4 (FD2,TD2)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_0, l_1), (\tilde{k}_1, l_1), (\tilde{k}_2, l_1)$	0,1,2,3,4,5	0, 1	0, 1
15	24	1, 0.5	CDM8 (FD2,TD4)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0)$	0,1,2	0, 1	0, 1, 2, 3
16	32	1, 0.5	FD-CDM2	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0),$ $(\tilde{k}_0, l_0 + 1), (\tilde{k}_1, l_0 + 1), (\tilde{k}_2, l_0 + 1), (\tilde{k}_3, l_0 + 1),$ $(\tilde{k}_0, l_1), (\tilde{k}_1, l_1), (\tilde{k}_2, l_1), (\tilde{k}_3, l_1),$ $(\tilde{k}_0, l_1 + 1), (\tilde{k}_1, l_1 + 1), (\tilde{k}_2, l_1 + 1), (\tilde{k}_3, l_1 + 1)$	0,1,2,3, 4,5,6,7, 8,9,10,11, 12,13,14,15	0, 1	0
17	32	1, 0.5	CDM4 (FD2,TD2)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0), (\tilde{k}_0, l_1), (\tilde{k}_1, l_1), (\tilde{k}_2, l_1), (\tilde{k}_3, l_1)$	0,1,2,3,4,5,6,7	0, 1	0, 1
18	32	1, 0.5	CDM8 (FD2,TD4)	$(\tilde{k}_0, l_0), (\tilde{k}_1, l_0), (\tilde{k}_2, l_0), (\tilde{k}_3, l_0)$	0,1,2,3	0,1	0,1, 2, 3

Number of Antenna Ports

Specifies number of candidate CSI-RS ports to accelerate measurement speed in MIMO mode.

Remote Command	<code>[:SENSE]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT:NUMBer <integer></code> <code>[:SENSE]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT:NUMBer?</code>
Example	<code>:EVM:CCAR0:CSIR:ANT:PORT:NUMB 1</code> <code>:EVM:CCAR0:CSIR:ANT:PORT:NUMB?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message The range is coupled with Location Table Index. See Table 7.4.1.5.3-1 in TS38.211
Preset	Depends on MIMO state and Location Table Index
State Saved	Yes
Min	1
Max	Depends on MIMO state and Location Table Index

Antenna Port

Specifies the Antenna Port of CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:CSIR:ANT:PORT 3000</code> <code>:EVM:CCAR0:CSIR:ANT:PORT?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message The range is coupled with Location Table Index. See Table 7.4.1.5.3-1 in TS38.211
Preset	3000
State Saved	Yes
Min	3000
Max	3031

Antenna Port Detection Threshold

Specifies the threshold for Antenna Port Detection. When the power of one port is lower than the threshold compared to the reference port, it will be detected as inactive and not included in MIMO demodulation processing.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT:THReshold <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:ANTenna:PORT:THReshold?</code>
Example	<code>:EVM:CCAR0:CSIR1:ANT:PORT:THR 0</code> <code>:EVM:CCAR0:CSIR1:ANT:PORT:THR?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-36 dB
State Saved	Yes
Min	-100
Max	100

CDM Type (Display Only)

Displays the CDM type (according to "Location Table Index" on page 2047) for the selected CSI-RS configuration.

Density

Specifies the density of CSI-RS configuration (according to ["Location Table Index" on page 2047](#)).

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:DENSity EHALf OHALf ONE THRee</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:DENSity?</code>
Example	<code>:EVM:CCAR0:CSIR1:DENS ONE</code> <code>:EVM:CCAR0:CSIR1:DENS?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message The range is coupled with Location Table Index. See Table 7.4.1.5.3-1 in TS38.211 <ul style="list-style-type: none"> - If index = 1, the value is fixed to 'THRee' - If index >= 4 && index <= 10, the value is fixed to 'ONE'
Preset	<code>ONE</code>
State Saved	Yes

RIM-RS

Allows you to view and configure the RIM-RS parameters.

Add RIM-RS (GUI only)

Inserts a new RIM-RS configuration into list, the maximum number of RIM-RS configurations is 8.

For details of the equivalent remote command, see ["Effective CSI-RS Number \(Remote Command only\)" on page 2041](#).

Delete RIM-RS

Deletes selected RIM-RS configuration from list.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:RIMRs <integer></code>
Example	<code>:EVM:CCAR0:DEL:RIMR 1</code>

Clear All (GUI only)

Deletes all RIM-RS configuration from list.

For details of the equivalent remote command, see ["Effective CSI-RS Number \(Remote Command only\)" on page 2041](#).

Effective RIM-RS Number (Remote Command only)

Specifies how many RIM-RS configurations are effective. This command is equivalent to the controls “Add RIM-RS” and “Delete RIM-RS”.

Note that all 8 RIM-RS configurations can be modified through SCPI, but ineffective RIM-RS configurations (index > RIM-RS Number) will not be included in the measurement irrespective of whether its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:RIMRs <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:RIMRs?</code>
Example	<code>:EVM:CCAR0:NUMB:RIMR 2</code> <code>:EVM:CCAR0:NUMB:RIMR?</code>
Preset	1
State Saved	Yes
Min	0
Max	8

RIM-RS Parameter Group (Display only)

Allows you to configure the allocation and power parameters for RIM-RS.

General Settings

["State" on page 2051](#) ["Power Boosting" on page 2052](#)

Resource Allocation

"State" on page 2051	"BWP" on page 2052	"RB Offset" on page 2053	"RB Number" on page 2053	"Allocated Slots" on page 2053	"First Symbol" on page 2054
--------------------------------------	------------------------------------	--	--	--	---

Sequence Generation

"State" on page 2051	"n_SCID" on page 2054	"Sequence Generation Transmission Periods (n_t_RIM)" on page 2055 "RB Offset" on page 2043	"Sequence Generation Multiple Factor" on page 2055	"Sequence Generation Offset" on page 2055
--------------------------------------	---------------------------------------	---	--	---

This control is for UI display only.

State

Enables or disables RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:STATe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:STATe?</code>
Example	<code>:EVM:CCAR0:RIMR1:STAT OFF</code> <code>:EVM:CCAR0:RIMR1:STAT?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

Power Boosting

Specifies Power Boost value for the RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:POWer?</code>
Example	<code>:EVM:CCAR0:RIMR1:POW 0</code> <code>:EVM:CCAR0:RIMR1:POW?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

BWP

Specifies the BWP of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:BWP BWP0 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:BWP?</code>
Example	<code>:EVM:CCAR0:RIMR1:BWP BWP1</code> <code>:EVM:CCAR0:RIMR1:BWP?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	BWP1
State Saved	Yes
Range	Initial BWP BWP 01 BWP 02 BWP 03 BWP 04

Allocated Slots

Specifies the Slots allocated to RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SLOT:ALlocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SLOT:ALlocated?</code>
Example	<code>:EVM:CCAR0:RIMR1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:RIMR1:SLOT:ALL?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"0"
State Saved	Yes

RB Offset

Specifies the RB Offset of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:RIMR1:RB:OFFSet 0</code> <code>:EVM:CCAR0:RIMR1:RB:OFFSet?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	RB Number of selected BWP – RIM-RS RB Number

RB Number

Specifies the RB Number of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:RIMR1:RB:NUMB 272</code> <code>:EVM:CCAR0:RIMR1:RB:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message

	This value must be a multiple of 4
Preset	273
State Saved	Yes
Min	1
Max	RB Number of selected BWP (must be a multiple of 4)

First Symbol

Specifies the start symbol of the RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SYMBOL:FIRSt[:ONE] <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SYMBOL:FIRSt[:ONE]?</code>
Example	<code>:EVM:CCAR0:RIMR1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:RIMR1:SYMB:FIRS?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	13

n_SCID

Specifies the user n_SCID of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SCIDn <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SCIDn?</code>
Example	<code>:EVM:CCAR0:RIMR1:SCID 1</code> <code>:EVM:CCAR0:RIMR1:SCID?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	1023

Sequence Generation Transmission Periods (n_t_RIM)

Specifies the sequence generation n_t_RIM number of transmission periods of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:TPERiod <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:TPERiod?</code>
Example	<code>:EVM:CCAR0:RIMR1:SEQ:TPER 1</code> <code>:EVM:CCAR0:RIMR1:SEQ:TPER?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	2e31 - 1

Sequence Generation Multiple Factor

Specifies the sequence generation multiple factor of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:MFACTOR <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:MFACTOR?</code>
Example	<code>:EVM:CCAR0:RIMR1:SEQ:MFAC 1</code> <code>:EVM:CCAR0:RIMR1:SEQ:MFAC?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	2e31 - 1

Sequence Generation Offset

Specifies the sequence generation offset of RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:OFFSet <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:SEQuence:OFFSet?</code>
Example	<code>:EVM:CCAR0:RIMR1:SEQ:OFFS 1</code>

	<code>:EVM:CCAR0:RIMR1:SEQ:OFFS?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	2e31 - 1

PUCCH

View and configure the PUCCH parameters.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See ["Resource Map Diagram" on page 1960](#).

Add PUCCH (GUI only)

Pressing this control inserts a new PUCCH configuration into list, the maximum number of PUCCH configurations is 16.

See ["Effective PUCCH Number \(Remote Command only\)" on page 2057](#) for SCPI to provide similar function.

Delete PUCCH

Pressing this control deletes selected PUCCH configuration from list.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PUCCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PUCCh 1</code>

Clear All (GUI only)

Pressing this control deletes all PUCCH configuration from list.

See ["Effective PUCCH Number \(Remote Command only\)" on page 2057](#) for SCPI to provide similar function.

Effective PUCCH Number (Remote Command only)

Specifies how many PUCCH configurations are effective, this SCPI only command is used to provide similar function as “Add PUCCH” and “Delete PUCCH”.

Note all 16 PUCCH configurations can be modified through SCPI, but ineffective PUCCH configurations (index > Effective PUCCH Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PUCCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PUCCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PUCc 2</code> <code>:EVM:CCAR0:NUMB:PUCc?</code>
Couplings	Max value is 16 If you attempt to remotely set the Count larger than 16, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	16

PUCCH Parameter Group (Display only)

Allows you to configure the PUCCH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings

"State" on page 2058	"Format" on page 2058	"Multiplex" on page 2061	"n_RN TI" on page 2061
"Modulation" on page 2065	"Power Boosting" on page 2065	"Antenna Port" on page 2064	

Resource Allocation

"State" on page 2058	"Format" on page 2058	"BWP" on page 2059	"Interlaced Transmission" on page 2059	"RB Set Index" on page 2059	"Interlace 0" on page 2060
----------------------	-----------------------	--------------------	--	-----------------------------	----------------------------

"Interlace1" on page 2060	"RB Offset" on page 2062	"RB Number" on page 2062	"Allocated Slots" on page 2063	"First Symbol" on page 2063	"Last Symbol" on page 2064
DMRS Settings					
"State" on page 2058		"Format" on page 2058	"Additional DMRS" on page 2070		"Scrambling ID" on page 2070
"DMRSuplinkTPPUCCH-r16" on page 2071		"N_ID_0" on page 2070	"DMRS Power Boosting" on page 2071		
PUCCH Settings					
"State" on page 2058	"Format" on page 2058	"Group Hopping" on page 2067	"Hopping ID" on page 2067	"Intra-Slot Frequency Hopping" on page 2069	
"Second hop RB Offset" on page 2062	"Initial Cyclic Shift (m0)" on page 2065	"Cyclic Shift MCS" on page 2066	"OCC Index" on page 2068	"OCC Length" on page 2068	
"PUCCH UCI Size" on page 2069					

State

Enable or disable PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUC1 OFF</code> <code>:EVM:CCAR0:PUC1?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

Format

Specifies the format of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:FORMat F0 ... F4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:FORMat?</code>
Example	<code>:EVM:CCAR0:PUC1:FORM F0</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<code>:EVM:CCAR0:PUC1:FORM?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>F0</code>
State Saved	Yes
Range	<code>0 1 2 3 4</code>

BWP

Specifies the BWP of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:BWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PUC1:BWP BWP1</code> <code>:EVM:CCAR0:PUC1:BWP?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>BWP1</code>
State Saved	Yes
Range	<code>BWP 01 BWP 02 BWP 03 BWP 04</code>

Interlaced Transmission

Enable or disable Interlaced Transmission for 15K/30K SCS

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUC1:INT OFF</code> <code>:EVM:CCAR0:PUC1:INT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 This key is only available for 15kHz or 30kHz SCS, and with valid Intra-Cell Guard Band setting Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>OFF ON</code>

RB Set Index

Set the RB-Set Index to be used for PUCCH transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:RBSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:RBSet?</code>
Example	<code>:EVM:CCAR0:PUCC1:INT:RBS 0</code> <code>:EVM:CCAR0:PUCC1:INT:RBS?</code>
Couplings	Max value for n = 16 and Min value for n = 1 This key is only available when Interlaced Transmission is ON Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	Depends on the number of RB-sets of current carrier

Interlace0

Set the Interlace0 for Interlaced transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:ZERO <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:ZERO?</code>
Example	<code>:EVM:CCAR0:PUCC1:INT:ZERO 0</code> <code>:EVM:CCAR0:PUCC1:INT:ZERO?</code>
Couplings	Max value for n = 16 and Min value for n = 1 This key is only available when Interlaced Transmission is ON Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	9 for 15kHz SCS 4 for 30kHz SCS

Interlace1

Set the Interlace1 for Interlaced transmission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:ONE <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INTERlace:ONE?</code>
Example	<code>:EVM:CCAR0:PUCC1:INT:ONE 0</code> <code>:EVM:CCAR0:PUCC1:INT:ONE?</code>
Couplings	Max value for n = 16 and Min value for n = 1

3 5G NR Mode

3.7 Modulation Analysis Measurement

	This key is only available when Interlaced Transmission is ON and PUCCH format is 2/3 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	-1
State Saved	Yes
Min	-1
Max	9 for 15kHz SCS 4 for 30kHz SCS

Multiplex

Specifies whether the current PUCCH allocation is multiplexed with the other PUCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:MULTiplex OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:MULTiplex?</code>
Example	<code>:EVM:CCAR0:PUC1:MULT OFF</code> <code>:EVM:CCAR0:PUC1:MULT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	OFF
State Saved	Yes

n_RNTI

Specifies the user RNTI of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:NRNTi <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:NRNTi?</code>
Example	<code>:EVM:CCAR0:PUC1:NRNT 1</code> <code>:EVM:CCAR0:PUC1:NRNT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is not applied for Format 0 and Format 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	1
State Saved	Yes
Min	0
Max	65535

RB Offset

Specifies the RB Offset of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:PUC1:RB:OFFSet 0</code> <code>:EVM:CCAR0:PUC1:RB:OFFSet?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	RB Number of selected BWP – PUCCH RB Number

RB Number

Specifies the RB Number of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:PUC1:RB:NUMB 10</code> <code>:EVM:CCAR0:PUC1:RB:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It depends on the PUCCH Format: <ul style="list-style-type: none"> – Format 0, 1, 4: fixed to 1 – Format 2: 1 to 16 – Format 3: 1,2,3,4,5,6,8,9,10,12,15,16 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	1
State Saved	Yes
Min	1
Max	Min of (16, RB Number of selected BWP)

Second hop RB Offset

Specifies the second hop RB Offset of PUCCH configuration.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:OFFSet:HOPPing:SECond <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:RB:OFFSet:HOPPing:SECond?</code>
Example	<code>:EVM:CCAR0:PUCC1:RB:OFFS:HOPP:SEC 0</code> <code>:EVM:CCAR0:PUCC1:RB:OFFS:HOPP:SEC?</code>
Couplings	Max value for n = 16 and Min value for n = 1 For Format 0 and Format 2, it should be applied only when Nsym = 2. For other formats, it should be applied Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	RB Number of selected BWP – PUCCH RB Number

Allocated Slots

Specifies the Slots allocated to PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SLOT:ALLOcated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SLOT:ALLOcated?</code>
Example	<code>:EVM:CCAR0:PUCC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PUCC1:SLOT:ALL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	"0 "
State Saved	Yes

First Symbol

Specifies the First Symbol of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SYMBol:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SYMBol:FIRSt?</code>
Example	<code>:EVM:CCAR0:PUCC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PUCC1:SYMB:FIRS?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	13
State Saved	Yes

Min	0
Max	Last Symbol

Last Symbol

Specifies the Last Symbol of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SYMBol:LAST <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SYMBol:LAST?</code>
Example	<code>:EVM:CCAR0:PUC1:SYMB:LAST 4</code> <code>:EVM:CCAR0:PUC1:SYMB:LAST?</code>
Couplings	Max value for n = 16 and Min value for n = 1 The range depends on the PUCCH format and First Symbol: <ul style="list-style-type: none"> Format 0, 2: [First Symbol, First Symbol + 1] Format 1, 3, 4: [First Symbol + 3, 13] Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	13
State Saved	Yes
Min	First Symbol
Max	13

Antenna Port

Specifies the Antenna Port of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:PUC1:ANT:PORT 2000</code> <code>:EVM:CCAR0:PUC1:ANT:PORT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	2000
State Saved	Yes
Min	2000
Max	2100

Power Boosting

Specifies Power Boost value for the PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PUC1:POW 0</code> <code>:EVM:CCAR0:PUC1:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

Modulation

Specifies the modulation type of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:MODulation:TYPE PIBPSK BPSK QPSK ZC</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:PUC1:MOD:TYPE BPSK</code> <code>:EVM:CCAR0:PUC1:MOD:TYPE?</code>
Couplings	Format 0: ZC (Zandoff Chu: PN sequence without modulation) Format 1: BPSK or QPSK Format 2: QPSK Format 3&4: Pi/2 BPSK or QPSK Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	Depends on Format
State Saved	Yes
Range	<code>ZC PIBPSK BPSK QPSK</code>

Initial Cyclic Shift (m0)

Specifies the initial cyclic shift of PUCCH configuration.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:CYCLic:SHIFt <integer></code>
--------	---

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:CYCLic:SHIFt?</code>
Example	<code>:EVM:CCAR0:PUC1:CYCL:SHIF 0</code> <code>:EVM:CCAR0:PUC1:CYCL:SHIF?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is not applied for Format 2. For Format 3, it is fixed to 0 For Format 4, it is read-only and coupled with OCC Index <ul style="list-style-type: none"> - OCC Index 0 : 0 - OCC Index 1: 6 - OCC Index 2 :3 - OCC Index 3: 9 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	Depends on PUCCH format

Cyclic Shift MCS

Specifies the cyclic shift MCS of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:CYCLic:SHIFt:MCS M0 M3 M6 M9 M1 M4 M7 M10</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:CYCLic:SHIFt:MCS?</code>
Example	<code>:EVM:CCAR0:PUC1:CYCL:SHIF:MCS M0</code> <code>:EVM:CCAR0:PUC1:CYCL:SHIF:MCS?</code>
Couplings	Max value for n = 16 and Min value for n = 1 For format 1, format 2, format 3 and format 4, it should be fixed to 0 (M0) Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	<code>M0</code>
State Saved	Yes
Range	<code>M0 M3 M6 M9 M1 M4 M7 M10</code>

For PUCCH format 0, MCS value should be set according to tables in 3GPP TS 38.213 (<https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3215>):

Table 9.2.3-3: Mapping of values for one HARQ-ACK information bit to sequences for PUCCH format 0

3 5G NR Mode

3.7 Modulation Analysis Measurement

HARQ-ACK Value	0	1
Sequence cyclic shift	$m_{CS} = 0$	$m_{CS} = 6$

Table 9.2.3-4: Mapping of values for two HARQ-ACK information bits to sequences for PUCCH format 0

HARQ-ACK Value	$\backslash\{0, 0\}$	$\backslash\{0, 1\}$	$\backslash\{1, 1\}$	$\backslash\{1, 0\}$
Sequence cyclic shift	$m_{CS} = 0$	$m_{CS} = 3$	$m_{CS} = 6$	$m_{CS} = 9$

Table 9.2.5-1: Mapping of values for one HARQ-ACK information bit and positive SR to sequences for PUCCH format 0

HARQ-ACK Value	0	1
Sequence cyclic shift	$m_{CS} = 3$	$m_{CS} = 9$

Table 9.2.5-2: Mapping of values for two HARQ-ACK information bits and positive SR to sequences for PUCCH format 0

HARQ-ACK Value	$\backslash\{0, 0\}$	$\backslash\{0, 1\}$	$\backslash\{1, 1\}$	$\backslash\{1, 0\}$
Sequence cyclic shift	$m_{CS} = 1$	$m_{CS} = 4$	$m_{CS} = 7$	$m_{CS} = 10$

Group Hopping

Specifies the group hopping type of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:GROup NEITHER ENABLE DISABLE</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:GROup?</code>
Example	<code>:EVM:CCAR0:PUCc1:HOPP:GRO NEIT</code> <code>:EVM:CCAR0:PUCc1:HOPP:GRO?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is not applied for Format 2 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	NEITher
State Saved	Yes
Range	NEITher ENABled DISAbled

Hopping ID

Specifies the hopping ID of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:ID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:ID?</code>
----------------	---

Example	<code>:EVM:CCAR0:PUC1:HOPP:ID 0</code> <code>:EVM:CCAR0:PUC1:HOPP:ID?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is not applied for Format 2 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	1023

OCC Index

Specifies the OCC Index of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:OCC:INDeX <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:OCC:INDeX?</code>
Example	<code>:EVM:CCAR0:PUC1:OCC:IND 0</code> <code>:EVM:CCAR0:PUC1:OCC:IND?</code>
Couplings	Max value for n = 16 and Min value for n = 1 The range depends on PUCCH Format: <ul style="list-style-type: none"> Format 1: 0,1 Format 4: the max value should be less than OCC Length Others: Not applied Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	0
State Saved	Yes
Min	0
Max	Depends on PUCCH format

OCC Length

Specifies the OCC Length of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:OCC:LENGTh L2 L4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:OCC:LENGTh?</code>
Example	<code>:EVM:CCAR0:PUC1:OCC:LENG L4</code> <code>:EVM:CCAR0:PUC1:OCC:LENG?</code>

Couplings	Max value for n = 16 and Min value for n = 1 It is only applied for PUCCH Format 4 Attempting to remotely set or query a sub-opcode that is out of range results in an error message
Preset	L2
State Saved	Yes

PUCCH UCI Size

Specifies the UCI Size of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:UCI:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:UCI:SIZE?</code>
Example	<code>:EVM:CCAR0:PUCCH1:UCI:SIZE 10</code> <code>:EVM:CCAR0:PUCCH1:UCI:SIZE?</code>
Couplings	Max value for n = 16 and Min value for n = 1 For Format 0 and Format 1, this parameter doesn't apply The range depends on PUCCH Format: <ul style="list-style-type: none"> – Format 2: 21 – Format 3: 61 – Format 4: 25 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	20
State Saved	Yes
Min	3
Max	Depends on PUCCH format

Intra-Slot Frequency Hopping

Enable or disable intra-slot frequency hopping of PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:FREQuency:INTRa:SLOT[:STATe] OFF</code> <code> ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:HOPPing:FREQuency:INTRa:SLOT[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUCCH1:HOPP:FREQ:INTR:SLOT OFF</code> <code>:EVM:CCAR0:PUCCH1:HOPP:FREQ:INTR:SLOT?</code>
Couplings	Max value for n = 16 and Min value for n = 1 For Format 0 and Format 2, it should be applied only when Nsym = 2. For other formats, it should be applied

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

Additional DMRS

Enable or disable additional DMRS of PUCCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:ADdItional OFF ON 0 1 [:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:ADdItional?
Example	:EVM:CCAR0:PUCc1:DMRS:ADD OFF :EVM:CCAR0:PUCc1:DMRS:ADD?
Couplings	Max value for n = 16 and Min value for n = 1 It is only applied for format 3 and format 4 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Scrambling ID

Specifies the scrambling ID of PUCCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SCID <integer> [:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:SCID?
Example	:EVM:CCAR0:PUCc1:SCID 0 :EVM:CCAR0:PUCc1:SCID?
Couplings	Max value for n = 16 and Min value for n = 1 It is NOT applied for format 0 and format 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	-1
State Saved	Yes
Min	-1
Max	1023

N_ID_0

Specifies the N_ID_0 of PUCCH configuration.

Remote	[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:NID <integer>
--------	---

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:NID?</code>
Example	<code>:EVM:CCAR0:PUC1:NID 0</code> <code>:EVM:CCAR0:PUC1:NID?</code>
Couplings	Max value for n = 16 and Min value for n = 1 It is only applied for format 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting is available when: <ul style="list-style-type: none"> – PUCCH format is 2 – DMRSuplinkTPPUCCH-r16 is ON and PUCCH format is 3 or 4
Preset	-1
State Saved	Yes
Min	-1
Max	65535

DMRSuplinkTPPUCCH-r16

Set whether higher-layer parameter DMRSuplinkTPPUCCH-r16 is provided.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:TP:R16[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:TP:R16[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUC1:DMRS:TP:R16 OFF</code> <code>:EVM:CCAR0:PUC1:DMRS:TP:R16?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting is available when PUCCH format is 3 or 4
Preset	OFF
State Saved	Yes

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PUCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PUC1:DMRS:POW 0</code> <code>:EVM:CCAR0:PUC1:DMRS:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message

Preset	0 dB
State Saved	Yes
Min	-100
Max	100

PUSCH

View and configure the PUSCH parameters.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See "Resource Map Diagram" on page 1960.

Add PUSCH (GUI only)

Pressing this control inserts a new PUSCH configuration into list, the maximum number of PUSCH configurations is 250.

See "Effective PUSCH Number(Remote Command only)" on page 2072 for SCPI to provide similar function.

Delete PUSCH

Pressing this control deletes selected PUSCH configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DElete:PUSCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PUSC 1</code>

Clear All (GUI only)

Pressing this control deletes all PUSCH configuration from list.

See "Effective PUSCH Number(Remote Command only)" on page 2072 for SCPI to provide similar function.

Effective PUSCH Number(Remote Command only)

Specifies how many PUSCH configurations are effective, this SCPI only command is used to provide similar function as “Add PUSCH” and “Delete PUSCH”.

Note all 250 PUSCH configurations can be modified through SCPI, but ineffective PUSCH configurations (index > Effective PUSCH Number) will not be included in the measurement no matter its state is "On" or "Off".

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PUSCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PUSCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PUSC 2</code> <code>:EVM:CCAR0:NUMB:PUSC?</code>
Couplings	Max value is 250 If you attempt to remotely set the Count larger than 250, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	250

PUSCH Parameter Group (Display only)

Allows you to configure the PUSCH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings

"State" on page 2074	"RNTI" on page 2075	"n_ID" on page 2075	"n_RAPID" on page 2089	"Transform Precoding" on page 2076
"MCS Table" on page 2076	"MCS" on page 2077	"Modulation" on page 2077	"RV Index" on page 2078	"TB Size (Display Only)" on page 2078
"Precoder Group Size" on page 2078	"User Define Size" on page 2079			

Resource Allocation

"State" on page 2074	"BWP" on page 2079	"RA Type" on page 2079
"RBG Size" on page 2080	"Allocated RBGs" on page 2080	"RB Offset" on page 2081
"RB Number" on page 2016	"Allocated Slots" on page 2082	"Slot Format" on page 2082
"First Symbol" on page 2082	"Last Symbol" on page 2083	

DMRS Settings

"State" on page 2074	"DMRS Config" on page 2083	"PUSCH Mapping" on page 2083	"DMRS-typeA-pos" on page 2084	"DM RS
----------------------	----------------------------	------------------------------	-------------------------------	--------

				Max Len" on page 2084
"DMRS-add-pos" on page 2085	"nSCID" on page 2087	"N_ID_nSCID (SCPI only)" on page 2087	"DMRSuplink- r16/DMRSuplinkTP-r16" on page 2088	"N_ ID_0" on page 2088
"N_ID_1" on page 2089	"n_ID_PUSCH" on page 2086	"DMRS Sequence Hopping" on page 2086	"DMRS Group Hopping" on page 2086	
Antenna Settings				
"State" on page 2074		"Antenna Port Index" on page 2091	"DMRS Port (Display Only)" on page 2098	
"Antenna Port/Reference Antenna Port" on page 2090		"Antenna Port Detection Threshold" on page 2090	"PTRS Port" on page 2090	
"Rank" on page 2098		"DMRS CDM groups w.o. data" on page 2098	"Front-load Symbols" on page 2085	
PTRS Settings				
"State" on page 2074	"Transform Precoding" on page 2076	"PTRS Enable" on page 2099	"PTRS K" on page 2099	"PTRS L" on page 2099
"PTR S RE Offset" on page 2100	"PTRS N_ID" on page 2100	"N_samp_group (Number of samples per PT- RS group)" on page 2101		
Power Settings				
"State" on page 2074	"PUSCH Power Boosting" on page 2101	"DMRS Power Boosting" on page 2102	"PTRS Power Boosting" on page 2102	

State

Enable or disable selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:STATe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1 OFF</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

	:EVM:CCAR0:PUSC1?
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

RNTI

Specifies the user RNTI of selected PUSCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RNTI <int> [:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RNTI?
Example	:EVM:CCAR0:PUSC1:RNTI 1 :EVM:CCAR0:PUSC1:RNTI?
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	0
Max	65535

n_ID

Specifies n_ID for selected PUSCH configuration.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NID <integer> [:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NID?
Example	:EVM:CCAR0:PUSC1:NID 0 :EVM:CCAR0:PUSC1:NID?
Notes	-1 means using Cell ID as n_ID
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	-1
State Saved	Yes
Min	-1
Max	1023

Transform Precoding

Enable or disable Transform Precoding for selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:TPRecoding[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:TPRecoding[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:TPR OFF</code> <code>:EVM:CCAR0:PUSC1:TPR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

MCS Table

Specifies which MCS table is used to configure MCS for selected PUSCH configuration. See 38.214 clause 5.1.3 and 6.1.4 for complete MCS table.

- Table 1 – Table 5.1.3.1-1
- Table 2 – Table 5.1.3.1-2
- Table 3 – Table 6.1.4.1-1
- Table 4 – Table 5.1.3.1-3
- Table 5 – Table 6.1.4.1-2

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MCS:TABLE TABLE1 ... TABLE5</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MCS:TABLE?</code>
Example	<code>:EVM:CCAR0:PUSC1:MCS:TABL TABL2</code> <code>:EVM:CCAR0:PUSC1:MCS:TABL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message Table 1(Table 5.1.3.1-1) and Table 4(Table 5.1.3.1-3) are only available when Transform Precoding is OFF Table 3(Table 6.1.4.1-1) and Table 5(Table 6.1.4.1-2) are only available when Transform Precoding is ON
Preset	TABL1
State Saved	Yes
Range	Table 5.1.3.1-1 (64QAM) Table 5.1.3.1-2 (256QAM) Table 6.1.4.1-1 (64QAM TP) Table 5.1.3.1-3 (64QAMLowSE) Table 6.1.4.1-2 (64QAM TP LowSE)

MCS

Specifies the MCS index for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MCS <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MCS?</code>
Example	<code>:EVM:CCAR0:PUSC1:MCS 1</code> <code>:EVM:CCAR0:PUSC1:MCS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When MCS is -1, you can specify Modulation manually, MCS table and TB Size will be invalid and no decoding results
Preset	0
State Saved	Yes
Min	-1
Max	31

Modulation

Display or select the modulation for selected PUSCH configuration.

The modulation is derived from MCS Table and MCS settings 38.214 clause 5.1.3 and 6.1.4.

- Modulation Order = 1, Modulation = Pi/2 BPSK
- Modulation Order = 2, Modulation = QPSK
- Modulation Order = 4, Modulation = 16QAM
- Modulation Order = 6, Modulation = 64QAM
- Modulation Order = 8, Modulation = 256QAM

See ["More Information" on page 2007](#).

Only when MCS = -1, you can specify Modulation manually (including Custom IQ mode). Custom IQ mode means customized constellation definition recalled from file.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MODulation QPSK QAM16 QAM64 QAM256 PIBPSK QAM1024</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:MODulation?</code>
Example	<code>:EVM:CCAR0:PUSC1:MOD QPSK</code>

	<code>:EVM:CCAR0:PUSC1:MOD?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message Display only when MCS is not -1. PIBPSK (Pi/2 BPSK) is only available when PUSCH TP is On
Preset	<code>QPSK</code>
State Saved	Yes
Range	QPSK 16 QAM 64 QAM 256QAM Pi/2 BPSK 1024QAM

RV Index

Specifies the RV index for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RV <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RV?</code>
Example	<code>:EVM:CCAR0:PUSC1:RV 1</code> <code>:EVM:CCAR0:PUSC1:RV?</code>
Notes	-1 means this parameter is changing in signal and therefore need to be auto detected for each burst
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	-1
Max	3

TB Size (Display Only)

Display TB Size for the selected PUSCH configuration.

Precoder Group Size

Select PRB group size for precoding matrix.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PBGRoup RB2 RB4 WIDE USER</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PBGRoup?</code>
Example	<code>:EVM:CCAR0:PUSC1:PBGR RB4</code> <code>:EVM:CCAR0:PUSC1:PBGR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	WIDE
State Saved	Yes
Range	2 RB 4 RB Wideband User Defined

User Define Size

Set user defined value when Precoder Group Size = User Define.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:USER:PBGRoup <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:USER:PBGRoup?</code>
Example	<code>:EVM:CCAR0:PUSC1:PBGR:USER 1</code> <code>:EVM:CCAR0:PUSC1:PBGR:USER?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This parameter is only visible when Precoder Group Size = User Define
Preset	1
State Saved	Yes
Min	1
Max	RB Number of selected BWP

BWP

Specifies the BWP of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:BWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PUSC1:BWP BWP1</code> <code>:EVM:CCAR0:PUSC1:BWP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP1
State Saved	Yes
Range	BWP 01 BWP 02 BWP 03 BWP 04

RA Type

Specifies RA Type for the selected PUSCH configuration, there are two methods to allocate RB resources:

Type 0: RBG Size and Allocated RBG

Type 1: RB Offset and RB Number

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RAType TYPE0 TYPE1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RAType?</code>
Example	<code>:EVM:CCAR0:PUSC1:RATY TYPE0</code> <code>:EVM:CCAR0:PUSC1:RATY?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	TYPE1
State Saved	Yes
Range	Type 0 Type 1

RBG Size

Specifies RBG Size for the selected PUSCH configuration, this parameter is only valid for RA Type 0.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RBG:SIZE RB2 RB4 RB8 RB16 [:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RBG:SIZE?																	
Example	:EVM:CCAR0:PUSC1:RBG:SIZE RB16 :EVM:CCAR0:PUSC1:RBG:SIZE?																	
Couplings	<p>Max value for n = 250 and Min value for n = 1</p> <p>Attempting to remotely set or query a sub-opcode that is out of range generates an error message</p> <p>Available values are determined by BWP size according to table 5.1.2.2.1-1 in TS38.214:</p> <table><tr><th>Bandwidth Part Size</th><th>Configuration 1</th><th>Configuration 2</th></tr><tr><td>1 – 36</td><td>2</td><td>4</td></tr><tr><td>37 – 72</td><td>4</td><td>8</td></tr><tr><td>73 – 144</td><td>8</td><td>16</td></tr><tr><td>145 – 275</td><td>16</td><td>16</td></tr></table>			Bandwidth Part Size	Configuration 1	Configuration 2	1 – 36	2	4	37 – 72	4	8	73 – 144	8	16	145 – 275	16	16
Bandwidth Part Size	Configuration 1	Configuration 2																
1 – 36	2	4																
37 – 72	4	8																
73 – 144	8	16																
145 – 275	16	16																
Preset	RB16																	
State Saved	Yes																	
Range	2 RB 4 RB 8 RB 16 RB																	

Allocated RBGs

Specifies the RBGs allocated to selected PUSCH configuration, this parameter is only valid for RA Type 0.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RBG:ALLOcated <string></code>
--------	---

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RBG:ALlocated?</code>
Example	<code>:EVM:CCAR0:PUSC1:RBG:ALL "0:15"</code> <code>:EVM:CCAR0:PUSC1:RBG:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0:15"
State Saved	Yes

RB Offset

Specifies the RB Offset of selected PUSCH configuration, this parameter is only valid for RA Type 1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:PUSC1:RB:OFFSet 0</code> <code>:EVM:CCAR0:PUSC1:RB:OFFSet?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	RB Number of selected BWP – 1

RB Number

Specifies the RB Number of selected PUSCH configuration, this parameter is only valid for RA Type 1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:PUSC1:RB:NUMB 273</code> <code>:EVM:CCAR0:PUSC1:RB:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	273
State Saved	Yes
Min	1
Max	RB Number of selected BWP – RB Offset

Allocated Slots

Specifies the Slots allocated to selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SLOT:ALLocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SLOT:ALLocated?</code>
Example	<code>:EVM:CCAR0:PUSC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PUSC1:SLOT:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0:19"
State Saved	Yes

Slot Format

Specifies the Slot Format of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SLOT:FORMat SF0 SF1 ... SF55</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SLOT:FORMat?</code>
Example	<code>:EVM:CCAR0:PUSC1:SLOT:FORM SF2</code> <code>:EVM:CCAR0:PUSC1:SLOT:FORM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	<code>SF1</code>
State Saved	Yes
Range	0 1 ... 55

First Symbol

Specifies the First Symbol of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SYMBol:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SYMBol:FIRSt?</code>
Example	<code>:EVM:CCAR0:PUSC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PUSC1:SYMB:FIRS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0

State Saved	Yes
Min	0
Max	13

Last Symbol

Specifies the Last Symbol of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SYMBol:LAST <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SYMBol:LAST?</code>
Example	<code>:EVM:CCAR0:PUSC1:SYMB:LAST 4</code> <code>:EVM:CCAR0:PUSC1:SYMB:LAST?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	13
State Saved	Yes
Min	First Symbol
Max	13

DMRS Config

Specifies DMRS Configuration for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:CONFigure TYPE1 TYPE2</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:CONFigure?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:CONF TYPE1</code> <code>:EVM:CCAR0:PUSC1:DMRS:CONF?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When Transform Precoding is ON, only Type 1 is available
Preset	TYPE1
State Saved	Yes
Range	Type 1 Type 2

PUSCH Mapping

Specifies PUSCH Mapping for selected PUSCH configuration.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PUSCh:MAP TYPEA TYPEB</code>
--------	--

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PUSCh:MAP?</code>
Example	<code>:EVM:CCAR0:PUSC1:PUSC:MAP TYPEA</code> <code>:EVM:CCAR0:PUSC1:PUSC:MAP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	TYPEA
State Saved	Yes
Range	Type A Type B

DMRS-typeA-pos

Specifies the DMRS-typeA-pos value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:TAPos <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:TAPos?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:TAP 2</code> <code>:EVM:CCAR0:PUSC1:DMRS:TAP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Min	2
Max	3

DMRS Max Len

Specifies DMRS Max Len value for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:MLEN <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:MLEN?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:MLEN 2</code> <code>:EVM:CCAR0:PUSC1:DMRS:MLEN?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	2

Front-load Symbols

Specifies DMRS Duration for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:DURation SINGLE DOUBle</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:DURation?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:DUR DOUB</code> <code>:EVM:CCAR0:PUSC1:DMRS:DUR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When Antenna Port Index is -1, this parameter will be enabled and you need to ensure the settings are valid according to TS38.212, table 7.3.1.1.2-6 to table 7.3.1.1.2-23, otherwise demodulation may not work When Antenna Port Index is not -1, this parameter is display only, the value will be set automatically according to Antenna Port Index and TS38.212 table 7.3.1.1.2-6 to table 7.3.1.1.2-23
Preset	SINGLE
State Saved	Yes
Range	1 2

DMRS-add-pos

Specifies the DMRS-add-pos value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:ADDPos <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:ADDPos?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:ADDP 2</code> <code>:EVM:CCAR0:PUSC1:DMRS:ADDP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 See 3GPP TS 38.211 Table 6.4.1.1.3-3/4 for coupling rule (https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3213) Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	3

DMRS Sequence Hopping

Enable or disable Sequence Hopping when Transform Precoding is enabled for selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:HOPPing:SEQuence[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:HOPPing:SEQuence[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:HOPP:SEQ OFF</code> <code>:EVM:CCAR0:PUSC1:DMRS:HOPP:SEQ?</code>
Couplings	Max value for n = 250 and Min value for n = 1 When “DMRS Sequence Hopping” is ON , “DMRS Group Hopping” cannot be set to ON Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes
Range	Off On

DMRS Group Hopping

Enable or disable Group Hopping when Transform Precoding is enabled for selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:HOPPing:GROup[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:HOPPing:GROup[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:HOPP:GRO OFF</code> <code>:EVM:CCAR0:PUSC1:DMRS:HOPP:GRO?</code>
Couplings	Max value for n = 250 and Min value for n = 1 When “DMRS Group Hopping” is ON , “DMRS Sequence Hopping” cannot be set to ON Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes
Range	Off On

n_ID_PUSCH

Specifies n_ID_PUSCH when Transform Precoding is enabled for selected PUSCH configuration.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NID:PUSCh <integer></code>
--------	--

3 5G NR Mode

3.7 Modulation Analysis Measurement

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NID:PUSCh?</code>
Example	<code>:EVM:CCAR0:PUSC1:NID:PUSC 0</code> <code>:EVM:CCAR0:PUSC1:NID:PUSC?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting is only available when Transform Precoding is ON
Preset	-1
State Saved	Yes
Min	-1
Max	1007

nSCID

Specifies the nSCID value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SCIDn <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SCIDn?</code>
Example	<code>:EVM:CCAR0:PUSC1:SCID 1</code> <code>:EVM:CCAR0:PUSC1:SCID?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting is only available when Transform Precoding is OFF
Preset	0
State Saved	Yes
Min	0
Max	1

N_ID_nSCID (SCPI only)

Specifies the N_ID_nSCID value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SCIDn:NID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:SCIDn:NID?</code>
Example	<code>:EVM:CCAR0:PUSC1:SCID:NID 1</code> <code>:EVM:CCAR0:PUSC1:SCID:NID?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When set to -1, the N_ID_nSCID value equals to Cell ID

	This setting is only available when Transform Precoding is OFF
Preset	-1
State Saved	Yes
Min	-1
Max	65535

DMRSuplink-r16/DMRSuplinkTP-r16

Set whether higher-layer parameter DMRSuplink-r16 or DMRSuplinkTP-r16 is provided.

Note: DMRSuplink-r16 or DMRSuplinkTP-r16 depends on Transform Precoding is off or on.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:R16[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:R16[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:R16 OFF</code> <code>:EVM:CCAR0:PUSC1:DMRS:R16?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

N_ID_0

Specifies the N_ID_0 value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:NID0 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:NID0?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:NID0 1</code> <code>:EVM:CCAR0:PUSC1:DMRS:NID0?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When set to -1, the N_ID_0 value equals to Cell ID This setting is available when: <ul style="list-style-type: none"> – Transform Precoding is OFF – Transform Precoding is ON and DMRSuplinkTP-r16 is ON and Modulation is Pi/2 BPSK
Preset	-1

3 5G NR Mode

3.7 Modulation Analysis Measurement

State Saved	Yes
Min	-1
Max	65535

N_ID_1

Specifies the N_ID_1 value for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:NID1 <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:NID1?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:NID1 1</code> <code>:EVM:CCAR0:PUSC1:DMRS:NID1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When set to -1, the N_ID_1 value equals to Cell ID This setting is available when: <ul style="list-style-type: none"> – Transform Precoding is OFF – Transform Precoding is ON and DMRSuplinkTP-r16 is ON and Modulation is Pi/2 BPSK
Preset	-1
State Saved	Yes
Min	-1
Max	65535

n_RAPID

Specifies n_RAPID for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NRAPid <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:NRAPid?</code>
Example	<code>:EVM:CCAR0:PUSC1:NRAP 0</code> <code>:EVM:CCAR0:PUSC1:NRAP?</code>
Notes	-1 means Not Configured
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	-1
State Saved	Yes
Min	-1
Max	63

Antenna Port/Reference Antenna Port

Specifies the Antenna Port in SISO mode and Reference Antenna Port in MIMO/MISO modes of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:PUSC1:ANT:PORT 0</code> <code>:EVM:CCAR0:PUSC1:ANT:PORT?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message Coupled with Antenna Port Index, DMRS Config Type, DMRS Max Len and Rank . See table 7.3.1.1.2-6 to table 7.3.1.1.2-23 in 3GPP TS38.212. The Antenna Port should be related with the “DMRS Port” column in the table
Preset	0
State Saved	Yes
Min	0
Max	11

Antenna Port Detection Threshold

Specifies threshold for Antenna Port Detection, when the power of one port is lower than the threshold comparing with reference port, it will be detected as inactive and not included in MIMO demodulation processing.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT:THReshold <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT:THReshold?</code>
Example	<code>:EVM:CCAR0:PUSC1:ANT:PORT:THR 0</code> <code>:EVM:CCAR0:PUSC1:ANT:PORT:THR?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	-36 dB
State Saved	Yes
Min	-100
Max	100

PTRS Port

Specifies the PTRS Port of selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:PORT <String></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:PORT?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:PORT "0"</code> <code>:EVM:CCAR0:PUSC1:PTRS:PORT?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message If PUSCH Antenna Port Index is -1, it will be set to PUSCH Antenna Port Otherwise, PTRS ports should be a subset of PUSCH Antenna ports which are determined by PUSCH Antenna Port index. The max num. of configured PTRS ports is 2. It is indicated by the 'PTRS-DMRS association' field in DCI format 0_1 (See TS38.212 7.3.1.1.2) If PUSCH Antenna Port Index is changed which results in current PTRS port become invalid, it will be set to PUSCH Antenna Port
Preset	"0"
State Saved	Yes

Antenna Port Index

Specifies Antenna Port Index for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT:INDex <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:ANTenna:PORT:INDex?</code>
Example	<code>:EVM:CCAR0:PUSC1:ANT:PORT:IND 1</code> <code>:EVM:CCAR0:PUSC1:ANT:PORT:IND?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Range	Coupled with DMRS Config Type, DMRS Max Len and Rank . See table 7.3.1.1.2-6 to table 7.3.1.1.2-23 in 3GPP TS38.212. The Antenna Port Index indicates the "Value" column in the table
Min	-1
Max	27

Table 7.3.1.1.2-6: Antenna port(s), PUSCH-tp=Enabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 1

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	2	0
1	2	1
2	2	2
3	2	3

Table 7.3.1.1.2-7: Antenna port(s), PUSCH-tp=Enabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 2

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	2	0	1
1	2	1	1
2	2	2	1
3	2	3	1
4	2	0	2
5	2	1	2
6	2	2	2
7	2	3	2
8	2	4	2
9	2	5	2
10	2	6	2
11	2	7	2
12-15	Reserved	Reserved	Reserved

Table 7.3.1.1.2-8: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 1, rank = 1

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	1	0
1	1	1
2	2	0
3	2	1
4	2	2
5	2	3
6-7	Reserved	Reserved

Table 7.3.1.1.2-9: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 1, rank = 2

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	1	0,1
1	2	0,1
2	2	2,3
3	2	0,2
4-7	Reserved	Reserved

Table 7.3.1.1.2-10: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 1, rank = 3

3 5G NR Mode

3.7 Modulation Analysis Measurement

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	2	0-2
2-7	Reserved	Reserved

Table 7.3.1.1.2-11: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 1, rank = 4

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	2	0-3
2-7	Reserved	Reserved

Table 7.3.1.1.2-12: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 2, rank = 1

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	1	0	1
1	1	1	1
2	2	0	1
3	2	1	1
4	2	2	1
5	2	3	1
6	2	0	2
7	2	1	2
8	2	2	2
9	2	3	2
10	2	4	2
11	2	5	2
12	2	6	2
13	2	7	2
14-15	Reserved	Reserved	Reserved

Table 7.3.1.1.2-13: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 2, rank = 2

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	1	0,1	1
1	2	0,1	1
2	2	2,3	1
3	2	0,2	1
4	2	0,1	2

5	2	2,3	2
6	2	4,5	2
7	2	6,7	2
8	2	0,4	2
9	2	2,6	2
10-15	Reserved	Reserved	Reserved

Table 7.3.1.1.2-14: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 2, rank = 3

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	2	0-2	1
1	2	0,1,4	2
2	2	2,3,6	2
3-15	Reserved	Reserved	Reserved

Table 7.3.1.1.2-15: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=1, UL-DMRS-max-len = 2, rank = 4

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	2	0-3	1
1	2	0,1,4,5	2
2	2	2,3,6,7	2
3	2	0,2,4,6	2
4-15	Reserved	Reserved	Reserved

Table 7.3.1.1.2-16: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 1, rank=1

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	1	0
1	1	1
2	2	0
3	2	1
4	2	2
5	2	3
6	3	0
7	3	1
8	3	2
9	3	3

3 5G NR Mode

3.7 Modulation Analysis Measurement

10	3	4
11	3	5
12-15	Reserved	Reserved

Table 7.3.1.1.2-17: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 1, rank=2

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	1	0,1
1	2	0,1
2	2	2,3
3	3	0,1
4	3	2,3
5	3	4,5
6	2	0,2
7-15	Reserved	Reserved

Table 7.3.1.1.2-18: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 1, rank =3

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	2	0-2
1	3	0-2
2	3	3-5
3-15	Reserved	Reserved

Table 7.3.1.1.2-19: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 1, rank =4

Value	Number of DMRS CDM group(s) without data	DMRS port(s)
0	2	0-3
1	3	0-3
2-15	Reserved	Reserved

Table 7.3.1.1.2-20: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 2, rank=1

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	1	0	1
1	1	1	1
2	2	0	1
3	2	1	1

4	2	2	1
5	2	3	1
6	3	0	1
7	3	1	1
8	3	2	1
9	3	3	1
10	3	4	1
11	3	5	1
12	3	0	2
13	3	1	2
14	3	2	2
15	3	3	2
16	3	4	2
17	3	5	2
18	3	6	2
19	3	7	2
20	3	8	2
21	3	9	2
22	3	10	2
23	3	11	2
24	1	0	2
25	1	1	2
26	1	6	2
27	1	7	2
28-31	Reserved	Reserved	Reserved

Table 7.3.1.1.2-21: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 2, rank=2

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	1	0,1	1
1	2	0,1	1
2	2	2,3	1
3	3	0,1	1
4	3	2,3	1
5	3	4,5	1
6	2	0,2	1
7	3	0,1	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

8	3	2,3	2
9	3	4,5	2
10	3	6,7	2
11	3	8,9	2
12	3	10,11	2
13	1	0,1	2
14	1	6,7	2
15	2	0,1	2
16	2	2,3	2
17	2	6,7	2
18	2	8,9	2
19-31	Reserved	Reserved	Reserved

Table 7.3.1.1.2-22: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 2, rank=3

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	2	0-2	1
1	3	0-2	1
2	3	3-5	1
3	3	0,1,6	2
4	3	2,3,8	2
5	3	4,5,10	2
6-31	Reserved	Reserved	Reserved

Table 7.3.1.1.2-23: Antenna port(s), PUSCH-tp=Disabled, UL-DMRS-config-type=2, UL-DMRS-max-len = 2, rank=4

Value	Number of DMRS CDM group(s) without data	DMRS port(s)	Number of front-load symbols
0	2	0-3	1
1	3	0-3	1
2	3	0,1,6,7	2
3	3	2,3,8,9	2
4	3	4,5,10,11	2
5-31	Reserved	Reserved	Reserved

DMRS Port (Display Only)

Display available DMRS Ports according to Antenna Port Index for the selected PUSCH configuration.

Rank

Specifies Rank for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RANK <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RANK?</code>
Example	<code>:EVM:CCAR0:PUSC1:RANK 2</code> <code>:EVM:CCAR0:PUSC1:RANK?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Range	1, 2, 3, 4
Min	1
Max	4

DMRS CDM groups w.o. data

Specifies DMRS CDM groups without data for the selected PDSCH configuration.

It is coupled with DMRS Config Type, DMRS Max Len, Rank See table 7.3.1.1.2-6 to table 7.3.1.1.2-23 in 3GPP TS38.212. The column “Number of DMRS CDM group(s) without data” specifies the value for this result.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:CDMGroups:COUNT <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:CDMGroups:COUNT?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:CDMG:COUN 2</code> <code>:EVM:CCAR0:PUSC1:DMRS:CDMG:COUN?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When Antenna Port Index is -1, this parameter become settable, you need to make sure valid setting according TS38.212 table 7.3.1.1.2-6 to table 7.3.1.1.2-23, otherwise demodulation may not work When Antenna Port Index is not -1, this parameter is display only, the value will be set automatically according to Antenna Port Index and TS38.212 table 7.3.1.1.2-6 to table 7.3.1.1.2-23

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	1
State Saved	Yes
Min	1
Max	2 for DMRS Config Type 1, 3 for DMRS Config Type 2

PTRS Enable

Enable or disable PTRS for selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS OFF</code> <code>:EVM:CCAR0:PUSC1:PTRS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

PTRS K

Specifies PTRS frequency density (K_PTRS) for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:K K2 K4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:K?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:K K2</code> <code>:EVM:CCAR0:PUSC1:PTRS:K?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	K2
State Saved	Yes
Range	K2 K4

PTRS L

Specifies PTRS time density (L_PTRS) for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:L L1 L2 L4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:L?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:L L2</code>

	<code>:EVM:CCAR0:PUSC1:PTRS:L?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	<code>L1</code>
State Saved	Yes
Range	<code>L1 L2 L4</code>

PTRS RE Offset

Specifies PTRS RE Offset for selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:RE:OFFSet BIT00 BIT01 BIT10 BIT11</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:RE:OFFSet?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:RE:OFFS BIT00</code> <code>:EVM:CCAR0:PUSC1:PTRS:RE:OFFS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	<code>BIT00</code>
State Saved	Yes
Range	<code>BIT00 BIT01 BIT10 BIT11</code>

PTRS N_ID

Set the N_ID for the PTRS generation when transform precoding is enabled.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:NID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:NID?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:NID 1</code> <code>:EVM:CCAR0:PUSC1:PTRS:NID?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message When setting "Transform Precoding" to Off, this setting will be invisible
Preset	0
State Saved	Yes
Min	0
Max	65535

N_samp_group (Number of samples per PT-RS group)

Set the Number of samples per PT-RS group for PTRS signal generation when transform precoding is enabled.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:GROup:SNUMber <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:GROup:SNUMber?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:GRO:SNUM 2</code> <code>:EVM:CCAR0:PUSC1:PTRS:GRO:SNUM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 When setting "Transform Precoding" to Off, this setting will be invisible When N_group_PTRS is 8, N_samp_group can only be 4 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Range	2 4

N_group_PTRS (Number of PT-RS groups)

Set Number of PT-RS groups for PTRS signal generation when transform precoding is enabled.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:GROup:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:GROup:NUMBer?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:GRO:NUMB 2</code> <code>:EVM:CCAR0:PUSC1:PTRS:GRO:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 When setting "Transform Precoding" to Off, this setting will be invisible Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Range	2 4 8

PUSCH Power Boosting

Specifies Power Boost value for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:POWer?</code>
----------------	--

Example	<code>:EVM:CCAR0:PUSC1:POW 0</code> <code>:EVM:CCAR0:PUSC1:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:POW 0</code> <code>:EVM:CCAR0:PUSC1:DMRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message It is coupled with "PUSCH DMRS CDM group w.0. data": $\text{dmrsBoostingValue} = 10 * (1.0 - \text{Math.Log}(\text{DrmsCdmGroup}))$
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

PTRS Power Boosting

Specifies PTRS Power Boost value for the selected PUSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PTRS:POWer?</code>
Example	<code>:EVM:CCAR0:PUSC1:PTRS:POW 0</code> <code>:EVM:CCAR0:PUSC1:PTRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes

Min	-100
Max	100

Precoder Matrix (Uplink)

View and configure the Precoder Matrix parameters.

Reset Selected (GUI only)

Reset W matrix for selected precoder block.

Reset All (GUI only)

Reset W matrix for all precoder blocks.

Reset Matrix (Remote Command only)

Resets the specified precoder matrix. To reset *all* matrices, specify the value -1.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh1 250:PMATrix:RESet<integer></code>
Example	<code>:EVM:CCAR0:PUSC1:PMAT:RES 2</code>
State Saved	Yes
Min	-1
Max	PRBG number of each PUSCH allocation

PUSCH (GUI only)

Allows you to choose the PUSCH allocation to configure its W Matrix

"W Matrix" on page 2103 "I Value (GUI only)" on page 2104 "Q Value (GUI only)" on page 2104

W Matrix

Specifies the W Matrix for selected precoder block.

Example: 1,1,0,0,0,0,1,1 represent below matrix

1+j , 0

0 , 1+j

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PMATrix:PBGroup<m> <string></code>
--------	--

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:PMATrix:PBGroup<m>?</code>
Example	<code>:EVM:CCAR0:PUSC1:PMAT:PBG1 "1,0,0,0,1,0,0,0"</code> <code>:EVM:CCAR0:PUSC1:PMAT:PBG1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 275 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
State Saved	Yes I Value (GUI only) Specifies I value for selected W matrix cell.
Preset	0.0
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37 Q Value (GUI only) Specifies Q value for selected W matrix cell.
Preset	0.0
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Rate Matching Pattern (Uplink)

View and configure the Rate Matching Pattern parameters.

Add Rate Matching Pattern (GUI only)

Inserts a new PUSCH Rate Matching Pattern into list. The maximum number of PUSCH Rate Matching Patterns is 8.

Delete Rate Matching Pattern

Deletes selected PUSCH Rate Matching Pattern from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh1 250:RMPattern:DELeTe <integer></code>
Example	<code>:EVM:CCAR0:PUSC1:RMP:DEL 1</code>

Clear All (GUI only)

Deletes all PUSCH Rate Matching Patterns from list.

For a remote command providing a similar function, see "Effective PDSCH Number (Remote Command only)" on page 2002.

Effective Rate Matching Pattern (Remote Command only)

Specifies how many PUSCH Rate Matching Patterns are effective, this SCPI only command is used to provide similar function as “Add Rate Matching Pattern” and “Delete Rate Matching Pattern”.

Note that all 8 PUSCH Rate Matching Pattern can be modified through SCPI, but ineffective PUSCH Rate Matching Pattern (index > Effective PUSCH Rate Matching Pattern Number) will not be included in the measurement, no matter whether it is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern:NUMBer?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP:NUMB 2</code> <code>:EVM:CCAR0:PUSC1:RMP:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	8

PUSCH (GUI only)

Allows you to choose the PUSCH allocation to configure its Rate Matching Pattern

"State" on page 2105	"Level" on page 2106	"SCS" on page 2106	"RB Bitmap Index" on page 2107
"Symbol Bitmap Span" on page 2107	"Symbol Bitmap" on page 2107	"Periodicity" on page 2108	"Periodicity Pattern Bitmap" on page 2108

State

Enables or disables the selected PUSCH Rate Matching Pattern.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>[:STATe] OFF ON 0 1</code>
--------	--

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1 OFF</code> <code>:EVM:CCAR0:PUSC1:RMP1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes
Range	OFF ON 0 1 Level Selects the level for PUSCH Rate Matching Pattern.
Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:LEVe1 BWP CELL</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:LEVe1?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1:LEV CELL</code> <code>:EVM:CCAR0:PUSC1:RMP1:LEV?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP
State Saved	Yes
Range	BWP Cell SCS Specifies the SCS for PUSCH Rate Matching Pattern when Level = Cell Level. Only valid SCSs with the Freq Range are available. – For Freq Range 1: SCS15K, SCS30K and SCS60K – For Freq Range 2: SCS60K, SCS120K and SCS240K When Level = BWP level, SCS is same as PUSCH allocation selected.
Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SCS SCS15K SCS30K SCS60K SCS120K SCS240K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SCS?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1:SCS SCS30K</code> <code>:EVM:CCAR0:PUSC1:RMP1:SCS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1

3 5G NR Mode

3.7 Modulation Analysis Measurement

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	SCS30K
State Saved	Yes
Range	15K 30K 60K 120K 240K
	RB Bitmap Index
	Specifies the RB Bitmap Index for the selected PUSCH Rate Matching Pattern
Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:RB:INDeX <string> [:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:RB:INDeX?
Example	:EVM:CCAR0:PUSC1:RMP1:RB:INDeX "0:272" :EVM:CCAR0:PUSC1:RMP1:RB:INDeX?
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0:272"
State Saved	Yes
	Symbol Bitmap Span
	Selects the Symbol Bitmap Span for PUSCH Rate Matching Pattern.
Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SYMBol:BSPan SLOT1 SLOT2 [:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SYMBol:BSPan?
Example	:EVM:CCAR0:PDSC1:RMP1:SYMB:BSPan SLOT1 :EVM:CCAR0:PDSC1:RMP1:SYMB:BSPan?
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	One Slot
State Saved	Yes
Range	One Slot Two Slots
	Symbol Bitmap
	Specifies the Symbol Bitmap for the selected PUSCH Rate Matching Pattern. The length should match the Symbol Bitmap Span:
	<ul style="list-style-type: none"> – 14 bit when Symbol Bitmap Span = One Slot – 28 bit when Symbol Bitmap Span = Two Slots
Remote	[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SYMBol:BITMap <string>

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:SYMBOL:BITMap?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1:SYMB:BITM "0000"</code> <code>:EVM:CCAR0:PUSC1:RMP1:SYMB:BITM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0000"
State Saved	Yes Periodicity Selects the Periodicity for Symbol Bitmap
Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:PERiodicity <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:PERiodicity?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1:PER 5</code> <code>:EVM:CCAR0:PUSC1:RMP1:PER?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message Note that, if an invalid value is entered, it will be automatically adjusted
Preset	1
State Saved	Yes
Range	1 2 4 5 8 10 20 40 Periodicity Pattern Bitmap Specifies the Periodicity Pattern Bitmap for the selected PUSCH Rate Matching Pattern. The length should match the Periodicity.
Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:PERiodicity:BITMap <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:RMPattern<m>:PERiodicity:BITMap?</code>
Example	<code>:EVM:CCAR0:PUSC1:RMP1:PER:BITM "1"</code> <code>:EVM:CCAR0:PUSC1:RMP1:PER:BITM?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Max value for m = 8 and Min value for m = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"1"
State Saved	Yes

SRS

View and configure the SRS parameters.

Resource Map Diagram

Displays all physical channel allocations on the Time and Frequency domain resource map. See "Resource Map Diagram" on page 1960.

Add SRS (GUI only)

Inserts a new SRS configuration into list, the maximum number of SRS configurations is 1 for current version.

Delete SRS

Deletes selected SRS configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:SRS <integer></code>
Example	<code>:EVM:CCAR0:DEL:SRS 1</code>

SRS Parameter Group (Display only)

Allows you to configure the SRS parameters.
This control is for UI display only. You can select one of the following groups:

General Settings			
"State" on page 2110	"Number of Antenna Ports" on page 2110	"Antenna Port" on page 2111	"Power" on page 2111
Resource Allocation			
"State" on page 2110	"BWP" on page 2111	"Allocated Slots" on page 2112	
"Start Position" on page 2112	"Number of Symbols" on page 2113	"Repetition Factor (R)" on page 2113	
"Transmission Comb Number (K_TC)" on page 2114	"Transmission Comb Offset (k_TC)" on page 2114	"SRS Bandwidth Index (B_SRS)" on page 2114	
"SRS Bandwidth Index (C_SRS)" on page 2115			
SRS Parameters			

"State" on page 2110	"Frequency Hopping Mode" on page 2116	"Frequency Hopping (b_hop)" on page 2115	"Frequency Domain Shift (n_shift)" on page 2116
"Frequency Domain Position (n_RRC)" on page 2116	"Start RB Hopping State" on page 2117	"Frequency Scaling Factor (P_F)" on page 2118	"Start RB Index (K_F)" on page 2118
"Cyclic Shift Config (n_SRS_cs)" on page 2117	"Sequence Identity (n_ID_SRS)" on page 2117		

State

Enable or disable SRS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:STATe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:STATe?</code>
Example	<code>:EVM:CCAR0:SRS1:STAT OFF</code> <code>:EVM:CCAR0:SRS1:STAT?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

Number of Antenna Ports

Select number of antenna ports for SRS, valid value are 1, 2, 4.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:ANTenna:PORT:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:ANTenna:PORT:NUMBer?</code>
Example	<code>:EVM:CCAR0:SRS1:ANT:PORT:NUMB 1</code> <code>:EVM:CCAR0:SRS1:ANT:PORT:NUMB?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	4

Antenna Port

Specifies antenna port for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:SRS1:ANT:PORT 1000</code> <code>:EVM:CCAR0:SRS1:ANT:PORT?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1000
Min	1000
Max	1000 + Number of Antenna Port -1

Power

Specifies Power Boost value for the SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:POWer?</code>
Example	<code>:EVM:CCAR0:SRS1:POW 0</code> <code>:EVM:CCAR0:SRS1:POW?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

BWP

Specifies the BWP of SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BWP?</code>
Example	<code>:EVM:CCAR0:SRS1:BWP BWP1</code> <code>:EVM:CCAR0:SRS1:BWP?</code>
Couplings	Max value for n = 1 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP1
State Saved	Yes
Range	BWP1 ... BWP4

Allocated Slots

Specifies the Slots allocated to SRS.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SLOT:ALlocated <string> [:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SLOT:ALlocated?
Example	:EVM:CCAR0:SRS1:SLOT:ALL "0" :EVM:CCAR0:SRS1:SLOT:ALL?
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0"
State Saved	Yes

Symbol Start (Remote Command only)

Specifies the symbol start used for SRS.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SYMBOL:OFFSet <integer> [:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SYMBOL:OFFSet?
Example	:EVM:CCAR0:SRS1:SYMB:OFFS 8 :EVM:CCAR0:SRS1:SYMB:OFFS?
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	13
State Saved	Yes
Min	8 for normal CP 6 for extended CP
Max	13 for normal CP 11 for extended CP

Start Position

Specifies the start position for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:POSition:STARt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:POSition:STARt?</code>
Example	<code>:EVM:CCAR0:SRS1:POS:STAR 0</code> <code>:EVM:CCAR0:SRS1:POS:STAR?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message NOTE: it is coupled with SRS Symbol Start: SRS Symbol Start + SRS Start Pos = 13 for normal CP, 11 for extended CP
Preset	0
State Saved	Yes
Min	0
Max	5

Number of Symbols

Specifies the number of symbols used for SRS, valid value are 1, 2, 4.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SYMBol:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:SYMBol:NUMBer?</code>
Example	<code>:EVM:CCAR0:SRS1:SYMB:NUMB 2</code> <code>:EVM:CCAR0:SRS1:SYMB:NUMB?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message Symbol Start + Number of symbols should be in the range of the last six symbols in this slot
Preset	1
State Saved	Yes
Min	1
Max	4

Repetition Factor (R)

Specifies the repetition factor used for SRS, valid value are 1, 2, 4.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:REPetition:FACTor <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:REPetition:FACTor?</code>
Example	<code>:EVM:CCAR0:SRS1:REP:FACT 2</code> <code>:EVM:CCAR0:SRS1:REP:FACT?</code>
Couplings	Max value for n = 1 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message The value should be equal or less than N_symb_SRS
Preset	1
State Saved	Yes
Min	1
Max	4

Transmission Comb Number (K_TC)

Specifies the K_TC for SRS, valid value is 2, 4.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:COMB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:COMB:NUMBer?</code>
Example	<code>:EVM:CCAR0:SRS1:COMB:NUMB 2</code> <code>:EVM:CCAR0:SRS1:COMB:NUMB?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Min	2
Max	4

Transmission Comb Offset (k_TC)

Specifies k_TC for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:COMB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:COMB:OFFSet?</code>
Example	<code>:EVM:CCAR0:SRS1:COMB:OFFS 0</code> <code>:EVM:CCAR0:SRS1:COMB:OFFS?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	K_TC

SRS Bandwidth Index (B_SRS)

Specifies B_SRS for SRS.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BW:INDeX:B <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BW:INDeX:B?</code>
Example	<code>:EVM:CCAR0:SRS1:BW:IND:B 0</code> <code>:EVM:CCAR0:SRS1:BW:IND:B?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	3

SRS Bandwidth Index (C_SRS)

Specifies C_SRS for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BW:INDeX:C <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:BW:INDeX:C?</code>
Example	<code>:EVM:CCAR0:SRS1:BW:IND:C 0</code> <code>:EVM:CCAR0:SRS1:BW:IND:C?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	63

Frequency Hopping (b_hop)

Specifies b_hop for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:BHOP <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:BHOP?</code>
Example	<code>:EVM:CCAR0:SRS1:FREQ:BHOP 0</code> <code>:EVM:CCAR0:SRS1:FREQ:BHOP?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	3

Frequency Domain Shift (n_shift)

Specifies n_shift for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FDMaIn:SHIFt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FDMaIn:SHIFt?</code>
Example	<code>:EVM:CCAR0:SRS1:FDM:SHIF 0</code> <code>:EVM:CCAR0:SRS1:FDM:SHIF?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	268

Frequency Domain Position (n_RRC)

Specifies n_RRC for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FDMaIn:POSition <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FDMaIn:POSition?</code>
Example	<code>:EVM:CCAR0:SRS1:FDM:POS 0</code> <code>:EVM:CCAR0:SRS1:FDM:POS?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	67

Frequency Hopping Mode

Specifies group sequence hopping mode for SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:HOPPing[:MODE] NEITHer GROUp SEQuence</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:HOPPing[:MODE]?</code>
Example	<code>:EVM:CCAR0:SRS1:FREQ:HOPP GROUp</code> <code>:EVM:CCAR0:SRS1:FREQ:HOPP?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message

Preset	NEITher
Range	Neither Group Sequence

Cyclic Shift Config (n_SRS_cs)

Specifies n_SRS_cs for SRS.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:CSHift:CONFig <integer> [:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:CSHift:CONFig?
Example	:EVM:CCAR0:SRS1:CSH:CONF 0 :EVM:CCAR0:SRS1:CSH:CONF?
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	7 for K_TC = 2 11 for K_TC = 4

Sequence Identity (n_ID_SRS)

Specifies n_ID_SRS for SRS.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:NID <integer> [:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:NID?
Example	:EVM:CCAR0:SRS1:NID 0 :EVM:CCAR0:SRS1:NID?
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
Min	0
Max	1022

Start RB Hopping State

Enable or disable Start RB hopping for SRS.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:RB:STARt:HOPPIng:STATe OFF ON 0 1 [:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:RB:STARt:HOPPIng:STATe?
Example	:EVM:CCAR0:SRS1:RB:STAR:HOPP:STAT OFF

	<code>:EVM:CCAR0:SRS1:RB:STAR:HOPP:STAT?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

Frequency Scaling Factor (P_F)

Specifies the P_F for SRS, valid value is 1, 2, 4.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:SFACTOR <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:FREQuency:SFACTOR?</code>
Example	<code>:EVM:CCAR0:SRS1:FREQ:SFAC 2</code> <code>:EVM:CCAR0:SRS1:FREQ:SFAC?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	4

Start RB Index (K_F)

Specifies the K_F for SRS

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:RB:STARt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:RB:STARt?</code>
Example	<code>:EVM:CCAR0:SRS1:RB:STAR 2</code> <code>:EVM:CCAR0:SRS1:RB:STAR?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	Frequency Scaling Factor (P_F) - 1

PRACH

View and configure the PRACH parameters.

Note: when multiple PRACH bursts are configured, they need to be captured in same sequence as defined, so proper trigger setting is needed to get stable synchronization and de-modulation results.

Resource Map Diagram

Display all physical channel allocations on Time and Frequency domain resource map. See "Resource Map Diagram" on page 1960.

Add PRACH (GUI only)

Pressing this control inserts a new PDCCH configuration into list, the maximum number of PRACH configurations is 100.

See "Effective PRACH Number(Remote Command only)" on page 2119 for SCPI to provide similar function.

Delete PRACH

Pressing this control deletes selected PRACH configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PRACH <integer></code>
Example	<code>:EVM:CCAR0:DEL:PRAC 1</code>

Effective PRACH Number(Remote Command only)

Specifies how many PRACH configurations are effective, this SCPI only command is used to provide similar function as "Add PRACH" and "Delete PRACH".

Note all PRACH configurations can be modified through SCPI, but ineffective PUSCH configurations (index > Effective PUSCH Number) will not be included in the measurement no matter its state is "On" or "Off".

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PRACH <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PRACH?</code>
Example	<code>:EVM:CCAR0:NUMB:PRAC 1</code> <code>:EVM:CCAR0:NUMB:PUSC?</code>
Couplings	Max value is 100 If you attempt to remotely set the Count larger than 1, this will result in an error message
Preset	1
State Saved	Yes

Min	0
Max	100

PRACH Parameter Group (Display only)

Allows you to configure the PRACH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings

"State" on page 2120	"Config Index" on page 2121	"Format (Display Only)" on page 2121	"Spectrum Type" on page 2121
"SCS" on page 2156	"Active BWP" on page 2157	"Power" on page 2158	

Resource Allocation Parameters

"State" on page 2120	"Config Index" on page 2121	"Occasion Index" on page 2160
"Frame Offset" on page 2160	"Subframe Index (Display Only)" on page 2161	"n_RA_t (Display Only)" on page 2161
"n_RA_slot (Display Only)" on page 2161	"n_RA_f (Display Only)" on page 2161	"n_RA_start" on page 2160
"Msg1 FDM" on page 2157		

PRACH Parameters

"State" on page 2120	"Cyclic Shift Index" on page 2158	"Root Sequence Index" on page 2159
"Zero Correlation Zone Config" on page 2159	"Restricted Set Config" on page 2157	"L_RA" on page 2161

State

Enable or disable PRACH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:STATe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:STATe?</code>
Example	<code>:EVM:CCAR0:PRAC1:STAT OFF</code> <code>:EVM:CCAR0:PRAC1:STAT?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes

Config Index

Specifies PRACH configuration Index. See 3GPP TS38.211 Table 6.3.3.2-2, Table 6.3.3.2-3, and Table 6.3.3.2-4 for details.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:CONFig:INDex <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:CONFig:INDex?</code>
Example	<code>:EVM:CCAR0:PRAC1:CONF:IND 20</code> <code>:EVM:CCAR0:PRAC1:CONF:IND?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	87
Min	0
Max	262

Spectrum Type

Select spectrum type for current PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:SPECTrum:TYPE PAIRed UNPaired</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:SPECTrum:TYPE?</code>
Example	<code>:EVM:CCAR0:PRAC1:SPEC:TYPE PAIR</code> <code>:EVM:CCAR0:PRAC1:SPEC:TYPE?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting depends on the Freq Range <ul style="list-style-type: none"> – FR1: both paired and unpaired are available – FR2: only unpaired is available
Preset	PAIRed
State Saved	Yes
Range	PAIRed UNPaired

Format (Display Only)

Display the format of PRACH configuration according to the PRACH Config Index and Spectrum Type. See 3GPP TS38.211 Table 6.3.3.2-2, Table 6.3.3.2-3 and Table 6.3.3.2-4 for details.

More Information

Table 6.3.3.2-2: Random access configurations for FR1 and paired spectrum/supplementary uplink.

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{t,RA,slot}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{dur,RA,PRACH}$ durati on
		x	y					
		x	y					
0	0	16	1	1	0	-	-	0
1	0	16	1	4	0	-	-	0
2	0	16	1	7	0	-	-	0
3	0	16	1	9	0	-	-	0
4	0	8	1	1	0	-	-	0
5	0	8	1	4	0	-	-	0
6	0	8	1	7	0	-	-	0
7	0	8	1	9	0	-	-	0
8	0	4	1	1	0	-	-	0
9	0	4	1	4	0	-	-	0
10	0	4	1	7	0	-	-	0
11	0	4	1	9	0	-	-	0
12	0	2	1	1	0	-	-	0
13	0	2	1	4	0	-	-	0
14	0	2	1	7	0	-	-	0
15	0	2	1	9	0	-	-	0
16	0	1	0	1	0	-	-	0
17	0	1	0	4	0	-	-	0
18	0	1	0	7	0	-	-	0
19	0	1	0	1,6	0	-	-	0
20	0	1	0	2,7	0	-	-	0
21	0	1	0	3,8	0	-	-	0
22	0	1	0	1,4,7	0	-	-	0

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	$N_{t,RA,slot}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{dur,RA,PRACH}$, durati on
23	0	1	0	2,5,8	0	-	-	0
24	0	1	0	3, 6, 9	0	-	-	0
25	0	1	0	0,2,4,6,8	0	-	-	0
26	0	1	0	1,3,5,7,9	0	-	-	0
27	0	1	0	0,1,2,3,4,5,6 ,7,8,9	0	-	-	0
28	1	16	1	1	0	-	-	0
29	1	16	1	4	0	-	-	0
30	1	16	1	7	0	-	-	0
31	1	16	1	9	0	-	-	0
32	1	8	1	1	0	-	-	0
33	1	8	1	4	0	-	-	0
34	1	8	1	7	0	-	-	0
35	1	8	1	9	0	-	-	0
36	1	4	1	1	0	-	-	0
37	1	4	1	4	0	-	-	0
38	1	4	1	7	0	-	-	0
39	1	4	1	9	0	-	-	0
40	1	2	1	1	0	-	-	0
41	1	2	1	4	0	-	-	0
42	1	2	1	7	0	-	-	0
43	1	2	1	9	0	-	-	0
44	1	1	0	1	0	-	-	0
45	1	1	0	4	0	-	-	0
46	1	1	0	7	0	-	-	0
47	1	1	0	1,6	0	-	-	0
48	1	1	0	2,7	0	-	-	0

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{t_{RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{dur_{RA,PRACH}}$ durati on
49	1	1	0	3,8	0	-	-	0
50	1	1	0	1,4,7	0	-	-	0
51	1	1	0	2,5,8	0	-	-	0
52	1	1	0	3,6,9	0	-	-	0
53	2	16	1	1	0	-	-	0
54	2	8	1	1	0	-	-	0
55	2	4	0	1	0	-	-	0
56	2	2	0	1	0	-	-	0
57	2	2	0	5	0	-	-	0
58	2	1	0	1	0	-	-	0
59	2	1	0	5	0	-	-	0
60	3	16	1	1	0	-	-	0
61	3	16	1	4	0	-	-	0
62	3	16	1	7	0	-	-	0
63	3	16	1	9	0	-	-	0
64	3	8	1	1	0	-	-	0
65	3	8	1	4	0	-	-	0
66	3	8	1	7	0	-	-	0
67	3	4	1	1	0	-	-	0
68	3	4	1	4	0	-	-	0
69	3	4	1	7	0	-	-	0
70	3	4	1	9	0	-	-	0
71	3	2	1	1	0	-	-	0
72	3	2	1	4	0	-	-	0
73	3	2	1	7	0	-	-	0
74	3	2	1	9	0	-	-	0
75	3	1	0	1	0	-	-	0

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	$N_{t,RA,slot}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{dur,RA,PRACH}$, durati on
76	3	1	0	4	0	-	-	0
77	3	1	0	7	0	-	-	0
78	3	1	0	1,6	0	-	-	0
79	3	1	0	2,7	0	-	-	0
80	3	1	0	3,8	0	-	-	0
81	3	1	0	1,4,7	0	-	-	0
82	3	1	0	2,5,8	0	-	-	0
83	3	1	0	3, 6, 9	0	-	-	0
84	3	1	0	0,2,4,6,8	0	-	-	0
85	3	1	0	1,3,5,7,9	0	-	-	0
86	3	1	0	0,1,2,3,4,5,6,7,8,9	0	-	-	0
87	A1	16	0	4,9	0	1	6	2
88	A1	16	1	4	0	2	6	2
89	A1	8	0	4,9	0	1	6	2
90	A1	8	1	4	0	2	6	2
91	A1	4	0	4,9	0	1	6	2
92	A1	4	1	4,9	0	1	6	2
93	A1	4	0	4	0	2	6	2
94	A1	2	0	4,9	0	1	6	2
95	A1	2	0	1	0	2	6	2
96	A1	2	0	4	0	2	6	2
97	A1	2	0	7	0	2	6	2
98	A1	1	0	4	0	1	6	2
99	A1	1	0	1,6	0	1	6	2
100	A1	1	0	4,9	0	1	6	2
101	A1	1	0	1	0	2	6	2

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{\text{RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{\text{dur,RA,PRAC}}$ durati on
102	A1	1	0	7	0	2	6	2
103	A1	1	0	2,7	0	2	6	2
104	A1	1	0	1,4,7	0	2	6	2
105	A1	1	0	0,2,4,6,8	0	2	6	2
106	A1	1	0	0,1,2,3,4,5,6,7,8,9	0	2	6	2
107	A1	1	0	1,3,5,7,9	0	2	6	2
108	A1/B1	2	0	4,9	0	1	7	2
109	A1/B1	2	0	4	0	2	7	2
110	A1/B1	1	0	4	0	1	7	2
111	A1/B1	1	0	1,6	0	1	7	2
112	A1/B1	1	0	4,9	0	1	7	2
113	A1/B1	1	0	1	0	2	7	2
114	A1/B1	1	0	7	0	2	7	2
115	A1/B1	1	0	1,4,7	0	2	7	2
116	A1/B1	1	0	0,2,4,6,8	0	2	7	2
117	A2	16	1	2,6,9	0	1	3	4
118	A2	16	1	4	0	2	3	4
119	A2	8	1	2,6,9	0	1	3	4
120	A2	8	1	4	0	2	3	4
121	A2	4	0	2,6,9	0	1	3	4
122	A2	4	0	4	0	2	3	4
123	A2	2	1	2,6,9	0	1	3	4
124	A2	2	0	1	0	2	3	4
125	A2	2	0	4	0	2	3	4
126	A2	2	0	7	0	2	3	4
127	A2	1	0	4	0	1	3	4
128	A2	1	0	1,6	0	1	3	4

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{\text{RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{\text{dur,RA,PRACH}}$ durati on
129	A2	1	0	4,9	0	1	3	4
130	A2	1	0	1	0	2	3	4
131	A2	1	0	7	0	2	3	4
132	A2	1	0	2,7	0	2	3	4
133	A2	1	0	1,4,7	0	2	3	4
134	A2	1	0	0,2,4,6,8	0	2	3	4
135	A2	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	3	4
136	A2	1	0	1,3,5,7,9	0	2	3	4
137	A2/B2	2	1	2,6,9	0	1	3	4
138	A2/B2	2	0	4	0	2	3	4
139	A2/B2	1	0	4	0	1	3	4
140	A2/B2	1	0	1,6	0	1	3	4
141	A2/B2	1	0	4,9	0	1	3	4
142	A2/B2	1	0	1	0	2	3	4
143	A2/B2	1	0	7	0	2	3	4
144	A2/B2	1	0	1,4,7	0	2	3	4
145	A2/B2	1	0	0,2,4,6,8	0	2	3	4
146	A2/B2	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	3	4
147	A3	16	1	4,9	0	1	2	6
148	A3	16	1	4	0	2	2	6
149	A3	8	1	4,9	0	1	2	6
150	A3	8	1	4	0	2	2	6
151	A3	4	0	4,9	0	1	2	6
152	A3	4	0	4	0	2	2	6
153	A3	2	1	2,6,9	0	2	2	6

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{\text{RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{\text{dur,RA,PRACH}}$ durati on
154	A3	2	0	1	0	2	2	6
155	A3	2	0	4	0	2	2	6
156	A3	2	0	7	0	2	2	6
157	A3	1	0	4	0	1	2	6
158	A3	1	0	1,6	0	1	2	6
159	A3	1	0	4,9	0	1	2	6
160	A3	1	0	1	0	2	2	6
161	A3	1	0	7	0	2	2	6
162	A3	1	0	2,7	0	2	2	6
163	A3	1	0	1,4,7	0	2	2	6
164	A3	1	0	0,2,4,6,8	0	2	2	6
165	A3	1	0	0,1,2,3,4,5,6,7,8,9	0	2	2	6
166	A3	1	0	1,3,5,7,9	0	2	2	6
167	A3/B3	2	1	2,6,9	0	2	2	6
168	A3/B3	2	0	4	0	2	2	6
169	A3/B3	1	0	4	0	1	2	6
170	A3/B3	1	0	1,6	0	1	2	6
171	A3/B3	1	0	4,9	0	1	2	6
172	A3/B3	1	0	1	0	2	2	6
173	A3/B3	1	0	7	0	2	2	6
174	A3/B3	1	0	1,4,7	0	2	2	6
175	A3/B3	1	0	0,2,4,6,8	0	2	2	6
176	A3/B3	1	0	0,1,2,3,4,5,6,7,8,9	0	2	2	6
177	B1	16	0	4,9	0	1	7	2
178	B1	16	1	4	0	2	7	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	$N_{\text{RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{\text{dur,RA,PRACH}}$ durati on
179	B1	8	0	4,9	0	1	7	2
180	B1	8	1	4	0	2	7	2
181	B1	4	0	4,9	0	1	7	2
182	B1	4	1	4,9	0	1	7	2
183	B1	4	0	4	0	2	7	2
184	B1	2	0	4,9	0	1	7	2
185	B1	2	0	1	0	2	7	2
186	B1	2	0	4	0	2	7	2
187	B1	2	0	7	0	2	7	2
188	B1	1	0	4	0	1	7	2
189	B1	1	0	1,6	0	1	7	2
190	B1	1	0	4,9	0	1	7	2
191	B1	1	0	1	0	2	7	2
192	B1	1	0	7	0	2	7	2
193	B1	1	0	2,7	0	2	7	2
194	B1	1	0	1,4,7	0	2	7	2
195	B1	1	0	0,2,4,6,8	0	2	7	2
196	B1	1	0	0,1,2,3,4,5,6,7,8,9	0	2	7	2
197	B1	1	0	1,3,5,7,9	0	2	7	2
198	B4	16	0	4,9	0	2	1	12
199	B4	16	1	4	0	2	1	12
200	B4	8	0	4,9	0	2	1	12
201	B4	8	1	4	0	2	1	12
202	B4	4	0	4,9	0	2	1	12
203	B4	4	0	4	0	2	1	12
204	B4	4	1	4,9	0	2	1	12

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA,PRACH} , durati on
205	B4	2	0	4,9	0	2	1	12
206	B4	2	0	1	0	2	1	12
207	B4	2	0	4	0	2	1	12
208	B4	2	0	7	0	2	1	12
209	B4	1	0	1	0	2	1	12
210	B4	1	0	4	0	2	1	12
211	B4	1	0	7	0	2	1	12
212	B4	1	0	1,6	0	2	1	12
213	B4	1	0	2,7	0	2	1	12
214	B4	1	0	4,9	0	2	1	12
215	B4	1	0	1,4,7	0	2	1	12
216	B4	1	0	0,2,4,6,8	0	2	1	12
217	B4	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	1	12
218	B4	1	0	1,3,5,7,9	0	2	1	12
219	C0	8	1	4	0	2	7	2
220	C0	4	1	4,9	0	1	7	2
221	C0	4	0	4	0	2	7	2
222	C0	2	0	4,9	0	1	7	2
223	C0	2	0	1	0	2	7	2
224	C0	2	0	4	0	2	7	2
225	C0	2	0	7	0	2	7	2
226	C0	1	0	4	0	1	7	2
227	C0	1	0	1,6	0	1	7	2
228	C0	1	0	4,9	0	1	7	2
229	C0	1	0	1	0	2	7	2
230	C0	1	0	7	0	2	7	2
231	C0	1	0	2,7	0	2	7	2

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n_{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	$N_{\text{t,RA,slot}}$, number of time- domain PRACH occasio ns within a PRACH slot	$N_{\text{dur,RA,PRACH}}$ durati on
232	C0	1	0	1,4,7	0	2	7	2
233	C0	1	0	0,2,4,6,8	0	2	7	2
234	C0	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	7	2
235	C0	1	0	1,3,5,7,9	0	2	7	2
236	C2	16	1	4,9	0	1	2	6
237	C2	16	1	4	0	2	2	6
238	C2	8	1	4,9	0	1	2	6
239	C2	8	1	4	0	2	2	6
240	C2	4	0	4,9	0	1	2	6
241	C2	4	0	4	0	2	2	6
242	C2	2	1	2,6,9	0	2	2	6
243	C2	2	0	1	0	2	2	6
244	C2	2	0	4	0	2	2	6
245	C2	2	0	7	0	2	2	6
246	C2	1	0	4	0	1	2	6
247	C2	1	0	1,6	0	1	2	6
248	C2	1	0	4,9	0	1	2	6
249	C2	1	0	1	0	2	2	6
250	C2	1	0	7	0	2	2	6
251	C2	1	0	2,7	0	2	2	6
252	C2	1	0	1,4,7	0	2	2	6
253	C2	1	0	0,2,4,6,8	0	2	2	6
254	C2	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	2	6
255	C2	1	0	1,3,5,7,9	0	2	2	6

Table 6.3.3.2-3: Random access configurations for FR1 and unpaired spectrum.

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		x	y					
0	0	16	1	9	0	-	-	0
1	0	8	1	9	0	-	-	0
2	0	4	1	9	0	-	-	0
3	0	2	0	9	0	-	-	0
4	0	2	1	9	0	-	-	0
5	0	2	0	4	0	-	-	0
6	0	2	1	4	0	-	-	0
7	0	1	0	9	0	-	-	0
8	0	1	0	8	0	-	-	0
9	0	1	0	7	0	-	-	0
10	0	1	0	6	0	-	-	0
11	0	1	0	5	0	-	-	0
12	0	1	0	4	0	-	-	0
13	0	1	0	3	0	-	-	0
14	0	1	0	2	0	-	-	0
15	0	1	0	1,6	0			0
16	0	1	0	1,6	7	-	-	0
17	0	1	0	4,9	0	-	-	0
18	0	1	0	3,8	0	-	-	0
19	0	1	0	2,7	0	-	-	0
20	0	1	0	8,9	0	-	-	0
21	0	1	0	4,8,9	0	-	-	0
22	0	1	0	3,4,9	0	-	-	0
23	0	1	0	7,8,9	0	-	-	0
24	0	1	0	3,4,8,9	0	-	-	0
25	0	1	0	6,7,8,9	0	-	-	0
26	0	1	0	1,4,6,9	0	-	-	0

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA,PRACH} , durati on 3 , 5 , 7 , 9
		27	0	1				
28	1	16	1	7	0	-	-	0
29	1	8	1	7	0	-	-	0
30	1	4	1	7	0	-	-	0
31	1	2	0	7	0	-	-	0
32	1	2	1	7	0	-	-	0
33	1	1	0	7	0	-	-	0
34	2	16	1	6	0	-	-	0
35	2	8	1	6	0	-	-	0
36	2	4	1	6	0	-	-	0
37	2	2	0	6	7	-	-	0
38	2	2	1	6	7	-	-	0
39	2	1	0	6	7	-	-	0
40	3	16	1	9	0	-	-	0
41	3	8	1	9	0	-	-	0
42	3	4	1	9	0	-	-	0
43	3	2	0	9	0	-	-	0
44	3	2	1	9	0	-	-	0
45	3	2	0	4	0	-	-	0
46	3	2	1	4	0	-	-	0
47	3	1	0	9	0	-	-	0
48	3	1	0	8	0	-	-	0
49	3	1	0	7	0	-	-	0
50	3	1	0	6	0	-	-	0
51	3	1	0	5	0	-	-	0
52	3	1	0	4	0	-	-	0
53	3	1	0	3	0	-	-	0
54	3	1	0	2	0	-	-	0

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y			Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		55	3	1					
56	3	1	0	1,6	7	-	-	0	
57	3	1	0	4,9	0	-	-	0	
58	3	1	0	3,8	0	-	-	0	
59	3	1	0	2,7	0	-	-	0	
60	3	1	0	8,9	0	-	-	0	
61	3	1	0	4,8,9	0	-	-	0	
62	3	1	0	3,4,9	0	-	-	0	
63	3	1	0	7,8,9	0	-	-	0	
64	3	1	0	3,4,8,9	0	-	-	0	
65	3	1	0	1,4,6,9	0	-	-	0	
66	3	1	0	1,3,5,7,9	0	-	-	0	
67	A1	16	1	9	0	2	6	2	
68	A1	8	1	9	0	2	6	2	
69	A1	4	1	9	0	1	6	2	
70	A1	2	1	9	0	1	6	2	
71	A1	2	1	4,9	7	1	3	2	
72	A1	2	1	7,9	7	1	3	2	
73	A1	2	1	7,9	0	1	6	2	
74	A1	2	1	8,9	0	2	6	2	
75	A1	2	1	4,9	0	2	6	2	
76	A1	2	1	2,3,4,7,8,9	0	1	6	2	
77	A1	1	0	9	0	2	6	2	
78	A1	1	0	9	7	1	3	2	
79	A1	1	0	9	0	1	6	2	
80	A1	1	0	8,9	0	2	6	2	
81	A1	1	0	4,9	0	1	6	2	
82	A1	1	0	7,9	7	1	3	2	

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA,PRACH} , durati on 0 , 4 , 8 , 9
		83	A 1					
84	A1	1	0	3,4,8,9	0	2	6	2
85	A1	1	0	1,3,5,7,9	0	1	6	2
86	A1	1	0	0,1,2,3,4,5,6 ,7,8,9	7	1	3	2
87	A2	16	1	9	0	2	3	4
88	A2	8	1	9	0	2	3	4
89	A2	4	1	9	0	1	3	4
90	A2	2	1	7,9	0	1	3	4
91	A2	2	1	8,9	0	2	3	4
92	A2	2	1	7,9	9	1	1	4
93	A2	2	1	4,9	9	1	1	4
94	A2	2	1	4,9	0	2	3	4
95	A2	16	1	2,3,4,7,8,9	0	1	3	4
96	A2	1	0	2	0	1	3	4
97	A2	1	0	7	0	1	3	4
98	A2	2	1	9	0	1	3	4
99	A2	1	0	9	0	2	3	4
100	A2	1	0	9	9	1	1	4
101	A2	1	0	9	0	1	3	4
102	A2	1	0	2,7	0	1	3	4
103	A2	1	0	8,9	0	2	3	4
104	A2	1	0	4,9	0	1	3	4
105	A2	1	0	7,9	9	1	1	4
106	A2	1	0	3,4,8,9	0	1	3	4
107	A2	1	0	3,4,8,9	0	2	3	4
108	A2	1	0	1,3,5,7,9	0	1	3	4
109	A2	1	0	0,1,2,3,4,5,6 ,7,8,9	9	1	1	4

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		11 0	A 3					
111	A3	8	1	9	0	2	2	6
112	A3	4	1	9	0	1	2	6
113	A3	2	1	4,9	7	1	1	6
114	A3	2	1	7,9	7	1	1	6
115	A3	2	1	7,9	0	1	2	6
116	A3	2	1	4,9	0	2	2	6
117	A3	2	1	8,9	0	2	2	6
118	A3	2	1	2,3,4,7,8,9	0	1	2	6
119	A3	1	0	2	0	1	2	6
120	A3	1	0	7	0	1	2	6
121	A3	2	1	9	0	1	2	6
122	A3	1	0	9	0	2	2	6
123	A3	1	0	9	7	1	1	6
124	A3	1	0	9	0	1	2	6
125	A3	1	0	2,7	0	1	2	6
126	A3	1	0	8,9	0	2	2	6
127	A3	1	0	4,9	0	1	2	6
128	A3	1	0	7,9	7	1	1	6
129	A3	1	0	3,4,8,9	0	1	2	6
130	A3	1	0	3,4,8,9	0	2	2	6
131	A3	1	0	1,3,5,7,9	0	1	2	6
132	A3	1	0	0,1,2,3,4,5,6,7,8,9	7	1	1	6
133	B1	4	1	9	2	1	6	2
134	B1	2	1	9	2	1	6	2
135	B1	2	1	7,9	2	1	6	2
136	B1	2	1	4,9	8	1	3	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on [μs]
		13 7	B 1					
138	B1	1	0	9	2	2	6	2
139	B1	1	0	9	8	1	3	2
140	B1	1	0	9	2	1	6	2
141	B1	1	0	8,9	2	2	6	2
142	B1	1	0	4,9	2	1	6	2
143	B1	1	0	7,9	8	1	3	2
144	B1	1	0	1,3,5,7,9	2	1	6	2
145	B4	16	1	9	0	2	1	12
146	B4	8	1	9	0	2	1	12
147	B4	4	1	9	2	1	1	12
148	B4	2	1	9	0	1	1	12
149	B4	2	1	9	2	1	1	12
150	B4	2	1	7,9	2	1	1	12
151	B4	2	1	4,9	2	1	1	12
152	B4	2	1	4,9	0	2	1	12
153	B4	2	1	8,9	0	2	1	12
154	B4	2	1	2,3,4,7,8,9	0	1	1	12
155	B4	1	0	1	0	1	1	12
156	B4	1	0	2	0	1	1	12
157	B4	1	0	4	0	1	1	12
158	B4	1	0	7	0	1	1	12
159	B4	1	0	9	0	1	1	12
160	B4	1	0	9	2	1	1	12
161	B4	1	0	9	0	2	1	12
162	B4	1	0	4,9	2	1	1	12
163	B4	1	0	7,9	2	1	1	12
164	B4	1	0	8,9	0	2	1	12

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		16 5	B 4					
166	B4	1	0	1,3,5,7,9	2	1	1	12
167	B4	1	0	0,1,2,3,4,5,6 ,7,8,9	0	2	1	12
168	B4	1	0	0,1,2,3,4,5,6 ,7,8,9	2	1	1	12
169	C0	16	1	9	2	2	6	2
170	C0	8	1	9	2	2	6	2
171	C0	4	1	9	2	1	6	2
172	C0	2	1	9	2	1	6	2
173	C0	2	1	8,9	2	2	6	2
174	C0	2	1	7,9	2	1	6	2
175	C0	2	1	7,9	8	1	3	2
176	C0	2	1	4,9	8	1	3	2
177	C0	2	1	4,9	2	2	6	2
178	C0	2	1	2,3,4,7,8,9	2	1	6	2
179	C0	1	0	9	2	2	6	2
180	C0	1	0	9	8	1	3	2
181	C0	1	0	9	2	1	6	2
182	C0	1	0	8,9	2	2	6	2
183	C0	1	0	4,9	2	1	6	2
184	C0	1	0	7,9	8	1	3	2
185	C0	1	0	3,4,8,9	2	1	6	2
186	C0	1	0	3,4,8,9	2	2	6	2
187	C0	1	0	1,3,5,7,9	2	1	6	2
188	C0	1	0	0,1,2,3,4,5,6 ,7,8,9	8	1	3	2
189	C2	16	1	9	2	2	2	6
190	C2	8	1	9	2	2	2	6

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp bol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		19 1	C 2					
192	C2	2	1	9	2	1	2	6
193	C2	2	1	8,9	2	2	2	6
194	C2	2	1	7,9	2	1	2	6
195	C2	2	1	7,9	8	1	1	6
196	C2	2	1	4,9	8	1	1	6
197	C2	2	1	4,9	2	2	2	6
198	C2	2	1	2,3,4,7,8,9	2	1	2	6
199	C2	8	1	9	8	2	1	6
200	C2	4	1	9	8	1	1	6
201	C2	1	0	9	2	2	2	6
202	C2	1	0	9	8	1	1	6
203	C2	1	0	9	2	1	2	6
204	C2	1	0	8,9	2	2	2	6
205	C2	1	0	4,9	2	1	2	6
206	C2	1	0	7,9	8	1	1	6
207	C2	1	0	3,4,8,9	2	1	2	6
208	C2	1	0	3,4,8,9	2	2	2	6
209	C2	1	0	1,3,5,7,9	2	1	2	6
210	C2	1	0	0,1,2,3,4,5,6,7,8,9	8	1	1	6
211	A1/B1	2	1	9	2	1	6	2
212	A1/B1	2	1	4,9	8	1	3	2
213	A1/B1	2	1	7,9	8	1	3	2
214	A1/B1	2	1	7,9	2	1	6	2
215	A1/B1	2	1	4,9	2	2	6	2
216	A1/B1	2	1	8,9	2	2	6	2
217	A1/B1	1	0	9	2	2	6	2
218	A1/B1	1	0	9	8	1	3	2

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , number of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on
		21 9	A 1 / B 1					
220	A1/B1	1	0	8,9	2	2	6	2
221	A1/B1	1	0	4,9	2	1	6	2
222	A1/B1	1	0	7,9	8	1	3	2
223	A1/B1	1	0	3,4,8,9	2	2	6	2
224	A1/B1	1	0	1,3,5,7,9	2	1	6	2
225	A1/B1	1	0	0,1,2,3,4,5,6 ,7,8,9	8	1	3	2
226	A2/B2	2	1	9	0	1	3	4
227	A2/B2	2	1	4,9	6	1	2	4
228	A2/B2	2	1	7,9	6	1	2	4
229	A2/B2	2	1	4,9	0	2	3	4
230	A2/B2	2	1	8,9	0	2	3	4
231	A2/B2	1	0	9	0	2	3	4
232	A2/B2	1	0	9	6	1	2	4
233	A2/B2	1	0	9	0	1	3	4
234	A2/B2	1	0	8,9	0	2	3	4
235	A2/B2	1	0	4,9	0	1	3	4
236	A2/B2	1	0	7,9	6	1	2	4
237	A2/B2	1	0	3,4,8,9	0	1	3	4
238	A2/B2	1	0	3,4,8,9	0	2	3	4
239	A2/B2	1	0	1,3,5,7,9	0	1	3	4
240	A2/B2	1	0	0,1,2,3,4,5,6 ,7,8,9	6	1	2	4
241	A3/B3	2	1	9	0	1	2	6
242	A3/B3	2	1	4,9	2	1	2	6
243	A3/B3	2	1	7,9	0	1	2	6
244	A3/B3	2	1	7,9	2	1	2	6

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Configura tion Index	Pream ble format	n _{SFN} mode x = y		Subframe number	Starti ng symp ol	Numbe r of PRACH slots within a subfra me	N _{t,RA,slot} , numbe r of time- domain PRACH occasio ns within a PRACH slot	N _{dur,RA} , PRAC H durati on [s]
		24 5	A 3 / B 3					
246	A3/B3	2	1	8,9	0	2	2	6
247	A3/B3	1	0	9	0	2	2	6
248	A3/B3	1	0	9	2	1	2	6
249	A3/B3	1	0	9	0	1	2	6
250	A3/B3	1	0	8,9	0	2	2	6
251	A3/B3	1	0	4,9	0	1	2	6
252	A3/B3	1	0	7,9	2	1	2	6
253	A3/B3	1	0	3,4,8,9	0	2	2	6
254	A3/B3	1	0	1,3,5,7,9	0	1	2	6
255	A3/B3	1	0	0,1,2,3,4,5,6 ,7,8,9	2	1	2	6

Table 6.3.3.2-4: Random access configurations for FR2 and unpaired spectrum.

PRACH Config- Index	Pream ble format	n _{SFN} mode x = y		Slot number	Starti ng symp ol	Numb er of PRACH slots within a 60 kHz slot	N _{t,RA,slot} , numbe r of time- domain PRACH occasi ons within a PRACH slot	N _{dur,RA} , PRACH durati on
		x	y					
0	A1	16	1	4,9,14,19,24,29,34 ,39	0	2	6	2
1	A1	16	1	3,7,11,15,19,23,27 ,31,35,39	0	1	6	2
2	A1	8	1,2	9,19,29,39	0	2	6	2

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration
		3	A1					
				8				
4	A1	8	1	3,7,11,15,19,23,27, 31,35,39	0	1	6	2
5	A1	4	1	4,9,14,19,24,29,34, 39	0	1	6	2
6	A1	4	1	4,9,14,19,24,29,34, 39	0	2	6	2
7	A1	4	1	3,7,11,15,19,23,27, 31,35,39	0	1	6	2
8	A1	2	1	7,15,23,31,39	0	2	6	2
9	A1	2	1	4,9,14,19,24,29,34, 39	0	1	6	2
10	A1	2	1	4,9,14,19,24,29,34, 39	0	2	6	2
11	A1	2	1	3,7,11,15,19,23,27, 31,35,39	0	1	6	2
12	A1	1	0	19,39	7	1	3	2
13	A1	1	0	3,5,7	0	1	6	2
14	A1	1	0	24,29,34,39	7	1	3	2
15	A1	1	0	9,19,29,39	7	2	3	2
16	A1	1	0	17,19,37,39	0	1	6	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration in slots
		17	A1					
18	A1	1	0	4,9,14,19,24,29,34,39	0	1	6	2
19	A1	1	0	4,9,14,19,24,29,34,39	7	1	3	2
20	A1	1	0	3,5,7,9,11,13	7	1	3	2
21	A1	1	0	23,27,31,35,39	7	1	3	2
22	A1	1	0	7,15,23,31,39	0	1	6	2
23	A1	1	0	23,27,31,35,39	0	1	6	2
24	A1	1	0	13,14,15,29,30,31,37,38,39	7	2	3	2
25	A1	1	0	3,7,11,15,19,23,27,31,35,39	7	1	3	2
26	A1	1	0	3,7,11,15,19,23,27,31,35,39	0	1	6	2
27	A1	1	0	1,3,5,7,...,37,39	0	1	6	2
28	A1	1	0	0,1,2,...,39	7	1	3	2
29	A2	16	1	4,9,14,19,24,29,34,39	0	2	3	4
30	A2	16	1	3,7,11,15,19,23,27,31,35,39	0	1	3	4
31	A2	8	1	4,9,14,19,24,29,34,39	0	2	3	4
32	A2	8	1	3,7,11,15,19,23,27,31,35,39	0	1	3	4
33	A2	8	1,2	9,19,29,39	0	2	3	4
34	A2	4	1	4,9,14,19,24,29,34,39	0	1	3	4
35	A2	4	1	4,9,14,19,24,29,34,39	0	2	3	4
36	A2	4	1	3,7,11,15,19,23,27	0	1	3	4

PRACH Config- Index	Preamble format	n_{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	$N_{RA,slot}$, number of time-domain PRACH occasions within a PRACH slot	$N_{dur,RA}$, PRACH duration 1 , 3 5 , 3 9
37	A2	2	1	7,15,23,31,39	0	2	3	4
38	A2	2	1	4,9,14,19,24,29,34, 39	0	1	3	4
39	A2	2	1	4,9,14,19,24,29,34, 39	0	2	3	4
40	A2	2	1	3,7,11,15,19,23,27, 31,35,39	0	1	3	4
41	A2	1	0	19,39	5	1	2	4
42	A2	1	0	3,5,7	0	1	3	4
43	A2	1	0	24,29,34,39	5	1	2	4
44	A2	1	0	9,19,29,39	5	2	2	4
45	A2	1	0	17,19,37,39	0	1	3	4
46	A2	1	0	9, 19, 29, 39	0	2	3	4
47	A2	1	0	7,15,23,31,39	0	1	3	4
48	A2	1	0	23,27,31,35,39	5	1	2	4
49	A2	1	0	23,27,31,35,39	0	1	3	4
50	A2	1	0	3,5,7,9,11,13	5	1	2	4
51	A2	1	0	3,5,7,9,11,13	0	1	3	4
52	A2	1	0	4,9,14,19,24,29,34, 39	5	1	2	4
53	A2	1	0	4,9,14,19,24,29,34, 39	0	1	3	4
54	A2	1	0	13,14,15, 29,30,31,37,38,39	5	2	2	4
55	A2	1	0	3,7,11,15,19,23,27, 31,35,39	5	1	2	4
56	A2	1	0	3,7,11,15,19,23,27, 31,35,39	0	1	3	4
57	A2	1	0	1,3,5,7,...,37,39	0	1	3	4

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time- domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration (2 , ... 3 9
		58	A2	1				
59	A3	16	1	4,9,14,19,24,29,34,39	0	2	2	6
60	A3	16	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
61	A3	8	1	4,9,14,19,24,29,34,39	0	2	2	6
62	A3	8	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
63	A3	8	1,2	9,19,29,39	0	2	2	6
64	A3	4	1	4,9,14,19,24,29,34,39	0	1	2	6
65	A3	4	1	4,9,14,19,24,29,34,39	0	2	2	6
66	A3	4	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
67	A3	2	1	4,9,14,19,24,29,34,39	0	1	2	6
68	A3	2	1	4,9,14,19,24,29,34,39	0	2	2	6
69	A3	2	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
70	A3	1	0	19,39	7	1	1	6
71	A3	1	0	3,5,7	0	1	2	6
72	A3	1	0	9,11,13	2	1	2	6
73	A3	1	0	24,29,34,39	7	1	1	6
74	A3	1	0	9,19,29,39	7	2	1	6
75	A3	1	0	17,19,37,39	0	1	2	6
76	A3	1	0	9,19,29,39	0	2	2	6
77	A3	1	0	7,15,23,31,39	0	1	2	6

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time- domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration (2 7 , 3 1 , 3 5 , 3 9
		78	A3					
79	A3	1	0	23,27,31,35,39	0	1	2	6
80	A3	1	0	3,5,7,9,11,13	0	1	2	6
81	A3	1	0	3,5,7,9,11,13	7	1	1	6
82	A3	1	0	4,9,14,19,24,29,34, 39	0	1	2	6
83	A3	1	0	4,9,14,19,24,29,34, 39	7	1	1	6
84	A3	1	0	13,14,15, 29,30,31,37,38,39	7	2	1	6
85	A3	1	0	3,7,11,15,19,23,27, 31,35,39	7	1	1	6
86	A3	1	0	3,7,11,15,19,23,27, 31,35,39	0	1	2	6
87	A3	1	0	1,3,5,7,...,37,39	0	1	2	6
88	A3	1	0	0,1,2,...,39	7	1	1	6
89	B1	16	1	4,9,14,19,24,29,34, 39	2	2	6	2
90	B1	8	1	4,9,14,19,24,29,34, 39	2	2	6	2
91	B1	8	1,2	9,19,29,39	2	2	6	2
92	B1	4	1	4,9,14,19,24,29,34, 39	2	2	6	2
93	B1	2	1	4,9,14,19,24,29,34, 39	2	2	6	2
94	B1	2	1	3,7,11,15,19,23,27, 31,35,39	2	1	6	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Config. Index	Preamble format	n_{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	$N_{\text{RA,slot}}$, number of time- domain PRACH occasions within a PRACH slot	$N_{\text{dur,RA,PRACH}}$ duration
		95	B1	1				89,39
96	B1	1	0	3,5,7	2	1	6	2
97	B1	1	0	24,29,34,39	8	1	3	2
98	B1	1	0	9,19,29,39	8	2	3	2
99	B1	1	0	17,19,37,39	2	1	6	2
100	B1	1	0	9,19,29,39	2	2	6	2
101	B1	1	0	7,15,23,31,39	2	1	6	2
102	B1	1	0	23,27,31,35,39	8	1	3	2
103	B1	1	0	23,27,31,35,39	2	1	6	2
104	B1	1	0	3,5,7,9,11,13	8	1	3	2
105	B1	1	0	4,9,14,19,24,29,34,39	8	1	3	2
106	B1	1	0	4,9,14,19,24,29,34,39	2	1	6	2
107	B1	1	0	3,7,11,15,19,23,27,31,35,39	8	1	3	2
108	B1	1	0	13,14,15,29,30,31,37,38,39	8	2	3	2
109	B1	1	0	3,7,11,15,19,23,27,31,35,39	2	1	6	2
110	B1	1	0	1,3,5,7,...,37,39	2	1	6	2
111	B1	1	0	0,1,2,...,39	8	1	3	2
112	B4	16	1,2	4,9,14,19,24,29,34,39	0	2	1	12
113	B4	16	1,2	3,7,11,15,19,23,27,31,35,39	0	1	1	12
114	B4	8	1,2	4,9,14,19,24,29,34,39	0	2	1	12
115	B4	8	1,2	3,7,11,15,19,23,27,31,35,39	0	1	1	12

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration in slots
		11	B4					
		6		8				9, 2, 9, 3, 9
117	B4	4	1	4,9,14,19,24,29,34,39	0	1	1	12
118	B4	4	1	4,9,14,19,24,29,34,39	0	2	1	12
119	B4	4	1,2	3,7,11,15,19,23,27,31,35,39	0	1	1	12
120	B4	2	1	7,15,23,31,39	2	2	1	12
121	B4	2	1	4,9,14,19,24,29,34,39	0	1	1	12
122	B4	2	1	4,9,14,19,24,29,34,39	0	2	1	12
123	B4	2	1	3,7,11,15,19,23,27,31,35,39	0	1	1	12
124	B4	1	0	19, 39	2	2	1	12
125	B4	1	0	17, 19, 37, 39	0	1	1	12
126	B4	1	0	24,29,34,39	2	1	1	12
127	B4	1	0	9,19,29,39	2	2	1	12
128	B4	1	0	9,19,29,39	0	2	1	12
129	B4	1	0	7,15,23,31,39	0	1	1	12
130	B4	1	0	7,15,23,31,39	0	2	1	12
131	B4	1	0	23,27,31,35,39	0	1	1	12
132	B4	1	0	23,27,31,35,39	2	2	1	12
133	B4	1	0	9,11,13,15,17,19	0	1	1	12
134	B4	1	0	3,5,7,9,11,13	0,2	1	1	12
135	B4	1	0	4,9,14,19,24,29,34,39	0	1	1	12
136	B4	1	0	4,9,14,19,24,29,34,39	2	2	1	12
137	B4	1	0	13,14,15,	2	2	1	12

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Config- Index	Preamble format	n_{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	$N_{\text{RA,slot}}$, number of time-domain PRACH occasions within a PRACH slot	$N_{\text{dur,RA,PRACH}}$, duration '3 '0 '3 '1 '3 '7 '3 '8 '3 '9
138	B4	1	0	3,7,11,15,19,23,27, 31,35,39	0	1	1	12
139	B4	1	0	3,7,11,15,19,23,27, 31,35,39	2	1	1	12
140	B4	1	0	3, 5, 7, ..., 23,25	2	1	1	12
141	B4	1	0	3, 5, 7, ..., 23,25	0	2	1	12
142	B4	1	0	1,3,5,7,...,37,39	0	1	1	12
143	B4	1	0	0, 1, 2,..., 39	2	1	1	12
144	C0	16	1	4,9,14,19,24,29,34, 39	0	2	7	2
145	C0	16	1	3,7,11,15,19,23,27, 31,35,39	0	1	7	2
146	C0	8	1	4,9,14,19,24,29,34, 39	0	1	7	2
147	C0	8	1	3,7,11,15,19,23,27, 31,35,39	0	1	7	2
148	C0	8	1,2	9,19,29,39	0	2	7	2
149	C0	4	1	4,9,14,19,24,29,34, 39	0	1	7	2
150	C0	4	1	4,9,14,19,24,29,34, 39	0	2	7	2
151	C0	4	1	3,7,11,15,19,23,27, 31,35,39	0	1	7	2

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration
		15	CO					2
153	CO	2	1	4,9,14,19,24,29,34,39	0	1	7	2
154	CO	2	1	4,9,14,19,24,29,34,39	0	2	7	2
155	CO	2	1	3,7,11,15,19,23,27,31,35,39	0	1	7	2
156	CO	1	0	19,39	8	1	3	2
157	CO	1	0	3,5,7	0	1	7	2
158	CO	1	0	24,29,34,39	8	1	3	2
159	CO	1	0	9,19,29,39	8	2	3	2
160	CO	1	0	17,19,37,39	0	1	7	2
161	CO	1	0	9,19,29,39	0	2	7	2
162	CO	1	0	23,27,31,35,39	8	1	3	2
163	CO	1	0	7,15,23,31,39	0	1	7	2
164	CO	1	0	23,27,31,35,39	0	1	7	2
165	CO	1	0	3,5,7,9,11,13	8	1	3	2
166	CO	1	0	4,9,14,19,24,29,34,39	8	1	3	2
167	CO	1	0	4,9,14,19,24,29,34,39	0	1	7	2
168	CO	1	0	13,14,15,29,30,31,37,38,39	8	2	3	2
169	CO	1	0	3,7,11,15,19,23,27,31,35,39	8	1	3	2
170	CO	1	0	3,7,11,15,19,23,27,31,35,39	0	1	7	2

3 5G NR Mode

3.7 Modulation Analysis Measurement

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration
		17	00					
		1		1				5, 7, ..., 33, 37, 39
172	C0	1	0	0,1,2,...,39	8	1	3	2
173	C2	16	1	4,9,14,19,24,29,34,39	0	2	2	6
174	C2	16	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
175	C2	8	1	4,9,14,19,24,29,34,39	0	2	2	6
176	C2	8	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
177	C2	8	1,2	9,19,29,39	0	2	2	6
178	C2	4	1	4,9,14,19,24,29,34,39	0	1	2	6
179	C2	4	1	4,9,14,19,24,29,34,39	0	2	2	6
180	C2	4	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
181	C2	2	1	7,15,23,31,39	2	2	2	6
182	C2	2	1	4,9,14,19,24,29,34,39	0	1	2	6
183	C2	2	1	4,9,14,19,24,29,34,39	0	2	2	6
184	C2	2	1	3,7,11,15,19,23,27,31,35,39	0	1	2	6
185	C2	1	0	19,39	2	1	2	6
186	C2	1	0	3,5,7	0	1	2	6

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration ,2 ,3 ,4 ,3 ,9
		18	C2					
		7		1				
188	C2	1	0	9,19,29,39	7	2	1	6
189	C2	1	0	17,19,37,39	0	1	2	6
190	C2	1	0	9,19,29,39	2	2	2	6
191	C2	1	0	7,15,23,31,39	2	1	2	6
192	C2	1	0	3,5,7,9,11,13	7	1	1	6
193	C2	1	0	23,27,31,35,39	7	2	1	6
194	C2	1	0	23,27,31,35,39	0	1	2	6
195	C2	1	0	4,9,14,19,24,29,34, 39	7	2	1	6
196	C2	1	0	4,9,14,19,24,29,34, 39	2	1	2	6
197	C2	1	0	13,14,15, 29,30,31,37,38,39	7	2	1	6
198	C2	1	0	3,7,11,15,19,23,27, 31,35,39	7	1	1	6
199	C2	1	0	3,7,11,15,19,23,27, 31,35,39	0	1	2	6
200	C2	1	0	1,3,5,7,...,37,39	0	1	2	6
201	C2	1	0	0,1,2,...,39	7	1	1	6
202	A1/B1	16	1	4,9,14,19,24,29,34, 39	2	1	6	2
203	A1/B1	16	1	3,7,11,15,19,23,27, 31,35,39	2	1	6	2
204	A1/B1	8	1	4,9,14,19,24,29,34, 39	2	1	6	2
205	A1/B1	8	1	3,7,11,15,19,23,27, 31,35,39	2	1	6	2
206	A1/B1	4	1	4,9,14,19,24,29,34, 39	2	1	6	2

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Config Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration
		20	A1 /B 1					
		7		4				1 1 1 5 1 9 2 3 2 7 3 1 3 5 3 9
208	A1/B1	2	1	4,9,14,19,24,29,34, 39	2	1	6	2
209	A1/B1	1	0	19,39	8	1	3	2
210	A1/B1	1	0	9,19,29,39	8	1	3	2
211	A1/B1	1	0	17,19,37,39	2	1	6	2
212	A1/B1	1	0	9,19,29,39	2	2	6	2
213	A1/B1	1	0	23,27,31,35,39	8	1	3	2
214	A1/B1	1	0	7,15,23,31,39	2	1	6	2
215	A1/B1	1	0	23,27,31,35,39	2	1	6	2
216	A1/B1	1	0	4,9,14,19,24,29,34, 39	8	1	3	2
217	A1/B1	1	0	4,9,14,19,24,29,34, 39	2	1	6	2
218	A1/B1	1	0	3,7,11,15,19,23,27, 31,35,39	2	1	6	2

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA} , PRACH duration (s)
		21 9	A1 /B 1					
220	A2/B2	16	1	4,9,14,19,24,29,34, 39	2	1	3	4
221	A2/B2	16	1	3,7,11,15,19,23,27, 31,35,39	2	1	3	4
222	A2/B2	8	1	4,9,14,19,24,29,34, 39	2	1	3	4
223	A2/B2	8	1	3,7,11,15,19,23,27, 31,35,39	2	1	3	4
224	A2/B2	4	1	4,9,14,19,24,29,34, 39	2	1	3	4
225	A2/B2	4	1	3,7,11,15,19,23,27, 31,35,39	2	1	3	4
226	A2/B2	2	1	4,9,14,19,24,29,34, 39	2	1	3	4
227	A2/B2	1	0	19,39	6	1	2	4
228	A2/B2	1	0	9,19,29,39	6	1	2	4
229	A2/B2	1	0	17,19,37,39	2	1	3	4
230	A2/B2	1	0	9,19,29,39	2	2	3	4
231	A2/B2	1	0	23,27,31,35,39	6	1	2	4
232	A2/B2	1	0	7,15,23,31,39	2	1	3	4
233	A2/B2	1	0	23,27,31,35,39	2	1	3	4
234	A2/B2	1	0	4,9,14,19,24,29,34, 39	6	1	2	4
235	A2/B2	1	0	4,9,14,19,24,29,34, 39	2	1	3	4

3 5G NR Mode
3.7 Modulation Analysis Measurement

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starting symbol	Number of PRACH slots within a 60 kHz slot	N _{RA,slot} , number of time-domain PRACH occasions within a PRACH slot	N _{dur,RA,PRACH} , duration
		23	A2 /B 2					
		6		1				1 1 1 5 1 9 2 3 2 7 3 1 3 5 3 9
237	A2/B2	1	0	1,3,5,7,...,37,39	2	1	3	4
238	A3/B3	16	1	4,9,14,19,24,29,34,39	2	1	2	6
239	A3/B3	16	1	3,7,11,15,19,23,27,31,35,39	2	1	2	6
240	A3/B3	8	1	4,9,14,19,24,29,34,39	2	1	2	6
241	A3/B3	8	1	3,7,11,15,19,23,27,31,35,39	2	1	2	6
242	A3/B3	4	1	4,9,14,19,24,29,34,39	2	1	2	6
243	A3/B3	4	1	3,7,11,15,19,23,27,31,35,39	2	1	2	6
244	A3/B3	2	1	4,9,14,19,24,29,34,39	2	1	2	6

PRACH Config- Index	Preamble format	n _{SFN} mode x = y		Slot number	Starti ng symp ol	Numb er of PRACH slots within a 60 kHz slot	N _{RA,slot} , numbe r of time- domain PRACH occasi ons within a PRACH slot	N _{dur,RA} , PRACH durati on [0,9, ,3,9]
		24 5	A3 /B 3	1				
246	A3/B3	1	0	9,19,29,39	2	1	2	6
247	A3/B3	1	0	17,19,37,39	2	1	2	6
248	A3/B3	1	0	9,19,29,39	2	2	2	6
249	A3/B3	1	0	7,15,23,31,39	2	1	2	6
250	A3/B3	1	0	23,27,31,35,39	2	1	2	6
251	A3/B3	1	0	23,27,31,35,39	2	2	2	6
252	A3/B3	1	0	4,9,14,19,24,29,34, ,39	2	1	2	6
253	A3/B3	1	0	4,9,14,19,24,29,34, ,39	2	2	2	6
254	A3/B3	1	0	3,7,11,15,19,23,27, ,31,35,39	2	1	2	6
255	A3/B3	1	0	1,3,5,7,...,37,39	2	1	2	6

SCS

Select subcarrier spacing for current PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:SCS SCS1K25 SCS5K SCS15K SCS30K SCS60K SCS120K</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:SCS?</code>
Example	<code>:EVM:CCAR0:PRAC1:SCS SCS15K</code> <code>:EVM:CCAR0:PRAC1:SCS?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting depends on the PRACH Format and Freq Range Format = 0,1,2 SCS = 1.25 kHz Format = 3 SCS = 5 kHz Else for Freq Range 1, SCS should be 15 kHz or 30 kHz; For Freq Range 2, SCS should be 60 kHz or

3 5G NR Mode

3.7 Modulation Analysis Measurement

	120 kHz
Preset	SCS30K
State Saved	Yes
Range	1.25 kHz 5 kHz 15 kHz 30 kHz 60 kHz 120 kHz

Active BWP

Specifies current active uplink BWP.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:ABWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:ABWP?</code>
Example	<code>:EVM:CCAR0:PRAC1:ABWP BWP1</code> <code>:EVM:CCAR0:PRAC1:ABWP?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP1
State Saved	Yes
Range	BWP1 BWP2 BWP3 BWP4

Restricted Set Config

Select Restricted set config for current PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RSET:CONFig NONE TYPEA TYPEB</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RSET:CONFig?</code>
Example	<code>:EVM:CCAR0:PRAC1:RSET:CONF TYPEA</code> <code>:EVM:CCAR0:PRAC1:RSET:CONF?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message This setting depends on the Format <ul style="list-style-type: none"> Format 0,1,2,3: all three options are available Format A1, A2, A3, B1, B2, B3, B4, C0, C2: only Unrestricted set is available
State Saved	Yes
Range	Unrestricted set Restricted set type A Restricted set type B

Msg1 FDM

Select high-layer parameter msg1-FDM for current PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:FDM FDM1 FDM2 FDM4 FDM8</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:FDM?</code>
Example	<code>:EVM:CCAR0:PRAC1:FDM FDM2</code> <code>:EVM:CCAR0:PRAC1:FDM?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	FDM1
State Saved	Yes
Range	1 2 4 8

Power

Specifies Power Boost value for the PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PRAC1:POW 0</code> <code>:EVM:CCAR0:PRAC1:POW?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

Cyclic Shift Index

Specifies Cyclic Shift Index for the PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:CSHift:INDex <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:CSHift:INDex?</code>
Example	<code>:EVM:CCAR0:PRAC1:CSH:IND 1</code> <code>:EVM:CCAR0:PRAC1:CSH:IND?</code>
Notes	-1 means this parameter is changing in signal and therefore need to be auto detected for each burst
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes

Min	-1
Max	838

Root Sequence Index

Specifies Root Sequence Index for the PRACH.

Note: When Occasion Index is -1 (auto detect), Root Sequence Index will also be auto detected and current value is used as search start point. The maximum search length would be 64 root sequence index start from current value.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RSEquence:INDeX <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RSEquence:INDeX?</code>
Example	<code>:EVM:CCAR0:PRAC1:RSEQ:IND 1</code> <code>:EVM:CCAR0:PRAC1:RSEQ:IND?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	0
Max	Format 0,1,2,3, the max is 837 Else, the max is 137

Zero Correlation Zone Config

Specifies Zero Correlation Zone Config for the PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:ZCZone <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:ZCZone?</code>
Example	<code>:EVM:CCAR0:PRAC1:ZCZ 1</code> <code>:EVM:CCAR0:PRAC1:ZCZ?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	15

n_RA_start

Specifies msg1 Frequency Start (n_RA_start) for the PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RAStart <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RAStart?</code>
Example	<code>:EVM:CCAR0:PRAC1:RASt 1</code> <code>:EVM:CCAR0:PRAC1:RASt?</code>
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	RB number of BWP - 1

Occasion Index

Specifies Occasion Index for the PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RA <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:RA?</code>
Example	<code>:EVM:CCAR0:PRAC1:RA 1</code> <code>:EVM:CCAR0:PRAC1:RA?</code>
Notes	-1 means this parameter is changing in signal and therefore need to be auto detected for each burst
Couplings	Max value for n = 100 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	-1
Max	511

Frame Offset

Set the Frame Offset determined by the configuration table and configuration index, corresponding to the 'y' in the table. When there is only one valid value, this parameter is display only.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:FRAME:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH<n>:FRAME:OFFSet?</code>
----------------	---

Example	<code>:EVM:CCAR0:PRAC1:FRAM:OFFS 1</code> <code>:EVM:CCAR0:PRAC1:FRAM:OFFS?</code>
Preset	0
State Saved	Yes
Min	0
Max	2

Subframe Index (Display Only)

Display the subframe index of PRACH according to Occasion Index.

State Saved	No
-------------	----

n_RA_t (Display Only)

Display the n_RA_t of PRACH according to Occasion Index.

State Saved	No
-------------	----

n_RA_slot (Display Only)

Display the n_RA_slot of PRACH according to Occasion Index.

State Saved	No
-------------	----

n_RA_f (Display Only)

Display the n_RA_f of PRACH according to Occasion Index.

State Saved	No
-------------	----

L_RA

Set the L_RA value of PRACH.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH1 100:LRA L139 L571 L839 L1151</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PRACH1 100:LRA?</code>
Example	<code>:EVM:CCAR0:PRAC:LRA L571</code> <code>:EVM:CCAR0:PRAC:LRA?</code>
Couplings	Max value for n = 100 and Min value for n = 1

	139 1151 for 15kHz SCS; 139 571 for 30kHz SCS; Fixed to 139 for 60kHz and 120kHz SCS; Fixed to 839 for 1.25kHz and 5kHz SCS Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	139
State Saved	Yes
Range	139 571 839 1151

PSCCH (Sidelink)

View and configure the PSCCH parameters.

Add PSCCH (GUI only)

Pressing this control inserts a new PSCCH configuration into list, the maximum number of PSCCH configurations is 16.

See ["Effective PDCCH Number \(Remote Command only\)" on page 1989](#) for SCPI to provide similar function.

Delete PSCCH

Pressing this control deletes selected PSCCH configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PSCCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PSCC 1</code>

Clear All (GUI only)

Pressing this control deletes all PSCCH configuration from list.

See ["Effective PDCCH Number \(Remote Command only\)" on page 1989](#) for SCPI to provide similar function.

Effective PSCCH Number (Remote Command only)

Specifies how many PSCCH configurations are effective, this SCPI only command is used to provide similar function as "Add PSCCH" and "Delete PSCCH".

Note all 16 PSCCH configurations can be modified through SCPI, but ineffective PSCCH configurations (index > Effective PSCCH Number) will not be included in the measurement no matter its state is "On" or "Off".

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PSCCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PSCCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PSCC 2</code> <code>:EVM:CCAR0:NUMB:PSCC?</code>
Couplings	Max value is 16 If you attempt to remotely set the Count larger than 16, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	16

PSCCH Parameter Group (Display only)

Allows you to configure the PSCCH parameters.

This control is for UI display only. You can select one of the following groups:

General Settings

"State" on page 2163 "Payload Size" on page 2168 "PSCCH Power Boosting" on page 2166

Resource Allocation Settings

"State" on page 2163 "BWP" on page 2164 "RB Offset" on page 2165 "RB Number" on page 2166 "RB Offset" on page 1969 "Number of Symbols" on page 2165 "Allocated Slots" on page 2164

DMRS Settings

"State" on page 2163 "DMRS Scrambling ID" on page 2167 "DMRS Parameter i" on page 2167 "DMRS Power Boosting" on page 2166

State

Enable or disable PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PSCC1 OFF</code> <code>:EVM:CCAR0:PSCC1?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message

Preset	OFF
State Saved	Yes

BWP

Specifies the BWP of PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:BWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PSCC1:BWP BWP1</code> <code>:EVM:CCAR0:PSCC1:BWP?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP1
State Saved	Yes
Range	BWP1 ... BWP4

Allocated Slots

Specifies the Slots allocated to PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SLOT:ALLOcated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SLOT:ALLOcated?</code>
Example	<code>:EVM:CCAR0:PSCC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PSCC1:SLOT:ALL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0"
State Saved	Yes

First Symbol

Specifies the First Symbol of PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SYMBol:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SYMBol:FIRSt?</code>
Example	<code>:EVM:CCAR0:PSCC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PSCC1:SYMB:FIRS?</code>
Couplings	Max value for n = 16 and Min value for n = 1

3 5G NR Mode

3.7 Modulation Analysis Measurement

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	0
Max	13

Number of Symbols

Specifies the Symbol Number of PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SYMBOL:NUMBER <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:SYMBOL:NUMBER?</code>
Example	<code>:EVM:CCAR0:PSCC1:SYMB:NUMB 2</code> <code>:EVM:CCAR0:PSCC1:SYMB:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Min	1
Max	2

RB Offset

Specifies the RB Offset of selected PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:RB:OFFSet?</code>
Example	<code>:EVM:CCAR0:PSCC1:RB:OFFSet 0</code> <code>:EVM:CCAR0:PSCC1:RB:OFFSet?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Range	The range is coupled with BWP
Min	0
Max	RB Number of selected BWP – PSCCH RB Number

RB Number

Specifies the RB Number of selected PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:RB:NUMBER <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:RB:NUMBER?</code>
Example	<code>:EVM:CCAR0:PSCC1:RB:NUMB 273</code> <code>:EVM:CCAR0:PSCC1:RB:NUMB?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	10
State Saved	Yes
Range	The range is coupled with BWP and RB Start
Min	1
Max	RB Number of selected BWP

PSCCH Power Boosting

Specifies Power Boost value for the PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PSCC1:POW 0</code> <code>:EVM:CCAR0:PSCC1:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PSCC1:DMRS:POW 0</code>

	<code>:EVM:CCAR0:PSCC1:DMRS:POW?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

DMRS Scrambling ID

Specifies the PSCCH DMRS Scrambling ID.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:SCID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:SCID?</code>
Example	<code>:EVM:CCAR0:PSCC:DMRS:SCID 0</code> <code>:EVM:CCAR0:PSCC:DMRS:SCID?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	65535

DMRS Parameter i

Specifies the PSCCH DMRS mapping parameter i.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:MAPI <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:MAPI?</code>
Example	<code>:EVM:CCAR0:PSCC:DMRS:MAPI 0</code> <code>:EVM:CCAR0:PSCC:DMRS:MAPI?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	2

Payload Size

Specifies the Payload Size of PSCCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:LOAD:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:LOAD:SIZE?</code>
Example	<code>:EVM:CCAR0:PSCC1:LOAD:SIZE 10</code> <code>:EVM:CCAR0:PSCC1:LOAD:SIZE?</code>
Preset	60
State Saved	Yes
Min	1
Max	408

PSSCH (Sidelink)

View and configure the PSSCH parameters.

Add PSSCH (GUI only)

Pressing this control inserts a new PSCCH configuration into list, the maximum number of PSCCH configurations is 250.

See "[Effective PDCCH Number \(Remote Command only\)](#)" on page 1989 for SCPI to provide similar function.

Delete PSCCH

Pressing this control deletes selected PSSCH configuration from list.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DELeTe:PSSCh <integer></code>
Example	<code>:EVM:CCAR0:DEL:PSSC 1</code>

Clear All (GUI only)

Pressing this control deletes all PSSCH configuration from list.

See "[Effective PDCCH Number \(Remote Command only\)](#)" on page 1989 for SCPI to provide similar function.

Effective PSSCH Number (Remote Command only)

Specifies how many PSSCH configurations are effective, this SCPI only command is used to provide similar function as “Add PSSCH” and “Delete PSSCH”.

Note all 250 PSSCH configurations can be modified through SCPI, but ineffective PSSCH configurations (index > Effective PSSCH Number) will not be included in the measurement no matter its state is “On” or “Off”.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PSSCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:NUMBer:PSSCh?</code>
Example	<code>:EVM:CCAR0:NUMB:PSSC 2</code> <code>:EVM:CCAR0:NUMB:PSSC?</code>
Couplings	Max value is 250 If you attempt to remotely set the Count larger than 250, this will result in an error message
Preset	1
State Saved	Yes
Min	0
Max	250

PSSCH Parameter Group (Display only)

Allows you to configure the PSSCH parameters.

This control is for UI display only. You can select one of the following groups:

General Setting

"State" on page 2170	"n_ID" on page 2171	"PSCCH Duration" on page 2171	"DMRS Symbol Number (Remote Command only)" on page 2175 (SCPI only)	"MCS" on page 2175	"Modulation (Display Only)" on page 2175
"xOverhead" on page 2180	"SCI2 State" on page 2178	"SCI2 Scaling" on page 2178	"SCI2 Beta Offset Index" on page 2179	"SCI2 Payload Size" on page 2179	

Resource Allocation Setting

"State" on page 2170	"BWP" on page 2170	"RB Offset"	"RB Num"	"Allocated"	"First Symbol"	"Last Symbol" on
----------------------	--------------------	-------------	----------	-------------	----------------	------------------

		on page 2172	ber" on page 2173	Slots" on page 2173	on page 2174	page 2174
"DMRS Time Pattern List" on page 2180		"Number of DMRS Symbols" on page 2180				
Antenna Setting						
"State" on page 2170		"Antenna Port" on page 2172				
PTRS Setting						
"State" on page 2170	"PTRS Enable" on page 2176	"PTRS K" on page 2177	"PTR S L" on page 2177	"PTRS RE Offset" on page 2178		
Power Setting						
"State" on page 2170	"PSSCH Power Boosting" on page 2172	"DMRS Power Boosting" on page 2176	"PTRS Power Boosting" on page 2176			

State

Enable or disable selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>[:STATe]?</code>
Example	<code>:EVM:CCAR0:PSSC1 OFF</code> <code>:EVM:CCAR0:PSSC1?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes
Range	DISABLE ENABLE 0 1

BWP

Specifies the BWP of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:BWP BWP1 ... BWP4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:BWP?</code>
Example	<code>:EVM:CCAR0:PSSC1:BWP BWP1</code> <code>:EVM:CCAR0:PSSC1:BWP?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BWP1
State Saved	Yes
Range	BWP1 BWP2 BWP3 BWP4

PSCCH Duration

Specifies the associated PSCCH duration in symbol number.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PSCCh <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PSCCh?</code>
Example	<code>:EVM:CCAR0:PSSC1:PSCC 1</code> <code>:EVM:CCAR0:PSSC1:PSCC?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	2
Max	3

n_ID

Specifies n_ID for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:NID <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:NID?</code>
Example	<code>:EVM:CCAR0:PSSC1:NID 0</code> <code>:EVM:CCAR0:PSSC1:NID?</code>
Notes	-1 means using Cell ID as n_ID
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes

Min	0
Max	65535

Antenna Port

Specifies the Antenna Port of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:ANTenna:PORT <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:PSSC1:ANT:PORT 1000</code> <code>:EVM:CCAR0:PSSC1:ANT:PORT?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1000
State Saved	Yes
Min	1000
Max	1001

PSSCH Power Boosting

Specifies Power Boost value for the selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:POWer <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:POWer?</code>
Example	<code>:EVM:CCAR0:PSSC1:POW 0</code> <code>:EVM:CCAR0:PSSC1:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

RB Offset

Specifies the RB Offset of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:RB:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:RB:OFFSet?</code>
----------------	---

Example	<code>:EVM:CCAR0:PSSC1:RB:OFFSet 0</code> <code>:EVM:CCAR0:PSSC1:RB:OFFSet?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Range	The range is coupled with BWP
Min	0
Max	RB Number of selected BWP – PSSCH RB Number

RB Number

Specifies the RB Number of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:RB:NUMBer <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:RB:NUMBer?</code>
Example	<code>:EVM:CCAR0:PSSC1:RB:NUMB 273</code> <code>:EVM:CCAR0:PSSC1:RB:NUMB?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	273
State Saved	Yes
Range	The range is coupled with BWP and RB Start
Min	1
Max	RB Number of selected BWP

Allocated Slots

Specifies the slots allocated to selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SLOT:ALLocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SLOT:ALLocated?</code>
Example	<code>:EVM:CCAR0:PSSC1:SLOT:ALL "2:9"</code> <code>:EVM:CCAR0:PSSC1:SLOT:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"0:19"
State Saved	Yes

First Symbol

Specifies the First Symbol of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SYMBol:FIRSt <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SYMBol:FIRSt?</code>
Example	<code>:EVM:CCAR0:PSSC1:SYMB:FIRS 4</code> <code>:EVM:CCAR0:PSSC1:SYMB:FIRS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	1
State Saved	Yes
Min	1
Max	8

Last Symbol

Specifies the Last Symbol of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SYMBol:LAST <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SYMBol:LAST?</code>
Example	<code>:EVM:CCAR0:PSSC1:SYMB:LAST 4</code> <code>:EVM:CCAR0:PSSC1:SYMB:LAST?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	12
State Saved	Yes
Min	5
Max	12

MCS Table

Specifies which MCS table is used to configure MCS for selected PSSCH configuration. Please refer to 38.214 clause 5.1.3 for complete MCS table.

- Table 1 – Table 5.1.3.1-1 (64QAM)
- Table 2 – Table 5.1.3.1-2 (256QAM)
- Table 3 – Table 5.1.3.1-3 (64QAMLowSE)

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:MCS:TABLE TABLE1 TABLE2 TABLE3</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:MCS:TABLE?</code>
Example	<code>:EVM:CCAR0:PSSC1:MCS:TABLE TABLE2</code> <code>:EVM:CCAR0:PSSC1:MCS:TABLE?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	TABLE1
State Saved	Yes
Range	64QAM 256QAM 64QAMLowSE

MCS

Specifies the MCS index for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:MCS <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:MCS?</code>
Example	<code>:EVM:CCAR0:PSSC1:MCS 1</code> <code>:EVM:CCAR0:PSSC1:MCS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	31

Modulation (Display Only)

Display modulation according to MCS table and MCS setting for the selected PSSCH configuration.

DMRS Symbol Number (Remote Command only)

Specifies DMRS symbol number for the selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:SYMBOL:NUMBER <int></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:SYMBOL:NUMBER?</code>
Example	<code>:EVM:CCAR0:PSSC1:DMRS:SYMBOL:NUMBER 2</code> <code>:EVM:CCAR0:PSSC1:DMRS:SYMBOL:NUMBER?</code>

Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	2
State Saved	Yes
Min	2
Max	4

DMRS Power Boosting

Specifies DMRS Power Boost value for the selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:POWer?</code>
Example	<code>:EVM:CCAR0:PSSC1:DMRS:POW 0</code> <code>:EVM:CCAR0:PSSC1:DMRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

PTRS Enable

Enable or disable PTRS for selected PSSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS[:STATe]?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS OFF</code> <code>:EVM:CCAR0:PSSC1:PTRS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	OFF
State Saved	Yes
Range	DISABLE ENABLE 0 1

PTRS Power Boosting

Specifies PTRS Power Boost value for the selected PSSCH configuration.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:POWer <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:POWer?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS:POW 0</code> <code>:EVM:CCAR0:PSSC1:PTRS:POW?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0 dB
State Saved	Yes
Min	-100
Max	100

PTRS K

Specifies PTRS frequency density (K_PTRS) for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:K K2 K4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:K?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS:K K2</code> <code>:EVM:CCAR0:PSSC1:PTRS:K?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	K2
State Saved	Yes
Range	2 4

PTRS L

Specifies PTRS time density (L_PTRS) for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:L L1 L2 L4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:L?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS:L L2</code> <code>:EVM:CCAR0:PSSC1:PTRS:L?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	L1
State Saved	Yes
Range	1 2 4

PTRS RE Offset

Specifies PTRS RE Offset for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:RE:OFFSet BIT00 BIT01 BIT10 BIT11</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:RE:OFFSet?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS:RE:OFFS BIT00</code> <code>:EVM:CCAR0:PSSC1:PTRS:RE:OFFS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	BIT00
State Saved	Yes
Range	00 01 10 11

SCI2 State

Enable or disable SCI2 payload for selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2[:STATe]?</code>
Example	<code>:EVM:CCAR0:PSSC1:SCI2 OFF</code> <code>:EVM:CCAR0:PSSC1:SCI2?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes
Range	DISABLE ENABLE 0 1

SCI2 Scaling

Specifies the SCI2 Scaling of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:SCALing <float></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:SCALing?</code>
Example	<code>:EVM:CCAR0:PSSC1:SCI2:SCAL 0.8</code> <code>:EVM:CCAR0:PSSC1:SCI2:SCAL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message

Preset	1.0
State Saved	Yes
Min	0.5
Max	1.0

SCI2 Beta Offset Index

Specifies the SCI2 Beta Offset index of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:OFFSet <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:OFFSet?</code>
Example	<code>:EVM:CCAR0:PSSC1:SCI2:OFFS 1</code> <code>:EVM:CCAR0:PSSC1:SCI2:OFFS?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	6
State Saved	Yes
Min	0
Max	15

SCI2 Payload Size

Specifies the SCI2 Payload Size of selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:LOAD:SIZE <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:SCI2:LOAD:SIZE?</code>
Example	<code>:EVM:CCAR0:PSSC1:SCI2:LOAD:SIZE 100</code> <code>:EVM:CCAR0:PSSC1:SCI2:LOAD:SIZE?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	35
State Saved	Yes
Min	1
Max	140

xOverhead

Specifies the xOverhead parameter (N_oh_PRB) for the TB size calculation of the selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:X:OVERhead <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:X:OVERhead?</code>
Example	<code>:EVM:CCAR0:PSSC1:X:OVER 1</code> <code>:EVM:CCAR0:PSSC1:X:OVER?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	0
State Saved	Yes
Min	0
Max	18

DMRS Time Pattern List

Selects one of seven configurations of sl-PSSCH-DMRS-TimePatternList in 3GPP 38.214 8.1.3.2.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:TIME:PATtern P2 P3 P4 P23 P24 P34 P234</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:TIME:PATtern?</code>
Example	<code>:EVM:CCAR0:PSSC1:DMRS:TIME:PATT P23</code> <code>:EVM:CCAR0:PSSC1:DMRS:TIME:PATT?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	P2
State Saved	Yes
Range	2 3 4 2,3 2,4 3,4 2,3,4

Number of DMRS Symbols

Specifies the DMRS symbol number for each allocated slot in selected PSSCH configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:SYMBol:NUMBer:ALLocated <string></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:SYMBol:NUMBer:ALLocated?</code>
----------------	--

Example	<code>:EVM:CCAR0:PSSC1:DMRS:SYMB:NUMB:ALL "2,2,3,2"</code> <code>:EVM:CCAR0:PSSC1:DMRS:SYMB:NUMB:ALL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 This setting will be updated according to sl-PSSCH-DMRS-TimePatternList. Also it will be updated when the DMRS Symbol Number is changed via SCPI. When the length is less than allocated slots, the last value will be used for remaining slots. Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	"2"
State Saved	Yes

Summary (Downlink)

View and configure the parameters in a summary table.

Include All (GUI only)

Includes all possible parameters in the summary table, except State.

Exclude All (GUI only)

Excludes all possible parameters in the summary table, except State.

Include PSS

Includes or excludes PSS in selected SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PSS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PSS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSB1:PSS:INCL OFF</code> <code>:EVM:CCAR0:SSB1:PSS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include SSS

Includes or excludes SSS in selected SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SSS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:SSS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSB1:SSS:INCL OFF</code> <code>:EVM:CCAR0:SSB1:SSS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PBCH

Includes or excludes PBCH in selected SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:INCLude?</code>
Example	<code>:EVM:CCAR0:SSB1:PBCH:INCL OFF</code> <code>:EVM:CCAR0:SSB1:PBCH:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PBCH DMRS

Includes or excludes PBCH DMRS in selected SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSB<n>:PBCH:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSB1:PBCH:DMRS:INCL OFF</code> <code>:EVM:CCAR0:SSB1:PBCH:DMRS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PDCCH

Includes or excludes PDCCH in selected PDCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PDCC1:INCL OFF</code> <code>:EVM:CCAR0:PDCC1:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PDCCH DMRS

Includes or excludes PDCCH DMRS in selected PDCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDCCh<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PDCC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PDCC1:DMRS:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PDSCH

Includes or excludes PDSCH in selected PDSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDSCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PDSC1:INCL OFF</code> <code>:EVM:CCAR0:PDSC1:INCL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PDSCH DMRS

Includes or excludes PDSCH DMRS in selected PDSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PDSC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PDSC1:DMRS:INCL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PDSCH PTRS

Includes or excludes PDSCH PTRS in selected PDSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PTRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PDsch<n>:PTRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PDSC1:PTRS:INCL OFF</code> <code>:EVM:CCAR0:PDSC1:PTRS:INCL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include CSI-RS

Enable or disable CSI-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CSIRs<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:CSIR1:INCL OFF</code> <code>:EVM:CCAR0:CSIR1:INCL?</code>
Couplings	Max value for n=8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include RIM-RS

Specifies whether to include or exclude RIM-RS configuration.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:RIMRs<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:RIMR1:INCL OFF</code> <code>:EVM:CCAR0:RIMR1:INCL ?</code>
Couplings	Max value for n = 8 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Edit Colors (GUI only)

This table display color for each physical channel allocations, you may customize them.

Reset (GUI Only)

Pressing this control will reset color for each physical channel allocations.

Summary (Uplink)

View and configure the parameters in a summary table.

Include All (GUI only)

Includes all possible parameters in the summary table, except State.

Exclude All (GUI only)

Excludes all possible parameters in the summary table, except State.

Include PUCCH

Includes or excludes PUCCH in selected PUCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PUCCH1:INCL OFF</code> <code>:EVM:CCAR0:PUCCH1:INCL ?</code>
Couplings	Max value for n = 16 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PUCCH DMRS

Includes or excludes PUCCH DMRS in selected PUCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUCCh<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PUC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PUC1:DMRS:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PUSCH

Includes or excludes PUSCH in selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PUSC1:INCL OFF</code> <code>:EVM:CCAR0:PUSC1:INCL?</code>
Couplings	Max value for n = 250 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PUSCH DMRS

Includes or excludes PUSCH DMRS in selected PUSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PUSCh<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PUSC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PUSC1:DMRS:INCL?</code>
Couplings	Max value for n = 250 and Min value for n = 1

	Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include SRS

Includes or excludes SRS.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SRS<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:SRS:INCL OFF</code> <code>:EVM:CCAR0:SRS:INCL?</code>
Couplings	Max value for n = 1 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Edit Colors (GUI only)

See ["Edit Colors \(GUI only\)" on page 2185](#)

Reset (GUI only)

See ["Reset \(GUI Only\)" on page 2185](#)

Summary (Sidelink)

View and configure the parameters in a summary table.

Include All (GUI only)

Includes all possible parameters in the summary table, except State.

Exclude All (GUI only)

Excludes all possible parameters in the summary table, except State.

Include S-PSS

Includes or excludes PSS in selected S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SPSS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SPSS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSSB1:SPSS:INCL OFF</code> <code>:EVM:CCAR0:SSSB1:SPSS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include S-SSS

Includes or excludes SSS in selected S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SSSS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:SSSS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSSB1:SSSS:INCL OFF</code> <code>:EVM:CCAR0:SSSB1:SSSS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSBCH

Includes or excludes PSBCH in selected S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PSBCh:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PSBCh:INCLude?</code>
Example	<code>:EVM:CCAR0:SSSB1:PSBC:INCL OFF</code> <code>:EVM:CCAR0:SSSB1:PSBC:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSBCH DMRS

Includes or excludes PSBCH DMRS in selected S-SS Block.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PSBCh:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SSSB<n>:PSBCh:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:SSSB1:PSBC:DMRS:INCL OFF</code> <code>:EVM:CCAR0:SSSB1:PSBC:DMRS:INCL?</code>
Couplings	The sub-opcode <n> max value 2 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSCCH

Includes or excludes selected PSCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PSCC1:INCL OFF</code> <code>:EVM:CCAR0:PSCC1:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSCCH DMRS

Includes or excludes PSCCH DMRS in selected PSCCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSCCh<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PSCC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PSCC1:DMRS:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSSCH

Includes or excludes selected PSSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:INCLude?</code>
Example	<code>:EVM:CCAR0:PSSC1:INCL OFF</code> <code>:EVM:CCAR0:PSSC1:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSSCH DMRS

Includes or excludes PSSCH DMRS in selected PSSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:DMRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PSSC1:DMRS:INCL OFF</code> <code>:EVM:CCAR0:PSSC1:DMRS:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Include PSSCH PTRS

Includes or excludes PSSCH PTRS in selected PSSCH allocation.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:INCLude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PSSCh<n>:PTRS:INCLude?</code>
Example	<code>:EVM:CCAR0:PSSC1:PTRS:INCL OFF</code> <code>:EVM:CCAR0:PSSC1:PTRS:INCL?</code>
Couplings	Max value for n = 16 and Min value for n = 1 Attempting to remotely set or query a sub-opcode that is out of range generates an error message
Preset	ON
State Saved	Yes

Edit Colors (GUI only)

See "Edit Colors (GUI only)" on page 2185

Reset (GUI only)

See "Reset (GUI Only)" on page 2185

3.7.8.7 Advanced

Enables you to configure advanced parameters for de-modulation algorithm.

IF Gain

In order to take full advantage of the RF dynamic range of the analyzer, we offer a switched IF amplifier with approximately 10 dB of gain. When it can be turned on without an overload, the dynamic range is always better with it on than off. The control “IF Gain” can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

This control is not available in VXT, M9410E/11E/15E/16E, EXM, and UXM.

IF Gain Auto

Activates the auto rules for IF Gain

Remote Command	<code>[:SENSe]:EVM:IF:GAIN:AUTO[:STATe] ON OFF 1 0</code> <code>[:SENSe]:EVM:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:EVM:IF:GAIN:AUTO OFF</code> <code>:EVM:IF:GAIN:AUTO?</code>
Couplings	When either the auto attenuation works (for example, with electrical attenuator), or the optimized mechanical attenuator range is requested, the IF Gain setting is changed as following rule Auto sets IF Gain to On under any of the following conditions: the input attenuator is set to 0 dB. For other settings, Auto sets IF Gain to Off
Preset	OFF
State Saved	Yes
Range	Auto Man IF Gain Select Selects the range of IF gain.

- High gain: set 10dB IF gain for better noise level measurements
- Low gain: set 0dB IF gain for large signals
- Other: allow to set arbitrary IF gain value within -12dB to 12dB. This selection is not available for B25 If bandwidth option

When this parameter is changed, IF Gain Auto will become Man.

Remote Command	<code>[:SENSe]:EVM:IF:GAIN:SElect LOW HIGH OTHer</code> <code>[:SENSe]:EVM:IF:GAIN:SElect?</code>
Example	<code>:EVM:IF:GAIN:SEL LOW</code> <code>:EVM:IF:GAIN:SEL?</code>
Preset	LOW
State Saved	Yes
Range	LOW HIGH OTHer

Other IF Gain

This specifies the IF gain value. When IF gain is set to Other, this value will be used.

Remote Command	<code>[:SENSe]:EVM:IF:GAIN:LEVel <rel_amp1></code> <code>[:SENSe]:EVM:IF:GAIN:LEVel?</code>
Example	<code>:EVM:IF:GAIN:LEV -10</code> <code>:EVM:IF:GAIN:LEV?</code>
Notes	Not available for B25 IF bandwidth option
Preset	0
State Saved	Saved in instrument state
Min/Max	Depends on CC Bandwidth

LO Dither

When LO Dither is turned on, the local oscillator frequency is rapidly changed by small, random amounts. This helps spread the power of spurious signals within the passband, which lowers their level, thus increasing dynamic range.

This is only required in very wide passbands, so this feature only appears with option H1G.

Remote Command	<code>[:SENSe]:EVM:LO:DITHer[:STATe] ON OFF 1 0</code> <code>[:SENSe]:EVM:LO:DITHer[:STATe]?</code>
Example	<code>:EVM:LO:DITH 1</code>

	:EVM:LO:DITH?
Dependencies	<p>Only available when the instrument has the Option H1G installed. If you try to turn ON LO Dither in any other case, an error message is generated, -241, "Hardware missing; Option H1G required"</p> <p>Only appears in some Modes (e.g., 5G NR, VMA and IQ Analyzer)</p> <p>The LO Dither function is turned Off and grayed out when the IF Path is set to a path other than 1 GHz. If you press the grayed out control, a warning message "LO Dither only available with IF Path 1 GHz" is shown. If you try to set LO Dither to ON remotely while it is grayed out, a message "-221, Settings conflict; LO Dither only available with IF Path 1 GHz" is returned</p> <p>When LO Dither is turned on, the Phase Noise Optimization control is grayed out. If you try to change the PNO value via front panel or SCPI in that case, an error is generated, "LO Dither must be turned off to change this value".</p>
Couplings	<p>As with most parameters with an AUTO state, AUTO COUPLE sets it to Auto, which then picks AUTO range, and setting any specific value (AUTO range, LOW or HIGH) will set the AUTO state to false</p> <p>When LO Dither is turned ON, Phase Noise Optimization is set to "Best Close-In". If the Phase Noise Optimization value changes due to turning on LO Dither, a warning message "Phase Noise Optimization changed due to LO Dither activation" is shown</p>
Preset	OFF
State Saved	Saved in instrument state

Phase Noise Optimization

Allows you to select the LO (local oscillator) phase noise behavior for various operating conditions.

For full details, see ["Parameter Options, Installed Options & Auto Rules" on page 2193](#) and ["Ranges" on page 2198](#) below.

Remote Command	<code>[:SENSe]:EVM:FREQuency:SYNThesis[:STATe] 1 ... 5</code> <p>For the meaning of each numeric option value, see "Parameter Options, Installed Options & Auto Rules" on page 2193 below</p> <code>[:SENSe]:EVM:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:EVM:FREQ:SYNT 1</code> <code>:EVM:FREQ:SYNT?</code>
Dependencies	This control is not available in VXT, M9410E/11E/15E/16E or UXM
Preset	2
State Saved	Saved in instrument state
Range	See "Ranges" on page 2198 below

Parameter Options, Installed Options & Auto Rules

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster

without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
"Balanced" on page 2195	1	<ul style="list-style-type: none"> – In instruments with EPO, balances close-in phase noise with spur avoidance – In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 2195	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 2196	3	Optimizes LO for tuning speed
"Best Close-in" on page 2194	4 or 1*	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 2195	5	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

*Dependent on Option EPO installation. See "Best Close-in" on page 2194 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 2196 is identical in effect to "Best Close-in" on page 2194.

Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

:FREQ:SYNT 4

In instruments with Option EP0, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the ["Balanced" on page 2195](#) setting, parameter 1 selects ["Balanced" on page 2195](#) in EP0 instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects ["Best Close-in" on page 2194](#), which is usually not as good a choice as ["Balanced" on page 2195](#).

Balanced

`:FREQ:SYNT 1`

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Best Spurs

`:FREQ:SYNT 5`

In instruments with EP0, the LO is configured for better phase noise than the ["Best Wide-offset" on page 2195](#) case close to the carrier, but the configuration has 11 dB worse phase noise than the ["Best Close-in" on page 2194](#) case mostly within ± 1 octave around 300 kHz offset. Spurs are even lower than in the ["Balanced" on page 2195](#) case at better than -90 dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

Best Wide-offset

`:FREQ:SYNT 2`

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB

mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term "**Fast Tuning**" on page 2196 refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as "**Best Spurs**" on page 2195. It is available with the "**Fast Tuning**" on page 2196 label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a "**Fast Tuning**" on page 2196 option, the settings for "**Best Close-in**" on page 2194 are used if "**Fast Tuning**" on page 2196 is selected. This gives the fastest possible tuning for that hardware set.)

Auto

:FREQ:SYNT:AUTO ON

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EP0	Center frequency is < 699.9 kHz	" Balanced " on page 2195
Models with option EP0 have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Span > 114.1 MHz, <i>or</i>	" Fast Tuning " on page 2196
	RBW > 800 kHz	
	RBW > 290 kHz, <i>or</i> Span > 4.2 MHz	" Best Wide-offset " on page 2196

3 5G NR Mode

3.7 Modulation Analysis Measurement

Models with Option	Conditions	Selection
		2195
	Other conditions	"Balanced" on page 2195
EP1 Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz	"Fast Tuning" on page 2196 "Best Close-in" on page 2194
	All other conditions	"Best Wide-offset" on page 2195
EP2 Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 2194; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz	"Best Close-in" on page 2194
	Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz	"Fast Tuning" on page 2196
	All other conditions	"Best Wide-offset" on page 2195
EP4 (available in CXA for improved phase noise)	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking"	"Fast Tuning" on page 2196
	CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz	"Best Close-in" on page 2194
	All other conditions	"Best Wide-offset" on page 2195
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 2196 are actually the same as "Best Close-in" on page 2194, but the rules are implemented this way so that the	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i> Source Mode is set to "Tracking"	"Fast Tuning" on page 2196

Models with Option	Conditions	Selection
user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Center frequency is < 25 kHz, <i>or</i>	"Best Close-in" on page 2194
	CF >= 1 MHz <i>and</i> Span <= 141.4 kHz <i>and</i> RBW <= 5 kHz	
	All other conditions	"Best Wide-offset" on page 2195

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
EP1	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
EP2, EP3, EP5	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
EP4	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

Mixing Mode

Changing LO mixing from high-side to low-side vice versa.

Remote Command `[[:SENSe]:EVM:CCARrier0]...|15:LO:MIXMode NORMa1 | ALTeRnate`

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<code>[:SENSe]:EVM:CCARrier0 ... 15:LO:MIXMode?</code>
Example	<code>:EVM:CCAR0:LO:MIXM NORM</code> <code>:EVM:CCAR1:LO:MIXM?</code>
Dependencies	The Mixing Mode key is grayed-out when the RF Input is set to something other than "RF" (such as External Mixer). If you press the grayed-out key, then a warning message "Feature only available with Signal Input RF" is shown If you try to set Mixing Mode via SCPI when disabled, a message -221, "Settings conflict; Feature only available with signal input RF" is returned Not available in VXT, M9410E/11E/15E/16E or UXM
Preset	NORMa1
State Saved	Yes
Range	NORMa1 ALternate Mixing Mode Auto Activates the auto rules for Mixing Mode
Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:LO:MIXMode:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:LO:MIXMode:AUTO?</code>
Example	<code>:EVM:CCAR0:LO:MIXM:AUTO OFF</code> <code>:EVM:CCAR1:LO:MIXM:AUTO?</code>
Preset	ON
State Saved	Yes
Range	Auto Man

Spur Avoidance (UXA H1G)

UXA H1G has spur at -50MHz offset of CF, this Spur Avoidance function is provided to eliminate this spur.

- Auto: move the spur completely out of analysis bandwidth, the tradeoff is available analysis bandwidth will be reduced to 400MHz. And EVM could be worse as the edge of passband is used for analysis
- Manual: move the spur by specified value, or turn off this feature by setting the value to 0

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SAVoid:FREQuency <freq ></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SAVoid:FREQuency?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SAVoid:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SAVoid:AUTO?</code>
Example	<code>:EVM:CCAR0:SAV:FREQ 50MHz</code>

	<code>:EVM:CCAR0:SAV:FREQ?</code> <code>:EVM:CCAR0:SAV:AUTO ON</code> <code>:EVM:CCAR0:SAV:AUTO?</code>
Couplings	Grayed-out when Mixer Mode is Alternate When Acquisition mode is changed from Sequential to Simultaneous, this key will be reset (manual, 0 Hz) for all component carrier
Preset	0 Hz <code>OFF</code>
State Saved	Saved in instrument state Yes
Range	Auto Manual
Min	-(1GHz – BW)/2
Max	(1GHz – BW)/2

Spectrum Stitching

When Spectrum Stitching is turned on, multiple acquisitions overlapped in frequency domain will be performed and then combined to get wide band IQ data. This enables the instrument to capture and analyze wider signal, it may slow down the measurement speed and it requires the signal to occupy the major part of the analysis bandwidth.

Note: accurate trigger is needed to align multiple acquisitions in time domain, and input signal need to be repeated and aligned with trigger precisely.

Remote Command	<code>[:SENSe]:EVM:STITching:SPECTrum[:STATe] ON OFF 1 0</code> <code>[:SENSe]:EVM:STITching:SPECTrum[:STATe]?</code>
Example	<code>:EVM:STIT:SPEC 1</code> <code>:EVM:STIT:SPEC?</code>
Dependencies	Available only in N9032B and N9042B, and only when Trigger Source is External or Periodic
Preset	<code>OFF</code>
State Saved	Saved in instrument state

Advanced Demod Setup

Enables you to configure advanced parameters for de-modulation algorithm.

General

Allows you to configure general advanced parameters for de-modulation algorithm.

Component Carrier (Display Only)

This control is for UI display only. You can select any CC index that is less than the Number of Component Carriers. The inactive carriers are disabled.

See ["Component Carrier" on page 1789](#).

Sync Mode

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:MODE CAC TCC</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:MODE?</code>
Example	<code>:EVM:CCAR0:SYNC:MODE CAC</code> <code>:EVM:CCAR0:SYNC:MODE?</code>
Preset	<code>CAC</code>
State Saved	Yes
Range	CP Auto Correlation Time Cross Correlation

Sync Source

Specifies the signal used for synchronization.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SOURce AUTO SSB PDSCH PUSCH PUCCH PRACH PDCCH SRS SLSSB PSCCH PSSCH CSIRS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SOUR?</code>
Example	<code>:EVM:CCAR0:SYNC:SOUR SSB</code> <code>:EVM:CCAR0:SYNC:SOUR?</code>
Preset	<code>AUTO</code>
State Saved	Yes
Range	Auto SSB PDSCH DMRS PUSCH DMRS PUCCH DMRS PRACH PDCCH DMRS CSI-RS SRS SL SSB PSCCH DMRS PSSCH DMRS

Sync Source Index

Specifies the allocation index of signal used for synchronization. -1 is default setting which means best allocation will be selected automatically according to signal.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SOURce:INDeX <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SYNC:SOURce:INDeX?</code>
Example	<code>:EVM:CCAR0:SYNC:SOUR:IND 1</code>

	<code>:EVM:CCAR0:SYNC:SOUR:IND?</code>
Preset	-1
State Saved	Yes
Min	-1
Max	249

Multi-Carrier Filter

Specifies whether or not to apply a filter to the received "Component Carrier" on page 1789 to filter out adjacent carriers.

When other carriers are expected to be adjacent to the component carrier of interest, this multi-carrier filter can be used to filter out the unwanted carrier and minimize leakage into the component carrier of interest.

When Auto is checked, Multi-Carrier Filter will be turned off for single CC and will be turned on for multiple CC.

For intra-band contiguous carrier aggregation case, turn off Multiple-Carrier Filter may help to improve EVM when SNR is high (close or higher than 50dB).

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:MCFilter[:STATe] OFF ON 0 1</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:MCFilter[:STATe]?</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:MCFilter:AUTO ON OFF 1 0</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:MCFilter:AUTO?</code>
Example	<code>:EVM:CCAR0:MCF OFF</code> <code>:EVM:CCAR0:MCF?</code> <code>:EVM:CCAR0:MCF:AUTO ON</code> <code>:EVM:CCAR0:MCF:AUTO?</code>
Preset	<code>OFF</code> <code>ON</code>
State Saved	<code>Yes</code> <code>Yes</code>
Range	<code>OFF ON</code>

Extended Frequency Lock Range

Specifies range in term of subcarrier (SCS is decided by Sync Source) number for extended frequency lock.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:EFLock:RANge:VALue <integer></code>
----------------	--

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<code>[:SENSe]:EVM:CCARrier0 ... 15:EFLock:RANge:VALue?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EFLock:RANge OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EFLock:RANge?</code>
Example	<code>:EVM:CCAR0:EFL:RANG:VAL 10</code> <code>:EVM:CCAR0:EFL:RANG:VAL?</code> <code>:EVM:CCAR0:EFL:RANG 1</code> <code>:EVM:CCAR0:EFL:RANG?</code>
Preset	3 OFF
State Saved	Yes Yes
Range	OFF ON
Min	1
Max	100

DC Punctured

Specifies if DC will be exclude from demodulation results.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DC:PUNcture OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DC:PUNcture?</code>
Example	<code>:EVM:CCAR0:DC:PUNC 1</code> <code>:EVM:CCAR0:DC:PUNC?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

DC offset from CC center

Specifies the offset from DC location to CC center frequency (DC offset = DC frequency – CC center frequency).

- Auto checked: DC Frequency = Carrier Reference Frequency
- Auto unchecked: DC frequency = CC center frequency + DC offset from CC center

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DC:OFFSet <freq></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DC:OFFSet?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DC:OFFSet:AUTO ON OFF 1 0</code>
----------------	---

	<code>[:SENSe]:EVM:CCARrier0 ... 15:DC:OFFSet:AUTO?</code>
Example	<code>:EVM:CCAR0:DC:OFFS 100MHz</code> <code>:EVM:CCAR0:DC:OFFS?</code> <code>:EVM:CCAR0:DC:OFFS:AUTO ON</code> <code>:EVM:CCAR0:DC:OFFS:AUTO?</code>
Preset	0 OFF
State Saved	Saved in instrument state Yes
Range	Auto Manual
Min	-100 GHz
Max	100 GHz

RF for Phase Compensation

Specifies the radio frequency used for baseband phase compensation before upconversion.

- Auto checked: use the CF of current component carrier
- Auto unchecked: use the value of RF for Phase Compensation. Note if the value is set to zero, it is equivalent to disable baseband phase compensation before upconversion

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PHASe:COMPensation:FREQuency <freq></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PHASe:COMPensation:FREQuency?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PHASe:COMPensation:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PHASe:COMPensation:AUTO?</code>
Example	<code>:EVM:CCAR0:PHAS:COMP:FREQ 1GHz</code> <code>:EVM:CCAR0:PHAS:COMP:FREQ?</code> <code>:EVM:CCAR0:PHAS:COMP:AUTO ON</code> <code>:EVM:CCAR0:PHAS:COMP:AUTO?</code>
Preset	1 GHz ON
State Saved	Saved in instrument state Yes
Range	Auto Manual
Min	0
Max	100 GHz

Channel Power Threshold

Set threshold for Channel Power (active) calculation, it is relative to peak symbol power.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CPOWer:THReshold <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CPOWer:THReshold?</code>
Example	<code>:EVM:CCAR0:CPOW:THR -30</code> <code>:EVM:CCAR0:CPOW:THR?</code>
Preset	-30 dB
State Saved	Saved in instrument state
Min	-100 dB
Max	0 dB

Report EVM in DB

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:REPort:DB OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:REPort:DB?</code>
Example	<code>:EVM:CCAR0:REP:DB 1</code> <code>:EVM:CCAR0:REP:DB?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

Time Scale Factor

Set the Time Scale Factor of the sample rate and acquisition time.

Remote Command	<code>[:SENSe]:EVM:TIME:SCALE:FACTor <integer></code> <code>[:SENSe]:EVM:TIME:SCALE:FACTor?</code>
Example	<code>:EVM:TIME:SCAL:FACT 10</code> <code>:EVM:TIME:SCAL:FACT?</code>
Preset	1
State Saved	Yes
Min	0.01
Max	1000

Reference IQ Data

Specifies composite Reference IQ Data generation mode for EVM and Error Vector calculation.

- Auto – Recover composite Reference Data from input signal
- File – Using recalled Reference Data from file.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:REFeRence:DATA AUTO FILE</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:REFeRence:DATA?</code>
Example	<code>EVM:CCAR0:REF:DATA AUTO</code> <code>EVM:CCAR0:REF:DATA?</code>
Preset	AUTO
State Saved	Saved in instrument state
Range	Auto File

PDSCH Reference Data

Specifies PDSCH Reference Data generation mode for EVM and Error Vector calculation.

- Auto Detect – Recover PDSCH Reference Data from input signal
- NR-TM **PN23** DL – Generate PDSCH Reference Data for 3GPP defined Test Model. This mode will map PN23 sequence to DL symbols only. When input signal is distorted or SNR is low, this mode can help to avoid biased EVM caused by reference data recovery error in Auto Detect mode. But this mode will only work when input signal is standard Test Model
- NR-TM **PN23** All – Generate PDSCH Reference Data for 3GPP defined Test Model. This mode will map PN23 sequence to all symbols (DL and UL). When input signal is distorted or SNR is low, this mode can help to avoid biased EVM caused by reference data recovery error in Auto Detect mode. Note that this mode will only work when input signal is standard Test Model
- All 0's – Generate PDSCH Reference Data with all 0 as payload

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:REFeRence:DATA:PDSCh AUTO PN23 PN23ALL ZERO</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:REFeRence:DATA:PDSCh?</code>
Example	<code>:EVM:CCAR0:REF:DATA:PDSCh PN23</code> <code>:EVM:CCAR0:REF:DATA:PDSCh?</code>
Couplings	This control is disabled when Direction is uplink or Reference Data is File

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	AUTO
State Saved	Saved in instrument state
Range	Auto Detect NR-TM PN23 DL NR-TM PN23 All All 0s

Signal Repeat Pattern

Specifies input signal repeat pattern to improve synchronization stability when input signal is one repeated slot (FR2).

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:SIGNal:PATtern NORMa1 SLOt</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:SIGNal:PATtern?</code>
Example	<code>:EVM:CCAR0:SIGN:PATT SLOt</code> <code>:EVM:CCAR0:SIGN:PATT?</code>
Preset	NORMa1
State Saved	Saved in instrument state
Range	Normal Slot

High Phase Noise Mode

Specifies whether the input signal with high phase noise. When this setting is in Auto mode, it is coupled with “Signal Repeat Pattern”:

When Signal Repeat Pattern is Normal, High Phase Noise Mode is coupled to On; Otherwise, it is Off.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 15:HIGH:PNOise[:STATe] OFF ON 0 1</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:HIGH:PNOise[:STATe]?</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:HIGH:PNOise:AUTO ON OFF 1 0</code> <code>[[:SENSe]:EVM:CCARrier0 ... 15:HIGH:PNOise:AUTO?</code>
Example	<code>:EVM:CCAR0:HIGH:PNO OFF</code> <code>:EVM:CCAR0:HIGH:PNO?</code> <code>:EVM:CCAR0:HIGH:PNO:AUTO ON</code> <code>:EVM:CCAR0:HIGH:PNO:AUTO?</code>
Preset	OFF ON
State Saved	Yes Yes
Range	Off On

Phase Continues across Slots

Specifies if phase continues from slot to slot in signal.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SLOT:PHASe:CONTInue TRUE FALSE 1 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SLOT:PHASe:CONTInue?</code>
Example	<code>:EVM:CCAR0:SLOT:PHAS:CONT 1</code> <code>:EVM:CCAR0:SLOT:PHAS:CONT?</code>
Preset	ON
State Saved	Yes
Range	True False

Magnitude & Phase Error Calculation

Specifies whether to estimate Mag Error and Phase Error.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:MPERror[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:MPERror[:STATe]?</code>
Example	<code>:EVM:CCAR0:MPER 1</code> <code>:EVM:CCAR0:MPER?</code>
Preset	ON
State Saved	Yes
Range	OFF ON

IQ Imbalance Calculation

Specifies whether to estimate IQ imbalance. Note this calculation will only be valid when RF carrier is at the center of current component carrier, and allocated REs are on the both side of RF carrier.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance[:STATe]?</code>
Example	<code>:EVM:CCAR0:IQIM 1</code> <code>:EVM:CCAR0:IQIM?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

IQ Imbalance Mode Calculation

Specifies IQ imbalance estimation mode.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance:MODE Common PSUBcarrier</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance:MODE?</code>
Example	<code>:EVM:CCAR0:IQIM:MODE PSUB</code> <code>:EVM:CCAR0:IQIM:MODE?</code>
Preset	<code>Common</code>
State Saved	Yes
Range	Common Per-Subcarrier

TAE Calculation Mode

Switch TAE calculation mode:

All Allocations – using all PDSCH/PUSCH allocations

Max RE allocation – using the PDSCH/PUSCH allocation with maximum RE number

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TAE:MODE MRE ALL</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TAE:MODE?</code>
Example	<code>:EVM:CCAR0:TAE:MODE ALL</code> <code>:EVM:CCAR0:TAE:MODE?</code>
Preset	<code>Max-RE Alloc</code>
State Saved	Yes
Range	Max-RE Alloc All Alloc

Symbol Clock Error Compensation

Specifies whether to compensate detected symbol clock error.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SCError:COMPensation[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SCError:COMPensation[:STATe]?</code>
Example	<code>:EVM:CCAR0:SCER:COMP OFF</code> <code>:EVM:CCAR0:SCER:COMP?</code>
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>OFF ON</code>

IQ Imbalance Compensation

Specifies whether to compensate IQ imbalance. Note IQ Imbalance calculation (and therefor IQ Imbalance Compensation) will only be valid when RF carrier is at the center of current component carrier, and allocated REs are on the both side of RF carrier.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance:COMPensation[:STATe] OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:IQIMbalance:COMPensation[:STATe]?</code>
Example	<code>:EVM:CCAR0:IQIM:COMP 1</code> <code>:EVM:CCAR0:IQIM:COMP?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

EVM

This tab allows you to configure advanced parameters for EVM.

Component Carrier (Display Only)

This control is for UI display only. You can select any CC index that is less than the Number of Component Carriers. The inactive carriers are disabled.

See "[Component Carrier](#)" on page 1789.

3GPP Conformance Test

When 3GPP Conformance Test is turned on, related settings (in below table) will be reset according to 3GPP specifications automatically. When these parameters are changed manually, 3GPP Conformance Test will be turned off.

	DL FR1	DL FR2	UL FR1	UL FR2
Pre FFT Minimization	On	On	On	On
Tracking Mode	3GPP	3GPP	*3GPP	*3GPP
Tracking Amplitude	Off	Off	*Off	*Off
Tracking Phase	Off	On	*Off	*On
Tracking Timing	Off	Off	*Off	*Off
Equalizer Trainings	RS	RS	RS + Data	RS + Data
EQ Time Basis	Frame	Frame	Slot	Slot

3 5G NR Mode

3.7 Modulation Analysis Measurement

EQ Freq Moving Avg Filter	On, 19 RS	On, 19 RS	Off, 0 RS	Off, 0 RS
EVM Window	3GPP	3GPP	3GPP	3GPP
Symbol Time Adjust	3GPP	3GPP	3GPP	3GPP
IQ Offset Compensation	Off	Off	On	On

* No clear definition in 38.521 so follow 38.104 for now.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CONFormance OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CONFormance?</code>
Example	<code>:EVM:CCAR0:CONF 1</code> <code>:EVM:CCAR0:CONF?</code>
Couplings	This control will be grayed out when MIMO is on
Preset	ON
State Saved	Yes
Range	OFF ON

3GPP Pre FFT Minimization

Enable or disable pre FFT minimization.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:PFFT:MINimization OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:PFFT:MINimization?</code>
Example	<code>:EVM:CCAR0:PFFT:MIN 1</code> <code>:EVM:CCAR0:PFFT:MIN?</code>
Couplings	This control will be grayed out when MIMO is on
Preset	ON
State Saved	Yes
Range	OFF ON

Tracking Mode

Specifies tracking mode for de-modulation algorithm.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:MODE OFF RS RSD GPP</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:MODE?</code>
Example	<code>:EVM:CCAR0:TRAC:MODE OFF</code> <code>:EVM:CCAR0:TRAC:MODE?</code>
Preset	GPP
State Saved	Yes
Range	OFF RS RS+Data 3GPP

Track Amplitude

When Track Amplitude is turned on, the measurement applies pilot subcarrier amplitude error correction to the pilot and data subcarriers (default is true).

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:AMPLitude OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:AMPLitude?</code>
Example	<code>:EVM:CCAR0:TRAC:AMPL 1</code> <code>:EVM:CCAR0:TRAC:AMPL?</code>
Couplings	This control will be OFF and grayed out when Tracking Mode is 3GPP
Preset	OFF
State Saved	Yes
Range	OFF ON

Track Phase

When Track Phase is turned on, the measurement applies pilot subcarrier phase error correction to the pilot and data subcarriers (default is true).

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:PHASe OFF ON 0 1</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:PHASe?</code>
Example	<code>:EVM:CCAR0:TRAC:PHAS 1</code> <code>:EVM:CCAR0:TRAC:PHAS?</code>
Couplings	Grayed-out when Tracking Mode is 3GPP Depends on Frequency Range: <ul style="list-style-type: none"> – FR1: Off – FR2: On (using PTRS as tracking source only)
Preset	OFF
State Saved	Yes
Range	OFF ON

Track Timing

When Track Timing is turned on, the measurement applies pilot subcarrier timing error correction (frequency offset correction) to the pilot and data subcarriers (default is true).

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:TIMing OFF ON 0 1</code>
----------------	---

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRACk:TIMing?</code>
Example	<code>:EVM:CCAR0:TRAC:TIM 1</code> <code>:EVM:CCAR0:TRAC:TIM?</code>
Couplings	This control will be OFF and grayed out when Tracking Mode is 3GPP
Preset	OFF
State Saved	Yes
Range	OFF ON

Equalizer Trainings

Specifies Equalizer Training mode.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning OFF RS RSD</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning?</code>
Example	<code>:EVM:CCAR0:EQU:TRA OFF</code> <code>:EVM:CCAR0:EQU:TRA?</code>
Preset	RS
State Saved	Yes
Range	OFF RS RS+Data

EQ Time Basis

Specifies Equalizer Training averaging length in time domain.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:TBASis SLOT SUBFrame FRAME MINTerval</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:TBASis?</code>
Example	<code>:EVM:CCAR0:EQU:TRA:TBAS SLOT</code> <code>:EVM:CCAR0:EQU:TRA:TBAS?</code>
Preset	FRAME
State Saved	Yes
Range	Slot sub-Frame Frame Meas Interval

EQ Freq Moving Avg Filter

Specifies the state and length (in RS subcarrier) of Equalizer Training moving average filter.

Remote	<code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:MAFilter:LENGth <integer></code>
--------	--

Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:MAFilter:LENGth?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:MAFilter[:STATe] ON OFF 1</code> <code> 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EQUalizer:TRAIning:MAFilter[:STATe]?</code>
Example	<code>:EVM:CCAR0:EQU:TRA:MAF:LENG 19</code> <code>:EVM:CCAR0:EQU:TRA:MAF:LENG?</code> <code>:EVM:CCAR0:EQU:TRA:MAF ON</code> <code>:EVM:CCAR0:EQU:TRA:MAF?</code>
Preset	19 ON
State Saved	Saved in instrument state Yes
Range	ON OFF
Min	1
Max	Depends on signal configuration

EVM Window

Specifies EVM window mode is 3GPP or custom. When 3GPP mode is selected, EVM window is configured according to:

	Downlink	Uplink
FR1	Table 6.5.3.5-2/3/4 in TS 38.141-1 V15.0.0	Table 6.5.3.5-2/3/4 in TS 38.141-1 V15.0.0
FR2	Table 6.6.3.5.1-2/3/4 in TS 38.141-2 V15.0.0	Table 6.6.3.5.1-2/3/4 in TS 38.141-2 V15.0.0
	Table 6.6.3.5.2-1/2/3 in TS 38.141-2 V15.0.0	Table 6.6.3.5.2-1/2/3 in TS 38.141-2 V15.0.0

For the 3GPP TS 38.141-1 standard, see

<https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3367>

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:EVMWindow:MODE GPP CUSTOm</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EVMWindow:MODE?</code>
Example	<code>:EVM:CCAR0:EVMW:MODE GPP</code> <code>:EVM:CCAR0:EVMW:MODE?</code>
Preset	GPP
State Saved	Yes
Range	3GPP Custom

EVM Window Length (Custom)

Specifies EVM window length for custom mode.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:EVMWindow:LENGth:CUSTom <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:EVMWindow:LENGth:CUSTom?</code>
Example	<code>:EVM:CCAR0:EVMW:LENG:CUST 144</code> <code>:EVM:CCAR0:EVMW:LENG:CUST?</code>
Couplings	This control is grayed-out when EVM Window is not custom
Preset	32
State Saved	Yes
Min	1
Max	Depends on Signal Configuration

Symbol Time Adjust

Specifies symbol time adjustment mode:

Max of EVM Window Start/End	Two additional FFT processing windows starting at the start/end of 3GPP/Custom EVM window. The final EVM is the max EVM calculated at 2 FFT processing windows using RMS averaging method
Min of EVM Window Start/End	Two additional FFT processing windows starting at the start/end of 3GPP/Custom EVM window. The final EVM is the min EVM calculated at 2 FFT processing windows using RMS averaging method
EVM Window Start	The symbol FFT used for EVM calculations are taken starting from the Start of the EVM Window
EVM Window End	The symbol FFT used for EVM calculations are taken starting from the End of the EVM Window
EVM Window Center	The symbol FFT used for EVM calculations are taken starting from the Center of the EVM Window
% FFT Size	The symbol FFT used for EVM results begin at the location specified by '% FFT Size'
3GPP	Two additional FFT processing windows starting at the start/end of 3GPP/Custom EVM window. The final EVM is calculated using 3GPP defined method based on 2 FFT processing windows

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:SYMBol:TIMing:ADJust:MODE MAX MIN START END CENTER FFTSize GPP</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:SYMBol:TIMing:ADJust:MODE?</code>
Example	<code>:EVM:CCAR0:SYMB:TIM:ADJ:MODE MAX</code> <code>:EVM:CCAR0:SYMB:TIM:ADJ:MODE?</code>

Preset	GPP
State Saved	Yes
Range	Max of EVM Window Start/End Min of EVM Window Start/End EVM Window Start EVM Window End EVM Window Center % FFT Size 3GPP

% FFT Size

Specifies Symbol Timing Adjustment in % of FFT size for Custom Symbol Time Adjustment Mode.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:SYMBol:TIMing:ADJust <percent> [:SENSe]:EVM:CCARrier0 ... 15:SYMBol:TIMing:ADJust?
Example	:EVM:CCAR0:SYMB:TIM:ADJ -3.125 :EVM:CCAR0:SYMB:TIM:ADJ?
Preset	-3.125
State Saved	Yes
Min	-25%
Max	0

IQ Offset Compensation

Specifies whether to compensate IQ Offset.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:IQOffset:COMPensation[:STATe] OFF ON 0 1 [:SENSe]:EVM:CCARrier0 ... 15:IQOffset:COMPensation[:STATe]?
Example	:EVM:CCAR0:IQOF:COMP 1 :EVM:CCAR0:IQOF:COMP?
Preset	OFF
State Saved	Yes
Range	OFF ON

Transient Capability

Set Transient Capability for EVM calculation.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 15:TRANsient:CAPability OFF US2 US4 US7 [:SENSe]:EVM:CCARrier0 ... 15:TRANsient:CAPability?
Example	:EVM:CCAR0:TRAN:CAP US2 :EVM:CCAR0:TRAN:CAP?

Couplings	This control is visible only when Direction is Uplink
Preset	Normal
State Saved	Saved in instrument state
Range	OFF 2 us 4 us 7 us

Transient Period Power Change Threshold

Specifies transient period power change threshold level in dB. If a mean slot power is changed by more than this value from one slot to another, this slot boundary is handled as transient period. Note also that RB mapping or modulation format is changed from one slot to another, this slot boundary is handled as transient period as well even though a mean power is not changed.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:TRANsient:PPCHange:THReshold <rel_amp1></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:TRANsient:PPCHange:THReshold?</code>
Example	<code>:EVM:CCAR0:TRAN:PPCH:THR 30</code> <code>:EVM:CCAR0:TRAN:PPCH:THR?</code>
Couplings	This control is visible only when Direction is Uplink
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB
Max	100 dB

UL Flatness & IBE

Enables you to configure advanced parameters for UL Spectrum Flatness and In-Band Emission measurement.

Component Carrier (Display Only)

This control is for UI display only. You can select any CC index that is less than the Number of Component Carriers. The inactive carriers are disabled.

See "[Component Carrier](#)" on page 1789.

Channel Condition

Specifies under what condition the Spectrum Flatness test is performed. This parameter determines the minimum requirements for EVM equalizer spectrum flatness test.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FLATness:CHANnel:CONDition NORMal EXTReMe</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FLATness:CHANnel:CONDition NORMal EXTReMe?</code>
Example	<code>:EVM:CCAR0:ULIN:FLAT:CHAN:COND NORM</code> <code>:EVM:CCAR0:ULIN:FLAT:CHAN:COND?</code>
Preset	<code>NORMal</code>
State Saved	Yes
Range	<code>NORMal EXTReMe</code>

F_UL_Low

Specifies the lower frequency of the E-UTRA operating band.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FREQuency:LOW <freq></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FREQuency:LOW?</code>
Example	<code>:EVM:CCAR0:ULIN:FREQ:LOW 1.92 GHz</code> <code>:EVM:CCAR0:ULIN:FREQ:LOW?</code>
Couplings	If the value entered is greater than F_UL_High, F_UL_High is set to the value of F_UL_Low
Preset	1.92GHz
State Saved	Saved in instrument state
Min/Max	0Hz/Depends on F_UL_High

F_UL_High

Specifies the upper frequency of the E-UTRA operating band.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FREQuency:HIGH <freq></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FREQuency:HIGH?</code>
Example	<code>:EVM:CCAR0:ULIN:FREQ:HIGH 1.98 GHz</code> <code>:EVM:CCAR0:ULIN:FREQ:HIGH?</code>
Couplings	The value entered is lower than F_UL_Low, F_UL_Low is set to the value of F_UL_High
Preset	1.98GHz
State Saved	Saved in instrument state
Min/Max	Depends on F_UL_Low/5GHz

Spectrum Flatness Test Tolerance

Specifies the test tolerance for spectrum flatness.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FLATness:TTOLerance <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:FLATness:TTOLerance?</code>
Example	<code>:EVM:CCAR0:ULIN:FLAT:TTOL 2</code> <code>:EVM:CCAR0:ULIN:FLAT:TTOL?</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	100 dB

UE Power Class

Specifies UE power class for In-Band Emission in FR2.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:PClass CLASS1 ... CLASS4</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:PClass?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PCL CLASS2</code> <code>:EVM:CCAR0:ULIN:IBEM:PCL?</code>
Couplings	This control is only valid for FR2
Preset	CLASS3
State Saved	Yes
Range	CLASS 1 CLASS 2 CLASS 3 CLASS 4

UE Output Power

Specifies the UE output power to generate limit in In-Band Emission.

- Auto checked: use the measured power of input signal
- Auto unchecked: use the value to generate limit in In-Band Emission

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:OPower <ampl ></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:OPower?</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:OPower:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:OPower:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:OPOW 10</code> <code>:EVM:CCAR0:ULIN:IBEM:OPOW?</code> <code>:EVM:CCAR0:ULIN:IBEM:OPOW:AUTO ON</code> <code>:EVM:CCAR0:ULIN:IBEM:OPOW:AUTO?</code>

Preset	ON
State Saved	Saved in instrument state Yes
Range	Auto Manual
Min	-99
Max	100

In-Band Emission Test Tolerance

Specifies the test tolerance for In-Band Emission.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:TTOLerance <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:TTOLerance?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:TTOL 2</code> <code>:EVM:CCAR0:ULIN:IBEM:TTOL?</code>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	100 dB

IQ Image RBs & Carrier Leakage RBs

Specifies if IQ Image RBs & Carrier Leakage RBs should be included in General Limit.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:GENeral:MODE INCLude EXCLude</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINK:IBEMission:GENeral:MODE?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:GEN:MODE INCL</code> <code>:EVM:CCAR0:ULIN:IBEM:GEN:MODE?</code>
Couplings	Radio Direction is Uplink
Preset	EXCLude
State Saved	Yes
Range	Include to General Lim Exclude from General Lim

IBE Limit Threshold from P_{RB}

Adjust “the higher of $P_{RB} - 30$ dB” IBE limit threshold (TS 38.521, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3381>).

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold <rel_ampl></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PRB:THR -30</code> <code>:EVM:CCAR0:ULIN:IBEM:PRB:THR?</code>
Couplings	Radio Direction is Uplink
Preset	-30 dB
State Saved	Saved in instrument state
Min	-100 dB
Max	0 dB

Apply threshold from P_{RB} to All Limit

Apply “the higher of P_{RB} – 30 dB” IBE limit threshold (TS 38.521, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3381>) to All (combined) Limit.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:ALL 0 1 OFF ON</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:ALL?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:ALL ON</code> <code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:ALL?</code>
Couplings	Radio Direction is Uplink
Preset	ON
State Saved	Yes
Range	On Off

Apply threshold from P_{RB} to General Limit

Apply “the higher of P_{RB} – 30 dB” IBE limit threshold (TS 38.521, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3381>) to General Limit.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:GENeral 0 1 OFF ON</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:GENeral?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:GEN ON</code> <code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:GEN?</code>
Couplings	Radio Direction is Uplink
Preset	Off

State Saved	Yes
Range	On Off

Apply threshold from P_{RB} to IQ Image Limit

Apply “the higher of $P_{RB} - 30$ dB” IBE limit threshold (TS 38.521, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3381>) to IQ Image Limit.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:IMAGe 0 1 OFF ON</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:IMAGe?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:IMAG ON</code> <code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:IMAG?</code>
Couplings	Radio Direction is Uplink
Preset	OFF
State Saved	Yes
Range	OFF ON

Apply threshold from P_{RB} to Carrier Leakage Limit

Apply “the higher of $P_{RB} - 30$ dB” IBE limit threshold (TS 38.521, <https://portal.3gpp.org/desktopmodules/Specifications/SpecificationDetails.aspx?specificationId=3381>) to Carrier Leakage Limit.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:DC 0 1 OFF ON</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:ULINk:IBEMission:PRB:THReshold:DC?</code>
Example	<code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:DC ON</code> <code>:EVM:CCAR0:ULIN:IBEM:PRB:THR:DC?</code>
Couplings	Radio Direction is Uplink
Preset	Off
State Saved	Yes
Range	On Off

Cross Carrier

Enables you to configure advanced parameters for cross carrier measurement.

TAE Reference CC

Specifies reference component carrier to calculate cross carrier TAE.

Remote Command	<code>[:SENSe]:EVM:CCross:TAE:REference CC0 ... CC15</code> <code>[:SENSe]:EVM:CCross:TAE:REference?</code>
Example	<code>:EVM:CCR:TAE:REF CC1</code> <code>:EVM:CCR:TAE:REF?</code>
Preset	<code>CC0</code>
State Saved	Yes
Range	<code>CC0 ... CC15</code>

Power Reference CC

Specifies reference component carrier to calculate cross carrier relative power.

Remote Command	<code>[:SENSe]:EVM:CCross:POWer:REference CC0 ... CC15</code> <code>[:SENSe]:EVM:CCross:POWer:REference?</code>
Example	<code>:EVM:CCR:POW:REF CC1</code> <code>:EVM:CCR:POW:REF?</code>
Preset	<code>CC0</code>
State Saved	Yes
Range	<code>CC0 ... CC15</code>

MIMO

This tab allows you to configure advanced parameters for MIMO.

Condition Number Calculation

Enable condition number calculation and specify frequency granularity setting.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CONDition:NUMBER OFF SUBC USER WIDE</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CONDition:NUMBER?</code>
Example	<code>:EVM:CCAR0:COND:NUMB WIDE</code> <code>:EVM:CCAR0:COND:NUMB?</code>
Preset	<code>OFF</code>
State Saved	Yes
Range	OFF Subcarrier User Defined Wideband

RB Granularity

Specifies frequency granularity in RB when Condition Number Calculation = User Defined.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:CONDition:NUMBer:RB <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:CONDition:NUMBer:RB?</code>
Example	<code>:EVM:CCAR0:COND:NUMB:RB 1</code> <code>:EVM:CCAR0:COND:NUMB:RB?</code>
Couplings	Only valid when Condition Number Calculation = User Defined
Preset	1
State Saved	Yes
Min	1
Max	RB Number of selected allocation

Cross-Corelated EVM

Cross-Correlated EVM (ccEVM) is a technique applied for RMS EVM to suppress analyzer noise, resulting in lower EVM floor.

A 2-channel analyzer, or two analyzers, demodulate the same signal independently, and perform cross-correlation on the error vectors to cancel out uncorrelated noise added by the analyzer. Results (based on channel1 and channel2 input signal) will be provided by ccEVM Summary, but other results are not affected (only based on channel1 input signal).

Remote Command	<code>[:SENSe]:EVM:CCEVm[:ENABLE] ON OFF 1 0</code> <code>[:SENSe]:EVM:CCEVm[:ENABLE]?</code>
Example	<code>:EVM:CCEV 1</code> <code>:EVM:CCEV?</code>
Couplings	This function is disabled when MIMO or Power Meas (OWB/ACP/SEM/Transmit On Off Power) are enabled
Preset	OFF
State Saved	Saved in instrument state

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Input Channel IP address

Set instrument IP address for channel configuration, “local” is used for current instrument.

Remote Command	<code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4 <String></code> <code>[:SENSe]:RADio:MCHannel:IPAddress[1] 2 ... 4?</code>
Example	<code>:RAD:MCH:IPAD '192.168.1.2'</code>
Dependencies	Appears only in the EVM measurement
Preset	local
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:IPAddress[1] 2 ... 4</code>

Input Channel TCP port (Remote Command only)

Set instrument TCP port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MIMO:IPAddress[1] 2 ... 4:PORT <int></code> <code>[:SENSe]:RADio:MIMO:IPAddress[1] 2 ... 4:PORT?</code>
Example	<code>:RAD:MIMO:IPAD:PORT 3574</code>
Dependencies	Available only for the EVM measurement
Preset	3574
State Saved	Yes

Lock

Lock instrument and assign to a channel in sequence.

Remote Command	<code>[:SENSe]:RADio:MCHannel:IPADdress[1] 2 ... 4:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:IPADdress[1] 2 ... 4:LOCKed?</code>
Example	<code>:RAD:MCH:IPAD1:LOCK 1</code> <code>:RAD:MCH:IPAD1:LOCK?</code>
Dependencies	Appears only in the EVM measurement
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:IPADdress[1] 2 ... 4:LOCKed</code>

Channel Configuration Information (Remote Query only)

This SCPI query reads back channel configuration information.

Remote Command	<code>[:SENSe]:RADio:MCHannel:CHANnel:INFO?</code>
Example	<code>:RAD:MCH:CHAN:INFO?</code>
Dependencies	Available only for the EVM measurement
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:CHANnel:INFO</code>

Advanced Acquisition

This is the same as "Advanced Acquisition" on page 1837 in the Configure Comp Carriers dialog. See "Advanced Acquisition" on page 1837.

3.7.8.8 Decode

Enables you to set decoding parameters.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH/PSSCH/PSCCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding

- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

PBCH Bits

Selects the decoding type of the PBCH. It specifies how much coding to undo before showing the bits from PBCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PBCH NONE DESCrambled DRMatched DCBlock DTBlock RBITS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PBCH?</code>
Example	<code>:EVM:CCAR0:DEC:PBCH NONE</code> <code>:EVM:CCAR0:DEC:PBCH?</code>
Notes	Only visible when Radio Direction is downlink
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PDCCH Bits

Selects the decoding type of the PDCCH. It specifies how much coding to undo before showing the bits from PDCCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

3 5G NR Mode

3.7 Modulation Analysis Measurement

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PDCC NONE DESCrambled DRMatched DCBLoCk DTBLoCk RBITs</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PDCC?</code>
Example	<code>:EVM:CCAR0:DEC:PDCC NONE</code> <code>:EVM:CCAR0:DEC:PDCC?</code>
Notes	Only visible when Radio Direction is downlink
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PDSCH Bits

Selects the decoding type of the PDSCH. It specifies how much coding to undo before showing the bits from PDSCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PDSC NONE DESCrambled DRMatched DCBLoCk DTBLoCk RBITs</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PDSC?</code>
Example	<code>:EVM:CCAR0:DEC:PDSC NONE</code> <code>:EVM:CCAR0:DEC:PDSC?</code>

Notes	Only visible when Radio Direction is downlink
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PUCCH Bits

Selects the decoding type of the PUCCH. It specifies how much coding to undo before showing the bits from PUCCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PUCCh NONE DESCrambled DRMatched DCBBlock DTBBlock RBITS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PUCCh?</code>
Example	<code>:EVM:CCAR0:DEC:PUCCh NONE</code> <code>:EVM:CCAR0:DEC:PUCCh?</code>
Notes	Only visible when Radio Direction is uplink
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PUSCH Bits

Selects the decoding type of the PUSCH. It specifies how much coding to undo before showing the bits from PUSCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding

3 5G NR Mode

3.7 Modulation Analysis Measurement

- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PUSCh NONE DESCrambled DRMatched DCBLoCk DTBLoCk RBITS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PUSCh?</code>
Example	<code>:EVM:CCAR0:DEC:PUSC NONE</code> <code>:EVM:CCAR0:DEC:PUSC?</code>
Notes	Only visible when Radio Direction is uplink
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PSSCH Bits

Selects the decoding type of the PSSCH. It specifies how much coding to undo before showing the bits from PSSCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PSSCh NONE DESCrambled DRMatched DCBLoCk DTBLoCk RBITS</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PSSCh?</code>
Example	<code>:EVM:CCAR0:DEC:PSSC NONE</code> <code>:EVM:CCAR0:DEC:PSSC?</code>
Notes	Only visible when Radio Direction is uplink and Sidelink is enabled
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

PSCCH Bits

Selects the decoding type of the PSCCH. It specifies how much coding to undo before showing the bits from PSCCH on the Decoded Symbol Table.

The following is a list of the available decoding types and the result bits for PBCH/PDCCH/PDSCH/PUCCH/PUSCH:

- None- No decoded results
- Descrambled - Descrambled (rate-matched) mode is used for decoding
- DeRateMatched - Deratematched (channel coded) mode is used for decoding
- Decoded CB - Decoded Codeblock mode is used for decoding
- Decoded TB - Decoded Transport Block mode is used for decoding
- Raw Bits - Scrambled bits

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PSCCh NONE DESCrambled DRMatched DCBLoCk DTBLoCk RBITs</code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:PSCCh?</code>
Example	<code>:EVM:CCAR0:DEC:PSCC NONE</code> <code>:EVM:CCAR0:DEC:PSCC?</code>
Notes	Only visible when Radio Direction is uplink and Sidelink is enabled
State Saved	Yes
Range	None Descrambled DeRateMatched Decoded CB Decoded TB Raw Bits

Decode Iteration

Specifies maximum iteration number of LDPC decoder

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:ITERation <integer></code> <code>[:SENSe]:EVM:CCARrier0 ... 15:DECode:ITERation?</code>
Example	<code>:EVM:CCAR0:DEC:ITER 2</code> <code>:EVM:CCAR0:DEC:ITER?</code>
Notes	Invalid when Radio Direction is Uplink and Sidelink is enabled
Preset	8
State Saved	Yes
Min	1
Max	16

3.7.8.9 Power Meas

This tab enables you to configure power measurements like OBW/ACP/SEM.

OBW State

Enable or disable the Occupied BW measurement.

Remote Command	<code>[:SENSe]:EVM:OBW OFF ON 0 1</code> <code>[:SENSe]:EVM:OBW?</code>
Example	<code>:EVM:OBW OFF</code> <code>:EVM:OBW?</code>
Preset	<code>OFF</code>
State Saved	Yes

ACP State

Enable or disable the ACP measurement.

Remote Command	<code>[:SENSe]:EVM:ACP OFF ON 0 1</code> <code>[:SENSe]:EVM:ACP?</code>
Example	<code>:EVM:ACP OFF</code> <code>:EVM:ACP?</code>
Preset	<code>OFF</code>
State Saved	Yes

SEM State

Enable or disable the SEM measurement.

Remote Command	<code>[:SENSe]:EVM:SEM OFF ON 0 1</code> <code>[:SENSe]:EVM:SEM?</code>
Example	<code>:EVM:SEM OFF</code> <code>:EVM:SEM?</code>
Preset	<code>OFF</code>
State Saved	Yes

Transmit On|Off Power State

Enable or disable Transmit On|Off Power measurement.

Remote Command	<code>[:SENSe]:EVM:PVTTime OFF ON 0 1</code> <code>[:SENSe]:EVM:PVTTime?</code>
Example	<code>:EVM:PVT OFF</code> <code>:EVM:PVT?</code>
Preset	<code>OFF</code>
State Saved	Yes

MIMO Calculation Mode

Specifies OBW/ACP/SEM/Transmit On/Off result calculation mode for MIMO signal:

- Per Channel – provide separate results for each input channel
- Averaged – provide averaged results for all input channels
- Summation – provide combined results for all input channels

Remote Command	<code>[:SENSe]:EVM:POWer:MIMO:MODE PERChannel AVERaged SUMMation</code> <code>[:SENSe]:EVM:POWer:MIMO:MODE?</code>
Example	<code>:EVM:POWer:MIMO:MODE PERC</code> <code>:EVM:POWer:MIMO:MODE?</code>
Preset	<code>PERChannel</code>
State Saved	Yes
Range	Per Channel Averaged Summation

OBW Setup

Enables you to configure advanced parameters for the OBW measurement in the EVM measurement based on the same capture.

OBW State

Enable or disable the Occupied BW measurement.

Remote Command	<code>[:SENSe]:EVM:OBW OFF ON 0 1</code> <code>[:SENSe]:EVM:OBW?</code>
----------------	--

Example	<code>:EVM:OBW OFF</code> <code>:EVM:OBW?</code>
Preset	<code>OFF</code>
State Saved	Yes

Points

Sets the number of points taken per sweep, and displayed in the traces. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

When Auto Points is on, the analyzer determines the number of points using the following calculation formula:

$$\# \text{ points} = \text{ceil}(\text{Span} / (\text{Rbw} * 1\text{e}3)) * 1000 + 1$$

Where $\text{ceil}(x)$ returns the smallest possible integer value that is greater than or equal to x .

Remote Command	<code>[:SENSe]:EVM:OBW:POINts <integer></code> <code>[:SENSe]:EVM:OBW:POINts?</code> <code>[:SENSe]:EVM:OBW:POINts:AUTO ON OFF 1 0</code> <code>[:SENSe]:EVM:OBW:POINts:AUTO?</code>
Example	<code>:EVM:OBW:POIN 1001</code> <code>:EVM:OBW:POIN?</code> <code>:EVM:OBW:POIN:AUTO ON</code> <code>:EVM:OBW:POIN:AUTO?</code>
Preset	Automatically calculated <code>ON</code>
State Saved	Saved in instrument state Yes
Min	101
Max	100,001

% of OBW Power

Assigns the percentage of the total power that is measured within the Occupied Bandwidth for the current measurement. The resulting Occupied Bandwidth limits are displayed by markers placed on the frequencies of the specified percentage.

Remote Command	<code>[:SENSe]:OBWidth:PERCent <real></code>
----------------	---

	<code>[:SENSe]:OBWidth:PERCent?</code>
Example	<code>:OBW:PERC 75</code> <code>:OBW:PERC?</code>
Preset	99.00
State Saved	Yes
Min/Max	10/99.99

Power Integration Method

Selects the power integration method:

Normal	<code>NORMal</code>	By integrating the linear power bucket values from the lower edge of the trace, and interpolating to find the point where the integrated power equals $(1 - [\text{Occ BW \% Pwr}]) / 2$ (0.5% if, for example, the 99% occupied bandwidth is to be found) of the total power, frequency f1 is obtained. This procedure is repeated from the upper trace edge to find frequency f2. This calculation uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points), f1 and f2
From Center	<code>ICENter</code>	Measures the power spectrum distribution within two times or more frequency range over the requirement for Occupied Bandwidth specification centering on the current carrier frequency

Remote Command	<code>[:SENSe]:OBWidth:INTEgration[:MEtHod] NORMal ICENter</code> <code>[:SENSe]:OBWidth:INTEgration[:MEtHod]?</code>
Example	<code>:OBW:INT NORM</code> <code>:OBW:INT?</code>
Preset	For 5G NR Mode, Uplink: <code>ICENter</code> All other Modes <code>NORMal</code>
State Saved	Yes
Range	<code>NORMal ICENter</code>

Limit Test

Toggles the limit test.

Remote Command	<code>:CALCulate:OBWidth:LIMit[:TEST] ON OFF 1 0</code> <code>:CALCulate:OBWidth:LIMit[:TEST]?</code>
Example	<code>:CALC:OBW:LIM 0</code>

	:CALC:OBW:LIM?
Dependencies	Only appears in LTEAFDD/LTEATDD and 5GNR Modes
Preset	ON
State Saved	Saved in instrument state
Range	ON OFF

ACP Setup

Enables you to configure advanced parameters for the ACP measurement in the EVM measurement based on the same capture.

General

Enables you to configure general parameters for the ACP measurement in the EVM measurement based on the same capture.

ACP State

Enable or disable the ACP measurement.

Remote Command	[:SENSe]:EVM:ACP OFF ON 0 1 [:SENSe]:EVM:ACP?
Example	:EVM:ACP OFF :EVM:ACP?
Preset	OFF
State Saved	Yes

Reference Carrier (Carrier Index)

Sets the reference carrier. Relative power measurements are made from the reference carrier.

If set to **Auto**, the measurement selects the carrier with the highest power as the reference carrier and the Ref Carrier parameter is updated. If a value is entered when Ref Carrier Mode is set to **Auto**, the mode changes to **Man**.

If set to **Man**, the value that you enter for the Ref Carrier is used as the reference carrier.

In MSR, LTEAFDD, LTEATDD and 5G NR Modes, this control is called **Carrier Index** and has a different SCPI command. In these Modes, it sets the carrier index of the reference power. The power of the carrier selected by this index becomes reference

power when "Power Ref" on page 2240 is **Carrier Index**. Any value up to the MAX can be set, though the measurement only deals with number of carriers specified by Carrier. If the index is larger than Carrier, reference power in this measurement becomes **NaN** and therefore all relative power results are **NaN**.

For more information, see "Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5GNR)" on page 2239.

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier <integer></code> <code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR 1</code> <code>:ACP:CARR:RCAR?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored For LTEAFDD and LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Dependencies	Grayed-out if there is only one carrier Does not appear in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Couplings	If you enter a carrier value that is currently configured as having no power present, that carrier changes to having power present
Preset	Auto determined
State Saved	Saved in instrument state
Min/Max	1/Number of available carriers
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:RCARrier[1] 2</code> Auto Function
Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO OFF ON 0 1</code> <code>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR:AUTO OFF</code> <code>:ACP:CARR:RCAR:AUTO?</code>
Couplings	If you enter a ref carrier this parameter will be set to manual
Preset	1
State Saved	Yes
Range	Auto Man
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:RCARrier[1] 2:AUTO</code> (Power Suite)

Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5GNR)

Remote Command	<pre>[:SENSe]:ACPower:CARRier[1] 2:INDeX <integer></pre> <pre>[:SENSe]:ACPower:CARRier[1] 2:INDeX?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:IND 1</pre> <pre>:ACP:CARR:IND?</pre>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Only appears in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	LTEAFDD, LTEATDD: 1/Dependent on Num Component Carriers 5G NR: 1/Dependent on Num Component Carriers MSR: 1/100

Carrier Index Zero Base (Remote Command Only)

Remote Command	<pre>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBAsE <integer></pre> <pre>[:SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBAsE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:RCAR:ZBAS 1</pre> <pre>:ACP:CARR:RCAR:ZBAS?</pre>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Not available in multicarrier applications (MSR, 5GNR, LTE Modes)
Couplings	Coupled with: <pre>[:SENSe]:ACPower:CARRier[1] 2:RCARrier <integer></pre>
Preset	0
State Saved	Saved in instrument state
Min	0
Max	9

Measurement Type

Changes the reference used for the measurement. This allows you to make absolute and relative power measurements of either total power or the power normalized to the measurement bandwidth.

- Total Pwr Ref (**TPRef**) sets the reference to the total carrier power
- PSD Ref (**PSDRef**) sets the reference to the power spectral density of the carrier

Remote Command	<code>[:SENSe]:ACPower:TYPE TPRef PSDRef</code> <code>[:SENSe]:ACPower:TYPE?</code>
Example	<code>:ACP:TYPE PSDR</code> <code>:ACP:TYPE?</code>
Preset	TPRef
State Saved	Saved in instrument state
Range	Total Power Ref PSD Ref

Power Ref

Selects the power reference type. This control has two different forms, depending on the currently-selected Mode:

- "Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 2240
- "Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 2241

Power Ref (Modes: SA, WCDMA, VMA, SRComms)

Type	Option	Description
Ref Carrier	RCARrier	Power of the specified carrier is the reference of measurement. Use the Reference Carrier control to select Carrier Index
Manual Power	MANual	Power or PSD specified by the user is the reference of measurement
Total Multicarriers	TMCarrriers	Total Power of multi carriers is the power reference of measurement. Each carrier power is calculated with its own carrier configuration settings
Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2:PREference:TYPE RCARrier MANual TMCarrriers</code> <code>[:SENSe]:ACPower:CARRier[1] 2:PREference:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	<code>:ACP:CARR:PREF:TYPE RCARrier</code> <code>:ACP:CARR:PREF:TYPE?</code>	

3 5G NR Mode

3.7 Modulation Analysis Measurement

Notes	Available only in SA, WCDMA, VMA and Short-Range Comms Modes Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Preset	RCARrier
State Saved	Saved in instrument state
Range	RCARrier MANual TMCarrriers

Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)


Selects the power reference type:

Type	Option	Description
Left & Right Carriers	LRCarriers	Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Left and right carriers are determined based on the carrier center frequencies. If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are NaN. Relative limits are not evaluated
Max Power Carrier	MPCarrier	Maximum carrier power among the carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN . Relative limits are not evaluated
Min Power Carrier 5G NR only	MINPcarrier	Minimum carrier power among the carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN . Relative limits are not evaluated
Carrier Index	CINdex	Power of the specified carrier is the reference of measurement. If Measure Carriers of this carrier index is off, the reference power and all the relative power results are NaN . Relative limits are not evaluated
Manual	MANual	Power or PSD specified by the user is the reference of measurement
Aggregated Chan BW LTEAFDD, LTEATDD, 5G NR only	ACBandwidth	The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN . Relative limits are not evaluated
Max Power Carrier in Sub-block	MPCSubblock	Maximum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NaN , and these relative limits are not evaluated
Total	TMCarrriers	Total power of multi carriers is the power reference of measurement. Each


Type	Option	Description
Multicarriers		carrier power is calculated with its own carrier configuration settings
MSR only		
Min Power Carrier in Sub-block	MINSubbloc	Minimum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NAN , and these relative limits are not evaluated
5G NR only		
Left & Right Sub-blocks	LRSubblocks	The reference depends on the number of Component Carriers (CC) and Carrier Allocation as follows: <ul style="list-style-type: none"> Num of CC is 1: the carrier power is the reference Num of CC is 2 or more & Carrier Allocation is Contiguous: Aggregated Channel power is the reference Num of CC is 2 or more & Carrier Allocation is Non-Contiguous: Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration
5G NR only		

The powers of carriers are not included in the reference power when their Measure Carriers are Off. When Measure Carriers of all the carriers in a sub-block are Off, the reference power and all the relative power results are **NaN**. Therefore, relative limits are not evaluated.

Measurement Type = Total Power Ref

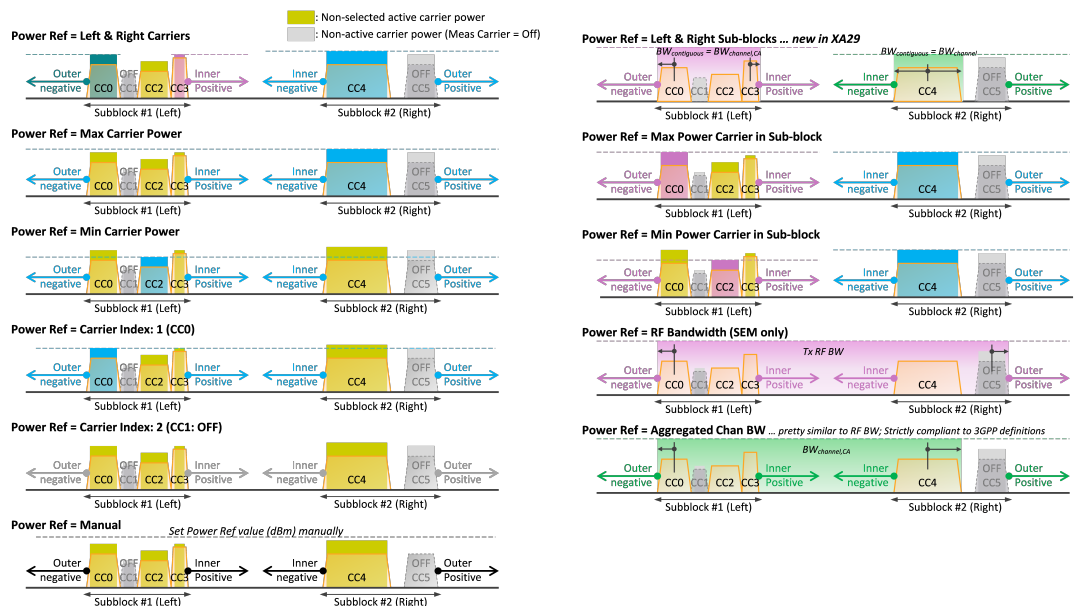

Measurement Type = PSD Ref

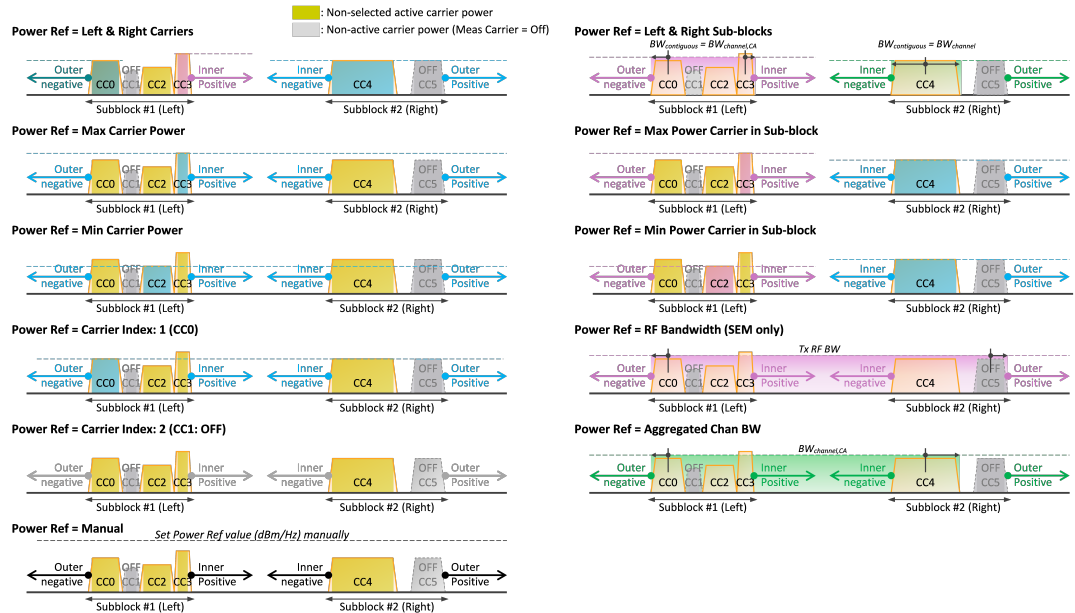

Remote Command	<pre>[:SENSE]:ACPower:CARRier[1] 2:PREference:TYPE LRCarriers MPCarrier CINDEX MANual MPCSubblock ACBandwidth TMCarriers MINPcarrier MINSubblock LRSubblocks [:SENSE]:ACPower:CARRier[1] 2:PREference:TYPE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:PREF:TYPE CIND :ACP:CARR:PREF:TYPE?</pre>
Notes	<p>Available only in MSR, LTEAFDD, LTEATDD and 5G NR Modes</p> <p>ACBandwidth is available only in LTEAFDD, LTEATDD and 5G NR Modes</p> <p>TMCarriers is available only in MSR Mode</p> <p>MINPcarrier, MINSubblock, and LRSubblocks are available only in 5G NR Mode</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p>
Preset	MPCarrier
State Saved	Saved in instrument state

Power Ref State (Remote Command Only)

Remote Command	<pre>[:SENSE]:ACPower:CARRier[1] 2:AUTO[:STATE] OFF ON 0 1</pre>
----------------	---

	<code>[:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:AUTO OFF</code> <code>:ACP:CARR:AUTO?</code>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe]</code>

Total Power Ref

Sets manual total power reference.

This control has two different forms, depending on the currently-selected Mode:

- "Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 2244
- "Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 2245

Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when Power Ref is Manual and "Measurement Type" on page 2240 is Total Power.

Remote Command	<code>[:SENSe]:ACPower:CARRier[1] 2[:POWer] <real></code> <code>[:SENSe]:ACPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected
Dependencies	Available only when Measurement Type is TPRef , otherwise grayed-out
Preset	0.0
State Saved	Saved in instrument state

Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2[:POWer]</code>

Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)

Sets the multi-carrier power reference. This is used when Power Ref is Manual and "Measurement Type" on page 2240 is Total Power.

When set to **Auto**, the carrier power result reflects the measured power value in the selected reference carrier.

When set to **Man**, the result is referenced to the last measured value, or you may specify the reference for the multi-carrier power measurement. Relative values are displayed, referenced to the "Power Reference" value.

Remote Command	<code>[:SENSe]:ACPPower:CARRier[1] 2[:POWer] <real></code> <code>[:SENSe]:ACPPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected
Dependencies	Enabled when "Measurement Type" on page 2240 is Total Power and "Power Ref" on page 2240 is Manual
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:CARRier[1] 2[:POWer]</code>

PSD Ref

Sets manual PSD reference.

This control has two different forms, depending on the currently-selected Mode:

- "PSD Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 2246
- "PSD Ref (Modes: LTEAFDD, LTEATDD, 5GNR, MSR)" on page 2247

PSD Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when "Power Ref" on page 2240 is Manual and "Measurement Type" on page 2240 is PSD.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is PSD Ref.

Remote Command	<pre>[:SENSe]:ACPower:CARRier[1] 2:CPSD <real> [:SENSe]:ACPower:CARRier[1] 2:CPSD?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:CPSD 25 :ACP:CARR:CPSD?</pre>
Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p>
Dependencies	Available only when Measurement Type is PSDRef , otherwise grayed-out
Couplings	The value of PSD Ref is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-999/999

Power Ref State (Backwards Compatibility SCPI)

Sets the Power Reference State to auto or manual.

Example	<pre>:ACP:CARR:AUTO OFF :ACP:CARR:AUTO? :MCP:CARR:AUTO ON :MCP:CARR:AUTO?</pre>
Notes	<p>For backwards compatibility with legacy SA and WCDMA, this command is supported</p> <p>When ON, corresponds to the Ref Carrier of the "Power Ref" on page 2240 selection</p> <p>When OFF, corresponds to the Manual of the Power Ref selection</p>

Preset	ON
State Saved	Saved in instrument state
Range	Auto Man
Backwards Compatibility SCPI	[:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe]? [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATe]?

PSD Ref (Modes: LTEAFDD, LTEATDD, 5GNR, MSR)

Sets manual PSD reference. This is used when "Power Ref" on page 2240 is **Manual** and "Measurement Type" on page 2240 is **PSD**.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is set to **PSD Ref**. When the **PSD Ref** state is set to **Auto**, this will be set to the measured carrier power spectral density.

Remote Command	[:SENSe]:ACPower:CARRier[1] 2:CPSD <real> [:SENSe]:ACPower:CARRier[1] 2:CPSD? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:CARR:CPSD 25 :ACP:CARR:CPSD?
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Enabled when "Measurement Type" on page 2240 is PSD Reference and Power Ref is Manual
Couplings	The value of PSD is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-/+999

PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz (**DBMHZ**) and dBm/MHz (**DBMMHZ**).

Remote Command	:UNIT:ACPower:POWer:PSD DBMHZ DBMMHZ :UNIT:ACPower:POWer:PSD?
----------------	--

Example	<code>:UNIT:ACP:POW:PSD DBMMHZ</code> <code>:UNIT:ACP:POW:PSD?</code>
Dependencies	Enabled when "Measurement Type" on page 2240 is PSD Reference
Couplings	When the PSD unit is changed, the PSD reference result of <code>:MEAS READ FETCH:ACP[n]?</code> is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz)
Preset	<code>DBMMHZ</code>
State Saved	Saved in instrument state
Range	dBm/Hz dBm/MHz

Power Results

Lets you select Power Result Type:

- **OUTer** – Results of outer offsets and carrier powers are shown in this view. Inner offset results are not shown even when Carrier Allocation is Non-Contiguous
- Outer & Inner (**OINNeR**) – Results of both inner and outer offsets are shown in this view

Remote Command	<code>:DISPlay:ACPower:VIEW:RTYPE OUTer OINNeR</code> <code>:DISPlay:ACPower:VIEW:RTYPE?</code>
Example	<code>:DISP:ACP:VIEW:RTYP OUT</code> <code>:DISP:ACP:VIEW:RTYP?</code>
Dependencies	Only available in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	<code>OUTer</code>
State Saved	Saved in instrument state
Range	Outer Outer & Inner

Points

Sets the number of points taken per sweep, and displayed in the traces. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

When Auto Points is on, the analyzer determines the number of points using the following calculation formula.

$$\# \text{ points} = \text{ceil}(\text{Span} / (\text{Rbw} * 1\text{e}3)) * 1000 + 1$$

Where $\text{ceil}(x)$ returns the smallest possible integer value that is greater than or equal to x .

Remote Command	<code>[:SENSe]:EVM:ACP:POINTs <integer></code>
----------------	---

3 5G NR Mode

3.7 Modulation Analysis Measurement

	[:SENSe]:EVM:ACP:POINts?
	[:SENSe]:EVM:ACP:POINts:AUTO ON OFF 1 0
	[:SENSe]:EVM:ACP:POINts:AUTO?
Example	:EVM:ACP:POIN 1001 :EVM:ACP:POIN? :EVM:ACP:POIN:AUTO ON :EVM:ACP:POIN:AUTO?
Preset	1001 ON
State Saved	Saved in instrument state Yes
Min	101
Max	100,001

Noise Correction

Sets the measurement noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the instrument. Off turns these corrections off.

In instruments with the noise floor extensions option (option NFE) enabled, there are two ways to compensate for the analyzer noise floor: through the NFE and through this noise corrections control. The techniques are results are similar but not identical. NFE uses a model of the analyzer noise floor, adapted to the current conditions such as center frequency, RBW and ambient temperature. The parameters of this model are measured in the factory or field calibration in a highly averaged measurement. So, they are consistent. However, because the model is imperfect, the corrections are imperfect. Using NFE is very convenient; the user need not wait for the ACP noise corrections calibration to occur. The ACP NC calibration, though, has advantages of being measured very recently, at the current ambient, and the exact center frequency, with no requirement that the model be perfect. So, it will often (but not always) have slightly better dynamic range. If both ACP NC is turned on and NFE is turned on, the instrument uses only the ACP NC. When ACP NC is turned off, but NFE is on, NFE is used, and performance should still be excellent.

When **Meas Method** is Fast Power, HW supported noise correction works when either or both of Noise Correction and NFE is on.

Remote Command	[:SENSe]:ACP:Power:CORRection:NOISe[:AUTO] OFF ON 0 1 [:SENSe]:ACP:Power:CORRection:NOISe[:AUTO]?
Example	:ACP:CORR:NOIS OFF

	:ACP:CORR:NOIS?
Dependencies	Not available when "Meas Method" on page 768 is RBW or Fast
Preset	0
State Saved	Saved in instrument state
Range	OFF ON

Offset

Enables you to configure offset parameters for the ACP measurement in the EVM measurement based on the same capture.

Offset Frequency Define

Lets you select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the "From Carrier Center to Integ BW Closer Edge" definition. LTE conformance test requires "From Carrier Edge to Integ BW Center" and/or "From Carrier Edge to Integ BW Closer Edge" definition.

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge of each Offset Integ BW
RTOCenter 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the center frequency of each Offset Integ BW
RTOEdge 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the closest edge frequency of each Offset Integ BW
RCTOCenter 5G NR Mode only	From the center frequency of RF BW** to the center frequency of each Offset Integ BW
SCTOCenter 5G NR Mode only	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

** RF BW = BWchannel,CA which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or

3 5G NR Mode

3.7 Modulation Analysis Measurement

Disabled. When the Number of Component Carrier = 1, $RF\ BW = BW_{channel} = 2 \times F_{offset,RAT}$

** sub-block (bandwidth) = $BW_{channel,block}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{channel} = 2 \times F_{offset,RAT}$.

See ["Diagrams for Offset Freq Define" on page 2252](#).

Modes other than MSR, LTEAFDD, LTEATDD, 5G NR

Remote Command	<code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

Mode: 5G NR

Remote	<code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter SCTOCenter</code>
--------	---

Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter</code> <code>CTOEdge</code> <code>ETOCenter</code> <code>ETOEdge</code> <code>RTOCenter</code> <code>RTOEdge</code> <code>RCTOCenter</code> <code>SCTOCenter</code>

Diagrams for Offset Freq Define

Details depend on the selected mode.

Diagram for Modes other than MSR, LTEAFDD, LTEATDD, 5G NR


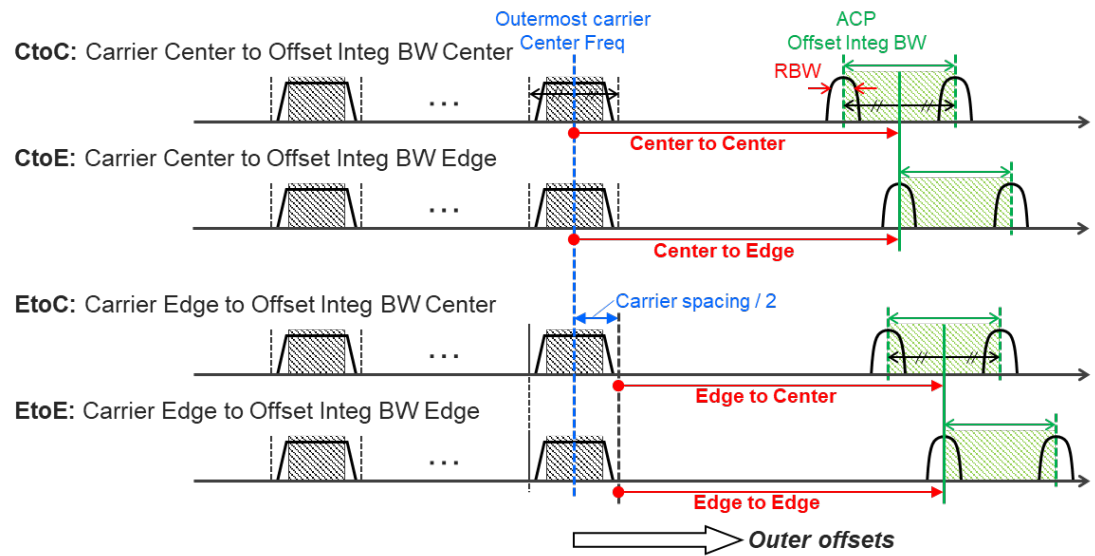


Diagram for MSR, LTEAFDD, LTEATDD, 5G NR

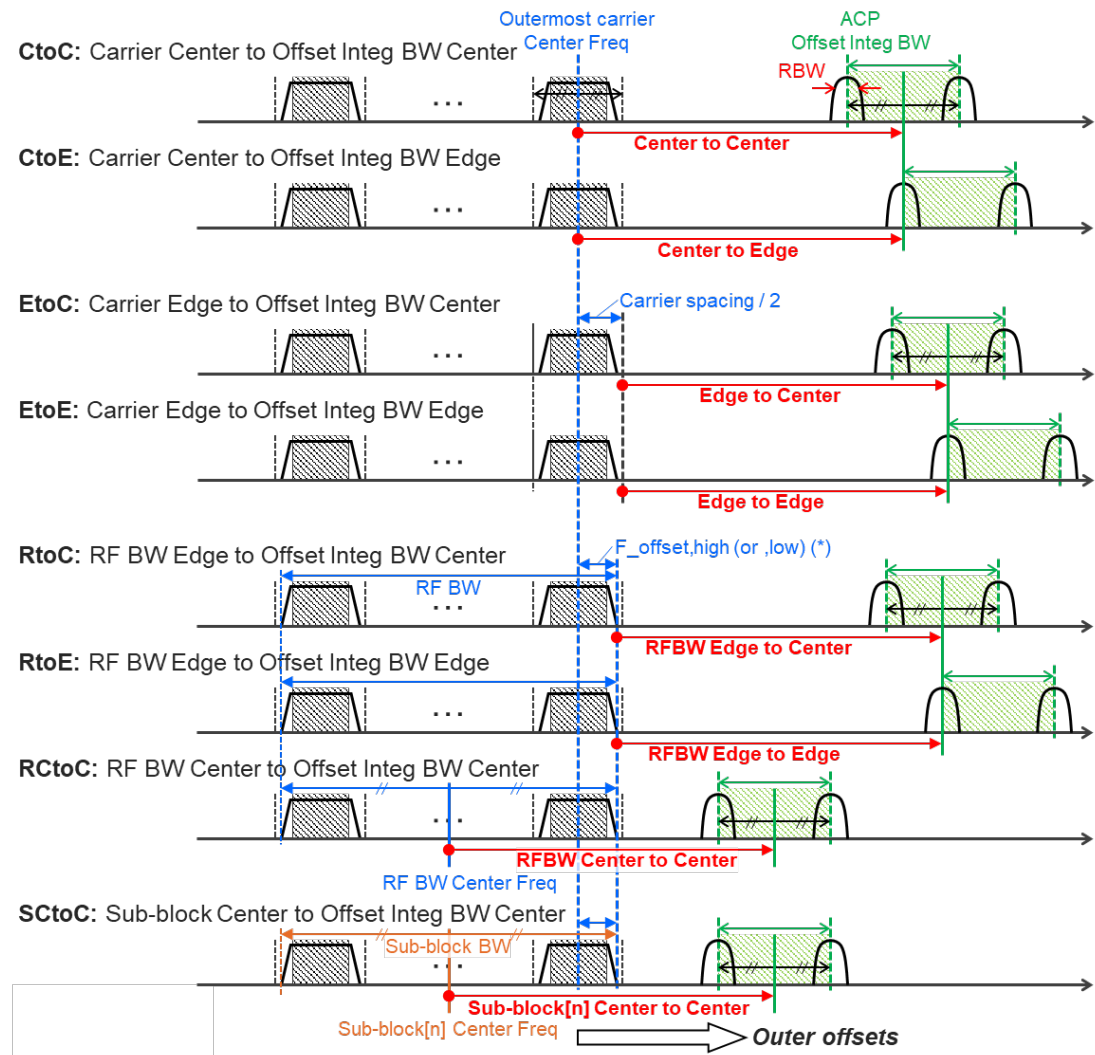

Note:

RF BW Edge and Outermost Carrier Edge are not always the same.
e.g.) 5G NR (3GPP) defines BW_channel, CA which calculates F_offset,high and F_offset,low asymmetrically with SCS shift.

(*) For MSR, F_offset,high (or ,low) = F_offset,RAT,high (or ,low)

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREQuency] <freq>,...`

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS1:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:LIST?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored												
Couplings	Changing Offset Frequency might affect "Span" on page 754												
Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>WCDMA</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>5G NR</td><td>100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>Radio Test</td><td>25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz</td></tr> </tbody> </table>	Modes	Values	SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code> Auto Function												
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code>												

3 5G NR Mode

3.7 Modulation Analysis Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>WCDMA</td><td>ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5G NR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>Radio Test</td><td>ON, ON, ON, OFF, OFF, OFF</td></tr> </tbody> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF ON												

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset, then enter the Offset Integration Bandwidth.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:STATe`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:LIST:BAND?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value, you must send all values up to that. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values is ignored
Couplings	Changing Integ BW might affect "Span" on page 754

Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value
Modes	Values
SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz
WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz
LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz
5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz
State Saved	Saved in instrument state
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement
Backwards Compatibility SCPI	<code>[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration]</code> <code>[:SENSe]:ACPR:OFFSet[1] 2:LIST:BANDwidth</code> <code>[:SENSe]:ACPR:OFFSet[1] 2:LIST:BWIDth</code> <code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:BWIDth[:INTEgration]</code>

Offset Side

Specifies which offset side to measure.


You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:SIDE`.

NEGative	Negative (lower) sideband only
BOTH	Both of the negative (lower) and positive (upper) sidebands
POSitive	Positive (upper) sideband only

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in MSR, LTEAFDD and LTEATDD Modes.

3 5G NR Mode

3.7 Modulation Analysis Measurement

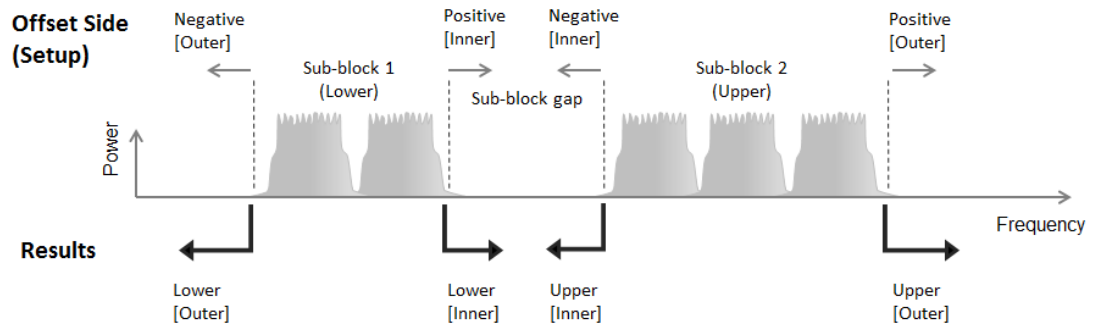

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE NEGative BOTH POSitive, ...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:LIST:SIDE BOTH</pre> <pre>:ACP:OFFS:LIST:SIDE?</pre>
Notes	<p>Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p> <p>If you set POS or NEG in an offset, result of the inactive side returns -999</p>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is BOTH</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p>
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the **Filter Alpha** parameter.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE] ON OFF 1 0,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE]?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:LIST:FILT 1,0,0</pre> <pre>:ACP:OFFS:LIST:FILT?</pre>
Notes	<p>1 ON = RRC Weighted, 0 OFF = Integ BW</p> <p>Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p>

	Mode	Values
	SA	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	WCDMA	1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1
	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
	Radio Test	0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state	
Range	Integ BW RRC Weighted	

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa <real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHa?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	<code>:ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</code> <code>:ACP:OFFS:LIST:FILT:ALPH?</code>	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	SA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	WCDMA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	LTEAFDD, LTEATDD, 5G NR, MSR	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	

Limits

Enables you to configure limits parameters for the ACP measurement in the EVM measurement based on the same capture.

Limit Test

Turns limit checking for each offset On or Off. The limits may be specified in the **Offset** menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In the **Combined** view, the bar turns red.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	:CALCulate:ACPower:LIMit:STATe OFF ON 0 1 :CALCulate:ACPower:LIMit:STATe?	
Example	:CALC:ACP:LIM:STAT OFF :CALC:ACP:LIM:STAT?	
Preset	SA	OFF
	WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR	ON
State Saved	Saved in instrument state	
Range	ON OFF	
Backwards Compatibility	[:SENSe]:MCPower:LIMit[:STATe]	
SCPI	[:SENSe]:ACPower:LIMit[:STATe]	

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with [:SENSe]:ACPower:OFFSet:LIST:STATe.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] <freq>,... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	:ACP:OFFS1:LIST 0,0,0,0,0,0 :ACP:OFFS1:LIST?	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored	
Couplings	Changing Offset Frequency might affect "Span" on page 754	
Preset	When "Max Num of Offsets" on page 826 is set to 12, the preset value of Offset G ~ L is the same as the	

Offset F value													
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code>												
Auto Function													
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td>SA</td><td>ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>WCDMA</td><td>ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5G NR</td><td>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>Radio Test</td><td>ON, ON, ON, OFF, OFF, OFF</td></tr> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF ON												

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATe` command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute < real>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:LIST:ABS?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</td></tr> <tr> <td>WCDMA</td><td>50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> <tr> <td>5G NR</td><td>4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> </tbody> </table>	Modes	Values	SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm	WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm	LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values										
SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm										
WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm										
LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
State Saved	Saved in instrument state										
Min/Max	-200.0 dBm/50.0 dBm										
Backwards Compatibility SCPI	<code>[:SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA <code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA										

Rel Limit (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACP:OFFSet[1] 2[:OUTer]:LIST:RCARrier <real>,...</code> <code>[:SENSe]:ACP:OFFSet[1] 2[:OUTer]:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:LIST:RCAR?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored												
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0</td></tr> <tr> <td>WCDMA</td><td>-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</td></tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>5G NR</td><td>-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>Radio Test</td><td>-60, -60, -60, 0, 0, 0</td></tr> </tbody> </table>	Modes	Values	SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0	WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2	LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values												
SA	-45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0												
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2												
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
Radio Test	-60, -60, -60, 0, 0, 0												
State Saved	Saved in instrument state												
Min/Max	-150/50.0												
Backwards Compatibility SCPI	<code>[:SENSe]:MCPower:OFFSet[1] 2:LIST:RCARrier</code>												

Rel Limit (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACP:OFFSet[1] 2[:OUTer]:LIST:RPSDensity <rel_ampl>,...</code> <code>[:SENSe]:ACP:OFFSet[1] 2[:OUTer]:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:LIST:RPSD?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB</td></tr> <tr> <td>WCDMA</td><td>-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0</td></tr> <tr> <td>Radio Test</td><td>-60, -60, -60, 0, 0, 0</td></tr> </tbody> </table>	Modes	Values	SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB	WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values										
SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB										
WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB										
LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0										
Radio Test	-60, -60, -60, 0, 0, 0										
State Saved	Saved in instrument state										
Min/Max	-150.0 dB/50.0 dB										

Fail Mask

Accesses a menu that lets you select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:RPSDeNsity` and `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n] [:OUTer]:LIST:STATe`.

Absolute	ABSolute	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	RELative	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	AND	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit and one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	OR	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit or one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACP:Power:OFFSet[1] 2 [:OUTer]:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACP:Power:OFFSet[1] 2 [:OUTer]:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	<code>:ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:LIST:TEST?</code>	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	Modes	Values
	SA, WCDMA	REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL
	LTEAFDD, LTEATDD, 5G NR, MSR	AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND
	Radio Test	REL, REL, REL, REL, REL, REL
State Saved	Saved in instrument state	

Range	ABSolute AND OR RELative
Backwards Compatibility SCPI	[:SENSe]:MCPower:OFFSet[1] 2:LIST:TEST

Inner Offset

Enables you to configure inner offset parameters for the ACP measurement in the EVM measurement based on the same capture.

Offset Frequency Define

Allows you to select "Offset" definition:

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge frequency of each Offset Integ BW
STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of each Offset Integ BW
STOEdge	From either the lower or upper sub-block edge frequency to the closest edge frequency of each Offset Integ BW
SCTOCenter	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

5G NR Mode only

** sub-block (bandwidth) = $BW_{\text{channel,block}}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$.

See "Diagram for Offset Freq Define" on page 2267

Mode: MSR, LTEAFDD, LTEATDD


Remote Command	[:SENSe]:ACPower:OFFSet[1] 2:INNER:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge
----------------	--

	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:TYPE ETOC</code> <code>:ACP:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</code>

Mode: 5G NR

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:TYPE ETOC</code> <code>:ACP:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code>

Diagram for Offset Freq Define

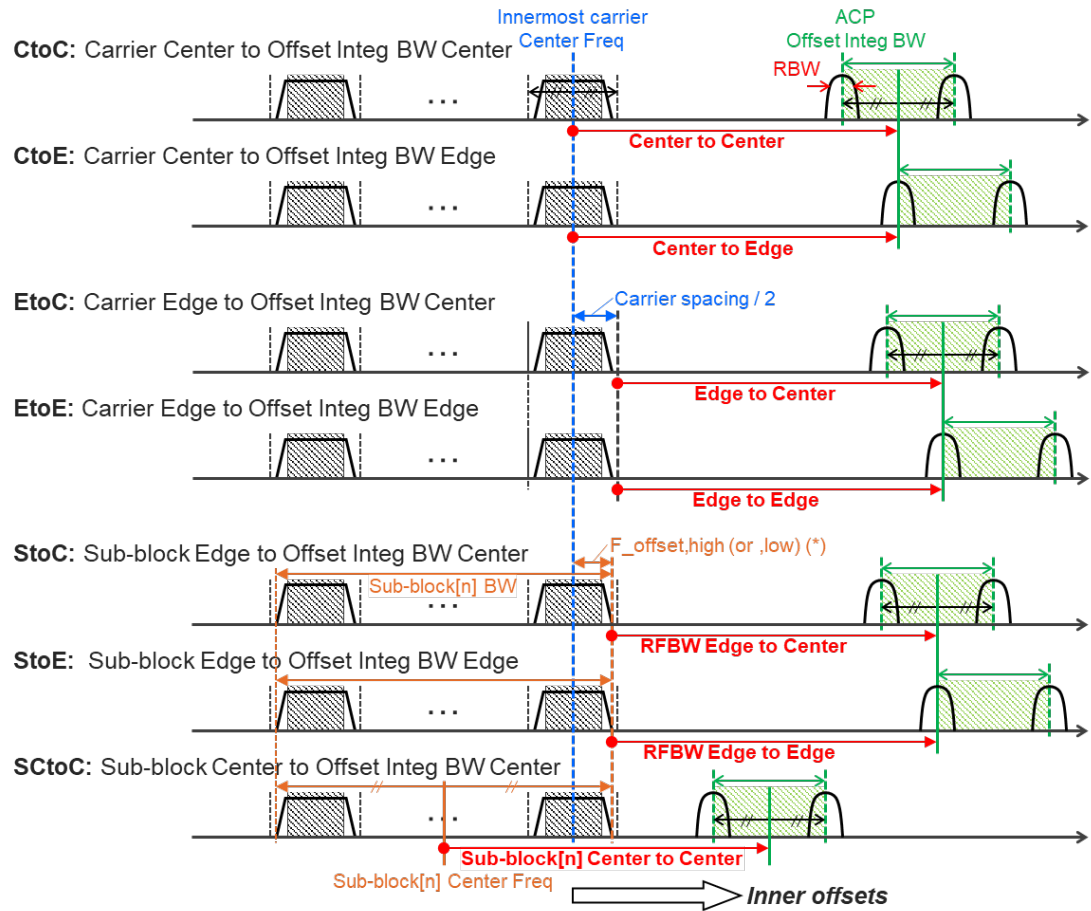

Note:

RF BW Edge and Outermost Carrier Edge are not always same.
e.g.) 5G NR (3GPP) defines BW_channel,CA which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift

(*) For MSR, $F_{\text{offset,high}} \text{ (or ,low)} = F_{\text{offset,RAT,high}} \text{ (or ,low)}$

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the frequency difference between the center of the main channel and the near edge of the offset.

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNer:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect "Span" on page 754						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>All Others</td><td>2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0</td></tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement Auto Function						
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <code>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</code>						
State Saved	Yes						

Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset on the **Offset** menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the **Offset Integration Bandwidth** menu key.

You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNeR:LIST:STATe`.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTeGratiOn] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTeGratiOn]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:INN:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND?</code>								
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value you must send all values up to it. Subsequent values remain unchanged								
Couplings	Changing Integ BW might affect " Span " on page 754								
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value								
	<table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td>LTEAFDD</td><td>3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz</td></tr> <tr> <td>MSR, LTEATDD</td><td>4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</td></tr> <tr> <td>5G NR</td><td>19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td></tr> </table>	Modes	Values	LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz	MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz	5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Modes	Values								
LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz								
MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz								
5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz								
State Saved	Saved in instrument state								
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement								


Offset Side

Lets you turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:SIDE`.

- **NEGative** - The upper side in the sub-block gap only (that is, negative sideband of the upper sub-block) is enabled

- **BOTH** - Both sides in the sub-block gap are enabled
- **POSitive** - The lower side in the sub-block gap only (that is, positive sideband of the lower sub-block) is enabled

The diagram below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTEAFDD and LTEATDD Modes.

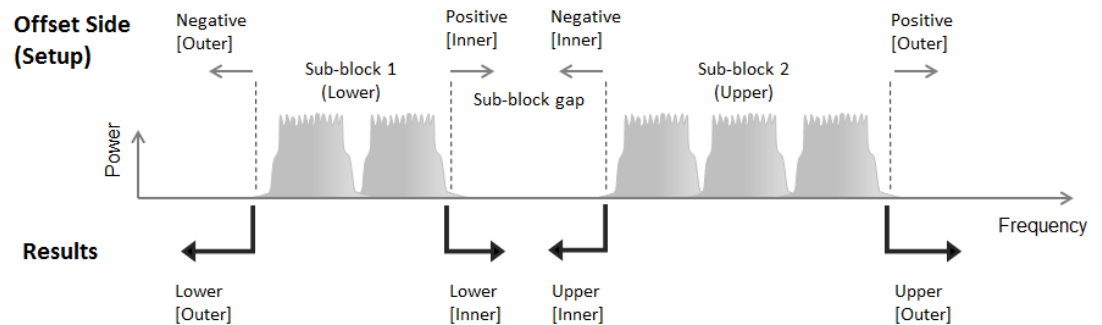

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE NEGative BOTH POSitive, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:SIDE BOTH</code> <code>:ACP:OFFS:INN:LIST:SIDE?</code>
Notes	If you set POS or NEG in an offset, result of the inactive side returns -999
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state
Range	NEGative BOTH POSitive

Method

Lets you turn RRC filtering of each offset on or off. The value (roll off) for the filter is set to the value of the Filter Alpha parameter.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe] ON OFF 1 0, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:INN:LIST:FILT?</code>
Notes	1 ON = RRC Weighted, 0 OFF = Integ BW

3 5G NR Mode

3.7 Modulation Analysis Measurement

Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table> <tr> <th>Modes</th><th>Values</th></tr> <tr> <td>LTEAFDD</td><td>1,1,1,1,1,1 1,1,1,1,1,1</td></tr> <tr> <td>MSR, LTEATDD, 5G NR</td><td>0,0,0,0,0,0 0,0,0,0,0,0</td></tr> </table>	Modes	Values	LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1	MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0
Modes	Values						
LTEAFDD	1,1,1,1,1,1 1,1,1,1,1,1						
MSR, LTEATDD, 5G NR	0,0,0,0,0,0 0,0,0,0,0,0						
State Saved	Saved in instrument state						
Range	Integ BW RRC Weighted						

Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer:ALPHa <real>,...</pre> <pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer:ALPHa?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</pre> <pre>:ACP:OFFS:INN:LIST:FILT:ALPH?</pre>
Preset	When " Max Num of Offsets " on page 826 is 12, the preset value of Offset G ~ L is 0.22 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00

Power Ref Type

Lets you set reference types of inner offsets.

CUMulative Cumulated power of the upper and lower sub-block carriers is the reference level. This selection is effective only when one of the following "**Power Ref**" on page 2240 values is selected:

Left & Right Carriers	LRCarriers
Max Power Carrier in Sub-block	MPCSubblock
Min Power Carrier in Sub-block	MINSubbloc
Left & Right Sub-blocks	LRSubblocks
Manual	MANual

When one of the other **Power Ref** values is selected, carrier powers are not cumulated, and the reference level is equivalent to Normal

NORMal Power of specified carrier or the manual reference level is the reference level

Remote	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREference CUMulative NORMal, ...</pre>
--------	---

Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFereNce?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:PREF CUM,CUM,NORM,NORM,NORM,NORM</code> <code>:ACP:OFFS:INN:LIST:PREF?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is NORMa1 NORMa1, NORMa1, NORMa1, NORMa1, NORMa1, NORMa1
State Saved	Saved in instrument state
Range	CUMulative NORMa1

Auto Function

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFereNce:AUTO OFF ON 0 1, ...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFereNce:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:PREF:AUTO OFF,OFF,OFF,OFF,OFF,OFF</code> <code>:ACP:OFFS:INN:LIST:PREF:AUTO?</code>
Dependencies	Available only in LTEAFDD, LTEATDD and 5G NR Modes
Couplings	When in the LTEAFDD, LTEATDD Modes, the inner power ref type is set automatically when the power ref type state is auto according to the scopes of the sub-block gap in the following table

Sub-block Gap	Inner ACP offset	Power Ref Type
Wgap <5MHz	1st (2.5MHz)	Normal
	2nd (7.5MHz)	Normal
5MHz ≤ Wgap <10MHz	1st (2.5MHz)	Cumulative
	2nd (7.5MHz)	Normal
10MHz ≤ Wgap <15MHz	1st (2.5MHz)	Cumulative
	2nd (7.5MHz)	Cumulative
15MHz ≤ Wgap <20MHz	1st (2.5MHz)	Normal
	2nd (7.5MHz)	Cumulative
20MHz ≤ Wgap	1st (2.5MHz)	Normal
	2nd (7.5MHz)	Normal

When in 5G NR Mode, Power Ref Type "Auto" sets the power reference type of inner-ACLR offset automatically

Downlink: "Cumulative" or "Normal" is selected accordingly when the inner-offsets are configured to meet the test requirements as follows:

FR1, 3GPP TS 38.141-1 v16.5.0 (2020-09) Section 6.6.3.5.3 BS type 1-C:

- Table 6.6.3.5.2-3: Base Station ACLR limit in non-contiguous spectrum or multiple bands
- Table 6.6.3.5.2-4: Base station CACLR limit

3 5G NR Mode

3.7 Modulation Analysis Measurement

	FR2, 3GPP TS 38.141-2 v16.5.0 (2020-09) Section 6.7.3.5.3 BS type 2-O: <ul style="list-style-type: none"> Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum Uplink: "Normal" is always selected
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value ON, ON, ON, ON, ON, ON OFF, OFF, OFF, OFF, OFF, OFF
State Saved	Saved in instrument state
Range	Auto Man

Inner Limits

Enables you to configure inner limits parameters for the ACP measurement in the EVM measurement based on the same capture.

Limit Test

Turns limit checking for each offset On or Off. The limits may be specified in the **Offset** menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In the **Combined** view, the bar turns red.

Remote Command	:CALCulate:ACPower:LIMit:STATe OFF ON 0 1 :CALCulate:ACPower:LIMit:STATe?	
Example	:CALC:ACP:LIM:STAT OFF :CALC:ACP:LIM:STAT?	
Preset	SA	OFF
	WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR	ON
State Saved	Saved in instrument state	
Range	ON OFF	
Backwards Compatibility SCPI	[:SENSe]:MCPower:LIMit[:STATe] [:SENSe]:ACPower:LIMit[:STATe]	

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the

frequency difference between the center of the main channel and the near edge of the offset.

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[:SENSe]:ACPower:OFFSet[n]:INNer:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST[:FREQuency] <freq>,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect "Span" on page 754						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td></tr> <tr> <td>All Others</td><td>2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0</td></tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz,7.5MHz,0,0,0,0 2.5MHz,7.5MHz,0,0,0,0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement Auto Function						
Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST:STATe OFF ON 0 1,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNer:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <code>ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</code>						

State Saved Yes

Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[:SENSe]:ACP:Power:OFFSet[1] 2:INNER:LIST:ABSolute < real>,...</code> <code>[:SENSe]:ACP:Power:OFFSet[1] 2:INNER:LIST:ABSolute?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:INN:LIST:ABS?</code>						
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> <tr> <td>All Others</td><td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td></tr> </tbody> </table>	Modes	Values	5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	All Others	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values						
5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0						
All Others	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45 -50.0, -50.0, -50.0, -50.0, -50.0, -50.0						
State Saved	Saved in instrument state						
Min/Max	-200.0 dBm/50.0 dBm						

Rel Limit (Car)

Specifies a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list. `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RCARrier <real>,... [:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RCARrier?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>						
Example	<pre>:ACP:OFFS2:INN:LIST:RCAR 0,0,0,0,0,0 :ACP:OFFS2:INN:LIST:RCAR?</pre>						
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Modes</th><th>Values</th></tr> </thead> <tbody> <tr> <td>5G NR</td><td>-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> <tr> <td>All Others</td><td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td></tr> </tbody> </table>	Modes	Values	5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Modes	Values						
5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
State Saved	Saved in instrument state						
Min/Max	-150/50.0						

Rel Limit (PSD)

Specifies a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<pre>[:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity <rel_ampl>,... [:SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS2:INN:LIST:RPSD 10,10,10,10,10,10 :ACP:OFFS2:INN:LIST:RPSD?</pre>
Preset	<p>When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is 0</p> <p>0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0</p>

State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

Fail Mask

Accesses a menu that enables you to select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:ABSolute`, or the relative values defined with `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:RPSDensity` and `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n]:INNER:LIST:STATe`.

Option	SCPI	Description
Absolute	<code>ABSolute</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	<code>RELative</code>	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	<code>AND</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>and</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	<code>OR</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>or</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:TEST ABSolute AND OR RELative,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:INN:LIST:TEST?</code>
Preset	When "Max Num of Offsets" on page 826 is 12, the preset value of Offset G ~ L is <code>AND AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND</code>
State Saved	Saved in instrument state
Range	<code>ABSolute AND OR RELative</code>

SEM Setup

Enables you to configure advanced parameters for the SEM measurement in the EVM measurement based on the same capture.

General

Enables you to configure general parameters for the SEM measurement in the EVM measurement based on the same capture.

SEM State

Enable or disable the SEM measurement.

Remote Command	<code>[:SENSe]:EVM:SEM OFF ON 0 1</code> <code>[:SENSe]:EVM:SEM?</code>
Example	<code>:EVM:SEM OFF</code> <code>:EVM:SEM?</code>
Preset	<code>OFF</code>
State Saved	Yes

Measurement Type

Accesses a menu that enables you to select one of the following measurement reference types:

Total Pwr Ref	<code>TPRef</code>	Sets the reference to the total carrier power and the measured data is shown in dBc and dBm
PSD Ref	<code>PSDRef</code>	Sets the reference to the mean power spectral density of the carrier and the measured data is shown in dB and dBm/Hz
Spectrum Peak Ref	<code>SPRef</code>	Sets the reference to the spectrum peak power of the carrier and the measured data is shown in dB and dBm

Remote Command	<code>[:SENSe]:SEMask:TYPE PSDRef TPRef SPRef</code> <code>[:SENSe]:SEMask:TYPE?</code>
Example	<code>:SEM:TYPE PSDR</code> <code>:SEM:TYPE?</code>
Preset	WLAN Mode: <code>SPRef</code> All other Modes: <code>TPRef</code>
State Saved	Saved in instrument state
Range	Total Pwr Reference PSD Reference Spectrum Peak Reference

Power Ref


Selects the power reference type:


Option	SCPI	Description
Left & Right Carriers	LRCarriers	<p>Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Only the frequency ranges of leftmost and rightmost carriers are swept and measured. Other frequency ranges in the RFBW are not measured. Left and right carriers are determined based on the carrier center frequencies</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are NaN. Relative limits are not evaluated</p>
Max Power Carrier	MPCarrier	<p>Maximum carrier power is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN. Relative limits are not evaluated</p>
Carrier Index	CINdex	<p>Power of the specified carrier is the reference of measurement. Only the frequency range of the specified carrier is swept and measured, and other frequency ranges in the RFBW are not measured</p> <p>If Measure Carriers of this carrier index is off, the reference power and all the relative power results are NaN. Relative limits are not evaluated</p>
Manual	MANual	<p>Power or PSD specified by the user is the reference of measurement. No carriers are measured and the manually specified value is used as reference</p>
Max Power Carrier in Sub-block	MPCSubblock	<p>Maximum carrier power among the sub-block carriers with Measure Carrier On is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are NaN, and these relative limits are not evaluated</p>
RF Bandwidth	RFBandwidth	<p>Power or PSD of total of the RF bandwidth is the reference of measurement. Power not only in the carrier bands but also carrier gaps is integrated into the reference power. Measure Carrier On/Off does not affect the reference power frequency range because RF bandwidth is determined by the carrier configuration</p>
Aggregated Chan BW LTE-A and 5G NR Modes only	ACBandwidth	<p>The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. Measure Carrier On/Off affects the reference power frequency range</p> <p>If Measure Carriers of all the carriers are off, the reference power and all the relative power results are NaN and Relative limits are not evaluated</p>
Left & Right Sub-blocks	LRSubblocks	<p>The reference depends on the Number of Component Carriers (CC) and Carrier Allocation as follows:</p>

Option	SCPI	Description	
5G NR Mode only		Number of CCs	Reference
		1	The carrier power is the reference
		2 or more, and Carrier Allocation is Contiguous	Aggregated Channel power is the reference
		2 or more, and Carrier Allocation is Non-Contiguous	Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration


The powers of carriers are not included in the reference power when their Measure Carriers are **Off**. When Measure Carriers of all the carriers in a sub-block are **Off**, the reference power and all the relative power results are **NaN**. Therefore, relative limits are not evaluated.


Meas Type = Total Power Ref

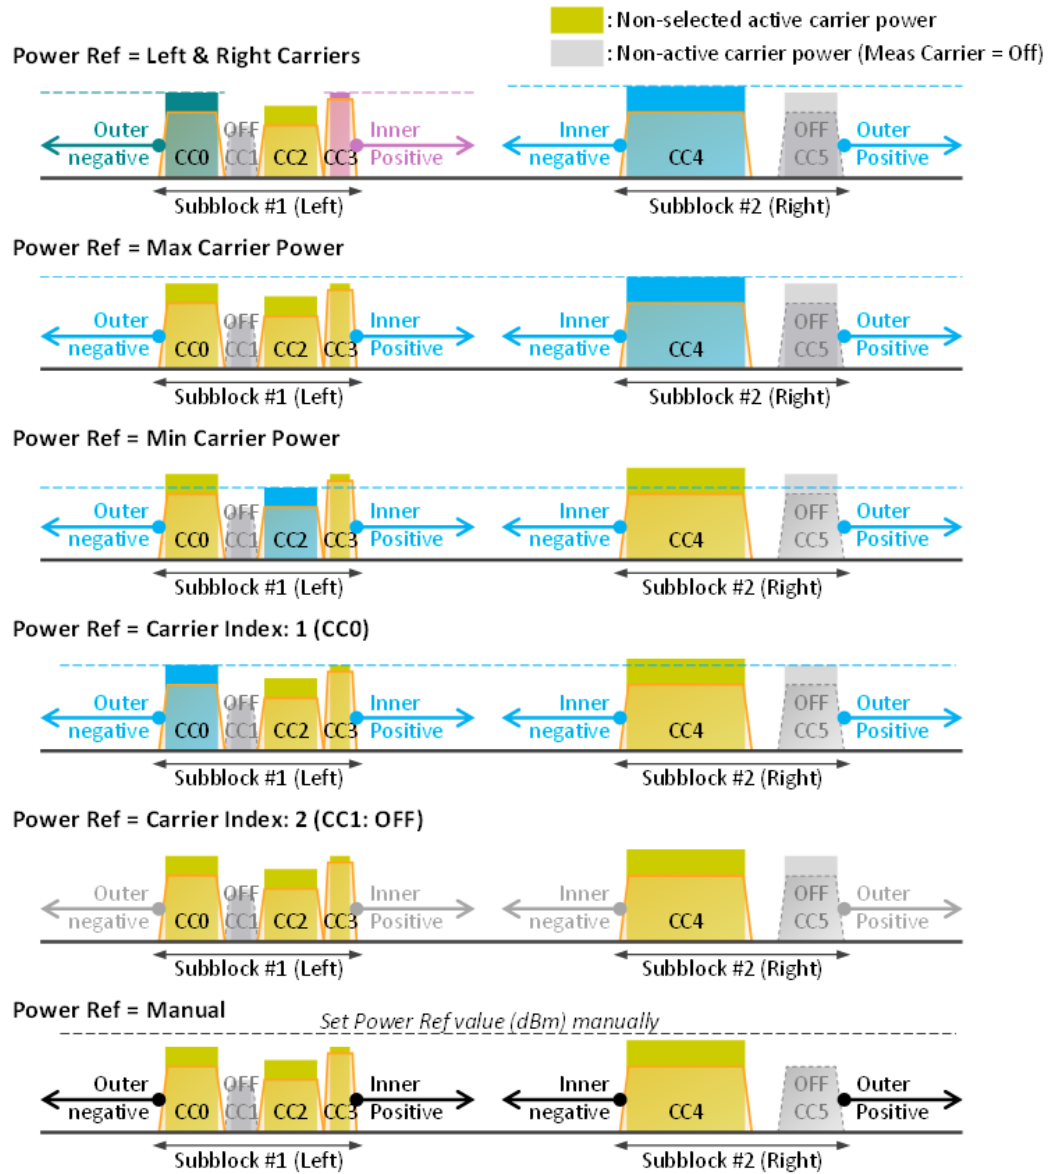

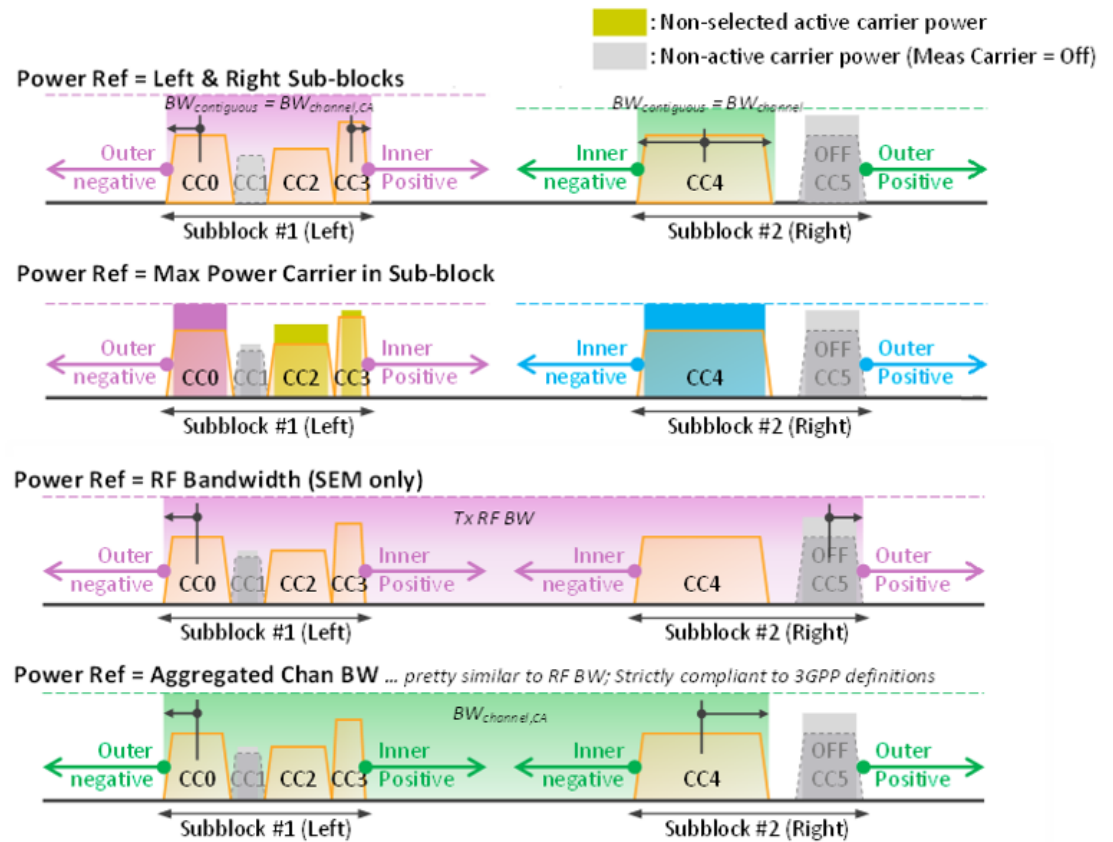

Meas Type = PSD Ref

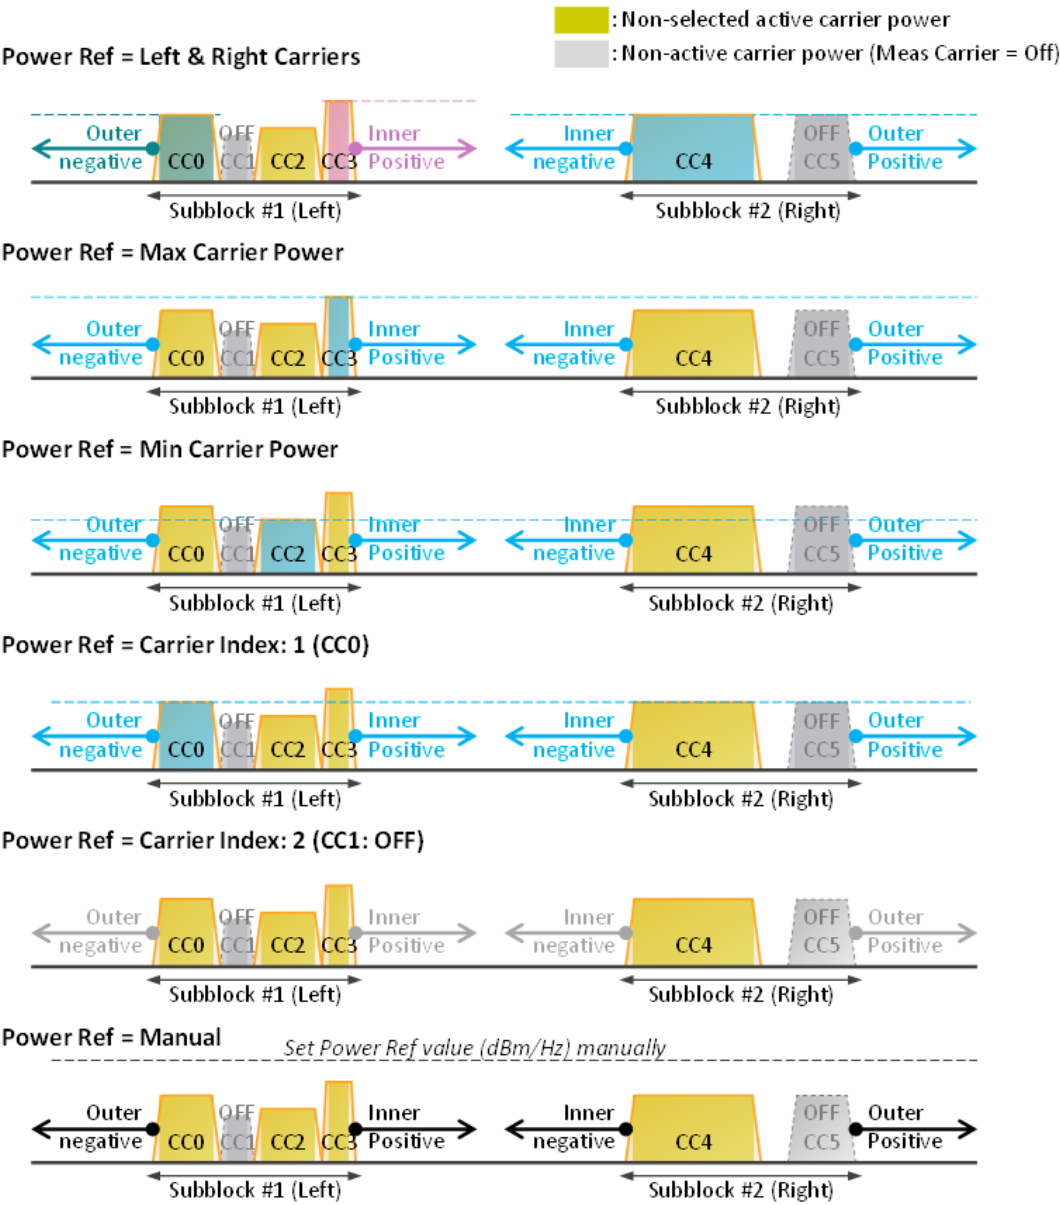

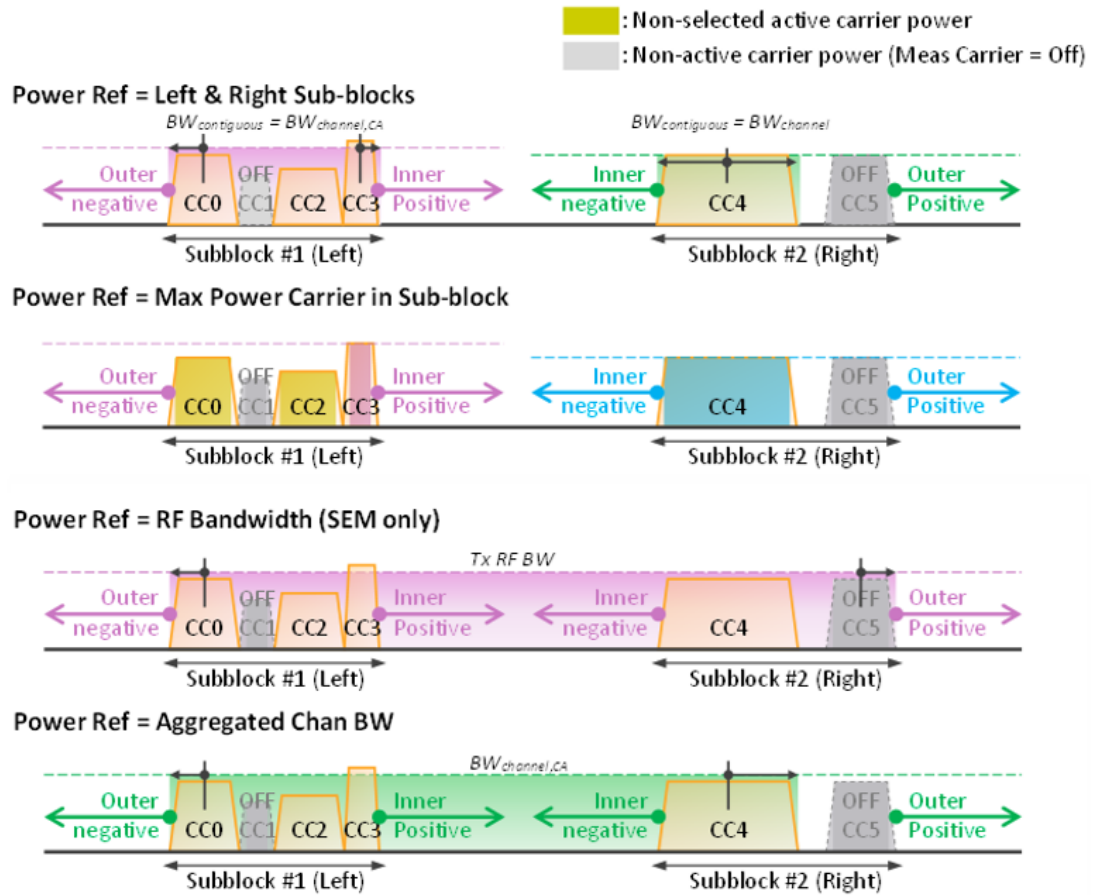

Remote Command	<code>[:SENSe]:SEMask:CARRier:PREference:TYPE LRCarriers MPCarrier CINDEX </code> <code>MANual MPCSubblock RFBandwidth ACBandwidth LRSubblocks</code> For option details, see above <code>[:SENSe]:SEMask:CARRier:PREference:TYPE?</code>
Example	<code>:SEM:CARR:REF:TYPE CIND</code> <code>:SEM:CARR:REF:TYPE?</code>
Notes	LRSubblocks is available only in 5G NR Mode ACBandwidth is available only in LTE-A and 5G NR Modes
Dependencies	Only available in MSR, LTE-A and 5G NR Modes
Preset	MPCarrier
State Saved	Saved in instrument state
Range	Left & Right Carriers Max Power Carriers Carrier Index Manual Max Power Carrier in Sub-block RF Bandwidth Aggregated Chan BW Left & Right Sub-blocks
Remote Command	<code>[:SENSe]:SEMask:CARRier:AUTO[:STATE] OFF ON 1 0</code> <code>[:SENSe]:SEMask:CARRier:AUTO[:STATE]?</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

Example	<code>:SEM:CARR:AUTO OFF</code> <code>:SEM:CARR:AUTO?</code>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

Carrier Index

Sets carrier index of the reference power. The power of the carrier selected by this index becomes reference power when "Power Ref" on page 2279 is Carrier Index.

Remote Command	<code>[:SENSe]:SEMask:CARRier:INDex <integer></code> <code>[:SENSe]:SEMask:CARRier:INDex?</code>
Example	<code>:SEM:CARR:IND 1</code> <code>:SEM:CARR:IND?</code>
Dependencies	Available only in MSR, LTE-A and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	MSR Mode: 1/100 LTEAFDD,LTEATDD Mode:1/5 5G NR Mode: 16

Total Power Ref

Sets the power in the carrier (ref channel) that is used to compute the relative power values for the offsets. For modes other than MSR, LTEAFDD, LTEATDD, and 5G NR, when **Reference Power** is set to Measured, this value is set to the measured carrier reference power. When set to Manual, the result takes on the last measured value, or can be manually entered.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power readouts of the two carriers is used for computing the relative power values for the offset.

Remote Command	<code>[:SENSe]:SEMask:CARRier[:POWer] <real></code> <code>[:SENSe]:SEMask:CARRier[:POWer]?</code>
Example	<code>:SEM:CARR 100dBm</code> <code>:SEM:CARR?</code>
Notes	The min and max values given are for "Measurement Type" on page 2278 = Total Pwr Ref
Couplings	Coupled with Measurement Type . Active when Measurement Type is set to Total Power Ref. Otherwise, grayed-out

	In MSR, LTE-A and 5G NR Modes, the control is active when Measurement Type is set to Total Power and Power Ref is set to Manual
Preset	Measured carrier reference power
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Annotation	Value is displayed on the left top of the Results window with the Channel Integ BW

PSD Ref

Sets the power spectral density in the carrier that is used to compute the relative power spectral density values for the offsets when "**Measurement Type**" on page 2278 is set to PSD Ref. When the state is set to **Auto**, this will be set to the measured carrier power spectral density.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power density readouts of the two carriers is used for computing the relative PSD values for the offset.

Remote Command	<code>[:SENSe]:SEMask:CARRier:CPsD <real></code> <code>[:SENSe]:SEMask:CARRier:CPsD?</code>
Example	<code>:SEM:CARR:CPsD -80</code> <code>:SEM:CARR:CPsD?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with " Measurement Type " on page 2278. Active if Measurement Type is PSD. Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when Measurement Type is PSD and Power Ref is Manual
Preset	Measured carrier PSD reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is PSD Ref, the string is "PSD Ref" with BOLD font, otherwise, hide annotation

Spectrum Pk Ref

Sets the spectrum peak power in the carrier that is used to compute the relative power spectral density values for the offsets when "**Measurement Type**" on page 2278 is Spectrum Peak. When the state is set to **Auto**, this is set to the measured carrier spectrum peak power. When set to **Manual**, the result takes on the last measured value, or can be manually entered

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>[:SENSe]:SEMask:CARRier:PEAK[:POWer] <real></code> <code>[:SENSe]:SEMask:CARRier:PEAK[:POWer]?</code>
Example	<code>:SEM:CARR:PEAK -80</code> <code>:SEM:CARR:PEAK:POWER?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with "Measurement Type" on page 2278. Active when Measurement Type is "Spectrum Peak Ref". Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when Measurement Type is Spectrum Peak Ref and Power Ref is Manual
Preset	Measured carrier Spectrum Peak reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is Spectrum Peak Ref, the string is "Spectrum Peak Ref" with BOLD font, otherwise, hide annotation

Points

Sets the number of points displayed in the traces. The current value of points is displayed in the bottom-right corner of the display.

Remote Command	<code>[:SENSe]:SEMask:SWEep:POINts <integer></code> <code>[:SENSe]:SEMask:SWEep:POINts?</code>
Example	<code>:SEM:SWE:POIN 4001</code> <code>:SEM:SWE:POIN?</code>
Preset	2001
State Saved	Saved in instrument state
Min	201
Max	10001
Annotation	On second line of annotations in bottom right corner

Non-Contiguous Meas Region

Selects the region to measure for the non-contiguous frequency allocation.

Option	SCPI	Comments
Outer	<code>OUTer</code>	
Inner	<code>INNer</code>	
Outer & Inner	<code>OINNer</code>	Available only in 5G NR and LTE-Advanced FDD/TDD Modes

Remote Command	<code>[:SENSe]:SEMask:NCONtiguous:REGion INNer OUTer OINNer</code> <code>[:SENSe]:SEMask:NCONtiguous:REGion?</code>
Example	<code>:SEM:NCON:REG INN</code> <code>:SEM:NCON:REG?</code>
Dependencies	Available only in MSR, 5G NR and LTE-Advanced FDD/TDD Modes <code>OINNer</code> is available only in 5G NR and LTE-Advanced FDD/TDD Modes
Preset	<code>INNer</code>
State Saved	Yes
Range	Inner Outer Outer & Inner

Meas Method

Sets the measurement method:

Method	Option	Description
Integration BW	<code>0</code> <code>OFF</code>	Enables you to set the channel integration bandwidth
RRC Weighted	<code>1</code> <code>ON</code>	Selects Root Raised Cosine (RRC) filtering of the carriers. The a value (rolloff) for the filter is set to the value of the Filter Alpha parameter

Remote Command	<code>[:SENSe]:SEMask:FILTer[:RRC][:STATe] OFF ON 0 1</code> <code>[:SENSe]:SEMask:FILTer[:RRC][:STATe]?</code>
Example	<code>:SEM:FILT ON</code> <code>:SEM:FILT?</code>
Dependencies	WLAN: RRC Weight is not supported when the radio standard is WLAN 802.11ac (80+80MHz)
Preset	SA, LTEAFDD, LTEATDD, 5G NR, WLAN, MSR Modes <code>OFF</code> WCDMA Mode <code>ON</code>
State Saved	Saved in instrument state
Range	Integration BW RRC Weighted

RRC Filter Alpha

Sets the alpha value for the RRC Filter.

Remote Command	<code>[:SENSe]:SEMask:FILTer[:RRC]:ALPHa <real></code> <code>[:SENSe]:SEMask:FILTer[:RRC]:ALPHa?</code>
Example	<code>:SEM:FILT:ALPH 0.3</code> <code>:SEM:FILT:ALPH?</code>

Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.0

Result Table

Specifies which results will be displayed in the SEM Results table

Result Table	Details
APFReq	Displays the absolute power levels in dBm and the corresponding frequencies in the SEM Results table
RPFReq	Displays the relative power levels in dBc and the corresponding frequencies in the SEM Results table
IPOWer	Displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the SEM Results table
Remote Command	[:SENSe]:EVM:SEM:TABLE APFReq RPFReq IPOWer [:SENSe]:EVM:SEM:TABLE?
Example	:EVM:SEM:TABL RPFReq :EVM:SEM:TABL?
Preset	APFR
State Saved	Yes
Range	Abs Pwr Freq Rel Pwr Freq Integrated Power

Offset

Enables you to configure offset parameters for the SEM measurement in the EVM measurement based on the same capture.

Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition. LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. The MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center

frequency of Meas BW and the limit line have $\frac{1}{2}$ Meas BW offset when the Meas BW Edge is selected.

Note that the outermost (lowermost, uppermost) carrier at each side is determined by which carrier edge frequency is located outermost within the RF BW or each sub-block bandwidth, instead of which carrier center frequency is located outermost.

See also ["Diagrams for Offset Freq Define" on page 2292](#).

Modes other than MSR, LTE-A, 5G NR

Options:

CTOCenter	From carrier center to the center of offset measuring filter*
CTOEdge	From carrier center to the nominal -3 dB point of the offset measuring filter* closer to the carrier
ETOCenter	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the center of offset measuring filter *
ETOEdge	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the nominal -3 dB point of the offset measuring filter * closer to the carrier

*Measuring filter = Meas BW (N) x Res BW

** RF BW = $BW_{\text{channel,CA}}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When **Number of Component Carriers** = 1, RF BW = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:TYPE CTOCenter CTOEdge ETOCenter ETOEdge</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code> <code>:SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS
Preset	CTOCenter
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge

Mode: MSR, LTEAFDD, LTEATDD

Options:

CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center of offset measuring filter*
CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
RTOCenter	From either the lower or upper RF BW** edge frequency to the center frequency of offset measuring filter*
RTOEdge	From either the lower or upper RF BW** edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
RCTOCenter 5G NR Mode only	From the center frequency of RF BW to the center frequency of offset measuring filter*

*Measuring filter = Meas BW (N) x Res BW

** RF BW = $BW_{\text{channel,CA}}$ which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When **Number of Component Carriers** = 1, RF BW = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code> <code>:SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	MSR: RTOCenter LTEAFDD, LTEATDD: ETOCenter
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge

Mode: 5G NR


Options: see "Mode: MSR, LTEAFDD, LTEATDD" on page 2291 above.

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE CTOCenter CTOEdge ETOCenter ETOEdge RTOCenter RTOEdge RCTOCenter [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC :SEM:OFFS:TYPE?</code>
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	ETOCenter
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge RF BW Center to Meas BW Center


Diagrams for Offset Freq Define

Details depend on the selected mode.

Diagrams for Modes other than MSR, LTEAFDD/LTEATDD, 5G NR

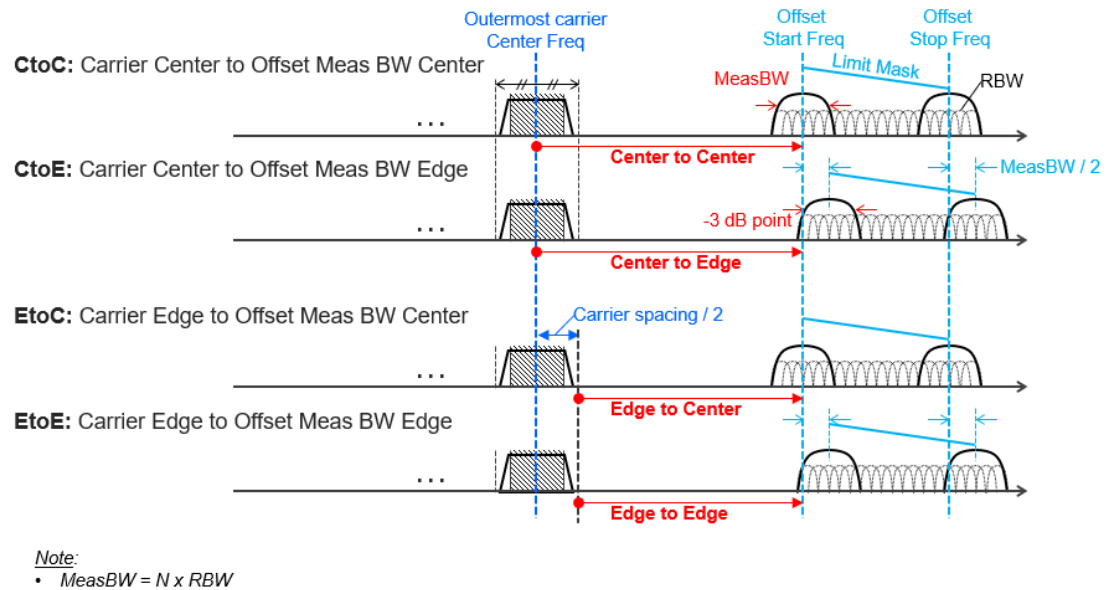

Diagrams for MSR, LTEAFDD/LTEATDD, 5G NR

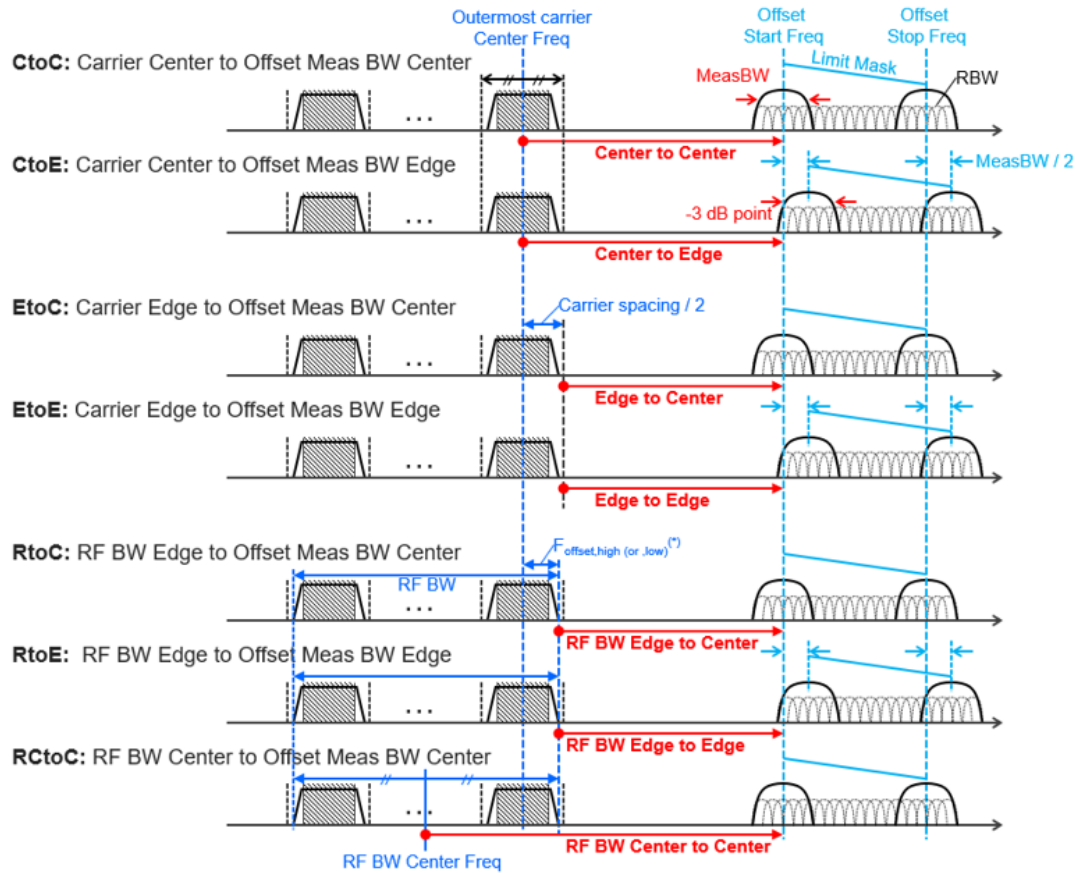

Notes:

- $\text{MeasBW} = N \times \text{RBW}$
- RF BW Edge and Outermost Carrier Edge are not always same. e.g.) 5G NR (3GPP) defines $\text{BW}_{\text{channel,CA}}$ which calculates $F_{\text{offset,high}}$ and $F_{\text{offset,low}}$ asymmetrically with SCS shift.
(*) For MSR, $F_{\text{offset,high (or ,low)}} = F_{\text{offset,RAT,high (or ,low)}}$

Start Freq

Specifies the start frequency for the currently selected offset. Also enables you to toggle that offset between On and Off.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt <freq>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe?</pre>														
Example	<pre>:SEM:OFFS2:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz :SEM:OFFS2:LIST:FREQ:STAR? :SEM:OFFS:LIST:STAT ON, ON, ON, OFF, OFF, OFF :SEM:OFFS:LIST:STAT?</pre>														
Notes	<p>Comma-separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p> <p>If the offset is outside of the frequency range, the result spectrum will be invalid</p>														
Couplings	Coupled to Stop Freq. When the start freq goes above the stop freq, the stop freq is automatically adjusted to the start freq plus 100 Hz														
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</td></tr> <tr> <td>WCDMA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz</td></tr> <tr> <td>5G NR</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See the table of "WLAN Mode Presets" on page 2295 below</p> <p>When the max number of offsets is 6:</p>	Mode	Values	SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz	WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz	Mode	Values	MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
Mode	Values														
SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz														
WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz														
Mode	Values														
MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz														
LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz														
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz														

3 5G NR Mode

3.7 Modulation Analysis Measurement

Mode	Values
SA	ON, ON, ON, ON, ON, OFF
WCDMA	ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF
When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value	
MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value	
Mode	Values
WLAN	See the table of "WLAN Mode Auto Function Presets" on page 2296 below
State Saved	Saved in instrument state Saved in instrument state
Min/Max	0 Hz/Depends on instrument maximum frequency Always Offset Stop Freq - 100 Hz

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)/802.11n (20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz
802.11b/g (DSSS/CCK/PBCC)	11 MHz, 22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ac(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ac(80MHz)	39 MHz, 41 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz

Radio Std	Presets
802.11ac(160MHz)	79 MHz, 81 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ac(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11ah(1MHz)	0.45 MHz, 0.6 MHz, 1 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz
802.11ah(2MHz)	0.9 MHz, 1.1 MHz, 2 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz
802.11ah(4MHz)	1.9 MHz, 2.1 MHz, 4 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz
802.11ah(8MHz)	3.9 MHz, 4.1 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz
802.11ah(16MHz)	7.9 MHz, 8.1 MHz, 16 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz
802.11j/p(10MHz)	4.5 MHz, 5MHz, 5.5 MHz, 10 MHz, 15 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11p(5MHz)	2.25 MHz, 2.5MHz, 2.75 MHz, 5 MHz, 7.5 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11ax/be(20MHz)	9.75 MHz, 10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ax/be(40MHz)	19.5 MHz, 20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ax/be(80MHz)	39.5 MHz, 40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz
802.11ax/be(160MHz):	79.5 MHz, 80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ax(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11af(6MHz)	2.85 MHz, 3.15 MHz, 6 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz
802.11af(7MHz)	3.325 MHz, 3.675 MHz, 7 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz
802.11af(8MHz)	3.8 MHz, 4.2 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz
802.11be (320MHz)	159.5 MHz, 160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz

WLAN Mode Auto Function Presets

For X Series:

3 5G NR Mode

3.7 Modulation Analysis Measurement

Radio Std	Presets
802.11b/g(DSSS/CCK/PBCC)	ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11a/g/j/p 20MHz (OFDM/DSSS-OFDM)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11j/p 10MHz	
802.11p 5MHz/802.11n (20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	OFF, ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF
802.ah (1MHz/ 2MHz/ 4MHz/ 8MHz/ 16MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

For E6630A, E6640A, and M90XA:

Radio Std	Presets
802.11a/g(OFDM/DSSS-OFDM)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11n(20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	ON, ON, ON, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz,</code>

	15.0 MHz :SEM:OFFS:LIST:FREQ:STOP?														
Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p> <p>If the offset is outside of the frequency range, the result spectrum will be invalid</p>														
Couplings	Coupled to Start Freq. When Stop Freq goes below Start Freq, Start Freq is automatically adjusted to Stop Freq minus 100 Hz														
Preset	<p>When the max number of offsets is 6:</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</td></tr> <tr> <td>WCDMA</td><td>2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>5G NR</td><td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz</td></tr> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See table of "WLAN Mode Presets" on page 2298 below</p>	Mode	Values	SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz	WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz
Mode	Values														
SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz														
WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz														
Mode	Values														
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz														
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz														
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz														
State Saved	Saved in instrument state														
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span in Swept SA Measurement														

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11n (20MHz)	

3 5G NR Mode

3.7 Modulation Analysis Measurement

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz
802.11n (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11n (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz
802.11ac (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ac (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ac (80MHz)	41 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac (160MHz)	81 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ac (80 MHz + 80MHz)	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ah (1MHz)	0.6MHz, 1 MHz, 1.5 MHz, 2.5MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz
802.11ah (2MHz)	1.1 MHz, 2 MHz, 3 MHz, 5MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz
802.11ah (4MHz)	2.1 MHz, 4 MHz, 6 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz
802.11ah (8MHz)	4.1 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11ah (16MHz)	8.1 MHz, 16 MHz, 24 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11j/p (20MHz)	10MHz, 11 MHz, 20 MHz, 30 MHz, 50MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11j/p (10MHz)	5MHz, 5.5 MHz, 10 MHz, 15 MHz, 25MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11p (5MHz)	2.5MHz, 2.75MHz, 5 MHz, 7.5 MHz, 12.5MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11ax/be (20MHz)	10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ax/be (40MHz)	20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ax/be (80MHz)	40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ax/be (160MHz)	80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ax (80 MHz +	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz,

Radio Std	Presets
80MHz)	250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11af (6MHz)	3.15MHz, 6 MHz, 9 MHz, 15MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz
802.11af (7MHz)	3.675 MHz, 7 MHz, 10.5 MHz, 17.5MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz
802.11af (8MHz)	4.2 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11be (320MHz)	160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz

Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset.. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$,

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution] <bandwidth>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO OFF ON 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:SEM:OFFS2:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz :SEM:OFFS2:LIST:BAND? :SEM:OFFS:LIST:BAND:AUTO 1,1,1,1,1,1 :SEM:OFFS:LIST:BAND:AUTO?</pre>
Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>

3 5G NR Mode

3.7 Modulation Analysis Measurement

Couplings	<p>Coupled to Start and Stop offset and Meas BW multiplier. This parameter must adhere to the rule $(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$, where N is the multiplier. If the multiplier is changed, the Res BW will change to ensure this. When set manually, Res BW Coupling is set to manual</p> <p>The resolution bandwidth is coupled to the offset width determined by the start frequency and stop frequency</p>																
Preset	<p>When the max number of offsets is 6:</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz, 1.00 MHz, 1.00 MHz</td></tr> <tr> <td>WCDMA</td><td>30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td>MSR</td><td>30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz</td></tr> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>WLAN</td><td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td></tr> </table> <p>When the max number of offsets is 6: OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF</p> <p>When the max number of offsets is 12: OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</p> <p>When the max number of offsets is 14: OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</p>	Mode	Values	SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz, 1.00 MHz, 1.00 MHz	WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz	Mode	Values	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz	MSR	30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz	Mode	Values	WLAN	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
Mode	Values																
SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz, 1.00 MHz, 1.00 MHz																
WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz																
Mode	Values																
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz																
MSR	30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz 30kHz, 30kHz, 30kHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz																
Mode	Values																
WLAN	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz																
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>																
Range	Auto Man																
Min	1 Hz																
Max	<p>Option FS1 or FS2 is installed: 10 MHz</p> <p>Otherwise: 8 MHz</p>																

Backwards Compatibility SCPI	<code>[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth[:RESolution]</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth[:RESolution]:AUTO</code>
------------------------------	---

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result.

$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and Meas BW compensates sweep resolution bandwidth to Integration BW.

If you set this value greater than 1, you can set Resolution BW narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:IMULti <integer>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:IMULti?</code>												
Example	<code>:SEM:OFFS2:LIST:BAND:IMUL 1,1,1,1,1,1</code> <code>:SEM:OFFS2:LIST:BAND:IMUL?</code>												
Notes	Comma separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS												
Preset	When the max number of offsets is 6: <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>1, 1, 1, 1, 1, 1</td></tr> <tr> <td>WCDMA</td><td>1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> </tbody> </table>	Mode	Values	SA	1, 1, 1, 1, 1, 1	WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values												
SA	1, 1, 1, 1, 1, 1												
WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1												
Mode	Values												
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1												
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1												

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value	
Mode	Values
WLAN	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
State Saved	Yes
Min/Max	1/1000
Backwards Compatibility SCPI	[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth:IMULTi

Offset Side

Specifies which offset side to measure.

You can turn off (not use) specific offsets with [:SENSe]:SEMask:OFFSet[n] [:OUTer]:LIST:STATe.

- BOTH


Both of the negative (lower) and positive (upper) sidebands
- NEGative

Negative (lower) sideband only
- POSitive

Positive (upper) sideband only

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, and 12 values for other Modes.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTE-Advanced FDD/TDD and 5G NR Modes.

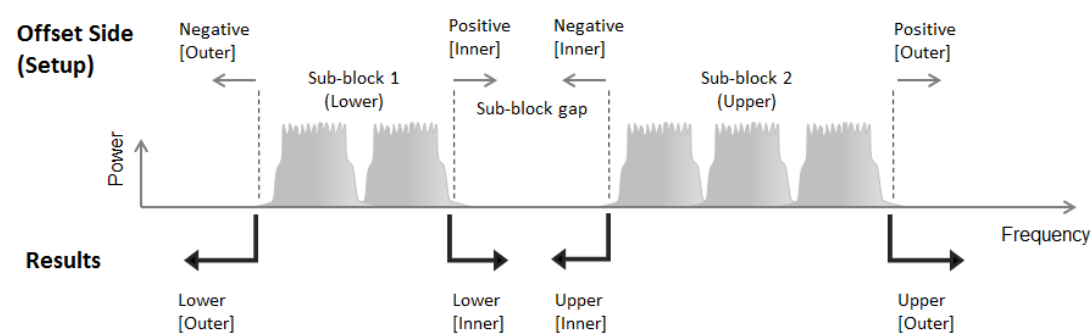

Remote Command	[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE BOTH NEGative POSitive, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE?
Example	:SEM:OFFS:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS

	:SEM:OFFS:LIST:SIDE?
Notes	<p>Comma-separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p>
Preset	<p>Modes LTEAFDD,LTEATDD, 5G NR, MSR:</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p> <p>When the max number of offsets is 14:</p> <p>Mode WLAN:</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p> <p>All Other Modes:</p> <p>When the max number of offsets is 6:</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p> <p>When the max number of offsets is 12:</p> <p>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</p>
State Saved	Saved in instrument state
Range	BOTH NEGative POSitive

Limits

Enables you to configure limits parameters for the SEM measurement in the EVM measurement based on the same capture.

Start Freq

Specifies the start frequency for the currently selected offset. Also enables you to toggle that offset between On and Off.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt <freq>, ...</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt?</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe ON OFF 1 0, ...</p> <p>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STATe?</p>
Example	:SEM:OFFS2:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<pre>:SEM:OFFS2:LIST:FREQ:STAR?</pre> <pre>:SEM:OFFS:LIST:STAT ON, ON, ON, OFF, OFF, OFF</pre> <pre>:SEM:OFFS:LIST:STAT?</pre>																				
Notes	<p>Comma-separated list of values</p> <p>Offset1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p> <p>If the offset is outside of the frequency range, the result spectrum will be invalid</p>																				
Couplings	Coupled to Stop Freq. When the start freq goes above the stop freq, the stop freq is automatically adjusted to the start freq plus 100 Hz																				
Preset	<p>When the max number of offsets is 6:</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</td></tr> <tr> <td>WCDMA</td><td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz</td></tr> <tr> <td>5G NR</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz</td></tr> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See the table of "WLAN Mode Presets" on page 2306 below</p> <p>When the max number of offsets is 6:</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>ON, ON, ON, ON, ON, OFF</td></tr> <tr> <td>WCDMA</td><td>ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz	WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz	Mode	Values	MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz	Mode	Values	SA	ON, ON, ON, ON, ON, OFF	WCDMA	ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF
Mode	Values																				
SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz																				
WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz																				
Mode	Values																				
MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz 15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz																				
LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz																				
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz																				
Mode	Values																				
SA	ON, ON, ON, ON, ON, OFF																				
WCDMA	ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF																				

	MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
	LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
	5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value		
	Mode	Values
	WLAN	See the table of "WLAN Mode Auto Function Presets" on page 2307 below
State Saved	Saved in instrument state Saved in instrument state	
Min/Max	0 Hz/Depends on instrument maximum frequency Always Offset Stop Freq - 100 Hz	

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS- OFDM)/802.11n (20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz, 216 MHz
802.11b/g (DSSS/CCK/PBCC)	11 MHz, 22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11n(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ac(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ac(80MHz)	39 MHz, 41 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz
802.11ac(160MHz)	79 MHz, 81 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ac(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11ah(1MHz)	0.45 MHz, 0.6 MHz, 1 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz, 1.5 MHz

3 5G NR Mode

3.7 Modulation Analysis Measurement

Radio Std	Presets
802.11ah(2MHz)	0.9 MHz, 1.1 MHz, 2 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz, 3 MHz
802.11ah(4MHz)	1.9 MHz, 2.1 MHz, 4 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz, 6 MHz
802.11ah(8MHz)	3.9 MHz, 4.1 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 120 MHz, 120 MHz, 120 MHz
802.11ah(16MHz)	7.9 MHz, 8.1 MHz, 16 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz, 24 MHz
802.11j/p(10MHz)	4.5 MHz, 5MHz, 5.5 MHz, 10 MHz, 15 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11p(5MHz)	2.25 MHz, 2.5MHz, 2.75 MHz, 5 MHz, 7.5 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11ax/be(20MHz)	9.75 MHz, 10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11ax/be(40MHz)	19.5 MHz, 20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz, 70 MHz
802.11ax/be(80MHz)	39.5 MHz, 40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz, 125 MHz
802.11ax/be(160MHz):	79.5 MHz, 80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ax(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11af(6MHz)	2.85 MHz, 3.15 MHz, 6 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz
802.11af(7MHz)	3.325 MHz, 3.675 MHz, 7 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz, 10.5 MHz
802.11af(8MHz)	3.8 MHz, 4.2 MHz, 8 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz, 12 MHz
802.11be (320MHz)	159.5 MHz, 160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz

WLAN Mode Auto Function Presets

For X Series:

Radio Std	Presets
802.11b/g(DSSS/CCK/PBCC)	ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11a/g/j/p 20MHz (OFDM/DSSS-OFDM)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11j/p 10MHz	

Radio Std	Presets
802.11p 5MHz/802.11n (20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	OFF, ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF
802.ah (1MHz/ 2MHz/ 4MHz/ 8MHz/ 16MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

For E6630A, E6640A, and M90XA:

Radio Std	Presets
802.11a/g(OFDM/DSSS-OFDM)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11n(20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	ON, ON, ON, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF

Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:LIST:FREQ:STOP?</code>
Notes	Comma separated list of values <code>OFFSet1</code> is for BTS, 2 for MS. Default is BTS

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<p>Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p> <p>If the offset is outside of the frequency range, the result spectrum will be invalid</p>														
Couplings	Coupled to Start Freq. When Stop Freq goes below Start Freq, Start Freq is automatically adjusted to Stop Freq minus 100 Hz														
Preset	<p>When the max number of offsets is 6:</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</td></tr> <tr> <td>WCDMA</td><td>2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz</td></tr> <tr> <td>5G NR</td><td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz</td></tr> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See table of "WLAN Mode Presets" on page 2309 below</p>	Mode	Values	SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz	WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz
Mode	Values														
SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz														
WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz														
Mode	Values														
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz														
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz														
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz														
State Saved	Saved in instrument state														
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span in Swept SA Measurement														

WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11n (20MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz, 120 MHz
802.11n (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz

Radio Std	Presets
802.11n (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz, 300 MHz
802.11ac (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ac (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ac (80MHz)	41 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac (160MHz)	81 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ac (80 MHz + 80MHz)	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ah (1MHz)	0.6MHz, 1 MHz, 1.5 MHz, 2.5MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz, 2.5 MHz
802.11ah (2MHz)	1.1 MHz, 2 MHz, 3 MHz, 5MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz, 5 MHz
802.11ah (4MHz)	2.1 MHz, 4 MHz, 6 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz, 10 MHz
802.11ah (8MHz)	4.1 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11ah (16MHz)	8.1 MHz, 16 MHz, 24 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
802.11j/p (20MHz)	10MHz, 11 MHz, 20 MHz, 30 MHz, 50MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11j/p (10MHz)	5MHz, 5.5 MHz, 10 MHz, 15 MHz, 25MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11p (5MHz)	2.5MHz, 2.75MHz, 5 MHz, 7.5 MHz, 12.5MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11ax/be (20MHz)	10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz
802.11ax/be (40MHz)	20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
802.11ax/be (80MHz)	40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ax/be (160MHz)	80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz, 400 MHz
802.11ax (80 MHz + 80MHz)	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11af (6MHz)	3.15MHz, 6 MHz, 9 MHz, 15MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz, 15 MHz
802.11af (7MHz)	3.675 MHz, 7 MHz, 10.5 MHz, 17.5MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz

Radio Std	Presets
	17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz, 17.5 MHz
802.11af (8MHz)	4.2 MHz, 8 MHz, 12 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz, 20 MHz
802.11be (320MHz)	160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz, 800 MHz

Abs Start

Sets the absolute power level limit at the start frequency for the selected offset. The absolute power level limit ranges from –200 to +50 dBm.

The fail condition for each offset channel is set remotely by
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:TEST.`

You can turn off (not use) specific offset channels remotely with
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe.`

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute?</code>								
Example	<code>:SEM:OFFS2:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS2:LIST:STAR:ABS?</code>								
Notes	Comma-separated list of values <code>OFFSet1</code> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS								
Preset	When the max number of offsets is 6: <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm</td></tr> <tr> <td>WCDMA</td><td>-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</td></tr> <tr> <td>LTE, LTETDD</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm	WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm	LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
SA	-14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm								
WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm								
LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								

Mode	Values
LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm

When the max number of offsets is 14 in these Modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "WLAN Mode Presets" on page 2312 below

State Saved	Saved in instrument state
Min/Max	-200 dBm/50 dBm

WLAN Mode Presets

[illegible]

Radio Std	Presets
	60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11ah (4MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11j/p (20MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11j/p (10MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11p (5MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm
802.11af (6MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (7MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (8MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm

Abs Stop

Sets the absolute power level limit at the stop frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the **Abs Stop** power level limit is coupled to **Abs Start** to result in a flat limit line. If set to **Man**, Abs Start and Abs Stop take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle?</pre>																
Example	<pre>:SEM:OFFS:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS1:LIST:STOP:ABS? :SEM:OFFS:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:ABS:COUP?</pre>																
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p>																
Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value																
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</td></tr> <tr> <td>WCDMA</td><td>-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</td></tr> <tr> <td>LTE, LTETDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>5G NR</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>MSR</td><td>-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p>	Mode	Values	SA	-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm	WCDMA	-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm	LTE, LTETDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	Mode	Values	LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm
Mode	Values																
SA	-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm																
WCDMA	-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm																
LTE, LTETDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
Mode	Values																
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm																
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm																

WLAN Mode: See the table of "WLAN Mode Presets" on page 2315 below

When the max number of offsets is 6:

Mode	Values
SA	ON, OFF, ON, ON, ON, ON
WCDMA	ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON
LTE, LTETDD	OFF, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "WLAN Mode Auto Function Presets" on page 2316 below

State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dBm/50 dBm

WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, - 24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm, - 24.00 dBm, -24.00 dBm, -24.00 dBm, -24.00 dBm
802.11a/g (OFDM/DSSS- OFDM)	-10 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm, -30 dBm
802.11n/ac/ax/be (20MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11n/ac/ax/be (40MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ac/ax (80MHz/160MHz)	-69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -

Radio Std	Presets
	69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11be (80MHz/160MHz/320MHz)	-49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm
802.11ac/ax (80 + 80 MHz)	-69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11ah (1MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11ah (4MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11j/p (10MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11j/p (5MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm
802.11af (6MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (7MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (8MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm

WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11n (20MHz/40MHz)	ON, ON, ON, ON
802.11 ac/ax/be (20MHz/40MHz/80MHz/160MHz)	

Radio Std	Presets
802.11 be (320MHz)	
802.11ah (1MHz/2MHz/4MHz/8MHz/16MHz)	
802.11af (6MHz/7MHz/8MHz)	
802.11 ac/ax (80+80 MHz)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11j/p 20M, j/p 10M, p5M	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

Rel Start

Sets a relative power level limit at the start frequency for the selected offset. The relative power level limit ranges from –200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]`
`[:OUTer]:LIST:TEST` for each offset channel test.

You can turn off (not use) specific offset channels remotely with
`[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier <rel_amp1>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier?</code>						
Example	<code>:SEM:OFFS:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30</code> <code>:SEM:OFFS:LIST:STAR:RCAR?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS						
Preset	When the max number of offsets is 6: <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>SA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td></tr> <tr> <td>WCDMA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td></tr> </table>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						

Rel Stop

Sets a relative power level limit at the stop frequency for the selected offset. The relative power level limit ranges from –200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n] [:OUTer]:LIST:TEST` for each offset channel.

You can turn off (not use) specific offset channels remotely with `[:SENSe]:SEMask:OFFSet[n] [:OUTer]:LIST:STATe`.

The query returns values currently set to the offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier <rel_ampl>, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle?</pre>						
Example	<pre>:SEM:OFFS:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:LIST:STOP:RCAR? :SEM:OFFS:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:RCAR:COUP?</pre>						
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS</p>						
Couplings	Coupled to Rel Start if “Auto” is selected, that is, Start is made the same as Stop						
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td></tr> <tr> <td>WCDMA</td><td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						

3 5G NR Mode

3.7 Modulation Analysis Measurement

Radio Std	Presets
160 MHz)	dB, -40.00 dB
802.11be (320 MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11ac/ax (80 MHz + 80MHz)	-40dB, -28.00 dB, -20.00 dB, 0 dB, -20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB
802.11 j/p 10M, p5M	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -40.00 dB, -40.00 dB
802.11af (6MHz/ 7MHz/ 8MHz)	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -40.00 dB

WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11n (20MHz/ 40MHz)	ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11be (320 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11ac/ax (80 MHz + 80MHz)	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11ah (1MHz/2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11j/p (20M/ 10M) /11p(5M)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
802.11af (6 MHz/ 7 MHz/ 8 MHz)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each offset channel can be set remotely with `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:ABSolute` or `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offset channels remotely with `[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST ABSolute AND OR RELative, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST?</code>												
Example	<code>:SEM:OFFS:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>:SEM:OFFS:LIST:TEST?</code>												
Notes	Comma-separated list of values Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS												
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>SA</td><td>ABS, ABS, ABS, ABS, ABS, ABS</td></tr> <tr> <td>WCDMA</td><td>ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND</td></tr> <tr> <td>LTE, LTETDD</td><td>ABS, ABS, ABS, ABS, ABS, ABS</td></tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td><td>ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS</td></tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p>WLAN Mode: See the table of "WLAN Mode Presets" on page 2323 below</p>	Mode	Values	SA	ABS, ABS, ABS, ABS, ABS, ABS	WCDMA	ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND	LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS	Mode	Values	LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS
Mode	Values												
SA	ABS, ABS, ABS, ABS, ABS, ABS												
WCDMA	ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND												
LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS												
Mode	Values												
LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS												
State Saved	Saved in instrument state												
Range	Absolute Relative Abs AND Rel Abs OR Rel												

WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL
802.11a/g (OFDM/DSSS-OFDM)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11n/ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/80 MHz + 80MHz / 160 MHz/320MHz)	AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11j/p 10M, p5M	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11af (6 MHz/ 7 MHz/ 8 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND

Show Abs2 Limit

Shows or hides Abs2 limit parameters.

Remote Command	:DISPlay:SEMask:OFFSet:SABSolute ON OFF 1 0 :DISPlay:SEMask:OFFSet:SABSolute?
Example	:DISP:SEM:OFFS:SABS 1 :DISP:SEM:OFFS:SABS?
Preset	0
State Saved	Yes
Range	ON OFF

Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected offset, ranging from –200 to +50 dBm.

The fail condition for each offset channel is set remotely using:

[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:TEST:SABSolute

You can turn off (not use) specific offset channels remotely using:

[:SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATe

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STARt:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STARt:SABSolute?</code>
Example	<code>:SEM:OFFS:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:LIST:STAR:SABS?</code>
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS
Preset	For WLAN Mode: 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm For other Modes: 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If **Couple** = **ON**, the **Abs2 Stop** power level limit is coupled to "**Abs2 Start**" on page 2323, resulting in a flat limit line. If set to **Man** (**Couple** = **OFF**), **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute2 power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute <real>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPle ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPle?</code>
Example	<code>:SEM:OFFS:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code>

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<pre> :SEM:OFFS:LIST:STOP:SABS? :SEM:OFFS:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:SABS:COUP? </pre>
Notes	<p>Comma separated list of values</p> <p>Offset 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	Coupled to Abs2 Start if Auto is selected, that is, the Stop value is equal to the Start value
Preset	<p>For WLAN Mode:</p> <p>0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</p> <p>For other Modes:</p> <p>0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</p> <p>For WLAN Mode:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p> <p>For other Modes:</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	-200 dBm
Max	50 dBm

Fail Mask2

Selects the logic operation for fail conditions between the measurement results and the test limits:

(Primary Fail Mask selection) OR Abs2	OR	Checks against both Primary and Abs2 limits. The test fails if either of the limits is broken
(Primary Fail Mask selection) AND Abs2	AND	Checks against both Primary and Abs2 limits. The test fails if both of the limits are broken
Abs2 Disabled	OFF	Fail Mask2 is disabled

Note that the Primary Fail Mask selection is set by ["Fail Mask" on page 2321](#).

Examples:

- when Fail Mask is Abs **AND** Rel and Fail Mask2 is **OR** Abs2, “(Abs AND Rel) OR Abs2” is displayed in the column
- when Fail Mask is Absolute and Fail Mask2 is And Abs2, “(Absolute) AND Abs2” is displayed in the column

You can turn off (not use) specific offset channels remotely using:

```
[ :SENSe]:SEMask:OFFSet[n][:OUTer]:LIST:STATE
```

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute AND OR OFF, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute?</pre>
Example	<pre>:SEM:OFFS:LIST:TEST:SABS AND, AND, OR, OFF, OFF, OFF :SEM:OFFS:LIST:TEST:SABS?</pre>
Notes	Comma-separated list of values
Preset	For WLAN: <pre>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre> For other Modes: <pre>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</pre>
State Saved	Saved in instrument state
Range	OR Abs2 AND Abs2 Abs2 Disabled

Inner Offset

Enables you to configure inner offset parameters for the SEM measurement in the EVM measurement based on the same capture.

Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition, and LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center frequency of Meas BW and the limit line have ½ Meas BW offset when the Meas BW Edge is selected.

Option	SCPI	Definition
Carrier Center to	CTOCenter	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the

3 5G NR Mode

3.7 Modulation Analysis Measurement

Option	SCPI	Definition
Meas BW Center		center of offset measuring filter*
Carrier Center to Meas BW Edge	CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Carrier Edge to Meas BW Center	ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
Carrier Edge to Meas BW Edge	ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Edge to Meas BW Center	STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of offset measuring filter*
Sub-block Edge to Meas BW Edge	STOEdge	From either the lower or upper sub-block edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Center to Meas BW Center	SCTOCenter	From the center frequency of sub-block to the center frequency of offset measuring filter*
5G NR Mode only		

*Measuring filter = Meas BW (N) x Res BW

** sub-block (bandwidth) = $BW_{\text{channel,block}}$ which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the **Number of Component Carriers** within each sub-block = 1, sub-block (bandwidth) = $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$.

See "Diagrams for Offset Freq Define" on page 2329.

Mode: MSR, LTEAFDD, LTEATDD

Remote Command


```
[ :SENSe]:SEMask:OFFSet[1]|2:INNeR:TYPE CTOCenter | CTOEdge | ETOCenter | ETOEdge | STOCenter | STOEdge
[ :SENSe]:SEMask:OFFSet[1]|2:INNeR:TYPE?
```

Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge Sub-block Edge to Meas BW Center Sub-block Edge to Meas BW Edge

Mode: 5G NR

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:TYPE CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge SCTOCenter</code> <code>[[:SENSe]:SEMask:OFFSet[1] 2:INNer:TYPE?</code>
Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center Carrier Edge to Meas BW Edge Sub-block Edge to Meas BW Center Sub-block Edge to Meas BW Edge Sub-block Center to Meas BW Center

Diagrams for Offset Freq Define

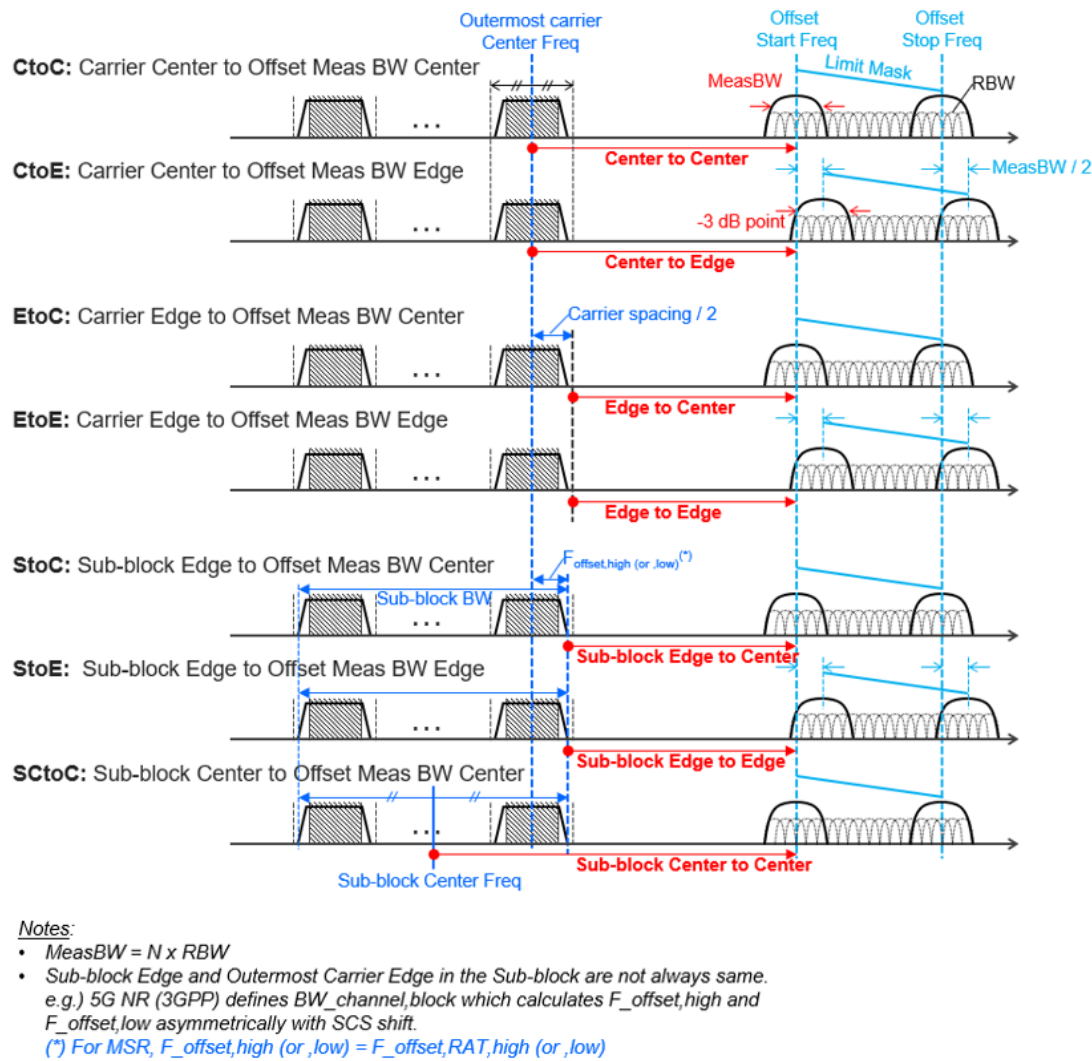

Cumulate Mask

Selects whether inner offset limit masks are cumulated or not.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk[:STATe] ON OFF 0 1</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk[:STATe]?</code>
Example	<code>:SEM:OFFS:INN:CMAS 0</code> <code>:SEM:OFFS:INN:CMAS?</code>

Notes	Offset 1 is for BTS, 2 for MS. Default is BTS
Preset	1 0
State Saved	Yes
Range	ON OFF

Cumulate Mask Stop Frequency

Specifies stop frequency of summing limit masks. For outside of the stop frequency, the limit masks are not cumulated.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk:FREQuency:STOP <freq></code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:CMASk:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:INN:CMAS:FREQ:STOP 500E6</code> <code>:SEM:OFFS:INN:CMAS:FREQ:STOP?</code>
Notes	Offset 1 is for BTS, 2 for MS. Default is BTS
Dependencies	Valid only when "Cumulate Mask " on page 2329 is ON
Preset	10.5 MHz
State Saved	Yes
Min/Max	0 Hz/10 GHz

Start Freq

Specifies the start frequency for the currently selected offset. Also, enables you to toggle that offset between On and Off. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe?</code>
Example	<code>:SEM:OFFS2:INN:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</code> <code>:SEM:OFFS2:INN:LIST:FREQ:STAR?</code> <code>:SEM:OFFS:INN:LIST:STAT ON, ON, ON, OFF, OFF, OFF</code> <code>:SEM:OFFS:INN:LIST:STAT?</code>
Notes	Comma-separated list of values Offset 1 is for BTS, 2 for MS. Default is BTS

3 5G NR Mode

3.7 Modulation Analysis Measurement

	If the offset is outside the frequency range, the result spectrum will be invalid	
Couplings	Coupled to "Stop Freq" on page 2336. If Start Freq exceeds Stop Freq, Stop Freq is automatically adjusted to (Start Freq + 100 Hz)	
Preset	Mode	Values
	MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz
	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz
	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz
	Mode	Values
	MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
	SGNR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
	LTEAFDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
	LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
State Saved	Saved in instrument state Saved in instrument state	
Range	ON OFF	
Min/Max	0 Hz/Depends on instrument maximum frequency. It's always Offset Stop Freq -100 Hz	

Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:INN:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:INN:LIST:FREQ:STOP?</code>
Notes	Comma-separated list of values

	<p>Offset 1 is for BTS, 2 for MS. Default is BTS</p> <p>If the offset is outside the frequency range, the result spectrum will be invalid</p>								
Couplings	Coupled to "Start Freq" on page 2335. If Stop Freq is lower than Start Freq , Start Freq is automatically adjusted to (Stop Freq - 100 Hz)								
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>5G NR</td><td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz</td></tr> </table>	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
Mode	Values								
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz								
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz								
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz								
State Saved	Saved in instrument state								
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span on Swept SA Measurement								

Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset. using front panel and all the offsets using SCPI. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset}),$$

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution] <bandwidth>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO OFF ON 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:SEMask:OFFSet2:INNeR:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz</pre>

	<pre>:SEM:OFFS2:INN:LIST:BAND?</pre> <pre>:SEM:OFFS:INN:LIST:BAND:AUTO 1,1,1,1,1,1</pre> <pre>:SEM:OFFS:INN:LIST:BAND:AUTO?</pre>								
Notes	<p>Comma-separated list of values</p> <p>Offset 1 is for BTS, 2 for MS. Default is BTS</p>								
Couplings	<p>Coupled to Start and Stop offset and "Meas BW" on page 2333 multiplier. This parameter must adhere to the rule:</p> <p>$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$, where N is the multiplier</p> <p>If the multiplier is changed, the Res BW changes to ensure conformance to the rule. When set manually, Res BW Coupling is set to manual</p> <p>The resolution bandwidth is coupled to the offset width, determined by "Start Freq" on page 2335 and "Stop Freq" on page 2336</p>								
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td></tr> <tr> <td></td><td>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> </table>	Mode	Values	MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz		OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
Mode	Values								
MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 30 kHz, 30 kHz, 30 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz								
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz 15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz								
	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF								
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>								
Range	Auto Man								
Min	1 Hz								
Max	<p>When Option FS1 or FS2 is installed: 10 MHz</p> <p>Otherwise: 8 MHz</p>								

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer, which defines a ratio between Integration BW and **Res BW** of the measurement result:

Integration BW = Meas BW * "**Res BW**" on page 2332

Integration BW is the desired resolution bandwidth, and **Res BW** is the actual bandwidth for sweep. Measurement sweeps with **Res BW**, and **Meas BW** compensates sweep resolution bandwidth to Integration BW.

If you set this parameter greater than 1, you can set **Res BW** narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:IMULti <integer>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth:IMULti?</code>						
Example	<code>:SEM:OFFS2:INN:LIST:BAND:IMUL 1,1,1,1,1,1</code> <code>:SEM:OFFS2:INN:LIST:BAND:IMUL?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS						
Couplings	This parameter must adhere to the rule: (N x Res BW) <= (Stop freq of the offset - Start freq of the offset), where N is the multiplier If Res BW is changed, the multiplier changes to conform to the rule						
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td><td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td></tr> </tbody> </table>	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values						
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
State Saved	Yes						
Min/Max	1/1000						

Offset Side


Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[:SENSe]:SEMask:OFFSet [n]:INNeR:LIST:STATe`.

BOTH	Both sides in the sub-block gap are enabled.
NEGative	The upper side in the sub-block gap only (i.e., negative sideband of the upper sub-block) is enabled
POSitive	The lower side in the sub-block gap only (i.e., positive sideband of the lower sub-block) is enabled.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR and LTE-Advanced FDD/TDD Modes.

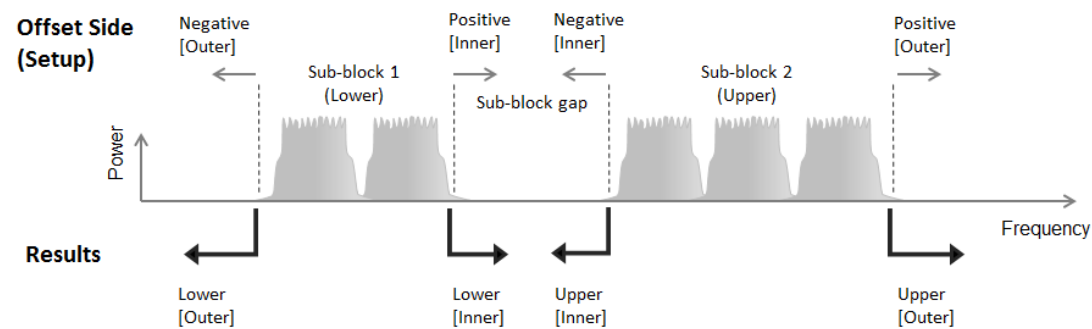

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SIDE BOTH NEgative POSitive, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:SIDE?</code>						
Example	<code>:SEM:OFFS:INN:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS</code> <code>:SEM:OFFS:INN:LIST:SIDE?</code>						
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS						
Preset	<table><tr><th>Mode</th><th>Values</th></tr><tr><td>MSR</td><td>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</td></tr><tr><td>LTEAFDD, LTEATDD, 5GNR</td><td>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</td></tr></table>	Mode	Values	MSR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH	LTEAFDD, LTEATDD, 5GNR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
Mode	Values						
MSR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH						
LTEAFDD, LTEATDD, 5GNR	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH						
State Saved	Saved in instrument state						
Range	BOTH NEgative POSitive						

Inner Limits

Enables you to configure inner limits parameters for the SEM measurement in the EVM measurement based on the same capture.

Start Freq

Specifies the start frequency for the currently selected offset. Also, enables you to toggle that offset between On and Off. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREquency:START <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREquency:START?</code>
----------------	---

	[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STATe?																
Example	:SEM:OFFS2:INN:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz :SEM:OFFS2:INN:LIST:FREQ:STAR? :SEM:OFFS:INN:LIST:STAT ON, ON, ON, OFF, OFF, OFF :SEM:OFFS:INN:LIST:STAT?																
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid																
Couplings	Coupled to "Stop Freq" on page 2336. If Start Freq exceeds Stop Freq , Stop Freq is automatically adjusted to (Start Freq + 100 Hz)																
Preset	<table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz</td></tr> <tr> <td>5G NR</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz</td></tr> </table> <table> <tr> <th>Mode</th><th>Values</th></tr> <tr> <td>MSR</td><td>ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>5GNR</td><td>ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> <tr> <td>LTEAFDD LTEATDD</td><td>ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr> </table>	Mode	Values	MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz	Mode	Values	MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF	5GNR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF	LTEAFDD LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
Mode	Values																
MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz 15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz																
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz																
LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz 15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz																
Mode	Values																
MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
5GNR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
LTEAFDD LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
State Saved	Saved in instrument state Saved in instrument state																
Range	ON OFF																
Min/Max	0 Hz/Depends on instrument maximum frequency. It's always Offset Stop Freq -100 Hz																

Stop Freq

Specifies the stop frequency for the currently selected offset.

3 5G NR Mode

3.7 Modulation Analysis Measurement

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP <freq>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:FREQuency:STOP?</code>								
Example	<code>:SEM:OFFS:INN:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:INN:LIST:FREQ:STOP?</code>								
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid								
Couplings	Coupled to "Start Freq" on page 2335. If Stop Freq is lower than Start Freq , Start Freq is automatically adjusted to (Stop Freq - 100 Hz)								
Preset	<table border="1"> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz</td></tr> <tr> <td>5G NR</td><td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz</td></tr> </tbody> </table>	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz
Mode	Values								
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz								
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz, 500 MHz								
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz								
State Saved	Saved in instrument state								
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span on Swept SA Measurement								

Abs Start

Sets the absolute power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBm.

The fail condition for each inner offset channel is set remotely by `[:SENSe]:SEMask:OFFSet[n]:INNeR:LIST:TEST`.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNeR:LIST:STATe`.

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STARt:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STARt:ABSolute?</code>								
Example	<code>:SEM:OFFS2:INN:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS2:INN:LIST:STAR:ABS?</code>								
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS								
Preset	<table> <thead> <tr> <th>Mode</th><th>Values</th></tr> </thead> <tbody> <tr> <td>MSR</td><td>-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr> <tr> <td>5G NR</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> <tr> <td>LTEAFDD, LTEATDD</td><td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr> </tbody> </table>	Mode	Values	MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm	5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm								
5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								
LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								
State Saved	Saved in instrument state								
Min/Max	-200 dBm/50 dBm								

Abs Stop

Sets the absolute power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the Abs Stop power level limit is coupled to Abs Start to result in a flat limit line. If set to **Man**, Abs Start and Abs Stop take different values to result in a sloped limit line.

The query returns values currently set to the inner offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute?</code>
----------------	--

3 5G NR Mode

3.7 Modulation Analysis Measurement

	[[:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPLe ON OFF 1 0, ... [:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPLe?														
Example	:SEM:OFFS:INN:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, - 11.50 dBm, -11.50 dBm :SEM:OFFS1:INN:LIST:STOP:ABS? :SEM:OFFS:INN:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:ABS:COUP?														
Notes	Comma-separated list of values Offset 1 is for BTS, 2 for MS. Default is BTS														
Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value														
Preset	<table><tr><th>Mode</th><th>Values</th></tr><tr><td>MSR</td><td>-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, - 24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td></tr><tr><td>5G NR</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr><tr><td>LTEAFDD, LTEATDD</td><td>-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td></tr><tr><th>Mode</th><th>Values</th></tr><tr><td>MSR</td><td>ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td></tr><tr><td>LTEAFDD, LTEATDD, 5G NR</td><td>OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</td></tr></table>	Mode	Values	MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, - 24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm	5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm	Mode	Values	MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
Mode	Values														
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -12.5 dBm, - 24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm														
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -22.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm														
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, - 8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm														
Mode	Values														
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF														
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON														
State Saved	Saved in instrument state Saved in instrument state														
Range	Auto Man														
Min/Max	-200 dBm/50 dBm														

Rel Start

Sets a relative power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:TEST` for each inner offset channel test.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATE`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:RCARrier <rel_amp>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:RCARrier?</code>
Example	<code>:SEM:OFFS:INN:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30</code> <code>:SEM:OFFS:INN:LIST:STAR:RCAR?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB
State Saved	Saved in instrument state
Min/Max	-200 dB/50 dB

Rel Stop

Sets a relative power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBc.

The fail condition is set remotely by `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:TEST` for each inner offset channel.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATE`.

The query returns values currently set to the inner offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:RCARrier <rel_amp>, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:RCARrier?</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:RCARrier:COUPle ON OFF 1 0, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:RCARrier:COUPle?</code>
Example	<code>:SEM:OFFS:INN:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30</code>

	<pre>:SEM:OFFS:INN:LIST:STOP:RCAR? :SEM:OFFS:INN:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:RCAR:COUP?</pre>
Notes	Comma-separated list of values Offset 1 is for BTS, 2 for MS. Default is BTS
Couplings	Coupled to Rel Start if "Auto" is selected, that is, Start is made the same as Stop
Preset	0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dB/50 dB

Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each inner offset channel can be set remotely with `[:SENSe]:SEMask:OFFSet[n]:INNeR:LIST:ABSolute` or `[:SENSe]:SEMask:OFFSet[n]:INNeR:LIST:RCARrier`.

You can turn off (not use) specific inner offset channels remotely with `[:SENSe]:SEMask:OFFSet[n]:INNeR:LIST:STATe`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:TEST ABSolute AND OR RELative, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:TEST?</pre>
Example	<pre>:SEM:OFFS:INN:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS :SEM:OFFS:INN:LIST:TEST?</pre>
Notes	Comma-separated list of values
Preset	ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS, ABS

State Saved	Saved in instrument state
Range	Absolute Relative Abs AND Rel Abs OR Rel

Show Abs2 Limit

Same as ["Show Abs2 Limit" on page 2342](#) under Limits.

Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected inner offset, ranging from –200 to +50 dBm.

The fail condition for each inner offset channel is set remotely using:

```
[ :SENSe]:SEMask:OFFSet[n]:INNER:LIST:TEST:SABSolute
```

You can turn off (not use) specific inner offset channels remotely using:

```
[ :SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATe
```

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:SABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:SABSolute?</pre>
Example	<pre>:SEM:OFFS:INN:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS:INN:LIST:STAR:SABS?</pre>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected inner offset, ranging from –200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If set to **Couple** = **ON**, the **Abs2 Stop** power level limit is coupled

to **"Abs2 Start" on page 2342**, resulting in a flat limit line. If set to **Man (Couple = OFF)**, **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop 2nd absolute power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<pre>[:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute <real>, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute:COUPle ON OFF 1 0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:STOP:SABSolute:COUPle?</pre>
Example	<pre>:SEM:OFFS:INN:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS:INN:LIST:STOP:SABS? :SEM:OFFS:INN:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:SABS:COUP?</pre>
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	Coupled to Abs Start if Auto is selected, that is, the Stop value is equal to the Start value
Preset	<p>0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</p> <p>ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	-200 dBm
Max	50 dBm

Fail Mask2

Selects one of the logical operations for fail conditions between the measurement results and the test limits:

(Primary Fail Mask selection) OR Abs2	OR	Checks against both Primary and Abs2 limits. The test fails if either of the limits is broken
(Primary Fail Mask selection) AND Abs2	AND	Checks against both Primary and Abs2 limits. The test fails if both of the limits are broken
Abs2 Disabled	OFF	Fail Mask2 is disabled

For examples, see **"Fail Mask2" on page 2325**.

Note that the Primary Fail Mask selection is set by "Fail Mask" on page 2341.

You can turn off (not use) specific inner offset channels remotely using:

`[:SENSe]:SEMask:OFFSet[n]:INNER:LIST:STATE`

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:TEST:SABSolute AND OR OFF, ...</code> <code>[:SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:TEST:SABSolute?</code>
Example	<code>:SEM:OFFS:INN:LIST:TEST:SABS AND, AND, OR, OFF, OFF, OFF</code> <code>:SEM:OFFS:INN:LIST:TEST:SABS?</code>
Notes	Comma-separated list of values
Preset	<code>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</code>
State Saved	Saved in instrument state
Range	OR Abs2 AND Abs2 Abs2 Disabled

Transmit On|Off Power Setup

Enables you to configure advanced parameters for the Transmit On|Off Power measurement in the EVM measurement.

Transmit On|Off Power State

Enable or disable Transmit On|Off Power measurement.

Remote Command	<code>[:SENSe]:EVM:PVTime OFF ON 0 1</code> <code>[:SENSe]:EVM:PVTime?</code>
Example	<code>:EVM:PVT OFF</code> <code>:EVM:PVT?</code>
Preset	<code>OFF</code>
State Saved	Yes

Burst Repetition Period

Determines the burst repetition period. For correct measurement, the value must be set to the repetition period of the burst and less than or equal to Meas Interval time.

Remote Command	<code>[:SENSe]:PVTime:BURSt:RPERiod <time></code> <code>[:SENSe]:PVTime:BURSt:RPERiod?</code>
----------------	--

Example	<code>:PVT:BURS:RPER 7ms</code> <code>:PVT:BURS:RPER?</code>
Notes	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard
Couplings	This parameter cannot be smaller than Burst Time When entering the value smaller than Burst Time, coupled to the value of Burst Time
Preset	5 ms
State Saved	Yes
Min	100 us
Max	10 ms


Meas Range

Enables you to select the measurement range from all bursts or specific burst within the Meas Interval. If there are multiple bursts within the Meas Interval, the burst number in the Metrics window are determined as follows and returned values of `:MEAS|READ|FETCh:PVT1` are the values at that burst number. The burst number in the Metrics window can be obtained by `:MEAS|READ|FETCh:PVT13`.

- All Bursts: the burst number determined with the following criteria is displayed in the Metrics window.
 - On Power and Burst Width:
 - Downlink: The same burst number as Off Power.
 - Uplink with UL On Pwr Limit Test = On: The burst number that contains the maximum deviation from the UL On Pwr Reference value among all detected bursts
 - Uplink with UL On Pwr Limit Test = Off: The burst number right before or after the Off Power period that contains the maximum RMS Off Power value among all detected Off Power Before/After periods
 - Off Power (Downlink): The burst number right before the Off Power period that contains the maximum Off Power peak value among all detected Off Power periods
 - Off Power After (Uplink): The burst number right before the Off Power After period whose measured RMS Off Power value is the maximum among all detected Off Power After periods
 - Off Power Before (Uplink only): The burst number right after the Off Power Before period whose measured RMS Off Power value is the maximum among all detected Off Power Before periods

- Ramp Up / Transient Ramp Up: The burst number whose measured ramp up period is the worst one among all detected bursts
- Ramp Down / Transient Ramp Down: The burst number whose measured ramp down period is the worst one among all detected bursts
- Specific Burst: the burst number specified by the Specific Burst Number is displayed in the Metrics window.

Note that when in downlink, the results of Ramp Down / Transient Ramp Down of Specific Burst Number and Ramp Up / Transient Ramp Up of Specific Burst Number + 1 are displayed. When in uplink, the results of Specific Burst Number itself are displayed.

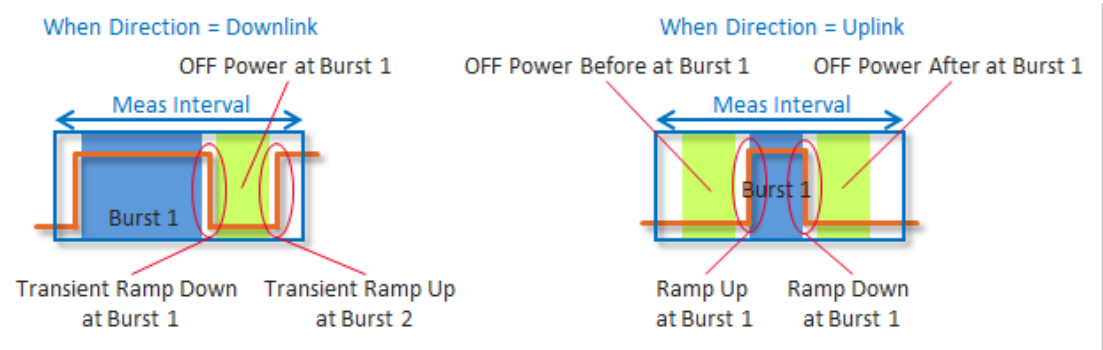

Remote Command	:CALCulate:PVTime:MRANge ALL SPECific :CALCulate:PVTime:MRANge?
Example	:CALC:PVT:MRAN ALL :CALC:PVT:MRAN?
Preset	SPECific
State Saved	Yes
Range	All Bursts Specific Burst

Specific Burst Number

Specifies the burst to be analyzed.

Remote Command	:CALCulate:PVTime:SBNumber <integer> :CALCulate:PVTime:SBNumber?
Example	:CALC:PVT:SBN 8 :CALC:PVT:SBN?
Dependencies	This control is grayed out when Meas Range is All Bursts
Preset	1

State Saved	Yes
Min	1
Max	10

Auto Timing Adjustment

In order to check transmit off power is below the 3GPP defined limit, timing reference must be provided in the measurement. This setting specifies how the timing reference is derived in the measurement.

When it is ON, the burst boundary timing is always appropriately adjusted based on the measured ramp up and ramp down edge timings. When it is OFF, the timing reference will be provided by external trigger, expected burst boundaries will be derived from external trigger and frame configuration parameters.

Remote Command	<code>[:SENSe]:PVTime:TIMing:REfERENCE:AUTO ON OFF 1 0</code> <code>[:SENSe]:PVTime:TIMing:REfERENCE:AUTO?</code>
Example	<code>:PVT:TIM:REF:AUTO ON</code> <code>:PVT:TIM:REF:AUTO?</code>
Dependencies	When Auto Timing adjustment is OFF and Trigger type is free run, an advisory message is generated
Preset	ON
State Saved	Yes
Range	On Off

Measure CC

Selects the component carrier to be measured in the uplink time mask measurement.

NOTE The parameter is only available for the Transmit On|Off Power measurement.

Remote Command	<code>[:SENSe]:PVTime:ULINK:CCARrier CC0 ... CC15</code> <code>[:SENSe]:PVTime:ULINK:CCARrier?</code>
Example	<code>:PVT:ULINK:CCAR CC0</code> <code>:PVT:ULINK:CCAR?</code>
Dependencies	Available only when Radio Direction is Uplink
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15

UL Off Power Length

It is used as uplink off power measurement period.

Remote Command	<code>[:SENSe]:PVTIme:ULINk:POFF:WIDTh <real></code> <code>[:SENSe]:PVTIme:ULINk:POFF:WIDTh?</code>
Example	<code>:PVT:ULIN:POFF:WIDT 5 ms</code> <code>:PVT:ULIN:POFF:WIDT?</code>
Dependencies	This control appears only when Radio Direction is Uplink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	1.0 ms
State Saved	Yes
Min	1 us
Max	0.01 s
Backwards Compatibility SCPI	<code>[:SENSe]:PVTIme:ULINk:OFFPower:WIDTh</code>

Max Ramp Down Time

It is used as threshold which can judge whether the real measured ramp down time can be passed or not. If real measured ramp down time exceeds Max Ramp Down Time, then ramp down time measurement fails, otherwise, it passes. This is used to determine the start position of the Transmitter OFF period when Auto Timing Adjust is On.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:RAMP:DRTIme <time></code> <code>[:SENSe]:PVTIme:LIMit:RAMP:DRTIme?</code>
Example	<code>:PVT:LIM:RAMP:DRT 10.0e-6</code> <code>:PVT:LIM:RAMP:DRT?</code>
Dependencies	This control is available when Direction is Downlink and Auto Timing Adjust is On or when Direction is Uplink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. See Transmit On Off Power for the preset value in Values for Meas Standard.
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Max Ramp Up Time

It is used as threshold which can judge whether the real measured ramp up time can be passed or not. If real measured ramp up time exceeds Max Ramp Up Time, then ramp up time measurement fails, otherwise, it passes. This is used to determine the end position of the Transmitter OFF period when Auto Timing Adjust is On.

Remote Command	<code>[:SENSe]:PVTime:LIMit:RAMP:URTime <time></code> <code>[:SENSe]:PVTime:LIMit:RAMP:URTime?</code>
Example	<code>:PVT:LIM:RAMP:URT 10.0e-6</code> <code>:PVT:LIM:RAMP:URT?</code>
Dependencies	This control is available when Direction is Downlink and Auto Timing Adjust is On or when Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On Off Power for the preset value in Values for Meas Standard.
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Downlink Transient Period

This parameter sets the threshold for downlink transient period which is calculated from expected burst boundary to the point of the specified OFF power limit. The Transmitter OFF period is determined by this parameter when Auto Timing Adjust is Off.

If the measured ramp up or ramp down transient period of downlink signal exceeds the threshold, the ramp up or ramp down transient period measurements fail.

Remote Command	<code>[:SENSe]:PVTime:LIMit:TRANSient:DLINK <time></code> <code>[:SENSe]:PVTime:LIMit:TRANSient:DLINK?</code>
Example	<code>:PVT:LIM:TRAN:DLIN 10.0e-6</code> <code>:PVT:LIM:TRAN:DLIN?</code>
Dependencies	This control appears only when the Radio Direction is Downlink and available when Auto Timing Adjust is Off
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Downlink Off Power

It is used as threshold in downlink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Downlink Off Power, then off power measurement fails, otherwise, it passes. Note that the unit of this parameter is dBm/MHz.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:POFF:DLINK <real></code> <code>[:SENSe]:PVTIme:LIMit:POFF:DLINK?</code>
Example	<code>:PVT:LIM:POFF:DLIN -83.0</code> <code>:PVT:LIM:POFF:DLIN?</code>
Dependencies	This control appears only when the Radio Direction is Downlink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	-83.00
State Saved	Yes
Min/Max	-150.00/0.00

Uplink Off Power

It is used as threshold in uplink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Uplink Off Power, then off power measurement fails, otherwise, it passes. Note that the unit of this parameter is dBm.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:POFF:ULINK <real></code> <code>[:SENSe]:PVTIme:LIMit:POFF:ULINK?</code>
Example	<code>:PVT:LIM:POFF:ULIN -50.0</code> <code>:PVT:LIM:POFF:ULIN?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	-48.3
State Saved	Yes
Min/Max	-150.00 dBm/0.00 dBm

Uplink On Power Reference

This is used as an Expected Transmission ON Measured power reference in uplink, which judges whether the real measured on power is passed or not when "Uplink On Power Limit Test" on page 2584 is set to on. If the real measured on power is within

the Uplink On Power Reference +/- Uplink On Power Tolerance, then the on power measurement passes, otherwise, it fails.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINk:REFeRence <real></code> <code>[:SENSe]:PVTIme:LIMit:PON:ULINk:REFeRence?</code>
Example	<code>:PVT:LIM:PON:ULIN:REF 9.8</code> <code>:PVT:LIM:PON:ULIN:REF?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	9.8
State Saved	Yes
Min	-150 dBm
Max	150 dBm

Uplink On Power Tolerance

This is used as the pass/fail margin from the UL On Power Reference value for the UL On Power measurement limit test when "Uplink On Power Limit Test" on page 2584 is set to on.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINk:TOLerance <real></code> <code>[:SENSe]:PVTIme:LIMit:PON:ULINk:TOLerance?</code>
Example	<code>:PVT:LIM:PON:ULIN:TOL 10.7</code> <code>:PVT:LIM:PON:ULIN:TOL?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	10.70 dB !when FR1 100MHz with SCS 30 kHz
State Saved	Yes
Min	0 dB
Max	100 dB

Uplink On Power Limit Test

When it is set to on, the measurement judges whether the real measured on power is passed or not. If the real measured on power is within Uplink On Power Reference +/- Uplink On Power Tolerance, the on power measurement passes, otherwise, it fails.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINk:STATe OFF ON 0 1</code>
----------------	--

	<code>[:SENSe]:PVTime:LIMit:PON:ULINK:STATe?</code>
Example	<code>:PVT:LIM:PON:ULIN:STAT 1</code> <code>:PVT:LIM:PON:ULIN:STAT?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Preset	OFF
State Saved	Yes

Burst Line

Turns the Burst Line On or Off. This line indicates the location of the Transmitter ON period determined by the Burst Width.

Remote Command	<code>:DISPlay:PVTime:BLINes[:STATe] ON OFF 1 0</code> <code>:DISPlay:PVTime:BLINes[:STATe]?</code>
Example	<code>:DISP:PVT:BLIN ON</code> <code>:DISP:PVT:BLIN?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow:BLINes[:STATe]</code>

Burst Timing Indicator Line

Turns the Burst Timing Indicator Line On or Off. The line shown on screen is just to indicate which part of signal is active burst and which part is inactive burst and nothing to do with the Pass/Fail (shown at the upper-left corner of screen) criteria. Regarding the Pass/Fail criteria, please refer to ["Limits" on page 2581](#).

Remote Command	<code>:DISPlay:PVTime:LIMit:MASK OFF ON 0 1</code> <code>:DISPlay:PVTime:LIMit:MASK?</code>
Example	<code>:DISP:PVT:LIM:MASK 1</code> <code>:DISP:PVT:LIM:MASK?</code>
Notes	This parameter only hides or shows the Burst Timing Indicator Line on the display
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow:LIMit:MASK</code>

Ramp Line

Turns the Ramp Line On or Off. This line indicates the Ramp Up/Down time.

Remote Command	<code>:DISPlay:PVTime:RAMP[:STATe] OFF ON 0 1</code> <code>:DISPlay:PVTime:RAMP[:STATe]?</code>
Example	<code>:DISP:PVT:RAMP ON</code> <code>:DISP:PVT:RAMP?</code>
Preset	OFF
State Saved	Yes
Range	On Off

Bar Graph

Turns the Bar Graph On and Off. The Bar Graph represents the Transmitter ON/OFF period and power. The Transmitter OFF period is coloured in green when DL Off Power limit passes and in red when limit fails.

Remote Command	<code>:DISPlay:PVTime:BGRaph OFF ON 0 1</code> <code>:DISPlay:PVTime:BGRaph?</code>
Example	<code>:DISP:PVT:BGR OFF</code> <code>:DISP:PVT:BGR?</code>
Preset	ON
State Saved	Saved in instrument state
Range	On Off

Noise Correction

Sets the noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the analyzer. Off turns these corrections off.

Remote Command	<code>[:SENSe]:PVTime:CORRection:NOISe[:AUTO] OFF ON 0 1</code> <code>[:SENSe]:PVTime:CORRection:NOISe[:AUTO]?</code>
Example	<code>:PVT:CORR:NOIS OFF</code> <code>:PVT:CORR:NOIS?</code>
Preset	0
State Saved	Yes
Range	On Off

MIMO Calculation Mode

Specifies OBW/ACP/SEM/Transmit On/Off result calculation mode for MIMO signal:

- Per Channel – provide separate results for each input channel
- Averaged – provide averaged results for all input channels
- Summation – provide combined results for all input channels

Remote Command	<code>[:SENSe]:EVM:POWer:MIMO:MODE PERChannel AVERaged SUMMation</code> <code>[:SENSe]:EVM:POWer:MIMO:MODE?</code>
Example	<code>:EVM:POWer:MIMO:MODE PERC</code> <code>:EVM:POWer:MIMO:MODE?</code>
Preset	<code>PERChannel</code>
State Saved	Yes
Range	Per Channel Averaged Summation

3.7.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.7.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 2355](#)

Remote Command	<code>:INITiate:CONTInuous OFF ON 0 1</code> <code>:INITiate:CONTInuous?</code>
----------------	--

3 5G NR Mode

3.7 Modulation Analysis Measurement

Example	<p>Put instrument into Single measurement operation:</p> <pre>:INIT:CONT 0</pre> <pre>:INIT:CONT OFF</pre> <p>Put instrument into Continuous measurement operation:</p> <pre>:INIT:CONT 1</pre> <pre>:INIT:CONT ON</pre>
Preset	<p>ON</p> <p>Note that :SYST:PRES sets :INIT:CONT to ON, but *RST sets :INIT:CONT to OFF</p>
State Saved	Saved in instrument state
Annunciation	<p>The Single/Continuous icon in the Meas Bar changes depending on the setting:</p> <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	<p>X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and INIT:CONT ON) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep</p>

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 3413](#) for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See ["More Information" on page 2357](#)

Remote	:INITiate[:IMMEDIATE]
Command	:INITiate:REStart
Example	:INIT:IMM

	:INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	<p>This is an Overlapped command</p> <p>The STATUS:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATUS:QUESTionable register bit 9 (INTEgrity sum) is cleared</p> <p>The SWEEPING bit is set</p> <p>The MEASURING bit is set</p>
Backwards Compatibility Notes	<p>For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write, but did not restart Max Hold and Min Hold</p> <p>In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average, but MaxHold and MinHold traces as well</p>

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has

completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is *k*. This *k* is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This *k* is used for comparisons with N, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, *K*, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value *K* changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	:INITiate:PAUSE :INITiate:RESume
Example	:INIT:PAUS :INIT:RES
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when :ABORT is sent, the alignment finishes *before* the abort function is performed, so :ABORT does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command	:ABORT
Example	:ABOR

Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUESTionable register bit 9 (INTEGRity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

3.7.9.2 X Scale

This tab accesses controls that enable you to set the horizontal scale parameters.

Width

Sets the width of the X axis that is displayed for the selected trace. The X width can be set less than the span for frequency-domain traces, enabling you to zoom in on just a portion of the measured values. Likewise, it can be less than time span covered by time-domain data. This, plus the X Reference Value and X Reference Position, control the range of X values that can be displayed on a trace.

Remote Command	<pre>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:WIDTh <real></pre> <pre>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:WIDTh?</pre>
Example	<pre>:DISP:EVM:WIND3:X:WIDT 10e6</pre> <p>set the X width of the third window to 10 MHz</p> <pre>:DISP:EVM:WIND3:X:WIDT?</pre> <p>query the X width of the third window</p>
Couplings	If Auto Scaling is ON , the X Width is determined by the trace data
Preset	Depends on trace data
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Ref Value

Controls the X value of the selected trace at the chosen X Reference Position.

3 5G NR Mode

3.7 Modulation Analysis Measurement

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:RLEVel <real></code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:RLEVel?</code>
Example	<code>:DISP:EVM:WIND3:X:RLEV 10</code> set the X ref value of the third window to 10 <code>:DISP:EVM:WIND3:X:RLEV?</code> query the X ref value of the third window
Couplings	If Auto Scaling is set to On, the X Reference Value is determined by the trace data
Preset	Depends on trace data
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Ref Position

Determines the position from which the X scaling is calculated for the selected trace. It can be set to the left side, center, or right side of the grid.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:RPOSition LEFT CENTer RIGHT</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:RPOSition?</code>
Example	<code>:DISP:EVM:WIND3:X:RPOS CENT</code> set the X ref position of the third window to CENT <code>:DISP:EVM:WIND3:X:RPOS?</code> query the X ref position of the third window
Preset	Depend on trace data
State Saved	Yes
Range	Left Center Right

Auto Scaling

Toggles Auto Scaling On or Off.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALe]:COUPle?</code>
Example	<code>:DISP:EVM:WIND3:X:COUP ON</code> do the X auto scale for the third window <code>:DISP:EVM:WIND3:X:COUP?</code> query the X auto scale state of the third window
Couplings	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling

	function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either X Width or Ref Value manually, Auto Scaling is automatically set to Off
Preset	ON
State Saved	Yes
Range	On Off

Time Unit

Enables you to select the time units that are applied to x-axis annotations and marker readouts for the displayed trace in selected window. The available measurement units are symbol or slot. This setting applies to these measurement traces only:

- Power vs Time
- RMS Error Vector Time
- RMS Demod Power vs Time

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:UNIT:TIME SYMBol SLOt</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:UNIT:TIME?</code>
Example	<code>:DISP:EVM:WIND3:X:UNIT:TIME SYMB</code> set the X scale unit of the third window to symbol <code>:DISP:EVM:WIND3:X:UNIT:TIME?</code> query the X scale unit of the third window
Preset	Depends on trace data
State Saved	Yes
Range	symbols slots

Time Unit (Remote Command only)

Enables you to select the time units that are applied to x-axis annotations and marker readouts for the selected trace. The available measurement units are symbol or slot.

The following table is used for measurement trace – Power vs Time – only.

Remote Command	<code>:DISPlay:EVM:CCARrier0 ... 15:PVTTime:X:UNIT SYMBol SLOt</code> <code>:DISPlay:EVM:CCARrier0 ... 15:PVTTime:X:UNIT?</code>
Example	<code>:DISP:EVM:CCAR0:PVT:X:UNIT SYMB</code> set the X scale unit of Power vs Time trace (CC0) to symbol

3 5G NR Mode

3.7 Modulation Analysis Measurement

	<code>:DISP:EVM:CCAR0:PVT:X:UNIT?</code>
	query the X scale unit of Power vs Time trace (CC0)
Preset	Depends on trace data
State Saved	Yes
Range	<code>SYMBOL</code> <code>SLOT</code>
<p>The following table is used for the following measurement traces only:</p> <ul style="list-style-type: none"> – RMS Error Vector Time – RMS Demod Power vs Time 	
Remote Command	<code>:DISPlay:EVM:CCARri-er0 ... 15:REVTime DPVTime:ALL SSB1 SSB2 DBWP0 DBWP1 DBWP2 DBWP3 DBWP4 UBWP1 UBWP2 UBWP3 UBWP4:X:UNIT SYMBOL SLOT</code> <code>:DISPlay:EVM:CCARri-er0 ... 15:REVTime DPVTime:ALL SSB1 SSB2 DBWP0 DBWP1 DBWP2 DBWP3 DBWP4 UBWP1 UBWP2 UBWP3 UBWP4:X:UNIT?</code>
Example	<code>:DISP:EVM:CCAR0:DPVT:DBWP1:X:UNIT SYMBOL</code> set the X scale unit of the RMS Demod Power vs Time trace (CC0, DL BWP1) to symbol <code>:DISP:EVM:CCAR0:DPVT:DBWP1:X:UNIT?</code> query the X scale unit of the RMS Demod Power vs Time trace (CC0, DL BWP1)
Preset	Depends on trace data
State Saved	Yes
Range	<code>SYMBOL</code> <code>SLOT</code>

Frequency Unit

Enables you to select the time units that are applied to x-axis annotations and marker readouts for the displayed trace in selected window. The available measurement units are subcarrier or RB. This setting applies to these measurement traces only:

- RMS Error Vector Spectrum
- RMS Demod Power vs Spectrum

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:UNIT:FREQuency SUBCarrier RB</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:UNIT:FREQuency?</code>
Example	<code>:DISP:EVM:WIND3:X:UNIT:FREQ RB</code> set the X scale unit of the third window to RB <code>:DISP:EVM:WIND3:X:UNIT:FREQ?</code>

	query the X scale unit of the third window
Preset	Depends on trace data
State Saved	Yes
Range	symbols seconds

Frequency Unit (Remote Command only)

Enables you to select the time units that are applied to x-axis annotations and marker readouts for the selected trace. The available measurement units are subcarrier or RB. This setting apply these measurement traces only:

- RMS Error Vector Spectrum
- RMS Demod Power vs Spectrum

Remote Command	<pre>:DISPlay:EVM:CCARri- er0 ... 15:REVSpec- trum DPVSpec- trum:ALL SSB1 SSB2 DBWP0 DBWP1 DBWP2 DBWP3 DBWP4 UBWP1 UBWP2 UBWP3 UBWP4:X:UNIT SUBCarrier RB :DISPlay:EVM:CCARri- er0 ... 15:REVSpec- trum DPVSpec- trum:ALL SSB1 SSB2 DBWP0 DBWP1 DBWP2 DBWP3 DBWP4 UBWP1 UBWP2 UBWP3 UBWP4:X:UNIT?</pre>
Example	<pre>:DISP:EVM:CCAR0:DPVS:DBWP1:X:UNIT RB</pre> <p>set the X scale unit of the RMS Demod Power vs Spectrum trace (CC0, DL BWP1) to RB</p> <pre>:DISP:EVM:CCAR0:DPVS:DBWP1:X:UNIT?</pre> <p>query the X scale unit of the RMS Demod Power vs Spectrum trace (CC0, DL BWP1)</p>
Preset	Depends on trace data
State Saved	Yes
Range	SUBCarrier RB

Ref Numerology

Enables you to select the Resource Grid reference applied to the selected trace. This setting apply this measurement trace only:

- Power vs Time

Remote Command	<pre>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RSCS SCS15K SCS30K SCS60KNCP SCS60KECP SCS120K SCS240K :DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RSCS?</pre>
----------------	--

Example	<pre>:DISP:EVM:WIND3:X:RSCS SCS30K</pre> <p>set the Resource Grid reference of the third window to symbol</p> <pre>:DISP:EVM:WIND3:X:RSCS?</pre> <p>query the Resource Grid reference of the third window</p>
Preset	Depends on trace data
State Saved	Yes
Range	SCS15K SCS30K SCS60KNCP SCS60KECP SCS120K SCS240K

3.7.9.3 Z Scale

Accesses controls that enable you to set the horizontal scale parameters.

Width

Set the width of the Z axis which is displayed for the selected trace. The Z width can be set less than the span for frequency-domain traces, enabling you to zoom in on just a portion of the measured values. This plus the Z Reference Value and Z Reference Position control the range of Z values that can be displayed on a trace.

Remote Command	<pre>:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:WIDTh <real></pre> <pre>:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:WIDTh?</pre>
Example	<pre>:DISP:EVM:WIND3:Z:WIDT 10e6</pre> <p>set the Z width of the third window to 10 MHz</p> <pre>:DISP:EVM:WIND3:Z:WIDT?</pre> <p>query the Z width of the third window</p>
Couplings	If Auto Scaling is set to On, the Z Width is determined by the trace data
Preset	Depends on trace data
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Ref Value

Controls the Z value of the selected trace at the chosen Z Reference Position.

Remote Command	<pre>:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:RLEVel <real></pre> <pre>:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:RLEVel?</pre>
Example	<pre>:DISP:EVM:WIND3:Z:RLEV 10</pre> <p>set the Z ref value of the third window to 10</p>

	:DISP:EVM:WIND3:Z:RLEV? query the Z ref value of the third window
Couplings	If Auto Scaling is ON , the Z Reference Value is determined by the trace data
Preset	Depends on trace data
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Ref Position

Determines the position from which the Z scaling is calculated for the selected trace. It can be set to the left side, center, or right side of the grid.

Remote Command	:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALe]:RPOSition LEFT CENTer RIGHT :DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALe]:RPOSition?
Example	:DISP:EVM:WIND3:Z:RPOS CENT set the X ref position of the third window to CENT :DISP:EVM:WIND3:Z:RPOS? query the Z ref position of the third window
Preset	Depend on trace data
State Saved	Yes
Range	Left Center Right

Auto Scaling

Toggles the Auto Scaling function between On and Off.

Remote Command	:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALe]:COUPle 0 1 OFF ON :DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALe]:COUPle?
Example	:DISP:EVM:WIND3:Z:COUP ON do the Z auto scale for the third window :DISP:EVM:WIND3:Z:COUP? query the Z auto scale state of the third window
Couplings	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Z Width or Ref Value manually, Auto Scaling is automatically set to Off
Preset	ON

State Saved	Yes
Range	OFF ON

Frequency Unit

Enables you to select the time units that are applied to Z-axis annotations and marker readouts for the selected trace. The available measurement units are subcarrier or RB.

Remote Command	:DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:UNIT:FREQuency SUBCarrier RB :DISPlay:EVM:WINDow[1] 2 ... 9:Z[:SCALE]:UNIT:FREQuency?
Example	:DISP:EVM:WIND3:Z:UNIT:FREQ RB set the Z scale unit of the third window to RB :DISP:EVM:WIND3:Z:UNIT:FREQ? query the Z scale unit of the third window
Preset	Depend on trace data
State Saved	Yes
Range	Sub-carrier RB

3.7.9.4 Recording

Displays the Sample Rate, Sample Points and Sample Time of the saved IQ data file.
Recording and playback of signal data files is a multi-step process that involves controls in several menus:

- Save, Recording (under the Save hardkey or the Save icon in the File panel)
- Recall, Recording (under the Recall hardkey or the Recall icon in the File panel)
- Sweep, Recording (this tab)
- Sweep, "Playback" on page 2369
- Input/Output, "Data Source" on page 3783

NOTE	A complete tutorial for Record/Playback functionality, including how to load and save recording files, can be found in the help for the tab "Data Source" on page 3783 under Input/Output.
------	--

This menu includes the following display-only fields:

Sample Rate

Displays the sample rate of the saved IQ data file. If you have not saved an IQ data file, the value is 0.

Sample Points

Displays the total number of sample points in the saved IQ data file. If you have not saved an IQ data file, the value is 0.

Sampling Time

Displays the total sample time of the saved IQ data file. If you have not saved an IQ data file, the value is 0.

Saved Channels [Mode: 5G NR, VMA, WLAN]

Displays the channel index/number of the saved IQ data file. If you have not saved an IQ data file, no value is displayed.

This control is designed for multi-channel I/Q data recording and playback.

Recording+State Mode

There could be multiple sequential IQ data captures during one measurement cycle, for example when measure multiple component carriers are in sequential mode. This control specifies how measurement should handle these sequential IQ data for Recording + State saving:

Last Capture	LCAPture	Keeps only last captured IQ data in memory
Meas Cycle	MCYC1e	Keeps all IQ data of current measurement cycle in memory (measurement will consume more memory in this mode)

Remote Command	:MMEMory:EVM:RSTate:MODE LCAPture MCYC1e :MMEMory:EVM:RSTate:MODE?
Example	:MMEM:EVM:RST:MODE MCYC :MMEM:EVM:RST:MODE?
Dependencies	Available only for the EVM measurement
Preset	LCAPture

State Saved	Saved in instrument state
Range	Last Capture Meas Cycle

3.7.9.5 Playback

Contains parameters for playback of saved recording files recalled to the instrument.

Recording and playback of signal data files is a multi-step process that involves controls in several menus:

- **Save, Recording** (under the **Save** hardkey or the **Save** icon in the **File** panel)
- **Recall, Recording** (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- **Sweep, "Recording" on page 2367**
- **Sweep, Playback** (this tab)
- **Input/Output, "Data Source" on page 3783**

NOTE

A complete tutorial for **Record/Playback** functionality, including how to load and save recording files, can be found in the help for the tab **"Data Source" on page 3783** under the **Input/Output** menu.

This menu includes the following display-only fields:

Sample Points

Displays the total number of sample points in the recalled IQ data file. If you have not recalled an IQ data file, the value is 0.

Sampling Time

Displays the total sample time of the recalled IQ data file. If you have not recalled an IQ data file, the value is 0.

Input Channels [Mode: 5G NR, VMA, WLAN]

Displays the input channel number of the recalled IQ data file. If you have not recalled an IQ data file, the default value of 1 is displayed.

This control is designed for multi-channel I/Q data recording and playback.

Playback Mode

Specifies the mode of IQ data to be played back and analyzed:

- Fixed: Playback Stop value is ignored. Measurement will analyze the first chunk of IQ data start from Playback Start repeatedly
- Iterative: Measurement will analyze the IQ data chunk by chunk between Playback Start and Playback Stop, if the last chunk is not complete it will be ignored and start from the first chunk again

Remote Command	<code>:CALCulate:<meas>:PLAY:MODE FIXed ITERative</code> <code>:CALCulate:<meas>:PLAY:MODE?</code> Where <code><meas></code> is the mnemonic for the current measurement, for example, <code>EVM</code>
Example	For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:MODE CONT</code> <code>:CALC:EVM:PLAY:MODE?</code>
Preset	<code>FIX</code>
State Saved	Saved in instrument state
Range	Fixed Iterative

Playback Start

Once you have loaded an IQ data file using **Recall**, **Recording**, this control enables you to specify the start position of the IQ data playback range to be analyzed. If its value is less than zero, an additional zero is inserted at the beginning of the IQ data.


To go to a specific location in the recalled I/Q data, enter the desired **Playback Start** point.

You can use this control to examine the data you recalled from the recording file. How you proceed depends on whether you are in **Continuous** or **Single** mode. To determine which mode you are in, look at the first panel on the left in the **Meas Bar** above the data display.

If the panel looks like this, you are in **Continuous** mode:



If the panel looks like this, you are in **Single** mode:

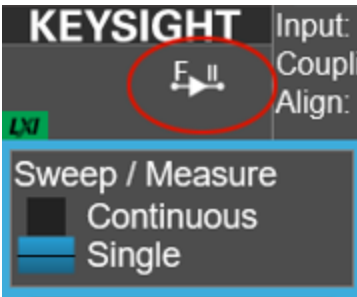

The **F** indicates that the instrument is using data from a file (if you wish to return to looking at data at the analyzer input, change the **Data Source** control in the **Input/Output, Data Source** menu from **File** back to **Input**.)

To examine the data you loaded:

Continuous mode

In this mode, turn the knob or use the **Up/Down** keys on the front panel to move through records in the recording. You will see **Playback Start** change from 0 to successively higher values as you move deeper into the data.

Single mode

In this mode, you can only look at one record. Set the **Playback Start** time to the desired offset from zero, then press **Restart**. A single record will be displayed. Note that until you press **Restart**, the “invalid data” indicator (yellow asterisk) is displayed in each window. After you press **Restart**, the invalid data indicator disappears.

Remote Command	<code>:CALCulate:<meas>:PLAY:START <time></code> <code>:CALCulate:<meas>:PLAY:START?</code>
Example	Where <code><meas></code> is the mnemonic for the current measurement, for example, <code>EVM</code> For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:STAR 0.01 s</code> <code>:CALC:EVM:PLAY:STAR?</code>
Preset	0
State Saved	Saved in instrument state
Min/Max	-/+Sample Points in IQ file / Sample Rate in IQ file

Playback Stop

Specifies the stop position of the IQ data playback range to be analyzed, when “Playback Mode” is iterative.

Remote Command	<code>:CALCulate:<meas>:PLAY:STOP <time></code> <code>:CALCulate:<meas>:PLAY:STOP?</code>
----------------	--

	Where <meas> is the mnemonic for the current measurement, for example, EVM
Example	For EVM measurement in 5G NR Mode: :CALC:EVM:PLAY:STOP 0.01 s :CALC:EVM:PLAY:STOP?
Preset	0
State Saved	No
Min	0
Max	Sample Points in IQ file x Sample Rate

Step Forward

Move to next chunk of IQ data when "Playback Mode" on page 2370 is iterative.

Remote Command	:CALCulate:<meas>:PLAY:STEP:FORWARD Where <meas> is the mnemonic for the current measurement, for example, EVM
Example	For EVM measurement in 5G NR Mode: :CALC:EVM:PLAY:STEP:FORW
State Saved	Saved in instrument state

Sample Rate

Displays the sample rate of the recalled IQ data file if the recalled file format contains sampling rate information (**.csv**, **.sdf**, **.txt**). In this case, the *control* is grayed-out.

BIN and **BINX** files do not include sampling rate information inside the file, so after recalling one of these files, you must set **Sample Rate** manually. When you save a file in these formats, you must specify the sample rate, as displayed under **Sweep, Recording**.

Remote Command	:CALCulate:<meas>:PLAY:SRATe <freq> :CALCulate:<meas>:PLAY:SRATe? Where <meas> is the mnemonic for the current measurement, for example, EVM
Example	For EVM measurement in 5G NR Mode: :CALC:EVM:PLAY:SRAT 122.88MHz :CALC:EVM:PLAY:SRAT?
Couplings	Displays only after recalling .csv , .sdf , or .txt files Settable after recalling .bin or .binx files
Preset	0

State Saved	No
Min	0

3.7.10 Trace

Lets you control the display of the In-Band Emissions limit lines.

3.7.10.1 Trace Control

Allows you to configure trace.

All (combined) Limit

Toggles the All (combined) Limit display On or Off.

Remote Command	<code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:ALL 0 1 OFF ON</code> <code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:ALL?</code>
Example	<code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:ALL ON</code> <code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:ALL?</code>
Couplings	Trace Data is UL In-Band Emissions
Preset	ON
State Saved	Yes
Range	OFF ON

General Limit

Toggles the General Limit display On or Off.

Remote Command	<code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:GENeral 0 1 OFF ON</code> <code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:GENeral?</code>
Example	<code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:GEN ON</code> <code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:GEN?</code>
Couplings	Trace Data is UL In-Band Emissions
Preset	OFF
State Saved	Yes
Range	OFF ON

IQ Image Limit

Toggles the IQ Image Limit display On or Off.

Remote Command	<code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:IMAGe 0 1 OFF ON</code> <code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:IMAGe?</code>
Example	<code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:IMAG ON</code> <code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:IMAG?</code>
Couplings	Trace Data is UL In-Band Emissions
Preset	OFF
State Saved	Yes
Range	OFF ON

Carrier Leakage Limit

Toggles the Carrier Leakage Limit display On or Off.

Remote Command	<code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:DC 0 1 OFF ON</code> <code>:DISPlay:EVM:TRACe:ULINK:IBEM:LLINe:DC?</code>
Example	<code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:DC ON</code> <code>:DISP:EVM:TRAC:ULIN:IBEM:LLIN:DC?</code>
Couplings	Trace Data is UL In-Band Emissions
Preset	OFF
State Saved	Yes
Range	OFF ON

3.8 Transmit On|Off Power

This measurement is designed for testing Transmit On|Off power for the 5G NR BS and UE.

Measurement Overview

The test requirements for BS and UE are different, by setting the Direction under Mode Setup menu, the measurement can know which type of DUT it is going to test. Apply Preset will provide appropriate parameter settings for 3GPP conformance testing. See Apply Preset and Values for Meas Standard – Transmit On|Off Power section for details.

When Direction is Downlink, "Auto Timing Adjustment " on page 2452 should be set to Off and the user needs to provide external trigger which is regarded as the timing reference at the expected frame boundary to comply with the 3GPP conformance test requirements, defined in the clause 6.4.2 in TS38.141-1 and 6.5.2 in TS38.141-2.

Two key results will be provided, one is transmitter off power and the other is transmitter transient period. The definition for the two results are as below:

- Transmitter Off power (Off Power in Metrics result) is defined as the maximum power measured over $70/N$ ms filtered with a square filter of bandwidth equal to the transmission bandwidth configuration of the BS (BW_{Config} or $BW_{\text{channel_CA}}$) centered on the assigned channel frequency during the transmitter off period. $N = \text{SCS}/15$, where SCS is Sub Carrier Spacing in kHz. "70/N us RMS Trace " on page 2431 (dBm/MHz) is the measured trace.
- The transmitter transient period (Transient Ramp Up/Down in Metrics result) is the time period from the expected burst boundary to the cross point of "70/N us RMS Trace " on page 2431 (dBm/MHz) and "Downlink Off Power" on page 2583 limit level. The expected burst boundary is determined by the external trigger. The transmitter transient period is illustrated in figure below.

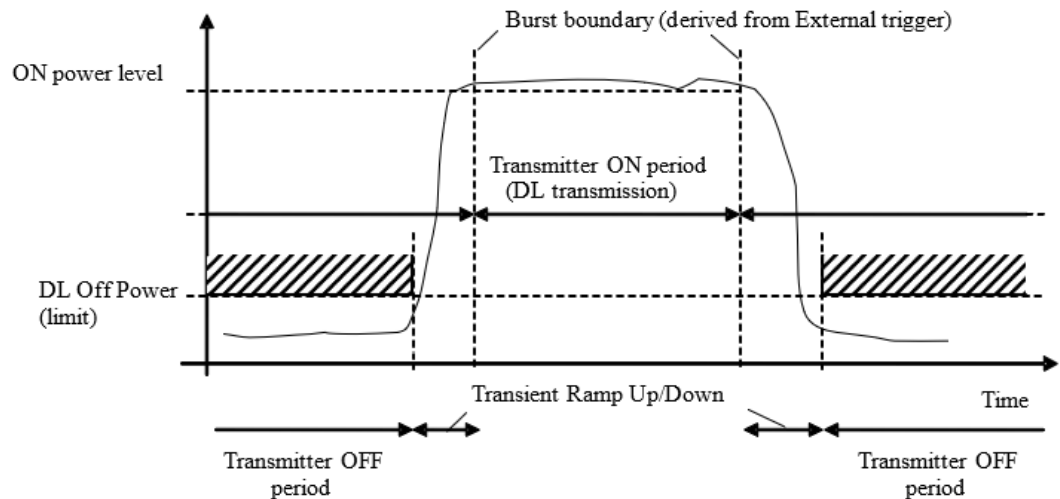


Figure: Illustration of the relations of transmitter ON period, transmitter OFF period and transmitter transient period

When Direction is Uplink, two key results will be provided to ensure that the UE's transmitter complies with the On/Off time mask defined in the clause 6.3.3 in TS38.521-1 and TS38.521-2.

- Transmitter Off power (Off Power Before/After in Metrics result) is defined as the mean power in the duration of "[UL Off Power Length](#)" on [page 2576](#) excluding any transient periods. The bandwidth of the signal being measured for Transmitter Off power is the bandwidth of Measure CC.
- Transmitter On power is defined as the mean power in the duration of Burst Time.

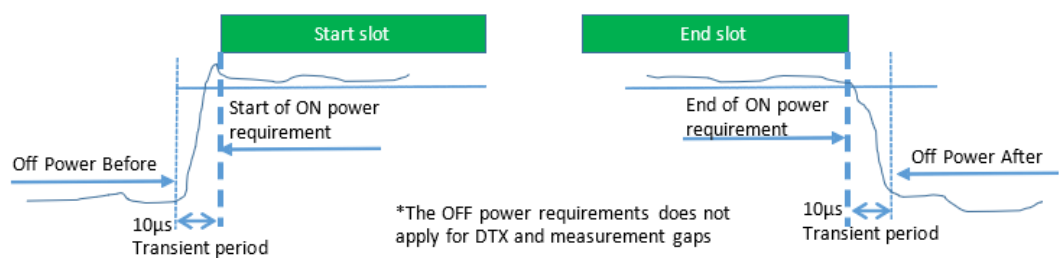


Figure: General ON/OFF time mask for NR UL transmission in FR1 with SCS of 30kHz and 60 kHz

When "[Auto Timing Adjustment](#)" on [page 2452](#) is On, Ramp Up/Down results are calculated based on the "[Threshold](#)" on [page 2585](#) setting.

Dynamic Range Optimization

In order to approach the best dynamic range, a special measurement algorithm is employed, two time records will be captured and merged for results calculation.

The first time capture will be made employing instrument settings which ensure accurate measurement of the bursts transmission on power level. The attenuation is set in the Attenuation setting. Internal Preamp setting is not effective for this capture and always off.

The second time record capture will be made employing instrument settings which minimize the instrument internal noise floor, with the minimal attenuation. Internal Preamp setting is effective for this capture.

The data from the two captures will be combined to one trace. This combined trace is the one that will be displayed as the trace determined by "Measure Trace" on page 2614 and "70/N us RMS Trace " on page 2431 (dBm/MHz) and which will be used to calculate results.

Multiburst Measurement

If there are multiple bursts within a measurement interval determined by DL Meas Interval or UL Meas Interval, this measurement analyzes every burst up to 10 bursts in a frame.

Measurement results of all bursts are displayed in the Multiburst Results window. Measurement results in the Metrics window are selected by Meas Range criteria. See "Meas Range" on page 2579 for more details.

Note: It is assumed that widths of all bursts are the same and that the repetition period of the bursts is constant. For correct measurement, Burst Time, Burst Repetition Period, and DL/UL Meas Interval must be set appropriately.

Pass/Fail Results

Downlink: Fail

- If Off Power result exceeds "Downlink Off Power" on page 2583 limit
- When "Auto Timing Adjustment " on page 2452 is Off, if Transient Ramp Up/Down result exceeds "Downlink Transient Period" on page 2582
- When "Auto Timing Adjustment " on page 2452 is On, if Ramp Up/Down result exceeds "Max Ramp Up Time" on page 2581 and "Max Ramp Down Time" on page 2582, respectively.

Uplink: Fail

- When UL On Pwr Limit Test is On, if On Power result is not within "Uplink On Power Reference" on page 2583 (dBm) \pm "Uplink On Power Tolerance" on page 2584 (dB)
- If Off Power Before/After result exceeds "Uplink Off Power" on page 2583 limit
- If Ramp Up/Down result exceeds "Max Ramp Up Time" on page 2581 and "Max Ramp Down Time" on page 2582, respectively.

Individual Pass/Fail results can be queried.

Remote Commands for Transmit On|Off Power Measurement

The following commands are used to retrieve the measurement results:

```
:CONFigure:PVTime
:CONFigure:PVTime:NDEFault
:INITiate:PVTime
:FETCh:PVTime[n]?
:READ:PVTime[n]?
:MEASure:PVTime[n]?
```

Measurement Results for Transmit On|Off Power Measurement

For each result, the following heading is used to represent its format and precision.

#. Result Name (type of number) [unit] <explanation>

Type of number includes double, float and integer.

Index n	Results Returned
0	Returns unprocessed I/Q trace data as a series of comma-separated trace point values, in volts. The I values are listed first in each pair, using 0 through the even-indexed values. The Q values are odd-indexed values
n=1 (or not specified)	<p>Returns the following comma-separated scalar results:</p> <ol style="list-style-type: none"> 1. Sample time is a floating point number representing the time between samples of displayed trace which you can get by using the trace queries (n=2, 3, ...) 2. Number of samples is the number of data points in the displayed trace. This number is useful when performing a query on the signal (i.e. when n=2, 3 ...) 3. On Power/ Mean Power is the mean power of the Transmitter ON period (dBm). The Transmitter ON period is determined by the Burst Time. The Burst Line indicates the Transmitter ON period 4. Burst Width is the width of the first identified burst (sec) 5. Trigger Diff is the time difference between the position of the trigger line and the

3 5G NR Mode

3.8 Transmit On/Off Power

Index n	Results Returned
	start point (sec)
	6. Ramp up time is the time difference between P1 and P2 (sec) where P1 is the position at which On Power (dBm) minus Ramp Up End Level (dB) intersects the Trace and P2 is the position at which On Power (dBm) minus Ramp Up Start Level (dB) intersects the Trace when Auto Timing Adjust is On When Auto Timing Adjust is Off, the Transient Ramp Up time is $ABS(P1 - P2) - (70/N/2 \text{ usec})$ where P1 is the start position of the Transmitter ON period and P2 is the position where the 70/N us RMS Trace intersects the DL Off Power limit. If it is smaller than 70/N/2 usec, the result is 0 sec
	7. Ramp down time is the time difference between P1 and P2 (sec) where P1 is the position at which On Power (dBm) minus Ramp Down End Level (dB) intersects the Trace and P2 is the position at which On Power (dBm) minus Ramp Down Start Level (dB) intersects the Trace when Auto Timing Adjust is On When Auto Timing Adjust is Off, the Transient Ramp Down time is $ABS(P1 - P2) - (70/N/2 \text{ usec})$ where P1 is the end position of the Transmitter ON period and P2 is the position where the 70/N us RMS Trace intersects the DL Off Power limit. If it is smaller than 70/N/2 usec, the result is 0 sec
	8. Off power/Off power before: When in Downlink, Off Power is the maximum power of 70/N us RMS Trace over the Transmitter OFF period (dBm/MHz). The Transmitter OFF period is On/Off Transient position of Burst Timing Indicator Line +/- (70/N / 2) usec (e.g. When SCS u=1:30 kHz, N = 2, $70/N/2 = 70/2/2 = 17.5 \text{ usec}$. When DL Transient Period is 10 usec, 27.5 usec far from Burst Line) When in Uplink, Off power before is the average power (dBm) during the UL Off Power Length (sec) prior to the Transmitter ON period, excluding a transient period of the Max Ramp Up Time (sec) prior to the Transmitter ON period
	9. Maximum power is the maximum peak level in the range (dBm)
	10. Minimum power is the minimum peak level in the range (dBm)
	11. Actual sample time is the floating point number (sec) representing the time between samples of uncompressed I/Q trace data, which can be get by trace query (n=0)
	12. Actual number of samples is the number of data points in the uncompressed I/Q trace data, which can be get by trace query(n=0)
	13. Off power after is the average power during the UL Off Power Length (sec) following the Transmitter ON period, excluding a transient period of the Max Ramp Down Time (sec) following the Transmitter ON period This result is for Uplink only. When Direction is Downlink, the value will be NaN (9.91 E 37)
	14. N/A
	15. Off Power At is the worst off power position (sec). This result is for Downlink only. When Direction is Uplink, the value will be NaN (9.91 E 37)
2	Measured Trace data for Trace 1 This returns comma-separated floating point numbers representing the Measured Trace data for Trace 1 (dBm)

Index n	Results Returned
3	Measured Max Hold Trace data This returns comma-separated floating point numbers representing the Measured Max Hold Trace data (dBm)
4	Measured Min Hold Trace data This returns comma-separated floating point numbers representing the Measured Min Hold Trace data (dBm)
5	N/A
6	N/A
7	N/A
8	N/A
9	Measured 70/N us RMS Trace (dBm/MHz) data This returns comma-separated floating point numbers representing the Measured 70/N us RMS Trace (dBm/MHz) data (dBm/MHz)
10 Direction = Downlink	Returns scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing Off Power result and Ramp Up/Down results 1. DL Off Power 2. DL Ramp Up (When Auto Timing Adjust is On) / DL Transient Ramp Up (When Auto Timing Adjust is Off) 3. DL Ramp Down (When Auto Timing Adjust is On) / DL Transient Ramp Down (When Auto Timing Adjust is Off) 4. -999.0 5. -999.0 6. -999.0 7. -999.0 8. -999.0 9. -999.0 10. -999.0 The last seven results always return -999.0 The number of values returned is subject to change in future releases
10 Direction = Uplink	Returns scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing Off Power results, Ramp Up/Down results and On Power result 1. UL Off Power Before 2. UL Off Power After 3. UL Ramp Up 4. UL Ramp Down 5. UL On Power 6. -999.0 7. -999.0 8. -999.0 9. -999.0

Index n	Results Returned
	10. -999.0 The last five results always return -999.0 The number of values returned is subject to change in future releases
11	Measured Trace data for Trace 2 This returns comma-separated floating point numbers representing the Measured Trace data for Trace 2 (dBm)
12	Measured Trace data for Trace 3 This returns comma-separated floating point numbers representing the Measured Trace data for Trace 3 (dBm)
13	Returns the analyzed burst number for each result returned by READ:PVT? 1. On Power burst number for n=1 3 rd 2. Off Power (DL) burst number for n=1 8 th / Off Power After (UL) burst number for n=1 13 th 3. Ramp Up / Transient Ramp Up burst number for n=1 6 th 4. Ramp Down / Transient Ramp Down burst number for n=1 7 th 5. Off Power Before burst number for n=1 8 th . (Uplink only. When in downlink, the value is 9.91E37) 6. Burst Width burst number for n=1 4 th
14	Returns the multiburst results: Number of return values = 7 x number of bursts analyzed 1. On Power (dBm) 2. Burst Width (sec) 3. Off Power Before (dBm, Uplink only. When in downlink, the value is 9.91E37) 4. Off Power After (Downlink: dBm/MHz, Uplink: dBm) 5. Off Power at (sec, Downlink only. When in uplink, the value is 9.91E37) 6. Ramp Up / Transient Ramp Up (sec) 7. Ramp Down / Transient Ramp Down (sec)
15	Returns the pass/fail (0 = passed, or 1 = failed) results of multiburst results Number of return values = 5 x number of bursts analyzed 1. On Power (Uplink only. When in downlink, the value is 0) 2. Off Power Before (Uplink only. When in downlink, the value is 0) 3. Off Power After 4. Ramp Up 5. Ramp Down

3.8.1 Views

The Transmit On|Off Power measurement has two views.

These Views are multiple-window views and you can select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

Remote Command	<code>:DISPlay:PVTime:VIEW[:SElect] ALL BOTH</code> <code>:DISPlay:PVTime:VIEW[:SElect]?</code>
Example	<code>:DISP:PVTime:VIEW ALL</code> sets the burst view <code>:DISP:PVTime:VIEW BOTH</code> sets the rise and fall view
Preset	ALL
State Saved	Yes

3.8.1.1 Burst

Windows: "RF Envelope" on page 2382, "Metrics" on page 2383

View Burst envelope.

Example	<code>:DISPlay:PVTime:VIEW[:SElect] ALL</code>
---------	--

3.8.1.2 Rise & Fall

Windows: "Rise" on page 2383, "Fall" on page 2383, "Metrics" on page 2383

Zooms in on the rising and falling portions of the burst being tested.

Example	<code>:DISPlay:PVTime:VIEW[:SElect] BOTH</code>
---------	---

3.8.2 Windows

The following windows are available in the Transmit On|Off measurement.

3.8.2.1 RF Envelope

The RF Envelope window (#1) appears in Burst Views, as follows:

View	Size	Position
Burst	Half height, full width	Top

3.8.2.2 Rise

The Rise window (#2) is an important component to see the detail of power ramp up profile, it appears in Rise & Fall view.

View	Size	Position
Rise & Fall	Half height, half width	Top Left

3.8.2.3 Fall

The Fall window (#3) is an important component to see the detail of power ramp down profile, it appears in Rise & Fall view.

View	Size	Position
Rise & Fall	Half height, half width	Top Right

3.8.2.4 Metrics

The Metrics window (#4) is an important component to see the specific metric reported by the measurement.

View	Size	Position
Burst	Half height, full width	Bottom
Rise & Fall	Half height, full width	Bottom

This table illustrates the details of metrics window when Direction is Downlink:

4 Metrics			Measure Trace	Trace 1
On Power	-19.81 dBm	at Burst 2	Center Frequency	1.000000000 GHz
Burst Width	3.715 ms	at Burst 2	Trigger Difference	-80.0 ns
Off Power	-83.66 dBm/MHz	at Burst 2	Max Power	-9.04 dBm
Off Power At	9.888 ms		Min Power	-123.38 dBm
Transient Ramp Up	660.0 ns	at Burst 3		
Transient Ramp Down	740.0 ns	at Burst 2		

Name	Corresponding Results
On Power	n=1 3 rd
On Power at Burst	n=13 1 st
Burst Width	n=1 4 th
Burst Width at Burst	n=13 6 th
Off Power	n=1 8 th
Off Power Pass/Fail	n=10 1 st
Off Power at Burst	n=13 2 nd

Off Power at	n=1 15 th
Transient Ramp Up*	n=1 6 th
Transient Ramp Up Pass/Fail	n=10 2 nd
Transient Ramp Up at Burst	n=13 3 rd
Transient Ramp Down*	n=1 7 th
Transient Ramp Down Pass/Fail	n=10 3 rd
Transient Ramp Down at Burst	n=13 4 th
Measure Trace	See "Measure Trace" on page 2614
Center Frequency	See "Center Frequency" on page 2385
Trigger Difference	n=1 5 th
Max Power	n=1 9 th
Min Power	n=1 10 th

*When Auto Timing Adjust is On, the column label changes to Ramp Up and Ramp Down, respectively.

This table illustrates the details of metrics window when Direction is Uplink:

4 Metrics			Measure Trace	Trace 1
On Power	-20.00 dBm	at Burst 2	Measure CC	CC0
Burst Width	500.0 μ s	at Burst 2	Center Frequency	1.000000000 GHz
Off Power Before	-74.07 dBm	at Burst 2	Trigger Difference	-400 ns
Off Power After	-74.07 dBm	at Burst 2	Max Power	-10.08 dBm
Ramp Up	400.0 ns	at Burst 2	Min Power	-126.04 dBm
Ramp Down	160.0 ns	at Burst 2		

Name	Corresponding Results
On Power	n=1 3 rd
On Power Pass/Fail	n=10 5 th
On Power at Burst	n=13 1 st
Burst Width	n=1 4 th
Burst Width at Burst	n=13 6 th
Off Power Before	n=1 8 th
Off Power Before Pass/Fail	n=10 1 st
Off Power Before at Burst	n=13 5 th
Off Power After	n=1 13 th
Off Power After Pass/Fail	n=10 2 nd
Off Power After at Burst	n=13 2 nd

Ramp Up	n=1 6 th
Ramp Up Pass/Fail	n=10 3 rd
Ramp Up at Burst	n=13 3 rd
Ramp Down	n=1 7 th
Ramp Down Pass/Fail	n=10 4 th
Ramp Down at Burst	n=13 4 th
Measure Trace	See "Measure Trace" on page 2614
Measure CC	See "Measure CC" on page 2469
Center Frequency	See "Center Frequency" on page 2385
Trigger Difference	n=1 5 th
Max Power	n=1 9 th
Min Power	n=1 10 th

Center Frequency

Center Frequency is not a part of measured results and it comes from one of the acquisition conditions and parameters on measured results. Thus, before acquisition is not complete, it is shown as three dashes.



When Direction is Downlink, Center Frequency is the center of the entire frequency range that contains all the active CCs. For example, when Carrier Ref Freq is 1 GHz and two 100 MHz bandwidth component carriers' frequency offsets are 0 Hz and 100 MHz respectively, Center Frequency is 1.049985 GHz.

When Direction is Uplink, Measure CC is shown as below. Center Frequency is equal to Measure CC's center frequency. In the above case, if Measure CC is CC0, Center Frequency is 1 GHz. If Measure CC is CC1, Center Frequency is 1.1 GHz.

Measure CC	CC0
Center Frequency	1.000000000 GHz

3.8.2.5 Multiburst Results

The Multiburst Results window (#5) displays results of all bursts.

5 Multiburst Results							
Burst	On Power (Average) dBm	Burst Width period	Off Power After Burst		at	Transient Ramp Up period	Transient Ramp Down period
1	-19.81	3.715 ms	-83.53		4.327 ms	660.0 ns	1.140 μ s
2	-19.81	3.715 ms	-83.66		9.888 ms	580.0 ns	740.0 ns
3	---	---	---		---	660.0 ns	---

Name	Corresponding Results
Burst Number	
On Power	n=14 1 st
On Power Pass/Fail (UL only)	n=15 1 st
Burst Width	n=14 2 nd
Off Power Before Burst (UL only)	n=14 3 rd
Off Power Before Burst Pass/Fail (UL only)	n=15 2 nd
Off Power After Burst	n=14 4 th
Off Power After Burst Pass/Fail	n=15 3 rd
Off Power After Burst at (DL only)	n=14 5 th
Transient Ramp Up*	n=14 6 th
Transient Ramp Up Pass/Fail	n=15 4 th
Transient Ramp Down*	n=14 7 th
Transient Ramp Down Pass/Fail	n=15 5 th

*When in uplink or when in downlink and Auto Timing Adjust is On, the column label changes to Ramp Up and Ramp Down, respectively.

3.8.3 Amplitude

The Amplitude front-panel key activates the Amplitude menu and selects Reference Value as the active function.

3.8.3.1 Y Scale

The Y Scale Tab contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position

function.

Remote Command	<pre>:DISPlay:PVTTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:RLEVel <real></pre> <pre>:DISPlay:PVTTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:RLEVel?</pre> <p>Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRAC:Y:SCAL:RLEV 5dBm</pre> <p>1-Burst for Transmit On Off Power :DISP:PVT:WIND:TRAC:Y:SCAL:RLEV?</p> <p>1-Burst for Transmit On Off Power :DISP:PVT:WIND2:TRAC:Y:SCAL:RLEV 5</p> <p>2-Rise for Transmit On Off Power :DISP:PVT:WIND3:TRAC:Y:SCAL:RLEV 5</p> <p>2-Fall for Transmit On Off Power</p>
Couplings	<p>When Auto Scaling is On (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to Off Attenuation is not coupled to Ref Value</p>
Preset	Automatically calculated
State Saved	Yes
Min	-250 dBm
Max	250 dBm
Annotation	Ref <value> top left of graph

Scale/Div

Scale/Div sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<pre>:DISPlay:PVTTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:PDIVision <rel_amp1></pre> <pre>:DISPlay:PVTTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:PDIVision?</pre> <p>Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3</p>
----------------	--

Example	<pre>:DISP:PVT:WIND:TRAC:Y:PDIV 5</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND:TRAC:Y:PDIV?</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND2:TRAC:Y:PDIV 10</pre> <p>2-Rise for Transmit On Off Power</p> <pre>:DISP:PVT:WIND3:TRAC:Y:PDIV 10</pre> <p>3-Fall for Transmit On Off Power</p>
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off
Preset	Automatically calculated
State Saved	Yes
Min/Max	0.10 dB/20dB
Annotation	<value> dB/ left upper of graph ! all measurements unless noted

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<pre>:DISPlay:PVT:WINDow[1] 2 3:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom</pre> <pre>:DISPlay:PVT:WINDow[1] 2 3:TRACe:Y[:SCALE]:RPOSition?</pre> <p>Window numbers are as follows:</p> <p>Burst: 1</p> <p>Rise: 2</p> <p>Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRAC:Y:RPOS CENT</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND:TRAC:Y:RPOS?</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND2:TRAC:Y:RPOS CENT</pre> <p>2-Rise for Transmit On Off Power</p> <pre>:DISP:PVT:WIND3:TRAC:Y:RPOS CENT</pre> <p>3-Fall for Transmit On Off Power</p>
Preset	TOP
State Saved	Saved in instrument state
Range	Top Center Bottom

Auto Scaling

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, pressing the Restart front-panel key results in automatically determining scale per division and reference values based on the measurement results.

Remote Command	<pre>:DISPlay:PVTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</pre> <pre>:DISPlay:PVTime:WINDow[1] 2 3:TRACe:Y[:SCALe]:COUPle?</pre> <p>Window numbers are as follows:</p> <p>Burst: 1</p> <p>Rise: 2</p> <p>Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRAC:Y:COUP ON</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND:TRAC:Y:COUP?</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND2:TRAC:Y:COUP ON</pre> <p>2-Rise for Transmit On Off Power</p> <pre>:DISP:PVT:WIND3:TRAC:Y:COUP?</pre> <p>2-Fall for Transmit On Off Power</p>
Couplings	<p>When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results</p> <p>When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off</p>
Preset	1
State Saved	Saved in instrument state
Range	On Off

3.8.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See "Dual-Attenuator Configurations" on page 2390
- See "Single-Attenuator Configuration" on page 2391


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

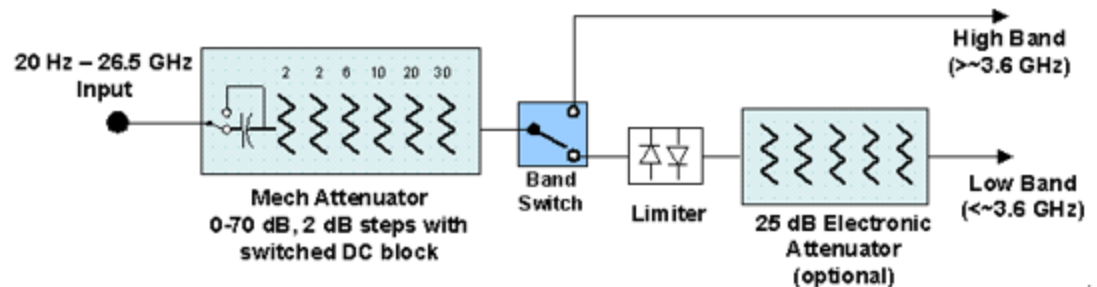


Configuration 2: Mechanical attenuator, no optional electronic attenuator

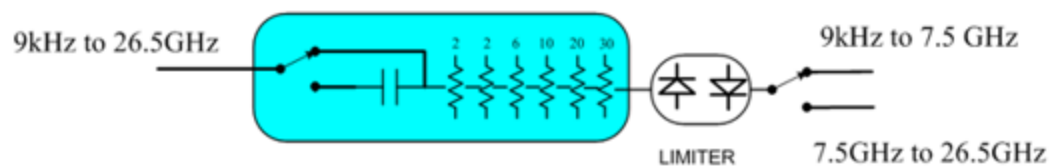

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

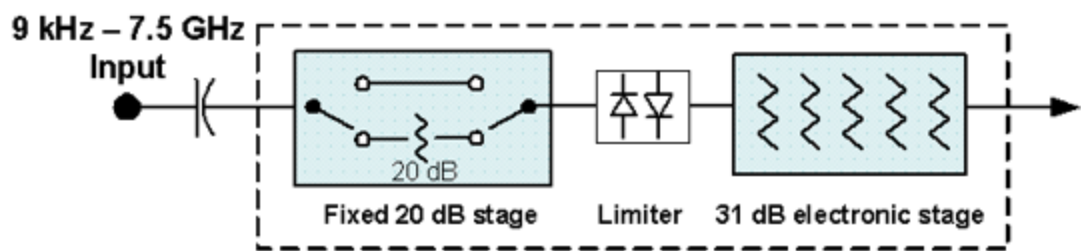

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code>

	:POW:FRAT?
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> - If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten - If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten - If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows: "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten "Total Atten above 50 GHz" followed by the value of Full Range Atten For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> - Attenuator summary: - Total Atten below 50 GHz: 30 dB - Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp" on page 3251** Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man" on page 2394**

3 5G NR Mode

3.8 Transmit On|Off Power

Remote Command	<pre>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></pre> <pre>[:SENSe]:POWer[:RF]:ATTenuation?</pre>
Example	<pre>:POW:ATT 20</pre> <p>Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB</p> <p>Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation)</p> <p>In either case, if the attenuator was in Auto, it is set to Manual</p>
Dependencies	<p>Some measurements do not support Auto setting of Mech Atten. In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available</p> <p>In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231</p> <p>See "Attenuator Configurations and Auto/Man" on page 2394 for more information on the Auto/Man functionality</p>
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> – If the USB Preamp is connected to USB, use 0 dB for Mech Atten – Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto) – In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>
State Saved	Saved in instrument state
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>

Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB		
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p> <p>Auto Function</p>	
Remote Command	<pre>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>	
Example	<p>Turn Auto Mech AttenON:</p> <pre>:POW:ATT:AUTO ON</pre>	
Dependencies	:POW:ATT:AUTO is only available in measurements that support Auto , such as Swept SA	
Preset	ON	

Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on [page 3225](#), there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.


In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on [page 2392](#) (or :POW:ATT) as the “main” attenuation; and the attenuation that is set by :POW:EATT as the “soft” attenuation (:POW:EATT is honored even in

the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See ["Elec Atten" on page 3231](#) for more about “soft” attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

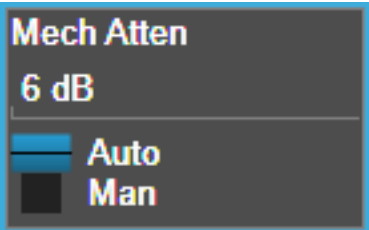

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

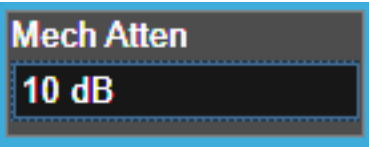

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 2397](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB

Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the Attenuation control or :POW:ATT, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> – Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes – Transmit On Off Power measurement in 5GNR Mode – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 2397
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<code>OFF</code> (Disabled) for Swept SA measurement <code>ON</code> (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 2398](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or

knob, and it behaves as it normally would in manual mode

- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated

than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 2402

3 5G NR Mode

3.8 Transmit On|Off Power

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 2400 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	<p>Dual-Attenuator models: Off Elec Atten Only Mech + Elec Atten</p> <p>Single-Attenuator models: Off On</p>	


Backwards Compatibility Command

Notes	<p>ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p>OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

Adjustment Algorithm

The algorithms for the adjustment are documented below:

Single-Attenuator Models

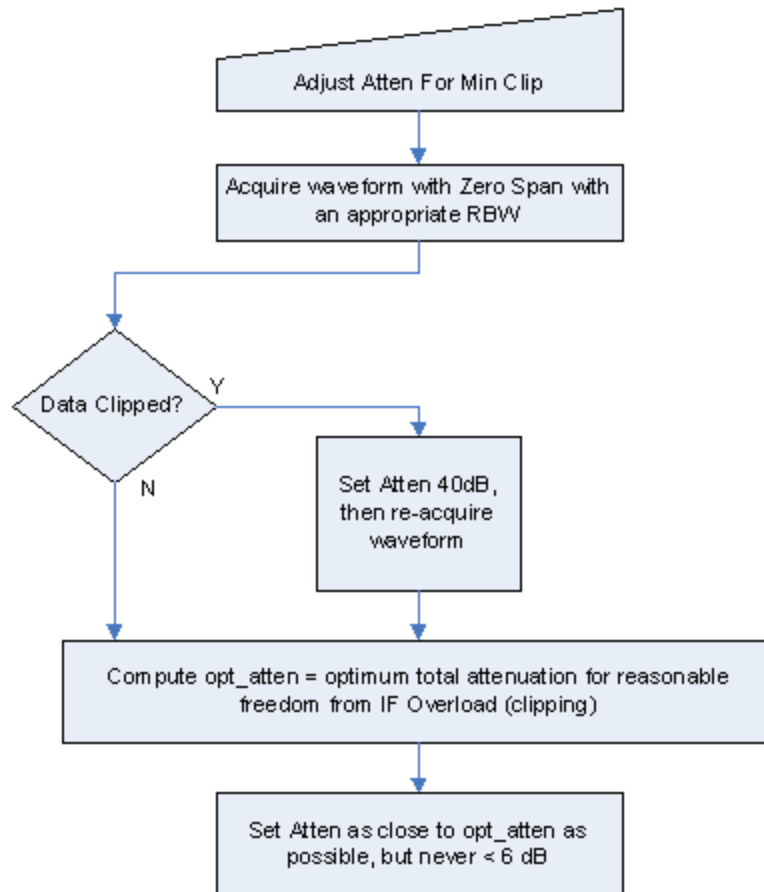


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 2400 selection is Mech + Elec Atten:

3 5G NR Mode


3.8 Transmit On/Off Power

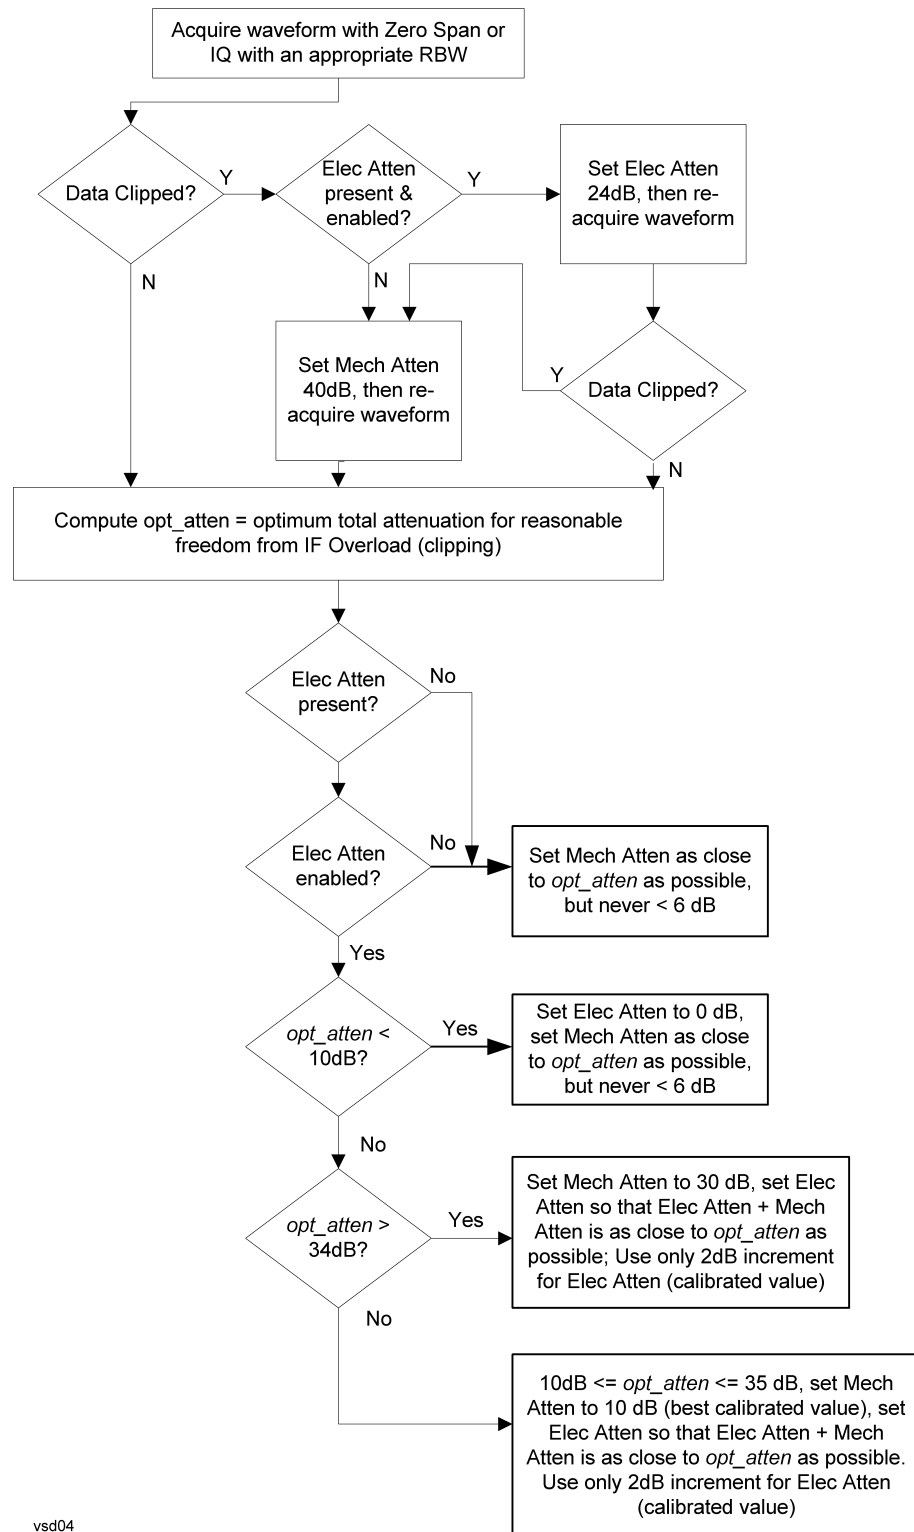

vsd04

"Pre-Adjust for Min Clipping" on page 2400 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

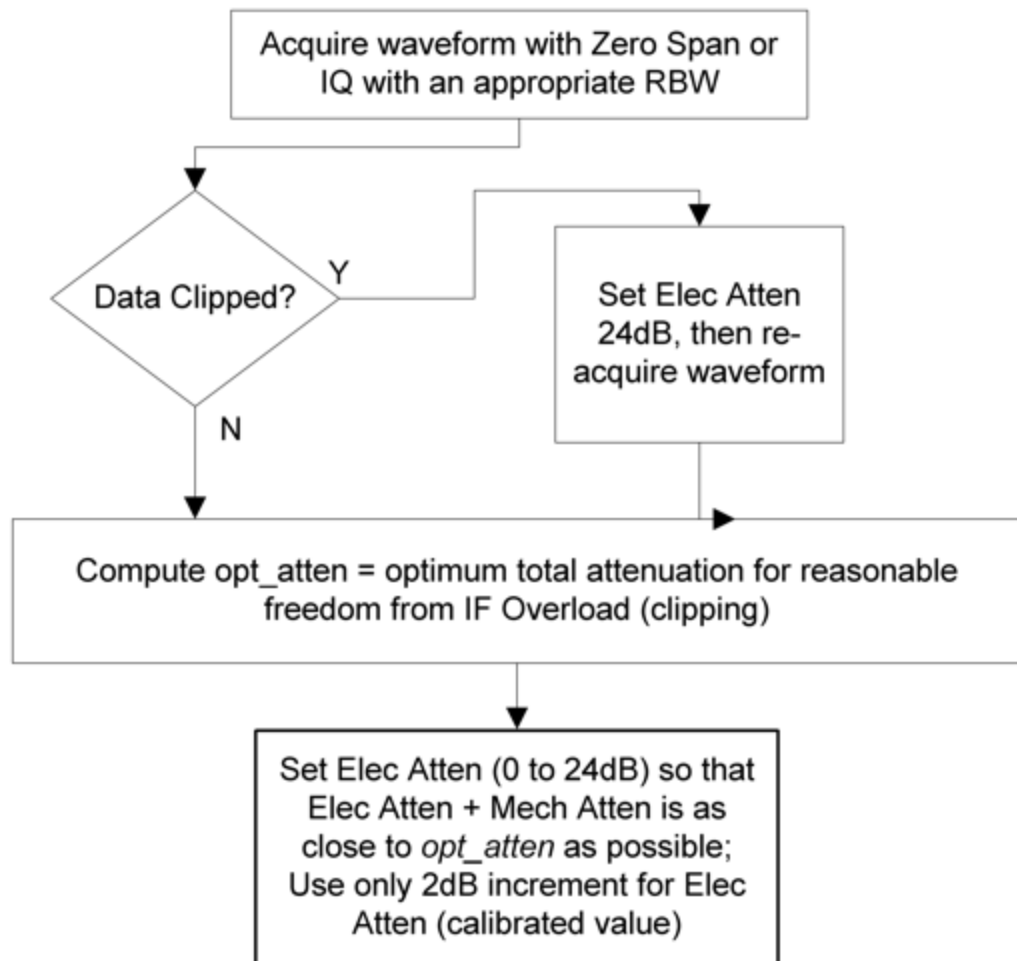

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.8.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELEctrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELEctrical , COMBined , and ON) are honored and all are mapped to ELEctrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

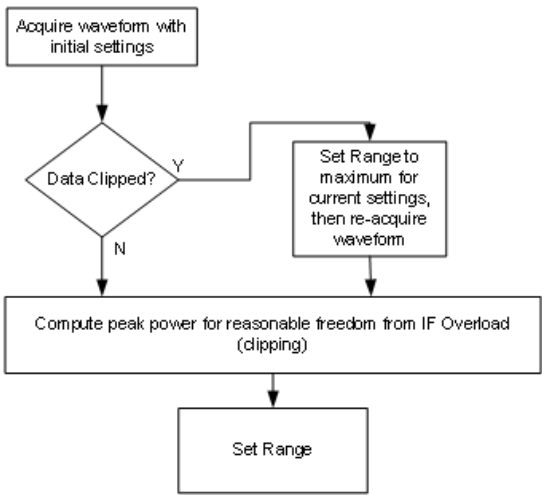

Peak-to-Average Ratio

Used with ["Range \(Non-attenuator models\)" on page 3245](#) to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:PARatio <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 3247. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.8.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 3264 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 2409**.

Remote Command	<code>[:SENSe] :POWer [:RF] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> - Does not appear in CXA-m - Does not appear in VXT Models M9410A/11A/15A/16A - Does not appear in M9410E/11E/15E/16E - Grayed-out if microwave preselector is off - Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz - Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz - Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	–/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXternal</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 3251. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.


For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 3251, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 2413


Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 2418
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 2420
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 2421

3 5G NR Mode

3.8 Transmit On|Off Power

Remote Command	[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL [:SENSe]:POWer[:RF]:MW:PATH?															
Example	:POW:MW:PATH LNP Enables the Low Noise path :POW:MW:PATH?															
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>															
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none">– The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed– The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed– The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>															
Preset	<table><tr><th>Mode</th><th>Value</th></tr><tr><td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr><tr><td>Pulse</td><td>MPB option not present and licensed: STD</td></tr><tr><td>RTSA</td><td></td></tr><tr><td>Avionics</td><td></td></tr><tr><td>All other Modes</td><td>STD</td></tr><tr><td>–</td><td></td></tr></table>		Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	–	
Mode	Value															
IQ Analyzer	MPB option present and licensed: MPB															
Pulse	MPB option not present and licensed: STD															
RTSA																
Avionics																
All other Modes	STD															
–																
State Saved	Save in instrument state															
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable															

Annotation	<p>In the Meas Bar, if the Standard path is chosen: μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown: μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown: μW Path: LNP,On</p> <p>If the preselector is bypassed: μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown: μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown: μW Path: FByp,On</p>
------------	--

μ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to μ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 5G NR Mode

3.8 Transmit On|Off Power

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	μ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 2416 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

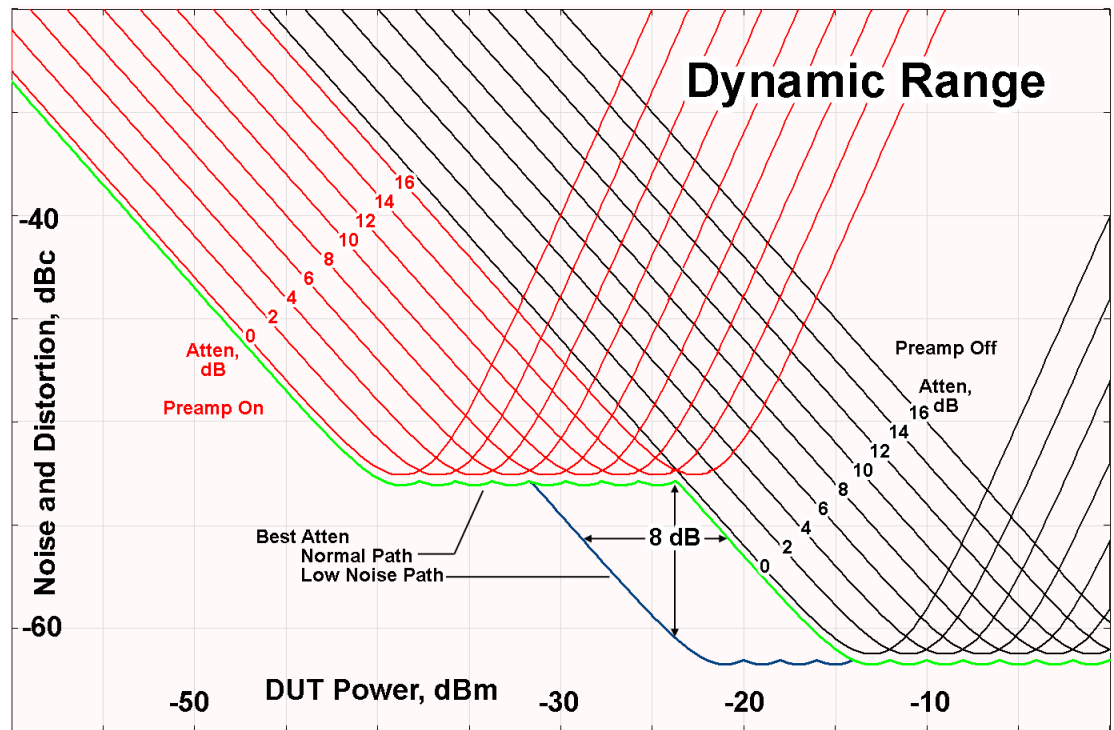

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (<code>:POW:MW:PATH STD</code>) The OFF parameter sets path MPB (<code>:POW:MW:PATH MPB</code>)
Preset	ON
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1</code> <code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.

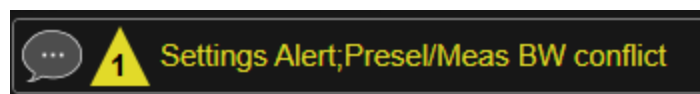

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">– 5GNRMode: Modulation Analysis and IQ Waveform– WLAN Mode: IQ Waveform– Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	<div>N9041B NORMa1</div> <div>N9042B+V3050A NARRow</div>
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0</code> <code>[:SENSe]:<measurement>:PFILter[:STATe]?</code>
Example	<p>Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: <code>:SPEC:PFIL ON</code></p> <p>Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code></p> <p>Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: <code>:SAN:PFIL ON</code></p>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 2427 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.8.4 BW

Activates the BW menu.

3.8.4.1 Settings

The Settings Tab contains controls that pertain to the bandwidth of the measurement.

Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition.

Remote	<code>[:SENSe]:PVTime:BANDwidth <freq></code>
Command	<code>[:SENSe]:PVTime:BANDwidth?</code>
	<code>[:SENSe]:PVTime:BANDwidth:AUTO OFF ON 0 1</code>

	<code>[:SENSe]:PVT:ime:BANDwidth:AUTO?</code>
Example	<code>:PVT:BAND 200.0 MHz</code> <code>:PVT:BAND?</code> <code>:PVT:BAND:AUTO ON</code> <code>:PVT:BAND:AUTO?</code>
Couplings	When it is set to AUTO and either Bandwidth or Direction is changed, this value changes to Channel Bandwidth when in the single carrier configuration. When Direction is Downlink and in the multicarrier configuration, this value is set appropriately according to the carrier configuration When in AUTO and Direction is Uplink, this value changes to Channel Bandwidth of the selected Measure CC
Preset	Automatically calculated ON
State Saved	Yes Yes
Range	Auto Man
Min	10 Hz

Analyzer Max Info BW

The analyzer’s max info bandwidth is option dependent

3.8.5 Display

The Display key opens the Display Menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.8.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Trigger Line

Turns the Trigger Line On or Off. This line indicates the trigger position.

Remote Command	<code>:DISPlay:PVT:ime:TRIGger[:STATe] ON OFF 1 0</code> <code>:DISPlay:PVT:ime:TRIGger[:STATe]?</code>
Example	<code>:DISP:PVT:TRIG ON</code> <code>:DISP:PVT:TRIG?</code>
Preset	OFF

State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow:TRIGger[:STATe]</code>

Burst Line

Turns the Burst Line On or Off. This line indicates the location of the Transmitter ON period determined by the Burst Width.

Remote Command	<code>:DISPlay:PVTime:BLINes[:STATe] ON OFF 1 0</code> <code>:DISPlay:PVTime:BLINes[:STATe]?</code>
Example	<code>:DISP:PVT:BLIN ON</code> <code>:DISP:PVT:BLIN?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow:BLINes[:STATe]</code>

Burst Timing Indicator Line

Turns the Burst Timing Indicator Line On or Off. The line shown on screen is just to indicate which part of signal is active burst and which part is inactive burst and nothing to do with the Pass/Fail (shown at the upper-left corner of screen) criteria. Regarding the Pass/Fail criteria, please refer to ["Limits" on page 2581](#).

Remote Command	<code>:DISPlay:PVTime:LIMit:MASK OFF ON 0 1</code> <code>:DISPlay:PVTime:LIMit:MASK?</code>
Example	<code>:DISP:PVT:LIM:MASK 1</code> <code>:DISP:PVT:LIM:MASK?</code>
Notes	This parameter only hides or shows the Burst Timing Indicator Line on the display
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow:LIMit:MASK</code>

Ramp Line

Turns the Ramp Line On or Off. This line indicates the Ramp Up/Down time.

Remote Command	<code>:DISPlay:PVTime:RAMP[:STATe] OFF ON 0 1</code> <code>:DISPlay:PVTime:RAMP[:STATe]?</code>
Example	<code>:DISP:PVT:RAMP ON</code> <code>:DISP:PVT:RAMP?</code>
Preset	OFF
State Saved	Yes
Range	On Off

Bar Graph

Turns the Bar Graph On and Off. The Bar Graph represents the Transmitter ON/OFF period and power. The Transmitter OFF period is coloured in green when DL Off Power limit passes and in red when limit fails.

Remote Command	<code>:DISPlay:PVTime:BGRaph OFF ON 0 1</code> <code>:DISPlay:PVTime:BGRaph?</code>
Example	<code>:DISP:PVT:BGR OFF</code> <code>:DISP:PVT:BGR?</code>
Preset	ON
State Saved	Saved in instrument state
Range	On Off

70/N us RMS Trace

Controls the display of 70/N us averaged off power (dBm/MHz) trace over the entire OFF period when the direction is downlink. The parameter also controls to display the off power limit line. The OFF power period is from burst down edge boundary plus max transient period to burst up edge boundary minus max transient period.

Remote Command	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF[:STATe] ON OFF 1 0</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF [:STATe]?</code>
Example	<code>:DISP:PVT:VIEW:WIND:TRAC:POFF ON</code> <code>:DISP:PVT:VIEW:WIND:TRAC:POFF?</code>
Notes	Except for 70/N us RMS off power trace on the trace window, the off power limit line (dBm/MHz) is also shown up when the state is on

Dependencies	When the direction is uplink, the control is always grayed out. There is no 70/N us RMS off power trace for uplink signal
Preset	OFF
State Saved	Yes
Range	On Off

3.8.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

Views

The Transmit On|Off Power measurement has two views.

These Views are multiple-window views and you can select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

Remote Command	<code>:DISPlay:PVTime:VIEW[:SElect] ALL BOTH</code> <code>:DISPlay:PVTime:VIEW[:SElect]?</code>
Example	<code>:DISP:PVTime:VIEW ALL</code> sets the burst view <code>:DISP:PVTime:VIEW BOTH</code> sets the rise and fall view
Preset	ALL
State Saved	Yes

Burst

Windows: ["RF Envelope" on page 2382](#), ["Metrics" on page 2383](#)

View Burst envelope.

Example	<code>:DISPlay:PVTime:VIEW[:SElect] ALL</code>
---------	--

Rise & Fall

Windows: ["Rise" on page 2383](#), ["Fall" on page 2383](#), ["Metrics" on page 2383](#)

Zooms in on the rising and falling portions of the burst being tested.

Example	<code>:DISPlay:PVTime:VIEW[:SElect] BOTH</code>
---------	---

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with <code>:DISP:VIEW:ADV:SEL</code></p> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p><code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node <code>:DISPlay:VIEW[:SElect]</code></p> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code> Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <code><alphanumeric></code> name already exists as a View, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; User View SCPI cannot be used while Display is disabled" is generated</p>

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View's name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

3.8.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
----------------	--

Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNOtation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNOtation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending **:SYSTem:DEFaults MISC** or **:DISPlay:ENABle ON** (neither ***RST** nor **:SYSTem:PRESet** enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending **:SYSTem:DEFaults MISC** or **:DISPlay:ENABle ON** (neither ***RST** nor **:SYSTem:PRESet** enable the display)
- and you are using either the **:SYSTem:KLOCK** command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	:DISPlay:VIEW:ADVanced:SElect
Rename User View	:DISPlay:VIEW:ADVanced:REName
Delete User View	:DISPlay:VIEW:ADVanced:DELeTe
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DELeTe
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF ON 0 1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON

	Set by :SYST:DEF MISC , but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABLe as it did in legacy analyzers

3.8.6 Frequency

The **FREQ** key opens the Frequency menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the Frequency menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.8.6.1 Settings

The Settings Tab contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets carrier reference frequency. The center frequencies of carriers are defined as offset frequencies from this value.

Because 5G NR mode measurements often deal with multiple carriers with distinct bandwidths, in 5G NR mode measurements are done based on carrier center frequencies and its bandwidths, both of which are specified by the user. Because of this, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

If the following conditions are satisfied at the same time:

- the Number of Component Carrier equals to 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Frequency is Auto

the Center Frequency value is equivalent to Carrier Reference Frequency value.

Remote Command	<code>[:SENSe]:CCARrier:REFerence <freq></code> <code>[:SENSe]:CCARrier:REFerence?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1 GHz
State Saved	Yes
Min/Max	Depends on instrument minimum/maximum center frequency. Same as Center Frequency

3.8.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the Marker Trace rules.

For more detailed information on the types of Markers and the interaction between Markers, see the Marker section of the Swept SA measurement.

3.8.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The Select Marker control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do NOT depend on the selected marker (e.g., Counter).

On any menu tab for which Select Marker displays, the first control is always Marker Time.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	Yes
Annunciation	Appears in the marker results block label for Normal and Delta markers

3.8.7.2 Settings

The controls on the Settings tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, or Off) for the selected

marker, as well as additional functions that help you use markers.

Marker Time

Set the X Axis value of the selected marker in the current X Axis Scale unit. If the marker mode is off, the SCPI command has no affect other than to cause the marker to become selected.

NOTE The X label and value can change if the marker is moved to a trace with a different domain.

If the marker mode is Normal, the Marker X position is absolute.

If the mode is Delta, then the X position is relative to the reference marker.

The valid X positions are the actual data points in the trace; the marker cannot be located between points. If a SCPI command attempts to place the marker between two points, the X value snaps to the closest point.

Note that for Vector or Constellation format, the X axis is perpendicular to the screen (because the screen axes are used to show the real and imaginary parts of the Y value), so adjusting the X value in this case only causes the marker to move horizontally if the real Y value changes.

Remote Command	<code>:CALCulate:PVTTime:MARKer[1] 2 ... 12:X <real></code> <code>:CALCulate:PVTTime:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:PVT:MARK:X 0.325</code> <code>:CALC:PVT:MARK:X?</code>
Notes	Marker X does not go outside the bounds of the data. If you attempt to set it to a value outside the bounds, it is clipped at the closest limit and error -222 Data Out of Range is generated If suffix is sent, it must match the X units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated If you try to read or set the position of a Delta marker, remember that the position is in relative units
Couplings	See "Coupling of Delta and Reference markers " on page 2442
Preset	None until marker is turned on
State Saved	Yes
Min/Max	Depends on trace data / Depends on trace data

SCPI only X position commands

Via SCPI, the marker position can also be set or queried in trace points. In this case, the position setting or reading is absolute regardless of control mode.

NOTE

The entered value in Trace Points is immediately translated into the current domain units for setting the value of the marker. The marker's value in domain units, NOT trace points, is preserved if a change is made to the X Axis scale settings. Thus, if you use this command to place a marker on point 500, which happens at that time to correspond to 13 GHz, and then you change the Start Frequency so that point 500 is no longer 13 GHz, the marker stays at 13 GHz, NOT at point 500.

If the trace the marker is on a 2-dimensional domain, then the points are numbered in the following way:

Starting at the minimum X and Z position, this point is numbered 0. Each time you increment the point number, increment the X value to the next available value. When X reaches the maximum X position, then reset X to the minimum and increment the Z value. Then continue incrementing the X position in the same manner as before.

Note that for symbol tables, which have no axes, incrementing the X position in points moves the marker consecutively through all table entries.

Remote Command	<code>:CALCulate:PVT:MARKer[1] 2 ... 12[:X]:POSition <real></code> <code>:CALCulate:PVT:MARKer[1] 2 ... 12[:X]:POSition?</code>
Example	<code>:CALC:PVT:MARK:POS 25</code> <code>:CALC:PVT:MARK:POS?</code>
Notes	When a marker mode is changed from off to any other mode, the X position is set to mid-screen
Preset	None until marker is turned on
State Saved	Yes
Min/Max	Depends on trace data / Depends on trace data

Coupling of Delta and Reference markers

The following coupling rules apply from the front panel and also if the equivalent SCPI commands are sent.

Pressing the Delta key causes the selected marker to become a delta marker if it is not already. Also, the selected marker's reference is affected as follows:

If the reference marker was off, it is turned on as a fixed??? marker.

The reference marker is moved to the trace of the selected marker and set to the same position as the selected marker.

If the delta marker has a marker function turned on, the reference marker takes on the same function (with the same band limits).

Exception: Pressing Delta when the selected marker's mode is not yet Delta does not move or change a reference marker that is already turned on (Normal, or Delta) and on the same trace as the selected marker. It merely changes the selected marker's mode to Delta and shows the current offset between it and the reference. If you press Delta again (when the selected marker is already in Delta mode) then the reference is moved and modified as described above.

When a delta marker is changed to any other control mode, if its reference marker is fixed then the reference marker is also turned off.

If you move a delta marker to a different trace, it is forced to Normal mode and if its reference is fixed, the reference is turned off.

A delta marker is forced to Normal mode if you turn its reference off or if you move its reference to another trace. (In the latter case the reference is not turned off even if it is fixed.)

If you change the selected marker's reference (using the Marker, Properties, Relative To), the selected marker is forced to Delta mode. This change of the selected marker to Delta mode causes its new reference's control mode and position to change as described above.

Marker Mode

Sets the marker control mode to **Normal**, **Delta**, or **Off**.

All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.


Remote Command	:CALCulate:PVTime:MARKer[1] 2 ... 12:MODE POSition DELTa OFF :CALCulate:PVTime:MARKer[1] 2 ... 12:MODE?
Example	:CALC:PVTime:MARK3:MODE POS :CALC:PVTime:MARK3:MODE?
Preset	OFF
State Saved	Saved in instrument state
Range	Normal DELTa (D) Off

Delta Marker (Reset Delta)

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility.

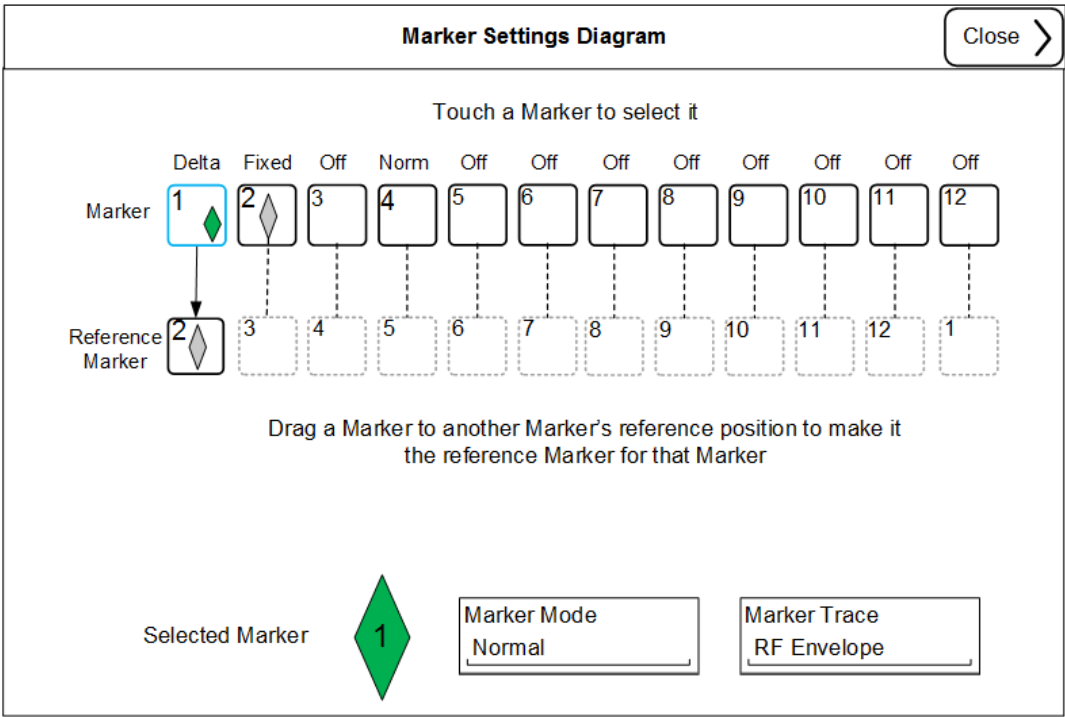

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:PVTime:MARKer:AOff
Example	:CALC:PVTime:MARK:AOff

Couple Markers

When this function is On, moving any marker causes an equal X Axis movement of every other marker which is not Off. “equal X Axis movement” means to preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Remote Command	<code>:CALCulate:PVTime:MARKer:COUPle[:STATe] ON OFF 1 0</code> <code>:CALCulate:PVTime:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:PVT:MARK:COUP ON</code> <code>:CALC:PVT:MARK:COUP?</code>
Notes	In general, when coupling is turned on then all Normal or Delta markers with the same (or equivalent) domain as the selected marker move in the same manner as the selected marker. See "More Information" on page 2445
Preset	OFF (presets on Mode Preset and All Markers Off)
State Saved	Yes

More Information

Coupling is relative between markers on the same trace (so that their relative positions in the domain are maintained). Coupling can be absolute between markers on different traces that have equivalent domains. That is, they have the same position in the domain, if possible. (As an example of equivalent domains, demodulated symbol positions can be derived from time by using the current symbol rate). When you move the selected marker, then others on related traces track it. This enables you to correlate different measurement results. For example, you can place a marker at a particular symbol time on an error vector magnitude display, have tracking markers on the symbol table and pre-demod time trace showing you the symbol value, and the actual time-varying signal value at the same point in time.

Absolute coupling is performed only for the lowest numbered Normal or Delta marker on each trace. All other markers on a trace couple relatively. When you turn on marker coupling, the subset of markers that have the same domain as the selected marker track it and all other markers remain at their current location. The absolutely coupled markers within this subset is moved at this time to match the domain setting of the selected marker, with the relatively coupled markers following accordingly to maintain offsets within their respective traces. Those markers with different domains remain at their current location. When you select a marker with a different domain than the previously selected marker, the subset of markers with that domain go through the same procedure.

Any marker that coupling would move outside its range of X values, remains at the closest limiting value. If the coupled markers are on data that do not have the same domain resolution, then they are positioned as close to each other as possible.

If markers change mode or trace, or trace data is changed below them, the coupling rules are immediately applied to the new set.

3.8.7.3 Peak Search

The controls on the Peak Search tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

NOTE Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

NOTE Pressing the Peak Search tab once you are already IN the Marker menu does NOT perform a Peak Search.

Marker Time

The Marker Time control is the fundamental control that you use to move a marker around on the trace. This is the same as the "Marker Time" on page 2441 control on the Settings tab.

Peak Search

Pressing the Peak Search control moves the selected marker to the trace point which has the maximum y-axis value for that marker's trace.

NOTE Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

Remote Command	:CALCulate:PVTime:MARKer[1] 2 ... 12:MAXimum
Example	:CALC:PVT:MARK2:MAX :The command SYST:ERR? can be used to query the errors to determine if a peak is found. The message "No peak found" will be returned after an unsuccessful search

Marker Delta

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button on the Settings tab. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

The control is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the marker’s control mode to Delta without having to access two separate menus.

3.8.7.4 Properties

The controls on the Properties tab are used to set certain properties of the selected marker.

Marker Time

The Marker Time control is the fundamental control that you use to move a marker around on the trace. This is the same as the "Marker Time" on page 2441 control on the Settings tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	:CALCulate:PVTime:MARKer[1] 2 ... 12:REference <integer> :CALCulate:PVTime:MARKer[1] 2 ... 12:REference?
Example	:CALC:PVT:MARK:REF 5 :CALC:PVT:MARK:REF?
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself.”

	When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is off it is turned on in Normal mode at the delta marker location.
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Yes. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:TRACe TRACe1 TRACe2 TRACe3 RMS70:CALCulate:PVTime:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:PVTime:MARK:TRAC TRACe2</code> <code>:CALC:PVTime:MARK:TRAC?</code>
Notes	SCPI enums, RFENvelope, MAXHold, and MINHold are supported for backwards compatibility RFEN=TRACe1, MAXH=TRACe2, MINH=TRACe3
Preset	TRACe1
State Saved	Yes
Range	Trace 1 Trace 2 Trace 3 70/N us RMS Trace

Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility. This is the same as the "[Marker Settings Diagram](#)" on page 2444 control on the Settings tab.

3.8.8 Meas Setup

The Meas Setup menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

3.8.8.1 Settings

The Settings tab contains frequently used Meas Setup functions to which you will want the fastest access.

Average|Hold Number

Sets the number of data acquisitions that are averaged. After the specified number of average counts is reached, the averaging mode (termination control) setting determines the averaging action. Also lets you turn Averaging on and off.

Remote Command	<code>[:SENSe]:PVTTime:AVERage:COUNT <integer></code> <code>[:SENSe]:PVTTime:AVERage:COUNT?</code> <code>[:SENSe]:PVTTime:AVERage[:STATe] OFF ON 0 1</code> <code>[:SENSe]:PVTTime:AVERage[:STATe]?</code>
Example	<code>:PVT:AVER:COUN 100</code> <code>:PVT:AVER:COUN?</code> <code>:PVT:AVER OFF</code> <code>:PVT:AVER?</code>
Preset	10 OFF
State Saved	Yes Yes
Range	On Off
Min/Max	1/10000

Continue Averaging

Continue Averaging is designed for acquiring the trace averaging multiple sets of DUT conditions, in order to meet requirements such as OTA measurement.

NOTE

You must be in Single sweep/measurement to use Continue Averaging. Go to Single and press **Restart** to get your first set of averages, then Continue Averaging will be available.

Use `FETCH:<meas>?` query to retrieve the data as it waits for completion of Continue Averaging. `*OPC?` doesn't wait for completion and returns true immediately.

Pressing this control adds a number of Averages that matches the Avg|Hold number to the already averaged trace or measurement. Every time you press it, the terminal

count increases to 2N, 3N and so on. You can change the DUT position or antenna when each set of average count is reached to the terminal count and the measurement is complete.

Since the measurement results are valid for each completed average conditions, the user doesn't have to pre-determine the number of set of DUT conditions.

Remote Command	<code>[:SENSe]:PVTIme:AVERage:CONTinue</code>
Example	<code>:PVT:AVER:CONT</code>
Dependencies	This control becomes enabled when the user changes the Sweep mode to Single and the Average Count reaches to the Average Number. Otherwise, grayed out

Terminal Count (Remote Command Only)

Query only command.

This returns the terminal count that shows the target average number after Continue Averaging is pressed. Every time you press Continue Averaging, the terminal count increases to 2N, 3N and so on. The value is the same as the Avg|Hold Number unless Continue Averaging is pressed and it is reset to match the Avg|Hold Number when Restart is pressed.

Remote Command	<code>[:SENSe]:PVTIme:AVERage:COUNt:TERMinal?</code>
Example	<code>:PVT:AVER:COUN:TERM?</code>

Averaging Mode

Selects the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. You can select between the Exp (exponential) and Repeat averaging modes. This selection only affects the averaging result after the number of N averages is reached. You can use the Avg|Hold Number to set N.

Control	SCPI	Description
Exponential averaging	EXPonential	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals
Repeat averaging	REPeat	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart control when the Single measurement finishes

Remote Command	<code>[:SENSe]:PVTime:AVERage:TCONtrol EXPonential REPeat</code> <code>[:SENSe]:PVTime:AVERage:TCONtrol?</code>
Example	<code>:PVT:AVER:TCON EXP</code> <code>:PVT:AVER:TCON?</code>
Preset	REPeat
State Saved	Yes
Range	Exponential Repeat

Average Type

Specifies the type of trace and result averaging to use.

CONTROL: Power (RMS) True power averaging that is equivalent to taking the RMS value of the voltage. It is the most accurate type of averaging

SCPI:
RMS|POWer

CONTROL: Log-Power Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power

SCPI:
LOG|LPOWer

Remote Command	<code>[:SENSe]:PVTime:AVERage:TYPE LOG LPOWer RMS POWer</code> <code>[:SENSe]:PVTime:AVERage:TYPE?</code>
Example	<code>:SENS:PVT:AVER:TYPE RMS</code> <code>:SENS:PVT:AVER:TYPE?</code>
Preset	RMS
State Saved	Yes
Range	Power (RMS) Log-Power

Subcarrier Spacing (SCS)

Sets Sub Carrier Spacing. This value is used as follows:

- Determines Slot Duration.
- Determines the value of N, where $70/N$ us is used as length of measurement period to calculate mean power spectral density in 3GPP standard (TS 38.141-1 6.4.2.4.2|TS 38.141-2 6.5.2.4.2). $N = \text{SCS}/15$, where SCS is Sub Carrier Spacing in kHz. When Sub Carrier Spacing is SCS60K, $N = 60/15 = 4$.
- Determines Info BW when Info BW is Auto.

When in Auto:

Downlink: Coupled to the smallest SCS (Power Meas) among the SCS (Power Meas) of each component carrier.

Uplink: Coupled to the SCS (Power Meas) of the component carrier specified in Measure CC.

Remote Command	<pre>[:SENSe]:PVTIme[:DLINK]:SCS SCS15K SCS30K SCS60K SCS120K SCS240K SCS480K SCS960K [:SENSe]:PVTIme[:DLINK]:SCS? [:SENSe]:PVTIme:SCS:AUTO OFF ON 0 1 [:SENSe]:PVTIme:SCS:AUTO?</pre>
Example	<pre>:PVT:SCS SCS30K :PVT:SCS? :PVT:SCS:AUTO OFF :PVT:SCS:AUTO?</pre>
Couplings	This value will be preset to the SCS value in the Meas Standard tab when the action “Apply Preset (to All CCs)” is executed
Preset	SCS30K ON
State Saved	Yes
Range	u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 4: 240 kHz u = 5: 480 kHz u = 6: 960kHz

Auto Timing Adjustment

In order to check transmit off power is below the 3GPP defined limit, timing reference must be provided in the measurement. This setting specifies how the timing reference is derived in the measurement.

When it is ON, the burst boundary timing is always appropriately adjusted based on the measured ramp up and ramp down edge timings. When it is OFF, the timing reference will be provided by external trigger, expected burst boundaries will be derived from external trigger and frame configuration parameters.

Remote Command	<pre>[:SENSe]:PVTIme:TIMing:REFeRence:AUTO ON OFF 1 0 [:SENSe]:PVTIme:TIMing:REFeRence:AUTO?</pre>
Example	<pre>:PVT:TIM:REF:AUTO ON :PVT:TIM:REF:AUTO?</pre>
Dependencies	When Auto Timing adjustment is OFF and Trigger type is free run, an advisory message is generated
Preset	ON
State Saved	Yes
Range	On Off

Spur Avoidance

Because the VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The Spur Avoidance function is provided to eliminate this spur, at the expense of some measurement speed.

When Spur Avoidance is enabled (the default), the analyzer uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the $BW \leq \text{maxBW}/2.5$.

You can disable this function in order to speed up your measurement. When Spur Avoidance is turned Off, a warning message will appear in the status bar as “Settings Alert; Spur Avoidance Off”. This is to alert you that measurement accuracy might be impacted because you have defeated the spur avoidance algorithm.

Remote Command	<code>[:SENSe]:PVTTime:SAVoid[:STATe] ON OFF 0 1</code> <code>[:SENSe]:PVTTime:SAVoid[:STATe]?</code>
Example	<code>:PVT:SAV ON</code> <code>:PVT:SAV?</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A
Preset	<code>ON</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>

Meas Setup Summary Table

The Meas Setup Summary Table lets you view and access many of the parameters in the Meas Setup menus on one screen.

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFigure:PVTTime</code>
Example	<code>:CONF:PVT</code>
Couplings	Selecting Meas Preset restores all measurement parameters to these default values

Ignore Burst Found (Remote Command Only)

In the Pvt measurement, by default, it checks whether a burst signal is found and decides what to do next. When average state is ON and no burst signal is found, the measurement will continuously run and you cannot get test results by SCPI meas/read/fetch command under continuous measurement status. To avoid this, it is recommended to implement timeout process in test scripts.

This SCPI only parameter is defined to stop continuous running, as an alternate option. For backwards compatibility, the behavior of “waiting for burst found” is kept intact when this parameter is OFF.

Remote Command	<code>[:SENSe]:PVTIme:IGNore:BURSt:FOUNd OFF ON 0 1</code> <code>[:SENSe]:PVTIme:IGNore:BURSt:FOUNd?</code>
Example	<code>:PVT:IGN:BURS:FOUN ON</code> <code>:PVT:IGN:BURS:FOUN?</code>
Preset	OFF
State Saved	Yes

3.8.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.

This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRectio DLINk ULINk</code> <code>[:SENSe]:RADio:STANdard:DIRectio?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	Changing the direction affects the gate source as follows

- If changed to uplink: RF burst
- If changed to downlink: External 1

In Transmit On|Off Power, changing the direction affects the trigger source as follows

- If changed to uplink: Periodic
- If changed to downlink: External 1 except for models with the H1G option. With the H1G option,

	the trigger source changes as follows. <ul style="list-style-type: none">- External 1, when Info BW \leq 255 MHz- External 3, when Info BW \geq 256 MHz
	Changing the direction affects many other modulation analysis setup parameters
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Multi Channel Config

Lets you perform a detailed configuration of each input channel. This will be used for three cases:

- MIMO (EVM only): Meas Setup > Radio (N9042B and UXM model E7515B only)
- ccEVM (EVM only): Meas Setup > Advanced
- Multiple Synchronous Acquisition (PowerSuite measurements supporting multi-channel synchronous acquisition): Meas Setup > Radio (UXM model E7515B only)

Multi Channel Configuration

Enables you to configure multiple channel receiver. Different hardware platforms have different parameters.

This menu is available for the following measurements:

- EVM in N9042B, VXT2/3, UXM model E7515B
- PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Input Port (UXM)

Select input port for channel configuration.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2 RFIO1 ... RFIO8</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2?</code>
Example	<code>:RAD:MCH:PORT2 RFIO2</code> <code>:RAD:MCH:PORT2?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurement supporting multiport synchronous acquisition in the UXM model E7515B When "Lock (UXM)" on page 2456 is On, the selections are grayed out and cannot be changed. When "Lock (UXM)" on page 2456 is OFF, the label "Channel x" changes to "Unused" Selections are the same as those of RF Input Port and either RFIO1 to RFIO8 or RFIO1 to RFIO16 depending on the hardware configuration
Preset	RFIO1 RFIO2
State Saved	Yes
Range	RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 or RFIO 1 RFIO 2 RFIO 3 RFIO 4 RFIO 5 RFIO 6 RFIO 7 RFIO 8 RFIO 9 RFIO 10 RFIO 11 RFIO 12 RFIO 13 RFIO 14 RFIO 15 RFIO 16
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2</code>

Lock (UXM)

Enables you to lock/unlock the input port. When locked, the selected input port is assigned to a channel.

Remote Command	<code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed OFF ON 0 1</code> <code>[:SENSe]:RADio:MCHannel:PORT[1] 2:LOCKed?</code>
Example	<code>:RAD:MCH:PORT2:LOCK ON</code> <code>:RAD:MCH:PORT2:LOCK?</code>
Dependencies	This control appears only in the EVM and PowerSuite measurements supporting multiport synchronous acquisition in the UXM model E7515B
Preset	ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:MIMO:PORT[1] 2:LOCKed</code>

Trace Settings Table

Lets you set a configuration of multiport synchronous acquisition.

Configuration

Multi Channel Config

Trace Settings Table

Multi Channel Sync Acquisition

On

Off

Measure Trace

Trace 3

	Channel	Input Port	Trace Type	View/Blank	Math		
					Function	Operand 1	Operand 2
Trace 1	Channel 1	RFIO 1	Trace Average	Active	Off	Trace 2	Trace 3
Trace 2	Channel 2	RFIO 2	Trace Average	Active	Off	Trace 3	Trace 1
Trace 3	Channel1		Clear / Write	Active	Power Sum	Trace 1	Trace 2

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition
--------------	---

Multi Channel Synchronous Acquisition (UXM Only)

This is the same as "Multi Channel Synchronous Acquisition (UXM Only)" on page 890

Measure Trace

Specifies which trace’s scalar results are displayed in the Metrics window, and retrieved by sending a :READ or :FETCh query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:<meas>:MTRace TRACe1 TRACe2 TRACe3</code> <code>:CALCulate:<meas>:MTRace?</code> <code><meas></code> is the identifier for the current measurement; any one of <code>CHPower</code> <code>ACPower</code> <code>OBWidth</code> <code>SEMask</code> <code>SPURious</code> <code>PVTime</code>
Example	Channel Power <code>:CALC:CHP:MTR TRAC1</code>

	:CALC:CHP:MTR?
Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

Channel Assignment

Selects the channel for each trace in the specified measurement. A port selected at ["Input Port \(UXM\)" on page 2456](#) is assigned to a trace. This setting is valid when ["Multi Channel Synchronous Acquisition \(UXM Only\)" on page 2457](#) is ON.

Multi Channel Synchronous Acquisition is performed under the following conditions:

- All Input Port Channel Lock is set to ON
- Multi Channel Synchronous Acquisition is set to ON

The selected input port is shown in the Trace Setup Summary table, on the trace and at the bottom of the Trace Control menu panel.

Remote Command	:TRACe[1] 2 3:<meas>:CHANne1 CHANne11 CHANne12 :TRACe[1] 2 3:<meas>:CHANne1?
Example	For the ACP measurement Trace 2 :TRAC2:ACP:CHAN CHAN2
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 2457 is On The unlocked channel is grayed-out
Preset	CHAN1 CHAN2 CHAN1
State Saved	Yes
Range	Channel 1 Channel 2

Input Port

Read-only information. Indicates which input data is displayed in each trace. This setting is valid when Multi Channel Synchronous Acquisition is ON.

Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition Appears when "Multi Channel Synchronous Acquisition (UXM Only)" on page 890 is On This column is blank when Math Function is other than Off
--------------	---

EIRP (Synchronous Acquisition) (UXM Only)

Enables you to preset the following parameters. Preset is made such that Trace 3 becomes the sum of Trace 1 and Trace 2 to which data from Channel 1 and Channel 2 are assigned. The measurement result is calculated based on Trace 3.

This parameter is useful when performing the EIRP measurement by acquiring signals from two ports simultaneously.

Multi Channel Synchronous Acquisition	On
--	-----------

Target trace parameters are those of the PowerSuite measurements supporting multi channel synchronous acquisition in the UXM model E7515B.

	Trace 1	Trace 2	Trace 3
Channel Assignment	Channel 1	Channel 2	Channel 1
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	Active	Active
Math Function	Off	Off	Power Sum
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2
Math Trace	Trace 3		

Remote Command	[:SENSe]:RADio:MCHannel:PRESet:EIRP
Example	:RAD:MCH:PRES:EIRP
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

Restore Defaults (UXM Only)

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition	Off
Measure Trace	Trace1

	Trace 1	Trace 2	Trace 3
View/Blank	Active	Blank	Blank
Math Function	Off	Off	Off

Remote Command	[:SENSe]:RADio:MCHannel:PRESet:DEFault
Example	:RAD:MCH:PRES:DEF
Dependencies	Appears only in UXM model E7515B, in PowerSuite measurements supporting multi-channel synchronous acquisition

3.8.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNt <integer></code> <code>[:SENSe]:CCARrier:COUNt?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

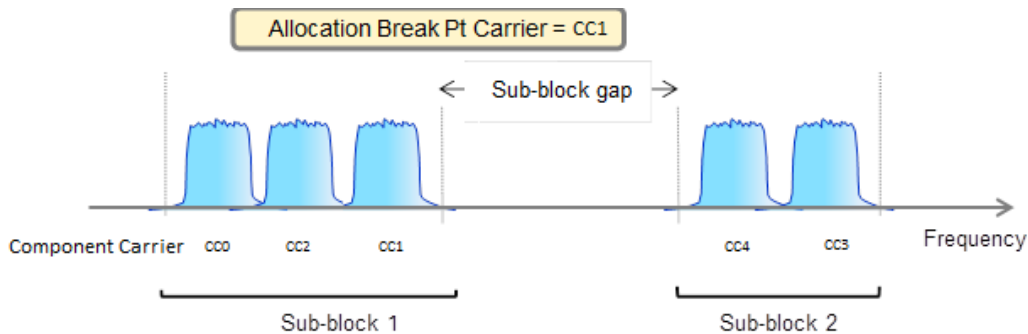

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	<code>[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K</code> <code>[:SENSe]:CCARrier:AFOffset?</code>
Example	<code>:CCAR:AFOf ACRA100K</code> <code>:CCAR:AFOf?</code>
Notes	When you change the value to OFF , nothing happens
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz
Preset	OFF
State Saved	Yes
Range	The cascading list is shown below
	Channel Spacing for Channel Raster

Adjacent NR Carriers	100 kHz
Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for	Channel Raster
Adjacent NR Carriers	100 kHz
Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for	Channel Raster
Adjacent NR Carriers	
Carrier Aggregation	
Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when " Bandwidth " on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes

Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz
-------	--

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly

	Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code>
--------	---

Command	[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?		
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?		
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS		
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table		
	When Freq Range is FR1		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.500	4.515
	10 MHz	9.360	9.375
	15 MHz	14.220	14.235
	20 MHz	19.080	19.095
	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
	When Freq Range is FR2		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		

State Saved	Yes
Min	100 kHz
Max	2000 MHz

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

Measure CC

Selects the component carrier to be measured in the uplink time mask measurement.

NOTE

The parameter is only available for the Transmit On|Off Power measurement.

Remote Command	<code>[[:SENSe]:PVTtime:ULINK:CCARrier CC0 ... CC15 [:SENSe]:PVTtime:ULINK:CCARrier?</code>
Example	<code>:PVT:ULINK:CCAR CC0 :PVT:ULINK:CCAR?</code>
Dependencies	Available only when Radio Direction is Uplink
Preset	<code>CC0</code>
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15

3.8.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M [:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M :EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message

Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the ["Freq Range" on page 3297](#) of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the ["Number of Component Carriers" on page 3292](#) will also take on this value.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22 [:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?								
Example	:RAD:STAN:PREs:FREQ:RANG FR1 :RAD:STAN:PREs:FREQ:RANG?								
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 2472 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table border="1"> <thead> <tr> <th>Bandwidth</th><th>FR</th></tr> </thead> <tbody> <tr> <td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr> <tr> <td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr> <tr> <td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr> </tbody> </table> <p>When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable</p>	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet:FRANge								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

Current FR value	Bandwidth selection changes to:					
	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRES:DMOD TDD</code> <code>:RAD:STAN:PRES:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only

	TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "[Duplex Mode](#)" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617 [:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?
Example	:RAD:STAN:PRES:DLIN:NRTM TS38 :RAD:STAN:PRES:DLIN:NRTM?
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?
Example	:RAD:STAN:PRES:TRAN:PER P0_5MS

	<code>:RAD:STAN:PRES:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>P5MS</code>
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECIal:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1

Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	"DDDDDDDSUU"

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the "Configure Preset" section then press "Apply Preset (to all CCs)".

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 2477 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRES:SCS SCS30K</code> <code>:RAD:STAN:PRES:SCS?</code>

	<code>:RAD:STAN:PRES:SCS:AUTO 0</code>
	<code>:RAD:STAN:PRES:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 2477
Preset	<code>SCS30K</code> <code>ON</code>
State Saved	Yes Yes
Range	u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	<code>SCS15K, SCS30K</code>
	10 – 50 MHz	15K*/30K/60K	<code>SCS15K, SCS30K, SCS60K</code>
	60 – 100 MHz	30K*/60K	<code>SCS30K, SCS60K</code>
FR2	50, 100, 200 MHz	60K*/120K	<code>SCS60K, SCS120K</code>
	400 MHz	120K*/480K/960K	<code>SCS120K, SCS480K, SCS960K</code>
	800, 1600 MHz	480K*/960K	<code>SCS480K, SCS960K</code>
	2000 MHz	960K*	<code>SCS960K</code>
FR2-1	50, 100, 200 MHz	60K*/120K	<code>SCS60K, SCS120K</code>
	400 MHz	120K*	<code>SCS120K</code>
FR2-2	100 MHz	120K*	<code>SCS120K</code>
	400 MHz	120K*/480K/960K	<code>SCS120K, SCS480K, SCS960K</code>
	800, 1600 MHz	480K*/960K	<code>SCS480K, SCS960K</code>
	2000 MHz	960K*	<code>SCS960K</code>

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the ["Number of Component Carriers" on page 3292](#) will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1DOT1 DLTm1DOT2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3DOT1 DLTm3DOT1Q16 DLTm3DOT1QPS DLTm3DOT1A DLTm3DOT1B DLTm3DOT2 DLTm3DOT3 FPIBPSK DLTm1DOT1P1 DLTm1DOT1L2</pre> <p>For selection details, see "Available Selections" on page 2479</p> <pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc?</pre>
Example	<pre>:RAD:STAN:PRESet:RBAL DLTm1DOT1</pre> <pre>:RAD:STAN:PRESet:RBAL?</pre>
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 2479
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)

3 5G NR Mode
3.8 Transmit On|Off Power

Group	Configuration
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			

	FR	FR1	FR2	FR2-1	FR2-2
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM				
	Fulfilled Pi/2 BPSK		✓	✓	✓
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMal V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code>

	<code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the "Preset for ACP, SEM, Spur, Tx On|Off Power" section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the "Configure Preset" section, and then press "Apply Preset (to all CCs)".

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</code> For option details, see "Selections & Dependencies" on page 2483 <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</code> <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</code>
----------------	--

3 5G NR Mode

3.8 Transmit On|Off Power

Example	<pre> :RAD:STAN:PRES:ADJ:FRAN F1T03 :RAD:STAN:PRES:ADJ:FRAN? :RAD:STAN:PRES:ADJ:FRAN:AUTO 1 :RAD:STAN:PRES:ADJ:FRAN:AUTO? </pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 2483
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	f ≤ 1.0 GHz	FT01
	< f ≤ 3.0 GHz	F1T03
	3.0 < f ≤ 4.2 GHz	F3T04P2
	4.2 < f ≤ 6.0 GHz	F4P2T06
	6.0 < f ≤ 7.125 GHz	F6T07
FR2	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
	52.6 < f ≤ 71.0 GHz	F52T071
FR2-1	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
FR2-2	52.6 < f ≤ 71.0 GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINk:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINk:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)

- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRRange BMRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	<code>BWARea</code>
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code> <code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X

Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA
	Uplink
Remote Command	[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra [:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?
Example	:RAD:STAN:PRES:ULIN:ACH NR :RAD:STAN:PRES:ULIN:ACH?
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120 [:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?
Example	:RAD:STAN:PRES:ULIN:CTYP PUS :RAD:STAN:PRES:ULIN:CTYP?
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot

	FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
	FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot
Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP				
Example	:RAD:STAN:PRES:RBAL:TIME:LENG GPP				
	:RAD:STAN:PRES:RBAL:TIME:LENG?				
Notes	Only apply to Modulation Analysis measurement				
State Saved	Yes				

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:IMMediate				
Example	:RAD:STAN:PRES:IMM				
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall 				

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr),	n/a

Assumed Adj Channels (for ACP, FR1)	Cat A Local Area BS, Cat B Local Area BS NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When **"Apply Preset (to All CCs)" on page 3322** is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
		Cat A MR BS, Cat B MR BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			None,			Table 6.6.4.5.4-1
			$f \leq 1.0$ GHz,			

1-0		1.0 < f ≤ 3.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.6.4.5.4-3	
		3.0 < f ≤ 4.2 GHz,				
		4.2 < f ≤ 6.0 GHz,				
		6.0 < f ≤ 7.125 GHz				
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz,			Table 6.6.4.5.4-2	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.4-4
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz,			Table 6.6.4.5.5-1	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.5-2
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A WA BS	f ≤ 1.0 GHz			Table 6.7.4.5.1.1-1	
		None, 1.0 < f ≤ 3.0 GHz				Table 6.7.4.5.1.1-2
3.0 < f ≤ 4.2 GHz						
4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.1-3				
6.0 < f ≤ 7.125 GHz						
Cat B WA BS		f ≤ 1.0 GHz	Table 6.7.4.5.1.2-1			
		None, 1.0 < f ≤ 3.0 GHz		Table 6.7.4.5.1.2-2		

3 5G NR Mode

3.8 Transmit On|Off Power

FR2	2-0	Cat A MR BS, Cat B MR BS	3.0 < f ≤ 4.2 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.2-3
			4.2 < f ≤ 6.0 GHz				Table 6.7.4.5.1.2-4
			6.0 < f ≤ 7.125 GHz				Table 6.7.4.5.1.2-5
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.1.4-1
			4.2 < f ≤ 6.0 GHz				
			6.0 < f ≤ 7.125 GHz				
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.1.4-2
			4.2 < f ≤ 6.0 GHz				Table 6.7.4.5.1.4-3
		Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-3a
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.1.4-4
			4.2 < f ≤ 6.0 GHz				
			6.0 < f ≤ 7.125 GHz				
		Cat A LA BS, Cat B LA BS	3.0 < f ≤ 4.2 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-5
			4.2 < f ≤ 6.0 GHz				Table 6.7.4.5.1.4-6
			6.0 < f ≤ 7.125 GHz				Table 6.7.4.5.1.4-7
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.1.5-1
			4.2 < f ≤ 6.0 GHz				
			6.0 < f ≤ 7.125 GHz				
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.1.5-2
			4.2 < f ≤ 6.0 GHz				Table 6.7.4.5.1.5-3
		Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P _r), Cat A LA BS	6.0 < f ≤ 7.125 GHz	None, 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2			Table 6.7.4.5.1.5-4
			3.0 < f ≤ 4.2 GHz				Table 6.7.4.5.2.2-1
			4.2 < f ≤ 6.0 GHz				
			6.0 < f ≤ 7.125 GHz				Table 6.7.4.5.2.2-2

	GHz	6.7.4.5.2.2-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.2-4
Cat B WA BS,	None,	Table
Cat B MR BS,	24.25 < f ≤ 29.5	6.7.4.5.2.3-1
Cat B MR BS	GHz	
(Low P _r),	37.0 < f ≤ 43.5	Table
Cat B LA BS	GHz	6.7.4.5.2.3-2
	43.5 < f ≤ 48.2	Table
	GHz	6.7.4.5.2.3-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values TDD / FDD Duplex Mode			User Defined Duplex mode	
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff Gate (*5)	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate Delay	On	On	(no preset)	On	On
		5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)

Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope =

Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz	NR (same BW),	= 4 x Bandwidth + RFBW (*2)
		35, 45 MHz	NR + E-UTRA	
			E-UTRA	= 20 MHz + RFBW (*2)
	FR2	50, 100, 200, 400 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
		100, 400, 800, 1600, 2000 MHz		
Uplink	FR1	5, ..., 100 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
		35, 45 MHz	UTRA	= 20 MHz + RFBW (*2)
			NR + UTRA	= max(2 x Bandwidth, 20 MHz) + RFBW (*2)
	FR2	50, 100, 200, 400 MHz	NR (same BW)	= 3 x RFBW (*2)
		100, 400, 800, 1600, 2000 MHz		

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth}, \text{FR}, \text{SCS}) \times \text{SCS} [\text{kHz}] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth}, \text{FR}, \text{SCS}) \times \text{SCS} [\text{kHz}] \times N_{sc}^{RB} + \text{SCS} [\text{kHz}]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth}, \text{FR}, \text{SCS}) \times \text{SCS} [\text{kHz}] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in the Section "[N_Grid_Size \(Display Only\)](#)" on page 1828,

$$N_{sc}^{RB} = 12$$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

"ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels."

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- "Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not."

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - Stoc: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR	
			Offset

3 5G NR Mode

3.8 Transmit On|Off Power

Offset Freq State	Downlink	FR1	A, B	On
			C, ... , L	Off
		FR2	A	On
			B, ... , L	Off
	Uplink		A	On
			B, ... , L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 \cdot BW_{CC}$
			C, ... , L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ... , L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC}
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ... , L	0 Hz
Integ BW	Downlink		All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1:
				$\max_{SCS} \{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \cdot BW_{GB}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \cdot BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$$N_{sc}^{RB} = 12$$

Res BW State	All	Auto
-----------------	-----	------

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode
3.8 Transmit On|Off Power

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$43.5 < f \leq 48.2$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		$52.6 < f \leq 71.0$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
			None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
		100, 400, 800, 1600, 2000 MHz	37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
			52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

3 5G NR Mode
3.8 Transmit On|Off Power

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
				All	All	-11.04 dB (= -16 + TT 4.96)

$$52.6 < f \leq 71.0$$

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

3 5G NR Mode
3.8 Transmit On|Off Power

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset Frequency Define				EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ... , L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ... , L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State			All	Auto
Res BW			All	Automatically coupled with the Res BW value under the BW menu
Video BW State			All	Auto
Video BW			All	Automatically coupled with the Video BW value under the BW menu

Offset Side		All	Both
Method	Downlink	All	Integration BW
and	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
Filter Alpha		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat B MR BS,		
			$4.2 < f \leq 6.0$,	Cat A MR BS		
		1-0	$6.0 < f \leq 7.125$	Cat B MR BS (Low Pr),	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B MR BS (Low Pr)		
				Cat A LA BS,	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B LA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A WA BS	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS,	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B MR BS,		
				Cat A MR BS (Low Pr),		
				Cat B MR BS (Low Pr)	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS,		
				Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
--------------------------	----------------------	--	--	--	--------	--------------

3 5G NR Mode
3.8 Transmit On/Off Power

	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB (= -45 + TT 1.2)
	1-O		5, ... , 100 MHz	None, $f \leq 1.0$,	All	-44 dB = (-45 + TT 1.0)
				$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$,	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 2515
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2515
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2515
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	2516	
	C, ... , L	0 Hz
Offset Side	A, B	See "Table 1 b Offset Freq and Integ BW Offset A/B" on page 2516
	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 2515

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
				A	B	A	B

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto

Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration		Offset	Preset Value	
Direction	FR	Bandwidth	Offset Freq	Offset Integ BW (MHz)

3 5G NR Mode

3.8 Transmit On|Off Power

(MHz)					
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
Uplink		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz			

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

- Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(

			$f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr) Cat A LA BS, Cat B LA BS	All All All	$BW_{\text{config}})$ dBm $-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
	1-0		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS Cat B WA BS Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr) Cat A LA BS, Cat B LA BS	All All All All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
FR2	2-0		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS, Cat B WA BS Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr) Cat A LA BS, Cat B LA BS	All All All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-17.3 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-17.3 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
			$43.5 < f \leq 48.2$	Cat A WA BS, Cat B WA BS Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All All All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}})$ dBm $-17.1 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

3 5G NR Mode
3.8 Transmit On|Off Power

52.6 < f ≤ 71.0 (**)	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)
	FR2	2-C	100, ..., 400 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)

FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	8.2)
					-25.7 dB = (-28 + TT 2.3)
					-23.4 dB = (-26 + TT 2.6)
		100, 400, 800, 1600, 2000 (**) MHz	$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
					-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

3 5G NR Mode
3.8 Transmit On|Off Power

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 2523
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 2523
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2523

3 5G NR Mode
3.8 Transmit On|Off Power

Integ BW	D, ... , L	0 Hz
	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2523
Offset Side	D, ... , L	Same value as Offset C
	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 2523

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			$5 \leq \text{Wgap} < 10$	✓		(+)	Norm	Norm	Norm
			$10 \leq \text{Wgap}$	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth \leq Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth \leq Wgap".

(++) Same as the rows of "Wgap < 5", " $5 \leq \text{Wgap} < 10$ ", and " $5 \leq \text{Wgap}$ ".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	$= 0.5 \times \text{Bandwidth}$	$\max\{N_{RB}^{SCS}(\text{BW}_{CC, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration		Offset	Preset Value	
	FR	Adjust Range(GHz)			UE Power Class
Fail Mask			All	Abs AND Rel	
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-50 dBm	
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW	
Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.8 Transmit On|Off Power

D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: f ≤ 1.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			1	1			
D	✓	40			100			1	1			
E-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category B.

BS Category = Cat B WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			1	1			
D	✓	40			100			1	1			
E-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands $> 3.0 \text{ GHz}$) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

3 5G NR Mode

3.8 Transmit On|Off Power

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

B	✓		5.05		10.05		0.1		1
C	✓		10.5		40		0.1		1
D	✓		40		100		0.1		1
E-L			100		500		0.1		1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1

3 5G NR Mode
3.8 Transmit On|Off Power

D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			0.1		1	
D	✓		40			100			0.1		1	
E-L			100			500			0.1		1	
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
--------	---------	------------------	--	--	-----------------	--	--	-----------	---------

A	✓		0.05		5.05		0.051	2				
B	✓		5.05		10.05		0.1	1				
C	✓		10.5		40		0.1	1				
D	✓		40		100		0.1	1				
E-L			100		500		0.1	1				
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			1		1	
D	✓		40			100			1		1	
E-L			100			500			1		1	
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓		0.05		5.05			0.051	2
B	✓		5.05		10.05			0.1	1
C	✓		10.5		40			1	1

3 5G NR Mode
3.8 Transmit On/Off Power

D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		1	1
D		200		500		1	1
E-L		200		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode
3.8 Transmit On|Off Power

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled

B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (3 GHz < NR bands \leq 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (4.2 GHz < NR bands \leq 6 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			50.05			0.051			2
B	✓	50.05			100.05			0.1			1
C	✓	100.05			200			0.1			1
D		200			500			0.1			1
E-L		200			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (6.0 GHz < NR bands \leq 7.125 GHz),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.8 Transmit On|Off Power

A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm (NR bands ≤ 3.0 GHz).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB”

in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”.
Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			50.05			0.051		2	
B	✓	50.05			100.05			0.1		1	
C	✓	100.5			200			0.1		1	
D		200			500			0.1		1	
E-L		200			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125$ GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

3 5G NR Mode

3.8 Transmit On/Off Power

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-19.2 dB” is typo and is supposed to be “-19.2 dBm”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			50.05			0.051			2	
B	✓	50.05			100.05			0.1			1	
C	✓	100.5			200			0.1			1	
D		200			500			0.1			1	
E-L		200			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and 24.25 < f ≤ 29.5 GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
			(*)			(*)						
A		✓	0.5			x + 0.5			1	1		
B		✓	x + 0.5			x + 1500			1	1		
C-L			100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: 37.0 < f ≤ 43.5 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)		(*)			
A	✓	0.5		x + 0.5		1	1
B	✓	x + 0.5		x + 1500		1	1
C-L		100		500		1	1

Offset	Enabled	Limit Abs	Limit Rel	FailMask	Limit Abs2	Fail
--------	---------	-----------	-----------	----------	------------	------

3 5G NR Mode
3.8 Transmit On/Off Power

												Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$x + 1500$			1	1		
C-L		100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$y + 0.5$			1	1		
C	✓	$y + 5$			$y + 1500$			5	2		
D-L		100			500			5	2		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

3 5G NR Mode
3.8 Transmit On/Off Power

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs Carrier Allocation $BW_{\text{contiguous}}$

1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{Channel,CA}$: Aggregated BW
> 1	Non-contiguous	$BW_{Channel,block[n]}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 * RBW(A) = 0.01 * BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 * RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

3 5G NR Mode

3.8 Transmit On|Off Power

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn’t miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz	Adjust Range: $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, and $6.0 < f \leq 7.125$ GHz
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled

B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 \cdot BW_{\text{Channel,CA}}$$

$$- y = 2 \cdot BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	-1.79 dBm = -5 + TT 3.21	-1.54 dBm = -5 + TT 3.46	TBD	TBD
B_{Lim}	-9.79 dBm = -13 + TT 3.21	-9.54 dBm = -13 + TT 3.46	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW ≤ 400 MHz)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off

4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS

3 5G NR Mode

3.8 Transmit On|Off Power

1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)
1	1-O					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz	Span/2	-	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Start Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)

3 5G NR Mode
3.8 Transmit On|Off Power

4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category							
		All “Cat A” BS				All “Cat B” BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = “All Cat A BS”: Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
BS Category = “All Cat B BS”: Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to “27 GHz”)

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the “Apply Preset” button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

- Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off

3 5G NR Mode
3.8 Transmit On|Off Power

5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

(*) Range “Enabled” state					Note:
#	Adjust Limit Mask for Freq Range (GHz)				
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	
1	✓	✓	✓	✓	
2	✓	✓	✓	✓	
3	✓	✓	✓	✓	
4	✓	✓	✓	✓	
5					Never “enabled” by the “Apply Preset” button A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1, TS38.521-1)
6		✓			
7			✓		
8				✓	
9					Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~					

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005	6 GHz			1 MHz	1	5 MHz	Gaussian

3 5G NR Mode
3.8 Transmit On|Off Power

		GHz						
5	✓	6 GHz	12.75 GHz		1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz		1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz		1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz		1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)		(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no	(no

					preset)	preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no preset)
8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the “RB Alloc Preset” selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters
- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

3 5G NR Mode

3.8 Transmit On|Off Power

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

– Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2

3 5G NR Mode

3.8 Transmit On|Off Power

v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for $\pi/2$ BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),
 - Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for $\pi/2$ BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for $\pi/2$ BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399

- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0 subframe	2 subframes
	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0.9286	1.250	n/a
	FR1/FR2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

3 5G NR Mode
3.8 Transmit On|Off Power

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2-m	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2-m	
			SRS	0.0714	10.0	2-m	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2-m	10.0	2-m	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2-m (TBD)	10.0	2-m	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

3 5G NR Mode

3.8 Transmit On|Off Power

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu s$ RMS averaging window for making the OFF power. $N = SCS/15$, where SCS is in kHz.
- Uplink: Slot length = $2 \cdot \mu$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,	-82.5 dBm / MHz = -85 + TT 2.5

3 5G NR Mode

3.8 Transmit On|Off Power

		1-0	6.0 < f ≤ 7.125 GHz	
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
FR2		2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration				Preset Value
	FR	UL ChannelType	Bandwidth	Adjust Range (GHz)	
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	-48.3 dBm = -50 + TT 1.7 -48.2 dBm = -50 + TT 1.8
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	± 10.5 dB = $\pm(9 + TT 1.5)$ ± 10.8 dB = $\pm(9 + TT 1.8)$
			40 MHz < BW ≤ 100 MHz	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	± 10.7 dB = $\pm(9 + TT 1.7)$ ± 10.8 dB = $\pm(9 + TT 1.8)$
Parameter	FR2	PUSCH	All FR2 BW		± 14 dB (TT not yet)
	Preset Configuration				Preset Value
	FR	UL Channel Type	Bandwidth	SCS	
	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm
				30 kHz	-4.2 dBm
			10 MHz	15 kHz	0.4 dBm
				30 kHz	-0.8 dBm
				60 kHz	-1.2 dBm
			15 MHz	15 kHz	1.4 dBm
				30 kHz	1.2 dBm
				60 kHz	1.0 dBm

3 5G NR Mode

3.8 Transmit On|Off Power

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

3 5G NR Mode

3.8 Transmit On|Off Power

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in **"CHP Power Integration Bandwidth"** on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.8.8.5 Meas Time

Access to the menu for setting up the parameters related to the measurement time.

Burst Time

Sets Burst Time to measure. This parameter is effective when Downlink and Auto Timing Adjust is set to Off.

Remote Command	<code>[:SENSe]:PVTIme:BURSt:WIDTh <real></code> <code>[:SENSe]:PVTIme:BURSt:WIDTh?</code>
Example	<code>:PVT:BURS:WIDT 10ms</code> <code>:PVT:BURS:WIDT?</code>
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	500 us
State Saved	Yes
Min/Max	1 us/10.0 ms

Burst Repetition Period

Determines the burst repetition period. For correct measurement, the value must be set to the repetition period of the burst and less than or equal to Meas Interval time.

Remote Command	<code>[:SENSe]:PVTIme:BURSt:RPERiod <time></code> <code>[:SENSe]:PVTIme:BURSt:RPERiod?</code>
Example	<code>:PVT:BURS:RPER 7ms</code> <code>:PVT:BURS:RPER?</code>
Notes	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard
Couplings	This parameter cannot be smaller than Burst Time When entering the value smaller than Burst Time, coupled to the value of Burst Time
Preset	5 ms
State Saved	Yes
Min	100 us
Max	10 ms

UL Off Power Length

It is used as uplink off power measurement period.

Remote Command	<code>[:SENSe]:PVTIme:ULINK:POFF:WIDTh <real></code> <code>[:SENSe]:PVTIme:ULINK:POFF:WIDTh?</code>
----------------	--

Example	<code>:PVT:ULIN:POFF:WIDT 5 ms</code> <code>:PVT:ULIN:POFF:WIDT?</code>
Dependencies	This control appears only when Radio Direction is Uplink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	1.0 ms
State Saved	Yes
Min	1 us
Max	0.01 s
Backwards Compatibility SCPI	<code>[:SENSe]:PVTtime:ULINK:OFFPower:WIDTh</code>

DL Meas Offset

This control is part of the “Predefined Params” section of **Meas Standard**. It lets you set the Downlink Meas Offset to be used for **Transmit On/Off Power** measurements.

NOTE

This control only appears in the **Transmit On/Off Power** measurement.

Remote Command	<code>[:SENSe]:PVTtime:DLINK:MOFFset <integer></code> <code>[:SENSe]:PVTtime:DLINK:MOFFset?</code>
Example	<code>:PVT:DLIN:MOFF 1</code> <code>:PVT:DLIN:MOFF?</code>
Dependencies	This control appears only when Radio Direction is Downlink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	0
State Saved	Yes
Min	-9
Max	9

UL Meas Offset

It lets you set the Uplink Meas Offset to be used for Transmit On/Off Power measurements.

Remote Command	<code>[:SENSe]:PVTtime:ULINK:MOFFset <integer></code> <code>[:SENSe]:PVTtime:ULINK:MOFFset?</code>
Example	<code>:PVT:ULINK:MOFF 1</code>

	:PVT:ULINK:MOFF?
Dependencies	This control appears only when Radio Direction is Uplink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	-2
State Saved	Yes
Min	Depends on the combination of values of Frequency Range and SCS after executing Apply Preset (to All CCs).
Max	Depends on the combination of values of Frequency Range and SCS after executing Apply Preset (to All CCs).

DL Meas Interval

This control is part of the “Predefined Params” section of **Meas Standard**. It lets you set the desired subframe count for downlink analysis in **Transmit On/Off Power** measurements.

NOTE

This control only appears in the **Transmit On/Off Power** measurement.

Remote Command	[:SENSe]:PVTime:DLINK:MINTerval <integer> [:SENSe]:PVTime:DLINK:MINTerval?
Example	:PVT:DLIN:MINT 5 :PVT:DLIN:MINT?
Dependencies	This control appears only when Radio Direction is Downlink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	5
State Saved	Yes
Min	1
Max	10

UL Meas Interval

This control is part of the “Predefined Params” section of **Meas Standard**. It lets you set the desired slot count for uplink analysis in **Transmit On/Off Power** measurements.

NOTE

This control only appears in the **Transmit On/Off Power** measurement.

Remote Command	<code>[:SENSe]:PVTTime:ULINK:MINTerval <integer></code> <code>[:SENSe]:PVTTime:ULINK:MINTerval?</code>
Example	<code>:PVT:ULIN:MINT 5</code> <code>:PVT:ULIN:MINT?</code>
Dependencies	This control appears only when Radio Direction is Uplink
Couplings	This value will be preset when the action “Apply Preset (to All CCs)” is executed. For the preset value, see Transmit On Off Power in Values for Meas Standard.
Preset	6
State Saved	Yes
Min	1
Max	Depends on the combination of values of Frequency Range and SCS after executing Apply Preset (to All CCs).


Meas Range

Enables you to select the measurement range from all bursts or specific burst within the Meas Interval. If there are multiple bursts within the Meas Interval, the burst number in the Metrics window are determined as follows and returned values of `:MEAS|READ|FETCh:PVT1` are the values at that burst number. The burst number in the Metrics window can be obtained by `:MEAS|READ|FETCh:PVT13`.

- All Bursts: the burst number determined with the following criteria is displayed in the Metrics window.
 - On Power and Burst Width:
 - Downlink: The same burst number as Off Power.
 - Uplink with UL On Pwr Limit Test = On: The burst number that contains the maximum deviation from the UL On Pwr Reference value among all detected bursts
 - Uplink with UL On Pwr Limit Test = Off: The burst number right before or after the Off Power period that contains the maximum RMS Off Power value among all detected Off Power Before/After periods
 - Off Power (Downlink): The burst number right before the Off Power period that contains the maximum Off Power peak value among all detected Off Power periods
 - Off Power After (Uplink): The burst number right before the Off Power After period whose measured RMS Off Power value is the maximum among all detected Off Power After periods

- Off Power Before (Uplink only): The burst number right after the Off Power Before period whose measured RMS Off Power value is the maximum among all detected Off Power Before periods
- Ramp Up / Transient Ramp Up: The burst number whose measured ramp up period is the worst one among all detected bursts
- Ramp Down / Transient Ramp Down: The burst number whose measured ramp down period is the worst one among all detected bursts
- Specific Burst: the burst number specified by the Specific Burst Number is displayed in the Metrics window.

Note that when in downlink, the results of Ramp Down / Transient Ramp Down of Specific Burst Number and Ramp Up / Transient Ramp Up of Specific Burst Number + 1 are displayed. When in uplink, the results of Specific Burst Number itself are displayed.

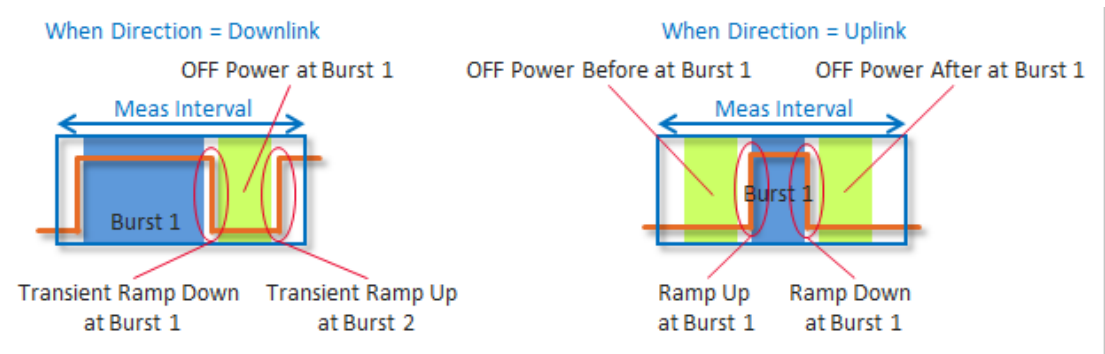

Remote Command	<code>:CALCulate:PVTime:MRANge ALL SPECific</code> <code>:CALCulate:PVTime:MRANge?</code>
Example	<code>:CALC:PVT:MRAN ALL</code> <code>:CALC:PVT:MRAN?</code>
Preset	SPECific
State Saved	Yes
Range	All Bursts Specific Burst

Specific Burst Number

Specifies the burst to be analyzed.

Remote Command	<code>:CALCulate:PVTime:SBNumber <integer></code> <code>:CALCulate:PVTime:SBNumber?</code>
Example	<code>:CALC:PVT:SBN 8</code> <code>:CALC:PVT:SBN?</code>

Dependencies	This control is grayed out when Meas Range is All Bursts
Preset	1
State Saved	Yes
Min	1
Max	10

3.8.8.6 Limits

Accesses the setup menu for the measurement ramp up, ramp down time and threshold for off power.

Please note, whether the pass/fail shown in measurement bar (at upper-left corner of screen) will be pass or fail is just determined by the threshold listed in Limits menu, they are Max Ramp Up Time, Max Ramp Down Time, Downlink Off Power and Uplink Off Power. If and only if ramp up time, ramp down time and off power (downlink or uplink) measured are all less than Max Ramp Up Time, Max Ramp Down Time and Off Power (downlink or uplink) separately, the Pass/Fail flag is set to pass (green), otherwise Pass/Fail flag is set to fail (red). The limit mask shown on screen is just to indicate which part is active burst and which part is inactive burst, the mask is nothing to do with the Pass/Fail criteria.

Max Ramp Up Time

It is used as threshold which can judge whether the real measured ramp up time can be passed or not. If real measured ramp up time exceeds Max Ramp Up Time, then ramp up time measurement fails, otherwise, it passes. This is used to determine the end position of the Transmitter OFF period when Auto Timing Adjust is On.

Remote Command	<code>[:SENSe]:PVTtime:LIMit:RAMP:URTime <time></code> <code>[:SENSe]:PVTtime:LIMit:RAMP:URTime?</code>
Example	<code>:PVT:LIM:RAMP:URT 10.0e-6</code> <code>:PVT:LIM:RAMP:URT?</code>
Dependencies	This control is available when Direction is Downlink and Auto Timing Adjust is On or when Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On Off Power for the preset value in Values for Meas Standard.
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Max Ramp Down Time

It is used as threshold which can judge whether the real measured ramp down time can be passed or not. If real measured ramp down time exceeds Max Ramp Down Time, then ramp down time measurement fails, otherwise, it passes. This is used to determine the start position of the Transmitter OFF period when Auto Timing Adjust is On.

Remote Command	<code>[:SENSe]:PVTime:LIMit:RAMP:DRTIME <time></code> <code>[:SENSe]:PVTime:LIMit:RAMP:DRTIME?</code>
Example	<code>:PVT:LIM:RAMP:DRT 10.0e-6</code> <code>:PVT:LIM:RAMP:DRT?</code>
Dependencies	This control is available when Direction is Downlink and Auto Timing Adjust is On or when Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On Off Power for the preset value in Values for Meas Standard.
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Downlink Transient Period

This parameter sets the threshold for downlink transient period which is calculated from expected burst boundary to the point of the specified OFF power limit. The Transmitter OFF period is determined by this parameter when Auto Timing Adjust is Off.

If the measured ramp up or ramp down transient period of downlink signal exceeds the threshold, the ramp up or ramp down transient period measurements fail.

Remote Command	<code>[:SENSe]:PVTime:LIMit:TRANSient:DLINK <time></code> <code>[:SENSe]:PVTime:LIMit:TRANSient:DLINK?</code>
Example	<code>:PVT:LIM:TRAN:DLIN 10.0e-6</code> <code>:PVT:LIM:TRAN:DLIN?</code>
Dependencies	This control appears only when the Radio Direction is Downlink and available when Auto Timing Adjust is Off
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Downlink Off Power

It is used as threshold in downlink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Downlink Off Power, then off power measurement fails, otherwise, it passes. Note that the unit of this parameter is dBm/MHz.

Remote Command	<code>[:SENSe]:PVTTime:LIMit:POFF:DLINk <real></code> <code>[:SENSe]:PVTTime:LIMit:POFF:DLINk?</code>
Example	<code>:PVT:LIM:POFF:DLIN -83.0</code> <code>:PVT:LIM:POFF:DLIN?</code>
Dependencies	This control appears only when the Radio Direction is Downlink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	-83.00
State Saved	Yes
Min/Max	-150.00/0.00

Uplink Off Power

It is used as threshold in uplink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Uplink Off Power, then off power measurement fails, otherwise, it passes. Note that the unit of this parameter is dBm.

Remote Command	<code>[:SENSe]:PVTTime:LIMit:POFF:ULINk <real></code> <code>[:SENSe]:PVTTime:LIMit:POFF:ULINk?</code>
Example	<code>:PVT:LIM:POFF:ULIN -50.0</code> <code>:PVT:LIM:POFF:ULIN?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	-48.3
State Saved	Yes
Min/Max	-150.00 dBm/0.00 dBm

Uplink On Power Reference

This is used as an Expected Transmission ON Measured power reference in uplink, which judges whether the real measured on power is passed or not when "**Uplink On Power Limit Test**" on page 2584 is set to on. If the real measured on power is within

the Uplink On Power Reference +/- Uplink On Power Tolerance, then the on power measurement passes, otherwise, it fails.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINK:REference <real></code> <code>[:SENSe]:PVTIme:LIMit:PON:ULINK:REference?</code>
Example	<code>:PVT:LIM:PON:ULIN:REF 9.8</code> <code>:PVT:LIM:PON:ULIN:REF?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	9.8
State Saved	Yes
Min	-150 dBm
Max	150 dBm

Uplink On Power Tolerance

This is used as the pass/fail margin from the UL On Power Reference value for the UL On Power measurement limit test when "Uplink On Power Limit Test" on page 2584 is set to on.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINK:TOLerance <real></code> <code>[:SENSe]:PVTIme:LIMit:PON:ULINK:TOLerance?</code>
Example	<code>:PVT:LIM:PON:ULIN:TOL 10.7</code> <code>:PVT:LIM:PON:ULIN:TOL?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Couplings	This value will be preset when the action "Apply Preset (to All CCs)" is executed. See Transmit On/Off Power for the preset value in Values for Meas Standard.
Preset	10.70 dB !when FR1 100MHz with SCS 30 kHz
State Saved	Yes
Min	0 dB
Max	100 dB

Uplink On Power Limit Test

When it is set to on, the measurement judges whether the real measured on power is passed or not. If the real measured on power is within Uplink On Power Reference +/- Uplink On Power Tolerance, the on power measurement passes, otherwise, it fails.

Remote Command	<code>[:SENSe]:PVTIme:LIMit:PON:ULINK:STATe OFF ON 0 1</code>
----------------	--

	<code>[:SENSe]:PVTime:LIMit:PON:ULINK:STATe?</code>
Example	<code>:PVT:LIM:PON:ULIN:STAT 1</code> <code>:PVT:LIM:PON:ULIN:STAT?</code>
Dependencies	This control appears only when the Radio Direction is Uplink
Preset	OFF
State Saved	Yes

3.8.8.7 Threshold

Accesses the setup menu to set the thresholds used to find ramp up and ramp down part in burst signal.

These parameters are used when

- Direction is Downlink and Auto Timing Adjust is On
- Direction is Uplink

Ramp Up Start Level

Specifies the relative power level to active burst average power level at which the ramp-up starts.

Remote Command	<code>[:SENSe]:PVTime:THReshold:UP:START <rel_amp1></code> <code>[:SENSe]:PVTime:THReshold:UP:START?</code>
Example	<code>:PVT:THR:UP:STAR -50.0</code> <code>:PVT:THR:UP:STAR?</code>
Preset	-20.000 dB
State Saved	Yes
Min/Max	-120.000 dB/0.000 dB

Ramp Up End Level

Specifies the relative power level to active slots average power level at which the ramp-up ends.

Remote Command	<code>[:SENSe]:PVTime:THReshold:UP:END <rel_amp1></code> <code>[:SENSe]:PVTime:THReshold:UP:END?</code>
Example	<code>:PVT:THR:UP:END -50.0</code> <code>:PVT:THR:UP:END?</code>

Preset	-0.915 dB
State Saved	Yes
Min/Max	-120.000 dB/0.000 dB

Ramp Down Start Level

Specifies the relative power level to active slots average power level at which the ramp-down starts.

Remote Command	<code>[:SENSe]:PVTTime:THReshold:DOWN:STARt <rel_ampl></code> <code>[:SENSe]:PVTTime:THReshold:DOWN:STARt?</code>
Example	<code>:PVT:THR:DOWN:STAR -50.0</code> <code>:PVT:THR:DOWN:STAR?</code>
Preset	-0.915 dB
State Saved	Yes
Min/Max	-120.000 dB/0.000 dB

Ramp Down End Level

Specifies the relative power level to active slots average power level at which the ramp-down ends.

Remote Command	<code>[:SENSe]:PVTTime:THReshold:DOWN:END <rel_ampl></code> <code>[:SENSe]:PVTTime:THReshold:DOWN:END?</code>
Example	<code>:PVT:THR:DOWN:END -50.0</code> <code>:PVT:THR:DOWN:END?</code>
Preset	-20.000 dB
State Saved	Yes
Min/Max	-120.000 dB/0.000 dB

3.8.8.8 Advanced

The Advanced tab contains controls for setting advanced functions of the analyzer.

Noise Floor Extension

Turns on the **Noise Floor Extension** function. When this function is On, the expected noise power of the analyzer (derived from a factory calibration) is subtracted from

the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

When Noise Floor Extension is on, the Off power results (signal plus analyzer noise) will be compensated by subtracting the estimated noise power, leaving just the signal power. For downlink, the 70us RMS Off power trace will be compensated, and for uplink, both Off Power Before and Off Power After results will be compensated.

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code> <code>:CORR:NOIS:FLO?</code>
Dependencies	This control only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command will be accepted without error (but will have no effect)
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset. Turned off by Restore Mode Defaults
State Saved	No

Noise Correction

Sets the noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the analyzer. Off turns these corrections off.

Remote Command	<code>[:SENSe]:PVTtime:CORRection:NOISe[:AUTO] OFF ON 0 1</code> <code>[:SENSe]:PVTtime:CORRection:NOISe[:AUTO]?</code>
Example	<code>:PVT:CORR:NOIS OFF</code> <code>:PVT:CORR:NOIS?</code>
Preset	0
State Saved	Yes
Range	On Off

Ramp Time Length

Indicates the searching window length in which the start of ramp up or the end of ramp down is searched. If it is set shorter than actual ramp time, the ramp may be lost. The start of the searching window is derived from the external trigger when auto timing adjust is off, and is at the actual burst boundary when auto timing adjust is on.

Remote Command	<code>[:SENSe]:PVTime:RAMP:SEARch:LENGth <time></code> <code>[:SENSe]:PVTime:RAMP:SEARch:LENGth?</code>
Example	<code>:PVT:RAMP:SEAR:LENG 50us</code> <code>:PVT:RAMP:SEAR:LENG?</code>
Preset	10.0 us
State Saved	Yes
Min/Max	1.0 us/100.0 us

Off Power Meas Rules

Indicates which way to calculate 70us RMS Off Power over the entire OFF period. When it is "Speed," 70 us averaged power is calculated in 35us granularity during OFF period. When it is "Accuracy," the 70us RMS Off Power is calculated for each sample points during OFF period.

Remote Command	<code>[:SENSe]:PVTime:POFF:MEAS:RULEs SPEed ACCuracy</code> <code>[:SENSe]:PVTime:POFF:MEAS:RULEs?</code>
Example	<code>:PVT:POFF:MEAS:RUL SPE</code> <code>:PVT:POFF:MEAS:RUL?</code>
Preset	SPEed
State Saved	Yes
Range	Speed Accuracy

IF Gain

Sets ranging in the digital IF when acquiring an I/Q time record.

See ["More Information about IF Gain" on page 2589](#).

This function is not affected by RF Input Range attenuation.

The IF Gain control is used to set the IF Gain function to Auto, Low Gain or High Gain

On sets the high gain option, which allows for better noise level measurements.

Off sets low gain when measuring large signals.

When this parameter is changed manually from front panel, IF Gain Auto will become Man.

Remote Command	<code>[:SENSe]:PVTime:IF:GAIN[:STATe] ON OFF 1 0</code> <code>[:SENSe]:PVTime:IF:GAIN[:STATe]?</code> <code>[:SENSe]:PVTime:IF:GAIN:AUTO[:STATe] ON OFF 1 0</code>
----------------	---

	<code>[:SENSe]:PVT:ime:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:PVT:IF:GAIN ON</code> <code>:PVT:IF:GAIN?</code> <code>:PVT:IF:GAIN:AUTO ON</code> <code>:PVT:IF:GAIN:AUTO?</code>
Notes	where ON = high gain OFF = low gain
Dependencies	This control does not appear in VXT or UXM
Couplings	When either the auto attenuation is active (for example, with an electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed using the following rule The Auto selection sets IF Gain On under any of the following conditions: the input attenuator is set to 0 dB the preamp is turned on, the Max Mixer Level is –20 dBm or lower For other settings, Auto sets IF Gain to Off
Preset	OFF OFF
State Saved	Yes
Range	Low Gain High Gain

More Information about IF Gain

To take full advantage of the RF dynamic range of the analyzer, you can manually turn on or turn off a switched digital IF amplifier. When it is turned on, the signal will get approximately 10 dB of gain.

Setting IF Gain to Man and selecting High Gain will turn on the digital IF amplifier and get an extra 10 dB gain.

Setting IF Gain to Auto will activate the Auto rules for IF Gain.

These settings affect sensitivity and IF overloads.

3.8.8.9 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, ["Global Center Freq" on page 3408](#)) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "Restore Defaults" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBa1:FREQuency:CENTer[:STATe] 1 0 ON OFF :GLOBa1:FREQuency:CENTer[:STATe]?

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF :INSTrument:COUPle:FREQuency:BAND:EXTend?
Example	:INST:COUP:FREQ:BAND:EXT 1 :INST:COUP:FREQ:BAND:EXT?
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

3.8.9 Sweep

The Sweep key contains controls which allow you to control the sweep and measurement functions of the analyzer, such as the sweep or measurement time and whether in Single sweep/measure or Continuous sweep/measure mode.

3.8.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See **"More Information" on page 2592**

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 3413](#) for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See ["More Information" on page 2594](#)

Remote `:INITiate[:IMMEDIATE]`

Command	:INITiate:REStart
Example	:INIT:IMM :INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared The SWEEPING bit is set The MEASURING bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single

sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is k . This k is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This k is used for comparisons with N , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, K , shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N . The displayed value K changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSe</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>

Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUESTionable register bit 9 (INTEGRity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

3.8.9.2 X Scale

This tab accesses controls that enable you to set the horizontal scale parameters.

Ref Value

Enables you to set the display X reference value.

Remote Command	<p>:DISPlay:PVTime:WINDow[1] 2 3:TRACe:X[:SCALe]:RLEVel <time></p> <p>:DISPlay:PVTime:WINDow[1] 2 3:TRACe:X[:SCALe]:RLEVel?</p> <p>Window numbers are as follows:</p> <p>Burst: 1</p> <p>Rise: 2</p> <p>Fall: 3</p>
Example	<p>:DISP:PVT:WIND:TRACE:X:RLEV 1s</p> <p>1-Burst for Transmit On Off Power</p> <p>:DISP:PVT:WIND:TRACE:X:RLEV?</p> <p>1-Burst for Transmit On Off Power</p> <p>:DISP:PVT:WIND2:TRAC:X:RLEV 1s</p> <p>2-Rise for Transmit On Off Power</p> <p>:DISP:PVT:WIND3:TRAC:X:RLEV 1s</p> <p>3-Fall for Transmit On Off Power</p>
Couplings	If X Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off
Preset	Automatically calculated
State Saved	Yes
Min/Max	-10.0 s/10.0s ! 1-Burst

	-1.0s/1.0s ! 2-Rise, 3-Fall
Annotation	<value> s bottom left of graph

Scale/Div

Enables you to set the display X scale/division value.

Remote Command	<pre>:DISPlay:PVTtime:WINDow[1] 2 3:TRACe:X[:SCALe]:PDIVision <time></pre> <pre>:DISPlay:PVTtime:WINDow[1] 2 3:TRACe:X[:SCALe]:PDIVision?</pre> <p>Window numbers are as follows:</p> <p>Burst: 1</p> <p>Rise: 2</p> <p>Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRACE:X:PDIV 1ms</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND:TRACE:X:PDIV?</pre> <p>1-Burst for Transmit On Off Power</p> <pre>:DISP:PVT:WIND2:TRAC:X:PDIV 1ms</pre> <p>2-Rise for Transmit On Off Power</p> <pre>:DISP:PVT:WIND3:TRAC:X:PDIV 1ms</pre> <p>3-Fall for Transmit On Off Power</p>
Couplings	If X Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off
Preset	Automatically calculated
State Saved	Yes
Min/Max	1.00 ns /1.0 s

Ref Position

Sets the reference position for the X axis to Left, Center or Right.

Remote Command	<pre>:DISPlay:PVTtime:WINDow[1] 2 3:TRACe:X[:SCALe]:RPOSition LEFT CENTER RIGHT</pre> <pre>:DISPlay:PVTtime:WINDow[1] 2 3:TRACe:X[:SCALe]:RPOSition?</pre> <p>Window numbers are as follows:</p> <p>Burst: 1</p> <p>Rise: 2</p> <p>Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRACE:X:RPOS LEFT</pre>

3 5G NR Mode

3.8 Transmit On|Off Power

	1-Burst for Transmit On Off Power :DISP:PVT:WIND:TRAC:X:RPOS? 1-Burst for Transmit On Off Power :DISP:PVT:WIND2:TRAC:X:RPOS LEFT 2-Rise for Transmit On Off Power :DISP:PVT:WIND3:TRAC:X:RPOS RIGHT 3-Fall for Transmit On Off Power
Preset	LEFT
State Saved	Yes
Range	Left Center Right

Auto Scaling

Toggles the scale coupling function between On and Off.

Remote Command	:DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle 0 1 OFF ON :DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle? Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3
Example	:DISP:PVT:WIND:TRAC:X:COUP OFF 1-Burst for Transmit On Off Power :DISP:PVT:WIND:TRAC:X:COUP? 1-Burst for Transmit On Off Power :DISP:PVT:WIND2:TRAC:X:COUP OFF 2-Rise for Transmit On Off Power :DISP:PVT:WIND3:TRAC:X:COUP ON 3-Fall for Transmit On Off Power
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off
Preset	ON
State Saved	Yes

3.8.10 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

3.8.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	<div>For the Swept SA measurement:<ul style="list-style-type: none">– In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View– When you turn on Image Suppress, Update turns off for all traces except the selected trace</div> <div>For the ACP measurement, when Meas Method is RBW, FAST or FPOwer, Select Trace is disabled</div>
Preset	Trace 1
State Saved	Yes

3.8.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "[View/Blank](#)" on page 3053 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

Allows you to select the type of trace you want to use for the current measurement. There are four trace Types: Clear/Write, Trace Average, Max Hold and Min Hold.

Besides the **Trace Type**, the **View/Blank** state must be set to **Active** (**Update On**, **Display On**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**. See also the **View/Blank** menu description.

Remote Command	<code>:TRACe[1] 2 3:PVTIme:TYPE WRITe AVERAge MAXHold MINHold</code> <code>:TRACe[1] 2 3:PVTIme:TYPE?</code>
Example	<code>:TRAC:PVT:TYPE WRIT</code> <code>:TRAC:PVT:TYPE?</code>
Notes	WRITe = Clear Write. In Clear/Write type each trace update replaces the old data in the trace with new data AVERAge = Average. In Trace Average type the instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data MAXHold = Maximum Hold. In Max Hold type the instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data MINHold = Minimum Hold. In Min Hold type the instrument maintains and displays a min hold trace, which represents the minimum data value on a point-by-point basis of the new trace data and previous trace data
Dependencies	When the backwards Compatibility SCPI command, <code>:DISPlay:PVTIme:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]</code> is set to On, this parameter for Trace 2 is changed to MaxHold. Conversely, set to Off, the parameter is not changed When the backwards Compatibility SCPI command, <code>:DISPlay:PVTIme:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]</code> is set to On, this parameter for Trace 3 is changed to MinHold. Conversely, set to Off, the parameter is not changed
Preset	<code>AVERAge MAXH MINH</code>
State Saved	Yes
Range	Clear / Write Trace Average Max Hold Min Hold
Backwards Compatibility SCPI	<code>:DISPlay:PVTIme:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]</code> <code>:DISPlay:PVTIme:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]</code>

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 3048 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

View/Blank

This radio button box lets you set the state of the two trace values, Update and Display. The four choices available are:

Active	Update and Display both ON
View	Update OFF , Display ON
Blank	Update OFF , Display OFF
Background	Update ON , Display OFF
This allows a trace to be blanked and continue to update “in the background”, which was not possible in the past	

See the tables below for details on the SCPI remote commands to control these two variables.

Preset	Trace On
State Saved	Yes
Range	Trace On Blank

Trace Update State On/Off

Toggles a trace Update state between On and Off. The Off selection makes the trace inactive. This does not affect whether the trace is visible or not. To change the trace visibility, see "Trace Display State On/Off" on page 2603

Remote Command	<code>:TRACe[1] 2 3:PVTime:UPDate[:STATe] ON OFF 0 1</code> <code>:TRACe[1] 2 3:PVTime:UPDate[:STATe]?</code>
----------------	--

Example	<code>:TRAC:PVT:UPD ON</code> <code>:TRAC:PVT:UPD?</code>
Dependencies	The backwards Compatibility SCPI command, <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe: MAXHold[:STATe]</code> is set to On, this parameter for Trace2 is changed to On and vice versa The backwards Compatibility SCPI command, <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe: MINHold[:STATe]</code> is set to On, this parameter for Trace3 is changed to On and vice versa
Couplings	Whenever you set Update to On for any trace, the Display is set to On for that trace
Preset	1 0 0 (On for Trace 1; Off for 2 & 3)
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe]</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]</code>

Trace Display State On/Off

Toggles a trace Display state between On and Off. The Off selection makes the trace not visible. This does not affect whether the trace is updating or not.

Even when not visible, traces may be queried and markers may be placed on them.

Remote Command	<code>:TRACe[1] 2 3:PVTime:DISPlay[:STATe] ON OFF 0 1</code> <code>:TRACe[1] 2 3:PVTime:DISPlay[:STATe]?</code>
Example	<code>:TRAC:PVT:DISP ON</code> <code>:TRAC:PVT:DISP?</code>
Dependencies	The backwards Compatibility SCPI command, <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe]</code> is set to On, this parameter for Trace1 is changed to On and vice versa The backwards Compatibility SCPI command, <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe: MAXHold[:STATe]</code> is set to On, this parameter for Trace2 is changed to On and vice versa The backwards Compatibility SCPI command, <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe: MINHold[:STATe]</code> is set to On, this parameter for Trace3 is changed to On and vice versa
Couplings	Whenever you set Update to On for any trace, the Display is set to On for that trace
Preset	1 0 0 (On for Trace 1; Off for 2 & 3)
State Saved	Yes
Range	0 1
Backwards Compatibility SCPI	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe]</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]</code>

3.8.10.3 Math

Lets you turn on and configure Trace Math functions.

Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the ["Operand 1 / Operand 2" on page 2610](#) controls.

- See ["How trace math is processed" on page 2608](#)

Remote Command	<p>For option details, see "Trace Math Options" on page 2606</p> <p>For Swept SA Measurement (in SA Mode):</p> <pre>:CALCulate:MATH <trace_num>, PDifference PSUM LOFFset LDifference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate:MATH? <trace_num></pre> <p>where <trace_num> is any one of:</p> <pre>TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:CALCulate:<meas>:MATH <trace_num>, PDifference PSUM LOFFset LDifference OFF, <trace_num>, <trace_num>, <real>,<real></pre> <pre>:CALCulate[:<meas>]:MATH? <trace_num></pre> <p>where:</p> <p><meas> is the identifier for the current measurement, and</p> <p><trace_num> is any one of:</p> <pre>TRACe1 TRACe2 TRACe3</pre> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
Example	<pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0</pre> <p>Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre> <p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <pre>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</pre>

3 5G NR Mode

3.8 Transmit On|Off Power

	<p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: TRACE1 ... TRACE6 - Set 2 defines the “function”: PDIFference PSUM LOFFset LDIFference OFF - Set 3 is a “trace operand” (1): TRACE1 ... TRACE6 - Set 4 is a “trace operand” (2): TRACE1 ... TRACE6 - Set 5 defines the “Log Offset” (in dB) - Set 6 defines the “Log Difference Reference” (in dBm) <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if Normalize is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = ON ; and Update = ON
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p>OFF, TRACE5, TRACE6, 0, 0 OFF, TRACE6, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0 OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE4, 0, 0 OFF, TRACE4, TRACE5, 0, 0</p> <p>For all other measurements:</p> <p>OFF, TRACE2, TRACE3, 0, 0 OFF, TRACE3, TRACE1, 0, 0 OFF, TRACE1, TRACE2, 0, 0</p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

Trace Math Options

IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

The Trace Math functions are:

Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

DestinationTrace = $10 \log_{10}(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace})$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$\text{DestinationTrace} = 10 \log_{10}(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace})$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at –5 dBm, and the reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

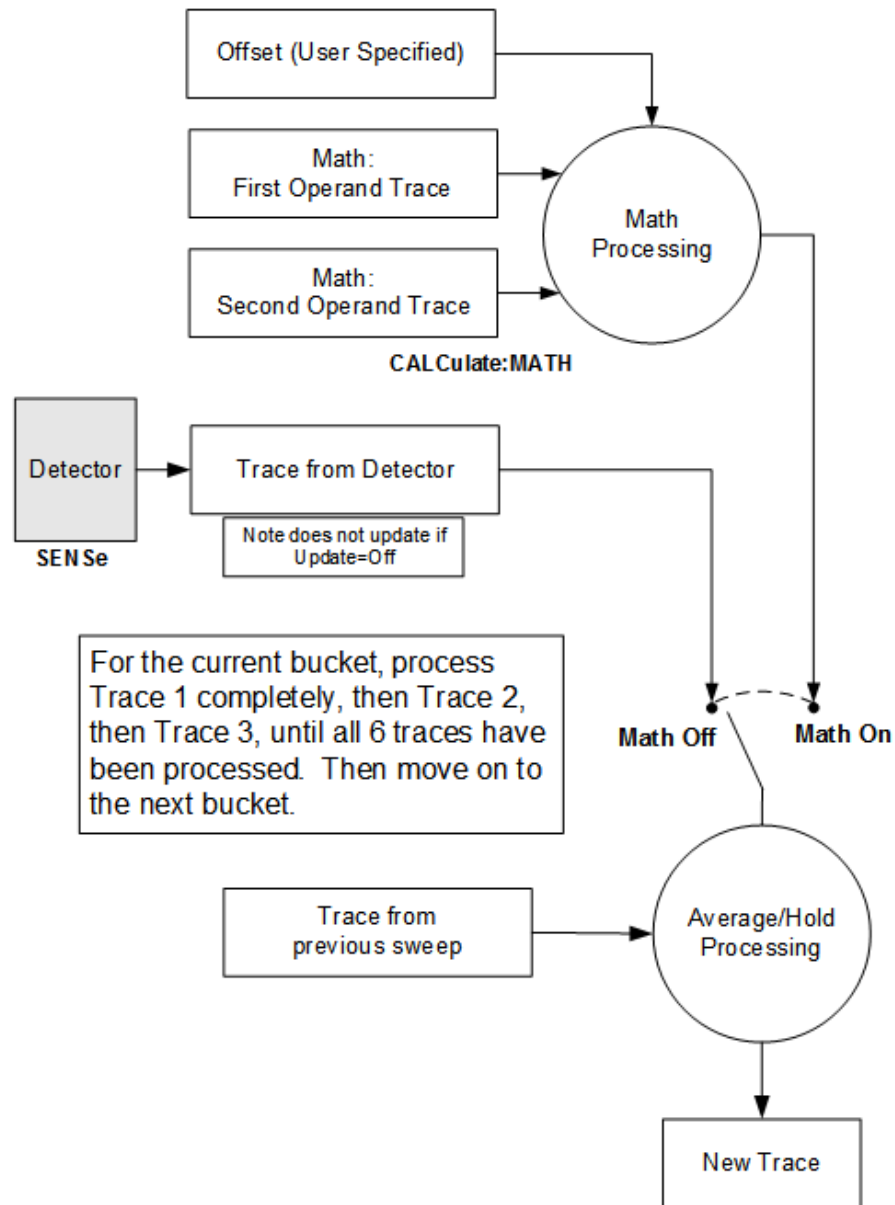

NOTE ABOUT OFFSETS: When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</pre>
Notes	See "Math Function" on page 2604 for how to specify Operands 1 and 2 using :CALCulate:MATH
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

3.8.10.4 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	1
--------	---

To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 2612** when a **"Copy" on page 2612** or **"Exchange" on page 2613** is performed

Preset	2
--------	---

Copy

Executes a Trace Copy based on the **"From Trace" on page 2612** and **"To Trace" on page 2612** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe:COPIY TRACE1 ... TRACE6, TRACE1 ... TRACE6</pre> <p>For all other measurements:</p> <pre>:TRACe:<meas>:COPIY TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</pre> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement</p>
----------------	--

Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On</p> <pre>:TRAC:COPIY TRACE1,TRACE3</pre>
---------	---

Notes	<p>The command is of the form:</p> <pre>:TRACe:COPIY <source_trace>,<dest_trace></pre>
-------	--

Dependencies	When Signal ID is on, this key is grayed-out
--------------	--

Couplings	The destination trace is put in View (Update = Off, Display = On) after the copy
-----------	---

Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>TRACE1, TRACE2</pre> <p>For all other measurements:</p> <pre>TRACe1, TRACe2</pre>
--------	--

Exchange

Executes a Trace Exchange based on the "From Trace" on page 2612 and "To Trace" on page 2612 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode): <code>:TRACE:EXCHange TRACE1 ... TRACE6, TRACE1 ... TRACE6</code></p> <p>For all other measurements: <code>:TRACe:<meas>:EXCHange TRACe1 TRACe2 TRACe3, TRACe1 TRACe2 TRACe3</code></p> <p>where <meas> is the identifier for the current measurement</p> <p>Note that the format of the <code>:TRACe<n></code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON: <code>:TRAC:EXCH TRACE1,TRACE2</code></p>
Notes	<p>The command is of the form: <code>:TRACe:EXCHange <trace_1>,<trace_2></code></p>
Couplings	Both traces are put in View (Update=Off, Display=On) after the exchange

Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:<meas>]:PRESet:ALL</code>
Example	<code>:TRAC:PRE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads **mintracevalue** into all of the points for all traces, except traces in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	<code>:TRACe[:<meas>]:CLEar:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

Multiple Traces for EIRP

Enables you to preset the following parameters.

Multi Channel Synchronous Acquisition		Off	
From Trace		Trace 1	
To Trace		Trace 2	
	Trace 1	Trace 2	Trace 3
Trace Type	Trace Average	Trace Average	Clear / Write
View/Blank	Active	View	Active
Math Function	Off	Off	Power Sum =Trace 1 + 2
Operand 1	N/A	N/A	Trace 1
Operand 2	N/A	N/A	Trace 2

Remote Command **:TRACe:<meas>:PRESet:EIRP**

Example For OBW Meas:
 :TRAC:OBW:PRES:EIRP

3.8.10.5 Advanced

Contains controls for setting advanced trace functions of the instrument.

Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command **:CALCulate:<meas>:MTRace TRACe1 | TRACe2 | TRACe3**
 :CALCulate:<meas>:MTRace?

<meas> is the identifier for the current measurement; any one of **CHPower | ACPower | OBWidth | SEMask | SPURious | PVTime**

Example Channel Power
 :CALC:CHP:MTR TRAC1
 :CALC:CHP:MTR?

Dependencies	In the ACP measurement, this control is grayed-out when Meas Method is set to RBW or FAST , and only Trace 1 is enabled
Preset	TRACe1
State Saved	No
Range	Trace 1 Trace 2 Trace 3

3.9 Power Stat CCDF Measurement

Many modern digitally-modulated signals look noise-like in the time and frequency domain, requiring statistical measurement of these signals for meaningful characterization and differentiation. The **Power Statistics Complementary Cumulative Distribution Function (CCDF)** measurement displays curves to characterize the higher-level power statistics of digitally modulated signals. The curves can be useful in determining design parameters for digital communications systems.

The Power Statistics CCDF measurement displays probability on the Y-Axis and amplitude on the X-axis, for a display of the statistical amplitude distribution of a signal. This distribution can be affected by many factors. For example, modulation filtering, modulation format, combining the multiple signals at different frequencies, number of active codes, and correlation between symbols on different codes with spread spectrum systems will all affect measurement results. These factors are all related to modulation and signal parameters. External factors such as signal compression and expansion by nonlinear components, group delay distortion from filtering, and power control within the observation interval also affect the measurement.

The power measured in power statistics CCDF curves is actually instantaneous envelope power defined by the equation:

$$P = (I^2 + Q^2) / Z_0$$

where I & Q are the quadrature voltage components of the waveform, and Z_0 is the characteristic impedance.

A CCDF curve is defined by how much time the waveform spends at or above a given power level. The percent of time the signal spends at or above the level defines the probability for that particular power level. For capturing a lower probability down to 0.0001%, this measurement is made in the single mode by pressing Single. To make the power statistics CCDF measurement, the instrument uses digital signal processing (DSP) to sample the input signal in the channel bandwidth. The Gaussian distribution line as the band-limited Gaussian noise CCDF reference line, the user-definable reference trace, and the currently measured trace can be displayed on a semi-log graph. If the currently measured trace is above the user reference trace, it means that the higher peak power levels against the average power are included in the input signal.

Power Stat CCDF Measurement Commands

The general functionality of ["CONFigure" on page 4138](#), ["INITiate" on page 4139](#), ["FETCh" on page 4139](#), ["MEASure" on page 4141](#), and ["READ" on page 4140](#) are described in the section **SCPI Operation and Results Query** in the topic

Programming the Instrument.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:PSTatistic</code>	Initiates a trigger cycle for the PST measurement, but does not return any data. You must then use <code>:FETC:PST[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings Returns the long form name of current measurement, in this case, PSTatistic
<code>:CONFigure:PSTatistic</code>	Selects PST measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 2694
<code>:CONFigure:PSTatistic:NDEFault</code>	Selects PST measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:PSTatistic?</code>	Retrieves the data specified by n
<code>:MEASure:PSTatistic[n]?</code>	Switches to PST measurement, restores default values, starts the measurement, then retrieves the data specified by n
<code>:READ:PSTatistic[n]?</code>	Starts the measurement, then retrieves the data specified by n

Measurement Results for Power Stat CCDF

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value **n**.

n	Results Returned																								
0	Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values																								
1, or not specified	Returns 11 scalar results: <table><tr><th>#</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td>Average input power</td><td>dBm</td></tr><tr><td>2</td><td>Probability at the average input power level</td><td>%</td></tr><tr><td>3</td><td>Power level that has 10 % of the power</td><td></td></tr><tr><td>4</td><td>Power level that has 1 % of the power</td><td></td></tr><tr><td>5</td><td>Power level that has 0.1 % of the power</td><td></td></tr><tr><td>6</td><td>Power level that has 0.01 % of the power</td><td></td></tr><tr><td>7</td><td>Power level that has 0.001 % of the power</td><td></td></tr></table>	#	Item	Unit, if any	1	Average input power	dBm	2	Probability at the average input power level	%	3	Power level that has 10 % of the power		4	Power level that has 1 % of the power		5	Power level that has 0.1 % of the power		6	Power level that has 0.01 % of the power		7	Power level that has 0.001 % of the power	
#	Item	Unit, if any																							
1	Average input power	dBm																							
2	Probability at the average input power level	%																							
3	Power level that has 10 % of the power																								
4	Power level that has 1 % of the power																								
5	Power level that has 0.1 % of the power																								
6	Power level that has 0.01 % of the power																								
7	Power level that has 0.001 % of the power																								

n	Results Returned		
	#	Item	Unit, if any
	8	Power level that has 0.0001 % of the power	
	9	Peak power	dB
	10	Count	
	11	Power level that has 0.00001% of the power if "Minimum Probability" on page 2623 is PP7 (0.00001 %) This value is returned only when PP7 is selected	
2		Returns a series of 5001 floating point numbers (in percent) that represent the current measured power stat trace. This is the probability at particular power levels (average power), in the following order: 1. Probability at 0.0 dB power 2. Probability at 0.01 dB power 3. Probability at 0.02 dB power ... 5000. Probability at 49.9 dB power 5001. Probability at 50.0 dB power	
3		Returns a series of 5001 floating point numbers (in percent) that represent the Gaussian trace. This is the probability at particular power levels (average power), in the following order: 1. Probability at 0.0 dB power 2. Probability at 0.01 dB power 3. Probability at 0.02 dB power ... 5000. Probability at 49.9 dB power 5001. Probability at 50.0 dB power	
4		Returns a series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. This is the probability at particular power levels (average power), in the following order: 1. Probability at 0.0 dB power 2. Probability at 0.01 dB power 3. Probability at 0.02 dB power ... 5000. Probability at 49.9 dB power 5001. Probability at 50.0 dB power	

3.9.1 Views

In the **LTEATDD** and **5GNR** Modes, this measurement has two views: "Normal" on page 2619 and **Slot**. In all other Modes, there is only a single view (**Normal**). For the SCPI command to select **Slot** View, see "Slot View" on page 2670.

These are multiple-window Views. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

3.9.1.1 Normal

Windows: "Metrics" on page 2622, "Graph" on page 2619

The Power Stat CCDF measurement provides CCDF curves and power statistics metrics. This is common for both Uplink (MS) and Downlink (BTS).

Example	:PST:SLTV OFF
---------	---------------

3.9.1.2 Slot

Windows: "Metrics" on page 2622, "Graph" on page 2619, "Slot" on page 2621

Adds the signal wave window to Power Stat CCDF measurement curves and Power statistics metrics.

To select this view, set Display > Settings > "Slot View" on page 2670. to ON.

Example	:PST:SLTV ON
Dependencies	Only available in LTEATDD and 5GNR Modes

3.9.2 Windows


Three window types are defined:

- 1. "Graph" on page 2619
- 2. "Slot" on page 2621
- 3. "Metrics" on page 2622


Slot only appears in LTEATDD and 5GNR Modes.

3.9.2.1 Graph

Displays Amplitude versus probability

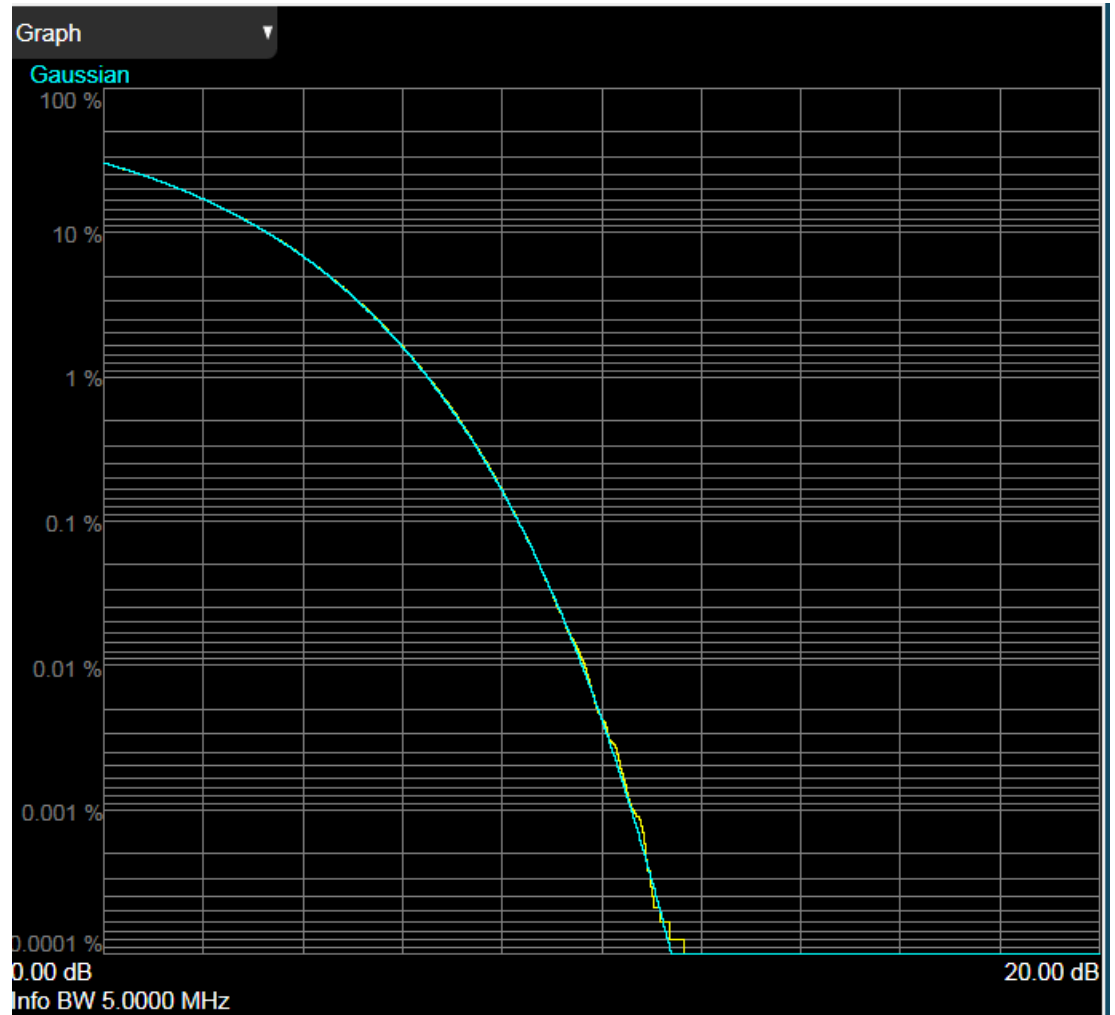


3.9.2.2 Slot

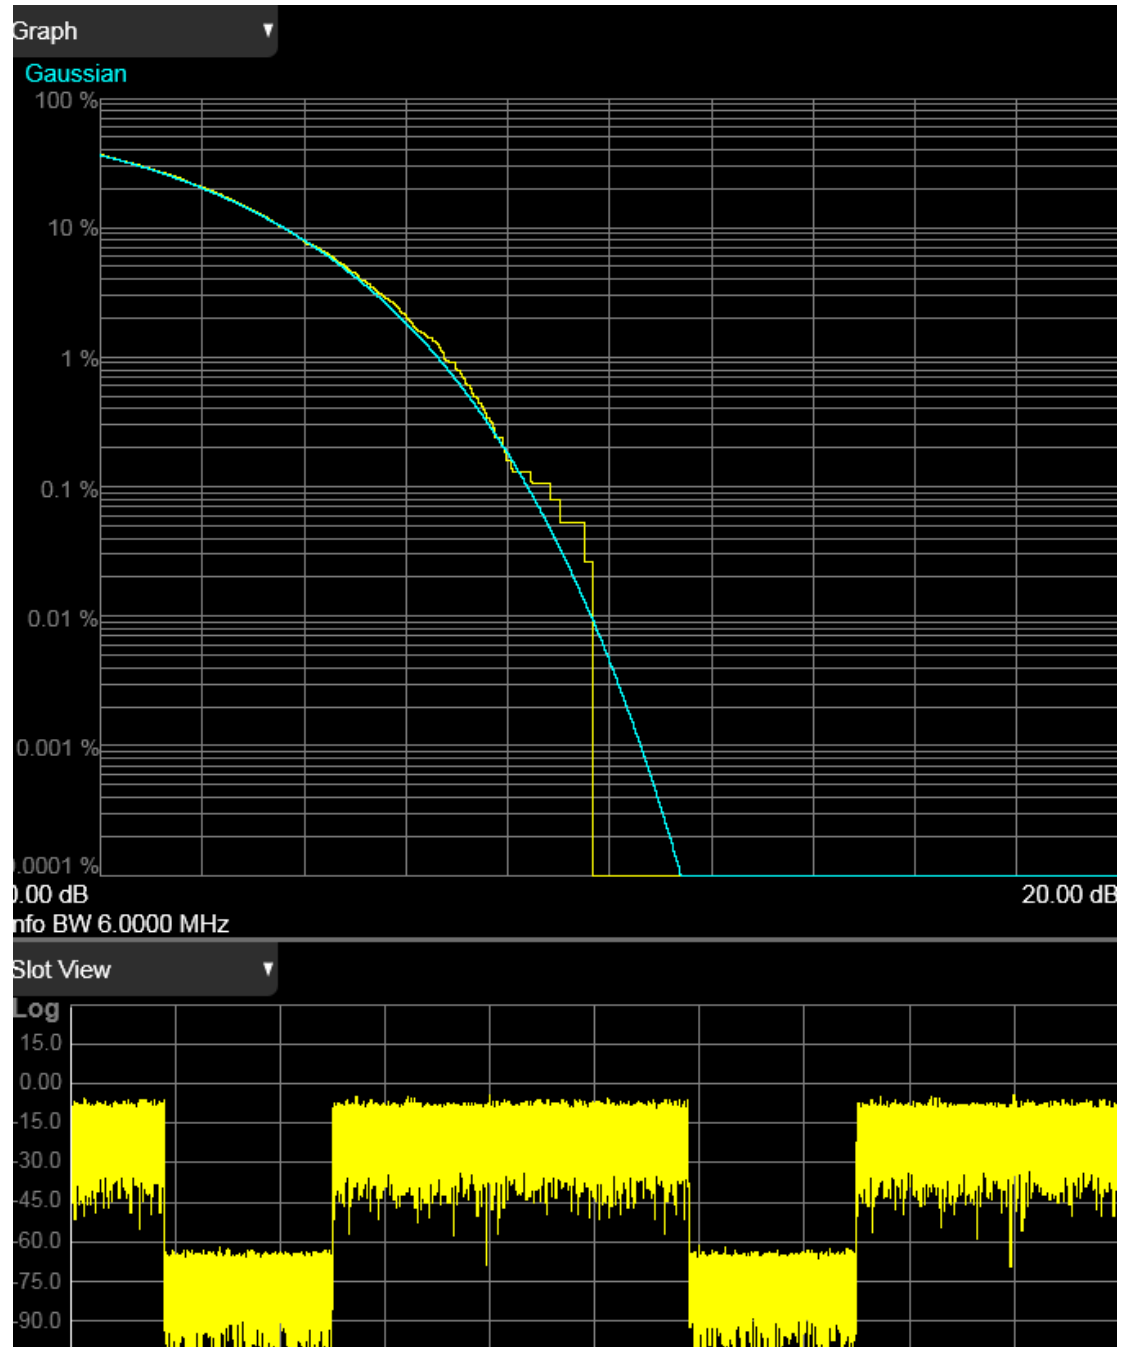

Only appears in LTEATDD and 5GNR Modes, and only in the View called "Slot" on [page 2619](#)

3.9.2.3 Metrics

Displays the textual results of the Power Stat CCDF measurement.

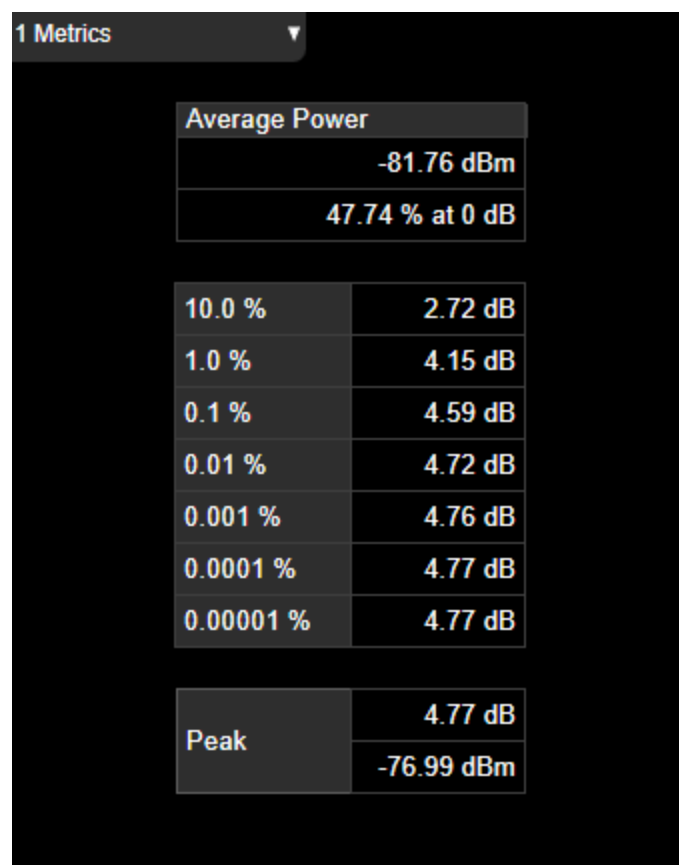

For the list of $n = 1$ measurement results, see "[Measurement Results for Power Stat CCDF](#)" on page 2617 above.

Name	Unit	Corresponding Results	Results Item for $n = 1$	Explanation
Average Power	dBm	Average input power	1	99.99 dBm
Average Power	%	Probability at the average input power level	2	99.99 %
10.0%	dB	Power level that has 10 % of the power	3	99.99 dB
1.0%	dB	Power level that has 1 % of the power	4	99.99 dB
0.1%	dB	Power level that has 0.1 % of	5	99.99 dB

Name	Unit	Corresponding Results	Results Item for n = 1	Explanation
0.01%	dB	the power Power level that has 0.01 % of the power	6	99.99 dB
0.001%	dB	Power level that has 0.001 % of the power	7	99.99 dB
0.0001%	dB	Power level that has 0.0001 % of the power	8	99.99 dB
0.00001%	dB	Power level that has 0.00001% of the power if " Minimum Probability " on page 2623 is PP7 (0.00001 %)	11	99.99 dB
Peak	dB	Peak power	9	99.99 dB
Peak	dBm	Not available via remote commands	n/a	99.99 dBm

3.9.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.9.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Minimum Probability

Sets the minimum probability range.

Remote Command	<code>:CALCulate:PStatistic:RANGe[:PROBability]:MINimum PP2 ... PP7</code> For parameter values, see " Parameter Options " on page 2624 below <code>:CALCulate:PStatistic:RANGe[:PROBability]:MINimum?</code>
Example	<code>:CALC:PST:RANG:MIN PP6</code> <code>:CALC:PST:RANG:MIN?</code>

Preset	PP6
State Saved	Yes
Range	1 % 0.1 % 0.01 % 0.001 % 0.0001 % 0.00001 %

Parameter Options

Option	Value
PP2	1.0e-2 (1 %)
PP3	1.0e-3 (0.1 %)
PP4	1.0e-4 (0.01 %)
PP5	1.0e-5 (0.001 %)
PP6	1.0e-6 (0.0001 %)
PP7	1.0e-7 (0.00001 %)

3.9.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 2625](#)
- See ["Single-Attenuator Configuration" on page 2625](#)


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

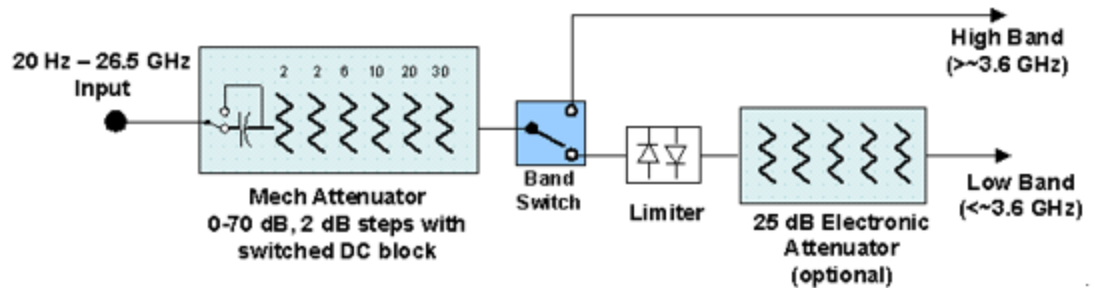


Configuration 2: Mechanical attenuator, no optional electronic attenuator

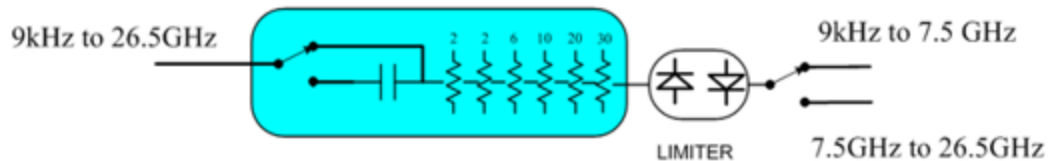

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

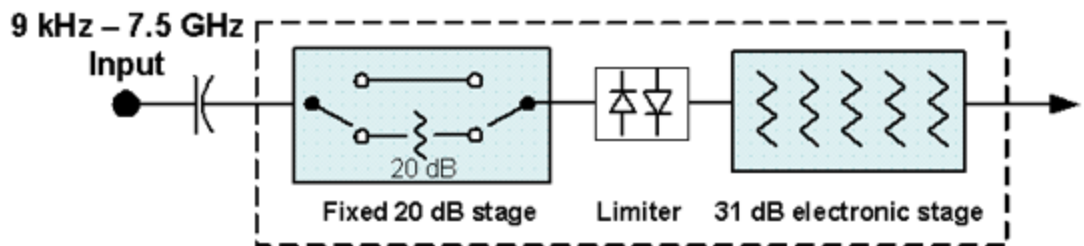

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the Input is RF , and the Input Port is RF Input 2 , and the Full Range Attenuator is installed:

- On the Meas Bar, the field “Atten” displays as follows:
- If the sweep is entirely < 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten
 - If the sweep is entirely > 50 GHz, the value shown after “Atten:” is equal to Full Range Atten
 - If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “>=” and is equal to Full Range Atten

In the **Amplitude**, **"Y Scale"** on page 3222 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

“Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten

“Total Atten above 50 GHz” followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamplifier"** on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man"** on page 2629

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of

	<p>Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231</p> <p>See "Attenuator Configurations and Auto/Man" on page 2629 for more information on the Auto/Man functionality</p>	
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> – If the USB Preamp is connected to USB, use 0 dB for Mech Atten – Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto) – In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>	
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>	
State Saved	<p>Saved in instrument state</p>	
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p>	

For example:
Dual-Attenuator configuration:
Atten: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB
Single-Attenuator configuration:
A: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)
When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn Auto Mech Atten ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support Auto , such as Swept SA
Preset	<code>ON</code>

Attenuator Configurations and Auto/Man

As described under "Attenuation" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "Mech Atten" on page 2627 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 3231 for more about “soft” attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

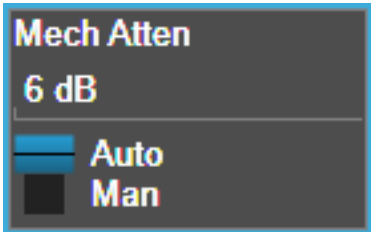

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

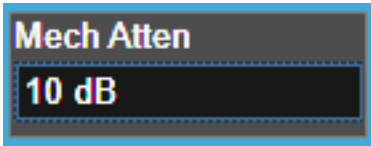

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 2632](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation’s specification is defined only when Mech Atten is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the Attenuation control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the Attenuation

3 5G NR Mode

3.9 Power Stat CCDF Measurement

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If **"Internal Preamp" on page 3251** is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If **"LNA" on page 3253** is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 2632
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	[:SENSe]:POWer[:RF]:EATTenuation:STATE OFF ON 0 1 [:SENSe]:POWer[:RF]:EATTenuation:STATE?
Example	:POW:EATT:STAT ON

	:POW:EATT:STAT?
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 2633](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the ["Adjust Atten for Min Clipping" on page 3234](#) function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>

Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "Adjust Atten for Min Clipping" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "Adjustment Algorithm" on page 2636

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECTrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator

Selection	SCPI	Note
Elec+Mech Atten	COMBined	and is usually faster In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?	
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?	
Notes	The parameter option ELECtrical sets this function to ON in Single-Attenuator models The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined , it sets the function to ON and returns ELEC to a query For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined	
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 2635 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF	
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?	

Adjustment Algorithm


The algorithms for the adjustment are documented below:

Single-Attenuator Models

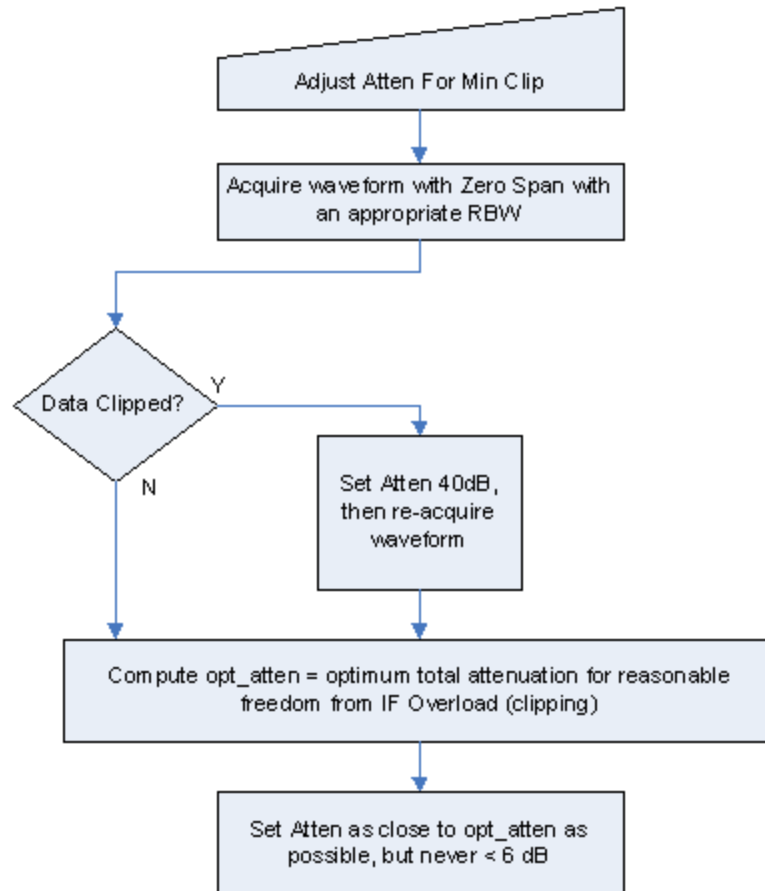

Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 2635 selection is Mech + Elec Atten:

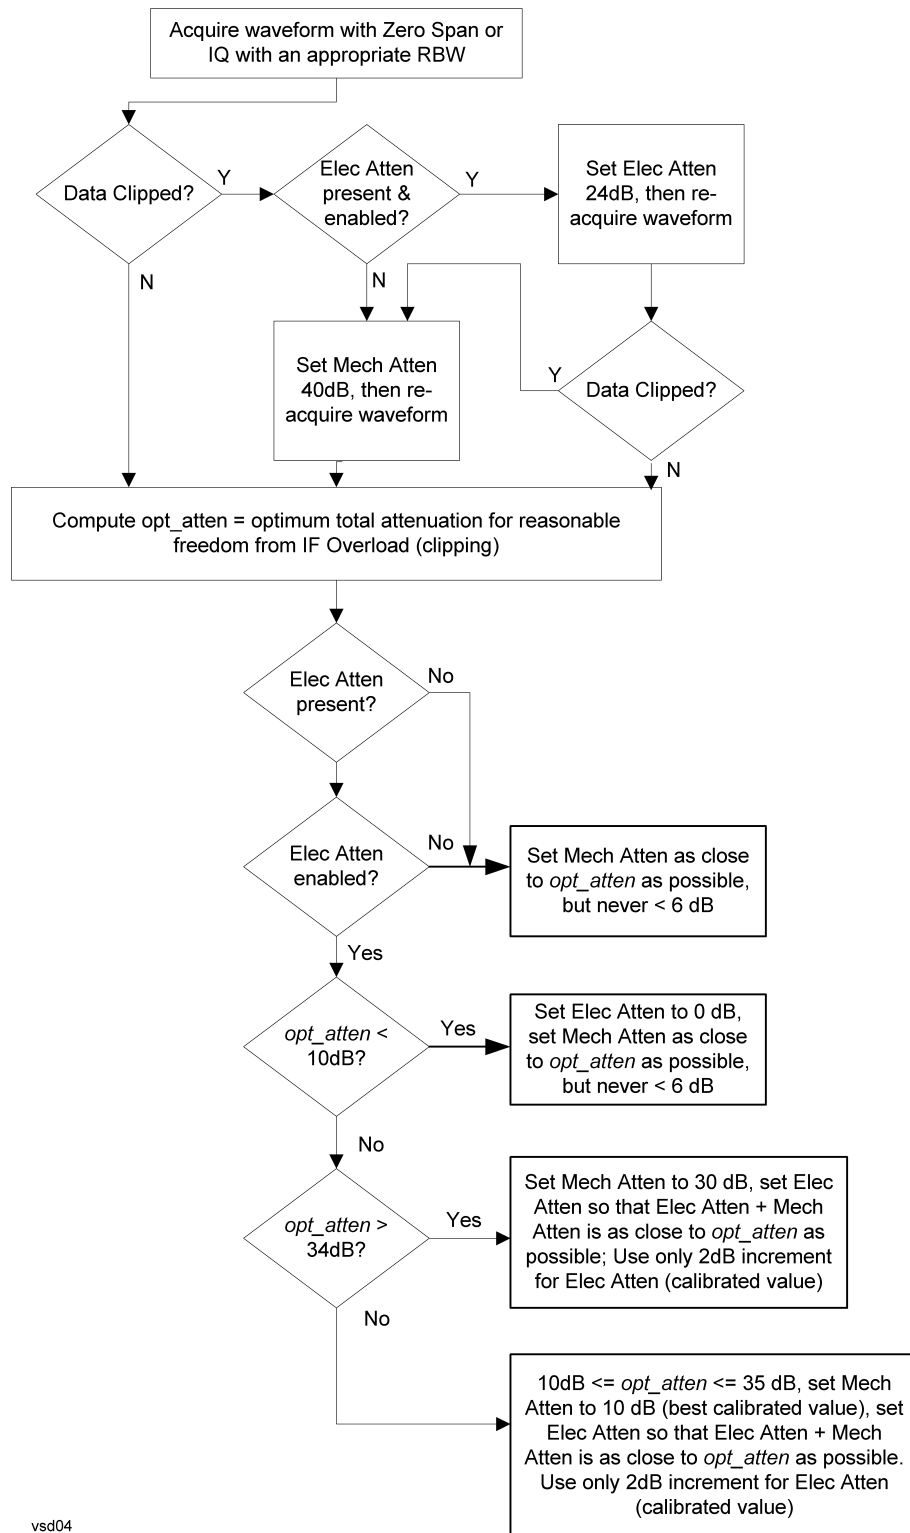

vsd04

"Pre-Adjust for Min Clipping" on page 2635 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

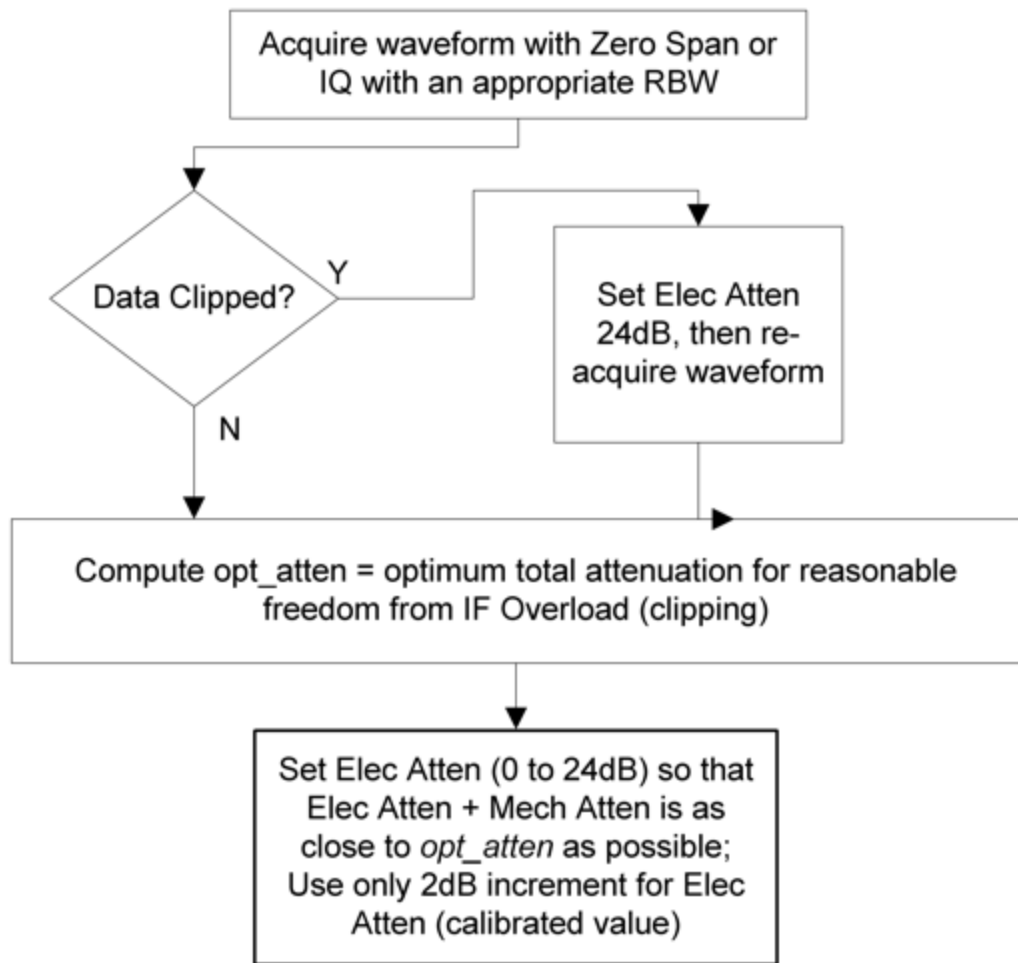

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.9.3.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If Auto is not supported, sending the SCPI command generates an error
Couplings	When in Auto , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	ON
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#" This is an alternate form of the command to match the POWer form of the I Range and Q Range SCPI.
Remote Command	<code>[:SENSe]:POWer:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the POWer and VOLTage forms of the command
Preset	ON
Range	Auto Man

I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code>

	:VOLT:IQ:RANG?
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When "Q Same as I" on page 3245 is On, the I Range value will be copied to "Q Range" on page 3244 Changing the value also sets Range = Man
Preset	Complex SPECTrum Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω) 0.5 V Peak (4 dBm @ 50Ω) 0.25 V Peak (-2 dBm @ 50Ω) 0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl> [:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω :POW:IQ:RANG 4 dBm :POW:IQ:RANG?
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω: 10, 4, -2, -8 75 Ω: 8.2, 2.2, -3.8, -9.8 600 Ω: -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ **"I Range" on page 3242** determines both I and Q channel range settings.

Remote Command	<code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ, "I Range" on page 3242 determines both I and Q channel range settings
Couplings	When "Q Same as I" on page 3245 is On, the "I Range" on page 3242 value is copied to Q Range and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω) 0.5 V Peak (4 dBm @ 50Ω) 0.25 V Peak (-2 dBm @ 50Ω) 0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <amp;pl></code> <code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω: <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command

	<p>The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:</p> <p>50 Ω: 10, 4, -2, -8 75 Ω: 8.2, 2.2, -3.8, -9.8 600 Ω: -0.8, -6.8, -12.8, -18.9</p>
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<pre>[:SENSe]:VOLTage POWer:IQ:MIRRed OFF ON 0 1 [:SENSe]:VOLTage POWer:IQ:MIRRed?</pre>
Example	<p>Turn off the mirroring of I Range to Q Range</p> <pre>:VOLT:IQ:MIRR OFF :POW:IQ:MIRR OFF</pre>
Couplings	When ON , the " I Range " on page 3242 value is mirrored (copied) to the " Q Range " on page 3244
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

3.9.3.4 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECTrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECTrical , COMBined , and ON) are honored and all are mapped to ELECTrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

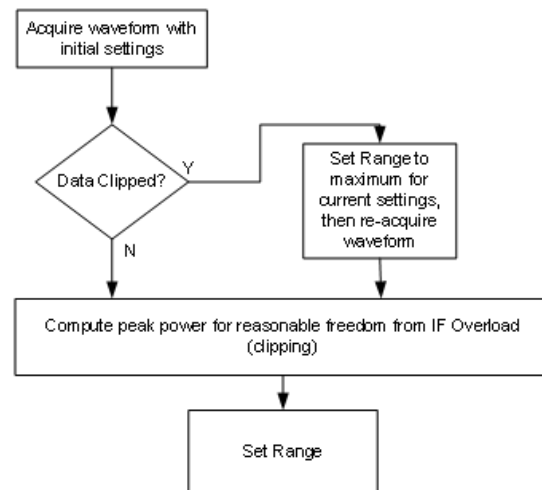

Peak-to-Average Ratio

Used with "**Range (Non-attenuator models)**" on page 3245 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

3 5G NR Mode

3.9 Power Stat CCDF Measurement

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on [page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.9.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 3250](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 2649](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command

	is sent in these instruments, accepted without error, and the query always returns 0
	– Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to :READ or :MEASure queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> - Does not appear in CXA-m - Does not appear in VXT Models M9410A/11A/15A/16A - Does not appear in M9410E/11E/15E/16E - Grayed-out if microwave preselector is off - Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz - Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz - Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Preset	0 MHz
State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

3 5G NR Mode

3.9 Power Stat CCDF Measurement

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated

	Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)</p>
	Auto Function
Remote Command	[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN[:STATe]?
Example	:POW:GAIN OFF :POW:GAIN?
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to ["Internal Preamp" on page 3251](#). LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with ["Internal Preamp" on page 3251](#), although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).


For more details about annotation, see ["More Information" on page 2653](#)

Remote Command	[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?
Example	:POW:GAIN:LNA ON
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p>LNA is not available when the electronic/soft attenuator is enabled</p>


Preset	OFF
State Saved	Saved in State

More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the **μW Preselector** is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the **μW Preselector**'s bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 2658
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 2660
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 2660

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " Presel Center " on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing <ul style="list-style-type: none"> – The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed – The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed – The Full Bypass Enable selection does not appear unless options LNP and MPB are both present

3 5G NR Mode

3.9 Power Stat CCDF Measurement

	as well as option FBP														
	In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated														
	Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them														
	Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"														
Preset	<table> <tr> <th>Mode</th><th>Value</th></tr> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>-</td><td></td></tr> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
-															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μ W Presel Bypass Full Bypass Enable														
Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p> <p>μW Path Control Auto</p> <p>In VMA, WLAN, 5G NR, CQM Modes, an Auto/Man switch is added to μW Path Control:</p>														



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypasss
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Measurement	μ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto μ W path is standard
	For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command `[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`
`[:SENSe]:POWer[:RF]:MW:PATH:AUTO?`

Example `:POW:MW:PATH:AUTO ON`

	:POW:MW:PATH:AUTO?
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 2655 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

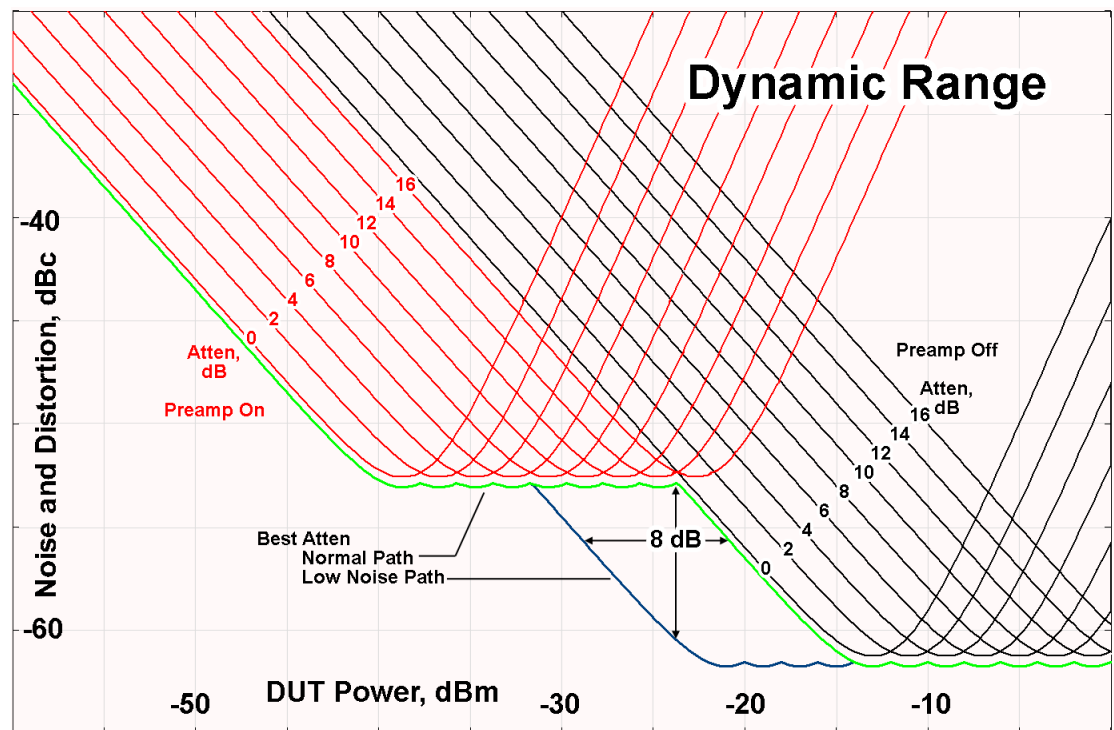

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger

amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none"> – 5GNRMode: Modulation Analysis and IQ Waveform – WLAN Mode: IQ Waveform – Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The

specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON

State Saved	Saved in instrument state
-------------	---------------------------

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1

State Saved	Saved in instrument state
-------------	---------------------------

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled	
Preset	N9041B	NORMa1
	N9042B+V3050A	NARRow
State Saved	Saved in instrument state	

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?	
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON	

3 5G NR Mode

3.9 Power Stat CCDF Measurement

	<p>Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON</p> <p>Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON</p>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " Prefilter Presets " on page 2667 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.9.4 BW

Opens the Bandwidth (**BW**) menu, which contains the Info BW control.

3.9.4.1 Settings

Contains basic bandwidth functions. It is the only tab under **BW**.

Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition. When in **Auto**, it is set to the value that covers carriers set by carrier configuration.

Remote Command	[:SENSe]:PSTatistic:BANDwidth <freq> [:SENSe]:PSTatistic:BANDwidth?	
Example	:PST:BAND 8 MHz :PST:BAND?	
Notes	Auto/Man is available only for 5G NR, LTE, LTETDD, LTEAFDD, LTEA TDD	
Preset	Depends on Mode and installed Options. See "Preset Values" on page 2669 below	
State Saved	Saved in instrument state	
Min	10 kHz	
Max	Hardware-dependent:	
	RF Input	<ul style="list-style-type: none"> - No Option = 10 MHz - WB (25 MHz or wider) = Hardware Option Limit
	I/Q Input (for I+jQ)	<ul style="list-style-type: none"> - No Option = 20 MHz - Option B25 = 50 MHz
Backwards Compatibility SCPI	[:SENSe]:PSTatistic:BWIDth	
	Auto Function	
Remote Command	[:SENSe]:PSTatistic:BANDwidth:AUTO ON OFF 1 0 [:SENSe]:PSTatistic:BANDwidth:AUTO	
Example	:PST:BAND:AUTO 0 :PST:BAND:AUTO?	
Preset	ON	

Preset Values

Modes	Option	Preset Values	
SA, WCDMA	All	5 MHz	
CQM	All	10 MHz	
LTEATDD, LTEAFDD, 5G NR	All	Automatically calculated	
MSR	All	Same as max value	
WLAN	None	10 MHz	
	B25	25 MHz	
	B40	Radio Std	Preset
		802.11a/b/g/n/ac/ax/be (20 MHz)	25 MHz
		802.11n/ac/ax/be (40 MHz)	40 MHz
		802.11ac/ax/be (80 MHz)	80 MHz
		802.11ac/ax/be (160 MHz)	160 MHz
		802.11be (320 MHz)	320 MHz
	B1X	Radio Std	Preset
		802.11ac(80 MHz)	80 MHz
	B1Y	Radio Std	Preset
		802.11ac(160 MHz)	160 MHz

3.9.5 Display

Lets you configure display items for the current Mode, Measurement View or Window.

3.9.5.1 Settings

Contains a control to turn on or turn off "Slot" on page 2619. When Slot View is switched OFF, Normal View is selected.

Slot View

Toggles "Slot" on page 2619 On or Off. When **ON**, Slot View is selected. When **OFF**, Normal View is selected.

Remote Command	<code>[[:SENSe]:PStatistic:SLTView[:STATe] OFF ON 0 1 [:SENSe]:PStatistic:SLTView[:STATe]?</code>
Example	<code>:PST:SLTV ON :PST:SLTV?</code>
Dependencies	Only available in LTEATDD and 5GNR Modes
Preset	OFF
State Saved	Yes
Range	OFF ON

3.9.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "Views" on page 2618.

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric> :DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be TZOOM) with</p>

	<p>:DISP:VIEW:ADV:SEL</p> <p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p>:DISP:VIEW:ADV:SEL "Trace Zoom"</p> <p>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</p> <p>If the specified view is not a valid View, the query returns the error message “-224, Illegal parameter value; View with the name <alphanumeric> does not exist”</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <p>:DISPlay:VIEW[:SElect]</p> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<p>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></p>
Example	<p>:DISP:VIEW:ADV:NAME "Baseband"</p> <p>Creates a new View named Baseband from the current View, and selects it as the current View</p>
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated</p>

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View's name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p>

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p><code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined</p>

3.9.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<code>ON</code>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<p><code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code></p> <p>This command is accepted for backwards compatibility with older instruments, but the <code>WINDow</code>, <code>TRACe</code> and <code>GRID</code> parameters are ignored</p>

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON

	This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1 :DISPlay:ANNotation:MBAR[:STATe]?
Example	:DISP:ANN:MBAR OFF
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending **:SYSTem:DEFaults MISC** or **:DISPlay:ENABle ON** (neither ***RST** nor **:SYSTem:PRESet** enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending **:SYSTem:DEFaults MISC** or **:DISPlay:ENABle ON** (neither ***RST** nor **:SYSTem:PRESet** enable the display)
- and you are using either the **:SYSTem:KLOCK** command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DELeTe</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.9.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the frequency and channel parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, **Center Frequency** is the same for all measurements – it does not change as you change measurements.

3.9.6.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR Mode measurements often deal with multiple carriers with distinct bandwidths, the simple "Center Frequency" on page 2679 parameter used in most measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, as **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to use this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the **Number of Component Carriers** is 1
- the **Center Freq Offset** is 0 Hz
- the **Center Frequency** Mode is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, the mode of **Center Frequency** remains as Auto and the Carrier Ref Freq changes to the same value. The main purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQUENCY:CENTer** is used to set up the frequency of the measurement.

See "More Information" on page 2679

Remote Command	For LTE-A, 5G NR [:SENSe]:CCARrier:REFeRence <freq> [:SENSe]:CCARrier:REFeRence? For MSR [:SENSe]:CARRier:REFeRence <freq> [:SENSe]:CARRier:REFeRence?
Example	For LTE-A, 5G NR

	:CCAR:REF 2GHz :CCAR:REF? For MSR :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTEAFDD, LTEATDD, 5GNR and MSR Modes
Preset	1 GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as "Center Frequency" on page 2679

More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting **Center Frequency**, **Span** is held constant.

The **Center Frequency** setting is the same for all measurements within a mode, that is, it is Meas Global. Some Modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a **Global** tab in its **Meas Setup** menu.

Center Frequency sets (and queries) the center frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, **Center Frequency** changes to the value for that input. SCPI commands are available to directly set the center frequency for a specific input.

Center Frequency is remembered as you go from input to input. Thus, you can set a **Center Frequency** of 10 GHz with the RF Input selected, change to BBIQ and set a **Center Frequency** of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input, **Center Frequency** will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

See:

- ["Center Frequency Presets" on page 2681](#)
- ["VXT Models with Radio Heads/CIU Frequency Range" on page 2683](#)

- "RF Center Freq" on page 2683
- "Ext Mix Center Freq" on page 2684
- "I/Q Center Freq" on page 2684

Remote Command	<code>[:SENSe]:FREQuency:CENTer <freq></code> <code>[:SENSe]:FREQuency:CENTer?</code>
Example	Set Center Frequency to 50 MHz: <code>:FREQ:CENT 50 MHz</code> Increment Center Frequency by the value of CF Step : <code>:FREQ:CENT UP</code> Return the current value of Center Frequency: <code>:FREQ:CENT?</code>
Notes	Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input: <ul style="list-style-type: none"> – For RF input it is equivalent to <code>:FREQ:RF:CENT</code> – For I/Q input it is equivalent to <code>:FREQ:IQ:CENT</code> – For External Mixer it is equivalent to <code>:FREQ:EMIX:CENT</code> Preset and Max values are dependent on Hardware Options If no terminator (for example, MHz) is sent, the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2681, "RF Center Freq" on page 2683, "Ext Mix Center Freq" on page 2684, "I/Q Center Freq" on page 2684, and "VXT Models with Radio Heads/CIU Frequency Range" on page 2683
State Saved	Saved in instrument state
Min/Max	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2681, "RF Center Freq" on page 2683, "I/Q Center Freq" on page 2684, and "VXT Models with Radio Heads/CIU Frequency Range" on page 2683
Status Bits/OPC dependencies	Non-overlapped The following command and parameters apply only to MSR, LTE-Advanced FDD/TDD and 5G NR Modes.
Remote Command	<code>[:SENSe]:FREQuency:CENTer:AUTO ON OFF 1 0</code> <code>[:SENSe]:FREQuency:CENTer:AUTO?</code>
Example	<code>:FREQ:CENT:AUTO OFF</code> <code>:FREQ:CENT:AUTO?</code>
Dependencies	Only available for the Monitor Spectrum, Power Stat CCDF and IQ waveform measurements in MSR,

3 5G NR Mode

3.9 Power Stat CCDF Measurement

	LTE-Advanced FDD/TDD and 5G NR Modes						
Couplings	<p>When Center Frequency changes, state automatically changes to Manual (OFF)</p> <p>Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled. When Carrier Reference Frequency changes:</p> <table> <tr> <th>Center Frequency</th><th>Relationship</th></tr> <tr> <td>Auto</td><td>Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)</td></tr> <tr> <td>Man</td><td>Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset</td></tr> </table>	Center Frequency	Relationship	Auto	Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)	Man	Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset
Center Frequency	Relationship						
Auto	Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)						
Man	Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset						
Preset	ON						
State Saved	Saved in instrument state						
Range	Auto Man						

Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

*For option 526, the Max CF in RTSA is 26.999999995 GHz.

N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

Tracking Generator Frequency Limits(CXA-m only)

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

RF Center Freq

Lets you specify the RF Center Frequency. Sets the Center Frequency to use when the RF input is selected, even if the RF input is not selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:RF:CENTer <freq></code> <code>[:SENSe]:FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each mode and common across all the measurements in the mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be > 3.6 GHz fails and results in an advisory message If the equivalent SCPI command is sent, this same message is generated as part of a "-221, Settings conflict" warning
Preset	See "Center Frequency Presets" on page 2681
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See "Center Frequency Presets" on page 2681 . Basically, instrument maximum frequency - 5 Hz

Ext Mix Center Freq

Specifies the External Mixer Center Frequency. Sets the Center Frequency to use when the External Mixer is selected, even if the External Mixer input is not the input that is selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:EMIXer:CENTer <freq></code> <code>[:SENSe]:FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having switched to one of the other inputs (for example, RF), you will come back into the settings that you had when you left External Mixing. So, you will come back to the band you were in with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore you will bring the span over from the other input. Therefore, the instrument comes back with the span from the previous input, limited as necessary by the current mixer setup
Preset	<p>When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. The Center Freq thus presets to the point arithmetically equidistant from these two frequencies</p> <p>Note that, if the current measurement has a limited Span available to it, and cannot achieve the Span shown in the table (Span=Stop Freq – Start Freq), the instrument uses the maximum Span the measurement allows, and still sets the Center Freq to the midpoint of the Start and Stop Freq values in the Harmonic Table</p> <p>When Restore Input/Output Defaults is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz</p> <p>Therefore, after Restore Input/Output Defaults, if you go to External Mixing and do a Mode Preset while in Spectrum Analyzer Mode, the resulting Center Freq is 33.25 GHz</p>
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band + 5 Hz
Max	The maximum frequency in the currently selected mixer band - 5 Hz

I/Q Center Freq

Specifies the I/Q Center Frequency. Sets the Center Frequency to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:IQ:CENTer <freq></code> <code>[:SENSe]:FREQuency:IQ:CENTer?</code>
----------------	--

Example	<code>:FREQ:IQ:CENT 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min/Max	-/+40.049995 MHz

Center Frequency Offset

Sets **Center Frequency Offset**, which is coupled with "**Center Frequency**" on page 2679, and only used in the Monitor Spectrum, IQ Waveform, Power Stat CCDF, and PAVT measurements. **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled by this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

When you change **Center Frequency Offset**, **Center Frequency** is updated, but **Carrier Reference Frequency** is not.

Remote Command	<code>[:SENSe]:FREQuency:CENTer:OFFSet <freq></code> <code>[:SENSe]:FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	0 GHz
State Saved	Saved in instrument state
Min/Max	-/+500 GHz

Adjust Center Frequency to Carrier Config

This immediate action control adjusts "**Center Frequency**" on page 2679 to cover all the configured carriers when "**Info BW**" on page 2668 is Auto.

Remote Command	<code>[:SENSe]:PSTatistic:FREQuency:CENTer:ADJust</code>
Example	<code>:PST:FREQ:CENT:ADJ</code>
Couplings	When " Info BW " on page 2668 is Man , pressing this control automatically changes it to Auto

3.9.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **Normal** and places it at the center of the display. If the selected marker is **Off**, it is set to **Normal** and placed at the center of the screen on the trace determined by the Marker Trace rules.

3.9.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

For any menu that includes **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the Marker menu, and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal and Delta markers

3.9.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Position/Normal**, **Delta** or **Off**) for the selected marker, as well as additional functions that help you use markers.

Marker X-Axis Value

Sets the marker X-Axis value in the current marker X-Axis Scale unit. This function has no effect if the control mode is **Off**, but is the remote command equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:X <rel_ampl></code> <code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:PST:MARK3:X 0</code>

	:CALC:PST:MARK3:X?
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is Not A Number
Preset	After a preset, all Markers are turned OFF , so Marker X-Axis Value query returns Not a Number (NAN)
State Saved	No
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker Y Axis Value (Remote Command Only)

Queries the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	:CALCulate:PSTatistic:MARKer[1] 2 ... 12:Y?
Example	:CALC:PST:MARK11:Y?
Notes	Returns the marker Y-Axis result, if the control mode is Normal , or Delta . If the marker is Off , the response is <i>Not a Number</i>
Preset	0
State Saved	No
Backwards Compatibility SCPI	:CALCulate:PSTatistic:MARKer[1] 2 ... 12:FUNCTION:RESult?

Marker Mode

Sets the marker control mode to **Normal** (**POSition**), **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **Off**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:PSTatistic:MARKer[1] 2 ... 12:MODE POSition DELTa OFF :CALCulate:PSTatistic:MARKer[1] 2 ... 12:MODE?
Example	:CALC:PST:MARK:MODE POS

	<code>:CALC:PST:MARK:MODE?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>POSition DELta OFF</code>
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it into **Normal** mode and places it at the center of the screen.

Example	<code>:CALC:PST:MARK3:STAT 1</code> <code>:CALC:PST:MARK3:STAT?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF ON</code>
Backwards Compatibility SCPI	<code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:STATe OFF ON 0 1</code> <code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:STATe?</code>

Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as pressing **Delta** in "**Marker Mode**" on page 2687. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:PSTatistic:MARKer:AOff</code>
Example	<code>:CALC:PST:MARK:AOff</code>

Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **Off**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:PStatistic:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:PStatistic:MARKer:COUPle[:STATe]?
Example	:CALC:PST:MARK:COUP ON :CALC:PST:MARK:COUP?
Preset	OFF Presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.9.7.3 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker X-Axis Value

This is the fundamental control that you use to move a marker around on the trace. This is the same as "**Marker X-Axis Value**" on page 2686 in **Settings**.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).
Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	:CALCulate:PStatistic:MARKer[1] 2 ... 12:REfERENCE <integer> :CALCulate:PStatistic:MARKer[1] 2 ... 12:REfERENCE?
Example	:CALC:PST:MARK:REF 3 :CALC:PST:MARK:REF?

Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried, a single value is returned (the specified marker numbers relative marker)
Couplings	The act of specifying the selected marker's reference marker makes the selected marker a Delta marker If the reference marker is off it is turned on in Fixed or Normal mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Assigns the specified marker to the designated trace. The trace choices are:

- MEASured
- GAUSSian
- REFerence

Remote Command	:CALCulate:PSTatistic:MARKer[1] 2 ... 12:TRACe MEASured GAUSSian REFerence :CALCulate:PSTatistic:MARKer[1] 2 ... 12:TRACe?
Example	:CALC:PST:MARK3:TRAC MEAS :CALC:PST:MARK:TRACE?
Preset	MEASured
State Saved	Yes
Range	MEASured GAUSSian REFerence

Marker Settings Diagram

Lets you configure the Marker system using a visual utility. This is the same as **"Marker Settings Diagram" on page 2688** in **Settings**.

3.9.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

3.9.8.1 Settings

Contains frequently used functions to which you will want the fastest access.

Counts

Sets the accumulated number of sampling points for data acquisition. The range is 1.000 kpt (k point) to 2.00000 Gpt (G point) with 1 kpt resolution.

Remote Command	<code>[:SENSe]:PStatistic:COUNTs <integer></code> <code>[:SENSe]:PStatistic:COUNTs?</code>
Example	<code>:PST:COUN 5001</code> <code>:PST:COUN?</code>
Couplings	Coupled to "Meas Cycles" on page 2691, by: Counts = Meas Cycles * SamplingFrequency * "Meas Interval" on page 2692
Preset	10000000
State Saved	Saved in instrument state
Min/Max	1000/2000000000

Meas Cycles

Set the number of measurement cycles to calculate power statistic data. This number is coupled to "Counts" on page 2691, by:

$$\text{Meas Cycles} = \text{Counts} / (\text{Sampling Frequency} * \text{Meas Interval})$$

When the **Counts** value cannot be divided by (**Sampling Frequency** * "Meas Interval" on page 2692), this value is displayed as a decimal fraction.

Remote Command	<code>[:SENSe]:PStatistic:SWEEP:CYCLes <real></code> <code>[:SENSe]:PStatistic:SWEEP:CYCLes?</code>
Example	<code>:PST:SWE:CYCL 1001</code> <code>:PST:SWE:CYCL?</code>
Preset	Depends on the sampling frequency
Min	0.001
Max	Depends on the sampling frequency

Meas Interval

Sets the number of data points to be used as the measurement interval. This value couples to **"Counts" on page 2691**, as:

$$\text{Meas Interval} = \text{Counts} / (\text{"Meas Cycles" on page 2691} * \text{Sampling Frequency})$$

Remote Command	<code>[:SENSe]:PSTatistic:SWEp:TIME <time></code> <code>[:SENSe]:PSTatistic:SWEp:TIME?</code>
Example	<code>:PST:SWE:TIME 2 ms</code> <code>:PST:SWE:TIME?</code>
Preset	1.0 ms !unless noted below LTEATDD, 5G NR: 500 us
Min/Max	50.0 us/10.0 ms !unless noted below LTEATDD, 5G NR: 1 us/10.0 ms

Meas Offset

Sets the value of time to be used as the measurement interval start.

Remote Command	<code>[:SENSe]:PSTatistic:MEAS:OFFSet <time></code> <code>[:SENSe]:PSTatistic:MEAS:OFFSet?</code>
Example	<code>:PST:MEAS:OFFS 2 ms</code> <code>:PST:MEAS:OFFS?</code>
Dependencies	Only available in LTEAFDD/LTEATDD and 5GNR Modes
Preset	0.0s for LTEATDD, 5G NR
State Saved	Saved in instrument state
Min/Max	0.0 s/10.0 ms for LTEATDD, 5G NR

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see ["Measurement-Specific Details" on page 2694](#) below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	:CONFigure:PStatistic
Example	:CONF:PST
Couplings	Selecting Meas Preset restores all measurement parameters to their default values

3.9.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.
This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINK ULINK</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none">- If changed to uplink: RF burst- If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none">- If changed to uplink: Periodic- If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows.<ul style="list-style-type: none">- External 1, when Info BW \leq 255 MHz- External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINK
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

3.9.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

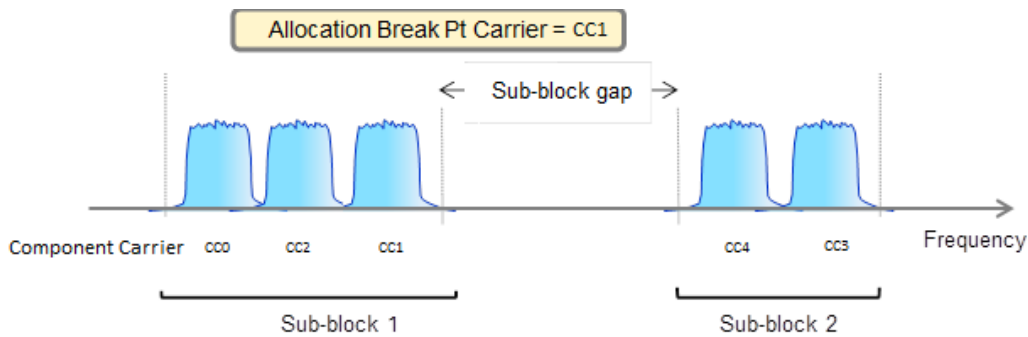

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299

"CHP Power
Integration Bandwidth"
on page 3300

"ACP Power
Integration Bandwidth"
on page 3300

"SEM Power
Integration Bandwidth"
on page 3301

"N_Grid_Size
(Display Only)" on
page 1828

"SCS (Power Meas)" on
page 3302

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CC0 Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz

Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for Adjacent NR Carriers	Channel Raster
Carrier Aggregation	
Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly Also, in some cases, make sure if the "Non-Contiguous Break at" parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed

Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	MANua1
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table

When Freq Range is FR1		
Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310
When Freq Range is FR2		
Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
50 MHz	47.520	47.580
100 MHz	95.040	95.160
200 MHz	190.080	190.20
400 MHz	380.160	380.280
800 MHz	714.24	715.20
1600 MHz	1428.48	1429.44
2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz	
State Saved	Yes	
Min	100 kHz	
Max	2000 MHz	

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.9.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled "Configure Preset" lets you configure the preset values for the Component Carriers. Once you have set all the controls in the "Configure Preset" section to the desired value, press the "Apply Preset (to all CCs)" control and your

presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code>
----------------	--

	[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?								
Example	:RAD:STAN:PRES:FREQ:RANG FR1 :RAD:STAN:PRES:FREQ:RANG?								
Notes	SCPI enum "FR2" is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 2707 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table><tr><th>Bandwidth</th><th>FR</th></tr><tr><td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr><tr><td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr><tr><td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr></table> When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet:FRANge								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press” Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as **"Duplex Mode" on page 3304** in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRES:TRAN:PER P0_5MS</code> <code>:RAD:STAN:PRES:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7

State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBOL:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	“DDDDDDDSUU”

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as ["Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321](#).

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this

control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **“Number of Component Carriers” on page 3292** will also take on this value.

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</pre> <p>For option details, see “Selections & Dependencies” on page 2712</p> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</pre>
Example	<pre>:RAD:STAN:PRESet:SCS SCS30K</pre> <pre>:RAD:STAN:PRESet:SCS?</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO 0</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO?</pre>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in “Selections & Dependencies” on page 2712
Preset	<pre>SCS30K</pre> <pre>ON</pre>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz</p> <p>Auto Man</p>

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K

FR	Bandwidth	SCS	SCPI
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **“Number of Component Carriers” on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK | FQAM16 | FQAM64 | FQAM256 | FQAM1024 | DLTm1DOT1 | DLTm1DOT2 | DLTm2 | DLTm2Q16 | DLTm2QPS | DLTm2A | DLTm2B | DLTm3DOT1 | DLTm3DOT1Q16 | DLTm3DOT1QPS | DLTm3DOT1A | DLTm3DOT1B | DLTm3DOT2 | DLTm3DOT3 | FPIBPSK | DLTm1DOT1P1 | DLTm1DOT1L2`

For selection details, see **“Available Selections” on page 2714**

`[:SENSe]:RADio:STANdard:PRESet:RBALloc?`

Example `:RAD:STAN:PRESet:RBAL DLTm1DOT1`

`:RAD:STAN:PRESet:RBAL?`

Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 2714
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

3 5G NR Mode

3.9 Power Stat CCDF Measurement

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024				

	FR	FR1	FR2	FR2-1	FR2-2
	QAM				
	Fuifilled	✓	✓	✓	✓
	Pi/2				
	BPSK				
DL NR- TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.

Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSoFdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE | FT01 | F1T03 | F3T04P2 | F4P2T06 | F6T07 | F24P25T029P5 | F37T040 | F43T048 | F52T071`

For option details, see ["Selections & Dependencies" on page 2718](#)

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?`

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF | ON | 0 | 1`

`[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?`

Example `:RAD:STAN:PRESet:ADJ:FRAN F1T03`
`:RAD:STAN:PRESet:ADJ:FRAN?`
`:RAD:STAN:PRESet:ADJ:FRAN:AUTO 1`
`:RAD:STAN:PRESet:ADJ:FRAN:AUTO?`

Dependencies Available selections depend on Frequency Range. See ["Selections & Dependencies" on page 2718](#)

Couplings When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0
Not preset to the selection until **Apply Preset (to All CCs)** is executed

Preset Automatically selected
The selection depends on which listed range the CC0 center freq is in
ON

State Saved Yes
Yes

Range None|f ≤ 1.0 GHz|1.0 < f ≤ 3.0 GHz|3.0 < f ≤ 4.2 GHz|4.2 < f ≤ 6.0 GHz|6.0 < f ≤ 7.125 GHz|24.25 < f ≤ 29.5 GHz|37.0 < f ≤ 43.5 GHz|43.5 < f ≤ 48.2 GHz|52.6 < f ≤ 71.0 GHz

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR10 FR20</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea

State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:ACH NR</code> <code>:RAD:STAN:PRESet:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:ACH NR</code> <code>:RAD:STAN:PRESet:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

3 5G NR Mode

3.9 Power Stat CCDF Measurement

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a

3 5G NR Mode

3.9 Power Stat CCDF Measurement

BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:
 Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.
 Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.
 Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "Apply Preset (to All CCs)" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			
			$4.2 < f \leq 6.0$ GHz,			Table 6.6.4.5.3.1-3

3 5G NR Mode

3.9 Power Stat CCDF Measurement

1-0	Cat A MR BS, Cat B MR BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-1
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-3
	Cat A LA BS, Cat B LA BS	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-2
	Cat A WA BS	3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-4
Cat A WA BS	f ≤ 1.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
	None, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.1-2
				Table 6.7.4.5.1.1-3
				Table 6.7.4.5.1.1-4

FR2	2-0	Cat B WA BS	$f \leq 1.0$ GHz	TS38.141-2	Table	Table 6.7.4.5.1.2-1
			None, $1.0 < f \leq 3.0$ GHz			Table 6.7.4.5.1.2-2
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.2-3
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.2-4
		Cat A MR BS, Cat B MR BS	$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.2-5
			None, $f \leq 1.0$ GHz,			Table 6.7.4.5.1.4-1
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-3a
		Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	None, $f \leq 1.0$ GHz,			Table 6.7.4.5.1.4-4
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-5
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-6
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-7
		Cat A LA BS, Cat B LA BS	None, $f \leq 1.0$ GHz,			Table 6.7.4.5.1.5-1
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.5-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.5-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.5-4
		Cat A WA BS,	None,			Table

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Cat A MR BS,	24.25 < f ≤ 29.5	v.17.9.0	6.7.3.5.2-1	6.7.4.5.2.2-1
Cat A MR BS	GHz	(2023-03)		
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat A LA BS	GHz			6.7.4.5.2.2-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.2-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.2-4
Cat B WA BS,	None,			Table
Cat B MR BS,	24.25 < f ≤ 29.5			6.7.4.5.2.3-1
Cat B MR BS	GHz			
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat B LA BS	GHz			6.7.4.5.2.3-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.3-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values		User Defined Duplex mode		
		TDD / FDD Duplex Mode		Uplink	Downlink	Uplink
		Downlink (*1) FR1	Downlink (*1) FR2			
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
Periodic Sync Src	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on ["DL FR1 NR-TM Reference Standard Selection" on page 3305](#) under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1 ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1 ms

ACP

The following parameters are preset when Apply Preset is executed.

- ["BW Parameters" on page 3331](#)
- ["Trace Detector" on page 3331](#)
- ["Sweep Parameter" on page 3331](#)
- [Frequency Parameters](#)
- [Meas Setup: Settings Parameter](#)
- ["Meas Setup: Configure Component Carrier Parameters" on page 3333](#)
- ["Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335](#)

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
	FR2	50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “N_Grid_Size (Display Only)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

3 5G NR Mode

3.9 Power Stat CCDF Measurement

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section ["N_Grid_Size \(Display Only\)" on page 1828](#),
 $N_{sc}^{RB} = 12$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel,CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(erence) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - StoC: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR Offset	

Offset Freq State	Downlink	FR1	A, B	On
			C, ..., L	Off
		FR2	A	On
			B, ..., L	Off
	Uplink		A	On
			B, ..., L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2 \cdot BW_{CC}$
			C, ..., L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ..., L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC} When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
Integ BW	Downlink		All	$\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{SC}^{RB} \}$
	Uplink	FR1	All	$\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz] \}$
		FR2	All	When Num of CCs = 1: $\max_{SCS} \{ N_{RB} (BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz] \}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2 \cdot BW_{GB}$ When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2 \cdot BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
		$43.5 < f \leq 48.2$	Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$52.6 < f \leq 71.0$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

3 5G NR Mode

3.9 Power Stat CCDF Measurement

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)		
			6.0 < f ≤ 7.125				
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)		
			f ≤ 1.0,				
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)		
			3.0 < f ≤ 4.2,				
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)		
			6.0 < f ≤ 7.125				
					None,	All	-25.7 dB = (-28 + TT 2.3)
					24.25 < f ≤ 29.5		
37.0 < f ≤ 43.5							
43.5 < f ≤ 48.2							
	100, 400, 800, 1600, 2000 MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)			

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$,	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66)
						When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB (= -16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset		Assumed Adj Chan		EtoC: Carrier Edge to Meas BW Center

Frequency Define				
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ..., L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ..., L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ..., L	$\max\{N_{RB}^{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{SC}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ..., L	$\max\{N_{RB}^{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{SC}^{RB} + SCS [kHz]\}$

where:

Bandwidth: Applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Res BW State		All	Auto
Res BW		All	Automatically coupled with the Res BW value under the BW menu
Video BW State		All	Auto
Video BW		All	Automatically coupled with the Video BW value under the BW menu
Offset Side		All	Both
Method and Filter Alpha	Downlink	All	Integration BW
	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
		1-0	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}})$ dBm
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}})$ dBm

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$,	All	$-44.2 \text{ dB} (= -45 + \text{TT } 0.8)$

1-O	25, ..., 100 MHz	3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
		3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
		6.0 < f ≤ 7.125	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for 6.0 < f ≤ 7.125 GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = "NR (same BW)" for DL/UL, "E-UTRA" or "NR + E-UTRA" for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 2750
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2750
			-Contiguous	B, ... , L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2750
			-Contiguous	B, ... , L	Off
			Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2750
			-Contiguous	B, ... , L	Off

Integ BW	C, ... , L	2751 0 Hz
	A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page 2751
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 2750

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub- block gap) (MHz)		Preset Value	
Direction	FR	Bandwidth			Offset Enabled	
					A	B
					Power Ref Type(*)	
					A	B

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration	Offset	Preset Value
----------------------	--------	--------------

Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
Uplink	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz			

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel

3 5G NR Mode
3.9 Power Stat CCDF Measurement

Abs Limit	FR1	1-C	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Cat A WA BS	All	-13 + 10 LOG(BW _{config}) dBm		
				Cat B WA BS	All	-15 + 10 LOG(BW _{config}) dBm		
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-25 + 10 LOG(BW _{config}) dBm		
				Cat A LA BS, Cat B LA BS	All	-32 + 10 LOG(BW _{config}) dBm		
				1-0		Cat A WA BS	All	-4 + 10 LOG(BW _{config}) dBm
				Cat B WA BS	All	-6 + 10 LOG(BW _{config}) dBm		
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-16 + 10 LOG(BW _{config}) dBm		
				Cat A LA BS, Cat B LA BS	All	-23 + 10 LOG(BW _{config}) dBm		
		FR2	2-0	None, 24.25 < f ≤ 29.5, 37.0 < f ≤ 43.5	Cat A WA BS, Cat B WA BS	All	-10.3 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-17.3 + 10 LOG(BW _{config}) dBm	
					Cat A LA BS, Cat B LA BS	All	-17.3 + 10 LOG(BW _{config}) dBm	
				43.5 < f ≤ 48.2	Cat A WA BS, Cat B WA BS	All	-10.1 + 10 LOG(BW _{config}) dBm	
					Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS	All	-17.1 + 10 LOG(BW _{config}) dBm	

52.6 < f ≤ 71.0 (**)	(Low Pr)		
	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BSType	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0	All	-44 dB = (-45 + TT 1.0)
				3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0	All	-43.8 dB = (-45 + TT 1.2)
				6.0 < f ≤	All	-36.8 dB =

3 5G NR Mode

3.9 Power Stat CCDF Measurement

FR2	2-O	50, 100, 200 400 MHz	7.125		(-45 + TT 8.2)
			None, 24.25 < f ≤ 29.5	All	-25.7 dB = (-28 + TT 2.3)
			37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
		100, 400, 800, 1600, 2000 (**) MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameterfor
Uplink

Preset Configuration

Preset Value

FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset
----	----------------	--------------------	-----------	--------

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 2758
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 2758
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2758
			D, ... , L	0 Hz

Integ BW	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2758
	D, ... , L	Same value as Offset C
Offset Side	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 2758

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value					
Direction	FR	Bandwidth		Offset Enabled			Power Ref Type (*)		
				A	B	C	A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			$5 \leq \text{Wgap} < 10$	✓		(+)	Norm	Norm	Norm
			$10 \leq \text{Wgap}$	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth \leq Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth \leq Wgap".

(++) Same as the rows of "Wgap < 5", " $5 \leq \text{Wgap} < 10$ ", and " $10 \leq \text{Wgap}$ ".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	$= 0.5 \times \text{Bandwidth}$	$\max_{SCS}\{N_{RB}^{SCS}(\text{BW}_{CC,FR,SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

3 5G NR Mode

3.9 Power Stat CCDF Measurement

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "[N_Grid_Size \(Display Only\)](#)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125		All	-50 dBm
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "[BW Parameter](#)" on page 3357
- "[Offset RAT](#)" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW

Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

3 5G NR Mode

3.9 Power Stat CCDF Measurement

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		Preset Value	
	FR	Bandwidth	SCS	SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

3 5G NR Mode
3.9 Power Stat CCDF Measurement

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
--------	---------	------------------	--	--	-----------------	--	--	-----------	--	---------	--	--

3 5G NR Mode
3.9 Power Stat CCDF Measurement

A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1
D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓		0.05			5.05			0.051			2
B	✓		5.05			10.05			0.1			1
C	✓		10.5			40			0.1			1
D	✓		40			100			0.1			1
E-L			100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1
D	✓	40	100	1	1
E-L		100	500	1	1

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and f ≤ 1.0 GHz & 1.0 < f ≤ 3.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start	Stop	Coupling	Start	Stop	Coupling		Start	Stop	Coupling	

		(dBm)	(dBm)		(dB)	(dB)			(dBm)	(dBm)		
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.9 Power Stat CCDF Measurement

B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.9 Power Stat CCDF Measurement

A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			1			1
D	✓	40			100			1			1
E-L		100			500			1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.9 Power Stat CCDF Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			5.05			0.051			2		
B	✓	5.05			10.05			0.1			1		
C	✓	10.5			40			1			1		
D	✓	40			100			1			1		
E-L		100			500			1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			50.05			0.051			2		
B	✓	50.05			100.05			0.1			1		
C	✓	100.5			200			1			1		
D		200			500			1			1		
E-L		200			500			1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

3 5G NR Mode

3.9 Power Stat CCDF Measurement

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			50.05			0.051		2		
B	✓	50.05			100.05			0.1		1		
C	✓	100.05			200			0.1		1		
D		200			500			0.1		1		
E-L		200			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated,x}} \leq 40$ dBm (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-11.2 \text{ dB} - (7/5) \cdot ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the

Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			5.05			0.051	2			
B	✓	5.05			10.05			0.1	1			
C	✓	10.5			40			0.1	1			
D	✓	40			100			0.1	1			
E-L		100			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – $(7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”. Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW			
A	✓	0.05			50.05			0.051	2			
B	✓	50.05			100.05			0.1	1			
C	✓	100.5			200			0.1	1			
D		200			500			0.1	1			
E-L		200			500			0.1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode

3.9 Power Stat CCDF Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands $\leq 3.0 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “ $-19.2 \text{ dB} - (7/5) * ((f_{\text{offset}} / \text{MHz}) - 0.05) \text{ dB}$ ” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “ -19.2 dB ” is typo and is supposed to be “ -19.2 dBm ”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		0.1	1
D		200		500		0.1	1
E-L		200		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode
3.9 Power Stat CCDF Measurement

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits (6.0 GHz < NR bands ≤ 7.125 GHz).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and 24.25 < f ≤ 29.5 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: 37.0 < f ≤ 43.5 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$x + 1500$			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	y + 0.5			1	1
C	✓	y + 5	y + 1500			5	2
D-L		100	500			5	2

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)
		(*)	(*)	(*)	(*)		
A	✓	0.5	x + 0.5			1	1
B	✓	x + 0.5	x + 1500			1	1
C-L		100	500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 * BW_{\text{contiguous}}$
- $y = 2 * BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block[n]}}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn't miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range:	Adjust Range:
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,

		None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$	and $6.0 < f \leq 7.125 \text{ GHz}$
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled
B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 * BW_{\text{Channel,CA}}$$

$$- y = 2 * BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	$-1.79 \text{ dBm} = -5 + TT \cdot 3.21$	$-1.54 \text{ dBm} = -5 + TT \cdot 3.46$	TBD	TBD
B_{Lim}	$-9.79 \text{ dBm} = -13 + TT \cdot 3.21$	$-9.54 \text{ dBm} = -13 + TT \cdot 3.46$	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW $\leq 400\text{MHz}$)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode

3.9 Power Stat CCDF Measurement

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS
1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)

1	1-0					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+ Span/2	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz		- Start	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

3 5G NR Mode
3.9 Power Stat CCDF Measurement

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category
---	---------	-------------

		All "Cat A" BS				All "Cat B" BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = "All Cat A BS": Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,

BS Category = "All Cat B BS": Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to "27 GHz")

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the "Apply Preset" button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
---	---------	------------	-----------	------------	------	-----	----------------	-----	-------------

3 5G NR Mode

3.9 Power Stat CCDF Measurement

1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq - Start Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz			10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off

10~ (*) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset) (no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

#	(*) Range “Enabled” state			
	Adjust Limit Mask for Freq Range (GHz)			
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$
1	✓	✓	✓	✓
2	✓	✓	✓	✓
3	✓	✓	✓	✓
4	✓	✓	✓	✓
5				

Note:

Never “enabled” by the “Apply Preset” button
A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1,

3 5G NR Mode
3.9 Power Stat CCDF Measurement

				TS38.521-1)
6	✓			
7		✓		
8			✓	
9				Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~				

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005 GHz	6 GHz			1 MHz	1	5 MHz	Gaussian
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no	(no

3 5G NR Mode

3.9 Power Stat CCDF Measurement

8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	preset) (no preset)	preset) (no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to "27 GHz")

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the "RB Alloc Preset" selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters

- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

- Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	

3 5G NR Mode

3.9 Power Stat CCDF Measurement

General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2 v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for pi/2 BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),

- Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for Pi/2 BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for Pi/2 BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399
- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
	FR2	TDD	n/a	0 subframe	2 subframes

3 5G NR Mode

3.9 Power Stat CCDF Measurement

Fulfilled-xx / NR-TMx.x	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity	
----------------------------	-------------	-----------------	-----	------------	--	--

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
	FR2	TDD	n/a	0.9286	1.250	n/a
Fulfilled-xx / NR-TMx.x	RF1/RF2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

3 5G NR Mode
3.9 Power Stat CCDF Measurement

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2 ^{-m}	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2 ^{-m}	
			SRS	0.0714	10.0	2 ^{-m}	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2 ^{-m}	10.0	2 ^{-m}	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2 ^{-m} (TBD)	10.0	2 ^{-m}	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu\text{s}$ RMS averaging window for making the OFF power. $N = \text{SCS}/15$, where SCS is in kHz.
- Uplink: Slot length = $2^{-\mu}$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$,	-82.5 dBm / MHz = -85 + TT 2.5

		1-0	6.0 < f ≤ 7.125 GHz None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
	FR2	2-0	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration			Adjust Range (GHz)	Preset Value
	FR	UL ChannelType	Bandwidth		
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

3.9 Power Stat CCDF Measurement

Parameter	Preset Configuration			Preset Value	
	FR	UL Channel Type	Bandwidth		
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm
				30 kHz	-4.2 dBm
			10 MHz	15 kHz	0.4 dBm
				30 kHz	-0.8 dBm
				60 kHz	-1.2 dBm
			15 MHz	15 kHz	1.4 dBm
				30 kHz	1.2 dBm
				60 kHz	1.0 dBm

3 5G NR Mode
3.9 Power Stat CCDF Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

3 5G NR Mode

3.9 Power Stat CCDF Measurement

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
			480 kHz	
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in "**CHP Power Integration Bandwidth**" on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.9.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

IF Gain

Used to set the IF Gain function to: Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Only applies to the RF input. Does not apply to baseband I/Q input.

Remote Command	<code>[:SENSe]:PStatistic:IF:GAIN[:STATe] ON OFF 1 0</code> <code>[:SENSe]:PStatistic:IF:GAIN[:STATe]?</code>
Example	<code>:PST:IF:GAIN ON</code> <code>:PST:IF:GAIN?</code>
Notes	ON = high gain OFF = low gain
Dependencies	Not available when IQ Input is selected Has no effect when the U7227A USB Preamplifier is connected. This is not annotated or reflected on any control; there are no controls grayed out nor any SCPI locked out. The instrument simply behaves as though both IF Gain is set to Low regardless of the setting on the control Not available in VXT, EXM, or UXM
Couplings	Sending this command forces IF Gain Auto to OFF (Man)
Preset	OFF
State Saved	Saved in instrument state
Range	Low Gain High Gain Auto Function
Remote Command	<code>[:SENSe]:PStatistic:IF:GAIN:AUTO[:STATe] ON OFF 1 0</code> <code>[:SENSe]:PStatistic:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:PST:IF:GAIN:AUTO ON</code> <code>:PST:IF:GAIN:AUTO?</code>
Couplings	Auto sets IF Gain to High Gain if the input attenuator is set to 0 dB, or the preamp is turned on, or the Max Mixer Level is –20 dBm or lower For other conditions, Auto sets IF Gain to Low Gain
Preset	OFF

IF Upsampling Ratio

Allows you to select the upsampling ratio after data is captured for a measurement. Using this method, mitigation of peak detection error can be expected when upsampling ratio is set to > x1.

Remote Command	<code>[:SENSe]:PStatistic:URATio X1 X2 X4 X8 X16 X32</code>
----------------	--

	<code>[:SENSe]:PSTatistic:URATio?</code>
Example	<code>:PST:URAT X8</code> <code>:PST:URAT?</code>
Notes	X1 is for backwards compatibility
Preset	<code>X1</code>
State Saved	Yes, Saved in instrument state
Range	<code>X1 X2 X4 X8 X16 X32</code>

3.9.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on [page 3408](#)) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "[Restore Defaults](#)" on [page 3410](#) is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code>
Command	<code>:INSTrument:COUPle:FREQuency:CENTer?</code>

Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.9.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.9.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "More Information" on page 2815

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 3413](#) for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See ["More Information" on page 2817](#)

Remote Command	<code>:INITiate[:IMMEDIATE]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 (<code>INTEgrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the <code>:INIT:REST</code> command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCN UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is *k*. This *k* is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This *k* is used for comparisons with N, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, *K*, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value *K* changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	:INITiate:PAUSE :INITiate:RESume
Example	:INIT:PAUS :INIT:RES
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when *:ABORT* is sent, the alignment finishes *before* the abort function is performed, so *:ABORT* does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an *:INIT:IMM* command is received.

Remote Command	:ABORT
Example	:ABOR

Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATUS:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATUS:QUESTionable register bit 9 (INTEGRity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>

3.9.9.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

Scale/Div

Enables you to enter a time value to change the horizontal scale.

Remote Command	:DISPlay:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision <rel_ampl> :DISPlay:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision?
Example	:DISP:PST:VIEW:WIND2:TRAC:X:PDIV 10 :DISP:PST:VIEW:WIND2:TRAC:X:PDIV?
Notes	The CCDF measurement has the trace display only in Window 2, because values other than “2” are <i>not</i> available as the sub-op code
Preset	2.00
State Saved	Saved in instrument state
Min	0.1
Max	20
Backwards Compatibility SCPI	:DISPlay:PSTatistic:XScale

3.9.10 Trace

Lets you control the display and storage of trace data for the available traces.

3.9.10.1 Trace Control

The controls on this tab allow you to select display of the Reference Trace and the Gaussian Line, and store the Reference Trace.

Store Ref Trace

Copies the currently measured curve as the user-definable reference trace. The captured data remains until the other mode is chosen. Pressing this key also refreshes the reference trace.

No query is available.

Remote Command	<code>:CALCulate:PSTatistic:STORe:REFerence</code>
Example	<code>:CALC:PST:STOR:REF</code>
Backwards Compatibility SCPI	<code>[:SENSe]:PSTatistic:SRTRace</code>

Ref Trace

Toggles the reference trace display On or Off.

Remote Command	<code>:DISPlay:PSTatistic:RTRace[:STATe] OFF ON 0 1</code> <code>:DISPlay:PSTatistic:RTRace[:STATe]?</code>
Example	<code>:DISP:PST:RTR OFF</code> <code>:DISP:PST:RTR?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF ON</code>
Backwards Compatibility SCPI	<code>[:SENSe]:PSTatistic:RTRace[:STATe]</code>

Gaussian Line

Toggles the Gaussian trace display On or Off.

Remote Command	<code>:DISPlay:PSTatistic:GAUSsian[:STATe] OFF ON 0 1</code> <code>:DISPlay:PSTatistic:GAUSsian[:STATe]?</code>
Example	<code>:DISP:PST:GAUS OFF</code> <code>:DISP:PST:GAUS?</code>

Preset	ON
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	[:SENSe]:PStAtistic:GAUSSian[:STATe]

3.10 Monitor Spectrum Measurement

The Monitor Spectrum measurement provides a quick, convenient means of looking at the entire spectrum. While the look and feel are similar to Spectrum Analyzer Mode, the functionality is greatly reduced for easy operation. The main purpose of this measurement is to show the spectrum. The default span should cover an appropriate frequency range of the application.

Measurement Commands

The following commands can be used to configure the measurement and retrieve results:

```
:CONFigure:MONitor  
:CONFigure:MONitor:NDEFault  
:INITiate:MONitor  
:FETCh:MONitor[n]?  
:READ:MONitor[n]?  
:MEASure:MONitor[n]?
```

Remote Command Results

The following table describes the results returned by the queries listed above, according to the index value **n**.

n	Results Returned
1 (or not specified)	Returns trace1 data with comma separated floating numbers
2	Returns trace2 data with comma separated floating numbers
3	Returns trace3 data with comma separated floating numbers

3.10.1 Views

For modes other than MSR, LTEAFDD/LTEATDD and 5GNR, there is a single view, **Normal**.

For the MSR, LTEAFDD/LTEATDD and 5GNR modes, there are two views, **Normal** and **Carrier Info**, as described in the table below. The **Normal** view is the same as the common Monitor Spectrum view in other Modes. Carrier Info is available on the spectrum trace.

"Normal" on
page 2824

This is a single window view of the spectrum

In MSR, LTEAFDD/LTEATDD and 5GNR Modes, you can turn on attributes that show the defined carriers and the sub-blocks also

"Carrier Info" on
page 2825

This view shows the spectrum in the top window and a carrier configuration summary in the bottom window

Carrier center frequency can be displayed in either offset or absolute frequency depending on Carrier Freq

View Selection by Name

Remote Command	<code>:DISPlay:MONitor:VIEW[:SElect] RTRace CINformation</code> <code>:DISPlay:MONitor:VIEW[:SElect]?</code>
Example	<code>:DISP:MON:VIEW RTR</code> <code>:DISP:MON:VIEW?</code>
Preset	<code>RTRace</code>
State Saved	Saved in instrument state
Range	Power Results Carrier Info

View Selection by Number

Remote Command	<code>:DISPlay:MONitor:VIEW:NSElect <integer></code> <code>:DISPlay:MONitor:VIEW:NSElect?</code>
Example	<code>:DISP:MON:VIEW:NSEL 1</code> <code>:DISP:MON:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

3.10.1.1 Normal

Windows: "Spectrum" on page 2825

Single window view of the graph.

Example	<code>:DISP:MON:VIEW RTR</code>
Dependencies	This command is only available in the MSR, LTE-A FDD/TDD and 5G NR modes. In other Modes this is the only View

3.10.1.2 Carrier Info

This view shows the spectrum in the top window and a carrier configuration summary in the bottom window.

Carrier center frequency can be displayed in either offset or absolute frequency, depending on Carrier Freq.

Windows: "Spectrum" on page 2825,"Carrier Info" on page 2827


Example	:DISP:MON:VIEW CINF
Dependencies	Only available in the MSR, LTEAFDD/LTEATDD and 5G NR modes

3.10.2 Windows

This section describes the windows used in the Monitor Spectrum measurement.


3.10.2.1 Spectrum

In all modes except MSR, LTEAFDD/LTEATDD, and 5G NR, this is a single trace window showing the spectrum.

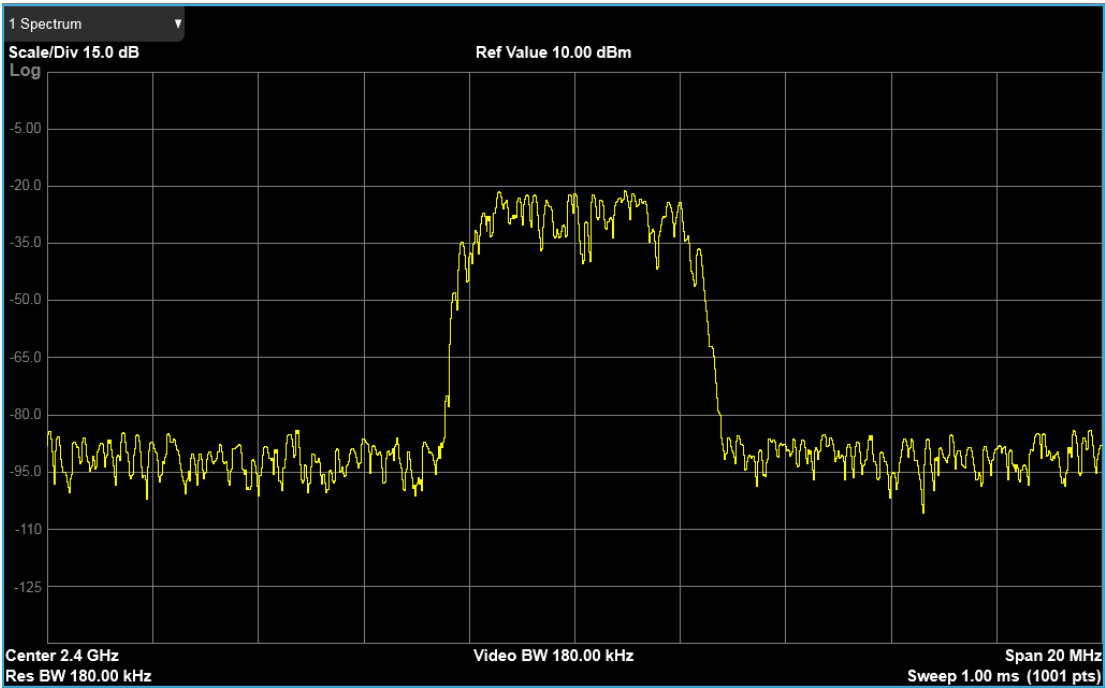

In **LTEAFDD/LTEATDD, MSR and 5GNR Modes**, multi-carriers are supported. The Carrier Attribute on/off and Sub-block Attribute on/off settings (under Display, Meas Display) are defined to allow the carrier and sub-block legends to display.


When the Carrier Attribute is on, the carrier identification and name are shown on the spectrum trace:

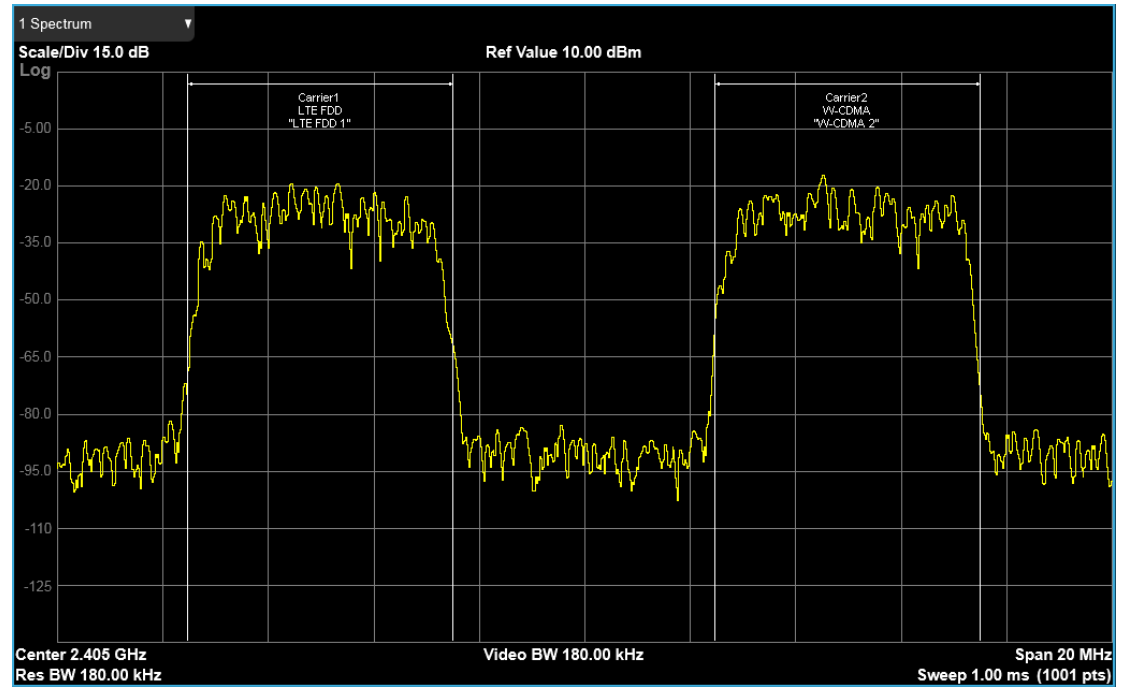

When Carrier and Sub-block attributes are both on, the sub-block scope and name are also shown on the spectrum trace:

3 5G NR Mode

3.10 Monitor Spectrum Measurement

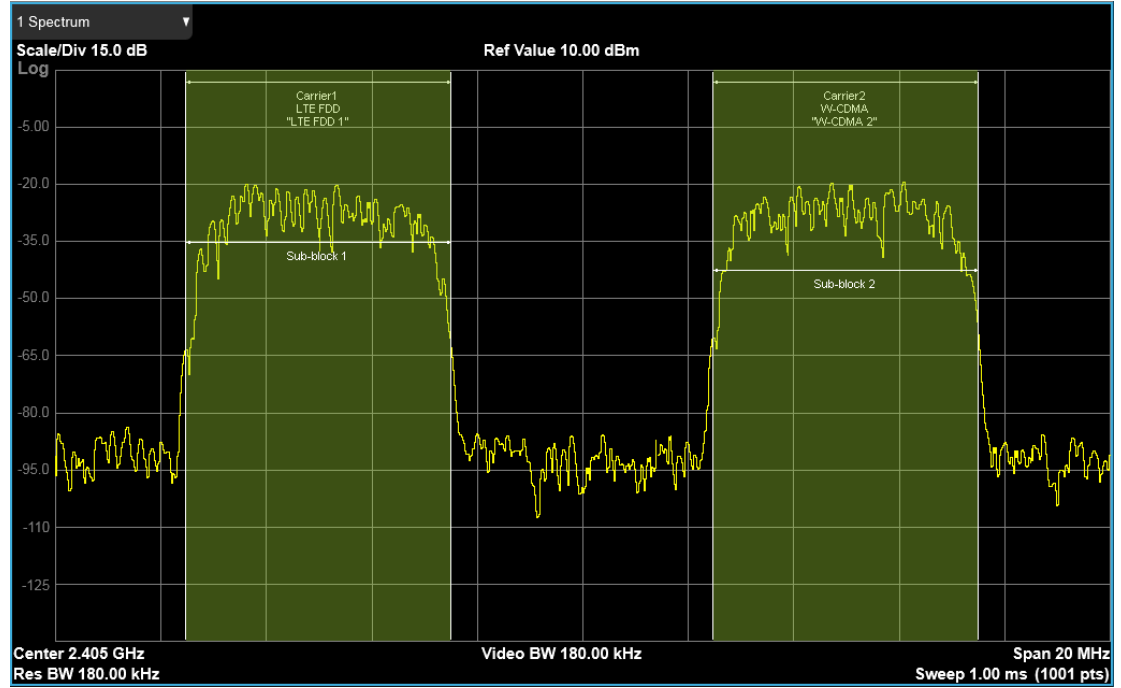


3.10.2.2 Carrier Info

In the Carrier Info window, the Carrier configuration is summarized in the lower window.

LTEAFDD/LTEATDD, 5GNR Modes

The Carrier configuration is summarized in the lower window as below:

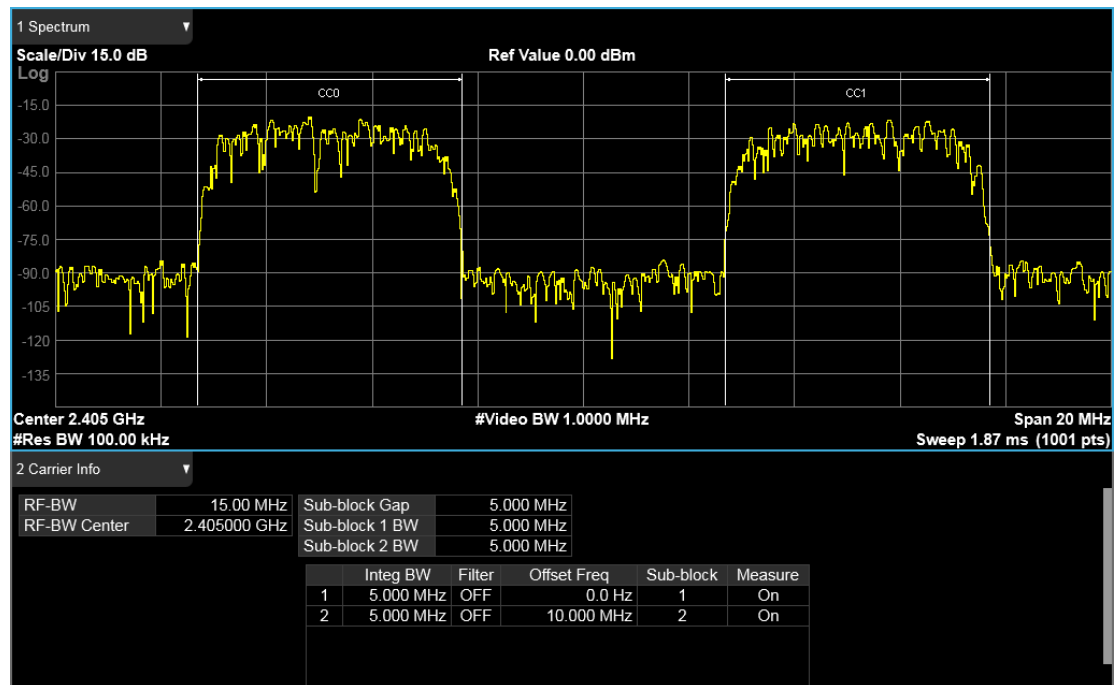

The text window displays the following results:

RF-BW and RF-BW Center

It shows the RF bandwidth calculated from the outermost component carriers and their freq offset, and the center frequency of the RF Bandwidth.

Sub-block configuration

As for intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It summarizes each sub-block bandwidth and the frequency gap between the two consecutive sub-blocks. The Sub-block gap and Sub-block 2 BW are displayed when Component Carrier Allocation is Non-Contiguous and two sub-blocks are separated.

Integration Bandwidth

It displays the transmission bandwidth each component carrier.

Filter

It displays whether RRC filter is used for MON measurement or not.

Offset Frequency

It shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block


It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier is measured or not.

MSR

The Carrier configuration is summarized in the lower window as below:

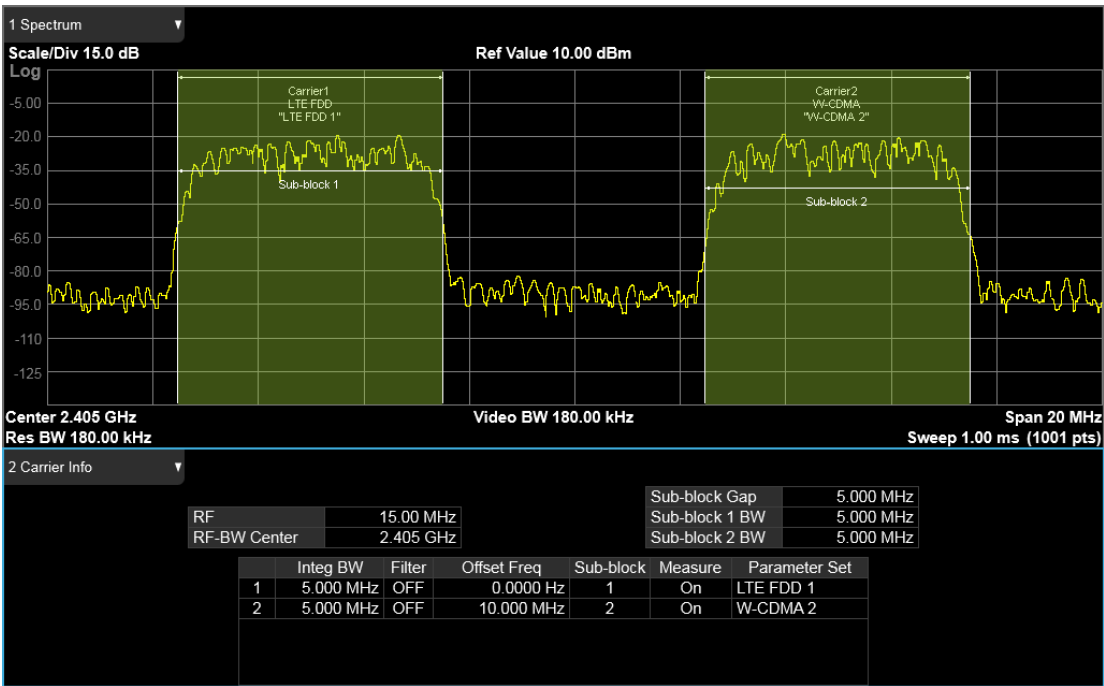

The text window displays the following results:

RF-BW and RF-BW Center

It shows the RF bandwidth calculated from the outermost component carriers and their freq offset, and the center frequency of the RF Bandwidth.

Sub-block configuration

As for intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for

transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It summarizes each sub-block bandwidth and the frequency gap between the two consecutive sub-blocks. The Sub-block gap and Sub-block 2 BW are displayed when Component Carrier Allocation is Non-Contiguous and two sub-blocks are separated.

Integration Bandwidth

It displays the transmission bandwidth each component carrier.

Filter

It displays whether RRC filter is used for MON measurement or not.

Offset Frequency

It shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block

It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

Measure

It shows whether the carrier is measured or not.

Parameter Set

It displays which format parameter set is selected.

3.10.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.10.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of "Ref Position" on page 2832.

Remote Command	:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	:DISP:MON:WIND:TRAC:Y:RLEV 2.0 :DISP:MON:WIND:TRAC:Y:RLEV?
Couplings	When "Auto Scaling" on page 2833 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF Attenuation is not coupled to "Ref Value" on page 2831
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel

Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> :DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?
Example	:DISP:MON:WIND:TRAC:Y:PDIV 5.0 dB :DISP:MON:WIND:TRAC:Y:PDIV?
Couplings	Coupled to Scale Range as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 2833 is ON, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to OFF

Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

Scale Range

Sets the Y Axis scale range.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGe <rel_ampl></code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:RANG 100</code> <code>:DISP:MON:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:MON:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition</code>
---------------------------------	---

Auto Scaling

Toggles the **Auto Scaling** function On or Off.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:MON:WIND:TRAC:Y:COUP?</code>
Couplings	When Auto Scaling is ON , and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change a value of Scale/Div , Ref Value , or Scale Range , Auto Scaling automatically changes to OFF
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

3.10.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 2834](#)
- See ["Single-Attenuator Configuration" on page 2834](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not*

appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

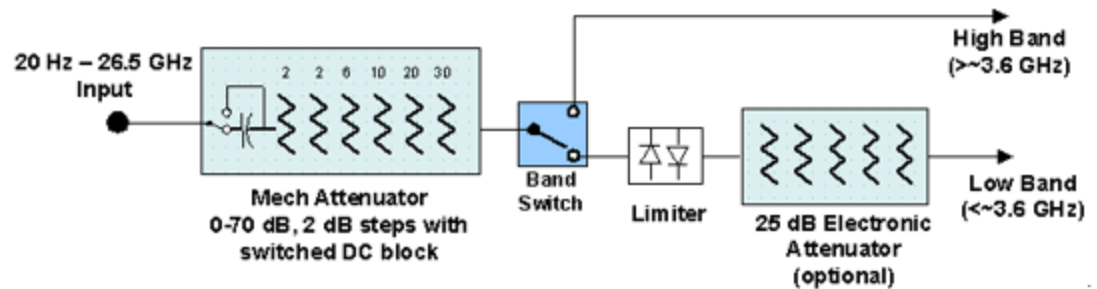


Configuration 2: Mechanical attenuator, no optional electronic attenuator

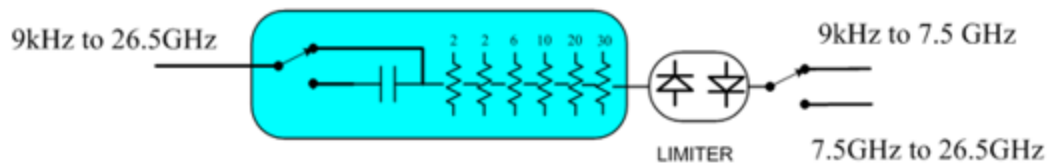

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

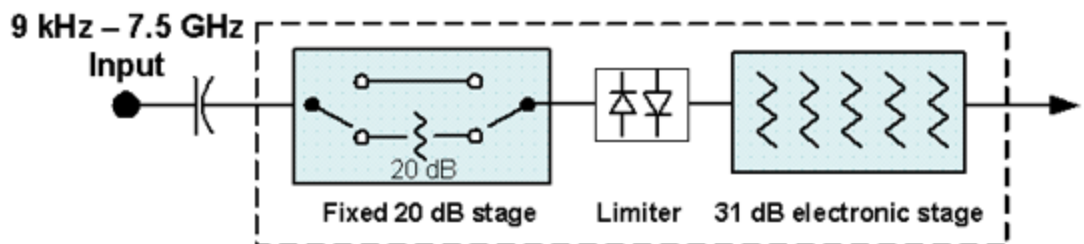

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the

Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and " Mech Atten " on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB

Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> - If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten - If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten - If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows: "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten "Total Atten above 50 GHz" followed by the value of Full Range Atten For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> - Attenuator summary: - Total Atten below 50 GHz: 30 dB - Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamplifier**" on page 3251 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 2838

Remote Command	<pre>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl> [:SENSe]:POWer[:RF]:ATTenuation?</pre>
Example	<pre>:POW:ATT 20</pre> <p>Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual</p>
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	<p>In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231</p> <p>See "Attenuator Configurations and Auto/Man" on page 2838 for more information on the Auto/Man functionality</p>	
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> – If the USB Preamp is connected to USB, use 0 dB for Mech Atten – Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto) – In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is ≤ 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>	
Preset	<p>Auto</p> <p>The Auto value is 10 dB</p>	
State Saved	Saved in instrument state	
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: <total> dB (e<elec>)</i></p>	

The e letter is in amber in Single-Attenuator configurations
For example:
Dual-Attenuator configuration:
Atten: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB
Single-Attenuator configuration:
A: 24 dB (e14)
Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)
When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn Auto Mech Atten ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support Auto , such as Swept SA
Preset	<code>ON</code>

Attenuator Configurations and Auto/Man


As described under "Attenuation" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.


In Single-Attenuator configurations, we refer to the attenuation set using "**Mech Atten**" on page 2836 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "**Elec Atten**" on page 3231 for more about “soft” attenuation.

NOTE	In some measurements, the Mech Atten control has an Auto/Man function. In these measurements, an Auto/Man switch is shown on the Mech Atten control:
------	--

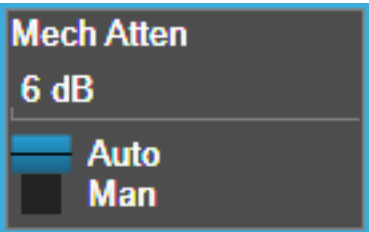

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.
In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

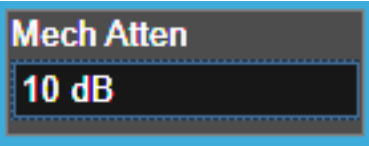

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 2841](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the Attenuation

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If **"Internal Preamplifier"** on page 3251 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamplifier** is unavailable

If **"LNA"** on page 3253 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On/Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 2841
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	[[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1 [:SENSe]:POWer[:RF]:EATTenuation:STATe?
Example	:POW:EATT:STAT ON

	:POW:EATT:STAT?
Preset	OFF (Disabled) for Swept SA measurement ON (Enabled) for all other measurements that support the electronic attenuator
NOTE	The maximum Center Frequency for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a Center Frequency that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 2842](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "Pre-Adjust for Min Clipping" on page 3236.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the "Adjust Atten for Min Clipping" on page 3234 function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>

Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWER[:RF]:RANge:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWER[:RF]:RANge:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWER[:RF]:RANge:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 3234 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 2845

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELEctrical	Selects only the electric attenuator to participate in auto

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Selection	SCPI	Note
Elec+Mech Atten	COMBined	ranging. This offers less wear on the mechanical attenuator and is usually faster In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	<pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</pre> <pre>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</pre>	
Example	<pre>:POW:RANG:OPT:ATT OFF</pre> <pre>:POW:RANG:OPT:ATT?</pre>	
Notes	<p>The parameter option ELECtrical sets this function to ON in Single-Attenuator models</p> <p>The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined, it sets the function to ON and returns ELEC to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined</p>	
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "Elec Atten" on page 3231 is OFF or grayed-out, "Pre-Adjust for Min Clipping" on page 2844 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	<p>ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p>OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0</pre> <pre>[:SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

Adjustment Algorithm

The algorithms for the adjustment are documented below:

Single-Attenuator Models

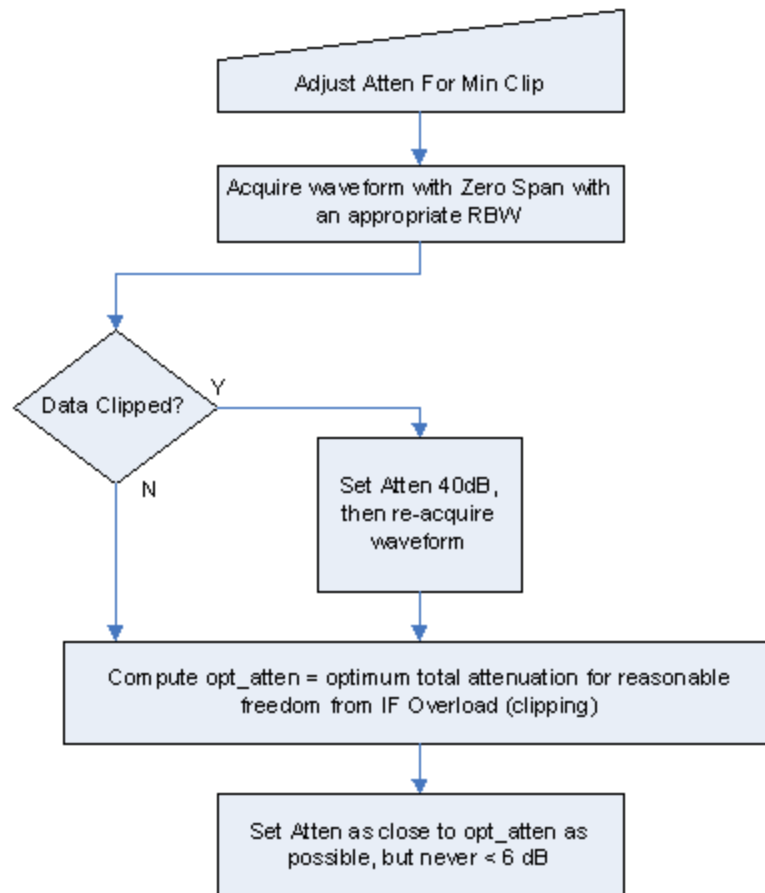


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 2844 selection is Mech + Elec Atten:


3 5G NR Mode

3.10 Monitor Spectrum Measurement

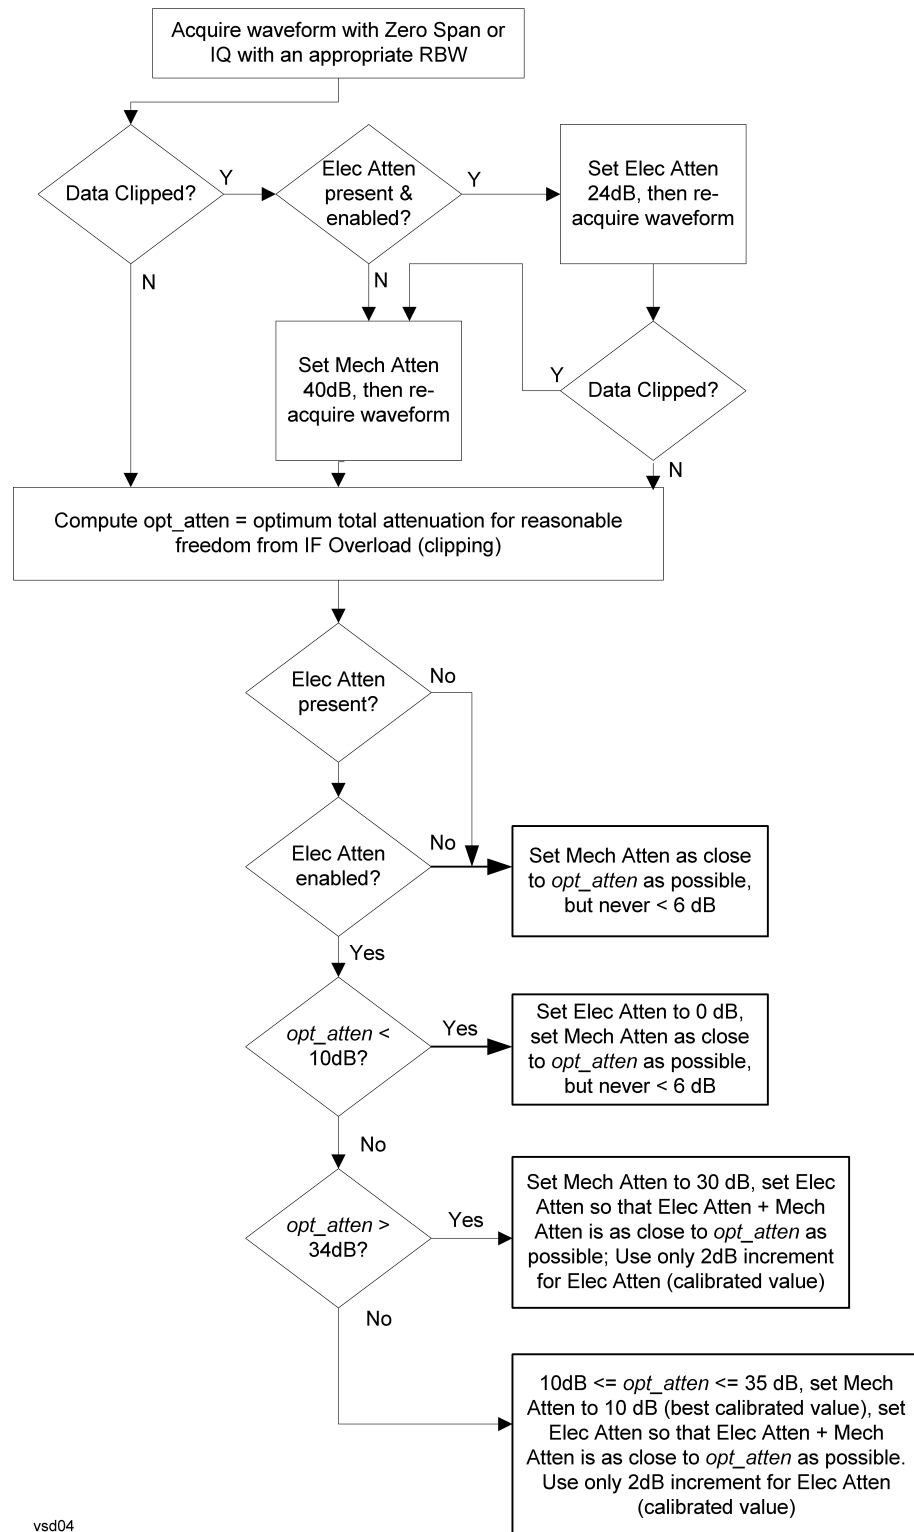

"Pre-Adjust for Min Clipping" on page 2844 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

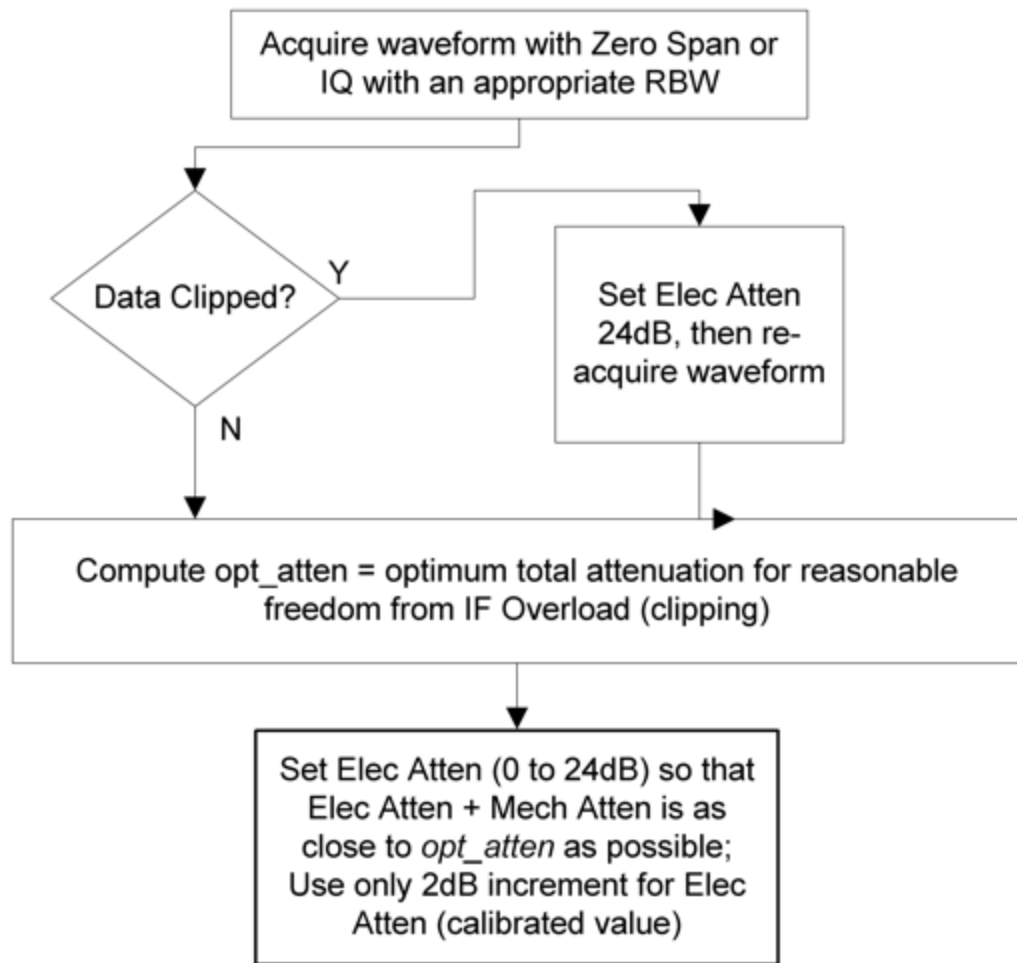

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.10.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELEctrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELEctrical , COMBined , and ON) are honored and all are mapped to ELEctrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

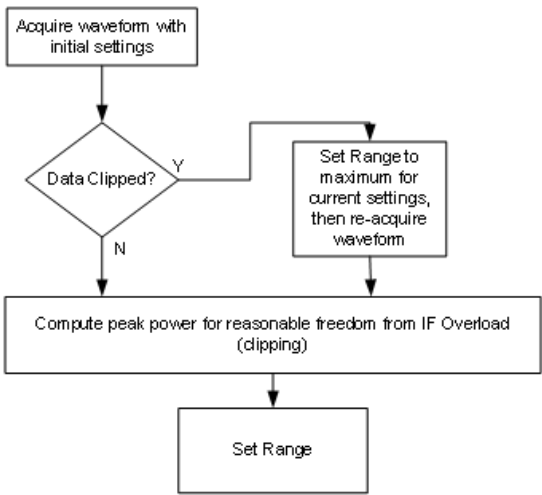

Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 3245 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:PARatio <real></code> <code>[:SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting ["Peak-to-Average Ratio" on page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.10.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on **"Preselector Adjust" on page 3250** changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in **"Proper Preselector Operation" on page 2853**.

Remote Command	<code>[:SENSe] :POWer [:RF] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> - Does not appear in CXA-m - Does not appear in VXT Models M9410A/11A/15A/16A - Does not appear in M9410E/11E/15E/16E - Grayed-out if microwave preselector is off - Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz - Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz - Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 - Grayed-out in the Spectrogram View
Preset	0 MHz

State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	–/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXternal</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 3251. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.


For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 3251, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 2857


Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:



Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:



μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 2862
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 2864
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 2865

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Remote Command	[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL [:SENSe]:POWer[:RF]:MW:PATH?															
Example	:POW:MW:PATH LNP Enables the Low Noise path :POW:MW:PATH?															
Notes	<p>When "Presel Center" on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control</p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>															
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none">– The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed– The μW Preselector Bypass selection does not appear unless Option MPB is present and licensed– The Full Bypass Enable selection does not appear unless options LNP and MPB are both present as well as option FBP <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p>Low Noise Path Enable and Full Bypass Enable are grayed-out if the current measurement does not support them</p> <p>Low Noise Path Enable and Full Bypass Enable are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>															
Preset	<table><tr><th>Mode</th><th>Value</th></tr><tr><td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr><tr><td>Pulse</td><td>MPB option not present and licensed: STD</td></tr><tr><td>RTSA</td><td></td></tr><tr><td>Avionics</td><td></td></tr><tr><td>All other Modes</td><td>STD</td></tr><tr><td>–</td><td></td></tr></table>		Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	–	
Mode	Value															
IQ Analyzer	MPB option present and licensed: MPB															
Pulse	MPB option not present and licensed: STD															
RTSA																
Avionics																
All other Modes	STD															
–																
State Saved	Save in instrument state															
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable															

Annotation	<p>In the Meas Bar, if the Standard path is chosen: μW Path: Standard If Low Noise Path is enabled but the LNP switch is not thrown: μW Path: LNP,Off If the Low Noise Path is enabled and the LNP switch is thrown: μW Path: LNP,On If the preselector is bypassed: μW Path: Bypass If Full Bypass Enable is selected but the LNP switch is not thrown: μW Path: FByp,Off If Full Bypass Enable is selected and the LNP switch is thrown: μW Path: FByp,On</p>
------------	--

μ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to μ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Measurement	μ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	μW Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	μW Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 2860 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

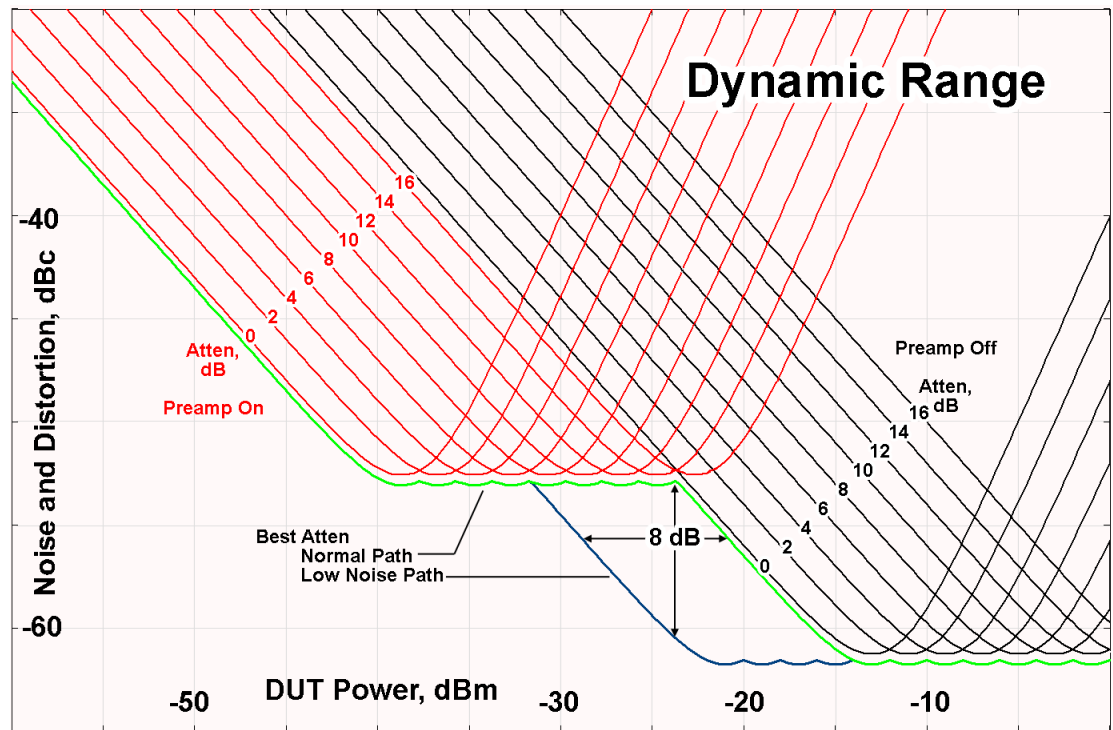

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (<code>:POW:MW:PATH STD</code>) The OFF parameter sets path MPB (<code>:POW:MW:PATH MPB</code>)
Preset	ON
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1</code> <code>[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].


For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict


When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:
"Full Bypass Enabled, maximum safe input power reduced"

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none">5GNRMode: Modulation Analysis and IQ WaveformWLAN Mode: IQ WaveformChannel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two

traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPrese1:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPrese1:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPResel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPResel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept	

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	method
	Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled"
	For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled
Preset	<div>N9041B NORMa1</div> <div>N9042B+V3050A NARRow</div>
State Saved	Saved in instrument state

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 2871 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF

Meas	Mode	Preset
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.10.4 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

3.10.4.1 Settings

Contains the basic bandwidth functions. It is the only tab under **BW**.

Res BW

Activates the resolution bandwidth active function, which allows you to manually set the Resolution Bandwidth (RBW) of the instrument.

Normally, **Res BW** (Auto) selects automatic coupling of the Res BW to Span using the ratio set by the Span:3 dB RBW control (some measurements do not have a Span:3 dB RBW control, in which case the measurement chooses the optimal ratio).

3 5G NR Mode

3.10 Monitor Spectrum Measurement

To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing Auto Couple or by performing a **Preset**.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

See ["RBW Presets" on page 2874](#)

Remote Command	<pre>[:SENSe]:MONitor:BANDwidth[:RESolution] <bandwidth> [:SENSe]:MONitor:BANDwidth[:RESolution]? [:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO ON OFF 1 0 [:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:MON:BAND 5 MHz :MON:BAND? :MON:BAND:AUTO ON :MON:BAND:AUTO?</pre>
Notes	<p>For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered</p> <p>The setting and querying of values depends on the current bandwidth type</p>
Couplings	<p>Sweep time is coupled to the RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration</p> <p>Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1)</p> <p>When the Res BW is set to Auto, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings</p>
Preset	<p>Auto (unless noted in the table below)</p> <p>See "RBW Presets" on page 2874 below</p>
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than –3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	<p>For backwards compatibility this command obeys both the BANDwidth and BWIDth forms</p> <p>For ESA, the maximum Res BW was 5 MHz; on X-Series it is 8 MHz</p>

RBW Presets

Unless noted in the table below, the Preset value of RBW is **Auto**.

Mode	Preset RBW
WLAN	100 kHz
LTE, LTETDD, LTEAFDD, LTEATDD	100 kHz
5GNR	100 kHz

Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to RBW using the ratio set by the VBW:3 dB RBW control. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Video BW** control. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	<pre>[:SENSe]:MONitor:BANDwidth:VIDeo <bandwidth> [:SENSe]:MONitor:BANDwidth:VIDeo? [:SENSe]:MONitor:BANDwidth:VIDeo:AUTO ON OFF 1 0 [:SENSe]:MONitor:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>:MON:BAND:VID 2.4 MHz :MON:BAND:VID? :MON:BAND:VID:AUTO ON :MON:BAND:VID:AUTO?</pre>
Notes	<p>For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open”</p> <p>The values shown in this table reflect the conditions after a Mode Preset</p>
Dependencies	<p>Sometimes the displayed Video BW is not actually used to process the trace data:</p> <ul style="list-style-type: none"> When the Average Detector is selected and Sweep Type is set to Swept, the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	When this is the case, the VBW still acts to change the Sweep Time, if Sweep Time is in Auto, and still affects the data on other traces for which this is not the case
Couplings	Video bandwidth (VBW) is normally coupled to RBW. If VBW is set to Auto, then the VBW is changed as the RBW changes, to maintain the ratio set by the VBW:3 dB RBW control (usually 10:1 for measurements that do not have a VBW:3 dB RBW control)
Preset	Auto (unless noted in table below) ON
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A “#” mark appears before “VBW” in the annotation when it is not coupled
Annotation	In the bottom center of the screen, “VBW <value> <units>” indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility this command obeys both the BANDwidth and BWIDth forms

VBW Presets

Unless noted in the table below, the Preset value of VBW is **Auto**.

Mode	Preset VBW
WLAN	1 MHz
LTE, LTETDD, LTEAFDD, LTEATDD	1 MHz
5GNR	1 MHz

VBW:3dB RBW

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used for setting VBW when VBW is in Auto.

VBW:3dB RBW (Auto) selects automatic coupling of the VBW:3 dB RBW ratio to Detector using the rules described below in ["Coupling Auto Rules" on page 2876](#). To decouple the ratio, press the **Auto/Man** toggle on the VBW:3 dB RBW control, or simply enter a different value for VBW:3 dB RBW.

When the VBW:3dB RBW is manually selected, it may be returned to the coupled state by setting the toggle on the VBW:3 dB RBW control back to **Auto**. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	[:SENSe]:MONitor:BANDwidth:VIDeo:RATio <real> [:SENSe]:MONitor:BANDwidth:VIDeo:RATio?
----------------	--

	<code>[:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1</code> <code>[:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO?</code>
Example	<code>:MON:BAND:VID:RAT 2</code> <code>:MON:BAND:VID:RAT?</code> <code>:MON:BAND:VID:RAT:AUTO 0</code> <code>:MON:BAND:VID:RAT:AUTO?</code>
Notes	The values shown in this table reflect the conditions after a Mode Preset
Couplings	See "Coupling Auto Rules" on page 2876
Preset	1 ON
State Saved	Saved in instrument state
Min	0.00001
Max	3000000
Backwards Compatibility Notes	For backwards compatibility this command accepts both the <code>BANDwidth</code> and <code>BWIDth</code> forms

Coupling Auto Rules

The Auto Rules for the **VBW:3dB RBW** function are as follows.

First, if Source Mode is set to "Tracking": Use 1.0

Otherwise, we go through the following list of detector numbers and find the lowest numbered detector being used on any active traces (traces for which Update is On):

1. Peak
2. Normal
3. Average
4. Sample
5. Negative Peak
6. EMI Average
7. Quasi Peak
8. RMS Average

Use that detector to pick the ratio based on the following criteria:

3 5G NR Mode

3.10 Monitor Spectrum Measurement

1. If the measurement supports EMC Standard, and the detector is Peak and the EMC Standard is set to either CISPR or MIL, use 10.0 (we use wide VBWs to capture peak levels accurately).
2. Otherwise, if the detector is **Negative Peak**, use 1.0 (in the Negative Peak case, there are no known significant use models so we use a medium ratio).
3. Otherwise, if the detector is **Normal**, use 1.0.
4. Otherwise, if the detector is **Average**, and the span is nonzero, use 0.1. The use of a small ratio in Average detection is desirable because of its effect on the sweep time equations. The VBW filter is not actually in-circuit when the average detector is on. If the detector is Average, and the span is zero, use 10.0, which gives optimal behavior for Interval Markers in zero span. Note that only the Swept SA measurement supports Zero Span.
5. Otherwise, if the detector is EMI Average, Quasi Peak or RMS Average, use 10.0. In fact, this is a “don’t care” since no VBW is used for these detectors, as noted under “Dependencies” for the VBW control
6. Otherwise, the detector is simply **Peak** or **Sample**. These two detectors can use the same rules. In these cases, if any active trace is in max hold or min hold, use 10.0, because Max and Min Hold operations will usually be intended to capture peaks and pits without smoothing from the VBW filter; otherwise, use 1.0 as a compromise, because you have not set the instrument in a way that implies that you are measuring noise, pulsed-RF or CW signals, and for backward compatibility with earlier instruments.

Note that because the above couplings depend on which traces are active, they are re-examined whenever any trace goes active or inactive, except when this leaves no traces active. Transitioning to the state where no traces are active should not affect the couplings; in that way, the annotation will always reflect the state of the last trace which was active.

Note also that some detectors are not available in some measurements, but because of the way the above rules that does not change the logic of the rules.

Span:3dB RBW

Selects the ratio between span and resolution bandwidth.

Normally, Span:3dB RBW (Auto) selects a Span:3 dB RBW ratio of 106:1. If you manually enter the ratio, the toggle on the Span:3dB RBW control will change to **Man**. This enables you to manually select ratios more suitable for certain measurements.

When the Span:3dB RBW is manually selected, it may be returned to the coupled state by setting the toggle on the RBW:3 dB RBW control back to **Auto**. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	<pre>[:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio <integer> [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio? [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF ON 0 1 [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO?</pre>
Example	<pre>:MON:FREQ:SPAN:BAND:RAT 200 :MON:FREQ:SPAN:BAND:RAT? :MON:FREQ:SPAN:BAND:RAT:AUTO ON :MON:FREQ:SPAN:BAND:RAT:AUTO?</pre>
Notes	The values shown in this table reflect the conditions after a Mode Preset
Preset	106 ON
State Saved	Saved in instrument state
Min	2
Max	10000
Backwards Compatibility SCPI	[:SENSe]:MONitor:FREQuency:SPAN:BWIDth[:RESolution]:RATio

3.10.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.10.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Carrier Attribute

Toggles whether or not carrier information is shown on the spectrum trace.

Carrier information is displayed when carrier attribute is on . When the Span is greater, there is insufficient space to display the texts. In this case, only vertical lines and arrows are displayed, without text.

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:CATtribute OFF ON 0 1</code> <code>:DISPlay:MONitor:VIEW:WINDow:CATtribute?</code>
Example	<code>:DISP:MON:VIEW:WIND:CATT 0</code> <code>:DISP:MON:VIEW:WIND:CATT?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

Sub-block Attribute

Toggles the sub-block information on the spectrum trace. Sub-block attributes are displayed when the setting is selected as on.

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:SATtribute[:STATe] OFF ON 0 1</code> <code>:DISPlay:MONitor:VIEW:WINDow:SATtribute[:STATe]?</code>
Example	<code>:DISP:MON:VIEW:WIND:SATT 0</code> <code>:DISP:MON:VIEW:WIND:SATT?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON

Carrier Freq

Selects frequency display type between:

- **OFFSet**: carrier frequencies in the carrier table are shown as offsets from Carrier Ref Freq
- **ABSolute**: absolute frequencies are displayed

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency OFFSet ABSolute</code> <code>:DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency?</code>
Example	<code>:DISP:MON:VIEW:WIND:CINF:FREQ ABS</code> <code>:DISP:MON:VIEW:WIND:CINF:FREQ?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet ABSolute

3.10.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "Views" on page 2823

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:NAME “Baseband”</code> Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <code><alphanumeric></code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated</p>

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName <alphanumeric></code>
----------------	---

Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message "-224, Illegal parameter value; View <alphanumeric> does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy

nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement Example: <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code> No distinction is made between Predefined and User Views If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined

3.10.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
----------------	--

Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Name	Command
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.10.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.10.6.1 Settings

The Settings tab contains the basic Bandwidth functions. In most measurements it is the only tab under Bandwidth.

Carrier Reference Frequency

Sets carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR, if the following conditions are satisfied at the same time:

- the Number of Component Carrier equals 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

then the Center Freq is equivalent to Carrier Ref Freq. When the Center Freq changes in such conditions, the mode of the Center Freq remains as Auto and the Carrier Ref Freq will be changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which **:SENSe:FREQUENCY:CENTer** is used to set up the Frequency of the measurement.

See ["More Information" on page 2888](#).

Remote Command	For LTEAFDD/LTEATDD, 5G NR: [:SENSe]:CCARrier:REference <freq> [:SENSe]:CCARrier:REference? For MSR: [:SENSe]:CARRier:REference <freq> [:SENSe]:CARRier:REference?
Example	For LTEAFDD/LTEATDD, 5G NR: :CCAR:REF 2GHz :CCAR:REF? For MSR: :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTEAFDD/LTEATDD, 5G NR and MSR Modes
Preset	1 GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as Center Freq

More Information

In most applications, Center Frequency is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced

TDD/FDD mode, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The Center Frequency defined here only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The Center Frequency in these three measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency which determines absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

Since Center Frequency is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the Frequency menu of these measurements.

Considering the legacy LTE usability in the converged LTE & LTE-A application, when the mode of the Center Frequency is Auto and the Number of Component Carrier equals to 1 and the Center Frequency Offset equals to 0 Hz, the Center Frequency is equivalent to Carrier Reference Frequency, which is used to set up the Frequency of all the measurements.

Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting the Center Frequency the Span is held constant.

The center frequency setting is the same for all measurements within a mode, that is, it is Meas Global. Some modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a **Global** tab in its **Meas Setup** menu.

The **Center Freq** function sets (and queries) the Center Frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

Center Freq is remembered as you go from input to input. Thus, you can set a Center Freq of 10 GHz with the RF Input selected, change to BBIQ, and set a Center Freq of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input the Center Freq will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

See:

- "Center Frequency Presets" on page 2892
- "VXT Models with Radio Heads/CIU Frequency Range" on page 2894
- "RF Center Freq" on page 2894
- "Ext Mix Center Freq" on page 2895
- "I/Q Center Freq" on page 2895

Remote Command	<code>[:SENSe]:FREQuency:CENTer <freq></code> <code>[:SENSe]:FREQuency:CENTer?</code>
Example	<p><code>:FREQ:CENT 50 MHz</code></p> <p>Sets Center Frequency to 50 MHz</p> <p><code>:FREQ:CENT UP</code></p> <p>Increments the Center Frequency by the value of CF Step</p> <p><code>:FREQ:CENT?</code></p> <p>Returns the current value of Center Frequency</p>
Notes	<p>Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input:</p> <ul style="list-style-type: none"> – For RF input it is equivalent to <code>:FREQ:RF:CENT</code> – For I/Q input it is equivalent to <code>:FREQ:IQ:CENT</code> – For External Mixer it is equivalent to <code>:FREQ:EMIX:CENT</code> <p>Preset and Max values are dependent on Hardware Options (5xx)</p> <p>If no terminator (for example, MHz) is sent, the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated</p>
Couplings	<p>In LTEAFDD/LTEATDD and 5GNR Modes:</p> <p>Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled with the following equation:</p> <p>Center Frequency = Carrier Reference Frequency + Center Frequency Offset</p> <p>If the following conditions are satisfied at the same time:</p> <ul style="list-style-type: none"> – the Num Component Carrier equals to 1 – the Center Frequency Offset equals to 0 Hz – the mode of the Center Frequency is Auto <p>The Center Frequency is equivalent to Carrier Reference Frequency</p> <p>The major purpose of this coupling is to keep BWCC with legacy LTE, in which <code>:SENSe:FREQuency:CENTer</code> is used to set up the Frequency of the measurement</p> <p>Otherwise, the Center Frequency Offset is changed following the Center Frequency and the Carrier Reference Frequency keeps intact</p>

3 5G NR Mode

3.10 Monitor Spectrum Measurement

In MSR, Center Freq, Center Freq Offset and Carrier Ref Freq are coupled with the equation, Center Freq = Carrier Ref Freq + Center Freq Offset. When Center Freq is changed, Center Freq Offset is updated and Carrier Ref Freq is not changed

When auto, Center Freq Offset remains the same value. Thus, Center Freq changes the same amount of Carrier Ref Freq change when Carrier Ref Freq is changed. The auto state changes to manual when either Center Freq is changed

In Bluetooth Mode:

Center Frequency is coupled to Channel and Geography

- If Geography is France: Center Frequency 2454 MHz + (channel number* channel space) MHz
- If Geography is Others: Center Frequency 2402 MHz + (channel number* channel space) MHz
- If Radio Stand is Basic or EDR, channel space is 1 MHz
- If Radio Stand is Low Energy, channel space is 2 MHz

In other modes:

Any value of the Center Frequency or Span that keeps start frequency and stop frequency within the frequency range of the instrument is allowed when the value is being set through the front panel numeric keypad or the SCPI command. Other frequency parameters are forced to different values if needed, to keep the start and stop frequencies within the instrument's frequency range

Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2892, "RF Center Freq" on page 2894, "Ext Mix Center Freq" on page 2895, "I/Q Center Freq" on page 2895 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2894
State Saved	Saved in instrument state
Min/Max	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2892, "RF Center Freq" on page 2894, "Ext Mix Center Freq" on page 2895, "I/Q Center Freq" on page 2895 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2894
Annotation	Center <value> appears in the lower left corner of the display
Status Bits/OPC dependencies	Non-overlapped

Center Frequency Auto State

Remote Command	<code>[:SENSe]:FREQuency:CENTer:AUTO ON OFF 1 0</code> <code>[:SENSe]:FREQuency:CENTer:AUTO?</code>
Example	<code>:FREQ:CEN:AUTO OFF</code> <code>:FREQ:CEN:AUTO?</code>
Dependencies	This is only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Couplings	When the Center Frequency is changed, the state is automatically changed to Manual

Center Frequency, Center Frequency Offset and **Carrier Reference Frequency** are coupled. When Carrier Reference Frequency changes:

- Center Frequency : Auto Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)
- Center Frequency : Man Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset

Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

*For option 526, the Max CF in RTSA is 26.999999995 GHz.

N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

RF Center Freq

Specifies the RF Center Frequency. This command sets the Center Frequency to be used when the RF input is selected, even if the RF input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page 2889** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:RF:CENTer <freq></code> <code>[:SENSe]:FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be >3.6 GHz fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a "-221, Settings conflict" warning
Preset	See "Center Frequency Presets" on page 2892 above
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See table above. Basically, instrument maximum frequency - 5 Hz If the knob or step keys are being used, also depends on the value of Span

Ext Mix Center Freq

Specifies the External Mixer Center Frequency. This command sets the Center Frequency to be used when the External Mixer is selected, even if the External Mixer input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page 2889** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe] :FREQuency:EMIXer:CENTer <freq></code> <code>[:SENSe] :FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having been switched to one of the other inputs (e.g., RF), you will come back into the settings that you had when you left External Mixing. So, you will come back to the band you were in with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore you will bring the span over from the other input. Therefore, the instrument comes back with the span from the previous input, limited as necessary by the current mixer setup
Preset	<p>When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. The Center Freq thus presets to the point arithmetically equidistant from these two frequencies</p> <p>Note that, if the current measurement has a limited Span available to it, and cannot achieve the Span shown in the table (Span=Stop Freq – Start Freq), the instrument uses the maximum Span the measurement allows, and still sets the Center Freq to the midpoint of the Start and Stop Freq values in the Harmonic Table</p> <p>When Restore Input/Output Defaults is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz. Therefore, after a Restore Input/Output Defaults, if you go into External Mixing and do a Mode Preset while in the Spectrum Analyzer Mode, the resulting Center Freq is 33.25 GHz</p>
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band + 5 Hz If the knob or step keys are being used, also depends on Span
Max	The maximum frequency in the currently selected mixer band - 5 Hz If the knob or step keys are being used, also depends on Span

I/Q Center Freq

Specifies the I/Q Center Frequency. This command sets the Center Frequency to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page 2889** in the **Frequency** menu on the front panel always applies to the currently

selected input.

Remote Command	<code>[:SENSe]:FREQuency:IQ:CENTer <freq></code> <code>[:SENSe]:FREQuency:IQ:CENTer?</code>
Example	<code>:FREQ:IQ:CENT 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min	-40.049995 MHz
Max	40.049995 MHz

Center Frequency Offset

This setting is coupled with Center Frequency, and is only used in Monitor Spectrum, IQ Waveform, Power Stat CCDF and PAVT measurements. **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled with this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

If you change **Center Frequency Offset**, **Center Frequency** is updated and **Carrier Reference Frequency** is not.

Remote Command	<code>[:SENSe]:FREQuency:CENTer:OFFSet <freq></code> <code>[:SENSe]:FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Preset	0 GHz
State Saved	Saved in instrument state
Min	-500 GHz
Max	500 GHz

Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting the Span, the Center Frequency is held constant, this means that both Start Frequency and Stop Frequency will change.

If the Span is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

See ["Span Presets" on page 2897](#)

Remote Command	<code>[:SENSe]:MONitor:FREQuency:SPAN <freq></code> <code>[:SENSe]:MONitor:FREQuency:SPAN?</code>
Example	<code>:MON:FREQ:SPAN 10 MHz</code> <code>:MON:FREQ:SPAN?</code>
Dependencies	If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is on in Continuous sweep, as there is a mechanical switch which bypasses the RF Preselector above 3.6 GHz
Couplings	Span affects RBW, sweptime, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings) <ul style="list-style-type: none"> Any value of the Center Frequency or Span that is within the frequency range of the instrument is allowed when the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the instrument's frequency range When using the knob or the step up/down keys or the UP DOWN keywords in SCPI, the value that is being changed i.e., the Center Frequency or Span, is limited so that the other parameter is not forced to a new value
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See "Span Presets" on page 2897
State Saved	Saved in instrument state
Min	10 Hz
Max	Depends on instrument maximum frequency, mode, measurement, and selected input; see "Span Presets" on page 2897 If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency
Annunciation	Data out of range, value clipped to upper limit
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display

Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz

Freq Option	Max Span (can't set higher than this)
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

Model	Max Span (can't set higher than this)
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

Span Presets by Mode

Mode	Radio Std	Preset Value
WCDMA		10.0 MHz
PN		1.0 MHz
GSM/EDGE		1.0 MHz
WLAN	802.11a/b/g/n/ac/ax/be (20 MHz)	25 MHz
	802.11n/ac/ax/be (40MHz)	50 MHz
	802.11ac/ax/be (80MHz)	100 MHz
	802.11ac /ax/be (160MHz)	200 MHz
	802.11be (320MHz)	400 MHz
MSR		20 MHz
LTEAFDD, LTEATDD		20 MHz
5G NR		150 MHz
RTS		40 kHz
CQM		10 MHz

CF Step

Changes the step size for the center frequency and start and stop frequency functions. Once a step size has been selected and the center frequency function is active, the step keys (and the UP|DOWN parameters for Center Frequency from remote commands) change the center frequency by the step-size value. The step size function is useful for finding harmonics and sidebands beyond the current frequency span of the instrument.

Note that the start and stop frequencies also step by the CF Step value.

Remote Command	<pre>[:SENSe]:FREQuency:CENTer:STEP[:INCRe ment] <freq> [:SENSe]:FREQuency:CENTer:STEP[:INCRe ment]? [:SENSe]:FREQuency:CENTer:STEP:AUTO OFF ON 0 1 [:SENSe]:FREQuency:CENTer:STEP:AUTO?</pre>
Example	<pre>:FREQ:CENT:STEP 500 MHz :FREQ:CENT UP</pre> <p>Increases the current center frequency value by 500 MHz</p> <pre>:FREQ:CENT:STEP? :FREQ:CENT:STEP:AUTO ON :FREQ:CENT:STEP:AUTO?</pre>
Notes	Preset and Max values are dependent on Hardware Options
Dependencies	<p>Not available in MSR, LTEAFDD/LTEATDD, 5GNR and Channel Quality Modes</p> <p>If the electronic/soft attenuator is enabled, any attempt to change the value of the center frequency >3.6 GHz by pressing the Up-arrow key, fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning</p>
Couplings	When auto-coupled, the center frequency step size is set to 10% of the span
Preset	<p>Auto</p> <p>ON</p>
State Saved	Saved in instrument state
Min	– (the maximum frequency of the instrument). That is, 27 GHz max freq instrument has a CF step range of +/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Max	The maximum frequency of the instrument. That is, 27 GHz max freq instrument has a CF step range of +/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Status Bits/OPC dependencies	non-overlapped

Adjust Span to Carrier Config

This immediate-action control sets Span and Center Frequency to monitor all the configured carriers.

When executed, Span will be set based on the bandwidth and frequency offset of each carrier regardless of Measure Carrier state. Center Frequency will be set to the center of the Span

Remote Command	<code>[:SENSe]:MONitor:FREQuency:SPAN:ADJust</code>
Example	<code>:MON:FREQ:SPAN:ADJ</code>

3.10.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

For more detailed information on the types of Markers and the interaction between Markers, see the Marker section of the Swept SA measurement.

3.10.7.1 Select Marker

Specifies the *selected marker*. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

On any menu tab for which Select Marker displays, the first control is always **Marker Frequency|Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for Normal and Delta markers

3.10.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, or Off) for the selected marker, as well as additional functions that help you use markers.

Marker Frequency

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X <freq></code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:MON:MARK3:X 0</code> <code>:CALC:MON:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Marker X Axis Position (Remote Command Only)

Sets the marker X Axis Scale position in trace points. This setting has no effect if the control mode is Off, but is the SCPI equivalent of entering a value if the control mode is Normal or Delta - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X:POStion <real></code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X:POStion?</code>
Example	<code>:CALC:MON:MARK:X:POS 0</code> <code>:CALC:MON:MARK:X:POS?</code>
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the

	offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points . When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is Off the response is not a number
Preset	After a preset, all markers are turned OFF , so Marker X Axis Value query returns a not a number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:MON:MARK11:Y?</code>
Notes	Returns the marker Y-axis result if the control mode is Normal or Delta . If the marker is Off , the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:RESult?</code>

Marker Mode

Sets the marker control mode to **Normal** (**POSition**), **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function and the active function is turned off.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MODE POSition DELTa OFF</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:MON:MARK:MODE POS</code> <code>:CALC:MON:MARK:MODE?</code>

Preset	OFF
State Saved	Saved in instrument state
Range	POsition DELta OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is OFF to ON (1) puts it in Normal mode and places it at the center of the screen.

Remote Command	:CALCulate:MONitor:MARKer[1] 2 ... 12:STATe OFF ON 0 1 :CALCulate:MONitor:MARKer[1] 2 ... 12:STATe?
Example	:CALC:MON:MARK3:STAT ON :CALC:MON:MARK3:STAT?
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON

Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as selecting the Delta selection in "Marker Mode" on page 2902. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:MONitor:MARKer:AOff
Example	:CALC:MON:MARK:AOff

Couple Markers

When this function is **ON**, moving any marker causes an equal X Axis movement of every other marker that is not Off. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	<code>:CALCulate:MONitor:MARKer:COUPle[:STATe] ON OFF 1 0</code> <code>:CALCulate:MONitor:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:MON:MARK:COUP ON</code> <code>:CALC:MON:MARK:COUP?</code>
Preset	OFF Presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

3.10.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu and performs a Peak Search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a Peak Search.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "**Marker Frequency**" on page 2901 on the **Settings** tab.

Peak Search

Moves the selected marker to the trace point which has the maximum y-axis value for that marker’s trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu and performs a Peak Search.

If the selected marker was off, then it is turned on as a normal marker, and a Peak Search is performed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:MON:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. If a search is unsuccessful, then the message "Execution error; No peak found" (-200) will be returned
Notes	Sending this command selects the subopcoded marker

Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value. If there is no valid peak lower than the current marker value, an "Execution error; No peak found" message is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:MON:MARK2:MAX:NEXT</code> selects marker 2 and moves it to the peak that is next lower in amplitude than the current marker value
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Marker Delta

Pressing this control has exactly the same effect as selecting the **Delta** selection in "Marker Mode" on page 2902 on the **Settings** tab. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to Delta without having to access two separate menus.

3.10.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as ["Marker Frequency" on page 2901](#) on the **Settings** tab.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:REference <integer></code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:REference?</code>
Example	<code>:CALC:MON:MARK2:REF 1</code> <code>:CALC:MON:MARK2:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself” When queried a single value is returned (the specified marker numbers relative marker)
Couplings	The act of specifying the selected marker’s reference marker makes the selected marker a Delta marker If the reference marker is off it is turned on in Normal mode at the delta marker location
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it’s default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a Marker Trace manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:TRACe 1 2 3</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:MON:MARK:TRAC 1</code> <code>:CALC:MON:MARK:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by the "Auto Couple" on page 3289 key Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state
Min	1
Max	3

Marker Settings Diagram

Lets you configure the Marker system using a visual utility. This is the same as the **"Marker Settings Diagram" on page 2903** control on the **Settings** tab.

3.10.7.5 Marker Function

The controls on this tab allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data.

The **Marker Function** menu controls which marker functions are turned on and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- Marker Noise
- Band Power
- Band Density
- Off

Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "Marker Frequency" on page 2901 on the Settings tab.

Marker Function

Sets the marker control function type to one of the following:

NOISe	Marker Noise
BPOWer	Band Power
BDENsity	Band Density
OFF	Marker Function Off

Remote Command	:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNctIon NOISe BPOWer BDENsity OFF :CALCulate:MONitor:MARKer[1] 2 ... 12:FUNctIon?
Example	:CALC:MON:MARK:FUNC NOIS :CALC:MON:MARK:FUNC?
Preset	OFF
State Saved	Yes
Range	NOISe BPOWer BDENsity OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Band Span

Sets the width of the frequency span for the selected marker.

Remote Command	:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNctIon:BAND:SPAN <freq> :CALCulate:MONitor:MARKer[1] 2 ... 12:FUNctIon:BAND:SPAN?
Example	:CALC:MON:MARK12:FUNC:BAND:SPAN 20 MHz :CALC:MON:MARK12:FUNC:BAND:SPAN?
Couplings	Changing the Band Span necessarily changes the Band Left and Band Right values

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Preset	Depends on X axis range of selected Trace 10% of Span
State Saved	Yes
Min	-9.9E+37 0
Max	9.9E+37 26.5GHz

Band Left

Sets the left edge frequency or time value for the band of the selected marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT <freq></code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT?</code>
Example	<code>:CALC:MON:MARK12:FUNC:BAND:LEFT 20 GHz</code> <code>:CALC:MON:MARK12:FUNC:BAND:LEFT?</code>
Couplings	Changing the Band Left necessarily changes the Band Span value
Preset	Depends on X axis range of selected Trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

Band Right

Sets the right edge frequency or time value for the band of the selected marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT <freq></code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT?</code>
Example	<code>:CALC:MON:MARK12:FUNC:BAND:RIGH 20 GHz</code> <code>:CALC:MON:MARK12:FUNC:BAND:RIGH?</code>
Couplings	Changing the Band Right necessarily changes the Band Span value
Preset	Depends on X axis range of selected Trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

3.10.8 Meas Setup

This menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

3.10.8.1 Settings

Contains frequently used Meas Setup functions to which you will want the fastest access.

Avg|Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Remote Command	<code>[:SENSe]:MONitor:AVERage:COUNT <integer></code> <code>[:SENSe]:MONitor:AVERage:COUNT?</code>
Example	<code>:MON:AVER:COUN 25</code> <code>:MON:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min/Max	1/1000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N where n is the current average and N is the average count

Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[:SENSe]:MONitor:AVERage[:STATe] OFF ON 0 1</code> <code>[:SENSe]:MONitor:AVERage[:STATe]?</code>
Example	<code>:MON:AVER ON</code> <code>:MON:AVER?</code>
Preset	OFF
State Saved	Yes
Range	OFF ON

Average Mode

Toggles the Average Mode:

- **EXPOnential**- continues measurement averaging, using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
- **REPeat**- causes the measurement to reset the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:MONitor:AVERage:TCONtrol EXPOnential REPeat</code> <code>[:SENSe]:MONitor:AVERage:TCONtrol?</code>
Example	<code>:MON:AVER:TCON EXP</code> <code>:MON:AVER:TCON?</code>
Preset	<code>EXPOnential</code>
State Saved	Yes
Range	<code>EXPOnential REPeat</code>

Spur Avoidance

Because the VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed. For Spur Avoidance, the instrument uses a software algorithm to remove this spur from the displayed measurement data.

Some measurements allow you to turn off **Spur Avoidance**, but in this measurement it is always enabled. Therefore, in this measurement the Spur Avoidance switch is unavailable (grayed out) and set to Enabled.

Furthermore, if you press the grayed-out switch, this popup message appears:

`Always enabled in this measurement. See manual for details`

Remote Command	<code>[:SENSe]:MONitor:SAVoid[:STATe]?</code>
Example	<code>:MON:SAV?</code> Always returns <code>ON</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A
Preset	<code>ON</code>
State Saved	Saved in instrument state
Range	<code>ON</code>

Meas Setup Summary Table

Lets you view and access many of the parameters in the Meas Setup menus on one screen.

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 2913 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFigure:MONitor</code>
Example	<code>:CONF:MON</code>

3.10.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal. This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLInk ULInk</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULInk when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLInk
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

3.10.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNt <integer></code> <code>[:SENSe]:CCARrier:COUNt?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

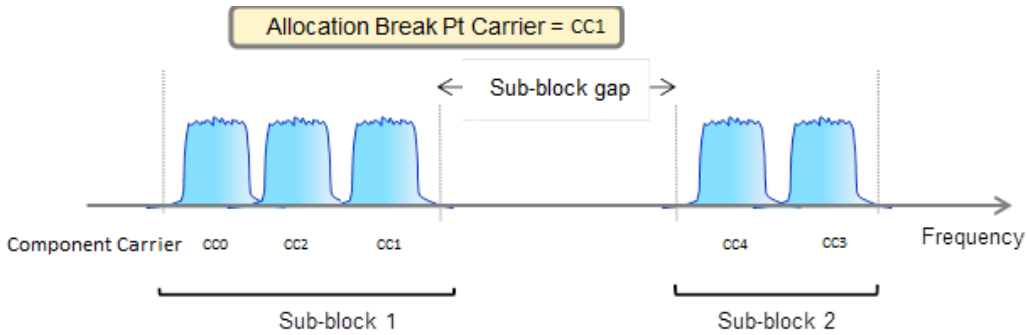

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See "Number of Component Carriers" on page 3292.

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOf ACRA100K :CCAR:AFOf?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster

Adjacent NR Carriers	100 kHz
Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for	Channel Raster
Adjacent NR Carriers	100 kHz
Carrier Aggregation	15 kHz
Off	60 kHz
Channel Spacing for	Channel Raster
Adjacent NR Carriers	
Carrier Aggregation	
Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when "Bandwidth" on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes

Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz
-------	--

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANual</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANual</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code>
----------------	---

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?		
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?		
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS		
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table		
	When Freq Range is FR1		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	5 MHz	4.500	4.515
	10 MHz	9.360	9.375
	15 MHz	14.220	14.235
	20 MHz	19.080	19.095
	25 MHz	23.940	23.955
	30 MHz	28.800	28.815
	35 MHz	33.840	33.855
	40 MHz	38.880	38.895
	45 MHz	43.560	43.575
	50 MHz	48.600	48.615
	60 MHz	58.320	58.350
	70 MHz	68.040	68.070
	80 MHz	78.120	78.150
	90 MHz	88.200	88.230
	100 MHz	98.280	98.310
	When Freq Range is FR2		
	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		

State Saved	Yes
Min	100 kHz
Max	2000 MHz

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.10.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range"** on page 3297 of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>								
Example	<code>:RAD:STAN:PRESet:FREQ:RANG FR1</code> <code>:RAD:STAN:PRESet:FREQ:RANG?</code>								
Notes	SCPI enum "FR2" is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 2926 depending on the currently selected value.								
Dependencies	Available selections differ depending on Bandwidth as follows: <table border="1"> <thead> <tr> <th>Bandwidth</th><th>FR</th></tr> </thead> <tbody> <tr> <td>5 MHz, ..., 100 MHz</td><td>FR1</td></tr> <tr> <td>50 MHz, 100 MHz, 200 MHz, 400 MHz</td><td>FR2, FR2-1</td></tr> <tr> <td>100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz</td><td>FR2, FR2-2</td></tr> </tbody> </table> <p>When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable</p>	Bandwidth	FR	5 MHz, ..., 100 MHz	FR1	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
Bandwidth	FR								
5 MHz, ..., 100 MHz	FR1								
50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1								
100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2								
Preset	FR1								
State Saved	Yes								
Range	FR1 FR2 FR2-1 FR2-2								
Backwards Compatibility SCPI	<code>[:SENSe]:RADio:STANdard:PRESet:FRANge</code>								

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz 60,...90 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this

control and the other controls in the “Configure Preset” section then press” Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRES:DMOD TDD</code> <code>:RAD:STAN:PRES:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "Duplex Mode" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the

other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINk:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINk:NRTM?</code>
Example	<code>:RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS</code> <code> P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?</code>
Example	<code>:RAD:STAN:PRES:TRAN:PER P0_5MS</code> <code>:RAD:STAN:PRES:TRAN:PER?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINk:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINk:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PRES:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PRES:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4
State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	“DDDDDDDSUU”

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as ["Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321](#).

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this

control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

In 5G, subcarrier spacing is governed by $2^n \times 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 2931 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRE:SCS SCS30K</code> <code>:RAD:STAN:PRE:SCS?</code> <code>:RAD:STAN:PRE:SCS:AUTO 0</code> <code>:RAD:STAN:PRE:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 2931
Preset	<code>SCS30K</code> <code>ON</code>
State Saved	Yes Yes
Range	<code>u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz</code> Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	<code>SCS15K, SCS30K</code>
	10 – 50 MHz	15K*/30K/60K	<code>SCS15K, SCS30K, SCS60K</code>
	60 – 100 MHz	30K*/60K	<code>SCS30K, SCS60K</code>

FR	Bandwidth	SCS	SCPI
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command `[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK | FQAM16 | FQAM64 | FQAM256 | FQAM1024 | DLTm1DOT1 | DLTm1DOT2 | DLTm2 | DLTm2Q16 | DLTm2QPS | DLTm2A | DLTm2B | DLTm3DOT1 | DLTm3DOT1Q16 | DLTm3DOT1QPS | DLTm3DOT1A | DLTm3DOT1B | DLTm3DOT2 | DLTm3DOT3 | FPIBPSK | DLTm1DOT1P1 | DLTm1DOT1L2`

For selection details, see **"Available Selections" on page 2933**

`[:SENSe]:RADio:STANdard:PRESet:RBALloc?`

Example `:RAD:STAN:PRESet:RBAL DLTm1DOT1`
`:RAD:STAN:PRESet:RBAL?`

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 2933
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024				

	FR	FR1	FR2	FR2-1	FR2-2
	QAM				
	Fuifilled	✓	✓	✓	✓
	Pi/2				
	BPSK				
DL NR- TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PREs:ULIN:CARR NORM</code> <code>:RAD:STAN:PREs:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PREs:DLIN:NRTM TS38</code> <code>RAD:STAN:PREs:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.

Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 2937</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PREs:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN?</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 2937
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	$f \leq 1.0$ GHz	FT01
	$< f \leq 3.0$ GHz	F1T03
	$3.0 < f \leq 4.2$ GHz	F3T04P2
	$4.2 < f \leq 6.0$ GHz	F4P2T06
	$6.0 < f \leq 7.125$ GHz	F6T07
FR2	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
	$52.6 < f \leq 71.0$ GHz	F52T071
FR2-1	$24.25 < f \leq 29.5$ GHz	F24P25T029P5
	$37.0 < f \leq 43.5$ GHz	F37T040
	$43.5 < f \leq 48.2$ GHz	F43T048
FR2-2	$52.6 < f \leq 71.0$ GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLINK:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLINK:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed

Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea

State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code> <code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTRa</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:ULIN:ACH NR</code> <code>:RAD:STAN:PRES:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRESet:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRESet:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRESet:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRESet:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel

Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a

BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr), Cat A Local Area BS, Cat B Local Area BS	n/a
Assumed Adj Channels (for ACP, FR1)	NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:
 Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.
 Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.
 Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "Apply Preset (to All CCs)" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	f ≤ 1.0 GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			1.0 < f ≤ 3.0 GHz			
			3.0 < f ≤ 4.2 GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	4.2 < f ≤ 6.0 GHz,			
			6.0 < f ≤ 7.125 GHz			
			f ≤ 1.0 GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			1.0 < f ≤ 3.0 GHz			
			3.0 < f ≤ 4.2 GHz,			Table 6.6.4.5.3.1-3
			4.2 < f ≤ 6.0 GHz,			

1-0	Cat A MR BS, Cat B MR BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-1	
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-2	
Cat A LA BS, Cat B LA BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	Table 6.6.4.5.4-3		
Cat A WA BS	6.0 < f ≤ 7.125 GHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz	Table 6.6.4.5.4-4		
	Cat A WA BS	f ≤ 1.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
		None, 1.0 < f ≤ 3.0 GHz			
		3.0 < f ≤ 4.2 GHz			
		4.2 < f ≤ 6.0 GHz			

3 5G NR Mode

3.10 Monitor Spectrum Measurement

FR2	2-0	Cat B WA BS	$f \leq 1.0$ GHz	TS38.141-2	Table	Table 6.7.4.5.1.2-1
			None,			Table 6.7.4.5.1.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.2-3
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.2-4
		Cat A MR BS, Cat B MR BS	$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.2-5
			None,			Table 6.7.4.5.1.4-1
			$f \leq 1.0$ GHz,			
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-2
		Cat A MR BS (Low P_r), Cat B MR BS (Low P_r)	$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-3a
			None,			Table 6.7.4.5.1.4-4
			$f \leq 1.0$ GHz,			
			$1.0 < f \leq 3.0$ GHz			
		Cat A LA BS, Cat B LA BS	$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.4-5
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.4-6
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.4-7
			None,			Table 6.7.4.5.1.5-1
			$f \leq 1.0$ GHz,			
		Cat A WA BS,	$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz			Table 6.7.4.5.1.5-2
			$4.2 < f \leq 6.0$ GHz			Table 6.7.4.5.1.5-3
			$6.0 < f \leq 7.125$ GHz			Table 6.7.4.5.1.5-4
			None,			Table

Cat A MR BS,	24.25 < f ≤ 29.5	v.17.9.0	6.7.3.5.2-1	6.7.4.5.2.2-1
Cat A MR BS	GHz	(2023-03)		
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat A LA BS	GHz			6.7.4.5.2.2-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.2-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.2-4
Cat B WA BS,	None,			Table
Cat B MR BS,	24.25 < f ≤ 29.5			6.7.4.5.2.3-1
Cat B MR BS	GHz			
(Low P _r),	37.0 < f ≤ 43.5			Table
Cat B LA BS	GHz			6.7.4.5.2.3-2
	43.5 < f ≤ 48.2			Table
	GHz			6.7.4.5.2.3-3
	52.6 < f ≤ 71.0			Table
	GHz			6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values			User Defined Duplex mode	
		TDD / FDD Duplex Mode			Downlink	Uplink
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink		
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst

Gate Settings	Sync Holdoff	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate (*5)	On	On	(no preset)	On	On
	Gate Delay	5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)
	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
Periodic Sync Src	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope = Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

Uplink	FR2		960 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
		100 MHz	120 kHz	
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: StoC	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: StoC	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - Stoc: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR	
			Offset

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Offset Freq State	Downlink	FR1	A, B	On
			C, ... , L	Off
		FR2	A	On
			B, ... , L	Off
	Uplink		A	On
			B, ... , L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2*BW_{CC}$
			C, ... , L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ... , L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC}
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ... , L	0 Hz
Integ BW	Downlink		All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1:
				$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2*BW_{GB}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2*BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode

3.10 Monitor Spectrum Measurement

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$43.5 < f \leq 48.2$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		$52.6 < f \leq 71.0$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		$52.6 < f \leq 71.0$	Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$52.6 < f \leq 71.0$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
			None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
		100, 400, 800, 1600, 2000 MHz	37.0 < f ≤ 43.5	All	-23.4 dB = (-26 + TT 2.6)
			43.5 < f ≤ 48.2	All	-23.2 dB = (-26 + TT 2.8)
			52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
				All	All	-11.04 dB (= -16 + TT 4.96)

$$52.6 < f \leq 71.0$$

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)		
Offset Frequency Define				EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ... , L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ... , L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State			All	Auto
Res BW			All	Automatically coupled with the Res BW value under the BW menu
Video BW State			All	Auto
Video BW			All	Automatically coupled with the Video BW value under the BW menu

Offset Side		All	Both
Method	Downlink	All	Integration BW
and	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
Filter Alpha		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat B MR BS,		
			$4.2 < f \leq 6.0$,	Cat A MR BS (Low Pr),		
		1-0	$6.0 < f \leq 7.125$	Cat B MR BS (Low Pr)	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS,		
				Cat B LA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat A WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat A MR BS,	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$4.2 < f \leq 6.0$,	Cat B MR BS,		
			$6.0 < f \leq 7.125$	Cat A MR BS (Low Pr),		
				Cat B MR BS (Low Pr)	All	
				Cat A LA BS,		
				Cat B LA BS	All	

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
--------------------------	----------------------	--	--	--	--------	--------------

3 5G NR Mode

3.10 Monitor Spectrum Measurement

	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB (= -45 + TT 1.2)
	1-O		5, ... , 100 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$	All	-44 dB = (-45 + TT 1.0)
				$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 2969
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2969
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 2969
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	C, ... , L	2970 0 Hz
	A, B	See "Table 1 b Offset Freq and Integ BW Offset A/B" on page 2970
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 2969

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub- block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
				A	B	A	B

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			$5 \leq W_{\text{gap}} < 10$	✓		Auto (Cum)	Auto (Cum)
			$10 \leq W_{\text{gap}} < 15$	✓	✓	Auto (Cum)	Auto (Cum)
			$15 \leq W_{\text{gap}} < 20$	✓	✓	Auto (Norm)	Auto (Cum)
			$20 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			$20 \leq W_{\text{gap}} < 40$	✓		Auto (Cum)	Auto (Cum)
			$40 \leq W_{\text{gap}} < 60$	✓	✓	Auto (Cum)	Auto (Cum)
			$60 \leq W_{\text{gap}} < 80$	✓	✓	Auto (Norm)	Auto (Cum)
			$80 \leq W_{\text{gap}}$	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			$50 \leq W_{\text{gap}} < 100$	✓		Auto (Cum)	Auto
			$100 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			$200 \leq W_{\text{gap}} < 400$	✓		Auto (Cum)	Auto
			$400 \leq W_{\text{gap}}$	✓		Auto (Norm)	Auto

Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth \leq Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth \leq Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration		Offset	Preset Value	
Direction	FR	Bandwidth	Offset Freq	Offset Integ BW (MHz)

3 5G NR Mode

3.10 Monitor Spectrum Measurement

(MHz)					
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
Uplink		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz			

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$N_{sc}^{RB} = 12$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(

		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-32 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
	1-0	None,	Cat A WA BS	All	$-4 + 10 \text{ LOG}($
		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-6 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-16 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-23 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
FR2	2-0	None,	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}($
		$24.25 < f \leq$	Cat B WA BS		$BW_{\text{config}})$ dBm
		29.5,	Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}($
		$37.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		43.5	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
		$43.5 < f \leq$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}($
		48.2	Cat B WA BS		$BW_{\text{config}})$ dBm
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}($
			Cat B MR BS,		$BW_{\text{config}})$ dBm
			Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		

3 5G NR Mode

3.10 Monitor Spectrum Measurement

52.6 < f ≤ 71.0 (**)	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)
	FR2	2-C	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)

FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	8.2)
					-25.7 dB = (-28 + TT 2.3)
					-23.4 dB = (-26 + TT 2.6)
		100, 400, 800, 1600, 2000 (**) MHz	$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
					-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 2977
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 2977
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2977

3 5G NR Mode
3.10 Monitor Spectrum Measurement

Integ BW	D, ... , L	0 Hz
	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 2977
Offset Side	D, ... , L	Same value as Offset C
	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 2977

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value			Power Ref Type (*)		
Direction	FR	Bandwidth		Offset Enabled			A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			5 ≤ Wgap < 10	✓		(+)	Norm	Norm	Norm
			10 ≤ Wgap	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth ≤ Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of “Wgap < Bandwidth” and “Bandwidth ≤ Wgap”.

(++) Same as the rows of “Wgap < 5”, “5 ≤ Wgap < 10”, and “5 ≤ Wgap”.

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	= 0.5 x Bandwidth	$\max\{N_{RB}^{SCS}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration		Offset	Preset Value	
	FR	Adjust Range(GHz)			UE Power Class
Fail Mask			All	Abs AND Rel	
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-50 dBm	
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW	
Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.10 Monitor Spectrum Measurement

D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: f ≤ 1.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category B.

BS Category = Cat B WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands $> 3.0 \text{ GHz}$) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		

B	✓		5.05		10.05		0.1		1
C	✓		10.5		40		0.1		1
D	✓		40		100		0.1		1
E-L			100		500		0.1		1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1

3 5G NR Mode

3.10 Monitor Spectrum Measurement

D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			0.1	1
D	✓	40			100			0.1	1
E-L		100			500			0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
--------	---------	------------------	--	--	-----------------	--	--	-----------	---------

A	✓		0.05		5.05		0.051	2				
B	✓		5.05		10.05		0.1	1				
C	✓		10.5		40		0.1	1				
D	✓		40		100		0.1	1				
E-L			100		500		0.1	1				

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓		0.05		5.05			0.051	2
B	✓		5.05		10.05			0.1	1
C	✓		10.5		40			1	1
D	✓		40		100			1	1
E-L			100		500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓		0.05		5.05			0.051	2
B	✓		5.05		10.05			0.1	1
C	✓		10.5		40			1	1

3 5G NR Mode

3.10 Monitor Spectrum Measurement

D	✓	40	100	1	1
E-L		100	500	1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		1	1
D		200		500		1	1
E-L		200		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.10 Monitor Spectrum Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled

B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (3 GHz < NR bands \leq 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (4.2 GHz < NR bands \leq 6 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			50.05			0.051			2
B	✓	50.05			100.05			0.1			1
C	✓	100.05			200			0.1			1
D		200			500			0.1			1
E-L		200			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (6.0 GHz < NR bands \leq 7.125 GHz),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.10 Monitor Spectrum Measurement

A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm (NR bands ≤ 3.0 GHz).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB”

in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”.
Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			50.05			0.051		2	
B	✓	50.05			100.05			0.1		1	
C	✓	100.5			200			0.1		1	
D		200			500			0.1		1	
E-L		200			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands $\leq 3.0 \text{ GHz}$).

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-19.2 dB” is typo and is supposed to be “-19.2 dBm”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			50.05			0.051			2	
B	✓	50.05			100.05			0.1			1	
C	✓	100.5			200			0.1			1	
D		200			500			0.1			1	
E-L		200			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5 \text{ GHz}$

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
			(*)			(*)						
A		✓	0.5			x + 0.5			1	1		
B		✓	x + 0.5			x + 1500			1	1		
C-L			100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range $24.25 - 33.4 \text{ GHz}$

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5 \text{ GHz}$

Offset	Enabled		Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW (Nx)	
			(*)		(*)				
A	✓		0.5		x + 0.5		1		1
B	✓		x + 0.5		x + 1500		1		1
C-L			100		500		1		1

Offset	Enabled	Limit Abs	Limit Rel	FailMask	Limit Abs2	Fail
--------	---------	-----------	-----------	----------	------------	------

3 5G NR Mode

3.10 Monitor Spectrum Measurement

												Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW (Nx)		
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1		1		
B	✓	$x + 0.5$			$x + 1500$			1		1		
C-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW (Nx)		
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1		1		
B	✓	$x + 0.5$			$y + 0.5$			1		1		
C	✓	$y + 5$			$y + 1500$			5		2		
D-L		100			500			5		2		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs Carrier Allocation $BW_{\text{contiguous}}$

1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{Channel,CA}$: Aggregated BW
> 1	Non-contiguous	$BW_{Channel,block[n]}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 \cdot BW_{Channel}/2$	$1 - (0.01 \cdot BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 \cdot RBW(A) = 0.01 \cdot BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 \cdot RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn’t miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz	Adjust Range: $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, and $6.0 < f \leq 7.125$ GHz
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled

B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 \cdot BW_{\text{Channel,CA}}$$

$$- y = 2 \cdot BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	-1.79 dBm = -5 + TT 3.21	-1.54 dBm = -5 + TT 3.46	TBD	TBD
B_{Lim}	-9.79 dBm = -13 + TT 3.21	-9.54 dBm = -13 + TT 3.46	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW ≤ 400 MHz)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off

4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS

3 5G NR Mode

3.10 Monitor Spectrum Measurement

1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)
1	1-O					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz	Span/2	-	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Start Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)

3 5G NR Mode
3.10 Monitor Spectrum Measurement

4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category							
		All “Cat A” BS				All “Cat B” BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = “All Cat A BS”: Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
BS Category = “All Cat B BS”: Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to “27 GHz”)

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the “Apply Preset” button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

- Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off

3 5G NR Mode

3.10 Monitor Spectrum Measurement

5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

(*) Range “Enabled” state					Note:
#	Adjust Limit Mask for Freq Range (GHz)				
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	
1	✓	✓	✓	✓	
2	✓	✓	✓	✓	
3	✓	✓	✓	✓	
4	✓	✓	✓	✓	
5					Never “enabled” by the “Apply Preset” button A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1, TS38.521-1)
6		✓			
7			✓		
8				✓	
9					Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~					

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005	6 GHz			1 MHz	1	5 MHz	Gaussian

3 5G NR Mode

3.10 Monitor Spectrum Measurement

		GHz						
5	✓	6 GHz	12.75 GHz		1 MHz	1	5 MHz	Gaussian
6	✓	12.75 GHz	23.45 GHz		1 MHz	1	5 MHz	Gaussian
7	✓	23.45 GHz	40.8 GHz		1 MHz	1	5 MHz	Gaussian
8	✓	40.8 GHz	66 GHz		1 MHz	1	5 MHz	Gaussian
9~		(no preset)	(no preset)		(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no	(no

					preset)	preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no preset)
8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the “RB Alloc Preset” selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters
- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz”, when the OFDM Type = CP-OFDM:

3 5G NR Mode

3.10 Monitor Spectrum Measurement

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

– Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2

3 5G NR Mode

3.10 Monitor Spectrum Measurement

v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for $\pi/2$ BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),
 - Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for $\pi/2$ BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for $\pi/2$ BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399

- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0 subframe	2 subframes
	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
Fulfilled-xx / NR-TMx.x	FR2	TDD	n/a	0.9286	1.250	n/a
	FR1/FR2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2-m	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2-m	
			SRS	0.0714	10.0	2-m	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2-m	10.0	2-m	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2-m (TBD)	10.0	2-m	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

3 5G NR Mode

3.10 Monitor Spectrum Measurement

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu\text{s}$ RMS averaging window for making the OFF power. $N = \text{SCS}/15$, where SCS is in kHz.
- Uplink: Slot length = $2 \cdot \mu \text{ msec}$, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$, $3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$, $6.0 < f \leq 7.125 \text{ GHz}$	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5 \text{ GHz}$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0 \text{ GHz}$, $1.0 < f \leq 3.0 \text{ GHz}$	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2 \text{ GHz}$, $4.2 < f \leq 6.0 \text{ GHz}$,	-82.5 dBm / MHz = -85 + TT 2.5

3 5G NR Mode

3.10 Monitor Spectrum Measurement

			6.0 < f ≤ 7.125 GHz	
	1-0		None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
FR2	2-0		None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration				Preset Value
	FR	UL ChannelType	Bandwidth	Adjust Range (GHz)	
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	-48.3 dBm = -50 + TT 1.7	
				None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz		
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	-48.2 dBm = -50 + TT 1.8	
	FR1	PUSCH, PRACH, SRS	40 MHz < BW ≤ 100 MHz	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	± 10.5 dB = $\pm(9 + TT 1.5)$	
				$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	± 10.8 dB = $\pm(9 + TT 1.8)$	
FR2	PUSCH	All FR2 BW	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	± 10.7 dB = $\pm(9 + TT 1.7)$		
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	± 10.8 dB = $\pm(9 + TT 1.8)$		
Parameter	FR2	PUSCH	All FR2 BW		± 14 dB (TT not yet)	
	FR	UL Channel Type	Bandwidth	SCS	Preset Value	
	UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm
					30 kHz	-4.2 dBm
				10 MHz	15 kHz	0.4 dBm
					30 kHz	-0.8 dBm
					60 kHz	-1.2 dBm
				15 MHz	15 kHz	1.4 dBm
30 kHz					1.2 dBm	
60 kHz					1.0 dBm	

3 5G NR Mode
3.10 Monitor Spectrum Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

3 5G NR Mode

3.10 Monitor Spectrum Measurement

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
			480 kHz	
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in **"CHP Power Integration Bandwidth"** on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.10.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does not appear in EXM or VXT.

Noise Floor Extension

When this function is **ON**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

Noise Floor Extension works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

NOTE

Noise Floor Extensions has no effect unless the RF Input is selected, therefore it does nothing when External Mixing is selected.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

See ["More Information" on page 3031](#).

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	This control only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command will be accepted without error (but will have no effect)
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset. Turned off by Restore Mode Defaults
State Saved	No

More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year. The key to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week

If you Cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

Conversion

Access a menu of functions that enable you to control the frequency conversion type for the current measurement. The following choices are available:

Auto	AUTO	Auto optimizes demodulation quality by selecting single conversion when available. Default value
Single High Side	SHSide	Single downconversion with the LO frequency above the receiver frequency. Not image protected, and available only above 400 MHz or at all frequencies under specific condition
Single Low Side	SLSide	Single downconversion with the LO frequency below the receiver frequency. Not image protected, and available only above 1.1 GHz
Image Protect	IPRotect	Double downconversion with pre-selection filtering. Available at all frequencies

Remote Command	<code>[:SENSe]:MONitor:CONversion:TYPE AUTO SHSide SLSide IPRotect</code> <code>[:SENSe]:MONitor:CONversion:TYPE?</code>
Example	<code>:MON:CON:TYPE AUTO</code> <code>:MON:CON:TYPE?</code>
Dependencies	This control only appears in the M9391A
Couplings	The availabilities of SingleHighSide and SingleLowSide depend on the current Sweep Parameters such as Center Freq, Span, Res BW and Points

Preset	AUTO
State Saved	Yes
Range	AUTO SHSide SLSide IPRotect

Phase Noise Optimization

Access a menu of functions that enable you to control the phase noise optimization for the current measurement. The following choices are available:

Normal	NORmal	Sets the Synthesizer's Phase Lock Loop to the Normal setting (Best Close-In)
Best Wide Offset	BWOffset	Sets the Synthesizer's Phase Lock Loop for narrow bandwidth to improve ORFS and EVM measurements for wide modulation

Remote Command	[:SENSe]:MONitor:PNOise:OPTion NORmal BWOffset [:SENSe]:MONitor:PNOise:OPTion?
Example	:MON:PNO:OPT NOR :MON:PNO:OPT?
Dependencies	This control only appears in the M9391A
Preset	NORmal
State Saved	Yes
Range	NORmal BWOffset

3.10.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "Global Center Freq" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support

global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
----------------	--

Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.10.9 Sweep

Accesses controls that enable you configure and control the acquisition of data and the X-axis parameters of the instrument. These controls might include Sweep Time, Continuous/Single, Pause/Resume, X Scale, and number of Points.

3.10.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

NOTE

Significantly faster sweep times are available with Option FS1.

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time"

as you would for sweeping hardware, send `[:SENSe]:<meas>:SWEEP:TIME <time>`. The measurement emulates the “Sweep Time” effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[:SENSe]:<meas>:SWEEP:TIME <time></code> <code>[:SENSe]:<meas>:SWEEP:TIME?</code>
Example	Channel Power measurement: <code>:CHP:SWE:TIME 25ms</code> <code>:CHP:SWE:TIME?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by Meas Method selection. Preset values are as follows: <ul style="list-style-type: none"> – IBW: 29 ms – IBWR: 108 ms – FAST 7.5 ms
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " Minimum Acquisition Time " on page 3038 is available
Couplings	Coupled to Span , RBW , VBW , and Sweep Time Rules when Sweep Time is set to Auto; Sweep Time changes when these parameters are changed When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically Calculated unless noted below WCDMA Mode <ul style="list-style-type: none"> – Channel Power: 1.0 msOBW: 32.6 ms – ACP: 29 ms
State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms Non-sweeping hardware: N/A In the ACP measurement, when Meas Method is Fast Power , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points) A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling

Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: <code>STATus:QUESTionable:INTEgrity:UNCalibrated</code> Auto Function				
Remote Command	<code>[:SENSe]:<meas>:SWEep:TIME:AUTO OFF ON 0 1</code> <code>[:SENSe]:<meas>:SWEep:TIME:AUTO?</code>				
Example	Channel Power measurement: <code>:CHP:SWE:TIME:AUTO OFF</code> <code>:CHP:SWE:TIME:AUTO?</code>				
Preset	<table> <tr> <td>WCDMA Mode</td><td>OFF</td></tr> <tr> <td>All others</td><td>ON</td></tr> </table>	WCDMA Mode	OFF	All others	ON
WCDMA Mode	OFF				
All others	ON				

Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[:SENSe]:<meas>:SWEep:ACQuisition:TIME <time></code> <code>[:SENSe]:<meas>:SWEep:ACQuisition:TIME?</code> <meas> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor
Example	Channel Power measurement <code>:CHP:SWE:ACQ:TIME 500 ms</code> <code>:CHP:SWE:ACQ:TIME?</code>

3 5G NR Mode

3.10 Monitor Spectrum Measurement

Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Span , RBW , and VBW when in the Auto state When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<code>[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO OFF ON 0 1</code> <code>[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO?</code> <code><meas></code> is the identifier for the current measurement; any one of CHPower - ACPower OBWidth MONitor
Example	Channel Power measurement: <code>:CHP:SWE:ACQ:TIME:AUTO OFF</code>
Preset	ON

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 3040

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: – A line with an arrow is Single

-
- A loop with an arrow is **Continuous**
-

Backwards
Compatibility
Notes

X-Series A-models had **Single** and **Cont** hardkeys in place of the **SweepSingleCont** softkey. In the X-Series A-models, if in single measurement, the **Cont** hardkey (and **INIT:CONT ON**) switched to continuous measurement, but never restarted a measurement and never reset a sweep

X-Series B-models have a **Cont/Single** toggle control instead of **Single** and **Cont** hardkeys, but it is still true that, if in single measurement, the **Cont/Single** toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See **"Restart" on page 3413** for details of **:INIT:IMMediate**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a

trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See "More Information" on page 3042

Remote Command	:INITiate[:IMMediate] :INITiate:REStart
Example	:INIT:IMM :INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared The SWEEPING bit is set The MEASURING bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in

application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count *k* to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is *k*. This *k* is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This *k* is used for comparisons with *N*, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, *K*, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of *N*. The displayed value *K* changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
----------------	---

Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	<p>If <code>:INIT:CONT</code> is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If <code>:INIT:CONT</code> is OFF, then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, <code>:ABORT</code> is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The <code>STATus:QUEStionable</code> register bit 9 (INTEgrity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by <code>:ABORT</code>, the Abort command will cause the <code>*OPC</code> query to return true</p>

Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<code>[:SENSe]:<meas>:SWEEp:ETIME?</code> <code><meas></code> is the identifier for the current measurement; any one of <code>CHPower-</code> <code>ACPPower OBWidth MONitor</code>
Example	Channel Power measurement <code>:CHP:SWE:ETIME?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

3.10.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if Sweep is in Cont, a new trace taken. If any trace is in average or hold, the averaging starts over.

Because of sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message "Sweep points changed, all traces cleared" is displayed and in the 5G NR mode, Auto Sweep Points is set to OFF(0).

Remote Command	<code>[:SENSe]:MONitor:SWEEp:POINts <integer></code> <code>[:SENSe]:MONitor:SWEEp:POINts?</code>
Example	<code>:MON:SWE:POIN 1000</code> <code>:MON:SWE:POIN?</code>
Dependencies	This function is not available when Signal ID is set to On in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in modes that do not support Swept
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> - All trace data is erased - Any traces with Update Off will also go to Display Off (like going from View to Blank in the older instruments) - Sweep time is re-quantized - Any limit lines that are on will be updated - If averaging/hold is on, averaging/hold starts over - Auto Sweep Points is OFF (Only 5GNR) <p>The resolution of setting the sweep time depends on the number of points selected</p>
Preset	1001 unless noted below 2001: 5GNR
State Saved	Saved in instrument state
Min	1
Max	20001
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation

Auto Sweep Points

When **Auto Sweep Points** is **ON**, the instrument determines the points using the following calculation formula:

$$\# \text{ points} = \text{ceil}(\text{Span} / (\text{Rbw} * 1\text{e}3)) * 1000 + 1$$

Where $\text{ceil}(x)$ returns the smallest possible integer value that is greater than or equal to x .

Remote Command	<code>[:SENSe]:MONitor:SWEEp:POINts:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:MONitor:SWEEp:POINts:AUTO[:STATe]?</code>
Example	<code>:MON:SWE:POIN:AUTO 0</code> <code>:MON:SWE:POIN:AUTO?</code>

Dependencies	This parameter is available only in the 5GNR mode
Preset	ON
State Saved	Yes
Range	OFF ON

3.10.10 Trace

Lets you control the acquisition, display, storage, detection, and manipulation of trace data for the available traces.

The "Trace Control" on page 3047 tab in this menu contains radio-button selections for the trace type (Clear/Write, Trace Average, Max Hold, Min Hold) and View/Blank setting for the selected trace.

3.10.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

Select Trace appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the Trace menu
Dependencies	<p>For the Swept SA measurement:</p> <ul style="list-style-type: none"> – In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View – When you turn on Image Suppress, Update turns off for all traces except the selected trace <p>For the ACP measurement, when Meas Method is RBW, FAST or FPOWer, Select Trace is disabled</p>
Preset	Trace 1
State Saved	Yes

3.10.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 3048 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "[View/Blank](#)" on page 3053 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITe	:TRAC2:TYPE WRIT	See: " Clear/Write " on page 3051
Trace Average	AVERAge	:TRAC2:TYPE AVER	See: " Trace Average " on page 3051
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: " Max Hold " on page 3052
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: " Min Hold " on page 3053

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "[View/Blank](#)" on page 3053 state must be set to **Active** (**Update: ON**, **Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "[Trace Mode Backwards Compatibility Commands](#)" on page 3049

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:<meas>:TYPE WRITe AVERAge MAXHold MINHold</pre> <pre>:TRACe[1] 2 3:<meas>:TYPE?</pre> <p>where <meas> is the identifier for the current measurement</p>
----------------	---

Example	<code>:TRAC:TYPE WRIT</code> <code>:TRAC:TYPE?</code>
Couplings	<p>Selecting a Trace Type (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to Active (Update: ON, Display: OFF), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[:SENSe]:<meas>:DETECTOR:AUTO?</code>), Detector (<code>[:SENSe]:<meas>:DETECTOR[:FUNCTION]?</code>) switches aligning with the switch of this parameter: "NORMAL" with WRITE (Clear Write), "AVERAge" with AVERAge, "POSitive (peak)" with MAXHold, and "NEGative (peak)" with MINHold</p>
Preset	<p>Swept SA and Monitor Spectrum: WRITE</p> <p>All other measurements: AVERAge</p> <p>Following Preset, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "**View/Blank**" on page 3053.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The `:TRACe:MODE` command is retained for backwards compatibility, and the `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay` commands introduced for ongoing use. The old Trace Modes are selected using `:TRAC:MODE`, whose parameters are mapped into calls to `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay`, and the old global Averaging command `[:SENSe]:AVERAge[:STATe]` is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or `:INIT:IMM`, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	WRITE
--------	--------------

State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<code>:TRACe[1] 2 ... 6:MODE WRITE MAXHold MINHold VIEW BLANK</code> <code>:TRACe[1] 2 ... 6:MODE?</code>
Backwards Compatibility Notes	<p>The legacy <code>:TRACe:MODE</code> command is retained for backwards compatibility. In conjunction with the legacy <code>:AVERage</code> command, it works as follows:</p> <ul style="list-style-type: none"> - <code>:AVERage ON OFF</code> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <code>[:SENSe] :AVERage [:STATe]</code> command description below - <code>:TRACe:MODE WRITE</code> sets <code>:TRACe:TYPE WRITE</code> (Clear/Write) unless average is true, in which case it sets it to <code>:TRACe:TYPE AVERage</code>. It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace - <code>:TRACe:MODE MAXHold</code> sets <code>:TRACe:TYPE MAXHold</code> (Max Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace - <code>:TRACe:MODE MINHold</code> sets <code>:TRACe:TYPE MINHold</code> (Min Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace - <code>:TRACe:MODE VIEW</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace - <code>:TRACe:MODE BLANK</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay OFF</code>, for the selected trace <p>The query returns the same value as <code>:TRACe:TYPE?</code>, meaning that if you set <code>:TRACe:MODE:VIEW</code> or <code>:TRACe:MODE:BLANK</code>, the query response will not be what you sent</p> <p><code>:TRACe[n]:MODE</code> was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new <code>:TRACe:TYPE</code> command should be used in the future, but <code>:TRACe:MODE</code> is retained to provide backwards compatibility</p> <p>In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has</p> <p>As the Average/Hold Number now affects Min Hold and Max Hold, the operations that restart Averaging (for example, the Restart key) now also restart Min Hold and Max Hold</p> <p>As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does</p> <p>Also, previous to X-Series:</p> <ul style="list-style-type: none"> - Pressing Max Hold while already in Max Hold (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence - Changing the vertical scale (Log/Lin or dB/div) of the display restarted Max Hold and Min Hold. This is no longer the case
Preset	OFF
State Saved	The state of Average is saved in Instrument State for ghosting purposes

Backwards Compatibility SCPI	<code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> <code>[:SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[:SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[:SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

Trace Type Details

Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending **:TRAC:TYPE MAXH** for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending **:TRAC:TYPE MINH** for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "**Trace Type**" on page 3048 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold


View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

Active Update and Display both **ON**

View	Update OFF ; Display ON
Blank	Update OFF ; Display OFF
Background	Update ON , Display OFF Allows a trace to be blanked <i>and</i> continue to update “in the background”, which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

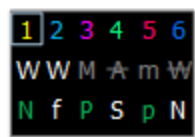

See: ["More Information" on page 3055](#)

Notes	For the commands to control the two variables, Update and Display, see "Trace Update State On/Off" on page 3054 and "Trace Display State On/Off" on page 3055 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and Display ON), even if that trace type was already selected Selecting a detector for a trace (pressing the key or sending <code>[:SENS] :DET :TRAC</code>) puts the trace in Active (Update ON and DisplayON), even if that detector was already selected Selecting a "Math Function" on page 2604 other than OFF for a trace (pressing the key or sending the equivalent command) puts the trace in Active (Update ON and DisplayON), even if that Math Mode was already selected Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange

Trace Update State On/Off

Remote Command	For Swept SA Measurement (in SA Mode): <code>:TRACe[1] 2 ... 6 :UPDate[:STATe] ON OFF 1 0</code> <code>:TRACe[1] 2 ... 6 :UPDate[:STATe] ?</code> For all other measurements: <code>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ON OFF 1 0</code> <code>:TRACe[1] 2 3 :<meas>:UPDate[:STATe] ?</code> where <meas> is the identifier for the current measurement
Example	Make trace 2 inactive (stop updating): <code>:TRAC2:UPD 0</code>

Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p>1 0 0 0 0 0</p> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <p>1 0 0</p> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state
Trace Display State On/Off	
Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <p>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON OFF 1 0</p> <p>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</p> <p>For all other measurements:</p> <p>:TRACe[1] 2 3:<meas>:DISPlay[:STATe] ON OFF 1 0</p> <p>:TRACe[1] 2 3:<meas>:DISPlay[:STATe]?</p> <p>where <meas> is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <p>:TRAC2:DISP 1</p> <p>Blank trace 3:</p> <p>:TRAC3:DISP 3</p>
Couplings	Whenever you set Update to ON for any trace, the Display is set to ON for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p>1 0 0 0 0 0</p> <p>ON for Trace 1; OFF for 2–6</p> <p>For all other measurements:</p> <p>1 0 0</p> <p>ON for Trace 1; OFF for 2 & 3</p>
State Saved	Saved in instrument state

More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

Trace Settings Table

Lets you configure the Trace system using a visual utility.

Clear All Traces

Clears all traces from the display.

Remote Command	:TRACe:MONitor:CLEar:ALL
Example	:TRAC:MON:CLE:ALL
Backwards Compatibility SCPI	:DISPlay:MONitor:VIEW:WINDow:TRACe:CLEar:ALL

3.10.10.3 Detector

Lets you choose and configure detectors for the selected trace.

Detector

Allows you to select a specific detector for the current measurement. When the detector choice is Auto, the instrument selects the detector. The selected detector

depends on marker functions, trace functions, and trace averaging functions for the current measurement.

The following options are available:

AUTO	The detector selected depends on marker functions, trace functions, average type, and the trace averaging function In the ACP measurement, when in AUTO, the detector selected is set to AVERage, unless the Radio Standard defaults state otherwise e.g., it is set to Peak for Radio Standard = PDC when Device = both MS and BTS, and when Radio Standard = NADC and Device = MS
NORMa1	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
AVERage	The detector determines the average of the signal within the sweep points, using RMS averaging
POSitive	The detector determines the maximum of the signal within the sweep points
Peak	
SAMPle	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
NEGative	The detector determines the minimum of the signal within the sweep points
Peak	

Because they may not find a spectral component's true peak, neither **AVERage** nor **SAMPle** detectors measure amplitudes of CW signals as accurately as Peak or **NORMa1**, but they do measure noise without the biases of Peak detection.

Remote Command	<code>[:SENSe]:MONitor:DETector:TRACe[1]2 3 AVERage NEGative NORMa1 POSitive SAMPle RMS</code> <code>[:SENSe]:MONitor:DETector:TRACe?</code>												
Example	<code>:MON:DET:TRAC NORM</code> <code>:MON:DET:TRAC?</code> <code>:MON:DET RMS</code> Sets the detector to AVERage . AVERage uses RMS averaging, so this is equivalent to selecting RMS												
Notes	The query returns a string corresponding to the detector type as shown below <table><tr><th>String Returned</th><th>Definition</th></tr><tr><td>NORM</td><td>Normal</td></tr><tr><td>AVER</td><td>Average (RMS)</td></tr><tr><td>POS</td><td>Peak</td></tr><tr><td>SAMP</td><td>Sample</td></tr><tr><td>NEG</td><td>Negative Peak</td></tr></table> The RMS selection sets the detector type to AVERage with RMS averaging. Therefore, if RMS has	String Returned	Definition	NORM	Normal	AVER	Average (RMS)	POS	Peak	SAMP	Sample	NEG	Negative Peak
String Returned	Definition												
NORM	Normal												
AVER	Average (RMS)												
POS	Peak												
SAMP	Sample												
NEG	Negative Peak												

	been selected, the query returns "AVER"
Couplings	When "Detector Select Auto/Man" on page 3058 is ON , the detector selected depends on the Trace (Average) type
Preset	NORMa1
State Saved	Yes
Range	AVERage NEGative NORMa1 POSitive SAMPle RMS
Annotation	The four letter mnemonic for the detector appears in the trace window next to the trace it applies to
Backwards Compatibility SCPI	[:SENSe] :MONitor :DETector [:FUNction] Applied to Trace 1 only

Detector Select Auto/Man

Sets the Detector mode to Auto or Manual. In Auto, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When any detector is selected by the user, this toggles automatically set to Man (manual).

Remote Command	[:SENSe] :MONitor :DETector :TRACe [1] 2 3 :AUTO ON OFF 1 0 [:SENSe] :MONitor :DETector :TRACe [1] 2 3 :AUTO?
Example	:MON:DET:TRAC2:AUTO ON :MON:DET:TRAC2:AUTO?
Couplings	When this function is ON , the "Detector" on page 3056 and "Trace Type" on page 3048 settings automatically align as follows: <ul style="list-style-type: none"> – "NORMa1" with Clear Write – "AVERage" with AVERage – "POSitive (Peak)" with MAXHold – "NEGative (Peak)" with MINHold
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	[:SENSe] :MONitor :DETector :AUTO Applied to Trace 1 only

3.11 IQ Waveform Measurement

The IQ Waveform measurement is a time-domain measurement that lets you view the envelope, real and imaginary components of an RF or baseband signal. It is similar in many respects to the zero-span measurement in traditional spectrum analysis but gives you direct access to the I/Q pairs of the signal, such as those that make up modern communications signals. The IQ Waveform measurement can also be used to perform general purpose power measurements to a high degree of accuracy.

You can examine the RF envelope (magnitude) of the signal, or open an I/Q Waveform window, which shows the I and Q signal waveform voltage versus time, to disclose the voltages that comprise the complex modulated waveform of a digital signal.

Measurement Commands

The general functionality of ["CONFigure" on page 4138](#), ["INITiate" on page 4139](#), ["FETCh" on page 4139](#), ["MEASure" on page 4141](#), and ["READ" on page 4140](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:WAVeform</code>	Initiates a trigger cycle for the WAV measurement, but does not return any data. You must then use <code>:FETC:WAV[n]?</code> to retrieve data
	Does not change any measurement settings
<code>:CONFigure?</code>	Returns the long form name of current measurement, in this case, WAVeform
<code>:CONFigure:WAVeform</code>	Selects WAV measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 3156
<code>:CONFigure:WAVeform:NDEFault</code>	Selects WAV measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:WAVeform?</code>	Retrieves the data defined by n
<code>:MEASure:WAVeform[n]?</code>	Switches to WAV measurement, restores default values, starts the measurement, then retrieves the data defined by n
<code>:READ:WAVeform[n]?</code>	Starts the measurement, then retrieves the data defined by n

Remote Command Results

For the **:FETCH**, **:MEASure** and **:READ** queries above, the results returned depend on the **n** parameter value as follows:

n	Results Returned																								
0	Returns unprocessed I/Q trace data, as a series of trace point pairs, in Volts Each pair consists of an I value (even-indexed, starting at 0), followed by a Q value (odd-indexed)																								
1	Returns the following scalar results: <table><tr><th>#</th><th>Item</th><th>Unit, if any</th></tr><tr><td>1</td><td>Sample Time A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)</td><td></td></tr><tr><td>2</td><td>Mean Power The power across the entire trace. If Averaging State is ON, as set by "Avg/Hold Number (Averaging On/Off)" on page 3146, the power is for the latest acquisition</td><td>dBm</td></tr><tr><td>3</td><td>Mean Power Averaged The power across the entire trace If Averaging State is ON, the power for N averages (the latest acquisition), as set by "Avg/Hold Number (Averaging On/Off)" on page 3146 If Averaging State is OFF, the value of the mean power averaged is the same as the value of the mean power</td><td>dBm</td></tr><tr><td>4</td><td>Number of samples The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)</td><td></td></tr><tr><td>5</td><td>Peak-to-mean ratio The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State OFF. If Averaging State is ON, the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value</td><td>dB</td></tr><tr><td>6</td><td>Maximum value The maximum of the most recently acquired data</td><td>dBm</td></tr><tr><td>7</td><td>Minimum value The minimum of the most recently acquired data</td><td>dBm</td></tr></table>	#	Item	Unit, if any	1	Sample Time A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)		2	Mean Power The power across the entire trace. If Averaging State is ON , as set by " Avg/Hold Number (Averaging On/Off) " on page 3146, the power is for the latest acquisition	dBm	3	Mean Power Averaged The power across the entire trace If Averaging State is ON , the power for N averages (the latest acquisition), as set by " Avg/Hold Number (Averaging On/Off) " on page 3146 If Averaging State is OFF , the value of the mean power averaged is the same as the value of the mean power	dBm	4	Number of samples The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)		5	Peak-to-mean ratio The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State OFF . If Averaging State is ON , the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value	dB	6	Maximum value The maximum of the most recently acquired data	dBm	7	Minimum value The minimum of the most recently acquired data	dBm
#	Item	Unit, if any																							
1	Sample Time A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)																								
2	Mean Power The power across the entire trace. If Averaging State is ON , as set by " Avg/Hold Number (Averaging On/Off) " on page 3146, the power is for the latest acquisition	dBm																							
3	Mean Power Averaged The power across the entire trace If Averaging State is ON , the power for N averages (the latest acquisition), as set by " Avg/Hold Number (Averaging On/Off) " on page 3146 If Averaging State is OFF , the value of the mean power averaged is the same as the value of the mean power	dBm																							
4	Number of samples The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using n = 0, 2, etc.)																								
5	Peak-to-mean ratio The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State OFF . If Averaging State is ON , the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value	dB																							
6	Maximum value The maximum of the most recently acquired data	dBm																							
7	Minimum value The minimum of the most recently acquired data	dBm																							
2	Returns trace point values of the entire captured signal envelope trace data Floating-point numbers, representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the Sample Time (see n = 1 above)																								
3	Returns unprocessed I/Q trace data, as a series of trace point values, in volts The I values are listed first in each pair, as the even-indexed values (starting at 0). The Q values are odd-indexed. The number of points returned is defined by " Meas Time " on page 3149 * " Sample Rate " on page 3150, and is one																								

n	Results Returned
	point less than index 0
4	Returns conjugated I/Q trace data, in Volts, if "Invert Spectrum" on page 3205 is set to INVert . Otherwise, returns the same unprocessed I/Q trace data as n = 0 above

3.11.1 Views

You can select the measurement view you want to use from the **Mode/Measurement/View** selector screen. You can also specify the view programmatically, using one of these commands:

View Selection by name

Specify the desired View by its name:

Remote Command	<code>:DISPlay:WAVeform:VIEW[:SElect] RFENvelope IQ</code> <code>:DISPlay:WAVeform:VIEW[:SElect]?</code>
Example	<code>:DISP:WAV:VIEW RFEN</code> <code>:DISP:WAV:VIEW?</code>
Preset	<code>RFENvelope</code>
State Saved	Saved in instrument state
Range	RF Envelope I/Q Waveform

View Selection by number

Specify the desired View by its number:

Remote Command	<code>:DISPlay:WAVeform:VIEW:NSElect <integer></code> <code>:DISPlay:WAVeform:VIEW:NSElect?</code>
Example	<code>:DISP:WAV:VIEW:NSEL 1</code> <code>:DISP:WAV:VIEW:NSEL?</code>
Notes	View 1 is the RF Envelope View View 2 is the I/Q Waveform View
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

3.11.1.1 RF Envelope

Windows: ["RF Envelope" on page 3062](#), ["Metrics" on page 3063](#)

Shows an RF envelope (magnitude) window and a metrics table showing the measured values for the mean power and peak-to-mean power.

3.11.1.2 I/Q Waveform

Windows: ["I/Q Waveform" on page 3063](#)

Shows a window with I and Q voltages vs time. SCPI commands can also be used to query the I/Q pairs while in this View.


3.11.2 Windows

The following windows are available in this measurement.

- ["RF Envelope" on page 3062](#)
- ["Metrics" on page 3063](#)
- ["I/Q Waveform" on page 3063](#)

3.11.2.1 RF Envelope

Displays an amplitude-vs time (time domain) graph of the envelope (magnitude) of the RF waveform:

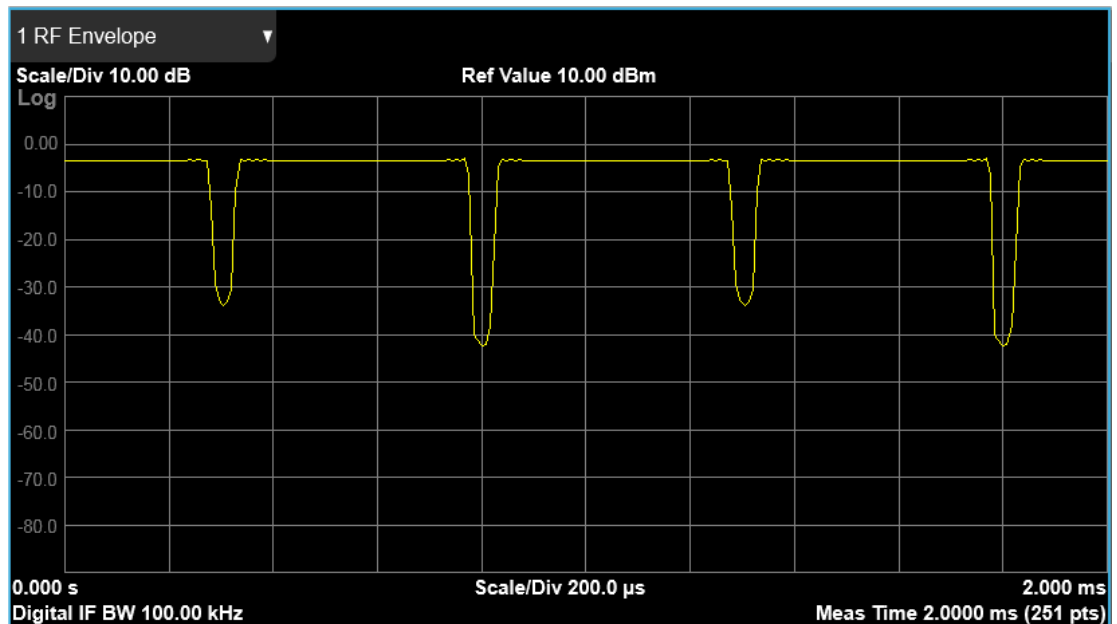

3.11.2.2 Metrics

Shows the measured values for the mean power and peak-to-mean power of the RF Envelope result of the waveform (time domain) measurements.




Numeric Results

Name	Type	Description	Unit	Format
Mean Pwr	Float64	The mean power (dBm). This is either the power across the entire trace, or the power between markers if the markers are enabled	dBm	XX.XX dBm
Pk-to-Mean	Float64	This is the ratio of the maximum signal level to the mean power	dB	XX.XX dB
Max Pt	Float64	The maximum of the most recently acquired data	dBm	XX.XX dBm
Min Pt	Float64	The minimum of the most recently acquired data	dBm	XX.XX dBm

3.11.2.3 I/Q Waveform

Shows an amplitude-vs time (time domain) graph of the quadrature (I and Q) components of the RF waveform. This allows you to measure the phase of the waveform as well as its magnitude. The yellow trace is the I (real) component and the blue trace is the Q (imaginary) component.

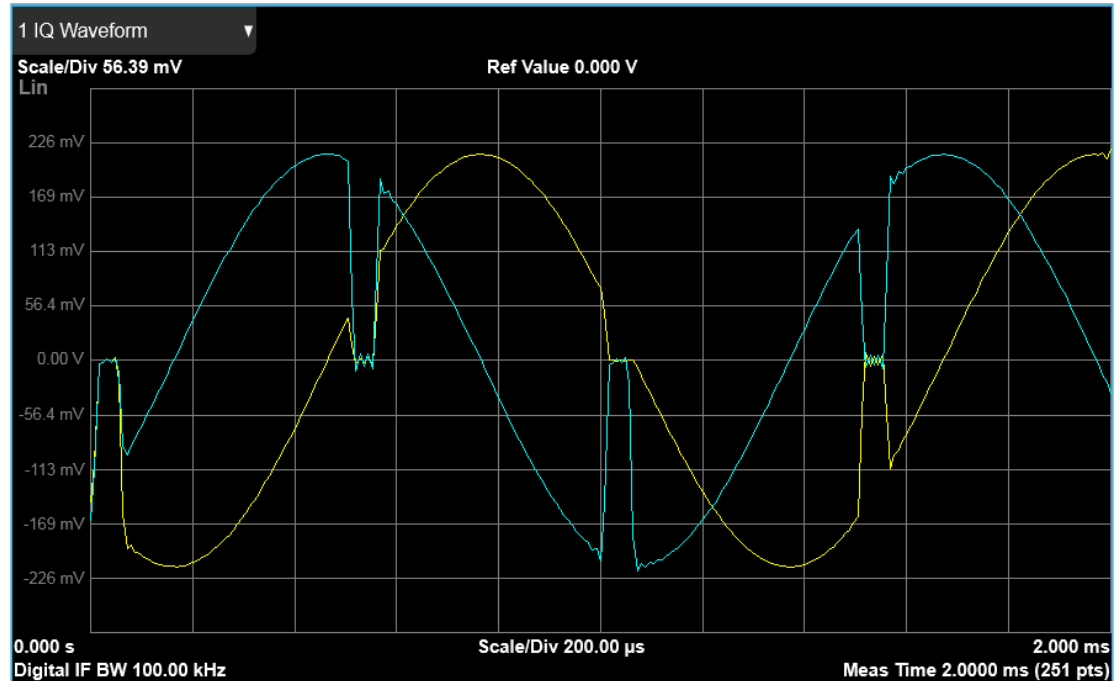

3.11.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.11.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Ref Value

Sets the value for the absolute power reference. The functionality depends on the selected window. The reference line is at the top, center, or bottom of the graticule, depending on the value of "**Ref Position**" on page 3067.

RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <amptd></code> <code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RLEV -50 dBm</code>
Couplings	When "Auto Scaling" on page 3068 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to OFF
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top of graph

IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <voltage></code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV 25 V</code>
Couplings	When "Auto Scaling" on page 3068 is On (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to Off
Preset	0 V
State Saved	Saved in instrument state
Min/Max	-/+250.00 V
Annotation	Ref <value> top of graph

Scale/Div

Enables you to set the units per division of vertical scale in the logarithmic display. However, since "Auto Scaling" on page 3068 defaults to **ON**, this value is automatically determined by the measurement result. When you set a value manually, **Auto Scaling** automatically changes to **OFF**.

The SCPI command and default parameters are dependent on whether the View is "RF Envelope" on page 3061 or "I/Q Waveform" on page 3062.

RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl></code>
----------------	---

Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 3066 as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 3068 is On, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to Off
Preset	10.00 dB
State Saved	Saved in instrument state
Min	0.10 dB
Max	20.00 dB
Annotation	<value> dB/ left upper of graph

IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <voltage></code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV 25mV</code> <code>:DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 3066 as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 3068 is On, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to Off
Preset	100.0 mV
State Saved	Saved in instrument state
Min	1.0 nV
Max	20 V
Annotation	<value> dB/ left upper of graph

Scale Range

Sets the Y-Axis scale range.

The SCPI command and default parameters depend on whether the View is "RF Envelope" on page 3061 or "I/Q Waveform" on page 3062.

RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RANGe <rel_ampl></code> <code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG 100</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to "Scale/Div" on page 3065 as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, "Auto Scaling" on page 3068 automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RANGe <voltage></code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG 1000</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to "Scale/Div" on page 3065 as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, "Auto Scaling" on page 3068 automatically changes to OFF
Preset	1 V
State Saved	Saved in instrument state
Min	10 nV
Max	200 V

Ref Position

Enables you to position the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

The SCPI command and default parameters depend on whether the View is "RF Envelope" on page 3061 or "I/Q Waveform" on page 3062.

RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	Top Center Bottom
Annotation	> and < are displayed both side of graph to indicate Reference Position

IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom</code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS?</code>
Preset	CENT
State Saved	Saved in instrument state
Range	Top Center Bottom
Annotation	> and < are displayed both side of graph to indicate Reference Position

Auto Scaling

Enables you to toggle Auto Scaling On or Off. When the **Restart** front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:2:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:WAVeform:VIEW[1]:2:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:COUP?</code>
Couplings	When "Auto Scaling" on page 3068 is On, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change a value of Scale/Div , Ref Value , or Scale Range , Auto Scaling automatically changes

	to OFF
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON

3.11.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See "Dual-Attenuator Configurations" on page 3069
- See "Single-Attenuator Configuration" on page 3070


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

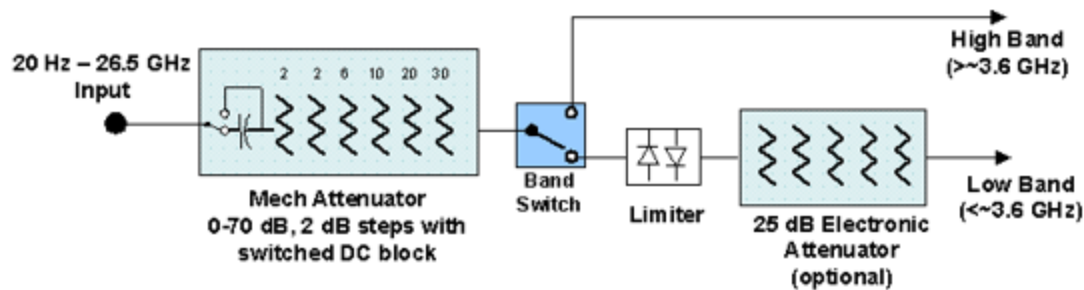


Configuration 2: Mechanical attenuator, no optional electronic attenuator

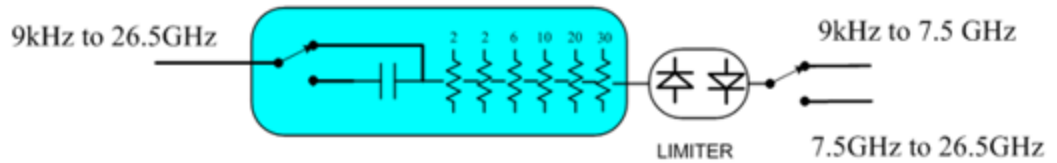

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

Single-Attenuator Configuration

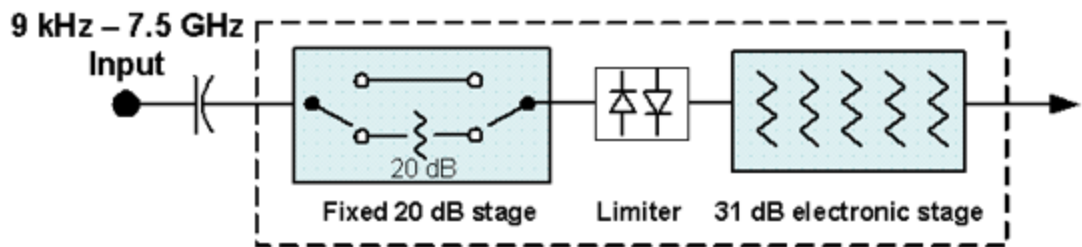

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



Dual Attenuator



Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and "Mech Atten" on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows: "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten "Total Atten above 50 GHz" followed by the value of Full Range Atten For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> – Attenuator summary:

-
- Total Atten below 50 GHz: 30 dB
 - Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp" on page 3251** Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man" on page 3074**

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231 See "Attenuator Configurations and Auto/Man" on page 3074 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> - If the USB Preamp is connected to USB, use 0 dB for Mech Atten - Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto) - In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto , but no changes are made to the actual

3 5G NR Mode

3.11 IQ Waveform Measurement

	attenuator hardware setting until the input is changed back to the RF Input For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <= 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	Auto The Auto value is 10 dB	
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as: <i>Atten: <total> dB (e<elec>)</i> The e letter is in amber in Single-Attenuator configurations For example: Dual-Attenuator configuration: <i>Atten: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB Single-Attenuator configuration: <i>A: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation) When in Manual, a # sign appears in front of Atten in the annotation	
Auto Function		
Remote Command	[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?	
Example	Turn Auto Mech Atten ON: :POW:ATT:AUTO ON	

Dependencies	:POW:ATT:AUTO is only available in measurements that support Auto , such as Swept SA
Preset	ON

Attenuator Configurations and Auto/Man

As described under "Attenuation" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "Mech Atten" on page 3072 (or :POW:ATT) as the "main" attenuation; and the attenuation that is set by :POW:EATT as the "soft" attenuation (:POW:EATT is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 3231 for more about "soft" attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

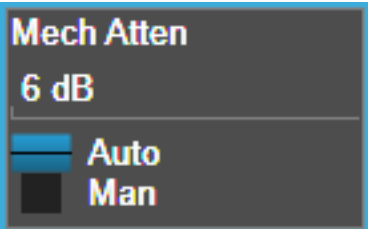

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

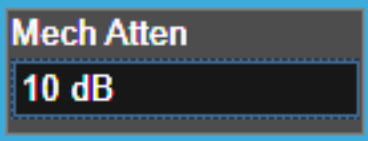

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 3076](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none">– Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes– Transmit On/Off Power measurement in 5GNR Mode

	<ul style="list-style-type: none"> – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " Mechanical Attenuator Transition Rules " on page 3077
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</pre> <pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</pre>
Example	<pre>:POW:EATT:STAT ON</pre> <pre>:POW:EATT:STAT?</pre>
Preset	<p>OFF (Disabled) for Swept SA measurement</p> <p>ON (Enabled) for all other measurements that support the electronic attenuator</p>

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily

aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 3078](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the **"Adjust Atten for Min Clipping"** on page 3234 function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code>

	:POW:RANG:OPT:TYPE?
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on [page 3234](#) each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on [page 3081](#)

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?	
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?	
Notes	The parameter option ELECtrical sets this function to ON in Single-Attenuator models The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined , it sets the function to ON and returns ELEC to a query For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined	
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " Elec Atten " on page 3231 is OFF or grayed-out,	

	"Pre-Adjust for Min Clipping" on page 3080 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF	
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?	

Adjustment Algorithm

The algorithms for the adjustment are documented below:

Single-Attenuator Models

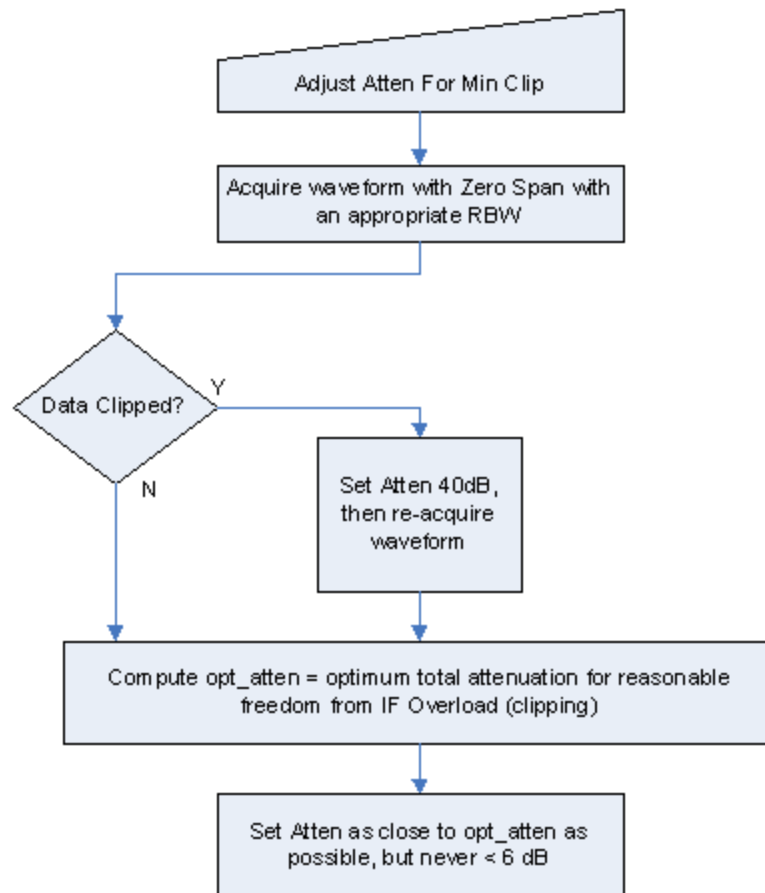


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 3080 selection is Mech + Elec Atten:

3 5G NR Mode


3.11 IQ Waveform Measurement

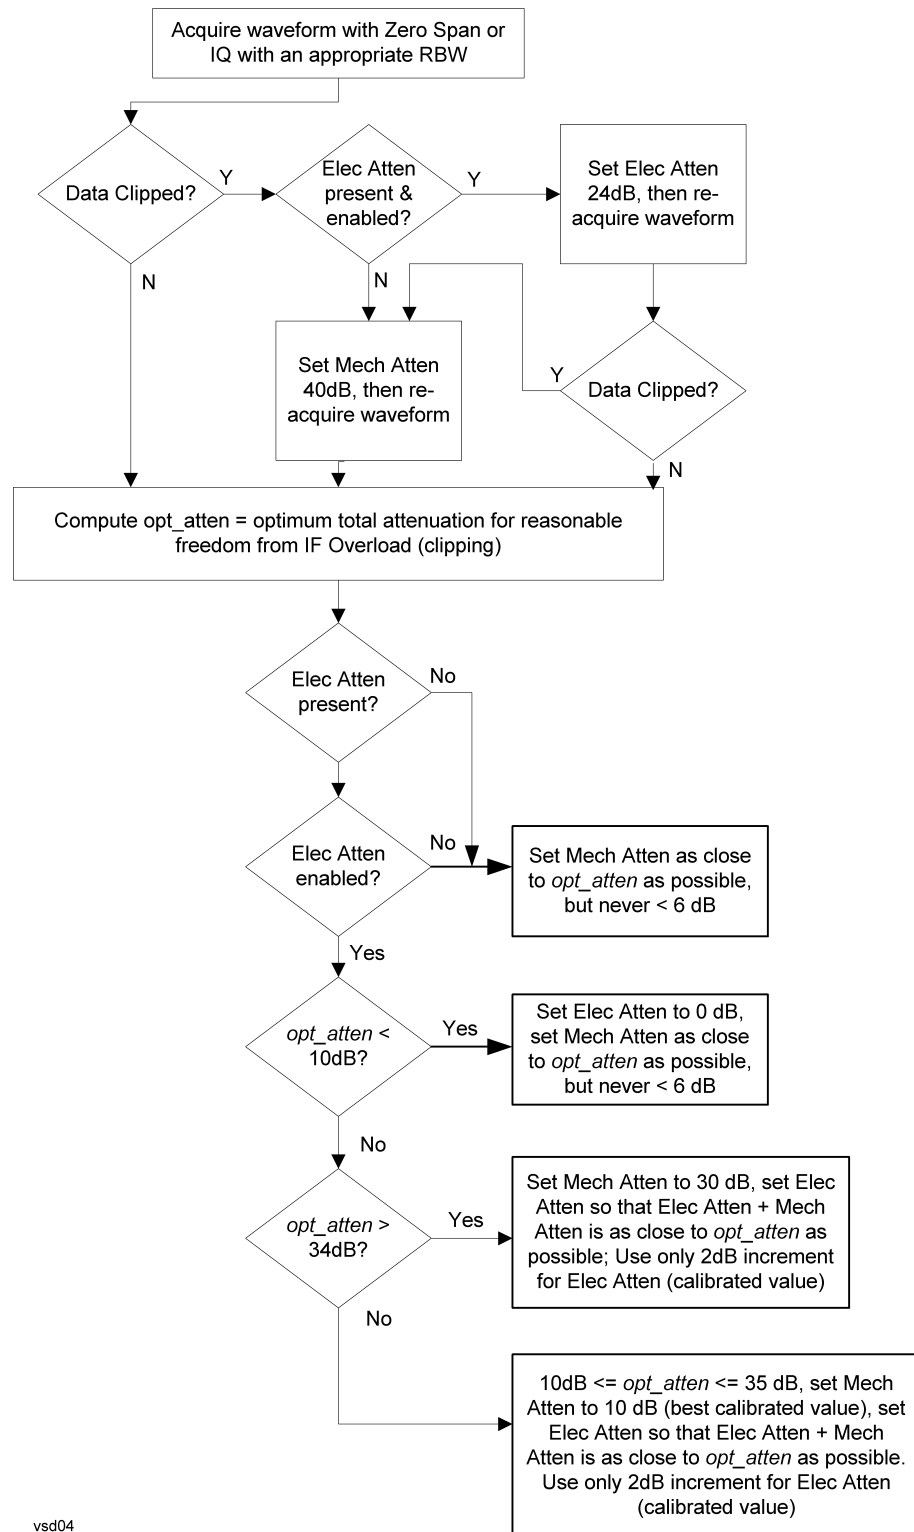

vsd04

"Pre-Adjust for Min Clipping" on page 3080 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

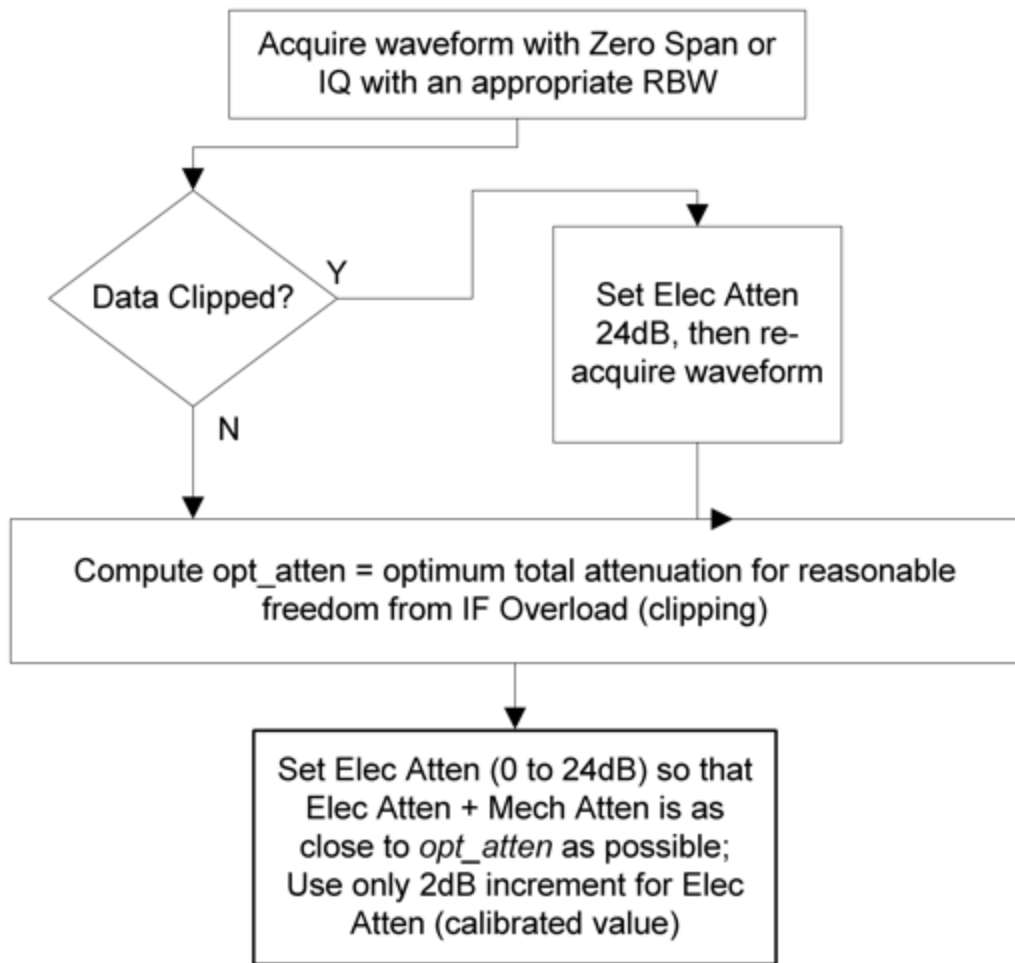

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.11.3.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If Auto is not supported, sending the SCPI command generates an error
Couplings	When in Auto , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	ON
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#" This is an alternate form of the command to match the POWer form of the I Range and Q Range SCPI.
Remote Command	<code>[:SENSe]:POWer:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the POWer and VOLTage forms of the command
Preset	ON
Range	Auto Man

I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code>

3 5G NR Mode

3.11 IQ Waveform Measurement

	:VOLT:IQ:RANG?
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When "Q Same as I" on page 3245 is On, the I Range value will be copied to "Q Range" on page 3244 Changing the value also sets Range = Man
Preset	Complex SPECTrum Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω) 0.5 V Peak (4 dBm @ 50 Ω) 0.25 V Peak (-2 dBm @ 50 Ω) 0.125 V Peak (-8 dBm @ 50 Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl> [:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω , and to 1.0 V Peak when Reference Z is 75 Ω :POW:IQ:RANG 4 dBm :POW:IQ:RANG?
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω : 10, 4, -2, -8 75 Ω : 8.2, 2.2, -3.8, -9.8 600 Ω : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ **"I Range" on page 3242** determines both I and Q channel range settings.

Remote Command	<code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ, "I Range" on page 3242 determines both I and Q channel range settings
Couplings	When "Q Same as I" on page 3245 is On, the "I Range" on page 3242 value is copied to Q Range and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω) 0.5 V Peak (4 dBm @ 50Ω) 0.25 V Peak (-2 dBm @ 50Ω) 0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <amp;1></code> <code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω: <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command

3 5G NR Mode

3.11 IQ Waveform Measurement

The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the **VOLTage** form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω : 10, 4, -2, -8

75 Ω : 8.2, 2.2, -3.8, -9.8

600 Ω : -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[:SENSe]:VOLTage POWer:IQ:MIRRed OFF ON 0 1</code> <code>[:SENSe]:VOLTage POWer:IQ:MIRRed?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When ON , the " I Range " on page 3242 value is mirrored (copied) to the " Q Range " on page 3244
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

3.11.3.4 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency . The hardware compensates for frequency response and alters the Range setting.
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement.
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements.

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

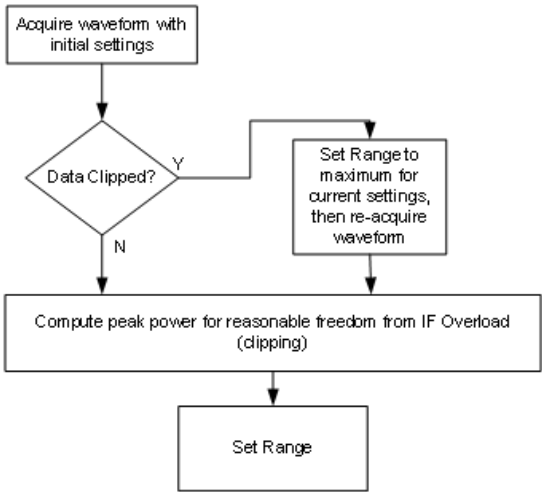

Peak-to-Average Ratio

Used with "**Range (Non-attenuator models)**" on page 3245 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on [page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.11.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 3250](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 3094](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command

	is sent in these instruments, accepted without error, and the query always returns 0
	– Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to :READ or :MEASure queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "[Presel Center](#)" on page 3249 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

3 5G NR Mode

3.11 IQ Waveform Measurement

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> Does not appear in CXA-m Does not appear in VXT Models M9410A/11A/15A/16A Does not appear in M9410E/11E/15E/16E Grayed-out if microwave preselector is off Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 Grayed-out in the Spectrogram View
Preset	0 MHz
State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
----------------	--

Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
---------	---

Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated
--------------	--

3 5G NR Mode

3.11 IQ Waveform Measurement

	Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)</p>
Auto Function	
Remote Command	[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN[:STATe]?
Example	:POW:GAIN OFF :POW:GAIN?
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp" on page 3251**. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with **"Internal Preamp" on page 3251**, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information" on page 3098**

Remote Command	[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?
Example	:POW:GAIN:LNA ON
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p>LNA is not available when the electronic/soft attenuator is enabled</p>

Preset	OFF
State Saved	Saved in State

More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be

narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 3103
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 3105
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 3105

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " Presel Center " on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing – The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed

- The **μW Preselector Bypass** selection does not appear unless Option MPB is present and licensed
- The **Full Bypass Enable** selection does not appear unless options LNP and MPB are both present as well as option FBP

In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated

Low Noise Path Enable and **Full Bypass Enable** are grayed-out if the current measurement does not support them

Low Noise Path Enable and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	<table> <tr> <th>Mode</th><th>Value</th></tr> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>–</td><td></td></tr> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	–	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
–															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														
Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>														

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:

3 5G NR Mode

3.11 IQ Waveform Measurement



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

Measurement	μ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command `[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`
 `[:SENSe]:POWer[:RF]:MW:PATH:AUTO?`

Example `:POW:MW:PATH:AUTO ON`

	:POW:MW:PATH:AUTO?
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 3100 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

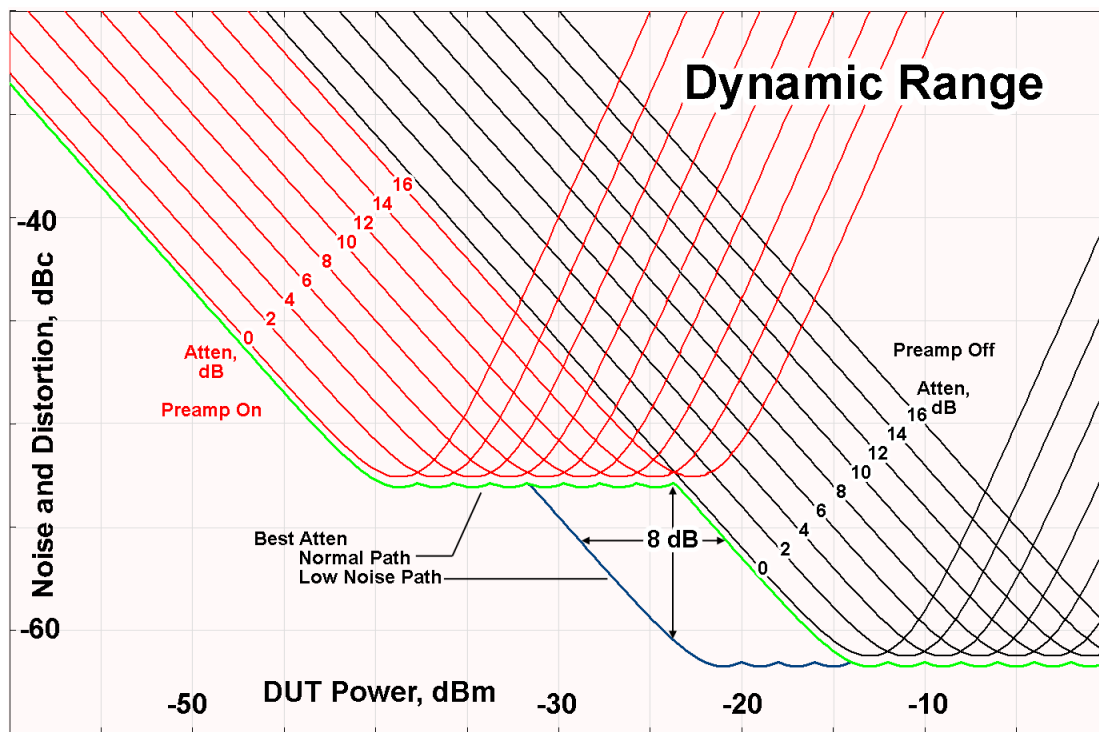

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a

larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselect is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.


When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.
Settings Alert message in the Status Bar at the bottom of the display.

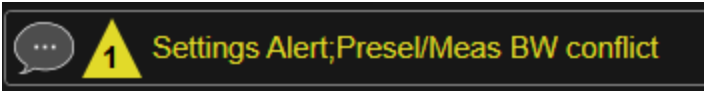

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none"> – 5GNRMode: Modulation Analysis and IQ Waveform – WLAN Mode: IQ Waveform – Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The

specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	[:SENSe]:POWer[:RF]:SWPreSel:STATe 0 1 ON OFF [:SENSe]:POWer[:RF]:SWPreSel:STAT?	
Example	:POW:SWPR:STAT 1 :POW:SWPR:STAT?	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON

State Saved Saved in instrument state

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPreSel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPreSel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1

State Saved Saved in instrument state

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

3 5G NR Mode

3.11 IQ Waveform Measurement

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled	
Preset	N9041B	NORMa1
	N9042B+V3050A	NARRow
State Saved	Saved in instrument state	

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?	
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON	

	Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " Prefilter Presets " on page 3112 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.11.4 BW

Opens the **BW** (Bandwidth) menu. The Digital IF BW functions control filter bandwidth and filter type. There are two filter types: Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

3.11.4.1 Settings

Contains the basic bandwidth functions. It is the only tab under **Bandwidth**.

Digital IF BW

Sets the Digital IF (formerly Info BW) bandwidth of the instrument. When in Auto, it is set to the value that covers carriers set by carrier configuration.

Remote Command	<code>[:SENSe]:WAVeform:DIF:BANDwidth <freq></code> <code>[:SENSe]:WAVeform:DIF:BANDwidth?</code>										
Example	<code>:WAV:DIF:BAND 1kHz</code> <code>:WAV:DIF:BAND?</code>										
Notes	Auto/Man is available only for 5G NR, LTE, LTETDD, LTEAFDD, LTEA TDD Modes										
Dependencies	To set a 2 GHz Span with option R20, the Center Frequency must be equal to or greater than 3.5 GHz To set a 4 GHz Span with option R40, the Center Frequency must be equal to or greater than 10 GHz For applications that have the IF Path Selection menu, such as the BASIC mode: <table><tr><th>IF Path</th><th>Maximum Value Criteria</th></tr><tr><td>Auto</td><td></td></tr><tr><td>State</td><td></td></tr><tr><td>OFF</td><td>The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively</td></tr><tr><td>ON</td><td>The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is ON and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz</td></tr></table>	IF Path	Maximum Value Criteria	Auto		State		OFF	The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively	ON	The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is ON and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz
IF Path	Maximum Value Criteria										
Auto											
State											
OFF	The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively										
ON	The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is ON and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz										
Couplings	Changing " Sample Rate " on page 3150 automatically changes the state to Man										
Preset	See " Preset Values " on page 3115 below										
State Saved	Saved in instrument state										
Min	All others: 10 Hz										

Max	Input	Option	Value
RF		None	10 MHz
		B25	25 MHz
		B40	40 MHz
		B85	85.0 MHz
		B1A	125.0 MHz
		B1X	140 MHz
		B1Y	160 MHz
		B2X	255 MHz
		B5X	510 MHz
		R10	1 GHz
		R15	1.5 GHz
		R20	2 GHz
		R40	4 GHz
VXT models M9410A/11A		M941xA-B3X	300 MHz
		M941xA-B6X	600 MHz
		M941xA-B12	1.2 GHz
VXT models M9415A/16A		M941xA-B4X	400 MHz
		M941xA-B8X	800 MHz
		M941xA-B12	1.2 GHz
M9410E/11E:		M941xE-B3X	300 MHz
		M941xE-B6X	600 MHz
		M941xE-B12	1.2 GHz
M9415A/16A:		M941xE-B4X	400 MHz
		M941xE-B8X	800 MHz
		M941xE-B12	1.2 GHz
I/Q		None	10 MHz per channel 20 MHz for I+jQ
		B25	25 MHz per channel 50 MHz for I+jQ
		S40	40 MHz per channel 80 MHz for I+jQ
	All others		Hardware Dependent
	-		
Backwards Compatibility SCPI	[:SENSe]:WAVeform:BANDwidth[:RESolution] [:SENSe]:WAVeform:BWIDth[:RESolution]		

3 5G NR Mode

3.11 IQ Waveform Measurement

Auto Function

Remote Command	<code>[:SENSe]:WAVeform:DIF:BANDwidth:AUTO ON OFF 1 0</code> <code>[:SENSe]:WAVeform:DIF:BANDwidth:AUTO?</code>
Example	<code>:WAV:DIF:BAND:AUTO 0</code> <code>:WAV:DIF:BAND:AUTO?</code>
Preset	<code>ON</code>

Preset Values

Mode	Option	Radio Std	Value
GSM/EDGE			510 kHz
LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR			Automatically calculated
WLAN	None		10 MHz
	B25		25 MHz
	B40	802.11a/b/g/n/ac/ax//be (20 MHz)	25 MHz
		802.11n/ac/ax/be (40 MHz)	40 MHz
		802.11ac/ax/be (80 MHz)	80 MHz
		802.11ac/ax/be (160 MHz)	160 MHz
		802.11be (320 MHz)	320 MHz
	B1X	802.11ac(80 MHz)	80 MHz
	B1Y	802.11ac(160 MHz)	160 MHz
All others			100 kHz

Filter Type

Lets you select the type of bandwidth filter that is used.

The following types are available:

Type	SCPI	Notes
Gaussian	<code>GAUSSian</code>	See "Gaussian" on page 3116
Flat Top	<code>FLATtop</code>	See "Flattop" on page 3116
Short Nyquist	<code>SNYQuist</code>	Available only when Option B40, B85, B1A, or B1X WBDIF installed
Raised Short Nyquist	<code>RSNYquist</code>	
Raised Cosine	<code>RCOSine</code>	
Root Raised Cosine	<code>RRCosine</code>	

Remote Command	<pre>[:SENSe]:WAVeform:DIF:FILTer:TYPE GAUSSian FLATtop [:SENSe]:WAVeform:DIF:FILTer:TYPE? With DIF40 and/or WBDIF: [:SENSe]:WAVeform:DIF:FILTer:TYPE GAUSSian FLATtop SNIYquist RSNYquist RCOSine RRCosine [:SENSe]:WAVeform:DIF:FILTer:TYPE?</pre>								
Example	<pre>:WAV:DIF:FILT:TYPE GAUS :WAV:DIF:FILT:TYPE?</pre>								
Dependencies	<p>Gaussian and Flattop are available in all DIF configurations. For the other filter types, the filters are only available when Option DP2, B40, or a wider IF Bandwidth option is installed</p> <p>When you select a filter type other than Gaussian or Flattop when using Option B40, B85, B1A, or B1X WBDIF, but then you either explicitly select an IF Path Selection of 10 MHz or 25 MHz (B10M/B25M), or set a Digital IF BW equal to or narrower than 25 MHz with IF Path Selection Auto ON, the default filter type (FLATtop) is automatically selected. If you then again set the IF Path Selection to 85 MHz (B85), 125 MHz (B125M), or 140 MHz (B140M), the filter type remains as FLATtop</p>								
Couplings	See the description above								
Preset	<table> <tr> <th>Modes</th><th>Value</th></tr> <tr> <td>BASIC with DP2, B40, or wider, IF Bandwidth option</td><td>FLATtop</td></tr> <tr> <td>5G NR, WLAN, Channel Quality</td><td>FLATtop</td></tr> <tr> <td>All others</td><td>GAUSSian</td></tr> </table>	Modes	Value	BASIC with DP2, B40, or wider, IF Bandwidth option	FLATtop	5G NR, WLAN, Channel Quality	FLATtop	All others	GAUSSian
Modes	Value								
BASIC with DP2, B40, or wider, IF Bandwidth option	FLATtop								
5G NR, WLAN, Channel Quality	FLATtop								
All others	GAUSSian								
State Saved	Saved in instrument state								
Range	GAUSSian FLATtop When Option DP2, B40, or wider IF Bandwidth option is installed, the range is as follows GAUSSian FLATtop SNIYquist RSNIYquist RCOSine RRCosine								
Backwards Compatibility SCPI	<pre>[:SENSe]:WAVeform:BANDwidth:SHAPE [:SENSe]:WAVeform:BWIDth:SHAPE [:SENSe]:WAVeform:BANDwidth BWIDth[:RESolution]:TYPE</pre>								

Gaussian

When Option DP2, B40, or wider IF Bandwidth option is installed, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without DP2, B40, or wider IF Bandwidth option, the selectable Gaussian filter bandwidths are predetermined. There are 160 Info BWs (RBWs) arranged in a 24-per-decade sequence from 1 Hz through 3 MHz, plus 4, 5, 6 and 8 MHz settings.

Flattop

When Option DP2, B40, or wider IF Bandwidth option is installed, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without Option

DP2, B40 or wider IF Bandwidth option, , the selectable Flattop filter bandwidths are predefined. There are 134 Digital IF BWs (RBWs) arranged in a 6-per-decade sequence from 3 Hz through 3 MHz, plus 4, 5, 6 and 8 MHz settings.

Filter BW

This feature is only available when Option DP2, B40, or wider IF Bandwidth option is installed.

Remote Command	<code>[:SENSe]:WAVeform:DIF:FILTer:BANDwidth <freq></code> <code>[:SENSe]:WAVeform:DIF:FILTer:BANDwidth?</code>
Example	<code>:WAV:DIF:FILT:BAND 1MHz</code> <code>:WAV:DIF:FILT:BAND?</code>
Dependencies	Only available when Option DP2, B40, or wider IF Bandwidth option is installed. Disabled when the Filter Type is FLATtop
Couplings	Sets the same value as the current Digital IF BW value on Preset, or when Channel Filter Bandwidth Auto is ON
Preset	Same value as Digital IF BW
State Saved	Saved in instrument state
Min	10 Hz
Max	Clipped to the current Digital IF BW value

Auto Function

Remote Command	<code>[:SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO ON OFF 1 0</code> <code>[:SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO?</code>
Example	<code>:WAV:DIF:FILT:BAND:AUTO 0</code> <code>:WAV:DIF:FILT:BAND:AUTO?</code>
Preset	ON
Range	Auto Man

Filter Alpha

Sets the filter alpha for the DIF filter. This feature is only available when Option DP2, B40, or wider IF Bandwidth option is installed.

Remote Command	<code>[:SENSe]:WAVeform:DIF:FILTer:ALPHA <real></code> <code>[:SENSe]:WAVeform:DIF:FILTer:ALPHA?</code>
Example	<code>:WAV:DIF:FILT:ALPH 0.5</code> <code>:WAV:DIF:FILT:ALPH?</code>

Preset	0.2
State Saved	Saved in instrument state
Min	0.01
Max	1.00
Backwards Compatibility SCPI	<code>[:SENSe] :WAVeform:WBIF:FILTer:ALPHA</code>

Channel Filter Bandwidth (Backwards Compatibility Remote Command Only)

Dependencies	Only available when Option DP2, B40, or wider IF Bandwidth option is installed
Couplings	The value is determined by the following equation $\text{ChannelFilterBwBwcc} = (\text{ChannelFilterBw} / (\text{DigitalIFBw} * \text{OverSampleRatio}))$
Preset	0.8
State Saved	Saved in instrument state
Min	0.01
Max	1.0
Backwards Compatibility SCPI	<code>[:SENSe] :WAVeform:WBIF:FILTer:BANDwidth <real></code> <code>[:SENSe] :WAVeform:WBIF:FILTer:BANDwidth?</code>

3.11.5 Display

Lets you configure display items for the current Mode, Measurement, View, or Window.

3.11.5.1 View

Contains controls for selecting the current **View**, and for editing User Views.

View

See "[Views](#)" on page 3061.

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code>
--------	---

Command	<code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with <code>:DISP:VIEW:ADV:SEL</code></p> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p><code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node <code>:DISPlay:VIEW[:SElect]</code></p> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME <alphanumeric></code>
Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code>

	Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated</p>

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	:DISPlay:VIEW:ADVanced:REName <alphanumeric>
Example	:DISP:VIEW:ADV:REN “Baseband”
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <alphanumeric> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	:DISPlay:VIEW:ADVanced:DElete
----------------	--------------------------------------

Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code><alphanumeric></code> is not present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p>

If you switch measurements with the display disabled (via **:DISP:ENAB OFF**), then query the list of available Views, the result is undefined

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	:DISPlay:VIEW:ADVanced:USER:CATalog?
Example	:DISP:VIEW:ADV:USER:CAT?
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p>"Baseband,myView1,yourView1"</p> <p>If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined</p>

3.11.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	:DISPlay:GRATicule[:STATe] OFF ON 0 1 :DISPlay:GRATicule[:STATe]?
Example	:DISP:GRAT OFF
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<p>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1 :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</p> <p>This command is accepted for backwards compatibility with older instruments, but the WINDow, TRACe and GRID parameters are ignored</p>

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

3 5G NR Mode

3.11 IQ Waveform Measurement

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DElete:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF ON 0 1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.11.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.11.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

Carrier Reference Frequency

Sets the carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Since LTE-A, MSR and 5G NR Mode measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the Number of Component Carrier equals 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

then **Center Frequency** is equivalent to **Carrier Ref Frequency**. When Center Freq changes in such conditions, the mode of Center Freq remains as Auto, and Carrier Ref Freq changes to the same value. The major purpose of this coupling is for backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

Available only in 5G NR, LTEAFDD/TDD, and MSR Modes.

See ["More Information" on page 3127](#).

Mode: 5G NR, LTEAFDD, LTEATDD

Remote Command	<code>[:SENSe]:CCARrier:REFeRence <freq></code> <code>[:SENSe]:CCARrier:REFeRence?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency, as for "Center Frequency" on page 3128

Mode: MSR

Remote Command	<code>[:SENSe]:CARRier:REFeRence <freq></code> <code>[:SENSe]:CARRier:REFeRence?</code>
Example	<code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency, as for "Center Frequency" on page 3128

More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because those are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The **Center Frequency** in those measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency, which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of those measurements.

Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting **Center Frequency**, **Span** is held constant.

The center frequency setting is the same for all measurements within a mode, that is, it is Meas Global. Some modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a Global tab in its Meas Setup menu.

The Center Freq function sets (and queries) the Center Frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

Center Freq is remembered as you go from input to input. Thus, you can set a Center Freq of 10 GHz with the RF Input selected, change to BBIQ, and set a Center Freq of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input the Center Freq will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

For more details, see the following:

- "RF Center Freq (Remote Command Only)" on page 3132
- "Ext Mix Center Freq (Remote Command Only)" on page 3132
- "I/Q Center Freq (Remote Command Only)" on page 3133
- "Center Frequency Presets" on page 3130
- "VXT Models with Radio Heads/CIU Frequency Range" on page 3131

Remote Command	<code>[:SENSe] :FREQuency :CENTer <freq></code> <code>[:SENSe] :FREQuency :CENTer?</code>
Example	Set Center Frequency to 50 MHz: <code>:FREQ:CENT 50 MHz</code> Increment Center Frequency by the value of CF Step : <code>:FREQ:CENT UP</code> Return the current value of Center Frequency : <code>:FREQ:CENT?</code>
Notes	Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input

3 5G NR Mode

3.11 IQ Waveform Measurement

	<ul style="list-style-type: none"> For RF input it is equivalent to FREQ:RF:CENT For I/Q input it is equivalent to FREQ:IQ:CENT For External Mixer it is equivalent to FREQ:EMIX:CENT <p>Preset and Max values depend on Hardware Options</p> <p>If no terminator (for example, MHz) is sent the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated</p>
Preset	<p>Depends on instrument maximum frequency, mode, measurement, and selected input</p> <p>See "Center Frequency Presets" on page 3130, "RF Center Freq (Remote Command Only)" on page 3132, "Ext Mix Center Freq (Remote Command Only)" on page 3132, "I/Q Center Freq (Remote Command Only)" on page 3133 and "VXT Models with Radio Heads/CIU Frequency Range" on page 3131</p>
State Saved	Saved in instrument state
Min/Max	<p>Depends on instrument minimum/maximum frequency, mode, measurement, and selected input</p> <p>See "Center Frequency Presets" on page 3130, "RF Center Freq (Remote Command Only)" on page 3132, "Ext Mix Center Freq (Remote Command Only)" on page 3132, "I/Q Center Freq (Remote Command Only)" on page 3133 and "VXT Models with Radio Heads/CIU Frequency Range" on page 3131</p>
Status Bits/OPC dependencies	<p>Non-overlapped</p> <p>Auto Function (MSR, LTE-Advanced FDD/TDD and 5G NR Modes Only)</p>
Remote Command	[:SENSe]:FREQuency:CENTer:AUTO ON OFF 1 0 [:SENSe]:FREQuency:CENTer:AUTO?
Example	:FREQ:CENT:AUTO OFF :FREQ:CENT:AUTO?
Dependencies	Only available for Monitor Spectrum, Power Stat CCDF and IQ waveform measurements in the MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Couplings	<p>When Center Frequency is changed, state is automatically changed to Manual</p> <p>Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled. When Carrier Reference Frequency changes:</p> <p>Center Frequency : Auto Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)</p> <p>Center Frequency : Man Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset</p>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

*For option 526, the Max CF in RTSA is 26.999999995 GHz.

N9041B Center Freq Presets

3 5G NR Mode

3.11 IQ Waveform Measurement

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

RF Center Freq (Remote Command Only)

Specifies the RF Center Frequency. Sets the **Center Frequency** to use when the RF input is selected, even if the RF input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:RF:CENTer <freq></code> <code>[:SENSe]:FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be >3.6 GHz fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning
Preset	See table above
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See table above. Basically, instrument maximum frequency - 5 Hz

Ext Mix Center Freq (Remote Command Only)

Specifies the External Mixer Center Frequency. Sets the **Center Frequency** to use when the External Mixer is selected, even if the External Mixer input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:EMIXer:CENTer <freq></code> <code>[:SENSe]:FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having been switched to one of the other inputs (for example, RF), you return to the settings that existed when you left External Mixing. So, you return to the band you were in, with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore the Span setting from the other input is retained. Thus, the instrument returns to the Span setting from the previous input, limited as necessary by the current mixer setup
Preset	When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest

harmonic range in the Harmonic Table. **Center Frequency** thus presets to the point arithmetically equidistant from these two frequencies

Note that, if the current measurement has a limited **Span** available to it, and cannot achieve the span shown in the table (**Span** = Stop Freq – Start Freq), the instrument uses the maximum **Span** the measurement allows, and still sets **Center Frequency** to the midpoint of the Start and Stop Freq values in the Harmonic Table

When **Restore Input/Output Defaults** is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz

Therefore, after **Restore Input/Output Defaults**, if you go into External Mixing and do a *Mode Preset* while in the Spectrum Analyzer Mode, the resulting **Center Frequency** is 33.25 GHz

State Saved	Yes
Min	The minimum frequency in the currently selected mixer band +5 Hz
Max	The maximum frequency in the currently selected mixer band –5 Hz

I/Q Center Freq (Remote Command Only)

Specifies the I/Q Center Frequency. Sets the **Center Frequency** to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:IQ:CENTer <freq></code> <code>[:SENSe]:FREQuency:IQ:CENTer?</code>
Example	<code>:FREQ:IQ:CENT: 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min/Max	–/+40.049995 MHz

Center Frequency Offset

Sets the **Center Frequency Offset**, which is coupled with "**Center Frequency**" on [page 3128](#), and is only used in the Monitor Spectrum, IQ Waveform, Power Stat CCDF and PAVT measurements. The **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled by this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

When you change **Center Frequency Offset**, the **Center Frequency** is updated, but **Carrier Reference Frequency** is not.

Remote Command	<code>[:SENSe]:FREQuency:CENTer:OFFSet <freq></code>
----------------	---

	<code>[:SENSe]:FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Dependencies	Only available in the MSR, LTE-A FDD/TDD and 5G NR Modes
Preset	0 GHz
State Saved	Saved in instrument state
Min/Max	-/+500 GHz

Adjust Center Frequency to Carrier Config

This immediate action control adjusts **Center Frequency** to cover all the configured carriers when **"Digital IF BW" on page 3113** is **Auto**.

Remote Command	<code>[:SENSe]:WAVeform:FREQuency:CENTer:ADJust</code>
Example	<code>:WAV:FREQ:CENT:ADJ</code>
Couplings	When "Digital IF BW" on page 3113 is Man , pressing this control automatically changes it to Auto

3.11.7 Marker

Displays a menu that enables you to select, set up and control the markers for the current measurement.

If there are no active markers, **Marker** selects **Marker 1**, sets it to **POSiTion** (Normal) mode, and places it at the center of the display. If the selected marker is **OFF**, it is set to **POSiTion** mode and placed at the center of the screen, on the trace determined by the Marker Trace rules.

For details of the **POSiTion**, **DELTA**, and **OFF** mode options, see **"Marker Mode" on page 3137**.

3.11.7.1 Select Marker

Sets the selected marker. The term "selected marker" is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

For any menu that includes **Select Marker**, the first control is always **"Marker Time" on page 3135**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for POSi tion and Delta markers

3.11.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection for "**Marker Mode**" on page 3137 (**POSi**tion, **DEL**Ta, or **OFF**) for the selected marker, as well as additional functions that help you use markers.

Marker Time

This is the fundamental control that you use to move a marker around on the trace. Because it is the default active function in the **Marker** menu, all you need to do is press **Marker** and turn the knob to move the marker left and right on the display. This is always the first control on any **Marker** menu page that follows the Selected Marker.

The SCPI command sets the marker X-Axis value in the current marker X-Axis Scale unit. The marker that is addressed becomes the selected marker. It has no effect (other than to cause the marker to become selected) if the control mode is **OFF**, but it is the SCPI equivalent of entering an X value if the control mode is **POSi**tion or **DEL**Ta.

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X <time></code> <code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:WAV:MARK1:X 1</code> <code>:CALC:WAV:MARK1:X?</code>
Notes	If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an invalid suffix message will be generated The query returns the marker's absolute X-Axis value if the control mode is POSi tion. It returns the offset from the marker's reference marker if the control mode is DEL Ta. The query is returned in the fundamental units for the current marker X-Axis scale: seconds for Time . If the marker is OFF the response is Not A Number
Dependencies	Grayed-out, and displays three dashes, for the value when the selected Marker is OFF
Preset	LTE, LTE-A, 5G NR Modes: 5ms All other Modes: 1.0 ms
Min/Max	-/+infinity Unlike legacy instruments, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip

Backwards Compatibility SCPI	<code>:CALCulate:MARKer[1] 2 ... 4:X:CENTer</code> This alias is provided for compatibility with the Band Power function in PSA and ESA
------------------------------	--

Marker X Axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering a value if the control mode is Normal or Delta. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X:POSition <real></code> <code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:WAV:MARK:X:POS 500</code> <code>:CALC:WAV:MARK:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is POSition , or the offset from the marker's reference marker in trace points if the control mode is DELTA . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points
Preset	After a preset, all markers are turned OFF , so the query returns a <i>Not A Number (NAN)</i>
State Saved	No
Min/Max	-/+9.9E+37

Marker Y Axis Value (Remote Query Only)

Queries the marker Y-Axis result value in the current marker Y-Axis unit. The “result” of a marker is the value that is displayed on the second line of the Marker Result block. To properly interpret the returned value, you must also know how the instrument's Y-Axis Unit is set, as described below.

A marker can have up to two results, only one of which is displayed or returned in a query, as follows:

- **Absolute** Result: every marker has an Absolute Result. For **POSition** and **DELTA** markers, the Y-axis value of the trace point the marker is currently on. The Absolute Result is displayed in the result block or returned as a query, unless the marker control mode is **DELTA**
- **Relative** Result: if a marker's control mode is **DELTA**, the *relative* result is displayed in the result block or returned in a query. This is the ratio of the Absolute Result of a delta marker to the Absolute Result of its reference marker. The ratio is expressed in dB

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:WAV:MARK11:Y?</code>

3 5G NR Mode

3.11 IQ Waveform Measurement

Notes	<p>When the marker is on, IQ waveform returns I and Q values</p> <p>Case #1 - Trace RF, I or Q: returns a single double value</p> <pre>>:CALC:WAV:MARK1:Y?</pre> <pre>-2.402406506109E+001</pre> <p>Case #2 - Trace IQ: returns a double array of two values, the first is I, and the second is Q</p> <pre>>:CALC:WAV:MARK1:Y?</pre> <pre>-3.006944493834E-003,+9.9870666467354E-004</pre> <p>The IQ selection is for backwards compatibility purposes. For new designs, use the I and/or Q selection instead</p> <p>You must be in a Mode that includes the Waveform measurement to use this command. Use :INSTru-ment:SElect to set the Mode</p>
Preset	Result depends on the marker setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:WAVEform:MARKer[1] 2 ... 12:FUNCTION:RESult?

Marker Mode

Sets the marker control mode to **POSition**, **DELTA**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition (Normal)** and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X-Axis Value appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:WAVEform:MARKer[1] 2 ... 12:MODE POSition DELTA OFF :CALCulate:WAVEform:MARKer[1] 2 ... 12:MODE?
Example	:CALC:WAV:MARK:MODE OFF :CALC:WAV:MARK:MODE?
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELTA OFF
Annotation	<p>Mkr # <X value> and <Marker value> upper right on graph</p> <p>When Marker Trace is Polar in WCDMA mode:</p> <p>Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph</p>

Backwards Compatibility SCPI Command

Sets or queries the state of a marker. Setting a marker that is **OFF** to state **ON** or 1 puts it in **POSiTion** mode and places it at the center of the screen.

Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	:CALCulate:WAVeform:MARKer[1] 2 ... 12:STATe OFF ON 0 1 :CALCulate:WAVeform:MARKer[1] 2 ... 12:STATe?

Delta Marker (Reset Delta)

Pressing this control has the same effect as pressing the **DELTA** selection in "**Marker Mode**" on page 3137. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:WAVeform:MARKer:AOff
Example	:CALC:WAV:MARK:AOff

Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By "equal X-Axis movement" we mean that we preserve the difference between each marker's X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off-screen.

Remote Command	:CALCulate:WAVeform:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:WAVeform:MARKer:COUPle[:STATe]?
----------------	--

Example	:CALC:WAV:MARK:COUP ON :CALC:WAV:MARK:COUP?
Preset	OFF Presets on Mode Preset and "All Markers Off" on page 3138
State Saved	Saved in instrument state

3.11.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the **Delta** marker function.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.
Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Time" on page 3135 in **Settings**.

Peak Search

Moves the selected marker to the trace point that has the maximum Y-Axis value for that marker's trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	:CALCulate:WAVEform:MARKer[1] 2 ... 12:MAXimum
Example	:CALC:WAV:MARK2:MAX :SYST:ERR? can be used to query the errors to determine if a peak is found. The message "No peak found" (-200) will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In W-CDMA Mode, this command does <i>not</i> work when the selected marker is located on the Polar trace. In this case, the command is ignored

Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned **ON** as a **POSiTion** marker, and a peak search is performed.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:WAV:MARK:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned **ON** before the minimum search is performed.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:MINimum</code>
Example	<code>:CALC:WAV:MARK:MIN</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

Marker Delta

Pressing this control has the same effect as pressing **Delta** in "**Marker Mode**" on [page 3137](#) on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a **Peak Search** and change the marker's control mode to **Delta**, without having to access two separate menus.

3.11.7.4 Pk Search Config

Contains controls that let you set up the **Peak Search** functions.

Since the **Pk Search Config** functions are independent of the selected **Marker**, the **Select Marker** control does not appear while in **Pk Search Config**.


Peak Search Range

Lets you specify the range of trace to perform peak search actions specified in the **Peak Search** menu.

Option	SCPI	Behavior
Full	<code>FULL</code>	Peak Search actions will be performed on the entire trace
Manual	<code>MANual</code>	Specifies the range of the trace to which Peak Search actions will apply
Remote Command	<code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe FULL MANual</code> <code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe FULL MANual</code>	
Example	<code>:CALC:WAV:MARK:PEAK:SEAR:RANG FULL</code>	
Preset	<code>FULL</code>	
State Saved	Saved in instrument state	
Range	<code>FULL MANual</code>	

Peak Search Range Start

Specifies the start of the range, in seconds, to which **Peak Search** actions are applied. Displays as a green vertical line, with the label **Pk Search Start** on the left, as shown below.

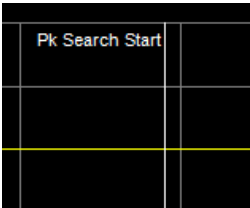


Remote Command	<code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STARt <time></code> <code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STARt?</code>
Example	<code>:CALC:WAV:MARK:PEAK:SEAR:RANG:STAR 0.001</code>
Dependencies	Disabled when Peak Search Range is set to Full.
Preset	0.0 ms
Min/Max	0.0/+Meas Time

Peak Search Range Stop

Specifies the end of the range, in seconds, to which **Peak Search** actions are applied. Displays as a green vertical line, with the label **Pk Search Stop** on the left,

as shown below.

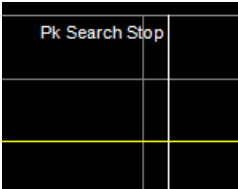

Remote Command	<code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STOP <time></code> <code>:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STOP?</code>
Example	<code>:CALC:WAV:MARK:PEAK:SEAR:RANG:STOP 0.001</code>
Dependencies	Disabled when Peak Search Range is set to Full.
Preset	0.0 ms
Min/Max	0.0/+Meas Time

3.11.7.5 Marker Function

The controls in this tab perform post-processing operations on marker data.

The **Marker Function** menu controls which marker functions are turned on, and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- Marker Noise
- Interval Power
- Interval Density
- Off

More Information

In the Waveform measurement, post-processing operations on markers are based on the measurement specifications. **Marker Functions** are distinct from measurement functions, which automatically perform complex sequences of setup, data acquisition, and display operations, to measure specified signal characteristics. **Marker Functions** are specified for each individual marker, and may be turned on individually for each marker.

Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Time" on page 3135 in **Settings**.

Interval Function

Sets the marker control function type to one of:

Option	Parameter
Marker Noise	NOISe
Interval Power	BPOWer
Interval Density	BDENsity
Marker Function Off	OFF

All interactions and dependencies detailed under the control description are enforced when the remote command is sent.

Remote Command	:CALCulate:WAVEform:MARKer[1] 2 ... 12:FUNCTION NOISe BPOWer BDENsity OFF :CALCulate:WAVEform:MARKer[1] 2 ... 12:FUNCTION?
Example	:CALC:WAV:MARK:FUNC BPOW :CALC:WAV:MARK:FUNC?
Preset	OFF
State Saved	Saved in instrument state
Range	Marker Noise Interval Power Interval Density Off
Annotation	Mkr # <X value> and <Marker value> upper right on graph

Interval Span

Sets the width of the Span for the selected marker.

Remote Command	:CALCulate:WAVEform:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN <time> :CALCulate:WAVEform:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN?
Example	:CALC:WAV:MARK:FUNC:BAND:SPAN 20 ms :CALC:WAV:MARK:FUNC:BAND:SPAN?
Couplings	Changing Interval Span necessarily changes "Interval Left" on page 3143 and "Interval Right" on page 3144
Preset	10% of Meas Time
State Saved	Saved in instrument state
Min	0
Max	100 s

Interval Left

Sets the left edge time for the band of the selected marker.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:LEFT <time></code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:LEFT?</code>
Example	<code>:CALC:WAV:MARK12:FUNC:BAND:LEFT 1 s</code> <code>:CALC:WAV:MARK12:FUNC:BAND:LEFT?</code>
Couplings	Changing Interval Left necessarily changes "Interval Span" on page 3143 and "Interval Right" on page 3144
Preset	5% of Meas Time
State Saved	Yes
Min	0
Max	100 s

Interval Right

Sets the right edge time for the band of the selected marker.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:RIGHT <time></code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:RIGHT?</code>
Example	<code>:CALC:WAV:MARK12:FUNC:BAND:RIGH 1 s</code> <code>:CALC:WAV:MARK12:FUNC:BAND:RIGH?</code>
Notes	You must be in the IQ Waveform measurement to use this command
Couplings	Changing Interval Right necessarily changes "Interval Left" on page 3143 and "Interval Span" on page 3143
Preset	5% of Meas Time
State Saved	Yes
Min	0
Max	100 s

3.11.7.6 Properties

The controls on this tab are used to set certain properties of the selected marker.

Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as "Marker Time" on page 3135 in **Settings**.

Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “*reference marker*” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:REfERENCE <integer></code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:REfERENCE?</code>
Example	<code>:CALC:WAV:MARK:REF 8</code> <code>:CALC:WAV:MARK:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself” When queried, a single value is returned (the specified marker number’s relative marker)
Couplings	The act of specifying the selected marker’s reference marker makes the selected marker a Delta marker If the reference marker is OFF , it is turned on in POSiTion mode at the Delta marker location
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if Marker 2 is selected, then its default reference marker is Marker 3. The exception is Marker 12, which has a default reference of Marker 1 Set to default by Restore Mode Defaults . Not reset by Marker Off , All Markers Off , or Preset
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Range	1 to 12 Remote Command only: if the range is exceeded, then the value is clipped
Min	1
Max	12
Annunciation	Appears in the marker label of a Delta marker

Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:TRACe RFENvelope I Q IQ</code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:WAV:MARK:TRAC RFEN</code> <code>:CALC:WAV:MARK:TRAC?</code>
Notes	The IQ selection is for backwards compatibility. For new designs, use the I and/or Q selection instead
Preset	RFEN
State Saved	Yes
Range	RFENvelope I Q IQ

Marker Settings Diagram

Lets you configure the Marker system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 3138 in **Settings**.

3.11.8 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

3.11.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

Avg/Hold Number (Averaging On/Off)

Sets the number of sweeps (average counts) that are averaged. After the specified number of sweeps, the "[Average Mode](#)" on page 3147 (terminal control) setting determines the averaging action.

Also lets you turn Averaging on or off.

Remote Command	<code>[:SENSe]:WAVeform:AVERage:COUNT <integer></code> <code>[:SENSe]:WAVeform:AVERage:COUNT?</code>
Example	<code>:WAV:AVER:COUN 1001</code> <code>:WAV:AVER:COUN?</code>
Preset	10
State Saved	Saved in instrument state
Min/Max	1/20001
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N, where n is the current average and N is the average count
Auto Function	
Remote Command	<code>[:SENSe]:WAVeform:AVERage[:STATe] OFF ON 0 1</code> <code>[:SENSe]:WAVeform:AVERage[:STATe]?</code>
Example	<code>:WAV:AVER ON</code> <code>:WAV:AVER?</code>
Preset	OFF

State Saved	Saved in instrument state
Range	OFF ON

Average Mode

Sets the Average Mode:

- **EXponential**, The measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
- **REpeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[:SENSe]:WAVeform:AVERage:TCONtrol EXponential REpeat</code> <code>[:SENSe]:WAVeform:AVERage:TCONtrol?</code>
Example	<code>:WAV:AVER:TCON REP</code> <code>:WAV:AVER:TCON?</code>
Preset	EXponential
State Saved	Saved in instrument state
Range	EXponential REpeat

Average Type

Sets the type of averaging. When **AUTO** is selected, the instrument chooses the type of averaging. Available Average Types are:

Option	Parameter
Log-Pwr Avg	LOG
Power (RMS)	RMS
Voltage	SCALar

When one of the average types is selected manually, the instrument uses that type regardless of other instrument settings, and shows **Man** on the **Average Type** control.

Remote Command	<code>[:SENSe]:WAVeform:AVERage:TYPE LOG MAXimum MINimum RMS SCALar</code> <code>[:SENSe]:WAVeform:AVERage:TYPE?</code> For EXT-C, E6630A, E6640A, M90XA, use the following command <code>[:SENSe]:WAVeform:AVERage:TYPE LOG RMS SCALar</code>
Example	<code>:WAV:AVER:TYPE RMS</code> <code>:WAV:AVER:TYPE?</code>
Notes	The selections MAX and MIN are retained for backwards compatibility, but they are removed from the

	front panel access because they are not an Average function
Couplings	AUTO selects Power (RMS) averaging if a Marker Function (Marker Noise, Band/Intvl Power) is on
Preset	RMS
State Saved	Saved in instrument state
Range	Log-Pwr Avg Power (RMS) Voltage Auto Function
Remote Command	<code>[:SENSe]:WAVeform:AVERage:TYPE:AUTO ON OFF 1 0</code> <code>[:SENSe]:WAVeform:AVERage:TYPE:AUTO?</code>
Example	<code>:WAV:AVER:TYPE:AUTO 0</code> <code>:WAV:AVER:TYPE:AUTO?</code>
Preset	ON

Time Avg Num

Sets the number of HW averages to be executed per each data acquisition.

HW Averaging

Changes the number of time averages to be made using hardware. This averaging is much faster than the standard averaging done in software. The hardware averaging is done on the complex voltage time trace data before any measurement application averaging is done. Both types of averaging (HW and SW) can be done on the same measurement data.

When time averaging is being done in HW, each trace update represents N fresh data acquisitions averaged together, where N is the number of time averages. You cannot access the individual time data. Note that this averaging is done prior to the SW averaging done within the application. Thus, if time averaging is turned on, the trace in this measurement shows the result of HW averaging even if the normal (SW) averaging is turned off. Subsequent normal (SW) averaging is orthogonal to this hardware-based time averaging.

Thus, it is possible to turn off normal (SW) averaging within the application but still have the HW averaging set to a certain number greater than 1. In other words, turning averaging off within the measurement will not affect HW averaging. If HW averaging needs to be turned off, simply set the HW Averaging parameter to 1.

The **Auto/Man** feature of **Time Avg Num** works differently than other parameters. Since it is time averaging, a trigger source something other than **Free Run** should be used to synchronize successive data acquisitions to avoid cancelling out the signal to be measured. It is most useful for a periodic signal with known periods used in conjunction with the Periodic trigger. Thus, when in **Auto**, the Trigger Source automatically changes to **Periodic** trigger when **Time Avg Num** is turned **ON**. The

3 5G NR Mode

3.11 IQ Waveform Measurement

trigger period is set to the current Meas Time value. Any changes to Meas Time change the **Periodic** trigger period to the same value and vice versa. If a trigger source other than **Periodic** trigger is manually selected, the **Time Avg Num Auto/Man** toggle is set to **Man**.

Remote Command	<code>[:SENSe]:WAVeform:AVERage:TACount <integer></code> <code>[:SENSe]:WAVeform:AVERage:TACount?</code>
Example	<code>:WAV:AVER:TAC 10</code> <code>:WAV:AVER:TAC?</code>
Notes	Only available when Option DP2, B40, or wider IF Bandwidth option is installed
Preset	1
State Saved	Saved in instrument state
Min/Max	1/65535
Auto Function	
Remote Command	<code>[:SENSe]:WAVeform:AVERage:TACount:AUTO OFF ON 0 1</code> <code>[:SENSe]:WAVeform:AVERage:TACount:AUTO?</code>
Example	<code>:WAV:AVER:TAC:AUTO ON</code> <code>:WAV:AVER:TAC:AUTO?</code>
Preset	ON
Range	Auto Man

Meas Time

Lets you set how long the measurement is performed. X Scale *only* changes the scale of the display.

Remote Command	<code>[:SENSe]:WAVeform:SWEp:TIME <time></code> <code>[:SENSe]:WAVeform:SWEp:TIME?</code>
Example	<code>:WAV:SWE:TIME 50 ms</code> <code>:WAV:SWE:TIME?</code>
Notes	Specifies and returns how long the measurement is performed. It is the time record length of the measurement waveform. The Max time may be reduced when the sample frequency is high due to the memory limitation
Preset	LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR Modes: 10 ms All other Modes: 2.000000 ms
State Saved	Saved in instrument state
Range	1.000 us to 100.00 s

Min/Max	1.000 us/100.0 s
	1.000 us/3200 s

Sample Rate

Sets an arbitrary sample rate for the acquired data to be processed.

Remote Command	[:SENSe]:WAVeform:SRATe <freq> [:SENSe]:WAVeform:SRATe?																			
Example	:WAV:SRAT 1.3636 MHz																			
Notes	The command and query are available when Option DP2, B40, or wider IF Bandwidth option is installed. For other configurations, only the query is available																			
Dependencies	To set a 2.4 GHz Sample Rate with Options R15 or R20, Center Frequency must be greater than or equal to 3.5 GHz To set a 5.1 GHz Sample Rate with Option R40, Center Frequency must be greater than or equal to 10 GHz																			
Preset	<table><tr><th>Mode</th><th>Value</th></tr><tr><td>5G NR, LTEA FDD/TDD</td><td>Automatically calculated</td></tr><tr><td>BASIC</td><td>125.0 kHz</td></tr><tr><td>BASIC</td><td>100 MHz</td></tr><tr><td>EDGE GSM</td><td>637.5 kHz</td></tr><tr><td>MSR</td><td>125.0 kHz</td></tr><tr><td>PNOISE</td><td>125.0 kHz</td></tr><tr><td>WCDMA</td><td>125.0 kHz</td></tr><tr><td>WLAN</td><td>31.25 MHz</td></tr></table>		Mode	Value	5G NR, LTEA FDD/TDD	Automatically calculated	BASIC	125.0 kHz	BASIC	100 MHz	EDGE GSM	637.5 kHz	MSR	125.0 kHz	PNOISE	125.0 kHz	WCDMA	125.0 kHz	WLAN	31.25 MHz
Mode	Value																			
5G NR, LTEA FDD/TDD	Automatically calculated																			
BASIC	125.0 kHz																			
BASIC	100 MHz																			
EDGE GSM	637.5 kHz																			
MSR	125.0 kHz																			
PNOISE	125.0 kHz																			
WCDMA	125.0 kHz																			
WLAN	31.25 MHz																			
Min/Max	12.5 Hz/Option dependent For Option DP2, B40 or wider IF Bandwidth option: <table><tr><td>Digital IF 10 MHz path</td><td>12.5 MHz</td></tr><tr><td>Digital IF 25 MHz path</td><td>31.25 MHz</td></tr><tr><td>Digital IF 40 MHz path</td><td>50 MHz</td></tr><tr><td>Option B85 85 MHz path</td><td>106.25 MHz</td></tr><tr><td>Option B1A 125 MHz path</td><td>156.25 MHz</td></tr><tr><td>Option B1X 140 MHz path</td><td>175 MHz</td></tr><tr><td>Option B1Y 160 MHz path</td><td>200 MHz</td></tr></table>		Digital IF 10 MHz path	12.5 MHz	Digital IF 25 MHz path	31.25 MHz	Digital IF 40 MHz path	50 MHz	Option B85 85 MHz path	106.25 MHz	Option B1A 125 MHz path	156.25 MHz	Option B1X 140 MHz path	175 MHz	Option B1Y 160 MHz path	200 MHz				
Digital IF 10 MHz path	12.5 MHz																			
Digital IF 25 MHz path	31.25 MHz																			
Digital IF 40 MHz path	50 MHz																			
Option B85 85 MHz path	106.25 MHz																			
Option B1A 125 MHz path	156.25 MHz																			
Option B1X 140 MHz path	175 MHz																			
Option B1Y 160 MHz path	200 MHz																			

Option B2X 255 MHz path	300 MHz
Option B5X 510 MHz path	600 MHz
Option R10 1 GHz path	1.2 GHz
Option R15 1.5 GHz path	2.4 GHz
Option R20 2 GHz path	2.4 GHz
Option R40 4 GHz path	5.1 GHz

For all other configurations:

10 MHz path	15 MHz
Option B25 25 MHz path	45 MHz

Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

Spur Avoidance

Because VXT models M9410A/11A/15A/16A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the Digital IF BW \leq maxBW/2.5. See ["More Information" on page 3152](#).

You can disable this function to speed up your measurement, by setting **Spur Avoidance** to **Disabled**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because the Digital IF BW $>$ maxBW/2.5, the following warning message appears in the status bar: "Settings Alert; Spur Avoidance Off". This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	<code>[:SENSe]:WAVeform:SAVoid[:STATe] ON OFF 0 1</code> <code>[:SENSe]:WAVeform:SAVoid[:STATe]?</code>
Example	<code>:WAV:SAVoid ON</code> <code>:WAV:SAVoid?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>

More Information

The Maximum Digital IF BW depends on the installed options, and selected **Center Frequency**.

VXT models M9410A/11A

Option limitation:

Option	Max Digital IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 5480 MHz (without Option EP6)	1200 MHz
5480 MHz ~ 6080 MHz (without Option EP6)	$(6080 \text{ MHz} - CF) * 2$
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 6000 MHz (Option EP6)	1200 MHz
6000 MHz ~ 6600 MHz (Option EP6)	$(6600 \text{ MHz} - CF) * 2$

VXT models M9415A/16A

Option limitation:

3 5G NR Mode

3.11 IQ Waveform Measurement

Option	Max Digital IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 12300 MHz	1200 MHz
12300 MHz ~ 12900 MHz	$(12900 \text{ MHz} - CF) * 2$

M9410E/11E

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 25.9 GHz (without Option EP6)	1200 MHz
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 25.9 GHz (Option EP6)	1200 MHz
25.9 GHz ~ 26.5 GHz	$\text{Min}(\text{Max BW by option}, 2 * (26.5 \text{ GHz} - \text{Center Freq}))$

M9415E/16E

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 25.9 GHz	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 3155 below.

Remote Command :COUPle ALL

Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time

- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all measurement parameters to their default values.

Remote Command	:CONFigure:WAVEform
Example	:CONF:WAV
Notes	Restore default values of all parameters

3.11.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.
This control allows you to set the Direction of the signal being measured.

Remote Command	[:SENSe]:RADio:STANdard:DIRection DLINK ULINK [:SENSe]:RADio:STANdard:DIRection?
Example	:RAD:STAN:DIR DLIN

3 5G NR Mode

3.11 IQ Waveform Measurement

Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> - If changed to uplink: RF burst - If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> - If changed to uplink: Periodic - If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> - External 1, when Info BW \leq 255 MHz - External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINK when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLink
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

3.11.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes
Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation</code> <code>CONTiguous</code> <code>NCONTiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	<code>CONTiguous</code>
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

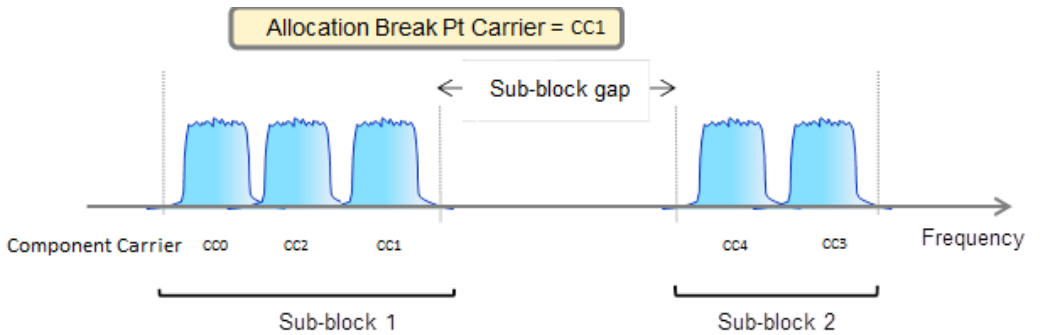

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONTiguous:ABPoint</code> <code>CC0</code> ... <code>CC15</code>
----------------	--

	[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?
Example	:CCAR:CONF:ALL:NCON:ABP CC0 :CCAR:CONF:ALL:NCON:ABP?
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 ... CC15

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CC0 Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	
	Carrier Aggregation	
	Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINk?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink Unavailable when " Bandwidth on page 3297" is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When "Sidelink" on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> – Option B25: B20M – Option B40: B35M – Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on "Bandwidth" on page 3297 as follows: <ul style="list-style-type: none"> – 50 MHz and 100 MHz: FR1 and FR2 – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly Also, in some cases, make sure if the "Non-Contiguous Break at" parameter is set to the intended value since it's often left unchanged after Frequency Offset of CCs are changed
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANua1</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

NOTE

This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>

3 5G NR Mode

3.11 IQ Waveform Measurement

Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS

Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1
-----------	---

Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
5 MHz	4.500	4.515
10 MHz	9.360	9.375
15 MHz	14.220	14.235
20 MHz	19.080	19.095
25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310

When Freq Range is FR2

	Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
	50 MHz	47.520	47.580
	100 MHz	95.040	95.160
	200 MHz	190.080	190.20
	400 MHz	380.160	380.280
	800 MHz	714.24	715.20
	1600 MHz	1428.48	1429.44
	2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz		
State Saved	Yes		
Min	100 kHz		
Max	2000 MHz		

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.11.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled “Configure Preset” lets you configure the preset values for the Component Carriers. Once you have set all the controls in the “Configure Preset” section to the desired value, press the “Apply Preset (to all CCs)” control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs)** or the values on the controls will *not* affect the Component Carriers.

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Bandwidth" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:CARRier[:BANDwidth] B5M B10M B15M B20M</code>
----------------	---

	B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M [:SENSe]:RADio:STANdard:PRESet:CARRier[:BANDwidth]?
Example	:RAD:STAN:PRES:CARR B5M :RAD:STAN:PRES:CARR?
Dependencies	Selections other than 10 MHz, 20 MHz, 30 MHz, and 40 MHz are unavailable when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X If you change "Uplink Carrier Mode" on page 3313 to Sidelink - V2X when this parameter is set to a value other than 10 MHz, 20 MHz, 30 MHz, or 40 MHz, it is forcefully set to 10 MHz
Preset	When N9085EM0E is not installed and N9085EM4E is installed: B10M Otherwise: B100M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet[:BANDwidth]

Frequency Range

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the "Freq Range" on page 3297 of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the "Configure Preset" section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22 [:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?
Example	:RAD:STAN:PRES:FREQ:RANG FR1 :RAD:STAN:PRES:FREQ:RANG?
Notes	SCPI enum "FR2" is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 3169 depending on the currently selected value.
Dependencies	Available selections differ depending on Bandwidth as follows:

	Bandwidth	FR
	5 MHz, ..., 100 MHz	FR1
	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1
	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
	When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable	
Preset	FR1	
State Saved	Yes	
Range	FR1 FR2 FR2-1 FR2-2	
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet:FRANge	

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
	60,...90 MHz					
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press” Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

SCS

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

In 5G, subcarrier spacing is governed by $2^n \times 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</code> For option details, see "Selections & Dependencies" on page 3171 <code>[:SENSe]:RADio:STANdard:PRESet:SCS?</code> <code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</code>
----------------	--

3 5G NR Mode

3.11 IQ Waveform Measurement

	<code>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</code>
Example	<code>:RAD:STAN:PRES:SCS SCS30K</code> <code>:RAD:STAN:PRES:SCS?</code> <code>:RAD:STAN:PRES:SCS:AUTO 0</code> <code>:RAD:STAN:PRES:SCS:AUTO?</code>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 3171
Preset	<code>SCS30K</code> <code>ON</code>
State Saved	Yes Yes
Range	u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz Auto Man

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	<code>SCS15K, SCS30K</code>
	10 – 50 MHz	15K*/30K/60K	<code>SCS15K, SCS30K, SCS60K</code>
	60 – 100 MHz	30K*/60K	<code>SCS30K, SCS60K</code>
FR2	50, 100, 200 MHz	60K*/120K	<code>SCS60K, SCS120K</code>
	400 MHz	120K*/480K/960K	<code>SCS120K, SCS480K, SCS960K</code>
	800, 1600 MHz	480K*/960K	<code>SCS480K, SCS960K</code>
	2000 MHz	960K*	<code>SCS960K</code>
FR2-1	50, 100, 200 MHz	60K*/120K	<code>SCS60K, SCS120K</code>
	400 MHz	120K*	<code>SCS120K</code>
FR2-2	100 MHz	120K*	<code>SCS120K</code>
	400 MHz	120K*/480K/960K	<code>SCS120K, SCS480K, SCS960K</code>
	800, 1600 MHz	480K*/960K	<code>SCS480K, SCS960K</code>
	2000 MHz	960K*	<code>SCS960K</code>

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the ["Number of Component Carriers" on page 3292](#) will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1DOT1 DLTm1DOT2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3DOT1 DLTm3DOT1Q16 DLTm3DOT1QPS DLTm3DOT1A DLTm3DOT1B DLTm3DOT2 DLTm3DOT3 FPIBPSK DLTm1DOT1P1 DLTm1DOT1L2</pre> <p>For selection details, see "Available Selections" on page 3173</p> <pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc?</pre>
Example	<pre>:RAD:STAN:PRESet:RBAL DLTm1DOT1</pre> <pre>:RAD:STAN:PRESet:RBAL?</pre>
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See "Available Selections" on page 3173
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	

3 5G NR Mode

3.11 IQ Waveform Measurement

Group	Configuration
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			

	FR	FR1	FR2	FR2-1	FR2-2
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM				
	Fulfilled Pi/2 BPSK		✓	✓	✓
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMal V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code>

	<code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the “Preset for Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRESet:OTYP CPOF</code> <code>:RAD:STAN:PRESet:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the "Preset for ACP, SEM, Spur, Tx On/Off Power" section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the "Configure Preset" section, and then press "Apply Preset (to all CCs)".

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On/Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</code> For option details, see "Selections & Dependencies" on page 3177 <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</code> <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</code>
----------------	--

3 5G NR Mode

3.11 IQ Waveform Measurement

Example	<pre> :RAD:STAN:PRES:ADJ:FRAN F1T03 :RAD:STAN:PRES:ADJ:FRAN? :RAD:STAN:PRES:ADJ:FRAN:AUTO 1 :RAD:STAN:PRES:ADJ:FRAN:AUTO? </pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 3177
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	f ≤ 1.0 GHz	FT01
	< f ≤ 3.0 GHz	F1T03
	3.0 < f ≤ 4.2 GHz	F3T04P2
	4.2 < f ≤ 6.0 GHz	F4P2T06
	6.0 < f ≤ 7.125 GHz	F6T07
FR2	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
	52.6 < f ≤ 71.0 GHz	F52T071
FR2-1	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
FR2-2	52.6 < f ≤ 71.0 GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINk:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINk:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)

- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRESet:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	<code>BWARea</code>
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:ACH NR</code> <code>:RAD:STAN:PRESet:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X

Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA Uplink
Remote Command	[:SENSe]:RADio:STANdard:PRESet:ULINk:ACHannel[:TYPE] NR UTRa NRUTra [:SENSe]:RADio:STANdard:PRESet:ULINk:ACHannel[:TYPE]?
Example	:RAD:STAN:PRES:ULIN:ACH NR :RAD:STAN:PRES:ULIN:ACH?
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

UE Power Class

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you select the UE Power Class for preset from Power Class 1 to 4.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP and Mod Analysis measurement.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:ULINk:PCLass CLASS1 ... CLASS4 [:SENSe]:RADio:STANdard:PRESet:ULINk:PCLass?
Example	:RAD:STAN:PRES:ULIN:PCL CLASS3 :RAD:STAN:PRES:ULIN:PCL?
Dependencies	Grayed out when Radio Direction is Downlink Power Class 4 is grayed out when Frequency Range is FR1 Power Class 1, 2, and 4 are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	CLASS3
State Saved	Yes
Range	1 2 3 4

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?</code>
Example	<code>:RAD:STAN:PRES:INCL:EVM:RBAL 1</code> <code>:RAD:STAN:PRES:INCL:EVM:RBAL?</code>
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu

	panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?</code>
Example	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR 1</code> <code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as ["Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321](#).

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot
FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?</code>
----------------	--

Example	<code>:RAD:STAN:PRES:RBAL:TIME:LENG GPP</code> <code>:RAD:STAN:PRES:RBAL:TIME:LENG?</code>
Notes	Only apply to Modulation Analysis measurement
State Saved	Yes

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **"Apply Preset (to all CCs)"** or the values on the controls in the **"Configure Presets"** section of the menu panel will *not* affect the Component Carriers.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:IMMediate</code>
Example	<code>:RAD:STAN:PRES:IMM</code>
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until "Apply Preset" is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection "FR2" in this chapter cover either or both "FR2-1" or/and "FR2-2" selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	μ = 0 (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	μ = 0 (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr),	n/a

Assumed Adj Channels (for ACP, FR1)	Cat A Local Area BS, Cat B Local Area BS NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE)	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
UL Channel Type (for Tx On Off Power)	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When "**Apply Preset (to All CCs)**" on page 3322 is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
			$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
		Cat A MR BS, Cat B MR BS	None, $f \leq 1.0$ GHz,			Table 6.6.4.5.4-1

1-0		1.0 < f ≤ 3.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.6.4.5.4-3	
		3.0 < f ≤ 4.2 GHz,				
		4.2 < f ≤ 6.0 GHz,				
		6.0 < f ≤ 7.125 GHz				
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz,			Table 6.6.4.5.4-2	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.4-4
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz,			Table 6.6.4.5.5-1	
		1.0 < f ≤ 3.0 GHz				
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.5-2
		4.2 < f ≤ 6.0 GHz,				
	6.0 < f ≤ 7.125 GHz					
	Cat A WA BS	f ≤ 1.0 GHz			Table 6.7.4.5.1.1-1	
		None, 1.0 < f ≤ 3.0 GHz				Table 6.7.4.5.1.1-2
3.0 < f ≤ 4.2 GHz						
4.2 < f ≤ 6.0 GHz						
6.0 < f ≤ 7.125 GHz						
Cat B WA BS		f ≤ 1.0 GHz	Table 6.7.4.5.1.2-1			
		None, 1.0 < f ≤ 3.0 GHz		Table 6.7.4.5.1.2-2		

3 5G NR Mode

3.11 IQ Waveform Measurement

FR2	2-0			3.0 < f ≤ 4.2 GHz		Table 6.7.4.5.1.2-3
				4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.2-4
				6.0 < f ≤ 7.125 GHz		Table 6.7.4.5.1.2-5
			Cat A MR BS, Cat B MR BS	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz		Table 6.7.4.5.1.4-1
				3.0 < f ≤ 4.2 GHz		Table 6.7.4.5.1.4-2
				4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.4-3
				6.0 < f ≤ 7.125 GHz		Table 6.7.4.5.1.4-3a
				Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	Table 6.7.4.5.1.4-4
				3.0 < f ≤ 4.2 GHz		Table 6.7.4.5.1.4-5
				4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.4-6
				6.0 < f ≤ 7.125 GHz		Table 6.7.4.5.1.4-7
				Cat A LA BS, Cat B LA BS	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz	Table 6.7.4.5.1.5-1
				3.0 < f ≤ 4.2 GHz		Table 6.7.4.5.1.5-2
				4.2 < f ≤ 6.0 GHz		Table 6.7.4.5.1.5-3
				6.0 < f ≤ 7.125 GHz		Table 6.7.4.5.1.5-4
				Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P _r), Cat A LA BS	None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5 GHz, 43.5 < f ≤ 48.2 GHz	Table 6.7.4.5.2.2-1 Table 6.7.4.5.2.2-2 Table

TS38.141-2
v.17.9.0
(2023-03)

Table 6.7.3.5.2-1

	GHz	6.7.4.5.2.2-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.2-4
Cat B WA BS,	None,	Table
Cat B MR BS,	24.25 < f ≤ 29.5	6.7.4.5.2.3-1
Cat B MR BS	GHz	
(Low P _r),	37.0 < f ≤ 43.5	Table
Cat B LA BS	GHz	6.7.4.5.2.3-2
	43.5 < f ≤ 48.2	Table
	GHz	6.7.4.5.2.3-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values TDD / FDD Duplex Mode			User Defined Duplex mode	
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff Gate (*5)	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate Delay	On	On	(no preset)	On	On
		5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)

Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope =

Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

3.11.8.5 Advanced

Contains advanced functions that are used for specific applications. These settings should not be changed for most measurements.

Does not appear in VXT.

Phase Noise Optimization

Sets the LO (local oscillator) phase noise behavior for various desired operating conditions.

Remote Command	<code>[:SENSe]:WAVeform:FREQuency:SYNThesis[:STATe] 1 ... 5</code> For the meaning of each numeric option value, see "Parameter Options & Installed Options" on page 3194 below <code>[:SENSe]:WAVeform:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:WAV:FREQ:SYNT 2</code> Selects optimization for best wide offset phase noise
Dependencies	Does not appear in all models. For models that do not display this control, the SCPI command is accepted for compatibility, but no action is taken Not available in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/116E
Preset	Because this function is in AUTO after Preset , the state of this function after Preset will be automatically calculated
State Saved	Saved in instrument state
Range	See "Ranges" on page 3198 below Auto Function

Remote Command	<code>[:SENSe]:WAVeform:FREQuency:SYNThesis:AUTO[:STATe] OFF ON 0 1</code>
Example	<code>:WAV:FREQ:SYNT:AUTO ON</code>
Preset	<code>ON</code>

Parameter Options & Installed Options

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
"Balanced" on page 3195	1	<ul style="list-style-type: none"> – In instruments with EPO, balances close-in phase noise with spur avoidance – In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 3195	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 3196	3	Optimizes LO for tuning speed
"Best Close-in" on page 3195	4 or 1*	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 3195	5	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

*Dependent on Option EPO installation. See "Best Close-in" on page 3195 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 3196 is identical in effect to "Best Close-in" on page 3195.

Best Close-in

Without option EP0

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EP0

:FREQ:SYNT 4

In instruments with Option EP0, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the **"Balanced" on page 3195** setting, parameter 1 selects **"Balanced" on page 3195** in EP0 instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects **"Best Close-in" on page 3195**, which is usually not as good a choice as **"Balanced" on page 3195**.

Balanced

:FREQ:SYNT 1

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Best Spurs

:FREQ:SYNT 5

In instruments with EP0, the LO is configured for better phase noise than the **"Best Wide-offset" on page 3195** case close to the carrier, but the configuration has 11 dB worse phase noise than the **"Best Close-in" on page 3195** case mostly within ± 1 octave around 300 kHz offset. Spurs are even lower than in the **"Balanced" on page 3195** case at better than -90 dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term "**Fast Tuning**" on page 3196 refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as "**Best Spurs**" on page 3195. It is available with the "**Fast Tuning**" on page 3196 label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a "**Fast Tuning**" on page 3196 option, the settings for "**Best Close-in**" on page 3195 are used if "**Fast Tuning**" on page 3196 is selected. This gives the fastest possible tuning for that hardware set.)

Auto

:FREQ:SYNT:AUTO ON

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
<p>EPO</p> <p>Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)</p>	<p>Center frequency is < 699.9 kHz</p> <p>Span > 114.1 MHz, <i>or</i> RBW > 800 kHz RBW > 290 kHz, <i>or</i> Span > 4.2 MHz</p> <p>Other conditions</p>	<p>"Balanced" on page 3195</p> <p>"Fast Tuning" on page 3196</p> <p>"Best Wide-offset" on page 3195</p> <p>"Balanced" on page 3195</p>
<p>EP1</p> <p>Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)</p>	<p>Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking"</p> <p>Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz</p> <p>All other conditions</p>	<p>"Fast Tuning" on page 3196</p> <p>"Best Close-in" on page 3195</p> <p>"Best Wide-offset" on page 3195</p>
<p>EP2</p> <p>Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 3195; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)</p>	<p>CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz</p> <p>Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz</p> <p>All other conditions</p>	<p>"Best Close-in" on page 3195</p> <p>"Fast Tuning" on page 3196</p> <p>"Best Wide-offset" on page 3195</p>
<p>EP4</p> <p>(available in CXA for improved phase noise)</p>	<p>Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking"</p> <p>CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz</p>	<p>"Fast Tuning" on page 3196</p> <p>"Best Close-in" on page 3195</p>

Models with Option	Conditions	Selection
	All other conditions	"Best Wide-offset" on page 3195
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 3196 are actually the same as "Best Close-in" on page 3195, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Span > 12.34 MHz, or RBW > 250 kHz, or Source Mode is set to "Tracking"	"Fast Tuning" on page 3196
	Center frequency is < 25 kHz, or CF >= 1 MHz and Span <= 141.4 kHz and RBW <= 5 kHz	"Best Close-in" on page 3195
	All other conditions	"Best Wide-offset" on page 3195

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP1	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]

Option	Option #	Phase Noise Option	Range
EP2, EP3, EP5	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
EP4	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

ADC Dither

Toggles the dither function On and Off. The dither function improves linearity for low level signals, at the expense of a higher noise floor.

The reduced clipping-to-noise ratio results in higher noise because the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither. The enhanced linearity is mostly improved scale fidelity.

With dither on, the third-order distortions are usually invisible for mixer levels below -35 dBm. With dither off, these distortions can be visible, with typical power levels of -110 dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around -70 dBm and lower, while the specified nonlinearity is many times smaller with dither on.

Remote Command	<code>[:SENSe]:WAVeform:ADC:DITHer[:STATe] OFF ON 0 1</code> <code>[:SENSe]:WAVeform:ADC:DITHer[:STATe]?</code>
Example	<code>:WAV:ADC:DITH ON</code> <code>:WAV:ADC:DITH?</code>
Notes	The dither function improves linearity for low level signals, at the expense of a higher noise floor
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Backwards Compatibility SCPI	<code>[:SENSe]:WAVeform:WBIF:ADC:DITHer</code> <code>[:SENSe]:WAVeform:PDITHer</code>

Auto Function

Remote Command	<code>[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] OFF ON 0 1</code> <code>[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe]?</code>
Example	<code>:WAV:ADC:DITH:AUTO ON</code> <code>:WAV:ADC:DITH:AUTO?</code>
Notes	Sets ADC dithering to automatically select whether dithering is needed

	The dither function improves linearity for low level signals, at the expense of a higher noise floor
Preset	OFF
State Saved	Saved in instrument state
Range	Auto Man

LO Dither

When **LO Dither** is turned on, the local oscillator frequency is rapidly changed by small, random amounts. This helps spread the power of spurious signals within the passband, which lowers their level, thus increasing dynamic range. This is only required in very wide passbands, so this feature only appears with Option H1G.

Remote Command	<code>[:SENSe]:WAVeform:LO:DITHer[:STATe] ON OFF 1 0</code> <code>[:SENSe]:WAVeform:LO:DITHer[:STATe]?</code>
Example	<code>:WAV:LO:DITH 1</code> <code>:WAV:LO:DITH?</code>
Dependencies	Only available when the instrument has the Option H1G installed. If you try to turn ON LO Dither in any other case, an error message is generated, -241, "Hardware missing; Option H1G required" Only appears in some Modes (for example, VMA and IQ Analyzer) The LO Dither function is turned OFF and grayed-out when the IF Path is set to a path other than 1 GHz. If you press the grayed-out control, a warning message "LO Dither only available with IF Path 1 GHz" is shown. If you try to set LO Dither to ON remotely while it is grayed-out, a message "-221, Settings conflict; LO Dither only available with IF Path 1 GHz" is returned When LO Dither is turned ON , the Phase Noise Optimization control is grayed-out. If you try to change the PNO value via front panel or SCPI in that case, an error is generated, "LO Dither must be turned off to change this value"
Couplings	As with most parameters with an AUTO state, " Auto Couple " on page 3289 sets it to Auto, which then selects AUTOorange . Setting any specific value (AUTOorange , LOW or HIGH) sets the AUTO state to false When LO Dither is turned ON , Phase Noise Optimization is set to "Best Close-In". If the Phase Noise Optimization value changes due to turning on LO Dither , a warning message "Phase Noise Optimization changed due to LO Dither activation" is displayed
Preset	OFF
State Saved	Saved in instrument state

IF Gain

Selects the range of IF gain.

When in **AUTOorange** mode, the IF checks its range once for data acquisition, to provide the best signal to noise ratio. You can specify the range for the best speed, and optimize for noise or for large signals.

3 5G NR Mode

3.11 IQ Waveform Measurement

When **IF Gain** is set to **AUTOorange**, the IF Gain is set to **HIGH** initially for each chunk of data. The data is then acquired. If the IF overloads, then the IF Gain is set to **LOW**, and the data is re-acquired. Because of this operation, the **AUTOorange** setting requires more measurement time, as the instrument checks/resets its range. You can get faster measurement speed by forcing the range to either the **HIGH** or **LOW** gain setting, *but* you must ensure that your measurement conditions will not overload the IF (in the **HIGH** gain range), that your signals are well above the noise floor (for the **LOW** gain range), and that the signals are not changing.

When **Digital Bus Out** (under the **Input/Output** menu) is **ON**, the IF Gain State **AUTOorange** selection is not allowed. Thus, in this case IF Gain State will be set to **LOW**.

This only applies to the RF input. It does not apply to baseband I/Q input.

Remote Command	<code>[:SENSe]:WAVeform:IF:GAIN[:STATe] AUTOorange LOW HIGH OTHeR</code> <code>[:SENSe]:WAVeform:IF:GAIN[:STATe]?</code>
Example	<code>:WAV:IF:GAIN HIGH</code> <code>:WAV:IF:GAIN?</code>
Notes	Only applies to the RF input. Does not apply to baseband I/Q input
Dependencies	If you try to select AUTOorange via SCPI while Digital Bus Out is ON , an error message -224, "Illegal parameter value; "IF Gain Autorange not allowed when Digital Bus Out is on" is displayed If you try to select AUTOorange via the front panel while Digital Bus Out is ON , an error message -221 "Settings conflict; "IF Gain Autorange not allowed when Digital Bus Out is ON" is displayed Other IF Gain is available only in models with DIF40
Couplings	As for most parameters that have an AUTO state, " Auto Couple " on page 3289 sets it to AUTOorange , which then selects LOW or HIGH depending on the IF Path. Setting any specific value (AUTOorange , LOW , HIGH , or OTHeR) sets the AUTO state to OFF
Preset	LOW
State Saved	Saved in instrument state
Range	Autorange (Slower Follows Signals) Low (Best for Large Signals) High (Best Noise Level) Other (Explicit)

Auto Function

Remote Command	<code>[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe] ON OFF 1 0</code> <code>[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:WAV:IF:GAIN:AUTO ON</code> <code>:WAV:IF:GAIN:AUTO?</code>
Notes	Activates the auto rules for IF Gain
Preset	ON
Range	OFF ON

IF Gain Offset

Sets **IF Gain Offset** for the 40 MHz, 140 MHz, 160 MHz IF Paths in 1 dB steps from the minimum gain available to the maximum. Increasing the gain can increase the amplitude of small signals, as long as you do not overdrive the hardware. Wideband gain should usually be adjusted after setting the input attenuation.

Internally, the **IF Gain** value will change based on the current configuration of the Hardware. You can choose to offset this value with this parameter. Hence the value specified is not an absolute value but relative to the current internal **IF Gain** setting.

For example:

- IF Gain Low + IF Gain Offset +4 dB = Total IF Gain of +4 dB ($0 + 4 = 4$)
- IF Gain High + IF Gain Offset +4 dB = Total IF Gain of +14 dB ($10 + 4 = 14$)
- IF Gain Low + IF Gain Offset -6 dB = Total IF Gain of -6 dB ($0 - 6 = -6$)
- IF Gain High + IF Gain Offset -6 dB = Total IF Gain of +6dB ($10 - 6 = 4$)

The available **IF Gain** depends on the **IF Path** and center frequency. The maximum **IF Gain** may not be achievable at all times, depending on the configuration.

Remote Command	<code>[:SENSe]:WAVeform:IF:GAIN:OFFSet <rel_ampl></code> <code>[:SENSe]:WAVeform:IF:GAIN:OFFSet?</code>
Example	Set IF Gain Offset to 2: <code>:WAV:IF:GAIN:OFFS 2</code>
Couplings	Not available in EXM, or UXM When " IF Gain " on page 3200 State is set to OTHer , the " Other IF Gain " on page 3202 value is used and IF Gain Offset is ignored
Preset	0
State Saved	Saved in instrument state
Min/Max	Depends on hardware present

Other IF Gain

Explicitly specifies the IF gain value.

Only applies when "**IF Gain**" on page 3200 is set to **OTHer**. When **IF Gain** is set to **AUTOrange**, **LOW**, or **HIGH**, this value is ignored.

Available only in models with DIF40.

Remote	<code>[:SENSe]:WAVeform:IF:GAIN:LEVe1 <rel_ampl></code>
--------	--

Command	<code>[:SENSe]:WAVeform:IF:GAIN:LEVel?</code>
Example	<code>:WAV:IF:GAIN:LEV -10</code> <code>:WAV:IF:GAIN:LEV?</code>
Preset	0
State Saved	Saved in instrument state
Min/Max	Depends upon hardware present


Mixing Mode

Lets you alternate between mixing modes for the Local Oscillator (LO). The default setting is **NORMa1** LO mixing mode, which is determined by the instrument configuration to be either “high side” or “low side”. Typically, “high side” mixing mode is used for the **NORMa1** LO mixing mode. Selecting the **ALTeRnate** mixing mode selects “low side” mixing when the **NORMa1** mixing mode is “high side” mixing, and selects “high side” mixing mode when the **NORMa1** mixing mode is “low side” mixing.

This function can be useful in eliminating images that may be seen from adjacent channels. Whenever you have signals that are twice the IF above your signal of interest, they will alias on top of your signal. To eliminate this issue, switch to **ALTeRnate** side mixing and your measurement will be image free.

Example

When testing a 5G signal with all 8 channels **ON**, where each channel is 100 MHz wide, there may be cases where you see images from adjacent channels. To measure the highest frequency carrier, you will need to switch to alternate side mixing, to avoid the 8th carrier from aliasing on top of other carriers.

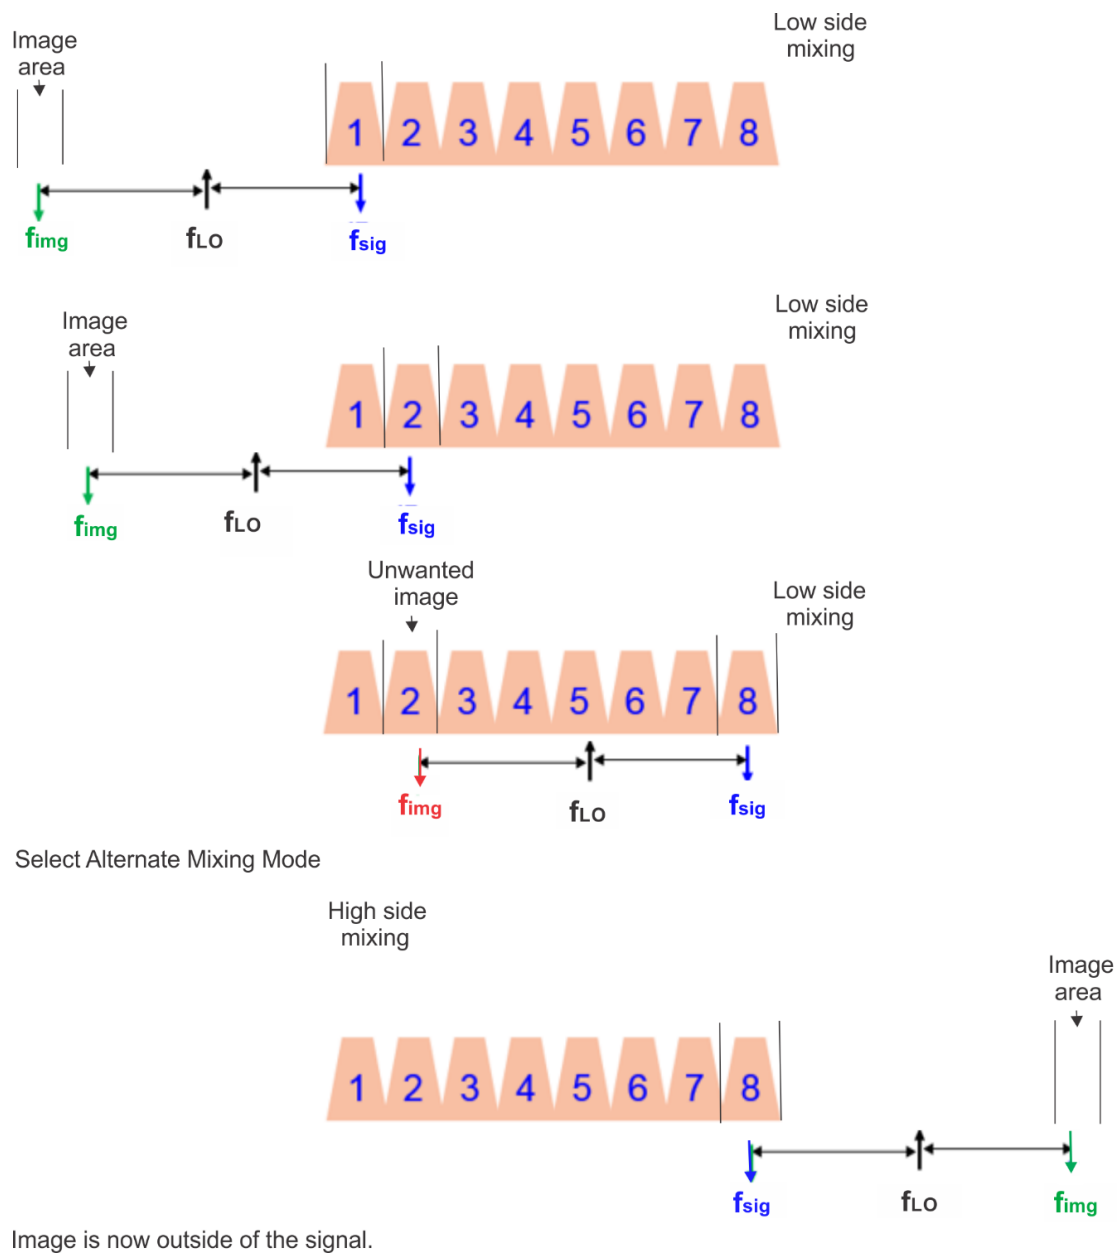

Remote Command	<code>[:SENSe]:WAVeform:LO:MIXMode NORMal ALTeRNate</code> <code>[:SENSe]:WAVeform:LO:MIXMode?</code>
Example	<code>:WAV:LO:MIXM NORM</code> <code>:WAV:LO:MIXM?</code>
Dependencies	Not available in N9000B Grayed-out when the RF Input is set to something other than RF (such as External Mixer). If you press

3 5G NR Mode

3.11 IQ Waveform Measurement

	the grayed-out control, a warning message "Feature only available with Signal Input RF" appears If you try to set Mixing Mode via SCPI when disabled, a message -221, "Settings conflict; Feature only available with signal input RF" is returned
Preset	NORMa1
State Saved	Yes
Range	NORMa1 ALTErnate

Invert Spectrum

When set to NORMa1, the Spectrum toggle has no effect on the measurement. When set to INVErt, the I/Q data is conjugated, which inverts the spectrum. This parameter also affects the results of the **:MEASure**, **:READ**, and **:FETCh** queries for **WAVEform4** data. If set to INVErt, the I/Q data returned is conjugated, otherwise the data is raw I/Q.

Remote Command	[:SENSe] :WAVeform:SPECTrum NORMa1 INVErt [:SENSe] :WAVeform:SPECTrum?
Example	:WAV:SPEC INVErt
Preset	NORMAL
State Saved	Saved in instrument state

Power Reference Plane

Allows you to increase the power by 3 dB for Baseband I+jQ measurements. Options are:

Menu	SCPI
Baseband	BASEband
RF	RF

Remote Command	For valid <meas> values, see " Valid Measurement Keywords " on page 3206 [:SENSe] :<meas>:POWer:IQ:REFeRence:PLANe RF BASEband [:SENSe] :<meas>:POWer:IQ:REFeRence:PLANe?
Example	(Complex Spectrum measurement) SPEC:POW:IQ:REF:PLAN BAS SPEC:POW:IQ:REF:PLAN?
Dependencies	Only available if the I/Q input exists Enabled only when the input is I/Q and I/Q Path is I+jQ Disabled for all other conditions
Preset	RF
State Saved	Saved in instrument state

Valid Measurement Keywords

This function is available *only* in certain Modes and measurements. Only the following listed values of **<meas>** are valid.

Mode(s)	Meas	<meas>
BASIC	Complex Spectrum	SPECTrum
BASIC	IQ Waveform	WAVEform
CQM		
EDGE GSM		
LTEAFDD		
LTEATDD		
MSR		
NR5G		
PNOISE		
SRCOMMS		
VMA		
WCDMA		
WLAN		
WLAN	Modulation Analysis	EVM
WLAN	MIMO Modulation Analysis	EVMMimo

Optimize EVM

This is an "immediate action" function to optimize IQ data capture settings for best EVM. It is used to set the combination of preamp, mechanical and electronic attenuation and IF gain value based on measured signal peak level. Its purpose is to get better EVM results by improving SNR and avoid ADC overload at the same time.

After this control is pressed, **Pre-Adjust for Min Clipping** changes to **OFF** and **IF Gain Auto** changes to **Manual**.

Remote Command **[:SENSe] :WAVEform:OPTimize:EVM**

Example **:WAV:OPT:EVM**

Mixing Mode State (Remote Command Only)

Available *only* in the Complex Spectrum, Streaming, and Waveform measurements.

Lets you alternate between mixing modes for the Local Oscillator (LO). The default setting is **NORMa1** LO mixing mode, which is determined by the instrument configuration to be either “high side” or “low side”. The query returns “High” or “Low” to determine whether the mixing is “high side” or “low side”. If **Mixing Mode** is toggled between **NORMa1** and **ALternate**, then **Mixing Mode State** also toggles between “High” and “Low”.

Remote Command	<code>[:SENSe]:SPECTrum:LO:MIXMode:SIDE?</code> <code>[:SENSe]:WAVeform:LO:MIXMode:SIDE?</code>
Example	<code>:SPEC:LO:MIXM:SIDE?</code> <code>:WAV:LO:MIXM:SIDE?</code>
Dependencies	Not available in N9000B
Couplings	When Mixing Mode is toggled between NORMa1 and ALternate , Mixing Mode State also toggles between High and Low
Range	High Low

IF Frequency (Remote Command Only)

Available *only* in the Complex Spectrum, Streaming, and Waveform measurements.
Returns the current IF Frequency used in the IF Path.

Remote Command	<code>[:SENSe]:SPECTrum:IF:FREQUENCY?</code> <code>[:SENSe]:WAVeform:IF:FREQUENCY?</code>
Example	<code>:SPEC:IF:FREQ?</code> <code>:WAV:IF:FREQ?</code>
Couplings	A change in Span , Digital IF BW or IF Path parameters can result in a change of the IF Frequency value

3.11.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENter ALL NONE</code> <code>:INSTrument:COUPle:FREQuency:CENter?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENter[:STATe] 1 0 ON OFF</code> <code>:GLOBal:FREQuency:CENter[:STATe]?</code>

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.11.8.7 Sample Period (Aperture) Setting (Remote Query Only)

Returns the time between samples (sample period or aperture).

Remote Command	<code>[:SENSe]:WAVeform:APERture?</code>
Example	<code>:WAV:APER?</code>
Couplings	Coupled to Sample Rate by the following equation Sample Period = 1/(Sample Rate)
Preset	1/(Sample Rate Default)
Min/Max	1/(Max Sample Rate)/1/(Min Sample Rate)

3.11.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

3.11.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "More Information" on page 3211

Remote Command	<code>:INITiate[:IMMediate]</code> <code>:INITiate:REStart</code>
----------------	--

Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 (<code>INTEGRity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the <code>:INIT:REST</code> command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the

trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is **k**. This **k** is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This **k** is used for comparisons with N, as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, **K**, shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N. The displayed value **K** changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** un-pauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 3214](#)

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code>

	:INIT:CONT ON
Preset	ON Note that :SYST:PRES sets :INIT:CONT to ON , but *RST sets :INIT:CONT to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: – A line with an arrow is Single – A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and :INIT:CONT ON) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the

current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of `:INIT:IMMediate`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORt` is sent, the alignment finishes *before* the abort function is performed, so `:ABORt` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORt</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is ON , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is OFF , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORt</code> is equivalent to the Restart key Not all measurements support this command
Status Bits/OPC	The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic

dependencies	<p>Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>
--------------	--

3.11.9.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

Ref Value

Sets the display X reference value.

Remote Command	<pre>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time></pre> <pre>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RLEVel?</pre>
Example	<pre>:DISP:WAV:VIEW:WIND:TRAC:X:RLEV 10 ms</pre> <pre>:DISP:WAV:VIEW:WIND:TRAC:X:RLEV?</pre>
Notes	<p>View 1 is the RF Envelope View</p> <p>View 2 is the I/Q Waveform View</p>
Couplings	If X " Auto Scaling " on page 3217 is ON , this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to OFF
Preset	0.000 s
State Saved	Saved in instrument state
Min/Max	-1 s /10.0 s
Annotation	<value> s bottom left of graph

Scale/Div

Sets the display X scale/division value.

Remote Command	<pre>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time></pre> <pre>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:PDIVision?</pre>
Example	<pre>:DISP:WAV:VIEW:WIND:TRAC:X:PDIV 500 us</pre> <pre>:DISP:WAV:VIEW:WIND:TRAC:X:PDIV?</pre>
Notes	<p>View 1 is the RF Envelope View</p> <p>View 2 is the I/Q Waveform View</p>
Couplings	If X " Auto Scaling " on page 3217 is ON , this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to OFF
Preset	200.0 us

State Saved	Saved in instrument state
Min	1.00 ns
Max	320 s

Ref Position

Sets the reference position for the X axis to **LEFT**, **CENter** or **RIGHT**.

Remote Command	<code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENter RIGHT</code> <code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:X:RPOS LEFT</code> <code>:DISP:WAV:VIEW:WIND:TRAC:X:RPOS?</code>
Preset	LEFT
State Saved	Saved in instrument state
Range	LEFT CENter RIGHT

Auto Scaling

Toggles the scale coupling function **ON** or **OFF**.

Remote Command	<code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON</code> <code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:COUPle?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:X:COUP ON</code> <code>:DISP:WAV:VIEW:WIND:TRAC:X:COUP?</code>
Couplings	When Auto Scaling is ON and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set the value of either " Scale/Div " on page 3216 or " Ref Value " on page 3216 manually, Auto Scaling automatically changes to OFF
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

3.11.10 Trace

There are no **Trace** controls in this measurement.

3.12 Phase and Amplitude vs Time Measurement

This measurement performs narrow band long capture; phase and amplitude variation over the capture is computed.

The steps involved in the PAVT measurement include:


- | | | |
|---|---------------------------|--|
| 1 | Instrument Setup | You configure the measurement for Center Frequency, Triggering, and Amplitude. Adjust the Amplitude Reference level, Range, or Adjust Range for Min Clipping as appropriate for the transmitted signal. Once the amplitude settings are obtained, ensure that the transmitted signal remains within the dynamic range of the instrument for proper measurement to be performed |
| 2 | Determine Frequency Error | Provide the Frequency Error, or perform a measurement of Frequency Error. The Frequency Error measurement is at narrow band with a specific sample rate. When the measurement is run, the transmitted signal must not change in frequency |
| 3 | Actual measurement | This is a long capture of the transmitted signal as the phase and amplitude of the signal changes. The power and phase for the entire captured signal will be calculated from the measured data and Frequency Error |

Based on the Phase and Power calculated, additional manipulation on the data occurs to reduce the result to the request number of segments and to make the results relative to the first segment.

The first segment is called the Relative Baseline; the absolute values of the first segment are stored into the Relative Baseline result and then normalized to obtain 0° phase and 0 dB reference.

Measurement Operation

The 1st segment (the Relative Baseline) is initiated when the Trigger conditions are met, and all following segments are computed immediately thereafter based on the Meas Offset, Meas Interval, and Meas Transient. The measurement time of each segment is linear progression (segments are equally spaced).

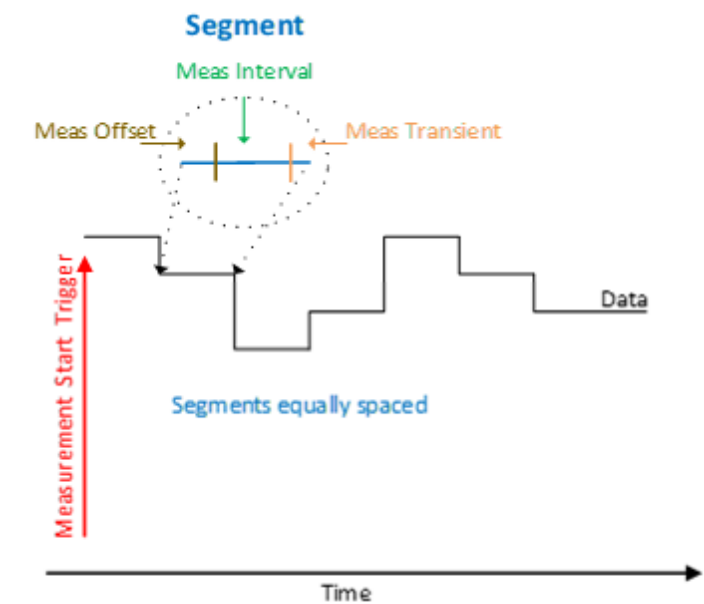

Phase and Amplitude vs Time Measurement Commands

The following commands and queries can be used to configure the measurement, then retrieve the measurement results:

```
:CONFigure:PAVTime
:CONFigure:PAVTime:NDEFault
:INITiate:PAVTime
:FETCh:PAVTime[n]?
:READ:PAVTime[n]?
:MEASure:PAVTime[n]?
```

Remote Command Results for Phase and Amplitude vs Time

The following table describes the results returned by the FETCh, MEASure, and READ queries listed above, according to the index value **n**. All the return values are floating point numbers in scientific notation, they are listed in the table as integers or simple real values for readability. If no result is available, **NaN** (9.91E+37) is returned.

n	Results Returned
0	Returns the number of measured segments (points)
not specified or 1	Returns scalar results for the segments measured in quadruple format, Phase, Amplitude, Time and Delta Frequency Error

n	Results Returned
	<p>For example if "Segments" on page 3286 = 5, then the return result would look like: 0, 0, 0, -168E-03, -9.63E-03, 0.9212E-03, 0.999E-03, 161.455E-03, 70.976E-03, -0.612E-03, 2.000E-03, -87.325E-03, 59.676E-03, -0.347E-03, 2.999E-03, 301.646E-03, 104.21E-03, -0.318E-03, 4.000E-03, 358.402E-03</p>
2	<p>Returns scalar Phase results for the segments measured, equivalent to the Phase values from the n = 1 query For example if Segments = 5, then the return result would look like: 0,10,-10,20,-30</p>
3	<p>Returns scalar Amplitude results for the segments measured, equivalent to the Amplitude values from the n = 1 query For example if Segments = 5, then the return result would look like: 0,-.5,-1.2,1.2,2.5</p>
4	<p>Returns scalar Time results for the segments measured, equivalent to the Time values from the n = 1 query For example if Segments = 5, then the return result would look like: 0,10,20,30,40</p>
5	<p>Returns scalar Frequency Error results for the segments measured For example if Segments = 5, then the return result would look like: 0,100000,120000,-80000,90000</p>
6	<p>Returns the Relative Baseline results</p> <ol style="list-style-type: none"> <li data-bbox="358 1094 456 1115">1. Phase <li data-bbox="358 1150 488 1171">2. Amplitude <p>For example: 125, -15.25</p>

3.12.1 Views

The PAVT measurement has one view: "[Normal](#)" on page 3270.

This is a multiple-window View. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

3.12.1.1 Normal

Windows: "[Graph](#)" on page 3221, "[Results](#)" on page 3221

The PAVT measurement provides tabular result and graphical display.

3.12.2 Windows

This section describes the windows that are available in Phase and Amplitude vs Time measurements.

3.12.2.1 Graph

Corresponding Trace

Yellow: Phase vs Time

Light Blue: Amplitude vs Time

3.12.2.2 Results

Displays the Frequency Error, the Relative Baseline values, and the list of textual results of the Phase and Amplitude vs Time measurement.

Results window

Name	Corresponding Results	Example
Frequency Error [Hz]	Frequency error supplied by user, or measured by invocation of Measure Frequency Error immediate action	-125 kHz
Relative Baseline [°]	Phase of the 1 st segment before normalization	45°
Relative Baseline [dBm]	Amplitude of the 1 st segment before normalization	-15.00 dBm
Phase [°]	The phase of the particular segment relative to the 1 st segment	-45°
Amplitude [dB]	The amplitude of the particular segment relative to the 1 st segment	-1.99 dB
Time [ms]	The start time of the Meas Interval for the particular segment relative to the 1 st segment. When Meas Type = Normal the Time is equally spaced over the Total Meas Time	10 ms
Delta Freq Error [Hz]	Additional Frequency error of each segment	-1.00 MHz

3.12.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

3.12.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Scale

Selects the active scale for parameter adjustments of the menu.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe] AMPLitude PHASe</code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y AMPL</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y?</code>
Preset	PHASe
State Saved	Saved in instrument state
Range	Amplitude Phase

Ref Value

The reference line is at the top, center, or bottom of the graticule, depending on the value of "Ref Position" on page 3224.

Amplitude Scale

Sets the value for the reference position for the Amplitude Scale.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:AMPLitude:RLEVel <rel_ ampl></code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:AMPLitude:RLEVel?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:RLEV -10 dB</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:RLEV?</code>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min/Max	-100/+100 dB
Annotation	Ref <value> top of graph

Phase Scale

Sets the value for the reference position for the Phase Scale. The reference line is at the top, center, or bottom of the graticule, depending on the value of **Ref Position**.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:RLEVel <real></code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:RLEVel?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:RLEV 90</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:RLEV?</code>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min/Max	-1000/+1000
Annotation	Ref <value> / top of graph

Scale/Div

Sets the units per division in the graph window.

Amplitude Scale

Sets the units per division of the amplitude vertical scale in the graph window.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:AMPLitude:PDIVision <rel_ampl></code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:AMPLitude:PDIVision?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:PDIV 5</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:PDIV?</code>
Preset	Automatically calculated
State Saved	Saved in instrument state
Range	0.10 dB to 20.00 dB
Min	0.10 dB
Max	20.00 dB
Annotation	<value> dB/ left upper of graph

Phase Scale

Sets the units per division of the phase vertical scale in the graph window.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:PDIVision <real></code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:PDIVision?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:PDIV 5</code>

	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:PDIV?</code>
Preset	Automatically calculated
State Saved	Saved in instrument state
Range	1 to 100
Min	1
Max	100
Annotation	<value> / left upper of graph

Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display.

Amplitude Scale

Positions the Amplitude scale reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the value of "Ref Value" on page 3222.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:AMPLitude:RPOSition TOP CENTER BOTTom</code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:AMPLitude:RPOSition?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:RPOS TOP</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y:AMPL:RPOS?</code>
Preset	<code>CENTER</code>
State Saved	Saved in instrument state
Range	Top Center Bottom
Annotation	> and < are displayed both side of graph to indicate Reference Position

Phase Scale

Positions the Phase Scale reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the value of "Ref Value" on page 3222.

Remote Command	<code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PHASe:RPOSition TOP CENTER BOTTom</code> <code>:DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PHASe:RPOSition?</code>
Example	<code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:RPOS TOP</code> <code>:DISP:PAVT:VIEW:WIND:TRAC:Y:PHAS:RPOS?</code>
Preset	<code>CENTER</code>

State Saved	Saved in instrument state
Range	Top Center Bottom
Annotation	> and < are displayed both side of graph to indicate Reference Position

3.12.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 3225
- See ["Single-Attenuator Configuration"](#) on page 3226


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the Range tab in that case
--------------	--

Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

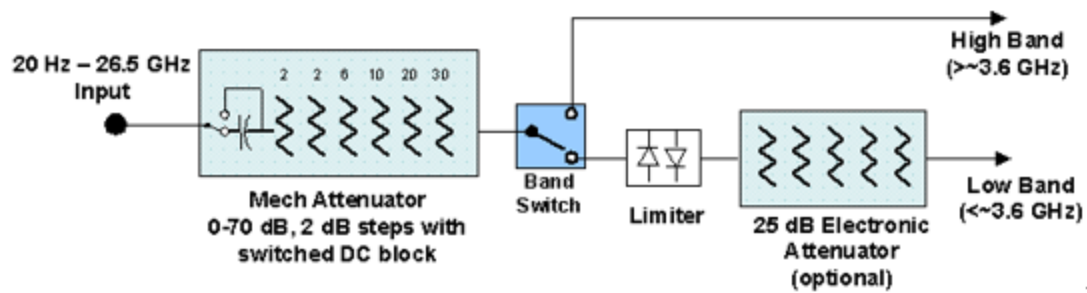


Configuration 2: Mechanical attenuator, no optional electronic attenuator

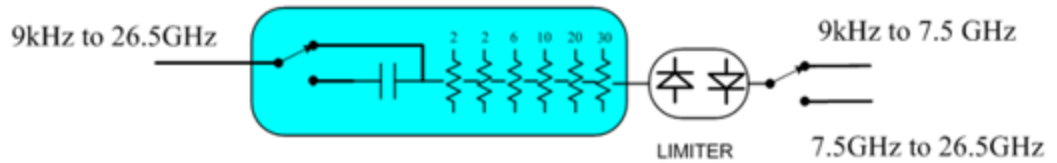


Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


Single-Attenuator Configuration

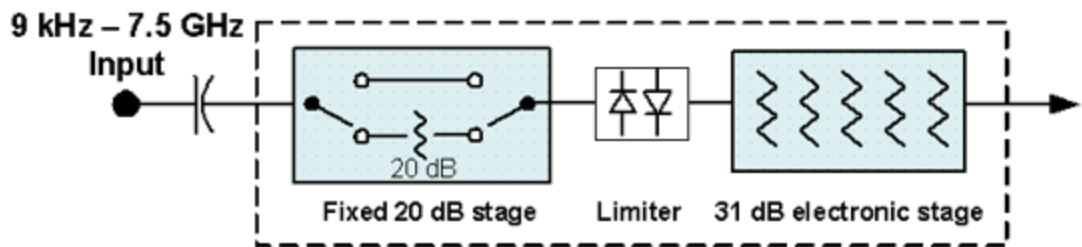

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.

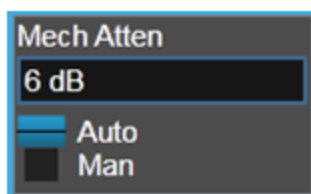

Dual Attenuator

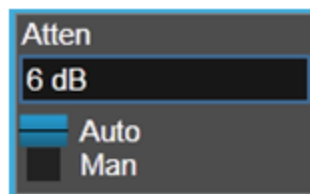

Single Attenuator

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[:SENSe]:POWer[:RF]:FRATten <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See Reference Level and " Mech Atten " on page 3228 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the Input is RF, and the Input Port is RF Input 2, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> – If the sweep is entirely < 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten – If the sweep is entirely > 50 GHz, the value shown after "Atten:" is equal to Full Range Atten – If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol ">=" and is equal to Full Range Atten <p>In the Amplitude, "Y Scale" on page 3222 menu, and the Atten Meas Bar dropdown menu panel, a summary is displayed as follows: "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten "Total Atten above 50 GHz" followed by the value of Full Range Atten For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> – Attenuator summary:

- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp" on page 3251** Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man" on page 3230**

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl></code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support Auto setting of Mech Atten . In these measurements, the Auto/Man selection is not available, and the Auto/Man toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the Auto/Man toggle function is not available. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "Elec Atten" on page 3231 See "Attenuator Configurations and Auto/Man" on page 3230 for more information on the Auto/Man functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none">- If the USB Preamp is connected to USB, use 0 dB for Mech Atten- Otherwise compute the auto-selected value of Mech Atten based on Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, μW Path Control and IF Gain settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "Full Range Atten" on page 3227 from the result to determine the Mech Atten. Limit the value so that it is never lower than 0 dB and so that total attenuation, including Full Range Atten, is never less than 6 dB (total attenuation, including Full Range Atten below 6 dB, can never be chosen by Auto) In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when Mech Atten is in Auto , but no changes are made to the actual

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	attenuator hardware setting until the input is changed back to the RF Input For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <= 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	Auto The Auto value is 10 dB	
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as: <i>Atten: <total> dB (e<elec>)</i> The e letter is in amber in Single-Attenuator configurations For example: Dual-Attenuator configuration: <i>Atten: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB Single-Attenuator configuration: <i>A: 24 dB (e14)</i> Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation) When in Manual, a # sign appears in front of Atten in the annotation	
Auto Function		
Remote Command	[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?	
Example	Turn Auto Mech Atten ON: :POW:ATT:AUTO ON	

Dependencies	: POW : ATT : AUTO is only available in measurements that support Auto , such as Swept SA
Preset	ON

Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 3225, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.


In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 3228 (or :**POW**:**ATT**) as the "main" attenuation; and the attenuation that is set by :**POW**:**EATT** as the "soft" attenuation (:**POW**:**EATT** is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 3231 for more about "soft" attenuation.


NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

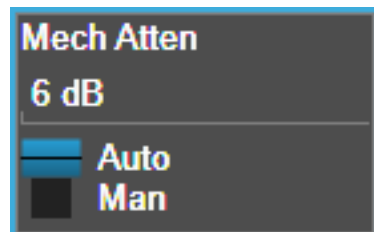

Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

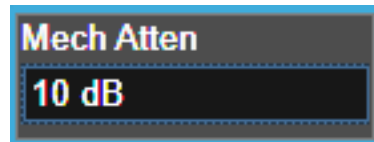

Mech Atten also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 3232](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation <rel_amp1></code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when Mech Atten is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Attenuation control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the Attenuation control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If "Internal Preamp" on page 3251 is ON (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the instrument is limited to 3.6 GHz and Internal Preamp is unavailable</p> <p>If "LNA" on page 3253 is ON, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the Enabled/Disabled section of the Elec Atten control will be OFF and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes Transmit On/Off Power measurement in 5GNR Mode

	<ul style="list-style-type: none"> – Power vs. Time and Transmit Power measurement in GSM/EDGE Mode – Burst Power measurement in Spectrum Analyzer Mode <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in "Mechanical Attenuator Transition Rules" on page 3233
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the Mech Atten control description
Auto Function	
Remote Command	<pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1</pre> <pre>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</pre>
Example	<pre>:POW:EATT:STAT ON</pre> <pre>:POW:EATT:STAT?</pre>
Preset	<p>OFF (Disabled) for Swept SA measurement</p> <p>ON (Enabled) for all other measurements that support the electronic attenuator</p>

NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum Low Band frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily

aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 3234](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 3230](#)

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 3236](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing Adjust Atten for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

Restart Meas on Adjust Atten

Toggles the force restart switch for the **"Adjust Atten for Min Clipping"** on page 3234 function.

When **ON**, pressing **Adjust Atten for Min Clipping**, or sending `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` restarts the measurement and then executes the function.

When **OFF**, pressing the control or sending the command neither restarts the measurement nor executes the function until you restart or continue averaging. In this case, pressing the control generates the following advisory message:

"Adjust Atten is deferred until "Restart" or "Continue Averaging" is executed"

This message is *not* generated if the command is sent.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:REStart?</code>
Example	<code>:POW:RANG:OPT:REST OFF</code> <code>:POW:RANG:OPT:REST?</code>
Dependencies	Available only in measurements that support continuous averaging
Preset	ON
State Saved	Saved

Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code>

	:POW:RANG:OPT:TYPE?
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	COMBined
State Saved	Saved in instrument state

Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on [page 3234](#) each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on [page 3237](#)

Selection	SCPI	Note
Off	OFF	This is the default setting
On	ON	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the ON parameter is supported and mapped to COMBined
Elec Atten Only	ELECtrical	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	COMBined	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?	
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?	
Notes	The parameter option ELECtrical sets this function to ON in Single-Attenuator models The parameter option COMBined is mapped to ELECtrical in Single-Attenuator models. If you send COMBined , it sets the function to ON and returns ELEC to a query For SCPI compatibility with models that do not have an input attenuator, the ON parameter is honored and mapped to COMBined	
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " Elec Atten " on page 3231 is OFF or grayed-out,	

	"Pre-Adjust for Min Clipping" on page 3236 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off Elec Atten Only Mech + Elec Atten
	Single-Attenuator models:	Off On


Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF	
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 [:SENSe]:POWer[:RF]:RANGe:AUTO?	

Adjustment Algorithm

The algorithms for the adjustment are documented below:

Single-Attenuator Models

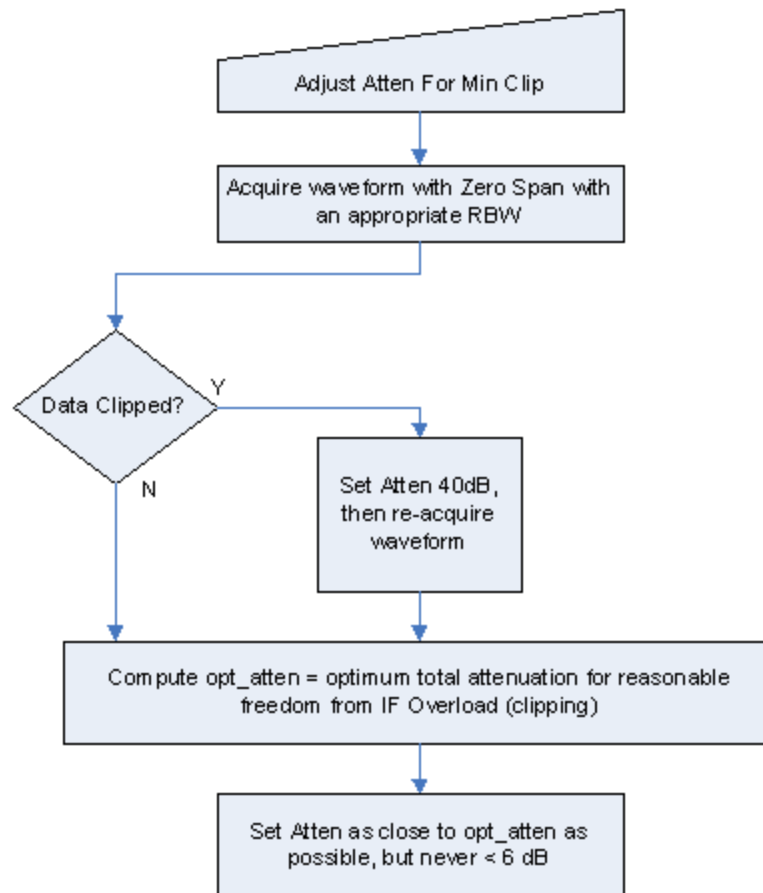


Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 3234 or "Pre-Adjust for Min Clipping" on page 3236 selection is Mech + Elec Atten:


3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

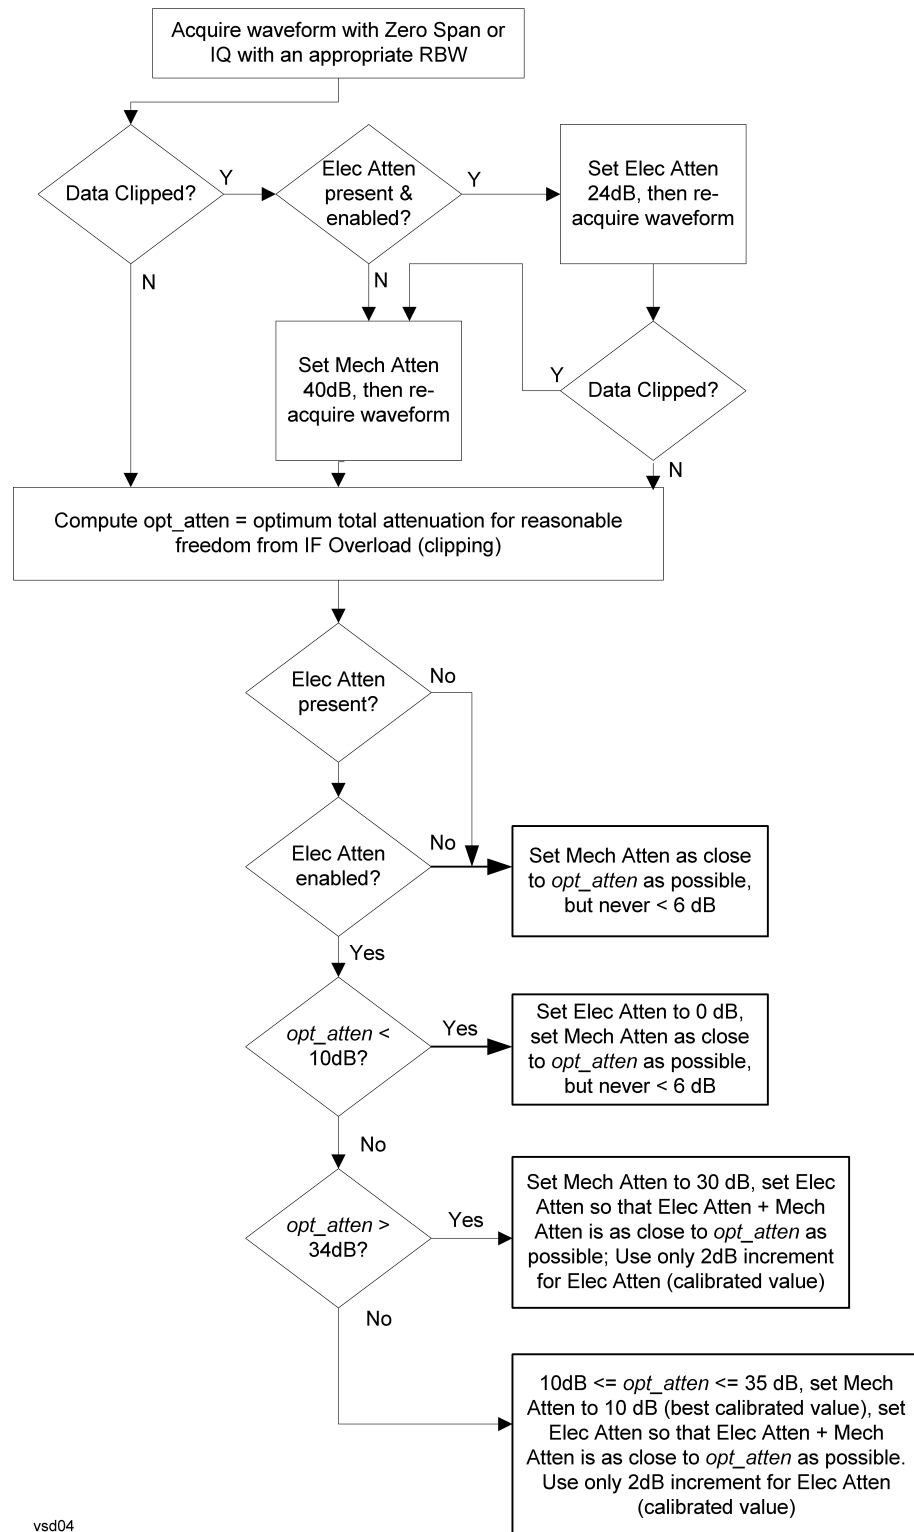

"Pre-Adjust for Min Clipping" on page 3236 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

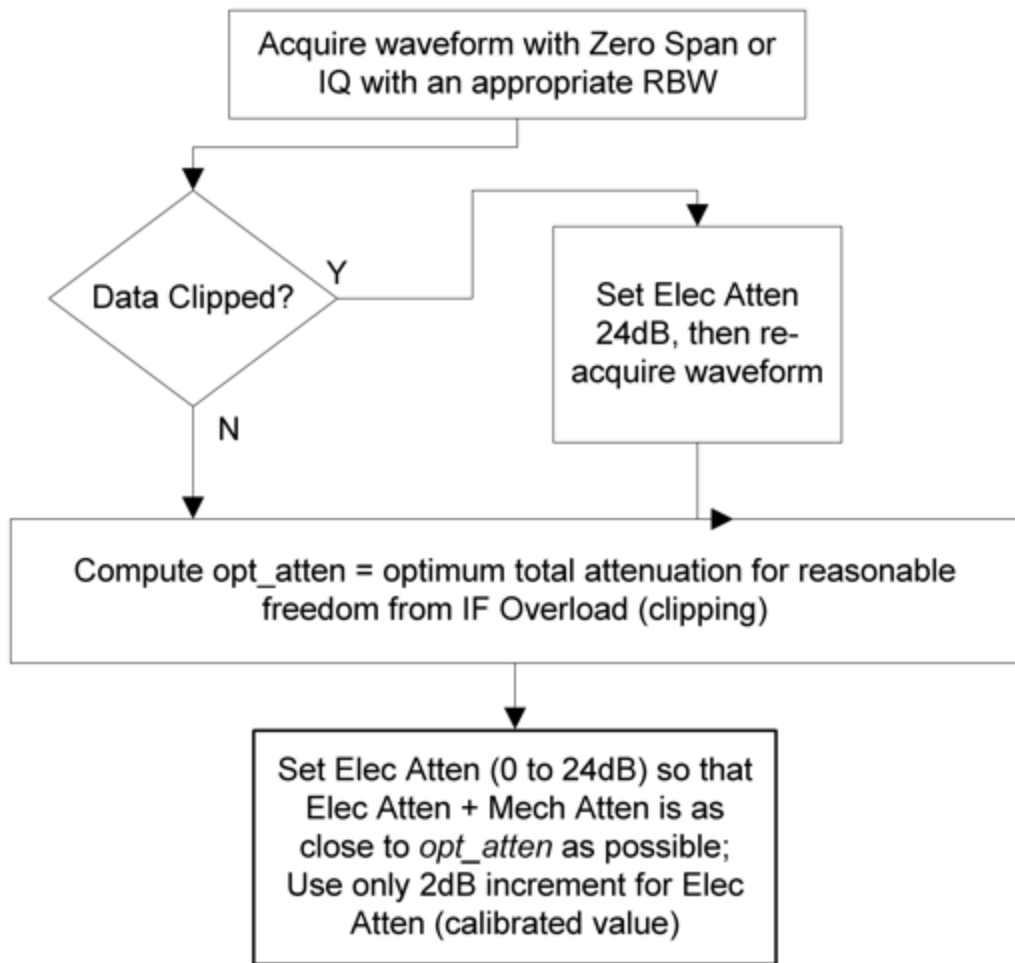

Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

Remote Command `[[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

3.12.3.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If Auto is not supported, sending the SCPI command generates an error
Couplings	When in Auto , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	ON
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#" This is an alternate form of the command to match the POWer form of the I Range and Q Range SCPI.
Remote Command	<code>[:SENSe]:POWer:IQ:RANGe:AUTO OFF ON 0 1</code> <code>[:SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the POWer and VOLTage forms of the command
Preset	ON
Range	Auto Man

I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code>

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	:VOLT:IQ:RANG?
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When "Q Same as I" on page 3245 is On, the I Range value will be copied to "Q Range" on page 3244 Changing the value also sets Range = Man
Preset	Complex SPECTrum Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω) 0.5 V Peak (4 dBm @ 50 Ω) 0.25 V Peak (-2 dBm @ 50 Ω) 0.125 V Peak (-8 dBm @ 50 Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl> [:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω , and to 1.0 V Peak when Reference Z is 75 Ω :POW:IQ:RANG 4 dBm :POW:IQ:RANG?
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω : 10, 4, -2, -8 75 Ω : 8.2, 2.2, -3.8, -9.8 600 Ω : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ **"I Range" on page 3242** determines both I and Q channel range settings.

Remote Command	<code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage></code> <code>[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ, "I Range" on page 3242 determines both I and Q channel range settings
Couplings	When "Q Same as I" on page 3245 is On, the "I Range" on page 3242 value is copied to Q Range and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω) 0.5 V Peak (4 dBm @ 50Ω) 0.25 V Peak (-2 dBm @ 50Ω) 0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <amp;gt;</code> <code>[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω: <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command

The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the **VOLTage** form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω : 10, 4, -2, -8

75 Ω : 8.2, 2.2, -3.8, -9.8

600 Ω : -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[:SENSe]:VOLTage POWer:IQ:MIRRed OFF ON 0 1</code> <code>[:SENSe]:VOLTage POWer:IQ:MIRRed?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When ON , the " I Range " on page 3242 value is mirrored (copied) to the " Q Range " on page 3244
Preset	ON
State Saved	Saved in instrument state
Range	OFF ON

3.12.3.4 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe <real></code> <code>[:SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the Center Frequency The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

Restart Meas on Adjust Range

The same as "Restart Meas on Adjust Atten" on page 3235 under "Attenuation" on page 3225.


Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ON ELECtrical COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only ON and OFF choices. However, for SCPI compatibility with other platforms, all three parameters (ELECtrical , COMBined , and ON) are honored and all are mapped to ELECtrical , so if any of these three parameters is sent, a subsequent query will return ELEC
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clipping
State Saved	Saved in instrument state

Adjustment Algorithm

The algorithm for the adjustment is documented below:

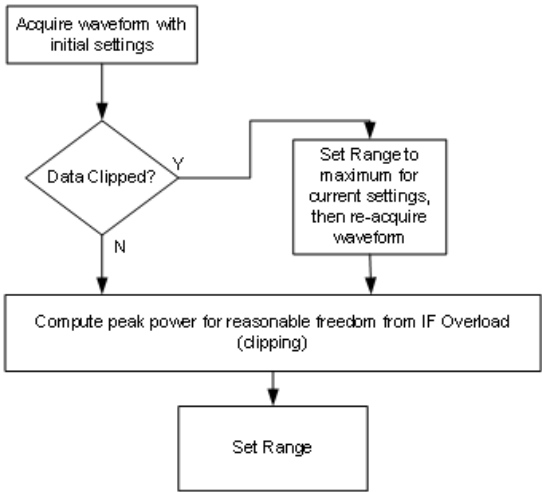

Peak-to-Average Ratio

Used with "**Range (Non-attenuator models)**" on page 3245 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on [page 3247](#). Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet <real> [:SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?	
Example	:POW:RANG:MIX:OFFS -5 dB	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

3.12.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 3264](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 3250](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 3250](#).

Remote Command	<code>[:SENSe]:POWer[:RF]:PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	<p>Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E</p> <p>Grayed-out if the microwave preselector is off</p> <ul style="list-style-type: none"> - If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken - Grayed-out if entirely in Band 0, that is, if Stop Freq is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is above 50 GHz - Blanked in models that do not include a preselector, such as Option 503. If the remote command

	is sent in these instruments, accepted without error, and the query always returns 0
	– Grayed-out in the Spectrogram View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "Preselector Adjust" on page 3250</p>
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to :READ or :MEASure queries</p> <p>The Measuring bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center" on page 3249** is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[:SENSe]:POWer[:RF]:PADJust <freq></code> <code>[:SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> Does not appear in CXA-m Does not appear in VXT Models M9410A/11A/15A/16A Does not appear in M9410E/11E/15E/16E Grayed-out if microwave preselector is off Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0 Grayed-out in the Spectrogram View
Preset	0 MHz
State Saved	The Preselector Adjust value set by " Presel Center " on page 3249, or by manually adjusting Preselector Adjust Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:MW:PADJust</code> <code>[:SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns MWAVE
Backwards Compatibility SCPI	<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTERNAL</code> <code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values ≤ 40 MHz have a maximum **Low Band** frequency of 3.6 GHz, while $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$ have a maximum of 3.3 GHz, and $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$ have a maximum of 3.5 GHz. IFBW values $> 1.5 \text{ GHz}$ do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL</code> <code>[:SENSe]:POWer[:RF]:GAIN:BAND?</code>
----------------	--

Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
---------	---

Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated
--------------	--

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)</p>
Auto Function	
Remote Command	[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN[:STATe]?
Example	:POW:GAIN OFF :POW:GAIN?
Preset	OFF

LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to ["Internal Preamp" on page 3251](#). LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with ["Internal Preamp" on page 3251](#), although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see ["More Information" on page 3254](#)

Remote Command	[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF ON 0 1 [:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?
Example	:POW:GAIN:LNA ON
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p>LNA is not available when the electronic/soft attenuator is enabled</p>

Preset	OFF
State Saved	Saved in State

More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " Low Noise Path Enable " on page 3259
μW Preselector Bypass	:POW:MW:PATH MPB	See " μW Preselector Bypass " on page 3261
Full Bypass Enable	:POW:MW:PATH FULL	See " Full Bypass Enable " on page 3261

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH STD LNPPath MPBypass FULL</code> <code>[:SENSe]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " Presel Center " on page 3249 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of μW Path Control The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable or Full Bypass Enable . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing – The Low Noise Path Enable selection does not appear unless Option LNP is present and licensed

- The **μW Preselector Bypass** selection does not appear unless Option MPB is present and licensed
- The **Full Bypass Enable** selection does not appear unless options LNP and MPB are both present as well as option FBP

In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated

Low Noise Path Enable and **Full Bypass Enable** are grayed-out if the current measurement does not support them

Low Noise Path Enable and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	<table> <tr> <th>Mode</th><th>Value</th></tr> <tr> <td>IQ Analyzer</td><td>MPB option present and licensed: MPB</td></tr> <tr> <td>Pulse</td><td>MPB option not present and licensed: STD</td></tr> <tr> <td>RTSA</td><td></td></tr> <tr> <td>Avionics</td><td></td></tr> <tr> <td>All other Modes</td><td>STD</td></tr> <tr> <td>–</td><td></td></tr> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: MPB	Pulse	MPB option not present and licensed: STD	RTSA		Avionics		All other Modes	STD	–	
Mode	Value														
IQ Analyzer	MPB option present and licensed: MPB														
Pulse	MPB option not present and licensed: STD														
RTSA															
Avionics															
All other Modes	STD														
–															
State Saved	Save in instrument state														
Range	Standard Path Low Noise Path Enable μW Presel Bypass Full Bypass Enable														
Annotation	<p>In the Meas Bar, if the Standard path is chosen:</p> <p>μW Path: Standard</p> <p>If Low Noise Path is enabled but the LNP switch is not thrown:</p> <p>μW Path: LNP,Off</p> <p>If the Low Noise Path is enabled and the LNP switch is thrown:</p> <p>μW Path: LNP,On</p> <p>If the preselector is bypassed:</p> <p>μW Path: Bypass</p> <p>If Full Bypass Enable is selected but the LNP switch is not thrown:</p> <p>μW Path: FByp,Off</p> <p>If Full Bypass Enable is selected and the LNP switch is thrown:</p> <p>μW Path: FByp,On</p>														

μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

Measurement	μ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto μ W path is standard For other cases, auto μ W path is presel bypass if presel bypass is enabled, auto μ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	μ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	μ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command `[:SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`
`[:SENSe]:POWer[:RF]:MW:PATH:AUTO?`

Example `:POW:MW:PATH:AUTO ON`

	:POW:MW:PATH:AUTO?
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " μW Path Control Auto " on page 3256 above
Preset	ON
Range	ON OFF

Low Noise Path Enable

Low Noise Path Enable provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around -30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

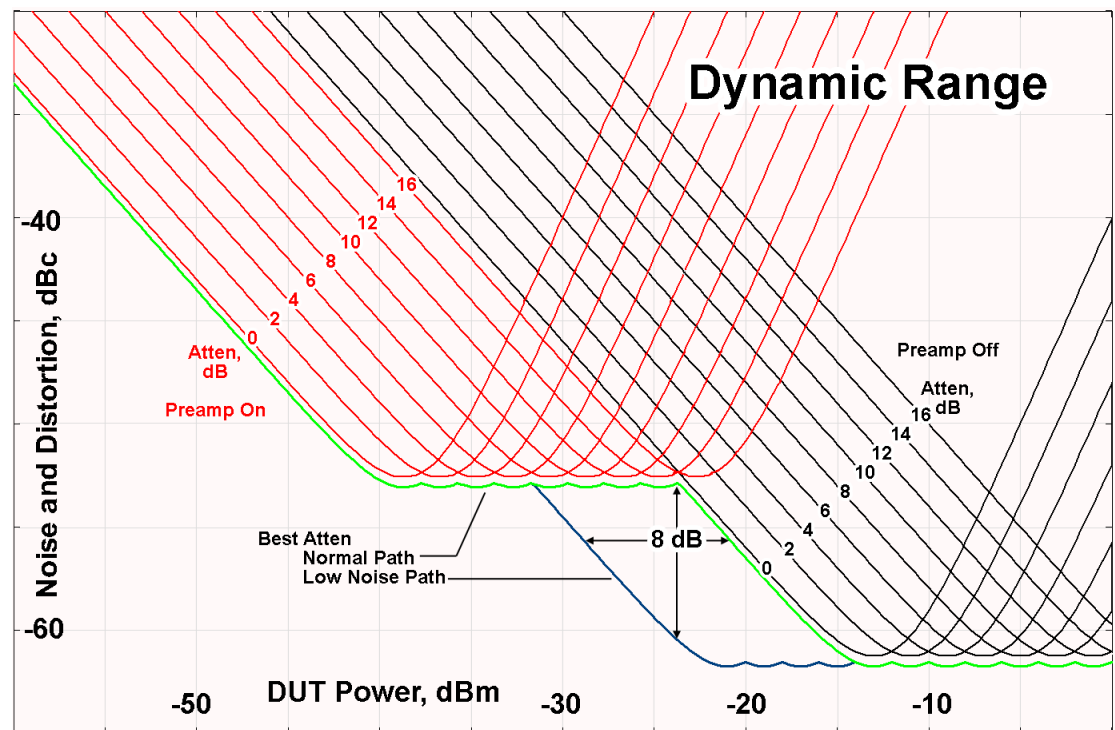

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a

larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1st IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.


When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.


Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.
Settings Alert message in the Status Bar at the bottom of the display.

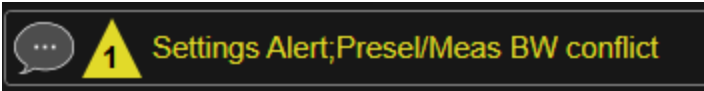

Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

Allow Full Bypass in Auto

Enable or disable Full Bypass in μ W Path Auto rule. See "[μW Path Control](#)" on page 3254.

When this function is **ON**, and "[μW Path Control](#)" on page 3254 is in **AUTO**, it is possible for the auto rules to select the **FULL** Bypass state, which bypasses both the Preamp and the Microwave Preselector. Otherwise, the auto rules never select the **FULL** Bypass state. This is convenient when making wideband measurements, but it also adds some risk of damage to the first converter.

CAUTION

When **Full Bypass Enable** is selected, and "[Y Scale](#)" on page 3222 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq > 3.6 GHz and the Preamp is either not licensed, set to **Low Band** or **Off**). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

Remote Command	<code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL ON OFF 1 0</code> <code>[:SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL?</code>
Example	<code>:POW:MW:PATH:AUTO:FULL ON</code> <code>:POW:MW:PATH:AUTO:FULL?</code>
Dependencies	Only appears if Option FBP is installed, and in the following measurements <ul style="list-style-type: none"> – 5GNRMode: Modulation Analysis and IQ Waveform – WLAN Mode: IQ Waveform – Channel Quality Mode: Group Delay and Noise Power Ratio
Preset	OFF
State Saved	Saved in instrument state

Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

N9041B

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

N9042B+V3050A

Software Preselection compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The

specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

VXT models M9410A/11A/15A/16A

Software Preselection is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[:SENSe]:POWer[:RF]:SWPreseL:STATe 0 1 ON OFF</code> <code>[:SENSe]:POWer[:RF]:SWPreseL:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects Sweep Time Auto Tune supports Software Preselection , so Auto Tune should be performed after setting the Software Preselection state	
Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON

State Saved Saved in instrument state

SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** – mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** – any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPreSel NORMa1 ADVanced [:SENSe]:POWer[:RF]:SWPreSel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1

State Saved Saved in instrument state

SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow** – a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	[:SENSe]:POWer[:RF]:SWPResel:BW NORMa1 NARRow [:SENSe]:POWer[:RF]:SWPResel:BW?	
Example	:POW:SWPR:BW NARR	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 3264 is OFF. The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to NARRow when Software Preselection is enabled	
Preset	N9041B	NORMa1
	N9042B+V3050A	NARRow
State Saved	Saved in instrument state	

High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	[:SENSe]:<measurement>:PFILter[:STATe] ON OFF 1 0 [:SENSe]:<measurement>:PFILter[:STATe]?	
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in BASIC Mode: :SPEC:PFIL ON	

	<p>Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: :WAV:PFIL ON</p> <p>Enable High Freq Prefilter for the Swept SA Measurement in SA Mode: :SAN:PFIL ON</p>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See "Prefilter Presets" on page 3268 below
State Saved	Saved in instrument state

Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

3.12.4 BW

For this measurement, bandwidth is determined by the algorithm, and is not user-adjustable.

3.12.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

3.12.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

Display Type

Allows you to display Phase and Amplitude traces in absolute values, or values relative to the 1st sample point's phase and amplitude. The 1st sample point's phase and amplitude are different from the Relative Baseline values, which only reflect the segment averaged phase and amplitude values. Setting **Display Type** to **RELative** enables the phase and amplitude traces to start from 0 degree and 0 dB, so there is no need to adjust scale or reference between measurements.

Remote Command	<code>:DISPlay:PAVTime:TYPE ABSolute RELative</code> <code>:DISPlay:PAVTime:TYPE?</code>
Example	<code>:DISP:PAVT:TYPE REL</code> <code>:DISP:PAVT:TYPE?</code>
Preset	<code>ABSolute</code>
State Saved	Yes
Range	<code>ABSolute RELative</code>

3.12.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

Views

The PAVT measurement has one view: "Normal" on page 3270.

This is a multiple-window View. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Normal

Windows: "Graph" on page 3221, "Results" on page 3221

The PAVT measurement provides tabular result and graphical display.

User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect <alphanumeric></code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></p> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOom</code>) with <code>:DISP:VIEW:ADV:SEL</code></p> <p><code><alphanumeric></code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <p><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code> <code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></p> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node <code>:DISPlay:VIEW[:SElect]</code></p> <p>is retained for backwards compatibility, but it only supports predefined views</p>

Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	:DISPlay:VIEW:ADVanced:NAME <alphanumeric>
Example	:DISP:VIEW:ADV:NAME “Baseband” Creates a new View named Baseband from the current View, and selects it as the current View
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	:DISPlay:VIEW:ADVanced:REName <alphanumeric>
Example	:DISP:VIEW:ADV:REN “Baseband”
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If the <alphanumeric> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated

If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated

If the display is disabled (via **:DISP:ENAB OFF**) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	:DISPlay:VIEW:ADVanced:DELeTe
Example	:DISP:VIEW:ADV:DEL
Notes	<p><alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <alphanumeric> is not present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via :DISP:ENAB OFF) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	:DISPlay:VIEW:ADVanced:DELeTe:ALL
Example	:DISP:VIEW:ADV:DEL:ALL
Notes	Disabled if there are no User Views

View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, **:DISPlay:VIEW[:SELeCt]** and **:DISPlay:VIEW:NSEL**, are retained for backwards compatibility, but they only support predefined views.

View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement Example: <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code> No distinction is made between Predefined and User Views If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined

User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see "Display Enable (Remote Command Only)" on page 3275), then query the list of available Views, the result is undefined

3.12.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF ON 0 1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the WINDow , TRACe and GRID parameters are ignored

Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	OFF
State Saved	Saved in instrument state

Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON OFF 1 0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to OFF when System Display Settings, Annotation is OFF
Preset	ON This remains OFF through a Preset when System Display Settings, Annotation is set to OFF
State Saved	Saved in instrument state

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global.

There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are using either the `:SYSTEM:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPLAY:VIEW:ADVANCED:SELECT</code>
Rename User View	<code>:DISPLAY:VIEW:ADVANCED:RENAME</code>
Delete User View	<code>:DISPLAY:VIEW:ADVANCED:DELETE</code>
Create User View	<code>:DISPLAY:VIEW:ADVANCED:NAME</code>
Select Screen	<code>:INSTRUMENT:SCREEN:SELECT</code>
Delete Screen	<code>:INSTRUMENT:SCREEN:DELETE</code>
Delete All But This Screen	<code>:INSTRUMENT:SCREEN:DELETE:ALL</code>
Add Screen	<code>:INSTRUMENT:SCREEN:CREATE</code>
Rename Screen	<code>:INSTRUMENT:SCREEN:RENAME</code>
Sequencer On/Off	<code>:SYSTEM:SEQUENCER</code>

Remote Command	<code>:DISPLAY:ENABLE OFF ON 0 1</code> <code>:DISPLAY:ENABLE?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight OFF and <code>:DISP:ENAB ON</code> turns Backlight ON , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>

Preset	ON Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

3.12.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

3.12.6.1 Settings

Contains controls that pertain to the frequency parameters of the measurement. These parameters control where the instrument is tuned, and implications to the measurement algorithm.

Center Frequency

This function sets (and queries) the **Center Frequency** for the currently selected input. If your instrument has multiple inputs, and you select another input, **Center Frequency** changes to the value for that input. SCPI commands are available to directly set the value for a specific input.

Center Frequency is remembered as you go from input to input.

See:

- “RF Center Freq” on page 3280
- “Ext Mix Center Freq” on page 3281
- “I/Q Center Freq” on page 3282
- “Center Frequency Presets” on page 3278

Remote Command	<code>[:SENSe]:FREQuency:CENTer <freq></code>
----------------	---

	[:SENSe] :FREQuency:CENTer?
Example	:FREQ:CENT 50 MHz sets Center Frequency to 50 MHz :FREQ:CENT UP increments the Center Frequency by the value of CF Step :FREQ:CENT? returns the current value of Center Frequency
Notes	Preset and Max values are dependent on Hardware Options (5xx), port selections or other aspects of the particular instrument in use If no terminator (e.g., MHz) is sent, the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated
Couplings	For E7760A, if the Input Port selected is a mmWave port, and option RF4 is not present, the frequency of the instrument and source must be the same. Thus, changing this instrument frequency will also update the source frequency. If option RF4 is present, the frequency of the instrument and source are independent
Preset	Depends on instrument's maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 3278 , "RF Center Freq" on page 3280, "Ext Mix Center Freq" on page 3281, and "I/Q Center Freq" on page 3282
State Saved	Saved in instrument state
Min	Depends on instrument's maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 3278 , "RF Center Freq" on page 3280, "Ext Mix Center Freq" on page 3281, and "I/Q Center Freq" on page 3282
Max	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 3278 , "RF Center Freq" on page 3280, "Ext Mix Center Freq" on page 3281, and "I/Q Center Freq" on page 3282
Status Bits/OPC dependencies	Non-overlapped

Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

*For option 526, the Max CF in RTSA is 26.999999995 GHz.

N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

RF Center Freq

Specifies the RF Center Frequency. This command sets the Center Frequency to be used when the RF input is selected, even if the RF input is not the input that is selected at the time the command is sent. Note that the **Center Freq** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:RF:CENTer <freq></code> <code>[:SENSe]:FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be >3.6 GHz fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning
Preset	See table above
State Saved	Saved in instrument state

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Min	-79.999995 MHz
Max	See table above. Basically, instrument maximum frequency - 5 Hz If the knob or step keys are being used, also depends on Span

Ext Mix Center Freq

Specifies the External Mixer Center Frequency. This command sets the Center Frequency to be used when the External Mixer is selected, even if the External Mixer input is not the input which is selected at the time the command is sent. Note that the **Center Freq** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe] :FREQuency:EMIXer:CENTer <freq></code> <code>[:SENSe] :FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode
Dependencies	Ext Mix Center Freq is not available in VXT Models M9410A/11A
Couplings	When returning to External Mixing after having been switched to one of the other inputs (e.g., RF), you will come back into the settings that you had when you left External Mixing. So you will come back to the band you were in with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore you will bring the span over from the other input. Therefore, the instrument comes back with the span from the previous input, limited as necessary by the current mixer setup
Preset	When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. The Center Freq thus presets to the point arithmetically equidistant from these two frequencies Note that if the current measurement has a limited Span available to it, and cannot achieve the Span shown in the table (Span=Stop Freq – Start Freq), the instrument uses the maximum Span the measurement allows, and still sets the Center Freq to the midpoint of the Start and Stop Freq values in the Harmonic Table When Restore Input/Output Defaults is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz Therefore, after a Restore Input/Output Defaults, if you go into External Mixing and do a Mode Preset while in the Spectrum Analyzer Mode, the resulting Center Freq is 33.25 GHz
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band + 5 Hz If the knob or step keys are being used, also depends on Span
Max	The maximum frequency in the currently selected mixer band - 5 Hz If the knob or step keys are being used, also depends on Span

I/Q Center Freq

Specifies the I/Q Center Frequency. This command sets the Center Frequency to be used when the I/Q input is selected, even if the I/Q input is not the input which is selected at the time the command is sent. Note that the **Center Freq** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[:SENSe]:FREQuency:IQ:CENTer <freq></code> <code>[:SENSe]:FREQuency:IQ:CENTer?</code>
Example	<code>:FREQ:IQ:CENT 30 MHz</code>
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode
Dependencies	I/Q Center Freq is not available in VXT Models M9410A/11A
State Saved	Saved in instrument state
Min	-40.049995 MHz
Max	40.049995 MHz

Carrier Reference Frequency

Sets Carrier Reference Frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In 5G NR, if the following conditions are satisfied at the same time:

- the Number of Component Carrier is 1
- the Center Freq Offset is 0 Hz
- the Center Freq mode is Auto

then Center Freq is equivalent to Carrier Ref Freq. When the Center Freq changes in such conditions, the mode of the Center Freq remains as Auto and the Carrier Ref Freq changes to the same value.

Remote Command	<code>[:SENSe]:CCARrier:REference <freq></code> <code>[:SENSe]:CCARrier:REference?</code>
Example	<code>:CCAR:REF 2GHz</code>

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	:CCAR:REF?
Dependencies	Only available in the 5G NR Mode
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency. Same as " Center Frequency " on page 3277

CF Step

Changes the step size for "[Center Frequency](#)" on page [3277](#), and start/stop frequency functions. Once a step size has been selected and the Center Frequency function is active, the step keys (and the [UP](#) | [DOWN](#) parameters for Center Frequency from remote commands) change Center Frequency by the step-size value.

Remote Command	:SENSe:FREQuency:CENTer:STEP[:INCRement] <freq> :SENSe:FREQuency:CENTer:STEP[:INCRement]? :SENSe:FREQuency:CENTer:STEP:AUTO OFF ON 0 1 :SENSe:FREQuency:CENTer:STEP:AUTO?
Example	:FREQ:CENT:STEP 500 MHz :FREQ:CENT UP increases the current center frequency value by 500 MHz :FREQ:CENT:STEP? :FREQ:CENT:STEP:AUTO ON :FREQ:CENT:STEP:AUTO?
Notes	Preset and Max values are depending on Hardware Options (503, 507, 508, 513, 526)
Dependencies	Span, RBW, Center frequency If the electronic/soft attenuator is enabled, any attempt to change the value of the center frequency >3.6 GHz by pressing the Up-arrow key, fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a "-221, Settings conflict" warning This control does not appear in 5G NR Mode
Couplings	When auto-coupled in a non-zero span, the center frequency step size is set to 10% of the span. When auto-coupled in zero span, the center frequency step size is set to the equivalent -3 dB RBW value
Preset	Auto ON
State Saved	Saved in instrument state
Min	– (the maximum frequency of the instrument). That is, 27 GHz max freq instrument has a CF step range of +/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Max	The maximum frequency of the instrument. That is, 27 GHz max freq instrument has a CF step range of

	+/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Status Bits/OPC dependencies	non-overlapped

Freq Offset

Enables you to set a frequency offset value to account for frequency conversions outside of the instrument. This value is added to the display readout of the marker frequency, center frequency, start frequency, stop frequency, and all other absolute frequency settings in the instrument including frequency count. When a frequency offset is entered, the value appears below the center of the graticule. To eliminate an offset, perform a Mode Preset or set the frequency offset to 0 Hz.

See ["More Information" on page 3284](#).

Remote Command	<code>[:SENSe]:FREQuency:OFFSet <freq></code> <code>[:SENSe]:FREQuency:OFFSet?</code>
Example	<code>:FREQ:OFFS 10 MHz</code> <code>:FREQ:OFFS?</code>
Notes	Preset and Max values are dependent on Hardware Options (503, 507, 508, 513, 526)
Preset	See "Center Frequency Presets" on page 3278
State Saved	Saved in instrument state
Min	-500 GHz
Max	500 GHz
Annotation	If Frequency Offset is not zero, "Freq Offset <value>" appears on the upper line of the annotation, below the graticule, in the center
Status Bits/OPC dependencies	Non-overlapped

More Information

This command does not affect any bandwidths or the settings of relative frequency parameters such as delta markers or span. It does not affect the current hardware settings of the instrument, but only the displayed frequency values. Entering an offset does not affect the trace position or display, just the value of the start and stop frequency and the values represented by the trace data. The frequency values of exported trace data, queried trace data, markers, trace data used in calculations such as N dB points, trace math, etc., are all affected by Freq Offset. Changing the offset, even on a trace that is not updating will immediately change all of the above, without taking new data.

NOTE

If a trace is exported with a nonzero Freq Offset, the exported data will contain the trace data with the offset applied. Therefore, if that trace were to be imported back into the instrument, you would want Freq Offset to be 0, or the offset would be applied again to data that is already offset. No such care need be taken when saving a State+Trace file because the data and state are saved together.

Center Frequency Offset

Sets Center Frequency Offset, which is coupled with center frequency, but is only used in the Monitor Spectrum, IQ Waveform, Power Stat CCDF and PAVT measurements. The Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled with this equation:

Center Frequency = Carrier Reference Frequency + Center Frequency Offset.

When you change **Center Frequency Offset** explicitly, **Center Frequency** is updated and **Carrier Reference Frequency** is not.

Remote Command	<code>[:SENSe]:FREQuency:CENTer:OFFSet <freq></code> <code>[:SENSe]:FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Dependencies	Only available in 5G NR Mode
Preset	0 GHz
State Saved	Saved in instrument state
Min	-500 GHz
Max	500 GHz

3.12.7 Marker

There is no **Marker** functionality in the PAVT Measurement.

3.12.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

3.12.8.1 Settings

Contains frequently used Meas Setup functions to which you will want the fastest access.

Segments

Sets the number of measurement results. A Segment is comprised of a Measurement Offset, Measurement Interval, and Measurement Transient.

Remote Command	<code>[:SENSe]:PAVTime:SEGMents <integer></code> <code>[:SENSe]:PAVTime:SEGMents?</code>
Example	<code>:PAVT:SEGM 360</code> <code>:PAVT:SEGM?</code>
Preset	180
State Saved	Saved in instrument state
Min	1
Max	1000

Total Meas Time

Information only. Returns the result of (Meas Offset + Meas Interval + Meas Transient)*Segments.

Remote Command	<code>[:SENSe]:PAVTime:MTIME?</code>
Example	<code>:PAVT:MTIM?</code>
State Saved	Saved in instrument state

Meas Interval

Sets the duration of acquisition window within the segment.

Remote Command	<code>[:SENSe]:PAVTime:SEGMents:INTERval <time></code> <code>[:SENSe]:PAVTime:SEGMents:INTERval?</code>
Example	<code>:PAVT:SEGM:INT 10 us</code> <code>:PAVT:SEGM:INT?</code>
Couplings	Meas Interval must be > 0 s and less than (Max Capture Length/Segments) - Meas Offset - Meas Transient
Preset	1 ms

State Saved	Saved in instrument state
Min	100 ns
Max	(Max Capture Length/Segments) - Meas Offset - Meas Transient

Meas Offset

Sets the offset prior to "Meas Interval" on page 3286 within the segment.

Remote Command	<code>[:SENSe]:PAVTime:SEGMents:OFFSet <time></code> <code>[:SENSe]:PAVTime:SEGMents:OFFSet?</code>
Example	<code>:PAVT:SEGM:OFFS 1 us</code> <code>:PAVT:SEGM:OFFS?</code>
Couplings	Meas Offset must be ≥ 0 s and less than (Max Capture Length/Segments) - Meas Interval - Meas Transient
Preset	0
State Saved	Saved in instrument state
Min	0
Max	(Max Capture Length/Segments) - Meas Interval - Meas Transient

Meas Transient

Sets the time between the end of the "Meas Interval" on page 3286 and the end of the segment.

Remote Command	<code>[:SENSe]:PAVTime:SEGMents:TRANSient <time></code> <code>[:SENSe]:PAVTime:SEGMents:TRANSient?</code>
Example	<code>:PAVT:SEGM:TRAN 1 us</code> <code>:PAVT:SEGM:TRAN?</code>
Couplings	Meas Transient must be ≥ 0 s and less than (Max Capture Length/Segments) - Meas Offset - Meas Interval
Preset	0
State Saved	Saved in instrument state
Min/Max	Min = 0 Max = (Max Capture Length/Segments) - Meas Offset - Meas Interval

Measure Frequency Error

Measures the frequency error of the input signal at the center frequency.

This is an "immediate action" function, that is, it executes once, when the control is pressed; the trigger is effectively Free Run, because the acquisition occurs immediately regardless of the instrument trigger setting.

Remote Command	<code>[:SENSe]:PAVTime:FERRor:IMMediate</code>
Example	<code>:PAVT:FERR:IMM</code>
Status Bits/OPC dependencies	Non-overlapped

Frequency Error

The offset of the input signal from the Center Frequency. The frequency error can be determined by the instrument using ["Measure Frequency Error" on page 3287](#), or is can be supplied by the user.

Remote Command	<code>[:SENSe]:PAVTime:FERRor <freq></code> <code>[:SENSe]:PAVTime:FERRor?</code>
Example	<code>:PAVT:FERR 10 MHz</code> <code>:PAVT:FERR?</code>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-100 MHz
Max	100 MHz
Status Bits/OPC dependencies	Non-overlapped

Frequency Error Measurement Time

Sets the acquisition time for ["Measure Frequency Error" on page 3287](#).

Remote Command	<code>[:SENSe]:PAVTime:FERRor:TIME <time></code> <code>[:SENSe]:PAVTime:FERRor:TIME?</code>
Example	<code>:PAVT:FERR:TIME 1 us</code> <code>:PAVT:FERR:TIME?</code>
Preset	10 ms
State Saved	Saved in instrument state
Min/Max	100 ns/500 ms

Segment Frequency Error Correction

Sets the Segment Frequency Error Correction to On or Off. When **ON**, frequency error is calculated simultaneously with each sample point's IQ values. The phase results are compensated with this real time frequency error, as well as the **Frequency Error** entered by user or calculated by "**Measure Frequency Error**" on page 3287.

Remote Command	<code>[:SENSe]:PAVTime:FERRor:CORRection[:STATe] OFF ON 0 1</code> <code>[:SENSe]:PAVTime:FERRor:CORRection[:STATe]?</code>
Example	<code>:PAVT:FERR:CORR ON</code> <code>:PAVT:FERR:CORR?</code>
Preset	OFF
State Saved	Saved in instrument state

Sync Type (Models with Multiple Receivers only)

Sets the Sync Type when multiple receivers in one instrument need to sync at data acquisition. This setting is available when the instrument supports multiple receivers. Only one receiver can be set as Primary, and the others can only be set as Secondary.

Remote Command	<code>[:SENSe]:PAVTime:SYNC OFF PRIMary SECondary</code> <code>[:SENSe]:PAVTime:SYNC?</code>
Example	<code>:PAVT:SYNC SEC</code> <code>:PAVT:SYNC?</code>
Notes	UXM: Only Transceiver A can be configured as Primary, and Transceiver B as Secondary. Otherwise, an error message is issued This control appears only in models with multiple receivers
Preset	OFF
State Saved	Yes
Range	OFF Primary Secondary

Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be "coupled", meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate

action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "**Measurement-Specific Details**" on page 3290 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

Measurement-Specific Details

TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	:CONFigure:PAVTime
Example	:CONF:PAVT
Couplings	Selecting Meas Preset restores all measurement parameters to their default values

3.12.8.2 Radio

The Radio tab contains controls to select link direction.

Direction

Direction specifies whether the 5G NR signal is an uplink signal or a downlink signal.

This control allows you to set the Direction of the signal being measured.

Remote Command	<code>[:SENSe]:RADio:STANdard:DIRection DLINk ULINk</code> <code>[:SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Dependencies	When N9085EM0E is not installed and N9085EM4E is installed, only Uplink is available
Couplings	<p>Changing the direction affects the gate source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: RF burst – If changed to downlink: External 1 <p>In Transmit On Off Power, changing the direction affects the trigger source as follows</p> <ul style="list-style-type: none"> – If changed to uplink: Periodic – If changed to downlink: External 1 except for models with the H1G option. With the H1G option, the trigger source changes as follows. <ul style="list-style-type: none"> – External 1, when Info BW \leq 255 MHz – External 3, when Info BW \geq 256 MHz <p>Changing the direction affects many other modulation analysis setup parameters</p>
Preset	ULINk when N9085EM0E is not installed and N9085EM4E is installed Otherwise, DLINk
State Saved	Yes
Range	Uplink only when N9085EM0E is not installed and N9085EM4E is installed Otherwise, Downlink Uplink

3.12.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your 5G NR signal.

Number of Component Carriers

Specifies how many component carriers are included in the 5G NR measurements. The 5G NR supports the maximum of 16 component carriers.

Remote Command	<code>[:SENSe]:CCARrier:COUNT <integer></code> <code>[:SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Preset	1
State Saved	Yes

Min	1
Max	16

Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- Contiguous – All the component carriers belong to one block and no sub-block gap exists
- Non-Contiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous NCONtiguous</code> <code>[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	<code>CONTiguous</code>
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

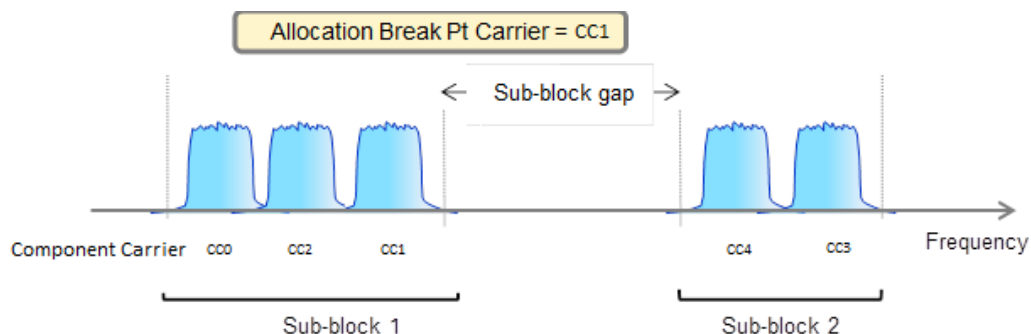

Remote Command	<code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0 ... CC15</code> <code>[:SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC15</code>

Configure Comp Carriers

This dialog lets you perform a detailed configuration of your component carriers, including number of carriers, bandwidth, offset, integration bandwidth, and so on.

Configure CCs

Lets you configure bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

More Information

"Measure Carrier" on page 3296	"Sidelink" on page 3296	"Bandwidth" on page 3297	"Freq Range" on page 3297
"Freq Offset" on page 3298	"Cell ID Auto" on page 3298	"Cell ID Value" on page 3299	"Demod Spectrum" on page 3299
"CHP Power Integration Bandwidth" on page 3300	"ACP Power Integration Bandwidth" on page 3300	"SEM Power Integration Bandwidth" on page 3301	"N_Grid_Size (Display Only)" on page 1828
"SCS (Power Meas)" on page 3302			

Number of Component Carriers

This is the same as the control on the menu panel. See ["Number of Component Carriers" on page 3292](#).

Auto Frequency Offset

Changing this value will automatically calculate frequency offset based on a specified set of rules (For the rules, see 5.4.1.1 and 5.4.1.2 in 3GPP TS 38.104 V15.4.0).

Remote Command	[:SENSe]:CCARrier:AFOffset OFF ACRA100K ACRA15K ACRA60K CARA100K CARA15K CARA60K [:SENSe]:CCARrier:AFOffset?	
Example	:CCAR:AFOF ACRA100K :CCAR:AFOF?	
Notes	When you change the value to OFF , nothing happens	
Dependencies	Changing Number of Component Carriers, CC's Bandwidth, or CC's Frequency Range will recalculate frequency offset unless OFF is selected When CC's Frequency Offset is manually changed, this parameter is set to OFF This feature isn't supported when Carrier Allocation is set to Non-Contiguous. When Auto Freq Offset is set to a value other than OFF with Number of Component Carriers = 1, then, CCO Freq Offset is automatically adjusted to 0 Hz	
Preset	OFF	
State Saved	Yes	
Range	The cascading list is shown below	
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	100 kHz
	Carrier Aggregation	15 kHz
	Off	60 kHz
	Channel Spacing for	Channel Raster
	Adjacent NR Carriers	
	Carrier Aggregation	
	Off	

Carrier Allocation

This is the same as the control on the menu panel. See ["Carrier Allocation" on page 3293](#).

Non-Contiguous Break at

This is the same as the control on the menu panel. See ["Non-Contiguous Break at" on page 3293](#).

Measure Carrier

This column sets whether to measure this component carrier or not.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe] OFF ON 0 1</code> <code>[:SENSe]:CCARrier[0] 1 ... 15[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Couplings	Measure Carrier of the CCs that are within "Number of Component Carriers" is set to ON when the action "Apply Preset (to All CCs)" is executed
Preset	ON
State Saved	Saved in instrument state

Sidelink

Allows the user to select the mode of component carrier from either normal 5G NR uplink or 5G NR V2X sidelink when Direction is Uplink.

- OFF: The component carrier is 5G NR uplink carrier. The 5G NR uplink parameters per carrier are in scope.
- ON: The component carrier is 5G NR V2X sidelink carrier. The sidelink parameters per carrier are in scope.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK ON OFF 1 0</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:SLINK?</code>
Example	<code>:CCAR4:RAD:SLIN ON</code> <code>:CCAR4:RAD:SLIN?</code>
Dependencies	Available when the required license is installed and Direction is Uplink

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	Unavailable when " Bandwidth " on page 3297 is 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz
Preset	OFF
State Saved	Saved

Bandwidth

This column enables you to set the bandwidth of each component carrier for 5G NR signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth B5M B10M B15M B20M B25M B30M B35M B40M B45M B50M B60M B70M B80M B90M B100M B200M B400M B800M B1600M B2000M</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B50M</code>
Dependencies	When " Sidelink " on page 3296 is enabled, 35 MHz, 45 MHz, 800 MHz, 1600 MHz, and 2000 MHz are not available. Selecting any of those BWs turns Sidelink off and the column becomes grayed out
Couplings	This value will be preset to the Bandwidth value in the Meas Standard menu when the action "Apply Preset (to All CCs)" is executed
Preset	B100M unless noted below <ul style="list-style-type: none"> Option B25: B20M Option B40: B35M Option B85: B80M
State Saved	Yes
Range	5 MHz 10 MHz 15 MHz 20 MHz 25 MHz 30 MHz 35 MHz 40 MHz 45 MHz 50 MHz 60 MHz 70 MHz 80 MHz 90 MHz 100 MHz 200 MHz 400 MHz 800 MHz 1600 MHz 2000 MHz

Freq Range

This column enables you to set which frequency range to which each component carrier belongs.

Frequency Range affects CC Bandwidth, Max RB Numbers, ACP Measurement Noise Bandwidth and SEM Integ BW.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge FR1 FR2</code> <code>[:SENSe]:CCARrier[0] 1 ... 15:RADio:STANdard:FRANge?</code>
Example	<code>:CCAR1:RAD:STAN:FRAN FR1</code>
Dependencies	Available selections differ depending on " Bandwidth " on page 3297 as follows: <ul style="list-style-type: none"> 50 MHz and 100 MHz: FR1 and FR2

	<ul style="list-style-type: none"> – 200 MHz or wider: FR2 only – Other than above: FR1 only
Couplings	This value will be preset to the Frequency Range value in the Meas Standard menu when the action “Apply Preset (to All CCs)” is executed
Preset	FR1
State Saved	Yes
Range	FR1 FR2

Freq Offset

This column sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet <freq></code> <code>[:SENSe]:CCARrier<n>:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	<p>Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers</p> <p>Frequency Offset of CC0 to CC15 is recommended to be set in ascending order for the best related couplings. You can see whether sub-blocks are configured as you expect in the trace of Monitor Spectrum by turning on Sub-block Attribute under Display > Meas Display. If sub-blocks are not configured correctly, results related to sub-block gap such as ACP/SEM inner offset results are not measured correctly</p> <p>Also, in some cases, make sure if the “Non-Contiguous Break at” parameter is set to the intended value since it’s often left unchanged after Frequency Offset of CCs are changed</p>
Preset	0 Hz
State Saved	Saved in instrument state
Min	-50 GHz
Max	50 GHz

Cell ID Auto

Enable and disable Cell ID auto detection based on SSB.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE AUTO MANual</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID:MODE?</code>
----------------	---

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Example	<code>:EVM:CCAR:CID:MODE MAN</code> <code>:EVM:CCAR:CID:MODE?</code>
Preset	<code>MANua1</code>
State Saved	Saved in instrument state

Cell ID Value

Specify Cell ID for the component carrier.

NOTE

This setting is available for EVM measurement only.

Remote Command	<code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID <integer></code> <code>[[:SENSe]:EVM:CCARrier[0] 1 ... 15:CID?</code>
Example	<code>:EVM:CCAR4:CID 0</code> <code>:EVM:CCAR4:CID?</code>
Couplings	Invalid when Cell ID Auto is on
Preset	0
State Saved	Saved in instrument state
Min	0
Max	1007

Demod Spectrum

This column determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum NORMal INVert</code> <code>[[:SENSe]:CCARrier[0] 1 ... 15:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	<code>NORM</code>
State Saved	Yes
Range	Normal Invert

CHP Power Integration Bandwidth

This column specifies the range of integration used in calculating the power in the component carriers in the CHP measurement.

NOTE

This setting is *not* available for EVM.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

ACP Power Integration Bandwidth

This column specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:ACPpower:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:ACPpower:BANDwidth[1] 2:INTEgration?</code>	
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>	
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS	
Couplings	When either Bandwidth of the parameter set, Freq Range, or Direction is changed, the value of this parameter also changes as shown in the following table When Freq Range is FR1	
	Bandwidth	Uplink ACP Meas Noise BW (MHz)
	Downlink ACP Meas Noise BW (MHz)	
	5 MHz	4.515
	10 MHz	9.375
	15 MHz	14.235
	20 MHz	19.095

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

25 MHz	23.940	23.955
30 MHz	28.800	28.815
35 MHz	33.840	33.855
40 MHz	38.880	38.895
45 MHz	43.560	43.575
50 MHz	48.600	48.615
60 MHz	58.320	58.350
70 MHz	68.040	68.070
80 MHz	78.120	78.150
90 MHz	88.200	88.230
100 MHz	98.280	98.310
When Freq Range is FR2		
Bandwidth	Downlink ACP Meas Noise BW (MHz)	Uplink ACP Meas Noise BW (MHz)
50 MHz	47.520	47.580
100 MHz	95.040	95.160
200 MHz	190.080	190.20
400 MHz	380.160	380.280
800 MHz	714.24	715.20
1600 MHz	1428.48	1429.44
2000 MHz	1704.96	1705.92
Preset	98.280 MHz 98.310 MHz	
State Saved	Yes	
Min	100 kHz	
Max	2000 MHz	

SEM Power Integration Bandwidth

This column specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration <freq></code> <code>[:SENSe]:CCARrier[0] 1 ... 15:SEMask:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>

Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS
Couplings	When Bandwidth of the parameter set is changed, this parameter also changes to that value
Preset	100 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	2000 MHz

SCS (Power Meas)

Queries the SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier set with **"SCS Enabled" on page 1831**.

It is used to calculate the aggregated channel bandwidth when Power Reference is set to Aggregated Chan BW.

Power Integration Bandwidth values are not affected even if SCS (Power Meas) is changed.

Remote Command	<code>[[:SENSe]:CCARrier[0] 1 ... 15:RGRid:PMSCs?</code>
Example	<code>:CCAR3:RGR:PMSC?</code>
Notes	Query-only Returns one of the following values: NONE, SCS15K, SCS30K, SCS60K, SCS120K, SCS240K, SCS480K, SCS960K

3.12.8.4 Meas Standard

The tab contains settings which let you configure the analyzer to match the measurement standard in your 5G NR signal.

The section entitled "Configure Preset" lets you configure the preset values for the Component Carriers. Once you have set all the controls in the "Configure Preset" section to the desired value, press the "Apply Preset (to all CCs)" control and your presets will be applied to each Component Carrier. Furthermore, any new Component Carriers will take on the same values you have applied.

NOTE

You must press **Apply Preset (to all CCs) or the values on the controls will *not* affect the Component Carriers.**

When you need to configure more parameters, select Advanced Preset Parameters to open a dialog and set advanced parameters for multiple measurements on one screen.

Bandwidth

Set the LTE bandwidth.

Remote Command	<code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW B1M4 B3M B5M B10M B15M B20M</code> <code>[:SENSe]:EVM:CCARrier[0] 1 ... 15:LTE<n>:BW?</code>
Example	<code>:EVM:CCAR:LTE1:BW B20M</code> <code>:EVM:CCAR:LTE1:BW?</code>
Couplings	Max value for n=4 and Min value for n=1 If you attempt to remotely set or query a sub op code that is out of range, this will result in an error message
Preset	B5M
State Saved	Yes
Range	1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20 MHz

Frequency Range

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the **"Freq Range" on page 3297** of each component carrier in the same way you would do so using the table in the **Configure Comp Carriers** dialog on the **Component Carriers** tab.

Set the value you want for this control and the other controls in the “Configure Preset” section then press **Apply Preset (to all CCs)**.

NOTE

You must press **Apply Preset (to all CCs)** or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the **"Number of Component Carriers" on page 3292** will also take on this value.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe FR1 FR2 FR21 FR22</code> <code>[:SENSe]:RADio:STANdard:PRESet:FREQuency:RANGe?</code>
Example	<code>:RAD:STAN:PRE:FREQ:RANG FR1</code> <code>:RAD:STAN:PRE:FREQ:RANG?</code>
Notes	SCPI enum “FR2” is retained for backwards compatibility. When you change Bandwidth, this parameter changes as shown in "Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility" on page 3304 depending on the currently selected value.
Dependencies	Available selections differ depending on Bandwidth as follows:

	Bandwidth	FR
	5 MHz, ..., 100 MHz	FR1
	50 MHz, 100 MHz, 200 MHz, 400 MHz	FR2, FR2-1
	100 MHz, 400 MHz, 800 MHz, 1600 MHz, 2000 MHz	FR2, FR2-2
	When "Uplink Carrier Mode" on page 3313 is Sidelink - V2X, FR2 is unavailable	
Preset	FR1	
State Saved	Yes	
Range	FR1 FR2 FR2-1 FR2-2	
Backwards Compatibility SCPI	[:SENSe]:RADio:STANdard:PRESet:FRANge	

Frequency Range Dependencies due to Bandwidth Selection for Backwards Compatibility

	Bandwidth selection changes to:					
Current FR value	5,...,45 MHz	50 MHz	100 MHz	200 MHz	400 MHz	800,...2000 MHz
	60,...90 MHz					
FR1	FR1	FR1	FR1	FR2	FR2	FR2
FR2	FR1	FR2	FR2	FR2	FR2	FR2
FR2-1	FR1	FR2-1	FR2-1	FR2-1	FR2-1	FR2
FR2-2	FR1	FR2	FR2-2	FR2	FR2-2	FR2-2

FR2 behaves as A.35.00 backwards compatibility mode.

Duplex Mode

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the Duplex Mode of each component carrier. Set the value you want for this control and the other controls in the "Configure Preset" section then press "Apply Preset (to all CCs)".

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

FDD, TDD, User Defined are supported.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

- FDD: RB allocation is filled with all slots and symbols
- TDD: When the Direction is Downlink and any of NR Test Models is selected for RB Alloc Preset, then, RB allocation is filled with the specified TDD slots and symbols only, based on the 3GPP Tx Conformance Test specification definition
- User Defined: Allows you to configure Transmission Periodicity, Number of Slots and Symbols where RB allocation is filled with in TDD slots and symbols

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DMODE FDD TDD UDEFined</code> <code>[:SENSe]:RADio:STANdard:PRESet:DMODE?</code>
Example	<code>:RAD:STAN:PRESet:DMOD TDD</code> <code>:RAD:STAN:PRESet:DMOD?</code>
Dependencies	Available selections depend on Frequency Range When FR1 is selected, all three selections are available. When FR2, FR2-1, or FR2-2 is selected, only TDD and User Defined are available
Preset	TDD
State Saved	Yes
Range	FDD TDD User Defined

TDD / User Def. Configuration

Lets you access TDD slot configuration parameters on one screen.

Duplex Mode

This is the same as "**Duplex Mode**" on page 3304 in the Meas Standard menu panel.

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles. This parameter is valid only for the downlink FR1 TDD duplex mode.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:NRTM TS38</code> <code>:RAD:STAN:PRESet:DLIN:NRTM?</code>
Dependencies	Unavailable when Radio Direction is Uplink, or Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2

Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

Transmission Periodicity

Allows you to select transmission periodicity that determines the User Defined TDD slot configuration pattern repetition period.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity P0_5MS P0_625MS P1MS P1_25MS P2MS P2_5MS P5MS P10MS [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:TRANsmiSSion:PERiodicity?
Example	:RAD:STAN:PRES:TRAN:PER P0_5MS :RAD:STAN:PRES:TRAN:PER?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	P5MS
State Saved	Yes
Range	0.5 ms 0.625 ms 1 ms 1.25 ms 2 ms 2.5 ms 5 ms 10 ms

Number of Downlink Slots

Specifies how many downlink slots are included in one transmission periodicity.

Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT <integer> [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT?
Example	:RAD:STAN:PRES:DLIN:SLOT:COUN 1 :RAD:STAN:PRES:DLIN:SLOT:COUN?
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	7
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity

Number of Downlink Symbols

Specifies how many downlink symbols are included in one transmission periodicity.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PREs:DLIN:SYMB:COUN 1</code> <code>:RAD:STAN:PREs:DLIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	6
State Saved	Yes
Min	1
Max	14

Number of Uplink Slots

Specifies how many uplink slots are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PREs:ULIN:SLOT:COUN 1</code> <code>:RAD:STAN:PREs:ULIN:SLOT:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	2
State Saved	Yes
Min	1
Max	Max slot count in the transmission periodicity.

Number of Uplink Symbols

Specifies how many uplink symbols are included in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT <integer></code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT?</code>
Example	<code>:RAD:STAN:PREs:ULIN:SYMB:COUN 1</code> <code>:RAD:STAN:PREs:ULIN:SYMB:COUN?</code>
Dependencies	Grayed out when Duplex Mode is not User Defined
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	4

State Saved	Yes
Min	1
Max	14

Number of Special Slots (Remote Query Only)

Queries the number of special slots in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?</code>
Example	<code>:RAD:STAN:PRES:SPEC:SLOT:COUN?</code>
Preset	1
Min	1
Max	Max slot count in the transmission periodicity - 1

TDD Slot Allocation(Remote Query Only)

Queries TDD slot allocation in one transmission periodicity.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?</code>
Example	<code>:RAD:STAN:PRES:SLOT:ALL?</code>
Preset	"DDDDDDDSUU"

Ignore Duplex Mode for Fulfilled RB Alloc

This is the same as "Ignore Duplex Mode for Fulfilled RB Alloc" on page 3321.

SCS

This control is part of the "Configure Presets" section of **Meas Standard**. It lets you set the subcarrier spacing of each component carrier. Set the value you want for this control and the other controls in the "Configure Preset" section then press "Apply Preset (to all CCs)".

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the "Number of Component Carriers" on page 3292 will also take on this value.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

In 5G, subcarrier spacing is governed by $2^n * 15$ kHz subcarrier spacings (where n is 0, 1, 2, or 3). 15, 30, and 60 kHz subcarrier spacings are used for the lower frequency bands, and 60 and 120 kHz subcarrier spacings are used for the higher frequency bands.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:SCS SCS15K SCS30K SCS60K SCS120K SCS480K SCS960K</pre> <p>For option details, see "Selections & Dependencies" on page 3309</p> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe] OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]?</pre>
Example	<pre>:RAD:STAN:PRESet:SCS SCS30K</pre> <pre>:RAD:STAN:PRESet:SCS?</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO 0</pre> <pre>:RAD:STAN:PRESet:SCS:AUTO?</pre>
Notes	Not preset to the selection until Apply Preset (to All CCs) is executed
Dependencies	Available selections depend on a combination of Bandwidth and Frequency Range, as detailed in "Selections & Dependencies" on page 3309
Preset	<pre>SCS30K</pre> <pre>ON</pre>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>u = 0: 15 kHz u = 1: 30 kHz u = 2: 60 kHz u = 3: 120 kHz u = 5: 480 kHz u = 6: 960 kHz</p> <p>Auto Man</p>

Selections & Dependencies

FR	Bandwidth	SCS	SCPI
FR1	5 MHz	15K*/30K	SCS15K, SCS30K
	10 – 50 MHz	15K*/30K/60K	SCS15K, SCS30K, SCS60K
	60 – 100 MHz	30K*/60K	SCS30K, SCS60K
FR2	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K
FR2-1	50, 100, 200 MHz	60K*/120K	SCS60K, SCS120K
	400 MHz	120K*	SCS120K
FR2-2	100 MHz	120K*	SCS120K
	400 MHz	120K*/480K/960K	SCS120K, SCS480K, SCS960K
	800, 1600 MHz	480K*/960K	SCS480K, SCS960K
	2000 MHz	960K*	SCS960K

(*) When in Auto, the narrowest available SCS is selected.

RB Alloc Preset

This control is part of the “Configure Presets” section of **Meas Standard**. It lets you set the Resource Block Allocation Preset of each component carrier. Set the value you want for this control and the other controls in the “Configure Preset” section then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

Once you have applied this preset value, any new CCs created by setting the **“Number of Component Carriers”** on page 3292 will also take on this value.

The RB Alloc Preset presets the Resource Block (RB) allocation mapping to a selected predefined pattern in the list:

“Fulfilled-xxx” is to fill out all maximum available RBs in each CC with one specified modulation type (Pi/2-BPSK | QPSK | 16 QAM | 64 QAM | 256 QAM | 1024 QAM), and “DL-NR-TM x.x” is to map RBs in each CC based on the NR Test Model definition according to the section 4.9.2 in 3GPP TS38.141-1 or -2.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc FQPSK FQAM16 FQAM64 FQAM256 FQAM1024 DLTm1DOT1 DLTm1DOT2 DLTm2 DLTm2Q16 DLTm2QPS DLTm2A DLTm2B DLTm3DOT1 DLTm3DOT1Q16 DLTm3DOT1QPS DLTm3DOT1A DLTm3DOT1B DLTm3DOT2 DLTm3DOT3 FPIBPSK DLTm1DOT1P1 DLTm1DOT1L2</pre> <p>For selection details, see “Available Selections” on page 3311</p> <pre>[:SENSe]:RADio:STANdard:PRESet:RBALloc?</pre>
Example	<pre>:RAD:STAN:PRESet:RBAL DLTm1DOT1</pre> <pre>:RAD:STAN:PRESet:RBAL?</pre>
Notes	Resource Block Allocation Preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Dependencies	See “Available Selections” on page 3311
Preset	FQPSK
State Saved	Yes
Range	Cascading List

Group	Configuration
Fulfilled	Fulfilled QPSK
	Fulfilled 16 QAM
	Fulfilled 64 QAM

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Group	Configuration
	Fulfilled 256 QAM
	Fulfilled 1024 QAM
	Fulfilled Pi/2 BPSK
DL NR-TM1.1	DL NR-TM1.1 (Port 0)
	DL NR-TM1.1 (Port 1)
	DL NR-TM1.1 (2layers)
DL NR-TM1.2	
DL NR-TM2	DL NR-TM2 (64 QAM)
	DL NR-TM2 (16 QAM)
	DL NR-TM2 (QPSK)
	DL NR-TM2a (256 QAM)
	DL NR-TM2b (1024 QAM)
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)
	DL NR-TM3.1 (16 QAM)
	DL NR-TM3.1 (QPSK)
	DL NR-TM3.1a (256 QAM)
	DL NR-TM3.1b (1024 QAM)
DL NR-TM3.2	
DL NR-TM3.3	

Available Selections

Available selections vary depending on the Radio Direction and Frequency Range as follows:

Direction: Downlink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc	OFDM Type	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)	(CP-OFDM)
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM	✓	✓	✓	✓
	Fulfilled Pi/2 BPSK				

	FR	FR1	FR2	FR2-1	FR2-2
DL NR-TM1.1	DL NR-TM1.1 (Port 0)	✓	✓	✓	✓
	DL NR-TM1.1 (Port 1)	✓	✓	✓	✓
	DL NR-TM1.1 (2 Layer)	✓	✓	✓	✓
DL NR-TM1.2	DL NR-TM1.2	✓			
DL NR-TM2	DL NR-TM2 (64 QAM)	✓	✓	✓	✓
	DL NR-TM2 (16 QAM)		✓	✓	✓
	DL NR-TM2 (QPSK)		✓	✓	✓
	DL NR-TM2a (256 QAM)	✓	✓	✓	
	DL NR-TM2b (1024 QAM)	✓			
DL NR-TM3.1	DL NR-TM3.1 (64 QAM)	✓	✓	✓	✓
	DL NR-TM3.1 (16 QAM)		✓	✓	✓
	DL NR-TM3.1 (QPSK)		✓	✓	✓
	DL NR-TM3.1a (256 QAM)	✓	✓	✓	
	DL NR-TM3.1b (1024 QAM)	✓			
DL NR-TM3.2	DL NR-TM3.2	✓			
DL NR-TM3.3	DL NR-TM3.3	✓			

Direction: Uplink

	FR	FR1	FR2	FR2-1	FR2-2
RB Alloc:	OFDM Type	CP-OFDM	DFT-s-OFDM	CP-OFDM	DFT-s-OFDM
Fulfilled	Fulfilled QPSK	✓	✓	✓	✓
	Fulfilled 16 QAM	✓	✓	✓	✓
	Fulfilled 64 QAM	✓	✓	✓	✓
	Fulfilled 256 QAM	✓	✓	✓	✓
	Fulfilled 1024 QAM				
	Fulfilled Pi/2 BPSK		✓	✓	✓
DL NR-TMxx	All				

Advanced Preset Parameters

Lets you access advanced preset parameters on one screen.

Uplink Carrier Mode

Allows you to select the uplink carrier mode: either Normal Uplink or Sidelink - V2X.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier NORMa1 V2X</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CARRier?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CARR NORM</code> <code>:RAD:STAN:PRES:ULIN:CARR?</code>
Dependencies	Available when the required license is installed and Direction is Uplink
Preset	When N9085EM0E is not installed and N9085EM4E is installed: V2X Otherwise: NORMa1
State Saved	Saved
Range	Normal Uplink Sidelink-V2X

DL FR1 NR-TM Reference Standard Selection

Enables you to select the 3GPP Standard for the DL FR1 TDD NR-TM lists of Resource Block Allocation Preset to be referred to; one is 3GPP TS38.141-1 and the other is 3GPP TS37.141 BC3 CS16/17, which define different TDD burst On/Off profiles.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM TS38 TS37CS1617</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:NRTM?</code>
Example	<code>RAD:STAN:PRES:DLIN:NRTM TS38</code> <code>RAD:STAN:PRES:DLIN:NRTM?</code>
Dependencies	Grayed out when Radio Direction is Uplink.
Couplings	Values to be preset will not be preset until the action "Apply Preset (to All CCs)" is executed.
Preset	TS38
State Saved	Yes
Range	TS38.141-1 TS37.141 BC3 CS16/17

OFDM Type

This control is part of the "Preset for Mod Analysis" section of the Advanced Preset Parameters dialog. It lets you specify the OFDM Type to configure preset values for

the Component Carriers:

- CP-OFDM
- DFT-s-OFDM

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

Once you have applied this preset value, any new CCs created by setting the Number of Component Carriers will also take on this value.

This parameter is valid only for the Modulation Analysis measurement.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:OTYPe CPOFdm DFTSofdm</code> <code>[:SENSe]:RADio:STANdard:PRESet:OTYPe?</code>
Example	<code>:RAD:STAN:PRE:OTYP CPOF</code> <code>:RAD:STAN:PRE:OTYP?</code>
Dependencies	DFT-s-OFDM is grayed out when Radio Direction is Downlink DFT-s-OFDM is grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	<code>CPOFdm</code>
State Saved	Yes
Range	CP-OFDM DFT-s-OFDM

Adjust Limit Mask for Freq Range

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the frequency range for preset.

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.

When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0. Values to be preset will be preset to the values described in the Values for Meas Standard section when Apply Preset is executed.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

When in Manual, values to be preset will be preset to the values described in Values or Meas Standard according to this value when Apply Preset is executed.

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge NONE FT01 F1T03 F3T04P2 F4P2T06 F6T07 F24P25T029P5 F37T040 F43T048 F52T071</pre> <p>For option details, see "Selections & Dependencies" on page 3315</p> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge?</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO OFF ON 0 1</pre> <pre>[:SENSe]:RADio:STANdard:PRESet:ADJust:FRANge:AUTO?</pre>
Example	<pre>:RAD:STAN:PREs:ADJ:FRAN F1T03</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN?</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO 1</pre> <pre>:RAD:STAN:PREs:ADJ:FRAN:AUTO?</pre>
Dependencies	Available selections depend on Frequency Range. See "Selections & Dependencies" on page 3315
Couplings	<p>When in Auto, this value changes when f value is changed, where f is the center frequency of Component Carrier 0</p> <p>Not preset to the selection until Apply Preset (to All CCs) is executed</p>
Preset	<p>Automatically selected</p> <p>The selection depends on which listed range the CC0 center freq is in</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Range	<p>None f ≤ 1.0 GHz 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz 4.2 < f ≤ 6.0 GHz 6.0 < f ≤ 7.125 GHz 24.25 < f ≤ 29.5 GHz 37.0 < f ≤ 43.5 GHz 43.5 < f ≤ 48.2 GHz 52.6 < f ≤ 71.0 GHz</p>

Selections & Dependencies

Frequency Range	Selection	SCPI
FR1	f ≤ 1.0 GHz	FT01
	< f ≤ 3.0 GHz	F1T03
	3.0 < f ≤ 4.2 GHz	F3T04P2
	4.2 < f ≤ 6.0 GHz	F4P2T06
	6.0 < f ≤ 7.125 GHz	F6T07
FR2	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
	52.6 < f ≤ 71.0 GHz	F52T071

Frequency Range	Selection	SCPI
FR2-1	24.25 < f ≤ 29.5 GHz	F24P25T029P5
	37.0 < f ≤ 43.5 GHz	F37T040
	43.5 < f ≤ 48.2 GHz	F43T048
FR2-2	52.6 < f ≤ 71.0 GHz	F52T071

BS Type

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Type for preset:

- 1-C (FR1 Conducted)
- 1-O (FR1 Radiated)
- 2-O (FR2 Radiated)

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE FR1C FR1O FR2O</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:TYPE?</code>
Example	<code>:RAD:STAN:PRESet:DLIN:BS:TYPE FR1C</code> <code>:RAD:STAN:PRESet:DLIN:BS:TYPE?</code>
Dependencies	Grayed out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset until the action “Apply Preset (to All CCs)” is executed
Preset	FR1C
State Saved	Yes
Range	1-C (FR1 Conducted) 1-O (FR1 Radiated) 2-O (FR2 Radiated)

BS Category

This control is part of the “Preset for ACP, SEM, Spur, Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you specify the BS Category for preset:

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

- Category A Wide Area BS
- Category B Wide Area BS
- Category A Medium Range BS
- Category B Medium Range BS
- Category A Medium Range BS (Low Power rated)
- Category B Medium Range BS (Low Power rated)
- Category A Local Area BS
- Category B Local Area BS

Set the value you want for this control and the other controls in the “Configure Preset” section, and then press “Apply Preset (to all CCs)”.

NOTE

You must press **Apply Preset (to all CCs) or the value on this controls will *not* affect the Component Carriers.**

This parameter is valid for the ACP, SEM, Transmit On|Off Power, and Spurious Emissions measurements.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory AWARea BWARea AMRange BMRRange AMRLow BMRLow ALARea BLARea</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:BS:CATegory?</code>
Example	<code>:RAD:STAN:PRES:DLIN:BS:CAT BWAR</code> <code>:RAD:STAN:PRES:DLIN:BS:CAT?</code>
Dependencies	Grayed-out when Radio Direction is Uplink
Couplings	Values to be preset will not be preset to the selected one until the action “Apply Preset (to All CCs)” is executed
Preset	BWARea
State Saved	Yes
Range	Category A Wide Area BS Category B Wide Area BS Category A Medium Range BS Category B Medium Range BS Category A Medium Range BS (Low Power rated) Category B Medium Range BS (Low Power rated) Category A Local Area BS Category B Local Area BS

Assumed Adjacent Channels

This control is part of the “Preset for ACP, Mod Analysis” section of the Advanced Preset Parameters dialog. It lets you set the Assumed Adjacent Channels for carrier configuration preset. Set the value you want for this control and the other controls in

the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Downlink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE] NR EUTRa NREutra</code> <code>[:SENSe]:RADio:STANdard:PRESet:DLINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:DLIN:ACH NR</code> <code>:RAD:STAN:PRES:DLIN:ACH?</code>
Dependencies	UTRA and NR+UTRA are grayed-out when "Uplink Carrier Mode" on page 3313 is Sidelink - V2X
Preset	NR
State Saved	Yes
Range	NR (same BW) E-UTRA NR + E-UTRA

Uplink

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE] NR UTRa NRUTra</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]?</code>
Example	<code>:RAD:STAN:PRES:ULIN:ACH NR</code> <code>:RAD:STAN:PRES:ULIN:ACH?</code>
Preset	NR
State Saved	Yes
Range	NR (same BW) UTRA NR + UTRA

Uplink Channel Type

This control is part of the “Preset for Tx On|Off Power” section of the Advanced Preset Parameters dialog. It lets you set the Uplink Channel Type to preset parameters for the Transmit On|Off Power measurement. Set the value you want for this control and the other controls in the “Configure Preset” section, then press “Apply Preset (to all CCs)” to execute preset. See the Values for Meas Standard section for the parameters to be preset.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe NONE PUS PRA4 PRA160S15 PRA160S30 PRA12 PRA123S15 PRA123S30 SRS PRA0S60 PRA0S120</code> <code>[:SENSe]:RADio:STANdard:PRESet:ULINK:CTYPe?</code>
Example	<code>:RAD:STAN:PRES:ULIN:CTYP PUS</code> <code>:RAD:STAN:PRES:ULIN:CTYP?</code>
Dependencies	Available selections differ depending on the combination of Freq Range and Duplex Mode as follows: When Freq Range is FR1 and Duplex Mode is FDD: - PUSCH, PRACH Config Index4, PRACH Config Index160 and SRS When Freq Range is FR1 and Duplex Mode is TDD: - PUSCH, PRACH Config Index12, PRACH Config Index123 and SRS

	When Freq Range is FR2: - PUSCH, PRACH Config Index0, SRS
Preset	PUS
State Saved	Yes
Range	PUSCH PRACH Config Index 4 PRACH Config Index 160 (15 kHz SCS) PRACH Config Index 160 (30 kHz SCS) PRACH Config Index 12 PRACH Config Index 123 (15 kHz SCS) PRACH Config Index 123 (30 kHz SCS) PRACH Config Index 0 (60 kHz SCS) PRACH Config Index 0 (120 kHz SCS) SRS

Apply Preset (to All CCs)

This is the same as the Apply Preset (to All CCs) control on the Meas Standard menu panel tab under Meas Standard.

See ["Apply Preset \(to All CCs\)" on page 3322](#).

More Advanced Preset Parameters

Enables you to configure more advanced Apply Preset features.

Include RB Alloc Preset for Mod Analysis

Enables you to select whether or not RB Alloc Preset is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc OFF ON 0 1 [:SENSe]:RADio:STANdard:PRESet:INCLude:EVM:RBALloc?
Example	:RAD:STAN:PRES:INCL:EVM:RBAL 1 :RAD:STAN:PRES:INCL:EVM:RBAL?
Notes	When Exclude is selected, the indicator “Exclude EVM RB Alloc” appears on the Meas Setup menu panel
Preset	ON
State Saved	Yes

Include Gate Source

Enables you to select whether or not Gate Source is preset when “Apply Preset (to All CCs)” is executed.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce OFF ON 0 1 [:SENSe]:RADio:STANdard:PRESet:INCLude:EGATe:SOURce?
Example	:RAD:STAN:PRES:INCL:EGAT:SOUR 1

	<code>:RAD:STAN:PRES:INCL:EGAT:SOUR?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Period

Enables you to select whether or not Periodic Timer Period is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:PERiod?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:PER 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:PER?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Source

Enables you to select whether or not Periodic Timer Sync Source is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce] OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC?</code>
Preset	ON
State Saved	Yes

Include Periodic Timer Sync Holdoff

Enables you to select whether or not Periodic Timer Sync Holdoff is preset when Apply Preset is executed.

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC:HOLDoff?</code>
Example	<code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD 1</code> <code>:RAD:STAN:PRES:INCL:FRAM:SYNC:HOLD?</code>
Preset	ON
State Saved	Yes

Ignore Duplex Mode for Fulfilled RB Alloc

Enables you to select in Modulation Analysis measurement whether or not to ignore Duplex Mode for Fulfilled preset when “Apply Preset (to All CCs)” is executed. This parameter is valid only for the TDD duplex mode.

On: for fulfill preset FDD preset will be applied to modulation analysis measurement regardless of Duplex Mode setting

Off: for fulfill preset TDD preset based on the DL NR-TM will be applied to modulation analysis measurement

Remote Command	<code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE OFF ON 0 1</code> <code>[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE?</code>
Example	<code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD 1</code> <code>:RAD:STAN:PRES:RBAL:FULF:IGN:DMOD?</code>
Notes	Only apply to Modulation Analysis measurement
Dependencies	Unavailable when Duplex Mode is FDD, or Duplex Mode is User Defined, or Frequency Range is FR2, or RB Alloc Preset is DL NR TM
Preset	ON
State Saved	Yes

Adjust Meas Time Length for TM

Enables you to select in Modulation Analysis measurement whether or not to adjust Meas Time settings when Test Model preset is selected and “Apply Preset (to All CCs)” is executed.

None: do not adjust Meas Time settings for Test Model

1 Frame: adjust Meas Time settings for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
All	22 msec	10 Sub Frame	10 Sub Frame	Frame

3GPP: adjust Meas Time Setting for Test Model according to below table

TM Preset	Search Length	Result Length	Meas Interval	Analysis Boundary
FR1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-1	32 msec	20 Sub Frame	20 Sub Frame	Frame
FR2-2 (120K SCS)	32 msec	160 slots	160 slots	slot

	FR2-2 (480K SCS)	17 msec	160 slots	160 slots	slot
	FR2-2 (960K SCS)	14.5 msec	160 slots	160 slots	slot
Remote Command	[:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth NONE FRAME GPP [:SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGth?				
Example	:RAD:STAN:PRES:RBAL:TIME:LENG GPP :RAD:STAN:PRES:RBAL:TIME:LENG?				
Notes	Only apply to Modulation Analysis measurement				
State Saved	Yes				

Apply Preset (to All CCs)

When you press this control, parameters of each component carrier are configured to the values of parameters in the Meas Standard menu. These values will also be used for any subsequent Component Carriers created.

NOTE

You must press **“Apply Preset (to all CCs)”** or the values on the controls in the **“Configure Presets”** section of the menu panel will *not* affect the Component Carriers.

Remote Command	[:SENSe]:RADio:STANdard:PRESet:IMMediate				
Example	:RAD:STAN:PRES:IMM				
Notes	Whenever any preset parameter is changed, including the following cases, the color of this control changes to amber, until “Apply Preset” is executed again <ul style="list-style-type: none"> – Start-up – Mode Preset – Recall 				

Values for Meas Standard

Note: Unless specifically stated otherwise, descriptions of Frequency Range selection “FR2” in this chapter cover either or both “FR2-1” or/and “FR2-2” selection.

Meas Standard Setting Parameters for Apply Preset

The following parameters in Meas Setup > Meas Standard let you configure the preset values for Component Carriers.

Direction	Downlink	Uplink
Bandwidth	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 80, 90, 100, 200, 400, 800, 1600, 2000 MHz
Frequency Range	FR1 FR2 FR2-1 FR2-2	FR1 FR2 FR2-1 FR2-2
Duplex Mode	FDD TDD	FDD TDD
SCS	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)	$\mu = 0$ (15 kHz), 1(30 kHz), 2 (60 kHz), 3 (120 kHz), 5 (480 kHz), 6 (960 kHz)
RB Alloc Preset	Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM, 1024 QAM NR-TM1.1 (port 0), 1.1 (port 1), 1.1 (2 layers), 1.2, 2 (64 QAM/16 QAM/QPSK), 2a, 2b, 3.1 (64 QAM/16 QAM/QPSK), 3.1a, 3.1b, 3.2, 3.3	Fulfilled Pi/2-BPSK (for DFT-s-OFDM only), Fulfilled QPSK, Fulfilled 16 QAM, Fulfilled 64 QAM, Fulfilled 256 QAM
UL Carrier Mode	n/a	Normal Uplink, Sidelink-V2X
OFDM Type (for Mod Analysis)	CP-OFDM	CP-OFDM, DFT-s-OFDM
Adjust Limit Mask for Freq Range (for ACP, SEM, PvT and Spur only)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)	None, $f \leq 1.0$ GHz (FR1), $1.0 < f \leq 3.0$ GHz (FR1), $3.0 < f \leq 4.2$ GHz (FR1), $4.2 < f \leq 6.0$ GHz (FR1), $6.0 < f \leq 7.125$ GHz (FR1), $24.25 < f \leq 29.5$ GHz (FR2-1), $37.0 < f \leq 43.5$ GHz (FR2-1), $43.5 < f \leq 48.2$ GHz (FR2-1), $52.6 < f \leq 71.0$ GHz (FR2-2)
BS Type (for ACP, SEM, PvT and Spur only)	1-C (FR1 Conducted), 1-O (FR1 Radiated), 2-O (FR2 Radiated)	n/a
BS Category (for ACP, SEM, PvT, and Spur only)	Cat A Wide Area BS, Cat B Wide Area BS, Cat A Medium Range BS, Cat B Medium Range BS, Cat A Medium Range BS (Low Pr), Cat B Medium Range BS (Low Pr),	n/a

Assumed Adj Channels (for ACP, FR1) UE Power Class (for ACP: FR1 and Mod Analysis: FR2 UE IBE) UL Channel Type (for Tx On Off Power)	Cat A Local Area BS, Cat B Local Area BS NR (same BW), E-UTRA, NR + E-UTRA	NR (same BW), UTRA, NR+UTRA
	n/a	When Freq Range is FR1: Power Class 2, Power Class 3 When Freq Range is FR2: Power Class 1, Power Class 2, Power Class 3, Power Class 4
	n/a	When Freq Range is FR1: PUSCH, PRACH Config Index 4 (FDD), PRACH Config Index 160 (15 kHz SCS, FDD), PRACH Config Index 160 (30 kHz SCS, FDD), PRACH Config Index 12 (TDD), PRACH Config Index 123 (15 kHz SCS, TDD), PRACH Config Index 123 (30 kHz SCS, TDD), SRS When Freq Range is FR2: PUSCH, PRACH Config Index 0 (60 kHz SCS), PRACH Config Index 0 (120 kHz SCS), SRS

TS38.521-2 v.17.0.0 (v.2022-09) The following PvT limit requirements are still FFS:

Clause 6.3.3.2, Table 6.3.3.2.5-3: Test Tolerance for OFF power ... still FFS.

Clause 6.3.3.2, Table 6.3.3.2.5-4: Test Tolerance for ON power ... still FFS.

Clause 6.3.3.4, Table 6.3.3.4.5-1: PRACH time mask ... for On power and On power Tolerance ... still FFS.

Clause 6.3.3.6 SRS time mask ... still all FFS.

When **"Apply Preset (to All CCs)" on page 3322** is pressed, related measurement parameters and Gate parameters are changed to the values described in the following sections in this chapter.

Reference Standard version and ACP & SEM table indicator

The following reference 3GPP test spec doc with its version number, ACP and SEM table numbers are displayed in the **Advanced Preset Parameters** dialog menu.

e.g.)

3GPP TS38.141-1 v.17.9.0 (2023-03)

ACP: Table 6.6.3.5.2-1

SEM: Table 6.6.4.5.3.1-3

Direction = Downlink

Preset parameters				Reference spec doc, ACP and SEM table in the menu		
FR	BS type	BS Category	Adjust Range	Test Spec	ACP	SEM
FR1	1-C	Cat A WA BS	$f \leq 1.0$ GHz	TS38.141-1 v.17.9.0 (2023-03)	Table 6.6.3.5.2-1	Table 6.6.4.5.2-1
			None,			Table 6.6.4.5.2-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.2-3
		Cat B WA BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			$f \leq 1.0$ GHz			Table 6.6.4.5.3.1-1
			None,			Table 6.6.4.5.3.1-2
			$1.0 < f \leq 3.0$ GHz			
			$3.0 < f \leq 4.2$ GHz,			Table 6.6.4.5.3.1-3
		Cat A MR BS, Cat B MR BS	$4.2 < f \leq 6.0$ GHz,			
			$6.0 < f \leq 7.125$ GHz			
			None,			Table 6.6.4.5.4-1
			$f \leq 1.0$ GHz,			

3.12 Phase and Amplitude vs Time Measurement

1-0		1.0 < f ≤ 3.0 GHz			Table 6.6.4.5.4-3				
		3.0 < f ≤ 4.2 GHz,							
		4.2 < f ≤ 6.0 GHz,							
		6.0 < f ≤ 7.125 GHz							
	Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	None, f ≤ 1.0 GHz,			Table 6.6.4.5.4-2				
		1.0 < f ≤ 3.0 GHz							
		3.0 < f ≤ 4.2 GHz,				Table 6.6.4.5.4-4			
		4.2 < f ≤ 6.0 GHz,							
		6.0 < f ≤ 7.125 GHz							
		Cat A LA BS, Cat B LA BS				None, f ≤ 1.0 GHz,		Table 6.6.4.5.5-1	
						1.0 < f ≤ 3.0 GHz			
						3.0 < f ≤ 4.2 GHz,			Table 6.6.4.5.5-2
	4.2 < f ≤ 6.0 GHz,								
		6.0 < f ≤ 7.125 GHz							
		Cat A WA BS				f ≤ 1.0 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.1-1	Table 6.7.4.5.1.1-1
						None, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.1-2
3.0 < f ≤ 4.2 GHz						Table 6.7.4.5.1.1-3			
4.2 < f ≤ 6.0 GHz	Table 6.7.4.5.1.1-4								
Cat B WA BS	f ≤ 1.0 GHz			Table 6.7.4.5.1.2-1					
	None, 1.0 < f ≤ 3.0 GHz				Table 6.7.4.5.1.2-2				

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

FR2	2-0	Cat A MR BS, Cat B MR BS	3.0 < f ≤ 4.2 GHz	TS38.141-2 v.17.9.0 (2023-03)	Table 6.7.3.5.2-1	Table 6.7.4.5.1.2-3
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.2-4
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.2-5
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-1
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.4-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-3a
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.4-4
		Cat A MR BS (Low P _r), Cat B MR BS (Low P _r)	3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.4-5
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.4-6
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.4-7
			None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz			Table 6.7.4.5.1.5-1
			3.0 < f ≤ 4.2 GHz			Table 6.7.4.5.1.5-2
			4.2 < f ≤ 6.0 GHz			Table 6.7.4.5.1.5-3
			6.0 < f ≤ 7.125 GHz			Table 6.7.4.5.1.5-4
			None, 24.25 < f ≤ 29.5 GHz			Table 6.7.4.5.2.2-1
		Cat A MR BS (Low P _r), Cat A LA BS	37.0 < f ≤ 43.5 GHz			Table 6.7.4.5.2.2-2
			43.5 < f ≤ 48.2			Table

	GHz	6.7.4.5.2.2-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.2-4
Cat B WA BS,	None,	Table
Cat B MR BS,	24.25 < f ≤ 29.5	6.7.4.5.2.3-1
Cat B MR BS	GHz	
(Low P _r),	37.0 < f ≤ 43.5	Table
Cat B LA BS	GHz	6.7.4.5.2.3-2
	43.5 < f ≤ 48.2	Table
	GHz	6.7.4.5.2.3-3
	52.6 < f ≤ 71.0	Table
	GHz	6.7.4.5.2.3-4

ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Direction = Uplink

When UL Carrier Mode = Normal Uplink:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5.2.4.1.5-2	Table 6.5.2.2.5-1
	UTRA,	v.17.8.0 (2023-03)	Table 6.5.2.4.2.5-2	
	NR + UTRA			
FR2		TS38.521-2	Table 6.5.2.3.5-1	Table 6.5.2.1.5-1
		v.17.2.0 (2023-03)		

When UL Carrier Mode = Sidelink / V2X:

Preset parameters		Reference spec doc, ACP and SEM table in the menu		
FR	Assumed Adjacent Channel (ACLR)	Test Spec	ACP (*)	SEM
FR1	NR (same BW)	TS38.521-1	Table 6.5E.2.4.1.5-2	Table 6.5E.2.2.1.5-1
		v.17.8.0 (2023-03)		

(*) ACP reference table selection represents the Relative Limit for Outer Offsets. (The table numbers for Absolute limits, Test Tolerances, and the limits for Inner Offsets/CACLR are not displayed.)

Measurement-Global parameters

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers" on page 3329
- "Trigger/Gate Parameters" on page 3329

Configure Component Carriers

When Direction = Uplink:

Preset Configuration	Preset Value
UL Carrier Mode	Sidelink
Normal Uplink	Disabled (for all CCs)
Sidelink / V2X	Enabled (for all CCs)

Trigger/Gate Parameters

When executing "Apply Preset", preset the following parameters:

Trigger menu	Parameter	Preset values TDD / FDD Duplex Mode			User Defined Duplex mode	
		Downlink (*1) FR1	Downlink (*1) FR2	Uplink	Downlink	Uplink
Trigger	Select Trigger Source (*2)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Source	Select Gate Source	Periodic	Periodic	Periodic	Periodic	Periodic
	Period (Periodic Timer) (*3)	5.000 ms	1.250 ms	10.000 ms	Transmission periodicity	Transmission periodicity
	(Periodic) Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
Gate Settings	Sync Holdoff Gate (*5)	On, 250 us	On, 250 us	On, 250 us	Off	Off
	Gate Delay	On	On	(no preset)	On	On
		5.000 ms	1.250 ms	(no preset)	Transmission periodicity (*8)	Transmission periodicity (*8)

Periodic Sync Src	Gate Length	3.700 ms (*6) or 2.700 ms (*6)	927.5 us	(no preset)	Duration of downlink slots and symbols	Duration of uplink slots and symbols
	Gate Holdoff	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
	Select Periodic Trigger Sync Source (*4)	RF Burst	RF Burst	RF Burst	RF Burst	RF Burst
	Absolute Trig Level	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)
Auto Holdoff	Trigger Slope	(no preset)	(no preset)	Positive	(no preset)	Positive
	Trig Holdoff	(no preset)	(no preset)	On, 250 us (*7)	Off	Off
	Holdoff Type	(no preset)	(no preset)	Below (*7)	(no preset)	(no preset)

Notes:

(*1) For Downlink case, these values are preset with the Apply Preset action when "RB Alloc Preset" on page 3310 is any of NR-TM and "Duplex Mode" on page 3304 is TDD

(*2) Trigger Source is a separate parameter in each measurement, and is not preset with the Apply Preset action. Note that in the Tx On/Off Power measurement, it is forcefully changed to Periodic when the direction is switched to Uplink or to External 1 when the direction is switched to Downlink except for models with the H1G option. With the H1G option, it is changed to either External 1 (when Info BW \leq 255 MHz) or External 3 (when Info BW \geq 256 MHz) depending on the Info BW determined by the component carrier configuration

(*3) Periodic Trigger Period and Gate Period are the same/shared parameter, so called "Periodic Timer Period"

(*4) Periodic Trigger Sync Source and Periodic Gate Sync Source are the same/shared parameter

(*5) Gate is preset to Off with the Apply Preset action when "Duplex Mode" on page 3304 is FDD

(*6) Gate Length preset value for DL FR1 depends on "DL FR1 NR-TM Reference Standard Selection" on page 3305 under the Advanced Preset Parameters menu: 3.700 ms for TS38.141-1 or 2.700 ms for TS37.141 BC3 CS16/17

(*7) These Trig Holdoff & Holdoff Type settings make the trigger holdoff wait for an OFF power period at least 250 us (in any burst configuration preset in Uplink), and then triggers at the beginning of the power raise timing (with Trigger Slope =

Positive) of the Burst ON power as expected. This is to avoid an unexpected triggering with other random power up or down

(*8) If transmission periodicity is less than 1ms, use the lowest multiple of transmission periodicity that is greater than or equal to 1ms

ACP

The following parameters are preset when Apply Preset is executed.

- "BW Parameters" on page 3331
- "Trace Detector" on page 3331
- "Sweep Parameter" on page 3331
- Frequency Parameters
- Meas Setup: Settings Parameter
- "Meas Setup: Configure Component Carrier Parameters" on page 3333
- "Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters" on page 3335

BW Parameters

Parameter	Preset Value
Res BW	100 kHz
Res BW State	Man
Video BW State	Auto

Trace Detector

Parameter	Preset Value
Detector	Auto (Average)

Sweep Parameter

Parameter	Preset Value
Auto Sweep Points	On

Frequency Parameters

Preset Configuration				Preset Value
Direction	FR	Bandwidth	Assumed Adj Channels	Span (*1)
Downlink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW), NR + E-UTRA E-UTRA	= 4 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 2 x Bandwidth + RFBW (*2)
Uplink	FR1	5, ..., 100 MHz 35, 45 MHz	NR (same BW) UTRA NR + UTRA	= 2 x Bandwidth + RFBW (*2) = 20 MHz + RFBW (*2) = max(2 x Bandwidth, 20 MHz) + RFBW (*2)
		50, 100, 200, 400 MHz 100, 400, 800, 1600, 2000 MHz	NR (same BW)	= 3 x RFBW (*2)

Notes:

(*1) Span value is preset to the wider one from either the value specified in this table or the value which is calculated based on all the set parameters for CCs and Offsets whichever being necessary.

(*2) “RFBW” represents:

- The “Bandwidth” of the selected CC for 1 CC case,
- The RF Bandwidth which is equivalent to the $BW_{\text{channel, CA}}$ with “Measure Carrier = ON” for all CCs for Multiple CC cases (in both Contiguous or Non-contiguous allocations), where $BW_{\text{channel, CA}}$ is defined in clause 5.3A.2, 3GPP TS38.104 for downlink (BTS), or in clause 5.3A.2, 3GPP TS38.101 for uplink (UE).

Meas Setup: Settings Parameter

Parameter	Preset Value
Meas Method	Integration BW

Meas Setup: Configure Component Carrier Parameters

- When “Adjust Limit Mask for Freq Range” is set to a value other than “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	
Uplink	FR1	5 MHz	15, 30 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		10, ..., 50 MHz	15, 30, 60 kHz	
		60, ..., 100 MHz	30, 60 kHz	
	FR2	50, 100, 200 MHz	60, 120 kHz	
		400 MHz	120 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “[N_Grid_Size \(Display Only\)](#)” on page 1828,

$$N_{sc}^{RB} = 12$$

- When “Adjust Limit Mask for Freq Range” is set to “52.6 < f ≤ 71.0 GHz” (FR2-2):

Preset Configuration				Preset Value
Direction	FR	Bandwidth	SCS	ACP Power Integration Bandwidth for all CC0...15
Downlink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(Bandwidth, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
		400 MHz	120, 480,	

			960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	
Uplink	FR2	100 MHz	120 kHz	$\max_{SCS}\{N_{RB}(\text{Bandwidth, FR, SCS}) \times SCS [\text{kHz}] \times N_{sc}^{RB} + SCS [\text{kHz}]\}$
		400 MHz	120, 480, 960 kHz	
		800, 1600 MHz	480, 960 kHz	
		2000 MHz	960 kHz	

where:

N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section “**N_Grid_Size (Display Only)**” on page 1828,

$$N_{sc}^{RB} = 12$$

Downlink: 3GPP TS38.817-02 v.15.9.0 (2020-09):

5.5.3 Adjacent Channel Leakage ratio

5.5.3.1 NR ACLR

“ACLR is the ratio of power of wanted signal to the power falling into Adjacent Channel. ACLR measurement bandwidth for both the wanted and adjacent channels is the maximum transmission bandwidth among the different SCSs of CP-OFDM SU for a channel BW with addition of one SCS to account for half SCS shift due to SCS alignment to DC, this measurement bandwidth is centered within the channels.”

Uplink: 3GPP TS38.817-01 v.16.2.0 (2020-09):

6.6.3 Adjacent Channel Leakage Power Ratio (ACLR)

- (snip)
- “Maximum transmission bandwidth configuration of the BS channel bandwidth (between subcarrier spacing) specified in Release 15 should be used as a measurement bandwidth for adjacent channel power measurement, i.e. the measurement bandwidth should also apply to future releases regardless of whether new SU is introduced or not.”

Meas Setup: Power Ref & Offset/Limit Configs: Outer/Inner Offset Parameters

Preset Configuration (*1)				Preset Value (*2)		
Direction	FR	Carrier Allocation	Assumed Adjacent Chan	Power Reference	Offset Freq Define	Offset Preset Case
Downlink	FR1	Contiguous, Non-Contiguous	NR (same BW)	Left & Right Carriers	Outer: CtoC Inner: Stoc	Outer: Case 1 Inner: Case 1
			E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: EtoC Inner: Stoc	Outer: Case 2 Inner: Case 1
	FR2	Contiguous, Non-Contiguous	NR (same BW), E-UTRA, E-UTRA + NR	Left & Right Carriers	Outer: CtoC Inner: Stoc	Outer: Case 1 Inner: Case 1
			NR (same BW)	Aggregated Channel BW	Outer: CtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
Uplink	FR1	Contiguous	UTRA, UTRA + NR	Aggregated Channel BW	Outer: EtoC Inner: SCtoC	Outer: Case 2 Inner: Case 1
			NR (same BW)	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 2 Inner: Case 2
			NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
	FR2	Contiguous	NR (same BW), UTRA, UTRA + NR	Aggregated Channel BW	Outer: RCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
		Non-Contiguous	NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1
			NR (same BW), UTRA, UTRA + NR	Left & Right Sub-blocks	Outer: SCtoC Inner: SCtoC	Outer: Case 1 Inner: Case 1

Notes:

(*1) Preset Configuration:

- Direction is located at the Radio tab menu.
- Carrier Allocation is located at the Component Carriers tab menu.

- FR and Assumed Adjacent Channels are located at the Meas Standard tab menu.
- 3GPP TS38.521-1/2 have not clearly specified Uplink non-Contiguous CA test cases yet. The Left & Right Subblocks and the SCtoC selections are based on the assumption of BWChannel, CA as BWContiguous.
- Assumed Adjacent Channels = “E-UTRA”, “E-UTRA + NR” for Downlink and “UTRA”, “UTRA + NR” for Uplink are not applicable to FR2.

(*2) Notes for Preset Value:

- Power Ref(ERENCE) is located at the Reference tab menu.
- Outer and Inner Offset Freq Define parameters are located at the Offset and the Inner Offset sub-menus, respectively, in the Carrier/Offset/Limits Configuration dialog menu.
- Outer/Inner Offset Preset Case 1 and 2 indicate the tables in the following section.
- Outer/Inner Offset Freq Define:
 - CtoC: (Left & Right) Carrier Center to Offset Center
 - EtoC: (Left & Right) Carrier Edge to Offset Center
 - RCtoC: RFBW Center to Offset Center
 - SCtoC: (Left & Right) Sub-block Center to Offset Center
 - Stoc: (Left & Right) Subblock Edge to Offset Center
- Power Ref = Aggregated Chan BW is actually the same as the Power Ref = Left & Right Sub-blocks when the Carrier Allocation = Contiguous.
- Inner Offset setting is fundamentally N/A when Carrier Allocation = Contiguous.

Outer Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Outer Offset Parameters (for the Outer Offset Preset Case 1):

Parameter	Preset Configuration		Preset Value
	Direction	FR	
			Offset

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Offset Freq State	Downlink	FR1	A, B	On
			C, ... , L	Off
		FR2	A	On
			B, ... , L	Off
	Uplink		A	On
			B, ... , L	Off
Offset Freq	Downlink		A	BW_{CC}
			B	$2*BW_{CC}$
			C, ... , L	0 Hz
	Uplink	FR1	A	BW_{CC}
			B, ... , L	0 Hz
		FR2	A	When Num of CCs = 1: BW_{CC}
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]}$
			B, ... , L	0 Hz
Integ BW	Downlink		All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink	FR1	All	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
		FR2	All	When Num of CCs = 1:
				$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
				When Num of CCs > 1 with Contiguous allocation: $BW_{Channel,CA} - 2*BW_{GB}$
				When Num of CCs > 1 with Non-Contiguous allocation: $BW_{Channel,block[n]} - 2*BW_{GB}$

where:

BW_{CC} : "Bandwidth" in the Configure Preset menu under Meas Standard tab, representing CC Bandwidth

$BW_{Channel,CA}$: Aggregated Channel Bandwidth, defined in the clause 5.3A.2 in TS38.521-2

$BW_{Channel,block[n]}$: Aggregated Sub-block[n] Bandwidth (where n=1 for the Left Sub-block, 2 for the Right Sub-block, defined in the clause 5.3A.2 in TS38.521-2

BW_{GB} : Guard Band bandwidth, defined in the clause 5.3A.2 in TS38.521-2

FR: Frequency Range, applied in the Configure Preset menu

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828

$N_{sc}^{RB} = 12$

Res BW State	All	Auto
-----------------	-----	------

Res BW	All	Automatically coupled with the Res BW value under the BW menu
Video BW State	All	Auto
Video BW	All	Automatically coupled with the Video BW value under the BW menu
Offset Side	All	Both
Method	All	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 1):

– Downlink Absolute Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS type	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
		1-O	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Cat A WA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat B WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS, Cat B LA BS	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

FR2	2-0	None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
		$43.5 < f \leq 48.2$	Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
		$52.6 < f \leq 71.0$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.1 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		
			Cat A WA BS,	All	$-7.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B WA BS		
			Cat A MR BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B MR BS,		
			Cat A MR BS (Low Pr),		
			Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-14.7 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			Cat B LA BS		

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Bandwidth	Adjust Range(GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-44.2 dB (= -45 + TT 0.8)

FR2	1-0	25, ..., 100 MHz	4.2 < f ≤ 6.0,	All	-43.8 dB (= -45 + TT 1.2)
			6.0 < f ≤ 7.125		
		5, ... , 100 MHz	None,	All	-44 dB = (-45 + TT 1.0)
			f ≤ 1.0,		
	2-0	50, 100, 200 400 MHz	1.0 < f ≤ 3.0	All	-43.8 dB = (-45 + TT 1.2)
			3.0 < f ≤ 4.2,		
			4.2 < f ≤ 6.0	All	-36.8 dB = (-45 + TT 8.2)
			6.0 < f ≤ 7.125		
	2-0	50, 100, 200 400 MHz	None,	All	-25.7 dB = (-28 + TT 2.3)
			24.25 < f ≤ 29.5		
			37.0 < f ≤ 43.5		
			43.5 < f ≤ 48.2		
		100, 400, 800, 1600, 2000 MHz	52.6 < f ≤ 71.0	All	-18.8 dB = (-24 + TT 5.2)

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-1: BS type 2-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration					Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset	
Fail Mask				All	All	Abs AND Rel

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= -37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= -31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= -30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	When Num of CCs = 1: -12.34 dB (= -17 + TT 4.66) When Num of CCs > 1: -12.04 dB (= -17 + TT 4.96)
				100, 200, 400 MHz	All	-12.04 dB (= -17 + TT 4.96)
				All	All	-11.04 dB (= -16 + TT 4.96)

$$52.6 < f \leq 71.0$$

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit:
 - Num of CCs = 1: Clause 6.5.2.3.3 Minimum conformance requirements
 - Num of CCs > 1: Clause 6.5A.2.2.1.5 Test Requirements
- Rel Limit:
 - Num of CCs = 1: Table 6.5.2.3.5-1 General requirements for NR_{ACLR}, and Table 6.5.2.3.5-1a Test Tolerance
 - Num of CCs > 1: Table 6.5A.2.2.1.5-1 General requirements for CA NR_{ACLR} and Table 6.5A.2.2.1.5-1a Test Tolerance (Aggregated BW ≤ 400 MHz)

Note: Table 6.5.2.3.5-1b and Table 6.5A.2.2.1.5-1b Relaxation values are not taken into account in the firmware version ~A.32.0x.

Note: Rel Limit TT values for FR2 in Table 6.5.2.3.5-1a were updated based on Test ID (i.e. OFDM Type & Mod Format) but it has not been reflected to the Preset values yet.

When UL Carrier Mode = Sidelink-V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Outer Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “E-UTRA”, “NR + E-UTRA” for DL, or “UTRA”, “NR + UTRA” for UL.

Outer Offset Parameters (for the Outer Offset Preset Case 2):

3 5G NR Mode
3.12 Phase and Amplitude vs Time Measurement

Parameter	Preset Configuration		Offset	Preset Value
	Direction	FR1 (only)	Assumed Adj Chan	
Offset Frequency Define				EtoC: Carrier Edge to Meas BW Center
Offset Frequency State	Downlink	E-UTRA	A, B	On
			C, ... , L	Off
		NR + E-UTRA	A, ..., D	On
			E, ..., L	Off
	Uplink	UTRA	A, B	On
			C, ... , L	Off
		NR + UTRA	A, B, C	On
			D, ..., L	Off
Offset Freq			A	= 2.5 MHz
			B	= 7.5 MHz
			C	= 0.5 x Bandwidth
			D	= 1.5 x Bandwidth
			E, F	0 Hz
Integ BW	Downlink		A, B	4.50 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB}\}$
	Uplink		A, B	3.84 MHz
			C, ... , L	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$
where:				
Bandwidth: Applied in the Configure Preset menu,				
FR: Frequency Range, applied in the Configure Preset menu,				
N_{RB} is referred to “Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)” in the Section "N_Grid_Size (Display Only)" on page 1828, "N_Grid_Size (Display Only)" on page 1828,				
$N_{sc}^{RB} = 12$				
Res BW State			All	Auto
Res BW			All	Automatically coupled with the Res BW value under the BW menu
Video BW State			All	Auto
Video BW			All	Automatically coupled with the Video BW value under the BW menu

Offset Side		All	Both
Method	Downlink	All	Integration BW
and	Uplink	A, B	RRC Weighted, Filter Alpha = 0.22
Filter Alpha		C, ..., L	Integration BW

Outer Limit Parameters (for the Outer Offset Preset Case 2):

– Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BStype	Adjust Range (GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	$-13 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat B MR BS,		
			$4.2 < f \leq 6.0$,	Cat A MR BS (Low Pr),		
		1-0	$6.0 < f \leq 7.125$	Cat B MR BS (Low Pr)	All	$-32 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
				Cat A LA BS,		
				Cat B LA BS	All	$-4 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$f \leq 1.0$,	Cat A WA BS	All	$-6 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-16 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$3.0 < f \leq 4.2$,	Cat A MR BS,	All	$-23 + 10 \text{ LOG}(BW_{\text{config}}) \text{ dBm}$
			$4.2 < f \leq 6.0$,	Cat B MR BS,		
			$6.0 < f \leq 7.125$	Cat A MR BS (Low Pr),		
				Cat B MR BS (Low Pr)	All	
				Cat A LA BS,		
				Cat B LA BS	All	

– Downlink Relative Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
--------------------------	----------------------	--	--	--	--------	--------------

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

	FR	BStype	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ... , 20 MHz	None, $f \leq 1.0$,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	$1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$,	All	-43.8 dB (= -45 + TT 1.2)
	1-O		5, ... , 100 MHz	None, $f \leq 1.0$, $1.0 < f \leq 3.0$	All	-44 dB = (-45 + TT 1.0)
				$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$	All	-43.8 dB = (-45 + TT 1.2)
				$6.0 < f \leq 7.125$	All	-36.8 dB = (-45 + TT 8.2)(*)

(*) BS type 1-O relative limits for $6.0 < f \leq 7.125$ GHz range is “N/A” in 3GPP Release 17 TS38.141-2 Table 6.7.3.5.1-1 as of v.2022-09. Meanwhile, keep the value -36.8 dB for preset which is the same value as the Assumed Adjacent Channel = NR (in the Outer Offset Preset Case 1).

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-1: Base station ACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-1: BS type 1-O ACLR limit
- Uplink Absolute/Relative Limits:

Parameterfor Uplink	Preset Configuration			Offset	Preset Value
	FR	Adjust Range(GHz)	UE Power Class		
Fail Mask				All	Abs AND Rel
Abs Limit	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$		All	-50 dBm

Rel Limit (Car)	FR1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Inner Offset Preset Case 1

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “NR (same BW)” for DL/UL, “E-UTRA” or “NR + E-UTRA” for DL, or FR2 with Assumed Adjacent Channels (ACLR) = any case for DL/UL.

Inner Offset Parameters (for the Inner Offset Preset Case 1):

Parameter	Preset Configuration			Offset	Preset Value
	Direction	FR	CarrierAllocation		
Offset Frequency State	Downlink	FR1	Contiguous	All	Set to default values
			Non	A, B	See "Table 1a Offset Freq State" on page 3347
			-Contiguous	C, ..., L	Off
		FR2	Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 3347
			-Contiguous	B, ..., L	Off
Offset Freq	Uplink		Contiguous	All	Set to default values
			Non	A	See "Table 1a Offset Freq State" on page 3347
			-Contiguous	B, ..., L	Off
				A, B	See "Table 1b Offset Freq and Integ BW Offset A/B" on page

Integ BW	C, ... , L	3348 0 Hz
	A, B	See "Table 1 b Offset Freq and Integ BW Offset A/B" on page 3348
Offset Side	C, ... , L	Same value as Offset A and B
Method	All	Both
Res BW State	All	Integration BW
Video BW State	All	Auto
Power Ref Type	All	See "Table 1a Offset Freq State" on page 3347

Table 1a Offset Freq State

Preset Configuration			Wgap(Sub- block gap) (MHz)	Preset Value			
Direction	FR	Bandwidth		Offset Enabled		Power Ref Type(*)	
				A	B	A	B

Downlink	FR1	5, ..., 20 MHz	Wgap < 5			Auto (Cum)	Auto (Cum)
			5 ≤ Wgap < 10	✓		Auto (Cum)	Auto (Cum)
			10 ≤ Wgap < 15	✓	✓	Auto (Cum)	Auto (Cum)
			15 ≤ Wgap < 20	✓	✓	Auto (Norm)	Auto (Cum)
			20 ≤ Wgap	✓	✓	Auto (Norm)	Auto (Norm)
		25, ..., 100 MHz	Wgap < 20			Auto (Cum)	Auto (Cum)
			20 ≤ Wgap < 40	✓		Auto (Cum)	Auto (Cum)
			40 ≤ Wgap < 60	✓	✓	Auto (Cum)	Auto (Cum)
			60 ≤ Wgap < 80	✓	✓	Auto (Norm)	Auto (Cum)
			80 ≤ Wgap	✓	✓	Auto (Norm)	Auto (Norm)
	FR2	50, 100 MHz	Wgap < 50			Auto (Cum)	Auto
			50 ≤ Wgap < 100	✓		Auto (Cum)	Auto
			100 ≤ Wgap	✓		Auto (Norm)	Auto
		200, 400, 800, 1600, 2000 (**) MHz	Wgap < 200			Auto (Cum)	Auto
			200 ≤ Wgap < 400	✓		Auto (Cum)	Auto
			400 ≤ Wgap	✓		Auto (Norm)	Auto
Uplink	FR1	5, ..., 100 MHz	Wgap < Bandwidth			Norm	Norm
			Bandwidth ≤ Wgap	✓		Norm	Norm
	FR2	50, 100, 200 400 MHz	Wgap < Bandwidth			Norm	Norm
		100, 400, 800, 1600, 2000(**) MHz	Bandwidth ≤ Wgap	✓		Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Table 1b Offset Freq and Integ BW Offset A/B

Preset Configuration		Offset	Preset Value	
Direction	FR	Bandwidth	Offset Freq	Offset Integ BW (MHz)

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

(MHz)					
Downlink	FR1	5, ..., 20 MHz	A	2.5	4.50
			B	7.5	
		25, ..., 100 MHz	A	10	19.08
			B	30	
	FR2	50, 100 MHz	A	25	47.52
			B	75	
Uplink		200, 400, 800, 1600, 2000(**) MHz	A	100	190.08
			B	300	
	FR1	5, ..., 100 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
	FR2	50, 100, 200 400 MHz	A	= Bandwidth	$\max_{SCS}\{N_{RB}(BW_{CC}, FR, SCS) \times SCS \text{ [kHz]} \times N_{sc}^{RB} + SCS \text{ [kHz]}\}$
			B	= 2 x Bandwidth	
		100, 400, 800, 1600, 2000(**) MHz	B	= 2 x Bandwidth	

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17. Until the definition will be applied in Release 18 or later, put these selections to the same as FR2-1's.

Inner Limit Parameters (for the Inner Offset Preset Case 1):

- Downlink Absolute Limits:

Parameterfor Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Adjust Range(GHz)	BS Category		
Fail Mask					All	Abs AND Rel
Abs Limit	FR1	1-C	None,	Cat A WA BS	All	-13 + 10 LOG(

3.12 Phase and Amplitude vs Time Measurement

		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-15 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-25 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-32 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
	1-0	None,	Cat A WA BS	All	$-4 + 10 \text{ LOG}($
		$f \leq 1.0$,			$BW_{\text{config}})$ dBm
		$1.0 < f \leq 3.0$,	Cat B WA BS	All	$-6 + 10 \text{ LOG}($
		$3.0 < f \leq 4.2$,			$BW_{\text{config}})$ dBm
		$4.2 < f \leq 6.0$,	Cat A MR BS,	All	$-16 + 10 \text{ LOG}($
		$6.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		7.125	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-23 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
FR2	2-0	None,	Cat A WA BS,	All	$-10.3 + 10 \text{ LOG}($
		$24.25 < f \leq$	Cat B WA BS		$BW_{\text{config}})$ dBm
		29.5,	Cat A MR BS,	All	$-17.3 + 10 \text{ LOG}($
		$37.0 < f \leq$	Cat B MR BS,		$BW_{\text{config}})$ dBm
		43.5	Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		
			Cat A LA BS,	All	$-17.3 + 10 \text{ LOG}($
			Cat B LA BS		$BW_{\text{config}})$ dBm
		$43.5 < f \leq$	Cat A WA BS,	All	$-10.1 + 10 \text{ LOG}($
		48.2	Cat B WA BS		$BW_{\text{config}})$ dBm
			Cat A MR BS,	All	$-17.1 + 10 \text{ LOG}($
			Cat B MR BS,		$BW_{\text{config}})$ dBm
			Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)		

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

52.6 < f ≤ 71.0 (**)	Cat A LA BS, Cat B LA BS	All	-17.1 + 10 LOG(BW _{config}) dBm
	Cat A WA BS, Cat B WA BS	All	-7.7 + 10 LOG(BW _{config}) dBm
	Cat A MR BS, Cat B MR BS, Cat A MR BS (Low Pr), Cat B MR BS (Low Pr)	All	-14.7 + 10 LOG(BW _{config}) dBm
	Cat A LA BS, Cat B LA BS	All	-14.7 + 10 LOG(BW _{config}) dBm

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

– Downlink Relative Limits:

Parameter for Downlink	Preset Configuration				Offset	Preset Value
	FR	BS Type	Bandwidth	Adjust Range (GHz)		
Rel Limit (Car)	FR1	1-C	5, ..., 20 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44.2 dB (= -45 + TT 0.8)
			25, ..., 100 MHz	4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB (= -45 + TT 1.2)
		1-O	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)
	FR2	2-C	5, ..., 100 MHz	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2,	All	-44 dB = (-45 + TT 1.0)
				4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-43.8 dB = (-45 + TT 1.2)

FR2	2-O	50, 100, 200 400 MHz	None, $24.25 < f \leq 29.5$	All	8.2)
					-25.7 dB = (-28 + TT 2.3)
					-23.4 dB = (-26 + TT 2.6)
		100, 400, 800, 1600, 2000 (**) MHz	$43.5 < f \leq 48.2$	All	-23.2 dB = (-26 + TT 2.8)
			$52.6 < f \leq 71.0$	All	-18.8 dB = (-24 + TT 5.2)

(**) Non-Contiguous CA test case is not applicable to FR2-2 Bandwidths 800, 1600, 2000 MHz in Release 17.

BS type 1-C: TS38.141-1 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.6.3.5.2-2: Base station ACLR absolute basic limit and Table 6.6.3.5.2-6: Base station CACLR absolute basic limit
- Rel Limit: Table 6.6.3.5.2-3: Base station ACLR limit in non-contiguous spectrum or multiple bands, and Table 6.6.3.5.2-4: Base station CACLR limit

BS type 1-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.1-2: BS type 1-O ACLR absolute limit and Table 6.7.3.5.1-3a: BS type 1-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.1-2a: BS type 1-O ACLR limit in non-contiguous spectrum or multiple bands and Table 6.7.3.5.1-3: BS type 1-O CACLR limit

BS type 2-O: TS38.141-2 v.17.9.0 (v.2023-03):

- Abs Limit: Table 6.7.3.5.2-2: BS type 2-O ACLR absolute limit and Table 6.7.3.5.2-4a: BS type 2-O CACLR absolute limit
- Rel Limit: Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum and Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum
- Uplink Absolute/Relative Limits:

Parameter for Uplink	Preset Configuration				Preset Value
	FR	UE Power Class	Adjust Range (GHz)	Bandwidth	Offset

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Fail Mask				All	All	Abs AND Rel
Abs Limit	FR1		None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-50 dBm
	FR2		None, $24.25 < f \leq 29.5$, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-35 dBm
Rel Limit (Car)	FR1	Power Class 1	None, $f \leq 1.0$, $1.0 < f \leq 3.0$, $3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-36.2 dB (= - 37 + TT 0.8)
		Power Class 2	$3.0 < f \leq 4.2$, $4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-30.2 dB (= - 31 + TT 0.8)
		Power Class 3	$4.2 < f \leq 6.0$, $6.0 < f \leq 7.125$	All	All	-29.2 dB (= - 30 + TT 0.8) (*1)
	FR2	Power Class 1,2,3,4	None, $24.25 < f \leq 29.5$	50 MHz	All	-12.34 dB (= - 17 + TT 4.66)
				100, 200, 400 MHz	All	-12.04 dB (= - 17 + TT 4.96)
			$37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	All	All	-11.04 dB = (-16 + TT 4.96)

When UL Carrier Mode = Normal Uplink:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.1.5 Test requirement
- Rel Limit: Table 6.5.2.4.1.5-2 NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

FR2: TS38.521-2 v.17.0.0 (v.2022-09):

- Abs Limit: Clause 6.5.2.3.3 Minimum conformance requirements
- Rel Limit: Table 6.5.2.3.5-1 General requirements for NR_ACLR, and Table 6.5.2.3.5-1a Test Tolerance

Note: Table 6.5.2.3.5-1b Relaxation values are not taken into account in the firmware version ~A.30.xx

When UL Carrier Mode = Sidelink / V2X:

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5E.2.4.1.5 Test requirement
- Rel Limit: Table 6.5E.2.4.1.5-2 NR ACLR requirement and Table 6.5E.2.4.1.5-3 Test Tolerance

(*1) Note: TT for V2X test requirement has not been defined yet (TBD/FFS) in TS38.521-1 v.17.5.0. Keep the same TT values for normal Uplink.

Inner Offset Preset Case 2

When Frequency Range = FR1 with Assumed Adjacent Channels (ACLR) = “UTRA” or “NR + UTRA” for UL.

Inner Offset Parameters (for the Inner Offset Preset Case 2):

Parameter(all Uplink)	Preset Configuration		Offset	Preset Value
	Carrier Allocation	Assumed Adj Chan		
Offset Frequency State	Contiguous	UTRA,	All	Set to default values
		NR + UTRA		
	Non-Contiguous	UTRA	A, B	See "Table 2a Offset Freq State" on page 3355
			C, ... , L	Off
Offset Freq		NR + UTRA	A, B, C	See "Table 2a Offset Freq State" on page 3355
			D, ... , L	Off
			A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 3355

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Integ BW	D, ... , L	0 Hz
	A, B, C	See "Table 2b Offset Freq and Integ BW Offset A/B/C" on page 3355
Offset Side	D, ... , L	Same value as Offset C
	All	Both
Method and Filter Alpha	A, B	RRC Weighted, Filter Alpha = 0.22
	C, ... , L	Integration BW
Res BW State	All	Auto
Video BW State	All	Auto
Power Ref Type	All	See "Table 2a Offset Freq State" on page 3355

Table 2a Offset Freq State

Preset Configuration			Wgap(Sub-block gap) (MHz)	Preset Value			Power Ref Type (*)		
Direction	FR	Bandwidth		Offset Enabled			A	B	C
Uplink	FR1	5, ..., 100 MHz	Wgap < 5				Norm	Norm	Norm
			5 ≤ Wgap < 10	✓		(+)	Norm	Norm	Norm
			10 ≤ Wgap	✓	✓	(+)	Norm	Norm	Norm
			Wgap < Bandwidth	(++)	(++)		Norm	Norm	Norm
			Bandwidth ≤ Wgap	(++)	(++)	✓	Norm	Norm	Norm

(*) Power Ref Type: Cum = Cumulative, Norm= Normal

(+) Same as the rows of "Wgap < Bandwidth" and "Bandwidth ≤ Wgap".

(++) Same as the rows of "Wgap < 5", "5 ≤ Wgap < 10", and "5 ≤ Wgap".

Table 2b Offset Freq and Integ BW Offset A/B/C

Preset Configuration			Offset	Preset Value	
Direction	FR	Bandwidth		Offset Freq (MHz)	Offset Integ BW (MHz)
Uplink	FR1	5, ..., 100 MHz	A	2.5	3.84 MHz
			B	7.5	3.84 MHz
			C	= 0.5 x Bandwidth	$\max\{N_{RB}^{SCS}(BW_{CC,FR,SCS}) \times SCS [kHz] \times N_{sc}^{RB} + SCS [kHz]\}$

where:

Bandwidth: applied in the Configure Preset menu,

FR: Frequency Range, applied in the Configure Preset menu,

N_{RB} is referred to "Tables 5.3.2-1 and 5.3.2.2 (in 3GPP TS38.104 for Downlink, TS38.101-1 for Uplink FR1 and TS38.101-2 for Uplink FR2)" in "N_Grid_Size (Display Only)" on page 1828,

$$N_{sc}^{RB} = 12$$

Inner Limit Parameters (for the Inner Offset Preset Case 2):

Parameterfor Uplink	Preset Configuration		Offset	Preset Value	
	FR	Adjust Range(GHz)			UE Power Class
Fail Mask			All	Abs AND Rel	
Abs Limit	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	All	-50 dBm	
Rel Limit (Car)	FR1	None, f ≤ 1.0, 1.0 < f ≤ 3.0, 3.0 < f ≤ 4.2, 4.2 < f ≤ 6.0, 6.0 < f ≤ 7.125	Power Class 1	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-36.2 dB (= -37 + TT 0.8)
			Power Class 2	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-30.2 dB (= -31 + TT 0.8)
			Power Class 3	A	-32.2 dB (= -33 + TT 0.8)
				B	-35.2 dB (= -36 + TT 0.8)
				C, ..., L	-29.2 dB (= -30 + TT 0.8)

FR1: TS38.521-1 v.17.6.1 (v.2022-10):

- Abs Limit: Clause 6.5.2.4.2.5 Test requirement
- Rel Limit: Table 6.5.2.4.2.5-2 UTRA ACLR requirement, Table 6.5.2.4.1.5-2: NR ACLR requirement and Table 6.5.2.4.1.5-3 Test Tolerance (NR ACLR)

Note: Offsets C...F are OFF; the relative limit values are just derived from the UL E-UTRA limit values.

Spectrum Emission Mask

The following parameters are preset when Apply Preset is executed.

- "BW Parameter" on page 3357
- "Offset RAT" on page 3357

- "Carrier Parameters" on page 3357
- "Reference Parameter" on page 3358
- "Configure Component Carrier Parameter" on page 3358
- "Outer/Inner Offset Parameters" on page 3359
- "Other Offset/Limit Parameters" on page 3360

BW Parameter

When executing Apply Preset, preset the following parameter:

- BW > Settings Tab > RBW Filter Type: Gaussian

Offset RAT

Channel BW / 2 is used as Offset RAT.

Carrier Parameters

Res BW	
Preset Configuration	Preset Value
Bandwidth	RBW (kHz)
5 MHz	47
10 MHz	91
15 MHz	150
20 MHz	180
25 MHz	240
30 MHz	270
35 MHz	330
40 MHz	390
45 MHz	430
50 MHz	470
60 MHz	560
70 MHz	680
80 MHz	750
90 MHz	820
100 MHz	910

200 MHz	1800
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

RBW values in the table come from auto RBW values calculated in Swept SA when Bandwidth value is set to Span.

Note that the maximum set RBW value by the auto RBW setting is 3 MHz.

Channel Detector

Parameter	Preset Value
Channel Detector	Auto (Average)

Reference Parameter

Preset Configuration		Preset Value	
Direction	FR	Measurement Type	Power Ref
Downlink	FR1	Total Power Ref	L & R Carriers
	FR2	Total Power Ref	RF Bandwidth
Uplink	FR1	Total Power Ref	RF Bandwidth
	FR2	Total Power Ref	RF Bandwidth

Configure Component Carrier Parameter

Direction	Preset Configuration		SCS	Preset Value
	FR	Bandwidth		SEM Power Integration Bandwidth for all CC0...15
Downlink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	
Uplink	FR1	5, ..., 100 MHz	15, 30, 60 kHz	Same as Carrier Bandwidth
	FR2	50, 100, 200, 400 MHz	60, 120 kHz	
		100, 400, 800, 1600, 2000 MHz	120, 480, 960 kHz	

Outer/Inner Offset Parameters

Parameters common to all offsets in both downlink and uplink

Parameter	Preset Configuration		Inner/Outer	Preset Value
	Direction	FR		
Offset Detector			Both	Peak (Auto)
Offset Frequency Define	Downlink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	RFBW Edge-to-Center
			Inner	Subblock Edge-to-Center
	Uplink	FR1	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
		FR2	Outer	Edge-to-Center
			Inner	Subblock Edge-to-Center
Res BW Auto State			Both	Off
Video BW Auto State			Both	On
VBW/RBW Auto State			Both	Off
VBW/RBW			Both	0.01
Sweep Time Auto State			Both	On
Sweep Type Auto State			Both	On
Offset Side			Both	Both

Cumulate Mask (Inner Offset only)

Preset Configuration		Preset Value	
Direction	FR	Cumulate Mask	Cumulate Mask Stop Frequency
Downlink	FR1	On	10.5 MHz
	FR2	On	1.50 GHz
Uplink	FR1	Off	10.5 MHz
	FR2	Off	1.50 GHz

Other Offset/Limit Parameters

Downlink, FR1, BS type = 1-C:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			1			1	
D	✓	40			100			1			1	
E-L		100			500			1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3.0 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz & 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			1		1		
D	✓	40			100			1		1		
E-L		100			500			1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-13	-13	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.2-3: Wide Area BS operating band unwanted emission limits (NR bands > 3.0 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: f ≤ 1.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-16	-16	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-1: Wide Area BS operating band unwanted emission limits (NR bands below 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.5	-12.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.5	-12.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3.0 \text{ GHz}$) for Category B.

BS Category = Cat B WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			1		1	
D	✓	40			100			1		1	
E-L		100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-5.2	-12.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-12.2	-12.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-15	-15	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.3.1-3: Wide Area BS operating band unwanted emission limits (NR bands $> 3.0 \text{ GHz}$) for Category B.

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0 \text{ GHz}$ & $1.0 < f \leq 3.0 \text{ GHz}$

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.5	-58.5		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.5	-58.5	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-1: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	
B	✓	5.05			10.05			0.1		1	
C	✓	10.5			40			0.1		1	
D	✓	40			100			0.1		1	
E-L		100			500			0.1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-25	-25	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-25	-25	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-25	-25	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-3: Medium Range BS operating band unwanted emission limits, $31 < P_{\text{rated},x} \leq 38$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓	0.05			5.05			0.051		2	

3 5G NR Mode
3.12 Phase and Amplitude vs Time Measurement

B	✓		5.05		10.05		0.1		1
C	✓		10.5		40		0.1		1
D	✓		40		100		0.1		1
E-L			100		500		0.1		1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.5	-27.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.5	-27.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-2: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands ≤ 3.0 GHz).

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-20.2	-27.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-27.2	-27.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-29	-29	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 31$ dBm (NR bands > 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.5	-35.5		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.5	-35.5	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz & $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		0.1	1
D	✓	40		100		0.1	1
E-L		100		500		0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-28.2	-35.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-35.2	-35.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-37	-37	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-1 v.17.7.0 (v.2022-09) Table 6.6.4.5.5-2: Local Area BS operating band unwanted emission limits (NR bands > 3.0 GHz).

Downlink, FR1, BS type = 1-O:

When executing Apply Preset: "Show Abs2 Limit" = Off

All CC BW (5, ... , 100 MHz):

BS Category = Cat A WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
--------	---------	------------------	--	-----------------	--	-----------	---------

A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category A.

BS Category = Cat A WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			1		1	
D	✓		40			100			1		1	
E-L			100			500			1		1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-2: Wide Area BS operating band unwanted emission limits ($1 \text{ GHz} < \text{NR bands} \leq 3 \text{ GHz}$) for Category A.

BS Category = Cat A WA BS, Adjust Range: $3.0 < f \leq 4.2 \text{ GHz}$ & $4.2 < f \leq 6.0 \text{ GHz}$ & $6.0 < f \leq 7.125 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	1	1

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

D	✓	40			100			1			1	
E-L		100			500			1			1	
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-4	-4	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category A,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.1-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category A.

BS Category = Cat B WA BS, Adjust Range: $f \leq 1.0$ GHz

Offset	Enabled		Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW	
A	✓		0.05			5.05			0.051		2	
B	✓		5.05			10.05			0.1		1	
C	✓		10.5			40			0.1		1	
D	✓		40			100			0.1		1	
E-L			100			500			0.1		1	
Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-7	-7	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-1: Wide Area BS operating band unwanted emission limits (NR bands ≤ 1 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: None, and $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW
A	✓	0.05			5.05			0.051	2
B	✓	5.05			10.05			0.1	1
C	✓	10.5			40			1	1
D	✓	40			100			1	1
E-L		100			500			1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+3.8	-3.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3.2	-3.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-2: Wide Area BS operating band unwanted emission limits (1 GHz < NR bands ≤ 3 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		5.05		0.051	2
B	✓	5.05		10.05		0.1	1
C	✓	10.5		40		1	1
D	✓	40		100		1	1
E-L		100		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-3: Wide Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz) for Category B,

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-4: Wide Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz) for Category B.

BS Category = Cat B WA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)		Stop Freq (MHz)		RBW (MHz)	Meas BW
A	✓	0.05		50.05		0.051	2
B	✓	50.05		100.05		0.1	1
C	✓	100.5		200		1	1
D		200		500		1	1
E-L		200		500		1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
--------	---------	-----------	--	--	-----------	--	--	----------	------------	--	--	------------

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	+4	-3		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-3	-3	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-6	-6	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.2-5: Wide Area BS operating band unwanted emission limits (6 GHz < NR bands ≤ 7.125 GHz) for Category B

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51.2	-58.2		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58.2	-58.2	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-1: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (NR bands ≤ 3 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW
A	✓	0.05	5.05	0.051	2
B	✓	5.05	10.05	0.1	1
C	✓	10.5	40	0.1	1
D	✓	40	100	0.1	1
E-L		100	500	0.1	1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled

B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-2: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (3 GHz < NR bands \leq 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (4.2 GHz < NR bands \leq 6 GHz).

BS Category = Cat A MR BS or Cat B MR BS, Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			50.05			0.051			2
B	✓	50.05			100.05			0.1			1
C	✓	100.05			200			0.1			1
D		200			500			0.1			1
E-L		200			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-16	-16	✓	-51	-58		Rel	0	0	✓	Disabled
B	✓	-16	-16	✓	-58	-58	✓	Rel	0	0	✓	Disabled
C	✓	-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
D		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled
E-L		-16	-16	✓	-60	-60	✓	OR	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-3a: Medium Range BS operating band unwanted emission limits, $40 < P_{\text{rated,c,TRP}} \leq 47$ dBm (6.0 GHz < NR bands \leq 7.125 GHz),

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW
A	✓	0.05			5.05			0.051			2
B	✓	5.05			10.05			0.1			1
C	✓	10.5			40			0.1			1
D	✓	40			100			0.1			1
E-L		100			500			0.1			1

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

A	✓	-11.2	-18.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18.2	-18.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-4: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm (NR bands ≤ 3.0 GHz).

Note:

According to the Table 6.7.4.5.1.4-4 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11.2 thru -18.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB” in the Table 6.7.4.5.1.4-4 is a typo and is supposed to be “-11.2 dBm”. Thus, keeping the Offset A Limit -11.2 thru -18.2 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $3.0 < f \leq 4.2$ GHz & $4.2 < f \leq 6.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)		Meas BW		
A	✓	0.05			5.05			0.051		2		
B	✓	5.05			10.05			0.1		1		
C	✓	10.5			40			0.1		1		
D	✓	40			100			0.1		1		
E-L		100			500			0.1		1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-5: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($3 \text{ GHz} < \text{NR bands} \leq 4.2 \text{ GHz}$),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-6: Medium Range BS operating band unwanted emission limits, $P_{\text{rated},x} \leq 40$ dBm ($4.2 \text{ GHz} < \text{NR bands} \leq 6 \text{ GHz}$).

Note:

According to the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-11 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -11 thru -18 dB with the Fail Mask = Rel. However, it is suspected that the description “-11.2 dB”

in the Table 6.7.4.5.1.4-5 & 6.7.4.5.1.4-6 are typo and is supposed to be “-11 dBm”.
Thus, keeping the Offset A Limit -11 thru -18 dBm with the Fail Mask = Abs.

BS Category = Cat A MR BS (Low P_r) or Cat B MR BS (Low P_r), Adjust Range: $6.0 < f \leq 7.125$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			50.05			0.051			2		
B	✓	50.05			100.05			0.1			1		
C	✓	100.5			200			0.1			1		
D		200			500			0.1			1		
E-L		200			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-11	-18		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-18	-18	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-20	-20	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.4-7: Medium Range BS operating band unwanted emission limits, $P_{rated,x} \leq 40$ dBm ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125$ GHz).

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW		
A	✓	0.05			5.05			0.051			2		
B	✓	5.05			10.05			0.1			1		
C	✓	10.5			40			0.1			1		
D	✓	40			100			0.1			1		
E-L		100			500			0.1			1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19.2	-26.2		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26.2	-26.2	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-1: Local Area BS operating band unwanted emission limits (NR bands ≤ 3.0 GHz).

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Note:

According to the Table 6.7.4.5.1.5-1 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19.2 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19.2 thru -26.2 dB with the Fail Mask = Rel. However, it is suspected that the description “-19.2 dB” is typo and is supposed to be “-19.2 dBm”. Thus, keeping the Offset A Limit -19.2 thru -26.2 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 3.0 < f ≤ 4.2 GHz & 4.2 < f ≤ 6.0 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			5.05			0.051			2	
B	✓	5.05			10.05			0.1			1	
C	✓	10.5			40			0.1			1	
D	✓	40			100			0.1			1	
E-L		100			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-2: Local Area BS operating band unwanted emission limits (3 GHz < NR bands ≤ 4.2 GHz),

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-3: Local Area BS operating band unwanted emission limits (4.2 GHz < NR bands ≤ 6 GHz).

Note:

According to the Table 6.7.4.5.1.5-2 & 6.7.4.5.1.5-3 (v.17.7.0 (v.2022-09)), the limit requirement of the offset range from 0.05 to 5.05 MHz is described as “-19 dB – (7/5)*((f_offset / MHz) – 0.05) dB” which implies the Offset A Rel Limit -19 thru -26 dB with the Fail Mask = Rel. However, it is suspected that the description “-19 dB” is typo and is supposed to be “-19 dBm”. Thus, keeping the Offset A Limit -19 thru -26 dBm with the Fail Mask = Abs.

BS Category = Cat A LA BS or Cat B LA BS, Adjust Range: 6.0 < f ≤ 7.125 GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)			Meas BW	
A	✓	0.05			50.05			0.051			2	
B	✓	50.05			100.05			0.1			1	
C	✓	100.5			200			0.1			1	
D		200			500			0.1			1	
E-L		200			500			0.1			1	

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-19	-26		0	0	✓	Abs	0	0	✓	Disabled
B	✓	-26	-26	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
D		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		-28	-28	✓	0	0	✓	Abs	0	0	✓	Disabled

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.1.5-4: Local Area BS operating band unwanted emission limits ($6.0 \text{ GHz} < \text{NR bands} \leq 7.125 \text{ GHz}$).

Downlink, FR2, BS type = 2-O:

When executing Apply Preset: “Show Abs2 Limit” = On

All CC BW for FR2-1 (50, 100, 200, and 400 MHz)

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5 \text{ GHz}$

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			x + 0.5			1	1		
B	✓	x + 0.5			x + 1500			1	1		
C-L		100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-1: OBUE limits applicable in the frequency range $24.25 - 33.4 \text{ GHz}$

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $37.0 < f \leq 43.5 \text{ GHz}$

Offset	Enabled		Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
			(*)	(*)		
A	✓		0.5	x + 0.5	1	1
B	✓		x + 0.5	x + 1500	1	1
C-L			100	500	1	1

Offset	Enabled	Limit Abs	Limit Rel	FailMask	Limit Abs2	Fail
--------	---------	-----------	-----------	----------	------------	------

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

												Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$x + 1500$			1	1		
C-L		100			500			1	1		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.2-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: None, and $24.25 < f \leq 29.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)		
		(*)			(*)						
A	✓	0.5			$x + 0.5$			1	1		
B	✓	$x + 0.5$			$y + 0.5$			1	1		
C	✓	$y + 5$			$y + 1500$			5	2		
D-L		100			500			5	2		

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-32.3	-32.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-43	-43	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-33	-33	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-1: OBUE limits applicable in the frequency range 24.25 – 33.4 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $37.0 < f \leq 43.5$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.3	-9.3	✓	-30.3	-30.3	✓	AND	-2.3	-2.3	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-2: OBUE limits applicable in the frequency range 37 – 43.5 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $43.5 < f \leq 48.2$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x + 0.5$			1	1			
B	✓	$x + 0.5$			$y + 0.5$			1	1			
C	✓	$y + 5$			$y + 1500$			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-9.1	-9.1	✓	-30.1	-30.1	✓	AND	-2.1	-2.1	✓	OR
B	✓	-20	-20	✓	-41	-41	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-31	-31	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.7.0 (v.2022-09) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 43.5 – 48.2 GHz

All CC BW for FR2-2 (100, 400, 800, 1600, and 2000 MHz):

BS Category = Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			x + 1500			1	1			
C-L		100			500			1	1			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C-L		-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.2-4: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

BS Category = Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS,
Adjust Range: $52.6 < f \leq 71.0$ GHz

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			x + 0.5			1	1			
B	✓	x + 0.5			y + 0.5			1	1			
C	✓	y + 5			y + 1500			5	2			
D-L		100			500			5	2			

Offset	Enabled	Limit Abs			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	-6.7	-6.7	✓	-25.7	-25.7	✓	AND	0.3	0.3	✓	OR
B	✓	-20	-20	✓	-39.0	-39.0	✓	AND	-13	-13	✓	OR
C	✓	-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR
D-L		-10	-10	✓	-29.0	-29.0	✓	AND	-5	-5	✓	OR

TS38.141-2 v.17.9.0 (v.2023-03) Table 6.7.4.5.2.3-3: OBUE limits applicable in the frequency range 52.6 – 71.0 GHz

(*) Offset Start & Stop Freq (MHz):

- $x = 0.1 \cdot BW_{\text{contiguous}}$
- $y = 2 \cdot BW_{\text{contiguous}}$ (when $BW_{\text{contiguous}} \leq 500$ MHz),
- $y = BW_{\text{contiguous}} + 500$ MHz (otherwise).

where: $BW_{\text{contiguous}}$ equals to:

Number of CCs Carrier Allocation $BW_{\text{contiguous}}$

1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{Channel,CA}$: Aggregated BW
> 1	Non-contiguous	$BW_{Channel,block[n]}$: Subblock BW at each side

Uplink, FR1

When executing Apply Preset: “Show Abs2 Limit” = Off

Offset	Enabled	CC BW	Start Freq (MHz)	Stop Freq (MHz)	RBW (MHz)	Meas BW (Nx)
A	✓	5, ..., 40 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	(*)	2
		45 MHz:	$0.01 * BW_{Channel}/2$	$1 - (0.01 * BW_{Channel}/2)$	150 kHz (**)	3 (**)
		50, ..., 100 MHz:	0.015	0.985	0.015	2
B	✓	5, ..., 100 MHz:	1.5	4.5	0.51	2
C	✓	5 MHz:	5.5	5.5001	1	1
		10, ..., 100 MHz:	5.5	$BW_{Channel} - 0.5$	1	1
D	✓	5 MHz:	6.5	$BW_{Channel} + 4.5$	1	1
		10, ..., 100 MHz:	$BW_{Channel} + 0.5$	$BW_{Channel} + 4.5$	1	1
E-L		5, ..., 100 MHz:	$BW_{Channel} + 5.0$	500	1	1

Offset	Enabled	Limit Abs (***)			Limit Rel			FailMask	Limit Abs2			FailMask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
B	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
C	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
D	✓	(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled
E-L		(***)	(***)	✓	0	0	✓	Abs	0	0	✓	Disabled

Note that $BW_{Channel}$ is CC BW.

(*) RBW (kHz) for Offset A setting:

CC BW (MHz)	5	10	15	20	25	30	35	40
RBW (kHz)	24.0	51.0	75.0	100.0	130.0	150.0	180.0	200.0

Note:

In the 3GPP definition, $2 * RBW(A) = 0.01 * BW_{Channel}$ for 5, ..., 40 MHz CCs or 30 kHz for 50, ..., 100 MHz CCs, and $2 * RBW(B) = 1$ MHz for all CC BW.

Meanwhile, since X-series signal analyzers provides RBW in discrete line-up only, RBW(A) and RBW(B) are selected as in the table to follow the 3GPP requirement as close as possible.

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Better to choose RBW to make MeasBW equal or slightly wider than required, based on the “fail-safe design” policy: e.g. for 35 MHz CC BW, preferred to set RBW 180 kHz ($x2 > 350$ kHz) than 160 kHz ($x2 < 350$ kHz) so that measurement can wouldn't miss a bad DUT.

(**) RBW (kHz) for Offset A setting of the 45 MHz CC BW (in Release 17):

RBW = 150 kHz and MeasBW = 3 to get the 3GPP requirement 450 kHz.

(***) Absolute Limit (dBm) settings:

Offset	CC BW	Adjust Range: None, and $f \leq 1.0$ GHz & $1.0 < f \leq 3.0$ GHz	Adjust Range: $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, and $6.0 < f \leq 7.125$ GHz
A	5, ..., 45 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
	50, ..., 100 MHz:	-22.5 dBm = -24 + TT 1.5	-22.2 dBm = -24 + TT 1.8
B	5, ..., 100 MHz:	-8.5 dBm = -10 + TT 1.5	-8.2 dBm = -10 + TT 1.8
C	5, ..., 100 MHz:	-11.5 dBm = -13 + TT 1.5	-11.2 dBm = -13 + TT 1.8
D	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8
E-L	5, ..., 100 MHz:	-23.5 dBm = -25 + TT 1.5	-23.2 dBm = -25 + TT 1.8

Note that TT values for V2X test requirement have not been defined yet (TBD/FFS) in TS38.521-1 v.17.7.0. Keep the same TT values for Uplink.

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.2.2.5-1: General NR spectrum emission mask and Table 6.5.2.2.5-2: Test Tolerance (Spectrum Emission Mask)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5E.2.2.1.5-1: General NR spectrum emission mask for V2X / non-concurrent operation and Table 6.5E.2.2.1.5-2: Test Tolerance

Uplink, FR2

When executing Apply Preset: “Show Abs2 Limit” = Off

All CC BW (50, 100, 200, 400, 800, 1600, and 2000 MHz):

Offset	Enabled	Start Freq (MHz)			Stop Freq (MHz)			RBW (MHz)	Meas BW (Nx)			
		(*)			(*)							
A	✓	0.5			$x - 0.5$			0.51	2			
B	✓	$x + 0.5$			$y - 0.5$			1	1			
C		$y + 0.5$			$y + 100$			1	1			
D-L		100			500			1	1			

Offset	Enabled	Limit Abs (**)			Limit Rel			FailMask	Limit Abs2			Fail Mask2
		Start (dBm)	Stop (dBm)	Coupling	Start (dB)	Stop (dB)	Coupling		Start (dBm)	Stop (dBm)	Coupling	
A	✓	ALim	ALim	✓	0	0	✓	ABS	0	0	✓	Disabled

B	✓	BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
C		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled
D-L		BLim	BLim	✓	0	0	✓	ABS	0	0	✓	Disabled

(*) Offset Start & Stop Freq (MHz):

$$- x = 0.1 \cdot BW_{\text{Channel,CA}}$$

$$- y = 2 \cdot BW_{\text{Channel,CA}}$$

where: $BW_{\text{Channel,CA}}$ equals to:

Number of CCs	Carrier Allocation	$BW_{\text{contiguous}}$
1	n/a	BW_{CC} : CC Bandwidth
> 1	Contiguous	$BW_{\text{Channel,CA}}$: Aggregated BW
> 1	Non-contiguous	$BW_{\text{Channel,block}[n]}$: Subblock BW at each side

(**) Limit ABS:

Adjust Limit Mask for Freq Range				
	None, and $24.25 < f \leq 29.5$ GHz	$37.0 < f \leq 43.5$ GHz	$43.5 < f \leq 48.2$ GHz	$52.6 < f \leq 71.0$ GHz
A_{Lim}	-1.79 dBm = -5 + TT 3.21	-1.54 dBm = -5 + TT 3.46	TBD	TBD
B_{Lim}	-9.79 dBm = -13 + TT 3.21	-9.54 dBm = -13 + TT 3.46	TBD	TBD

TS38.521-2 v.17.0.0 (v.2022-09):

- Single CC:
 - Table 6.5.2.1.5-1: General NR spectrum emission mask for Range 2 and Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
 - Table 6.5.2.1.5-1a: Test Tolerance (Spectrum emission mask)
- Contiguous CA:
 - Table 6.5A.2.1.1.5-1: General NR spectrum emission mask for intra-band contiguous CA in frequency range 2
 - Table 6.5A.2.1.1.5-1a: Test Tolerance (Aggregated BW ≤ 400 MHz)
 - 3 thru 8 CA cases are equivalent to the tables for 2 CA case here.

Spurious Emissions

The parameters in the Range Table in Meas Setup > Settings are preset when Apply Preset is executed. See the following sections.

"Downlink, FR1 (BS type = 1-C & 1-O)" on page 3381

"Downlink, FR2 (BS type = 2-O)" on page 3383

"Uplink, FR1" on page 3386

"Uplink, FR2" on page 3388

Downlink, FR1 (BS type = 1-C & 1-O)

– Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9 kHz	150 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	150 kHz	30 MHz		-	10 kHz	1	47 kHz	Gaussian
3	(*)	30 MHz	1 GHz		Start Freq	100 kHz	1	470 kHz	Gaussian
4	(*)	1 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
8~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off

4	(*)	1 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1	(*)	9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2	(*)	150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	(*)	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)
4	(*)	1 GHz	12.75 GHz	(**)	Auto	(no preset)	(no preset)
5	(*)	12.75 GHz	15 GHz	(**)	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	21 GHz	(**)	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	30 GHz	(**)	Auto	(no preset)	(no preset)
8~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state and (**) “Abs Start Limit” value presets:

#	BS Type	(*) Range “Enabled” state Adjust Limit Mask for Freq Range (GHz)				(**) Abs Start Limit value BS Category	
		$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	All “Cat A” BS	All “Cat B” BS

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

1	1-C	✓	✓	✓	✓	-13 dBm	-36 dBm
2		✓	✓	✓	✓	-13 dBm	-36 dBm
3		✓	✓	✓	✓	-13 dBm	-36 dBm
4		✓	✓	✓	✓	-13 dBm	-30 dBm
5			✓			-13 dBm	-30 dBm
6				✓		-13 dBm	-30 dBm
7					✓	-13 dBm	-30 dBm
8~						(no preset)	(no preset)
1	1-O					-4 dBm	-27 dBm
2						-4 dBm	-27 dBm
3		✓	✓	✓	✓	-4 dBm	-27 dBm
4		✓	✓	✓	✓	-4 dBm	-21 dBm
5			✓			-4 dBm	-21 dBm
6				✓		-4 dBm	-21 dBm
7					✓	-4 dBm	-21 dBm
8~						(no preset)	(no preset)

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

BS type 1-C: TS38.141-1 v.17.7.0 (v.2022-09):

- Table 6.6.5.5.1.1-1: General BS transmitter spurious emission limits in FR1, Category A
- Table 6.6.5.5.1.1-2: General BS transmitter spurious emission limits in FR1, Category B

BS type 1-O: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.1-1: General OTA BS transmitter spurious emission limits for BS type 1-O, Category A
- Table 6.7.5.2.5.1-2: General OTA BS transmitter spurious emission limits for BS type 1-O, Category B

Downlink, FR2 (BS type = 2-O)

- Bandwidth table:

3.12 Phase and Amplitude vs Time Measurement

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1		9 kHz	150 kHz	Start Freq	Stop	(*)	(*)	(*)	Gaussian
2		150 kHz	30 MHz	+	Freq	(*)	(*)	(*)	Gaussian
3	✓	30 MHz	1 GHz	Span/2	-	(*)	(*)	(*)	Gaussian
4	✓	1 GHz	18 GHz		Start Freq	(*)	(*)	(*)	Gaussian
5~10	✓	18 GHz	60 GHz			(*)	(*)	(*)	Gaussian
11~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

(empty cell means “disabled”)

– Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9 kHz	150 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		150 kHz	30 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	✓	30 MHz	1 GHz	Auto	(no preset)	Auto	Auto	Average	Off
4	✓	1 GHz	18 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
5~10	✓	18 GHz	60 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1		9 kHz	150 kHz	(**)	Auto	(no preset)	(no preset)
2		150 kHz	30 MHz	(**)	Auto	(no preset)	(no preset)
3	✓	30 MHz	1 GHz	(**)	Auto	(no preset)	(no preset)

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

4	✓	1 GHz	18 GHz	(**)	Auto	(no preset)	(no preset)
5~10	✓	18 GHz	60 GHz	(**)	Auto	(no preset)	(no preset)
11~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “RBW x MeasBW, VBW”, and (**) “Abs Start Limit” value presets:

#	BS Type	BS Category							
		All “Cat A” BS				All “Cat B” BS			
		(*)RBW	(*)Meas BW	(*)VBW	(**) Abs Start Limit	(*)RBW	(*) Meas BW	(*) VBW	(**) Abs Start Limit
1	2-0	1 kHz	1	4.7 kHz	-13 dBm	1 kHz	1	4.7 kHz	-36 dBm
2		10 kHz	1	47 kHz	-13 dBm	10 kHz	1	47 kHz	-36 dBm
3		100 kHz	1	470 kHz	-13 dBm	100 kHz	1	470 kHz	-36 dBm
4		1 MHz	1	5 MHz	-13 dBm	1 MHz	1	5 MHz	-30 dBm
5~10		1 MHz	1	5 MHz	-13 dBm	5 MHz	2	50 MHz	-20 dBm
11~		(no preset)				(no preset)			

BS Category = “All Cat A BS”: Cat A WA BS, Cat A MR BS, Cat A MR BS (Low P_r), Cat A LA BS,

BS Category = “All Cat B BS”: Cat B WA BS, Cat B MR BS, Cat B MR BS (Low P_r), Cat B LA BS

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5 GHz model clip Start & Stop freq values to “27 GHz”)

BS type 2-0: TS38.141-2 v.17.7.0 (v.2022-09):

- Table 6.7.5.2.5.2.2-1: General OTA BS transmitter spurious emission limits for BS type 2-0, Category A
- Table 6.7.5.2.5.2.3-1: BS radiated Tx spurious emission limits in FR2 (Category B)

Note: The following table for FR2 Cat B BS is not preset by executing the “Apply Preset” button:

- Table 6.7.5.2.5.2.3-2: Step frequencies for defining the BS radiated Tx spurious emission limits in FR2 (Category B)

Uplink, FR1

- Bandwidth table:

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	Filter Type
1	(*)	9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2	(*)	155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3	(*)	30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
5	(*)	1.0005 GHz	12.75 GHz			1 MHz	1	5 MHz	Gaussian
6	(*)	12.75 GHz	15 GHz			1 MHz	1	5 MHz	Gaussian
7	(*)	12.75 GHz	21 GHz			1 MHz	1	5 MHz	Gaussian
8	(*)	12.75 GHz	30 GHz			1 MHz	1	5 MHz	Gaussian
9	(*)	12.75 GHz	26 GHz			1 MHz	1	5 MHz	Gaussian
10~	(*)	(no preset)	(no preset)			(no preset)	(no preset)	(no preset)	(no preset)

- Filter/Atten & Detector/Sweep tables:

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1	(*)	9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2	(*)	155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3	(*)	30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto ⁽⁺⁾	Average	Off

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

5	(*)	1.0005 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
6	(*)	12.75 GHz	15 GHz	Auto	(no preset)	Auto	Auto	Average	Off
7	(*)	12.75 GHz	21 GHz	Auto	(no preset)	Auto	Auto	Average	Off
8	(*)	12.75 GHz	30 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9	(*)	12.75 GHz	26 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	Peak Excursion	Peak Threshold
1	(*)	9.05 kHz	149.5 kHz	-36 dBm	Auto	(no preset)	(no preset)
2	(*)	155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)	(no preset)
3	(*)	30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)	(no preset)
4	(*)	1.0005 GHz	12.75 GHz	-30 dBm	Auto	(no preset)	(no preset)
5	(*)	1.0005 GHz	12.75 GHz	-25 dBm	Auto	(no preset)	(no preset)
6	(*)	12.75 GHz	15 GHz	-30 dBm	Auto	(no preset)	(no preset)
7	(*)	12.75 GHz	21 GHz	-30 dBm	Auto	(no preset)	(no preset)
8	(*)	12.75 GHz	30 GHz	-30 dBm	Auto	(no preset)	(no preset)
9	(*)	12.75 GHz	26 GHz	-30 dBm	Auto	(no preset)	(no preset)
10~	(*)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Where: Each range (*) “Enabled” state preset:

(*) Range “Enabled” state					Note:
#	Adjust Limit Mask for Freq Range (GHz)				
	$f \leq 1.0$	$1.0 < f \leq 3.0$	$3.0 < f \leq 4.2$	$4.2 < f \leq 6.0$	
1	✓	✓	✓	✓	
2	✓	✓	✓	✓	
3	✓	✓	✓	✓	
4	✓	✓	✓	✓	
5					Never “enabled” by the “Apply Preset” button A placeholder for the Band n41. (NOTE3 in Table 6.5.3.1.5-1, TS38.521-1)
6		✓			
7			✓		
8				✓	
9					Never “enabled” by the “Apply Preset” button A placeholder for the Bands which upper frequency edge of the UL Band is more than 5.2 GHz. (NOTE 2 in Table 6.5.3.1.5-1, TS38.521-1)
10~					

(empty cell means “disabled”)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-1 v.17.6.1 (v.2022-10) Table 6.5.3.1.5-1: General spurious emissions test requirements

Uplink, FR2

– Bandwidth table

#	Enabled	Start Freq	Stop Freq	CenterFreq	Span	RBW	Meas BW(x RBW)	VBW	FilterType
1		9.05 kHz	149.5 kHz	Start Freq + Span/2	Stop Freq	1 kHz	1	4.7 kHz	Gaussian
2		155 kHz	29.995 MHz		- Start Freq	10 kHz	1	47 kHz	Gaussian
3		30.05 MHz	999.95 MHz			100 kHz	1	470 kHz	Gaussian
4		1.0005	6 GHz			1 MHz	1	5 MHz	Gaussian

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

		GHz						
5	✓	6 GHz	12.75 GHz			1 MHz	1	5 MHz Gaussian
6	✓	12.75 GHz	23.45 GHz			1 MHz	1	5 MHz Gaussian
7	✓	23.45 GHz	40.8 GHz			1 MHz	1	5 MHz Gaussian
8	✓	40.8 GHz	66 GHz			1 MHz	1	5 MHz Gaussian
9~		(no preset)	(no preset)			(no preset)	(no preset)	(no preset)

– Filter/Atten & Detector/Sweep tables

#	Enabled	Start Freq	Stop Freq	Atten	IF Gain	Sweep Time	Points	Detector 1	Detector 2
1		9.05 kHz	149.5 kHz	Auto	(no preset)	Auto	Auto	Average	Off
2		155 kHz	29.995 MHz	Auto	(no preset)	Auto	Auto	Average	Off
3		30.05 MHz	999.95 MHz	Auto	(no preset)	Auto	Auto	Average	Off
4		1.0005 GHz	6 GHz	Auto	(no preset)	Auto	Auto	Average	Off
5	✓	6 GHz	12.75 GHz	Auto	(no preset)	Auto	Auto	Average	Off
6	✓	12.75 GHz	23.45 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
7	✓	23.45 GHz	40.8 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
8	✓	40.8 GHz	66 GHz	Auto	(no preset)	Auto	Auto(+)	Average	Off
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

(+) Since the # of points calculation result by “Auto” with the equation “Points = Span / (RBW/2)” is exceeded the maximum setting limit 20,001 points, the set value is eventually clipped to 20,001.

– Limits table:

#	Enabled	Start Freq	Stop Freq	Abs Start Limit	Abs Stop Limit	PeakExcursion	Peak Threshold
1		9.05 kHz	149.5 kHz	-36 dBm	Auto	(no	(no

					preset)	preset)
2		155 kHz	29.995 MHz	-36 dBm	Auto	(no preset)
3		30.05 MHz	999.95 MHz	-36 dBm	Auto	(no preset)
4		1.0005 GHz	6 GHz	-30 dBm	Auto	(no preset)
5	✓	6 GHz	12.75 GHz	-30 dBm	Auto	(no preset)
6	✓	12.75 GHz	23.45 GHz	-13 dBm	Auto	(no preset)
7	✓	23.45 GHz	40.8 GHz	-13 dBm	Auto	(no preset)
8	✓	40.8 GHz	66 GHz	-13 dBm	Auto	(no preset)
9~		(no preset)	(no preset)	(no preset)	(no preset)	(no preset)

Note: Start & Stop freq values may be clipped depending on the maximum available frequency range which hardware supports. (e.g. 26.5GHz model clip Start & Stop freq values to “27 GHz”)

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.5.3.1.5-1: Spurious emissions test requirements:

- Table 6.5.3.1.3-2: Spurious emissions limits (in 6.5.3.1.3 Minimum conformance requirements),
- Table 6.5.3.1.4.2-1: Typical offset values for coarse TRP measurement step 7(a) ... but still TBD.

Modulation Analysis

The following parameters are preset when Apply Preset is executed.

- "Configure Component Carriers|Channel Profile: Resource Grid" on page 3391
- "Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values" on page 3392
- "Advanced: Advanced Demod Setup" on page 3393

Note: CC channel configuration (including CC BW, FR, SCS) and Resource Block allocation map & settings are preset by recalling each scp (Signal Studio/PWSG, prepared internally) file accordingly, based on the “RB Alloc Preset” selection.

Configure Component Carriers|Channel Profile: Resource Grid

When presetting Freq Range and Bandwidth, the resource grid is reset to its default values per SCS accordingly. Also the resource grid config mode is reset to its default value: Manual.

- Transmission bandwidth configuration N_{RB} for FR1:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.104 v.17.7.0 (v.2022-09) Tables 5.3.2-1: Transmission bandwidth configuration N_{RB} for FR1 (Downlink for BTS).

TS38.101-1 or TS38.521-1 v.17.6.1 (v.2022-10) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR1 (Uplink for UE).

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” != “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- Transmission bandwidth configuration N_{RB} for FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “52.6 < f ≤ 71.0 GHz (FR2)” :

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.104 v.17.7.0 (v.2022-09):

- Table 5.3.2-2: Transmission bandwidth configuration N_{RB} for FR2-1 (Downlink for BTS).
- Table 5.3.2-3: Transmission bandwidth configuration N_{RB} for FR2-2 (Downlink for BTS).

TS38.101-2 or TS38.521-2 v.17.0.0 (v.2022-09) Table 5.3.2-1: Maximum transmission bandwidth configuration N_{RB} for FR2 (Uplink for UE).

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Meas Time: Meas Time parameter values

Meas Time parameters are preset to the following values when Apply Preset is executed, depending on Frequency Range, Adjust Meas Time Length for TM (Test Model), Duplex Mode, and RB Alloc Preset.

When Duplex Mode = TDD, and RB Alloc Preset = any DL NR-TMx.x:

- When Adjust Meas Time Length for TM = None: no preset for Meas Time parameters
- When Adjust Meas Time Length for TM = Frame or 3GPP: Refer to "Adjust Meas Time Length for TM" on page 3321

Channel Profile: PDSCH & PUSCH Resource Allocation: RB Number values

When presetting Freq Range, Bandwidth, SCS and the OFDM Type, the RB Offset values are preset to 0 RBs, and the RB Number values are preset to the following values.

- N_{RB} values for FR1 Downlink and Uplink, when the OFDM Type = CP-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	52	79	106	133	160	188	216	242	270	n/a	n/a	n/a	n/a	n/a
30	11	24	38	51	65	78	92	106	119	133	162	189	217	245	273
60	n/a	11	18	24	31	38	44	51	58	65	79	93	107	121	135

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common uplink configuration

- N_{RB} values for FR1 Uplink (only), when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	5MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	35 MHz	40 MHz	45 MHz	50 MHz	60 MHz	70 MHz	80 MHz	90 MHz	100 MHz
	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}	N _{RB}
15	25	50	75	100	128	160	180	216	240	270	n/a	n/a	n/a	n/a	n/a
30	10	24	36	50	64	75	90	100	108	128	162	180	216	243	270
60	n/a	10	18	24	30	36	40	50	54	64	75	90	100	120	135

- N_{RB} values for Downlink and Uplink FR2 (FR2-1) with "Adjust Limit Mask for Freq Range" != "52.6 < f ≤ 71.0 GHz", when the OFDM Type = CP-OFDM:

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	n/a
120	32	66	132	264
240(*)	16	32	66	132

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = CP-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	66	264	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

- N_{RB} values for Uplink (only) FR2 (FR2-1) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	64	128	256	n/a
120	32	64	128	256
240(*)	16	32	64	128

- N_{RB} values for Downlink and Uplink FR2 (FR2-2) with “Adjust Limit Mask for Freq Range” = “ $52.6 < f \leq 71.0$ GHz”, when the OFDM Type = DFT-s-OFDM:

SCS (kHz)	100 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
120	64	256	n/a	n/a	n/a
480	n/a	66	124	248	n/a
960	n/a	33	62	124	148

TS38.521-1 v.17.7.0 (v.2022-12) Table 6.1-1: Common Uplink Configuration.

TS38.521-2 v.17.0.0 (v.2022-09) Table 6.1-1: Common Uplink Configuration for PC3.

(*) Either TS38.104 or TS38.101-2 does not define SCS 240 kHz case. The max N_{RB} values are assumed half of SCS 120 kHz cases, respectively.

Note: No definition for the N_{RB} values for the new Release 17 FR2-2 SCS (480k, 960k) & Carrier BW (800, 1600, 2000 MHz).

Advanced: Advanced Demod Setup

- Direction = Downlink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	DL NR-TMx.x	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)			On

– Direction = Uplink

Submenu	Parameter	Preset Configuration		Preset Value
		RB Alloc	FR	
General	DC Punctured	n/a	FR1,2	Off
	Report EVM in dB			Off
	Symbol Clock Error Compensation			Off
	IQ Imbalance Compensation			Off
EVM	3GPP Conformance Test (*1)	n/a		On
UL Flatness	Test Tolerance	n/a	FR1	1.4 dB
			FR2	n/a (*2)
UL IBE	UE Power Class	n/a	FR1	Same value as in Advanced Preset menu (grayed out)
			FR2	Same value as in Advanced Preset menu
	Test Tolerance		FR1	0.8 dB
			FR2	n/a (*2)
UL IBE Limit Threshold to	IBE Limit Threshold from P_RB	n/a	FR1	-30.00 dB
			FR2	-25.00 dB

(*1) 3GPP Conformance Test = ON parameter presets the parameters under the “EVM” tab in the Advanced Demod Setup dialog menu. For details, see **3GPP Conformance Test** in the Modulation Analysis Measurement section.

Note: “IQ Offset Compensation” parameter location will be moved to the “EVM” from the “General” submenu, and it is added to the controlled list of “3GPP Conformance Test = ON”, with “Off” when Downlink, and with “On” when Uplink.

(*2) UL Spectrum Flatness & IBE “Test Tolerance” value is not preset when FR2 is selected because FR2 Test Tolerance value definition is still FFS in TS38.521-2

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

v.16.7.0 (v.2021-03), clauses 6.4.2.3 (IBE), 6.4.2.4 (Flatness), and 6.4.2.5 (Flatness for $\pi/2$ BPSK).

Uplink FR1 Flatness and IBE Test Tolerance values in TS38.521-1 v.17.6.1 (v.2022-10):

- IBE: Table 6.4.2.3.5-1 Test requirements for in-band emissions
- Flatness:
 - Table 6.4.2.4.5-1 Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.4.5-2 Requirements for EVM equalizer spectrum flatness (extreme conditions),
 - Table 6.4.2.5.5-1 Mask for EVM equalizer coefficients for $\pi/2$ BPSK, normal conditions

Uplink FR2 Flatness and IBE Test Tolerance values in TS38.521-2 v.17.0.0 (v.2022-09):

- IBE: all FFS
 - Table 6.4.2.3.5-1: Test requirements for in-band emissions for power class 1,
 - Table 6.4.2.3.5-2: Test requirements for in-band emissions for power class 2,
 - Table 6.4.2.3.5-3: Requirements for in-band emissions for power class 3,
 - Table 6.4.2.3.5-4: Test requirements for in-band emissions for power class 4
- Flatness: all FFS
 - Table 6.4.2.4.5-1: Test Requirements for EVM equalizer spectrum flatness (normal conditions),
 - Table 6.4.2.5.5-1: Test requirement for EVM equalizer coefficients for $\pi/2$ BPSK (normal conditions)

Transmit On|Off Power

The following parameters are preset when Apply Preset is executed.

- "Meas Setup: Meas Time parameters for Downlink" on page 3396
- "Meas Setup: Meas Time parameters for Uplink" on page 3396
- "Meas Setup: Other Setting parameters" on page 3399

- "Meas Setup: Limit Parameters" on page 3400
- "Other parameters" on page 3406

Meas Setup: Meas Time parameters for Downlink

Preset Configuration				Preset Value	
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Meas Offset	Meas Interval
NR-TMx.x	FR1	TDD	TS38.141-1	0 subframe	5 subframes
			TS37.141 BC3 CS16/17	4 subframes	5 subframes
			n/a	0 subframe	2 subframes
Fulfilled-xx / NR-TMx.x	FR1 /FR2	User Defined	n/a	0 subframe	Minimum subframes that can contain Transmission Periodicity

Preset Configuration				Preset Value		
RB Alloc	FR	Duplex	DL FR1 TDD NR-TM Ref Standard	Burst Time [ms]	Burst Repetition Period [ms] (*)	UL Off Power Length [ms]
NR-TMx.x	FR1	TDD	TS38.141-1	3.7143	5.000	n/a
			TS37.141 BC3 CS16/17	2.7143	5.000	n/a
			n/a	0.9286	1.250	n/a
Fulfilled-xx / NR-TMx.x	RF1/RF2	User Defined	n/a	Time duration of downlink slots and symbols	Transmission periodicity	n/a

(*) Burst Repetition Period for Downlink comes from NR-TM DL-UL-Periodicity: 5 ms for FR1 and 1.25 ms for FR2.

Meas Setup: Meas Time parameters for Uplink

Preset Configuration					Preset Value	
RB Alloc	FR	Duplex	UL Channel Type	SCS (PUSCH)	Meas Offset	Meas Interval

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

Fulfilled-xx	FR1	FDD, TDD	PUSCH		-1 slot	3 slots	
			SRS		-1 slot	3 slots	
		FDD	PRACH Config Index 4	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 160 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 160 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
		TDD	PRACH Config Index 12	SCS 15 kHz	-1 slot	3 slots	(*1)
				SCS 30 kHz	-2 slots	6 slots	
				SCS 60 kHz	-4 slots	12 slots	
			PRACH Config Index 123 (15 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*2)
				SCS 30 kHz	-1 slot	3 slots	
				SCS 60 kHz	-2 slots	6 slots	
			PRACH Config Index 123 (30 kHz SCS)	SCS 15 kHz	-1 slot	2 slots	(*3)
				SCS 30 kHz	-1 slot	2 slots	
				SCS 60 kHz	-1 slot	3 slots	
	FR2	TDD	PUSCH		-1 slot	3 slots	
			PRACH Config Index 0 (60 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*4)
				SCS 120 kHz	-1 slot	2 slots	
			PRACH Config Index 0 (120 kHz SCS)	SCS 60 kHz	-1 slot	2 slots	(*5)
				SCS 120 kHz	-1 slot	2 slots	
			SRS		-1 slot	3 slots (TBD)	

Preset Configuration

Preset Value

RB Alloc	FR	Duplex	UL Channel Type	Burst Time [ms]	Burst RepetitionPeriod [ms] (*6)	UL Off Power Length [ms]	
Fulfilled-xx	FR1	FDD, TDD	PUSCH	2 ^{-m}	10.0 (15 kHz SCS), 5.0 (30, 60 k SCS)	2 ^{-m}	
			SRS	0.0714	10.0	2 ^{-m}	
		FDD	PRACH Config Index 4	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 160 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 160 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (15k SCS)	0.2141	10.0	0.2141	(*3)
		TDD	PRACH Config Index 12	0.9031	10.0	0.9031	(*1)
			PRACH Config Index 123 (15k SCS)	0.4281	10.0	0.4281	(*2)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
			PRACH Config Index 123 (30k SCS)	0.2141	10.0	0.2141	(*3)
	FR2	TDD	PUSCH	2 ^{-m}	10.0	2 ^{-m}	
			PRACH Config Index 0 (60 k SCS)	0.0357	10.0	0.0357	(*4)
			PRACH Config Index 0 (120 k SCS)	0.0178	10.0	0.0178	(*5)
			SRS	2 ^{-m} (TBD)	10.0	2 ^{-m}	

Notes:

UL Meas Offset preset for PRACH = $-\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

UL Meas Interval preset for PRACH = $\left\lceil \frac{\text{PRACH_ON_period}}{2^{-\mu}} \right\rceil + \left\lceil \frac{2 \times \text{PRACH_ON_period}}{2^{-\mu}} \right\rceil$ slots,

where:

$2^{-\mu}$ [ms]: UL slot length with $\mu = 0, 1, 2$, or 3 for SCS (PUSCH) 15 kHz, 30 kHz, 60 kHz, or 120 kHz, respectively,

PRACH_ON_period [ms], which values are:

(*1) 0.903125 ms for FR1 PRACH Config Index 4 for FDD and 12 for TDD which Preamble Format is 0,

(*2) 0.428125 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 15 kHz SCS) which Preamble Format is A3 (15 kHz SCS),

(*3) 0.2140625 ms for FR1 PRACH Config Index 160 for FDD and 123 for TDD (both 30 kHz SCS) which Preamble Format is A3 (30 kHz SCS),

(*4) 0.035677 ms for FR2 PRACH Config Index 0 (60 kHz SCS) which Preamble Format is A1 (60 kHz SCS), and

(*5) 0.017839 ms for FR2 PRACH Config Index 0 (120 kHz SCS) which Preamble Format is A1 (120 kHz SCS).

(*6) Burst Repetition Period for Uplink:

- FR1 PUSCH: “dl-UL-TransmissionPeriodicity” in Table 6.3.3.2.4.3-3 TDD-UL-DL-Config in TS38.521-1.
- FR1 PRACH: Not clear but “ssb-PeriodicityServingCell” = ms20 (20 ms)? in Table 6.3.3.4.4.3-3 ServingCellConfigCommonSIB in TS38.521-1, safer to set the maximum value 10 ms.
- FR1 SRS: Not clear but “repetitionFactor” = n1? in Table 6.3.3.6.4.3-1 SRS-Config: SRS time mask measurement in TS38.521-1, safer to set the maximum value 10ms.
- FR2 PUSCH: Not clear, safer to set the maximum value 10 ms.
- FR2 PRACH: Not clear, safer to set the maximum value 10 ms.
- FR2 SRS: FFS, safer to set the maximum value 10 ms.

Meas Setup: Other Setting parameters

Direction	Parameter	Preset Configuration	Preset Value
Downlink	Auto Timing Adjust	(any)	Off
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS
Uplink	Auto Timing Adjust	(any)	On
	SCS(*)	SCS $\mu = 0, 1, 2, 3, 5$, or 6	Same SCS

(*) Sub Carrier Spacing (SCS) setting determines the following internal parameters:

- Downlink: “N” factor for $70/N \mu s$ RMS averaging window for making the OFF power. $N = SCS/15$, where SCS is in kHz.
- Uplink: Slot length = $2 \cdot \mu$ msec, where $\mu = 0, 1, 2, 3, 5$ or 6 for SCS 15 kHz, 30 kHz, 60 kHz, 120 kHz, 480 kHz, or 960 kHz, respectively.

Meas Setup: Limit Parameters

- Direction = Downlink:

Parameter	Preset Configuration		Adjust Range (GHz)	Preset Value
	FR	BS type		
Max Ramp Down Time, Max Ramp Up Time	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Transient Period	FR1	1-C, 1-0	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz, $3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz, $6.0 < f \leq 7.125$ GHz	10.0 us
	FR2	2-0	None, $24.25 < f \leq 29.5$ GHz, $37.0 < f \leq 43.5$, $43.5 < f \leq 48.2$, $52.6 < f \leq 71.0$	3.0 us
DL Off Power	FR1	1-C	None, $f \leq 1.0$ GHz, $1.0 < f \leq 3.0$ GHz	-83 dBm / MHz = -85 + TT 2.0
			$3.0 < f \leq 4.2$ GHz, $4.2 < f \leq 6.0$ GHz,	-82.5 dBm / MHz = -85 + TT 2.5

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

			6.0 < f ≤ 7.125 GHz	
	1-0		None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-102.6 dBm / MHz = -106 + TT 3.4 -102.4 dBm / MHz = -106 + TT 3.6
FR2	2-0		None, 24.25 < f ≤ 29.5 GHz, 37.0 < f ≤ 43.5, 43.5 < f ≤ 48.2, 52.6 < f ≤ 71.0	-33.1 dBm / MHz = -36 + TT 2.9 -32.7 dBm / MHz = -36 + TT 3.3

FR1 BS type 1-C limits in TS38.141-1 v.17.7.0 (v.2022-09):

- Clause 6.4.2.4.2 Procedure, for DL Transient Period,
- Clause 6.4.2.5 Test Requirements, for DL Off Power limits.

FR1 BS type 1-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.2 Procedure for BS type 1-O, for DL Transient Period,
- Clause 6.5.2.5.1 Test requirements for BS type 1-O, for DL Off Power limits.

FR1 BS type 2-O limits in TS38.141-2 v.17.7.0 (v.2022-09):

- Clause 6.5.2.4.2.3 Procedure for BS type 2-O, for DL Transient Period,
- Clause 6.5.2.5.2 Test requirements for BS type 2-O, for DL Off Power limits.
- Direction = Uplink:

Parameter	Preset Configuration				Preset Value
	FR	UL ChannelType	Bandwidth	Adjust Range (GHz)	
Max Ramp Down Time,	FR1				10.0 us
Max Ramp Up Time	FR2				5.0 us
UL Off Power	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125	-48.5 dBm = -50 + TT 1.5 -48.2 dBm = -50 + TT 1.8

3.12 Phase and Amplitude vs Time Measurement

UL On Pwr Tolerance	FR2	PUSCH, PRACH, SRS	All FR2 BW	GHz	-48.3 dBm = -50 + TT 1.7	
				40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	-48.2 dBm = -50 + TT 1.8
	FR1	PUSCH, PRACH, SRS	BW ≤ 40 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.5 dB = ±(9 + TT 1.5)	
				± 10.8 dB = ±(9 + TT 1.8)		
			40 MHz < BW ≤ 100 MHz	None, f ≤ 1.0 GHz, 1.0 < f ≤ 3.0 GHz 3.0 < f ≤ 4.2 GHz, 4.2 < f ≤ 6.0 GHz, 6.0 < f ≤ 7.125 GHz	± 10.7 dB = ±(9 + TT 1.7)	
				± 10.8 dB = ±(9 + TT 1.8)		
	FR2	PUSCH	All FR2 BW		± 14 dB (TT not yet)	
	Parameter	Preset Configuration				Preset Value
		FR	UL Channel Type	Bandwidth	SCS	
UL On Pwr Reference	FR1	PUSCH	5 MHz	15 kHz	-3.6 dBm	
				30 kHz	-4.2 dBm	
			10 MHz	15 kHz	0.4 dBm	
				30 kHz	-0.8 dBm	
				60 kHz	-1.2 dBm	
			15 MHz	15 kHz	1.4 dBm	
				30 kHz	1.2 dBm	
				60 kHz	1.0 dBm	

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

20 MHz	15 kHz	2.7 dBm
	30 kHz	2.5 dBm
	60 kHz	2.2 dBm
25 MHz	15 kHz	3.6 dBm
	30 kHz	3.5 dBm
	60 kHz	3.3 dBm
30 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
35 MHz	15 kHz	4.4 dBm
	30 kHz	4.3 dBm
	60 kHz	4.2 dBm
40 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
45 MHz	15 kHz	5.7 dBm
	30 kHz	5.7 dBm
	60 kHz	5.5 dBm
50 MHz	15 kHz	6.7 dBm
	30 kHz	6.6 dBm
	60 kHz	6.5 dBm
60 MHz	30 kHz	7.5 dBm
	60 kHz	7.4 dBm
70 MHz	30 kHz	8.2 dBm
	60 kHz	8.1 dBm
80 MHz	30 kHz	8.8 dBm
	60 kHz	8.7 dBm
90 MHz	30 kHz	9.3 dBm
	60 kHz	9.2 dBm
100 MHz	30 kHz	9.8 dBm
	60 kHz	9.7 dBm
PRACH Config Index 4, 12		-1.0 dBm
PRACH Config Index 160, 123		-2.0 dBm

3.12 Phase and Amplitude vs Time Measurement

SRS	5 MHz	15 kHz	-3.8 dBm
		30 kHz	-5.6 dBm
	10 MHz	15 kHz	-0.4 dBm
		30 kHz	-0.8 dBm
		60 kHz	-2.5 dBm
	15 MHz	15 kHz	1.2 dBm
		30 kHz	1.0 dBm
		60 kHz	0.5 dBm
	20 MHz	15 kHz	2.6 dBm
		30 kHz	2.2 dBm
		60 kHz	2.2 dBm
	25 MHz	15 kHz	3.6 dBm
		30 kHz	3.5 dBm
		60 kHz	2.9 dBm
	30 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	35 MHz	15 kHz	4.4 dBm
		30 kHz	4.2 dBm
		60 kHz	4.0 dBm
	40 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	45 MHz	15 kHz	5.7 dBm
		30 kHz	5.6 dBm
		60 kHz	5.2 dBm
	50 MHz	15 kHz	6.6 dBm
		30 kHz	6.6 dBm
		60 kHz	6.5 dBm
	60 MHz	30 kHz	7.5 dBm
		60 kHz	7.2 dBm
	70 MHz	30 kHz	8.1 dBm
		60 kHz	8.1 dBm

3 5G NR Mode

3.12 Phase and Amplitude vs Time Measurement

FR2	PUSCH	80 MHz	30 kHz	8.8 dBm
			60 kHz	8.6 dBm
		90 MHz	30 kHz	9.2 dBm
			60 kHz	9.2 dBm
		100 MHz	30 kHz	9.8 dBm
			60 kHz	9.6 dBm
		50 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		100 MHz	60 kHz	21.1 dBm (*)
			120 kHz	21.1 dBm (*)
		200 MHz	60 kHz	22.1 dBm (*)
			120 kHz	22.1 dBm (*)
		400 MHz	60 kHz	n/a (*)
			120 kHz	21.1 dBm (*)
		800 MHz	480 kHz	
			960 kHz	
		1600 MHz	480 kHz	
			960 kHz	
		2000 MHz	960 kHz	

Uplink FR1 limits in TS38.521-1 v.17.6.1 (v.2022-10):

- Table 6.3.3.2.5-1 General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-2 Test Tolerance for OFF power, for PUSCH
- Table 6.3.3.2.5-3 Test Tolerance for ON power, for PUSCH
- Table 6.3.3.4.5-1: PRACH time mask,
- Table 6.3.3.4.5-2: Test Tolerance (Transmit OFF power and PRACH time mask),
- Table 6.3.3.6.5-1: SRS time mask,
- Table 6.3.3.6.5-2: Test Tolerance (Transmit OFF power and SRS time mask).

Uplink FR2 limits in TS38.521-2 v.17.0.0 (v.2022-09):

- Table 6.3.3.2.5-1: Test requirement of OFF power of General ON/OFF time mask (PUSCH),

- Table 6.3.3.2.5-2: Test requirement of ON power of General ON/OFF time mask (PUSCH),
- Table 6.3.3.2.5-3: Test Tolerance for OFF power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-4: Test Tolerance for ON power (PUSCH); ... all FFS,
- Table 6.3.3.2.5-5: Relaxation required for OFF power for PC3 UEs,
- Table 6.3.3.4.5-1: PRACH time mask; ... some FFS,
- Table 6.3.3.4.5-2: Relaxations for OFF power for PC3 UEs (PRACH),
- Table 6.3.3.4.5-3: Relaxations for ON power (PRACH); ... all FFS,
- Clause 6.3.3.6 SRS time mask; ... all FFS.

Note:

(*) FR2 PUSCH ON Power Ref & Tolerance limit values were defined in Table 6.3.3.2.5-2, TS38.521-2 v.16.2.0 (2019-12); Meanwhile, TT value for the Power Ref has not been defined yet (FFS) in Table 6.3.3.2.5-4, TS38.521-2 v.16.6.0 (2020-12).

Other parameters

- BW > Settings tab > Info BW: Auto
However, when the following three conditions are met, executing “Apply Preset” presets Info BW to 381.12 MHz/Man.
 - Radio Direction is uplink
 - Bandwidth is 400 MHz
 - Frequency Range is FR2 or FR2-2 and Adjust Limit Mask for Freq Range is “ $52.6 < f \leq 71.0$ GHz”

Channel Power

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto
- Meas Setup > Component Carriers tab > Configure Comp Carriers > Power Integration Bandwidth > CHP: the value defined in the Couplings row in **"CHP Power Integration Bandwidth"** on page 3300.

Occupied BW

When executing Apply Preset, preset the following parameters:

- Frequency > Settings tab > Span: Auto Detect
- BW > Settings tab > Res BW: Man, 30 kHz
- BW > Settings tab > Video BW: Auto, 300 kHz
- Meas Setup > Limits tab > Bandwidth: Auto
- Meas Setup > Settings tab > Power Integration Method
= Normal when Radio tab > Direction = Downlink
= From Center when Radio tab > Direction = Uplink

Monitor Spectrum

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab: Execute Adjust Span to Carrier Config action

IQ Waveform

When executing Apply Preset, preset the following parameters:

- BW > Settings tab > Digital IF BW: Auto
- BW > Settings tab > Filter Type: Flattop
- Frequency > Settings tab, execute Adjust Center Frequency to Carrier Config action
(which presets Digital IF BW in the BW menu to Auto)

Power Stat CCDF

When executing Apply Preset, preset the following parameter:

- Frequency > Settings tab, execute Adjust Center Freq to Carrier Config action
(which presets Info BW in the BW menu to Auto)

3.12.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Remote Command	<pre>[:SENSe]:PAVTime:IF:GAIN[:STATe] ON OFF 1 0 [:SENSe]:PAVTime:IF:GAIN[:STATe]? [:SENSe]:PAVTime:IF:GAIN:AUTO[:STATe] ON OFF 1 0 [:SENSe]:PAVTime:IF:GAIN:AUTO[:STATe]?</pre>
Example	<pre>:PAVT:IF:GAIN ON :PAVT:IF:GAIN? :PAVT:IF:GAIN:AUTO ON :PAVT:IF:GAIN:AUTO?</pre>
Notes	<p>ON = high gain</p> <p>OFF = low gain</p>
Dependencies	<p>The IF Gain controls (FFT IF Gain and Swept IF Gain) have no effect when the U7227A USB Preamp-lifier is connected. This is not annotated or reflected on any control; there are no controls grayed out nor any SCPI locked out. The instrument simply behaves as though both FFT IF Gain and Swept IF Gain are set to Low regardless of the setting on the controls</p> <p>This control is not available in VXT model M9421A, EXM, or UXM</p>
Preset	<p>OFF</p> <p>OFF</p>
State Saved	Saved in instrument state
Range	Low Gain High Gain

3.12.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 3408) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to OFF on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF :GLOBal:FREQuency:CENTer[:STATe]?

Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when **"Restore Defaults" on page 3410** is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to OFF on Global Settings , Restore Defaults and System, Restore Defaults, All Modes
Range	ALL NONE

Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 3410 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0 1 ON OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to OFF by Global Settings > Restore Defaults and System > Restore Defaults > All Modes
Range	ON OFF

Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

3.12.9 Sweep

Contains controls that allow you to control the sweep and measurement functions of the instrument.

3.12.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See ["More Information" on page 3412](#)

Remote Command	<code>:INITiate:CONTinuous OFF ON 0 1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into Single measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into Continuous measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	ON Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to ON , but <code>*RST</code> sets <code>:INIT:CONT</code> to OFF
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none">– A line with an arrow is Single– A loop with an arrow is Continuous
Backwards Compatibility Notes	X-Series A-models had Single and Cont hardkeys in place of the SweepSingleCont softkey. In the X-Series A-models, if in single measurement, the Cont hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a Cont/Single toggle control instead of Single and Cont hardkeys, but it is still true that, if in single measurement, the Cont/Single toggle control never restarts a measurement and never resets a sweep

More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the Average/Hold Num, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used both before and after the Average/Hold Num is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>
Single Mode	<p>The instrument takes a single sweep when in Single mode, or if in average or Max/Min Hold, or if there is a Waterfall window displayed, it takes multiple sweeps until the average/hold count reaches the Average/Hold Num, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the Trace key description under Trace Average for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the Trace key, with choices of Trace Average, Max Hold, or Min Hold</p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until $k = N$, at which point the current sequence will stop and the instrument will go to the idle state

See "Restart" on page 3413 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while

Average/Hold Num is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See "More Information" on page 3413

Remote Command	:INITiate[:IMMediate] :INITiate:REStart
Example	:INIT:IMM :INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The STATus:QUESTionable register bit 9 (INTEgrity sum) is cleared The SWEEPING bit is set The MEASURING bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the Restart hardkey and the :INIT:REST command restarted trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold In X-Series, the Restart hardkey and the :INIT:REST command restart not only Trace Average , but MaxHold and MinHold traces as well

More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement

and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
Clear/Write pressed (even if already in Clear/Write)	Set to mintracevalue
Max Hold pressed (even if already in Max Hold)	Set to mintracevalue
Min Hold pressed (even if already in Min Hold)	Set to maxtracevalue
Trace Average pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
Restart pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

Averaging

The weighting factor used for averaging is k . This k is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This k is used for comparisons with N , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, K , shows the count for the sweep (data acquisition) in progress. $K = k + 1$, with a limit of N . The displayed value K changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when **:ABORT** is sent, the alignment finishes *before* the abort function is performed, so **:ABORT** does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an **:INIT:IMM** command is received.

Remote Command	:ABORT
Example	:ABOR
Notes	<p>If :INIT:CONT is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If :INIT:CONT is OFF, then :INIT:IMM is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, :ABORT is equivalent to the Restart key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The STATus:OPERation register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by :ABORT, the Abort command will cause the *OPC query to return true</p>


3.12.10 Trace

Trace functionality is not supported in the Phase and Amplitude vs Time measurement.

4 System



The **System** hardkey and the “gear” icon both open the **System Settings** dialog, which allows you to access various configuration menus and dialogs. The line of tabs down the left side let you choose various pages for configuring your instrument.

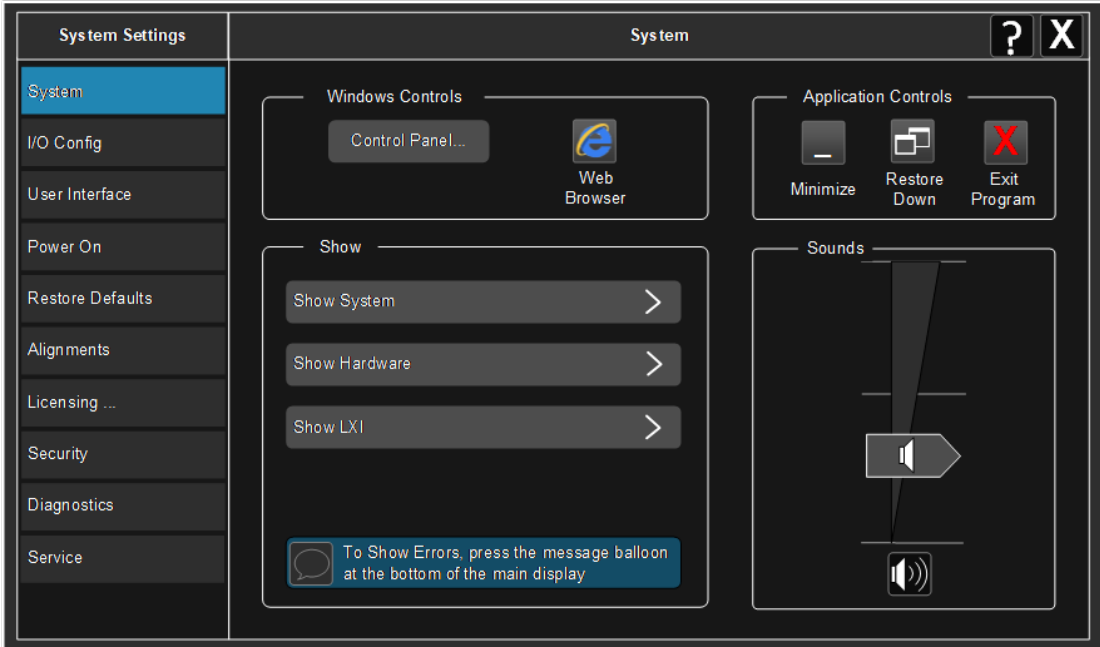

Notes	No remote command for this key specifically
-------	---

4.1 System

Allows access to several general system functions, including three **Show** screens for viewing system parameters. Several such **Show** screens are available on this and other **System** menu pages. They can also be accessed with the SCPI command described here.

Remote Command	:SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTWARE CAPPlication :SYSTem:SHOW?
Example	:SYST:SHOW SYST
Notes	Displays (or exits) the System information screens
Preset	OFF
State Saved	No
Range	OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTWARE CAPPlication

4.1.1 Show System

This screen is divided into three groups: product descriptive information, options tied to the hardware, and software products. Swipe up and down on this screen to scroll the display.

System Settings	< System	Show System	? X
System	Keysight Technologies	Keysight UXa Signal Analyzer	
I/O Config	Product Number	N9040B	
User Interface	Serial Number	US00091133	
Power On	Instrument S/W Revision	A.15.00_P0053	
Restore Defaults	Revision Date	11/17/2014 11:37:12 AM	
Alignments	Computer System	Windows 7 , Service Pack 1	
Licensing ...	Computer Name	A-N9040B-91133	
Security	IP Address	141.121.151.83	
Diagnostics	IPv6 Address	2002:8d79:9753::8d79:9753	
	Link-Local IPv6 Address	fe80::46e:1db5:7286:68ac%3	
	Host ID	N9040B,US00091133	
	mDNS Enabled	Yes	
	mDNS Host Name	A-N9040B-91133	
	mDNS Service Name	Keysight N9040B Signal Analyzer - US00091133	
Service	Option	Name / Description	
	N9040B-PC6	Intel(R) Core(TM) i7-3615QE CPU @ 2.30GHz, 16 GB	
	N9040B-SSD	INTEL SSDSC2BB080G4 ATA DEVICE	
	N9040B-W7X	Windows Embedded Standard 7, 64 bit OS	

Example	:SYST:SHOW SYST
---------	-----------------

4.1.1.1 Show System contents (Remote Query Only)

Returns the contents of the **Show System** screen (the entire contents, not just the currently displayed page).

Remote Command	:SYSTem:CONFIgure[:SYSTem]?
----------------	-----------------------------

Example	:SYST:CONF?
---------	-------------

Notes	The output is an IEEE Block format of the Show System contents. Each line is separated by a new-line character
-------	---

4.1.1.2 Computer System description (Remote Query Only)

Returns the **Computer System** description, which consists of the operating system and patch level, as reported by operating system.

Remote Command	:SYSTem:CSYSTem?
----------------	------------------

Example	:SYST:CSYS?
---------	-------------

Notes	Returns the Computer System name and service pack level
-------	---

4.1.2 Show Hardware

Displays details of the installed hardware. This information can be used to determine versions of hardware assemblies and field-programmable devices, in the advent of future upgrades or potential repair needs.

The screen is divided into two groups: product descriptive information and hardware information. The hardware information is listed in a table format.

Example	:SYST:SHOW HARD
---------	-----------------

4.1.3 Show LXI






















Displays the product number, serial number, firmware revision, computer name, IP address, Host ID, LXI Class, LXI Version, MAC Address, and the Auto-MDIX Capability.

Example	:SYST:SHOW LXI
---------	----------------

4.1.4 Show Support Subscriptions

Displays the software support subscription information for the licenses available on the instrument.

Shows the software license, description, software support expiration date (format is **YYYY.MMDD**), and the software support status. The **Software Version Date** (format is **YYYY.MMDD**) shown in the header indicates the date required to access the latest software enhancements included in this version of the software. If any license has a **Software Support Expiration Date** earlier than the **Software Version Date**, then enhancements may be available that the license does *not* enable.

System Settings		System		Support Subscriptions		   	
System	Keysight PXA		Keysight PXA Signal Analyzer				
	Product Number		N9030A				
I/O Config	Instrument S/W Revision		A.20.10				
	Software Version Date		2017.1221				
	Software License		Description		Software Support Expiration Date		
User Interface	N6141EM0E-1FP	EMC Software for X-Series	2018.0430				
	N9030EMCA-1FP	Basic Electro-Magnetic Compatibility Functionality	2018.0430				
Power On	N9030FP2A-1FP	Fast Power Measurements, up to 40 MHz bandwidth	2018.0430				
	N9030FT2A-1FP	Frequency Mask Trigger >3.6 us signal duration	2018.0430				
Restore Defaults	N9030RBEA-1FP	RBW Extended, >10 MHz RBW Filter	2018.0430				
	N9030RT2A-1FP	Real-time analysis up to maximum BW, optimum detection	2018.0430				
Alignments	N9030TDSA-1FP	Time Domain Scan, requires N6141A/C, and DP2 or B40	2018.0430				
	N9054EM0E-1FP	Flexible Digital Demod App, VMA	2018.0430				
Licensing	N9054EM1E-1FP	Custom OFDM App, VMA	2018.0430				
	N9061EM0E-1FP	Remote Language Compatibility	2018.0430				
Diagnostics	N9062EM0E-1FP	RS FSP, FSU, FSE, ESU SCPI Language Compatibility	2018.0430				
	N9063EM0E-1FP	Analog Demod Measurement Application	2018.0430				
Service	N9067EM0E-1FP	Pulse Application	2018.0430				
	N9068EM0E-1FP	Phase Noise Measurement Application	2018.0430				
Debug	N9069EM0E-1FP	Noise Figure Measurement Application	2018.0430				
	N9071EM0E-1FP	GSM/EDGE Measurement Application	2018.0430				
	N9071EMX5-1FP	Single App Combined GSM/EDGE Measurements	2018.0430				

Example :SYST:SHOW SSINformation

4.1.5 Show Support ID

Displays the Support ID for each license available in the instrument. Shows the **Software License**, **Description**, software support expiration date, and **Support ID** for that license.

Each license has a copy icon, which copies just the **Support ID** for that license to the Windows clipboard. This is useful to avoid typing mistakes when entering this value into another program or web site.

The **Copy all to clipboard ...** control copies all the data to the Windows clipboard, in comma-separated value (CSV) format.

System Settings	System				Support ID				
System	Keysight PXA	Keysight PXA Signal Analyzer							
	Product Number	N9030A							
	Instrument S/W Revision	A.20.10							
	Software Version Date	2017.1221							
I/O Config	Software License	Description	Version	Support ID					
User Interface	N6141EM0E-1FP	EMC Software for X-Series	2018.0430	N9030A.US00071133					
Power On	N6141EM0E-1NP	EMC Software for X-Series (Network)	2019.0123	705A0F491DBB					
Restore Defaults	N9030EMCA-1FP	Basic Electro-Magnetic Compatibility Functi	2018.0430	N9030A.US00071133					
Alignments	N9030FP2A-1FP	Fast Power Measurements, up to 40 MHz b	2018.0430	N9030A.US00071133					
Licensing	N9030FT2A-1FP	Frequency Mask Trigger >3.6 us signal dur	2018.0430	N9030A.US00071133					
Security	N9030RBEA-1FP	RBW Extended, >10 MHz RBW Filter	2018.0430	N9030A.US00071133					
Diagnostics	N9030RT2A-1FP	Real-time analysis up to maximum BW, opti	2018.0430	N9030A.US00071133					
Service	N9030TDSA-1FP	Time Domain Scan, requires N6141A/C, an	2018.0430	N9030A.US00071133					
Debug	N9054EM0E-1FP	Flexible Digital Demod App, VMA	2018.0430	N9030A.US00071133					
	N9054FM1F-1FP	Custom OFDM App, VMA	2018.0430	N9030A.US00071133					

Example :SYST:SHOW SID

4.1.6 Control Panel...

Opens the Windows Control Panel. **Control Panel** is used to configure certain elements of Windows that are not configured via the Multitouch UI System menus.

NOTE This feature is *not* available if Option SF1 is installed.

Control Panel is a separate Windows application, so to return to the Instrument Application, either:

- Exit by tapping on the red **X** in the upper right-hand corner
- Use **Alt+Tab**. Press and hold the **Alt** key and press and release the **Tab** key until the Instrument logo is showing in the window in the center of the screen, then release the **Alt** key

Notes No remote command for this key

4.1.7 Web Browser


Launches the instrument's default **Web Browser**. Usually, the default is Microsoft Edge. A mouse and external keyboard are highly desirable for using the browser. To return focus to the Instrument Application, close the browser (or use **Alt-Tab**).

NOTE

This feature is *not* available if Option SF1 is installed.

4.1.8 Application Controls

Lets you Minimize or Exit the application.

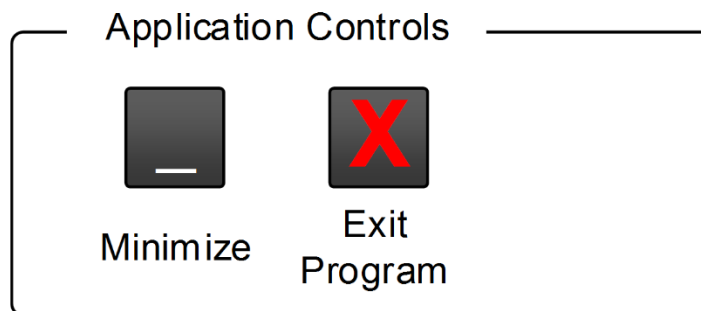

Pressing **Exit Program** displays a prompt asking if you are sure you want to close the program. If you select **OK**, the entire analyzer application will shut down, and you will lose any unsaved trace or measurement data.


Notes

No equivalent remote command for this key

4.1.9 Sounds

Lets you adjust the speaker volume using the slider, or mute/unmute the speaker, by tapping the **Speaker** icon.

Moving the slider up and down changes the speaker volume, and *also* unmutes the speaker if muted.

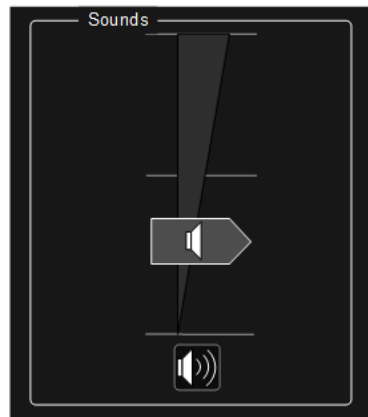

Icon when muted

4.2 I/O Config

Allows you to specify and change the I/O configuration for remote control. Controls in this menu allow configuration of the I/O ports used for SCPI remote control over GPIB and LAN.

The SCPI LAN parameters are set using controls in this menu, but configuration of LAN settings themselves is performed using the Windows Control Panel (DHCP, Gateway, Subnet Mask, etc.).

The USB port is also available for remote control, but requires no configuration.

4.2.1 GPIB

Allows you to configure the GPIB I/O port.

Dependencies	Not available in UXM
--------------	----------------------

4.2.1.1 GPIB Address

Select the GPIB remote address.

Remote Command	<code>:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRess <integer></code> <code>:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRess?</code>
Example	<code>:SYST:COMM:GPIB:ADDR 17</code>
Notes	If the GPIB port address is changed, all further communication must use the <i>new</i> address
Preset	Unaffected by Preset , but set to 18 by Restore Defaults > "Misc" on page 3473
State Saved	No
Min	0
Max	30

4.2.1.2 GPIB Controller

Sets the GPIB port into Controller (**ON**) or Device (**OFF**) mode. In the normal state, **GPIB Controller** is disabled (**OFF**), which allows the instrument to be controlled by a remote computer. When **GPIB Controller** is enabled (**ON**), the instrument can run software applications that use the instrument's computer as a GPIB controller for devices connected to the GPIB port.

NOTE

When **GPIOB Controller** is enabled, the analyzer application itself cannot be controlled over GPIB. In this case, it can be controlled via LAN or USB. The GPIB port cannot be a Controller and Device at the same time. Only one Controller can be active on the GPIB bus at any given time. If the instrument is the Controller, an external PC cannot also be a Controller.

To control the instrument from the software that is performing GPIB Controller operation, you can use an internal TCP/IP connection to the analyzer application. Use the following IP Address to send commands to the analyzer application:

`TCPIP0:localhost:inst0:INSTR`

Remote Command	<code>:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE] ON OFF 0 1</code> <code>:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE]?</code>
Example	Set GPIB port to Controller: <code>:SYST:COMM:GPIB:CONT ON</code> Set GPIB port to Device: <code>:SYST:COMM:GPIB:CONT OFF</code>
Notes	When the instrument becomes the Controller, Bit 0 in the Standard Event Status Register is set. When the instrument relinquishes Controller capability, bit 0 is cleared
Preset	Unaffected by Preset, but set to OFF (Disabled) by Restore Defaults > "Misc" on page 3473
State Saved	No
Range	Disabled Enabled

4.2.2 SCPI LAN

Displays a menu for identifying and changing SCPI over a LAN configuration. There are several ways to send SCPI remote commands to the instrument over LAN.

Having multiple users simultaneously accessing the instrument over the LAN may lead to communication problems. These controls can help to prevent that, by disabling the telnet, socket, and/or SICL capability.

NOTE

When multiple instances of the application are running, Telnet port 5023, socket port 5025, SICL server inst0 and HiSLIP server Device 0 will be assigned to the first instance; Telnet port 5123, socket port 5125, SICL server inst1 and HiSLIP server Device 1 will be assigned to the second instance; Telnet port 5223, socket port 5225, SICL server inst2 and HiSLIP server Device 2 will be assigned to the third instance; Telnet port 5323, socket port 5325, SICL server inst3 and HiSLIP server Device 3 will be assigned to the fourth instance.

- "SCPI Telnet" on page 3426
- "SCPI Socket" on page 3426
- "SICL Server" on page 3427
- "HiSLIP Server" on page 3428
- "Verbose SCPI On/Off" on page 3428
- "SCPI Socket Control Port (Remote Query Only)" on page 3430

4.2.2.1 SCPI Telnet

Turns SCPI LAN telnet capability On or Off, allowing you to limit SCPI access over LAN through telnet.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle?
Example	:SYST:COMM:LAN:SCPI:TELN:ENAB OFF
Preset	Unaffected by Preset , but set to ON by Restore Defaults > "Misc" on page 3473 If not set up or specified, the Secure Instrument Communications configuration setting: is ON
State Saved	No
Range	OFF ON

4.2.2.2 SCPI Socket

Turns the capability to establish Socket LAN sessions **ON** or **OFF**, to limit SCPI access over LAN through socket sessions.

Connection String & Copy Button

In "SCPI LAN" on page 3425, the full SCPI connection string is displayed to the right of the **SCPI Socket**ON/OFF control. Pressing **Copy**, to the right of the string, copies the connection string to the Windows clipboard.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle?
Example	:SYST:COMM:LAN:SCPI:SOCK:ENAB OFF
Dependencies	If the Secure Instrument Communications configuration has disabled this connection, local changes are not allowed, and an attempt to do so results in error -221, "Disabled by Secure Instrument Communications configuration"

Preset	Unaffected by Preset , but set to ON by Restore Defaults > "Misc" on page 3473 If not set up or specified, the Secure Instrument Communications configuration setting: is ON
State Saved	No
Range	OFF ON

4.2.2.3 SICL Server

Turns the **SICL Server** capability **ON** or **OFF**, to limit SCPI access over LAN through the SICL server. (SICL IEEE 488.2 protocol.)

Parameter	Description	Setting
Maximum Connections	The maximum number of connections that can be accessed simultaneously	5
Instrument Name	The name (same as the remote SICL address) of your instrument	inst0
Instrument Logical Unit	The unique integer assigned to your instrument when using SICL LAN	8
Emulated GPIB Name	The name (same as the remote SICL address) of the device used when communicating with your instrument	gpib7
Emulated GPIB Logical Unit	The unique integer assigned to your device when it is being controlled using SICL LAN	8
Emulated GPIB Address	The emulated GPIB address assigned to your transmitter tester when it is a SICL server (the same as your GPIB address)	18

Connection String & Copy Button

In "SCPI LAN" on page 3425, the full connection string is displayed to the right of the **SICL Server** **ON/OFF** control. Pressing **Copy**, to the right of the string copies the connection string to the Windows clipboard.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle?
Example	:SYST:COMM:LAN:SCPI:SICL:ENAB OFF
Dependencies	Not available in UXM If the Secure Instrument Communications configuration has disabled this connection, local changes are not allowed, and an attempt to do so results in error -221, "Disabled by Secure Instrument Communications configuration"
Preset	Unaffected by Preset , but set to ON by Restore Defaults > "Misc" on page 3473 If not set up or specified, the Secure Instrument Communications configuration setting: is ON
State Saved	No
Range	OFF ON

4.2.2.4 HiSLIP Server

Turns the **HiSLIP Server** capability **ON** or **OFF**, to limit SCPI access over LAN through the HiSLIP server.

HiSLIP stands for High-Speed LAN Instrument Protocol, and is part of the IVI-6.1 specification.

Example of a VISA connection string used to connect to the HiSLIP Server on an X-Series Spectrum Analyzer:

```
TCPIP0::a-n9030a-93016::hislip0::INSTR
```

In the example above, **hislip0** is the HiSLIP device name that VISA users must include in HiSLIP VISA Address strings. Your HiSLIP device name may differ, depending on your VISA settings.

Connection String & Copy Button

In "**SCPI LAN**" on page 3425, the full connection string is displayed to the right of the **HiSLIP ServerON/OFF** control. Pressing **Copy**, to the right of the string copies the connection string to the Windows clipboard.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle OFF ON 0 1
	:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle?
Example	:SYST:COMM:LAN:SCPI:HISL:ENAB OFF
Preset	Unaffected by Preset , but set to ON by Restore Defaults > " Misc " on page 3473 If not set up or specified, the Secure Instrument Communications configuration setting: is ON
State Saved	No
Range	OFF ON

4.2.2.5 Verbose SCPI On/Off

When you turn **Verbose SCPION**, additional information is returned by **:SYSTem:ERRor?**. The additional information consists of the characters that stimulated the error. This can aid you in debugging your test programs, by indicating where in the parsing of a SCPI command the instrument encountered an invalid command or query.

Specifically, with **Verbose SCPION**, **:SYSTem:ERRor?** is expanded to show the SCPI data received, with the indicator **<Err>** at the point in the stream that the error occurred.

Verbose SCPI has no effect on the **Show Errors** screen or front-panel Message Line; and only changes the response to **:SYST:ERR?**.

See the example below, where the invalid command **:SENS:BOGUS** is sent:

Normal response to **:SYST:ERR?** (using the Telnet window):

```
SCPI> SENS:BOGUS
SCPI> SYST:ERR?
-113,"Undefined header"
```

After turning on **Verbose SCPI**:

```
SCPI> SYST:BOGUS
SCPI> SYST:ERR?
-113,"Undefined header;SYST:BOGUS<Err>"
```

Remote Command	:SYSTem:ERRor:VERBoSe OFF ON 0 1 :SYSTem:ERRor:VERBoSe?
Example	:SYST:ERR:VERB ON
Preset	Unaffected by Preset , but set to OFF by Restore Defaults > "Misc" on page 3473
State Saved	No
Range	OFF ON

4.2.2.6 Device Clear on Disconnect

When using HiSLIP (High Speed LAN Instrument Protocol), Telnet, or Sockets, a communication session with the instrument is opened when you connect, and closed when you disconnect. This differs from other connections such as GPIB, USB and VXI-11 connections, which are never actually closed but stay open as long as the instrument is running.

When a session is closed, a Device Clear function is generated, which affects the entire instrument, not just the current connection. Thus, when using HiSLIP, Telnet, or Sockets, unexpected Device Clears may occur, which can disrupt measurements in ways that GPIB and VXI-11 “sessions” do not.

Device Clear on Disconnect enables these auto-generated Device Clears for Telnet, Socket, and HiSLIP sessions. For backwards compatibility, they are *not* generated unless you explicitly enable them.

There is no change in VXI-11, USB, or GPIB session behavior. These sessions do not close when you disconnect, have never generated Device Clear events, and still do not generate Device Clear events, regardless of the setting of this switch.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLEar:ENABle 0 1 ON OFF :SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLEar:ENABle?
Example	:SYST:COMM:LAN:SCPI:EOS:DCLE:ENAB ON
Preset	Unaffected by Preset , but set to OFF by Restore Defaults > "Misc" on page 3473

State Saved	No
Range	OFF ON

4.2.2.7 SCPI Socket Control Port (Remote Query Only)

Returns the TCP/IP port number of the control socket associated with the SCPI socket session. This query lets you obtain the unique port number to open when a device clear is to be sent to the instrument. Every time a connection is made to the SCPI socket, the instrument creates a peer control socket. The port number for this socket is random. You must use this command to obtain the port number of the control socket. To force a device clear on this socket, open the port and send the string `DCL\n` to the instrument.

If this query is sent to a non-SCPI Socket interface, then 0 is returned.

Remote Command	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol?
Example	:SYST:COMM:LAN:SCPI:SOCK:CONT?
Preset	Unaffected by Preset or Restore Defaults > "Misc" on page 3473
State Saved	No
Range	0 to 65534
Min	0
Max	65534
Backwards Compatibility SCPI	:SYSTem:COMMunicate:TCPIp:CONTRol?

4.2.2.8 SCPI Instrument Port (Remote Query Only)

Some MIMO applications need to be able to determine the port to use to communicate with the instrument. This query returns the port number to use for communications.

Remote Command	:SYSTem:COMMunicate:LAN:INSTrument:PORT?
----------------	--

4.2.3 Web Password Reset

The embedded web server contains certain capabilities that are password-protected; modifying the LAN configuration of the instrument, and access to web pages that can change the settings of the instrument. The default password from the factory is:

`measure4u`

This control lets you set the web password as desired, or to reset the password to the factory default.

Selecting **Web Password Reset** displays a control for resetting the password as desired, or to the factory default. The built-in alpha keyboard appears. You may change the password from the factory default of “**measure4u**”.

You can cancel this entry by pressing the **Cancel (ESC)** front-panel key.

Dependencies	Not available in UXM
--------------	----------------------

4.2.4 System IDN Response

Allows you to specify a response to ***IDN?**, return the instrument to the **FACTory** response if you have changed it, or, if your test software is expecting the ***IDN** response to indicate Agilent Technologies, configure the instrument to respond with Agilent as the manufacturer.

The current ***IDN** response is displayed at the top of the panel, followed by the **System IDN Response** and **User IDN** controls.

4.2.4.1 System IDN Response

To select the factory-set response, select **FACTory**. To specify your own response, select **USER**. You can enter your desired response using “**User IDN**” on page 3432.

If your test software expects the response to indicate Agilent Technologies as the Manufacturer, you can configure this response by selecting **AGILent**.

Remote Command	:SYSTem:IDN:CONFigure FACTory AGILent USER For option details, see “ More Information ” on page 3431 :SYSTem:IDN:CONFigure?
Example	:SYST:IDN:CONF FACT
Notes	Affects the response returned by all Modes of the instrument, unless the current Mode has <i>also</i> specified a custom response, in which case the current Mode’s custom IDN response takes precedence over the System’s, but only while that Mode is current Survives shutdown and restart of the software and therefore survives a power cycle
Preset	The *IDN response is reset to FACTory by Restore Defaults > “Misc” on page 3473 or Restore Defaults > “All” on page 3474 and survives subsequent running of the software

More Information

Here are details of the options available for the System ***IDN** response:

Factory

SCPI example: `:SYST:IDN:CONF FACT`

Selects the factory default configuration of ***IDN?**, which indicates the Manufacturer as Keysight Technologies. For example,

`"Keysight Technologies,N9040B,MY00012345,A.15.00"`

where the fields are Manufacturer, Model Number, Serial Number, Firmware Revision.

NOTE

In products that run multiple instances of the X-Series Application, all instances use the *same* factory System IDN response.

Agilent

SCPI example: `:SYST:IDN:CONF AGIL`

Starting with software version x.14.50, the ***IDN?** response in the Factory configuration indicates the Manufacturer as Keysight Technologies. If your test software is expecting the response to indicate Agilent Technologies, you can configure the response with this menu selection or SCPI command.

For example:

`"Agilent Technologies,N9020A,MY00012345,A.05.01"`

NOTE

In products that run multiple instances of the X-Series Application, all instances use the *same* Agilent System IDN response.

User

SCPI example: `:SYST:IDN:CONF USER`

Selects your customized configuration of ***IDN?**

Enter your desired response using **"User IDN"** on page 3432.

4.2.4.2 User IDN

Allows you to specify your own response to ***IDN?**. You may enter your desired response with the Alpha Editor or a plugin PC keyboard. Once the value is entered, select **USER** under **System IDN Response**.

When you select this control, the active function becomes the current User string and is highlighted, so typing replaces it. If instead you wish to edit the existing string, press the left or right arrow to go to the beginning or the end.

If you enter a null string (for example, by clearing the User String while editing and then pressing **Done**), the instrument automatically reverts to the **FACTory** setting.

NOTE

In products that run multiple instances of the X-Series Application, all instances use the *same* User System IDN response.

Remote Command	<code>:SYSTem:IDN <string></code> <code>:SYSTem:IDN?</code>
Notes	<p>The <code><string></code> must consist of four fields, each separated by a comma, example: <code>:SYST:IDN "XYZ Corp,Model 12,012345,A.01.01"</code></p> <p>The four fields are <code><manufacturer></code>, <code><model number></code>, <code><serial number></code>, <code><firmware revision></code>. The fields are comma-delimited, so text within a field cannot contain a comma</p> <p>This affects the response given in all Modes of the instrument, unless the current Mode has <i>also</i> specified a custom response, in which case the current Mode's custom IDN response takes precedence over the System's, but only while that Mode is current</p> <p>Survives shutdown and restart of the software and therefore survives a power cycle</p> <p>Null string as parameter restores the FACTory setting, example: <code>:SYST:IDN ""</code></p>
Preset	Unaffected by Preset , but set to the original FACTory setting by Restore Defaults > "Misc" on page 3473

4.2.4.3 SYSTem:PERSONa (Remote Commands Only)

The `:SYSTem:PERSONa` command set permits setting of individual fields of the `*IDN?` response.

- `"SYSTem:PERSONa:DEFault"` on page 3433
- `"SYSTem:PERSONa:MANUFACTurer"` on page 3434
- `"SYSTem:PERSONa:MANUFACTurer:DEFault"` on page 3434
- `"SYSTem:PERSONa:MODEl"` on page 3434
- `"SYSTem:PERSONa:MODEl:DEFault"` on page 3435

SYSTem:PERSONa:DEFault

Resets the `*IDN` response to the instrument default.

Remote Command	<code>:SYSTem:PERSONa:DEFault</code> <code>:SYSTem:PERSONa:DEFault?</code>
Notes	<code>:SYST:PERs:DEF?</code> returns the default value of <code>*IDN?</code> even if the current setting of <code>*IDN?</code> is the

non-default value. The query return type is a `<string>`
`:SYST:PER:DEF`
is equivalent to:
`:SYSTem:IDN ""`
`:SYSTem:IDN:CONF DEF`

SYSTem:PERSONa:MANufacturer

Sets the `MANufacturer` field of the `*IDN?` response. This is the first field of the `*IDN?` response.

Remote Command	<code>:SYSTem:PERSONa:MANufacturer <string></code> <code>:SYSTem:PERSONa:MANufacturer?</code>
Notes	When setting the <code>MANufacturer</code> field, the current IDN response string is modified to replace the manufacturer field with the string specified by the command. If the resulting IDN response matches one of the predefined responses (<code>:SYST:IDN:CONF FACT AGIL</code>), then the <code>:SYST:IDN:CONF</code> is set to the corresponding value. If the IDN response with the new manufacturer field is not one of the predefined values, then <code>:SYST:IDN:CONF</code> will be set to <code>USER</code> and <code>:SYST:IDN</code> will be set to the new IDN response string The query returns the current value of the <code>*IDN?</code> Manufacturer field

SYSTem:PERSONa:MANufacturer:DEFAULT

Resets the `MANufacturer` field of the `*IDN?` response to the default value.

Remote Command	<code>:SYSTem:PERSONa:MANufacturer:DEFAULT</code> <code>:SYSTem:PERSONa:MANufacturer:DEFAULT?</code>
Notes	The query returns the default <code>MANufacturer</code> field value of <code>*IDN?</code> even if the current setting of <code>*IDN?</code> is the non-default value. The return type is a <code><string></code>

SYSTem:PERSONa:MODEL

Sets the `MODEL` field of the `*IDN?` response. This is the second field of the `*IDN?` response.

Remote Command	<code>:SYSTem:PERSONa:MODEL <string></code> <code>:SYSTem:PERSONa:MODEL?</code>
Notes	When setting the <code>MODEL</code> field, the current IDN response string is modified to replace the model field with the string specified by the command. If the resulting IDN response matches one of the predefined responses (<code>:SYST:IDN:CONF FACT AGIL</code>), then <code>:SYST:IDN:CONF</code> is set to the corresponding value. If the IDN response with the new model field is not one of the predefined values, then <code>:SYST:IDN:CONF</code> will be set to <code>USER</code> and <code>:SYST:IDN</code> will be set to the new IDN response string

The query returns the current value of the ***IDN?MODE1** field

SYSTem:PERSon:MODE1:DEFault

Resets the **MODE1** field of the ***IDN?** response to the default value.

Remote Command	:SYSTem:PERSon:MODE1:DEFault :SYSTem:PERSon:MODE1:DEFault?
Notes	The query returns the default MODE1 field value of *IDN? even if the current setting of *IDN? is the non-default value. The return type is a <string>

4.2.5 LXI

Accesses various **LXI** configuration properties.

Dependencies	Not available in UXM
--------------	----------------------

4.2.5.1 LAN Reset

Resets the LAN connection. This sets parameters as follows, and restarts the LAN operation:

DHCP	Enabled
Automatic IP Address	Enabled
ICMP Ping Responder	Enabled
Web Password	keysight
Dynamic DNS	Enabled
mDNS and DNS-SD	Enabled
Dynamic Link Local Addressing	Enabled
Auto Negotiation	Enabled

There is no SCPI command for this function.

4.2.5.2 Device Identification (Remote Command Only)

Enabling LXI device identification places the LXI Status Indicator in the **Identify** state. Disabling LXI device identification places the LXI Status Indicator in the **No Fault** state. The LXI Status indicator is in the upper left region of the instrument's graphical user interface.

Remote Command	:LXI:IDENtify[:STATe] OFF ON 0 1
----------------	--

	<code>:LXI:IDENtify[:STATe]?</code>
Example	<code>:LXI:IDEN ON</code>
Preset	Not part of Preset , but reset to OFF by Restore Defaults > "All" on page 3474
State Saved	No
Range	OFF ON

4.2.6 Restore I/O Config Defaults

Causes the group of settings associated with the **I/O Config** menu to be reset to their default values. This also happens on **Restore Misc Defaults**, which has a SCPI command.

When **Restore I/O Config Defaults** is selected, a message appears saying:

This will reset all of the I/O Config variables to their default state, including the GPIB address and SCPI LAN settings

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons so you can affirm or cancel the operation.

4.2.7 Query USB Connection (Remote Query Only)

Enables you to determine the speed of the USB connection.

Remote Command	<code>:SYSTem:COMMunicate:USB:CONNectioN?</code>	
Example	<code>:SYST:COMM:USB:CONN?</code>	
Notes	NONE	Indicates no USB connection has been made
	LSpeed	Indicates a USB low speed connection (1.5 Mbps) Note that this is reserved for future use, the T+M488 protocol is not supported on low-speed connections
	HSPEED	Indicates that a USB high speed connection (480 Mbps) has been negotiated
	FSPeed	Indicates that a USB full speed connection (12 Mbps) has been negotiated
State Saved	No	
Range	NONE LSpeed HSPEED FSPeed	

4.2.8 USB Connection Status (Remote Query Only)

Lets you determine the current status of the USB connection.

Remote Command	<code>:SYSTem:COMMunicate:USB:STATus?</code>
Example	<code>:SYST:COMM:USB:STAT?</code>
Notes	<p>SUSPended – Indicates that the USB bus is currently in its suspended state. The bus is in the suspended state when:</p> <ul style="list-style-type: none"> – The bus is not connected to any controller – The controller is currently powered off – The controller has explicitly placed the USB device into the suspended state <p>When in the suspended state, no USB activity, including start of frame packets are received</p> <p>ACTive – Indicates that the USB device is in the active state. When the device is in the active state, it receives periodic frame starts, but is not necessarily receiving or transmitting data</p>
State Saved	No
Range	SUSPended ACTive

4.2.9 USB Packet Count (Remote Query Only)

Lets you determine the number of packets received and transmitted on the USB bus.

Remote Command	<code>:SYSTem:COMMunicate:USB:PACKets?</code>
Example	<code>:SYST:COMM:USB:PACK?</code>
Notes	<p>Two integers are returned:</p> <ol style="list-style-type: none"> 1. The number of packets received since application invocation 2. The number of packets transmitted since application invocation <p>If no packets have been received or transmitted, the response is 0,0</p> <p>The packet count is initialized to 0,0 when the instrument application is started</p>
State Saved	No

4.2.10 Lock Remote I/O Session (Remote Command only)

An instrument can support multiple remote I/O sessions at the same time. However, you cannot *simultaneously* send remote commands from multiple sessions to the same instrument. The results in such a case are undefined.

Ensure that only *one* session actively controls the instrument at a time. Other sessions must wait until the active session finishes the instrument control.

To help achieve this cooperative instrument sharing, the following remote commands are provided:

- "Lock Remote I/O Request (Remote Query only)" on page 3439
- "Unlock Remote I/O Session (Remote Command only)" on page 3440
- "Remote I/O Session Lock Name (Remote Query only)" on page 3441
- "Remote I/O Session Lock Owner (Remote Query only)" on page 3441

Example Procedure for Lock Usage

Step	Action
1	Each session tries to obtain a lock by sending <code>:SYSTem:LOCK:REQuest?</code> This query can be sent simultaneously from multiple sessions
2	Only one session will be granted. The granted session receives <code>1</code> in response to its query
3	The granted session actively controls the instrument Meanwhile, other sessions must wait, and must periodically send <code>:SYSTem:LOCK:REQuest?</code> , requesting the lock
4	When the active session finishes its task, it releases the lock by sending <code>:SYSTem:LOCK:RELease</code>
5	Now the lock has become available, so when one of the waiting sessions sends <code>:SYSTem:LOCK:REQuest?</code> , it receives <code>1</code> in response, granting the lock to that session

By repeating steps 3, 4, and 5 above, multiple sessions can share the same instrument in a cooperative fashion.

NOTE

A session can query its own unique session name by sending `:SYSTem:LOCK:NAME?`. This session name is determined by the instrument.
A session also can query the name of the currently granted session by sending `:SYSTem:LOCK:OWNer?`.

NOTE

Remote I/O interfaces are grouped in two types: single-session interface and multi-session interface. Both types of interfaces can be used for cooperative instrument sharing.

The recommended interface is LAN HiSLIP.

Interface	Single-session	Multi-Session
GPIB	ü	
USB-488	ü	
LAN VXI-11 (SICL)	ü	
LAN Socket		ü
LAN HiSLIP		ü
LAN Telnet		ü

If using a single-session interface, care must be taken to ensure only one client uses the single-session interface.

In particular, LAN VXI-11 (SICL) interface is a single-session interface, even though multiple clients could simultaneously connect to this interface. Such multiple VXI-11 clients share the same session context; the same status registers and the same error queue. Even a SCPI query response can be received by another client. Furthermore, the lock obtained by **:SYSTem:LOCK:REQuest?** is shared among all VXI-11 clients, allowing all of them to actively control the instrument.

If a LAN VXI-11 (SICL) interface must be used by multiple clients for a cooperative instrument sharing, then VISA locking *must* be used, *in addition to* Remote I/O Session Lock.

4.2.10.1 Lock Remote I/O Request (Remote Query only)

You can lock the SCPI control of the instrument to the I/O Interface and Session by sending **:SYSTem:LOCK:REQuest?**. This permits cooperative sharing of the instrument between multiple computers, or multiple sessions from the same computer.

Remote Command	:SYSTem:LOCK:REQuest?
Example	:SYST:LOCK:REQ?
Notes	<p>Returns 1 if the lock request is granted, or 0 if the request is denied</p> <p>Lock requests on an individual interface and session can be nested and each request will increase an internal lock count by 1. For every granted request, send :SYST:LOCK:REL to decrement the internal lock count to fully relinquish the lock</p> <p>When the instrument is locked, Bit 0 is set in the Operation Instrument status register</p>

	<p>Disconnecting the individual interface and session releases the lock if the lock is granted to the interface and session</p> <p>A Device Clear over any interface and session releases the lock, regardless of the interface and session which obtained the lock</p> <p>The following queries are permitted over any interface and session, even if an interface has the instrument locked:</p> <ul style="list-style-type: none">- *IDN?- *OPT?- *STB?- *ESR?- :SYSTem:DATE?- :SYSTem:TIME?- :SYSTem:PON:TIME?- Queries in the :STATus subsystem- Queries in the :SYSTem:ERRor subsystem- Queries in the :SYSTem:LKEY subsystem- Queries in the :SYSTem:LOCK subsystem- Queries in the :SYSTem:METRics subsystem- Queries in the :SYSTem:MODuLe subsystem <p>All other commands and queries result in error: -203,"Command protected; Instrument locked by another I/O session"</p>
State Saved	Not part of Save/Recall

4.2.10.2 Unlock Remote I/O Session (Remote Command only)

You can unlock the SCPI control of the current I/O Interface and Session by sending :SYSTem:LOCK:RELease. Lock requests on an individual interface and session can be nested, and each request increases an internal lock count by 1. For every granted request, you will need to perform a release. The lock is not relinquished until the internal lock count reaches 0.

Remote Command	:SYSTem:LOCK:RELease
Example	:SYST:LOCK:REL
Notes	When the instrument is unlocked, Bit 0 is cleared in the Operation Instrument status register

4.2.10.3 Remote I/O Session Lock Name (Remote Query only)

Use this query to obtain the name of the current I/O Interface and Session.

Remote Command	<code>:SYSTem:LOCK:NAME?</code>
Example	<code>:SYST:LOCK:NAME?</code>
Notes	<p>The information returned is a string of the format:</p> <p><code><I/O Interface>[/<IP address>/<Session ID>]</code></p> <p>Where IP address and Session ID are only provided for interfaces that provide multiple sessions</p> <p>Single Session interfaces (GPIB, USB-488, and LAN VXI-11) only list interface name</p> <p>Session ID is an internally generated identifier. It is not guaranteed to be consistent across instrument software versions (the identifier is subject to change when the software of the instrument is updated). The absolute value of Session ID is not significant, but the identifier will be consistent for a given software version, and can be relied upon for lock owner logic comparisons</p>

4.2.10.4 Remote I/O Session Lock Owner (Remote Query only)

Use this query to determine which I/O Interface and Session has the SCPI locked.

If no interface and session has the SCPI locked, then the return value is **NONE**.

Remote Command	<code>:SYSTem:LOCK:OWNer?</code>
Example	<code>:SYST:LOCK:OWN?</code>
Notes	<p>The information returned is a string of the format:</p> <p><code><I/O Interface>[/<IP address>/<Session ID>]</code></p> <p>Where IP address and Session ID are only provided for interfaces that provide multiple sessions</p> <p>Single Session interfaces (GPIB, USB-488, and LAN VXI-11) only list interface name</p> <p>Session ID is an internally generated identifier. It is not guaranteed to be consistent across instrument software versions (the identifier is subject to change when the software of the instrument is updated). The absolute value of Session ID is not significant, but the identifier will be consistent for a given software version, and can be relied upon for lock owner logic comparisons</p> <p>If no interface and session has the SCPI locked, then the return value is NONE</p>

4.2.11 Multiple Network Interface Card Configuration (Remote Commands Only)

Systems that have multiple Network Interface Cards (NICs) require additional configuration information. The following keys can be added to the XApps configuration file:

- **PrimaryNICIpv4** – IP address value is a string with the exact IP V4 format. Required field in IP v4 networks.
- **PrimaryNICIpv6** – IP address value is a string with the exact IP V6 format. Required field in IP v6 networks.

These commands do not apply to instruments that have only one NIC. The commands apply to all modular deployments that have a controller with multiple NICs.

To configure and query these configuration options, the following remote commands are provided:

- "Multiple Network Adapters Enabled (Remote Query Only)" on page 3442
- "Config IPV4 Address (Remote Command Only)" on page 3443
- "Config IPV6 Address (Remote Command Only)" on page 3443
- "List All Physical Network Adapter IP Addresses (Remote Query Only)" on page 3443

4.2.11.1 Multiple Network Adapters Enabled (Remote Query Only)

Remote Command	:SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABled?
Example	:SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABled?
Notes	Applies to Instruments that have multiple Network Adapters. When more than one network adapter is present in the system, and they are Enabled (that is, they have a valid IP Address), this query returns: <ul style="list-style-type: none">- 1, if more than one NIC enabled- 0, if only one or No NICs are enabled
State Saved	No

4.2.11.2 Config IPV4 Address (Remote Command Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:IPV4:CONFig <ipaddress></code> <code>:SYSTem:COMMunicate:LAN:IPV4:CONFig?</code>
Example	<code>:SYSTem:COMMunicate:LAN:IPV4:CONFig "192.168.1.146"</code> <code>:SYSTem:COMMunicate:LAN:IPV4:CONFig?</code>
Notes	<p>Applies to instruments that have multiple Network Adapters. When more than one network adapter is present in the system, you must specify in the instrument config file the IP address to use to enable Remoting channel bindings. If this is not provided, Remoting connections are likely to fail on systems where multiple NICs are enabled</p> <p>Sets the valid IPV4 address, passed in as string in the config file</p> <p>The query returns IPV4 address, as a string</p> <p>If config file is missing, "" (empty string) is returned</p> <p>Changing the IPV4 value requires a restart of the instrument software, to ensure that servers use the configured IP address</p>
State Saved	No

4.2.11.3 Config IPV6 Address (Remote Command Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:IPV6:CONFig <ipaddress></code> <code>:SYSTem:COMMunicate:LAN:IPV6:CONFig?</code>
Example	<code>:SYSTem:COMMunicate:LAN:IPV6:CONFig "2001:0db8:85a3:0000:0000:8a2e:0370:7334"</code> <code>:SYSTem:COMMunicate:LAN:IPV6:CONFig?</code>
Notes	<p>Applies to instruments that have multiple Network Adapters. When more than one network adapter is present in the system, you must specify in the instrument config file the IP address to use to enable Remoting channel bindings. If this is not provided, Remoting connections are likely to fail on systems where multiple NICs are enabled</p> <p>Sets the valid IPV6 address, passed in as string in the config file</p> <p>The query returns IPV6 address, as a string</p> <p>If config file is missing, "" (empty string) is returned</p> <p>Changing the IPV6 value requires a restart of the instrument software, to ensure servers use the configured IP address</p>
State Saved	No

4.2.11.4 List All Physical Network Adapter IP Addresses (Remote Query Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:PHYSical:IPADdress:LIST?</code>
Example	<code>:SYSTem:COMMunicate:LAN:PHYSical:IPADdress:LIST?</code>

4 System
4.2 I/O Config

:"192.168.1.146,2001:0db8:85a3:0000:0000:8a2e:0370:7334"	
Notes	Returns the IP Addresses of the physical network adapters found in the PC/Instrument
State Saved	No

4.3 Preload / Unload Modes

The X-Series platform supports many Modes. Each Mode that is loaded uses a portion of the total available memory. At some point, this may result in insufficient free memory. This can occur during a measurement, or when loading a new Mode. A limited number of Modes can be loaded without impacting performance.

Preload / Unload Modes allows you to select and enable Modes to be preloaded at startup, and to specify the default **Power-On Mode**.

The dialog includes the following controls:

- "Power-On Mode" on page 3445
- "Table of Modes" on page 3446
- "Preload: Select All, Preload: Deselect All" on page 3446
- "Move Up, Move Down" on page 3446
- "Unload" on page 3446

Modes that are not preloaded may be loaded at runtime as needed, resources permitting. However, note that loading more Modes increases memory consumption and may adversely impact performance.

When a memory-full situation occurs, the instrument notifies you with the following message:

Out of memory; Insufficient resources. Please save state if needed. You have following options:

1. Open System Settings > Configure Preload Modes to unload unused Modes
2. Reconfigure preloaded Modes on the above dialog, close and restart the analyzer SW
3. Close and restart the analyzer SW

Option 1 allows you to unload unused Modes and continue running the software, without having to restart it.

The command `:INSTrument:UNLoad <mode>` provides equivalent functionality; see "Unload" on page 3446.

4.3.1 Power-On Mode

Displays a list of licensed Modes. Use this control to change the factory default Power-On Mode. The instrument will execute the selected Mode after power up. Selecting the Power-On Mode here automatically enables that Mode for preloading.

4.3.2 Table of Modes

The table of Modes becomes scrollable when the number of Modes exceeds the dialog's displayable size.

Use the check boxes in the **Preload** column to enable or disable the preloading of the Modes that you want.

Use the check boxes in the **Unload** column to select the Modes that you want to unload.

The Unload check boxes are grayed-out when the Modes are used by other Modes.

Example:

5G NR & V2X Mode cannot be loaded when either Sequence Analyzer Mode or Power Amplifier Mode are already loaded, because these Modes use 5G NR & V2X Mode. To unload 5G NR & V2X Mode, both Sequence Analyzer Mode and Power Amplifier Mode must be unloaded first.

When the active Mode is unloaded, the screen becomes blank except for the message; **"No Mode is active"**. You can then select another desired Mode.

When multiple screens are open, and a Mode is unloaded, inactive screens that have that Mode as their active Modes are closed.

The active screen is never closed.

4.3.3 Preload: Select All, Preload: Deselect All

Toggles the **Preload** checkbox state for all Applications listed, except for the Power-On Application, which is always selected.

4.3.4 Move Up, Move Down

The default order in which Applications are listed in the table is the order in which they are displayed in the **Mode/Measurement/View** Selector dialog. To change the order in this list, select the desired Application row from the table, then click **Move Up** or **Move Down** to move it to the desired position.

4.3.5 Unload

Unloads the specified Mode.

Remote **:INSTrument:UNLoad <mode>**

Command	
Example	<code>:INST:UNL NR5G</code>
Notes	<p>Error message if the specified Mode is not available, <code>-224,"Illegal parameter value;<mode> is not a valid choice"</code></p> <p>Error message if the specified Mode is not loaded and therefore cannot be unloaded, <code>-221,"Settings conflict;<mode> is not loaded"</code></p> <p>Error message if the specified Mode is used by other Modes and therefore cannot be unloaded, <code>-221,"Settings conflict;<mode> is used by <other modes>"</code></p> <p>Error message if the specified Mode does not support Unload Mode feature and therefore cannot be unloaded, <code>-221,"Settings conflict;Feature not supported for this Mode"</code></p>

4.3.6 Loaded Modes (Remote Query Only)

Returns a list of loaded Modes.

Remote Command	<code>:SYSTem:APPLication:LOADed?</code>
Example	<code>:SYST:APPL:LOAD?</code>
Preset	Not affected by Preset

4.3.7 User Interface

Configures functions specific to the User Interface, such as the menu panel orientation and the display color theme.

4.3.7.1 Menu Panel Position

Allows the Menu Panel to be positioned on the **RIGHT** or **LEFT** side of the display.

Remote Command	<code>:SYSTem:DISPlay:MPPosition RIGHT LEFT</code> <code>:SYSTem:DISPlay:MPPosition?</code>
Example	<code>:SYST:DISP:MPP LEFT</code>
Preset	This is unaffected by Preset but is set to RIGHT by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.2 Menu Panel Tabs

Allows the **Menu Panel Tabs** to be positioned on the **RIGHT** or **LEFT** side of the menu panel.

Remote Command	<code>:SYSTem:DISPlay:MPTab RIGHT LEFT</code> <code>:SYSTem:DISPlay:MPTab?</code>
Example	<code>:SYST:DISP:MPT LEFT</code>
Preset	This is unaffected by Preset but is set to RIGHT by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.3 Annotations Local Settings/All Off

Overrides the annotation settings for all measurement in all modes and turns them all off. This provides the security based "annotation off" function of previous instruments; hence it uses the legacy SCPI command.

When this control is set to **All Off**, the **Screen Annotation**, **Meas Bar**, **Trace Annotation**, and **Control Annotation** controls under the **Display, Annotation** menu are grayed-out and forced to **OFF** for all measurements in all modes. When **Local Settings** is selected, you can set the local annotation settings on a measurement-by-measurement basis.

Remote Command	<code>:DISPlay:WINDow[1]:ANNotation[:ALL] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:ANNotation[:ALL]?</code>
Example	<code>:DISP:WIND:ANN OFF</code>
Preset	This is unaffected by Preset but is set to ON by Restore Defaults > "User Interface" on page 3472, Restore Defaults > "Misc" on page 3473 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)
Backwards Compatibility Notes	The WINDow parameter and optional subopcode is included for backwards compatibility but ignored – all windows are equally affected

4.3.7.4 Display Theme

Allows you to change the **Display Theme**. This is similar to the Themes selection under Page Setup and Save Screen Image.

The two available themes are:

- **FILLED**: this is the normal theme using filled objects
- **OUTLine**: this theme uses color, but does not use fill for most areas on the display. It is ideal for images that need to be printed on inkjet printers. Although setting **Display Theme** to **OUTLine** does not affect screen image saves or prints, it does show you exactly how screen images will look when using the **OUTLine** theme under **Save Screen Image**, and how prints will look when using the **OUTLine** theme under **Page Setup**.

NOTE

Although the **OUTLine** theme eliminates most of the filled area, some objects remain filled. In particular, the selected marker remains filled with the green marker color, to distinguish it from the other markers. This is important, as it is the selected marker whose readout appears in the upper right corner of the display.

Remote Command	<code>:DISPlay:THEMe TDColor TDMonochrome FCOLOR FMONochrome FILLED OUTLine</code> <code>:DISPlay:THEMe?</code>
Example	<code>:SYST:DISP:THEM OUTL</code> sets the display style to OUTLine
Notes	<p>To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from the A-models are mapped as follows:</p> <ul style="list-style-type: none">– TDColor and TDMonochrome are both mapped to FILLED (exact full color representation of what is on the screen)– FCOLOR and FMONochrome are both mapped to OUTLine (uses color for traces and other items, but most filled areas are white) <p>There is no Monochrome theme in the B-model instruments, so the monochrome commands for the A-model instruments yield color themes</p> <p>The query of <code>:DISPlay:THEMe?</code> always returns FILLED or OUTLine. It never returns FCOLOR, FMONochrome, TDColor, or TDMonochrome</p>
Preset	This is unaffected by Preset but is set to FILLED by Restore Defaults > "User Interface" on page 3472, Restore Defaults > "Misc" on page 3473 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.5 Backlight

Turns the display **Backlight** on and off. This setting may interact with settings under the Windows **Power** menu.

When the backlight is **OFF**, pressing ESC, TAB, SPACE, ENTER, UP, DOWN, LEFT, RIGHT, DEL, BKSP, CTRL, or ALT turns the backlight **ON** without affecting the

4 System

4.3 Preload / Unload Modes

application. Pressing any other key turns backlight **ON**, and could potentially perform the action as well.

Remote Command	<code>:DISPlay:BACKlight ON OFF</code> <code>:DISPlay:BACKlight?</code>
Example	Turn backlight ON : <code>:DISP:BACK ON</code> Turn backlight OFF : <code>:DISP:BACK OFF</code>
Preset	Pressing any key turns the backlight back ON , as does Restore Defaults > "User Interface" on page 3472, Restore Defaults > "Misc" on page 3473 or Restore Defaults > "All" on page 3474
State Saved	Not saved in State

4.3.7.6 Backlight Intensity

Allows the **Backlight Intensity** to be controlled from the UI settings panel.

Remote Command	<code>:SYSTem:DISPlay:BACKlight:INTensity <integer></code> <code>:SYSTem:DISPlay:BACKlight:INTensity?</code>
Example	<code>:SYST:DISP:BACK:INT 67</code>
Preset	100
State Saved	Power On Persistent (survives shutdown and restart)
Range	0-100

4.3.7.7 Hints

Hints are descriptions that provide additional information for a control. You can set **Hints** to be enabled or disabled.

Remote Command	<code>:SYSTem:DISPlay:HINTs[:STATe] OFF ON 0 1</code> <code>:SYSTem:DISPlay:HINTs?</code>
Example	<code>:SYST:DISP:HINT OFF</code>
Preset	This is unaffected by Preset but is set to ON by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.8 Numeric Entry Auto Open

Configures whether the **Numeric Entry** Panel will appear immediately when an active function control is activated (Auto Open **ON**), or be deferred until you touch it again or begin to enter a value (Auto Open **OFF**). When configured for Auto Open

OFF (the default), adjusting the value with the front panel Up/Down keys or the RPG hides the **Numeric Entry** Panel.

Remote Command	:SYSTem:DISPlay:NEPimmediate ON OFF 1 0 :SYSTem:DISPlay:NEPimmediate?
Example	:SYST:DISP:NEP OFF
Preset	This is unaffected by Preset but is set to ON by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.9 Touch On/Off

Turns the touch functionality on and off on the display. If **OFF**, you can turn it back on using the front panel **Touch On/Off** key, or by using a mouse to toggle this control.

Preset	Always starts up ON Unaffected by Preset but is turned ON by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Not saved in state, not affected by Preset , not Power On Persistent (does not survive shutdown and restart)

4.3.7.10 Control Size

Configures the size of the controls in the user interface. This can be used to make screen dumps from a large screen instrument match those from a smaller screen instrument, to make the controls more readable on a large-screen instrument, or to display more information on a smaller screen instrument.

Remote Command	:DISPlay:UINterface:CSIZe SMALL LARGE :DISPlay:UINterface:CSIZe?
Example	:DISP:UINT:CSIZ LARGE
Preset	This is unaffected by Preset but is set to SMALL by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.11 Quick Save Mode

When **Quick Save Mode** is **NORMAL** (the default setting), the instrument does an immediate save of a new file of the same type and to the same directory as the previous **Save** action. When **Quick Save Mode** is in the **PROMPT** state, instead of immediately performing a **Save**, the Alpha Keyboard appears with the proposed


4 System
4.3 Preload / Unload Modes

auto-filename in the entry area. You can then press **Enter** to accept the auto filename, or edit the name then press **Enter**. This allows you to easily save a file with a custom file name.

Remote Command	:MMEMory:STORe:QSAVe NORMa1 PROMpt
Example	:MMEM:STOR:QSAV PROM
Preset	This is unaffected by Preset but is set to NORMa1 by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.12 Screen Tabs Left/Right

This switch, when in the **RIGHT** position, makes the screen tabs start on the right and build across to the left, thus minimizing the finger travel over to the screen tab when there is only one screen. When tabs are added from right to left, they appear as below:

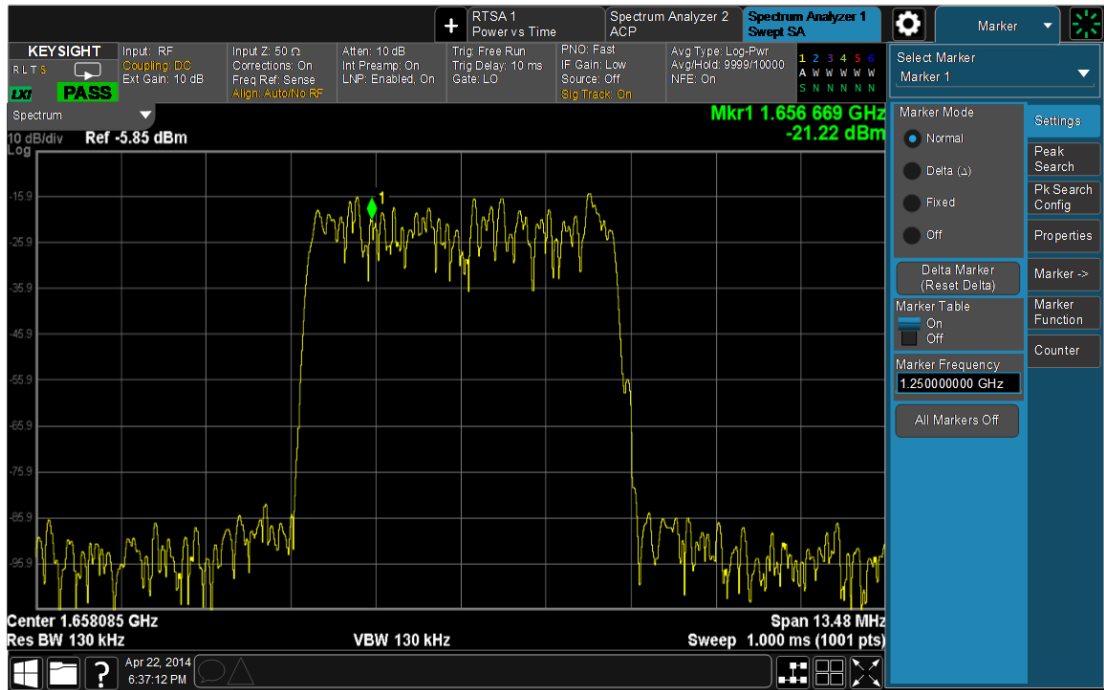


The default is **LEFT**.

Remote Command	:DISPlay:UINTERface:STAB RIGHT LEFT
	:INSTrument:SCReen:STAB?

Example	<code>:DISP:UINT:STAB RIGH</code>
Preset	This is unaffected by Preset but is set to LEFT by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.13 Hide Screen Tabs in Full Screen


This switch, when in the **ON** position, causes the Screen Tabs to be hidden when in Full Screen view, thus maximizing the display area available for results. By also turning off the Meas Bar (in the **Display, Annotation** menu), you can maximize the available area for results, as shown below:

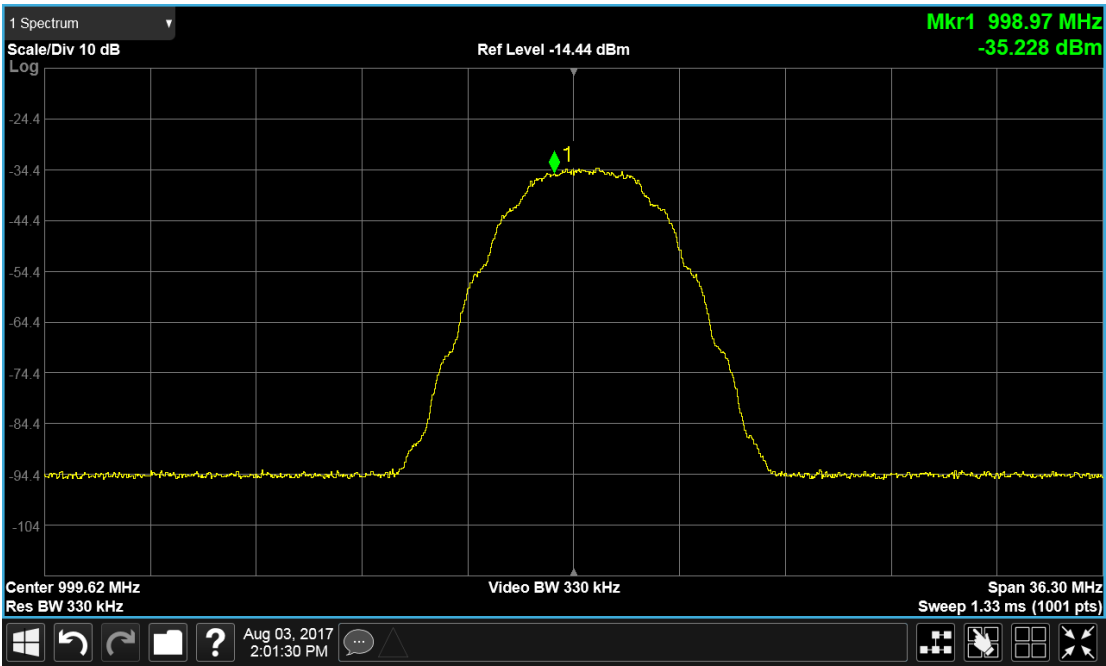


Remote Command	<code>:DISPlay:UINterface:HTABs ON OFF 1 0</code> <code>:DISPlay:UINterface:HTABs?</code> <code>:DISPlay:UINterface:STFScreen ON OFF 1 0</code> Implemented but with wrong sense; ON turns them off and OFF turns them on; so, don't document to customer
Example	<code>:DISP:UINT:HTAB ON</code> Hide the tabs in full screen
Preset	This is unaffected by Preset but is set to OFF by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.3.7.14 2-Screen Orientation

When you add a second Screen using the “+” control on the Screen Tabs bar, normally the screen is added to the right of the first screen. However, sometimes it is better to add the new screen below the first screen rather than to the right, as shown below.

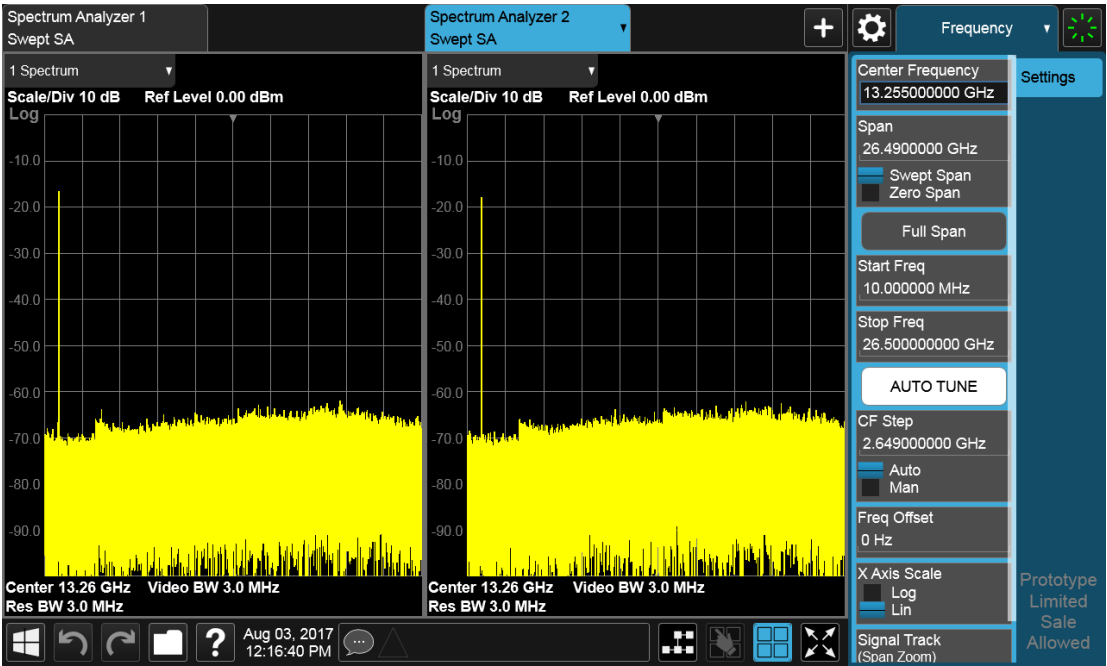

New screen added to the right (horizontal orientation)

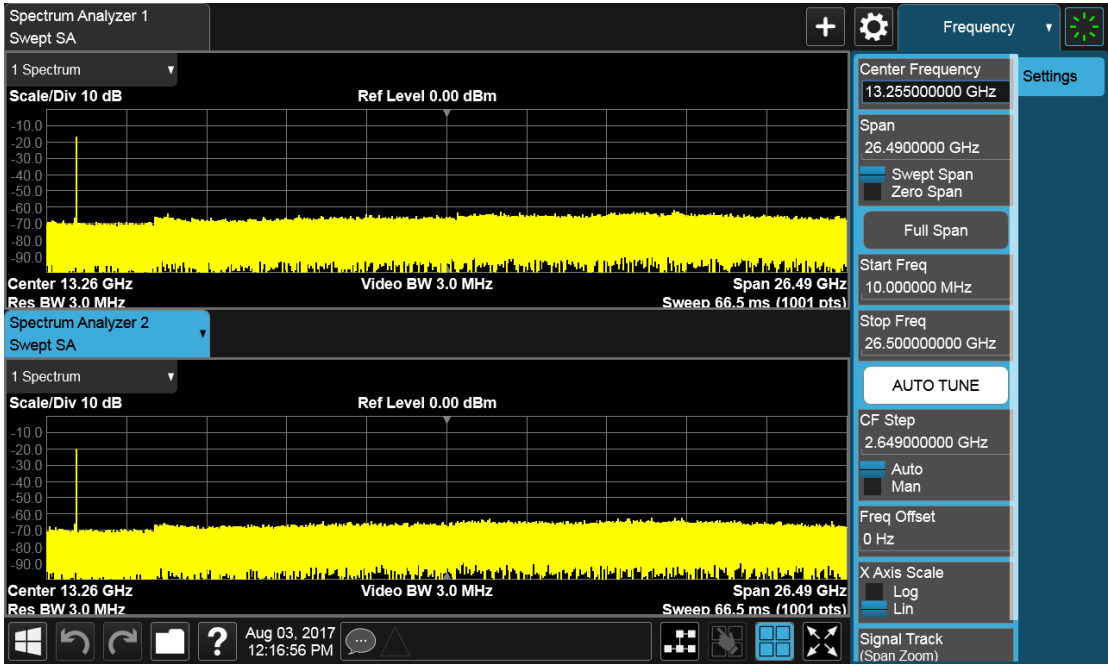

New screen added below (vertical orientation)

The **2-Screen Orientation** switch allows you to choose between these two orientations for 2-Screen configurations. The default is the **HORizontal** configuration, two Screens side-by-side.

Remote Command	<code>:INSTrument:SCReen:ORientation VERTical HORizontal</code>
Example	<code>:INST:SCR:ORI VERT</code> Set the 2 screens to be above/below each other
Preset	HOR This is unaffected by Preset but is set to HORizontal by Restore Defaults > "User Interface" on page 3472 or Restore Defaults > "All" on page 3474

4.3.7.15 Clock Format

Allows the **Clock Format** to be switched between 12-Hour Format (**HR12**) and 24-Hour Format (**HR24**).

Remote Command	<code>:SYSTem:DISPlay:CFORmat HR12 HR24</code> <code>:SYSTem:DISPlay:CFORmat?</code>
Example	<code>:SYST:DISP:CFOR HR12</code>
Preset	HR12
State Saved	Power On Persistent (survives shutdown and restart)
Range	12-Hour 24-Hour

4.3.7.16 Language

Accesses the selection of **Language** displayed on the menus and controls. **ENGLISH** is the default.

All Measurement Applications that share common controls will display the localized controls.

The description on the control labels is bounded by the control size. Any given language will have labels in that language that are shorter or longer than the equivalent label in English. Any localized text on the controls that does not fit the label size remains in English. Thus, for any given menu, controls may be displayed in English *and* the selected language.

- Labels that are acronyms, engineering, or technology specific terms may remain in English.
- All Application and Measurement names remain in English.
- All data in exported files remain in English.
- The Diagnostic and Service menus in the System Subsystem remain in English.
- The Windows operating system must remain in English. Changing the **Region and Language** settings in the Windows Control Panel is not supported.

External keyboards in English are supported. Localized external keyboards are not supported. When the language selected is not English, a message is displayed to explain that any external keyboard must remain in English.

Other aspects of the Graphical User Interface remain in English. The Remote User Interface (SCPI) remains in English.

Remote Command	:SYSTem:DISPlay:LANGuage ENGLISH RUSSian :SYSTem:DISPlay:LANGuage?
Example	:SYST:DISP:LANG ENGL :SYST:DISP:LANG RUSS Requires Option AKT
Preset	This is unaffected by Preset but is set to ENGLISH by Restore Defaults > "User Interface" on page 3472, Restore Defaults > "Misc" on page 3473 or Restore Defaults > "All" on page 3474

4.3.7.17 Restore User Interface Defaults

Causes the group of settings associated with the **User Interface** menu to be reset to their default values. This also happens on **Restore Misc Defaults**.

When **User Interface** is selected, a message appears saying:

This will reset all of the User Interface variables to their default state, including the menu panel location, display theme, and language.

It will not affect Alignment data or settings.

This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons for you to affirm or cancel the operation.

Example	:SYST:DEF UINT
---------	----------------

4.3.7.18 User Interface Type (Remote Query Only)

Use this query to determine if the instrument is running the Multi-Touch user interface or Softkey user interface. This is an easy way to distinguish between A-models (Softkey) instruments and Touch UI (Multi-Touch) instruments.

Remote Command	:DISPlay:UINterface:TYPE?
Example	:DISP:UINT:TYPE?
Notes	The query returns MULTITOUCH for instruments with the Multi-Touch UI or SOFTKEY for instruments with the Softkey UI

4.4 Power On

Lets you select how the instrument should power on.

NOTE

In products that run multiple instances of the X-Series Application, the same Power On type is shared between all the instances.

4.4.1 Power On State

Lets you select whether the instrument powers up in a default state, or some other state. The options are:

- **MODE** and Input/Output Defaults
- **USER** Preset
- **LAST** State

Remote Command	:SYSTem:PON:TYPE MODE USER LAST :SYSTem:PON:TYPE?
Example	:SYST:PON:TYPE MODE :SYST:PON:TYPE USER :SYST:PON:TYPE LAST
Preset	This is unaffected by Preset but is set to MODE by Restore Defaults > "All" on page 3474
State Saved	No
Backwards Compatibility SCPI	:SYSTem:PON:TYPE PRESet The PRESet parameter is supported for backward compatibility only, and behaves the same as MODE

Mode and Input/Output Defaults

When the instrument is powered-on in **MODE** and Input/Output Defaults, it performs "Restore Mode Defaults" on page 3586 for all Modes in the instrument, and performs **Restore Input/Output Defaults**.

Persistent parameters (such as Amplitude Correction tables or Limit tables) are not affected at power-on, even though they are normally cleared by **Restore Input/Output Defaults** and/or **Restore Mode Defaults**.

User Preset

Sets **Power On State** to **USER** Preset. When the instrument is powered on in User Preset, it will **User Preset** each mode and switch to the "**Power On Application**" on page 3460. **Power OnUser Preset** does not affect any settings other than those set by a normal **User Preset**.

Backwards Compatibility Note: Power On: **User Preset** causes the instrument to power up in the "**Power On Application**" on page 3460, *not* the last Mode the instrument was in prior to shutdown. Also, **Power On: User Preset** will **User Preset** all Modes. This does *not* exactly match legacy behavior.

NOTE

In products that run multiple instances of the X-Series Application, the same **User Preset** is shared between all the instances.

NOTE

An instrument can never power up for the first time in **USER** preset.

Last State

Sets **Power On State** to **LAST**. When the instrument is powered on, it will put all modes in the last state they were in prior to when the instrument was put into Power Standby, and it will start up in the mode it was last in prior to powering off the instrument. The saving of the active mode prior to shutdown happens behind the scenes when a controlled shutdown is requested, either via the front panel **Standby** key, or the remote command **:SYSTem:PDOWn**. The non-active modes are saved as they are deactivated and recalled by Power On: Last State.

Power On: Last State only works if you completed a controlled shutdown prior to powering on in **LAST**. If a controlled shutdown is not completed when in **Power On: Last State**, the instrument powers up in the last active Mode, but it may not power up in the active Mode's last state. If an invalid Mode state is detected, a **Mode Preset** occurs. To control the shutdown under remote control, use **:SYSTem:PDOWn**.

Backwards Compatibility Note: It is no longer possible to power-up the instrument in the last Mode the instrument was running with that Mode in the preset state. (ESA/PSA **SYST:PRESET:TYPE MODE** with **SYST:PON:PRESET**) You can power-on the instrument in the last Mode the instrument was running in its last state (**:SYST:PON:TYPE LAST**), or you can specify the Mode to power-up in its preset state (**:SYST:PON:MODE <mode>**).

NOTE

In products that run multiple instances of the X-Series Application, each instance has a unique **Last State**.

NOTE

An instrument can never power up for the first time in **LAST**.

If line power to the instrument is interrupted, for example by pulling the line cord plug or by switching off power to a test rack, **Power On Last State** may not work properly. For proper operation, **Power On Last State** depends on your shutting down the instrument using the **Standby** key or the `:SYSTem:PDOWn` command. This ensures the last state of each Mode is saved and can be recalled during a power-up.

4.4.2 Power On Application

Accesses a menu that lists the available Modes, and lets you select which Mode is to be the **Power On Application**. Whichever application is selected runs at power-on when the Power On Type is set to “**MODE** and Input/Output Defaults”.

NOTE

In products that run multiple instances of the X-Series Application, the same Power On Application is shared between all the instances.

Remote Command	<code>:SYSTem:PON:MODE <mode></code> where <code><mode></code> is an item from the same set that can be sent using the <code>:INSTrument[:SElect]</code> command <code>:SYSTem:PON:MODE?</code>						
Example	<code>:SYST:PON:MODE SA</code>						
Notes	The displayed list of possible Modes (and remote parameters) depends on which Modes are installed in the instrument						
Preset	Unaffected by Preset but is set by Restore Defaults > "All" on page 3474 to SA , except in the cases noted below: <table><tr><td>N8973B, N8974B, N8975B, N8976B</td><td>NFIG</td></tr><tr><td>VXT models</td><td>BASIC</td></tr><tr><td>M9410E/11E/15E/16E</td><td>BASIC</td></tr></table>	N8973B, N8974B, N8975B, N8976B	NFIG	VXT models	BASIC	M9410E/11E/15E/16E	BASIC
N8973B, N8974B, N8975B, N8976B	NFIG						
VXT models	BASIC						
M9410E/11E/15E/16E	BASIC						
State Saved	No						

4.4.3 FPGA Configuration

Lets you choose which FPGA image you want loaded into the instrument.

Depending on your hardware configuration, your instrument may contain a Field Programmable Gate Array (FPGA) which handles much of the processing for some of the mathematically intensive features, such as Time Domain Scan (Option TDS) and Enhanced Sweep Speed (Option FS2). The FPGA is not big enough to hold the

functionality for both options, so you must decide which FPGA program you want loaded.

When licenses allow for both FPGA image versions to be available, and you have not explicitly chosen an FPGA image version, then, when the firmware is updated, the Time Domain Scan version will be loaded. In the absence of all licenses, the Enhanced Sweep Speed version will be loaded. Once you have explicitly chosen an FPGA image version, using the FPGA Configuration dialog, any future firmware updates will continue to load the chosen version as long as it is licensed.

Example: loading the Time Domain Scan FPGA image, removing the TDS license, and then updating the firmware will result in the Enhanced Sweep Speed version being loaded.

When multiple capabilities are licensed, the FPGA Configuration presents a dialog that tells you that there is insufficient space to fit all the licensed capabilities, and asks you to choose one of the FPGA programs (images).

If you remove licenses, it is possible to end up with an unlicensed capability loaded in the FPGA while a licensed capability is not loaded. In this case, the dialog does not present the **Preference** group and shows a message about unlicensed/licensed capabilities. You can dismiss the dialog if the licensed capability is not currently needed, and you do not want to take the time to load the licensed FPGA image. However, this dialog will continue to appear each time the instrument is restarted.

Behavior when the Enhanced Sweep Speed FPGA Image is Loaded

When the Enhanced Sweep Speed version of the FPGA image is loaded, sweep behavior still depends on the licenses:

- Option FS2 gives full FPGA enhanced sweep speed
- Option FS1 gives software implemented enhanced sweep speed
- Neither Option FS1 nor FS2 – no enhanced sweep speed
- Both Options FS1 and FS2 – same as Option FS2, the full FPGA enhanced sweep speed

If EMI Receiver Mode and TDS option are licensed, and the Enhanced Sweep Speed FPGA image is loaded, then you will not have the proper FPGA image loaded to fully support EMI Receiver Mode. In particular, the Frequency Scan measurement cannot use Scan Type “Time Domain Scan” (this is the normally the default Scan Type for instruments with the TDS option). Instead, EMI Receiver Mode behaves as if the TDS option is not licensed.

Behavior when the Time Domain Scan FPGA Image is loaded

When the Time Domain Scan version of the FPGA image is loaded, EMI Receiver Mode works as expected with the TDS option licensed, but the Option FS2 capability

silently reverts to FS1 behavior.

Switching Between Enhanced Sweep Speed and Time Domain Scan FPGA Images

You cannot have both full TDS and FS2 images at the same time, so to switch to the other image, you must go through the process of reloading the FPGA by choosing the desired image with the Selected FPGA control, and pressing **"Load FPGA"** on [page 3464](#), or issuing the "Load FPGA" SCPI command below with the proper parameter.

Incorrect FPGA Configuration

If EMI Receiver Mode, Option TDS, or Option FS2 license is removed while the FPGA image for that license is loaded, the instrument ends up in an incorrect configuration, since the loaded FPGA image version has support for unlicensed functionality that is not accessible and does not support the currently licensed functionality. It will still function, but when the instrument recognizes this situation at startup, it automatically displays the **FPGA Configuration** dialog. The only selections available will be the licensed ones, but you can choose to dismiss the dialog and continue with the current FPGA image version if you do not want to take the time to load the correct FPGA image. The dialog will continue to be presented at each startup until the correct FPGA image is loaded.

FPGA Updates When Firmware Installs

The FPGA image and X-Series firmware are tightly coupled, so whenever the firmware is updated, the FPGA image is also checked and updated if needed. The rules for choosing between Time Domain Scan and Enhanced Sweep Speed versions of the FPGA image are:

1. Always use Time Domain Scan FPGA image for MXE
2. If neither EMC Mode nor Option TDS nor Option FS2 are licensed, the Enhanced Sweep Speed FPGA image is loaded
3. If EMC Mode and Option TDS are licensed and Option FS2 is not licensed, the Time Domain Scan FPGA image is loaded
4. If EMC Mode and Option TDS are not licensed, and Option FS2 is licensed, the Enhanced Sweep Speed FPGA image is loaded
5. If all are licensed
 - a. If **"FPGA Load Preference"** on [page 3463](#) is **Time Domain Scan**, the Time Domain Scan FPGA image is loaded

- b. If **FPGA Load Preference** is **Enhanced Sweep Speed**, the Enhanced Sweep Speed FPGA image is loaded
- c. If **FPGA Load Preference** is **Prompt at Startup**:
 - a. If the last FPGA Configuration Load was Time Domain Scan, the Time Domain Scan FPGA image is loaded
 - b. If the last FPGA Configuration Load was Enhanced Sweep Speed, the Enhanced Sweep Speed FPGA image is loaded
 - c. If no FPGA has been explicitly loaded, the Time Domain Scan FPGA image is loaded

4.4.3.1 FPGA Load Preference

Select either image from the radio buttons at the top of the dialog:

Option	SCPI	Description
Time Domain Scan	TDS	Load the Time Domain Scan version of the FPGA image
Enhanced Sweep Speed	FS2	Load the Enhanced Sweep Speed version of the FPGA image
Prompt at Startup	PROMpt	Prompt at each startup, displaying the FPGA Configuration dialog. You can choose to continue with the currently loaded FPGA image version, or load a different version

If you select the image that is already loaded, you will not be prompted again. If you select a different one, the Selected FPGA control changes to that one and you must then press "**Load FPGA**" on page 3464 to load the other image.


When installing new firmware, the **FPGA Load Preference** setting is used to load the preferred FPGA image version if more than one version is available. Selecting **Prompt at Startup** causes you to be prompted at each startup to select the desired version of the FPGA image.

Remote Command	:SYSTem:PON:FPGA:PREference TDS FS2 PROMpt
Example	:SYST:PON:FPGA:REF TDS :SYST:PON:FPGA:REF?
Notes	This SCPI is always available, but if the hardware does not support multiple FPGA image choices, the returned value is always: NA = Not available for this hardware Also, when not supported, any attempt to change away from NA generates error -224, "Illegal parameter value"
Dependencies	Dialogs and menus available only when EMC Mode, Option TDS and Option FS2 are all licensed

Preset	PROMpt
	Not affected by Mode Preset but set to PROMpt by Restore Defaults > "All" on page 3474 or Power On

4.4.3.2 Load FPGA

Depending on the "FPGA Load Preference" on page 3463 selection, there may be a mismatch between the desired FPGA image, and the one that is currently loaded. In that case the Load FPGA control at the bottom of the dialog is not grayed-out, and you must press it to actually load the desired FPGA image. The image that is currently loaded is shown on the right:

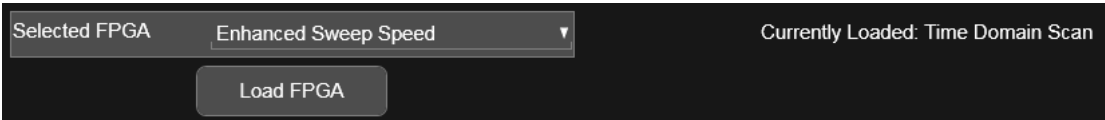

If you have a mismatch, but do not actually load the other image, the FPGA Load Preference is remembered, but the image you had before remains until you return to this dialog and press Load FPGA, or until the next time the instrument firmware is updated.

If you press Load FPGA, the X-series software exits, the FPGA update program runs, and the instrument reboots. After rebooting, the new image will be loaded in the FPGA.

NOTE This can take 15 minutes or more.

CAUTION If power is lost during the FPGA load process, the FPGA can become corrupted, in which case the only solution is to return it to Keysight for servicing.

Remote Command	:SYSTem:PON:FPGA:LOAD TDS FS2
Example	:SYST:PON:FPGA:LOAD TDS For options, see Dependencies row below :SYST:PON:FPGA:LOAD?
Notes	If the specified FPGA image version is the one already loaded, then the command does nothing. If the FPGA image needs to change, the analyzer software exits (terminating the SCPI session), and the FPGA update utility is launched. Once the FPGA has updated, the instrument will reboot This SCPI is always available, but if the hardware does not support multiple FPGA image choices, the value returned is always: NA = Not available for this hardware Also, when not supported, any attempt to change away from NA generates error -224, "Illegal parameter value"
Dependencies	Available only when there are multiple versions of the FPGA image that could be loaded

	<p>Selection limited to licensed features:</p> <ul style="list-style-type: none"> - TDS selection requires EMC Mode and Option TDS - FS2 requires Option FS2 <p>The UI is blanked when there is only one licensed selection, and that selection is already loaded. Sending the SCPI for an unlicensed selection results in error: -224, "Illegal parameter value; <option> is not licensed"</p>
Preset	None. Not affected by Mode Preset nor any "Restore Defaults" on page 3471

4.4.4 Restore Power On Defaults

This selection causes the **Power On** settings to be reset to their default values.

When this button is pressed, a message appears saying:

*This will reset Power On State and Power On Application to their default state.
It will not affect Alignment data or settings.
This action cannot be undone. Do you want to proceed?*

The message provides **OK** and **Cancel** buttons for you to confirm or cancel the operation.

Example	:SYST:DEF PON
---------	----------------------

4.4.5 Configure Applications – Desktop application

The **Configure Applications** utility runs from the instrument's desktop. You must close the Instrument Application before running **Configure Applications**.

This utility can be used to:

- select applications (Modes) for preload
- determine how many Modes can fit in memory at one time
- specify the order of the Modes in the Mode menu.

The utility consists of a window with instructions, a set of **Select Application** checkboxes, a "fuel bar" style memory gauge, and keys that help you set up your configuration.

NOTE

In products that run multiple instances of the X-Series Application, the same **Configure Applications** utility is shared between all the instances.

For more details, see the following topics:

- "Preloading Applications" on page 3466
- "Access to Configure Applications utility" on page 3466
- "Virtual memory usage" on page 3467

Example

Display the Config Applications screen:

`:SYST:SHOW CAPP`

Preloading Applications

During runtime, if a Mode that is not preloaded is selected using the **Mode** menu or by sending SCPI commands, there will be a pause while the Application is loaded. During this pause, a message that says "**Loading application, please wait ...**" is displayed. Once loaded, the application stays loaded, so the next time you select it during a session, there is no delay.

Preloading lets you "preload" at startup, to eliminate the runtime delay. Preloading an application causes it to be loaded into the instrument's memory when the analyzer program starts up. If you do this, the delay will increase the time it takes to start up the analyzer program, but this may be preferable to having to wait the first time you select an application. Note that, once an application is loaded into memory, it cannot be unloaded without exiting and restarting the analyzer program.


Note that there are more applications available for X-Series than can fit into Windows Virtual Memory. By allowing you to choose which licensed applications to load at startup, the **Configure Applications** utility allows you to make optimal use of the instrument memory.

Access to Configure Applications utility

A version of the utility runs the first time you power up the instrument after purchasing it from Keysight. The utility automatically configures preloads so that as many licensed applications as possible are preloaded while keeping the total estimated virtual memory usage below the limit. This auto-configuration only takes place at the very first run, and after analyzer software upgrades.

At any time, you can manually start the **Configure Applications** utility by closing the analyzer application and double-tapping the **Configure Applications** icon on the desktop.

The utility's main dialog looks like this:

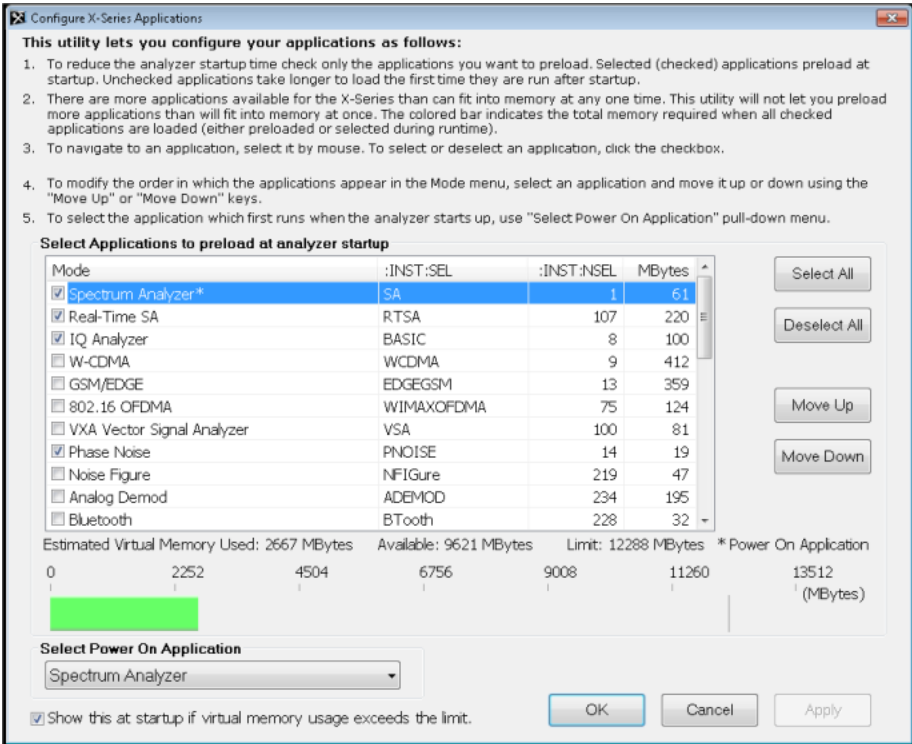

Instructions are provided below and in the utility. Use the utility to find a configuration that works best for you, and then restart the analyzer program.

- Select All** Marks all applications in the selection list. This allows you to enable all applications licensed on the instrument for pre-loading, or is a convenience for selecting all applications in one operation and then letting you deselect individual applications
- Deselect All** Clears the marks from all applications in the selection list, except the Power On application. The Power On application cannot be eliminated from the pre-load list
- Move Up** The application list is the order that applications appear in the Mode Menu. These keys let you shift the selected application up or down in the list, thus moving the selected application earlier or later in the Mode Menu
- Move Down**
- Select Power On Application** This is the same as the "Power On Application" selection on the Power On page of the System Settings dialog

Virtual memory usage

There are more applications available for X-Series than can fit into memory at any one time, so the **Configure Applications** utility includes a memory tracker that serves two purposes:

1. It will not let you preload more applications than will fit into memory at once
2. You can determine how many of your favorite applications can reside in memory at one time

The utility provides a graphical representation of the amount of memory (note that the amount of memory shown here is *virtual* memory, which is a limitation imposed by the operating system, not by the amount of physical memory you have in your instrument). You select applications to preload by checking the boxes on the left. Checked applications preload at startup. The colored fuel bar indicates the total memory required when all the checked applications are loaded (either preloaded or selected during runtime).

Here is what the fuel bar colors mean:

- RED: the applications you have selected cannot all fit into the instrument's memory. You must deselect applications until the fuel bar turns yellow
- YELLOW: the applications you have selected can all fit into the instrument's memory, but there is less than 10% of the memory left, probably not enough to load any other applications, either via preload or by selecting a Mode while the instrument is running
- GREEN: The indicator is green when <90% of the memory limit is consumed. This means the applications you have selected can all fit into the instrument's memory with room to spare. You will be able to load one or more other applications without running out of memory

If Sequence Analyzer is selected to be preloaded, all apps that are part of the Sequencer Mode (GSM/EDGE, WCDMA, CDMA2K and 1xEVDO) are preloaded (if licensed).

4.4.6 Configure Applications - Instrument boot-up

When the Instrument Application starts, a dialog box similar to the one you see when you run **Configure Applications** is displayed, allowing you to choose which licensed applications are to be loaded. This dialog is only displayed if the memory required to pre-load all the licensed applications exceeds the virtual memory available.

4.4.7 Configure Applications - Remote Commands

The following topics provide details on using remote commands to configure the list of applications you want to load into the instrument memory, or query the virtual memory utilization for your applications.

- "Configuration list (Remote Command Only)" on page 3469
- "Configuration Memory Available (Remote Query Only)" on page 3469
- "Configuration Memory Total (Remote Query Only)" on page 3469
- "Configuration Memory Used (Remote Query Only)" on page 3470
- "Configuration Application Memory (Remote Query Only)" on page 3470

4.4.7.1 Configuration list (Remote Command Only)

Used to set or query the list of applications to be loaded in-memory.

Remote Command	<code>:SYSTem:PON:APPLication:LLISt <string of INSTRument:SElect names></code> <code>:SYSTem:PON:APPLication:LLISt?</code>
Example	<code>:SYST:PON:APPL:LLIS "SA,BASIC,WCDMA"</code>
Notes	<p><code><string of INSTRument:SElect names></code> contains items that are valid options for the <code>:INSTRument:SElect</code> command</p> <p>The order of the <code><INSTRument:SElect names></code> specifies the order in which the applications are loaded into memory, and the order that they appear in the Mode menu</p> <p>Error message -225 "Out of Memory" is reported when more applications are listed than can reside in virtual memory. When this occurs, the existing applications load list is unchanged</p>
Preset	Not affected by Preset
State Saved	Not saved in instrument state

4.4.7.2 Configuration Memory Available (Remote Query Only)

Returns the amount of Virtual Memory remaining.

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory[:AVAilable]?</code>
Example	<code>:SYST:PON:APPL:VMEM?</code>
Preset	Not affected by Preset

4.4.7.3 Configuration Memory Total (Remote Query Only)

Returns the limit of Virtual Memory allowed for applications.

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory:TOTal?</code>
Example	<code>:SYST:PON:APPL:VMEM:TOT?</code>
Preset	Not affected by Preset

4.4.7.4 Configuration Memory Used (Remote Query Only)

Returns the amount of Virtual Memory used by all measurement applications.

Remote Command	:SYSTem:PON:APPLication:VMEMory:USED?
Example	:SYST:PON:APPL:VMEM:USED?
Preset	Not affected by Preset

4.4.7.5 Configuration Application Memory (Remote Query Only)

Returns the amount of Virtual Memory a particular application consumes.

Remote Command	:SYSTem:PON:APPLication:VMEMory:USED:NAME? <INSTrument:SElect name>
Example	:SYST:PON:APPL:VMEM:USED:NAME? CDMA2K
Notes	<INSTrument:SElect name> is an item from the same set used by the :INSTru-ment:SElect command If the name provided is invalid, 0 (zero) is returned
Preset	Not affected by Preset

4.5 Restore Defaults

Provides initialization of system setting groups, including the option to set the entire instrument back to a factory default state.

NOTE

In products that run multiple instances of the X-Series Application, all instances have the same factory default states for **Restore Defaults**.

Remote Command	:SYSTem:DEFault [ALL] ALIGn INPut MISC MODes PON UINTerface SCReen
Example	:SYST:DEF
State Saved	No

4.5.1 Input/Output

Input/Output Preset resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by a **Mode Preset** because they are associated with connections to the instrument, which you will probably not want to reset every time you press **Mode Preset**.

By using **Input/Output Preset** and "Restore Mode Defaults" on page 3586, a full preset of the current mode will be performed, with the caveat that since **Input/Output Preset** is a global function, it will affect *all* modes.

This is the same as the **Input/Output Preset** button in the **Preset** dropdown and the **Input/Output** menu.

When **Input/Output** is selected, a message appears saying:

This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to confirm or cancel the operation.

Example	:SYST:DEF INP
---------	---------------

4.5.2 I/O Config

Causes the group of settings associated with the **I/O Config** menu to be reset to their default values. This also happens on **Restore Misc Defaults**, which has a SCPI command, although **I/O Config** does not.

When **I/O Config** is selected, a message appears saying:

This will reset all of the I/O Config variables to their default state, including the GPIB address and SCPI LAN settings

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

4.5.3 User Interface

Causes the group of settings associated with the **User Interface** menu to be reset to their default values. This also happens on a **Restore Misc Defaults**.

When **User Interface** is selected, a message appears saying:

This will reset all of the User Interface variables to their default state, including the menu panel location, display theme, and language

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

Example	:SYST:DEF UINT
---------	----------------

4.5.4 Power On

Causes the **Power On** settings to be reset to their default values.

The Power On settings are **Power On State** and **Power On Application**.

When **Power On** is selected, a message appears saying:

This will reset Power On State and Power On Application to their default state

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

Example `:SYST:DEF PON`

4.5.5 Alignments

Causes the **Alignments** system settings to be reset to their default values. This does not affect any Alignment data stored in the system.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

When **Alignments** is selected, a message appears saying:

This will reset all of the settings for the Alignment system to their default values

No alignment data will be erased

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

Example `:SYST:DEF ALIG`

4.5.6 Misc

Causes miscellaneous system settings to be reset to their default values.

CAUTION This function resets the GPIB address to 18.

When **Misc** is selected, a message appears saying:

This will reset miscellaneous system settings to their default values. This includes settings for I/O Config (GPIB and SCPI LAN), the User Interface, the Save/Recall system, and the Preset type

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

This Miscellaneous group contains settings that are *not* part of the other Restore Defaults groups. These include:

- All settings on the **I/O Config** page of the **System Settings** dialog
- All settings in the following table:

Miscellaneous Setting	Default Value
The SYST:PRES:TYPE	MODE
Auto File Name Number	000
Save Type	State
State Save To	Register 1
Screen Save To	SCREEN000.png
Save/Recall Shortcuts	Deleted
Display Theme	Filled
Backlight	ON
System Annotation	Local Settings
Language	English
DISP:ENABLE	ON
Full Screen	Off

Example :SYST:DEF MISC

4.5.7 All

Comprehensively resets **All** instrument settings to their factory default values.

Resets all **System Settings** groups, performs "Restore Mode Defaults" on page 3586 for all Modes in the instrument, and switches back to the power-on mode. Does not affect the User Preset file, or any user saved files.

When **All** is selected, a message appears:

This will reset all of the settings in the instrument to their factory default values, including the state of all Modes and Screens, the GPIB settings, the Alignment settings, and the Power On Mode

It will not affect Alignment data or settings

This action cannot be undone. We recommend canceling this operation and restoring settings individually (I/O Config, User Interface, Alignments, etc.) instead

Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to confirm or cancel the operation.

NOTE If you are using a Keysight USB External Mixer, then you will need to perform **Refresh USB Mixer Connection** (SCPI command :MIX:BAND USB) after **Restore Defaults > All**.

Example	:SYST:DEF ALL
Couplings	All causes the currently running measurement to be aborted, and sets all modes to a consistent state, so it is unnecessary to couple any settings
	Backwards Compatibility SCPI
Notes	:SYST:PRES:PERS is the same as :SYST:DEF ALL
Backwards Compatibility SCPI	:SYSTem:PRESet:PERSiStent

4.6 Alignments

Accesses the alignment system of the instrument. You can control the automatic alignments, view alignment statistics and manually perform alignments.

The current setting of the alignment system is displayed in the Meas Bar along the top of the display. For conditions that may cause specifications to be impacted, this annotation will be in amber.

4.6.1 Auto Align

Lets you configure the automatic background alignments and the alerts from the automatic alignment system.

Dependencies	Does not appear in VXT or M9410E/11E/15E/16E
--------------	--

4.6.1.1 Auto Align

Configures the method the automatic background alignment will use when it runs.

Automatic background alignments are run periodically between measurement acquisitions. The instrument’s software determines when alignments are to be performed to maintain warranted operation. The recommended setting for Auto Align is Normal.

Auto Align execution *cannot* be aborted with the **Cancel (ESC)** key. To interrupt **Auto Align** execution, select **Auto Align Off**.

Remote Command	<code>:CALibration:AUTO ON LIGHT PARTial OFF</code> For details of each option, see "Auto Align Options" on page 3477 <code>:CALibration:AUTO?</code>
Example	<code>:CAL:AUTO ON</code>
Notes	While Auto Align is executing, bit 0 of Status Operation register is set
Couplings	Auto Align is set to Off if Restore Align Data is invoked
Preset	This is unaffected by Preset but is set to ON by Restore Defaults > "Alignments" on page 3473
State Saved	No
Annotation	In the Meas Bar: <ul style="list-style-type: none">– Normal with “All But RF” off: Auto (white)– Normal with “All But RF” on: Auto/No RF (amber)– Partial: Partial (amber)

	– Off: Off (amber)
Status Bits/OPC dependencies	When Auto Align is executing, Bit 0 in the Status Operational register is set An interfering signal at the RF Input may prevent automatic alignment of the RF subsystem. If this occurs, the Error Condition message “Align RF skipped” is reported, the Status Questionable Calibration bit 11 is set, and the alignment proceeds. When a subsequent alignment of the RF subsystem succeeds, either by the next cycle of automatic alignment or from an Align Now, RF, the Error Condition and Status Questionable Calibration bit 11 are cleared
Backwards Compatibility SCPI	:CALibration:AUTO ALERT Parameter ALERT is for backwards compatibility only, and is mapped to PARTial

Auto Align Options

The available settings for Auto Align are as follows:

Normal

SCPI example :CAL:AUTO ON

Auto Align, Normal turns on the automatic alignment of all measurement systems. This selection maintains the instrument in warranted operation across varying temperature and over time.

If the condition “Align Now All required” is set, transitioning to **Auto Align, Normal** performs the required alignments, clears the “Align Now All required” condition, then continues with further alignments as required to maintain the instrument adequately aligned for warranted operation.

When **Auto Align, Normal** is selected, the **Auto Align Off** time is set to zero.

When **Auto Align, Normal** is selected, the Meas Bar indicates Align: Auto (in white) or Align: Auto/No RF (in amber). The amber color reminds you that you are responsible for maintaining the RF alignment of the instrument.

Alignment processing because of the transition to **Normal** is executed sequentially. Thus, *OPC? or *WAI following :CAL:AUTO ON will return when the alignment processing is complete.

Light

SCPI example :CAL:AUTO LIGH

Auto Align, Light turns on the automatic alignment of all measurement systems. The **Auto Align, Light** selection allows more drift in amplitude accuracy to allow much less frequent measurement interruptions to perform alignments. The temperature changes required to trigger each alignment are increased by a factor of three. Alignments also expire from time as well as temperature. In a stable thermal

environment, the alignments occur one-ninth as often as in Normal. With these less frequent alignments, all accuracy specifications (those expressed with $\pm x$ dB tolerances) change by nominally a factor of 1.4.

If the condition “Align Now, All required” is set, transitioning to **Auto Align, Light** performs the required alignments, clears the “Align Now, All required” condition, and continues with further alignments as required to maintain the instrument adequately aligned for warranted operation.

Alignment processing because of the transition to **Light** is executed sequentially. Thus, ***OPC?** or ***WAI** following **:CAL:AUTO LIGHT** will return when the alignment processing is complete.

When **Auto Align, Light** is selected, the **Auto Align Off** time is set to zero.

When **Auto Align, Light** is selected, the Settings Panel indicates Align: Light.

Partial

SCPI example **:CAL:AUTO PART**

Auto Align, Partial disables the full automatic alignment and the maintenance of warranted operation for the benefit of improved measurement throughput. Accuracy is retained for the Resolution Bandwidth filters and the IF Passband, which is critical to FFT accuracy, demodulation, and many measurement applications. With Auto Align set to Partial, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the Align All, Now operation. Another is to return the Auto Align selection to Normal.

Auto Align, Partial is recommended for measurements where the throughput is so important that a few percent of improvement is more valued than an increase in the accuracy errors of a few tenths of a decibel. One good application of **Auto Align, Partial** would be an automated environment where the alignments can be called during overhead time when the device-under-test is exchanged.

When **Auto Align, Partial**, is selected the elapsed time counter begins for **Auto Align Off** time.

When **Auto Align, Partial** is selected, the Settings Panel indicates Align: Partial in an amber color. The amber color reminds you that you are responsible for maintaining the warranted operation of the instrument.

Off

SCPI example **:CAL:AUTO OFF**

Auto Align, Off disables automatic alignment and the maintenance of warranted operation, for the benefit of maximum measurement throughput. With **Auto Align**

set to **Off**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

The **Auto Align Off** setting is rarely the best choice, because **Partial** gives almost the same improvement in throughput while maintaining the warranted performance for a much longer time. The choice is intended for unusual circumstances, such as the measurement of radar pulses where you might want the revisit time to be as consistent as possible.

When **Auto AlignOff** is selected, the **Auto Align Off** time is initialized and the elapsed time counter begins.

When **Auto AlignOff** is selected, the Settings Panel indicates Align: Off in an amber color. The amber color reminds you that you are responsible for maintaining the warranted operation of the instrument.

4.6.1.2 All but RF

Configures automatic alignment to include or exclude the RF subsystem. (Eliminating the automatic alignment of the RF subsystem prevents the input impedance from changing. The normal input impedance of 50 ohms can change to an open circuit when alignments are being used. Some devices under test do not behave acceptably under such circumstances, for example by showing instability.)

When **All but RF** is **ON**, the operator is responsible for performing an **Align Now RF** when RF-related alignments expire. The Auto Align, Alert mechanism will notify you to perform an **Align Now All** when the combination of time and temperature variation is exceeded.

When **All But RF** is **ON**, the Settings Panel indicates Align: Auto/No RF (in amber). The amber color reminds you that you are responsible for maintaining the RF alignment of the instrument.

Remote Command	:CALibration:AUTO:MODE ALL NRF :CALibration:AUTO:MODE?
Example	:CAL:AUTO:MODE NRF
Preset	Unaffected by Preset but set to ALL by Restore Defaults > "Alignments" on page 3473
State Saved	No

4.6.1.3 Alert

The instrument signals an **Alert** when conditions exist such that you will need to perform a full alignment (for example, **Align Now All**). Alert can be configured in one

4 System

4.6 Alignments

of four settings:

Setting	Option
Time & Temperature	TTEmp erature
Time & Temperature Light	LIGHT
7 days	WEEK
None	NONE

With **Auto Align** set to **Normal**, the configuration of **Alert** is not relevant, because the instrument's software maintains the instrument in warranted operation.

A confirmation is required when a selection other than **TEMPerature** is chosen. This prevents accidental deactivation of alerts. When setting **Alert** from the front panel to any value but **TEMPerature**, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

This will suppress alerts from the Alignment system, which would notify you when an Alignment is required to maintain warranted operation. Without the alerts you will be responsible for performing an Align Now All at appropriate intervals to maintain warranted operation

Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

No confirmation is required when **Alert** is configured through a remote command.

For more information see "Time & Temperature" on page 3480

Remote Command	:CALibration:AUTO:ALERT TTEmperture LIGHT DAY WEEK NONE :CALibration:AUTO:ALERT?
Example	:CAL:AUTO:ALER TTEM
Preset	Unaffected by Preset but set to TTEmperture by Restore Alignment Defaults
State Saved	No
Status Bits/OPC dependencies	When an alert is generated, the condition message “Align Now All required” appears in the Status Bar, and bit 14 is set in the Status Questionable Calibration register

The settings for **Alert** are detailed below.

Time & Temperature

SCPI Example

CAL:AUTO:ALER TTEM

The instrument signals an alert when alignments expire due to the combination of the passage of time and changes in temperature. The alert is the Error Condition message “Align Now All required”. If this choice for Alert is selected, the absence of an alert means that the instrument alignment is sufficiently up-to-date to maintain warranted accuracy.

Time & Temperature Light

SCPI Example

`CAL:AUTO:ALER LIGH`

This is a light version of Time & Temperature which means for this setting the time/temperature changes required to trigger an alert are increased by a factor of three and the time alerts will occur one-ninth as often as for Time and Temperature.

24 hours

SCPI Example

`CAL:AUTO:ALER DAY`

The instrument signals an alert after a time span of 24 hours since the last successful full alignment (for example, **Align Now All** or completion of a full **Auto Align**). You may want to select this option in an environment where the temperature is stable on a daily basis, at a small risk of accuracy errors in excess of the warranted specifications. The alert is the Error Condition message “Align Now All required”.

7 days

SCPI Example

`CAL:AUTO:ALER WEEK`

The instrument signals an alert after a time span of 168 hours since the last successful full alignment (for example, **Align Now All** or completion of a full **Auto Align**). You may want to select this option in an environment where the temperature is stable on a weekly basis, at a modest risk of accuracy degradations in excess of warranted performance. The alert is the Error Condition message “Align Now All required”.

None

SCPI Example

`CAL:AUTO:ALER NONE`

The instrument does not signal an alert. This is provided for rare occasions where you are making a long measurement that cannot tolerate **Auto Align** interruptions, and must have the ability to capture a screen image at the end of the measurement without an alert posted to the display. Keysight does not recommend using this selection in any other circumstances, because of the risk of accuracy performance drifting well beyond expected levels without the operator being informed.

4.6.2 Align Now

Accesses alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

Executing immediate alignments from SCPI can be problematic due to the length of time required for the alignments to complete. Alignment commands are by their


nature sequential, meaning they must complete before any other SCPI commands can be processed. In many cases the alignment itself will take longer than the typical SCPI timeout value. Furthermore, status cannot be easily queried while a sequential command is running.

For this reason, overlapped versions of the **Align Now** commands are provided. When using these No-Operation-Pending (**NPENDING**) commands, the SCPI thread will not be blocked (will be released immediately), so that you can use **:STATus:OPERation:CONDition?** to query the alignment status bit and use **:STATus:QUEStionable:CALibration:CONDition?** to check the alignment results. As an example, **:CALibration[:ALL]:NPENDING** is the overlapped replacement for **:CALibration[:ALL]**.

While the alignment is executing, the coming NOP calibration will be ignored, and **error message “Setting Conflict, Alignment is in process”** will be posted. Also, any other operations to the instrument will be pended and postponed until the alignment is completed. The operations include: Preset, Initiate a new measurement, Device clear and so on. Accordingly, changing parameters will not take effect although the UI is updated immediately. To avoid unexpected timeouts and results, these operations are not recommended during any such alignments.

NOTE

The Alignments are not performed if the MIMO Sync is running, because the MIMO and Alignments require the same hardware resource. If the instrument is in MIMO Sync and you press a button to execute Alignments, a pop-up window appears as below. Click **OK** to stop MIMO and execute Alignments.

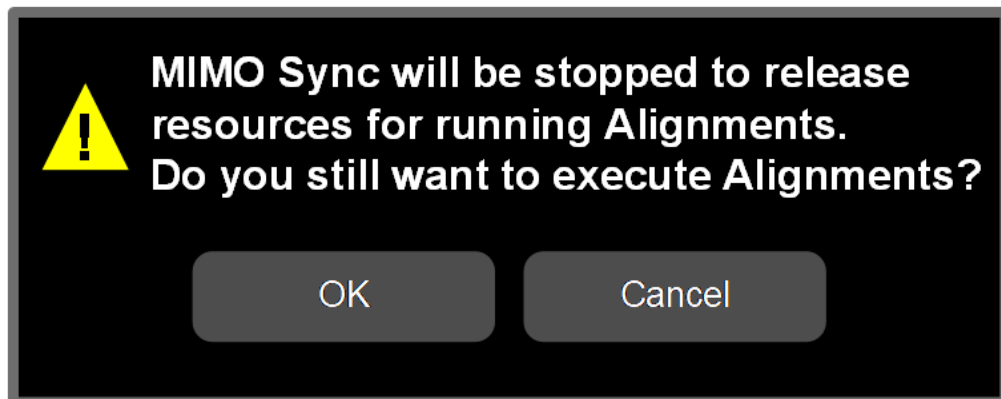

If the instrument is in MIMO sync, and you send a SCPI command to run Alignments, the align process is not executed, and a warning is generated. To execute Alignments, you must first stop MIMO via SCPI (or manually).

Controls in this Dialog

The selection and order of controls displayed in this dialog depends on the instrument type and options. Select the control of interest from the following list:

- "Align Now All" on page 3483
- "Align Now All but RF" on page 3485
- "Align Now RF" on page 3487
- "Align Now Expired" on page 3488
- "Align Now Preselector" on page 3489
- "Align Now All but RF Preselector" on page 3490
- "Align Now RF Presel Only (20 Hz to 3.6 GHz)" on page 3490
- "Align Now External Mixer" on page 3491
- "Align Source" on page 3492
- "Align Receiver" on page 3493
- "Align Fast" on page 3493
- "Align LO Leakage" on page 3494
- "Align IF Cable" on page 3494
- "Align RRH Amplitude" on page 3494
- "Align LO Clock" on page 3495
- "Align VXT Transceiver" on page 3496
- "Align External Mixer Path" on page 3500
- "Align Low Band" on page 3501
- "Align High Band" on page 3501

4.6.2.1 Align Now All

In PXE, the key label is **Align Now All (plus RF Presel 20 Hz – 3.6 GHz)**

Immediately executes an alignment of all subsystems. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

If an interfering user signal is present at the RF Input, the alignment is performed on all subsystems except the RF. After completion, the Error Condition message "Align RF skipped" is generated. In addition, the Error Condition message "Align Now, RF

required” is generated, and bits 11 and 12 are set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration[:ALL]? or *CAL?) invokes the alignment of all subsystems and returns a success or failure value. An interfering user signal is not grounds for failure; if the alignment was able to succeed on all portions but unable to align the RF because of an interfering signal, the resultant will be the success value.

Successful completion of **Align Now All** will clear the “Align Now All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now All Time, and capture the Last Align Now All Temperature.

If the Align RF subsystem succeeded in aligning (no interfering signal present), the elapsed time counter begins for Last Align Now, RF Time, and the temperature is captured for the Last Align Now, RF Temperature. In addition, the Error Conditions “Align RF skipped” are cleared, the Error Condition “Align Now, RF required” is cleared, and bits 11 and 12 are cleared in the Status Questionable Calibration register

Align Now All can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the :ABORT SCPI command. When this occurs, the Error Condition message “Align Now All required” is generated, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

In many cases, you might find it more convenient to change alignments to **Normal**, instead of executing **Align Now All**. When the Auto Align process transitions to **Normal**, the instrument will immediately start to update only the alignments that have expired, thus efficiently restoring the alignment process.

Remote Command	:CALibration[:ALL] :CALibration[:ALL]?
Example	:CAL
Notes	:CALibration[:ALL]? returns 0 if successful, or 1 if failed :CALibration[:ALL]? is the same as *CAL? While Align Now All is performing the alignment, the Calibrating bit (Bit 0 in the Status Operation register) is set. Completion, or termination, will clear Bit 0 in the Status Operation register This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command Successful completion will clear bit 14 in the Status Questionable Calibration register An interfering user signal is not grounds for failure of Align Now All . However, Bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required An interfering user-supplied signal will result in the instrument requiring an Align Now, RF with the

	interfering signal removed
Couplings	<p>Initializes the time for the Last Align Now All Time</p> <p>Records the temperature for the Last Align Now All Temperature</p> <p>If Align RF component succeeded, initializes the time for the Last Align Now, RF Time</p> <p>If Align RF component succeeded, records the temperature for the Last Align Now, RF Temperature</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register
	IEEE Command
Remote Command	*CAL
Example	*CAL?
Notes	<p>Returns 0 if successful, or 1 if failed</p> <p>:CALibration[:ALL]? is exactly the same as *CAL?, including all conditions, status register bits, and couplings</p> <p>See additional remarks described with :CALibration[:ALL]?</p> <p>Overlapped Command</p>
Remote Command	:CALibration[:ALL]:NPENDING
Example	:CAL:NPEN
Notes	<p>:CALibration[:ALL]:NPENDING is the same as :CALibration[:ALL], including all conditions, status register bits, except this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> 1. :CALibration:ALL:NPENDING (Start a calibration) 2. :STATus:OPERation:CONDition? (Check if the calibration is completed or not, If bit 0 is set, then the system is doing calibration, you should repeat this SCPI query until the bit is cleared) 3. :STATus:QUEStionable:CALibration:CONDition? (Check if there are any errors/-failures in previous calibration procedure)

4.6.2.2 Align Now All but RF

In PXE, the key label is **Align Now All but RF (not including RF Presel)**

Immediately executes an alignment of all subsystems except the RF subsystem. The instrument will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). This can be used to align portions of the instrument that are not impacted by an interfering user input signal.

4 System

4.6 Alignments

This operation might be chosen instead of **All** if you do not want the device under test to experience a large change in input impedance, such as a temporary open circuit at the instrument input.

The query form of the remote commands (**:CALibration:NRF?**) invokes the alignment and returns a success or failure value.

Successful completion of **Align Now All but RF** clears the “Align Now All required” Error Condition, and clears Bit 14 in the Status Questionable Calibration register. If “Align Now All required” was in effect prior to executing **All but RF**, the Error Condition message “Align Now RF required” is generated and Bit 12 in the Status Questionable Calibration register is set. It will also begin the elapsed time counter for Last Align Now All Time, and capture the Last Align Now All Temperature.

Align Now All but RF can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the **:ABORT** SCPI command. When this occurs, the Error Condition message “Align Now All required” is generated, and Bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be used for an individual subsystem, but not a full new set of data for all subsystems.

Remote Command	:CALibration:NRF :CALibration:NRF?
Example	:CAL:NRF
Notes	<p>Returns 0 if successful, or 1 if failed</p> <p>While Align Now All but RF is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, will clear Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command</p> <p>Successful completion clears Bit 14 in the Status Questionable Calibration register and sets Bit 12 if invoked with “Align Now All required”</p>
Couplings	<p>Initializes the time for the Last Align Now All Time</p> <p>Records the temperature for the Last Align Now All Temperature</p>
Status Bits/OPC dependencies	Bits 12 or 14 may be set in the Status Questionable Calibration register
Overlapped Command	
Remote Command	:CALibration:NRF:NPENDING
Example	:CAL:NRF:NPEN
Notes	<p>:CALibration:NRF:NPENDING is the same as :CALibration:NRF, including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p>

1. **:CALibration:NRF:NPENDING** (start the All but RF calibration)
2. **:STATus:OPERation:CONDition?** (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared)
3. **:STATus:QUEStionable:CALibration:CONDition?** (to check if there are any errors/-failures in previous calibration procedure)

4.6.2.3 Align Now RF

In PXE, the key label is **Align Now RF Only**

Immediately executes an alignment of the RF subsystem. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

This operation might be desirable if the alignments had been set to not include RF alignments, or if previous RF alignments could not complete because of interference which has since been removed.

If an interfering user signal is present at the RF Input, the alignment will terminate and generate the Error Condition message “Align RF skipped”, and Error Condition “Align Now, RF required”. In addition, bits 11 and 12 will be set in the Status Questionable Calibration register.

The query form of the remote commands (**:CALibration:RF?**) invokes the alignment of the RF subsystem and returns a success or failure value. An interfering user signal is grounds for failure.

Successful completion of **Align Now RF** begins the elapsed time counter for Last Align Now, RF Time, and capture the Last Align Now, RF Temperature.

Align Now RF can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the **:ABORT** SCPI command. When this occurs, the Error Condition message “Align Now, RF required” is generated, and Bit 12 is set in the Status Questionable Condition register. None of the new alignment data is used.

Remote Command	:CALibration:RF :CALibration:RF?
Example	:CAL:RF
Notes	Returns 0 if successful, or 1 if failed (including interfering user signal) While Align Now RF is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command

4 System

4.6 Alignments

	<p>Successful completion clears the Error Conditions “Align RF skipped” and the Error Conditions “Align RF failed” and “Align Now, RF required”, and clears Bits 3, 11, and 12 in the Status Questionable Calibration register</p> <p>A failure encountered during alignment generates the Error Condition message “Align RF failed” and sets Bit 3 in the Status Questionable Calibration register</p> <p>An interfering user signal will result in Bits 11 and 12 being set in the Status Questionable Calibration register, to indicate Align Now, RF is required</p> <p>An interfering user supplied signal results in the instrument requiring Align Now RF with the interfering signal removed</p>
Couplings	<p>Initializes the time for the Last Align Now, RF Time</p> <p>Records the temperature for the Last Align Now, RF Temperature</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register
Overlapped Command	
Remote Command	<code>:CALibration:RF:NPending</code>
Example	<code>:CAL:RF:NPEN</code>
Notes	<p><code>:CALibration:RF:NPending</code> is the same as <code>:CALibration:RF</code>, including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> 1. <code>:CALibration:RF:NPending</code> (Start a RF calibration) 2. <code>:STATus:OPERation:CONDition?</code> (If Bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared) 3. <code>:STATus:QUEStionable:CALibration:CONDition?</code> (to check if there are any errors/-failures in previous calibration procedure)

4.6.2.4 Align Now Expired

Alignments can be Expired when **Auto Align** is **PARTial** or **OFF**.

This control runs the alignments that have expired. This differs from performing **Align All, Now.**, which performs an alignment of all subsystems regardless of whether they are needed or not, whereas **Execute Expired Alignments** aligns only the individual subsystems that have become due.

Remote Command	<code>:CALibration:EXPIred</code> <code>:CALibration:EXPIred?</code>
Example	<code>:CAL:EXP?</code>
Notes	<code>:CALibration:EXPIred?</code> returns 0 if successful, or 1 if failed

	<p>While Align Now Expired is performing the alignment, the Calibrating bit (Bit 0 in the Status Operation register) is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; that is, it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by :ABORT</p> <p>Successful completion clears bit 14 in the Status Questionable Calibration register</p> <p>An interfering user signal is not grounds for failure of Align Now Expired. However, if RF Alignment was required, Bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register

4.6.2.5 Align Now Preselector

Normally, Preselector Alignment runs during power up, and during the twenty minutes after power up, whenever there is a 1-degree internal temperature change.

This alignment is also run when an **"Align Now All"** on page 3483 is performed. This feature is helpful during the 20-minute warm-up time to correct for preselector drift while alignments are being held off. This feature can also be used in lieu of using the Preselector Center functionality, to improve speed throughput for remote testing with minimal impact to amplitude accuracy specs. The algorithm centers the preselector at the upper and lower operating frequencies of the YTF preselector.

The **Align Now Preselector** alignment is *not* a substitute for the Characterizer Preselector Advanced Alignment, which creates the default preselector centering curves for the YTF Preselector and is typically run annually.

Remote Command	:CALibration:PRESelector :CALibration:PRESelector?
Example	:CAL:PRES
Notes	<p>Returns 0 if successful, or 1 if failed (including interfering user signal)</p> <p>While Align Now Preselector is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; that is, it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by :ABORT</p> <p>Successful completion clears the Error Conditions "Align Preselector failed" and clears Bit 3 in the Status Questionable Calibration Failure (Extended) register</p> <p>A failure encountered during alignment generates the Error Condition message "Align Preselector failed" and sets Bit 3 in the Status Questionable Calibration Failure (Extended) register</p>
Status Bits/OPC dependencies	Bit 3 may be set in the Status Questionable Calibration Failure (Extended) register

4.6.2.6 Align Now All but RF Preselector

Only available in models with the RF Preselector, such as the N9048B. It is identical to the "Align Now All" on page 3483 (plus RF Presel) function, except that the RF Preselector is only partially aligned. Only the System Gain, Mechanical attenuator and Electronic attenuator alignments on the RF Preselector path are aligned. The purpose of these alignments is to improve the RF Preselector path amplitude variation compared to the bypass path.

Remote Command	<code>:CALibration:NRFPselector</code> <code>:CALibration:NRFPselector?</code>
Example	<code>:CAL:NRFP</code>
Dependencies	Only appears in N9048B. Sending the SCPI command or query in other models generates an error
Status Bits/OPC dependencies	Bits 12 or 14 may be set in the Status Questionable Calibration register

4.6.2.7 Align Now RF Presel Only (20 Hz to 3.6 GHz)

Only available in models with the RF Preselector, such as the N9048B. It executes an alignment of the RF Preselector section. The receiver will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). *Only* the RF Preselector is aligned; no Align Now All function is performed first.

The query (`:CALibration:RFPSelector:ONLY?`) invokes the alignment of the RF Preselector on both Conducted and Radiated Band, and returns a success or failure value. Successful completion clears the "Align 20 Hz to 3.6 GHz required" Error Condition, and clears Bit 1 and Bit 2 in the Status Questionable Calibration Extended Needed register.

The elapsed time counter will begin for Last Align Now, Conducted Time and Last Align Now Radiated Time and the temperature is captured for Last Align Now, Conducted Temperature and Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key or remotely with Device Clear followed by the `:ABORT` SCPI command. When this occurs, the Error Condition "Align 20 Hz to 3.6 GHz required" is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The "Align 20 Hz to 3.6 GHz required" Error Condition will appear when this alignment has expired. The user is now responsible to perform the Align Now, 20 Hz to 3.6 GHz in order to keep the receiver in warranted operation. This alignment can only be performed by the user, as it is not part of the Auto Align process.

Remote Command	<code>:CALibration:RFPSelector:ONLY</code>
----------------	--

	:CALibration:RFPSelector:ONLY?
Example	:CAL:RFPS:ONLY
Notes	<p>Query returns 0 if successful, or 1 if failed</p> <p>When Align 20 Hz to 3.6 GHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command. Successful completion clears Bits 1 and 2 in the Status Questionable Calibration Extended Needed register and Bits 0 and 1 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment sets the Error Condition “20 Hz to 3.6 GHz Alignment Failure”, sets Bits 1 and 2 in the Status Questionable Calibration Extended Needed register, and Bit 9 in Status Questionable Calibration register</p>
Dependencies	<p>Only appears in N9048B. Sending the SCPI command or query in other models generates an error</p> <p>This key is grayed-out if the instrument is displaying an “Align Now All required” message. If you press the key while it is grayed-out, you will see the informational message, “Align Now All required first”</p>
Couplings	<p>Initializes the time for the Last Align Conducted Now, Conducted Time</p> <p>Initializes the time for the Last Align Radiated Now, Radiated Time</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature</p> <p>Records the temperature for the Last Align Radiated Now, Radiated Temperature</p>
Status Bits/OPC dependencies	<p>Bit 8 or 9 may be set in the Status Questionable Calibration register</p> <p>Bit 1 and 2 may be set in the Status Questionable Calibration Extended Needed register</p> <p>Bit 0 and 1 may be set in the Status Questionable Calibration Extended Failure register</p>

4.6.2.8 Align Now External Mixer

Immediately executes an alignment of the External Mixer that is plugged into the USB port. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key). As this alignment calibrates the LO power to the mixer, this is considered an LO alignment; and failure is classified as an LO alignment failure.

The query (**:CALibration:EMIXer?**) invokes the alignment of the External Mixer and returns a success or failure value.

Remote Command	:CALibration:EMIXer :CALibration:EMIXer?
Example	:CAL:EMIX
Notes	<p>Returns 0 if successful, or 1 if failed</p> <p>While Align Now External Mixer is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed.</p>

	<p>Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command</p> <p>A failure encountered during alignment generate the Error Condition message “Align LO failed” and sets Bit 5 in the Status Questionable Calibration register. Successful completion clears the “Align LO failed” message and Bit 5 in the Status Questionable Calibration register</p>
Dependencies	This control does not appear unless option EXM is present and is grayed-out, unless a USB mixer is plugged in to the USB
Status Bits/OPC dependencies	Bit3 may be set in the Status Questionable Calibration Extended Failure register

4.6.2.9 Align Source

Accesses source alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

The instrument stops any sequence of the source, performs the alignment, then restarts the sequence from the beginning.

Note: This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, it is required to perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert available for the source alignment. Operators are responsible for checking temperature shift since the last **Align Now Source** to determine whether the source alignment needs to be executed.

Remote Command	:CALibration:INTernal:SOURce[:ALL] :CALibration:INTernal:SOURce[:ALL]?
Example	:CAL:INT:SOUR
Notes	:CAL:INT:SOUR? Initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A
Couplings	Initializes the time for the Last Align Source Now, All Time Records the temperature for the Last Align Source Now, All Temperature

Overlapped Command

Remote Command	:CALibration:INTernal:SOURce[:ALL]:NPending
Example	:CAL:INT:SOUR:NPEN
Notes	<p>:CALibration:INTernal:SOURce[:ALL]:NPending is the same as :CALibration:INTernal:SOURce[:ALL], including all conditions and status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p>

	<ol style="list-style-type: none"> 1. <code>:CALibration:INTernal:SOURce:NPending</code> (start an internal source calibration) 2. <code>:STATus:OPERation:CONDition?</code> (Check if the calibration is completed or not, If Bit 0 is set, then the system is doing calibration. Repeat this query until the bit is cleared) 3. <code>:STATus:QUEStionable:CALibration:EXTended:FAILure:CONDition?</code> (Check if Bit 14 is set or not. If this bit is set, that means there are some errors in previous internal source calibration)
Dependencies	Only appears in VXT models M9410A/11A

4.6.2.10 Align Receiver

Accesses receiver alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

NOTE

This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, it is required to perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert available for the receiver alignment. Operators are responsible for checking temperature shift since the last Align Now, Align Receiver, to determine whether the receiver alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:RECeiver[:ALL]</code> <code>:CALibration:INTernal:RECeiver[:ALL]?</code>
Example	<code>:CAL:INT:REC</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A
Couplings	Initializes the time for the Last Align Receiver Now, All Time Records the temperature for the Last Align Receiver Now, All Temperature

4.6.2.11 Align Fast

Accesses fast alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This aligns the subsystem that is most sensitive to temperature and time and includes:

- compensating the DC offset, gain imbalance and quadrature phase imbalance of IQ Modulator and/or Demodulator
- compensating the gain offset of RF path

4 System

4.6 Alignments

It is suggested to perform Fast Alignment every 8 hours or when temperature has changed more than 5°C from the previous Fast Alignment.

Remote Command	<code>:CALibration:INTernal:FAST[:ALL]</code> <code>:CALibration:INTernal:FAST[:ALL]?</code>
Example	<code>:CAL:INT:FAST</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A /15A/16A

4.6.2.12 Align LO Leakage

Accesses LO Leakage alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This alignment reduce the LO Leakage of the instrument.

Remote Command	<code>:CALibration:INTernal:LOLeakage</code> <code>:CALibration:INTernal:LOLeakage?</code>
Example	<code>:CAL:INT:LOL</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A /15A/16A

4.6.2.13 Align IF Cable

Accesses IF Cable alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This alignment aligns the IF cabling to the remote heads.

Remote Command	<code>:CALibration:INTernal:RRHead:IFCable</code> <code>:CALibration:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:INT:RRH:IFC</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
Backwards Compatibility SCPI	<code>:CALibration:INTernal:IFCable</code> <code>:CALibration:INTernal:IFCable?</code>

4.6.2.14 Align RRH Amplitude

This is an immediate action operation, which runs until complete.

Aligns the Amplitude of Remote Radio Head. This operation could take quite a long time to run.

CAUTION

For M1741A/49A/49B RRH, make sure to connect 50-ohm terminations to Head Tx/Rx 1 and 2 ports.

Remote Command	<code>:CALibration:INTernal:RRHead:AMPLitude</code> <code>:CALibration:INTernal:RRHead:AMPLitude?</code>
Example	<code>:CAL:INT:RRH:AMPL?</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
Backwards Compatibility SCPI	<code>:CALibration:INTernal:RRHAmp</code> <code>:CALibration:INTernal:RRHAmp?</code>

4.6.2.15 Align Fast RRH Amplitude

This is an immediate action operation, which runs until complete.

Compare to Align RRH Amplitude, it aligns the amplitude of Remote Radio Head with a wider frequency interval. This operation takes about one minute.

Remote Command	<code>:CALibration:INTernal:RRHead:AMPLitude:FAST</code> <code>:CALibration:INTernal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:INT:RRH:AMPL:FAST?</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1742A RRH

4.6.2.16 Align RRH LO Power

This is an immediate action operation, which runs until complete.

Aligns the LO Power of Remote Radio Head.

Remote Command	<code>:CALibration:INTernal:RRHead:LOPower</code> <code>:CALibration:INTernal:RRHead:LOPower?</code>
Example	<code>:CAL:INT:RRH:LOP</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH

4.6.2.17 Align LO Clock

This is an immediate action operation, which runs until complete.

Synchronizes RRH LO Clocks.

Remote Command	<code>:CALibration:INTernal:RRHead:LOSync</code> <code>:CALibration:INTernal:RRHead:LOSync?</code>
Example	<code>:CAL:INT:RRH:LOS?</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
Backwards	<code>:CALibration:INTernal:LOSync</code>
Compatibility SCPI	<code>:CALibration:INTernal:LOSync?</code>

4.6.2.18 Align VXT Transceiver

In M941xE(M941xA+M9471A) system, accesses alignment processes in VXT Transceiver(M9410A/11A/15A/16A), which are immediate action operations and perform complete operations, running until they are complete.

The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

There is no alert available for the VXT Transceiver alignment. Operators are responsible for checking temperature shift since the last **Align VXT Transceiver** to determine whether the VXT Transceiver alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:VXT:TRANSceiver</code> <code>:CALibration:INTernal:VXT:TRANSceiver?</code>
Example	<code>:CAL:INT:VXT:TRAN</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears on M9410E/11E/15E/16E

4.6.2.19 Align up down converter

In M941xE(M941xA+M9471A) system, accesses alignment processes in up down converter (M9471A), which are immediate action operations and perform complete operations, running until they are complete.

The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

There is no alert available for the up down converter alignment. Operators are responsible for checking temperature shift since the last **Align up down converter** to determine whether the up down converter alignment needs to be executed.

Remote Command	<code>:CALibration:UPDown:CONVerter</code> <code>:CALibration:UPDown:CONVerter?</code>
Example	<code>:CAL:UPD:CONV</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears on M9410E/11E/15E/16E

4.6.2.20 Align Selected Freq Ranges

VXT models M9410A/11A provide five alignments: **Align Now All**, **Align Source**, **Align Receiver**, **Align Fast** and **Align LO Leakage**. Every time you execute one of these alignments, the system performs a full span alignment. To save time, it is possible to limit the range of alignment frequency settings. **Align Selected Freq Ranges** allows you to set the start and stop frequency of an alignment.

The example below shows the steps for processing Align Receiver on VXT model M9410A, specifying a frequency range from 1.3 GHz to 1.8 GHz, and 2.5 GHz to 3.9 GHz.

- First row: set the Start and Stop Frequency to 1.3 GHz and 1.8 GHz. Enable the first row
- Second row: set the Start and Stop Frequency to 2.5 GHz and 3.9 GHz. Enable the second row
- Click **Align Receiver**. A message appears: “Aligning Selected Freq Ranges 1 of 7”

The equivalent SCPI command sequence is:

```
:CAL:INT:ASFR ON
:CAL:INT:ASFR:FRAN 1.3 GHz, 1.8 GHz, 2.5 GHz, 3.9 GHz
:CAL:INT:REC
```

Remote Command	<code>:CALibration:INTernal:ASFRanges[:STATe] ON OFF 1 0</code> <code>:CALibration:INTernal:ASFRanges?</code>
Example	<code>:CAL:INT:ASFR ON</code> <code>:CAL:INT:ASFR?</code>
Notes	When Align Selected Freq Ranges is ON , the table is displayed for setting up the frequency ranges to be aligned
Dependencies	Only available in: <ul style="list-style-type: none"> – VXT models M9410A/11A – VXT models M9410A/11A with RRH and/or CIU – M9410E/11E

	<p>Only functional for the following alignments:</p> <ul style="list-style-type: none"> - Align Now All of VXT models M9410A/11A and M9410E/11E - Align Source - Align Receiver - Align Fast - Align LO Leakage - Align VXT Transceiver of M910E/11E - Align Up Down Converter of M9410E/11E <p>Align Selected Freq Ranges only guarantees the hardware performance within the frequency range</p>
Preset	OFF

Enable Extended Freq Range

Allows you to set frequency ranges for VXT models M9410A/11A/15A with Remote Head and/or CIU. When Enable Extended Freq Range is not active, the frequency range is limited by VXT models only.

Remote Command	<pre>:CALibration:INTernal:ASFRanges:EXTend[:STATe] ON OFF 1 0 :CALibration:INTernal:ASFRanges:EXTend[:STATe]?</pre>
Example	<pre>:CAL:INT:ASFR:EXT ON :CAL:INT:ASFR:EXT?</pre>
Dependencies	<p>Only available in VXT models M9410A/11A/15A/16A with Remote Head and/or CIU</p> <p>Only available when Align Specified Freq Ranges is ON</p>
Preset	OFF

Frequency Range

Allows you to set the alignment frequency range.

Remote Command	<pre>:CALibration:INTernal:ASFRanges:FRANges <startFreq>,<stopFreq>[,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>]</pre>
Example	<pre>:CAL:INT:ASFR:FRAN 1.3 GHz,1.8 GHz,2.5 GHz,3.9 GHz :CAL:INT:ASFR:FRAN?</pre>
Notes	<p><startFreq>: Start frequency of an alignment</p> <p><stopFreq>: Stop frequency of an alignment</p> <p>To process alignment for a single frequency point, set <startFreq> = <stopFreq></p>

Dependencies	<p>Only appears when "Align VXT Transceiver" on page 3496 is ON</p> <p>Error message "Invalid alignment frequency range" is reported if start and stop frequencies are invalid, such as:</p> <ol style="list-style-type: none"> 1. Stop frequency - Start frequency < 0 2. the count of start and stop frequency is not even 3. the frequency is out of range. See "More Information" on page 3499 4. more than 5 pairs of start and stop frequency are listed
Preset	1.0 GHz, 2.0 GHz

More Information

When **"Enable Extended Freq Range" on page 3498** is not active, the frequency range depends on the VXT models. The table below lists the Start and Stop Frequency Ranges for VXT models M9410A/11A/15A:

Hardware	Options	Min Frequency	Max Frequency
M9410A/11A	F06	330 MHz	6.08 GHz
M9410A/11A	F06 & EP6	330 MHz	6.6 GHz
M9410A/11A	F06 & LFE & EP6	6.5 kHz	6.6 GHz
M9415A/16A	F06	330 MHz	6.6 GHz
M9415A/16A	F08	330 MHz	8.6 GHz
M9415A/16A	F12	330 MHz	12.9 GHz

When **Enable Extended Freq Range** is active, the frequency range depends on the extensions connected to VXT models. The table below lists the Start and Stop Frequency Range of VXT models with Radio Heads/CIU:

Connected with Radio Heads/CIU	Min frequency	Max frequency	IF Frequency range
VXT + CIU	5.9 GHz	12 GHz	1.4 GHz ~ 4.6 GHz
VXT + CIU + RRH	24.25 GHz	43.5 GHz	2.5 GHz ~ 4.5 GHz
VXT + M1742A	10 GHz	32 GHz	3.0 GHz ~ 5.5 GHz

NOTE

The Min frequency and Max frequency are also the preset frequencies. It is recommended to keep the preset frequency range for VXT models with extensions. An alignment with the full IF Frequency range will be executed ignoring the specific ranges.

The table below lists the Frequency Range of M941xE(VXT Models with M9471A)

4 System

4.6 Alignments

Products with M9471A	Preset	Receiver minimum settable frequency	Source minimum settable (center) frequency	Minimum center frequency with Spec	Receiver maximum settable (center) frequency	Source maximum settable (center) frequency
M941xE without LFE option	1 GHz	330.000005 MHz	330 MHz	380MHz	26.499999995 GHz	26.5GHz
M941xE with LFE option (LFE option in M9411A or M9471A)	1 GHz	750.005 kHz	750 kHz	1MHz	26.499999995 GHz	26.5GHz

NOTE

The minimum spec frequency is 380 MHz, but the receiver minimum settable center frequency is 330.000005 MHz, the source minimum settable center frequency is 330 MHz.

With Option LFE in M9411A or in M9471A, the receiver minimum settable frequency is 750.005 kHz, the source minimum settable frequency is 750 kHz, but Spec to customer only ensure down to 1 MHz.

Enable

Enables or disables the selected frequency ranges.

Preset **Row 1: ON**
Other rows: OFF

4.6.2.21 Align External Mixer Path

Immediately executes an alignment of the External Mixer Path inside the VXT models M9415A/16A. External Mixer Path is used when the RF Port is connected to an external Remote Radio Head (RRH). It provides a better performance compared to the normal path. External Mixer Path Alignment covers frequencies from 2.4 GHz to 3.4 GHz of the external mixer path.

NOTE

This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert for the External Mixer Path alignment. You are responsible for checking the temperature shift since the last **Align Now, External Mixer Path**, to determine whether the external mixer path alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:EMPath</code> <code>:CALibration:INTernal:EMPath?</code>
Example	<code>:CAL:INT:EMP</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A when Option MXP is installed
Couplings	Initializes the time for the Last Align External Mixer Path Now, All Time Records the temperature for the Last Align External Mixer Path Now, All Temperature

4.6.2.22 Align Low Band

Accesses Low Band alignment processes that are immediate action operations. They perform complete operations and run until they are complete. Low Band Alignment covers frequencies from 380 MHz to 4.3 GHz of the non-external mixer path.

NOTE

This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert for the Low Band alignment. You are responsible for checking the temperature shift since the last **Align Now, Align Low Band**, to determine whether the Low Band alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:LBAND[:ALL]</code> <code>:CALibration:INTernal:LBAND[:ALL]?</code>
Example	<code>:CAL:INT:LBAN</code>
Notes	The query initiates an Alignment, and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A
Couplings	Initializes the time for the Last Align Low Band Now, All Time Records the temperature for the Last Align Low Band Now, All Temperature

4.6.2.23 Align High Band

Accesses High Band alignment processes that are immediate action operations. They perform complete operations and run until they are complete. High Band Alignment covers frequencies from 4.3 GHz to 12 GHz of the non-external mixer path.

NOTE

This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert for the High Band alignment. You are responsible for checking the temperature shift since last **Align Now, Align High Band**, to determine whether the High Band alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:HBAND[:ALL]</code> <code>:CALibration:INTernal:HBAND[:ALL]?</code>
Example	<code>:CAL:INT:HBAN</code>
Notes	The query initiates an Alignment, and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A
Couplings	Initializes the external time for the Last Align High Band Now, All Time Records the temperature for the Last Align High Band Now, All Temperature

4.6.3 MIMO

Accesses MIMO alignment processes that are immediate action operations.

4.6.3.1 Align MIMO All

Immediately executes MIMO alignments in sequence.

Remote Command	<code>:CALibration:MIMO:ALL</code> <code>:CALibration:MIMO:ALL?</code>
Example	<code>:CAL:MIMO</code>
Notes	Query returns 0 if successful, or 1 if failed Overlapped Command
Remote Command	<code>:CALibration:MIMO:ALL:NPENDING</code> <code>:CALibration:MIMO:ALL:NPENDING?</code>
Example	<code>:CAL:MIMO:NPEN</code>
Notes	This command is the same as <code>:CALibration:MIMO:ALL</code> , including all conditions, status register bits, except that this command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not Typical usage is: 1. <code>:CALibration:MIMO:ALL:NPENDING</code> (start All MIMO calibrations)

2. `:STATus:OPERation:CONDition?` (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared)
3. `:STATus:QUEStionable:CALibration:CONDition?` (to check if there are any errors/- failures in previous calibration procedure)

4.6.3.2 Align MIMO Phase

Immediately executes a MIMO phase alignment.

Remote Command	<code>:CALibration:MIMO:PHASe</code> <code>:CALibration:MIMO:PHASe?</code>
Example	<code>:CAL:MIMO:PHAS</code>
Notes	Query returns 0 if successful, or 1 if failed Overlapped Command
Remote Command	<code>:CALibration:MIMO:PHASe:NPENding</code> <code>:CALibration:MIMO:PHASe:NPENding?</code>
Example	<code>:CAL:MIMO:PHAS:NPEN</code>
Notes	This command is the same as <code>:CALibration:MIMO:PHASe</code> , including all conditions, status register bits, except that this command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not Typical usage is: <ol style="list-style-type: none"> 1. <code>:CALibration:MIMO:PHASe:NPENding</code> (start MIMO phase calibration) 2. <code>:STATus:OPERation:CONDition?</code> (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared) 3. <code>:STATus:QUEStionable:CALibration:CONDition?</code> (to check if there are any errors/- failures in previous calibration procedure)

4.6.3.3 Align MIMO Trigger Delay

Immediately executes a MIMO Trigger Delay alignment.

Note that. for this calibration, the primary instrument's Cal Out must be connected to the primary and secondary instrument's RF input port. A pop-up window appears to allow you to confirm connection setup.

Remote Command	<code>:CALibration:MIMO:DElay:TRIGger</code> <code>:CALibration:MIMO:DElay:TRIGger?</code>
Example	<code>:CAL:MIMO:DEL:TRIG</code>
Notes	Query returns 0 if successful, or 1 if failed

Overlapped Command

Remote Command	<code>:CALibration:MIMO:DElay:TRIGger:NPENding</code> <code>:CALibration:MIMO:DElay:TRIGger:NPENding?</code>
Example	<code>:CAL:MIMO:DEL:TRIG:NPEN</code>
Notes	<p>This command is the same as <code>:CALibration:MIMO:DElay:TRIGger</code>, including all conditions, status register bits, except that this command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> 1. <code>:CALibration:MIMO:DElay:TRIGger:NPENding</code> (start MIMO trigger delay calibration) 2. <code>:STATus:OPERation:CONDition?</code> (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared) 3. <code>:STATus:QUEStionable:CALibration:CONDition?</code> (to check if there are any errors/-failures in previous calibration procedure)

4.6.3.4 Align MIMO Residual Delay

Immediately executes a MIMO Residual Delay alignment.

Note that, for this calibration, the primary instrument's Cal Out must be connected to the primary and secondary instrument's RF input port. A pop-up window appears to allow you to confirm connection setup.

Remote Command	<code>:CALibration:MIMO:DElay:RESidual</code> <code>:CALibration:MIMO:DElay:RESidual?</code>
Example	<code>:CAL:MIMO:DEL:RES</code>
Notes	Query returns 0 if successful, or 1 if failed

Overlapped Command

Remote Command	<code>:CALibration:MIMO:DElay:RESidual:NPENding</code> <code>:CALibration:MIMO:DElay:RESidual:NPENding?</code>
Example	<code>:CAL:MIMO:DEL:RES:NPEN</code>
Notes	<p>The command is the same as <code>:CALibration:MIMO:DElay:RESidual</code>, including all conditions, status register bits, except that this command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> 1. <code>:CALibration:MIMO:DElay:RESidual:NPENding</code> (start MIMO residual delay calibration) 2. <code>:STATus:OPERation:CONDition?</code> (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared)

3. `:STATus:QUESTionable:CALibration:CONDition?` (to check if there are any errors/-failures in previous calibration procedure)

4.6.3.5 Start Freq

Sets the start frequency for MIMO alignments.

Remote Command	<code>:CALibration:MIMO:FREQuency:START <freq></code> <code>:CALibration:MIMO:FREQuency:START?</code>
Example	<code>:CAL:MIMO:FREQ:START 1GHz</code> <code>:CAL:MIMO:FREQ:START?</code>
Preset	1 GHz
State Saved	Saved in instrument state
Min	0 Hz
Max	60 GHz

4.6.3.6 Stop Frequency

Sets the stop frequency for MIMO alignments.

Remote Command	<code>:CALibration:MIMO:FREQuency:STOP <freq></code> <code>:CALibration:MIMO:FREQuency:STOP?</code>
Example	<code>:CAL:MIMO:FREQ:STOP 1GHz</code> <code>:CAL:MIMO:FREQ:STOP?</code>
Preset	1 GHz
State Saved	Saved in instrument state
Min	> Start Frequency
Max	60 GHz

4.6.3.7 Secondary instrument IP address

Set secondary instrument IP address for MIMO alignments.

Remote Command	<code>:CALibration:MIMO:SECondary:INSTrument1 ... 4:IPADdress <String></code> <code>:CALibration:MIMO:SECondary:INSTrument1 ... 4:IPADdress1 ... 4?</code>
Example	<code>:CAL:MIMO:SEC:INST1:IPAD '192.168.1.2'</code>
Preset	local
State Saved	Yes

4.6.3.8 Secondary instrument selected

Select secondary instruments for MIMO alignment.

Remote Command	<code>:CALibration:MIMO:SECondary:INSTrument1 ... 4:SElected OFF ON 0 1</code>
Example	<code>:CAL:MIMO:SEC:INST1 1</code> <code>:CAL:MIMO:SEC:INST1?</code>
State Saved	Yes

4.6.4 Path Delay Calibration

Path Delay Calibration is used to remove the time delay differences between multiple power channels of a module.

Dependencies	<p>Only available in VXT modules M9410A/11A</p> <p>Only for modules with matched Digital board hardware version, which means the modules are in same FPGA version</p> <p>The matched hardware version information is in below table</p>
--------------	---

	Digital board Hardware version	Matched module
M9410A	2,3,4,6,10,11	Yes
M9410A	12, 13	Yes
M9411A	18	Yes
M9411A	20,21	Yes
M9411A	12,13	Yes
M9411A	0,1,2,3,4,6,10,11	Yes

4.6.4.1 Source Path Delay Calibration

Accesses the Source Path Delay Calibration processes, which are immediate-action operations and perform complete operations, running until they are complete.

NOTE

Connect the RF In of the primary module to the OUT port (COMMON, PORT 1) of the combiner.

NOTE

Before performing Path Delay Calibration of Sources, please confirm that:

NOTE Each of the RF Out ports is connected to the RF In port of the Primary channel, using an RF combiner.

NOTE The cables between the combiner and the Source output ports are of the same length.

NOTE A pop-up window appears (as shown below); press OK to continue calibration.

NOTE If the is in MIMO sync, and you send a SCPI command to run Calibration, the calibration process is not executed and instrument a warning is generated (“-221,Setting Conflict; Calibrations are not available while MIMO Sync is On”). To execute Calibration, you must first stop MIMO, manually or via SCPI.

Remote Command	<code>:CALibration:PDElay:SOURce</code> <code>:CALibration:PDElay:SOURce?</code>
Example	<code>:CAL:PDEL:SOUR</code>
Notes	<p>The query initiates an Alignment and returns 0 if successful, or 1 if failed</p> <p>If the calibration process detected a faulty state, an error will be generated: “Misc/System Alignment Failure”. Calibration will be aborted. Please see event log for more information:</p> <ol style="list-style-type: none"> 1. Cables are not connected 2. Power control failure 3. Hardware failure 4. M9300A 10MHz reference open failure
Dependencies	<p>Only appears in VXT models M9410A/11A</p> <p>Only for modules with matched Digital board hardware version, which means the modules are in same FPGA version</p>

4.6.4.2 Path Delay Correction On/Off(Remote Command only)

On/Off the path delay correction to enable the calibration data on the source of the module.

Remote Command	<code>:CALibration:PDElay:CORRection ON OFF</code> <code>:CALibration:PDElay:CORRection?</code>
Example	<code>:CAL:PDEL:CORR ON</code>
Notes	If the Path Delay Calibration has never been performed and there is no calibration correction data in the controller, an alert is generated

Preset	OFF
Range	ON OFF


4.6.5 Show Alignment Statistics

Shows alignment information you can use to ensure that the instrument is operating in a specific manner. The **Show Alignment Statistics** screen is where you can view time and temperature information.

Values displayed are only updated when the **Show Alignment Statistics** screen is invoked. They are not updated while the **Show Alignment Statistics** screen is being displayed. The remote commands that access this information obtain current values.

Note that some of these statistics only display if your instrument supports them; for example, Last Source Align Now All Time only shows up in instruments which contain a source which supports auto alignments.

An example of the **Show Alignment Statistics** screen would be similar to:

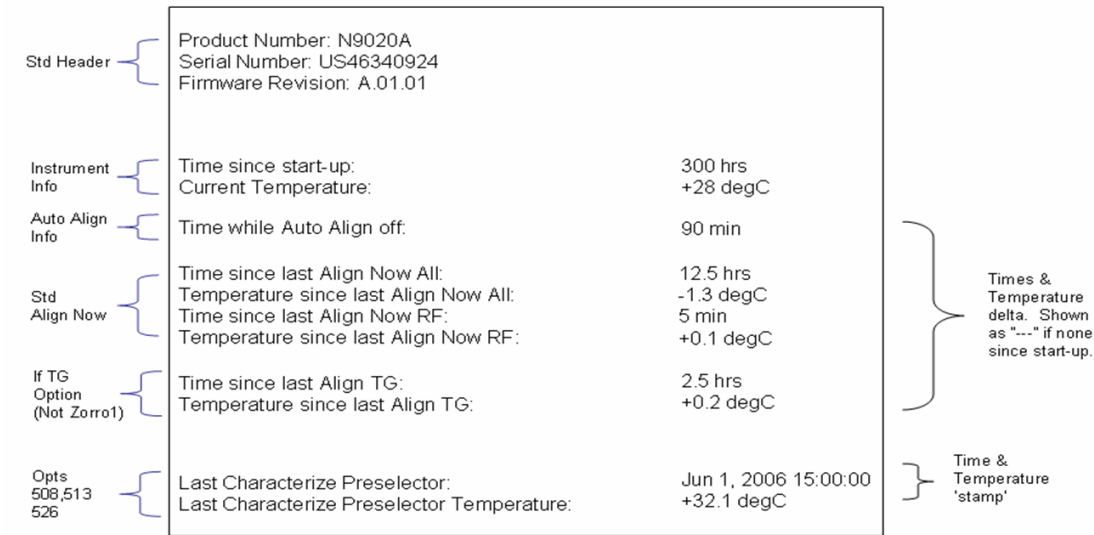

“Time while Auto Align off” is not available in VXT models M9410A/11A.

A successful **Align Now, RF** sets the Last Align RF temperature to the current temperature, and resets the Last Align RF time. A successful **Align Now All** or **Align Now All but RF** sets the Last Align Now All temperature to the current temperature, and resets the Last Align Now All time. A successful **Align Now All** also resets the Last Align RF items if the RF portion of the **Align Now** succeeded.

Example	:SYST:SHOW ALIGN
---------	------------------

Notes The values displayed on the screen are only updated upon entry to the screen, and not updated while the screen is being displayed

The following data-specific queries are available:

Query Time since Startup

Remote Command	<code>:SYSTem:PON:TIME?</code>
Example	<code>:SYST:PON:TIME?</code>
Notes	Value is the time since the most recent start-up in seconds
State Saved	No

Query Current Temperature

Remote Command	<code>:CALibration:TEMPerature:CURRent?</code>
Example	<code>:CAL:TEMP:CURR?</code>
Notes	Value is in degrees Centigrade
State Saved	No

Query Current Temperature at Remote Radio Head

Remote Command	<code>:CALibration:TEMPerature:CURRent:RRHead?</code>
Example	<code>:CAL:TEMP:CURR:RRH?</code>
Notes	Value is in degrees Centigrade
Dependencies	Only appears when Align RRH Amplitude is available
State Saved	No

Query Current Temperature at Remote Radio Head LO

Remote Command	<code>:CALibration:TEMPerature:CURRent:RRHead:LO?</code>
Example	<code>:CAL:TEMP:CURR:RRH:LO?</code>
Notes	Value is in degrees Centigrade
Dependencies	Only appears when Align RRH LO Power is available
State Saved	No

Query Time since Last Align Now All

Remote Command	<code>:CALibration:TIME:LALL?</code>
----------------	--------------------------------------

4 System

4.6 Alignments

Example	<code>:CAL:TIME:LALL?</code>
Notes	Value is the elapsed time, in seconds, since the last successful Align Now All or Align Now All but RF was executed
State Saved	No

Query Temperature of Last Align Now All

Remote Command	<code>:CALibration:TEMPerature:LALL?</code>
Example	<code>:CAL:TEMP:LALL?</code>
Notes	Value is in degrees Centigrade at which the last successful Align Now All or Align Now All but RF was executed
State Saved	No

Query Time since Last Align Now Receiver

Remote Command	<code>:CALibration:TIME:INTernal:RECeiver?</code>
Example	<code>:CAL:TIME:INT:REC?</code>
Notes	Value in hours since the last successful Align Now Receiver
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

Query Temperature of Last Align Now Receiver

Remote Command	<code>:CALibration:TEMPerature:INTernal:RECeiver?</code>
Example	<code>:CAL:TEMP:INT:REC?</code>
Notes	Value in degrees Centigrade when the last successful Align Now Receiver was executed
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

Query Time since Last Align Now Source

Remote Command	<code>:CALibration:TIME:INTernal:SOURce?</code>
Example	<code>:CAL:TIME:INT:SOUR?</code>
Notes	Value in hours since the last successful Align Now Source
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

Query Temperature of Last Align Now Source

Remote Command	<code>:CALibration:TEMPerature:INTernal:SOURce?</code>
Example	<code>:CAL:TEMP:INT:SOUR?</code>
Notes	Value in degrees Centigrade when the last successful Align Now Source was executed
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

Query Time since Last Align Now Fast

Remote Command	<code>:CALibration:TIME:INTernal:FAST?</code>
Example	<code>:CAL:TIME:INT:FAST?</code>
Notes	Value in hours since the last successful Align Now Fast
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

Query Temperature of Last Align Now Fast

Remote Command	<code>:CALibration:TEMPerature:INTernal:FAST?</code>
Example	<code>:CAL:TEMP:INT:FAST?</code>
Notes	Value in degrees Centigrade when the last successful Align Now Fast was executed
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

Query Time since Last Align Now LO Leakage

Remote Command	<code>:CALibration:TIME:INTernal:LOLeakage?</code>
Example	<code>:CAL:TIME:INT:LOL?</code>
Notes	Value in hours since the last successful Align Now LO Leakage
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

Query Temperature of Last Align Now LO Leakage

Remote Command	<code>:CALibration:TEMPerature:INTernal:LOLeakage?</code>
Example	<code>:CAL:TEMP:INT:LOL?</code>
Notes	Value in degrees Centigrade when the last successful Align Now LO Leakage was executed
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

Query Time since Last Align Now IF Cable

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:TIME:INT:RRH:IFC?</code>
Notes	Value in hours since the last successful Align Now IF Cable
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INTernal:IFCable?</code>

Query Temperature of Last Align Now IF Cable

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:TEMP:INT:RRH:IFC?</code>
Notes	Value in degrees Centigrade when the last successful Align Now IF Cable was executed
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INTernal:IFCable?</code>

Query Time since Last Align LO Clock

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:LOSync?</code>
Example	<code>:CAL:TIME:INT:RRH:LOS?</code>
Notes	Value in hours since the last successful Align LO Clock
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INTernal:LOSync?</code>

Query Temperature of Last Align LO Clock

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:LOSync?</code>
Example	<code>:CAL:TEMP:INT:RRH:LOS?</code>
Notes	Value in degrees Centigrade when the last successful Align LO Clock was executed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INTernal:LOSync?</code>

Query Time since Last Align RRH Amplitude

Remote Command	<code>:CALibration:TIME:INternal:RRHead:AMPLitude?</code>
Example	<code>:CAL:TIME:INT:RRH:AMPL?</code>
Notes	Value in hours since the last successful Align RRH Amplitude
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INternal:RRHAmp?</code>

Query Temperature of Last Align RRH Amplitude

Remote Command	<code>:CALibration:TEMPerature:INternal:RRHead:AMPLitude?</code>
Example	<code>:CAL:TEMP:INT:RRH:AMPL?</code>
Notes	Value in degrees Centigrade when the last successful Align RRH Amplitude was executed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INternal:RRHAmp?</code>

Query Time since Last Align Fast RRH Amplitude

Remote Command	<code>:CALibration:TIME:INternal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:TIME:INT:RRH:AMPL:FAST?</code>
Notes	Value in hours since the last successful Align Fast RRH Amplitude
Dependencies	Only appears in VXT based solutions with M1742A RRH
State Saved	No

Query Temperature of Last Align Fast RRH Amplitude

Remote Command	<code>:CALibration:TEMPerature:INternal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:TEMP:INT:RRH:AMPL:FAST?</code>
Notes	Value in degrees Centigrade when the last successful Align Fast RRH Amplitude was executed
Dependencies	Only appears in VXT based solutions with M1742A RRH
State Saved	No

Query Time since Last Align RRH LO Power

Remote Command	<code>:CALibration:TIME:INternal:RRHead:LOPower?</code>
----------------	---

4 System

4.6 Alignments

Example	<code>:CAL:TIME:INT:RRH:LOP?</code>
Notes	Value in hours since the last successful Align RRH LO Power
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH
State Saved	No

Query Temperature of Last Align RRH LO Power

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:LOPower?</code>
Example	<code>:CAL:TEMP:INT:RRH:LOP?</code>
Notes	Value in degrees Centigrade when the last successful Align RRH LO Power was executed
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH
State Saved	No

Query Time since Last Align Now RF

Remote Command	<code>:CALibration:TIME:LRF?</code>
Example	<code>:CAL:TIME:LRF?</code>
Notes	Value is the elapsed time, in seconds, since the last successful Align Now, RF was executed, either individually or as a component of Align Now All
State Saved	No

Query Temperature of Last Align Now RF

Remote Command	<code>:CALibration:TEMPerature:LRF?</code>
Example	<code>:CAL:TEMP:LRF?</code>
Notes	Value is in degrees Centigrade at which the last successful Align Now RF was executed, either individually or as a component of Align Now All
State Saved	No

Query Time since Last Align IF

Remote Command	<code>:CALibration:TIME:LIF?</code>
Example	<code>:CAL:TIME:LIF?</code>
Notes	Value is the elapsed time, in seconds, since the last successful Align IF was executed
State Saved	No

Query Temperature of Last Align IF

Remote Command	:CALibration:TEMPerature:LIF?
Example	:CAL:TEMP:LIF?
Notes	Value is in degrees Centigrade at which the last successful Align IF was executed
State Saved	No

Query Time since Last Characterize Preselector

Remote Command	:CALibration:TIME:LPreselector?
Example	:CAL:TIME:LPR?
Notes	Value is the date and time the last successful Characterize Preselector was executed. The date is separated from the time by a space character Returns "" if no Characterize Preselector has ever been performed on the instrument
Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query yields an error
State Saved	No

Query Temperature of Last Characterize Preselector

Remote Command	:CALibration:TEMPerature:LPreselector?
Example	:CAL:TEMP:LPR?
Notes	Value is in degrees Centigrade at which the last successful Characterize Preselector was executed
Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query yields an error
State Saved	No

Query Time since Auto Align Off

Remote Command	:CALibration:AUTO:TIME:OFF?
Example	:CAL:AUTO:TIME:OFF?
Notes	Value is the elapsed time, in seconds, since Auto Align has been set to Off or Off with Alert . The value is 0 if Auto Align is ALL or NORF
State Saved	No

Query Time since Last Align Now 20 Hz - 30 MHz

Remote Command	:CALibration:TIME:RFPSelector:LCONducted?
----------------	---

4 System

4.6 Alignments

Example	<code>:CAL:TIME:RFPS:LCON?</code>
Notes	Values are the date and time the last successful Align Now, 20 Hz – 30 MHz was executed. The date is separated from the time by a semi-colon character
State Saved	No

Query Temperature of Last Align Now 20 Hz - 30 MHz

Remote Command	<code>:CALibration:TEMPerature:RFPSelector:LCONducted?</code>
Example	<code>:CAL:TEMP:RFPS:LCON?</code>
Notes	Value is in degrees Centigrade at which the last successful Align Now, 20 Hz – 30 MHz was executed
State Saved	No

Query Time since Last Align Now 30 MHz - 3.6 GHz

Remote Command	<code>:CALibration:TIME:RFPSelector:LRADiated?</code>
Example	<code>:CAL:TIME:RFPS:LRAD?</code>
Notes	Value is the date and time the last successful Align Now, 30 MHz – 3.6 GHz was executed. The date is separated from the time by a semi-colon character
State Saved	No

Query Temperature of Last Align Now 30 MHz - 3.6 MHz

Remote Command	<code>:CALibration:TEMPerature:RFPSelector:LRADiated?</code>
Example	<code>:CAL:TEMP:RFPS:LRAD?</code>
Notes	Value is in degrees Centigrade at which the last successful Align Now, 30 MHz – 3.6 GHz was executed
State Saved	No

Query Next Scheduled Alignment Time

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TIME:NEXT?</code> Returns data using the following format: YYYY/MM/DD; HH:MM:SS
Example	<code>:CAL:RFPS:SCH:TIME:NEXT?</code>
Notes	The next run time will be updated based on the start date/time and recurrence set by the user “date” is representation of the date the task will run in the form: <code>YYYY/MM/DD</code> where:

- **YYYY** is the four-digit representation of year. (for example, 2009)
- **MM** is the two-digit representation of month. (for example, 01 to 12)
- **DD** is the two-digit representation of the day. (for example, 01 to 28, 29, 30 or 31 depending on the month and year)

“time” is a representation of the time of day the task will run in the form:

HH:MM:SS

where:

- **HH** is the two-digit representation of the hour in 24-hour format
- **MM** is the two-digit representation of minute
- **SS** is the two-digit representation of seconds

State Saved No

Query Time since Last Align Now External Mixer Path

Remote Command	:CALibration:TIME:INTernal:EMPath?
Example	:CAL:TIME:INT:EMP?
Notes	Value in hours since the last successful Align Now External Mixer Path
Dependencies	Only appears option MXP is installed
State Saved	No

Query Temperature of Last Align Now External Mixer Path

Remote Command	:CALibration:TEMPerature:INTernal:EMPath?
Example	:CAL:TEMP:INT:EMP?
Notes	Value in degrees Centigrade when the last successful Align Now External Mixer Path was executed
Dependencies	Only appears option MXP is installed
State Saved	No

Query Time since Last Align Now Low Band

Remote Command	:CALibration:TIME:INTernal:LBAND?
Example	:CAL:TIME:INT:LBAN?
Notes	Value in hours since the last successful Align Now Low Band
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

Query Temperature of Last Align Now Low Band

Remote Command	<code>:CALibration:TEMPerature:INTernal:LBANd?</code>
Example	<code>:CAL:TEMP:INT:LBAN?</code>
Notes	Value in degrees Centigrade when the last successful Align Now Low Band was executed
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

Query Time since Last Align Now High Band

Remote Command	<code>:CALibration:TIME:INTernal:HBAN?</code>
Example	<code>:CAL:TIME:INT:HBAN?</code>
Notes	Value in hours since the last successful Align Now High Band
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

Query Temperature of Last Align Now High Band

Remote Command	<code>:CALibration:TEMPerature:INTernal:HBANd?</code>
Example	<code>:CAL:TEMP:INT:HBAN?</code>
Notes	Value in degrees Centigrade when the last successful Align Now High Band was executed
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

Query Time since Last Align VXT Transceiver

Remote Command	<code>:CALibration:TIME:INTernal:VXT:TRANsceiver?</code>
Example	<code>:CAL:TIME:INT:VXT:TRAN?</code>
Notes	Value in hours since the last successful Align VXT Transceiver Returns NaN if Align VXT Transceiver has never been performed on the instrument
Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

Query Temperature of Last Align VXT Transceiver

Remote Command	<code>:CALibration:TEMPerature:INTernal:VXT:TRANsceiver?</code>
Example	<code>:CAL:TEMP:INT:VXT:TRAN?</code>
Notes	Value in degrees Centigrade when the last successful Align VXT Transceiver was executed Returns 9.91E+37(NaN) if Align VXT Transceiver has never been performed on the instrument

Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

Query Time since Last Align Up Down Converter

Remote Command	<code>:CALibration:TIME:UPDown:CONVerter?</code>
Example	<code>:CAL:TIME:UPD:CONV?</code>
Notes	Value in hours since the last successful Align Up Down Converter Returns NaN if Align Up Down Converter has never been performed on the instrument
Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

Query Temperature of Last Align Up Down Converter

Remote Command	<code>:CALibration:TEMPerature:UPDown:CONVerter?</code>
Example	<code>:CAL:TEMP:UPD:CONV?</code>
Notes	Value in degrees Centigrade when the last successful Align Up Down Converter was executed Returns 9.91E+37(NaN) if Align Up Down Converter has never been performed on the instrument
Dependencies	Only appears in VXT models M9410A/11A and M9410E/11E
State Saved	No

Query Time since Last Path Delay Calibration

Remote Command	<code>:CALibration:TIME:PDElay:SOURce?</code>
Example	<code>:CAL:TIME:PDEL:SOUR?</code>
Notes	The value is the elapsed time in hours since the last successful Path Delay Calibration has been performed Returns NaN if the Path Delay Calibration has never been performed
State Saved	No

Query Temperature of Last Path Delay Calibration

Remote Command	<code>:CALibration:TEMPerature:PDElay:SOURce?</code>
Example	<code>:CAL:TEMP:PDEL:SOUR?</code>
Notes	The value is in degrees Centigrade at which the last successful Path Delay Calibration has been performed Returns 9.91E+37(NaN) if the Path Delay Calibration has never been performed
State Saved	No

4.6.6 Timebase DAC

Lets you change the setting of the **Timebase DAC** from a factory calibrated setting to your own desired setting.

The display shows the current **Timebase DAC** setting at the top, and gives you a choice of **CALibrated** or **USER** setting. There is also a field for you to enter your desired setting.

Dependencies	Does not appear in VXT and M941xE
--------------	-----------------------------------

4.6.6.1 Timebase DAC

Allows control of the internal 10 MHz reference oscillator timebase. This may be used to adjust for minor frequency alignment between your signal's reference and the internal frequency reference. This adjustment has no effect if the instrument is operating with an External Frequency Reference.

If the value of the **Timebase DAC** changes (by switching to **CALibrated** from **USER** with **User Value** set to a different value, or in **USER** with a new value entered) an alignment may be necessary. The alignment system will take appropriate action; which will either invoke an alignment or cause an **Alert**.

The **CALibrated** setting sets the **Timebase DAC** to the value established during factory or field calibration. In this case the value displayed at the top of the screen is the calibrated value.

The **USER** setting sets the **Timebase DAC** to the value set on the **User Value** control. In this case the value displayed at the top of the screen is the user value.

Remote Command	:CALibration:FREQuency:REFeRence:MODE CALibrated USER :CALibration:FREQuency:REFeRence:MODE?
Example	:CAL:FREQ:REF:MODE CAL
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due
Dependencies	Not available in UXM
Preset	Unaffected by Preset , but set to CALibrated by Restore Defaults > "Alignments" on page 3473
State Saved	No

4.6.6.2 User Value

Lets you set the **Timebase DAC** to a value other than the value established during the factory or field calibration. The current value of the DAC is displayed at the top of

the screen. This will be the Calibrated value if **Timebase DAC** is set to **CALibrated**.

Remote Command	<code>:CALibration:FREQuency:REFeRence:FINE <integer></code> <code>:CALibration:FREQuency:REFeRence:FINE?</code>
Example	<code>:CAL:FREQ:REF:FINE 8191</code>
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due
Couplings	Setting <code>:CAL:FREQ:REF:FINE</code> sets <code>:CAL:FREQ:REF:MODE USER</code>
Preset	Unaffected by Preset , but set to the factory setting by Restore Defaults > "Alignments" on page 3473
State Saved	No
Min	0
Max	16383
Backwards Compatibility SCPI	<code>:CALibration:FREQuency:REFeRence:COARse</code> ESA hardware contained two DAC controls for the Timebase. In X-Series the command <code>:CALibration:FREQuency:REFeRence:FINE</code> is the method for adjusting the timebase. The COARse option is provided as an alias to FINE Backwards Compatibility Command
Remote Command	<code>:CALibration:FREQuency:REFeRence:COARse <integer></code> <code>:CALibration:FREQuency:REFeRence:COARse?</code>
Example	<code>:CAL:FREQ:REF:COAR 8191</code>
Notes	This is an alias for <code>:CAL:FREQ:REF:FINE</code> . Any change to COARse is reflected in FINE and <i>vice-versa</i> . See <code>:CAL:FREQ:REF:FINE</code> for description of functionality
Couplings	Setting <code>:CAL:FREQ:REF:COAR</code> sets <code>:CAL:FREQ:REF:MODE USER</code>

4.6.7 Advanced

Accesses alignment processes that are immediate action operations that perform operations that run until complete. **Advanced** alignments are performed on an irregular basis, or require additional operator interaction.

Dependencies	Not available in UXM
--------------	----------------------

4.6.7.1 Characterize Preselector

The Preselector tuning curve drifts over temperature and time. Recognize that the Amplitude, Presel Center function adjusts the preselector for accurate amplitude measurements at an individual frequency. Characterize Preselector improves the amplitude accuracy by ensuring the Preselector is approximately centered at all frequencies without the use of the Amplitude, Presel Center function. Characterize Preselector can be useful in situations where absolute amplitude accuracy is not of

utmost importance, and the throughput savings or convenience of not performing a Presel Center is desired. Presel Center is required prior to any measurement for best (and warranted) amplitude accuracy.

Keysight recommends that the Characterize Preselector operation be performed yearly as part of any calibration, but performing this operation every three months can be worthwhile.

Characterize Preselector immediately executes a characterization of the Preselector, which is a YIG-tuned filter (YTF). The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

The query (**:CALibration:YTF?**) invokes the alignment of the YTF subsystem, and returns a success or failure value.

A failure encountered during alignment generates the Error Condition message “Characterize Preselector failure” and sets Bit 3 in the **STATus:QUESTionable:CALibration:EXTended:FAILure** status register. Successful completion of **Characterize Preselector** clears this Condition. It also begins the elapsed time counter for Last Characterize Preselector Time, and captures the Last Characterize Preselector Temperature.

The last Characterize Preselector Time and Temperature survives across the power cycle, as this operation is performed infrequently.

NOTE

The **Characterize Preselector** function can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the **:ABORT SCPI** command. None of the new characterization data is then used. However, since the old characterization data is purged at the beginning of the characterization, you now have an uncharacterized preselector. You should re-execute this function and allow it to finish before making any further preselected measurements.

Remote Command	:CALibration:YTF :CALibration:YTF?
Example	:CAL:YTF
Notes	:CALibration:YTF? returns 0 if successful, or 1 if failed (including interfering user signal) While Advanced, Characterize Preselector is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command Successful completion clears Bit 9 in the Status Questionable Calibration register A failure encountered during alignment generates the Error Condition message “Characterize Preselector failed” and sets Bit 9 in the Status Questionable Calibration register For Options that support frequencies > 3.6 GHz only

Dependencies	This control does not appear in models that do not contain preselectors. In these models the SCPI command is accepted without error, but no action is taken
Couplings	Initializes the time for the Last Characterize Preselector Time Records the temperature for the Last Characterize Preselector Temperature Overlapped Command
Remote Command	<code>:CALibration:YTF:NPENDING</code>
Example	<code>:CAL:YTF:NPEN</code>
Notes	<code>:CALibration:YTF:NPENDING</code> is the same as <code>:CALibration:YTF</code> , including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query if the calibration is successfully completed or not Typical usage is: <ol style="list-style-type: none"> 1. <code>:CALibration:YTF:NPENDING</code> (Start a YTF calibration) 2. <code>:STATus:OPERation:CONDition?</code> (Check if the calibration is completed or not, If Bit 0 is set, then the system is doing calibration, and you should repeat this query until the bit is cleared) 3. <code>:STATus:QUESTionable:CALibration:EXTended:FAILure:CONDition?</code> (Check whether Bit 2 is set. If this bit is set, that means there are some errors in previous internal source calibration)

4.6.7.2 Characterize Reference Clock

Calibrates the Reference Input Phase with the External Reference Output. This feature is only available when either option DP2 or B40 is present. It requires connecting the 10 MHz OUT to the EXT REF IN port with a BNC cable before running the characterization.

See ["Front panel guided calibration sequence" on page 3524](#)

Remote Command	<code>:CALibration:REference:CLOCK?</code>
Example	<code>:CAL:REF:CLOC:INIT?</code> connect cable <code>:CAL:REF:CLOC?</code> disconnect cable <code>:CAL:REF:CLOC:END?</code>
Notes	<code>:CALibration:REference:CLOCK?</code> returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Initializes the time for the Last Characterize Reference Clock Time Records the temperature for the Last Characterize Reference Clock Temperature. Expected to be run after <code>:CAL:REF:CLOC:INIT</code> , and before <code>:CAL:REF:CLOC:END</code>

4 System


4.6 Alignments

Remote Command	<code>:CALibration:REference:CLOCK:INITialize?</code>
Example	<code>:CAL:REF:CLOC:INIT?</code>
Notes	Returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Expected to be run before sending <code>:CAL:REF:CLOC?</code> . This will stop the current measurement when it has completed (does not abort the current data acquisition), and prepare the instrument for the expected cabling
Remote Command	<code>:CALibration:REference:CLOCK:END?</code>
Example	<code>:CAL:REF:CLOC:END?</code>
Notes	Returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Expected to be run after sending <code>:CAL:REF:CLOC?</code> , and after removing the cable used in that Characterize Reference Clock step. This will resume any queued measurements, and concludes the reference clock characterization
Remote Command	<code>:CALibration:TIME:REference:CLOCK?</code>
Example	<code>:CAL:TIME:REference:CLOCK?</code>
Notes	Value is the date and time the last successful Characterize Reference Clock was executed. The date is separated from the time by a space character. Returns "" if Characterize Reference Clock has never been performed on the instrument
Dependencies	Option DP2 or B40
State Saved	No


Front panel guided calibration sequence

When selecting **Characterize Reference Clock** via the front panel, the following form is displayed.


Step 1 of the guided calibration sequence:

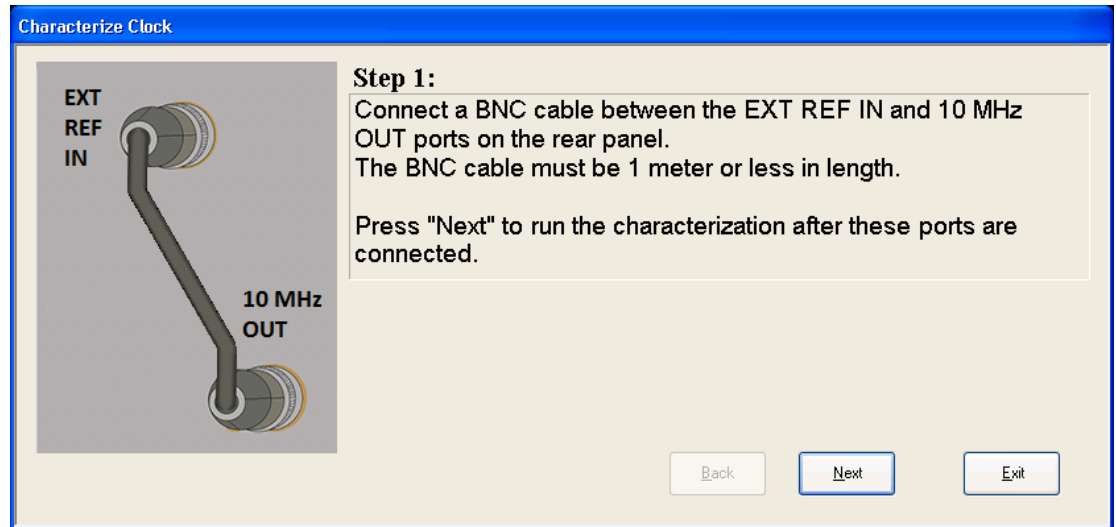

Step 2 of the guided calibration sequence:

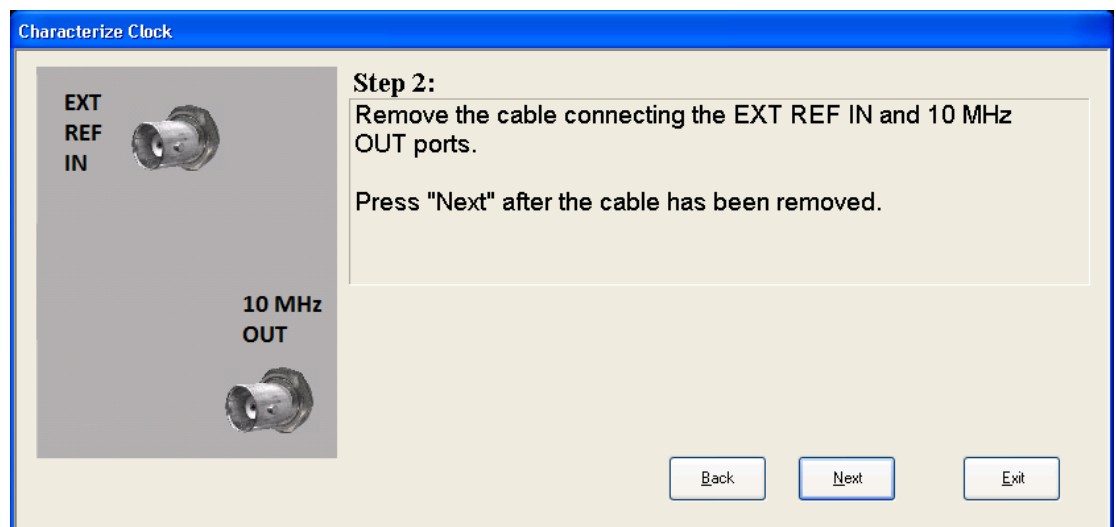

Step 3 of the guided calibration sequence:

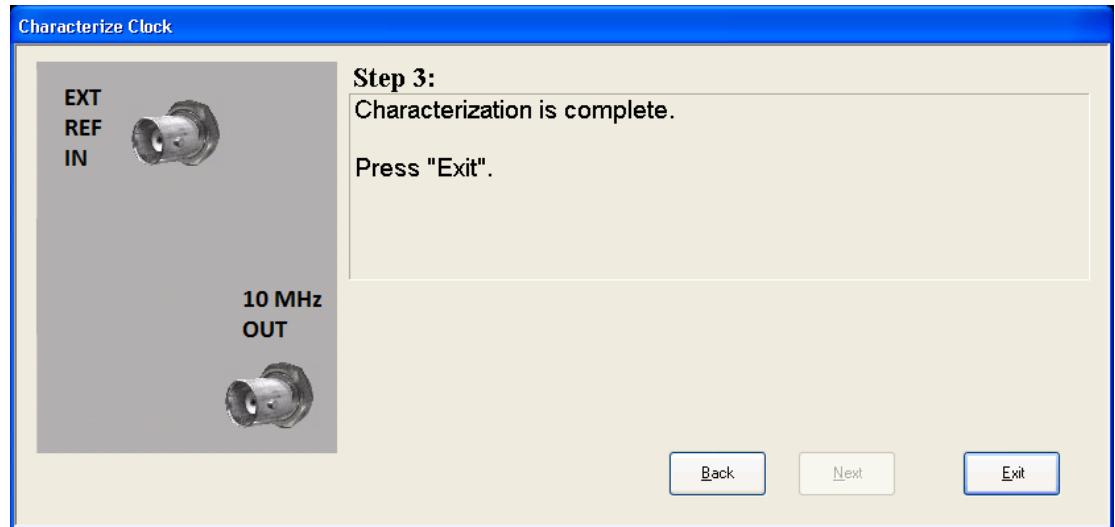

4.6.7.3 Characterize Noise Floor

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. To do this, press **Characterize Noise Floor**. When you press this control, the instrument stops any measurement currently underway, and a dialog appears with an **OK** and **Cancel** button that says:

This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel

When you press **Enter** or **OK**, the characterization proceeds. After the characterization, the instrument restarts the measurement from the beginning (similar to pressing the **Restart** key). The characterization takes many minutes to run.

The noise floor model used by Noise Floor Extensions includes an estimation of the temperature behavior of the noise floor, but this is only an estimation. The noise floor changes little with the age of the components. However, even small changes in the estimated level of the noise floor can make large changes in the effective noise floor, because the effective noise floor is the error in the estimation of the noise floor. Keysight recommends that the **Characterize Noise Floor** operation be performed when the instrument is operating at an ambient temperature that is significantly different than the ambient temperature at which this alignment was last run. In addition, Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year.

The noise floor model from the last operation of **Characterize Noise Floor** survives across the power cycle.

NOTE

The **Characterize Noise Floor** function can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the **:ABORT SCPI** command. None of the new characterization data is then used. However, since the old characterization data is purged at the beginning of the characterization, you now have an uncharacterized noise floor. You should re-execute this function and allow it to finish before making any further measurements with NFE. Until you do, the instrument will display a “Characterize Noise Floor required” message and set bit 12 in the Status Questionable Calibration register (**STATus:QUEStionable:CALibration:EXTended:NEEDed**).

Remote Command	:CALibration:NFLoor :CALibration:NFLoor?
Example	:CAL:NFL
Notes	:CALibration:NFLoor? returns 0 if successful, or 1 if failed (including interfering user signal) This command is sequential; it must complete before further commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command
Dependencies	This control does not appear in models that do not contain NF2. In these models the command is accepted without error, but no action is taken
Couplings	Successful completion of Characterize Noise Floor begin the elapsed time counter or the Last Characterize Noise Floor Time
Remote Command	:CALibration:TIME:NFLoor?
Example	:CAL:TIME:NFL?
Notes	Value is the date and time the last successful Characterize Noise Floor was executed. The date is separated from the time by a space character Returns “” if no Characterize Noise Floor has ever been performed on the instrument
Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No
Remote Command	:CALibration:TEMPerature:NFLoor?
Example	:CAL:TEMP:NFL?
Notes	Value is the temperature of the last successful Characterize Noise Floor was executed Returns “” if no Characterize Noise Floor has ever been performed on the instrument
Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No
Remote Command	:CALibration:TIME:ELAPsed:NFLoor?

Example	<code>:CAL:TIME:ELAP:NFL?</code>
Notes	Value is the elapsed time the instrument was powered-on since the last successful Characterize Noise Floor was executed Returns "" if no Characterize Noise Floor has ever been performed on the instrument
Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No

4.6.7.4 Calibration Temperature History

The following queries let you retrieve various statistics regarding the Calibration Temperature history.

Minimum Temperature Within Last Number of Seconds

Lets you query the minimum temperature within the last number of seconds. If no data exists for the requested time, the returned value is 9.91e+37.

Remote Command	<code>:CALibration:TEMPerature:MINimum? <seconds></code>
Example	<code>:CAL:TEMP:MIN? 60</code>

Maximum Temperature Within Last Number of Seconds

Lets you query the maximum temperature within the last number of seconds. If no data exists for the requested time, the returned value is 9.91e+37.

Remote Command	<code>:CALibration:TEMPerature:MAXimum? <seconds></code>
Example	<code>:CAL:TEMP:MAX? 60</code>

Temperature Seconds Ago

Lets you query temperature X seconds ago. If no data exists for the requested time, the returned value is 9.91e+37.

Remote Command	<code>:CALibration:TEMPerature:AGO? <seconds></code>
Example	<code>:CAL:TEMP:AGO? 75</code>

Oldest Temperature Value

Lets you query the oldest recorded temperature value.

Remote	<code>:CALibration:TEMPerature:OLDest[:TEMPerature]?</code>
--------	---

Command	
Example	<code>:CAL:TEMP:OLD?</code>
Oldest Temperature Time	
Lets you query how long ago the oldest temperature value was recorded.	
Remote Command	<code>:CALibration:TEMPerature:OLDest:SEConds?</code>
Example	<code>:CAL:TEMP:OLD:SEC?</code>

4.6.7.5 TDS Alignment

Only appears in N9038B (MXE-B) when Option TDS is installed and licensed.

The TDS alignment includes `AlignNowAll` and `RFPresel` alignment. Immediately executes an alignment of the TDS subsystem. The instrument stops any measurement currently underway, performs the alignment, and then restarts the measurement from the beginning (similar to pressing the **Restart** key).

Align TDS can be interrupted by pressing the **Cancel (ESC)** front-panel key or from remote with Device Clear followed by `:ABORT`. When this occurs, no new TDS alignment data will be employed.


Remote Command	<code>:CALibration:TDS</code> Params missing? What does the query return? <code>:CALibration:TDS?</code>
Example	<code>:CAL:TDS</code>
Notes	This command is sequential; it must complete before further commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command
Dependencies	Only appears in N9038B (MXE-B) models with Option TDS installed and licensed

4.6.7.6 Backup or Restore Align Data...

Opens the utility for backing-up or restoring alignment data. Since this utility cannot be run while the instrument software is running, a prompt tells you to shut down the instrument first:

4 System

4.6 Alignments

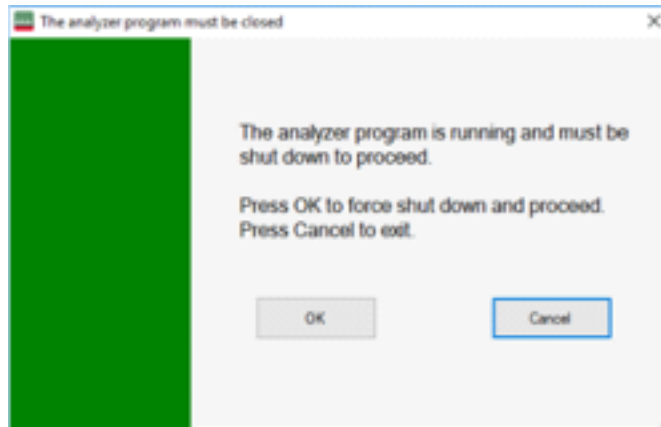

Press **OK** and the instrument will shut down and open the backup utility.

Alignment data for the instrument resides on the hard drive in a database. Keysight uses high quality hard drives; however, it is highly recommended the alignment data be backed-up to storage outside of the instrument. Additionally, for customers who use multiple CPU Assemblies or multiple disk drives, the alignment that pertains to the instrument must be transferred to the resident hard drive after a CPU or hard drive is replaced. This utility facilitates backing-up and restoring the alignment data.

NOTE

This utility allows you to navigate to any location of the Windows file system. If you are backing up alignment data to storage outside of the instrument, then it is assumed that you will use a USB memory device, or Mapped Network Drive.

Processor Assembly types PC6 and PC7 contain a removable SD memory card. When one of these CPUs is installed, the Backup and Restore Alignment Data wizard defaults to the SD card as the backup location. At every power-on, the software will check to determine if the calibration data on the SD memory card (the backup) is newer than the data in use on the disk. In such situations, before the application is loaded, you are given the opportunity to restore the data from the backup. If you respond **Yes**, the Backup and Restore Alignment Data wizard (see ["Alignment Data Wizard \(without Flash\)" on page 3531](#)) will be invoked to perform the restore.


Processor Assembly types PC6S and PC7S contain an internal flash EEPROM, as well as a removable SD card. When one of these CPUs is installed, the Backup and Restore Alignment Data wizard defaults to the internal flash as the backup location. As with the PC6 and PC7, at every power-on, the software compares the timestamp of the backup on the flash and the timestamp of the alignment data in use on the disk. If the backup on the flash has newer data, you are given the opportunity to restore the data from the backup before the application is loaded. If you respond **Yes**, the Backup and Restore Alignment Data wizard (see ["Alignment Data Wizard \(with Flash\)" on page 3541](#)) will be invoked and will prompt you to restore that backup.

For purposes of these instructions, “alignment data” and “calibration data” are used interchangeably.

Dependencies	Not available in UXM
Remote Command	<code>:CALibration:DATA:DEFault</code>
Example	<code>:CAL:DATA:DEF</code>
Notes	Restores the alignment data files to their default state
Couplings	Sets Auto Align to OFF . Sets Bit 14 in the Status Questionable Calibration register. The Error Condition message “Align Now All required” is generated


Alignment Data Wizard (without Flash)

Guides you through the operation of backing-up or restoring the alignment data.

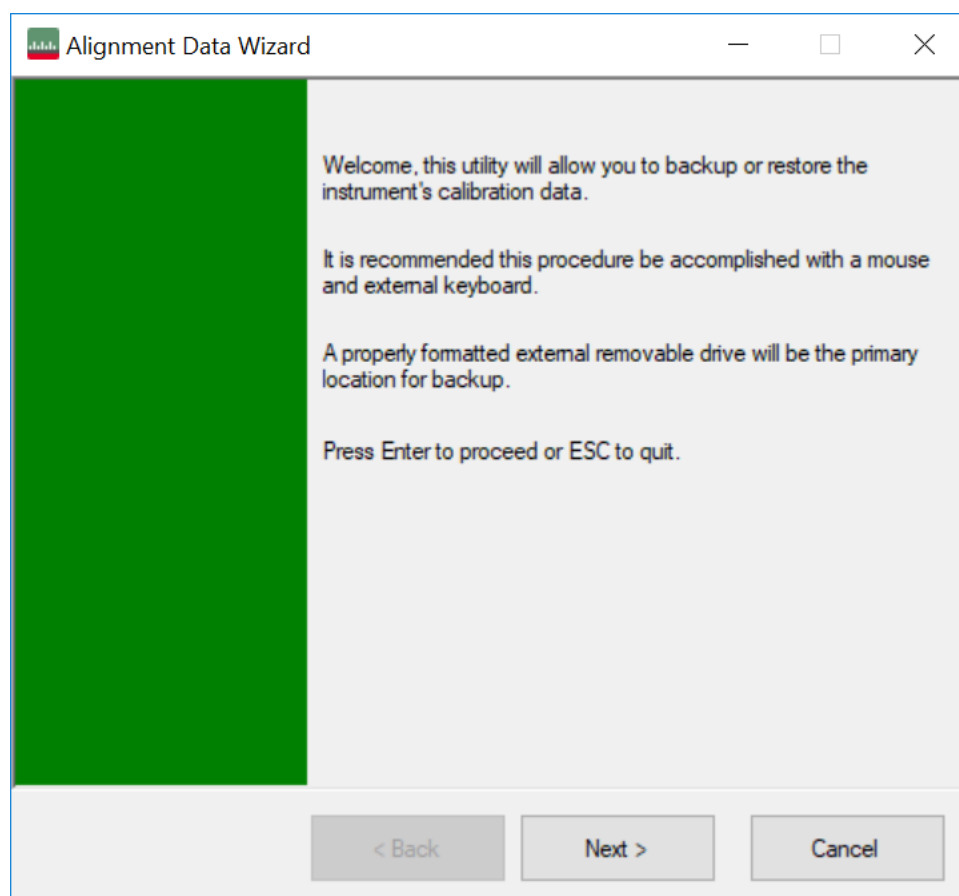

4 System


4.6 Alignments

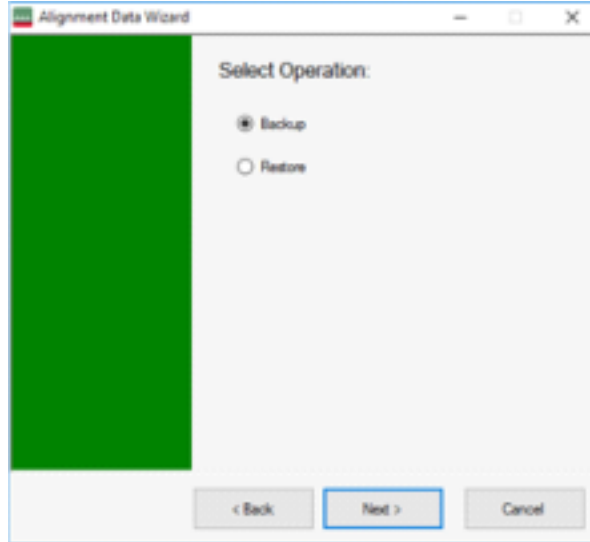

The default backup location for instruments *without* internal flash will be the first drive identified as an external drive (USB or LAN) if such is available; or, if not, the internal D: partition.

The default file name is `<model number>_<serial number>_<date in YYYYMMDDHHMMSS>.bkz`.

The default file extension for legacy backup files was `.bak`. The Backup and Restore operations support both the `.bak` (legacy format) and `.bkz` formats.

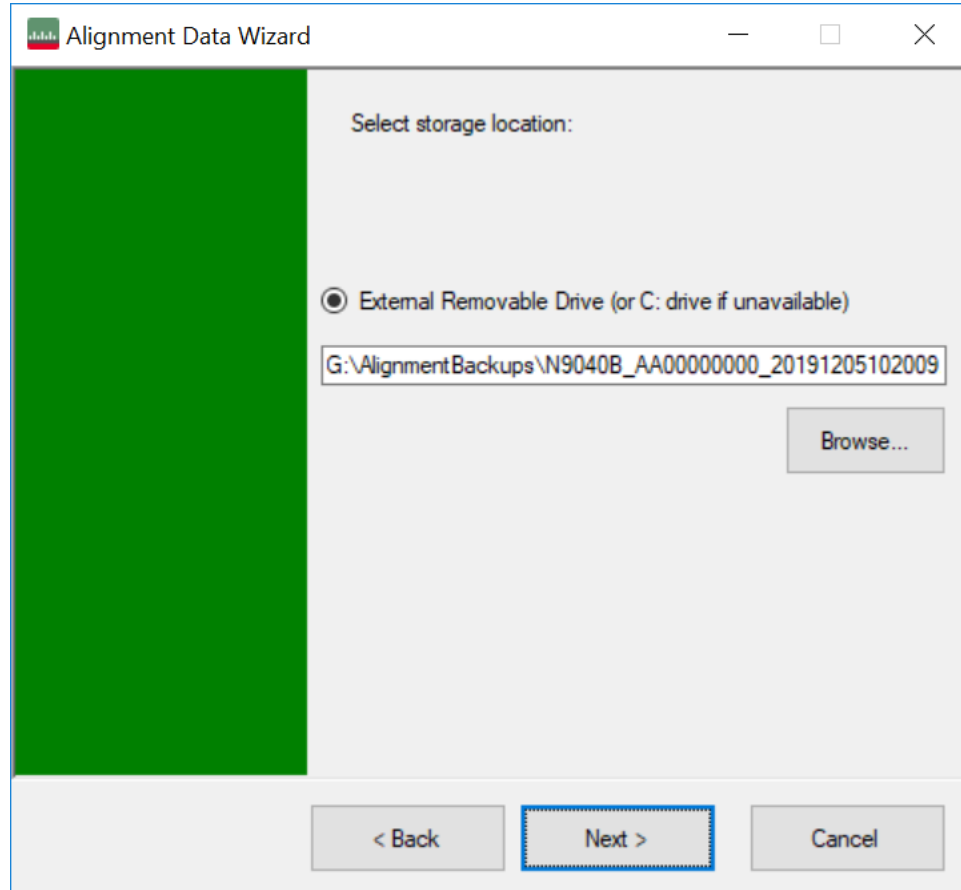


If a USB drive is present, it will be selected by default. The path defaults to the **AlignmentBackups** folder, and a filename is automatically created, in the form: **<model>_<serial number>_<date><time>.bkz**


If you wish to enter a custom filename, you can do so with an external keyboard, or by opening the onscreen Alpha keyboard, by pressing the **Keyboard** hardkey on the front panel:



When the **Next >** button is pressed, you will be prompted to create a new folder if the chosen path does not yet exist.

4 System
4.6 Alignments

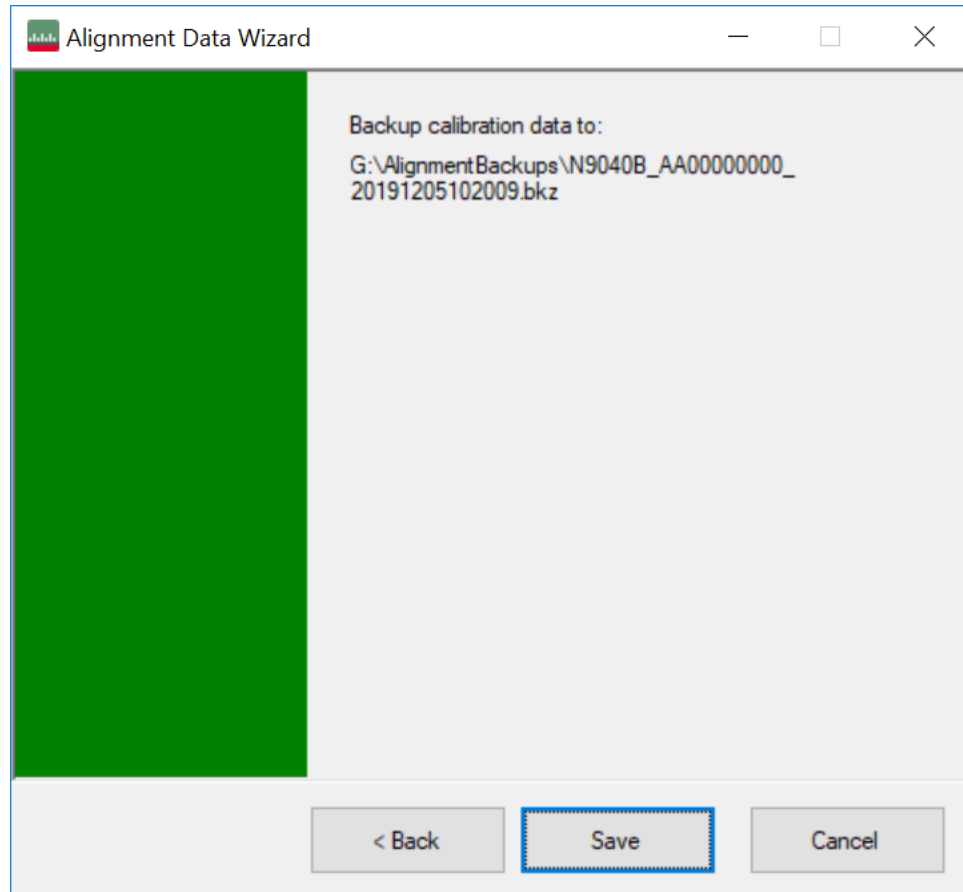


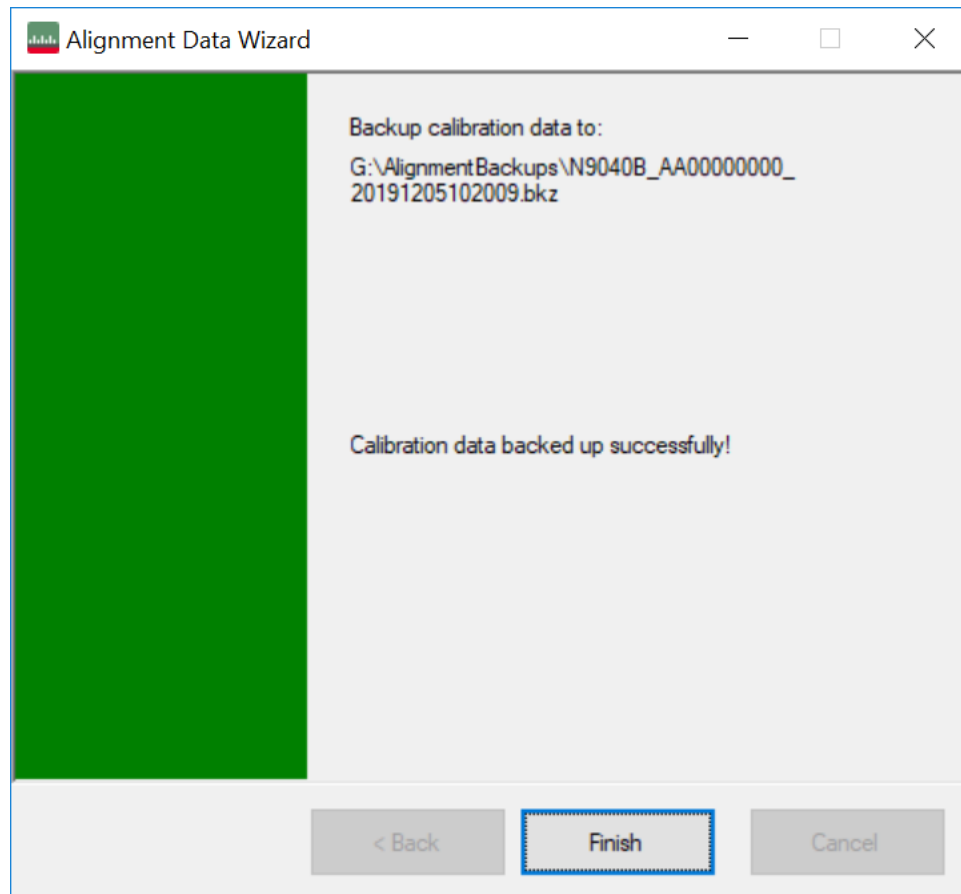


The restore operation checks the validity of the restore file using the database's built-in file validation. If the restore file is corrupt, the existing alignment data will remain in use.

If the serial number information in the backup file being restored is different from that of the instrument, the following message appears (the serial numbers shown are examples):

4 System
4.6 Alignments

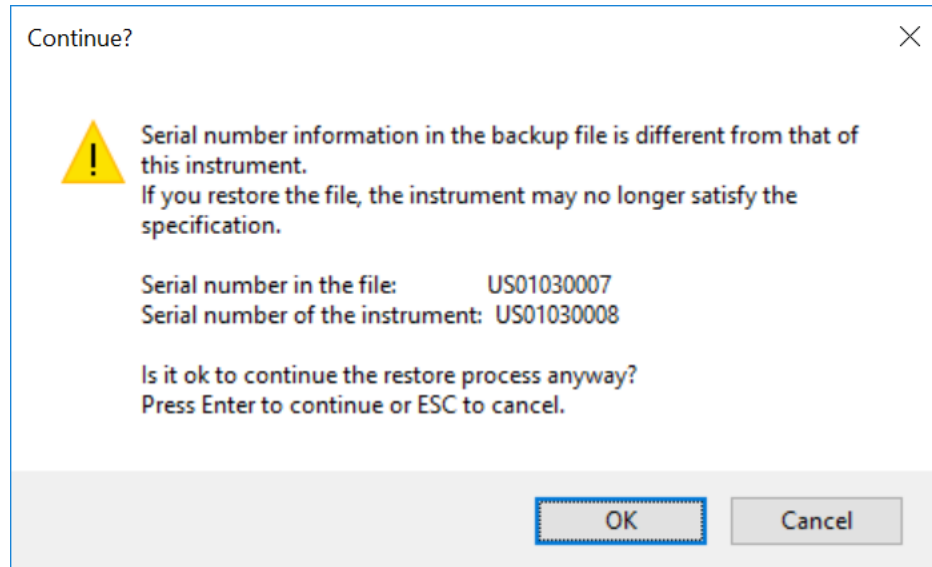


The default restore location for instruments *without* internal flash will be the first drive identified as an external drive (USB or LAN) if such is available; or, if not, the internal D: partition. The default restore file will be the most recent file that matches the default backup file name format: `<model number>_<serial number>_<date>.bkz`

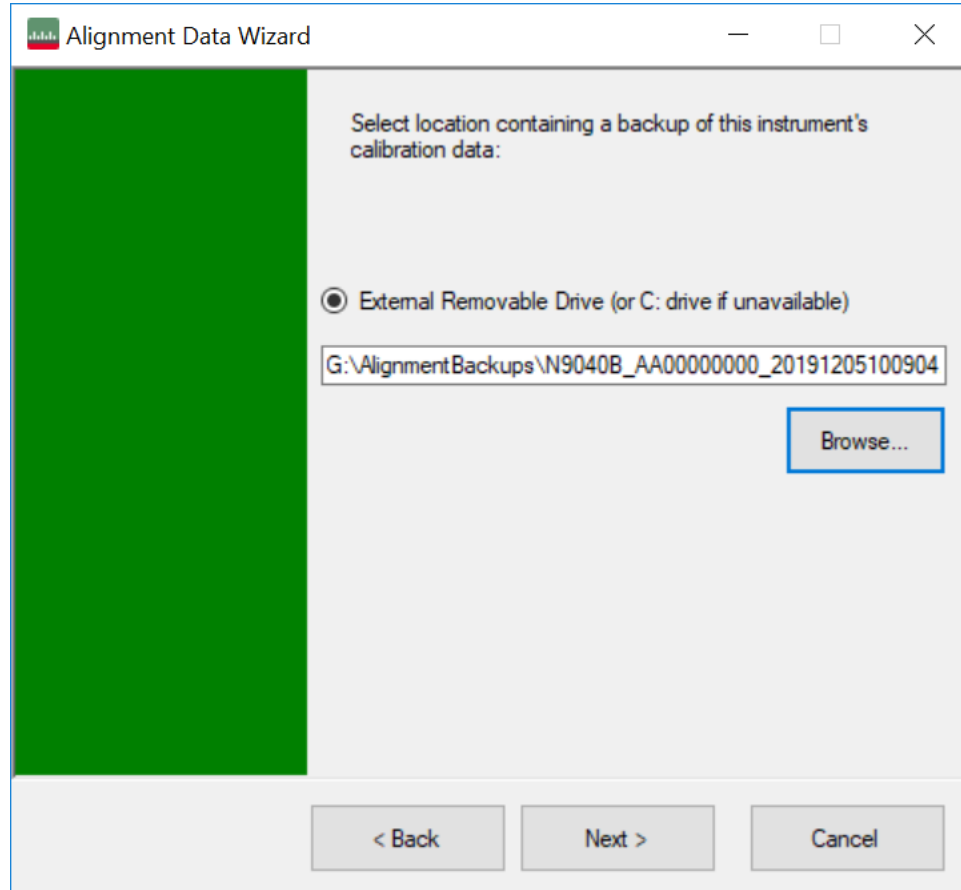


Changing the drive letter also modifies the path displayed in the box below. When this step is first loaded, the drive drop-down menu is populated with connected drives, which provide you with read access.


The path defaults to the **AlignBackups** folder. The most recent backup (*.bkz or *.bak) file in the folder will also be selected by default.

4 System
4.6 Alignments

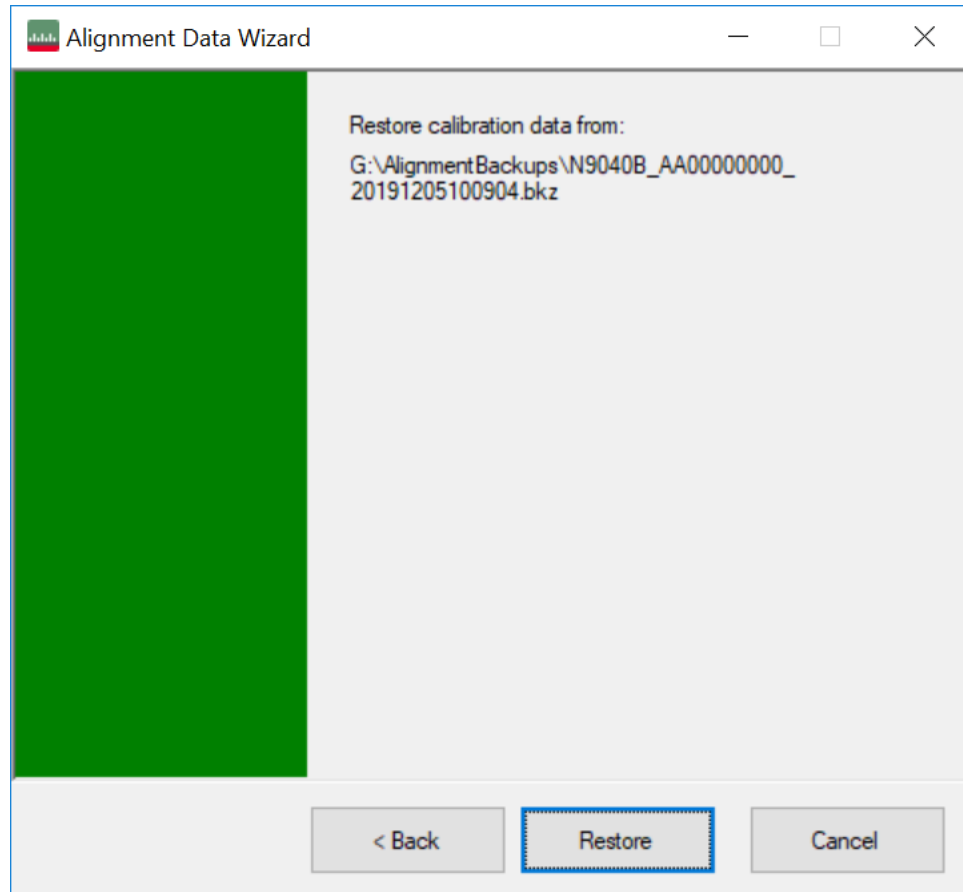

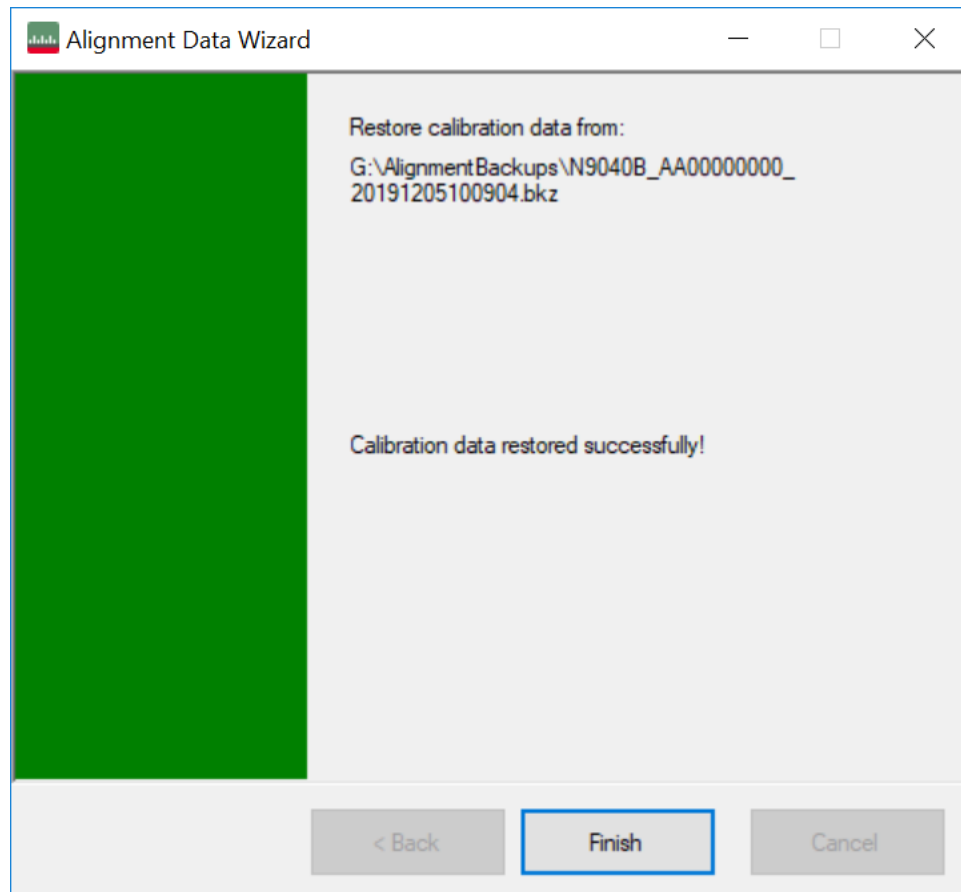

When restoring data in the legacy **.bak** format, Administrator privileges are required. You will be prompted when you attempt a restore (indicated by the UAC Shield on the **Restore** button below).

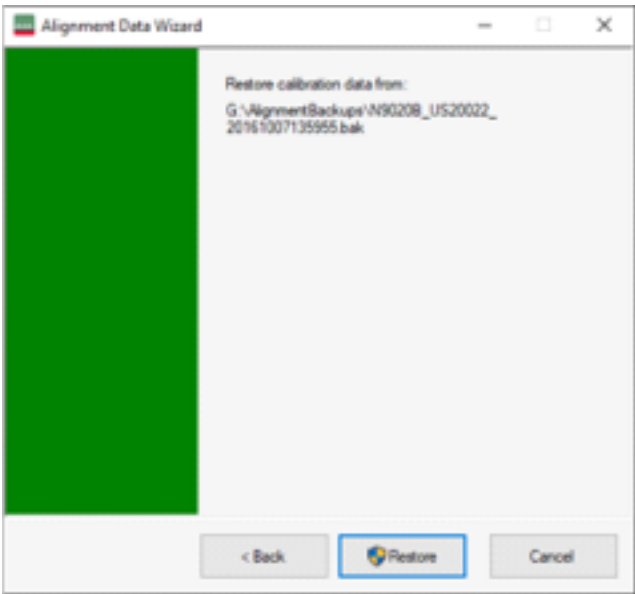

Perform Backup (without Flash) (Remote Command Only)

Invokes an alignment data backup operation to the provided location.

NOTE Keysight recommends that the specified location should be external to the instrument (USB or Mapped Network Drive).


Remote Command	:CALibration:DATA:BACKup <filename>
Example	:CAL:DATA:BACK "F:\AlignDataBackup_N9020A_US00000001_2008140100.bkz"

Perform Restore (without Flash) (Remote Command Only)

Invokes an alignment data restore operation from the provided filename.

Remote Command	:CALibration:DATA:REStore <filename>
Example	:CAL:DATA:REST "F:\ AlignDataBackup_N9020A_US00000001_2008140100.bkz"

Alignment Data Wizard (with Flash)

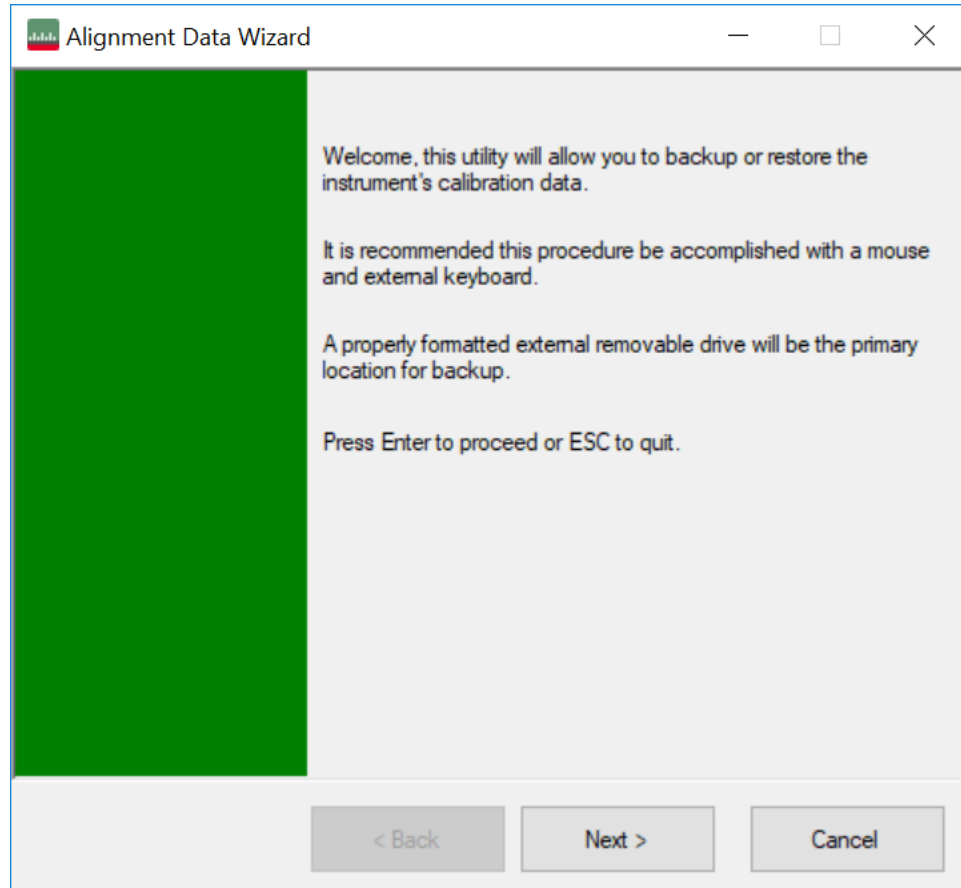


If your instrument has Processor Assembly type PC6S or PC7S (see ["Show System" on page 3418](#)) the instrument has an internal flash EEPROM that can store a backup of the alignment data. In this case, the interface to the Alignment Data Wizard is enhanced to accommodate this internal storage. This section details the use of this internal flash. For details on using external storage, see the previous section (["Alignment Data Wizard \(without Flash\)" on page 3531](#)).

The Alignment Data Wizard guides you through the operations of backing up or restoring alignment data.


4 System


4.6 Alignments

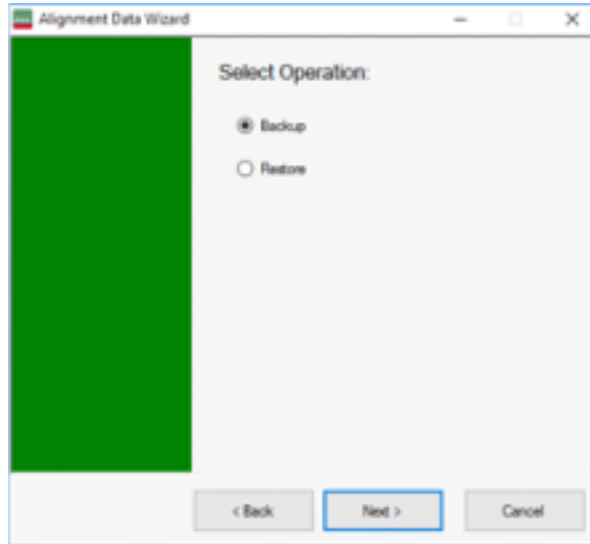

Having selected **Backup** or **Restore**, you then select the source or destination for the alignment data. As shown below, you can select either:


- Internal flash EEPROM, or,
- External Removable Drive (which includes the SD card described in "[Backup or Restore Align Data...](#)" on page 3529)

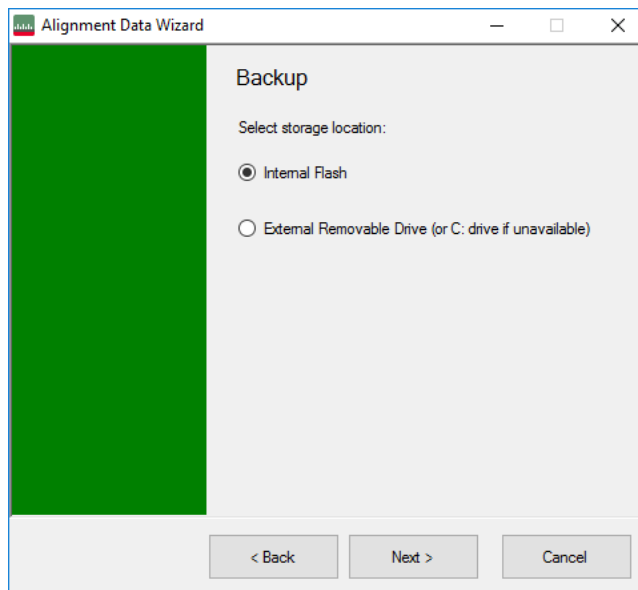

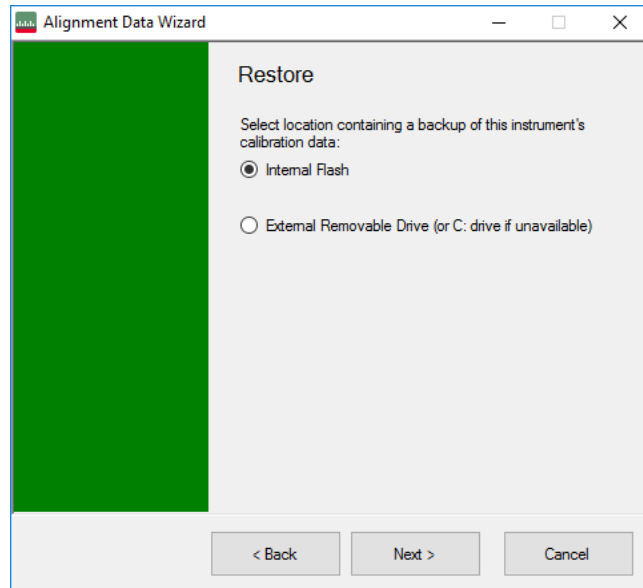


The final page of the wizard asks you to confirm the choices made in the previous pages. When the operation is complete, an indication is displayed on the same page, as below.

Backup

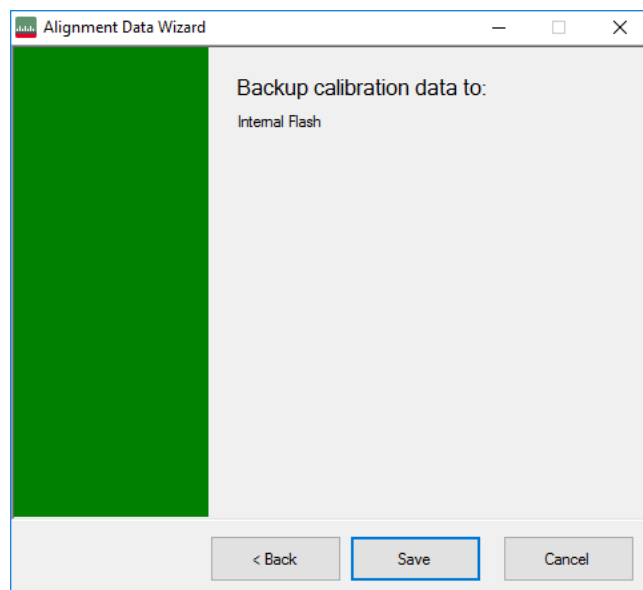



4 System

4.6 Alignments

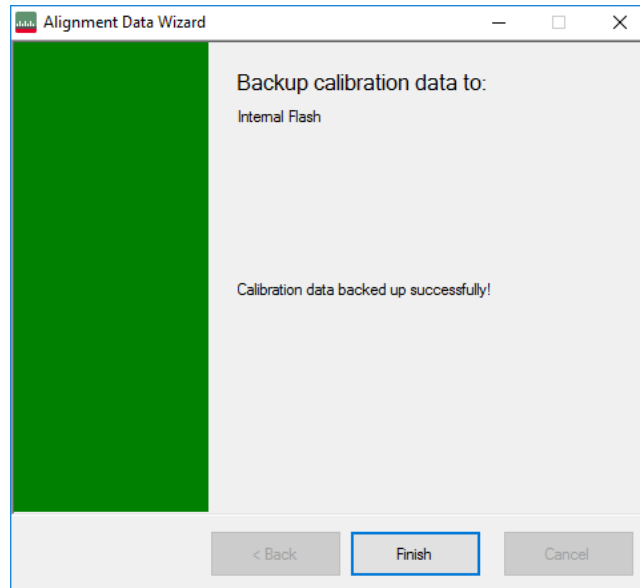


Restore

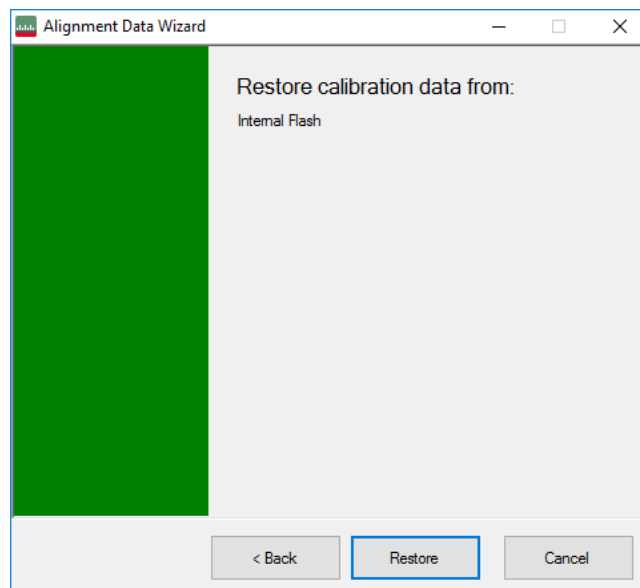


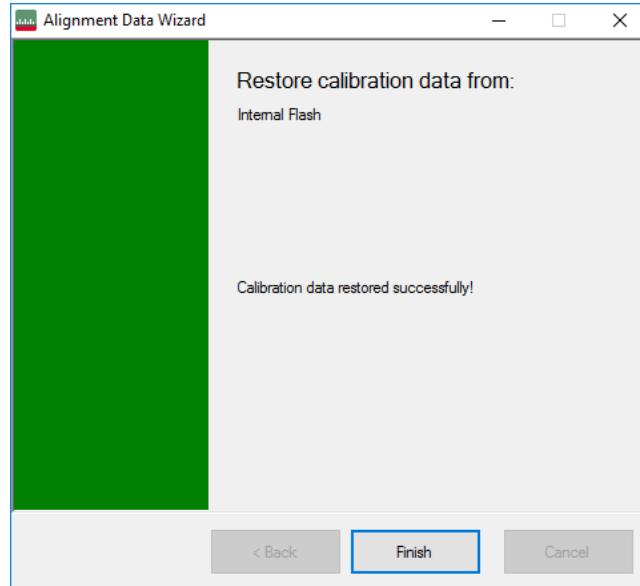


When restoring alignment data, if the serial number information in the backup file being restored is different from that of the instrument, the following message appears (the serial numbers shown are examples):

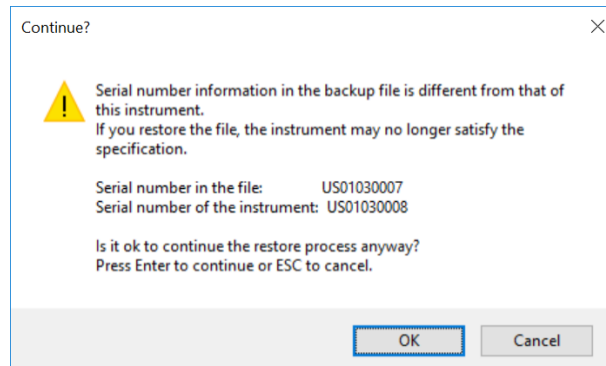

Immediately before the actual restoration, a final confirmation message is displayed detailing what is being restored and the current database that will be overwritten on the disk (the dates and versions are examples):

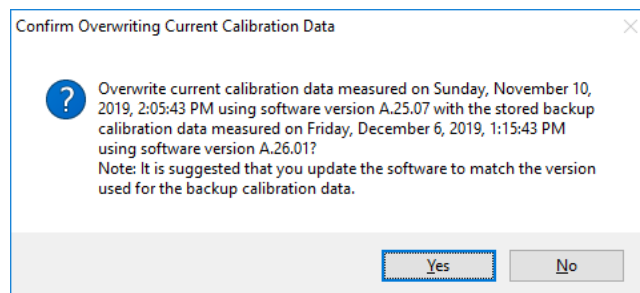

When backing up alignment data to the flash, if there is already an existing backup on the flash, a final confirmation message is displayed detailing what is being backed up and what will be overwritten on the flash (again, the dates and versions are examples):

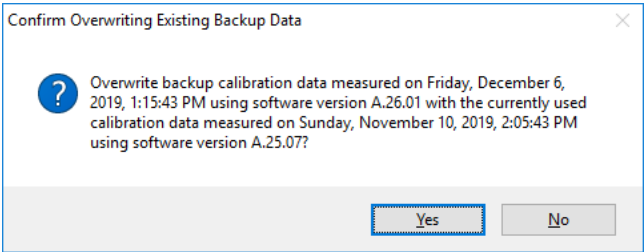

Perform Backup (with Flash) (Remote Command Only)

Invokes an alignment data backup operation to the internal flash EEPROM.

Remote Command	<code>:CALibration:DATA:INTernal:BACKup</code>
Example	<code>:CAL:DATA:INT:BACK</code>

Perform Restore (With Flash) (Remote Command Only)

Invokes an alignment data restore operation from the internal flash EEPROM.

Remote Command	<code>:CALibration:DATA:INTernal:RESTore</code>
Example	<code>:CAL:DATA:INT:REST</code>

Restore Alignment Defaults

Causes the Alignment system settings to be reset to their default values. This does not affect any Alignment data stored in the system.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

When **Alignments** is selected, a message appears saying:

`This will reset all of the settings for the Alignment system to their default values`

`No alignment data will be erased`

`This action cannot be undone. Do you want to proceed?`

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

Align Now All must be executed if the value of the Timebase DAC results in a change.

Example	<code>:SYST:DEF ALIG</code>												
Notes	<p>Alignment processing that results as the transition to Auto Align Normal will be executed sequentially; thus <code>*OPC?</code> or <code>*WAI</code> will wait until the alignment processing is complete</p> <p>The parameters affected are:</p> <table> <tr> <th>Parameter</th><th>Setting</th></tr> <tr> <td>Timebase DAC</td><td>Calibrated</td></tr> <tr> <td>Timebase DAC setting</td><td>Calibrated value</td></tr> <tr> <td>Auto Align State</td><td>Normal (if the instrument is not operating with default alignment data, Off otherwise)</td></tr> <tr> <td>Auto Align All but RF</td><td>Off</td></tr> <tr> <td>Auto Align Alert</td><td>Time & Temperature</td></tr> </table>	Parameter	Setting	Timebase DAC	Calibrated	Timebase DAC setting	Calibrated value	Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)	Auto Align All but RF	Off	Auto Align Alert	Time & Temperature
Parameter	Setting												
Timebase DAC	Calibrated												
Timebase DAC setting	Calibrated value												
Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)												
Auto Align All but RF	Off												
Auto Align Alert	Time & Temperature												

4.6.7.7 oGRF Preselector

This menu and all its submenus are only available in models with the RF Preselector, such as N9038B, or N9048B.

Dependencies	Only available in RF Preselector models
--------------	---

Align Now, 20 Hz to 30 MHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the Restart key).

The query `:CALibration:RFPSelector:CONDucted?` invokes the alignment of the RF Preselector on Conducted Band and returns a success or failure value. Successful completion clears the “Align 20 Hz to 30 MHz required” Error Condition, and clears bit 1 in the Status Questionable Calibration Extended Needed register. The elapsed time counter will begin for Last Align Now, Conducted Time, and the temperature is captured for the Last Align Now, Conducted Temperature. The alignment can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the `:ABORt` SCPI command. When this occurs, the Error Condition “Align 20 Hz to 30 MHz required” is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

4 System

4.6 Alignments

The “Align 20 Hz to 30 MHz required” Error Condition will appear when this alignment has expired. User is now responsible to perform the Align Now, 20 Hz to 30 MHz to keep the receiver in warranted operation. This alignment can only be performed by user as it is not part of the Auto Align process.

Remote Command	<code>:CALibration:RFPSelector:CONDUCTed</code> <code>:CALibration:RFPSelector:CONDUCTed?</code>
Example	<code>:CAL:RFPS:COND</code>
Notes	<p>The query returns 0 if successful, or 1 if failed</p> <p>When Align 20 Hz to 30 MHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command. Successful completion will clear bit 1 in the Status Questionable Calibration Extended Needed register and bit 0 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment will set the Error Condition “20 Hz to 30 MHz Alignment Failure” and set both bit 1 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register</p>
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI will generate an error
Couplings	<p>Initializes the time for the Last Align Conducted Now, Conducted Time</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature</p>
State Saved	No
Status Bits/OPC dependencies	<p>Bit 8 or 9 may be set in the Status Questionable Calibration register</p> <p>Bit 1 may be set in the Status Questionable Calibration Extended Needed register</p> <p>Bit 0 may be set in the Status Questionable Calibration Extended Failure register</p>

Align Now, 30 MHz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key).

The query (`:CALibration:RFPSelector:RADiated?`) invokes the alignment of the RF Preselector on Radiated Band and returns a success or failure value. Successful completion clears the “Align 30 MHz to 3.6 GHz required” Error Condition, and clears bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter begins for Last Align Now, Radiated Time, and the temperature is captured for the Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by `:ABORT`. When this occurs, the Error Condition “Align 30 MHz to 3.6 GHz required” is set, because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The “Align 30 MHz to 3.6 GHz required” Error Condition appears when this alignment has expired. You must now perform **Align Now, 30 MHz to 3.6 GHz** to keep the receiver in warranted operation.

Remote Command	<code>:CALibration:RFPSelector:RADiated</code> <code>:CALibration:RFPSelector:RADiated?</code>
Example	<code>:CAL:RFPS:RAD</code>
Notes	<p>The query returns 0 if successful, or 1 if failed</p> <p>When Align 30 MHz to 3.6 GHz is performed, alignment, bit 0 in the Status Operation register is set. Completion, or termination, clears bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by <code>:ABORT</code>. Successful completion clears bit 2 in the Status Questionable Calibration Extended Needed register and bit 1 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment sets the Error Condition “30 MHz to 3.6 GHz Alignment Failure” and sets both bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register</p>
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI will generate an error
Couplings	<p>Initializes the time for the Last Align Radiated Now, Radiated Time</p> <p>Records the temperature for the Last Align Radiated Now, Radiated Temperature</p>
State Saved	No
Status Bits/OPC dependencies	<p>May set Bit 8 or 9 in the Status Questionable Calibration register</p> <p>May set Bit 2 in the Status Questionable Calibration Extended Needed register</p> <p>May set Bit 1 in the Status Questionable Calibration Extended Failure register</p>

Align Now, 20 Hz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key).

The query (`:CALibration:RFPSelector:FULL?`) invokes the alignment of the RF Preselector on both Conducted and Radiated Band and return a success or failure value. Successful completion clears the “Align 20 Hz to 3.6 GHz required” Error Condition, and clears bit 1 and bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter begins for Last Align Now, Conducted Time and Last Align Now Radiated Time and the temperature is captured for Last Align Now, Conducted Temperature and Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key or remotely with Device Clear, followed by `:ABORT`. When this occurs, the Error Condition “Align 20 Hz to 3.6 GHz required” is set, because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

4 System

4.6 Alignments

The “Align 20 Hz to 3.6 GHz required” Error Condition appears when this alignment has expired. You must now perform the Align Now, 20 Hz to 3.6 GHz to keep the receiver in warranted operation.

Remote Command	<code>:CALibration:RFPSelector:FULL</code> <code>:CALibration:RFPSelector:FULL?</code>
Example	<code>:CAL:RFPS:FULL</code>
Notes	<p>The query returns 0 if successful, or 1 if failed</p> <p>When Align 20 Hz to 3.6 GHz is performed, alignment, bit 0 in the Status Operation register is set. Completion, or termination, clears bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear, followed by <code>:ABORT</code>. Successful completion clears bit 1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 0, bit 1 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment sets the Error Condition “20 Hz to 3.6 GHz Alignment Failure” and sets bit 1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register</p>
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI generates an error
Couplings	<p>Initializes the time for the Last Align Conducted Now, Conducted Time</p> <p>Initializes the time for the Last Align Radiated Now, Radiated Time</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature</p> <p>Records the temperature for the Last Align Radiated Now, Radiated Temperature</p>
State Saved	No
Status Bits/OPC dependencies	<p>May set Bit 8 or 9 in the Status Questionable Calibration register</p> <p>May set Bit 1 and 2 in the Status Questionable Calibration Extended Needed register</p> <p>May set Bit 0 and 1 in the Status Questionable Calibration Extended Failure register</p>

Alert

Enables or disables the display of RF Preselector alignment required message on the status line. The instrument powers up with Alert **ON**.

Remote Command	<code>:CALibration:RFPSelector:ALERT ON OFF 0 1</code> <code>:CALibration:RFPSelector:ALERT?</code>
Example	<code>:CAL:RFPS:ALER OFF</code>
Notes	Error Condition is generated when alert is ON and any of the RF Preselector alignments has expired
Preset	Unaffected by Preset, but set to ON by Restore Defaults > “Alignments” on page 3473
State Saved	No
Range	OFF ON

4.6.7.8 Scheduler

Setting the Scheduler to **ON** triggers execution of the scheduled task based on the recurrence and time set in the scheduler since the last successful of the specific alignment. A warning condition of “RF Preselector alignment scheduler is ON” appears when the scheduler is set to **ON**. **OFF** prevents the Scheduler from running any scheduled task.

Remote Command	:CALibration:RFPSelector:SCHeDuler:STATe ON OFF 0 1 :CALibration:RFPSelector:SCHeDuler:STATe?
Example	:CAL:RFPS:SCH:STAT OFF
Preset	Unaffected by Preset, but set to ON by Restore Defaults > "Alignments" on page 3473
State Saved	No
Range	OFF ON

Schedule Setup

Lets you schedule a task to run automatically at the background based on the recurrence and time set in the scheduler. Make sure that the instrument's local time is accurate, because the Scheduler relies on this information to execute the task.

This dialog contains the following controls:

- "Task" on page 3551
- "Date/Time" on page 3552
- "Hour" on page 3553
- "Minute" on page 3553
- "Recurrence" on page 3553
- "Number of Weeks" on page 3553
- "Day" on page 3554

Task

There are 3 tasks that can be selected for the scheduler to run.

- Task 1 is the 20 Hz to 30 MHz alignment
- Task 2 is the 30 MHz to 3.6 GHz alignment

4 System

4.6 Alignments

- Task 3 is the 20 Hz to 3.6 GHz alignment

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TASK T1 T2 T3</code> <code>:CALibration:RFPSelector:SCHeduler:TASK?</code>
Example	<code>:CAL:RFPS:SCH:TASK T1</code>
Notes	Changing the task does not reset the Scheduler time, and the alignment is based on the current scheduled configuration to occur
Preset	Unaffected by Preset but set to T3 by Restore Defaults > "Alignments" on page 3473
State Saved	No
Range	Task 1 Task 2 Task 3

Date/Time

Lets you configure the scheduler to run a task starting from this date and time. The date and time rely on the instrument's local time to execute a scheduled task. The date format is "YYYY/MM/DD" and the time is 24-hour clock.

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TIME:START "date","time"</code> <code>:CALibration:RFPSelector:SCHeduler:TIME:START?</code> This query returns data using the format "YYYY/MM/DD; HH:MM:SS"
Example	<code>:CAL:RFPS:SCH:TIME:STAR "2009/8/20","12:00:00"</code>
Notes	<p>"date" is the date the task will run, in the form YYYY/MM/DD where:</p> <ul style="list-style-type: none"> – YYYY is the four-digit representation of year (for example, 2009) – MM is the two-digit representation of month (for example, 01 to 12) – DD is the two-digit representation of the day (for example, 01 to 28, 29, 30 or 31 depending on the month and year) <p>"time" is the time of day the task will run, in the form HH:MM:SS where:</p> <ul style="list-style-type: none"> – HH is the two-digit representation of the hour in 24-hour format – MM is the two-digit representation of minute – SS is the two-digit representation of seconds
Preset	Unaffected by Preset but set to Current date and 00:00:00 by Restore Defaults > "Alignments" on page 3473
State Saved	No

Hour

Lets you configure the hour for the scheduled task. The command to configure the date and time parameters of the scheduler is the same; but they each have their own front panel-control.

Notes	See "Date/Time" on page 3552
Preset	Unaffected by Preset but set to Current hour and 00 by Restore Defaults > "Alignments" on page 3473
State Saved	No

Minute

Lets you configure the minute for the scheduled task. The command to configure the date and time parameters of the scheduler is the same; but they each have their own front panel-control.

Notes	See "Date/Time" on page 3552
Preset	Unaffected by Preset but set to Current minute and 00 by Restore Defaults > "Alignments" on page 3473
State Saved	No

Recurrence

Lets you configure the scheduler to run the task recurrently on a scheduled date and time. You can schedule it to run daily, weekly, or alternate weeks.

Remote Command	<code>:CALibration:RFPSelector:SCHeuler:REcurrence DAY WEEK OFF</code>
Example	<code>:CAL:RFPS:SCH:REC DAY</code>
Preset	Unaffected by Preset but set to OFF by Restore Defaults > "Alignments" on page 3473
State Saved	No
Range	<code>DAY WEEK OFF</code>

Number of Weeks

Lets you set the number of weeks that the scheduler will wait to trigger a task.

Remote Command	<code>:CALibration:RFPSelector:SCHeuler:REcurrence:WEEK <integer></code> <code>:CALibration:RFPSelector:SCHeuler:REcurrence:WEEK?</code>
----------------	---

Example	:CAL:RFPS:SCH:REC:WEEK 2
Notes	New scheduled date to run the alignment task is updated when this parameter is changed
State Saved	No
Range	1-52
Min	1
Max	52

Day

Lets you set the Day of the Week the scheduler will run a scheduled task.

Remote Command	:CALibration:RFPSelector:SCHeduler:REcurrence:DAY SUN MON TUE WED THU FRI SAT :CALibration:RFPSelector:SCHeduler:REcurrence:DAY?
Example	:CAL:RFPS:SCH:REC:DAY SUN
State Saved	No
Range	Sunday Monday Tuesday Wednesday Thursday Friday Saturday

4.7 Licensing

Accesses capabilities for configuring the licenses in your instrument.

4.7.1 License Manager

Opens the License Explorer for Fixed and Transportable licenses.

NOTE

This feature is not available if Option SF1 is installed.

For help on licensing, select **Help** in the menu bar at the top of the License Explorer window.

There are also several remote commands available for licensing. See:

- "Install License (Remote Command Only)" on page 3563
- "Remove License (Remote Command Only)" on page 3563
- "List Licenses (Remote Query Only)" on page 3564
- "Validate License (Remote Query Only)" on page 3565
- "Host ID Query (Remote Query Only)" on page 3565
- "List Borrowed Licenses (Remote Query Only)" on page 3560
- "Return a Borrowed License (Remote Command Only)" on page 3561

Notes

No equivalent remote command for this control

4.7.2 System Software Version Date

The date of the newest features introduced in this release of the firmware. This is *not* necessarily the same as the build date of the firmware, because the version date only changes when new features are added. For example, if A.18.06 has only defect fixes and no new features compared to A.18.05, then both A.18.05 and A.18.06 would have the same software version date.

For any feature to be enabled, the SW Support Expiration Date of the enabling license must be greater than or equal to the software version date when that feature was first introduced. See the Keysight web site for features related to a specific software application and their required support date.

The SCPI response is 3 integer values: `<year>`, `<month>`, `<day>`.

Remote Command	:SYSTem:SOFTware:VERSion:DATE?
----------------	--------------------------------

Example	:SYST:SOFT:VERS:DATE?
---------	-----------------------

4.7.3 Software Support Expiration Date

This date is encoded in each software license's Version field in the **YYYY.MMDD** format. It specifies the end date of the support contract associated with this license. When a support contract is renewed, a new license is issued with an updated Version corresponding to the new contract's end date. The functionality available for a license is determined by the features available before the expiration date. For example, if feature X is introduced in a release with System Software Version Date of **2017.0831**, then a license with a Software Support Expiration Date of **2017.0831** or greater would enable feature X, but **2017.0830** or earlier would not enable feature X.

The SCPI response is 3 integer values: **<year>**, **<month>**, **<day>**.

Remote Command	:SYSTem:LKEY:SOFTware:SUPPort:EXPIration:DATE? <feature>
----------------	--

Example	:SYST:LKEY:SOFT:SUPP:EXP:DATE? "N9084EM0E-1FP"
---------	--

Dependencies	When <feature> is not a valid license, one of the following errors will be issued:
--------------	---

- -224, "IllegalParameterValue;License is not installed"
- -224, "IllegalParameterValue;Unknown license feature"
- -224, "IllegalParameterValue;Support contract not offered for this license"

4.7.4 Network Licenses

Network Licenses are available over the customer's network from a server the customer configures. The server has a count for each license and will only allow instruments to "check-out" a license up to that count. Once the count is reached for a specific license, further check-outs fail until one of the licenses is checked back in to the server. What this means is that it is possible for an instrument to have different features available to it based on what licenses are still available on the server when it tries to get licenses.

Setting up network licenses is done via the **Keysight Floating License Manager** (available on external Keysight web) and it has an Installation Guide that can be downloaded from that web page.

4.7.4.1 Application Licenses

Application Licenses (like N9077EM0E-1NP) are automatically checked out when entering the Mode that uses them, and they are automatically checked-in when leaving that Mode. Because the server may have already checked out the last license for the application to another instrument, there is now the possibility that a mode switch will fail because a required license could not be checked out from the server. If the server has a limited number of licenses compared to the number of users desiring to use that license, this may mean that switching from Mode A to Mode B then back to Mode A may fail when returning to Mode A because another instrument checked out the last available license while the user was in Mode B. Also, for Modes with multiple licenses for different features (like Multi-Standard Radio), the features available may also change when switching out of the Mode and back into it.

So, when using network licenses, it is necessary to check **:SYST:ERR?** after every Mode switch, to verify that it successfully switched. If the Mode's required licenses were not successfully checked out, the instrument posts the error:

-310,"System error; feature not licensed"

There is also a potential performance issue when using network licenses, because the instrument must communicate with the server on each license check-out and check-in. This operation is usually fast (a few milliseconds), but it depends on the network communication lag between the instrument and server. For remote servers on slow or congested networks, this could be significantly slower than that.

4.7.4.2 Instrument Software Options

Instrument software licenses are those that are reported via ***OPT?** the same as HW options. For example, N9040RT1B-1NP is an instrument software option, and is reported via ***OPT?** as **RT1**. Note that the license is composed of the model number (in this case **N9040B**) combined with the option code (**RT1**).

When instrument software options are available from a network server, the instrument automatically checks them out at start-up, and only checks them in when shutting down.

4.7.4.3 License Checked Out Query (Remote Query Only)

Shows whether the specified license is checked out from a server. Since network served licenses may not always be available when there are limited licenses available compared to the desired number of users, the features available on an instrument can vary. Use this query to see whether the feature is currently checked-out to the instrument. The return value is boolean (0 or 1), returning 1 if the feature

exists and is checked out from a server. Note that querying a license that is local to the instrument (-xFP or -xTP) also returns 0, even though the license exists and is valid, because it does not require a check-out. Also, querying a license that does not exist returns 0.

Remote Command	:SYSTem:LKEY:COUT? <feature>
Example	:SYST:LKEY:COUT? "N9080EM0E" 1
Notes	<"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one Return Value: 0 if not checked out, 1 if checked out

4.7.4.4 List Licenses Checked Out (Remote Query Only)

Lists the licenses checked out from a server. Since network served licenses may not always be available when there are limited licenses available compared to the desired number of users, the features available on an instrument can vary. Use this query to see which features are currently checked-out to the instrument.

Remote Command	:SYSTem:LKEY:COUT:LIST?
Example	:SYST:LKEY:COUT:LIST? #284 N9073EM0E,2018.0831 N9077EM0E,2018.0831 N9080EM0E,2018.0831 N9081EM0E,2018.0831

4.7.4.5 Borrowed Network Licenses


Network licenses can be borrowed from the network license server for a time. The maximum amount of time a license can be borrowed is specified in the license installed on the server and is set at the time the license is generated by Keysight. As part of the borrow operation, you specify how long to borrow the license. This borrow period is in hours and can be any time up to the maximum allowed by the license. Once borrowed, the license appears as a local license and can be used even when not connected to the network, and the instrument software treats them the same as other time-based licenses that are installed on the instrument. This means the licenses are validated when the instrument is started and then are used without the overhead of checking them out and back in when switching Modes. At the time of the borrow, a time is specified for how long the license will be borrowed. When that time expires, the license is automatically returned to the network license server

even if the instrument is not connected to the network. If you are done with the license before it automatically returns to the network server, the license can be explicitly returned earlier.

4.7.4.6 Borrow a License

Licenses are borrowed by using the Keysight License Manager 6 application. This can be launched from the **System Licensing** screen.

Graphic

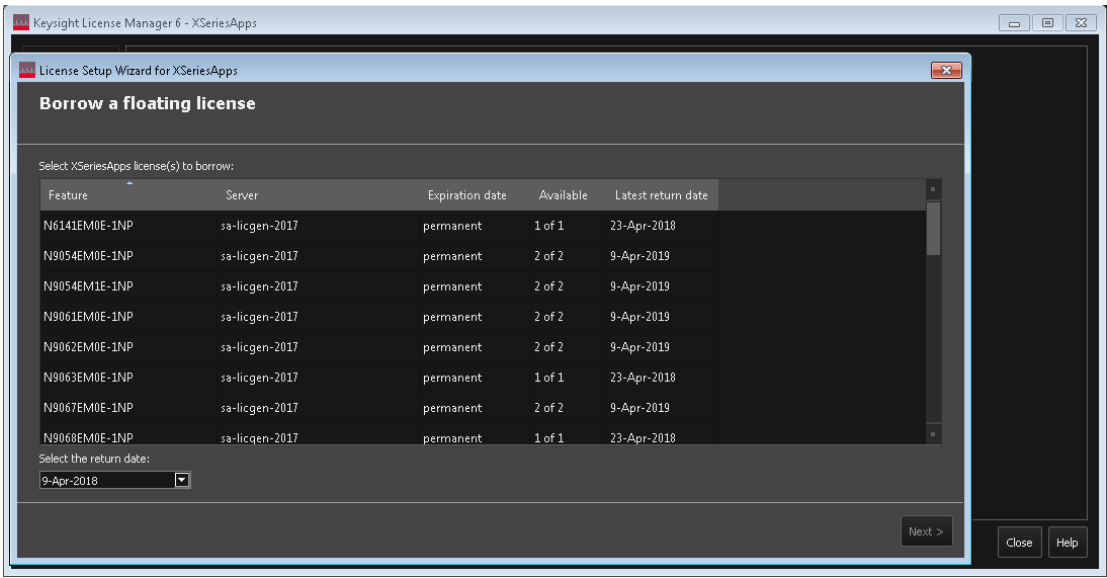

The corresponding remote command is:

Remote Command	<code>:SYSTem:LKEY:BORRow "<feature>[,<version>]",<return date></code> <code>:SYSTem:LKEY:BORRow? "<feature>[,<version>]"</code>
Example	<code>:SYST:LKEY:BORR "N9080EM0E", "20-Aug-2018"</code> <code>:SYST:LKEY:BORR? "N9080EM0E"</code> <code>: "20-Aug-2018"</code>
Notes	If <code><version></code> is not specified, the highest available version will be borrowed The <code><return date></code> is the day when the borrow will automatically be returned to the server
Dependencies	For the command, when <code><feature></code> is not a valid license, or when a license is not currently available for borrowing, one of the following errors is issued: <ul style="list-style-type: none">- -224, "IllegalParameterValue;License is not installed"- -224, "IllegalParameterValue;Unknown license feature"

- -224, "IllegalParameterValue;License not available for borrowing"

Additionally, the return date is evaluated. If it is not a valid date, the following error is issued:

- -224, "IllegalParameterValue;Invalid return date"
- -200, "Execution error; No Available Borrow Licenses For Feature: <feature>"

The return date may be clipped to the maximum borrow allowed by the license. When this happens, the following warning is issued:


- -221, "Return date clipped to maximum of <max date>"

For the query, the return is the borrow return date (as a string in **dd-mmm-yyyy** format) if the license is borrowed. In all other cases, (not borrowed, not installed, etc.) the return is an empty string

4.7.4.7 Listing Borrowed Licenses and Return a Borrowed License

The Keysight License Manager 6 can also be used to see the currently borrowed licenses or return a license before the automatic return time.

Graphic

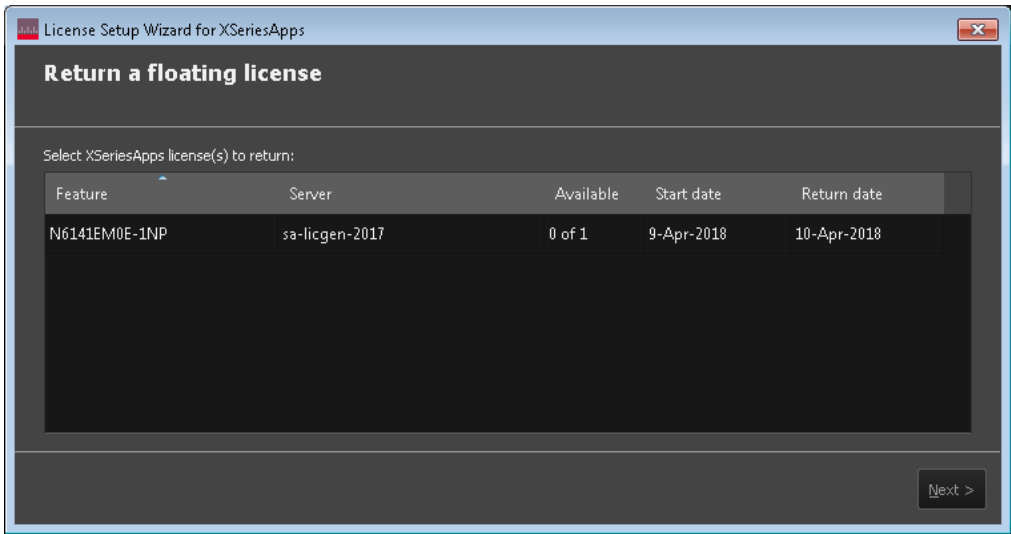

List Borrowed Licenses (Remote Query Only)

Remote Command :SYSTem:LKEY:BORRow:LIST?

Example :SYST:LKEY:BORR:LIST?
#266

N9073EM0E, 2018.0831, 20-Aug-2018

N9077EM0E, 2018.0831, 20-Aug-2018

Return a Borrowed License (Remote Command Only)

Remote Command	<code>:SYSTem:LKEY:BORRow:RETurn "<feature>"</code>
Example	<code>:SYST:LKEY:BORR:RET "N9080EM0E"</code>
Dependencies	<p>When <code><feature></code> is not a valid license or when a license is not borrowed, one of the following errors is issued:</p> <ul style="list-style-type: none"> - -224, "IllegalParameterValue;License is not installed" - -224, "IllegalParameterValue;Unknown license feature" - -224, "IllegalParameterValue;License not borrowed"

4.7.4.8 Enabling Network Checkouts While Borrowed

The default for borrowed license use is that you will be explicitly borrowing all desired network licenses, and that all other available network licenses should be ignored. This allows you to intentionally limit the functionality available to the instrument to what is explicitly borrowed.

For example, the RT1/RT2 options that enable the RTSA Mode are automatically checked out when the instrument is started, because the hardware must be configured for them at startup time. If you do not intend to use RTSA, then by borrowing only the licenses you want to use and disabling other network checkouts, the RT1/RT2 licenses will not be checked out at startup. This leave more RTSA licenses available for others to use. Note that the instrument must be restarted after the borrowing has been done to ensure the release of any network licenses already acquired.

If your intent in borrowing is to ensure access to a particular feature or application, but you still want to opportunistically use other features or applications, the default behavior can be changed to enable network license checkouts even when licenses have been borrowed.

Remote Command	<code>:SYSTem:LKEY:BORRow:NETWork:COUT:ENABle</code>
Example	<code>:SYST:LKEY:BORR:NETW:COUT:ENAB 0</code> <code>:SYST:LKEY:BORR:NETW:COUT:ENAB?</code>
Dependencies	Only visible when licensing is configured to use a network server. SCPI is always available
Preset	Unaffected by Preset but set to 0 by Restore Defaults > "Misc" on page 3473 or Restore Defaults > "All" on page 3474
State Saved	Power On Persistent (survives shutdown and restart)

4.7.5 USB Portable Licenses

The USB Portable license is implemented with a physical dongle that is a USB device, like a USB thumb drive. It has a Host ID fixed in the dongle HW. It does not contain any writable data and so is acceptable to high security A/D customers. Transporting licenses from one instrument to another just requires moving the dongle and license files to the desired instrument. The license files can be installed on many instruments, but they will only be valid the one instrument that has the dongle. The use of USB portable licenses requires that the Keysight Floating License Manager is installed on the instrument. The licenses can then be added to the instrument's server.

USB Portable licenses are checked out and in like Network licenses. Because the licenses are local, there will be no network latency involved in the check-out/check-in, but there can still be a slight performance degradation compared to Fixed and Transportable licenses. If the instrument allows multiple concurrent instances of the X-Series software (as is the case for modular products), there may also be availability issues if all licenses are already checked out to other X-Series instances. Plugging/un-plugging the dongle is equivalent to transporting a license to/from the instrument, however, the software must be restarted whenever the dongle is plugged in.

4.7.6 Configuring Network and USB Portable Licenses

The Keysight Floating License Manager must be used to configure the Network or USB Portable licenses before the licenses can be used. Currently, an instrument can only be configured for Network or USB Portable licenses or both.

- To set up USB Portable licenses, in the Keysight Floating License Manager select “Start a floating license server with a license file” and add files containing the USB Portable licenses desired
- To set up Network licenses, in the Keysight Floating License Manager select “Connect to a floating license server” and enter the network server's name preceded by the “@” character (example: “@myserver”)
- To set up both Network and USB Portable license, first configure the USB Portable license, then configure the Network licenses, but append “;@localhost” to the server name (example: “@myserver;@localhost”). Whenever the configuration is changed, the X-Series software must be restarted

4.7.7 Floating License Manager

Opens the License Explorer for Network and USB Portable licenses.

NOTE This feature is not available if Option SF1 is installed.

For help on licensing, select **Help** in the menu bar at the top of the License Explorer window.

4.7.8 Install License (Remote Command Only)

Used to add a license to the instrument.

An example of such a command would be as below. The parameter is a unique 120-character code for each license.

```
SYST:LKEY "N9073A-1FP", "027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
```

Another example using one of the optional clauses.

```
SYST:LKEY "N9063EM0E-1FP, 2019.0330", "02220210867E187713C9AFD4C90EA0DE2B674615DD0255798EE5B237A146A0D4E411E0ABFE04D3CAFDFA", "ISSUED=30-Mar-2018"
```

NOTE This command does not work for Transportable, Network or USB Portable licenses.

Remote Command	:SYSTem:LKEY <"OptionInfo">, <"LicenseInfo">,<"Optional1">,<"Optional2">,<"Optional3">,<"Optional4">,<"Optional5">
Notes	<p><"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, since the system knows which version is supported for each feature</p> <p><"LicenseInfo"> contains the signature, the expiration date, and serial number for transport if transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the serial number, the system regards it as non-transportable. As a result, this supports reverse compatibility</p> <p><"Optional#"> are optional parameters that may be needed to match the information in the original license</p>

4.7.9 Remove License (Remote Command Only)

Removes a particular license.

An example of such a command would be as below. The parameter is a unique 120-character code for each license.

```
SYST:LKEY:DEL "N9073A-
```

1FP”, ”027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91”

NOTE

This command does not work for Transportable, Network or USB Portable licenses.

Remote Command	:SYSTem:LKEY:DELeTe <"OptionInfo">,<"LicenseInfo">
Notes	<p><"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, if more than one version is installed</p> <p><"LicenseInfo"> contains the signature, the expiration date, and whether be transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the transportability, the system regards it as non-transportable. As a result, this supports reverse compatibility</p>

4.7.10 List Licenses (Remote Query Only)

Returns a list of installed licenses.

Remote Command	:SYSTem:LKEY:LIST?
Notes	<p>Return Value:</p> <p>An <arbitrary block data> of all the installed instrument licenses</p> <p>The format of each license is as follows</p> <p><Feature>,<Version>,<Signature>,<Expiration Date>,<Serial Number for Transport>,...</p> <p>Return Value Example:</p> <p>#3136</p> <p>N9073A-1FP,1.000,B043920A51CA</p> <p>N9060A-2FP,1.000,4D1D1164BE64</p> <p>N9020A-508,1.000,389BC042F920</p> <p>N9073A-1F1,1.000,5D71E9BA814C,13-aug-2005</p> <p><arbitrary block data> is:</p> <p>#NMMM<data></p> <p>Where:</p> <p>N is the number of digits that describes the number of MMM characters. For example, if the data was 55 bytes, N would be 2</p> <p>MMM would be the ASCII representation of the number of bytes. In the previous example, N would be 55</p> <p><data> ASCII contents of the data</p> <p>Additional fields may appear depending on the type of license (Fixed, Transportable, Network, USB Portable)</p>

4.7.11 Validate License (Remote Query Only)

Lets you query whether a particular license is currently valid.

Remote Command	:SYSTem:LKEY? <"OptionInfo">
Example	:SYST:LKEY? "N9073A-1FP"
Notes	<p><"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one</p> <p>Return Value:</p> <p><"LicenseInfo"> if the license is valid, null otherwise</p> <p><"LicenseInfo"> contains the signature, the expiration date, and serial number if transportable</p> <p>Return Value Example:</p> <p>"B043920A51CA"</p>

4.7.12 Host ID Query (Remote Query Only)

Returns the Host ID as a string.

Remote Command	:SYSTem:HID?
----------------	--------------

4.8 Security

Accesses capabilities for operating the instrument in a security-controlled environment.

The **Security** page of the **System** menu has two controls: **USB Read/Write** and **Restore Security Defaults**.

Dependencies	Not available in UXM
--------------	----------------------

4.8.1 USB Write Protect

The Windows operating system can be configured to disable write access to the USB ports for users who are in a secure environment where transferring data from the instrument is prohibited. The **USB Write Protect** control is a convenient way for you to disable write access to USB.

NOTE This control is only available to users with Administrator privileges.

Remote Command	<code>:SYSTem:SECurity:USB:WPRotect[:ENABle] ON OFF 0 1</code> <code>:SYSTem:SECurity:USB:WPRotect[:ENABle]?</code>
Example	Set USB ports to Read-only: <code>:SYST:SEC:USB:WPR ON</code> Set USB ports to Read-Write: <code>:SYST:SEC:USB:WPR OFF</code>
Notes	When the USB ports are in Read-only mode, then no data can be stored to USB, including the internal USB memory used for a back-up location for the calibration data
Dependencies	Grayed-out unless the current user has Administrator privileges
Preset	Unaffected by Preset or any "Restore Defaults" on page 3471. A Keysight Recovery sets the USB to write protect OFF
State Saved	No
Range	Read-Write Read only

4.8.2 Restore Security Defaults

Sets USB Read/Write to Enable.

NOTE This control is only available to users with Administrator privileges.

4.9 Diagnostics

Displays a slider that allows you to view Hardware Statistics.

Dependencies	Not available in UXM
--------------	----------------------

4.9.1 Show Hardware Statistics

Provides a display of various hardware statistics. The statistics include the following:

- Mechanical relay cycles (on models with mechanical relays)
- High and Low temperature extremes
- Elapsed time that the instrument has been powered-on (odometer)

Modular instruments display only time and temperature information.

Example	<code>:SYST:SHOW HWST</code>
Notes	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed

4.9.2 Pathwave Calibration Advisor...

This is a separate application that helps maintain your instrument at peak performance. You can set the cal interval, configure cal due reminders, check the cal status, view cal certificates and test reports, and contact Keysight for a cal service.

The embedded help documentation can be accessed in the instrument at: <C:\Program Files\Keysight\Calibration Advisor\PCA.chm>, or via the ? button at the top right of the **PathWave Calibration Advisor** window.

4.9.3 Query the Mechanical Relay Cycle Count (Remote Query Only)

Returns the count of mechanical relay cycles.

Remote Command	<code>:SYSTem:MRELay:COUNT?</code>
Example	<code>:SYST:MREL:COUN?</code>
Notes	Query Only The return value is a comma-separated list of the individual counts for each mechanical relay The position of the relays in the list is:

	<p>“<Cal Signal>,<AC/DC>,<2dB #1 Atten>,<2dB #2 Atten>,<6dB Atten>,<10dB Atten>,<20dB Atten>,<30dB Atten>,<Fixed Atten>,<Low Noise Path Switch>,<Presel Bypass>”</p> <p>Items in the list not pertaining to your hardware configuration return as -999 for those items</p>
Dependencies	Not supported by E6607C

4.9.4 Query the Operating Temperature Extremes (Remote Query Only)

Returns the low operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

Remote Command	:SYSTem:TEMPerature:LEXTreme?
Example	:SYST:TEMP:LEXT?
Notes	Value is in degrees Celsius at which the lowest operating temperature has been recorded since 1st power-up
State Saved	No
	Returns the high operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.
Remote Command	:SYSTem:TEMPerature:HEXTreme?
Example	:SYST:TEMP:HEXT?
Notes	Value is in degrees Celsius at which the highest operating temperature has been recorded since 1st power-up
State Saved	No

4.9.5 Query the Elapsed Time since 1st power on (Remote Query Only)

Returns the elapsed on-time in minutes since 1st power-on.

Remote Command	:SYSTem:PON:ETIME?
Example	:SYST:PON:ETIM?
Notes	Query Only

4.10 Service

Accesses capabilities performed in the factory or under instructions from repair procedures. This key is only visible when the logged-in user is “[advanceduser](#)” or “[saservice](#)”. The first access to the **Service** menu after invoking the instrument application will require an authentication Service Code.

Dependencies	Not available in UXM
--------------	----------------------

4.11 SCPI Recorder

Allows you to view active recording content, and edit the content. Right-click or touch and hold on any UI control to display a menu allowing you to record the SCPI associated with the control.


Selecting this tab displays the **Recorder** dialog on the right. The dialog displays the recorder table with the data in chronological order of recording. The Function Label column shows the feature name, for example, Center Frequency, and the SCPI column shows the full mnemonic corresponding to the feature.

4.11.1 Continuous SCPI Recording

Toggles the state of continuous recording.

When enabled (**ON**), *all* user interaction with settings that are Immediate Actions, and that have associated SCPI commands or queries, are added as recording entries in chronological order. Not every User Interface action has a corresponding SCPI command/query, for example, navigation actions between dialogs and menus in the User Interface do not have corresponding SCPI commands. All settings or a measurement that are accessible via menus have SCPI commands, so modifying those settings will create entries in the Recorder.

As a convenience, this feature can also be toggled (without visiting the SCPI Recording menu) by clicking the SCPI icon which has been added to the left of the “gear” icon (as illustrated below):

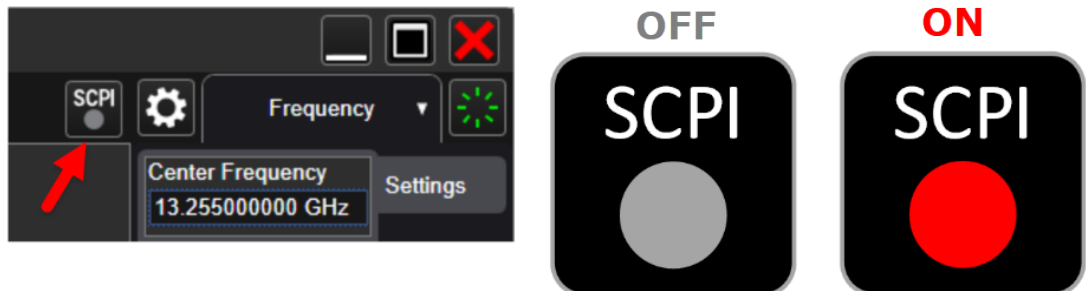

NOTE

When recording is turned on, some entries are automatically created and added to the recording. These are: `:INST:CONF:<mode>:<meas>` (see ["Mode" on page 132](#)) and `*OPC?` (see ["*OPC? - Operation Complete" on page 4132](#)). These commands set the current Mode and Measurement, perform a **Mode Preset**, then cause the instrument to wait for the completion of any previous commands. When **Continuous SCPI Recording** fills the recording container to the limit, a warning message is displayed to notify you that the recording container is full

and recording will be stopped, unless the recording limit is increased.

NOTE

To maintain the integrity of recording, stop recording *before* sending remote commands to the instrument. Changes made to the instrument via remote SCPI are *not* recorded.

4.11.2 Recording Limit

When "Continuous SCPI Recording" on page 3570 is enabled, every change you make is recorded into the recording system, which can lead to extremely large recordings.

This value limits how much content can be saved into the recording table. You may change this number to suit your needs, but the value cannot be less than 0 or greater than 500. When the recording length reaches the limit, a warning is displayed to indicate that the recording size has reached the limit and recording will be stopped.

The default limit is 250. If the limit is reduced after recording entries are added, the reduced count cannot be less than the current number of entries in the recording. If the newly-entered limit is smaller than the existing number of entries, then the actual new limit is set to the current number of entries. Increasing the limit will increase memory consumption.

4.11.3 Play All

Clicking this control causes each of the entries in the SCPI Recorder table to be executed.

If execution results in any errors, then a message box showing the SCPI command, and its corresponding error are displayed after play has completed.

4.11.4 Play Selected

You can select a row in the SCPI recording table, then click **Play Selected** to play that entry. **Play Selected** is disabled if the recording table is empty, or when no row is selected. You can then select another row and play the selection, but, if you want to play back in a particular order, you must execute the plays in the desired sequence.

After playing the selected entry, the selected row is moved down by one entry.

4.11.5 Copy

Copies the SCPI column data to the system clipboard, to make it available for Paste operations.

4.11.6 Insert *OPC? Below

Certain queries and commands must be sent during instrument programming, but there is no corresponding user-interface control for these commands. This control allows you to insert one such query: ***OPC?** below the selected row.

4.11.7 Move Up

Moves the selected / highlighted row up by 1 slot. Note that moving a mode or measurement switch entry in the table may impact context for subsequent entries in the table.

4.11.8 Move Down

Moves the selected / highlighted row down by 1 slot. Note that moving a mode or measurement switch entry in the table may impact context for subsequent entries in the table.

4.11.9 Delete Row

Deletes the selected entry from the recording table. Note that some entries may have subsequent entries related to the row that you delete, for example, ***OPC?**, which may be added automatically after a mode or measurement switch.

4.11.10 Delete All

Deletes all entries from the recording table. A warning message is displayed: "All recording data will be deleted".

To confirm that you want to delete the entire recording content, click **OK**, or click **Cancel** to avoid deleting it.

4.12 System Remote Commands (Remote Commands Only)

These commands have no front-panel key equivalent.

- "List installed Options (Remote Query Only)" on page 3573
- "Lock the Front-panel keys (Remote Command Only)" on page 3574
- "Lock Workstation (Remote Command Only)" on page 3574
- "List SCPI Commands (Remote Query Only)" on page 3576
- "Front Panel activity history (Remote Query only)" on page 3576
- "SCPI activity history (Remote Query only)" on page 3577
- "Instrument start time (Remote Query only)" on page 3577
- "SCPI Version Query (Remote Query Only)" on page 3578
- "Date (Remote Command Only)" on page 3578
- "Time (Remote Command Only)" on page 3578
- "Input Overload Enable (Remote Command Only)" on page 3579
- "Power Up (Remote Query Only)" on page 3579

4.12.1 List installed Options (Remote Query Only)

Lists the installed options that pertain to the instrument (signal analyzer).

Remote Command	:SYSTem:OPTions?
Example	:SYST:OPT?
Notes	The return string is a comma-separated list of the installed options. For example: "503,P03,PFR" :SYSTem:OPTions? and *OPT? are the same
State Saved	No

4.12.2 Lock the Front-panel keys (Remote Command Only)

Disables the instrument keyboard to prevent local input when the instrument is controlled remotely. Annunciation showing a “K” for **KLOCK** (keyboard lock) alerts the local user that the keyboard is locked. **KLOCK** is similar to the GPIB Local Lockout function; namely that no front-panel keys are active except for the **Power Standby** key. (The instrument is allowed to be turned-off if **KLOCK** is **ON**.) The **KLOCK** command is used in remote control situations where Local Lockout cannot be used.

Although primary intent of **KLOCK** is to lock-out the front panel, it will lock-out externally connected keyboards through USB. **KLOCK** has no effect on externally connected pointing devices (mice).


The front panel ‘**Local**’ key (**Cancel/Esc**) has no effect if **KLOCK** is **ON**.

See also "Local Button" on page 179.

Remote Command	:SYSTem:KLOCK OFF ON 0 1 :SYSTem:KLOCK?
Example	:SYST:KLOC ON
Notes	Keyboard lock remains in effect until turned-off, or until the instrument is power-cycled
Preset	Initialized to OFF at startup, unaffected by Preset
State Saved	No

4.12.3 Lock Workstation (Remote Command Only)

Performs the same functionality as the **Win+L** function or the “Lock” function on the **CTL-ALT-DEL** screen in Windows.

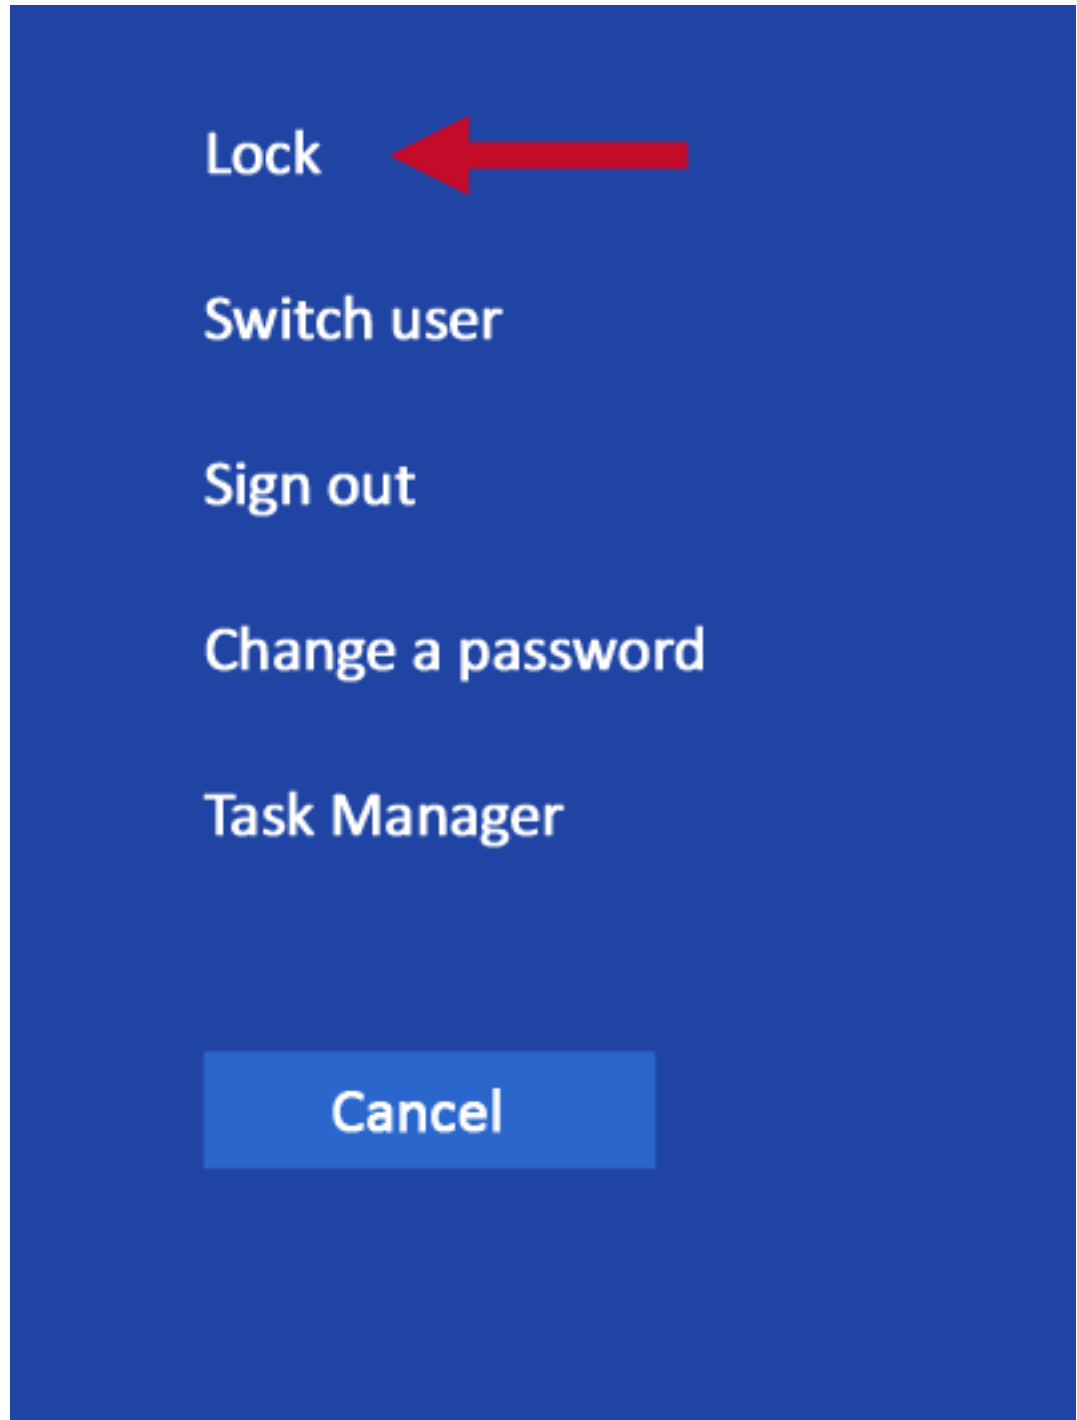

As soon as you do this, the computer is locked. The initial login screen appears; no one can access the computer at that point unless they have an account and know the account's password.

Failure to initiate adds an error to the Windows event log for SA;

4 System

4.12 System Remote Commands (Remote Commands Only)

"LockWorkStation - Failed to initiate function"

See also "Local Button" on page 179.

Remote Command	<code>:SYSTem:LWSTation</code>
Example	<code>:SYST:LWST</code>
Notes	The lock remains in effect until a user logs in
State Saved	No

4.12.4 List SCPI Commands (Remote Query Only)

Outputs a list of the valid SCPI commands for the currently selected Mode.

Remote Command	<code>:SYSTem:HELP:HEADers?</code>
Example	<code>:SYST:HELP:HEAD?</code>
Notes	The output is an IEEE Block format, with each command separated with the New-Line character (0x0A)

4.12.5 Front Panel activity history (Remote Query only)

Instrument front panel usage can be monitored using `:SYSTem:METRics:FPANel?`. The monitoring occurs for front panel hardkey or softkey operation (including mouse or touch operation on instruments with Multi-Touch User Interface). The information of the usage pertains to the activity since the instrument application was started; the information does not persist after the application is terminated, or the instrument has been rebooted.

To prevent the front panel from being placed into Remote the monitoring must occur via an I/O protocol such as LAN Socket, or the remote program performing the monitoring must explicitly place the instrument into Local after the query has been performed.

Remote Command	<code>:SYSTem:METRics:FPANel?</code>
Example	<code>:SYST:METR:FPAN?</code>
Notes	<p>The return value is a string with the format <code>"YYYY-MM-DD<space>HH:MM:SS"</code>, in instrument local time</p> <p>If no front panel activity has occurred since the instrument was booted (instrument application started), the return value will be the time the instrument application started. The instrument application start time can be obtained with the query <code>:SYSTem:METRics:STIME?</code></p>

4.12.6 SCPI activity history (Remote Query only)

Instrument remote operation usage via SCPI can be monitored using `:SYSTem:METRics:SCPI?`. The monitoring occurs for SCPI control from any I/O channel (GPIB, USB, or LAN). The information of the usage pertains to the activity since the instrument application was started; the information does not persist after the application is terminated, or the instrument has been rebooted.

Remote Command	<code>:SYSTem:METRics:SCPI?</code>
Example	<code>:SYST:METR:SCPI?</code>
Notes	<p>The return value is a string with the format “YYYY-MM-DD<space>HH:MM:SS”, in instrument local time</p> <p>The following commands are excluded from the history accounting:</p> <ul style="list-style-type: none"> – <code>*IDN?</code> – <code>*OPT?</code> – <code>:SYSTem:DATE?</code> – <code>:SYSTem:TIME?</code> – <code>:SYSTem:PON:TIME?</code> – Queries in the <code>:SYSTem:ERRor</code> subsystem – Queries in the <code>:SYSTem:LKEY</code> subsystem – Queries in the <code>:SYSTem:METRics</code> subsystem – Queries in the <code>:SYSTem:MODule</code> subsystem <p>If no SCPI activity has occurred since the instrument was booted (instrument application started), the return value will be the time the instrument application started. The instrument application start time can be obtained with <code>:SYSTem:METRics:STIME?</code></p>

4.12.7 Instrument start time (Remote Query only)

To determine if instrument activity has occurred, `:SYSTem:METRics:STIME?` can be used to determine the instrument application start time.

Remote Command	<code>:SYSTem:METRics:STIME?</code>
Example	<code>:SYST:METR:STIM?</code>
Notes	The return value is a string with the format “YYYY-MM-DD<space>HH:MM:SS”, in instrument local time

4.12.8 SCPI Version Query (Remote Query Only)

Returns the SCPI version number with which the instrument complies. The SCPI industry standard changes regularly. This command indicates the version used when the instrument SCPI commands were defined.

Remote Command	<code>:SYSTem:VERSion?</code>
Example	<code>:SYST:VERS?</code>

4.12.9 Date (Remote Command Only)

The recommended access to the Date, Time, and Time zone of the instrument is through the Windows native control (Control Panel, or accessing the Task Bar). You may also access this information remotely, as shown in here and in ["Time \(Remote Command Only\)" on page 3578](#).

Sets or queries the date in the instrument.

Remote Command	<code>:SYSTem:DATE "<year>,<month>,<day>"</code> <code>:SYSTem:DATE?</code>
Example	<code>:SYST:DATE "2006,05,26"</code>
Notes	<p><code><year></code> is the four-digit representation of year (for example, 2006)</p> <p><code><month></code> is the two-digit representation of year (01 to 12)</p> <p><code><day></code> is the two-digit representation of day (01 to 28, 29, 30, or 31, depending on the month and year)</p> <p>Unless the current account has Power User or Administrator privileges, sending this command generates an error, and no action is taken</p>

4.12.10 Time (Remote Command Only)

Sets or queries the time in the instrument.

Remote Command	<code>:SYSTem:TIME "<hour>,<minute>,<second>"</code> <code>:SYSTem:TIME?</code>
Example	<code>:SYST:TIME "13,05,26"</code>
Notes	<p><code><hour></code> is the two-digit representation of the hour in 24-hour format</p> <p><code><minute></code> is the two-digit representation of minute</p> <p><code><second></code> is the two-digit representation of second</p> <p>Unless the current account has Power User or Administrator privileges, sending this command generates an error, and no action is taken</p>

4.12.11 Input Overload Enable (Remote Command Only)

Input Overload errors are reported using the Input Overload status bit (bit 12 in the Measurement Integrity Status Register). Input Overloads (for example, ADC Overload errors) can come and go with great frequency, generating many error events (for example, for signals just on the verge of overload), and so are not put into the SCPI error queue by default. Normally the status bit is the only way for detecting these errors remotely.

Use this command to enable or disable Input Overload reporting to the SCPI queue. By default, reporting is disabled. Send **:SYSTem:ERRor:OVERload ON** to enable, or **:SYSTem:ERRor:OVERload OFF** to disable. In either case, Input Overloads *always* set the status bit.

NOTE

For versions of firmware before A.10.01, Input Overload was only a Warning and so was never available in the SCPI queue, although it did set the status bit. For A.10.01 and later, Input Overload is an error, which can be enabled to the SCPI queue using this command.

Remote Command	:SYSTem:ERRor:OVERload[:STATe] 0 1 OFF ON
Example	Enable overload errors: :SYST:ERR:OVER 1
Preset	Set to OFF by Restore Misc Defaults (no Overload errors go to SCPI)
State Saved	Saved in instrument state

4.12.12 Power Up (Remote Query Only)

Returns a list of errors encountered during the application boot-up, such as: mismatch FW-FPGA, missing Calibration data, missing hardware, and construction errors.

Remote Command	:SYSTem:ERRor:PUP?
Notes	<p>If no error occurs, the return value is: "No Power Up Errors"</p> <p>Return Value: <List of error strings> in <IEEE488 Block> format</p> <p>Return Value Example:</p> <p>"Power up errors, see details in Windows Event Log"</p> <p>"Unmatched FPGA Version(s), See details in Windows Event Log"</p>

5 Preset

The Preset functions can be accessed in two ways:

- By pressing the **Mode Preset** or **User Preset** front panel keys:



- From the menu **"Preset Dropdown"** on page 3583, which appears when you press the green **Preset** icon (in the upper right corner of the display):



Types of Preset

The table below shows all possible presets, their corresponding SCPI commands and front-panel access methods.

Instrument settings are tiered in scope from those local to the current measurement to those global to all measurements and Modes. There are presets tailored to each scope. The table identifies the scope of each preset type.

NOTE

To get a Mode back to a fully predefined state, you should execute **"Restore Mode Defaults"** on page 3586 and **"Input/Output Preset"** on page 3587, but since **Input/Output Preset** is a global function, it affects *all* Modes.


Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
"Auto Couple" on page 3289	:COUPle ALL	Local to the current measurement, only affects Auto/Man variables	Meas Setup menu
Meas Preset	:CONFigure:<meas>	Local to the current measurement Does not preset the RF Source	Meas Setup menu
"Mode Preset" on page 3584	:SYSTem:PRESet	Local to the current Mode, global to all measurements in the Mode, affects most but not all parameters in the Mode Does not affect Input/Output or System variables Presets the RF Source	Mode Preset key "Preset Dropdown" on page 3583
"Restore Mode"	:INSTrument:DEFault	Local to the current Mode, global to	"Preset"

Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
Defaults" on page 3586		all measurements in the Mode, affects all parameters in the Mode, but does not affect Input/Output or System variables Does not preset the RF Source.	Dropdown" on page 3583
"Restore Defaults All Modes" on page 3593	:SYSTem:DEFAult MODes	Affects all parameters in <i>all</i> Modes, but does not affect Input/Output or System variables Presets the RF Source	"Preset Dropdown" on page 3583
"Restore Screen Defaults" on page 3596	:SYSTem:DEFAult SCReen	Deletes all Screens but one, restores that screen to its default mode and performs Mode Preset for that mode Does not affect Input/Output or System variables Presets the RF Source	"Preset Dropdown" on page 3583
"User Preset" on page 3589	:SYSTem:PRESet:USER	Local to the current Mode, global to all measurements in the Mode, affects all parameters in the Mode, as well as Input/Output variables Does not affect System variables	User Preset key "Preset Dropdown" on page 3583
"User Preset All Modes" on page 3592	:SYSTem:PRESet:USER:ALL	Same as User Preset , but affects all Modes in the current Screen	"Preset Dropdown" on page 3583
"User Preset All Screens" on page 3594		Affects the entire Screen Configuration; global to all Modes and Screens	"Preset Dropdown" on page 3583
*RST	*RST	Same as Mode Preset . Additionally always sets Single/Cont to Single	Not available from front panel
"Input/Output Preset" on page 3587	:SYSTem:DEFAult INPut	Affects all Input/Output variables Does not preset the RF Source	Input/Output menu "Preset Dropdown" on page 3583 System > Restore Defaults
"Full Mode Preset" on page 3588	:SYSTem:PRESet:FULL	Same as Mode Preset + Restore Mode Defaults + Input/Output Preset . Essentially a factory preset of the current Mode Presets the RF Source	"Preset Dropdown" on page 3583
"Restore User	:SYSTem:DEFAult UInterface	Affects all variables in the "User	System > Restore

Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
Interface Defaults" on page 3456		Interface" group Does not preset the RF Source	Defaults User Interface tabs
"Restore Power On Defaults" on page 3465	:SYSTem:DEFault PON	Affects all variables in the "Power On" group Presets the RF Source	System > Restore Defaults Power On tabs
"Restore Alignment Defaults" on page 3546	:SYSTem:DEFault ALIGn	Affects all variables in the "Alignments" group Presets the RF Source	System > Restore Defaults Alignments tabs
"Restore Defaults" on page 3471 (Misc)	:SYSTem:DEFault MISC	Affects various variables not reset by other commands Presets the RF Source	System > Restore Defaults
"Restore Defaults" on page 3471 (All)	:SYSTem:DEFault [ALL] :SYSTem:PRESet:PERsistent	Affects all variables Presets the RF Source	System > Restore Defaults

5.1 Preset Dropdown

The Preset dropdown contains the following controls. In the image below, click a control for details of that control.

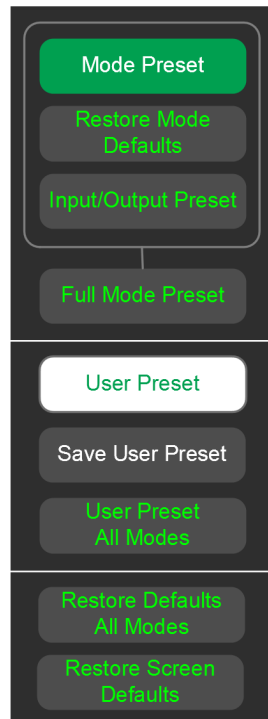

5.2 Mode Preset

Returns the current Mode to a known state. **Mode Preset** only presets the current Screen; it does not affect any other Screens.

Mode Preset also presets the RF Source. In this sense, it is equivalent to pressing **Source Preset** on the **Input/Output, RF Source** menu panel.

Mode Preset can be executed from the **"Preset Dropdown"** on page 3583, or by pressing the **Mode Preset** front panel key:



It does the following for the currently active Mode:

- Aborts the currently running measurement
- Switches to the default measurement and displays the default menu for that measurement
- Sets most parameters for the Mode and all its Measurements to a preset state
- Clears the input and output buffers
- Sets Status Byte to 0

Mode Preset does *not* cause a Mode switch, nor affect any **Input/Output** or **System** settings (those set in the **System Settings** dialog).

Furthermore, some Mode settings are unaffected by **Mode Preset** (for example, Noise Floor Extensions, Limit Line data, reference marker numbers, etc.) These are only reset by **"Restore Mode Defaults"** on page 3586. In each parameter's definition table there is a note that indicates whether it is reset by **Mode Preset** or by **Restore Mode Defaults**.

See **"Preset"** on page 3580 for more details.

Remote Command	:SYSTem:PRESet
Example	:SYST:PRES
Notes	<p>*RST is preferred over :SYST:PRES for remote operation. *RST performs Mode Preset, as done by the :SYST:PRES command, and sets the measurement mode to Single measurement rather than Continuous, for optimal remote control throughput</p> <p>See also "*RST - Reset" on page 4133</p>
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

5 Preset

5.2 Mode Preset

Backwards Compatibility Notes

In X-Series, the legacy “Factory Preset” has been replaced by **Mode Preset**, which only presets the currently active Mode, not the entire instrument. In X-Series, you preset the entire instrument by using **System, Restore System Defaults All**, which behaves essentially the same way as restore System Defaults did in ESA and PSA

There is also no “Preset Type” as there was in PSA. The green **Mode Preset** front-panel key does a Mode Preset, and the **User Preset** front-panel key does a User Preset. The old **PRESet:TYPE** command is ignored (without generating an error), and **SYST:PRES** without a parameter does **Mode Preset**

The settings and correction data under the **Input/Output** front-panel key (examples: Input Z Corr, Ext Amp Gain, etc.) are no longer part of any Mode, so they are not preset by **Mode Preset**. They are preset by **Restore Input/Output Defaults, Restore System Defaults All**. Note that because “**User Preset**” on [page 3589](#) performs Recall State, and all these settings are saved in State, they *are* recalled when using **User Preset**

5.3 Restore Mode Defaults

Most settings within a Mode are affected by "Mode Preset" on page 3584, but some Mode settings are unaffected (for example, Noise Floor Extensions, Limit Line data, reference marker numbers, etc.) **Restore Mode Defaults** resets all these additional settings, as well as all the **Mode Preset** settings, *except* the RF Source.

In each parameter's definition table, there is a note that indicates whether that parameter is reset by **Mode Preset** or by **Restore Mode Defaults**.
Note that a Recall State affects all a Mode's settings, both the **Mode Preset** settings and the ones additionally affected by **Restore Mode Defaults**.

Restore Mode Defaults can be executed from the "Preset Dropdown" on page 3583.
When **Restore Mode Defaults** is selected, a message appears saying

*This will reset all of the current Mode's variables to their default state.
This action cannot be undone. Do you want to proceed?*
The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the reset operation.

Remote Command	:INSTRument:DEFault
Example	:INST:DEF
Notes	Clears all pending OPC bits. The Status Byte is set to 0
Couplings	Causes the currently running measurement to be aborted, and causes the default measurement to be active. Sets the Mode to a consistent state, with all default couplings set

5.4 Input/Output Preset

Resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by "Mode Preset" on page 3584, because they are generally associated with connections to the instrument, which generally should remain unaltered.

All the variables set under the **Input/Output** front panel key are reset by **Input/Output Preset**, including Amplitude Corrections and Data (described in the **Corrections** section), with the exception of **RF Source** settings, which are unaffected.

By using **Input/Output Preset** and "Restore Mode Defaults" on page 3586, a full preset of the current Mode can be performed, with the caveat that, since **Input/Output Preset** is a global function, it affects *all* Modes.

Input/Output Preset can be executed from the **Input/Output** menu, from the "Preset Dropdown" on page 3583, or from the **Restore Defaults** menu under the **System** key.

When **Input/Output Preset** is selected, a message appears saying:

"This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings.

It will not affect Alignment data or settings.

It will not affect RF Source settings.

This action cannot be undone. Do you want to proceed?"

The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the operation.

Example

`:SYST:DEF INP`

Presets all **Input/Output** variables to their factory default values

5.5 Full Mode Preset

Same as performing "Mode Preset" on page 3584, "Restore Mode Defaults" on page 3586, and "Input/Output Preset" on page 3587. Essentially a factory preset of the current Mode.

When **Full Mode Preset** is selected, a message appears saying:

This will reset all of the current Mode's variables and all of the Input/Output variables to their default state, including Input and Output selection and settings, Amplitude Correction, Frequency Reference and RF Source settings.
It will not affect Alignment data or settings.
This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the operation.

Remote Command	:SYSTem:PRESet:FULL
Example	:SYST:PRES:FULL
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

5.6 User Preset

Recalls a state previously saved using ["Save User Preset" on page 3591](#). You can save a **User Preset** state for each Mode, allowing you to define your own favorite state for each Mode and recall it at the touch of a single button.

User Preset can be executed by pressing the **User Preset** front panel key, or from the ["Preset Dropdown" on page 3583](#).



Because **User Preset** is actually a Recall State, rather than a predefined Preset, it works a little differently from ["Mode Preset" on page 3584](#), in that it affects all the variables that normally only reset on ["Restore Mode Defaults" on page 3586](#), and it affects the **Input/Output** variables, because both of these are included in State files.

A default **User Preset** file is provided for each Mode, which simply matches the current Mode's state after **Restore Mode Defaults** and ["Input/Output Preset" on page 3587](#) has been performed.

NOTE

In products that run multiple instances of the X-Series Application, all instances use the same location to save User Preset state. So, saving User Preset of one instance will overwrite the Save User Preset of another instance.

Remote Command	:SYSTem:PRESet:USER
Example	Save the User Preset: :SYST:PRES:USER:SAVE Recall the User Preset: :SYST:PRES:USER
Notes	:SYST:PRES:USER:SAVE is used to save the current state as the user preset state If loading a User Preset file from a different instrument, some settings may be limited and/or coupled differently, since the capabilities of the mode may have changed from when the User Preset file was saved
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0
Backwards Compatibility Notes	In X-Series A-models, the User Preset key opened a menu that let you select from User Preset, Save User Preset, or User Preset All Modes. In B-models, the User Preset key immediately performs a User Preset , and the menu items are found under the Preset dropdown User Preset actually loads a state, and in legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly, it was possible to do a User Preset without affecting the trace data, limit lines or correction data

In X-Series, “state” always includes all of this data; so whenever state is loaded, or **User Preset** is executed, all the traces, limit lines and corrections are affected

In ESA and PSA, **User Preset** affected the entire instrument’s state. In X-Series, **User Preset** only recalls the state for the active Mode. There is a User Preset file for each Mode. **User Preset** can never cause a Mode switch as it could in legacy analyzers. If you want to recall all Modes to their user preset file state, perform User Preset *after* switching into each Mode

User Preset recalls Mode state, which can now include data, such as traces, whereas in ESA and PSA, User Preset did not affect data

5.7 Save User Preset

Saves the state of the currently active Mode in a unique location, for recall by the key "User Preset" on page 3589. Each Mode has one such location, so, for each Mode, one User Preset can be defined.

Save User Preset can be executed from the "Preset Dropdown" on page 3583.

All the Mode variables are saved, including those reset by "Mode Preset" on page 3584, those only reset by "Restore Mode Defaults" on page 3586, and all Input/Output variables, so when you subsequently press User Preset, the instrument returns to the exact same setup that existed when you pressed Save User Preset. Thus, User Preset has wider scope than Mode Preset.

Remote Command	:SYSTem:PRESet:USER:SAVE
Example	:SYST:PRES:USER:SAVE
Notes	:SYST:PRES:SAVE creates the same file as if you requested *SAV or :MMEM: STOR:STAT, except that Save User Preset does not allow you to specify the file name or location

5.8 User Preset All Modes

Recalls all the User Preset files for each Mode, switches to the Power-on Mode, and activates the saved measurement from the Power-on Mode **User Preset** file.

User Preset All Modes can be executed from the "Preset Dropdown" on page 3583

See also "User Preset" on page 3589.

Remote Command	<code>:SYSTem:PRESet:USER:ALL</code>
Example	<code>:SYST:PRES:USER:SAVE</code> <code>:SYST:PRES:USER:ALL</code>
Notes	<code>:SYST:PRES:USER:SAVE</code> is used to save the current state as the user preset state
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

5.9 Restore Defaults All Modes

Resets all Modes in the current Screen back to their default states, just as **Restore Mode Defaults** does, switches the current Screen to the Power-on Mode, and causes the default measurement for the **Power On Mode** to be active in the current Screen. Only the current Screen is affected.

Restore Defaults All Modes can be executed from the "Preset Dropdown" on page 3583.

When **Restore Defaults All Modes** is selected, a message appears saying:

This will reset all of the variables for all of the Modes in the current Screen to their default state. This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons.

Example	:SYST:DEF MOD
Couplings	Causes the currently running measurement to be aborted, a switch to the Power-on Mode, and activates the default measurement for the Power-on Mode

5.10 User Preset All Screens

Recalls a screen configuration previously saved using **"Save User Preset All Screens" on page 3595**. The complete configuration of all Screens is loaded, including the state of each Screen.

Because **User Preset All Screens** performs a Recall State as part of its function, it affects all variables that are normally only reset by **"Restore Mode Defaults" on page 3586**, and affects **Input/Output** variables, because both are included in State files.

Note that recalling a screen configuration in this manner wipes out your current screen configuration, and all states of all Screens.

Notes	<p>"Save User Preset All Screens" on page 3595 is used to save the current screen configuration as the "user preset all screens" configuration</p> <p>If loading a User Preset All Screens file from a different instrument, some settings may be limited and/or coupled differently, since the capabilities of the Mode may have changed from when the User Preset All Screens file was saved</p>
Status Bits/OPC dependencies	<p>Clears all pending OPC bits</p> <p>The Status Byte is set to 0</p>

5.11 Save User Preset All Screens

Saves the current Screen Configuration in a unique location, for recall by "User Preset All Screens" on page 3594.

Save User Preset All Screens can be executed from the "Preset Dropdown" on page 3583.

Besides the screen configuration, *all* Mode variables of all Screens are saved, including those reset by "Mode Preset" on page 3584, and those only reset by "Restore Mode Defaults" on page 3586, as well as all **Input/Output** variables, so when you subsequently press **User Preset All Screens**, the instrument returns to the exact Screen setup that existed when you pressed **Save User Preset All Screens**.

Notes	Creates the same file as if you requested Screen Config + State save, except that Save User Preset All Screens does not allow you to specify the file name or location
-------	--

5.12 Restore Screen Defaults

Resets the Screen configuration to the factory default; deleting all screens, all screen names, all screen states, and setting "Multiscreen" on page 219 to Off. A single screen will remain, set to the Power-on Mode, in a preset state with the default screen name.

Restore Screen Defaults can be executed from the "Preset Dropdown" on page 3583.

When **Restore Screen Defaults** is selected, a message appears saying:

This function will delete all defined screens and their settings. This action cannot be undone.

Do you want to proceed?

The message provides **OK** and **Cancel** buttons.

Example

:SYST:DEF SCReen

5.13 Preset Type (Remote Command Only)

Remote Command	:SYSTem:PRESet:TYPE FACTory MODE USER :SYSTem:PRESet:TYPE?
Example	:SYST:PRES:TYPE FACT
Notes	Supported for backwards compatibility only. It is a no-op, which does not change the behavior of any preset operation
Preset	Unaffected by Preset, but set to MODE by Restore System Defaults->All
State Saved	No

5.14 Restart Instrument (Shutdown)

Shuts down the instrument, then reboots it.

Remote Command	:SYSTem:PUP
Example	:SYST:PUP

5.15 Restart Application (Application Shutdown)

Restarts the instrument application without rebooting the instrument. Before you send this command, make sure you have saved any trace or measurement data that you want to preserve.

Remote Command	:SYSTem:PUP:PROcess
Example	:SYST:PUP:PROC After sending this command, you must wait for the instrument software to restart
Notes	You cannot use *WAI or *OPC? to synchronize operation after a restart. This command stops and restarts the instrument application, so the SCPI operation is terminated and restarted A remote program must wait a fixed time before resuming sending commands to the instrument. The appropriate wait time depends on which applications are pre-loaded

5.16 System Log Off (Remote Command Only)

Provides a means to terminate all open Windows applications, and log off the current user. This is equivalent to performing the Windows command:

```
shutdown -l -f -t0
```

Remote Command	:SYSTem:LOFF
Example	:SYST:LOFF
Notes	Initiates an immediate log off of the current user. Exits the instrument application, so any unsaved measurement results will be lost. You cannot use *WAI or *OPC? to synchronize operation. In addition to the instrument application, all other Windows programs will be terminated, without the opportunity to save any work in progress. To perform a subsequent login, and regain instrument operation, human intervention will be required

5.17 Power Standby (Instrument Shutdown)

Pressing the power switch powers down the instrument. You are warned that shutting down will cause the application to lose unsaved data, and the instrument lets you respond to this warning before shutting down.

The command below has the same effect, except that you can specify Normal mode (**NORMa1**) or Forced mode(**FORCe**):

- In **NORMa1** mode, the system waits until you respond to the warning prompt
- In **FORCe** mode, the system shuts down after 20 seconds, and all data will be lost

If the instrument is not properly shut down prior to removal of line power, the system will validate the Journaling File System and the Power-On Last State (if the instrument is in Power-On Last State) during the following power-on. If a problem is detected, a message appears indicating that the system ‘recovered’ from an inappropriate shutdown. This is only an issue if **Power-On Type** is Last State. If the Last State is not valid, the instrument will power up in the last active Mode, but will perform "**Mode Preset**" on page 3584.

Remote Command	:SYSTem:PDOWn [NORMa1 FORCe]
Example	:SYST:PDOW Executes a normal shutdown
Notes	If no parameter is sent, NORMa1 is assumed

6 Input/Output

Accesses menus that let you control the Input/Output parameters of the instrument. In general, these are functions associated with external connections to the instrument, either to the inputs or the outputs.

Input/output connections tend to be based on situation-specific hardware set up. For that reason, input/output settings do *not*, in general, change when you perform a Mode Preset. You can revert to the default values in one of three ways:

- Use **Restore Input/Output Defaults**, in the **Input/Output** menu
- Use **System->Restore System Defaults->Input/Output Settings**
- Use **System -> Restore System Defaults->All**

The settings survive a Preset and a Power cycle.

A few Input/Output settings *do* respond to Mode Preset. For example, if the Calibrator is on, **Preset** turns it off, and if DC coupling is in effect, **Preset** switches it to AC. These exceptions are noted in the SCPI tables for the excepted functions.

Input/Output features are common across multiple Modes and Measurements. In general, they do not change when you change Mode or Measurement, although some controls appear only in certain measurements.

6.1 RF Source

Lets you control and configure the internal RF Source. This tab only appears in models that support a built-in independent RF Source, which include E7760B, and modular products such as EXM and VXT.

External Source Control and built-in Tracking Sources are controlled using the **Source** tab in **Meas Setup**.

Dependencies	Only appears in models that support a built-in independent RF Source, such as E7760B, EXM and VXT
--------------	---

6.1.1 RF Output

Sets the source RF power output state.

Remote Command	<code>:OUTPut[:EXternal][:STATe] ON OFF 1 0</code> <code>:OUTPut[:EXternal][:STATe]?</code>
Example	<code>:OUTP OFF</code> <code>:OUTP?</code>
Notes	This setting is for the independent mode and has no effect on the "List Sequencer" on page 3613 . If Sequencer is ON , the List Sequencer controls the source output, and this key is grayed-out When Sequencer is OFF , makes source leave List Sequencer and this setting is blanked out, taking effect immediately
Dependencies	For E7760B, the RF Output cannot be set to ON if the RF Output port is set to NONE . If you attempt to set RF Output to ON in this situation, the error message -221, "Settings conflict; Source Output is not available while Output Port is None" is displayed <code>:OUTPut:EXternal[:STATe]</code> is supported only when Option ESC is installed. Otherwise, only <code>:OUTPut[:STATe]</code> is supported
Preset	OFF
Range	ON OFF

6.1.2 RF Output Port

Specifies the RF Output Port used by the internal source.

Switching from the RF Output port to one of the RFIO ports changes the transmitter performance of the instrument.

The **NONE** selection is available to allow setting a half-duplex port to an Input, if it was previously assigned as an Output. Set the Output to **NONE** first, then any port can be assigned as an Input.

When using VXT M9410A/11A/15A/16A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu appear as:

Head h RFHD p

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half-duplex ports, the choices for these ports will appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

When using the E7770A Common Interface Unit, outputs may come from the DUT IF OUT ports on the rear of the CIU or the half-duplex ports on the front of the CIU labeled DUT IF In/Out. You would select GUI parameter IF Out n or SCPI parameter IFOutn for the DUT IF OUT ports or GUI parameter IFHD n or SCPI parameter IFHDn for the DUT IF In/Out ports. See ["RF Input Port" on page 3717](#) "Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU" for more details.

Remote Command	<p><code>[:SENSe]:FEED:RF:PORT:OUTPut RFOut RFIO1 RFIO2 RFIO3 RFIO4 RFHD RFFD A1 A2 A3 B1 B2 B3 IFIO1 IFIO2 GEN TR RRHhRFHDp IFOutn IFHDn NONE</code></p> <p>For details of each option, see "Port Options" on page 3605</p> <p><code>[:SENSe]:FEED:RF:PORT:OUTPut?</code></p>
Example	<p>Set output to RF Output: <code>:FEED:RF:PORT:OUTP RF0</code></p> <p>Set output to Radio Head 1, RF Tx/Rx Port 2: <code>:FEED:RF:PORT:OUTP RRH1RFHD2</code></p>
Dependencies	<p>Only appears in models that support multiple output ports. If the SCPI command is sent with unsupported parameters in any other model, an error is generated, -221, "Settings conflict; option not installed"</p> <p>RFHD and RFFD are only available on VXT. Option HDX is required to enable RFHD port. Option FDX is required to enable RFFD port</p> <p>For E7760B: Ports IFIO1 and IFIO2 are available if Option RF2 is installed. Ports A1, A2, A3, B1, B2, B3 are available if Option RF3 is installed. Attempting to select a port for which the option is not present generates the error, -241, "Hardware missing; Output not available"</p> <p>A port cannot be selected as an Output while it is occupied as an Input. If the SCPI command is sent while the port is occupied, an error is generated, -221, "Settings conflict; Output Port is not available while occupied by Input"</p> <p>Additionally, the mmWave ports are divided into two banks: the A Bank and the B Bank. A port cannot be selected as an Output if any port on the <i>same</i> bank is occupied as an Input. If the SCPI command is sent for this situation, an error is generated, -221 "Settings conflict; Output Port is not available while</p>

6 Input/Output

6.1 RF Source

	<p>port bank is occupied by Input”</p> <p>Lastly, if RF3 is present, and RF4 is absent, a mmWave port cannot be selected as an Output if the Input Port is occupied by wwWave Transceiver with a different frequency range. If the SCPI command is sent for this situation an error is generated, -221 “Settings conflict; Output Port is not available while occupied by Input of incompatible frequency”</p> <p>Ports GEN and TR are only available in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port</p> <p>When any output is selected in a measurement that does not support it, the "No result; Meas invalid with this output" error condition occurs, and the measurement returns invalid data when queried</p>
Preset	Unaffected by Mode Preset , but set to default by Source Preset or Restore System Defaults -> All
State Saved	Saved in State
Backwards Compatibility SCPI	<p>:FEED:RF:PORT:OUTPut IFIO1</p> <p>IFIO1 is treated as IF01 and sets the IF output to be the port labeled DUT IF Out on the CIU rear panel. This is for compatibility with earlier implementations on EXM and VXT when using the E7770A Common Interface Unit</p>

Port Options

Value	Notes
RF Output RFOut	<p>On EXM with hardware M9430A, if RF Output is selected as RF Output Port, use the settings in the Half Duplex Config menu to determine which port (RFIO3 or RFIO4) will be used</p> <p>On EXM with hardware M9431A, this setting is not supported. If the SCPI command is sent with this setting, an error is generated, -221, “Settings conflict; option not installed”</p>
RFHD	<p>RFHD port is exclusive for RF Input and RF Output. If HD Port is chosen as RF Input port, pressing this key, or sending SCPI to set it, generates error message: “-221, Settings conflict; RFHD is being used as RF Input Port”</p> <p>Option HDX is required to enable RFHD port</p>
RFFD	Option FDX is required to enable RFFD port
GEN	Selects the Gen port on M8920A/20B
T/R TR	Selects the T/R port on M8920A/20B
RRHhRFHDp	<p>Used to select a port on a Radio Head (such as the Keysight M1740A mmWave Transceiver) as an output</p> <p>RRHhRFHDp corresponds to Head h, port RF Tx/Rx p. For example, RRH1RFHD2 = the port labeled RF Tx/Rx 2 on Head 1</p>

6.1.3 Half Duplex Output Port

Specifies whether **RFIO3** or **RFIO4** is the Half Duplex Output port.

Remote Command	[:SENSe]:HDUPlex:PORT:OUTPut RFIO3 RFIO4
----------------	---

Example	<code>:HDUPlex:PORT:OUTPut RFI03</code> <code>:HDUPlex:PORT:OUTPut?</code>
Dependencies	Only appears in EXM If RFI03 is selected as “Half Duplex Input Port”, then “Half Duplex Output Port” will be set to RFI04 automatically If RFI04 is selected as “Half Duplex Input Port”, then “Half Duplex Output Port” will be set to RFI03 automatically
Preset	RFI04
State Saved	Saved in State

6.1.4 RF Power

Lets you control the amplitude of the Source output. Same as "RF Power" on page 3606 in **Amplitude Setup**.

Example	<code>:SOUR:POW -100 dBm</code>
---------	---------------------------------

6.1.5 T/R Port High Power Attenuator

Controls whether additional attenuation is added at the T/R Port. The T/R port has two output paths, one that provides a 16 dB attenuator, another that bypasses this attenuator. When this control is **ON**, the path includes the 16 dB attenuator, so the maximum output level for this path is 0 dBm. When this control is **OFF**, the 16 dB attenuator is bypassed, so the maximum output level for this path is +5 dBm.

Example	<code>:FEED:RF:PORT:TR:HPOW:ATT ON</code>
---------	---

6.1.6 Amplitude Setup

Lets you access the **Amplitude Setup** panel.

Notes	This menu under this control is for independent mode, and has no effect on "List Sequencer" on page 3613. If "Sequencer" on page 3614 is ON , the List Sequencer controls the source output, and this control is grayed-out on the front panel, to indicate out-of-scope. When you set "Sequencer" on page 3614 to OFF , makes source leave List Sequencer and this control is blanked out
-------	--

6.1.6.1 RF Power

Lets you adjust the power level of the source using the numeric keypad, step keys, or RPG. Pressing any digit, 0 through 9 on the numeric keypad displays the unit terminator.

6 Input/Output

6.1 RF Source

Please refer to the **"RF Power Range" on page 3607** table below for the valid ranges.

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude] <ampl></code> <code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]?</code>
Example	<code>:SOUR:POW -100 dBm</code>
Notes	<p>Amplitude corrections can be specified for use with the source. In the event of amplitude corrections being applied, the valid ranges for the RF power do not change dependent on the current amplitude correction setting. If the combination of RF power + amplitude correction is higher or lower than the source output range, the Source Unleveled bit is set, and the "Source Unleveled" indicator will appear on status panel to indicate that the source cannot maintain the output power that has been requested</p> <p>When signal generator is unable to maintain the requested output level, the "Source Unleveled" indicator will appear on status panel. When the source output setting is restored to the normal range, the "Source Unleveled" is removed from status panel</p> <p>Internal source has list sequence mode, which comprises of several steps which contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and user can use this command to change the list sequence last step's output power</p> <p>For EXT, The multiport adapter RFIO TX ports and GPS ports cannot ensure power accuracy when power setting is lower than -130dBm, this power setting value is defined by the sum of RF Power setting and related amplitude correction value. But user settable value could be lower than this limit. When application detected there exists power setting lower than -130dBm on MPA RFIO TX ports, then popup warning message . When application detected there exists power setting lower than -130dBm on MPA GPS ports, then popup warning message . This is only warning message, and check is performed when RF is ON</p>
Dependencies	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values
Couplings	For if AWGN State is ON and ARB State is ON , this setting is adjusted to the value to maintain the AWGN power relationship defined by Power Control Mode and other noise settings
Preset	-100 dBm
Min	The range of values depends on the current frequency and selected RF output port. See "RF Power Range" on page 3607 below for the valid ranges
Max	The range of values depends on the current frequency and selected RF output port. Refer to "RF Power Range" on page 3607 below for the valid ranges

RF Power Range

RF Output Port	Frequency Range	Min Output Power	Max Output Power
High Power RF Out	10 MHz ≤ f ≤ 6 GHz	-150 dBm	20 dBm
RFIO 1 & RFIO 2	10 MHz ≤ f ≤ 6 GHz	-150 dBm	0 dBm

Note: This is the UI power range, which is larger than the actual specification.

VXT model M9420A

RF Output Port	Frequency Range	Min Output Power	Max Output Power without Option "1EA"	Max Output Power with Option "1EA"
RF Output	60 MHz \leq f \leq 6 GHz	-150 dBm	10 dBm	25 dBm
RFHD	60 MHz \leq f \leq 6 GHz	-150 dBm	10 dBm	15 dBm
RFFD	60 MHz \leq f \leq 6 GHz	-150 dBm	0 dBm	0 dBm

Note 1: This is the UI power range, which is larger than the actual specification.

Note 2: Max output power with Option 1EA can be set to 25 dBm, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when output power set higher than 20 dBm.

VXT models M9410A/11A

Ports	Option LFE	Frequency Range	Min Output Power	Max Output Power without option "1EA"	Max Output Power with "1EA"
RF Output	With Option LFE	1 MHz \leq f \leq 60 MHz	-150 dBm	5 dBm	5 dBm
		60 MHz \leq f \leq 380MHz	-150 dBm	5 dBm	25 dBm
	Without Option LFE	380 MHz \leq f \leq 6 GHz	-150 dBm	5 dBm	25 dBm
RFHD		1 MHz \leq f \leq 6 GHz	-150 dBm	5 dBm	5 dBm

Note 1: Min Output Power is the UI power range, which is smaller than the actual specification.

Note 2: Max output power with Option 1EA can be set to 25 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 20 dBm.

Note 3: Option LFE provides Low Frequency Extension, which covers frequency from 1 MHz to 380 MHz.

VXT models M9415A/16A

RF Output Port	Frequency Range	Min Output Power	Max Output Power without Option "1EA"	Max Output Power with Option "1EA"
RF Output	$380 \text{ MHz} \leq f \leq 12.3 \text{ GHz}$	-150 dBm	5 dBm	25 dBm
RFHD	$380 \text{ MHz} \leq f \leq 12.3 \text{ GHz}$	-150 dBm	5 dBm	18 dBm

Note 1: For RF output port, the Max output power with Option 1EA can be set to 25 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 20 dBm.

Note 2: For RFHD port, the Max output power with Option 1EA can be set to 18 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 15 dBm.

M9410E/11E/15E/16E

Ports	Option LFE	Frequency Range	Min Output Power	Max Output Power
RF Output	With Option LFE	$1 \text{ MHz} \leq f \leq 380 \text{ MHz}$	-150 dBm	13 dBm
		$380 \text{ MHz} \leq f \leq 25.9 \text{ GHz}$	-150 dBm	25 dBm
	Without Option LFE	$380 \text{ MHz} \leq f \leq 25.9 \text{ GHz}$	-150 dBm	25 dBm
RFHD		$1 \text{ MHz} \leq f \leq 25.9 \text{ GHz}$	-150 dBm	5 dBm

VXT Models with Remote Radio Heads/CIU

RRH	Port	Frequency Range	Min Output Power	Max Output Power
M1742A	Head h RFHD p	$10 \text{ GHz} \leq f \leq 32 \text{ GHz}$	-150 dBm	10 dBm

M8920A/20B

RF Output Port	Frequency Range	Min Output Power	Max Output Power
Gen	100 kHz ≤ f ≤ 6 GHz	–150 dBm	without option 1EA: 3 dBm with option 1EA: 15 dBm
T/R	100 kHz ≤ f ≤ 6 GHz	–150 dBm	T/R port high power attenuator On: –15 dBm T/R port high power attenuator Off: 3 dBm

Note: This is the UI power range, which is larger than the actual specification.

6.1.6.2 Set Reference Power

Turns the power reference state to **ON**, sets the reference power value to the current RF output power, maintains this power at the RF output, and sets the displayed power to 0.00 dB. All subsequent RF power values entered under **Source**, **Amplitude**, **RF Power** are interpreted as being relative to this reference power.

When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under **Source**, **Amplitude**, **RF Power** as follows:

Output power = reference power – entered power

Where:

- reference power equals the original RF Power entered under **Source>Amplitude>RF Power** and set as the reference power
- entered power equals a new value entered under **Source>Amplitude>Amptd Offset**

In addition, the displayed power value is the same as a new value entered under **Source**, **Amplitude**, **RF Power**.

NOTE

If Power Ref is **ON** with a reference value set, entering a value under **Source**, **Amplitude**, **RF Power** and pressing **Set Reference Power** adds that value to the existing Power Ref value.

If you wish to change the reference power value to a new value entered under **Source**, **Amplitude**, **RF Power**, first set Power Ref to **OFF**, then press **Set Reference Power**.

Dependencies Unavailable, and grayed-out, when "List Sequencer" on page 3613 is **ON**

6.1.6.3 Power Ref

Lets you toggle the state of the power reference. When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under **Source>Amplitude>RF Power** as follows:

Output power = reference power + entered power

Where:

- reference power equals the original RF Power entered under **Source>Amplitude>RF Power** and set as the reference power
- entered power equals a new value entered under **Source>Amplitude>Amptd Offset**

For more information on Reference Frequency, see ["Set Reference Power" on page 3610](#).

Remote Command	<code>:SOURce:POWer:REFeRence <ampl></code> <code>:SOURce:POWer:REFeRence?</code>
Example	<code>:SOUR:POW:REF 0.00 dBm</code>
Dependencies	Unavailable and grayed-out when "List Sequencer" on page 3613 is ON
Couplings	Coupled to "Set Reference Power" on page 3610 , such that pressing Set Reference Power updates the reference power with the current output power
Preset	0.00 dBm
Min	-125.00 dBm
Max	10.00 dBm
Auto Function	
Remote Command	<code>:SOURce:POWer:REFeRence:STATe OFF ON 0 1</code> <code>:SOURce:POWer:REFeRence:STATe?</code>
Example	<code>:SOUR:POW:REF:STATe ON</code>
Preset	OFF

6.1.6.4 Power Unit

Modifies the units for RF Power and Power Ref. The change is immediate and does not force a restart.

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]:UNIT DBM W V DBUV</code> <code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]:UNIT?</code>
Example	Set the RF Power units to volts:

	<code>:SOUR:POW:UNIT V</code>
Couplings	RF Power and Power Ref units are modified by Power Unit
Preset	dBm
State Saved	Saved in Instrument State

6.1.6.5 Amptd Offset

Lets you specify the RF output power offset value.

When the amplitude offset is set to zero (0) and you set a new offset value (positive or negative), the displayed amplitude value changes as follows, and the RF output power does not change:

Displayed value = output power + offset value

Where:

- output power equals the original RF Power entered under **Source, Amplitude, RF Power**
- offset value equals the value entered under **Source, Amplitude, Amptd Offset**

When the amplitude offset is set to a value other than zero (0) and you enter a new RF power value under **Source, Amplitude, RF Power**, the displayed power will be the same as the value entered and the RF output power will be equal to the value entered minus the offset value as follows:

Output power = entered power – offset power

Displayed Power = output power + offset power

Displayed power = entered power

Where:

- entered power equals the amplitude entered under **Source, Amplitude, RF Power**
- offset power equals the value previously entered and set under **Source, Amplitude, Amptd Offset**

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMediate]:OFFSet <rel_ampl></code> <code>:SOURce:POWer[:LEVel][:IMMediate]:OFFSet?</code>
Example	<code>:SOUR:POW:OFFS 0.00 dB</code>
Notes	The amplitude Offset unit follows the units set in Power Unit
Dependencies	Unavailable, and grayed-out, when List Sequencer is ON
Preset	0.00 dB

6 Input/Output

6.1 RF Source

Min	-200.00 dB
Max	200.00 dB

6.1.6.6 Amplitude Increment

Changes the step size for the RF Power function. Once an increment size has been selected and the RF Amplitude function is active, the step keys (and the [UP | DOWN](#) parameters for RF Power from remote commands) change the RF Power by the set value. This feature exists in EXG and MXG.

Remote Command	<code>:SOURce:POWer:STEP[:INCRement] <ampl></code> <code>:SOURce:POWer:STEP[:INCRement]?</code>
Example	<code>:SOUR:POW:STEP 1</code>
Notes	The Amplitude Increment unit follows the units set in Power Unit
Couplings	Coupled to the Step size of the RF Power function
Preset	1 dB
Min	0.1 dB
Max	10 dB

6.1.7 Frequency

Lets you control the frequency of the Source. Same as ["Frequency" on page 3638](#) under ["Frequency Setup" on page 3638](#).

Example	<code>:SOUR:FREQ 1.00 GHz</code>
---------	----------------------------------

6.1.8 List Sequencer

Accesses sub-menus for configuring the **List Sequencer**.

List sequences allow you to enter frequencies and amplitudes at unequal intervals in nonlinear ascending, descending or random order. Each step within the list can also include its own waveform file for playback, step duration, trigger event and trigger output.

The complexities involved in configuring the **List Sequencer** do not lend themselves to manual configuration; hence the manual configuration for this feature is limited. For easier configuration of the List Sequencer, it is recommended that you use either SCPI, or load a tab-delimited file containing the setup parameters in a tabular form. The details of the SCPI for configuring the List Sequencer can be found in ["Step Configuration \(Remote Command Only\)" on page 3629](#).

Once the **List Sequencer** has been configured using the front panel, SCPI, or by loading a tab-delimited file, the sequence must be initiated using the front panel **Initiate Sequence** key, or the corresponding SCPI command.

Dependencies	Not available in E7760B
--------------	-------------------------

6.1.8.1 Sequencer

Sets the state of "List Sequencer" on page 3613

- When **List Sequencer** is **ON**, the source outputs the sequence defined by the sequencer
- When **List Sequencer** is **OFF**, the source outputs a single waveform segment or sequence (independent mode) at a single frequency and amplitude

Remote Command	<code>:SOURce:LIST[:STATe] ON OFF 1 0</code> <code>:SOURce:LIST[:STATe]?</code>
Example	<code>:SOUR:LIST OFF</code>
Notes	When the sequencer is ON , the List Sequencer controls the output of the source
Dependencies	Not available in E7760B
Couplings	When in Sequence Analyzer Mode, and the List Sequencer state is OFF , Include Source is forced to NO , and the Include Source key is grayed-out When in Sequence Analyzer Mode, and the List Sequencer state is ON , Include Source is available to set, and an ARB memory related operation such as load or delete will be rejected
Preset	OFF
Range	ON OFF

6.1.8.2 Initiate Sequence

Arms the sequence for single execution. Once the sequence is armed, the source begins the sequence as soon as the trigger is received. If trigger is set to **Free Run**, the sequence starts immediately.

Remote Command	<code>:SOURce:LIST:TRIGger[:IMMediate]</code>
Example	<code>:SOUR:LIST:TRIG</code>
Notes	When in Sequence Analyzer Mode, and Include Source is ON , the Initiate List Sequencer operation is rejected, and the key is grayed-out if the file needed by the sequencer is not already in ARB memory, the sequence cannot be initiated, and an error is generated There is a blocking SCPI query that can be used to check whether source list sequence was initiated successfully (see "Remote Software Trigger (Remote command Only)" on page 3638)
Dependencies	In Sequence Analyzer Mode, if Meas Setup , Include Source is set to YES , Source , List Sequencer , Initiate Sequence is disabled Not available in E7760B

6.1.8.3 Repetition

Accesses a sub-menu to select the repetition type for the List Sequencer globally. It cannot be changed between different sequence steps.

In **Single**, the Source list plays one time after initiation. In **Continuous**, the Source list plays continuously after initiation.

This setting is available on EXM.

Remote Command	<code>:SOURce:LIST:REPetition:TYPE SINGle CONTInuous</code>
Example	<code>:SOUR:LIST:REP:TYPE SING</code> <code>:SOUR:LIST:REP:TYPE?</code>
Dependencies	Available on EXM Not available in E7760B
Preset	<code>SINGle</code>
Range	<code>SINGle CONTInuous</code>

6.1.8.4 Trig Out Type

Accesses a sub-menu to select the output trigger type for the List Sequencer globally. It cannot be changed between different sequence steps. It sets the output trigger type for the whole source sequence.

Remote Command	<code>:SOURce:LIST:TRIGger:OUTPut:TYPE STEP MARKer</code> <code>:SOURce:LIST:TRIGger:OUTPut:TYPE?</code>
Notes	<code>STEP</code> = Start of Step <code>MARKer</code> = Data Marker
Dependencies	Available on EXM Not available in E7760B
Preset	<code>STEP</code>
Backwards Compatibility SCPI	<code>:SOURce:LIST:TRIGgerout:TYPe BEGInningofstep DATamarker</code>

6.1.8.5 Select Data Marker

When "Trig Out Type" on page 3615 is set to Data **MARKer**, specifies which marker to route.

Remote Command	<code>:SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer M1 ... M4</code> <code>:SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer?</code>
----------------	---

Backwards Compatibility
SCPI

:SOURce:LIST:TRIGgerout:TYPe:Marker

6.1.8.6 Manual Trigger Now

Provides a software trigger event to the List Sequencer. During execution of a sequence, if the sequencer is halted on any step that has been configured with a “Manual” step trigger, then this keypress causes the sequencer to continue and execute the step.

Notes	No remote command, front panel only
-------	-------------------------------------

6.1.8.7 List Sequencer Setup

Accesses the List Sequencer setup menus.

Number of Steps

Lets you specify the number of steps within the list sequence.

Remote Command	:SOURce:LIST:NUMBer:STEPs <integer> :SOURce:LIST:NUMBer:STEPs?
Example	:SOUR:LIST:NUMB:STEP 1
Notes	Increasing the number of steps creates additional steps at the end of the list, with all the settings within the steps set to their default values Decreasing the number of steps removes steps from the end of the list. The settings within the removed steps are not reset. This means that increasing the number of steps again would allow you to retrieve these steps
Dependencies	The Step Count parameter is increased or decreased when you insert or delete a point from within the GUI interface to the sequencer Not available in E7760B
Preset	1
Min	1
Max	1000

Go To Step

Lets you select the step number you wish to view or edit.

Preset	1
--------	---

Min	1
Max	Step Count

Insert Step Before

Inserts a new step, with default values, before the currently selected step. Inserting a step automatically increases the Step Count parameter by 1. If a sequence has already reached the upper limit of 1000 steps, then this operation is rejected, and error -221, "Setting Conflict; Cannot insert more steps, maximum number of steps reached" is displayed.

Notes	If the list already contains the maximum limit (1000 steps), pressing this control has no effect
-------	--

Delete Step

Deletes the current step. Deleting a step automatically decreases the Step Count parameter by 1. If the sequence only has one step left, then this operation is rejected, and error -221, "Setting conflict; Cannot delete current step, minimum number of steps reached" is displayed

Notes	If the list already contains the minimum limit of 1 step, pressing this control has no effect
-------	---

Clear List

Clears the list. Clearing the list sets the number of steps to the default value (1) and sets the parameters for the only step to their default values.

Step Trigger

Lets you select the trigger input for the current step.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:INPut:TRIGger IMMEDIATE INTERNAL EXTERNAL2 KEY BUS EXTERNAL4</code> For details of options, see " More Information " on page 3618 <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:INPut:TRIGger?</code>
Example	<code>:SOUR:LIST:STEP2:SET:INP:TRIG BUS</code> <code>:SOUR:LIST:STEP2:SET:INP:TRIG?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	<code>IMMEDIATE</code>
Range	<code>IMMEDIATE INTERNAL EXTERNAL2 KEY BUS EXTERNAL4</code>

More Information

Parameter	SCPI	Notes
Free Run	IMM	Sets the trigger input for the current step to Free Run
Internal	INT	Sets the trigger input for the current step to Internal
Manual (Trigger Key)	KEY	Sets the trigger input for the current step to Manual (Trigger Key). Any step in the sequence set to Manual will cause the sequence execution to stop until the manual trigger key is pressed. Sending the Bus Trigger SCPI command will have no effect. At any point in the sequence where the List Sequencer is paused waiting for a software trigger, a pop-up dialog is displayed until the trigger event occurs
Bus	BUS	Sets the trigger input for the current step to Bus. Any step in the sequence set to Bus will cause the sequence execution to stop until the Bus Trigger command is sent. Pressing the manual trigger key has no effect. At any point in the sequence where the List Sequencer is paused waiting for a software trigger, a pop-up dialog is displayed until the trigger event occurs
External 2	EXT2	Sets the trigger input for the current step to External 2 Note: When on EXM, trigger 2 is a bi-directional trigger port. So, when trigger 2 has been configured as OUTPUT type, choosing External 2 as the input trigger for the current step will generate error

Transition Time

Lets you specify the transition time for the current step.

The following table lists recommended values for appropriate settling times to allow for changes within the source.

Value Changed	Recommended Transition Time
Frequency	500 μ s
Amplitude	100 μ s to within 0.1 dB 20 μ s to within 1.0 dB

If the Transition Time value is shorter than the time necessary for the hardware to settle and a List Sequence is initiated, a **warning** is generated. If the Transition Time value is longer than the Step Duration, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length. If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Remote Command	:SOURce:LIST:STEP[1] 2 ... 1000:SETup:TRANsition:TIME <time> :SOURce:LIST:STEP[1] 2 ... 1000:SETup:TRANsition:TIME?
Example	:SOUR:LIST:STEP2:SET:TRAN:TIME 1ms

6 Input/Output

6.1 RF Source

	:SOUR:LIST:STEP2:SET:TRAN:TIME?
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	1.0 ms
Min	0.0 ms
Max	4.0 ks

Band

Lets you select the radio band for use in the current step.

Remote Command	:SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND <band> where <band> is one of: NONE PGSM EGSM RGSM DCS1800 PCS1900 GSM450 GSM480 GSM700 GSM850 TGSM810 USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV BANDXIX BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND9 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND26 BAND27 BAND28 BAND29 BAND30 BAND31 BAND65 BAND66 BAND67 BAND68 BAND71 BAND252 BAND255 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BAND44 BAND45 BAND46 BANDA BANDB BANDC BANDD BANDE BANDF N1 N2 N3 N5 N7 N8 N12 N20 N25 N28 N34 N38 N39 N40 N41 N50 N51 N66 N70 N71 N74 N75 N76 N77 N78 N79 N80 N81 N82 N83 N84 N86 N257 N258 N260 N261 :SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND?
Example	:SOUR:LIST:STEP2:SET:RAD:BAND PGSM :SOUR:LIST:STEP2:SET:RAD:BAND?
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B

Here are the Radio Standards for each Band, and a SCPI example for each (Step 2 is assumed):

Band	Standard	SCPI Example
None	None	:SOUR:LIST:STEP2:SET:RAD:BAND NONE
P-GSM	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND PGSM
E-GSM	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND EGSM
R-GSM	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND RGSM
DCS 1800	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND DCS1800

Band	Standard	SCPI Example
PCS 1900	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND PCS1900
GSM 450	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM450
GSM 480	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM480
GSM 700	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM700
GSM 850	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM850
T-GSM 810	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND T-GSM810
US Cell	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND USCELL
US PCS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PCS
Japan Cell	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND JAPAN
Korean PCS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND KOREAN
NMT 450	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND NMT
IMT 2000	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND IMT2K
Upper 700	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND UPPER
Secondary 800	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND SECOND
400 Euro PAMR	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PAMR400
800 PAMR	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PAMR800
2.5 GHz IMT EXT	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND IMTEXT
US PCS 1.9 GHz	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PCS1DOT9G
AWS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND AWS
US 2.5 GHz	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND US2DOT5G
700 Public Safety	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PUBLIC
C2K Lower 700	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND LOWER
Band I	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDI
Band II	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDII
Band III	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIII
Band IV	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIV
Band V	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDV
Band VI	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVI
Band VII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVII
Band VIII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVIII
Band IX	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIX
Band X	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDX
Band XI	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXI
Band XII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXII
Band XIII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIII
Band XIV	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIV

6 Input/Output

6.1 RF Source

Band	Standard	SCPI Example
Band XIX	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIX
Band 1	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND1
Band 2	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND2
Band 3	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND3
Band 4	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND4
Band 5	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND5
Band 6	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND6
Band 7	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND7
Band 8	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND8
Band 9	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND9
Band 10	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND10
Band 11	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND11
Band 12	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND12
Band 13	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND13
Band 14	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND14
Band 17	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND17
Band 18	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND18
Band 19	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND19
Band 20	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND20
Band 21	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND21
Band 24	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND24
Band 25	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND25
Band 26	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND26
Band 27	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND27
Band 28	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND28
Band 29	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND29
Band 30	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND30
Band 31	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND31
Band 65	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND65
Band 66	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND66
Band 67	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND67
Band 68	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND68
Band 71	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND71
Band 252	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND252
Band 255	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND255
Band 33	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND33

Band	Standard	SCPI Example
Band 34	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND34
Band 35	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND35
Band 36	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND36
Band 37	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND37
Band 38	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND38
Band 39	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND39
Band 40	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND40
Band 41	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND41
Band 42	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND42
Band 43	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND43
Band 44	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND44
Band 45	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND45
Band 46	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND46
Band A	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDA
Band B	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDB
Band C	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDC
Band D	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDD
Band E	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDE
Band F	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDF
N 1	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N1
N 2	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N2
N 3	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N3
N 5	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N5
N 7	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N7
N 8	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N8
N 12	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N12
N 20	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N20
N 25	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N25
N 28	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N28
N 34	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N34
N 38	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N38
N 39	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N39
N 40	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N40
N 41	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N41
N 50	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N50
N 51	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N51

6 Input/Output

6.1 RF Source

Band	Standard	SCPI Example
N 66	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N66
N 70	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N70
N 71	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N71
N 74	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N74
N 75	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N75
N 76	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N76
N 77	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N77
N 78	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N78
N 79	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N79
N 80	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N80
N 81	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N81
N 82	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N82
N 83	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N83
N 84	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N84
N 86	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N86
N 257	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N257
N 258	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N258
N 260	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N260
N 261	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N261

Device

Lets you specify the radio band link direction for the steps within the list sequence. The link is used in conjunction with the channel band and channel number to determine the output frequency.

Setting	Option	Description
Uplink	UP	The source calculates the uplink frequency according to an uplink formula together with selected channel band and channel number
Downlink	DOWN	The source calculates the downlink frequency according to a downlink formula together with selected channel band and channel number

Remote Command	:SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND:LINK DOWN UP :SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND:LINK?
Example	:SOUR:LIST:STEP2:SET:RAD:BAND:LINK UP :SOUR:LIST:STEP2:SET:RAD:BAND:LINK?
Notes	SCPI is supported after A.09.40

Dependencies	Not available in E7760B
Preset	DOWN
Range	DOWN UP

Freq/Chan

Lets you select the frequency or channel value for the current step. If the Band selection for the current row is **NONE**, you enter a frequency. Otherwise, enter a channel, which causes the frequency to be automatically selected, based on the Band selection.

Entering a Frequency

If the Band selection for the current row is **NONE**, enter a Frequency. This field in the table allows you to select the frequency value for the current step.

Remote Command	:SOURce:LIST:STEP[1] 2 ... 1000:SETup:CNFRrequency <double> :SOURce:LIST:STEP[1] 2 ... 1000:SETup:CNFRrequency?	
Example	:SOUR:LIST:STEP2:SET:CNFR 1GHz :SOUR:LIST:STEP2:SET:CNFR?	
Notes	SCPI is supported after A.09.40 Used to setup channel number or frequency setting, according to the current Radio Band setting. If Radio Band is NONE , then the value is frequency. If Radio Band is not NONE , then the value is channel number	
Dependencies	Not available in E7760B	
Couplings	The frequency value is coupled to the channel band and number for the step, such that updates to the radio band and channel number will update the frequency value to the corresponding absolute frequency. The reverse is also true, changing the frequency value causes the value of the channel number to be updated	
Preset	1.00 GHz	
Min	10.00 MHz	
Max	Hardware Dependent:	
	Option 503	3.6 GHz
	Option 504	3.9 GHz
	Option 506	6.00 GHz
	Option F06	6.08 GHz
	Option F06 & EP6	6.60 GHz

Entering a Channel

If the Band selection for the current row is not **NONE**, enter a Channel Number. This field in the table allows you to select the channel value for the current step. The frequency is selected automatically, based on the Band.

Example	<code>:SOUR:LIST:STEP2:SET:CNFR 124</code> <code>:SOUR:LIST:STEP2:SET:CNFR?</code>
Notes	SCPI is supported after A.09.40 Used to setup channel number or frequency setting, according to current Radio Band setting. If Radio Band is NONE , then the value is a frequency. If Radio Band is not NONE , then the value is a channel number
Dependencies	Not available in E7760B
Couplings	The channel number is coupled to the step frequency value. When the step frequency value is changed, the channel number increases or decreases to match the new step frequency. If the step frequency is not at an exact match for a channel number, the nearest channel number is displayed, along with a greater-than or less-than sign, to indicate the frequency is above or below the channel number
Preset	1
Min/Max	0/10838 (See "Channel" on page 3641 for valid ranges)

Power

Lets you specify the power value for the current step.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:AMPLitude <double></code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:AMPLitude?</code>
Example	<code>:SOUR:LIST:STEP2:SET:AMPL -50dBm</code> <code>:SOUR:LIST:STEP2:SET:AMPL?</code>
Dependencies	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values Not available in E7760B
Preset	-100 dBm
Min/Max	The range of values depends on the current frequency and selected RF output port See "RF Power" on page 3606 and the RF Power Range table for valid ranges

Waveform

Lets you select the waveform to be played back during the current step. Options are: CW, a Waveform file, Continue the previous step's waveform, or Off.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:WAVEform <string></code>
----------------	--

	<p>where <string> is one of:</p> <p>"CW", "waveform name", "Cont", "Off"</p> <p>For full details of options, see "More Information" on page 3626</p> <p>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:WAVeform?</p>
Example	<p>:SOUR:LIST:STEP2:SET:WAV "CW"</p> <p>:SOUR:LIST:STEP2:SET:WAV?</p>
Notes	SCPI is supported after A.09.40
Dependencies	<p>Not available in E7760B</p> <p>For VXT models M9410A/11A/16A, if the Waveform is not Continue Previous, there is always a time gap between the current step and the previous step</p>
Preset	CW
Range	"CW", "waveform name", "Cont", "Off"

More Information

Parameter	SCPI	Notes
CW	"CW"	Sets the current step to output a CW tone
Selected Waveform	"waveform name"	<p>Inserts a waveform from the Select Waveform dialog as the waveform for playback during the current step</p> <p>If the selected waveform contains header (which contains ARB play parameters), source list sequence will automatically apply header settings of the selected waveform in that step</p>
Continue Previous	"Cont"	Sets the current step to continue with playback of the waveform from the previous step. When continuing the previous waveform, the ARB playback will not pause while the source retunes to the new frequency or amplitude that may be defined for the new step
Off	"Off"	Disable RF output of the current step

Waveform File

Pressing the slide-aside field of this column (>) opens the ["Select Waveform" on page 3682](#) screen, which lets you select a waveform in ARB memory to playback during the current step. When you select a waveform, and press **OK**, it returns to the List Sequencer Setup screen with that file name in the table.

Step Duration

Lets you select the duration of play for the current step.

The duration can be set to be either the number of times for the ARB file associated with the sequence to play, or a specific time value, or continuous. If the step is set to play a CW tone, the step duration cannot be set to a play count.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TYPE TIME COUNT CONTinuous CABort</code> See "Option Details" on page 3627 <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TYPE?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TYPE TIME</code> <code>:SOUR:LIST:STEP2:SET:DUR:TYPE?</code>
Dependencies	Not available in E7760B If in VXT models M9410A/11A/16A, Step Duration is TIME or Play COUNT , only Free Run is available for the next step. Otherwise, an error message is generated: "Parameter error; only Free Run is available as step trigger on step<n>"
Range	TIME COUNT CONTinuous CABort

Option Details

Parameter	SCPI	Notes
Time	TIME	Sets the duration of the current step to be a time value for the length of time the step will play When TIME is selected, the Time may be set using the second field under Step Duration and/or by the "Duration Time" on page 3627 command
Count	COUNT	Sets the duration of the current step to be an integer value for the number of times (play count) the ARB file is selected for playback during this step. For example, a 5 second ARB will be set to play 5 times during the step When COUNT is selected, the Count may be set using the second field under Step Duration and/or by the "Play Count" on page 3628 command
Continuous	CONTinuous	Sets the current step to be played continuously until the next step starts. The waveform will always play completely before transitioning to the next step
Continuous Abort	CABort	Sets the current step to be played continuously or until the trigger event of the next step is detected. When a trigger event is received, the waveform play will be aborted after the interval specified by the Duration Time parameter and it will then transition to the next step When Continuous Abort is selected, the Duration Time may be set using the second field under Step Duration and/or by the "Duration Time" on page 3627 command

Duration Time

Lets you specify the length of time the current step will play when ["Step Duration" on page 3626](#) is Time.

When **"Step Duration" on page 3626** is Continuous Abort, this parameter specifies the maximum duration that the waveform will continue to play after a step trigger is received before the transition to the next waveform will occur. Duration is limited to a maximum of 20 seconds.

If the Transition Time value is longer than the Step Duration Time, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length (not occupy additional time). If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt <double></code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TCO 1s</code> <code>:SOUR:LIST:STEP2:SET:DUR:TCO?</code>
Notes	When Repetition is Single , the last step continues playing after the sequence is completed. In this extended playing time, <code>:STAT:OPER:COND?</code> returns 0 for the Source Sweeping Status Bit (bit 9) SCPI is supported after A.09.40 If current Duration Type is Continuous , then error -221, "Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #" is displayed
Dependencies	Not available in E7760B
Preset	VXT models M9410A/11A/16A: 2.0 ms All others: 1.00 ms
Min	For VXT models M9410A/11A/16A, the minimum duration time for first step is 1.2 ms. If the Waveform is "waveform name", the minimum duration time is 1.2 ms All others: 100 µs
Max	1800 s

Play Count

Lets you specify the number of times the current ARB waveform file will play during a step when **"Step Duration" on page 3626** is Count.

"Duration Time" on page 3627

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt <double></code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TCO 10</code> <code>:SOUR:LIST:STEP2:SET:DUR:TCO?</code>
Notes	SCPI is supported after A.09.40 This command is reused by Play Count and Duration Time if Duration Type is set to Play Count or Duration Time If Duration Type is Continuous , then error -221, "Settings conflict; Cannot accept time or count input

6 Input/Output

6.1 RF Source

	when step duration type is Continuous on step #" is displayed If Play Count is set for the last step, the last step of ARB keeps playing as if set to Continuous after play count setting is reached
Dependencies	Not available in E7760B
Preset	1
Min	1
Max	65536

Trig Out

Lets you specify the trigger output for the current step. The trigger output signal is sent at the start of the step.

When this is **ON**, a trigger event occurs on both Internal and External2 paths. Selecting **OFF** turns off trigger output.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:OUTPut:TRIGger ON OFF 1 0</code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:OUTPut:TRIGger?</code>
Example	<code>:SOUR:LIST:STEP2:SET:OUTP:TRIG ON</code> <code>:SOUR:LIST:STEP2:SET:OUTP:TRIG?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

Step Configuration (Remote Command Only)

Used to configure the List Sequencer, as detailed in the table below. The command is defined such that you send one command per step, with the step number being specified as a subopcode of the SCPI command. Each command includes all the parameter settings for the step. As a step is set up, the values entered are run through several levels of validation.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup <step_trigger>, <trans_time>, <band>, <link_type>, <freq_chan>, <power>, <waveform>, <duration>, <time_count>, <trig_state></code> For details of each option, see "Step Configuration Parameters" on page 3630 below <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup?</code>
Example	<code>:SOUR:LIST:STEP1:SET INT, 1ms, PGSM, DOWN, 10, -25 dBm, "GSM_Test1.bin", TIME, 10ms, OFF</code>
Dependencies	The range of subopcode values is 1 to 1000, and the value you enter is determined by the number of

steps you have configured. For details see ["Number of Steps" on page 3616](#)

If you attempt to remotely set or query a subopcode that is out of range, an error is generated

Step Configuration Parameters

There are 10 parameters for each step, which must be in the following order in the command:

- 1 Step Trigger Data Type: enum
 <step_trigger> Specifies the input trigger for the step. For further details, see ["Step Trigger" on page 3617](#)
- 2 Transition Time Data Type: enum
 <trans_time> Specifies the transition time for the step, in seconds. For further details, see ["Transition Time" on page 3618](#)
- 3 Radio Band Data Type: enum
 <band> Specifies the radio band for the step, as any one of:
 NONE | PGSM | EGSM | RGSM | DCS1800 | PCS1900 | TGSM810 |
 GSM450 | GSM480 | GSM700 | GSM850 | BANDI | BANDII | BANDIII |
 BANDIV | BANDV | BANDVI | BANDVII | BANDVIII | BANDIX | BANDX |
 BANDXI | BANDXII | BANDXIII | BANDXIV | BANDXIX | USCELL |
 USPCS | JAPAN | KOREAN | NMT | IMT2K | UPPER | SECOND | PAMR400
 | PAMR800 | IMTEXT | PCS1DOT9G | AWS | US2DOT5G | PUBLIC |
 LOWER | NONE | BAND1 | BAND2 | BAND3 | BAND4 | BAND5 | BAND6 |
 BAND7 | BAND8 | BAND10 | BAND11 | BAND12 | BAND13 | BAND14 |
 BAND17 | BAND18 | BAND19 | BAND20 | BAND21 | BAND24 | BAND25 |
 BAND26 | BAND33 | BAND34 | BAND35 | BAND36 | BAND37 | BAND38 |
 BAND39 | BAND40 | BAND41 | BAND42 | BAND43 | BANDA | BANDB |
 BANDC | BANDD | BANDE | BANDF | N1 | N2 | N3 | N5 | N7 | N8 |
 N12 | N20 | N25 | N28 | N34 | N38 | N39 | N40 | N41 | N50 | N51
 | N66 | N70 | N71 | N74 | N75 | N76 | N77 | N78 | N79 | N80 |
 N81 | N82 | N83 | N84 | N86 | N257 | N258 | N260 | N261
 For further details, see ["Band" on page 3619](#)
- 4 Radio Band Link Data Type: enum
 <link_type> Specifies the radio band link direction for the step, as either of:
 DOWN | UP
 For further details, see ["Device" on page 3623](#)
 The old **Device** BTS|MS is obsolete, but is still supported, acting as an alias for the
 Link parameter
- 5 Frequency/Channel Data Type: freq/chan num
 Number
 <freq_chan> Specifies the frequency in Hz or the channel number for the step. The channel
 number and frequency are combined as one parameter that represents the
 frequency or channel number depending on the radio band setting. If the radio band
 is set to **NONE**, this value is interpreted as a frequency value in Hz. If the radio band
 is set to a valid band, this value is interpreted as a channel number
 For further details, see ["Freq/Chan" on page 3624](#)

6 Input/Output

6.1 RF Source

6	Power <power>	Data Type: ampl Specifies the output power for the step in dBm. For details of the valid ranges see "Power" on page 3625
7	Waveform <waveform>	Data Type: string Specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are: <div style="display: flex; justify-content: space-between;"> <div style="width: 30%;"> <p><filename></p> <p>CONT</p> <p>CW</p> <p>OFF</p> </div> <div style="width: 65%;"> <p>Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated</p> <p>Continues playback of the ARB file from the previous step</p> <p>Outputs a CW tone</p> <p>Disables RF output</p> </div> </div> <p>For further details, see "Waveform" on page 3625 and "Waveform File" on page 3626</p>
8	Step Duration <duration>	Data Type: enum Specifies the duration of the step, as one of: TIME COUNT CONTInuous The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to CW , this value cannot be set to Play Count and an error will be generated. If CONTInuous is selected, the following Time or Count value is ignored. For further details, see "Step Duration" on page 3626
9	Time or Count <time_count>	Data Type: time/int Specifies time duration in seconds, or play count of the ARB file associated with the step For further details, see "Play Count" on page 3628
10	Output Trigger <trig_state>	Data Type: boolean Specifies the output trigger state for the step, as one of: ON OFF 1 0 For further details, see "Trig Out" on page 3629

—

Step Configuration of Step Trigger parameter list (Remote Command Only)

Configures the “Step Trigger” parameter array of the whole List Sequencer at one time. The number of arrays is the same as the step number defined in ["Number of](#)

[Steps" on page 3616](#). As a step is setup, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:INPut:TRIGger <enum>, <enum>, <enum>, ...</code> <code>:SOURce:LIST:SETup:INPut:TRIGger?</code>
Example	<code>:SOUR:LIST:SET:INP:TRIG IMM,INT,EXT2</code> <code>:SOUR:LIST:SET:INP:TRIG?</code>
Notes	The command is to setup below parameter array of whole list sequence Step Trigger <enum> - specifies the input trigger for the step. For details of the valid types of step trigger see "Step Trigger" on page 3617 If input parameter number exceeds the step number defined by "Number of Steps" on page 3616 , then error -221 "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls in number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Transition Time parameter list (Remote Command Only)

Configures the "Transition Time" parameter array of the whole List Sequencer at once. The array size is the same as step number defined in ["Number of Steps" on page 3616](#). As a step is setup, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:TRANSition:TIME <time>, <time>, <time>, ...</code> <code>:SOURce:LIST:SETup:TRANSition:TIME?</code>
Example	<code>:SOUR:LIST:SET:TRAN:TIME 1ms,1ms,1ms</code> <code>:SOUR:LIST:SET:TRAN:TIME?</code>
Notes	The command is to setup below parameter array of whole list sequence Transition Time <time> - specifies the transition time for the step in seconds. For details of the valid ranges for the transition time see "Transition Time" on page 3618 If input parameter number exceeds the step number defined by "Number of Steps" on page 3616 , then the error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls in number of steps will be updated
Dependencies	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Radio Band parameter list (Remote Command Only)

Configures the **Radio Band** parameter array of the whole List Sequencer at once. The size of the array is the same as the step number defined in ["Number of Steps"](#)

on page 3616. As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:RADio:BAND <enum>, <enum>, <enum>, ...</code> <code>:SOURce:LIST:SETup:RADio:BAND?</code>
Example	<code>:SOUR:LIST:SET:RAD:BAND PGSM, EGSM, RGSM</code> <code>:SOUR:LIST:SET:RAD:BAND?</code>
Notes	The command sets up the parameter array of whole list sequence Radio Band <enum> - specifies the radio band for the step. For available options, see "Band" on page 3619 If the input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within the number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Radio Band Link parameter list (Remote Command Only)

Configures the **Radio Band Link** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in "Number of Steps" on page 3616. As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:RADio:BAND:LINK <enum>, <enum>, <enum>, ...</code> <code>:SOURce:LIST:SETup:RADio:BAND:LINK?</code>
Example	<code>:SOUR:LIST:SET:RAD:BAND:LINK DOWN,UP,UP</code> <code>:SOUR:LIST:SET:RAD:BAND:LINK?</code>
Notes	The command sets up the parameter array of whole list sequence Radio Band Link <enum> - specifies the radio band link direction for the step. Options are: DOWN UP If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within the number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Frequency/Channel Number parameter list (Remote Command Only)

Configures the **Frequency** or **Channel Number** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 3616](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:CNFRrequency <double>, <double>, <double>, ...</code> <code>:SOURce:LIST:SETup:CNFRrequency?</code>
Example	<code>:SOUR:LIST:SET:CNFR 1GHz,100MHz,100MHz</code> <code>:SOUR:LIST:SET:CNFR?</code> <code>:SOUR:LIST:SET:CNFR 124,124,124</code> <code>:SOUR:LIST:SET:CNFR?</code>
Notes	<p>The command sets up the parameter array of whole list sequence</p> <p>Frequency/Channel Number <freq>/<chan num> - specifies the frequency in Hz or the channel number for the step. The channel number and frequency are combined as one parameter that represents the frequency or channel number depending on the radio band setting. If the radio band is set to NONE, this value is interpreted as a frequency value in Hz. If the radio band is set to a valid band, this value is interpreted as a channel number. For details of the valid ranges for frequency and channel numbers, see "Freq/Chan" on page 3624 and "Freq/Chan" on page 3624</p> <p>This command is used to setup/query channel number or frequency setting, according to current Radio Band setting of that step. If Radio Band is NONE, then it is frequency. If Radio Band is not NONE, then it is channel number</p> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then generate error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number", and only those parameters whose index number falls in legal step number will be updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Power parameter list (Remote Command Only)

Configures the **Power** parameter array of the whole List Sequencer at one time. The number of arrays is the same as step number defined in ["Number of Steps" on page 3616](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:AMPLitude <ampl>, <ampl>, <ampl>, ...</code> <code>:SOURce:LIST:SETup:AMPLitude?</code>
Example	<code>:SOUR:LIST:SET:AMPL -50dBm,-40dBm,-30dBm</code> <code>:SOUR:LIST:SET:AMPL?</code>
Notes	The command sets up the parameter array of whole list sequence

	<p>Power <ampl> - specifies the output power for the step in dBm. For details of the valid ranges, see "Power" on page 3625</p> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within legal step number will be updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Waveform parameter list (Remote Command Only)

Configures the **Waveform** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 3616](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<pre>:SOURce:LIST:SETup:WAVEform <string>, <string>, <string>, ... :SOURce:LIST:SETup:WAVEform?</pre>								
Example	<pre>:SOUR:LIST:SET:WAV "CW", "Off", "CONT" :SOUR:LIST:SET:WAV?</pre>								
Notes	<p>Sets up or queries the parameter array of whole list sequence</p> <p>Waveform <string> - specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are:</p> <table border="1"> <tr> <td><filename></td><td>Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it is does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated</td></tr> <tr> <td>CONT</td><td>Continues playback of the ARB file from the previous step</td></tr> <tr> <td>CW</td><td>Outputs a CW tone</td></tr> <tr> <td>OFF</td><td>Disables the RF output</td></tr> </table> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within number of steps will be updated</p>	<filename>	Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it is does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated	CONT	Continues playback of the ARB file from the previous step	CW	Outputs a CW tone	OFF	Disables the RF output
<filename>	Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it is does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated								
CONT	Continues playback of the ARB file from the previous step								
CW	Outputs a CW tone								
OFF	Disables the RF output								
Dependencies	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616								
Range	"filename" "CW" "Off" "CONT"								

Step Configuration of Step Duration parameter list (Remote Command Only)

Configures the **Step Duration** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 3616](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:DURation:TYPE <enum>, <enum>, <enum>, ...</code> <code>:SOURce:LIST:SETup:DURation:TYPE?</code>
Example	<code>:SOUR:LIST:SET:DUR:TYPE COUN,TIME,CONT</code> <code>:SOUR:LIST:SET:DUR:TYPE?</code>
Notes	<p>Sets up or queries the parameter array of whole list sequence</p> <p>Step Duration <enum> - specifies the duration of the step. The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to "CW", this value cannot be set to Play Count and an error will be generated. If continuous is selected, the following Time or Count value is ignored. For further details of this setting, see "Step Duration" on page 3626</p> <p>Options are:</p> <p>TIME COUNT CONTinuous</p> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within number of steps will be updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Duration Time or Play Count parameter list (Remote Command Only)

Configures the **Duration Time** or **Play Count** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 3616](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:TOCount <time/int>, <time/int>, <time/int>, ...</code> <code>:SOURce:LIST:SETup:TOCount?</code>
Example	<code>:SOUR:LIST:SET:TOC 1s,2s,3s</code> <code>:SOUR:LIST:SET:TOC?</code> <code>:SOUR:LIST:SET:TOC 5,6,7</code> <code>:SOUR:LIST:SET:TOC?</code>
Notes	Sets up or queries the parameter array of whole list sequence

	<p>Time or Count <time/int> - specifies time duration in seconds or play count of the ARB file associated with the step</p> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then an error is generated, and only those parameters whose index number falls within number of steps will be updated</p> <p>If current "Step Duration" on page 3626 is "Continuous", then error -221, "Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #" is generated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Step Configuration of Output Trigger parameter list (Remote Command Only)

Configures the **Output Trigger** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in "Number of Steps" on page 3616. As a step is set up, the value entered runs through several levels of validation.

Remote Command	<pre>:SOURce:LIST:SETup:OUTPut:TRIGger <bool>, <bool>, <bool>, ... :SOURce:LIST:SETup:OUTPut:TRIGger?</pre>
Example	<pre>:SOUR:LIST:SET:OUTP:TRIG ON,OFF,ON :SOUR:LIST:SET:OUTP:TRIG?</pre>
Notes	<p>Sets up or queries the parameter array of whole list sequence</p> <p>Output Trigger <Boolean> - specifies the output trigger for the step. Options are: ON OFF 1 0</p> <p>If input parameter number exceeds the step number defined by "Number of Steps" on page 3616, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within legal step number are updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 3616

Clear List (Remote Command Only)

The SCPI equivalent of the Clear List UI feature described in "Clear List" on page 3617.

Remote Command	<pre>:SOURce:LIST:SETup:CLEar</pre>
Example	<pre>:SOUR:LIST:SETup:CLE</pre>
Dependencies	Not available in E7760B

6.1.8.8 Remote Software Trigger (Remote command Only)

During execution of a list sequence, the sequence halts and waits at any step that has Step Trigger set to “Bus”. Sending this command triggers the step and continues the sequence.

Remote Command	<code>:SOURce:LIST:TRIGger:INITiate[:IMMediate]</code>
Example	<code>:SOUR:LIST:TRIG:INIT</code>
Dependencies	Not available in E7760B

6.1.8.9 Query List Sequence Initiation Armed Status (Remote Query Only)

This is a blocking SCPI query to determine whether a source list sequence has been initiated successfully.

Remote Command	<code>:SOURce:LIST:INITiation:ARMed?</code>
Example	<code>:SOUR:LIST:INIT:ARMed?</code>
Notes	<p>Returns “1” if list sequence has been initiated successfully, or “0” if not. If the response is “0”, use <code>:SYST:ERR?</code> to query the actual error</p> <p>Like <code>*OPC?</code>, this command can be blocked until event/status “IsSourceSweeping” occurs, and then returns. Doing so can help a script query the armed status only once during the time interval of the initiation. As an ancillary to the existing <code>:SOUR:LIST:TRIGger[:IMMediate]</code> (see "Initiate Sequence" on page 3614), send this query after <code>:SOUR:LIST:TRIG</code>. Otherwise, this query will return “1” immediately</p> <p>The return data is in the following format: Integer</p> <p>There is an alias: <code>:SOURce:LIST:TRIGger:INITiation:ARMed?</code></p>
Dependencies	Not available in E7760B

6.1.9 Frequency Setup

Lets you access the Frequency Setup sub-menu panel.

Notes	<p>The menu under this control is for independent mode and has no effect on the "List Sequencer" on page 3613. If "Sequencer" on page 3614 is ON, the List Sequencer controls the source output and this key is grayed-out, to indicate out-of-scope. When "Sequencer" on page 3614 is OFF, source leaves List Sequencer and this button is blanked out</p>
-------	---

6.1.9.1 Frequency

Lets you set the RF Output Frequency. You can adjust the frequency of the source using the numeric keypad, step keys, or RPG. Pressing any digit (0 through 9) on the

6 Input/Output

6.1 RF Source

numeric keypad displays the unit terminator.

Remote Command	:SOURce:FREQuency[:CW] <freq> :SOURce:FREQuency[:CW]?	
Example	:SOUR:FREQ 1.00 GHz	
Notes	Internal source has list sequence mode, which comprises of several steps that contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and you can use this command to change the list sequence last step's output frequency	
Couplings	The frequency value is coupled to the current channel band and number, such that updates to the band and number will update the frequency value to the corresponding absolute frequency	
Preset	E7760B	Depends on port selected
	EXM, with license F1A or 5WC	2.412 GHz
	VXT Models with Radio Heads/CIU	See "VXT Models with Remote Radio Heads/CIU" on page 3640
	M941xE(VXT Models with M9471A)	See "M941xE(VXT Models with M9471A)" on page 3640
	All other models	1.00 GHz
Min	E7760B	Depends on port selected
	VXT model M9420A	60 MHz
	VXT models M9410A/11A/15A/16A	380 MHz
	VXT model M9411A with Option LFE	1 MHz
	VXT Models with Radio Heads/CIU	See "VXT Models with Remote Radio Heads/CIU" on page 3640
	M941xE(VXT Models with M9471A)	See "M941xE(VXT Models with M9471A)" on page 3640
	All other models	10.00 MHz
Max	Hardware Dependent:	
	Option 503	3.6 GHz
	Option 504	3.8 GHz
	Option 506	6.00 GHz
	Option F06	6.00 GHz
	Parameters for "VXT models M9415A/16A" on page 3640	
	Parameters for "VXT Models with Remote Radio Heads/CIU" on page 3640	
	Parameters for "M941xE(VXT Models with M9471A)" on page 3640	
	For E7760B: Depends on port selected	
	For EXM, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, reports error message "Settings conflict; Frequency is outside available range"	

VXT models M9410A/11A

RF Output Port	Preset	Min Without Option “LFE”	Min With Option “LFE”	Max
RF Output	1 GHz	380 MHz	1 MHz	6 GHz
RFHD	1 GHz	380 MHz	1 MHz	6 GHz

VXT models M9415A/16A

Freq Option	Preset	Min	Max
F06	1 GHz	380 MHz	6.0 GHz
F08	1 GHz	380 MHz	8.0 GHz
F12	1 GHz	380 MHz	12.3 GHz

E7760B

RF Output Port	Preset	Min	Max
IFIO	16 GHz	2 GHz	18 GHz
M1650A	58.32 GHz	55 GHz	69 GHz
M1720A	28 GHz	25 GHz	29 GHz

VXT Models with Remote Radio Heads/CIU

Products with Radio Heads/CIU	Preset	Min frequency	Max frequency
VXT + CIU	6 GHz	5.9 GHz	12 GHz
VXT + CIU + RRH	28 GHz	24.25 GHz	43.5 GHz
VXT + M1742A RRH	28 GHz	10 GHz	32 GHz

M941xE(VXT Models with M9471A)

Products with M9471A	Preset	Minimum settable frequency	Minimum frequency with Spec	Maximum settable frequency
M941xE without LFE option	1 GHz	330 MHz	380MHz	26.5GHz
M941xE with LFE option (LFE option in M9411A or M9471A)	1 GHz	750 kHz	1MHz	26.5GHz

NOTE

The minimum spec frequency is 380 MHz, minimum settable center frequency is 330 MHz.

With Option LFE in M9411A or in M9471A, the minimum settable frequency is 750 kHz, but Spec to customer only ensure down to 1 MHz.

6.1.9.2 Channel

The frequency of the source can be specified by a channel number of a given frequency band. This control allows you to specify the current channel number. For the appropriate range of channel numbers for a given frequency band, see the following tables: "GSM/EDGE Channel Number Ranges" on page 3641, "W-CDMA Channel Number Ranges" on page 3642, "LTE FDD Channel Number Ranges" on page 3643, and "LTE TDD Channel Number Ranges" on page 3645.

Channel is not available on E7760B.

Remote Command	<code>:SOURce:FREQuency:CHANnEls:NUMBer <int></code> <code>:SOURce:FREQuency:CHANnEls:NUMBer?</code>
Example	<code>:SOUR:LIST:STEP2:SET:RAD:NUMB 1</code>
Notes	Grayed-out when the "Radio Standard/Radio Band" on page 3646 is set to NONE
Couplings	The channel number is coupled to the frequency value when "Radio Standard/Radio Band" on page 3646 is not set to NONE When the frequency value is changed, the channel number increases or decreases to match the new frequency. If the frequency is not at an exact match for a channel number, the nearest channel number is displayed, with > or < indicating whether the frequency is above or below the channel number
Preset	1
Min/Max	See "GSM/EDGE Channel Number Ranges" on page 3641, "W-CDMA Channel Number Ranges" on page 3642, "LTE FDD Channel Number Ranges" on page 3643, and "LTE TDD Channel Number Ranges" on page 3645

GSM/EDGE Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
P-GSM	Uplink (MS)	1 £ n £ 124	$890.0 + 0.2 * n$
	Downlink (BS)	1 £ n £ 124	$935.0 + 0.2 * n$
E-GSM	Uplink (MS)	0 £ n £ 124	$890.0 + 0.2 * n$
		975 £ n £ 1023	$890.0 + 0.2 * (n - 1024)$
	Downlink (BS)	0 £ n £ 124	$935.0 + 0.2 * n$
		975 £ n £ 1023	$935.0 + 0.2 * (n - 1024)$
DCS 1800	Uplink (MS)	512 £ n £ 885	$1710.200 + 0.20 * (n - 512)$
	Downlink (BS)	512 £ n £ 885	$1805.200 + 0.20 * (n - 512)$
PCS 1900	Uplink (MS)	512 £ n £ 810	$1850.200 + 0.2 * (n - 512)$
	Downlink (BS)	512 £ n £ 810	$1930.200 + 0.2 * (n - 512)$
R-GSM	Uplink (MS)	0 £ n £ 124	$890.0 + 0.2 * n$
		955 £ n £ 1023	$890.0 + 0.2 * (n - 1024)$
	Downlink (BS)	0 £ n £ 124	$935.0 + 0.2 * n$

Band	Link (Device)	Range	Frequency (MHz)
GSM 450	Uplink (MS)	955 £ n £ 1023	$935.0 + 0.2*(n-1024)$
	Downlink (BS)	256 £ n £ 293	$450.6 + 0.2*(n-259)$
GSM 480	Uplink (MS)	256 £ n £ 293	$460.6 + 0.2*(n-259)$
	Downlink (BS)	306 £ n £ 340	$479.000 + 0.20*(n-306)$
GSM 850	Uplink (MS)	306 £ n £ 340	$489.000 + 0.20*(n-306)$
	Downlink (BS)	128 £ n £ 251	$824.200 + 0.20*(n-128)$
GSM 700	Uplink (MS)	128 £ n £ 251	$869.200 + 0.20*(n-128)$
	Downlink (BS)	438 £ n £ 516	$777.200 + 0.20*(n-438)$
T-GSM810	Uplink (MS)	438 £ n £ 516	$747.200 + 0.20*(n-438)$
	Downlink (BS)	350 £ n £ 425	$806.0 + 0.20*(n-350)$
		350 £ n £ 425	$851.0 + 0.20*(n-350)$

W-CDMA Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
Band I	Downlink	10562 £ n £ 10838	$n \div 5$
	Uplink	9612 £ n £ 9888	$n \div 5$
Band II	Downlink	412 £ n £ 687	$n \div 5 + 1850.1$
		9662 £ n £ 9938	$n \div 5$
	Uplink	12 £ n £ 287	$n \div 5 + 1850.1$
		350 £ n £ 425	$n \div 5$
Band III	Downlink	1162 £ n £ 1513	$n \div 5 + 1575$
	Uplink	937 £ n £ 1288	$n \div 5 + 1525$
Band IV	Downlink	537 £ n £ 1738	$n \div 5 + 1805$
		1887 £ n £ 2087	$n \div 5 + 1735.1$
	Uplink	1312 £ n £ 1513	$n \div 5 + 1450$
		1662 £ n £ 1862	$n \div 5 + 1380.1$
Band V	Downlink	1007 £ n £ 1087	$n \div 5 + 670.1$
		4357 £ n £ 4458	$n \div 5$
	Uplink	782 £ n £ 862	$n \div 5 + 670.1$
		4132 £ n £ 4233	$n \div 5$
Band VI	Downlink	1037 £ n £ 1062	$n \div 5 + 670.1$
		4387 £ n £ 4413	$n \div 5$
	Uplink	812 £ n £ 837	$n \div 5 + 670.1$
		4162 £ n £ 4188	$n \div 5$
Band VII	Downlink	2237 £ n £ 2563	$n \div 5 + 2175$
		2587 £ n £ 2912	$n \div 5 + 2105.1$

6 Input/Output

6.1 RF Source

Band	Link (Device)	Range	Frequency (MHz)
Band VIII	Uplink	2012 ≤ n ≤ 2338	n ÷ 5 + 2100
		2362 ≤ n ≤ 2687	n ÷ 5 + 2030.1
Band VIII	Downlink	2937 ≤ n ≤ 3088	n ÷ 5 + 340
	Uplink	2712 ≤ n ≤ 2863	n ÷ 5 + 340
Band IX	Downlink	9237 ≤ n ≤ 9387	n ÷ 5
	Uplink	8762 ≤ n ≤ 8912	n ÷ 5
Band X	Downlink	3112 ≤ n ≤ 3388	n ÷ 5 + 1490
		3412 ≤ n ≤ 3687	n ÷ 5 + 1430.1
	Uplink	2887 ≤ n ≤ 3163	n ÷ 5 + 1135
		3187 ≤ n ≤ 3462	n ÷ 5 + 1075.1
Band XI	Downlink	3712 ≤ n ≤ 3812	n ÷ 5 + 736
	Uplink	3487 ≤ n ≤ 3587	n ÷ 5 + 733
Band XII	Downlink	3837 ≤ n ≤ 3903	n ÷ 5 – 37
		3927 ≤ n ≤ 3992	n ÷ 5 – 54.9
	Uplink	3612 ≤ n ≤ 3678	n ÷ 5 – 22
		3702 ≤ n ≤ 3767	n ÷ 5 – 39.9
Band XIII	Downlink	4017 ≤ n ≤ 4043	n ÷ 5 – 55
		4067 ≤ n ≤ 4092	n ÷ 5 – 64.9
	Uplink	3792 ≤ n ≤ 3818	n ÷ 5 + 21
		3702 ≤ n ≤ 3767	n ÷ 5 – 39.9
Band XIV	Downlink	4117 ≤ n ≤ 4143	n ÷ 5 – 63
		4167 ≤ n ≤ 4192	n ÷ 5 – 72.9
	Uplink	3892 ≤ n ≤ 3918	n ÷ 5 + 12
		3942 ≤ n ≤ 3967	n ÷ 5 + 2.1
Band XIX	Downlink	712 ≤ n ≤ 763	n ÷ 5 + 735
		787 ≤ n ≤ 837	n ÷ 5 + 720.1
	Uplink	312 ≤ n ≤ 363	n ÷ 5 + 770
		387 ≤ n ≤ 437	n ÷ 5 + 755.1

LTE FDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where F_{DL_low} and $N_{Offs-DL}$ are given in table 5.4.4-1 and N_{DL} is the downlink EARFCN.

$$F_{DL} = F_{DL_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where F_{UL_low} and $N_{Offs-UL}$ are given in table 5.4.4-1 and N_{UL} is the uplink EARFCN.

$$F_{UL} = F_{UL_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	F_{DL_low} (MHz)	$N_{Offs-DL}$	Range of N_{DL}	F_{UL_low} (MHz)	$N_{Offs-UL}$	Range of N_{UL}
1	2110	0	0 – 599	1920	18000	18000 – 18599
2	1930	600	600 – 1199	1850	18600	18600 – 19199
3	1805	1200	1200 – 1949	1710	19200	19200 – 19949
4	2110	1950	1950 – 2399	1710	19950	19950 – 20399
5	869	2400	2400 – 2649	824	20400	20400 – 20649
6	875	2650	2650 – 2749	830	20650	20650 – 20749
7	2620	2750	2750 – 3449	2500	20750	20750 – 20449
8	925	3450	3450 – 3799	880	21450	21450 – 21799
9	1844.9	3800	3800 – 4149	1749.9	21800	21800 – 22149
10	2110	4150	4150 – 4749	1710	22150	22150 – 22749
11	1475.9	4750	4750 – 4949	1427.9	22750	22750 – 22949
12	729	5010	5010 – 5179	699	23010	23010 – 23179
13	746	5180	5180 – 5279	777	23180	23180 – 23279
14	758	5280	5280 – 5379	788	23280	23280 – 23379
...						
17	734	5730	5730 – 5849	704	23730	23730 – 23849
18	860	5850	5850 – 5999	815	23850	23850 – 23999
19	875	6000	6000 – 6149	830	24000	24000 – 24149
20	791	6150	6150 – 6449	832	24150	24150 – 24449
21	1495.9	6450	6450 – 6599	1447.9	24450	24450 – 24599
...						
24	1525	7700	7700 – 8039	1626.5	25700	25700 – 26039
25	1930	8040	8040 – 8689	1850	26040	26040 – 26689
26	859	8690	8690 – 9039	814	26690	26690 – 27039
...						

Note: The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

LTE TDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where F_{DL_low} and $N_{Offs-DL}$ are given in table 5.4.4-1 and N_{DL} is the downlink EARFCN.

$$F_{DL} = F_{DL_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where F_{UL_low} and $N_{Offs-UL}$ are given in table 5.4.4-1 and N_{UL} is the uplink EARFCN.

$$F_{UL} = F_{UL_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	F_{DL_low} (MHz)	$N_{Offs-DL}$	Range of N_{DL}	F_{UL_low} (MHz)	$N_{Offs-UL}$	Range of N_{UL}
33	1900	36000	36000 - 36199	1900	36000	36000 - 36199
34	2010	36200	36200 - 36349	2010	36200	36200 - 36349
35	1850	36350	36350 - 36949	1850	36350	36350 - 36949
36	1930	36950	36950 - 37549	1930	36950	36950 - 37549
37	1910	37550	37550 - 37749	1910	37550	37550 - 37749
38	2570	37750	37750 - 38249	2570	37750	37750 - 38249
39	1880	38250	38250 - 38649	1880	38250	38250 - 38649
40	2300	38650	38650 - 39649	2300	38650	38650 - 39649
41	2496	39650	39650 - 41589	2496	39650	39650 - 41589
42	3400	41590	41590 - 43589	3400	41590	41590 - 43589
43	3600	43590	43590 - 45589	3600	43590	43590 - 45589

Note: The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

6.1.9.3 Radio Setup

Lets you select the radio standard and associated radio band. You can also set the Radio Band Link to Uplink or Downlink.

Radio Standard/Radio Band

Lets you select the radio standard and associated radio band. The first column in the dialog lets you set the Radio Standard; for each standard, and the second column in the dialog changes to show you the available bands.

Once you have selected the radio standard, you can then set an active channel band. The radio standard and the active channel band allow you to use the ["Channel" on page 3641](#) control to set Channel numbers, thus setting ["Frequency" on page 3638](#) automatically.

Remote Command	<pre>:SOURce:FREQuency:CHANnels:BAND <band></pre> <p>where <band> is one of:</p> <p>NONE PGSM EGSM RGSM DCS1800 PCS1900 GSM450 GSM480 GSM700 GSM850 TGSM810 USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV BANDXIX BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND9 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND26 BAND27 BAND28 BAND29 BAND30 BAND31 BAND65 BAND66 BAND67 BAND68 BAND71 BAND252 BAND255 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BAND44 BAND45 BAND46 BANDA BANDB BANDC BANDD BANDE BANDF N1 N2 N3 N5 N7 N8 N12 N20 N25 N28 N34 N38 N39 N40 N41 N50 N51 N66 N70 N71 N74 N75 N76 N77 N78 N79 N80 N81 N82 N83 N84 N86 N257 N258 N260 N261</p> <pre>:SOURce:FREQuency:CHANnels:BAND?</pre>
Example	<pre>:SOUR:LIST:STEP2:SET:RAD:BAND PGSM</pre>
Notes	<p>Setting this to NONE grays-out "Channel" on page 3641 under Frequency Setup</p> <p>Here are the members of each group in Radio Standard and a SCPI example for each:</p> <p>None – no Radio Standard</p> <p>None <pre>:SOUR:FREQ:CHAN:BAND NONE</pre></p> <p>GSM</p> <p>Sets GSM/EDGE as the radio standard for use and accesses the GSM/EDGE specific channel band sub-menus.</p> <p>P-GSM <pre>:SOUR:FREQ:CHAN:BAND PGSM</pre></p> <p>E-GSM <pre>:SOUR:FREQ:CHAN:BAND EGSM</pre></p> <p>R-GSM <pre>:SOUR:FREQ:CHAN:BAND RGSM</pre></p> <p>DCS 1800 <pre>:SOUR:FREQ:CHAN:BAND DCS1800</pre></p>

6 Input/Output

6.1 RF Source

PCS 1900	:SOUR:FREQ:CHAN:BAND PCS1900
GSM 450	:SOUR:FREQ:CHAN:BAND GSM450
GSM 480	:SOUR:FREQ:CHAN:BAND GSM480
GSM 700	:SOUR:FREQ:CHAN:BAND GSM700
GSM 850	:SOUR:FREQ:CHAN:BAND GSM850
T-GSM 810	:SOUR:FREQ:CHAN:BAND T-GSM810

W-CDMA

Sets WCDMA as the radio standard for use and accesses the W-CDMA specific channel band sub-menus.

Band I	:SOUR:FREQ:CHAN:BAND BANDI
Band II	:SOUR:FREQ:CHAN:BAND BANDII
Band III	:SOUR:FREQ:CHAN:BAND BANDIII
Band IV	:SOUR:FREQ:CHAN:BAND BANDIV
Band V	:SOUR:FREQ:CHAN:BAND BANDV
Band VI	:SOUR:FREQ:CHAN:BAND BANDVI
Band VII	:SOUR:FREQ:CHAN:BAND BANDVII
Band VIII	:SOUR:FREQ:CHAN:BAND BANDVIII
Band IX	:SOUR:FREQ:CHAN:BAND BANDIX
Band X	:SOUR:FREQ:CHAN:BAND BANDX
Band XI	:SOUR:FREQ:CHAN:BAND BANDXI
Band XII	:SOUR:FREQ:CHAN:BAND BANDXII
Band XIII	:SOUR:FREQ:CHAN:BAND BANDXIII
Band XIV	:SOUR:FREQ:CHAN:BAND BANDXIV
Band XIX	:SOUR:FREQ:CHAN:BAND BANDXIX

LTE

Sets LTE FDD as the radio standard for use and accesses the LTE FDD specific channel band sub-menus.

Band 1	:SOUR:FREQ:CHAN:BAND BAND1
Band 2	:SOUR:FREQ:CHAN:BAND BAND2
Band 3	:SOUR:FREQ:CHAN:BAND BAND3
Band 4	:SOUR:FREQ:CHAN:BAND BAND4
Band 5	:SOUR:FREQ:CHAN:BAND BAND5
Band 6	:SOUR:FREQ:CHAN:BAND BAND6
Band 7	:SOUR:FREQ:CHAN:BAND BAND7
Band 8	:SOUR:FREQ:CHAN:BAND BAND8

Band 9	:SOUR:FREQ:CHAN:BAND BAND9
Band 10	:SOUR:FREQ:CHAN:BAND BAND10
Band 11	:SOUR:FREQ:CHAN:BAND BAND11
Band 12	:SOUR:FREQ:CHAN:BAND BAND12
Band 13	:SOUR:FREQ:CHAN:BAND BAND13
Band 14	:SOUR:FREQ:CHAN:BAND BAND14
Band 17	:SOUR:FREQ:CHAN:BAND BAND17
Band 18	:SOUR:FREQ:CHAN:BAND BAND18
Band 19	:SOUR:FREQ:CHAN:BAND BAND19
Band 20	:SOUR:FREQ:CHAN:BAND BAND20
Band 21	:SOUR:FREQ:CHAN:BAND BAND21
Band 24	:SOUR:FREQ:CHAN:BAND BAND24
Band 25	:SOUR:FREQ:CHAN:BAND BAND25
Band 26	:SOUR:FREQ:CHAN:BAND BAND26
Band 27	:SOUR:FREQ:CHAN:BAND BAND27
Band 28	:SOUR:FREQ:CHAN:BAND BAND28
Band 29	:SOUR:FREQ:CHAN:BAND BAND29
Band 30	:SOUR:FREQ:CHAN:BAND BAND30
Band 31	:SOUR:FREQ:CHAN:BAND BAND31
Band 65	:SOUR:FREQ:CHAN:BAND BAND65
Band 66	:SOUR:FREQ:CHAN:BAND BAND66
Band 67	:SOUR:FREQ:CHAN:BAND BAND67
Band 68	:SOUR:FREQ:CHAN:BAND BAND68
Band 71	:SOUR:FREQ:CHAN:BAND BAND71
Band 252	:SOUR:FREQ:CHAN:BAND BAND252
Band 255	:SOUR:FREQ:CHAN:BAND BAND255

LTE TDD

Sets LTE TDD as the radio standard for use and accesses the LTE TDD specific channel band sub-menus.

Band 33	:SOUR:FREQ:CHAN:BAND BAND33
Band 34	:SOUR:FREQ:CHAN:BAND BAND34
Band 35	:SOUR:FREQ:CHAN:BAND BAND35
Band 36	:SOUR:FREQ:CHAN:BAND BAND36
Band 37	:SOUR:FREQ:CHAN:BAND BAND37
Band 38	:SOUR:FREQ:CHAN:BAND BAND38
Band 39	:SOUR:FREQ:CHAN:BAND BAND39

6 Input/Output

6.1 RF Source

Band 40	:SOUR:FREQ:CHAN:BAND BAND40
Band 41	:SOUR:FREQ:CHAN:BAND BAND41
Band 42	:SOUR:FREQ:CHAN:BAND BAND42
Band 43	:SOUR:FREQ:CHAN:BAND BAND43
Band 44	:SOUR:FREQ:CHAN:BAND BAND44
Band 45	:SOUR:FREQ:CHAN:BAND BAND45
Band 46	:SOUR:FREQ:CHAN:BAND BAND46

5GNR

Sets 5G NR as the radio standard for use and accesses the 5G NR specific channel band sub-menus.

N 1	:SOUR:FREQ:CHAN:BAND N1
N 2	:SOUR:FREQ:CHAN:BAND N2
N 3	:SOUR:FREQ:CHAN:BAND N3
N 5	:SOUR:FREQ:CHAN:BAND N5
N 7	:SOUR:FREQ:CHAN:BAND N7
N 8	:SOUR:FREQ:CHAN:BAND N8
N 12	:SOUR:FREQ:CHAN:BAND N12
N 20	:SOUR:FREQ:CHAN:BAND N20
N 25	:SOUR:FREQ:CHAN:BAND N25
N 28	:SOUR:FREQ:CHAN:BAND N28
N 34	:SOUR:FREQ:CHAN:BAND N34
N 38	:SOUR:FREQ:CHAN:BAND N38
N 39	:SOUR:FREQ:CHAN:BAND N39
N 40	:SOUR:FREQ:CHAN:BAND N40
N 41	:SOUR:FREQ:CHAN:BAND N41
N 50	:SOUR:FREQ:CHAN:BAND N50
N 51	:SOUR:FREQ:CHAN:BAND N51
N 66	:SOUR:FREQ:CHAN:BAND N66
N 70	:SOUR:FREQ:CHAN:BAND N70
N 71	:SOUR:FREQ:CHAN:BAND N71
N 74	:SOUR:FREQ:CHAN:BAND N74
N 75	:SOUR:FREQ:CHAN:BAND N75
N 76	:SOUR:FREQ:CHAN:BAND N76
N 77	:SOUR:FREQ:CHAN:BAND N77
N 78	:SOUR:FREQ:CHAN:BAND N78
N 79	:SOUR:FREQ:CHAN:BAND N79
N 80	:SOUR:FREQ:CHAN:BAND N80

N 81	:SOUR:FREQ:CHAN:BAND N81
N 82	:SOUR:FREQ:CHAN:BAND N82
N 83	:SOUR:FREQ:CHAN:BAND N83
N 84	:SOUR:FREQ:CHAN:BAND N84
N 86	:SOUR:FREQ:CHAN:BAND N86
N 257	:SOUR:FREQ:CHAN:BAND N257
N 258	:SOUR:FREQ:CHAN:BAND N258
N 260	:SOUR:FREQ:CHAN:BAND N260
N 261	:SOUR:FREQ:CHAN:BAND N261

Radio Band Link

Lets you specify the channel band type as either uplink or downlink link direction. This value is used in conjunction with the channel band and channel number to determine the absolute frequency output by the source.

- When set to **Uplink (UP)**, the source calculates the uplink frequency using an uplink formula together with the selected channel band and channel number
- When set to **Downlink (DOWN)** the source calculates the downlink frequency using a downlink formula together with the selected channel band and channel number

Remote Command	:SOURce:RADio:BAND:LINK DOWN UP :SOURce:RADio:BAND:LINK?
Example	:SOUR:RAD:BAND:LINK UP
Preset	DOWN
Range	DOWN UP
Backwards Compatibility SCPI	:SOURce:RADio:DEVIce BTS MS :SOURce:RADio:DEVIce?
Backwards Compatibility Notes	DOWN = BTS UP = MS

6.1.9.4 Set Reference Frequency

Lets you set the frequency reference. Pressing this control turns the frequency reference state to **ON**, sets the reference frequency value to the current frequency, maintains this frequency at the RF output, and sets the displayed frequency to 0.00 Hz. All subsequent frequencies entered under Source>Frequency>Frequency are interpreted as being relative to this reference frequency.

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under **Source, Frequency, Frequency** as follows:

Output frequency = reference frequency - entered frequency

Where:

- reference frequency equals the original RF frequency entered under **Source>Frequency>Frequency** and set as the reference frequency
- entered frequency equals a new value entered under **Source, Frequency, Frequency**

In addition, the displayed frequency value will be the same as the value entered under **Source>Frequency>Frequency**.

NOTE

If Freq Reference is **ON** with a reference value set, entering a value under **Source, Frequency, Frequency** and pressing **Set Frequency Reference** adds that value to the existing Freq Reference value.
If you wish to change the reference frequency value to the new value entered under **Source, Frequency, Frequency**, first set Freq Reference **OFF** then press **Set Frequency Reference**.

Remote Command	:SOURce:FREQuency:REFerence:SET
Example	:SOUR:FREQ:REF:SET
Dependencies	Unavailable, and grayed-out, when List Sequencer is ON

6.1.9.5 Freq Reference

Lets you toggle the state of the frequency reference. When the frequency reference state is **ON**, an annunciator is displayed on the main source view to indicate this state to the user.

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under **Source, Frequency, Frequency** as follows:

Output frequency = reference frequency + entered frequency

Where:

- reference frequency equals the original RF frequency entered under **Source, Frequency, Frequency** and set as the reference frequency
- entered frequency equals a new value entered under **Source, Frequency, Frequency**

For more information on Reference Frequency, see ["Set Reference Frequency" on page 3650](#).

Remote Command	:SOURce:FREQuency:REFeRence <freq> :SOURce:FREQuency:REFeRence?	
Example	:SOUR:FREQ:REF 0.00 Hz	
Dependencies	Unavailable, and grayed-out, when List Sequencer is ON	
Couplings	The frequency reference state is coupled to the frequency reference set immediate action. When the reference set immediate action key is pressed, or the SCPI command issued, it turns the frequency reference state ON	
Preset	0.00 Hz	
Min	0.00 Hz	
Max	Hardware Dependent:	
	Option 503	3.6 GHz
	Option 504	3.8 GHz
	Option 506	6.00 GHz
	For E7760B: Dependent on port selected	
	Auto Function	
Remote Command	:SOURce:FREQuency:REFeRence:STATe OFF ON 0 1 :SOURce:FREQuency:REFeRence:STATe?	
Example	:SOUR:FREQ:REF:STATe ON	
Preset	OFF	

6.1.9.6 Freq Offset

Lets you specify the frequency offset value. When the frequency offset state is **ON**, an annunciator is displayed on the main source view to indicate this state.

When the frequency offset is set to zero (0) and you set a new offset value, the displayed frequency value changes as follows, and the RF output frequency does not change:

Displayed value = output frequency + offset value

Where:

- output frequency equals the original frequency entered under **Source, Frequency, Frequency**
- offset value equals the value entered under **Source, Frequency, Freq Offset**

6 Input/Output

6.1 RF Source

When the frequency offset is set to a value other than zero (0) and you enter a new frequency value under **Source, Frequency, Frequency**, the displayed frequency will be the same as the value entered and the RF output frequency will be equal to the value entered minus the offset value as follows:

Output frequency = entered frequency – offset frequency

Displayed frequency = output frequency + offset frequency

Displayed frequency = entered frequency

Where:

- entered frequency equals the frequency entered under **Source, Frequency, Frequency**
- offset frequency equals the value previously entered and set under **Source, Frequency, Freq Offset**

Remote Command	<code>:SOURce:FREQuency:OFFSet <freq></code> <code>:SOURce:FREQuency:OFFSet?</code>
Example	<code>:SOUR:FREQ:OFFS 0 Hz</code>
Dependencies	Unavailable, and grayed-out, when List Sequencer is ON
Preset	0 Hz
Min/Max	–/+100.00 GHz

6.1.9.7 Freq Increment

Changes the step size for the RF Output Frequency function. Once an increment size has been selected and the RF Output Frequency function is active, the step keys (and the **UP | DOWN** parameters for RF Frequency from remote commands) change the RF Output Frequency by the increment set value.

This feature exists in EXG and MXG.

Remote Command	<code>:SOURce:FREQuency:STEP[:INCRe ment] <freq></code> <code>:SOURce:FREQuency:STEP[:INCRe ment]?</code>
Example	<code>:SOUR:FREQ:STEP 1.0 kHz</code>
Couplings	Coupled to the Step size of the RF Frequency function
Preset	Hardware Dependent. 10% of the span preset value
Min	1 Hz
Max	Hardware Dependent:
	Option 503 3.6 GHz
	Option 504 3.8 GHz

Option 506

6.00 GHz

For E7760B: Dependent on port selected

For EXM, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, reports error message "Settings conflict; Frequency is outside available range"

6.1.9.8 Rx/Tx Coupling

Allows coupling between the frequency of the Internal Source, RF Output Frequency, and the instrument Center Frequency. For all settings except **NONE**, this parameter couples the **Center Frequency** of the instrument to the RF Output Frequency of the source. Valid setting changes result in the Analyzer CF and RF Output Frequency parameters being set to the same value, plus the "Rx/Tx Offset" on page 3655.

The four states for coupling are:

SOURCE

Source follows Analyzer

Coupling is in one direction only. Changes to the Center Frequency will result in the RF Output Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the RF Output Frequency will not change the Center Frequency and will change Rx/Tx Frequency Coupling to None

ANALYZER

Analyzer follows Source

Coupling is in one direction only. Changes to the RF Output Frequency will result in the Center Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the Center Frequency will not change the RF Output Frequency and will change Rx/Tx Frequency Coupling to None

BOTH

Analyzer/Source Coupled

Coupling is bi-directional. Changes to the Center Frequency will result in the RF Output Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the RF Output Frequency will result in the Center Frequency being set to the same value, with any Rx/Tx Frequency Offset applied

NONE

None

RF Output Frequency and CF Frequency are independently controlled

Remote Command	:SOURCE:FREQUENCY:COUPLING NONE BOTH SOURCE ANALYZER :SOURCE:FREQUENCY:COUPLING?
----------------	---

Example	:SOUR:FREQ:COUP BOTH
---------	----------------------

Dependencies	Only appears in Radio Test Mode
--------------	---------------------------------

Preset	NONE
--------	------

	Input/Output Preset
--	---------------------

State Saved	Yes
-------------	-----

6.1.9.9 Rx/Tx Offset

Lets you offset the RF Output Frequency of the source from the **Center Frequency** of the instrument. See ["Rx/Tx Coupling" on page 3654](#) for coupling behavior.

Remote Command	<code>:SOURce:FREQuency:COUPling:OFFSet <freq></code> <code>:SOURce:FREQuency:COUPling:OFFSet?</code>						
Example	<code>:SOUR:FREQ:COUP:OFF 100 kHz</code>						
Dependencies	Grayed-out when "Rx/Tx Coupling" on page 3654 is set to NONE . If the grayed-out control is selected, the following message appears: "The parameter cannot be changed when Rx/Tx Coupling is Off" Only appears in Radio Test Mode						
Preset	0 Hz (Input/Output Preset)						
Min	-6 GHz						
Max	Hardware Dependent: <table><tr><td>Option 503</td><td>3.6 GHz</td></tr><tr><td>Option 504</td><td>3.8 GHz</td></tr><tr><td>Option 506</td><td>6.00 GHz</td></tr></table> For E7760B: Dependent on port selected For E6640A, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, UI reports an error message: "Settings conflict; Frequency is outside available range"	Option 503	3.6 GHz	Option 504	3.8 GHz	Option 506	6.00 GHz
Option 503	3.6 GHz						
Option 504	3.8 GHz						
Option 506	6.00 GHz						

6.1.10 Modulation

Lets you toggle the state of modulation.

Remote Command	<code>:OUTPut:MODulation[:STATe] ON OFF 1 0</code> <code>:OUTPut:MODulation[:STATe]?</code>
Example	<code>:OUTP:MOD OFF</code>
Notes	This setting is for independent mode and has no effect on the "List Sequencer" on page 3613 . If Sequencer is ON , the List Sequencer controls the source output, and this key is grayed-out When Sequencer is OFF , source leaves List Sequencer, and this setting is blanked out, taking effect immediately When Modulation is ON , the "MOD" annunciator is displayed in the system settings panel. When Modulation is OFF , the "MOD" annunciator is cleared If Sequencer is ON , the "MOD" annunciator will be replaced by "SEQ" in the system settings panel, indicating that the output is controlled by List Sequencer

Preset	OFF
Range	ON OFF

6.1.11 Modulation Setup

Allows access to the menus for setting up the available modulation types.

Not available in E7760B.

AM/FM/PM are not available for VXT models M9415A/16A and M9415E/16E .

6.1.11.1 AM

Enables or disables amplitude modulation.

Turning **AMON** when another modulation format is already on results in the previous modulation format being turned off, and generates an error.

Remote Command	:SOURce:AM:STATe ON OFF 1 0 :SOURce:AM:STATe?
Example	:SOUR:AM:STAT OFF
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

6.1.11.2 AM Mod Depth

Lets you set the amplitude modulation depth in percent.

Remote Command	:SOURce:AM[:DEPTh][:LINear] <real> :SOURce:AM[:DEPTh][:LINear]?
Example	:SOUR:AM 0.1
Dependencies	Not available in E7760B
Preset	0.1 %
Min	0.1 %
Max	95.0 %

6.1.11.3 AM Rate

Lets you set the internal amplitude modulation rate.

6 Input/Output

6.1 RF Source

Remote Command	<code>:SOURce:AM:INTernal:FREQuency <freq></code> <code>:SOURce:AM:INTernal:FREQuency?</code>
Example	<code>:SOUR:AM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz
Min	10 Hz
Max	40 kHz

6.1.11.4 AM Rate Increment

Changes the step size for "AM Rate" on page 3656. Once an increment size has been selected and **AM Rate** is active, the step keys (and the **UP** | **DOWN** parameters for **AM Rate** from remote commands) change **AM Rate** by the increment value.

Remote Command	<code>:SOURce:AM:INTernal:FREQuency:STEP[:INCRement] <freq></code> <code>:SOURce:AM:INTernal:FREQuency:STEP[:INCRement]?</code>
Example	<code>:SOUR:AM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:AM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of AM Rate
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

6.1.11.5 FM

Enables or disables frequency modulation.

Turning **FMON** when another modulation format is already on results in the previous modulation format being turned off and the generation of an error.

Remote Command	<code>:SOURce:FM:STATe ON OFF 1 0</code> <code>:SOURce:FM:STATe?</code>
Example	<code>:SOUR:FM:STAT OFF</code>
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

6.1.11.6 FM Deviation

Lets you set the frequency modulation deviation.

Remote Command	<code>:SOURce:FM[:DEViation] <freq></code> <code>:SOURce:FM[:DEViation]?</code>
Example	<code>:SOUR:FM 1.00 kHz</code>
Dependencies	Not available in E7760B
Preset	1.00 Hz
Min	1.00 Hz
Max	100.00 kHz

6.1.11.7 FM Rate

Lets you set the internal frequency modulation rate.

Remote Command	<code>:SOURce:FM:INTernal:FREQuency <freq></code> <code>:SOURce:FM:INTernal:FREQuency?</code>
Example	<code>:SOUR:FM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz
Min	10 Hz
Max	40 kHz

6.1.11.8 FM Rate Increment

Changes the step size for "FM Rate" on page 3658. Once an increment size has been selected and **FM Rate** is active, the step keys (and the **UP | DOWN** parameters for **FM Rate** from remote commands) change **FM Rate** by the increment value.

Remote Command	<code>:SOURce:FM:INTernal:FREQuency:STEP[:INCRe ment] <freq></code> <code>:SOURce:FM:INTernal:FREQuency:STEP[:INCRe ment]?</code>
Example	<code>:SOUR:FM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:FM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of FM Rate
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

6.1.11.9 PM

Enables or disables phase modulation.

Turning **PMON** when another modulation format is already on results in the previous modulation format being turned **OFF** and the generation of an error.

Remote Command	<code>:SOURce:PM:STATe ON OFF 1 0</code> <code>:SOURce:PM:STATe?</code>
Example	<code>:SOUR:PM:STAT OFF</code>
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

6.1.11.10 PM Deviation

Lets you set the phase modulation deviation in radian.

Remote Command	<code>:SOURce:PM[:DEViation] <real></code> <code>:SOURce:PM[:DEViation]?</code>	
Example	<code>:SOUR:PM 1.00</code>	
Dependencies	Not available in E7760B	
Preset	0.1 rad	
Min	0.1 rad	
Max	Instrument Type	Value
	M9410A/11A	10.0 rad
	All Others	20.0 rad

6.1.11.11 PM Rate

Lets you set the internal phase modulation rate.

Remote Command	<code>:SOURce:PM:INTernal:FREQuency <freq></code> <code>:SOURce:PM:INTernal:FREQuency?</code>
Example	<code>:SOUR:PM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz

Min	10 Hz
Max	40 kHz

6.1.11.12 PM Rate Increment

Changes the step size for "PM Rate" on page 3659. Once an increment size has been selected and **PM Rate** is active, the step keys (and the **UP | DOWN** parameters for **PM Rate** from remote commands) change **PM Rate** by the increment value.

Remote Command	<code>:SOURce:PM:INTernal:FREQuency:STEP[:INCRement] <freq></code> <code>:SOURce:PM:INTernal:FREQuency:STEP[:INCRement]?</code>
Example	<code>:SOUR:PM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:PM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of PM Rate
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

6.1.11.13 ARB Setup

Accesses menus for setting up the Arbitrary Waveform Generator.

Basic Control

Lets you set up the basic ARB parameters and select a waveform to play.

ARB State

Lets you toggle the state of the ARB function. When the ARB is **ON**, a "MOD" annunciator is displayed in the system settings panel. When the ARB is **OFF**, the MOD annunciator is cleared

Remote Command	<code>:SOURce:RADio:ARB[:STATe] ON OFF 1 0</code> <code>:SOURce:RADio:ARB[:STATe]?</code>
Example	<code>:SOUR:RAD:ARB OFF</code> <code>:SOUR:RAD:ARB?</code>
Notes	If ARB is ON , and you then load or delete another file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished

6 Input/Output

6.1 RF Source

Dependencies	<p>This setting is for the independent mode, and has no effect on "List Sequencer" on page 3613. If Sequencer is ON, this will make the source enter List Sequencer mode, and even if ARB state is ON, the ARB file will not be played. When Sequencer is OFF, source leaves List Sequencer and this setting takes effect immediately</p> <p>The ARB can only be turned on when there is a waveform file selected for playback. On the GUI, If no waveform is selected, this key is grayed out. If you send the SCPI command to turn the ARB on with no waveform selected for playback, the ARB state remains OFF and an error is generated</p> <p>-If you try to recall a certain set of states in which the selected waveform is not in ARB memory and the ARB state is ON, errors are reported</p>
Preset	OFF
Range	ON OFF

Sample Rate

Lets you set the ARB waveform playback sample rate.

See ["More Information" on page 3662](#)

Remote Command	:SOURce:RADio:ARB:SCLock:RATE <freq> :SOURce:RADio:ARB:SCLock:RATE?	
Example	:SOUR:RAD:ARB:SCL:RATE 48.00 MHz	
Notes	<p>If there is a sample rate specified in the header of the waveform file, changing that sample rate is not recommended, as it may cause problems with burst timing</p> <p>For E7760B, the Sample Rate is fixed. If this control is attempted to be set the error -221, "Settings conflict; Sample Rate is fixed" is generated</p>	
Dependencies	<p>When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The sample rate is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the sample rate is updated with the value from the header file. The sample rate will remain unchanged if the newly selected waveform does not have an associated header file</p>	
Preset	E7760B	2.64 GHz
	Option B40	50 MHz
	Option B85	100 MHz
	Option B1X	200 MHz
	Option B3X	375 MHz
	Option B6X	750 MHz
	Option B4X	500 MHz
	Option B8X	1.0 GHz
	Option B12	1.5 GHz

Min	E7760B: 2.64 GHz All Others: 1.00 kHz		
Max	Hardware Dependent:		
	E7760B		2.64 GHz
	VXT model M9420A	Option B40	50 MHz
		Option B85	100 MHz
		Option B1X	200 MHz
	VXT models M9410A/11A and M9410E/11E	Option B40	50 MHz
		Option B3X	375 MHz
		Option B6X	750 MHz
		Option B12	1.5 GHz
	VXT models M9415A/16A and M9415E/16E	Option B4X	500 MHz
		Option B8X	1.0 GHz
		Option B12	1.5 GHz

For VXT models M9410A/11A/15A/16A, M9410E/11E/15E/16E and E6680A/81A, the sample rate is only limited by the option, but the IF BW is limited by center frequency in addition to options. See ["More Information" on page 3662](#). Performance is guaranteed only when the bandwidth of the selected waveform is smaller than the Max IF BW

More Information

Although the range of Sample Rate only depends on the installed option, the Maximum IF BW depends on options as well as the Center Frequency.

VXT models M9410A/11A, E6680A and E6681A

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
6.5 kHz ~ 9 kHz (Option LFE)	(CF – 6.5 kHz) * 2
9 kHz ~ 100 kHz (Option LFE)	5 kHz

6 Input/Output

6.1 RF Source

Center Frequency	Maximum IF BW
100 kHz ~ 1 MHz (Option LFE)	50 kHz
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 5480 MHz (without Option EP6)	1200 MHz
5480 MHz ~ 6080 MHz (without Option EP6)	$(6080 \text{ MHz} - CF) * 2$
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 6000 MHz (Option EP6)	1200 MHz
6000 MHz ~ 6600 MHz (Option EP6)	$(6600 \text{ MHz} - CF) * 2$

VXT models M9415A/16A

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
330 MHz ~ 380 MHz	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 12300 MHz	1200 MHz
12300 MHz ~ 12900 MHz	$(12900 \text{ MHz} - CF) * 2$

M9410E/11E

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	$(CF - 330 \text{ MHz}) * 2$
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 25.9 GHz (without Option EP6)	1200 MHz
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 25.9 GHz (Option EP6)	1200 MHz
25.9 GHz ~ 26.5 GHz	$\text{Min}(\text{Max BW by option}, 2 * (26.5 \text{ GHz} - \text{Center Freq}))$

M9415E/16E

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz

6 Input/Output

6.1 RF Source

Center Frequency	Maximum IF BW
330 MHz ~ 380 MHz (without Option LFE)	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 25.9 GHz	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

Run-Time Scaling

Lets you adjust the run-time scaling value. The run-time scaling value is applied in real-time while the waveform is playing.

Remote Command	<code>:SOURce:RADio:ARB:RSCaling <real></code> <code>:SOURce:RADio:ARB:RSCaling?</code>
Example	<code>:SOUR:RAD:ARB:RSC 100.00</code>
Notes	Cannot be set in EXM and VXT. Grayed-out in menu, and the value is fixed at 70.00%
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The run-time scaling is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the run-time scaling is updated with the value from the header file. The run-time scaling will remain unchanged if the newly selected waveform does not have an associated header file
Preset	70.00 %
Min	1.00 %
Max	100.00 %

Baseband Freq Offs

Lets you adjust the value by which the baseband frequency is offset relative to the carrier.

Remote Command	<code>:SOURce:RADio:ARB:BASEband:FREQuency:OFFSet <freq></code> <code>:SOURce:RADio:ARB:BASEband:FREQuency:OFFSet?</code>
Example	<code>:SOUR:RAD:ARB:BAS:FREQ:OFFS 0.00 Hz</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The baseband frequency offset is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the baseband frequency offset is updated with the value from the header file. The baseband frequency offset will remain unchanged if the newly selected waveform does not have an associated header file Not available in E7760B

Preset	0.00 Hz
Min	-50.00 MHz
Max	50.00 MHz

Baseband Power

Lets you quickly control the power of the modulator prior to up-conversion to the RF carrier.

Remote Command	<code>:SOURce:RADio:ARB:BASEband:POWer <ampl></code> <code>:SOURce:RADio:ARB:BASEband:POWer?</code>
Example	<code>:SOUR:RAD:ARB:BAS:POW -10 dB</code>
Notes	The Source Power level equals RF Power plus Baseband Power. For example, if the RF Power is set to -10 dBm and the Baseband Power is set to -4 dB, the actual Source Power level is -14 dBm Can be used to change the output level very quickly compared to the RF Power
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	0 dB
Min	-50 dB
Max	20 dB

Mkr 1-4 Polarity

Lets you set the polarity of markers 1 through 4 respectively.

Remote Command	<code>:SOURce:RADio:ARB:MPOLarity:MARKer1 ... 4 POSitive NEGative</code> <code>:SOURce:RADio:ARB:MPOLarity:MARKer1 ... 4?</code>
Example	<code>:SOUR:RAD:ARB:MPOL:MARK1 NEG</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file Not available in E7760B
Preset	<code>POSitive</code>
Range	<code>POSitive NEGative</code>

Pulse/RF Blank

Lets you select which marker is used for **Pulse/RF Blank**. This function blanks the RF when the marker signal goes low. The marker polarity determines when the

6 Input/Output

6.1 RF Source

marker signal is high. For a positive polarity, this is during the marker points. For a negative polarity, this is when there are no marker points.

Marker points should be set before using this function. Enabling this function without setting maker points may create a continuous low or high signal, dependent on the marker polarity. This causes either no RF output, or a continuous RF output.

Remote Command	<code>:SOURce:RADio:ARB:MDEStination:PULSe NONE M1 M2 M3 M4</code> For option details, see "More Information" on page 3667 <code>:SOURce:RADio:ARB:MDEStination:PULSe?</code>
Example	<code>:SOUR:RAD:ARB:MDES:PULS NONE</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The Pulse/RF Blank setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the Pulse/RF Blank setting is updated with the value from the header file. The Pulse/RF Blank setting remains unchanged if the newly selected waveform does not have an associated header file
Range	<code>NONE M1 M2 M3 M4</code>

More Information

Parameter	SCPI	Notes
None	<code>NONE</code>	Sets no marker to be used for Pulse/RF Blank function, essentially turning the RF blanking function off
Marker 1	<code>M1</code>	Sets marker 1 to be used for Pulse/RF Blank
Marker 2	<code>M2</code>	Sets marker 2 to be used for Pulse/RF Blank
Marker 3	<code>M3</code>	Sets marker 3 to be used for Pulse/RF Blank
Marker 4	<code>M4</code>	Sets marker 4 to be used for Pulse/RF Blank

ALC Hold

Lets you specify which marker is routed for use within **ALC Hold**. This function holds the ALC circuitry at the average value of the sample points set by the marker.

ALC Hold operates during the low periods of the marker signal. The marker polarity determines when the marker signal is high. For positive polarity, this is during the marker points. For a negative polarity, this is when there are no maker points.

Remote Command	<code>:SOURce:RADio:ARB:MDEStination:ALCHold NONE M1 M2 M3 M4</code> For option details, see "Option Details" on page 3668 <code>:SOURce:RADio:ARB:MDEStination:ALCHold?</code>
Example	<code>:SOUR:RAD:ARB:MDES:ALCH NONE</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The ALC Hold setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the ALC Hold setting is updated

with the value from the header file. The **ALC Hold** setting remains unchanged if the newly selected waveform does not have an associated header file

Not available in E7760B, and VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E

Range [NONE](#) | [M1](#) | [M2](#) | [M3](#) | [M4](#)

Option Details

Parameter	SCPI	Notes
None	NONE	Use no marker for ALC Hold , essentially turning ALC Hold off
Marker 1	M1	Use marker 1 for ALC Hold
Marker 2	M2	Use marker 2 for ALC Hold
Marker 3	M3	Use marker 3 for ALC Hold
Marker 4	M4	Use marker 4 for ALC Hold

Trigger Type

Determines the behavior of the waveform when it plays.

Remote Command	:SOURce:RADio:ARB:TRIGger:TYPE CONTInuous SINGle SADVance :SOURce:RADio:ARB:TRIGger:TYPE?
Example	:SOUR:RAD:ARB:TRIG:TYPE CONT :SOUR:RAD:ARB:TRIG:TYPE?
Preset	CONTInuous
Range	Continuous Single Seg Adv

Continuous trigger

Sets the active trigger type to **Continuous**. If **Continuous** is already selected as the active trigger type, pressing this control allows access to the **Continuous trigger** type setup menu. In **Continuous** trigger mode, the waveform repeats continuously.

Remote Command	:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE] FREE TRIGger RESet See "Option Details" on page 3669 :SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]?
Example	:SOUR:RAD:ARB:TRIG:TYPE:CONT FREE
Preset	FREE
Range	Free Run Trigger + Run Reset + Run

Option Details

Parameter	SCPI	Notes
Free Run	FREE	Sets the waveform generator to play a waveform sequence or segment continuously, without waiting for a trigger. In this mode, the waveform generator does not respond to triggers
Trigger + Run	TRIGger	Sets the waveform generator to play a waveform sequence or segment continuously when the first trigger is received, and to ignore any subsequent triggers
Reset + Run	RESet	Sets the waveform generator to play a waveform sequence or segment continuously when the first trigger is received. Subsequent triggers reset the waveform sequence or segment to the start, and then play it continuously

Single trigger

Sets the active trigger type to **Single**. If **Single** is already selected as the active trigger type, pressing this control allows access to the single trigger type setup menu. In **Single** trigger mode, the waveform plays once.

Remote Command	:SOURce:RADio:ARB:RETRigger ON OFF IMMEDIATE See "Option Details" on page 3669 :SOURce:RADio:ARB:RETRigger?	
Example	:SOUR:RAD:ARB:RETR OFF	
Notes	ON : Buffered Trigger OFF : No Retrigger IMMEDIATE : Restart on Trigger This is defined as an enumerated SCPI command, with ON OFF being considered as enumerated types rather than Boolean. This means the query returns OFF instead of 0, and ON instead of 1	
Preset	ON	

Option Details

Parameter	SCPI	Notes
No Retrigger	OFF	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. Any triggers then received during playback are ignored
Buffered Trigger	ON	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator plays the sequence or segment to the end, then plays the sequence or segment once more
Restart on Trigger	IMMEDIATE	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator resets and plays the sequence or segment from the start

Segment Advance trigger

Sets the active trigger type to **Segment Advance**. If **Segment Advance** is already selected as the active trigger type, pressing this control allows access to the segment advance trigger type setup menu.

Segment Advance triggering allows you to control the playback of waveform segments within a waveform sequence. When a trigger is received the ARB advances to the next waveform segment within the waveform sequence. This type of triggering ignores the repetition count for the waveform segment within the waveform sequence. For example, if a waveform segment has a repetition count of 10 and you select single segment advance triggering mode, the waveform segment will only play once.

Segment Advance triggering can also be used for waveform segments only. In this situation, the same waveform segment is played again when a trigger is received.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE] SINGle CONTInuous</code> See "Option Details" on page 3670 <code>:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:TYPE:SADV SING</code>
Dependencies	Not available in E7760B
Preset	<code>CONTInuous</code>
Range	<code>SINGle CONTInuous</code>

Option Details

Parameter	SCPI	Notes
Single	<code>SINGle</code>	Once a trigger is received a segment is played once. If a trigger is received during playback of a segment, the segment plays to completion and the next segment is played once
Continuous	<code>CONTInuous</code>	Once a trigger is received a segment is played continuously. When subsequent triggers are received, the currently playing segment plays to completion and then the next segment is played continuously
Trigger Initiate	Front panel only	If "Trigger Source" on page 3670 is set to <code>KEY</code> , initiates an immediate trigger event

Trigger Source

Determines how the source receives the trigger that starts the waveform playing. Grayed-out if ["Trigger Type" on page 3668](#) is free run, since free run triggers immediately with no trigger source required.

6 Input/Output

6.1 RF Source

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce] KEY BUS EXTerna11 EXTerna12 PXI</code> See "Option Details" on page 3671 <code>:SOURce:RADio:ARB:TRIGger[:SOURce]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG KEY</code>
Notes	For E7760B, the available selections are <code>KEY BUS</code>
Dependencies	Grayed-out if Trigger Type is Continuous, Free Run
Preset	<code>EXTerna12</code> For E7760B: <code>BUS</code>
Range	<code>Key Bus External11 External 2 PXI</code>

Option Details

Parameter	SCPI	Notes
Key	<code>KEY</code>	The waveform is triggered when you press the front panel Trigger key
Bus	<code>BUS</code>	Enables triggering over GPIB, LAN, or USB using: <code>:SOURce:RADio:ARB:TRIGger:INITiate</code>
External 1	<code>EXTerna11</code>	Enables triggering a waveform by an externally-applied signal
External 2	<code>EXTerna12</code>	Enables triggering a waveform by an externally-applied signal Note: in EXM, trigger 2 is a bi-directional trigger port, so when trigger 2 has been configured as OUTPUT type, selecting External 2 as the input trigger for the current step generates an error Note 2: in VXT model M9420A, triggers on an externally connected trigger source marked Trigger 1 on the front panel
PXI	<code>PXI</code>	Enables triggering a waveform by a PXI backplane Line applied signal


Bus Trigger Command (Remote Command Only)

Used to initiate an immediate trigger event if ["Trigger Source" on page 3670](#) is set to `BUS`.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:INITiate</code>
Example	<code>:SOUR:RAD:ARB:TRIG:INIT</code>

Sync to Trigger Source

There is a time interval (system processing time) between the trigger event and the beginning of playing waveform. Turn on this control to compensate the system latency at the cost of cutting off the beginning of the ARB. The figure below shows the turn-on and turn-off behavior of the control.

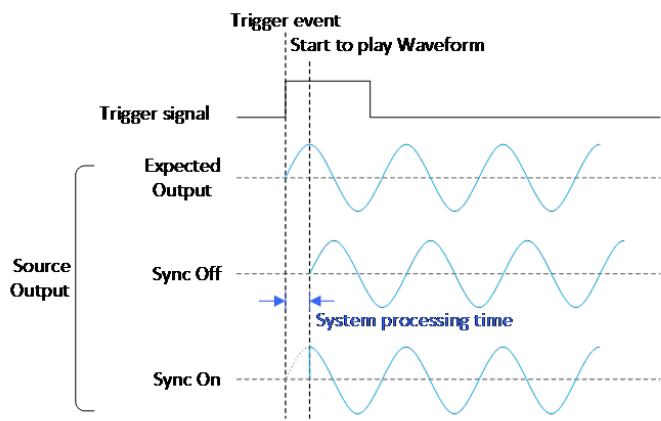

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:SYNC[:STATe] ON OFF 1 0</code> <code>:SOURce:RADio:ARB:TRIGger:SYNC[:STATe]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:SYNC ON</code> <code>:SOUR:RAD:ARB:TRIG:SYNC?</code>
Notes	Compensates for the instrument internal latency. The negative trigger delay compensates the external latency (that is, heads and cables). See "External Trigger Delay" on page 3672 and "PXI Trigger Delay" on page 3675 The first PerARB trigger is cut off if Sync to Trigger Source is ON
Dependencies	Only available when "Trigger Source" on page 3670 is EXTErnal1 , EXTErnal2 , or PXI
Preset	OFF
Range	ON OFF

External Trigger Delay

Lets you toggle the state and value of external trigger delay. The value you enter sets a delay time between when an external trigger is received and when it is applied to the waveform. Only active if ["Trigger Source" on page 3670](#) is **EXTErnal1** or **EXTErnal2**.

Negative trigger delay is only supported by VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E (see ["More Information" on page 3673](#)).

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DElay <time></code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DElay?</code>
----------------	--

6 Input/Output

6.1 RF Source


Example	:SOUR:RAD:ARB:TRIG:EXT:DEL 100ns :SOUR:RAD:ARB:TRIG:EXT:DEL?		
Notes	External trigger delay time set by users will be rounded to the nearest integer multiple of the resolution		
Dependencies	Unavailable and grayed-out when Trigger Source is not set to EXternal1 or EXternal2 Not available in E7760B		
Preset	1 ms		
Min	VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E: -10 s All others: 0 s		
Max	Instrument/Condition	Value	Derivation
	VXT models M9410A/11A/15A/16A	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	M9410E/11E/15E/16E	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	Continuous – Trigger + Run	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	Other trigger conditions	17.17986918 s	$4\text{ ns} * (2^{32}-1)$
	All others	8.589934588 s	$4\text{ns} * (2^{31} - 1) = 8589934588\text{ ns}$

Auto Function

Remote Command	:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay:STATe OFF ON 0 1 :SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay:STATe?
Example	:SOUR:RAD:ARB:TRIG:EXT:DEL:STAT ON :SOUR:RAD:ARB:TRIG:EXT:DEL:STAT?
Preset	OFF

More Information

There is a time interval (system processing time) between the trigger event and the beginning of playing waveform. The figure below shows you the behavior. The negative trigger delay allows you to specify the beginning of a waveform.

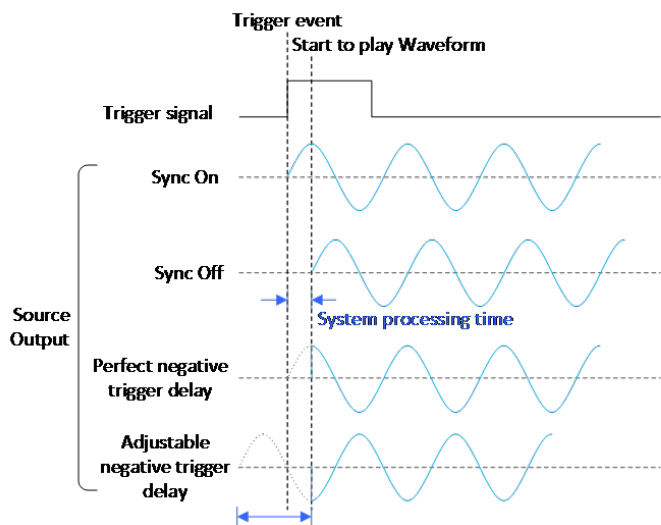

Note: the first PerArb trigger signal will be missed when the trigger delay is negative.

External Trigger Polarity

Sets the polarity of the external trigger. When **POSitive** is selected, trigger event happens on a rising edge of the external trigger in signal. When **NEGative** is selected, trigger event happens on a falling edge of the external trigger in signal.

Active only if "Trigger Source" on page 3670 is **EXTernal1** or **EXTernal2**.

Remote Command	:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:SLOPe POSitive NEGative :SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:SLOPe?
Example	:SOUR:RAD:ARB:TRIG:EXT:SLOP POS :SOUR:RAD:ARB:TRIG:EXT:SLOP?
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 3670 is not EXTernal1 or EXTernal2 Not available in E7760B
Preset	POSitive
Range	POSitive NEGative

Select PXI Line

Controls which **PXI_TRIG[0..7]** backplane line is used for the trigger source.
Only appears in modular analyzer products.

Remote Command	:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE <line> :SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE?
Example	:SOUR:RAD:ARB:TRIG:PXI:LINE 2
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 3670 is not set to PXI Not available in E7760B
Preset	0
State Saved	Saved in instrument state
Range	[0,7]

PXI Trigger Delay

Lets you toggle the state and value of PXI trigger delay. The value you enter sets a delay time between when an PXI trigger is received and when it is applied to the waveform.

Only active if "Trigger Source" on page 3670 is **PXI**.

Remote Command	:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay <time> :SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay?																				
Example	:SOUR:RAD:ARB:TRIG:PXI:DEL 100ns :SOUR:RAD:ARB:TRIG:PXI:DEL?																				
Notes	PXI trigger delay time set by users will be rounded to the nearest integer multiple of the resolution																				
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 3670 is not PXI Not available in E7760B																				
Preset	1 ms																				
Min	VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E: -10 s																				
Max	<table><tr><th>Instrument/Condition</th><th>Value</th><th>Derivation</th></tr><tr><td>VXT models M9410A/11A/15A/16A</td><td>11.45324612 s</td><td>2.666667ns * (2^32-1)</td></tr><tr><td>M9410E/11E/15E/16E</td><td>11.45324612 s</td><td>2.666667ns * (2^32-1)</td></tr><tr><td>Continuous – Trigger + Run” trigger</td><td>11.45324612 s</td><td>2.666667ns * (2^32-1)</td></tr><tr><td>Other trigger conditions</td><td>17.17986918 s</td><td>4 ns *(2^32-1)</td></tr><tr><td>All Others</td><td>8.589934588 s</td><td>4ns * (2^31 – 1)</td></tr></table>			Instrument/Condition	Value	Derivation	VXT models M9410A/11A/15A/16A	11.45324612 s	2.666667ns * (2^32-1)	M9410E/11E/15E/16E	11.45324612 s	2.666667ns * (2^32-1)	Continuous – Trigger + Run” trigger	11.45324612 s	2.666667ns * (2^32-1)	Other trigger conditions	17.17986918 s	4 ns *(2^32-1)	All Others	8.589934588 s	4ns * (2^31 – 1)
Instrument/Condition	Value	Derivation																			
VXT models M9410A/11A/15A/16A	11.45324612 s	2.666667ns * (2^32-1)																			
M9410E/11E/15E/16E	11.45324612 s	2.666667ns * (2^32-1)																			
Continuous – Trigger + Run” trigger	11.45324612 s	2.666667ns * (2^32-1)																			
Other trigger conditions	17.17986918 s	4 ns *(2^32-1)																			
All Others	8.589934588 s	4ns * (2^31 – 1)																			

Auto Function

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay:STATe OFF ON 0 1</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay:STATe?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:DEL:STAT ON</code> <code>:SOUR:RAD:ARB:TRIG:PXI:DEL:STAT?</code>
Preset	OFF

PXI Trigger Polarity

Sets the polarity of the PXI trigger:

- When **POSitive** is selected, trigger event happens on a rising edge of the PXI trigger in signal
- When **NEGative** is selected, trigger event happens on a falling edge of the PXI trigger in signal

Active only if "Trigger Source" on page 3670 is **PXI**.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe POSitive NEGative</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:SLOP POS</code> <code>:SOUR:RAD:ARB:TRIG:PXI:SLOP?</code>
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 3670 is PXI Not available in E7760B
Preset	POSitive
Range	POSitive NEGative

I/Q Adjustments

Enables or disables the I/Q adjustments.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:[STATe] OFF ON 0 1</code> <code>:SOURce:RADio:ARB:IQADjustment:[STATe]?</code>
Example	<code>:SOUR:RAD:ARB:IQAD ON</code> <code>:SOUR:RAD:ARB:IQAD?</code>
Dependencies	Not available in E7760B
Preset	OFF

I/Q Gain

Lets you adjust the ratio of I to Q while preserving the composite, vector magnitude. Adding Gain (+x dB) to the signal increases the I component and decreases the Q component proportionally. Reducing Gain (-x dB) decreases the I component and increases the Q component proportionally.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:GAIN <value><unit></code> <code>:SOURce:RADio:ARB:IQADjustment:GAIN?</code>
Example	<code>:SOUR:RAD:ARB:IQAD:GAIN 0.5</code> <code>:SOUR:RAD:ARB:IQAD:GAIN?</code>
Notes	Effective only if the I/Q adjustment function is ON
Dependencies	Unavailable and grayed-out when the ARB state is OFF Not available in E7760B
Preset	+0.00000000E+000
Min	-1 dB
Max	1 dB

I/Q Delay

Lets you change the absolute phase of both I and Q with respect to triggers and markers. A positive value delays I and Q. This value affects both the external I/Q out signals and the baseband signal modulated on the RF output. This adjustment does not affect external I/Q inputs.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:DElay <value><unit></code> <code>:SOURce:RADio:ARB:IQADjustment:DElay?</code>		
Example	<code>:SOUR:RAD:ARB:IQAD:DEL 10ps</code> <code>:SOUR:RAD:ARB:IQAD:DEL?</code>		
Notes	User-set IQ delay time values are rounded to the nearest integer multiple of the resolution		
Dependencies	Unavailable and grayed-out when the ARB state is off Not available in E7760B		
Preset	+0.00000000E+000		
Min/Max	Instrument Type	Min	Max
	M9410A/11A/15A/16A	-80ns	80ns
	All Others	-250ns	250ns

RMS

Lets you directly specify current RMS value used to playback currently selected waveform.

For EXM, note that an incorrect RMS value may cause inaccurate power output that is sensitive to RMS value.

This setting is also updated by RMS in waveform header or updated when invoking RMS calculation operation.

This setting can be saved to the header of currently selected waveform by ["Save Header" on page 3698](#).

Remote Command	<code>:SOURce:RADio:ARB:RMS <float></code> <code>:SOURce:RADio:ARB:RMS?</code>
Example	<code>:SOUR:RAD:ARB:HEAD:RMS 0.7</code> <code>:SOUR:RAD:ARB:HEAD:RMS?</code>
Notes	The valid range for this setting is 0 to 1.414 (linear). Values outside the range are clipped to the closest boundary This value does not affect Source List Sequencer, which always uses the RMS value included in each ARB header. If this setting is to take effect in List Sequencer, use "Save Header" on page 3698 to save the current RMS value to the header, then play the ARB in Source List Sequencer
Dependencies	When a new waveform is selected for playback this setting is updated by the RMS value included in the associated waveform header file. If the selected waveform has no associated header file or the header file does not include the RMS value then the instrument will try to calculate the value automatically based on the RMS Calculation Mode setting Pressing Calculate also updates this setting
Preset	0
Range	0 ~ 1.414

RMS Calculation Mode

Lets you specify the mode to calculate the current RMS.

Remote Command	<code>:SOURce:RADio:ARB:RMS:CALCulation:MODE AUTO M1 M2 M3 M4</code> See "Option Details" on page 3679 <code>:SOURce:RADio:ARB:RMS:CALCulation:MODE?</code>
Example	<code>:SOUR:RAD:ARB:RMS:CALC:MODE AUTO</code>
Notes	If no waveform is selected, or selected waveform is waveform sequence, the key is grayed-out
Preset	AUTO
Range	AUTO M1 M2 M3 M4

Option Details

Parameter	SCPI	Notes
Auto	AUTO	In Auto, RMS is calculated based on the whole sample range of the currently selected waveform
Marker 1	M1	Marker 1 designates the sample range for RMS calculation
Marker 2	M2	Marker 2 designates the sample range for RMS calculation
Marker 3	M3	Marker 3 designates the sample range for RMS calculation
Marker 4	M4	Marker 4 designates the sample range for RMS calculation

Calculate

Lets you calculate current RMS based on mode selected. Updates the setting in the ["RMS" on page 3678](#) control.

Remote Command	:SOURce:RADio:ARB:RMS:CALCulate
Example	:SOUR:RAD:ARB:RMS:CALC
Notes	<p>If no waveform is selected, invoking this operation generates error “-221 Setting conflict; No waveform is selected for RMS operation”</p> <p>Grayed-out if no waveform is selected, or selected waveform is waveform sequence</p> <p>If selected waveform does not contain marker data, but "RMS Calculation Mode" on page 3678 is set to marker, invoking a calculation operation generates error “-221 Setting conflict; There is no marker for currently selected waveform, auto RMS calculation mode is used instead”, and "RMS Calculation Mode" on page 3678 is coupled to Auto mode automatically</p> <p>RMS calculation is not suitable for waveform sequence. If selected waveform is waveform sequence file, invoking this operation generates error “-221 Setting conflict; RMS calculation does not apply to waveform sequence”</p> <p>You can still edit current RMS as play parameter, and save current RMS to waveform sequence header for later use</p>

Use Header RMS

Lets you quickly set RMS to value in ARB header. Updates the setting in the ["RMS" on page 3678](#) control.

Notes	<p>Grayed-out if no waveform is selected</p> <p>If no waveform is selected, invoking this operation generates error “-221 Setting conflict; No waveform is selected for RMS operation”</p>
-------	--

Real-Time 5G NR Compensation

Phase compensation is a new concept introduced into 5G NR baseband signal generation in TS38.211 as below, to address a typical 5G scenario that Tx and Rx frequencies may not be the same. In that case, without properly compensating the phase, receiver would not be able to correctly demodulate the received signal.

Modulation and up-conversion to the carrier frequency f_0 of the complex-valued OFDM baseband signal for antenna port p , subcarrier spacing configuration μ , and OFDM symbol l in a subframe assumed to start at $t = 0$ is given by the following equation for all channels and signals except PRACH:

$$Re \left\{ s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t - t_{start,l}^\mu - N_{CP,l}^\mu T_C)} \right\}$$

$$Re \left\{ s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t - t_{start,l}^\mu - N_{CP,l}^\mu T_C)} \right\}$$

From the 3GPP specification equation above, it can be observed that phase compensation is performed for a specific transmission frequency f_0 . So that means, even if a same signal configuration needs to be transmitted at multiple frequencies, we'll have to generate a different waveform for each frequency point. As a result, the number of test waveforms will increase significantly along with the frequency number. This would be a big challenge for test engineers, considering the complexity of 5G NR signal configurations - they have to maintain a large waveform library and identify each waveform carefully with its "frequency tag".

Real-Time 5G NR Phase Compensation allows you to play the same 5G NR waveform while performing phase compensation along with transmission frequency change automatically. This control allows you to turn on or off the real-time phase compensation for 5G NR waveform.

Remote Command	<code>:SOURce:RADio:ARB:NR5G:PHASe[:STATe] ON OFF 1 0</code> <code>:SOURce:RADio:ARB:NR5G:PHASe[:STATe]?</code>
Example	<code>:SOUR:RAD:ARB:NR5G:PHAS ON</code> <code>:SOUR:RAD:ARB:NR5G:PHAS?</code>
Dependencies	Only appears when Option RPC is present If the waveform is not for 5G NR, there may be error message and the output signal may be incorrect To ensure that you do <i>not</i> compensate for phase twice, once at waveform generation and again during playback, turn off this control if you had turned on phase compensation while generating the waveform
Preset	OFF
Range	ON OFF

SCS

Sets the SCS for real-time 5G NR phase compensation.

Remote Command	:SOURce:RADio:ARB:NR5G:PHASe:SCS SCS15K SCS30K SCS60K SCS60KECP SCS120K SCS240K SCS480K :SOURce:RADio:ARB:NR5G:PHASe:SCS?		
Example	:SOUR:RAD:ARB:NR5G:PHAS:SCS SCS15K :SOUR:RAD:ARB:NR5G:PHAS:SCS?		
Preset	SCS30K		
Range	μ	CP	Value
	0		15 kHz
	1		30 kHz
	2	Normal	60 kHz
		Extended	60 kHz
	3		120 kHz
	4		240 kHz
	5		480 kHz

Filter

Sets the state of Filter usage after real-time 5G NR phase compensation.

Remote Command	:SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe] ON OFF 1 0 :SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe]?		
Example	:SOUR:RAD:ARB:NR5G:PHAS:FILT ON :SOUR:RAD:ARB:NR5G:PHAS:FILT?		
Preset	OFF		
Range	ON OFF		

Filter Bandwidth

Sets the Filter Bandwidth if Filter is used.

By searching <FilterBandwidth> node in the *.scp file, you can get the correct filter bandwidth value for phase compensation.

Remote	:SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth <freq>
--------	--

Command	<code>:SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth?</code>
Example	<code>:SOUR:RAD:ARB:NR5G:PHAS:FILT:BAND 99MHz</code> <code>:SOUR:RAD:ARB:NR5G:PHAS:FILT:BAND?</code>
Preset	100 MHz
Min	10 Hz
Max	1200 MHz

Select Waveform

Lets you select a waveform segment or sequence to be played by the ARB player. Presents you with a list of waveform segments files and waveform sequence files. The list of waveform segment files and waveform sequence files contains the names of all the waveform segments and waveform sequence files currently loaded into ARB playback memory.

Waveform sequences are not available in E7760B.

Waveforms formatted as `*.mat`, `*.csv` and `*.txt` are supported by models with a built-in source, such as VXT and EXM.

NOTE

To load a file from the hard drive into ARB memory, go to the **Recall, Waveform** dialog

NOTE

Selecting a waveform file does not result in automatic adjustments to burst timing; that adjustment occurs only when a waveform is loaded to ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:WAVEform <string></code> <code>:SOURce:RADio:ARB:WAVEform?</code>
Example	<code>:SOUR:RAD:ARB:WAV "test_waveform.bin"</code>
Notes	<p>If the intended waveform is not in the memory yet, then issuing this command invokes ARB loading operation first, which involves a delay of unpredictable length, so this command should be followed by <code>*OPC?</code>, which holds off subsequent commands until the loading operation is complete</p> <p><code><string></code> - specifies the name of the waveform segment or waveform sequence to be played by the ARB</p> <p>Sequence Analyzer Mode only:</p> <ul style="list-style-type: none"> - If Include Source is Yes, and you attempt to play a waveform sequence but not all the required waveform segments are in the ARB playback memory, the application rejects the loading operation and an error is generated - If Include Source is No, and you attempt to play a waveform sequence but not all the required waveform segments are contained in the ARB playback memory, the application attempts to load the required segments from either the default directory or the current directory. If the ARB memory

does not have enough space for all the waveform segments to be loaded, an error is generated and none of the waveform segments is loaded

If ARB is **ON**, and you attempt to play a waveform sequence but not all the waveform segments within the sequence could be found to be loaded into ARB memory, an error is generated. The selected waveform keeps the previous value and ARB state remains On

If you specify a waveform segment via SCPI but the waveform segment is not present within ARB playback memory, and cannot be found for auto loading within the current directory or the default directory, an error is generated and the file selection remains unchanged

If you select a waveform for playback and the waveform requires a license that is not installed on the instrument, an error is generated

If ARB is **ON** and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished

Segments in ARB Memory

Shows you which files are loaded into the ARB memory and lets you select a file for playback.

Recall Waveform

This is the same as **Recall From File** in the **Recall, Waveform** dialog.

Delete Segment From ARB Mem

This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

Delete All From ARB Memory

This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

Query ARB Memory File List (Remote Query Only)

Queries the test set for the list of waveform segments in the ARB memory.

NOTE

Returns a string for waveform segment names in ARB memory. If you require a string list of waveform segments in the ARB memory, use **"Query ARB Memory Full File List (Remote Query Only)"** on page 3684

Remote Command	<code>:SOURce:RADio:ARB:CATalog?</code>						
Example	<code>:SOUR:RAD:ARB:CAT?</code>						
Notes	The return data is in the following format:						
	<table> <tr> <td><code><integer></code></td><td>Memory used, in kB</td></tr> <tr> <td><code><integer></code></td><td>Memory free, in kB</td></tr> <tr> <td><code><string> ...</code></td><td>Comma-separated list of waveform segments within ARB memory</td></tr> </table>	<code><integer></code>	Memory used, in kB	<code><integer></code>	Memory free, in kB	<code><string> ...</code>	Comma-separated list of waveform segments within ARB memory
<code><integer></code>	Memory used, in kB						
<code><integer></code>	Memory free, in kB						
<code><string> ...</code>	Comma-separated list of waveform segments within ARB memory						

Query ARB Memory Full File List (Remote Query Only)

Queries the test set for the string list of waveform segments in the ARB memory. Returns a string list for waveform segment names in the ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:FCATalog?</code>								
Example	<code>:SOUR:RAD:ARB:FCAT?</code>								
Notes	The return data is in the following format:								
	<table> <tr> <td><code><integer></code></td><td>Memory used, in kB</td></tr> <tr> <td><code><integer></code></td><td>Memory free, in kB</td></tr> <tr> <td><code><integer></code></td><td>File count in ARB memory</td></tr> <tr> <td><code><string>,<string>, ...<string></code></td><td>Comma-separated string list of waveform segments within ARB memory</td></tr> </table>	<code><integer></code>	Memory used, in kB	<code><integer></code>	Memory free, in kB	<code><integer></code>	File count in ARB memory	<code><string>,<string>, ...<string></code>	Comma-separated string list of waveform segments within ARB memory
<code><integer></code>	Memory used, in kB								
<code><integer></code>	Memory free, in kB								
<code><integer></code>	File count in ARB memory								
<code><string>,<string>, ...<string></code>	Comma-separated string list of waveform segments within ARB memory								

EXT returns: 27499,2069653,3,"c2k.wfm","gsm.wfm","wcdma.wfm"

Waveform Sequences

Not available in E7760B.

Lets you build new sequences or edit existing sequences. The Sequences table displayed in this dialog shows you the sequences in the current directory. You may build a new sequence or select one of the sequences in the table and tap **Edit Selected Sequence**. The default current directory is `C:\NVARB`. Tapping any element of this path lets you select an alternate route. Tapping the **Computer** arrow lets you select a different drive. Tapping the **Back** arrow navigates to the previously selected directory.

Build New Sequence

Lets you build a new sequence of waveform segments. When you build a sequence you are building the "current sequence", and the next time you press "Build New

Sequence" the sequence you have been building will still be there, allowing you to add or remove segments from it.

Segment

Shows the segment number assigned to this row.

Waveform

Shows the file name for the waveform inserted into this row. Use "Insert Waveform" on page 3686 to insert a waveform.

Repetitions

Lets you specify the number of times the currently selected waveform is played within the sequence.

Preset	1
Min	1
Max	65535

Marker 1 – Marker 4

Lets you enable or disable Marker 1, 2, 3, or 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Preset	Enabled
Range	Enabled Disabled

Sync Seq File

Enables or disables the saving of secondary modules' waveform sequence files based on the current primary module segment's waveform settings.

Remote Command	:SOURce:RADio:ARB:SEquence:SYNC ON OFF :SOURce:RADio:ARB:SEquence:SYNC?
Example	:SOUR:RAD:ARB:SEQ:SYNC OFF
Notes	Available only on primary modules If this setting is ON, when Sync Config is not NONE, the responding secondary module's waveform

	sequence file will be saved accordingly when save sequence... on the primary module, and the primary sequence file name should end with xxx0.seq , so the secondary module will be named according to the "Naming Rule" on page 3686 Waveform names in sequence files should also follow the Naming Rule
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

Naming Rule

If Sync Config is not 2x2 +2x2 or 1x1+1x1, the waveform files to be used should follow this naming convention: the waveform file for the primary source should end in 0; the waveform files for the controlled sources should end in 1, 2, or 3 (reflecting the order of the TRXs). For example, for DL 11AC80 3X3 MIMO, sequence file names for TRX1,TRX2 and TRX3 should be xxx0.xx, xxx1.xx and xxx2.xx

If Sync Config is 2x2+2x2, the waveform files to be used should follow this naming convention: the waveform file for the primary source of first 2x2 should end in 0_0; the waveform files for the secondary source of first 2x2 should end in 0_1; the waveform files for the primary source of second 2x2 should end in 1_0; the waveform files for the secondary source of second 2x2 should end in 1_1. For example, for DL 11AC80 2x2 + 2x2 MIMO, waveform file names for TRX1,TRX2,TRX3 and TRX4 should be xxx0_0.xx, xxx0_1.xx, xxx1_0.xx and xxx1_1.xx

If Sync Config is 1x1+1x1, the waveform files to be used should follow this naming convention: the waveform file for the first source should end in 0_0; the waveform files for the second source should end in 1_0. For example, for DL 11AC80 1x1 + 1x1 MIMO, waveform file names for TRX1 and TRX2 should be xxx0_0.xx and xxx1_0.xx

Insert Waveform

Lets you select a waveform segment to be added to the sequence.

NOTE

To load a file from the hard drive into ARB memory, go to the **Recall, Waveform** dialog

Segments in ARB Memory

Shows you which files are loaded into the ARB memory and lets you select a file for inclusion in the sequence.

Delete Segment From ARB Mem

This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

Delete All From ARB Memory

This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

Delete Segment

Lets you delete the selected segment from the waveform sequence.

Save Sequence

Lets you save the newly built Waveform Sequence to the disk drive.

Sequence files have the extension **.seq**. The default filename is **WfmSequence_0000.seq**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. Use “File Name” and “File Type” to specify your waveform sequence. The newly build sequence will be stored in the current directory.

Build New Sequence (Remote Command Only)

This is the SCPI equivalent of the waveform sequence creation features described in **"Build New Sequence" on page 3684**.

Writes a waveform sequence file to the hard disk. You must specify the waveform sequence file path and filename which will be saved on the hard disk, and the waveform segment file path and name which will be nested into the waveform sequence file. You can utilize mass storage unit specifier (MSUS) “NVWFM” or use a real full path representation. See the example below. MSUS “NVWFM” is mapped to D:\NVARB directory on test set hard disk.

Any number of segments, up to a segment count limit of 64, can be used to create a sequence. Repeated segments are included in the count limit.

Each waveform segment name string length upper limit is 128 chars. Do not attempt to insert a waveform with a name string that exceeds 128 chars.

The internal source does not support nesting one waveform sequence file into another waveform sequence file.

Remote	<code>:SOURce:RADio:ARB:SEquence[:MWAVeform] <filename>, <waveform1>, <reps>, NONE</code>
--------	---

Command	M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M1M2M4 M1M3M4 M2M3M4 M1M2M3M4 ALL, \{<waveform2>, <reps>, NONE M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M1M2M4 M1M3M4 M2M3M4 M1M2M3M4 ALL,\} ...
---------	---

For additional description of each item, see ["For Setup SCPI" on page 3688](#) below
:SOURce:RADio:ARB:SEQuence[:MWAVEform]? <filename>

For additional description of each item, see ["For Query SCPI" on page 3689](#) below

Example	For setup: :SOUR:RAD:ARB:SEQ "NVWFM:testSeq1.seq", "NVWFM:wfmSegment1.wfm",10, M2M3M4, "NVWFM:wfmSegment2.wfm", 20, M1M3
---------	---

Or

:SOUR:RAD:ARB:SEQ "D:\NVARB\testSeq1.seq", "D:\NVARB\wfmSegment1.wfm",10, M2M3M4, "D:\NVARB\wfmSegment2.wfm", 20, M1M3

For query, must specify which waveform sequence file to query

:SOUR:RAD:ARB:SEQ? "NVWFM:testSeq1.seq"

Or

:SOUR:RAD:ARB:SEQ? "D:\NVARB\testSeq1.seq"

For Setup SCPI

For the Setup SCPI command, the parameters are:

<filename> - String Type

This variable specifies the path and name for the waveform sequence file. The path supports MSUS (NVWFM) or a real full path representation. See example.

<waveform1> - String Type

This variable specifies the path and name of the first existing waveform segment. The path supports MSUS (NVWFM) or a real full path representation. See example.

The segment file must reside within ARB playback memory before it can be played by the ARB player.

<reps> - Integer Type

This variable specifies the number of times a segment or sequence plays before moving on to the next segment or sequence.

<marker> - Enum Type

NONE – This choice disables all four markers for the waveform. Disabling markers means that the waveform sequence ignores the segments or sequence marker settings.

M1, M2, M3, M4 – these choices, either individually or a combination of them, enable the markers for the waveform segment or sequence. Markers not specified are ignored for that segment or sequence.

ALL – This choice enables all four markers in the waveform segment or sequence.

<waveform2> – String type.

This variable specifies the name of a second existing waveform segment. The path supports MSUS (NVWFM) and real full path representation both. See example.

The segment file must reside within ARB playback memory before it can be played by the ARB player.

<reps> same as above, for the 2nd waveform segment.

<marker> same as above, for the 2nd waveform segment.

You can insert several waveform segments into a waveform sequence file. Just repeat inserting waveform segments as described above.

Error Checks for Setup SCPI command:

If you do not specify a filename, or you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform sequence file path, an error is generated. If the specified waveform sequence file name suffix is not “.seq”, error is generated.

If you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform segment file path, an error is generated.

If the first specified waveform file cannot be found, an error is generated.

If you nest one waveform sequence file into another waveform sequence file, an error is generated.

If the specified repetition value is larger than 65535 or smaller than 1, an error is generated.

If the specified marker type is unrecognized, an error is generated.

For Query SCPI

For the Query the parameters are:

<filename> – String type.

This variable specifies the path and name of the waveform sequence file being queried. The path supports MSUS (NVWFM) or a real full path representation. See example.

The return value is a **<string>**, which includes each waveform segment file name, repetitions, and marker type. For example:

```
>:SOUR:RAD:ARB:SEQ? "NVWFM:testSeq1.seq",  
<"wfmSegment1. wfm, 10, ALL, wfmSegment2.wfm, 20, M1M3",
```

Error Checks for Query SCPI command:

If you do not specify a filename, an error is generated.

If the waveform sequence file name is empty, an error is generated. If the specified waveform sequence file cannot be found, an error is generated.

Edit Selected Sequence

This dialog lets you edit an existing sequence of waveform segments. A table of the segments in the currently selected sequence displays, allowing you to insert waveform segments or edit the characteristics of each segment.

Segment

This field in the table shows the segment number assigned to this row.

Waveform

This field in the table shows the file name for the waveform inserted into this row. Use **"Insert Waveform" on page 3686** to insert a waveform.

Repetitions

Lets you specify the number of times the currently selected waveform is played within the sequence.

Preset	1
Min	1

Marker 1 – Marker 4

Lets you enable or disable Marker 1, 2, 3, or 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Notes	No remote command, front panel only
Preset	Enabled
Range	Enabled Disabled

Sync Seq File

Change this setting to enable/disable the function of saving secondary modules' waveform sequence files based on the current primary segment's waveform settings.

Remote Command	See "Sync Seq File" on page 3685
Notes	<p>Available only on primary modules</p> <p>If this setting is ON, when Sync Config is not NONE, the responding secondary module's waveform sequence file will be saved accordingly when save sequence... on the primary module, and the primary sequence file name should end with xxx0.seq, so the secondary module will be named according to the "Naming Rule" on page 3691</p> <p>Waveform names in sequence files should also follow the Naming Rule</p>
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

Naming Rule

If Sync Config is not 2x2 + 2x2 or 1x1 + 1x1, the waveform files to be used should follow this naming convention: the waveform file for the primary source should end in 0; the waveform files for the controlled sources should end in 1, 2, or 3 (reflecting the order of the TRXs). For example, for DL 11AC80 3X3 MIMO, sequence file names for TRX1, TRX2 and TRX3 should be xxx0.xx, xxx1.xx and xxx2.xx

If Sync Config is 2x2 + 2x2, the waveform files to be used should follow this naming convention: the waveform file for the primary source of first 2x2 should end in 0_0; the waveform files for the secondary source of first 2x2 should end in 0_1; the waveform files for the primary source of second 2x2 should end in 1_0; the waveform files for the secondary source of second 2x2 should end in 1_1. For example, for DL 11AC80 2x2 + 2x2 MIMO, waveform file names for TRX1, TRX2, TRX3 and TRX4 should be xxx0_0.xx, xxx0_1.xx, xxx1_0.xx and xxx1_1.xx

If Sync Config is 1x1 + 1x1, the waveform files to be used should follow this naming convention: the waveform file for the first source should end in 0_0; the waveform files for the second source should end in 1_0. For example, for DL 11AC80 1x1 + 1x1 MIMO, waveform file names for TRX1 and TRX2 should be xxx0_0.xx and xxx1_0.xx

Insert Waveform

This dialog p select a waveform segment to be added to the sequence.

NOTE

To load a file from the hard drive into ARB memory, go to the Recall, Waveform dialog

Segments in ARB Memory

This table shows you which files are loaded into the ARB memory and lets you select a file for inclusion in the sequence.

Delete Segment From ARB Mem

Deletes a segment from ARB memory. This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

Delete All From ARB Memory

Removes all segments from ARB memory. This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

Delete Segment

Lets you delete the current segment from the waveform sequence.

Notes

No remote command, front panel only

Waveform Utilities

Not available in E7760B.

Only appears if there is at least one Multi-pack license installed in the instrument.

On modular instruments, such as EXM , multi-pack license operations are only allowed on the default module, that is, “TRX1” module for EXM.

For EXM, if access multi-pack license sub-menu from modules other than “TRX1”, an advisory message like “Please go to “TRX1” to operate multi-pack license” will display.

Add Waveform

Use this dialog to select and add waveforms. Pressing **OK** in this dialog adds the currently highlighted waveform to the next available slot, and returns you to the **"Waveform Utilities" on page 3692** dialog.

6 Input/Output

6.1 RF Source

Remote Command	<code>:SYSTem:LKEY:WAVeform:ADD <string></code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:ADD <string></code>
Example	<code>:SYST:LKEY:WAV:ADD "mywaveform.wfm"</code> or <code>:SYST:LIC:WAV:ADD "mywaveform.wfm"</code>
Notes	<p>The second form, <code>:SYSTem:LICense[:FPACK]:WAVeform:ADD</code>, is provided for consistency with Keysight signal sources. You can use either form</p> <p>Since adding a waveform segment to a Multi-Pack license causes the license slot to enter the trial period of only 48 hours, pressing this key causes a confirmation dialog to be displayed to ensure you do want to add the waveform segment to the Multi-Pack</p> <p>If you attempt to license a waveform that is already licensed using another slot an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>
Dependencies	Only available if the currently selected file is a secure waveform requiring a license, and there is at least one slot available within at least one multi-pack license. Unavailable if the waveform highlighted is a secure waveform, but is already licensed

Replace Selected Waveform

Lets you replace the waveform in the currently selected slot with the waveform currently selected in the Multi-Pack License Waveform Add view. Pressing **OK** in this dialog replaces the waveform in the currently selected slot with that currently highlighted, and returns you to the ["Waveform Utilities" on page 3692](#) dialog.

Remote Command	<code>:SYSTem:LKEY:WAVeform:REPLace <int>, <string></code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:REPLace <int>, <string></code>
Example	<code>:SYST:LKEY:WAV:REPL 1, "myotherwaveform.wfm"</code> or <code>:SYST:LIC:WAV:REPL 1, "myotherwaveform.wfm"</code>
Notes	<p>The second command form, <code>:SYSTem:LICense[:FPACK]:WAVeform:REPLace</code> is provided for consistency with Keysight signal sources. You can use either form</p> <p>If you attempt to license a waveform that is already licensed using another slot an error is generated</p> <p>Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>

Clear Waveform from Slot

Lets you clear the waveform from the selected slot.

Remote Command	<code>:SYSTem:LKEY:WAVeform:CLEar <int></code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:CLEar <int></code>
Example	<code>:SYST:LKEY:WAV:CLE 1</code> or <code>:SYST:LIC:WAV:CLE 1</code>
Notes	<p>The second form: <code>:SYSTem:LICense[:FPACK]:WAVeform:CLEar</code> is provided for consistency with the style of Keysight signal sources. You can use either form</p> <p>Waveform slot number <code><int></code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>
Dependencies	Only available if the currently selected slot is in the trial state

Lock Waveform in Slot

If the selected slot is in the trial state or the lock required state, the waveform that occupies the slot is locked and permanently licensed.

Remote Command	<code>:SYSTem:LKEY:WAVeform:LOCK <int></code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:LOCK <int></code>
Example	<code>:SYST:LKEY:WAV:LOCK 1</code> or <code>:SYST:LIC:WAV:LOCK 1</code>
Notes	<p>The command form <code>:SYSTem:LICense[:FPACK]:WAVeform:LOCK</code> is provided for consistency with Keysight signal sources. You can use either form</p> <p>Waveform slot number <code><int></code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>
Dependencies	Only available if the currently selected slot is in the trial state, or the lock required state

Slot Status Query (Remote Command Only)

Returns the status of the specified slot.

Remote Command	<code>:SYSTem:LKEY:WAVeform:STATus? <int></code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:STATus? <int></code>
Example	<code>:SYST:LKEY:WAV:STAT? 1</code> <"Locked" or <code>:SYST:LIC:WAV:STAT? 1</code> <"Locked"
Notes	The command form <code>:SYSTem:LICense[:FPACK]:WAVeform:STATus</code> is provided for consistency with Keysight signal sources. You can use either form Waveform slot number <code><int></code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned
Range	"Locked" "Available" "Trail" "LockRequired" "Nonexistent"

Slots Free Query (Remote Query Only)

Returns the number of license slots free.

Remote Command	<code>:SYSTem:LKEY:WAVeform:FREE?</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:FREE?</code>
Example	<code>:SYST:LKEY:WAV:FREE?</code> or <code>:SYST:LIC:WAV:FREE?</code>
Notes	The second form: <code>:SYSTem:LICense[:FPACK]:WAVeform:FREE</code> is provided for consistency with the style of Keysight signal sources. You can use either one

Slots Used Query (Remote Query Only)

Returns the number of license slots used.

Remote Command	<code>:SYSTem:LKEY:WAVeform:USED?</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:USED?</code>
----------------	---

Example	<code>:SYST:LKEY:WAV:USED?</code> or <code>:SYST:LIC:WAV:USED?</code>
Notes	The second form: SCPI <code>:SYSTem:LIcense[:FPACK]:WAVeform:USED</code> is provided for consistency with the style of Keysight signal sources. You can use either form

Slot Waveform Name Query (Remote Command Only)

Returns the waveform name of the specified slot.

Remote Command	<code>:SYSTem:LKEY:WAVeform:NAME? <int></code> or <code>:SYSTem:LIcense[:FPACK]:WAVeform:NAME? <int></code>
Example	<code>:SYST:LKEY:WAV:NAME? 1</code> <"CDMA2K_22.wfm" or <code>:SYST:LIC:WAV:NAME? 1</code> <"CDMA2K_22.wfm"
Notes	Waveform slot number <code><int></code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned If no waveform stored in the specified slot, then empty string is returned

Slot Waveform Unique ID Query (Remote Command Only)

Returns the waveform unique ID of the specified slot.

Remote Command	<code>:SYSTem:LKEY:WAVeform:UID? <int></code> or <code>:SYSTem:LIcense[:FPACK]:WAVeform:UID? <int></code>
Example	<code>:SYST:LKEY:WAV:UID? 2</code> <"1346752140" or <code>:SYST:LIC:WAV:UID? 2</code> <"1346752140"
Notes	Waveform slot number <code><int></code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned

Only Signal Studio waveform has a unique ID, which is a positive number. User-generated waveforms have no unique ID. If no waveform is stored in the specified slot, returns "0"

Locked Waveform Name List Query (Remote Query Only)

Returns the waveform name list of locked.

Remote Command	<code>:SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?</code>
Example	<code>:SOUR:RAD:ARB:MPL:NAME:LOCKed?</code> < "CDMA2K_27.wfm","GSM_MCS1.WFM","c2kWfm.wfm"

Locked Waveform Unique ID List Query (Remote Query Only)

Returns the waveform unique id list of locked.

Remote Command	<code>:SOURce:RADio:ARB:MPLicensed:UID:LOCKed?</code>
Example	<code>:SOUR:RAD:ARB:MPL:UID:LOCKed?</code> < "2996927136","3812603511","3710986266"
Notes	Each Signal Studio waveform has a unique id recorded in header. If the unique ids are same, that means they are the same waveform. For this reason, in addition to the locked waveform name list query , there is also a locked waveform unique id list query

Multi-Pack License multi-module control state (Remote Command Only)

When **ON**, multi-pack license operations (such as adding/locking/replacinwaveform etc.) from TRXs other than TRX1 are allowed. If **OFF**, only TRX1 is allowed to operate multi-pack license, while other TRXs are only able to show the related multi-pack license information.

Remote Command	<code>:SERVice[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATE] ON OFF 1 0</code> <code>:SERVice[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATE]?</code>
Example	<code>:SERV:SOUR:MCON:MPL OFF</code>
Notes	Only effective in modular-based OBTs, such as EXM
Preset	OFF
Range	ON OFF

Header Utilities

If there is currently a waveform selected for playback, this table shows you the header information for the file. You can clear the header information out or edit it and save it.

Dependencies	Only available if there is currently a waveform selected for playback. Grayed-out if no waveform is selected
--------------	--

Clear Header

Lets you clear the header information from the file header associated with the currently selected waveform.

Remote Command	<code>:SOURce:RADio:ARB:HEADer:CLEar</code>
Example	<code>:SOUR:RAD:ARB:HEAD:CLE</code>
Notes	Attempting to clear the header details via SCPI when no waveform was selected for playback generates an error

Save Header

Lets you save new file header information details to the file.

Remote Command	<code>:SOURce:RADio:ARB:HEADer:SAVE</code>
Example	<code>:SOUR:RAD:ARB:HEAD:SAVE</code>
Notes	Attempting to save the header details via SCPI when no waveform was selected for playback generates an error

Query Waveform Unique ID (Remote Query Only)

Each Signal Studio waveform contains a unique waveform ID, which recorded in the header. This command allows you to query the unique waveform ID from the header.

Remote Command	<code>:MMEMory:HEADer:ID? "<file name>"</code>
Example	<p>Query the waveform already loaded into the ARB memory:</p> <p><code>:MMEM:HEAD:ID? "test.wfm"</code></p> <p>Query the waveform on the hard disk by absolute path:</p> <p><code>:MMEM:HEAD:ID? "D:\NVARB\test.wfm"</code></p>

	Query the waveform on the hard disk by MSUS: :MMEM:HEAD:ID? "NVWFM:test.wfm"
Notes	The queried waveform file can be in ARB memory, or on hard disk. If want to query ARB in ARB memory, then give out the file name directly. If want to query ARB on the hard disk, then absolute file path or MSUS should be given along with the file name. The valid MSUS is NVWFM, which is mapped to D:\NVARB on the hard disk If the file cannot be found in ARB memory or on hard disk, an error is generated and value -1 is returned

Query Selected Waveform Header info (Remote Query Only)

Returns a listing of the current selected ARB header info. If no ARB selected, then empty string is returned.

Remote Command	:SOURce:RADio:ARB:HEADer:INformation?																																		
Example	:SOUR:RAD:ARB:HEAD:INF?																																		
Notes	<p>After each colon of field title string, related header info string is appended</p> <p>The field title string in "Range" part cannot change, for Sequence Studio needs to accurately match those string character to know which header info field it is</p> <p>Below are the abbreviation descriptions:</p> <table border="1"> <thead> <tr> <th>DESC</th><th>Description</th></tr> </thead> <tbody> <tr> <td>SR</td><td>Sample Rate</td></tr> <tr> <td>RTS</td><td>Run Time Scaling</td></tr> <tr> <td>RMS</td><td>Root Mean Square</td></tr> <tr> <td>M1P</td><td>Marker 1 Polarity</td></tr> <tr> <td>M2P</td><td>Marker 2 Polarity</td></tr> <tr> <td>M3P</td><td>Marker 3 Polarity</td></tr> <tr> <td>M4P</td><td>Marker 4 Polarity</td></tr> <tr> <td>ALCHR</td><td>ALC Hold Routing</td></tr> <tr> <td>RFBR</td><td>RF Blank Routing</td></tr> <tr> <td>FOFF</td><td>Frequency Offset</td></tr> <tr> <td>AWGNST</td><td>AWGN State</td></tr> <tr> <td>AWGNCN</td><td>AWGN C/N Ratio</td></tr> <tr> <td>AWGNCBW</td><td>AWGN Carrier Bandwidth</td></tr> <tr> <td>AWGNNBW</td><td>AWGN Noise Bandwidth</td></tr> <tr> <td>AWGNCRMS</td><td>AWGN Carrier RMS</td></tr> <tr> <td>ORP</td><td>DAC Over Range Protection</td></tr> </tbody> </table>	DESC	Description	SR	Sample Rate	RTS	Run Time Scaling	RMS	Root Mean Square	M1P	Marker 1 Polarity	M2P	Marker 2 Polarity	M3P	Marker 3 Polarity	M4P	Marker 4 Polarity	ALCHR	ALC Hold Routing	RFBR	RF Blank Routing	FOFF	Frequency Offset	AWGNST	AWGN State	AWGNCN	AWGN C/N Ratio	AWGNCBW	AWGN Carrier Bandwidth	AWGNNBW	AWGN Noise Bandwidth	AWGNCRMS	AWGN Carrier RMS	ORP	DAC Over Range Protection
DESC	Description																																		
SR	Sample Rate																																		
RTS	Run Time Scaling																																		
RMS	Root Mean Square																																		
M1P	Marker 1 Polarity																																		
M2P	Marker 2 Polarity																																		
M3P	Marker 3 Polarity																																		
M4P	Marker 4 Polarity																																		
ALCHR	ALC Hold Routing																																		
RFBR	RF Blank Routing																																		
FOFF	Frequency Offset																																		
AWGNST	AWGN State																																		
AWGNCN	AWGN C/N Ratio																																		
AWGNCBW	AWGN Carrier Bandwidth																																		
AWGNNBW	AWGN Noise Bandwidth																																		
AWGNCRMS	AWGN Carrier RMS																																		
ORP	DAC Over Range Protection																																		

	UID	Unique ID
	LICSTS	License Status
Range	"DESC:", "SR:", "RTS:", "RMS:", "M1P:", "M2P:", "M3P:", "M4P:", "ALCHR:", "RFBR:", "FOFF:", "AWGNST:", "AWGNCN:", "AWGNCBW:", "AWGNNBW:", "AWGNCRMS:", "ORP:", "UID:", "LICSTS"	

6.1.12 Trigger Initiate

Initiates an immediate trigger event if the trigger source (under ARB Setup) is set to **KEY**.

Dependencies	Grayed-out unless Trigger Source is set to KEY and an ARB waveform is configured
--------------	---

6.1.13 Source Sync

Accesses a menu for setting up Source Synchronization for multiple models.

Only appears in modular products such as VXT, and only when the instrument is configured for MIMO analysis.

6.1.13.1 Sync Config

Lets you config MIMO type for source.

Grayed-out when Primary and Secondary modules are in Sync State.

Remote Command	:SOURce:SYNC:CONFig NONE TWO THRee FOUR SIX EIGHt DONE DTWO DTHR DFOU See "Option Details" on page 3701 :SOURce:SYNC:CONFig?	
Example	:SOUR:SYNC:CONF TWO	
Dependencies	EXM	2x2 and 1x1+1x1 MIMO are supported when license E6640A-M22 is enabled
		2x2 and 3x3 MIMO are supported when license E6640A-M33 is enabled
		2x2, 3x3, 4x4 and 2x2+2x2 MIMO are supported when license E6640A-M44 is enabled
	VXT models M9410A/11A	No-Across chassis MIMO is supported when license M941xA-MMO is enabled Across chassis MIMO is supported when license M941xA-MTS is enabled

6 Input/Output

6.1 RF Source

	VXT models M9415A/16A	No-Across chassis MIMO is supported when license M941xA-MMO is enabled
Range	NONE TWO THRee FOUR SIX EIGHT DONE DTWO DTHR DFOU	

Option Details

Parameter	SCPI	Notes
None	NONE	Sets MIMO Config type as None
2x2	TWO	Sets 2x2 as MIMO Config Type. 2 models are configured to Sync
3x3	THRee	Sets 3x3 as MIMO Config Type. 3 models are configured to Sync
4x4	FOUR	Sets 4x4 as MIMO Config Type. 4 models are configured to Sync
6x6	SIX	Sets 6x6 as MIMO Config Type. 6 models are configured to Sync
8x8	EIGHT	Sets 8x8 as MIMO Config Type. 8 models are configured to Sync
1x1+1x1	DONE	Sets 1x1+1x1 as MIMO Config Type. 2 models are configured to Sync with different center frequency. Use Segment 2 Setup to config the second model
2x2+2x2	DTWO	Sets 2x2+2x2 as MIMO Config Type. 2 groups of 2x2 MIMO. First group consists of Primary and TRX1. Second group consists of TRX2 and TRX3. Segment 2 Setup allows you to config the second group
3x3+3x3	DTHR	Sets 3x3+3x3 as MIMO Config Type. 2 groups of 3x3 MIMO. First group consists of Primary, TRX1 and TRX2. Second group consists of TRX3, TRX4 and TRX5. Segment 2 Setup allows you to config the second group
4x4+4x4	DFOU	Sets 4x4+4x4 as MIMO Config Type. 2 groups of 4x4 MIMO. First group consists of Primary, TRX1, TRX2 and TRX3. Second group consists of TRX4, TRX5, TRX6 and TRX7. Segment 2 Setup allows you to config the second group

6.1.13.2 Sync Type

Grayed-out when models are in Sync State.

Remote Command	:SOURce:SYNC:TYPE PRIMary SECondary OFF For details of parameter options, see "Options" on page 3702 :SOURce:SYNC:TYPE?
Example	:SOUR:SYNC:TYPE PRIM
Preset	OFF
Range	PRIMary SECondary OFF

Options

Parameter	Notes
OFF	This model is not listed in the Secondary module List
SECondary	Use :SOURce:SYNC:CONNeCted:NAME? to obtain the Primary's name in Sync State
PRIMary	Sync Setup is only available for Primary

6.1.13.3 Sync Settings

Grayed-out when Primary and Secondary are in Sync State.

Dependencies	Grayed-out when Sync Type is set to OFF or Secondary
--------------	--

Secondary Module List

Lists the parameters of Secondary modules. The Selected checkbox in each row allows you to select the Secondary module when the Sync Type is set to Primary.

- When Sync Config is set to NxN, use this control to enable N-1 Secondary modules
- When Sync Config is set to NxN+NxN, use this control to enable 2N-1 Secondary modules

See "More Information" on page 3702

Remote Command	:SOURce:SYNC:REMOte:SECondary<integer> ON OFF 1 0 :SOURce:SYNC:REMOte:SEC<integer>?
Example	:SOUR:SYNC:REM:SEC1 ON :SOUR:SYNC:REM:SEC2 OFF
Notes	<integer> Secondary module number in Available Models
Preset	OFF

More Information

Parameter	SCPI Example	Notes
Available Secondary modules	:SOUR:SYNC:REM:SEC:List?	All the available Secondary models are listed
IP Address	:SOUR:SYNC:REM:SEC1:ADDR?	Refer to Remote Chassis to add the IP Address for remote chassis

6 Input/Output

6.1 RF Source

Parameter	SCPI Example	Notes
Slot Number	:SOUR:SYNC:REM:SEC2:SLOT?	“Local Host” indicates that the Primary and Secondary modules share the same chassis
Socket Port	:SOUR:SYNC:REM:SEC2:SPOR?	Indicates the slot number of available models
Secondary module Order		Indicates the socket port of available models
		Shows you the models to be Secondary devices
		Use Selected to choose from available Secondary models

Sync Settings

Lets you apply the source settings of the Primary module to its Secondary modules.

Remote Command	:SOURce:SYNC:SETTings:ENABle ON OFF 1 0 :SOURce:SYNC:SETTings:ENABle?
Example	:SOUR:SYNC:SETT:ENAB ON :SOUR:SYNC:SETT:ENAB?
Notes	When Sync Settings is ON , the source settings of Primary are applied to Secondary modules. The supported settings are Amplitude, Frequency, Trigger Source, Trigger Type, RF Output and waveform related information When Sync Segment 2 is switched ON , this Toggle is set ON simultaneously
Dependencies	Waveform files naming convention: For NxN MIMO: <ul style="list-style-type: none"> - xxx0.wfm for Primary - xxx[n].wfm for TRX[n] For example, in 3x3 MIMO: <ul style="list-style-type: none"> - xxx0.wfm for Primary - xxx1.wfm for TRX1 - xxx2.wfm for TRX2 For NxN+NxN MIMO, in the first group: <ul style="list-style-type: none"> - xxx0_0.wfm for Primary - xxx0_n.wfm for TRX[n] in the second group: <ul style="list-style-type: none"> - xxx1_n.wfm for TRX[n+N] For example, in 3x3+3x3 MIMO: <ul style="list-style-type: none"> - xxx0_0 for Primary

	<ul style="list-style-type: none"> - xxx0_1.wfm for TRX1 - xxx0_2.wfm for TRX2 - xxx1_0.wfm for TRX3 - xxx1_1.wfm for TRX4
	xxx1_2.wfm for TRX5
Preset	OFF
Range	ON OFF

Sync Segment 2

Lets you config the models in the second group of NxN+NxN MIMO.

Remote Command	:SOURCE:SYNC:SETTings:SEGMent2:ENABle ON OFF 1 0 :SOURCE:SYNC:SETTings:SEGMent2:ENABle?
Example	:SOUR:SYNC:SETT:SEGM2:ENAB ON :SOUR:SYNC:SETT:SEGM2:ENAB?
Notes	Only Frequency in settings is supported
Dependencies	When this setting is ON , Sync Settings will be turned on accordingly
Preset	OFF
Range	ON OFF

Segment 2 Frequency

When Sync Segment 2 is **ON**, allows you to set the frequency of models in the second group of NxN+NxN MIMO.

Remote Command	:SOURCE:SYNC:SETTings:SEGMent2:FREQuency <freq> :SOURCE:SYNC:SETTings:SEGMent2:FREQuency?
Example	:SOUR:SYNC:SETT:SEGM2:FREQ 1.00 GHz :SOUR:SYNC:SETT:SEGM2:FREQ?
Preset	1.00 GHz
Min	VXT models M9410A/11A/15A/16A: 380 MHz
Max	Hardware Dependent VXT models M9410A/11A/15A/16A: <ul style="list-style-type: none"> - Option F06 = 6.0 GHz

IP Address

Sets up the controller's IP address of Remote Secondary models.

Remote Command	<code>:SOURce:SYNC:REMOte:ADDReSS <string></code>
Example	<code>:SOUR:SYNC:REM:ADDR "192.168.1.2"</code>
Notes	<code><string></code> - IP Address

SCPI Socket Port

Sets up the controller's SCPI socket port of Remote Secondary models.

Remote Command	<code>:SOURce:SYNC:REMOte:IPPort <integer></code>
Example	<code>:SOUR:SYNC:REM:IPP 5025</code>
Notes	<code><integer></code> - Port

Add Secondary Module

Lets you connect the remote chassis specified by IP Address and Socket Port.

Remote Command	<code>:SOURce:SYNC:REMOte:ADDReSS:ADD</code>
Example	<code>:SOUR:SYNC:REM:ADDR:ADD</code>
Notes	<p>Example of how to add a remote chassis:</p> <pre>:SOUR:SYNC:REM:ADDR "192.168.1.2" :SOUR:SYNC:REM:IPP 5025 :SOUR:SYNC:REM:ADDR:ADD</pre> <p>Once a remote chassis is connected, the "Secondary Module List" on page 3702 shows you the available Secondary modules</p>

Delete Secondary Module

Lets you delete a selected remote chassis IP Address from the ["Secondary Module List" on page 3702](#).

Remote Command	<code>:SOURce:SYNC:REMOte:ADDReSS:DELeTe</code>
Example	<code>:SOUR:SYNC:REM:ADDR:DEL</code>
Notes	<p>Example of how to delete a remote chassis:</p> <pre>:SOUR:SYNC:REM:ADDR "192.168.1.2"</pre>

:SOUR:SYNC:REM:ADDR:DEL

Sync Runtime Settings (Remote Command Only)

Lets you Sync runtime settings to the Secondary modules without restarting Sync.

Remote Command	:SOURce:SYNC:RTSetting:STATe ON OFF 1 0 :SOURce:SYNC:RTSetting:STATe?
Example	:SOUR:SYNC:RTS:STAT ON :SOUR:SYNC:RTS:STAT?
Notes	When OFF , Sync is interrupted when changing frequency or power settings on the Primary module. After applying the new settings to the Secondary modules, Sync will restart When ON , setting changes on the Primary module are applied to the Secondary modules immediately without interrupting Sync status. This is the default behavior. The supported settings are Amplitude and Frequency
Preset	ON
Range	ON OFF

6.1.13.4 Sync Start

Lets you start synchronizing Primary and Secondary modules to play Arb synchronously.

When the Sync connection is built successfully, Primary and Secondary modules are in the Sync State.

Sync Start and Sync Config menu are grayed-out when Primary and Secondary modules are in Sync State.

Remote Command	:SOURce:SYNC:START
Example	:SOUR:SYNC:STAR
Notes	If you change the source settings during Sync State, an error message appears in the status bar: "Settings conflict; Sync connection is already established" and the change will not be applied until Sync Stop

6.1.13.5 Sync Stop

Stops the synchronization.

When Sync Stops, Sync Config menu and Sync Start will be available.

Remote Command	:SOURce:SYNC:STOP
Example	:SOUR:SYNC:STOP

6.1.13.6 Sync Connected (Remote Query Only)

Lets you query the state of synchronization.

Remote Command	:SOURce:SYNC:CONNected?
Example	:SOUR:SYNC:CONN?
Returns: 1 when synchronization is established, 0 when synchronization is stopped	

6.1.14 Source Preset

Lets you preset the source settings to their default values.

Remote Command	:SOURce:PRESet
Example	:SOUR:PRES

6.2 Input

The controls on this tab let you select and configure the instrument's inputs.

6.2.1 Select Input

Lets you choose which signal input you want to analyze:

- "RF Input" on page 3710
- "External Mixer" on page 3710
- "I/Q" on page 3713

See also:

- "External Mixer Setup" on page 3735
- "I/Q Setup" on page 3755

Remote Command	<code>[:SENSe] :FEED RF AIQ EMIXer</code> <code>[:SENSe] :FEED?</code>
Example	Select the RF Input: <code>:FEED RF</code> Select External Mixing: <code>:FEED EMIX</code> Select BBIQ: <code>:FEED AIQ</code>
Dependencies	I/Q only appears when Option BBA present Ext Mix only appears when Option EXM present
Couplings	Connecting a U7227A USB Preamplifier to one of the instrument's USB ports causes the Input to automatically switch to the RF Input. If the RF Calibrator is on, it is turned off. Subsequently disconnecting the USB Preamp from USB does not change the Input selection, nor restore the previous selection <code>[:SENSe] :FEED RF</code> turns the calibrator OFF
Preset	Unaffected by Preset or power cycle. Survives a Mode Preset and mode changes Set to RF by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state
Annotation	Displayed in the Meas Bar as "Input:." followed by: RF or Ext Mix or I/Q depending on which input is selected

6 Input/Output

6.2 Input

Backwards Compatibility SCPI	<p>[:SENSe]:FEED AREFERENCE</p> <p>In the PSA the calibrator was one of the inputs and selected using the AREF parameter to the same :FEED command that switched the inputs. In the X-Series, it is controlled in a separate menu and overrides the input selection. For code compatibility, [:SENSe]:FEED AREFERENCE is provided, and is aliased to [:SENSe]:FEED:AREF REF50, which causes the input to be switched to the 50 MHz calibrator. [:SENSe]:FEED RF switches the input back to the RF port and turns the calibrator OFF, thus providing full compatibility with the PSA calibrator function</p> <p>Note that after sending this, [:SENSe]:FEED? does <i>not</i> return “AREF” but instead the currently selected input:</p> <p>[:SENSe]:FEED IQ IONLy QONLy</p> <p>[:SENSe]:FEED?</p> <p>The parameters IQ IONLy QONLy are supported for backwards compatibility with the E44406A</p> <p>[:SENSe]:FEED IQ aliases to [:SENSe]:FEED:IQ:TYPE IQ</p> <p>[:SENSe]:FEED IONLy aliases to [:SENSe]:FEED:IQ:TYPE IONLy</p> <p>[:SENSe]:FEED QONLy aliases to [:SENSe]:FEED:IQ:TYPE QONLy</p> <p>[:SENSe]:FEED? always returns AIQ, whatever type of legacy parameter IQ IONLy QONLy has been used</p>
Backwards Compatibility Notes	<p>Most of the settings in the X-Series Input/Output system, including External Gain, Amplitude Corrections settings and data, etc., are shared by all modes and are not changed by a mode switch. Furthermore, most variables under the Input/Output menu are not affected by Mode Preset. Both of these behaviors represent a departure from legacy behavior</p> <p>In X-Series, Input/Output settings are reset by using Restore Input/Output Defaults. They can also be reset to their default values by System->Restore System Defaults-> In/Out Config, or by System ->Restore System Defaults -> All (and corresponding SCPI)</p> <p>While this matches most use cases better, it does create some code compatibility issues. For example, Amplitude Corrections are no longer turned off by Mode Preset, but instead by Restore Input/Output Defaults</p> <p>Although Input/Output settings are not part of each Mode's State, they are saved in Save State files, so that all of the instrument settings can be recalled with Recall, State, as in legacy instruments</p>
Notes	<p>In legacy analyzers you choose between the Internal mixer or an External Mixer. In X-Series, the External Mixer is one of the choices for the Input and is selected using the FEED command (:SENSe:FEED EXTMixer)</p> <p>For compatibility, the :INPut:MIXer EXTErnal INTernAl legacy command is mapped as follows:</p> <ol style="list-style-type: none"> 1. When :INPut:MIXer EXTErnal is received, :SENSe:FEED EMIXer is executed 2. When :INPut:MIXer INTernAl is received, :SENSe:FEED RF is executed 3. When :INPut:MIXer? is received, the response is INT if any input other than the external mixer is selected, and EXT if the external mixer is selected
Preset	INT

Backwards Compatibility SCPI	<code>:INPut:MIXer EXTeRnal INTeRnal</code> <code>:INPut:MIXer?</code>
Backwards Compatibility Notes	<p>PSA supports the following SCPI Command :</p> <p><code>:INPut:MIXer:TYPE PReSelected UNPReselect</code> <code>:INPut:MIXer:TYPE?</code></p> <p>PXA does not support the <code>:INPut:MIXer:TYPE</code> command</p>

RF Input

Selects the front-panel RF input port to be the instrument signal input. If RF is already selected, pressing this key accesses the RF input setup functions.

External Mixer

Lets you select an External Mixer through which to apply signal input to the instrument. When selected, the LO/IF port becomes the input to the instrument.

External Mixing requires option EXM. The External Mixer key will not appear unless option EXM is installed. The presence of the LO/IF connector alone does not indicate that you have Option EXM licensed. To verify that option EXM is installed, press **System, Show, System**.


When External Mixer is selected, the **Center Freq** key controls the setting of the Center Freq in external mixing, which is separate from the settings of Center Freq for the RF Input or BBIQ. Each input retains its unique settings for Center Freq. A unique SCPI command is provided solely for the external mixing Center Freq (see the **Center Freq** key description), which only affects the External Mixer CF, although sending the generic Center Freq command while External Mixer is selected also controls the External Mixer CF.

Unless option EXM is present, the External Mixer key is blanked, and all SCPI commands associated with menus accessed by this key return an error. Manual FFT mode is available with external mixing, but not with Signal ID. All settings under this key, and all Frequency settings, are remembered when you go out of External Mixer, so that when **External Mixer** is chosen again, all the external mixer functions will retain their previous settings, with the exception of Signal ID which is set to OFF (Signal ID is also set to Off unless External Mixer is the selected Input). Note that this differs from ESA and PSA, in which all external mixer settings including Center Frequency are lost when you turn off External Mixing or Preset the instrument.

X-series instruments have a combined LO Out/IF In connection, whereas earlier instruments used separate ports for the LO Out and the IF in. Internal diplexers in the instrument and the mixer simplify the connection for users – only a single SMA cable is required.


6 Input/Output

6.2 Input

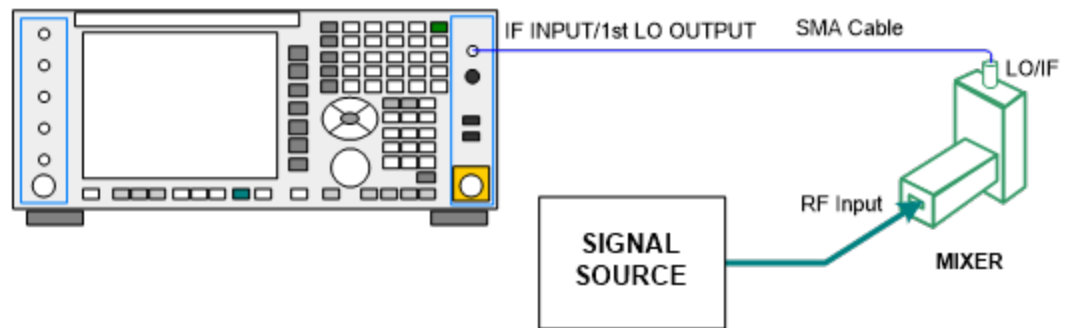


Legacy HP/Agilent and some third-party mixers have separate LO In and IF out connections. This requires you to use an external diplexer to connect these mixers. A diplexer can easily be purchased for this purpose (for example, Diplexer Model # DPL.26 or # DPL.313B from OML Inc., Morgan Hill, California, USA).

The connection diagram for such a legacy mixer is:

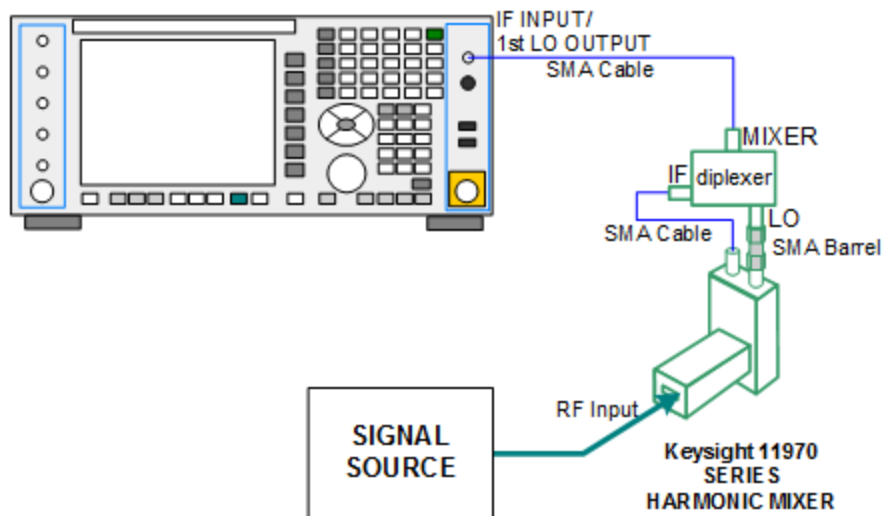


In addition, External Mixing in the X-Series supports the new Keysight M1970 series of Harmonic Mixers, which provide a USB connection for download of calibration data and additional control.

The connection diagram for one of the Keysight USB mixers is:

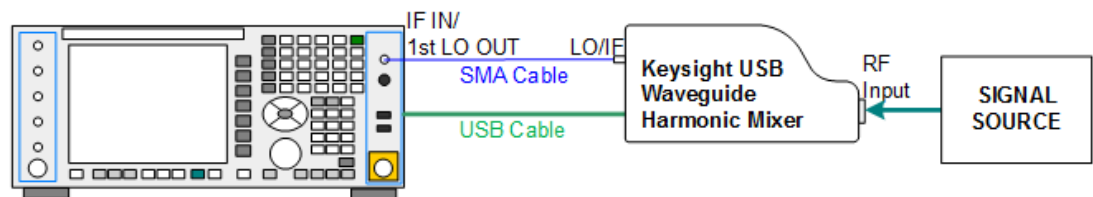


Also available in the M197x series are the M1971 series USB Mixers, which provide additional inputs and outputs for special functionality as described below. These mixers have multiple signal paths which allow them to function in three different states:


- Normal, in which the mixer functions as a classic external mixer with a single conversion:

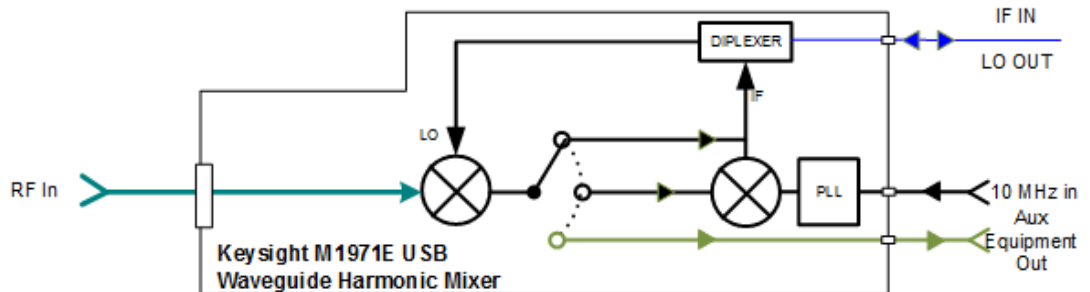

- Dual Conversion, which gives you a wider image-free range. In Dual Conversion, the first conversion is to a higher IF frequency and you provide a 10 MHz signal to which an internal PLL is locked, to effect a second downconversion:

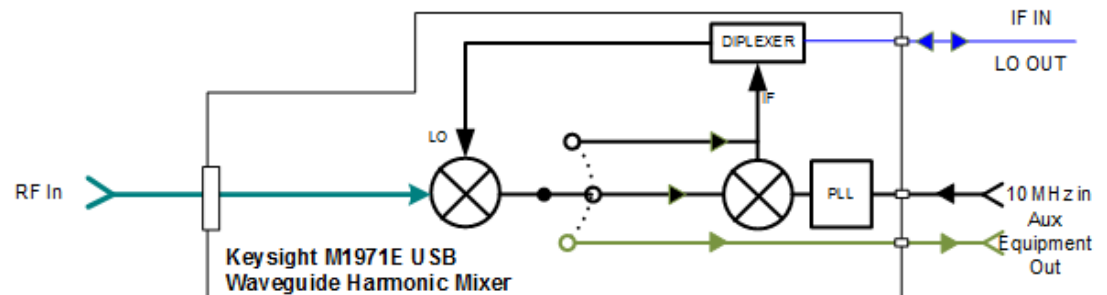

- Aux Equipment, wherein the first mixer output drives an output connector on the mixer and the instrument is out of the circuit:

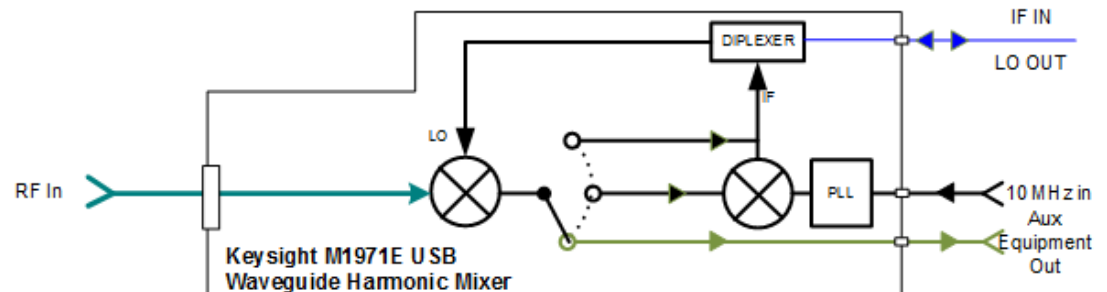

External Mixing is only supported in certain Modes and Measurements in the X-Series, as shown in the table below. When External Mixer is selected in a

6 Input/Output

6.2 Input

measurement that does not support it, the "No result; Meas invalid with Ext Mixing" error condition occurs:

Mode	Measurements	Sig ID (Image Suppress only)
Spectrum Analyzer	Swept SA	Y*
	TOI	Y
	Harmonics	N
	Spurious Emissions	Y
	Channel Power	Y
	Occupied BW	Y
	ACP	Y
	Spectrum Emissions Mask	Y
	CCDF	N
	Burst Power	N
	List Sweep	N
Phase Noise	Monitor Spectrum	Y
	Log Plot	Y
	Spot Frequency	N
	Waveform	N
I/Q Analyzer	Complex Spectrum	N
	Waveform	N
Vector Signal Analyzer	Vector Analysis	N
	Analog Demod	N
	Digital Demod	N
Analog Demod	AM	N
	FM	N
	PM	N
	FM Stereo	N

* the Swept SA measurement also supports Image Shift

I/Q

Selects the front-panel I/Q input ports to be the instrument signal input. If I/Q is already selected, pressing this key accesses the I/Q setup menu.

The Baseband I/Q functionality is a hardware option. It is option BBA. If the option is not installed, none of the I/Q functionality is enabled.

The Baseband I/Q has four input ports and one output port. The input ports are I, I-bar, Q, and Q-bar. The I and I-bar together compose the I channel, and the Q and Q-

bar together compose the Q channel. Each channel has two modes of operation, Single-Ended (also called "unbalanced") and Differential Input (also called "balanced"). When in Single-Ended operation, only the main port (I or Q) is used, and the complementary port (I-bar or Q-bar) is ignored. When in Differential Input mode, both main and complementary ports are used.

The input settings (range, attenuation, skew, impedance, external gain) apply to the channels, not the individual ports.

The system supports a variety of 1 M Ω input passive probes as well as the Keysight 113x Series active differential probes using the Infinimax probe interface.

The Keysight 113x Series active probes can be used for both single ended and differential measurements. In either case a single connection is made for each channel (on either the I or Q input). The input is automatically configured to 50 Ω single ended and the probe power is supplied through the Infinimax interface. The probe can be configured for a variety of input coupling and low frequency rejection modes. In addition, a wide range of offset voltages and probe attenuation accessories are supported at the probe interface. The active probe has the advantage that it does not significantly load the circuit under test, even with unity gain probing.

With passive 1 M Ω probes, the probe will introduce a capacitive load on the circuit, unless higher attenuation is used at the probe interface. Higher attenuation reduces the signal level and degrades the signal-to-noise-ratio of the measurement. Passive probes are available with a variety of attenuation values for a moderate cost. Most Keysight passive probes can be automatically identified by the system, setting the input impedance setting required as well as the nominal attenuation. For single ended measurements a single probe is used for each channel. Other passive probes can be used, with the attenuation and impedance settings configured manually.

For full differential measurements, the system supports probes on each of the four inputs. The attenuation of the probes should be the same for good common mode rejection and channel match.

Both active and passive probes in single ended and differential configurations can be calibrated. This calibration uses the Cal Out BNC connection and a probe connection accessory. The calibration achieves excellent absolute gain flatness in a probed measurement. It matches both the gain and frequency response of the I and Q channels as well as any delay skew, resulting in high accuracy in derived measurements such as Error Vector Magnitude (EVM).

When a probe is connected a status message will be displayed. The message will indicate if calibration data is available or not. Calibration data is saved for each type of probe (including "none") for each port and will be reapplied whenever that type of probe is re-connected to the same port. For probes with EEPROM identification, the calibration data will be stored based on the unique probe identifier and will reapply data for that particular probe if it is available. The data will not follow a probe from one port to another. For probes without EEPROM identification, the instrument

6 Input/Output

6.2 Input

cannot distinguish between different probes of the same type, and it will use the data from the last calibration for that probe type on that port.

When in differential mode, both the main and complementary probes are expected to be of the same type.

In some situations, the I and Q channels should be configured identically. In other situations, it is convenient to control them independently. Some menus have a "Q Same as I" setting that will cause the Q channel configuration to mirror the I channel configuration, avoiding the overhead of double data entry when the channels should be the same.

The output port is for calibrating the I/Q input ports, although it can also be manually controlled.

There are two types of calibrations available: cable calibration and probe calibration. The cable calibration will guide the user through connecting each input port in turn. All ports must be calibrated together. The probe calibration is done for a specific channel (I or Q). If in Single-Ended mode, only the main port is calibrated. When in Differential Input mode, the user is guided through calibrating both main and complementary ports.

The front panel I/Q port LEDs indicate the current state of that port. On (green) indicates it is active, and off (dark) indicates it is not in use. For example, the Cal Out port LED is on if and only if there is signal coming out of that port.

The input is a context, and some parameters have separate values for each context. The SCPI for these parameters has an optional "[:RF|IQ]" node. If the specific context is omitted, the command acts on the current input context's value. Here are the parameters that are input context sensitive:

- Center Frequency
- Trigger Source

It is important to distinguish between the I and Q input ports and the displayed I and Q data values. The I and Q input ports feed into a digital receiver that does digital tuning and filtering. The I and Q data seen by the user (either on the display or through SCPI) corresponds to the real ("I") and the imaginary ("Q") output from the digital receiver. When the input path is I+jQ or I Only and the center frequency is 0 Hz the I input ends up in as the real output from the receiver and appears as "I" data. Likewise, when the input path is I+jQ and the center frequency is 0 Hz, the Q input ends up as the imaginary output from the receiver and appears as "Q" data. However, when the input path is Q Only, the Q input is sent to the receiver as Q+j0, so the receiver output has the Q input coming out on the real output, and so in Q Only, the signal from the Q input port appears as the "I" data. Another situation where the I and Q data do not necessarily correspond directly to the I and Q inputs is when the center frequency is non-zero. The digital processing involved in the tuning

is a complex operation. This will result in I Only data appearing as both "I" and "Q" data, the same as that signal would appear if seen through the RF input port.

BBIQ is only supported in certain Modes and Measurements in the X-Series. When I/Q is selected in a measurement that does not support it, the "No Result; Meas invalid with I/Q inputs" message appears. This is error 135

Baseband I/Q Remote Language Compatibility

For the Agilent E4406A VSA Series Transmitter Tester, Option B7C provided baseband I/Q inputs. Code compatibility has been provided to allow many of the commands for Option B7C to function properly with X-Series. X-Series has hardware differences and additional capabilities (for example, E4406A does not have independent settings of I & Q, nor does it provide for probe calibrations), which make 100% compatibility impossible.

The following commands are supported:

```
:CALibration:IQ:FLATness
```

```
:INPut:IMPedance:IQ U50 | B50 | U1M | B1M
```

```
:INPut:IMPedance:REference <integer>
```

[:SENSe] :FEED RF | IQ | IONLY | QONLY | AREference | IFALign supports all parameters except IFALign. The FEED? query returns only RF | AIQ | AREF.

The following commands are not supported:

```
:CALibration:GIQ
```

```
:CALibration:IQ:CMR
```

```
:INPut:IQ:ALIGN OFF | ON | 0 | 1
```

The Rohde & Schwarz FSQ-B71 also provides baseband I/Q inputs. A certain amount of code compatibility is provided in X-Series, but hardware differences make this a somewhat limited set.

Supported:

The "<1|2>" is supported as "[1]".

```
INPut<1|2>:IQ:BALanced[:STATE] ON | OFF
```

```
INPut<1|2>:IQ:TYPE I | Q | IQ
```

```
INPut<1|2>:IQ:IMPedance LOW | HIGH
```

Not Supported:

```
DIAGnostic<1|2>:SERVICE:IQ:CALibration:DC 0 | 0.1 | 0.178 | 0.316 | 0.562 | 1.0
```

```
DIAGnostic<1|2>:SERVICE:IQ:CALibration:DESTination IHigh | ILOW | QHigh | QLOW
```

```
DIAGnostic<1|2>:SERVICE:IQ:CALibration:PULSE: PRATe 10 kHz | ... | 4 MHz
```

```
DIAGnostic<1|2>:SERVICE:IQ:INPut IQ | GND | CALDc | CALPulse
```

6 Input/Output

6.2 Input

```
INPut<1|2>:SElect AIQ | RF
TRACe<1|2>:IQ:DATA:FORMat COMPatible | IQBlock | IQPair>
TRACe<1|2>:IQ:DATA:MEMory? <offset samples>,<# of samples>
TRACe<1|2>:IQ:DATA?
TRACe<1|2>:IQ:SET <filter type>,<rbw>,<sample rate>,<trigger source>,<trigger
slope>,<pretrigger samples>,<# of samples>
TRACe<1|2>:IQ:SRATe 10.0kHz to 81.6MHz
TRACe<1|2>:IQ[:STATe] ON | OFF
```

The Rohde & Schwarz FMU has the following SCPI, which is *not* supported (these commands start/abort the probe calibration procedure, which is manually interactive from the front panel):

```
CALibration:ABORt
CALibration:PROBe[:START]
```

6.2.2 RF Input Port

Specifies the RF input port used. Only appears on units with multiple RF inputs, and lets you switch between the inputs.

Instruments that include multiple RF Input ports include:

- N9041B
- N9000B (CXA)
- N9048B (PXE)
- VXT, M941xE and EXM
- M8920A/20B
- E7760B

NOTE

Switching input ports may change the receiver performance of the instrument.

See ["Instruments with 2 Inputs" on page 3719](#)

Remote Command `[:SENSe]:FEED[:RF]:PORT[:INPut] <port>`

For instrument-specific definitions of `<port>`, see:

["Parameters for UXA/PXA/MXA/EXA/CXA/MXE/PXE/NFA" on page 3719](#)

["Parameters for EXT, EXF and EXM Wireless Test Sets" on page 3720](#)

	<p>"Parameters for VXT M9410A/11A/15A16A, M9410E/11E/15E/16E and M9420A Vector Transceivers" on page 3720</p> <p>"Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU" on page 3722</p> <p>"Parameters for E7760B Wideband Transceiver" on page 3725</p> <p>"Parameters for M8920A/20B Radio Test Set" on page 3726</p> <p>"Parameters for UXM Wireless Test Set" on page 3726</p> <p>[:SENSe] :FEED[:RF] :PORT[:INPut] ?</p>
Example	<p>Use the port labeled RF Input when the selected input is RF: :FEED:RF:PORT RFIN</p> <p>Use the port labeled RF Input 2 when the selected input is RF: :FEED:RF:PORT RFIN2</p>
Dependencies	<p>Only appears when RF Input is selected as the Input</p> <p>Only appears in models that support multiple inputs. If the SCPI command is sent with unsupported parameters in any other model, an error is generated, -221, "Settings conflict; option not installed"</p> <p>When any input is selected in a measurement that does not support it, the "No result; Meas invalid with this input" error condition occurs, and the measurement returns invalid data when queried</p>
Couplings	<p>When switching between inputs, you may find the new input has a different frequency range than the current input. This means the frequency at the new input may be limited, depending on where you were tuned</p> <p>When you switch from an input whose maximum frequency is greater than the input to which you are switching:</p> <ol style="list-style-type: none"> 1. If the current Stop Freq is below the Max Freq for the new input, then neither Stop Freq or Start Freq needs to change 2. But if the current Stop Freq is above the Max Freq for the new input, Stop Freq must change; so, it is set to the Max Freq for the new input 3. If the Stop Freq is forced to change then, if possible, the Span is preserved with the new Stop Freq; however, the Start Freq can't go below zero <p>Example: Input 2 has a Max Freq of 110 GHz and Input 1 has a Max Freq of 52 GHz</p> <p>Case 1: Input 2 is selected and Start Freq=40 GHz, Stop Freq=60 GHz. Change to Input 1. Stop Freq changes to 52 GHz so, to preserve Span, Start Freq is set to 32 GHz</p> <p>Case 2: Input 2 is selected and Start Freq=40 GHz, Stop Freq=110 GHz. Change to Input 1. Stop Freq changes to 52 GHz. Span was 70 GHz, but new Span maximum is 52 GHz so Start Freq is set to 0 Hz</p> <p>Case 3: Input 2 is selected and Start Freq=10 GHz, Stop Freq=20 GHz. Change to Input 1. No change is necessary, Start Freq and Stop Freq don't change</p>
Preset	Unaffected by Mode Preset, but set to RFIN on Restore Input/Output Defaults or Restore System Defaults -> All , unless noted in the platform-specific sections below
State Saved	Saved in instrument state
Annotation	<p>Annotation in the Meas Bar reads as follows:</p> <p>When input is RF In: Input: RF</p>

6 Input/Output

6.2 Input

	When input is RF In 2: Input: RF2
Backwards Compatibility SCPI	<code>:INPut<1 2>:TYPE INPUT1 INPUT2</code> <code>:INPut<1 2>:TYPE?</code>
	Included for R&S ESU compatibility. In MXE, the INPUT1 parameter is aliased to RFIN and the INPUT2 parameter is aliased to RFIN2

Instruments with 2 Inputs

In models with two inputs, the second input usually has a different maximum frequency than the first input. For your convenience, the actual “Max Freq” value is allowed to go slightly higher than the nominal Max Freq for the second input, just as is the case with the first input.

Model	Nominal Input 2 Max Freq	Absolute Input 2 Max Freq	Transition rule for switching from Input 1 to Input 2
N9038A	1 GHz	1.000025 GHz	If Stop Freq is above 1.000025 GHz, it is set to 1.000025 GHz, otherwise it does not change If Start Freq is above 1.000024990 Hz, Start Freq is set to 1.000024990 Hz and Span to 10 Hz, otherwise nothing changes
N9000A with option C75	1.5 GHz	1.58 GHz	If Stop Freq is above 1.58 GHz, it is set to 1.58 GHz, otherwise it does not change If Start Freq is above 1.579999990 GHz, Start Freq is set to 1.579999990 GHz and Span to 10 Hz, otherwise nothing changes

Parameters for UXA/PXA/MXA/EXA/CXA/MXE/PXE/NFA

<port>	Input
RFIN	RF Input
RFIN2	RF Input 2
ERFIN	External RF
Example	Set the RF input to be RF Input: <code>:FEED:RF:PORT RFIN</code> Set the RF input to be RF Input 2 if that port exists: <code>:FEED:RF:PORT RFIN2</code> Set the RF input to be External RF if the V3050A unit is connected: <code>:FEED:RF:PORT ERFIN</code>
Dependencies	If the command is sent with RFIN2 or ERFIN and that port does not exist, an error is generated, -221, “Settings conflict; option not installed” ERFIN requires option “EXW”

Couplings	Connecting a V3050A changes the Preset to ERFIN and automatically switches the input to ERFIN . Disconnecting the V3050A changes the Preset back to RFIN and automatically switches the input to RFIN
Preset	ERFIN when V3050A is connected, otherwise RFIN
Annotation	Annotation in the Meas Bar reads as follows: <ul style="list-style-type: none"> – When input is RFIN: Input: RF – When input is RFIN2: Input: RF2 – When input is ERFIN: Input: Ext RF

Parameters for EXT, EXF and EXM Wireless Test Sets

<port>	Input
RFIO1	RFIO 1
RFIO2	RFIO 2
RFIO3	RF3 I/O
RFIO4	RF4 I/O

See also "Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU" on page 3722

Example	Set the RF input to RFIO 1: :FEED:RF:PORT RFIO1
Dependencies	In EXF, or in EXM with hardware M9430A, if RF Input is selected as RF Input Port, you need to choose the settings in the Half Duplex Config menu to determine which port (RFIO3 or RFIO4) will be used In EXM with hardware M9431A, this setting is not supported. If the SCPI command is sent with this setting, an error is generated, -221, "Settings conflict; option not installed"
Preset	RFIO1
Annotation	Annotation in the Meas Bar reads as follows: <ul style="list-style-type: none"> – When input is RFIO1: Input: RFIO1 – When input is RFIO2: Input: RFIO2 – When input is RFIO3: Input: RFIO3 – When input is RFIO4: Input: RFIO4

Parameters for VXT M9410A/11A/15A/16A, M9410E/11E/15E/16E and M9420A Vector Transceivers


<port>	Input
RFIN	RF Input

6 Input/Output
6.2 Input


<port>	Input
RFFD	RFIO FD
RFHD	RFIO HD, Half Duplex

Example	<pre>:FEED:RF:PORT RFIN :FEED:RF:PORT RFFD :FEED:RF:PORT RFHD :FEED:RF:PORT NONE</pre>
---------	--

Notes	<p>RFIN sets the RF input to be the RF Input port, labeled RF Input</p> <p>RFFD sets the RF input to be the full duplex port, labeled RFIO FD. Note that Option “FDX” is required to enable this port</p> <p>RFHD sets the RF input to be the half duplex port, labeled Half Duplex (M9410A/11A/15A/16A) or RFIO HD (M9420A)</p> <p>M9410E/11E/15E/16E also has HD port, which is the HD port on M9471A module</p> <p>NONE sets the RF In port and Half Duplex port (if HD Port is not set to RF Output) to connect to 50Ω load, as shown below:</p>
-------	--

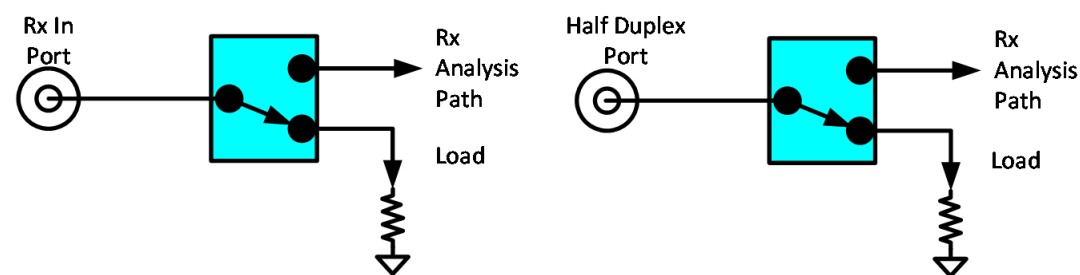

When using Source only, set RF Input to **NONE** to provide better isolation. When the input port is set to **NONE**, an error appears in the status area:

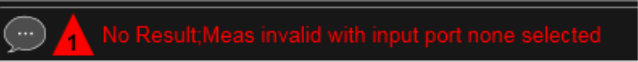

Dependencies	<p>Option HDX is required to enable the Half Duplex (RFIO HD) port</p> <p>You cannot set this port to be the input if it is already set to be the output. Attempting to do so generates error message: “-221, Settings conflict; RF Input cannot be set to RFIO HD when RF Output is RFIO HD”</p> <p>NONE is not available in VXT model M9420A</p>
--------------	---


Preset	RFIN
--------	-------------

Annotation	<p>Annotation in the Meas Bar reads as follows:</p> <p>When input is RF Input: Input: RF</p> <p>When input is RFIO FD: Input: RFFD</p> <p>When input is RFIO HD or Half Duplex: Input: RFHD</p> <p>When input is None: Input: NONE</p>
------------	--


Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU

<port>	Input
RRHhRFHDp	Head <i>h</i> , RF Tx/Rx <i>p</i> , for example RRH1RFHD2 = Head 1, RF Tx/Rx 2
IFINn	DUT IF IN for Channel <i>n</i> , for example IFIN1 = DUT IF IN for Channel 1
IFHDn	DUT IF In/Out for Channel <i>n</i> , for example IFHD1 = DUT IF In/Out for Channel 1

When using a Remote Radio Head (RRH), such as the Keysight M1740A mmWave Transceiver for 5G, with the VXT or EXM, the choices in the dropdown are dependent on which heads are installed. For example, in the case where two M1740As are present, each with two ports, the dropdown will look like this:

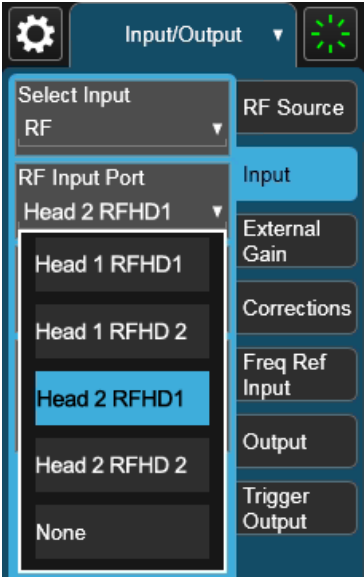

Note the inclusion of the **None** choice, which allows the input port to become unassigned, and thus allows any Output port to be assigned without concern about an Input port conflict. When the input port is unassigned, an error appears in the status area:

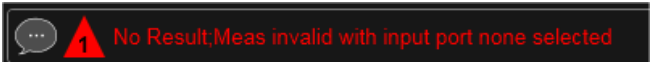


The user interface parameter RFHD *p* corresponds to the port labeled RF Tx/Rx *p*; for example, RFHD 2 means the port labeled RF Tx/Rx 2 on the M1740A.

When using a E7770A Common Interface Unit, you may make connections to the half-duplex port on the front of the CIU labeled DUT IF In/Out, and/or to ports on the rear of the CIU labeled DUT IF IN and DUT IF OUT. For example, if your DUT has an IF Output you will usually connect it to one of the DUT IF IN ports on the rear panel of the CIU. The user interface parameter IFIN *n* corresponds to the DUT IF IN port for Channel *n* on the CIU, so you would choose IFIN 1 in the dropdown to

6 Input/Output
6.2 Input

connect to the DUT IF IN port for Channel 1, and the corresponding SCPI parameter would be IFIN1. See the figure below:

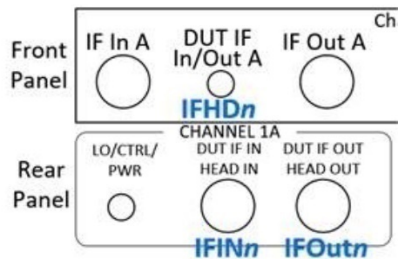


The following table lists the GUI parameter for each input or output on the CIU, and the SCPI parameter for the RF Input Port command (`[:SENSe]:FEED[:RF]:PORT [:INPut]`) and the RF Output Port command (`[:SENSe]:FEED:RF:PORT:OUTPut`):

Port	Port name on CIU	Name displayed in GUI	SCPI parameter for RF Input Port and Output Port commands
IF input port	DUT IF IN	IF In n	IFINn, for example IFIN1
IF output port	DUT IF OUT	IF Out n	IFOutn, for example IF01
IF port, half duplex	DUT IF In/Out	IFHD n	IFHDn, for example, IFHD1

NOTE The value of n for each port, in the multiple-port use case, may vary according to your system configuration. For the value of n for your use case, consult the Startup Guide for your particular system (for example S9100A).

An example of the GUI for the CIU ports appears below:

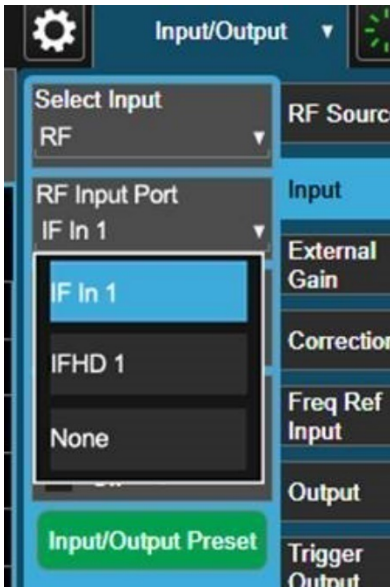

Example	<p>Set the RF input to be the port labeled RF Tx/Rx 2 on Head 1: <code>:FEED:RF:PORT RRH1RFHD2</code></p> <p>Set the RF input to be the Channel 1 port labeled DUT IF IN on the CIU: <code>:FEED:RF:PORT IFIN1</code></p>
Notes	<p>Parameter <code>RRHhRFHDp</code> corresponds to Head h, port RF Tx/Rx p; for example, <code>RRH1RFHD2</code> = the port labeled RF Tx/Rx 2 on Head 1</p> <p>For the CIU, the parameter <code>IFINc</code> corresponds to the DUT IF IN for channel c. For example, <code>IFIN1</code> would connect to the DUT IF IN port for Channel 1</p>
Dependencies	<p>The Radio Head and CIU parameters only appear when a Remote Radio Head or CIU is connected to the instrument. If these parameters are sent at any other time, an error is generated, “-221, Settings conflict; option not installed”</p>
Preset	<code>RRH1RFHD1</code>
Annotation	<p>Annotation in the Meas Bar reads as follows: Input:Hd <i>h</i> RFHD <i>p</i></p> <p>For example, in the case above, with RFHD 2 on Head 1 selected: Input:Hd 1 RFHD 1</p> <p>When using the CIU:</p> <ul style="list-style-type: none">– When input is IFIN1: Input: IFIN 1– When input is IFIN2: Input: IFIN 2– When input is IFIN3: Input: IFIN 3– When input is IFIN4: Input: IFIN 4
Backwards	<code>:FEED:RF:PORT A1</code>

6 Input/Output

6.2 Input

Compatibility SCPI	<p>A1 is treated as RRH1RFHD1 and sets the RF input to be the port labeled RF Tx/Rx 1 on Head 1 :FEED:RF:PORT B1</p> <p>B1 is treated as RRH1RFHD2 and sets the RF input to be the port labeled RF Tx/Rx 2 on Head 1 :FEED:RF:PORT IFIO2</p> <p>IFIO2 is treated as IFIN1, and sets the IF input to be the port labeled “DUT IF In/Out” on the CIU rear panel</p>
--------------------	---

Parameters for E7760B Wideband Transceiver

<port>	Input
An	Bank A, Channel <i>n</i> , for example A1
Bn	Bank B, Channel <i>n</i> , for example B1
IFIO<i>n</i>	IF In/Out for Channel <i>n</i> , for example IFIO1

Example	<p>Set the RF input to A1: :FEED:RF:PORT A1</p> <p>Set the RF input to B3: :FEED:RF:PORT B3</p> <p>Set the RF input to IFIO1: :FEED:RF:PORT IFIO1</p>
Dependencies	<p>Ports A1, A2, A3, B1, B2, and B3 are available if Option RF3 is installed. Ports IFIO1 and IFIO2 are available if option RF2 is installed</p> <p>Note that for E7760B:</p> <ul style="list-style-type: none"> – Attempting to select a port for which the option is not present will generate the error, -241, “Hardware missing; Input not available” – A port cannot be selected as an Input while it is occupied as an Output. Sending such a command while the port is occupied generates error: -221, “Settings conflict; Input Port is not available while occupied by Output” – The mmWave ports are divided into two banks; the A Bank and the B Bank. A port cannot be selected as an Input if any port on the same bank is occupied as an Output. Sending a command for this situation generates error: -221 “Settings conflict; Input Port is not available while port bank is occupied by Output” <p>If RF3 is present and RF4 is absent, a mmWave port cannot be selected as an Input if the Output Port is occupied by mmWave Transceiver with a different frequency range. Sending a command for this situation generates error: -221 “Settings conflict; Input Port is not available while occupied by Output of incompatible frequency”</p>
Preset	<p>E7760B with Option RF2: IFIO1</p> <p>E7760B without Option RF2: the first port with mmWave Transceiver attached. If no mmWave Transceiver attached: NONE</p>
Annotation	Annotation in the Meas Bar reads as follows:

- When input is A1: Input: A1
- When input is A2: Input: A2
- When input is A3: Input: A3
- When input is B1: Input: B2
- When input is B2: Input: B2
- When input is B3: Input: B3
- When input is IFIO1: Input: IFIO1
- When input is IFIO2: Input: IFIO2

Parameters for M8920A/20B Radio Test Set

<port>	Input
ANT	Ant
TR	T/R

Example	<p>Set the RF input to be the Antenna port on M9470A, labeled Ant:</p> <pre>:FEED:RF:PORT ANT</pre> <p>Set the RF input to be the T/R port on M9470A and M8920A/20B, labeled T/R. Note that Option HDX is required to enable the T/R port:</p> <pre>:FEED:RF:PORT TR</pre>
Dependencies	ANT and TR are only available in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port
Preset	ANT
Annotation	<p>Annotation in the Meas Bar reads as follows:</p> <ul style="list-style-type: none"> - When input is Ant: Input: Ant - When input is T/R: Input: T/R

Parameters for UXM Wireless Test Set

<port>	Input
RFIN	RF Input
RFIO1	RFIO 1
RFIO2	RFIO 2

Example	<p>Set the RF input to RFIO 2:</p> <pre>:FEED:RF:PORT RFIO2</pre>
Preset	RFIN

6.2.3 SA Frequency Extender Firmware Update (Front Panel Only)

When a Frequency Extender device (for example, V3050A) is connected and selected, if a firmware update is available for that device, this control will be visible. Because the measurement will be stopped for the duration of the firmware update, and because the update cannot be un-done, a confirmation dialog will be presented before proceeding with the firmware update. The update can take some time, so while in process, a modal dialog will be shown indicating that the update is in process and warning not to disconnect the device or turn off power. Typically, the update will take about a minute, but time can vary with the model of the Frequency Extender. When complete, the modal dialog will be dismissed, and a pop-up message will be shown for a few seconds indicating the success or failure of the update.

See "Error Messages" on page 3727

Notes	Measurement is stopped while the update is in process
Dependencies	Not available unless an External RF device is connected, External RF is the selected RF Input Port, and there is a firmware update available for the device

Error Messages

Update Already in Process Error

If a firmware update is already in process, the following message is displayed:

Another external device FW update is already in process. Only one update is allowed at a time

If received, wait until the current FW update is complete and then try again if still needed.

Unknown Assembly Error

When updating the firmware, the target hardware assembly needs to be identified. If for some reason the assembly cannot be identified, the firmware will not be able to initiate the update, and this error message will be displayed:

Error updating FW for external device model <model number>' serial number <serial number>

Could not find HW assembly, cannot perform FW update

The <model number> and <serial number> contain the actual numbers for the device.

This is a failure that warrants investigation, so you should contact Keysight Customer Support for service.

Error During Firmware Update Process

If there is an execution problem during the FW update, the specific error message(s) is written to the SA Event Log and this error message is displayed:

```
Error updating FW for external device model <model number>' serial number
<serial number>
```

Error during FW update. See windows event log for more details

The <model number> and <serial number> contain the actual numbers for the device.

6.2.4 SA Frequency Extender Cable Correction

An SA Frequency Extender, such as V3050A, is attached to the instrument with several cables. Keysight provides several cables for purchase with the frequency extender. Typically, these are 1-, 2-, or 3-meter cables for the RF and IF connections. Keysight has characterized these cables and can correct for their loss. This control allows you to specify which cable is being used.

If you are using another type of cable, the instrument *cannot* automatically correct for it, so this function must be set to **OFF**. In this case, you can use RCal to characterize the corrections.

Remote Command	<code>:INPut:FEXtender:CABLe:CORRection OFF V3050A1M V3050A2M V3050A3M</code>
Example	<code>:INP:FEXT:CABL:CORR V3050A1M</code>
Notes	<p>The RF Input Port selections that support an SA Frequency Extender (such as V3050A) are:</p> <p>N9042B: External RF</p> <p>No other instruments support an SA Frequency Extender</p>
Dependencies	<p>An SA Frequency Extender must be attached, and the frequency extender's port must be the selected input for this control to be visible</p> <ul style="list-style-type: none"> - If the instrument does not support frequency extenders, the SCPI command returns error -241, "Hardware missing; option not available" - If the instrument does support frequency extenders, but a frequency extender is not attached, the SCPI command returns error -241, "Hardware missing; Cable selection only available when supporting frequency extender attached" <p>When a frequency extender is attached, the control is not visible unless the frequency extender's port is the selected RF input, but the command will still be available. Setting the cable selection when the frequency extender's port is not active has no effect until the port is selected</p>
Preset	Unaffected by Mode Preset but set to preset value by Restore Input/Output Defaults or Restore System Defaults -> All
State Saved	Saved in instrument state

6.2.5 Half Duplex Input Port

Specify whether **RFIO3** or **RFIO4** is the Half Duplex Input port.

6 Input/Output

6.2 Input

Remote Command	<code>[:SENSe]:HDUPlex:PORT:INPut RFIO3 RFIO4</code>
Example	<code>:HDUPlex:PORT:INPut RFIO3</code> <code>:HDUPlex:PORT:INPut?</code>
Dependencies	Only appears in EXM If RFIO3 is selected as “Half Duplex Output Port”, then “Half Duplex Input Port” will be set to RFIO4 automatically. If RFIO4 is selected as “Half Duplex Output Port”, then “Half Duplex Input Port” will be set to RFIO3 automatically
Preset	RFIO3
State Saved	Saved in State

6.2.6 Port Information (Remote Command Only)

Provides information about an instrument port. The return information consists of two comma-separated fields:

- Field 1: the connection status (0 or 1)
- Field 2: a string of port information

The return information is device-dependent.

Remote Command	<code>[:SENSe]:FEED[:RF]:PORT:INformation? RFIN RFIN2 RFFD RFHD A1 A2 A3 B1 B2 B3 IFIO1 IFIO2 ANT TR</code>
Example	<code>:FEED:PORT:INF? A1</code> example = 1 , ”US56160060” where 1 is the connection status and ”US56160060” is the port information
Notes	For E7760B: The connection status (first field in the return value) indicates: 0 – the port is either not licensed for use or is not connected to a mmWave Transceiver 1 – the port is licensed; and for the case of mmWave ports, the port is connected to a mmWave Transceiver The port information (second field in the return value) contains: ”” (empty string) – no applicable information Serial Number – the serial number of the connected mmWave Transceiver If you send an incompatible parameter, the return values are: 0,””
Dependencies	Only valid for E7760B

6.2.7 RF Preselector

In models that support the RF Preselector, such as PXE (N9048B), allows you to turn the preselector on or off.

NOTE

When using the RF Preselector, if your measurement starts below 3.6 GHz and finishes above 3.6 GHz, the preselector bypass switch will have to switch in and out for every measurement. When this is the case, you will hear a clicking sound from the instrument and a warning message will be displayed: “Settings Alert: Mechanical switch cycling”. You are advised to *avoid* such setups as much as possible, to minimize switch wear. Pressing **Mode Preset** resets Stop Freq to 3.6 GHz, to exit this state, or you can manually set Stop Freq to be below 3.6 GHz.

Remote Command	<code>[:SENSe]:POWer[:RF]:RFPSelector[:STATe] 1 0 ON OFF</code> <code>[:SENSe]:POWer[:RF]:RFPSelector[:STATe]?</code>
Example	<code>:POW:RFPS 1</code> <code>:INP:PRES:STAT ON</code>
Notes	Set full compliance measurement: <code>[:SENSe]:POWer[:RF]:RFPSelector[:STATe] 1 ON</code> Set pre-compliance measurement: <code>[:SENSe]:POWer[:RF]:RFPSelector[:STATe] 0 OFF</code>
Dependencies	Only appears when RF Input is selected as the Input Only appears in MXE and PXE The RF Preselector is not available in all measurements. The key is grayed out in measurements that do not support it, unless you are in a Mode in which no measurements support it, in which case the key does not appear at all. If the preselector is unavailable, it is forced to Off. Attempting to turn it on or off in measurements that do not support it generates the error message: -221, Settings conflict; Feature not supported for this measurement The RF Preselector is not available when FFT Sweep Type is manually selected. Attempting to turn it on or off when this is the case generates an error message: -221, Settings conflict; RF Presel unavailable when Sweep Type=Manual FFT Only appears in Modes that support the RF Preselector, in other Modes, sending the SCPI command or query generates an error In Frequency Scan measurement, this key is grayed-out when final measurement is running. Warning message “Function not available while measurement is running” appears if the grayed-out key is pressed
Preset	ON
Annotation	When RF Preselector=On, “RF PRESEL” is displayed on the Settings Panel
Backwards Compatibility SCPI	<code>:INPut<1 2>:PRESelection[:STATe] ON OFF</code> <code>:INPut<1 2>:PRESelection[:STATe]?</code> Included for R&S ESU compatibility

6.2.8 Notch Filter

In some models that support the RF Preselector, such as PXE, there is also a notch filter to suppress signals in the frequency band from 2.4 GHz to 2.5 GHz. This control allows you to turn the notch filter on or off.

Remote Command	<code>[:SENSe]:POWer[:RF]:RFPSelector:NFIltEr[:STATe] OFF ON 0 1</code> <code>[:SENSe]:POWer[:RF]:RFPSelector:NFIltEr[:STATe]?</code>
Example	<code>:POW:RFPS:NFIL 1</code> <code>:POW:RFPS:NFIL?</code>
Dependencies	Only appears when RF Input is selected as the Input Only appears in models that support the notch filter, such as PXE. Attempting to turn it on or off via SCPI in models that do not support it generates error message: -241 Hardware missing; Not available for this model number Only appears in measurements that support the Notch Filter, such as EMI Receiver measurements. Attempting to turn it on or off via SCPI in measurements that do not support it generates error message: -221, Settings conflict; Feature not supported for this measurement In Frequency Scan measurement, this control is grayed-out when final measurement is running, aligned with the RF Preselector key. The warning message "Function not available while measurement is running" appears if the grayed-out control is pressed
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON
Annotation	Due to limited space in the Measurement Bar, Notch Filter annotation is shown as part of the RF Presel state <ul style="list-style-type: none"> – RF Presel: On, NF, when both RF Presel and Notch Filter are turned on – RF Presel: On, when RF Presel = on and Notch Filter= off – RF Presel: Off, when RF Presel = off
Backwards Compatibility SCPI	<code>:INPut<1 2>:PRESelection:FILTer:NOTCh[:STATe] ON OFF</code> <code>:INPut<1 2>:PRESelection:FILTer:NOTCh[:STATe]?</code>

6.2.9 RF Calibrator

Lets you choose a calibrator signal to look at or turns the calibrator off.

Remote Command	<code>[:SENSe]:FEED:AREFereNce REF50 REF4800 OFF</code> <code>[:SENSe]:FEED:AREFereNce?</code>
Example	Select the 50 MHz amplitude reference as the signal input: <code>:FEED:AREF REF50</code>

	<p>Select the 4.8 GHz amplitude reference as the signal input:</p> <pre>:FEED:AREF REF4800</pre> <p>Turn the calibrator "off" (switches back to the selected input - RF or I/Q):</p> <pre>:FEED:AREF OFF</pre>
Dependencies	<p>Only appears when RF Input is selected as the Input</p> <p>Selecting an input (RF, Ext Mix or I/Q) turns the Calibrator OFF. This is true whether the input is selected using the menu panel or <code>[:SENSe] :FEED</code></p> <p>The 4.8 GHz internal reference is only available in some models and frequency range options. If the 4.8 GHz reference is not present, the 4.8 GHz choice does not show, and if the REF4800 parameter is sent, the instrument generates an error</p>
Couplings	When one of the calibrator signals is selected, the instrument routes that signal (an internal amplitude reference) to the instrument, and changes the main input selection to RF so the calibrator signal can be seen. When you turn the calibrator off it does not switch back to the previously selected input
Preset	OFF
State Saved	Saved in instrument state
Annunciation	An advisory message is sent, indicating that the input is set to internal
Backwards Compatibility SCPI	
Notes	<p>For ESA backwards compatibility</p> <p>In the ESA the calibrator was a separate output which you connected to the input and switched on with this command</p> <p>In X-Series, the ON parameter is aliased to <code>[:SENSe] :FEED:AREF REF50</code> and the OFF parameter is aliased to <code>[:SENSe] :FEED:AREF OFF</code></p> <p>When <code>:CALibration:SOURce:STATe?</code> is received, 1 is returned if any of the references is selected, or 0 if the Calibrator is OFF</p>
Preset	OFF
Backwards Compatibility SCPI	<pre>:CALibration:SOURce:STATe OFF ON 0 1</pre> <pre>:CALibration:SOURce:STATe?</pre>

6.2.10 RF Coupling




Specifies alternating current (**AC**) or direct current (**DC**) coupling at the instrument RF input port. Selecting **AC** coupling switches in a blocking capacitor that blocks any DC voltage present at the instrument input. This decreases the input frequency range of the instrument, but prevents damage to the input circuitry of the instrument if there is a DC voltage present at the RF input.

NOTE

When operating in **DC** coupled mode, ensure protection of the instrument input circuitry by limiting the DC part of the input level to within 200 mV of 0 Vdc. In **AC** or **DC** coupling, limit the input RF power to +30 dBm (1 Watt).

6 Input/Output

6.2 Input

Remote Command	:INPut:COUPling AC DC :INPut:COUPling?	
Example	:INP:COUP DC	
Dependencies	<p>Only appears when RF Input is selected as the Input</p> <p>Does not appear in models that are always AC coupled. When the SCPI command to set DC coupling is sent to these models, it generates the error "Illegal parameter value; This model is always AC coupled" In these models, :INP:COUP? always returns AC</p> <p>Does not appear in models that are always DC coupled. When the SCPI command to set AC coupling is sent to these models, it generates the error "Illegal parameter value; This instrument is always DC coupled" In these models, :INP:COUP? always returns DC</p>	
Preset	AC on models that support AC coupling On models that are always DC coupled, such as millimeter wave models (frequency ranges 30 GHz and above), the preset is DC	
State Saved	Saved in instrument state	
Annunciation	<p>When the RF Input is selected, and AC coupling is selected, annunciators appear in the Meas Bar to that effect:</p>  <p>appears in the settings panel (the row of annunciators across the top of the display) to that effect, as shown below:</p> <p>When the RF Input is selected, and DC coupling is in effect, the annunciator changes as shown below:</p>  <p>Note the amber color, which indicates that you should exercise caution when applying a signal to any DC coupled input (see note above this table for the specific cautions)</p> <p>On models that support both AC and DC coupling: when DC coupling is selected, a warning condition message appears in the status line "DC coupled" as shown below:</p>  <p>On models that support both AC and DC coupling: when AC coupling is selected, and any part of the displayed frequency range is below 10 MHz, a warning condition message appears in the status line: "AC: Accy unspec'd below 10 MHz"</p> <p>In AC coupling mode, you can view signals below the corner frequency of the DC block, but below a certain frequency the amplitude accuracy is not specified.</p> <p>The lowest frequency for which specifications apply is:</p>	
X-Series Model	Lowest Freq for meeting specs when AC coupled	Lowest Freq for meeting specs when DC coupled
CXA-503/507	100 kHz	n/a

X-Series Model	Lowest Freq for meeting specs when AC coupled	Lowest Freq for meeting specs when DC coupled
CXA-C75 Input 2	1 MHz	n/a
CXA-513/526	10 MHz	9 kHz
CXA-m	10 MHz	9 kHz
EXA	10 MHz	9 kHz
MXA	10 MHz	20 Hz
PXA	10 MHz	3 Hz
UXA	10 MHz	3 Hz

Some amplitude specifications apply only when coupling is set to DC. Refer to the appropriate amplitude specifications and characteristics for your instrument.

6.2.11 Input Z Correction

Sets the input impedance for unit conversions. This affects the results when the y-axis unit is voltage or current units (dBmV, dBμV, dBμA, V, A), but not when it is power units (dBm, W). The impedance you select is for computational purposes only, since the actual impedance is set by internal hardware to 50 ohms. Setting the computational input impedance to 75 ohms is useful when using a 75 ohm to 50-ohm adapter to measure a 75-ohm device on an instrument with a 50-ohm input impedance.

There are a variety way to make 50-to-75-ohm transitions, such as impedance transformers or minimum loss pads. The choice of the solution that is best for your measurement situation requires balancing the amount of loss that you can tolerate with the amount of measurement frequency range that you need. If you are using one of these pads/adaptors with the **Input Z Corr** function, you might also want to use the **Ext Gain** key. This function is used to set a correction value to compensate for the gain (loss) through your pad. This correction factor is applied to the displayed measurement values.

Remote Command	<code>[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50 75</code> <code>[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]?</code>
Example	Set the input impedance correction to 75 ohms: <code>:CORR:IMP 75</code>
Couplings	In CXA option C75, when RF Input 2 is selected, the Input Z Correction automatically changes to 75 ohms. You may then change it to whatever is desired. When the main RF Input is selected, the Input Z Correction automatically changes to 50 ohms. You may then change it to whatever is desired
Preset	Unaffected by Preset, but set to 50 ohms by Restore Input/Output Defaults or Restore System Defaults→All Some instruments/options may have 75 ohms available
State Saved	Saved in instrument state

6.2.12 All Screens Use Same Input

If **ON**, then all Screens share the same Input settings. This is the default state.

If **OFF**, then certain settings are allowed to be local to each Screen, meaning one Screen can have them set one way and another can have them set another way.

The Input settings that become local to each Screen when **All Screens Use Same Input** is **OFF** are:

Input Tab:

- Selected Input (RF, Ext Mix, BBIQ)
- RF Input Port (only appears in instruments with multiple RF ports, such as N9041B, MXE, and CXA)
- RF Coupling (AC/DC)
- Input Z Correction

External Gain Tab:

- External Preamp
- MS
- BTS

Corrections Tab:

- For each Correction, whether it is on or off

Note that if **All Screens Use Same Input** is **OFF** and you press the + control to create a new Screen, the new Screen contains a copy of the old Screen’s state, including all its Input/Output variables.

Remote Command	:INSTrument:COUPle:SCReen:INPut ON OFF 1 0 :INSTrument:COUPle:SCReen:INPut?
Example	:INST:COUP:SCR:INP OFF
Preset	ON Not affected by Input/Output Preset , but set to ON by Restore Input/Output Defaults

6.2.13 External Mixer Setup

Lets you select the mixer type, and lets you configure your mixer (if necessary). The first page of the dialog shows you the current settings for the selected mixer. These

settings may be dependent on which IF path is currently in use, whether a + or – harmonic is currently selected, etc.


To apply any amplitude correction factors needed to correct mixer flatness, you enter values into one of the Correction tables (under **Input/Output, Corrections**). The correction conversion loss values can be extracted from data supplied with the mixer or from manual measurements you make to determine the conversion loss. Note that the correction applied by the Correction tables is global to the instrument; therefore, you should make sure to turn off the External Mixer corrections when you are not using the External Mixer input.

NOTE

Keysight USB Mixers automatically supply their flatness data to the instrument, and the correction is applied internally. No correction needs be entered, and the correction does not appear in the user-accessible Corrections tables. You are free to enter additional corrections into the Correction tables under **Input/Output, Corrections**.

Notes	The setup summary on the menu panel appears just above this control, showing the current external mixer setup
Dependencies	Only appears when External Mixer is selected as the Input
State Saved	All settings in the External Mixer Setup dialog are part of the Input/Output system, and hence are saved whenever State is saved

The **External Mixer Setup** screen looks like this:

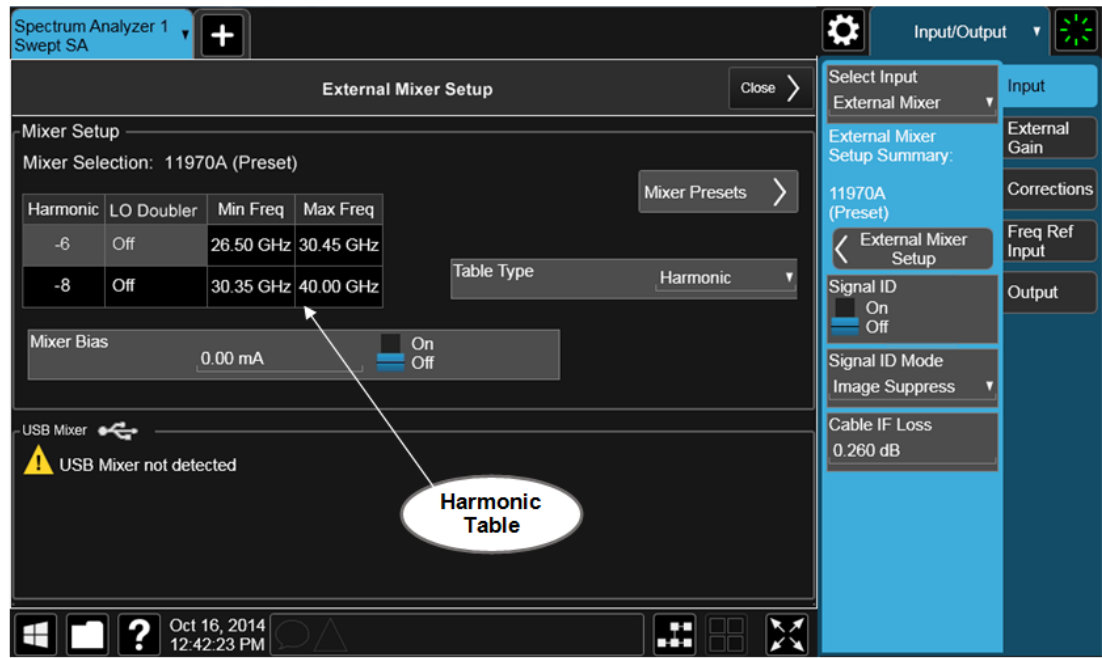

6 Input/Output

6.2 Input

The current Mixer selection (the current or most recently connected USB Mixer, or the most recent Mixer Preset, or **Custom** if you have modified the setup) reads out at the top of this screen as **Mixer Selection**

The Harmonic Table currently being used reads out below the Mixer Selection. It shows each range being used for the current mixer. Note that a band may be made up of up to 3 ranges. Each range represents a choice of mixer harmonic and doubler state. When you select a Mixer Preset, it sets the instrument Start and Stop frequency to the values shown in the Harmonic Table; Start Freq is set to the Min Freq for the bottom range, and Stop Freq is set to the Max Freq for the top range. In many cases you can exceed these nominal values; the absolute maximum and minimum frequency for each preset are shown in the tables that accompany the control descriptions for the Mixer Presets.

NOTE

If the current measurement has a limited Span available to it and cannot achieve the Span shown in the table ($\text{Span} = \text{Stop Freq} - \text{Start Freq}$), the instrument uses the maximum Span the measurement allows, and sets **Center Frequency** to the midpoint of the Start and Stop Freq values in the Harmonic Table.

You may edit some of the Harmonic and LO Doubler fields in the Harmonic Table, as shown by the gray backgrounds of these fields. When you edit the Harmonic Table, the Mixer Selection changes to **Custom**. To change it back you must go back into the Mixer Presets menu and select a Preset.

When you edit the Harmonic Table, the nominal Min Freq and Max Freq that are available will usually be different than the Preset you were using; and the absolute frequency limits will change as well. This may result in a change to your Start and/or Stop Freq, if the current values fall outside the new range, requiring you to retune your Center Freq to get your signal back in the center.


The instrument supports the Keysight M1970 Series Harmonic Mixers with USB connection. While in External Mixing, if one of these mixers is plugged in to a USB port, it is automatically detected and displayed in the "USB Mixer" area of the setup screen, including its model number and serial number.

The instrument assumes that if you plug a mixer into the USB you want to use that mixer, so:

1. If a USB mixer is connected to the USB port, the Mixer Presets button is grayed-out, as none of the presets make sense with a USB Mixer connected. Note that once the instrument has acquired the USB Mixer, the mixer selection will remain if it is subsequently unplugged from the USB, allowing you to plug it back in with no change to your settings. However, once you unplug it, the Mixer Presets control ceases to be grayed-out, allowing you to preset to a different mixer
2. When Restore Input/Output Defaults is performed, if a Keysight USB Mixer is plugged into the instrument's USB port, the Mixer Selection remains unchanged

- When recalling an instrument state, if a Keysight USB Mixer is plugged into the instrument's USB port, and the Mixer Selection in the recalled state is for a USB Mixer that does not match the mixer currently plugged in, you will have to unplug your mixer and then plug it back in to get the instrument to recognize your mixer

As long as the selection in Ext Mixer Setup shows one of the USB mixers, the **Mixer Bias** control is grayed-out and the Harmonic Table is no longer editable, as shown by the fact that the fields in the Harmonic Table are now black and the **Table Type** control is grayed-out.

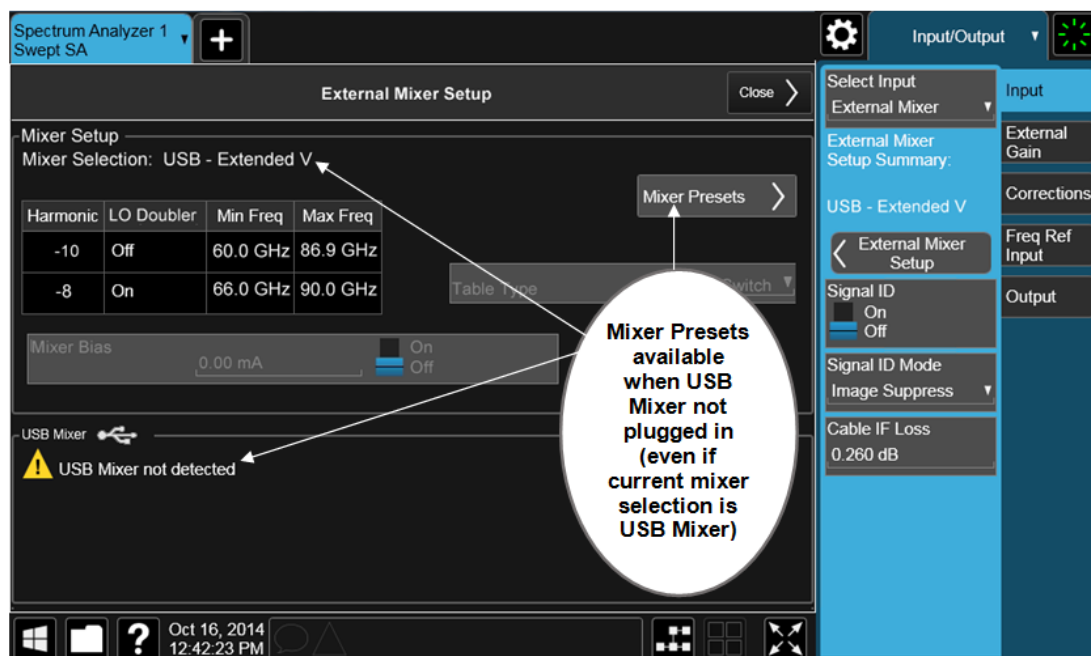

Only one USB Mixer is supported at a time. To switch to a different USB Mixer, disconnect the one that is no longer being used prior to connecting a new one.

The **Mixer Selection** displayed and menu panel readback for the Keysight M1970 series mixers is:

Mixer Model	Mixer Selection display on Setup Screen	Readback
Keysight M1970E: Option 001: 60 to 90 GHz Waveguide Harmonic Mixer	USB - M1970E-001 E-Band	USB Mixer E-Band
Keysight M1971E: Option 001: 60 to 90 GHz Waveguide Harmonic Mixer	USB - M1971E-001 E-Band	USB Mixer E-Band
Keysight M1971E: Option 003: 55 to 90 GHz	USB - M1971E-003 Extended E-Band	USB Mixer

6 Input/Output

6.2 Input

Mixer Model	Mixer Selection display on Setup Screen	Readback
GHz Waveguide Harmonic Mixer		Extended E
Keysight M1971V: Option 001: 50 to 75 GHz Waveguide Harmonic Mixer	USB - M1971E-001 V-Band	USB Mixer V-Band
Keysight M1971W: Option 001: 75 to 110 GHz Waveguide Harmonic Mixer	USB - M1971E-001 W-Band	USB Mixer W-Band
Keysight M1970V Option 001: 50 to 75 GHz Waveguide Harmonic Mixer	USB - M1970V-001 V-Band	USB Mixer V-Band
Keysight M1970V Option 002: 50 to 80 GHz Waveguide Harmonic Mixer	USB - M1970V-002 Extended V-Band	USB Mixer Extended V
Keysight M1970W Option 001: 75 to 110 GHz Waveguide Harmonic Mixer	USB - M1970W-001 W-Band	USB Mixer W-Band

The Keysight USB mixer essentially acts as a “remote front end” and is fully calibrated over the specified frequency range, without requiring any user interaction. This is particularly useful at high mm-wave frequencies, where cable loss is typically quite large, and it is desirable to bring the front end right up to the device under test, rather than bringing the mm-wave signal to the instrument using a lossy and uncalibrated cable or waveguide connection.

Connecting the mixer to the USB port on the instrument switches you to External Mixing, aborts the current measurement, and initiates an alignment of the mixer. A popup message, “USB Mixer connected” appears on the display. When a USB mixer and the LO/IF cable are connected the alignment is performed. When the alignment begins, an “Aligning” popup replaces the previous message on the display. When the alignment completes, the current measurement restarts.

6.2.13.1 Mixer Presets

Presets the mixer setup for the particular type of mixer that you are using.

These presets are divided into four groups:

- One for legacy HP/Agilent/Keysight mixers (11970)
- Three for general purpose mixers:

- presets that use a single harmonic and no doubling
- presets that use a single harmonic but double the LO
- presets that use multiple harmonics

Note that the IF/LO port provides a 3.8–14 GHz LO in two bands: 3.8–8.7 (LO fundamental), and 8.6–14 GHz (doubled LO).

In most cases, once you have executed the preset, you will not need to adjust any further settings.

Remote Command	<pre>[:SENSe]:MIXer:BAND A Q U V W NA ND NE NF NG NJ NK NQ NU NV NW NY NEXT DD DF DG DJ DK DQ DV DW DY DEXT MA ME MU MCOAX USB VDIWR6PT5M4 [:SENSe]:MIXer:BAND?</pre>								
Example	<pre>:MIX:BAND A :MIX:BAND?</pre>								
Notes	<p>A Q U V W select HP/Agilent/Keysight 11970 mixer presets NA ND NE NF NG NJ NK NQ NU NV NW NY NEXT select single harmonic, non-doubled LO presets DD DF DG DJ DK DQ DV DW DY DEXT select single harmonic, doubled LO presets MA ME MU MCOAX select multiple harmonic presets VDIWR6PT5M4 selects presets for the VDI WR6.5CCD-M4 external mixer (a Compact Down-Converter in the Keysight N9029ACST Series) VDIWR6PT5M4 requires Model N9042B with the EXW option. To use this selection, you must connect cables from the external mixer to the High LO Out and High IF In ports (not the Ext Mixer port) of the N9042B All these presets are detailed in their respective control descriptions The query returns the most recent preset, <i>unless</i> the harmonic table has been edited after the preset was executed. If the harmonic table has been edited, returns CUSTOM The command USB refreshes the USB mixer connection and automatically detects the mixer band. The query returns the following if a Keysight USB Mixer is plugged into the instrument's USB port:</p> <table> <tr> <td>USB E</td><td>Keysight E-Band USB Mixer</td></tr> <tr> <td>USB V</td><td>Keysight V-Band USB Mixer</td></tr> <tr> <td>USB VEXT</td><td>Keysight Extended V-Band USB Mixer</td></tr> <tr> <td>USB W</td><td>Keysight W-Band USB Mixer</td></tr> </table> <p>Note that the parameters CUSTOM, USB V, USB VEXT, and USB W are query responses only, and cannot be sent to the instrument The following cross-reference matches the mixer band designators used by Keysight to the EIA waveguide designations:</p>	USB E	Keysight E-Band USB Mixer	USB V	Keysight V-Band USB Mixer	USB VEXT	Keysight Extended V-Band USB Mixer	USB W	Keysight W-Band USB Mixer
USB E	Keysight E-Band USB Mixer								
USB V	Keysight V-Band USB Mixer								
USB VEXT	Keysight Extended V-Band USB Mixer								
USB W	Keysight W-Band USB Mixer								

6 Input/Output

6.2 Input

EIA	Keysight	Freq Range
WR-28	A	26.5 - 40 GHz
WR-22	Q	33 - 50 GHz
WR-19	U	40 - 60 GHz
WR-15	V	50 - 75 GHz
WR-12	E	60 - 90 GHz
WR-10	W	75 - 110 GHz
WR-8	F	90 - 140 GHz
WR-6	D	110 - 170 GHz
WR-5	G	140 - 220 GHz
WR-3	J	220 - 325 GHz

Preset When **Restore Input/Output Defaults** is performed, an "A" mixer preset is also issued (11970A band), unless a Keysight USB Mixer is plugged into the instrument's USB port, in which case the Mixer Selection remains unchanged

When using Keysight USB Mixers, if **Restore All Defaults (:SYSTem:DEFault)** has been performed, either remove and reinsert the USB cable or press the **Refresh USB Mixer Connection** control


VDI CCD (N9029)

These presets select a setup that uses a single harmonic and no LO doubling.

This setup is used with an external mixer in the series VDI CCD (N9029ACST). The currently supported example is the D-band mixer VDI WR6.5CCD-M4.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
WR6.5 M4 (D-band)	VDI WR6.5CCD-M4	-4	110	170	140

This mixer setup is enabled only for model N9042B with the EXW option. You must connect cables from this external mixer to the High LO Out and High IF In ports (not the Ext Mixer port) of the N9042B, as illustrated below:

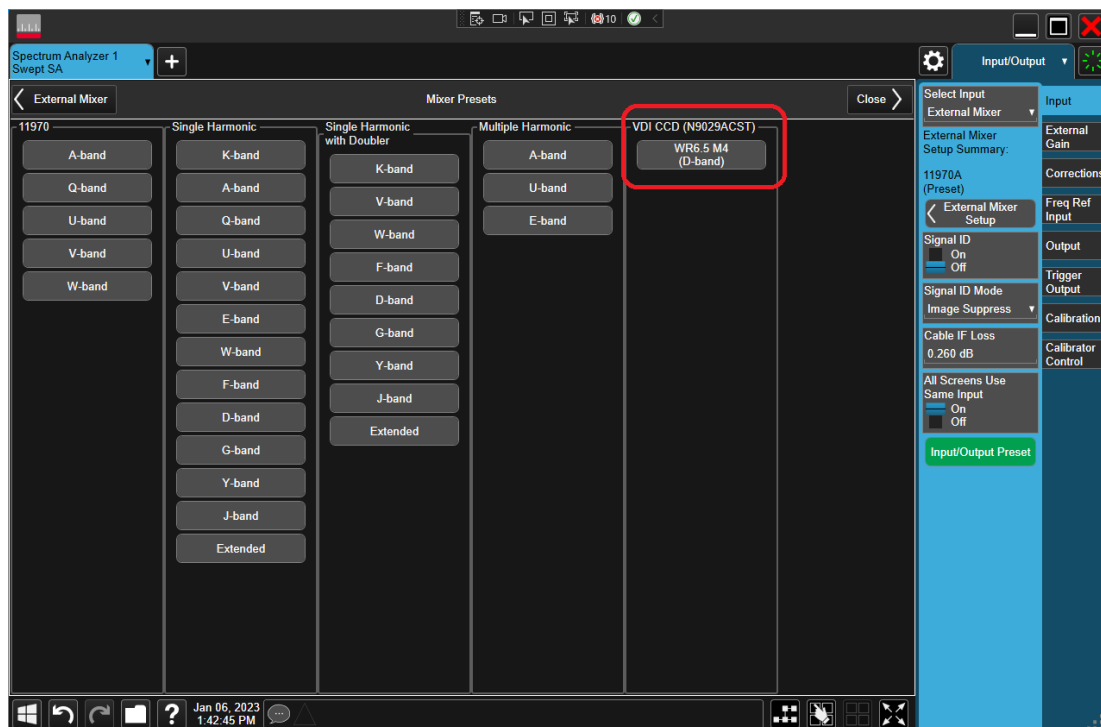

11970

Lets you preset for a model in the HP/Agilent/Keysight 11970 series.

Because the X-Series has an LO range of 3.8 - 14 GHz, and older analyzers had an LO range of 3.0 - 6.8 GHz, the harmonic numbers used in the X-Series may differ from those used on older analyzers for the same mixers. Additionally, some of the 11970 mixers cannot be operated over their full range with the X-Series without switching harmonics. Consequently, you will find that some of the bands (A-Band, for example) are broken into two ranges for use with the X-Series.

Below are the 11970A presets. The 11970U and the 11970W use a single harmonic. The other three switch harmonics mid-band. Both harmonic ranges are shown in the table. None of these mixers use LO doubling.

The 11970 K-band mixer and the 11974 preselected mixer series are not supported.

Preset	Readout on setup dialog and menu panel	Range	Harm #	RF start	RF stop	RF center
A-band	11970A	1	-6	26.5	30.45	28.475
		2	-8	30.35	40	35.175
Q-band	11970Q	1	-8	33	40.8	36.9
		2	-10	39.8	50	44.9
U-band	11970U	..	-10	40	60	50
V-band	11970V	1	-12	50	66	58
		2	-14	53	75	64
W-band	11970W	..	-18	75	110	92.5

Single Harmonic

These presets select a setup that uses a single harmonic and no doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
K-band	K-band Single Harmonic, no doubler	-4	18	26.5	22.25
A-band	A-band Single Harmonic, no doubler	-6	26.5	40	33.25
D-band	D-band Single Harmonic, no doubler	-20	110	170	140
E-band	E-band Single Harmonic, no doubler	-12	60	90	75
F-band	F-band Single Harmonic, no doubler	-18	90	140	115
Q-band	Q-band Single Harmonic, no doubler	-6	33	50	41.5
U-band	U-band Single Harmonic, no doubler	-8	40	60	50
V-band	V-band Single Harmonic, no doubler	-10	50	75	62.5
W-band	W-band Single Harmonic, no doubler	-14	75	110	92.5
G-band	G-band Single Harmonic, no doubler	-26	140	220	180
Y-band	Y-band Single Harmonic, no doubler	-30	170	260	215
J -band	J-band Single Harmonic, no doubler	-38	220	325	272.5
Extended	Extended Single Harmonic, no doubler	-40	155	345	250

Single Harmonic with doubler

These presets select a setup that uses a single harmonic and doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
D-band	D-band Single Harmonic w/doubler	-14	110	170	140
F-band	F-band Single Harmonic w/doubler	-10	90	140	115
G-band	G-band Single Harmonic w/doubler	-16	140	220	180
J-band	J-band Single Harmonic w/doubler	-24	220	325	272.5
K-band	K-band Single Harmonic w/doubler	-2	18	26.5	22.25
Q-band	Q-band Single Harmonic w/doubler	-4	33	50	41.5
V-band	V-band Single Harmonic w/doubler	-6	50	75	62.5
W-band	W-band Single Harmonic w/doubler	-8	75	110	92.5
Y-band	Y-band Single Harmonic w/doubler	-20	170	260	215
Extended	Extended Single Harmonic w/doubler	-28	245	390	317.5

Multiple Harmonics

These presets select a setup that uses multiple harmonics and may or may not use doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Range	Harm #	Dbler?	RF start	RF stop	RF Center
A-band	A-band Multiple Harmonic	1	-4	N	26.5	34.1	30.3
		2	-4	Y	33.1	40	36.55
E-band	E-band Multiple Harmonic	1	-6	Y	60	83	71.5
		2	-8	Y	65	90	77.5
U-band	U-band Multiple Harmonic	1	-6	N	40	51.5	45.75
		2	-6	Y	49.5	60	54.75
Coaxial	Coaxial Multiple Harmonic	1	-4	N	26.5	34	30.25
		2	-4	Y	32.5	55	43.75
		3	-6	Y	50	70	60

6.2.13.2 Mixer Bias


Adjusts an internal bias source for use with external mixers. The bias signal is present on the center conductor of the IF input connector on the front panel. The shunt current range is from -10 mA to 10 mA, and it can be set whether Mixer Bias state is On or Off, but it will only be applied if it is On.

The bias remains as set if you switch to another input (for example, the RF Input).

Remote	<code>[:SENSe]:MIXer:BIAS <real></code>
Command	<code>[:SENSe]:MIXer:BIAS?</code>

6 Input/Output

6.2 Input

Example	<code>:MIX:BIAS 0</code> <code>:MIX:BIAS?</code>
Preset	Unaffected by Preset, but set to OFF (0) by Restore Input/Output Defaults
State Saved	Saved in instrument state
Min	-10 mA
Max	10 mA
Annunciation	When the bias is turned on this (together with the bias polarity) is indicated in the Meas Bar with a plus or minus sign:  otherwise, it reads "Off"

Auto Function

Remote Command	<code>[:SENSe]:MIXer:BIAS:STATe OFF ON 0 1</code> <code>[:SENSe]:MIXer:BIAS:STATe?</code>
Example	<code>:MIX:BIAS:STAT 0</code> <code>:MIX:BIAS:STAT?</code>
Preset	OFF

6.2.13.3 Table Type

Determines the Custom Mixer configuration type. You can choose: Single Row, Harmonic Switching, or Doubler Switching. For details, see ["Available Types" on page 3745](#).

The Harmonic Table can be configured as:

- A single row (meaning only one harmonic number is used and the LO Doubler is either on or off)
- Two rows where the harmonic number switches between the first row and the second
- Two rows where the LO Doubler state switches between the first row and the second

Available Types

Table Type	Behavior
Single Row	The External Mixer always stays in the same Harmonic Number and the LO Doubler is either on or off and does not change state during a sweep. You may change the Harmonic Number and you may change the state of the Doubler
Harmonic	The External Mixer switches the Harmonic Number in the middle of the sweep. The LO Doubler may be on

Table Type	Behavior
Switching	or off, but it is the same for both Harmonic Numbers. You can set the initial Harmonic Number, and when it switches it decrements by two when the harmonic is negative and increments by two when the harmonic is positive For example, if you set the initial number to -6, when it switches it will go to -8. If you set the harmonic number to 8, when it switches it will go to 10
Doubler Switching	The External Mixer switches the doubler from Off to On in the middle of the sweep. You can set the Harmonic Number, but it stays the same for the Doubler Off state as for the Doubler On state. The LO Doubler control is grayed-out in this table type

Editable Fields

Table Type	Fields you can edit
Single Row	Harmonic and LO Doubler cells
Harmonic Switching	Harmonic and LO Doubler cells (only the first row)
Doubler Switching	Harmonics cell (only the first row)
Note that you cannot add or delete rows from the table; you can only modify the rows that are already there.	
Remote Command	<code>[:SENSe]:MIXer:TTYPe SINGLE HARMonic DOUBler</code> <code>[:SENSe]:MIXer:TTYPE?</code>
Example	<code>:MIX:TTYP SING</code>
Couplings	When you change the Table Type, the Mixer Selection changes to Custom
Preset	Depends on the current Mixer Preset. Unaffected by Mode Preset , but Restore Input/Output Defaults presets the Mixer to 11970A, for which the Table Type is Harmonic Switching
State Saved	Saved in instrument state

6.2.13.4 Select VDI CCD Correction

Selects the appropriate VDI CCD Correction data by mixer Serial Number.

Remote Command	<code>[:SENSe]:VCORrection:SElect NONE <serialNumber></code> <code>[:SENSe]:VCORrection:SElect?</code>
Example	<code>:VCOR:SEL NONE</code> <code>:VCOR:SEL 123123</code>
Dependencies	Requires EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses
Couplings	When the External Mixer Model or VDI CCD Corrections data changes, this field checks whether VDI CCD corrections are stored for the currently-selected External Mixer Model, and automatically selects the first serial number found, or NONE if no matching corrections are found When setting this parameter via SCPI, if no match is found for the given serial number, the parameter

	is set to NONE . If the correction should be automatically selected, this can be done by setting the value via SCPI to Any (see "External Mixer Setup" on page 3735)
State Saved	Saved in instrument state

6.2.13.5 Delete All VDI CCD Corrections

Erases all stored VDI CCD corrections.

Remote Command	[:SENSe]:VCORrection:DELeTe
Example	:VCOR:DEL
Dependencies	Requires EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses
Couplings	When the VDI CCD corrections are deleted from memory, "Select VDI CCD Correction" on page 3746 is set to NONE

6.2.13.6 Harmonic

Lets you enter the **Harmonic** value with its associated sign (mixing mode). Only the first row of the table is editable. When you edit a value or change ["Table Type" on page 3745](#), the Mixer Selection changes to **Custom**.

In **Custom** mode, the maximum start and stop frequencies are strictly set by the LO range and the harmonic number you have chosen. The undoubled LO range is approximately 3.8 – 8.7 GHz, and (for LOs that support doubling) the doubled range is approximately 8.0 – 14.0 GHz. That range times the harmonic you have selected determines the tuning range. If your frequency is currently outside that range when you edit the Harmonic Table, the frequency will be changed to fall at the edge of the range. To change it back, go to the **Mixer Presets** menu and select a Preset.

The harmonic number is a signed integer, where the sign distinguishes between positive and negative mixing products. Desired mixing products occur at an IF frequency that equals the difference between the RF frequency (f_{RF}) and the LO frequency (Nf_{LO}). When this difference is positive, we can say $f_{IF} = f_{RF} - Nf_{LO}$. When this difference is negative, we can say $f_{IF} = Nf_{LO} - f_{RF}$. Thus, a negative harmonic means the instrument will be tuned such that the harmonic of the LO is higher than the indicated frequency by the frequency of the first IF. A positive harmonic means the instrument will be tuned such that the harmonic of the LO is lower than the indicated frequency by the frequency of the first IF.

Remote Command	[:SENSe]:MIXer:HARMonic <integer> [:SENSe]:MIXer:HARMonic?
Example	:MIX:HARM -28 :MIX:HARM?
Notes	The query returns the harmonic value of the first row of the harmonic table

Couplings	When you set a value for Harmonic via SCPI, the Mixer Selection changes to Custom
Preset	Unaffected by Mode Preset , but Restore Input/Output Defaults turns editing off, the Harmonic Table returns to normal, and the Mixer is preset to 11970A, which has -6 in the first row of its Harmonic Table
State Saved	Saved in instrument state
Min	-400
Max	400

6.2.13.7 LO Doubler

Lets you specify whether the Doubler is on or off. Only the first row of the table is editable, and the LO Doubler field is only editable in Single Row and Harmonic Switching table types. When you edit a value or change the Table Type, the Mixer Selection changes to **Custom**.

The LO Doubler setting controls the choice of the LO doubler state for LO's that support doubled operation. In Single Row mode it is either on or off for the one row in the table. In Harmonic Switching mode it is on for both rows or off for both rows. In Doubler switching it is off for row 1 and on for row 2, so it is not editable.

In LOs that support doubling, the fundamental band is approximately 3.8 – 8.7 GHz, and the doubled band is approximately 8.0 – 14 GHz. The higher LO frequency can result in a lower mixer harmonic and reduced mixer conversion loss.

Remote Command	<code>[:SENSe]:MIXer:LODoubler ON OFF 0 1</code> <code>[:SENSe]:MIXer:LODoubler?</code>
Example	<code>:MIX:LOD 0</code> <code>:MIX:LOD?</code>
Notes	The query returns the doubler value of the first row of the harmonic table
Dependencies	Grayed-out and set to OFF when "Table Type" on page 3745 is set to Doubler Switching Grayout message: "-221 Settings conflict; Function unavailable while Table Type=Doubler Switching"
Couplings	When you set a value via SCPI, the Mixer Selection changes to Custom
Preset	Unaffected by Mode Preset , but Restore Input/Output Defaults turns off editing, the Harmonic Table returns to normal, and the Mixer is preset to 11970A, which has the doubler Off in the first row of its Harmonic Table
State Saved	Saved in instrument state

6.2.13.8 Refresh USB Mixer Connection

Re-reads the USB devices and refreshes connection to Keysight USB mixers. This operation is the same as physically removing and reinserting the mixer's USB connection.

Example	<code>:MIX:BAND USB</code>
Notes	When using Keysight USB Mixers, if Restore All Defaults (<code>:SYSTem:DEFault</code>) has been performed, either remove and reinsert the USB cable or press Refresh USB Mixer Connection

6.2.14 Mixer Path

Determines which path you wish to use when using M1971 series USB mixers:

- **NORMa1**, in which they function as a classic external mixer with a single conversion
- **DUAL** Conversion, in which the first conversion is to a higher IF frequency (nominally 1.5 GHz) and you provide a 10 MHz signal to which an internal PLL is locked, to effect a second downconversion. The higher IF frequency used in Dual Conversion increases the image frequency offset, giving you a wider image-free conversion range. This reduces aliasing effects and improves the image suppress functionality for wideband signals
- **AUX** Equipment, wherein the first mixer output drives an output connector on the mixer and the instrument is out of the circuit. When you connect an M1971 Mixer to USB, the instrument will pull the IF and RF flatness data from the USB mixer and write this data to a user-accessible file in CSV format for your use when Aux Equipment is selected

Remote Command	<code>[:SENSe]:MIXer:MPATH NORMa1 DUAL AUX</code> <code>[:SENSe]:MIXer:MPATH?</code>
Example	<code>:MIX:MPAT NORM</code>
Dependencies	<p>Only appears when an M1971 series Mixer is connected to the USB port of the instrument</p> <p>When AUX Equipment is the selection, Sig Id is turned off to avoid shifting the LO. It is <i>not</i> turned back on when a different path is selected</p> <p>When AUX Equipment is the selection, there is no valid result, so the instrument displays a “No Result; Meas invalid with Aux Equip” error condition message (error 135)</p> <p>DUAL Conversion is grayed-out unless in the Swept SA measurement. If grayed-out and the command is sent, generates error: “-221, Settings Conflict; Dual Conversion mixer path is only available in Swept SA”</p> <p>If in DUAL Conversion and you exit Swept SA, reverts to NORMa1 setting. If you subsequently return to Swept SA, does <i>not</i> automatically return to DUAL Conversion</p> <p>When DUAL Conversion is selected, if no signal is sensed at the 10 MHz input port, an error condition is generated, “Ref missing or out of range; M1971” (error 521). This also lights the Error LED on the mixer itself</p>
Couplings	When AUX path is selected, the instrument switches to Zero Span
Preset	NORMa1
State Saved	Saved in instrument state

Annotation	<p>In the Meas Bar, if an M1971 series Mixer is connected to the USB port of the instrument, the field Mixer Path appears and says:</p> <ul style="list-style-type: none"> – Normal for Normal – 2xConv for Dual Conversion – Aux for Aux Equipment
------------	--

6.2.15 User IF Freq

Specifies the desired IF frequency when using the Aux Equipment path. This setting determines the LO frequency that the instrument will drive into the mixer to correspond to the specified center frequency. Note that the Aux Equipment path always uses “Negative Mixing”, that is, the LO frequency is always higher than the RF frequency.

Remote Command	<pre>[:SENSe]:MIXer:UIFFreq <real></pre> <pre>[:SENSe]:MIXer:UIFFreq?</pre>
Example	<pre>:MIX:UIFF 300 MHz</pre>
Dependencies	Only appears if an M1971 mixer is connected to USB and the Mixer Path is Aux Equipment
Preset	1.2 GHz
State Saved	Saved in Input/Output state
Min	0 GHz
Max	4 GHz

6.2.16 Signal ID On/Off

Toggles the Signal ID (signal identification) function On or Off. This function lets you identify multiple responses of a single input signal that are generated when using un-preselected external mixers. The use of mixers without pre-selecting filters offers the advantage of improved receiver sensitivity because of the absence of the filter insertion loss, but results in multiple responses due to images and undesired harmonic mixing products.

While in **Signal ID**, basic spectrum analyzer functions work normally (for example, you can change Span normally), but some functions are disabled (for example, some traces are unavailable).

There are two forms of **Signal ID**, Image Suppress and Image Shift. Choose the one most appropriate for your application. For Image Shift, an LO-shifted and an unshifted trace are taken in Trace 1 and Trace 2 and displayed together. Any peaks that are not the same in both traces are images. For Image Suppress, image

6 Input/Output

6.2 Input

cancellation is performed in the background using two hidden traces, and the result displayed in Trace 1, which shows only the valid signals.

When **Signal ID** is **ON**, this is indicated in the Meas Bar as Signal ID: On. The annotation is displayed in amber to alert you, because it can cause unexpected behavior if you are not aware that it is on.

Remote Command	<code>[:SENSe]:SIDentify[:STATe] OFF ON 0 1</code> <code>[:SENSe]:SIDentify[:STATe]?</code>
Example	<code>:SID 0</code> <code>:SID?</code>
Notes	<p>Signal ID uses data from two successive sweeps. Therefore, if the instrument is in single sweep mode, two sweep triggers are used to generate the data needed for signal identification</p> <p>For the Log Plot measurement in the Phase Noise Mode, Signal ID works only in the segment of LO sweeping where the offsets are greater than the Rejection Offset setting. When turning it on, you may notice a discontinuity in the Phase Noise trace at the Rejection Offset setting frequency by a few dB due to the under response inherent to Signal ID</p>
Dependencies	<p>Only appears when External Mixer is selected as the Input</p> <p>Not available in some measurements. If Signal ID does not appear or is grayed-out while in your measurement, then it is not available</p> <p>Because Signal ID uses data from two successive sweeps, several trace and sweep functions are grayed-out in Signal ID. See the documentation for your measurement for details on which trace functions are grayed-out</p> <p>Not available with Signal Track, in which case Signal ID is grayed-out</p> <p>Turned off when External Mixer is turned off. Signal ID cannot be turned on when using internal mixing</p> <p>Rules for auto coupling of the Sweep and FFT controls are changed with Signal ID ON. For both the dynamic range case and the speed case, swept is chosen whenever any form of Signal ID is on. If Manual FFT is selected, Signal ID is grayed-out</p> <p>If Signal ID is selected in a measurement that does not support it, a warning message is generated</p>
Couplings	The Auto Rules for detector selection select Normal for all active traces when Signal ID is turned ON
Preset	Unaffected by Preset, but set to OFF by Restore Input/Output Defaults
Annunciation	When Signal ID is on this is indicated in the Meas Bar as Signal ID: On. The annotation is displayed in amber color to alert you to the fact that Signal ID is on, as it can cause unexpected behavior if you are not aware that it is on

6.2.17 Signal ID Mode

Determines the **Signal ID** mode to use, either Image Suppress or Image Shift.

Image Suppress

Mathematically removes all image and multiple responses of signals present at the mixer input. Two hidden sweeps are taken in succession. The second sweep is offset in LO frequency by $2 * IF / N$. For each point in each trace, the smaller amplitude

from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals, others are images and are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

NOTE

When changing from Image Shift to Image Suppress mode, Trace 2 is blanked, as it was used for Image Shift and contains data that you will probably not want to see in Image Suppress

Image Shift

Like the Image Suppress mode, Image Shift is a two-sweep sequence. The data from the first sweep is placed in Trace 1 and the data from the second (LO frequency shifted by $2 * IF / N$) sweep is placed in Trace 2. On alternate sweeps, the alternate trace (trace 2) is placed in front of trace 1. This way, you can see a signal at the same place on alternate sweeps, showing in yellow (trace1) and blue (trace2). Signal responses of Trace 1 and Trace 2 that have the same horizontal position are considered to be in the current band and therefore can be analyzed with the amplitude and frequency measurement systems of the SA. All other responses are invalid and should be ignored.

NOTE

This function takes control of and uses Trace 1 and Trace 2. Any data in these traces prior to activating Image Shift will be lost.

Remote Command	<code>[:SENSe]:SIDentify:MODE ISUPpress IShift</code> <code>[:SENSe]:SIDentify:MODE?</code>
Example	<code>:SID:MODE ISUP</code> <code>:SID:MODE ISH</code> <code>:SID:MODE?</code>
Dependencies	Only appears when External Mixer is selected as the Input
Preset	Unaffected by Preset, but set to ISUPpress by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.2.18 Cable IF Loss

The loss at the IF in the IF/LO cable can be compensated for with this function, by entering the loss in dB for your cable.

The cable loss will depend on the IF frequency. The IF frequency varies depending on which IF path your measurement is using. For best accuracy, characterize your cable's loss for the IF frequency or frequencies you will be using.

IF Frequencies

	10 MHz path	322.5 MHz
	25 MHz path	322.5 MHz
	40 MHz path	250 MHz
	140 MHz path	300 MHz
Remote Command	<code>[:SENSe]:MIXer:CIFLoss <rel_amp1></code> <code>[:SENSe]:MIXer:CIFLoss?</code>	
Example	<code>:MIX:CIFL 0.23 DB</code> <code>:MIX:CIFL?</code>	
Dependencies	Only appears when External Mixer is selected as the Input	
Preset	0.26 dB	
State Saved	Saved in instrument state	
Min	-100	
Max	100	

6.2.19 I/Q Path

Selects which I/Q input channels are active. The LED next to each I/Q input port will be on when that port is active.

The analysis bandwidth for each channel is the same as that of the instrument. For example, the base N9020A has a bandwidth of 10 MHz. With I/Q input the I and Q channels would each have an analysis bandwidth of 10 MHz, giving 20 MHz of bandwidth when the I/Q Path is I+jQ. With option B25, the available bandwidth becomes 25 MHz, giving 25 MHz each to I and Q and 50 MHz to I+jQ.

- I/Q voltage to power conversion processing is dependent on the I/Q Path selected:
- With I+jQ input, we know that the input signal may not be symmetrical about 0 Hz, because it has a complex component. Therefore, above 0 Hz only the positive frequency information is displayed, and below 0 Hz only the negative frequency information is displayed
 - With all other Input Path selections, the input signal has no complex component and therefore is always symmetrical about 0 Hz. In this case, by convention, the power conversion shows the combined voltage for both the positive and negative frequencies. The information displayed below 0 Hz is the mirror of the

information displayed above 0 Hz. This results in a power reading 6.02 dB higher (for both) than would be seen with only the positive frequency voltage. Note also that, in this case the real signal may have complex modulation embedded in it, but that must be recovered by further signal processing

Remote Command	<code>[[:SENSe]:FEED:IQ:TYPE IQ IONLy QONLy]</code> For option details, see More Information <code>[[:SENSe]:FEED:IQ:TYPE?</code>
Example	Set the input to be both the I and Q channels, combined as $I + j * Q$: <code>:FEED:IQ:TYPE IQ</code> Set the input to be only the I channel: <code>:FEED:IQ:TYPE IONL</code> Set the input to be only the Q channel: <code>:FEED:IQ:TYPE QONL</code> Turn on both I and Q channels and treat I as channel 1 and Q as channel 2: <code>:FEED:IQ:TYPE IND</code>
Dependencies	Only appears when I/Q is the selected input
Preset	<code>IQ</code>
State Saved	Yes Unaffected by Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All Backwards Compatibility SCPI
Notes	For R&S FSQ-B71 compatibility
Preset	<code>IQ</code>
Backwards Compatibility SCPI	<code>:INPut[1]:IQ:TYPE IQ I Q</code> <code>:INPut[1]:IQ:TYPE?</code>

More Information

I+jQ

Sets the signal input to be both the I and Q channels. The I and Q channel data will be combined as $I + j * Q$.

I Only

Sets the signal input to be only the I channel. The Q channel will be ignored. The data collected is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

Q Only

Sets the signal input to be only the Q channel. The I channel will be ignored. The Q channel will be sent to the digital receiver block as $Q+j0$. The receiver's output is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant. Note that since the receiver's real output is displayed as the "I" data, when the center frequency is 0, the Q Only input appears as the "I" data.

6.2.20 Reference Z

Sets the value of the impedance to be used in converting voltage to power for the I and Q channels. This does not change the hardware's path impedance (see "Input Z" on page 3756).

Remote Command	<code>:INPut:IMPedance:REference <integer></code> <code>:INPut:IMPedance:REference?</code>
Example	Set the I/Q reference impedance to 50 Ω <code>:INP:IMP:REF 50</code>
Dependencies	Only appears when I/Q is the selected input
Preset	50 Ω
State Saved	Yes Unaffected by a Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	1 Ω - 1 M Ω

6.2.21 I/Q Setup

Lets you set up and calibrate various parameters for the I/Q inputs.

Dependencies	Only appears when I/Q is the selected input
--------------	---

6.2.21.1 I Setup

Accesses the channel setup parameters for the I channel.

Differential

Selects differential input on or off for the I channel. For differential input (also called balanced input), the instrument uses both main and complementary ports. When differential input is off (also called single-ended or unbalanced input), the instrument uses only the main port.

Remote Command	<code>:INPut:IQ[:I]:DIFFerential OFF ON 0 1</code> <code>:INPut:IQ[:I]:DIFFerential?</code>
Example	Put the I channel in Differential mode: <code>:INP:IQ:DIFF ON</code> Put the I channel in Single Ended mode: <code>:INP:IQ:DIFF OFF</code>
Notes	When I Differential Input = On, the instrument checks for attenuation mismatches between the I and I-bar ports. If the difference in attenuation values exceeds 0.5 dB, a Settings Alert error condition, error 159 is set When I Differential Input = On, and IQ Path is I+jQ, the Q Differential input must also be On. Similarly, when I Differential Input = Off, and IQ Path is I+jQ, the Q Differential input must also be Off. If the states of the two inputs do not match, an error condition message is generated, 159, Settings Alert; I/Q mismatch: Differential
Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Instrument will use only the main port and the key will show that the Instrument's Differential Input mode is Off (indicating that the complementary port is not in use) When Q Same as I is On, the value set for I will also be copied to Q
Preset	OFF (Single Ended) Unaffected by Mode Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Yes
Annotation	The LED on the I-bar port indicates the Differential Input setting Backwards Compatibility Command
Notes	For R&S FSQ-B71 compatibility, with no independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command, Q Same as I should be ON
Preset	OFF
Backwards Compatibility SCPI	<code>:INPut[1]:IQ:BALanced[:STATe] OFF ON 0 1</code> <code>:INPut[1]:IQ:BALanced[:STATe]?</code>

Input Z

Selects the input impedance for the I channel. The impedance applies to both the I and I-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

6 Input/Output

6.2 Input

Remote Command	<code>:INPut[1]:IQ[:I]:IMPedance LOW HIGH</code> <code>:INPut[1]:IQ[:I]:IMPedance?</code>
Example	Set the I channel input impedance to 1 M Ω : <code>:INP:IQ:IMP HIGH</code> Set the I channel input impedance to 50 Ω : <code>:INP:IQ:IMP LOW</code>
Notes	LOW = 50 Ω , HIGH = 1 M Ω When IQ Path is I+jQ, the I Input Z setting must be the same as the Q Input Z setting. If the settings of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Input Z
Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled, and the value is set to match the probe When no probe is sensed on Q and Q Same as I is On, the value set for I will also be copied to Q
Preset	LOW Unaffected by Mode Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Yes
Annotation	"I:<I Input Z>" (examples, "I:50 Ω " or "I:1M Ω ") in the Measurement Bar. The annotation shows both the I and Q Input Z values

Skew

Sets the skew factor for the I channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling.

Remote Command	<code>[:SENSe]:CORRection:IQ[:I]:SKEW <seconds></code> <code>[:SENSe]:CORRection:IQ[:I]:SKEW?</code>
Example	Delay the data for the I channel by 10 ns: <code>:CORR:IQ:SKEW 10 ns</code>
Preset	0
State Saved	Yes Unaffected by Mode Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
Range	0 s to 100 ns
Min	0 s
Max	+100 ns

Combined Differential/Input Z (Remote Command Only)

For backwards compatibility only. It combines the Differential Input and Input Z selections into a single command.

Notes	<p>Provided for E4406A code compatibility</p> <p>The enum values translate as follows:</p> <table border="1"> <tr> <td>U50</td><td>Differential Input = Off, Input Z = 50 Ω</td></tr> <tr> <td>B50</td><td>Differential Input = On, Input Z = 50 Ω</td></tr> <tr> <td>U1M</td><td>Differential Input = Off, Input Z = 1 MΩ</td></tr> <tr> <td>B1M</td><td>Differential Input = On, Input Z = 1 MΩ</td></tr> </table> <p>Combines the Input Z (50 Ω or 1 M Ω) parameter with the Differential Input (Off = "Unbalanced", On = "Balanced") parameter into a single enumeration</p> <p>This backwards-compatibility command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards-compatibility command, Q Same as I should be set to ON</p> <p>Note also the subtle difference between this command and the backwards-compatibility command for Input Z. The Input Z SCPI has "IQ" before "IMP", while this command has that order reversed</p>	U50	Differential Input = Off, Input Z = 50 Ω	B50	Differential Input = On, Input Z = 50 Ω	U1M	Differential Input = Off, Input Z = 1 M Ω	B1M	Differential Input = On, Input Z = 1 M Ω
U50	Differential Input = Off, Input Z = 50 Ω								
B50	Differential Input = On, Input Z = 50 Ω								
U1M	Differential Input = Off, Input Z = 1 M Ω								
B1M	Differential Input = On, Input Z = 1 M Ω								
Couplings	Does not have an independent parameter, but instead is tied to the Differential Input and Input Z parameters. The coupling for those parameters apply to this command too								
Preset	U50								
Backwards Compatibility SCPI	<p>:INPut:IMPedance:IQ U50 B50 U1M B1M</p> <p>:INPut:IMPedance:IQ?</p>								

6.2.21.2 I Probe

Access the probe setup parameters for the I channel.

Dependencies	<p>Only appears when I/Q is the selected input</p> <p>The set of I/Q probe setup parameters will change based on the type of probe that is sensed. All probe types have the Attenuation parameter, and all probe types can be calibrated. The remaining parameters are only available for some probe types and will not be shown when not available. The probe type is determined by and reported for only for the I and Q ports, never the I-bar or Q-bar ports. The menu title will be "<ch>: <probe id>", where "<ch>" is either "I" or "Q" and "<probe id>" is the type of probe. For example, for the I Probe setup with an Keysight 1130A probe connected to the I port, the title will be "I: 1130A".</p>
--------------	--

Probe calibration data is stored for each probe type for each channel. When no probe is sensed, the probe type "Unknown" is used, and this is also treated like a probe type with its own calibration data. When a probe is changed, the calibration data for that probe type for that port is restored. An advisory message will be displayed showing the new probe type and the calibration status. The calibration data is stored permanently (survives a power cycle) and is not affected by a Preset or any of the Restore commands. When the probe has EEPROM identification (most newer Keysight probes have this), the calibration data is stored by probe serial number and port, so if you have two probes of the same type, the correct calibration data will be used for each. For probes that do not have EEPROM identification, the calibration data is stored by probe type and port and the instrument cannot distinguish between different probes of the same type. In all cases (with or without EEPROM identification), the calibration data is port specific, so it will not follow a specific probe from port to port if the probe is moved.

The "Unknown" probe type is used whenever no probe is sensed. When no calibration data exists for "Unknown" the latest cable calibration data is used.

Attenuation

The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You can modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

Remote Command	<code>[:SENSe]:CORRection:IQ:I:ATTenuation:RATio <real></code> <code>[:SENSe]:CORRection:IQ:I:ATTenuation:RATio?</code>
Example	Set the attenuation for the current I probe to 100.00:1: <code>:CORR:IQ:I:ATT:RAT 100</code>
Notes	Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged When the IQ Path is I+jQ, the Q probe attenuation setting must match the I Probe attenuation setting within 1 dB. If this is not the case, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Attenuation
Preset	1
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by Preset or Restore
Min/Max	0.001/10000 This is an alternate form of the SCPI command that allows input as a power instead of a ratio.
Remote Command	<code>[:SENSe]:CORRection:IQ:I:ATTenuation <rel_ampl></code> <code>[:SENSe]:CORRection:IQ:I:ATTenuation?</code>

Example	Set the attenuation for the current I probe type to 100.00:1: <code>:CORR:IQ:I:ATT 20 dB</code>
Min/Max	-60 dB /+80 dB

Offset

Some active probes have DC offset capability. When one of these probes is connected, this control will be visible. The signal is adjusted for the DC offset before entering the instrument's port. This allows for removal of a DC offset before reaching the instrument's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the instrument's max input voltage would exceed the input limits of the instrument for half its cycle. Removing the DC offset allows the instrument to correctly process the entire signal.

Remote Command	<code>:INPut:OFFSet:I <voltage></code> <code>:INPut:OFFSet:I?</code>
Example	Remove a DC offset of -0.5 V from the I channel input: <code>:INP:OFFS:I -0.5</code>
Notes	Only some probe types support Offset . For those that do, each probe type has its own Offset setting. As probes are changed, the Offset value will reflect the new probe's setting. Changing Offset affects only the current probe type's setting and leaves all others unchanged
Preset	0 V
State Saved	Saved with probe calibration data. Survives power cycle and is not affected by Preset or Restore
Min/Max	-18 V/+18 V

Coupling

Some probe types allow coupling to reject low frequencies. This filters out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

Remote Command	<code>:INPut:COUPling:I DC LFR1 LFR2</code> <code>:INPut:COUPling:I?</code>
Example	Turn off low frequency rejection on the I channel, allowing signals down to DC: <code>:INP:COUP:I DC</code> Turn on low frequency rejection on the I channel for frequencies lower than 1.7 Hz: <code>:INP:COUP:I LFR1</code> Turn on low frequency rejection on the I channel for frequencies lower than 0.14 Hz: <code>:INP:COUP:I LFR2</code>
Notes	Only some probe types support Coupling . For those that do, each probe type has its own Coupling setting. As probes are changed, the Coupling value will reflect the new probe's setting. Changing

	Coupling affects only the current probe type's setting and leaves all others unchanged
Preset	DC
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by a Preset or Restore
Range	DC AC 1.7 Hz LFR1 AC 0.14 Hz LFR2

Clear Calibration

Clears the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe. The probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the main port is cleared.

Remote Command	:CALibration:IQ:PROBe:I:CLEar
Example	Clear the calibration data for the I channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification): :CAL:IQ:PROBe:I:CLE

6.2.21.3 Calibrate

Invokes the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When the Differential control is switched to Differential, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When the Differential control is switched to Single Ended, only the probe attached to the main port is calibrated.

Calibrating the Baseband I/Q ports requires several steps and manual connections. The Guided Calibration will interactively step you through the required steps, displaying diagrams to help with the connections. The steps will vary depending on the setup.

In the Guided Calibration windows, the date and time of the last calibration are displayed. If any of the items listed are displayed in yellow, this indicates that the calibration for that item is inconsistent with the latest calibration, and you should complete the entire calibration process before you exit the calibration. For passive probes with Differential On, any calibration that is more than a day older than the most recent calibration will be displayed with the color amber.

The I/Q probe calibration creates correction data for one of the front panel I/Q channels. When the probe has EEPROM identification, the data is unique to that specific probe. When the probe does not have EEPROM identification, the data will be used for all probes of the same type. The data is also unique to the channel, so calibration data for the I channel will not be used for the Q channel and vice versa.

The guided calibration (front panel only) will show connection diagrams and guide you through the I/Q Isolation Calibration and through calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the port already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the probe. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both softkeys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You will need to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

For Active probes or when Differential is Off, only the main port is calibrated, otherwise both the main and complementary ports are calibrated.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:PROB:I|B|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on, and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

I/Q Isolation Calibration

I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. This calibration is performed with nothing connected to any of the front panel I/Q ports. This is the first step in both the I/Q Cable Calibration and the I/Q Probe Calibration. This dialog appears if the Calibration is being run for the first time. It can also be accessed by pressing Back

6 Input/Output

6.2 Input

from the I Input Cal, the Q Input Cal, or the I/Q Cable Cal. Pressing Next from this dialog runs the calibration

Remote Command	<code>:CALibration:IQ:ISOLation</code>
Example	<code>:CAL:IQ:ISOL</code>
Notes	All front panel I/Q ports must be unconnected
State Saved	No

I/Q Isolation Calibration Time (Remote Query Only)

Returns the last date and time that the I/Q Isolation Calibration was performed.

Remote Command	<code>:CALibration:IQ:ISOLation:TIME?</code>
Example	<code>:CAL:IQ:ISOL:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0
Annunciation	Guided Calibration, Isolation Calibration, Last Calibration

I Port

The I port calibration is performed with the probe body attached to the front panel's I port, and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:I</code>
Example	<code>:CAL:IQ:PROB:I</code>
Notes	The I port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands
State Saved	No

I Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:I :TIME?</code>
Example	<code>:CAL:IQ:PROB:I:TIME?</code>

Notes	This returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
-------	---

I-bar Port

The I-bar port calibration is performed with the probe body attached to the front panel's I-bar port and the probe tip connected via an adapter to the Cal Out port. The I-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:IBar</code>
Example	<code>:CAL:IQ:PROB:IB</code>
Notes	The I-bar port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands
State Saved	No

I-bar Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:IBAR:TIME?</code>
Example	<code>:CAL:IQ:PROB:IBAR:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
Annunciation	Guided Calibration, Probe Calibration, Last Calibration

6.2.21.4 Q Setup

Access the channel setup parameters for the Q channel.

Dependencies	Only appears when I/Q is the selected input
--------------	---

Q Same as I

Many, but not all, usages require the I and Q channels have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel parameters to be

6 Input/Output

6.2 Input

mirrored from the I channel. That way you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is turned off the I and Q channel setups will be identical. This does not apply to Probe settings or to parameters that are determined by the probe.

Remote Command	<code>:INPut:IQ:MIRROred OFF ON 0 1</code> <code>:INPut:IQ:MIRROred?</code>
Example	Turn off the mirroring of parameters from I to Q: <code>:INP:IQ:MIRR OFF</code>
Couplings	Only displayed for the Q channel. When Yes, the I channel values for some parameters are mirrored (copied) to the Q channel. However, when a parameter is determined by the type of probe and a probe is sensed, the probe setting is always used and the I channel setting is ignored. The following parameters are mirrored: Differential Input (when not determined by probe) Input Z (when not determined by probe)
Preset	Unaffected by Preset, but set to the default value (Q Same as I set to ON) by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state
Range	OFF ON

Differential

Selects differential input on or off for the Q channel. For differential input (also called balanced input), the instrument uses both the Q and Q-bar ports. When differential input is off (also called single-ended or unbalanced input), the instrument uses only the Q port.

Remote Command	<code>:INPut:IQ:Q:DIFFerential OFF ON 0 1</code> <code>:INPut:IQ:Q:DIFFerential?</code>
Example	Put the Q channel in Differential mode: <code>:INP:IQ:Q:DIFF ON</code> Put the Q channel in Single Ended mode: <code>:INP:IQ:Q:DIFF OFF</code>
Notes	When Differential Input = ON , the instrument checks for attenuation mismatches between the Q and Q-bar ports. If the difference in attenuation values exceeds 0.5 dB a Settings Alert error condition, error 159 will be set When Q Differential Input = ON , and IQ Path is I+jQ, the I Differential input must also be ON . Similarly, when Q Differential Input = OFF , and IQ Path is I+jQ, the I Differential input must also be OFF . If the states of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Differential
Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Instrument will use only the main port and the key will show that the Instrument's Differential Input mode is Off (indicating that the

	complementary port not in use) When a differential probe is not sensed and Q Same as I is On, the value set for I will be copied to Q. This key is disabled when Q Same as I is On
Preset	OFF
State Saved	Yes Unaffected by a Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
Range	OFF ON
Annotation	The LED on the Q-bar port indicates the Differential Input setting

Input Z

Selects the input impedance for the Q channel. The impedance applies to both the Q and Q-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

Remote Command	:INPut[1]:IQ:Q:IMPedance LOW HIGH :INPut[1]:IQ:Q:IMPedance?
Example	Set the Q channel input impedance to 1 M Ω : :INP:IQ:Q:IMP HIGH Set the Q channel input impedance to 50 Ω : :INP:IQ:Q:IMP LOW
Notes	LOW = 50 Ω , HIGH = 1 M Ω When IQ Path is I+jQ, the I Input Z setting must be the same as the Q Input Z setting. If the settings of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Input Z
Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled, and the value is set to match the probe When no probe is sensed and Q Same as I is On, the value set for I will also be copied to Q. This key is disabled when Q Same as I is On
Preset	LOW
State Saved	Yes Unaffected by a Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
Range	50 Ω 1 M Ω
Annotation	"Q:<Q Input Z>" (examples, "Q:50 Ω " or "Q:1M Ω ") in the Measurement Bar. The annotation shows both the I and Q Input Z values

Skew

Sets the skew factor for the Q channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling and probes.

Remote Command	<code>[:SENSe]:CORRection:IQ:Q:SKEW <seconds></code> <code>[:SENSe]:CORRection:IQ:Q:SKEW?</code>
Example	Delay the data for the Q channel by 10 ns <code>:CORR:IQ:Q:SKEW 10 ns</code>
Preset	0
State Saved	Yes Unaffected by a Preset, but set to the default value by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	0 s/ 100 ns

6.2.21.5 Q Probe

Accesses the probe setup parameters for the Q channel. See "[Combined Differential/Input Z \(Remote Command Only\)](#)" on page 3758.

Dependencies	Only appears when I/Q is the selected input
--------------	---

Attenuation

The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You can modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

Remote Command	<code>[:SENSe]:CORRection:IQ:Q:ATTenuation:RATio <real></code> <code>[:SENSe]:CORRection:IQ:Q:ATTenuation:RATio?</code>
Example	Set the attenuation for the current Q probe to 100.00:1: <code>:CORR:IQ:Q:ATT:RAT 100</code>
Notes	Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged When the IQ Path is I+jQ, the Q probe attenuation setting must match the I Probe attenuation setting within 1 dB. If this is not the case, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Attenuation

Preset	Each probe type has its own default. The default for the "Unknown" probe type is 1:1
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by Preset or Restore
Min/Max	0.001/10000 This is an alternate form of the SCPI command that allows input as a power instead of a ratio.
Remote Command	<code>[:SENSe]:CORRection:IQ:Q:ATTenuation <rel_ampl></code> <code>[:SENSe]:CORRection:IQ:Q:ATTenuation?</code>
Example	Set the attenuation for the current Q probe type to 100.00:1: <code>:CORR:IQ:Q:ATT 20 dB</code>
Min/Max	-60 dB /+80 dB

Offset

Some active probes have DC offset capability. When one of these probes is connected this control will be visible. The signal is adjusted for the DC offset before entering the instrument's port. This allows for removal of a DC offset before reaching the instrument's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the instrument's max input voltage would exceed the input limits of the instrument for half its cycle. Removing the DC offset allows the instrument to correctly process the entire signal.

Remote Command	<code>:INPut:OFFSet:Q <voltage></code> <code>:INPut:OFFSet:Q?</code>
Example	Remove a DC offset of -0.5 V from the Q channel input: <code>:INP:OFFS:Q -0.5</code>
Notes	Only some probe types support Offset . For those that do, each probe type has its own Offset setting. As probes are changed, the Offset value will reflect the new probe's setting. Changing Offset affects only the current probe type's setting and leaves all others unchanged
Preset	0 V
State Saved	Saved with probe calibration data. Survives power cycle and is not affected by Preset or Restore
Min/Max	-18 V/+18 V

Coupling

Some probe types allow coupling to reject low frequencies. This filters out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

Remote Command	<code>:INPut:COUPling:Q DC LFR1 LFR2</code> <code>:INPut:COUPling:Q?</code>
----------------	--

Example	<p>Turn off low frequency rejection on the Q channel, allowing signals down to DC: :INP:COUP:Q DC</p> <p>Turn on low frequency rejection on the Q channel for frequencies lower than 1.7 Hz: :INP:COUP:Q LFR1</p> <p>Turn on low frequency rejection on the Q channel for frequencies lower than 0.14 Hz: :INP:COUP:Q LFR2</p>
Notes	Only some probe types support Coupling . For those that do, each probe type has its own Coupling setting. As probes are changed, the Coupling value will reflect the new probe's setting. Changing Coupling affects only the current probe type's setting and leaves all others unchanged
Preset	DC
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by a Preset or Restore
Range	DC AC 1.7 Hz LFR1 AC 0.14 Hz LFR2

Clear Calibration

Clears the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe. The probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the main port is cleared.

Remote Command	:CALibration:IQ:PROBe:Q:CLEar
Example	<p>Clear the calibration data for the Q channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification): :CAL:IQ:PROBe:I:CLE</p>

6.2.21.6 Calibrate

Invokes the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When the Differential control is switched to Differential, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When the Differential control is switched to Single Ended, only the probe attached to the main port is calibrated.

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. See "[I/Q Isolation Calibration](#)" on [page 3762](#)

Q Port

The Q port calibration is performed with the probe body attached to the front panel's Q port and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:Q</code>
Example	<code>:CAL:IQ:PROB:Q</code>
Notes	The Q port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands
State Saved	No

Q Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:Q:TIME?</code>
Example	<code>:CAL:IQ:PROB:Q:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
Annunciation	Guided Calibration, Probe Calibration, Last Calibration

Q-bar Port

The Q-bar port calibration is performed with the probe body attached to the front panel's Q-bar port and the probe tip connected via an adapter to the Cal Out port. The Q-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:QBar</code>
Example	<code>:CAL:IQ:PROB:QB</code>
Notes	The Q-bar port must be connected to the Cal Out port before issuing the command

	The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands
State Saved	No

Q-bar Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:QBAR:TIME?</code>
Example	<code>:CAL:IQ:PROB:QBAR:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
Annunciation	Guided Calibration, Probe Calibration, Last Calibration

6.2.22 I/Q Cable Calibrate

The I/Q cable calibration creates correction data for each of the front panel I/Q ports. This calibration data is used whenever no probe specific calibration data is available. It is important that all ports are calibrated using the same short BNC cable so that the data is comparable from port to port.

The guided calibration (front panel only) will show connection diagrams and guide you through the isolation calibration and calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If you press "Exit" to exit the calibration process, the data for the ports already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the I/Q ports. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both keys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You will have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is

pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:FLAT:I|IB|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each port will be displayed. Any calibrations that are more than a day older than the most recent calibration will be displayed with the color amber.

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. See ["I/Q Isolation Calibration" on page 3762](#)

Dependencies	Only appears when I/Q is the selected input
--------------	---

6.2.22.1 I Port

The I port calibration is performed with the front panel's I port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	:CALibration:IQ:FLATness:I
Example	:CAL:IQ:FLAT:I
Notes	The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands The I port must be connected to the Cal Out port before issuing the command
State Saved	No

6.2.22.2 I-bar Port

The I-bar port calibration is performed with the front panel's I-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	:CALibration:IQ:FLATness:IBAR
----------------	-------------------------------

6 Input/Output

6.2 Input

Example	<code>:CAL:IQ:FLAT:IBAR</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The I-bar port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

6.2.22.3 Q Port

The Q port calibration is performed with the front panel's Q port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:FLATness:Q</code>
Example	<code>:CAL:IQ:FLAT:Q</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The Q port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

6.2.22.4 Q-bar Port

The Q-bar port calibration is performed with the front panel's Q-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:FLATness:QBAR</code>
Example	<code>:CAL:IQ:FLAT:QBAR</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The Q-bar port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

6.2.22.5 I/Q Cable Calibration Time (Remote Query Only)

Returns the last date and time that the I/Q Cable Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:FLATness:I IBAR Q QBAR:TIME?</code>
Example	<code>:CAL:IQ:FLAT:I:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0
Annunciation	Guided Calibration, Cable Calibration, Last Calibration

6.2.23 Audio Input Channel

Determines which Audio Input to be used for audio measurements.

Remote Command	<code>[:SENSe]:FEED:AFINput:PORT CH1 CH2</code> <code>[:SENSe]:FEED:AFINput:PORT?</code>
Example	<code>:FEED:AFIN CH1</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to Channel 1 by Input/Output Preset

6.2.24 Audio Calibrator

Lets you turn on the internal calibrator in the X-Series Audio board.

Remote Command	<code>[:SENSe]:FEED:AFALign OFF REF10</code> <code>[:SENSe]:FEED:AFALign?</code>
Example	<code>:FEED:AFAL REF10</code>
Dependencies	Only appears in Measuring Receiver Mode's Audio Measurements when Option 107 is present
Preset	OFF

6.2.25 Audio Coupling

Lets you set AC or DC coupling for the currently selected audio input.

Remote Command	<code>[:SENSe]:AFINput[1] 2:COUPling AC DC</code> <code>[:SENSe]:AFINput[1] 2:COUPling?</code>
----------------	---

6 Input/Output

6.2 Input

Example	<code>:AFIN:COUP AC</code>
Dependencies	Only appears in Measuring Receiver Mode and Radio Test Mode In Measuring Receiver Mode, only appear in Audio Measurements, and only if Option 107 is present In Radio Test Mode, only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	<code>AC</code>

6.2.26 Audio Input Ground

Lets you float or ground the low side of the currently selected audio input channel. When you choose `FLOat`, the low side of the input is disconnected from ground.

Remote Command	<code>[:SENSe]:AFINput[1] 2:LOW FLOat GROund</code> <code>[:SENSe]:AFINput[1] 2:LOW?</code>
Example	<code>:AFIN2:LOW FLO</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to <code>GROund</code> by Input/Output Preset

6.2.27 Audio In Impedance

Lets you set the Impedance of the currently selected audio input channel. The value you enter is rounded up to the nearest allowed value.

Remote Command	<code>[:SENSe]:AFINput[1] 2:IMPedance 50 600 1000000</code> <code>[:SENSe]:AFINput[1] 2:IMPedance?</code>
Example	<code>:AFIN:IMP 50</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to 600 by Input/Output Preset

6.2.28 Input/Output Preset

Resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by **Mode Preset** because they are generally associated with connections to the instrument, which you generally would not want to reset every time you press **Mode Preset**.

This is the same as the control in the **Preset** dropdown, and also the same as **Input/Output** button in the **Restore Defaults** menu under **System**.

All the variables set under the **Input/Output** front panel key are reset by **Input/Output Preset**, including Amplitude Corrections and Data (described in the **Corrections** section), with the exception of RF Source settings, which are unaffected.

By using **Input/Output Preset** and **Restore Mode Defaults**, a full preset of the current mode will be performed, with the caveat that since **Input/Output Preset** is a global function it will affect *all* Modes.

When **Input/Output Preset** is selected, a message appears saying:

“This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings.

It will not affect Alignment data or settings.

It will not affect RF Source settings.

This action cannot be undone. Do you want to proceed?”

Use the **OK** or **Cancel** buttons to affirm or cancel the operation.

Example

:SYST:DEF INP

presets all Input/Output variables to their factory default values

6.3 External Gain

Contains controls that allow you to compensate for gain or loss in the measurement system outside the instrument. The External Gain is subtracted from the amplitude readout (or the loss is added to the amplitude readout). So, the displayed signal level represents the signal level at the output of the device-under-test, which can be the input of an external device that provides gain or loss.

Entering an External Gain value does not affect the Reference Level, therefore the trace position on screen changes, as do all of the values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, etc., are all affected by External Gain. Changing the External Gain, even on a trace that is not updating, immediately changes all of the above, without new data needing to be taken.

NOTE

Changing the External Gain causes the instrument to immediately stop the current sweep and prepare to begin a new sweep. The data will not change until the trace data updates because the offset is applied to the data as it is taken. If a trace is exported with a nonzero External Gain, the exported data will contain the trace data with the offset applied.

In Spectrum Analyzer Mode, a Preamp is the common external device providing gain or loss. In a measurement application mode like GSM or W-CDMA, the gain or loss could be from a BTS (Base Transceiver Station) or an MS (Mobile Station). So, in the Spectrum Analyzer mode MS and BTS would be grayed out and the only choice would be Ext Preamp. Similarly, in some of the digital communications applications, Ext Preamp will be grayed out and you would have a choice of MS or BTS.

The Ext Preamp, MS, and BS controls may be grayed-out depending on which measurement is currently selected. If any of the grayed-out controls are pressed, or the equivalent SCPI command is sent, an advisory message is generated.

6.3.1 External Preamp

This function is similar to the reference level offset function. Both affect the displayed signal level. Ref Lvl Offset is a mathematical offset only, no instrument configuration is affected. Ext Preamp gain is used when determining the auto-coupled value of the Attenuator. The External Gain value and the Maximum Mixer Level settings are both part of the automatic setting equation for the RF attenuation setting. (10 dB of Attenuation is added for every 10 dB of External Gain.)

Note that the Ref Lvl Offset and Maximum Mixer Level are described in the Amplitude section. They are reset by Mode Preset. The External Preamp Gain is reset by the "Restore Input/Output Defaults" or "Restore System Defaults->All functions.

The Swept SA Measurement in SA Mode only supports the "Ext Preamp" function under External Gain. The other External Gain functions are grayed-out, and generate a settings conflict, if the SCPI for them is sent.

See ["More Information" on page 3778](#)

Remote Command	<code>[:SENSe]:CORRection:SA[:RF]:GAIN <rel_ampl></code> <code>[:SENSe]:CORRection:SA[:RF]:GAIN?</code>
Example	Set the Ext Gain value to 10 dB: <code>:CORR:SA:GAIN 10</code> Set the Ext Gain value to -10 dB (that is, an attenuation of 10 dB): <code>:CORR:SA:GAIN -10</code>
Notes	Does not auto return This command is new in X-Series
Dependencies	The reference level limits are determined in part by the External Gain/Atten, Max Mixer Level, and RF Atten Grayed-out in Modes that do not support External Gain
Preset	Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All 0.00 dB, Gain
State Saved	Saved in instrument state
Min	-120 dB
Max	120 dB
Annotation	Displayed in the Meas Bar as "Ext Gain <value>". When the gain is zero, no annotation is shown
Backwards Compatibility SCPI	<code>[:SENSe]:CORRection:OFFSet[:MAGNitude]</code> The legacy Ext Preamp Gain key is now called Ext Gain and the sub-menu has choices of Ext Preamp MS BTS for backwards compatibility The MS and BTS choices are unavailable in Swept SA and the Ext Preamp is unavailable in the cell comms measurements

More Information

The U7227A USB Preamplifier is an accessory for the X-Series Signal Analyzer that provides gain externally, and whose gain settings are automatically loaded into the instrument over USB whenever it is connected to one of the instrument's USB ports.

While the USB Preamplifier is plugged into one of the instrument's USB ports, the instrument will consider it to be in the signal path of the RF Input and will apply the

6 Input/Output

6.3 External Gain

calibration data from the USB Preamp to measurements taken at the RF Input (on 2 input boxes, it will be considered to be in the signal path of RF Input 1; it is not supported for RF Input 2).

The USB Preamplifier contains its own cal data. This includes a noise trace suitable for use with NFE, for those models which support NFE. The act of connecting the Preamp to USB will cause the cal data to be downloaded from the preamp. When this happens, an informational message is provided saying "Cal data loaded from USB Preamp". The instrument will then automatically apply the calibration factors loaded from the Preamp in any measurement that supports the USB Preamp.

The External Preamp Gain setting may still be used, even though it is not required for the USB Preamp (since the USB Preamp supplies its own gain data to the instrument which is applied automatically). Connecting the USB Preamp does not change the External Preamp Gain setting, however unless you have another gain or attenuation element in the signal path, the appropriate setting for External Preamp Gain is 0 dB.

Overload detection and reporting will apply when the USB preamplifier is connected to USB. The USB Preamplifier has its own overload detector which reports overloads to the instrument over USB. This generates an error condition, "Input Overload; USB Preamp."

If, while the USB Preamp is connected to USB, a measurement is selected that does not support the USB preamplifier, the "No result; Meas invalid with Preamp" error condition is generated.

6.3.2 External Gain - MS

Sets an external gain/attenuation value for MS (Mobile Station) tests.

Remote Command	<code>[:SENSe]:CORRection:MS[:RF]:GAIN <rel_amp1></code> <code>[:SENSe]:CORRection:MS[:RF]:GAIN?</code>
Example	Set the Ext Gain value to 10 dB: <code>:CORR:MS:GAIN 10</code> Set the Ext Gain value to -10 dB (that is, a loss of 10 dB): <code>:CORR:MS:GAIN -10</code>
Notes	Does not auto return
Dependencies	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten Grayed-out in modes that do not support MS
Preset	Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All 0.00 dB, Gain
State Saved	Saved in instrument state

Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	
Example	<p>Set the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB: :CORR:MS:LOSS 10</p> <p>Set the Ext Gain value to 10 dB. Subsequently querying :LOSS will return -10 dB: :CORR:MS:LOSS -10</p>
Notes	<p>A positive value of <rel_amp1> in the above command means a loss and a negative value indicates a gain</p> <p>If :LOSS is set, :GAIN is set to the negative value of the parameter sent</p> <p>If :LOSS is queried, it returns the negative of :GAIN</p>
Preset	Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	-/+100 dB
Backwards Compatibility SCPI	<p>[:SENSe]:CORRection:MS[:RF]:LOSS <rel_amp1></p> <p>[:SENSe]:CORRection:MS[:RF]:LOSS?</p>

6.3.3 External Gain - BTS

Sets an external attenuation value for BTS (Base Transceiver Station) tests.

Remote Command	<p>[:SENSe]:CORRection:BTS[:RF]:GAIN <rel_amp1></p> <p>[:SENSe]:CORRection:BTS[:RF]:GAIN?</p>
Example	<p>Set the Ext Gain value to 10 dB: :CORR:BTS:GAIN 10</p> <p>Set the Ext Gain value to -10 dB (that is, a loss of 10 dB): :CORR:BTS:GAIN -10</p>
Notes	Does not auto return
Dependencies	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten Grayed-out in modes that do not support BTS
Preset	Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All 0.00 dB, Gain
State Saved	Saved in instrument state
Min	-100 dB
Max	100 dB

Backwards Compatibility SCPI

6 Input/Output

6.3 External Gain

Example	<p>Set the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB: <code>:CORR:BTS:LOSS 10</code></p> <p>Set the Ext Gain value to 10 dB. Subsequently querying :LOSS will return -10 dB: <code>:CORR:BTS:LOSS -10</code></p>
Notes	<p>A positive value of <code><rel_amp1></code> in the above command means a loss and a negative value indicates a gain</p> <p>If <code>:LOSS</code> is set, <code>:GAIN</code> is set to the negative value of the parameter sent</p> <p>If <code>:LOSS</code> is queried, it returns the negative of <code>:GAIN</code></p>
Preset	Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	-/+100 dB
Backwards Compatibility SCPI	<code>[:SENSe]:CORRection:BTS[:RF]:LOSS <rel_amp1></code> <code>[:SENSe]:CORRection:BTS[:RF]:LOSS?</code>

6.3.4 I Ext Gain

Affects the I channel input. However, when Q Gain in I+jQ is set to Same as I Gain, this value is applied to both I and Q channel inputs.

Remote Command	<code>[:SENSe]:CORRection:IQ:I:GAIN <rel_amp1></code> <code>[:SENSe]:CORRection:IQ:I:GAIN?</code>
Example	<p>Set the I Ext Gain to 10 dB: <code>:CORR:IQ:I:GAIN 10</code></p> <p>Set the I Ext Gain to -10 dB (that is, a loss of 10 dB): <code>:CORR:IQ:I:GAIN -10</code></p>
Dependencies	<p>Not available unless option BBA is installed</p> <p>Grayed-out when I/Q Path is Q Only</p>
Preset	<p>0 dB</p> <p>Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All</p>
State Saved	Yes
Min/Max	-/+100 dB
Annotation	<p>Ext Gain: <I Ext Gain> dB</p> <p>No annotation is shown when Input is not I/Q. Also not shown when I Ext Gain is 0.00 dB. I Ext Gain is not shown for Input Path Q Only. When the Input Path is Independent I and Q and I Ext Gain is not the same as Q Ext Gain, both are shown. "Ext Gain: <I Ext Gain> dB, <Q Ext Gain> dB"</p>

6.3.5 Q Ext Gain

Affects the Q channel input.

Remote Command	<code>[:SENSe]:CORRection:IQ:Q:GAIN <rel_amp1></code> <code>[:SENSe]:CORRection:IQ:Q:GAIN?</code>
Example	Set the Q Ext Gain to 10 dB: <code>:CORR:IQ:Q:GAIN 10</code> Set the Q Ext Gain to -10 dB (that is, a loss of 10 dB): <code>:CORR:IQ:Q:GAIN -10</code>
Dependencies	Not available unless option BBA is installed Grayed-out when Q gain in I+jQ is set to Same as I Gain
Preset	0 dB Unaffected by Preset, but set to 0 dB by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state
Min/Max	-/+100 dB
Annotation	Ext Gain: <Q Ext Gain> dB No annotation is shown when Input is not I/Q. Also not shown when Q Ext Gain is 0.00 dB. Q Ext Gain is not shown for Input Path I Only or I+jQ. When Input Path is Independent I and Q and when I and Q Ext Gain are both non-zero but are the same the annotation will be "Ext Gain: <Ext Gain> dB" and when I Ext Gain is not the same as Q Ext Gain, both are shown. "Ext Gain: <I Ext Gain> dB, <Q Ext Gain> dB"

6.3.6 Q Gain in I+jQ

When Same as I Gain (**ON**) is selected, I Ext Gain value is applied to both I and Q channel input if the Input Path is I+jQ.

When Independent (**OFF**) is selected, I and Q Ext Gain values are applied to I and Q channel input independently.

Remote Command	<code>[:SENSe]:CORRection:IQ:Q:GAIN:COUPle ON OFF 0 1</code> <code>[:SENSe]:CORRection:IQ:Q:GAIN:COUPle?</code>
Example	<code>:CORR:IQ:Q:GAIN:COUP ON</code> <code>:CORR:IQ:Q:GAIN:COUP?</code>
Preset	ON
State Saved	Yes
Range	Same as I Gain Independent

6.4 Data Source

Contains controls that let you select the source of the data being fed to the instrument analysis engine.

The ability to Save and Record files of I/Q data is an important feature of some X-Series applications, and the Data Source controls allow you to switch back and forth from actual data at the instrument input and recorded data from a File.

In addition, some measurements allow you to retain a single measurement record in a Capture Buffer, and some measurements allow you to retain a specified length data record internally in a Recorded data area.

So, for measurements that support it, the controls on this tab allow you to select data from the instrument inputs, a recalled recording File, the Capture Buffer, or the Recorded data area. For measurements that do not support these features, the **Data Source** tab does not appear, and if `:FEED:DATA SCPI` is sent, an Undefined Header error is generated.

The available choices depend on which measurement you are running. All measurements support Input; Capture Buffer and File are only available in certain measurements, as shown in the table below. The choice of the internal Recorded data area is only available in Pulse Mode.


Measurement	Capture Buffer	File
WCDMA Code Domain	x	
WCDMA Mod Accuracy	x	
VMA Digital Demod		x
VMA Custom OFDM		x
5G NR Modulation Analysis		x
FDD LTE-A Modulation Analysis		x
TDD LTE-A Modulation Analysis		x
WLAN Modulation Analysis	x	x
WLAN Spectral Flatness		x
WLAN MIMO Modulation Analysis		x
Analog Demod AM		x
Analog Demod PM		x
Analog Demod FM		x
Analog Demod FM Stereo		x
Bluetooth Transmit Analysis	x	x
IoT & SRComms LoRa CSS Demod		x

How to Record and Playback I/Q Data

In several Demod measurements (and certain other measurements), it is possible to record I/Q data to files on your hard drive or network, and then recall these files for subsequent playback. These are the measurements shown in the table above with an “x” in the **File** column.

The Recording and Playback of signal data files is a multi-step process which involves controls in several menus (listed below).

Menus involved in Record/Playback:

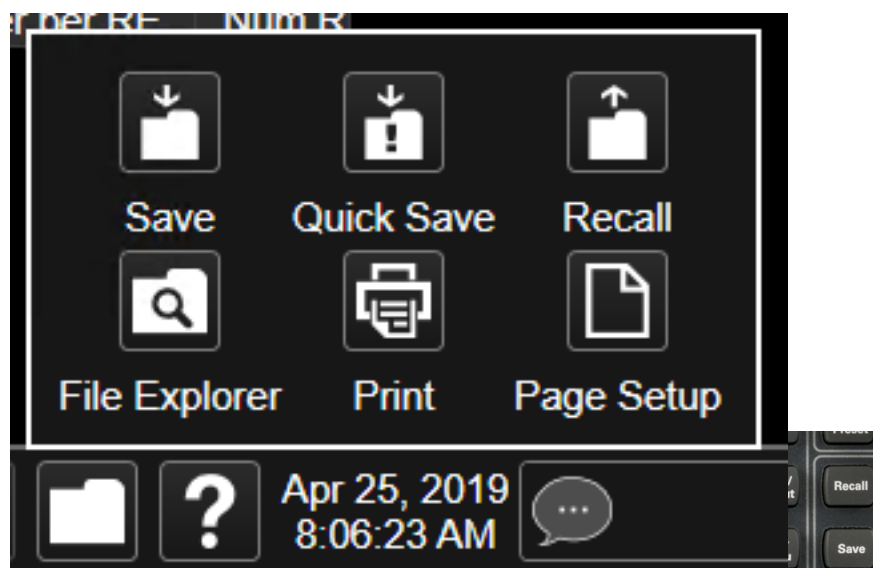

- Save, Recording (under the **Save** hardkey or the **Save** icon in the **File** panel)
- Recall, Recording (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- Sweep, Recording tab
- Sweep, Playback tab
- Input/Output, Data Source tab (this tab)

Saving a Recording


When you save a recording, a certain number of measurement records are saved to a Recording file. The amount of data that is saved varies depending on the measurement and measurement settings. The following example uses VMA Digital Demod to illustrate the process.

6 Input/Output
6.4 Data Source


If you press the **Recording** tab in the **Sweep** menu, you will see a certain number of parameters displayed on the menu panel. Before you save a Recording, these parameters are all 0, as shown below:



To save the data for the current measurement, press the **Save** hardkey (or the **Save** icon in the **File** panel) and press the **Recording** tab on the left side of the **Save** panel:

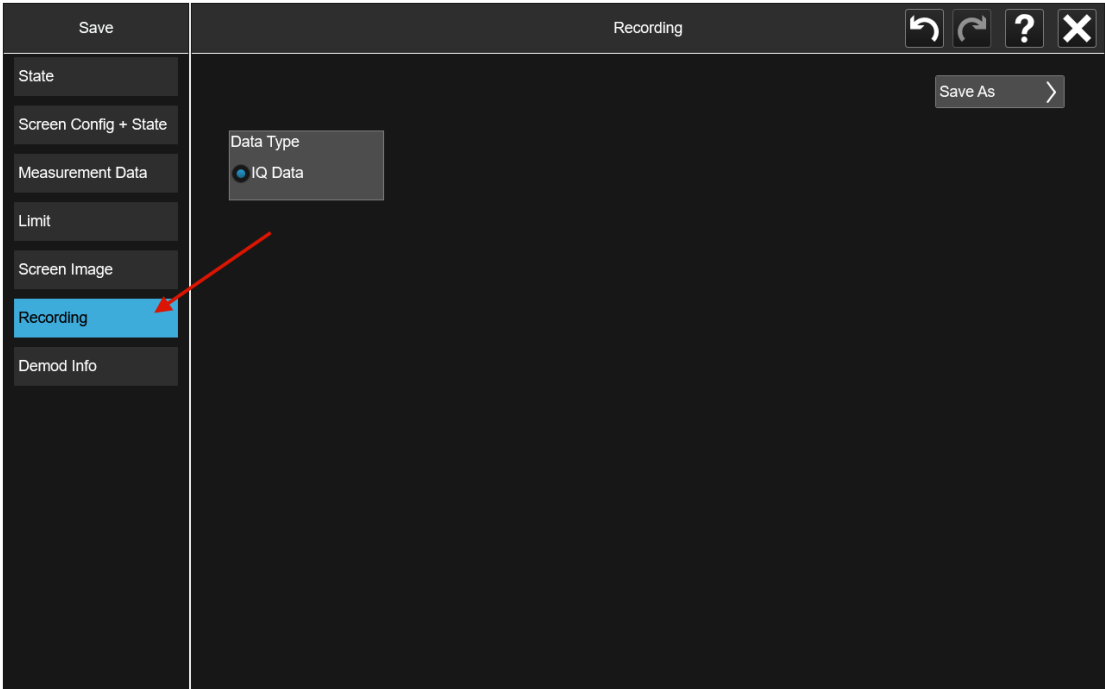

Then press **Save As** and choose the file type you would like to use for the Save (**CSV**, **SDF**, **TXT**, **BIN**, **BINX**). You can find details of the file formats in **Save > Recording**.

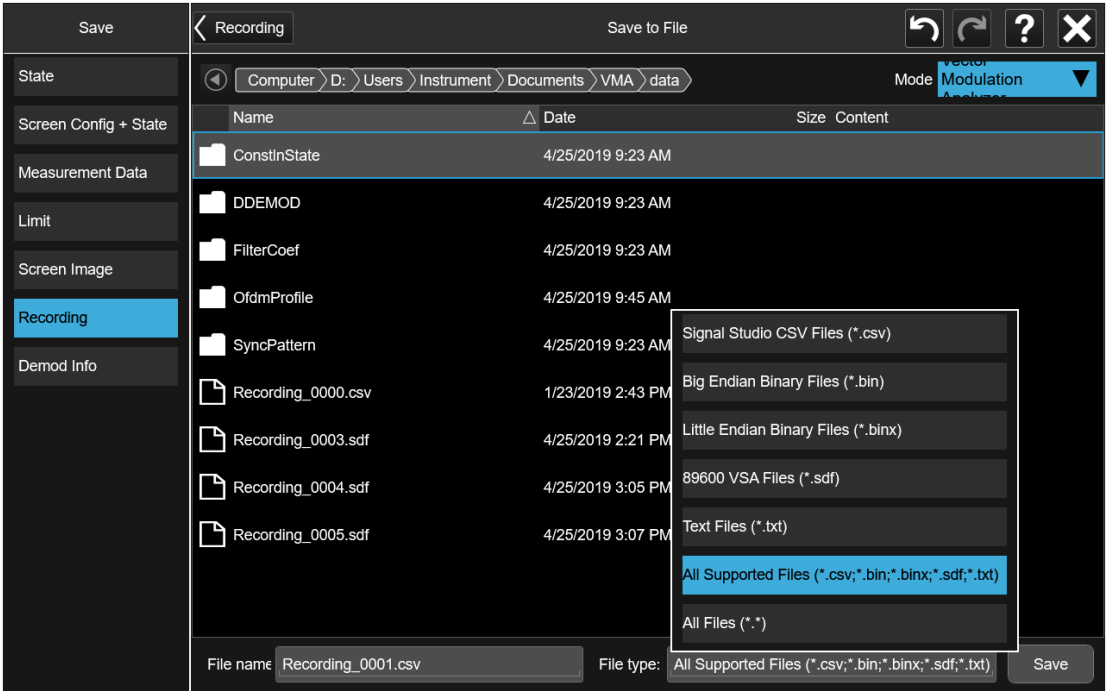

Then press **Save** to save the raw I/Q data of the current measurement.

After the Save, you will see that the data on the Recording panel has changed to describe the data in the file you just saved. You should note this data in case you need to refer to it when you recall the file, particularly as not all file formats include the Sample Rate that was used to save the data. In particular, **BIN** and **BINX** files do not include sampling rate information inside the file, so after recalling one of these file types, you will need to set the Sample Rate manually in the **Sweep, Playback** menu.

6 Input/Output
6.4 Data Source



Step 2: Recalling a Recording


If you press the **Playback** tab in the **Sweep** menu, you will see a certain number of parameters displayed on the menu panel. Before you recall a Recording, these parameters are all 0, as shown below:



To recall a Recording, press the **Recall** hardkey (or the **Recall** icon in the **File** panel) and press the **Recording** tab on the left side of the **Recall** panel. Then press **Recall From** and choose the file you would like to recall. This will read the raw I/Q data from the specified file and feed it to the current measurement.


After the Recall, you will see that the data on the Recording panel has changed to describe the data in the file you just recalled:

6 Input/Output
6.4 Data Source

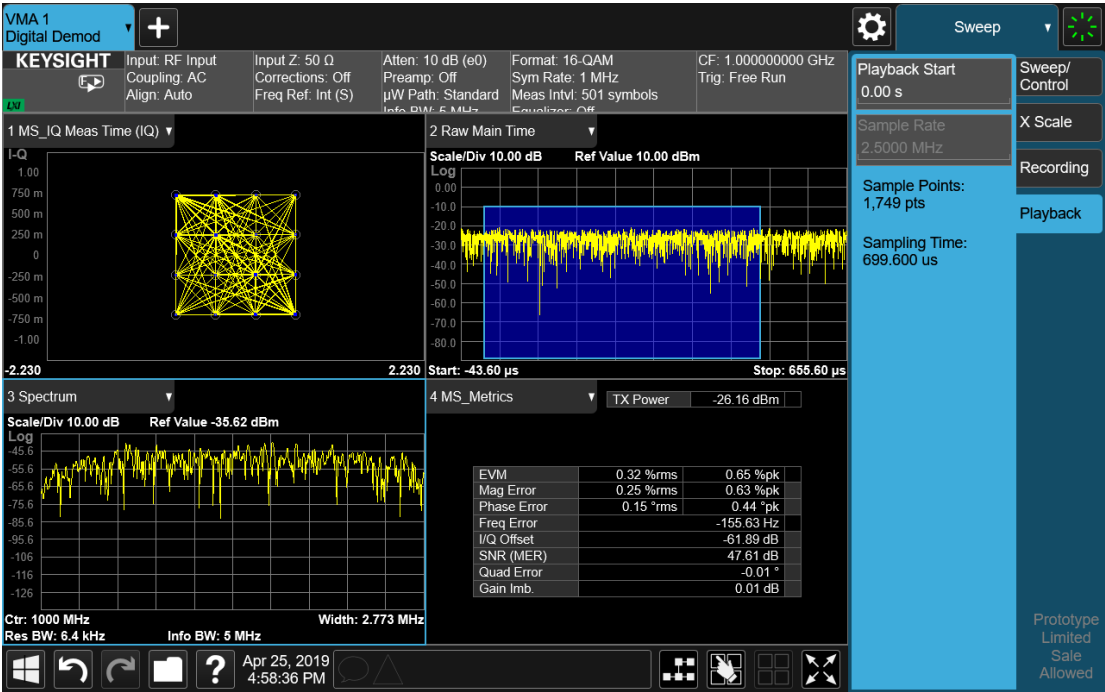


Note that the **Sample Rate** key is grayed out if the file type you loaded contains Sample Rate information. **BIN** and **BINX** files do not include sampling rate information inside the file, so after recalling one of these file types, you will need to set the Sample Rate. You should have noted the Sample Rate that was displayed on the **Sweep, Recording** menu panel after you saved the file.

After the recall is performed, you will also see that the **Data Source** control has switched to **File**. You can see this on the **Data Source** menu panel, and also on the dropdown from the Measurement Bar on the far-left side of the instrument:

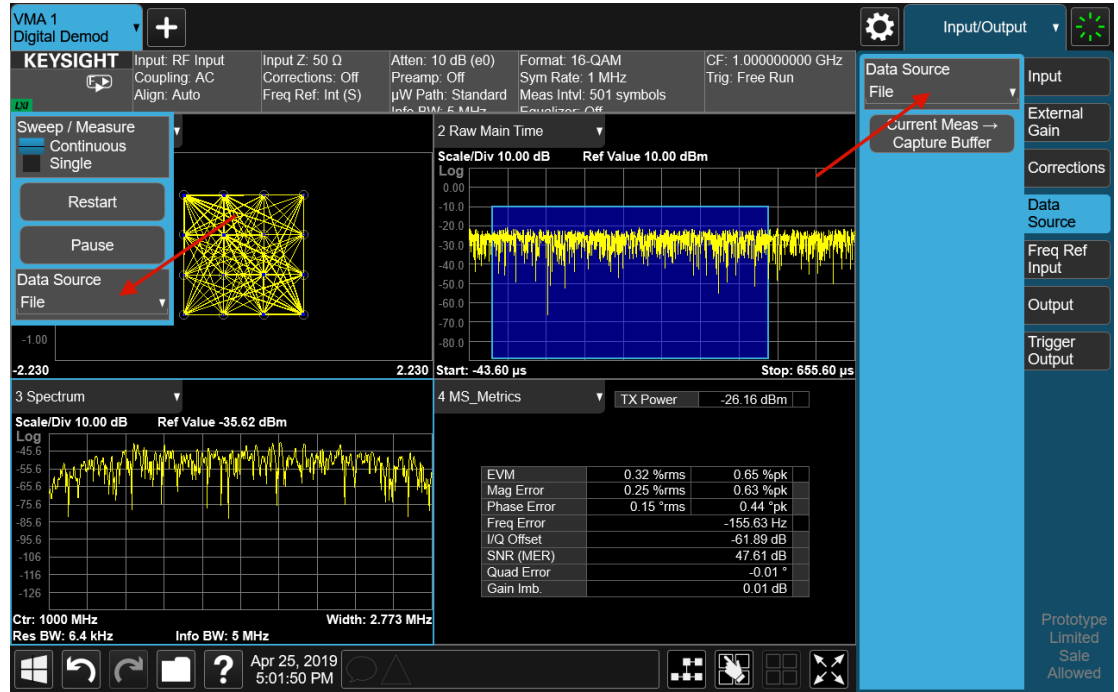


You can also see that the control indicator on the measurement bar has an “F” in it and the playback symbol (right facing triangle) displayed:

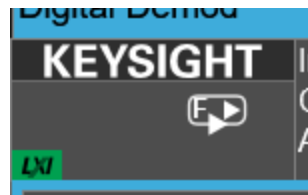

This indicates that the instrument is in **Continuous Playback** mode and is using data from a File.

If you select **Single** in the control dropdown, the indicator will change to show that it is in **Single Pause** mode as below:

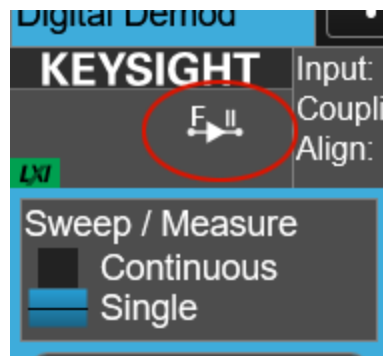

6 Input/Output
6.4 Data Source

You can now examine data in the recorded file which you loaded. How you do this depends on whether you are in **Continuous Playback** mode or **Single Pause** mode.


If you wish to return to looking at data at the instrument input, simply change the **Data Source** control from **File** back to **Input**.

Looking at your Recorded data

To examine the data you loaded, go to the **Playback** menu panel under **Sweep**. How you proceed from here depends on whether you are in **Continuous Playback** mode or **Single Pause** mode.

Continuous Playback mode


In this mode, turn the knob clockwise or use the **Up** key on the front panel to move through successive records in the recording. You will see the Playback Start control change from 0 to successively higher values as you move through the records.

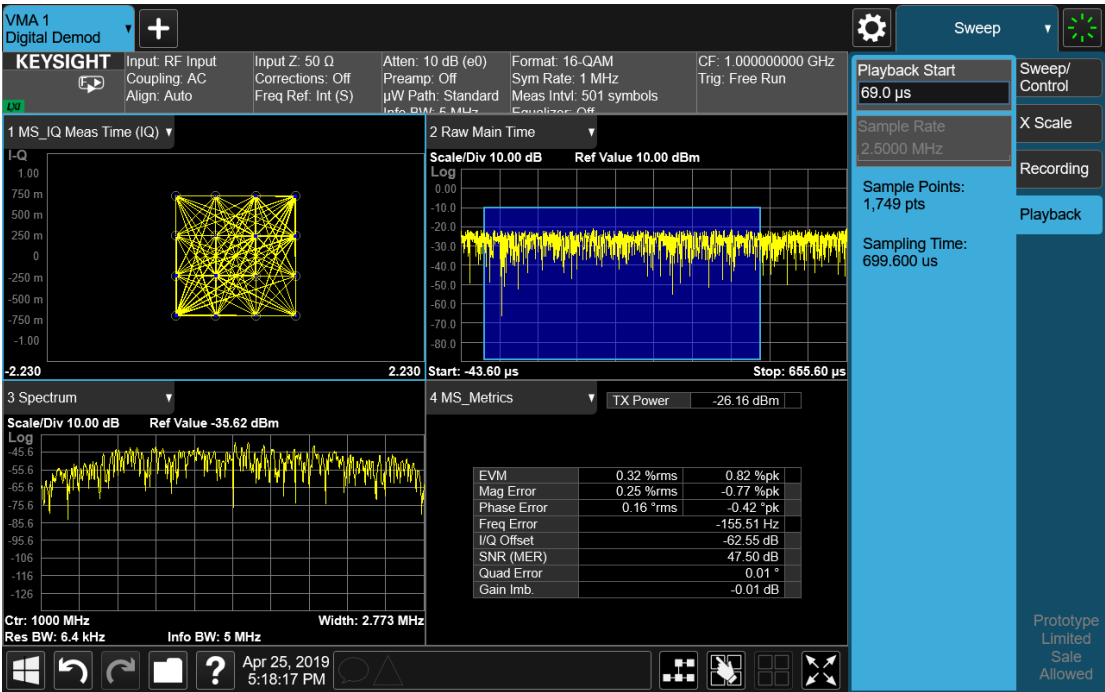


Single Pause mode

In this mode, you can only look at one record. Set the Playback Start time to the desired offset from zero and press **Restart**. A single record will be displayed.

Note that until you press **Restart**, the “invalid data” indicator (yellow asterisk) will be displayed in each window as below:

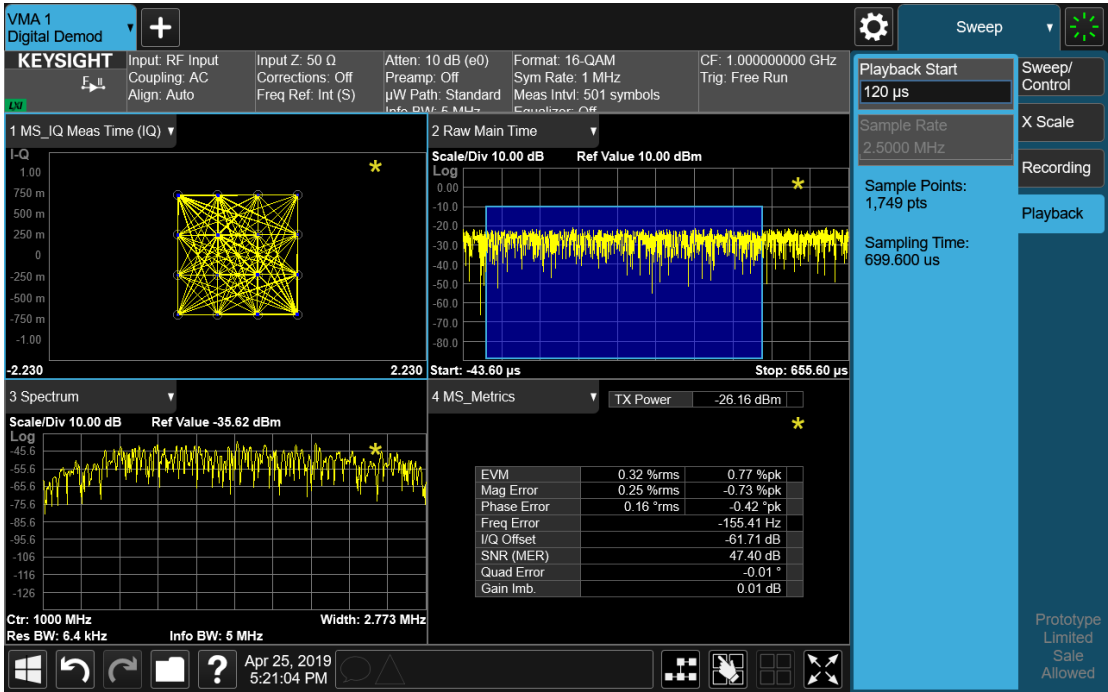

Once you press **Restart**, the invalid data indicator will disappear, as below:

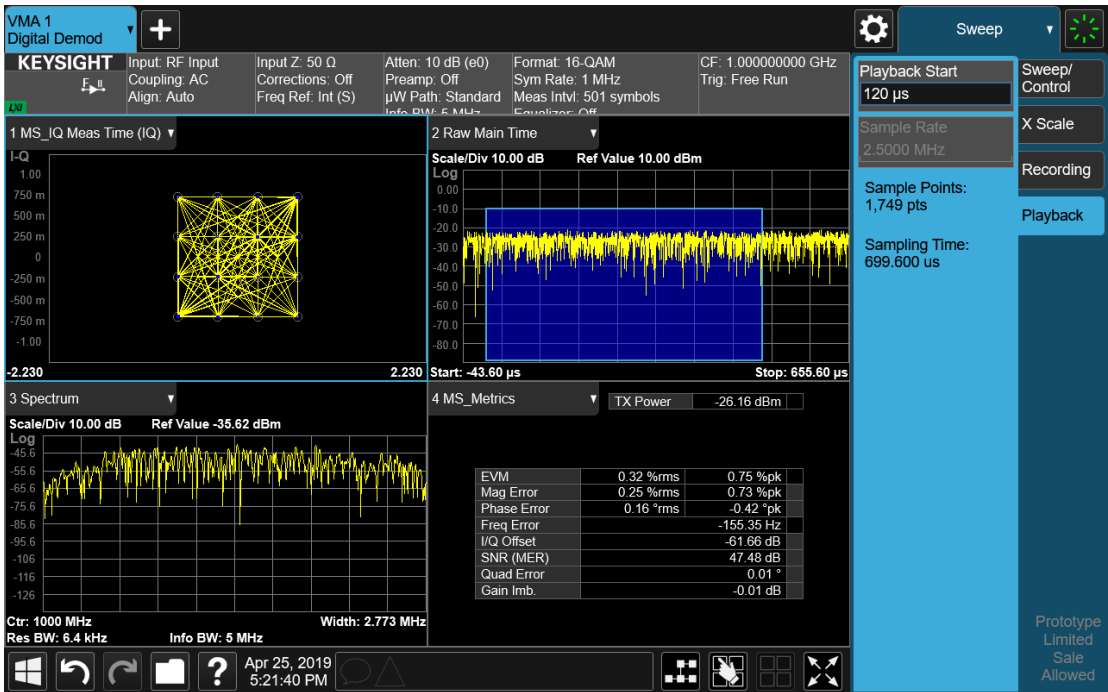

6.4.1 Data Source

Lets you select the input to the analysis engine. The following options are available:

Input	INPut	A hardware input signal (the default). This causes the measurement to take its input data from the hardware input (for example RF, I/Q, or EXTMixer) currently selected on the Input tab under Input/Output
Capture Buffer	STORed	Data stored in a storage buffer from a single earlier acquisition. Selecting "Capture Buffer" allows you to use data that has been previously stored using the "Current Meas -> Capture Buffer" control. You can make a measurement and then, if you want to make a different measurement using the exact same data, store the raw data using the "Current Meas -> Capture Buffer" control and select "Capture Buffer" as the Data Source, then switch to the other measurement. You must have previously done a "Current Meas -> Capture Buffer" before the Capture Buffer choice is available for use
Recorded	RECORded	Data recorded to memory from a set of earlier acquisitions. Selecting "Recorded" lets you use the record buffer, previously filled by using the "Recording" tab in the Sweep menu, as the input (only available in the Pulse measurement)
File	FILE	Data recorded on a storage device from a set of earlier acquisitions. If you load a Recording using Recording under the Recall key, "File" is automatically selected, which lets you use the recorded data as though it were coming from the Input

See ["Data Source" on page 3783](#) for a table of available choices on a per-measurement basis.

Remote Command	[:SENSe]:FEED:DATA INPut STORed RECORded FILE [:SENSe]:FEED:DATA?
Example	Cause the measurement to look at the input selection: :FEED:DATA INP Cause stored measurement data to be used with a different measurement that supports this: :FEED:DATA STOR
Dependencies	If you switch to a measurement that does not support the currently selected Data Source, the instrument switches Data Source to "Input". Attempting to select an unavailable Data Source via SCPI generates an error The Data Source setting is independent for each mode. Not all Data Sources are available in all modes
Preset	Unaffected by Preset, but set to INPut by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state
Backwards Compatibility SCPI	[:SENSe]:FEED:SOURce INPut STORed [:SENSe]:FEED:SOURce?

6.4.2 Current Meas -> Capture Buffer

Stores the raw data of one measurement in the internal memory of the instrument where it can then be used by a different measurement by pressing **Stored Data**. When raw data is stored, then the data source selection switch automatically changes to **Stored Data**. Stored raw data cannot be directly accessed. There is no save/recall function to save the raw data in an external media. If you want to get the stored raw data, you must first perform a measurement using the stored raw data. Now you can access the used raw data, which is the same as stored raw data, using the **:FETch** or **:READ** commands.

Remote Command	[:SENSe] :FEED:DATA:STORe
Example	:FEED:DATA:STOR stores recorded data
Notes	Command only; no query
Dependencies	Grayed-out in the SA measurement
Backwards Compatibility SCPI	[:SENSe] :FEED:SOURce:STORe

6.5 Corrections

Accesses the **Corrections** menu, which lets you select, turn on and off, and configure and edit Corrections. You can also select, turn on and off and configure Complex Corrections and Corrections Groups.

Corrections arrays provide Amplitude Corrections, and can be entered by the user, sent over SCPI, or loaded from a file. They allow you to correct the response of the instrument for various use cases. X-Series supports eight separate Corrections arrays, each of which can contain up to 2000 points. They can be turned on and off individually and any or all can be on at the same time. Corrections Groups let you load several (Amplitude) Corrections at a time into a Correction Group.

Complex Correction arrays provide both Amplitude and Phase Corrections, and can be loaded from a file. Currently the file type supported has the extension .s2p. Complex Corrections operate in much the same manner as Corrections – the X-series supports eight separate Complex Corrections arrays, each of which can contain up to 30000 points, and each Complex Correction can be turned on and off individually and any or all can be on at the same time. Some Modes, such as Spectrum Analyzer Mode, only support only the Amplitude (Magnitude) element of Complex Corrections. Other Modes, such as IQ Analyzer Mode and VMA, support both the Amplitude and Phase elements of Complex Corrections. If a Complex Correction is turned on in a Measurement that does not support Phase, only the Magnitude information will be used for the Correction.

Trace data is in absolute units and corrections data is in relative units. You can edit the Corrections arrays in the Corrections editor using the “Edit Correction” dialog (you cannot edit the Complex Corrections arrays; they can only be loaded from a file).

In zero span measurements (such as Zero Span in the Swept SA measurement), where the frequency is always the center frequency of the instrument, we apply the (interpolated) correction for the center frequency to all points in the trace. In the event where there are two correction amplitudes at the center frequency, we apply the first one in the table.

Note that the corrections are applied as the data is taken; therefore, a trace in **View** (Update Off) will not be affected by changes made to the corrections after the trace is put in **View**.

The **Corrections** tab only appears in Modes and Measurements that support Corrections and/or Complex Corrections. In other Modes, sending SCPI for Corrections and/or Complex Corrections will generate a Settings Conflict message

Corrections and Complex Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the instrument application, which means they will survive a power cycle. Corrections

and Complex Corrections arrays are reset (deleted) by Restore Input/Output Defaults. The following commands delete the correction registers:

- User Preset the current mode :SYST:PRES:USER
- User Preset all modes :SYST:PRES:USER ALL
- Full mode preset :SYST:PRES:FULL
- Restore power on default :SYST:DEF PON
- Restore all defaults :SYST:DEF; :SYST:DEF ALL
- Preset Input/Output variables :SYST:DEF INP
- Delete all corrections :CORR:CSET:ALL:DEL

The instrument Save State and Save Screen Config + State includes the data in the correction registers. If a measurement setup is saved and then recalled at a later time, the correction data will be recalled as well. This feature is useful for recreating the full instrument condition, but the user has to be careful that the recalled correction data is the desired data. For example, if the state is recalled on a different instrument different correction data might be needed. Or if the system is recalibrated, the correction data in the save state would then be stale. Applications that use measured data for corrections will generally need to reload the correction data from file whenever a state is recalled; this ensures that the correction data is current and applies to hardware in use.

In the EXM and EXF, on the RF Input/Output panel, there are two full-duplex RF ports (RFIO1 and RFIO2), RF Input and RF Output. When RF Input is selected, it will correspond to one input port from two half-duplex RF ports (RFIO3 and RFIO4), and when RF Output is selected, it will correspond to one output port from two half-duplex RF ports (RFIO3 and RFIO4). So, there are 8 sets of corrections in all that can be applied to the RF ports. Ports cannot share the same set of corrections, but a single port can have multiple corrections applied to it. The correction data is applied to incoming signals as well as transmitted signals and is in the form of a list of spot frequencies and amplitude correction levels.

Annotation	In EMI Mode, you can choose to display the correction details in the graph area by turning on Display, Annotation, Correction Annotation
------------	--

6.5.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

6.5.2 Correction On/Off

Turning the Selected Correction from **OFF** to **ON** allows the values in it to be applied to the data. This state transition also automatically turns on "Apply Corrections" (sets it to **ON**), otherwise the correction would not take effect.

A new sweep is initiated if an amplitude correction is switched on or off. Note that changing, sending or loading corrections data does *not* directly initiate a sweep, however in general these operations will turn corrections on, which *does* initiate a sweep.

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 16[:STATe]?</code>
Example	<code>:SENS:CORR:CSET1 ON</code>
Dependencies	Changing this from OFF to ON automatically turns on "Apply Corrections" Note that if any Correction is turned on that has a transducer unit set (other than "None"), the Y-Axis Unit of the instrument is forced to that Transducer Unit. All other Y-Axis Unit choices are grayed-out This command generates an "Option not available" error unless you have the proper option installed in your instrument
Preset	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved	Saved in instrument state
Annotation	If <i>any</i> Correction is turned on, Corr in the Meas Bar displays in amber to indicate Corrections are in use
Backwards Compatibility Notes	Unlike legacy instruments, Preset does not turn Corrections off (Restore Input/Output Defaults does)

6.5.3 Correction Port

Maps one of the sets of corrections to a particular I/O port. This control allows any Input port (including External Mixing, BBIQ, the RF2 input, etc.) to be mapped to a specific Correction, so that the Correction is only applied when that Port is being used by the current Screen. You can also map any internal source Output port to a specific Correction.

When Current Input (CINPut) is selected for **Correction Port**, it chooses the current input port of the current Screen for the selected Correction. In other words, the Correction applies to whichever input is selected. If the input changes, the correction applies to the new input.

When using the VXT M9410A/11A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu appear as :

Head h RFHD p

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half duplex ports, the choices for these ports appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

Remote Command	<pre>[:SENSe]:CORRection:CSET[1] 2 ... 16:RF:PORT CINPut RFIN RFIN2 AIQ EMIXer RFIO1 RFIO2 RFIO3 RFIO4 RFOut RFHD RFFD ANT GEN TR A1 A2 A3 B1 B2 B3 IFIO1 IFIO2 RRHnRFHDp ERFIN</pre> <p>See "Parameter Options" on page 3798</p> <pre>[:SENSe]:CORRection:CSET[1] 2 ... 16:RF:PORT?</pre>
Example	<p>Set Correction Port for Correction 1 to apply to the currently selected input:</p> <pre>:CORR:CSET:RF:PORT CINP</pre> <p>Set Correction Port for Correction 4 to apply to Radio Head 1, RF Tx/Rx Port 2:</p> <pre>:CORR:CSET4:RF:PORT RRH1RFHD2</pre>
Notes	The RF node in this command is retained for backwards compatibility, even though the scope of the Correction Port command goes beyond the RF ports and includes BBIQ and External Mixing
Dependencies	<p>RFIN2 AIQ EMIXer are only available on C/E/M/P/UXA analyzers with the appropriate options loaded</p> <p>RFOut is only available on modular products such as VXT</p> <p>ANT, GEN and TR are only available in VXT and only when the M9470A module is installed, such as in the M8920A. Option "HDX" is required to enable the TR port</p> <p>RFHD and RFFD are only available on VXT. Option HDX is required to enable RFHD port and option FDX is required to enable RFFD port</p> <p>RFIO3 and RFIO4 are only available on EXM with hardware M9431A</p> <p>RFIN and RFOut are not available on EXM with hardware M9431A</p> <p>ERFIN requires option "EXW"</p>
Preset	<p>Unaffected by Preset. Set as below by Restore Input/Output Defaults:</p> <p>For VXT: RFIN</p> <p>For EXM, EXF: RFIO1</p> <p>For all other models: CINPut (the currently selected input)</p>
State Saved	Saved in State

Parameter Options

Note that the presence of these ports is highly hardware dependent.

6 Input/Output

6.5 Corrections

Correction Port	SCPI	Note
Current Input	CINPut	The correction will be applied to whichever input is currently selected in the Input menu
RF Input	RFIN	Main RF Port Not available on EXM with hardware M9431A
RF Input 2	RFIN2	Second RF Port, labeled RF Input 2 Only available on certain instruments. Not available on modular instruments
BBIQ input	AIQ	Requires option BBA Not available on modular instruments
External Mixer	EMIXer	Requires option EXM Not available on modular instruments
Antenna	ANT	Antenna input port on M9470A, labeled Ant
Generator	GEN	Generator output port on M9470A, labeled Gen
T/R	TR	T/R port on M9470A, labeled T/R
RF Full Duplex	RFFD	On modular instruments, labeled RFFD . Option “FDX” is required to enable RFFD port
RF Half Duplex	RFHD	On modular instruments, labeled RFHD . Option “HDX” is required to enable RFHD port
A1	A1	On E7760B
A2	A2	On E7760B
A3	A3	On E7760B
B1	B1	On E7760B
B2	B2	On E7760B
B3	B3	On E7760B
IFIO1	IFIO1	On E7760B
IFIO2	IFIO2	On E7760B
RF Output	RFOut	Appears on some modular instruments Not available on EXM with hardware M9431A
RFIO1	RFIO1	Appears on some modular instruments
RFIO2	RFIO2	Appears on some modular instruments
RFIO3	RFIO3	Only available in EXM with hardware M9431A
RFIO4	RFIO4	Only available in EXM with hardware M9431A
GPS out	GPS	Appears on some modular instruments
GNSS out	GNSS	Appears on some modular instruments

6.5.4 Correction Direction

Selects whether corrections will be applied when the device associated with the specified correction is being used as an input, an output or in both directions. The choices are:

INPut	Correct the port only when the port is used as an Input
OUTPut	Correct the port only when the port is used as an Output
BOTH	Correct the port when the port is used as either an Input or an Output (or both)

A port that is only an Output is always corrected as an output if the Correction is On. A port that is only an Input is always corrected as an Input if the Correction is On. For a port that can be either an Input or an Output (or both), the Correction is determined by the Correction Direction setting. The default is **BOTH**, which means that by default a port that can be either an Input or an Output (or both) is corrected in both directions if the Correction is On.

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16:DIRection INPut OUTPut BOTH</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 16:DIRection?</code>
Example	<code>:CORR:CSET2:DIR INP</code>
Dependencies	The Correction Direction control only appears when Correction Port selects a port that can either function as an input or an output (or both simultaneously), such as RFIO HD, RFFD or T/R. If the SCPI command is sent to any other port, it is accepted but ignored
Preset	Not affected by a Preset. Set to BOTH by Restore Input/Output Defaults
State Saved	Saved in State
Backwards Compatibility SCPI	The following SCPI results in the selection of BOTH (included for compatibility with early Multitouch implementations): <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:DIRection BIDirectiona</code> included for compatibility with A-models modular products: <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFFD SOURce ANALyzer BOTH</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO1 SOURce ANALyzer BOTH</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO2 SOURce ANALyzer BOTH</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO3 SOURce ANALyzer BOTH</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO4 SOURce ANALyzer BOTH</code>

6.5.5 Edit Correction

Invokes the integrated editing facility for this correction set. When entering the menu, the editor window turns on, the selected correction is turned **On**, **Apply Corrections** is set to **On**, the amplitude scale is set to **Log**, and the Amplitude Correction ("Ampcor") trace is displayed. The actual, interpolated correction trace is shown in green for the selected correction. Note that since the actual interpolated correction is shown, the correction trace may have some curvature to it. This trace represents only the correction currently being edited, rather than the total, accumulated amplitude correction for all amplitude corrections which are currently on, although the total, accumulated correction for all corrections which are turned on is still applied to the data traces.

Because corrections data is always in dB, but the Y-axis of the instrument is in absolute units, it is necessary to establish a reference line for display of the Corrections data. The reference line is halfway up the display and represents 0 dB of correction. It is labeled "0 dB CORREC". It is drawn in blue. Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So, if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it. By definition all points are connected. If a gap is desired for corrections data, enter 0 dB.

Note that a well-designed Corrections array should start at 0 dB and end at 0 dB. This is because whatever the high-end point is will be extended to the top frequency of the instrument, and whatever the low-end point is will be extended down to 0 Hz. So, for a Corrections array to have no effect outside its range, you should start and end the array at 0 dB.

NOTE

The table editor only operates properly if the instrument is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and its response will be sluggish during compute-intensive operations like narrow-span FFT sweeps.

When exiting the edit menu (by using the **Return** key or by pressing an instrument front-panel key), the editor window turns off and the Ampcor trace is no longer displayed; however, **Apply Corrections** remains **On**, any correction that was on while in the editor remains on, and the amplitude scale returns to its previous setting.

Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the instrument application, which means they will survive a power cycle.

When editing a correction, the editor remembers which correction and which element in the correction array you were editing, and returns you to that correction and that element when you return to the editor after leaving it.

6.5.5.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

6.5.5.2 Frequency

Touching a frequency value makes the touched row the current row and lets you edit the frequency.

Min	0
Max	1 THz

6.5.5.3 Amplitude

Touching an amplitude value makes the touched row the current row and lets you edit the amplitude.

Min	-1000 dB
Max	1000 dB

6.5.5.4 Go to Row

Lets you move through the table to edit the desired point.

Min	1
Max	2000

6.5.5.5 Insert Row Below

Inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray. To enter the row into the table, press the **Enter** key, or tap either value and edit it.

6.5.5.6 Delete Row

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

6.5.5.7 Scale X Axis

Matches the X-Axis to the selected Correction, as well as possible. Sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Correction. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency, so that span exceeds this range by one graticule division on either side. If in zero-span, or there is no data in the Ampcor table, or the frequency range represented by the table is zero, no action is taken. Standard clipping rules apply if the value in the table is outside the allowable range for the X-Axis.

Dependencies	If either the first or last point in the array is outside the frequency range of the current input, an error message is generated: “-221. Settings conflict; Start or Stop Freq out of range for current input settings”
--------------	---


6.5.5.8 Delete Correction

Deletes the correction values for this set. When this key is pressed, a prompt appears on the screen saying “Please press **Enter** or **OK** key to delete correction. Press **ESC** or **Cancel** to close this dialog.” The deletion is only performed if you press **OK** or **Enter**.

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16:DELeTe</code>
Example	<code>:CORR:CSET:DEL</code> <code>:CORR:CSET1:DEL</code> <code>:CORR:CSET4:DEL</code>
Notes	Pressing this key when no corrections are present is accepted without error

6.5.5.9 Correction Graph

The **Correction Graph** embedded in the Edit Correction dialog lets you edit the Amplitude Correction visually. Each node in the Correction is represented by a gray circle. The current node has a blue outline in the table and a blue circle in the graph. Touch any circle and drag it where you want it to go.

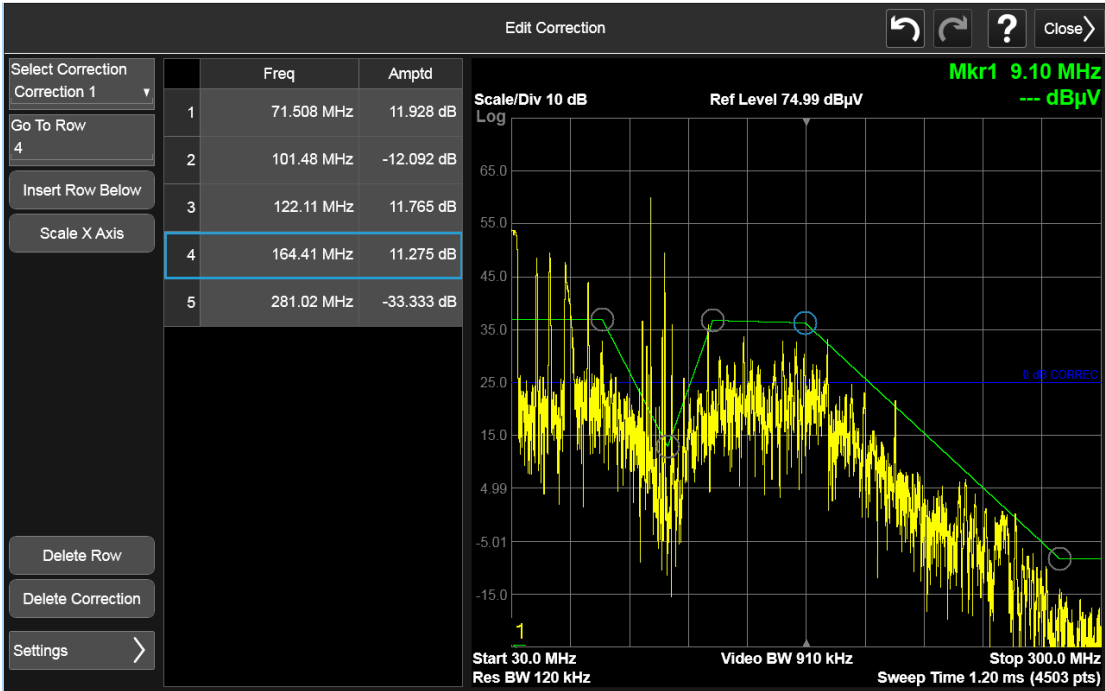

6.5.6 Edit Correction Settings

Opens another menu page that lets you set certain properties of the selected correction, such as Interpolation, Transducer Unit, Description and Comment.

6.5.6.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

6.5.6.2 Freq Interpolation

Controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

VXT models M9410A/11A/15A/16A only support Linear Interpolation. For more details, see ["Interpolation" on page 3804](#)

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16:X:SPACing LINear LOGarithmic</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 16:X:SPACing?</code>
Example	<code>:CORR:CSET:X:SPAC LIN</code>
Preset	Unaffected by Preset. Set to Linear by Restore Input/Output Defaults
State Saved	Saved in instrument state


Interpolation

For each bucket processed by the application, all of the correction factors at the frequency of interest (center frequency of each bucket) are summed and added to the amplitude. All trace operations and post processing treat this post-summation value as the true signal to use.

To effect this correction, the goal, for any particular start and stop frequency, is to build a correction trace, whose number of points matches the current Sweep Points setting of the instrument, which will be used to apply corrections on a bucket-by-bucket basis to the data traces.


For amplitudes that lie between two user specified frequency points, we interpolate to determine the amplitude value. You may select either linear or logarithmic interpolation between the frequencies.

If we interpolate on a log scale, we assume that the line between the two points is a straight line on the log scale. For example, let's say the two points are (2,4) and (20,1). A straight line between them on a log scale looks like:

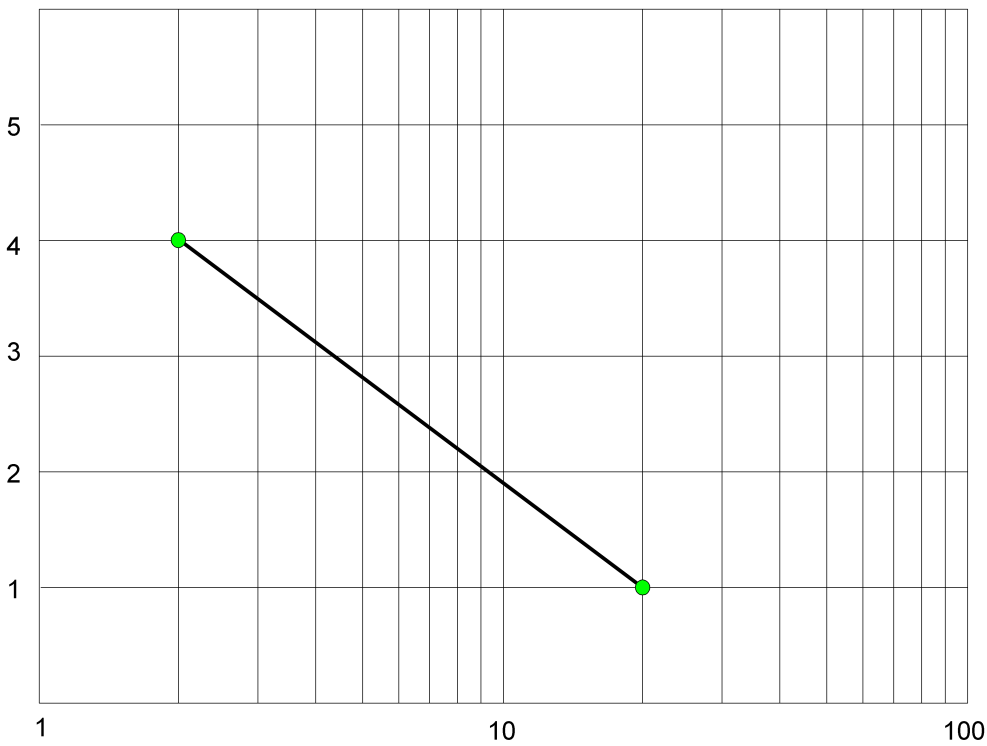


vsd17

On a linear scale (like that of the spectrum analyzer), this translates to:

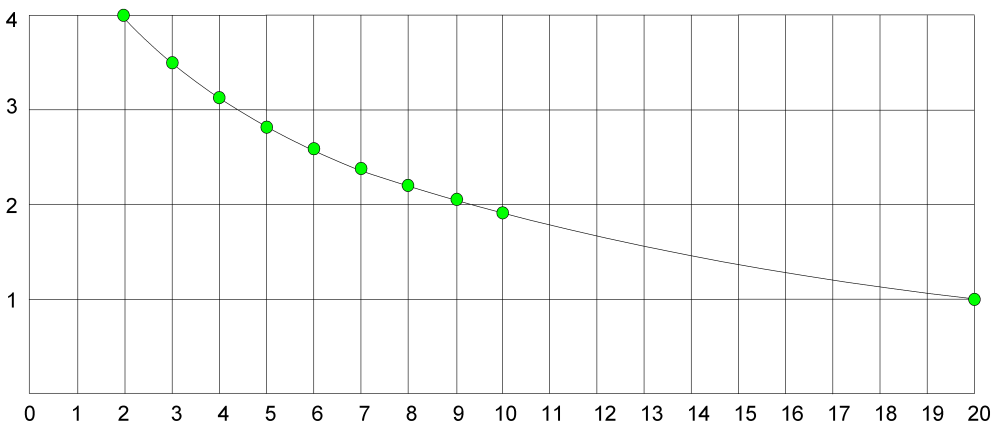

vsd19

If we interpolate on a linear scale, we assume that the two points are connected by a straight line on the linear scale, as below:

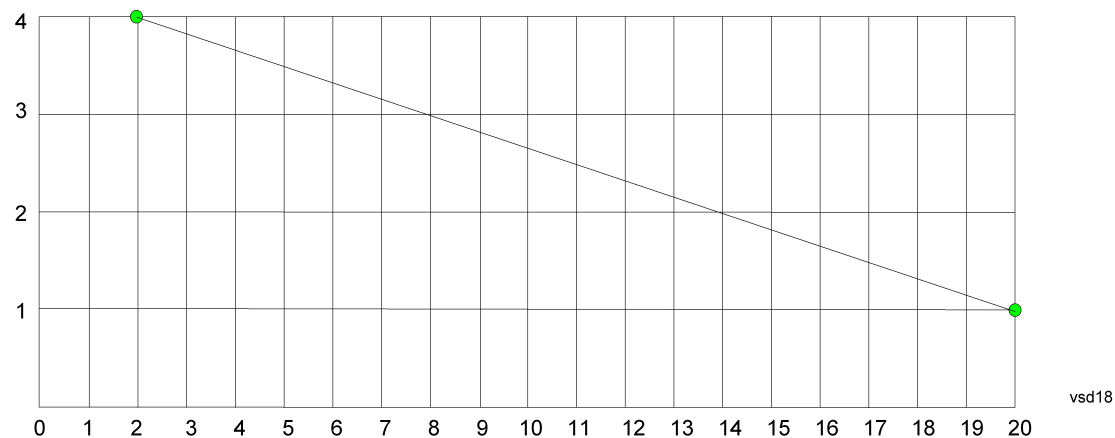

The correction to be used for each bucket is taken from the interpolated correction curve at the center of the bucket.

6.5.6.3 Transducer Unit

For devices (like antennas) that make measurements of field strength or flux density, the correction array should contain within its values the appropriate conversion factors such that, when the data on the instrument is presented in dBμV, the display is calibrated in the appropriate units. The "Transducer Unit" used for the conversion is contained within the corrections array database. It may be specified or loaded in from an external file or SCPI.

When an array with a Transducer Unit other than "None" is turned on, the Y Axis Unit of the instrument is forced to that unit. When this array is turned on, and it contains a Transducer Unit other than “None”, the Y Axis Unit of the instrument is forced to that Transducer Unit., and all other Y Axis Unit choices are grayed out.

Transducer Unit only appears in certain Modes, it does not appear in all Modes that support Corrections.

See ["Examples" on page 3807](#)

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16:ANTenna[:UNIT] GAUSS PTES1a UVM UAM UA NOConversion</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 16:ANTenna[:UNIT]?</code>
Example	<code>:CORR:CSET:ANT GAUS</code>
Dependencies	Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit When Normalize is On (in the Trace, Normalize menu) Transducer Unit is grayed-out and forced to None
Preset	Unaffected by Preset. Set to NOC by Restore Input/Output Defaults
State Saved	Saved in instrument state

Examples

The units that may be specified and what appears in the file and on the screen are shown below:

Transducer Unit	SCPI Example	In the Correction file	On the screen (also Y Axis Unit forced to)
dBμV/m	:CORR:CSET:ANT UVM	Antenna Unit=μV/m	dBμV/m
dBμA/m	:CORR:CSET:ANT UVA	Antenna Unit=μA/m	dBμA/m
dBμA	:CORR:CSET:ANT UA	Antenna Unit=μA	dBμA
dBpT	:CORR:CSET:ANT PTES	Antenna Unit=pTesla	dBpT
DBG	:CORR:CSET:ANT GAUS	Antenna Unit=Gauss	DBG
None	:CORR:CSET:ANT NOC	Antenna Unit= (or no line at all)	none (not forced)

6.5.6.4 Description

Sets an ASCII description field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to appear in a screen capture.

Remote Command	<code>[[:SENSe]:CORRection:CSET[1] 2 ... 16:DESCription "text"]</code> <code>[[:SENSe]:CORRection:CSET[1] 2 ... 16:DESCription?</code>
Example	<code>:CORR:CSET1:DESC "11941A Antenna correction"</code>
Notes	45 chars max; may not fit on display if max chars used
Preset	Unaffected by a Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.6.5 Comment

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to appear in a screen capture.

Remote Command	<code>[[:SENSe]:CORRection:CSET[1] 2 ... 16:COMMeNT "text"]</code> <code>[[:SENSe]:CORRection:CSET[1] 2 ... 16:COMMeNT?</code>
----------------	---

Example	<code>:CORR:CSET1:COMM "this is a comment"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.7 Complex Corrections

This dialog is used to set up and display information about the **Complex Corrections** set. It also lets you view and edit certain information such as the Description and Comment for the selected Complex Correction.

Complex Corrections (loaded from **.s2p** files) support both magnitude and phase corrections, whereas standard corrections (loaded from standard Ampcor **.csv** files) support only magnitude corrections.

When loading an **.s2p** file, the component representing S21 is the one that is used to generate the complex correction. If no S21 component is present, a Mass Storage error is reported.

NOTE

Data types RI, MA, and DB are supported.

The phase components of the S2P file are taken to be in degrees, not in radians. You must provide the phase correction in degrees.

Unlike Correction files, S2P files describe device characteristics, rather than the correction required to compensate for those characteristics; so, when an S2P file is loaded, both the magnitude and phase are negated to turn it into a correction

Complex Corrections and standard corrections can be turned on at the same time. For example, you could turn on Correction 2, Correction 4, and Complex Correction 1 and 2, all at the same time. The magnitude part of all the corrections would add, and the phase part of the complex corrections would add.

You can have up to 64 Complex Corrections loaded simultaneously. Each Complex Correction can hold up to 30,000 points.

You can load a standard correction into Complex Corrections, but it will only provide a magnitude correction, not a phase correction.

NOTE

A standard correction (from a CSV file) can be loaded into a Complex Correction, but when it is loaded the Phase correction is set to 0 for all points.

Some measurements, like Swept SA, have no phase component to the measurement, but nonetheless support Complex Corrections. For such measurements, only the Magnitude part of the Complex Correction is applied.

6.5.7.1 Go To Row (Select Correction)

Specifies the selected complex correction. The selected correction will be identified by the blue outlined row in the dialog.

The "selected complex correction" is an important concept when sending SCPI commands to the Complex Corrections system, because in each case the SCPI command is directed to the currently selected Complex Correction and that will be the Correction which is modified by the SCPI command.

Remote Command	<code>[:SENSe]:CCORrection:CSET:SElect <integer></code> <code>[:SENSe]:CCORrection:CSET:SElect?</code>
Example	<code>:CCOR:CSET:SEL 3</code> <code>:CCOR:CSET:SEL?</code>
Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults
Min	1
Max	64

6.5.7.2 Delete Row

Deletes the currently-selected Complex Correction and clears all entries in that row to the default.

Remote Command	<code>[:SENSe]:CCORrection:CSET:DELeTe</code>
Example	Select correction 3: <code>:CCOR:CSET:SEL 3</code> Delete correction 3: <code>:CCOR:CSET:DEL</code>

6.5.7.3 Delete All

Deletes all complex corrections and clears all entries in all rows to the default.

When this key is pressed a prompt is placed on the screen that says "Please press Enter or OK key to delete all complex corrections. Press ESC or Cancel to close this dialog." The deletion is only performed if you press **OK** or **Enter**.

Remote Command	<code>[:SENSe]:CCORrection:CSET:ALL:DELeTe</code>
Example	<code>:CCOR:CSET:ALL:DEL</code>

6.5.7.4 Correction On

Checking or unchecking this box turns the Selected Complex Correction **ON** or **OFF**. Turning it **ON** causes the values in it to be applied to the data. This state transition also automatically turns on "Apply Corrections" (sets it to **ON**), otherwise the correction would not take effect.

A new sweep/acquisition is initiated if a complex correction is switched on or off. Note that changing, sending or loading corrections data does *not* directly initiate a sweep, however in general these operations will turn corrections on, which *does* initiate a sweep.

Remote Command	<code>[:SENSe]:CCORrection:CSET[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CCORrection:CSET[:STATe]?</code>
Example	Select correction 3: <code>:CCOR:CSET:SEL 3</code> Turn correction 3 on: <code>:CCOR:CSET ON</code>
Dependencies	Changing this from OFF to ON automatically turns on "Apply Corrections" Grayed-out if Complex Corrections is not supported by the current measurement. A warning or SCPI error is generated if you try to turn it on under these circumstances: "Feature not supported for this measurement"
Preset	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved	Saved in instrument state
Annotation	If <i>any</i> Complex Correction is turned on, CC in the Meas Bar will display in amber to indicate Complex Corrections are in use

6.5.7.5 Correction Port

Maps one of the sets of corrections to a particular I/O port. This control allows any Input port (including External Mixing, BBIQ, the RF2 input, etc.) to be mapped to a specific Correction, so that the Correction is only applied when that Port is being used by the current Screen. You can also map any internal source Output port to a specific Correction.

When Current Input (CINPut) is selected for **Correction Port**, it chooses the current input port of the current Screen for the selected Correction. In other words, the Correction applies to whichever input is selected. If the input changes, the correction applies to the new input.

When using the VXT M9410A/11A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu will appear as

Head h RFHD p

6 Input/Output

6.5 Corrections

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half duplex ports, the choices for these ports will appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

See also the parameters, notes and examples table under ["Correction Port" on page 3797](#).

Remote Command	<pre>[:SENSe]:CCORrection:CSET:PORT CINPut RFIN RFIN2 AIQ EMIXer RFOut RFIO1 RFIO2 RFIO3 RFIO4 RFHD RFFD ANT GEN TR A1 A2 A3 B1 B2 B3 IFIO1 IFIO2 RRHnRFHD ERFIN [:SENSe]:CCORrection:CSET:PORT?</pre>
Example	<p>Select correction 2:</p> <pre>:CCOR:CSET:SEL 2</pre> <p>Set correction 2 to RFIN:</p> <pre>:CCOR:CSET:PORT RFIN</pre> <p>Set Correction 2 to Radio Head 1, RF Tx/Rx Port 2:</p> <pre>:CCOR:CSET:PORT RRH1RFHD2</pre>
Dependencies	<p>RFIN2 AIQ EMIXer are only available on C/E/M/P/UXA analyzers with the appropriate options loaded</p> <p>RFOut is only available on modular products such as VXT</p> <p>ANT, GEN and TR are only available in VXT and only when the M9470A module is installed, such as in the M8920A. Option "HDX" is required to enable the TR port</p> <p>RFHD and RFFD are only available on VXT. Option HDX is required to enable RFHD port and Option FDX is required to enable RFFD port</p> <p>RFIO3 and RFIO4 are only available on EXM with hardware M9431A</p> <p>RFIN and RFOut are not available on EXM with hardware M9431A</p> <p>ERFIN requires option "EXW"</p>
Preset	Not affected by Preset. Set to CINPut by Restore Input/Output Defaults
State Saved	Saved in State

6.5.7.6 Direction

Selects whether corrections will be applied when the device associated with the specified correction is being used as an input, an output or in both directions. The choices are:

INPut Correct the port only when the port is used as an Input

	OUTPut Correct the port only when the port is used as an Output BOTH Correct the port when the port is used as either an Input or an Output (or both)
Remote Command	<code>[:SENSe]:CCORrection:CSET:DIRection INPut OUTPut BOTH</code> <code>[:SENSe]:CCORrection:CSET:DIRection?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code> Set correction 4 to Input: <code>:CCOR:CSET:DIR INP</code>
Dependencies	For Inputs, the only choice is INPut , so an empty table cell is displayed. For Outputs, the only choice is OUTPut , so an empty table cell is displayed. If the SCPI command is sent while one of these ports is selected, it is accepted but ignored For a port that can be either an Input or an Output (or both), such as RFHD, RFFD or T/R, all three choices are available
Preset	Not affected by Preset. Set to BOTH by Restore Input/Output Defaults
State Saved	Saved in State
Backwards Compatibility SCPI	The following SCPI will result in the selection of BOTH (included for compatibility with early Multitouch implementations): <code>[:SENSe]:CCORrection:CSET:DIRection BIDirectiona</code>

6.5.7.7 Description

Shows the Description field for the selected Complex Correction. The Description field is loaded from the second line of the `.s2p` file. (Note that, if line 2 begins with “!”, the ! is not displayed in the Description field.)

Remote Command	<code>[:SENSe]:CCORrection:CSET:DESCription "text"</code> <code>[:SENSe]:CCORrection:CSET:DESCription?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code> <code>:CCOR:CSET:DESC "PNA data import 1-1-18"</code>
Notes	45 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.7.8 Comment

Shows the Comment field for the selected Complex Correction. The Comment field is loaded from the third line of the `.s2p` file. (Note that, if line 3 begins with “!”, the ! is not displayed in the Comment field.)

Remote Command	<code>[:SENSe]:CCORrection:CSET:COMMeNt "text"</code> <code>[:SENSe]:CCORrection:CSET:COMMeNt?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code> <code>:CCOR:CSET:COMM "this is a comment"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.7.9 File

Shows the file from which the selected correction was loaded. If correction was loaded with a SCPI command (see ["Set Data \(Remote Command Only\)" on page 3814](#)) displays "(SCPI)". If no correction is loaded, displays "(No correction loaded)"

Notes	60 chars max; may not fit on display if max chars used
State Saved	Saved in instrument state

6.5.7.10 Freq Interpolation (Remote Command Only)

Controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E only support Linear Interpolation.

See ["Interpolation" on page 3804](#) under Corrections.

Remote Command	<code>[:SENSe]:CCORrection:CSET:X:SPACing LINear LOGarithmic</code> <code>[:SENSe]:CCORrection:CSET:X:SPACing?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code> Set linear interpolation: <code>:CCOR:CSET:X:SPAC LIN</code>
Preset	Unaffected by Preset. Set to LINear by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.7.11 Set Data (Remote Command Only)

Lets you set the magnitude part of a complex correction's data via a SCPI command. This is provided for compatibility with the similar command for standard corrections, to allow you to use Complex Corrections as an extension to standard corrections.

Sending this command sets the phase part of the selected correction to 0 for all points.

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command will totally replace all existing correction points in the specified set.

A Complex Correction array can contain 30000 points maximum.


Remote Command	[:SENSe]:CCORrection:CSET:DATA <freq>, <ampl>, ... [:SENSe]:CCORrection:DATA?										
Example	<p>Firstly, select correction 4:</p> <pre>:CCOR:CSET:SEL 4</pre> <p>This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 4:</p> <pre>:CCOR:CSET:DATA 10000000,-1.0,20000000,1.0</pre>										
Preset	Empty after Restore Input/Output Defaults . Survives a shutdown or restart of instrument application (including a power cycle)										
State Saved	Saved in instrument state										
Min/Max	<table> <tr> <th></th><th>Min</th><th>Max</th></tr> <tr> <td>Freq</td><td>0 Hz</td><td>1 THz</td></tr> <tr> <td>Amptd</td><td>-1000 dBm</td><td>+1000 dBm</td></tr> </table>			Min	Max	Freq	0 Hz	1 THz	Amptd	-1000 dBm	+1000 dBm
	Min	Max									
Freq	0 Hz	1 THz									
Amptd	-1000 dBm	+1000 dBm									

6.5.8 Apply Corrections

When you turn on Apply Corrections, all of the Corrections that are turned On are applied to the measured data. When you turn off Apply Corrections, no Corrections are applied, even if they are turned On.

With this switch you can turn the entire Corrections system on and off without affecting the settings of any individual Corrections. Turning Apply Corrections On and Off has no effect on the On/Off switches under the individual Corrections.

Apply Corrections affects both normal Corrections and Complex Corrections. Normal Corrections are turned On and Off using the Correction switch under Select Correction:

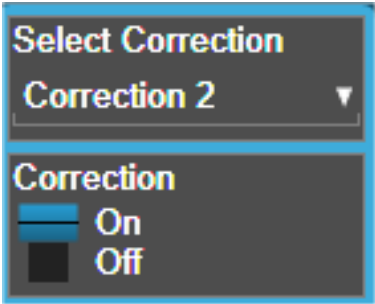

Complex Corrections are turned On and Off using the checkboxes in the Complex Corrections dialog:

Correction	On	Port	Direction	
1	<input checked="" type="checkbox"/>	Current Input	Input	D
2	<input type="checkbox"/>	Current Input	Input	

See ["Correction On/Off" on page 3797](#)) and ["Complex Corrections" on page 3808](#).

Remote Command	<code>[:SENSe]:CORRection:CSET:ALL[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CORRection:CSET:ALL[:STATe]?</code>
Example	<code>:SENS:CORR:CSET:ALL OFF</code> This command makes sure that no amplitude corrections are applied, regardless of their individual on/off settings
Couplings	Whenever you turn on any Correction or Complex Correction, Apply Corrections is automatically set to ON
Preset	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved	Saved in instrument state
Annunciation	When ON , 'CORREC' appears in the Meas Bar as long as at least one of the individual corrections is enabled

6.5.9 Delete All Corrections

Erases all correction values for all Amplitude Correction sets and Complex Corrections.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all corrections. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press **OK** or **Enter**.

Remote Command	<code>[:SENSe]:CORRection:CSET:ALL:DELeTe</code>
Example	<code>:CORR:CSET:ALL:DEL</code>

6.5.10 Correction Group On/Off

Turns the Correction Group on and off. The Correction Group allow you to preload Correction files and associate them with specific frequency ranges, so that they can be switched in and out during a sweep at the appropriate frequencies. Use the control “Edit Correction Group” below to set up your Correction Group.

The state of each Correction will be set dynamically depending on the active measurement frequency. Only the correction selected for the range that matches the active measurement frequency will be turned on, and vice versa.


Note that the Corrections in the Correction Group, although they are loaded into memory, are independent of the main Correction registers at the top of the Corrections menu, and will not display under the Select Correction, Correction On/Off or Edit Correction functions.

Remote Command	<code>[:SENSe]:CORRection:CSET:GRoup[:STATe] ON OFF 1 0</code> <code>[:SENSe]:CORRection:CSET:GRoup[:STATe]?</code>
Example	<code>:SENS:CORR:CSET:GRO ON</code>
Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions are not visible
Couplings	When on, Correction 1 through 8 is set to OFF and the correction on/off state keys are grayed out. If the grayed-out key is pressed, it generates an advisory message. If sending the SCPI to turn it on, this same message is generated as part of Settings conflict
Preset	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.11 Break


If break is turned on, the scan or sweep will be paused when it reaches the boundary of correction group ranges. At the same time, a window at the size of ~ 6.5cm x 3.5 cm is prompt at the upper right-hand corner of the graticule.

When running Frequency Scan measurement of Emi Receiver application, the message prompt is like below. You are given the option to resume the scan or stop the scan.

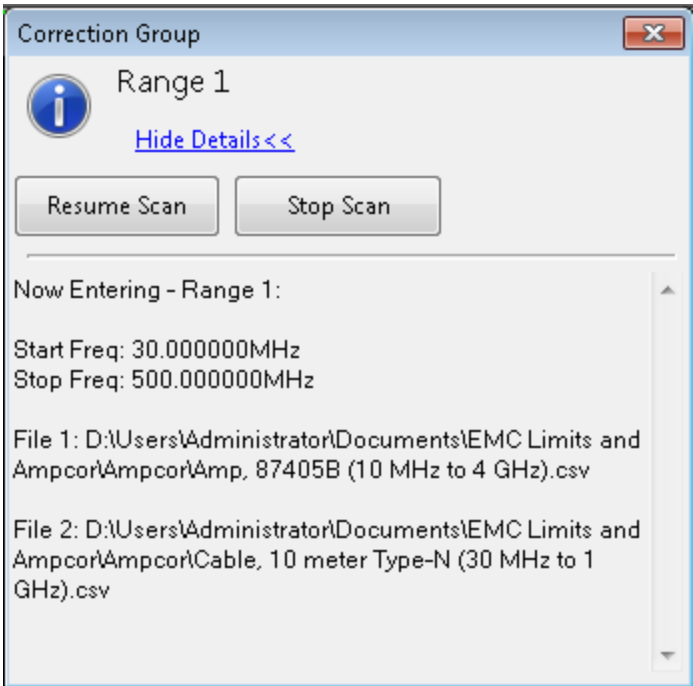

When running the Swept SA measurement in Spectrum Analyzer Mode, the message prompt is as below. You are given the option to resume the sweep or turn off the break. If in Continuous sweep, the sweep will resume after the break is turned off.



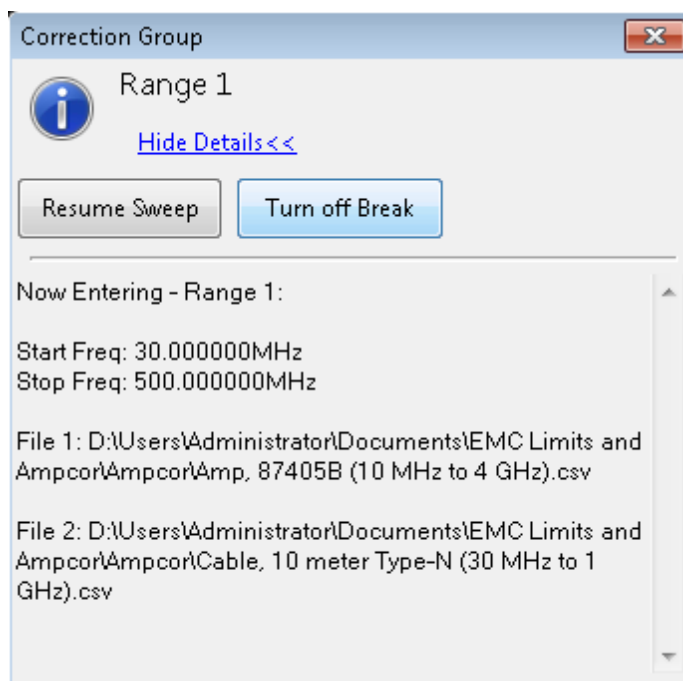

Remote Command	<code>[:SENSe]:CORRection:CSET:GROup:BRake ON OFF 1 0</code> <code>[:SENSe]:CORRection:CSET:GROup:BRake?</code>
Example	<code>:SENS:CORR:CSET:GRO:BR ON</code>
Notes	<p>When running the Frequency Scan measurement in EMI Receiver Mode, if break is turned on when a SCPI is sent to start the scan, the scan pauses when it reaches the boundary of correction group ranges. Bit 8 (Paused) of status operation register is set to true. To resume, send <code>:INITiate2:RESume</code>. To stop the scan, send <code>:ABORT</code></p> <p>When running the Swept SA measurement in Spectrum Analyzer Mode, the break state does not affect the operation of sweep when SCPI to control the sweep is sent. Instead, the SCPI commands close the message prompt if it is showing at the point the commands are sent, and the break is turned off. The SCPI includes:</p> <p><code>:INITitate:IMMEdiate</code> <code>:INITitate:REStart</code> <code>:INITitate:CONTinuous ON OFF 1 0</code> <code>:ABORT</code></p>
Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Break) are not visible
Preset	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.12 Reload Corrections From Files

Because the Correction data for the Correction Group is loaded into memory from Correction files at the time the Group is defined, it will be necessary to reload some or all of the data if any of the files changes. This function reloads all of the correction data from all of the correction files defined in all of the ranges in the Correction Group.

Remote Command	<code>[:SENSe]:CORRection:CSET:GROup:RELoad</code>
Example	<code>:MMEM:STOR:CORR:GRO:REL</code>
Notes	If invalid data is found in the files, the correction group will be set to off, and an Execution error is generated. Error icon appears on the status column correction group table
Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Reload Correction From File) are not visible
Annotation	If reload fails, error icons appear in the status column of correction group editor for the range that has the error

6.5.13 Edit Correction Group

Opens the Table Editor for the correction group. The content of correction group table including the correction data loaded from the files is not affected by Preset, and it survives power cycle. You can set it to empty with **Restore Input/Output Defaults**.

Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Edit Correction Group) are not visible
--------------	---

6.5.13.1 Go to Row

Lets you move through the table to edit the desired point.

Min	1
Max	2000

6.5.13.2 Insert Row Below

Inserts a point below the current point. The new point starts from the current range stop frequency and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

6.5.13.3 Delete Row

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

6.5.13.4 Select File

Indicate the correction files in which the specify file and remove file operations will take effect.

Preset	Unaffected by a Preset. Set to empty by Restore Input/Output Defaults
--------	--

6.5.13.5 Specify File

Displays the file browsing menu. When a file is selected, correction data will be loaded from the file. The correction data remains until the file is removed or the range is deleted.

Notes	<p>If the file is empty, error -250 is reported. If the file does not exist error -256 is reported. If there is a mismatch of data type, error -250 is reported</p> <p>Only one file with antenna unit can be supported per range. If you try to add another file which contains an antenna unit, a Mass Storage error is generated</p> <p>All ranges have to use a common antenna unit. If you try to add a correction file that contains a different antenna unit, a Mass Storage error is generated</p> <p>If you try to add a correction file that contains data that does not cover the range frequency, the file cannot be added, and an Execution error is generated</p>
-------	---

6.5.13.6 Remove File

Removes the selected file. When a file is removed, correction data for that file will be removed as well.

Dependencies	The key is grayed-out if there the file has not been specified. If the grayed-out key is pressed, an advisory message is generated
--------------	--

6.5.13.7 Correction Trace Display

Enables you to view the correction traces of all corrections that are added to the range currently selected. A 2-column table in the function of frequency and the accumulated amplitude correction is displayed at the left pane.

Preset	OFF
State Saved	Saved in instrument state

6.5.13.8 Description

Provides a description of up to 60 characters by which you can easily identify the correction group. The descriptions will be stored in the exported file and can be displayed in the active function area by selecting them as the active function, if desired to be in a saved screen dump.

Remote Command	<code>[:SENSe]:CORRection:CSET:GROup:DESCription "text"</code> <code>[:SENSe]:CORRection:CSET:GROup:DESCription?</code>
Example	<code>:CORR:CSET:GRO:DESC "Radiated Setup"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.13.9 Comment

Provides a comment of up to 60 characters by which you can easily identify the correction group. The comments will be stored in the exported file and can be displayed in the active function area by selecting them as the active function, if desired to be in a saved screen dump.

Remote Command	<code>[:SENSe]:CORRection:CSET:GROup:COMMeNt "text"</code> <code>[:SENSe]:CORRection:CSET:GROup:COMMeNt?</code>
Example	<code>:CORR:CSET:GRO:COMM "For internal only"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

6.5.13.10 Start Frequency

Touching a **Start Frequency** value makes the touched row the current row and lets you edit the start frequency.

Notes	You cannot set the Start Frequency to a value greater than Stop Frequency or equal to Stop Frequency. You cannot set the Start Frequency to a value that would create a span of less than 10 Hz. If you try to do any of these, the Stop Frequency will change to maintain a minimum span of 10 Hz If you change the Start Frequency of the selected range to a value smaller than the previous range's Stop Frequency, the Stop Frequency of the previous range will be changed to the same value
-------	---

	If you change the Start Frequency of the selected range to a value out of the correction data frequency range, an error icon appears on the status column and an Execution error is generated
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
Min	0
Max	1 THz

6.5.13.11 Stop Frequency

Touching a **Stop Frequency** value makes the touched row the current row and lets you edit the stop frequency.

Notes	<p>You cannot set the Stop Frequency to a value greater than Start Frequency or smaller than Start Frequency. You cannot set the Stop Frequency to a value that would create a span of less than 10 Hz. If you try to do any of these, the Start Frequency will change to maintain a minimum span of 10 Hz</p> <p>If you change the Stop Frequency of the selected range to a value greater the next range's Start Frequency, the Start Frequency of the next range will be changed to the same value</p> <p>If you change the Stop Frequency of the selected range to a value out of the correction data frequency range, an error icon appears on the status column and an Execution error is generated</p>
Preset	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
Min	0
Max	1 THz

6.5.14 Merge Correction Data (Remote Command Only)

Accepts an ASCII series of alternating frequency and amplitude points, each value separated by commas. The difference between this command and **Set Data** is that this merges new correction points into an existing set.

If any new point has the same frequency as an existing correction point, the existing point's amplitude is replaced by that of the new point.

An Ampcor array can contain 2000 total points, maximum.

Remote Command	<code>[[:SENSe]:CORRection:CSET[1] 2 ... 16:DATA:MERGe <freq>, <ampl>, ...</code>
Example	<p><code>:CORR:CSET1:DATA:MERGE 15000000,-5.0,25000000,5.0</code></p> <p>This adds two correction points at (15 MHz, -5.0 dB) and (25 MHz, 5.0 dB) to whatever values already exist in correction set 1</p>
Preset	Empty after Restore Input/Output Defaults . Survives shutdown/restart of instrument application (including power cycle)

Min/Max	Min	Max
Freq	0 Hz	1 THz
Amptd	-1000 dBm	+1000 dBm

6.5.15 Set (Replace) Data (Remote Command Only)

Accepts an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command totally replace all existing correction points in the specified set.

An Ampcor array can contain 2000 points maximum.

Remote Command	<code>[:SENSe]:CORRection:CSET[1] 2 ... 16:DATA <freq>, <ampl>, ...</code> <code>[:SENSe]:CORRection:CSET[1] 2 ... 16:DATA?</code>
Example	<code>:CORR:CSET1:DATA 10000000,-1.0,20000000,1.0</code> This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 1
Preset	Empty after Restore Input/Output Defaults . Survives a shutdown or restart of instrument application (including a power cycle)
State Saved	Saved in instrument state
Min	Freq: 0 Hz Amptd: -1000 dBm
Max	Freq: 1 THz Amptd: +1000 dBm

6.5.16 Correction Group Range Data (Remote Command Only)

Accepts an ASCII series of alternating start frequency, stop frequency and file names, each value separated by commas.

The values sent in the command replace the content of correction group.

The default path for CSV files is:

`D:\My Documents\amplitudeCorrections\`

Remote Command	<code>[:SENSe]:CORRection:CSET:GRoup[1] 2 ... 10:DATA <startFreq>,<stopFreq>,<filename1>,<filename2>,...,<filename8></code> See Notes below for explanation of the <filenameN> parameters <code>[:SENSe]:CORRection:CSET:GRoup[1] 2 ... 10:DATA?</code>
----------------	---

Example	<code>:CORR:CSET:GRO:DATA 10000000,20000000,"myAmpcor.csv"</code> <code>myAmpcor.csv</code> refers to the Amplitude Correction data from the file <code>myAmpcor.csv</code> in the default path
Notes	<p><code><filename></code> is the string containing the path of the correction files</p> <p><code><filename2></code>, <code><filename3></code>, <code><filename4></code>, <code><filename5></code>, <code><filename6></code>, <code><filename7></code>, <code><filename8></code> are optional. You can define only <code><filename1></code>. The file name defined is added to corresponding File keys based on the sequence sent in the command. File keys with no file name set in the SCPI will be emptied</p> <p>Data for ranges 1 to 10 must be set in ascending order. If you try to set the data for a correction group range that is not connecting to the range currently available, a Data out of range error is generated</p> <p>If the file defined in data is empty, error -250 is reported. If the file does not exist, error -256 is reported. If there is a mismatch of data type, error -250 is reported</p> <p>Only one file with antenna unit can be supported per range. If you try to add another file that contains an antenna unit, a Mass Storage error is generated</p> <p>All ranges have to use a common antenna unit. If you try to add a correction file that contains a different antenna unit, a Mass Storage error is generated</p>
Preset	Reset to Not a Number (9.91e+37) for frequencies and "" for File 1 through File 8 after Restore Input/Output Defaults . Survives a shutdown or restart of instrument application (including a power cycle)
State Saved	Saved in instrument state
Min	Start Freq and Stop Freq: 0 Hz
Max	Start Freq and Stop Freq:1 THz

6.5.17 Delete Correction Group Range (Remote Command Only)

Deletes all range values of corrections Group.

Remote Command	<code>[:SENSe] :CORRection:CSET:GROup:DELeTe</code>
Example	<code>:CORR:CSET:GRO:DEL</code>
Notes	Sending this command when no range is defined in table is accepted without error

6.6 Freq Ref Input

Lets you configure the External Frequency Reference input on the rear panel.

6.6.1 Freq Ref Input

Specifies the frequency reference as being the internal reference, an external reference at the rear panel input labeled EXT REF IN, a 1 pulse per second signal at the EXT REF IN input, or automatically sensing the appropriate reference.

See ["More Information" on page 3827](#)

Remote Command	<code>[:SENSe]:ROSCillator:SOURce:TYPE Internal EXternal SENSE PULSe</code> <code>[:SENSe]:ROSCillator:SOURce:TYPE?</code>
Example	<code>:ROSC:SOUR:TYPE SENS</code> <code>:ROSC:SOUR:TYPE INT</code> <code>:ROSC:SOUR:TYPE EXT</code> <code>:ROSC:SOUR:TYPE PULS</code>
Dependencies	The PULSe parameter, and support of the 1 pps signal at the EXT REF IN input, are not available in some models. If not available, the choice does not appear, and sending the PULSe parameter via SCPI generates an error For VXT models M9420A/10A/11A/15A and M9410E/11E/15E/16E the only available selection is EXternal , unless M9420A/10A/11A/15A is configured in MIMO mode as Primary module. If configured in MIMO mode as Primary module, the available selection is Internal EXternal SENSE For EXM the only available selections are Internal EXternal SENSE For E7760B and M8920A/20B the only available selections are Internal EXternal Not available in UXM
Preset	Unaffected by Preset, but set to EXternal in VXT models M9420A/10A/11A/15A, Internal for E7760B, and SENSe for other models, by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state
Annunciation	In the Meas Bar: If you set this to Internal and no external reference is plugged in: Freq Ref: Internal If you set this to Internal and an external reference between 1 and 50 MHz, or a 1 pps signal, IS plugged in: Freq Ref: Internal (in amber, as a warning sign) If you set this to External and an External Reference between 1 and 50 MHz is plugged in: Freq Ref: External

	<p>If you set this to External and no External Reference is sensed: Freq Ref: External (in amber, as a warning sign) When set to Pulse and a 1 pps signal is plugged in: Freq Ref: Pulse If you set this to Pulse and no Pulse Reference is sensed: Freq Ref: Pulse (in amber, as a warning sign) When set to Sense and neither a signal between 1 and 50 MHz nor a 1 pps signal is detected at the EXT REF IN input, "Sense:Int" is displayed: Freq Ref: Sense,Int When set to Sense and a signal within 5 ppm of the External Ref Freq (as set on the Ext Ref Freq control) is detected at the EXT REF IN input: Freq Ref: Sense,Ext When set to Sense and a 1 pps signal is detected at the EXT REF IN input, "Sense:Pulse" is displayed: Freq Ref: Sense,Pls</p>
Status Bits/OPC dependencies	<p>STATUS:QUESTIONABLE:FREQUENCY bit 1 set if unlocked Note: In EXM, the status bit is not set for non-controlling instances. To determine if the frequency reference is unlocked, the controlling instance must be queried</p>
Backwards Compatibility Notes	<p>Freq Ref In was not saved in state in the legacy instruments. It is part of state in the X-Series</p>
Remote Query	
Remote Command	<p>[:SENSe] :ROSCillator:SOURce?</p>
Notes	<p>Returns the current switch setting. This means:</p> <ol style="list-style-type: none"> 1. If it was set to SENSe but there is no external reference nor 1 pps signal, so the instrument is actually using the internal reference, then this query returns INTernal1, not SENSe 2. If it was set to SENSe and there is an external reference present, the query returns EXTernal1, not SENSe 3. If it was set to SENSe and there is a 1 pps signal present, the query returns PULSe, not SENSe 4. If it was set to EXTernal1, then the query returns EXTernal1 5. If it was set to INTernal1, then the query returns INTernal1 6. If it was set to PULSe, then the query returns PULSe <p>Note: In EXM, the SCPI query always returns INTernal1 for non-controlling instances</p>
Preset	<p>For VXT models M9420A/10A/11A/15A: EXTernal1 For E7760B, M8920A/20B: INTernal1 All other models: SENSe</p>
Backwards	<p>[:SENSe] :ROSCillator:SOURce? was query-only in ESA which always returned whichever</p>

6 Input/Output

6.6 Freq Ref Input

Compatibility Notes	<p>reference the instrument was using. The instrument automatically switched to the ext ref if it was present</p> <p>In PSA (which had no sensing), [:SENSe]:ROSCillator:SOURce set the reference (INT or EXT), so again its query returned the actual routing</p> <p>Thus, the query is 100% backwards compatible with both instruments</p> <p>Backwards Compatibility Command</p>
Notes	<p>For PSA compatibility the command form is provided and is directly mapped to [:SENSe]:ROSCillator:SOURce:TYPE</p> <p>Note: In EXM, the command does nothing for non-controlling instances</p>
Backwards Compatibility SCPI	<p>[:SENSe]:ROSCillator:SOURce INTERNAL EXTERNAL</p>

More Information

When the frequency reference is set to internal, the internal 10 MHz reference is used even if an external reference is connected.

When the frequency reference is set to external, the instrument will use the external reference. However, if there is no external signal present, or it is not within the proper amplitude range, a condition error message is generated. When the external signal becomes valid, the error is cleared.

When the frequency reference is set to Pulse, the instrument expects a 1 pulse per second signal at the EXT REF IN input. The instrument uses this signal to adjust the frequency of the internal reference.

If Sense is selected, the instrument checks whether a signal is present at the external reference connector. If it senses a signal within 5 ppm of the External Ref Freq (as set on the **External Ref Freq** control), it will automatically switch to the external reference. If it senses a 1 pulse per second signal, it enters Pulse mode, wherein the signal is used to adjust the internal reference. When no signal is present, it automatically switches to the internal reference. No message is generated as the reference switches between pulse, external and internal. The monitoring of the external reference occurs approximately on 1 millisecond intervals, and never occurs in the middle of a measurement acquisition, only at the end of the measurement (end of the request).

If for any reason the instrument's frequency reference is not able to obtain lock, Status bit 1 in the Questionable Frequency register will be true and a condition error message is generated. When lock is regained, Status bit 1 in the Questionable Frequency register will be cleared and the condition error will be cleared.

If an external frequency reference is being used, you must enter the frequency of the external reference if it is not exactly 10 MHz. The **External Ref Freq** key is provided for this purpose.

For VXT models M9420A/10A/11A/15A, there is no internal frequency reference. To work correctly, a 100MHz external frequency reference signal is needed to connect to the front panel of the module. The default Freq Ref In setting is “External” and it cannot be set to any other types.

For VXT models M9410A/11A, External Freq Ref Input controls the “100 MHz In” port on the front panel. For VXT models M9415A/16A, External Freq Ref Input controls the “REF In” port on the front panel. For M941xE, the External Freq Ref Input is the reference in port on M941xA module.

NOTE

In EXM, a common frequency reference module serves all instrument instances, but only one instance of the software application can change the reference input type (INT or EXT or SENSE). The software application allowed to change the reference input is called the primary or controlling instance; by default, the leftmost instrument instance is the controlling instance. This can be changed in the config file “[E66XXModules.config](#)” located in the folder [E:\Keysight\Instrument](#). For the non-controlling instance(s) the reference input types (in SCPI commands, and in the Virtual Front Panel menus) are blanked and unavailable for use.

Sense

If **Sense** is selected, the instrument checks whether a signal is present at the external reference connector. If it senses a signal within 5 ppm of the External Ref Freq (as set by **External Ref Freq**), it uses this signal as an External Reference. If it senses a 1 pulse per second signal, it uses this signal to adjust the internal reference by adjusting the User setting of the Timebase DAC. When no signal is present, it automatically switches to the internal reference.

If set to **SENSe** and the instrument senses a 1 pulse per second signal, it sets the **System, Alignments, Timebase DAC** setting to **User**. This setting survives Preset and Power Cycle but is set to **Calibrated** by **System, Restore Defaults, Align** or **System, Restore Defaults, All**

Internal

The internal reference is used. A 1 pps signal at the EXT REF IN port, or a signal there between 1 and 50 MHz, causes a warning triangle to appear in the settings panel next to the word “INTERNAL”, but will otherwise be ignored.

External

The external reference is used.

Pulse

The internal reference continues to be the frequency reference for the instrument in that it determines the reference contribution to the phase noise, but its average frequency is adjusted to follow the 1 pps signal at the EXT REF IN input. Therefore, the instrument frequency accuracy will be dominated by the aging rate of the 1 pps signal instead of the aging rate of the internal reference, except during the time it takes to lock to a new 1 pps signal, approximately 10 minutes.

Sets the System, Alignments, Timebase DAC setting to “User”. This setting survives Preset and Power Cycle, but it set to “Calibrated” on a System, Restore Defaults, Align or a System, Restore Defaults, All

When a 1 pps signal is present at the EXT REF IN input, and either **Pulse** or **Sense** is selected, the internal reference frequency is affected by this signal; in effect, it “learns” a new accuracy setting. This setting can be seen by going to the **System, Alignments, Timebase Dac** menu, and looking at the **User** key in that menu. You will note that User has become automatically selected, and that the value shown on the **User** key is the updated value of the timebase DAC as “learned” from the 1 pps signal. Note that this replaces any value the user might have previously set on this key.

Once the setting is learned the user may remove the 1 pps signal; the User setting for the Timebase DAC is retained until you manually select “Calibrated” or execute a System, Restore Defaults, Align or a System, Restore Defaults, All. If you want to make the User setting permanent there is information in the Service Guide that tells you how to change the Calibrated setting of the Timebase DAC.

Note also that if the 1 pps signal is removed when Sense is selected, the instrument will simply switch to the normal state of the Internal reference and display SENSE:INT in the Settings Panel. However, if the 1 pps signal is removed when Pulse is selected, the instrument will generate an error

The J7203A Atomic Frequency Reference is an accessory for the X-Series Signal Analyzer that provides a highly accurate 1 pps timebase to use in conjunction with the Pulse setting. With the J7203A, the 1 pps signal is guaranteed to meet the input requirements of the EXT REF IN port, and the improved accuracy of the instrument’s internal frequency reference is specified. This is the only 1 pps signal that is guaranteed to function properly with the X-Series.

6.6.2 Ext Ref Freq

This key tells the instrument the frequency of the external reference. When the external reference is in use (either because the reference has been switched to External or because the Reference has been switched to Sense and there is a valid external reference present) this information is used by the instrument to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So, it is important to get it close, or you risk an unlock condition.

Note that this value only affects the instrument's ability to lock. It does not affect any calculations or measurement results. See "Freq Offset" in the Frequency section for information on how to offset frequency values.

Remote Command	<code>[:SENSe]:ROSCillator:EXternal:FREQuency <freq></code> <code>[:SENSe]:ROSCillator:EXternal:FREQuency?</code>
Example	Set the external reference frequency to 20 MHz, but does not select the external reference: <code>:ROSC:EXT:FREQ 20 MHz</code> Select the external reference: <code>:ROSC:SOUR:TYPE EXT</code>
Dependencies	Still available with Internal or Pulse selected, to allow setup for when External is in use. However, the setting has no effect if the Internal Reference is in use (Freq Ref In set to Internal, Pulse, or SENSE:INT or SENSE:PULSE) Not available in UXM For VXT models M9420A/10A/11A/15A/16A and M9410E/11E/15E/16E: only 100 MHz is available
Preset	Unaffected by Mode Preset , Input/Output Preset , or Restore Defaults, Input/Output , but set to 100 MHz for VXT models and 10 MHz for other models, by Restore Defaults, Misc , or Restore Defaults, All , or Default External Ref Freq
State Saved	Power On Persistent (survives power cycle)
Min/Max	See "Minimum & Maximum Values" on page 3830

Minimum & Maximum Values

Model	Min	Max
CXA, N897xB, E7760B, M8920A/20B, CXA-m	10 MHz	10 MHz
EXA without option R13	10 MHz	10 MHz
EXA with option R13	10 MHz	20 MHz
MXA, PXA, EXM	10 MHz	50 MHz

Model	Min	Max
VXT models	100 MHz	100 MHz
M9410E/11E/15E/16E	100 MHz	100 MHz
All other models	1 MHz	100 MHz

6.6.3 Default External Ref Freq

Restores the External Ref Freq to its default of 10 MHz.

When you set an External Ref Freq value with the **Ext Ref Freq** control, that Frequency is persistent; is not affected by Mode Preset or Input/Output Preset, and survives shutdown and power cycle. This control allows you to reset the External Ref Freq to its default value.

NOTE

The persistence of the External Ref Freq is a new behavior as of firmware version A.18.00, necessitating the addition of this control. In versions before A.18.00, the frequency reset on a power cycle/restart. Thus, you may need to use this command to retain backwards compatibility.

Remote Command	<code>[:SENSe]:ROSCillator:EXTernal:FREQuency:DEFAult</code>
Example	<code>:ROSC:EXT:FREQ:DEF</code> resets the external ref frequency
Notes	Command only; no query
Dependencies	Grayed-out if the Ext Ref Freq is already set to the default Does not appear in EXM, UXM, VXT models or M8920A/20B

6.6.4 LO Ref Input

This parameter sets the LO Reference signal Input to External or Internal.

Remote Command	<code>[:SENSe]:ROSCillator:LO:INPut INTernal EXTernal</code> See "Option Details" on page 3832 <code>[:SENSe]:ROSCillator:LO:INPut?</code>
Example	<code>:ROSC:LO:INP EXT</code> <code>:ROSC:LO:INP?</code>
Dependencies	Only available in VXT models M9410A/11A/15A/16A when MIMO is on
Preset	<code>INTernal</code>
State Saved	Saved in instrument state

Option Details

Parameter	SCPI	Notes
Internal	INTernal	When Internal is selected, internal reference signal will be used to synchronize the LO board
External	EXTernal	When External is selected, external reference signal will be used to synchronize the LO board. Route the correct reference signal to the specified port before changing the LO Ref Input to External For VXT models M9410A/11A, a 4.8 GHz reference signal is required to rout to the 4.8 GHz In port

6.6.5 Ref Lock BW

Lets you adjust the Frequency Reference phase lock bandwidth. This control is available in some models of the X-Series.

It is possible to improve the phase noise of the instrument by several dB, even tens of dB, by using an external reference with excellent phase noise. When an external reference is used the instrument's close-in phase noise improves to match that of the reference.

Normally a narrow loop bandwidth is used to phase lock to the external reference. However, the Ref Lock BW control allows you to choose a wider loop bandwidth to reduce the phase noise at low offset frequencies, especially 4 to 400 Hz offset. The Wide setting represents about a 60 Hz loop bandwidth, the Narrow setting about 15 Hz.

When using an external reference with superior phase noise, Keysight recommends setting the external reference phase-locked-loop bandwidth to Wide to take advantage of that superior performance.

When using an external reference with inferior phase noise performance, Keysight recommends setting the bandwidth to Narrow.

In these relationships, inferior and superior phase noise are with respect to -134 dBc/Hz at 30 Hz offset from a 10 MHz reference. Because most reference sources have phase noise behavior that falls off at a rate of 30 dB/decade, this is usually equivalent to -120 dBc/Hz at 10 Hz offset.

In instruments with EP1 or EP2, this control only affects the external reference loop bandwidth. In instruments with EP0, this control also affects the loop bandwidth used when the Internal reference is selected (reference set manually to Internal or Pulse, or set to Sense and set by sensing to Internal or Pulse).

Remote Command **[:SENSe]:ROSCillator:BANDwidth WIDE | NARRow**
[:SENSe]:ROSCillator:BANDwidth?

Example	<code>:ROSC:BAND WIDE</code>
Dependencies	<p>In instruments with EP1 or EP2: the control is available (not grayed-out) even with Internal or Pulse selected, to allow setup for when External is in use. However, the setting has no effect if the Internal Reference is in use</p> <p>Only appears in instruments equipped with the required hardware</p> <p>Does not appear in EXM, UXM, VXT models, or E7760B</p>
Preset	Unaffected by Preset, but set to <code>NARRow</code> by Restore Input/Output Defaults or Restore System Defaults -> All
State Saved	Saved in Input/Output state

6.6.6 Reference Oscillator On/Off (Remote Command Only)

Provided for PSA code compatibility.

In PSA it turned the Reference Oscillator on and off, however in the X-Series the reference oscillator cannot be turned off, so no hardware is affected when it is received.

If queried it returns the state you set with the command, but note that this does not necessarily reflect the actual state of the Reference Oscillator, which is always `ON`.

Example	<code>:ROSCillator:OUTP ON</code>
Preset	Unaffected by Preset, but set to <code>ON</code> by Restore Input/Output Defaults or Restore System Defaults -> All
Backwards Compatibility SCPI	<code>[:SENSe]:ROSCillator:OUTPut[:STATe] ON OFF 1 0</code> <code>[:SENSe]:ROSCillator:OUTPut[:STATe]?</code>

6.6.6.1 Select Ref

Lets you select the reference model to control.

The reference status is not saved in a state file, because Reference is a standard alone module.

Remote Command	<code>[:SENSe]:ROSCillator:PXIReference:SElect NONE M9300a</code> <code>[:SENSe]:ROSCillator:PXIReference:SElect?</code>
Example	<code>:ROSC:PXIR:SEL M9300</code> <code>:ROSC:PXIR:SEL?</code>
Dependencies	Only Keysight M9300A Frequency Reference is supported
State Saved	No

6.6.6.2 Freq Ref In

Specifies the frequency reference as being the internal reference, an external reference at the front panel input labeled **Ref In**.

Remote Command	<code>[:SENSe]:ROSCillator:PXIReference:SOURce INTernal EXTernal</code> <code>[:SENSe]:ROSCillator:PXIReference:SOURce?</code>
Example	<code>:ROSC:PXIR:SOUR INT</code> <code>:ROSC:PXIR:SOUR?</code>
Dependencies	Only available when Select Ref is not NONE
Preset	INTernal
State Saved	Saved in instrument state

6.6.6.3 External Freq Ref

Tells the PXIe Ref module the frequency of the external reference. When the external reference is in use this information is used by the Ref module to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So, it is important to get it close, or you risk an unlock condition.

Remote Command	<code>[:SENSe]:ROSCillator:PXIReference:EXTernal:FREQuency <freq></code> <code>[:SENSe]:ROSCillator:PXIReference:EXTernal:FREQuency?</code>
Example	Set the external reference frequency to 20 MHz, but does not select the external reference: <code>:ROSC:PXIR:EXT:FREQ 20 MHz</code> Select the external reference: <code>:ROSC:PXIR:SOUR EXT</code>
Dependencies	Only available when Select Ref is not NONE
Preset	10 MHz
State Saved	Yes
Min	1 MHz
Max	110 MHz

6.6.6.4 Ext Ref Locked (Remote Query Only)

Returns the External Reference locked status

Remote Command	<code>[:SENSe]:ROSCillator:PXIReference:EXTernal:LOCK?</code>
----------------	--

6 Input/Output
6.6 Freq Ref Input

Example	<code>:ROSC:PXIR:EXT:LOCK?</code>
Notes	Returns “1” if the Freq Ref Input is External and Reference is locked. Otherwise returns “0” When the Freq Ref Input is External and Reference is unlocked, the following warning message appears in the status bar: <code>Settings Alert; M9300A Ext Ref Unlocked</code>
Dependencies	Only available when Select Ref is not <code>NONE</code>

6.7 Output

Accesses controls that configure various output settings, like the frequency reference output, IF outputs and analog output.

Not all measurements support all output functions. For example, the Swept SA Measurement does not support the Digital Bus function or the I/Q Cal Out function under the **Output** tab; although the controls are visible, the outputs do not function in this measurement.

In addition, if the appropriate license is not present, some controls may not appear. In Modes/Measurements that do not support particular controls, the controls may appear, but no output will be generated if they are selected.

This tab does not appear in EXM or VXT model M9420A.

6.7.1 Analog Out

Lets you control which signal is fed to the “Analog Out” connector on the instrument rear panel.

In the Auto state, the Analog Output will automatically be set to the most sensible setting for the current mode or measurement.

If you make a selection manually from the **Analog Out** menu, the manually selected choice will remain in force until you change it (or re-select Auto), even if you switch to a mode or measurement for which the selected output does not apply.

Remote Command	:OUTPut:ANALog OFF SVIDeo LOGVideo LINVideo DAUDio!See Option Details :OUTPut:ANALog?
Example	:OUTP:ANAL SVIDeo causes the analog output type to be Screen Video
Preset	Unaffected by Preset, but set to DAUDio by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in Input/Output State
Backwards Compatibility Notes	Prior to A.04.00, OFF was the default functionality except when in the Analog Demod application or with Tune and Listen, in which case it was DAUDio , and there was no selection menu. For backwards compatibility with earlier X-Series firmware versions, Auto (:OUTP:ANAL:AUTO ON) duplicates the prior behavior The DNWB and SANalyzer parameters, which were legal in PSA but perform no function in the X-Series, are accepted without error Auto Function

6 Input/Output

6.7 Output

Remote Command	<code>:OUTPut:ANALog:AUTO OFF ON 0 1</code> <code>:OUTPut:ANALog:AUTO?</code>
Example	<code>:OUTP:ANAL:AUTO ON</code>
Preset	ON

Option Details

Source	SCPI	Notes
Off	OFF	The Analog Output is off
Screen Video	SVIDeo	Selects the analog output to be the screen video signal. In this mode, the pre-detector data is output to the Analog Out connector. The output looks very much like the trace displayed on the instrument's screen, and depends on the Log/Lin display Scale, Reference Level, and dB per division, but is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging)
Log Video	LOGVideo	Selects the analog output to be the log of the video signal. In this mode, the pre-detector data is output to the Analog Out connector with a Log scaling. The output is referenced to the current level at the mixer, does not depend on display settings like Reference Level or dB per division, and it is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging), but does change with input attenuation
Linear Video	LINVideo	Selects the analog output to be the envelope signal on a linear (voltage) scale. In this mode, the pre-detector data is output to the Analog Out connector with a Linear scaling. The output is based on the current Reference Level, and is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging)
Demod Audio	DAUDio	Selects the analog output to be the demodulation of the video signal. When Demod Audio is selected, the demodulated audio signal appears at this output whenever the Analog Demod application is demodulating a signal or when Analog Demod Tune and Listen is operating in the Swept SA measurement When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode or when Analog Demod Tune and Listen is operating in the Swept SA measurement

The table below specifies the range for each output.

Analog Out	Nominal Range exc (10% overrange)	Scale Factor	Notes
Off	0 V		
Screen Video	0 – 1 V open circuit	10%/division	8566 compatible
Log Video	0 – 1 V terminated	1/(192.66 dB/V)	dB referenced to mixer level, 1V out for –10 dBm at the mixer
Linear Video	0 – 1 V terminated	100%/V	Linear referenced to Ref Level, 1 V out for RF envelope at the Ref Level

Analog Out	Nominal Range exc (10% overrange)	Scale Factor	Notes
Demod Audio	(varies with instrument setting)		

Notes about the Analog Outputs

Screen Video

This mode is similar to the Analog Output of the HP 8566 family and the Video Out (opt 124) capability of the Keysight PSA analyzer (E444x), although there are differences in the behavior.

Screen Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Screen Video output will look different than it does in swept mode

Because the Screen Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Screen Video is activated.

Screen Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Screen Video output.

The output holds at its last value during an alignment and during a marker count. After a sweep:

- If a new sweep is to follow (as in Continuous sweep mode), the output holds at its last value during the retrace before the next sweep starts. If the instrument is in zero-span, there is no retrace, as the instrument remains tuned to the Center Frequency and does not sweep. Therefore, in zero-span, the output simply remains live between display updates
- If no new sweep is to follow (as in Single sweep mode), the output remains live, and continues to show the pre-detector data

This function depends on optional capability; the selection is not available, and the command will generate an “Option not available” error unless you have Option YAV or YAS licensed in your instrument.

The Screen Video function is intended to be very similar to the 8566 Video Output and the PSA Option 124. However, unlike the PSA, it is not always on; it must be switched on by the Screen Video key. Also, unlike the PSA, there are certain dependencies (detailed above) – for example, the Quasi Peak Detector is unavailable when Screen Video is on.

6 Input/Output

6.7 Output

Furthermore, the PSA Option 124 hardware was unipolar, and its large range was padded to be exactly right for use as a Screen Video output. In the X-Series, the hardware is bipolar and has a wider range to accommodate the other output choices. Therefore, the outputs won't match up exactly and users may have to modify their setup when applying the X-Series in a PSA application.

Log Video

Log Video shows the RF Envelope with the Reference equal to the Mixer Level. The output is designed so that full scale (1 V) corresponds to -10 dBm at the mixer. The full range (0-1 V) covers 192.66 dB ; thus, 0 V corresponds to -202.66 dBm at the mixer.

Because the Log Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.

Log Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Log Video output.

The output holds at its last value during an alignment, during a marker count, and during retrace (after a sweep and before the next sweep starts).

This function depends on optional capability. The choice will not appear, and the command will generate an "Option not available" error unless you have Option YAV licensed in your instrument.

Log Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Log Video output will look different than it does in swept mode.

Linear Video

Linear Video shows the RF Envelope with the Reference equal to the Ref Level. The scaling is set so that 1 V output occurs with an instantaneous video level equal to the reference level, and 0 V occurs at the bottom of the graticule. This scaling gives you the ability to control the gain without having another setup control for the key. But it requires you to control the look of the display (the reference level) in order to control the analog output.

This mode is ideal for looking at Amplitude Modulated signals, as the linear envelope effectively demodulates the signal.

Because the Linear Video output uses one of the two IF processing channels, only one detector is available while Linear Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.

Linear Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing

channels. Consequently, if the user chooses an EMI Detector, there will be no Linear Video output.

The output holds at its last value during an alignment and during a marker count and during retrace (after a sweep and before the next sweep starts).

This function depends on optional capability; the choice will not appear, and the command will generate an “Option not available” error unless you have Option YAV licensed in your instrument. Linear Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Linear Video output will look different than it does in swept mode.

Demod Audio

When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement.

If any other Analog Output is manually selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement, a condition warning message appears. This choice only appears if the Analog Demod application (N9063A), the N6141A or W6141A application, or Option EMC is installed and licensed, otherwise the choice will not appear, and the command will generate an “Option not available” error.

The output holds at its last value during an alignment and during a marker count. It is not held between sweeps, in order for Tune and Listen to work properly.

When Demod Audio is the selected Analog Output, all active traces are forced to use the same detector, and the CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable

6.7.2 Screen Video Level

Lets you control the amplitude of the Analog Output when Screen Video is selected.

- The 1V (**NORMAL**) setting provides a nominal output of 1 V peak-to-peak into an open circuit. This matches the traditional behavior of X-series instruments
- The 2V (**COMPAtible**) setting provides a nominal output of 2 V peak-to-peak into an open circuit. This matches the legacy behavior of PSA and earlier analyzers

Remote Command	:OUTPut:ANALog:SVIDeo NORMAL COMPAtible :OUTPut:ANALog:SVIDeo?
Example	:OUTP:ANAL:SVID COMP causes the Screen Video level to be 2 V

Dependencies	Only appears if Screen Video is the selected Analog Output
Preset	Unaffected by Preset, but set to NORM by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in Input/Output State

6.7.3 Digital Bus Out

Turns on the LVDS Digital Output port for outputting digital acquisition data.

- When **ON**, all acquisitions are streamed to the output port including acquisitions for internal purposes such as Alignment. The internal processing and routing of acquisitions continues as usual and is unaffected by the state of Bus Out
- When **OFF**, no signal appears on the LVDS port

Remote Command	<code>:OUTPut:DBUS[1][:STATE] ON OFF 1 0</code> <code>:OUTPut:DBUS[1][:STATE]?</code>
Example	<code>:OUTP:DBUS ON</code>
Dependencies	Requires option RTL or control is not displayed Digital Bus Out and Wideband Digital Bus cannot both be ON at the same time, so: <ul style="list-style-type: none"> – When Wideband Digital Bus is turned ON, if Digital Bus Out is already ON, an advisory message is displayed, “Wideband Digital Bus On, Digital Bus (narrow band) forced to Off” – When Digital Bus Out is turned ON, if Wideband Digital Bus is already ON, an advisory message is displayed, “Digital Bus (narrow band) On, Wideband Digital Bus forced to Off”
Preset	OFF Set by Restore Input/Output Defaults
State Saved	Saved in Input/Output State

6.7.4 Wideband Digital Bus

Turns on the LVDS port on the Wideband IF, which causes the I/Q pairs from the current measurement to be sent to this port.


NOTE

This control is grayed-out in all Modes except RTSA, which offers the only measurement that supports wideband streaming.

- When **ON**, the internal processing and routing of acquisitions continues as usual, and the display of measurement data is unaffected
- When **OFF**, no signal appears on the LVDS port

Remote Command	<code>:OUTPut:DBUS2[:STATe] OFF ON 0 1</code> <code>:OUTPut:DBUS2[:STATe]?</code>
Example	<code>:OUTP:DBUS2 ON</code>
Notes	If this command is sent while running a measurement that does not support Wideband Digital Bus , the message “Settings conflict; Feature not supported for this measurement” is displayed
Dependencies	Requires option RTS or control is not displayed Digital Bus Out and Wideband Digital Bus cannot both be ON at the same time, so: <ul style="list-style-type: none"> When Wideband Digital Bus is turned ON, if Digital Bus Out is already ON, an advisory message is displayed, “Wideband Digital Bus On, Digital Bus (narrow band) forced to Off” When Digital Bus Out is turned ON, if Wideband Digital Bus is already ON, an advisory message is displayed, “Digital Bus (narrow band) On, Wideband Digital Bus forced to Off”
Preset	OFF Set by Restore Input/Output Defaults
State Saved	Saved in Input/Output State

Here is the Wideband LVDS connector as viewed from the rear panel. The pin assignments are listed below:

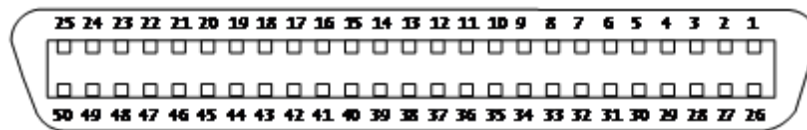

I-Cable

Connection	“-“ pin #	“+” pin #
GND	1	26
N/C	2	27
Stream_I[00]	3	28
Stream_I[01]	4	29
Stream_I[02]	5	30
Stream_I[03]	6	31
GND	7	32
Stream_I[04]	8	33
Stream_I[05]	9	34
Stream_I[06]	10	35
Stream_I[07]	11	36
GND	12	37
Stream_I[08]	13	38
Stream_I[09]	14	39

6 Input/Output
6.7 Output

Connection	“-“ pin #	“+” pin #
Stream_I[10]	15	40
Stream_I[11]	16	41
GND	17	42
Stream_I[12]	18	43
Stream_I[13]	19	44
Stream_I[14]	20	45
Stream_I[15]	21	46
GND	22	47
GND	23	48
Stream_VALID	24	49
Stream_CLK	25	50

Q-Cable

Connection	“-“ pin #	“+” pin #
GND	1	26
Stream_ALT	2	27
Stream_Q[00]	3	28
Stream_Q[01]	4	29
Stream_Q[02]	5	30
Stream_Q[03]	6	31
GND	7	32
Stream_Q[04]	8	33
Stream_Q[05]	9	34
Stream_Q[06]	10	35
Stream_Q[07]	11	36
GND	12	37
Stream_Q[08]	13	38
Stream_Q[09]	14	39
Stream_Q[10]	15	40
Stream_Q[11]	16	41
GND	17	42
Stream_Q[12]	18	43
Stream_Q[13]	19	44
Stream_Q[14]	20	45
Stream_Q[15]	21	46
GND	22	47

Connection	"-" pin #	"+" pin #
GND	23	48
Stream_MARK_1	24	49
Stream_MARK_2	25	50
Stream_I	16 bit "I" Data	
Stream_Q[15:0]	16 bit "Q" Data	
Stream_VALID	Data valid, when '1' then I/Q data is valid	
Stream_CLK	150 MHz DDR clock	
Stream_MARK_1	Stream Mark Bit 1	
Stream_MARK_2	Stream Mark Bit 2	
Stream_ALT	currently unused	

6.7.5 Data Stream

Lets you choose data or a test pattern to output to the Wideband IF LVDS port. This can help you set up your streaming target devices.

Remote Command	<code>:OUTPut:DBUS2:DATA MEASure TEST</code> <code>:OUTPut:DBUS2:DATA?</code>
Example	<code>:OUTP:DBUS2:DATA TEST</code>
Notes	Selecting TEST routes a test pattern to the Wideband Digital Bus stream output
Preset	MEAS (set by Restore Input/Output Defaults)
State Saved	Saved in Input/Output State

6.7.6 I/Q Cal Out

The Baseband I/Q "Cal Out" port can be turned on with either a 1 kHz or a 250 kHz square wave. This can be turned on independent of the input selection. Preset resets this to **OFF**.

Remote Command	<code>:OUTPut:IQ:OUTPut IQ1 IQ250 OFF</code> <code>:OUTPut:IQ:OUTPut?</code>
Example	<code>:OUTP:IQ:OUTP IQ1</code>
Dependencies	Only available with Option BBA
Couplings	An I/Q Cable Calibration or an I/Q Probe Calibration will change the state of the Cal Out port as needed by the calibration routine. When the calibration is finished the I/Q Cal Out is restored to the pre-calibration state
Preset	OFF

State Saved	Saved in instrument state
Range	1 kHz Square Wave 250 kHz Square Wave Off

6.7.7 Aux IF Out

Controls the signals that appear on the SMA output on the rear panel labeled **AUX IF OUT**

NOTE

Aux IF Out is valid for the RF Input and for the External Mixer input. In external mixing, the Aux IF output level is set by factory default to accommodate expected IF levels for the RF path. When using the External Mixing path, the **Aux IF Out** levels (for all three options CR3, CRP and ALV) will therefore be uncalibrated.

Remote Command	<code>:OUTPut:AUX SIF AIF LOGVideo OFF</code> See "Option Details" on page 3845 and "Notes on the Aux IF Outputs" on page 3846 below <code>:OUTPut:AUX?</code>
Dependencies	Does not appear in models that do not support the Aux IF Out
Preset	Unaffected by Preset, but set to OFF by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in Input/Output state
Backwards Compatibility Notes	In PSA, the IF output had functionality equivalent to the SIF option in X-Series' Aux IF Out menu. In X-Series, it is necessary to switch Aux IF Out to SIF to get this functionality, whereas in PSA it is always on, since there are no other choices Hence, if you are migrating remote code from PSA, and you use the IF Output in PSA, you will need to add a command to switch this function to SIF

Option Details

The Aux IF Output options are:

Source	SCPI	Notes
Off	OFF	No signal is output from the AUX IF OUT connector on the rear panel The connector appears as an open-circuit (that is, it is not terminated in any way)
Second IF	SIF	The 2 nd IF output is routed to the rear panel connector. Annotation on the menu panel shows the current 2 nd IF frequency in use in the instrument
Arbitrary IF	AIF	The 2 nd IF output is mixed with a local oscillator and mixer to produce an arbitrary IF output between 10 MHz and 75 MHz with 500 kHz resolution. The phase noise in this mode will not be as good as in Second IF mode The IF output frequency is adjustable, through an active function which appears on the menu panel, from 10 MHz to 75 MHz with 500 kHz resolution Note that, in instruments with Options B2X or B5X, the Arbitrary IF Output is only

Source	SCPI	Notes
Fast Log Video	LOGVideo	<p>practical when the IF Bandwidth is ≤ 40 MHz, IF Path is ≤ 40 MHz, or FFT Width is ≤ 40 MHz</p> <p>The 2nd IF output is passed through a log amp and the log envelope of the IF signal is sent to the rear panel. The open circuit output level varies by about 25 mV per dB, with a top-of-screen signal producing about 1.6 Volts. The output impedance is nominally 50 ohms</p> <p>This mode is intended to meet the same requirement as Option E4440A-H7L Fast Rise Time Video Output on E4440A PSA Series, allowing you to characterize pulses with fast rise times using standard measurement suites on modern digital scopes</p>

Notes on the Aux IF Outputs

Second IF

Does not appear unless Option CR3 is installed.

The frequency of the 2nd IF depends on the current IF signal path as shown in the table below:

IF Path Selected	Frequency of "Second IF" Output
10 MHz	322.5 MHz
25 MHz	322.5 MHz
40 MHz	250 MHz
85-160 MHz	300 MHz
255 MHz	750 MHz
510 MHz	877.1484375 MHz

The signal quality, such as signal to noise ratio and phase noise, are excellent in this mode.

Arbitrary IF

Does not appear unless Option CRP is installed.

The bandwidth of this IF output varies with band and center frequency, but is about 40 MHz at the -3 dB width. When the output is centered at lower frequencies in its range, signal frequencies at the bottom of the bandwidth will "fold". For example, with a 40 MHz bandwidth (20 MHz half-bandwidth), and a 15 MHz IF center, a signal -20 MHz relative to the spectrum analyzer center frequency will have a relative response of about -3 dB with a frequency 20 MHz below the 15 MHz IF center. This -5 MHz frequency will fold to become a +5 MHz signal at the IF output. Therefore, lower IF output frequencies are only useful with known band-limited signals.

Fast Log Video

Does not appear unless Option ALV is installed.

The output is off during an alignment but not during a marker count, and is not blanked during retrace (after a sweep and before the next sweep starts).

6.7.8 Arbitrary IF Freq

Sets the frequency of the Arbitrary IF when "Aux IF Out" on page 3845 is set to AIF.

NOTE In instruments with Options B2X or B5X, the Arbitrary IF Output is only practical when the IF Bandwidth is <= 40 MHz, IF Path is <= 40 MHz, or FFT Width is <= 40 MHz.	
Remote Command	:OUTPut:AUX:AIF <value> :OUTPut:AUX:AIF?
Example	:OUTP:AUX:AIF 50 MHZ
Dependencies	Only appears if "Aux IF Out" on page 3845 is AIF
Preset	Unaffected by a Preset, but set to 70 MHz by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in Input/Output State
Min	10 MHz
Max	75 MHz

6.7.9 Ext/Wide IF Out

Causes the signal that is normally routed to the IF to be routed instead to the Ext IF Out connector on the rear panel (N9041B) or Wide IF Out connector on the front panel (N9042B) or rear panel (N9032B). This is available in N9041B when RF Input 2 is the selected input port and in N9032B/N9042B on RF Input and, when V3050A is attached, External RF Input.

Only one IF output (Ext/Wide IF Out, IF2 Out, or Aux IF Out) can be selected at a time, so switching Ext/Wide IF Out to ON changes IF2 Out and Aux IF Out to OFF, and setting Aux IF Out to something other than OFF or IF2 Out to ON forces Ext/Wide IF Out to OFF.

Remote Command	:OUTPut:EIF ON OFF 1 0 :OUTPut:EIF?
Example	:OUTP:EIF ON
Dependencies	Only appears in N9041B, N9032B, and N9042B For N9041B, enabled when RF Input 2 is the selected input. When RF Input 2 is not selected, the control is grayed out and forced to Off and attempting to set it On will result in an error message

	For N9032B/N9042B, enabled on RF Input and on External RF Input when V3050A is attached When this switch is ON , no measurement is displayed, and the error “No result; meas invalid with Ext/Wide IF Out set to On” appears in the Status bar
Preset	OFF Not affected by Mode Preset , but set to OFF by Input/Output Preset
State Saved	Saved in Input/Output state
Annotation	None (but error message appears when on)
Status Bits/OPC dependencies	STATUS:QUESTIONABLE:INTEGRITY bit 1 is set when Ext/Wide IF Out is ON . This indicates an error, because no valid data is on the screen or available via SCPI. However, the signal at the Ext/Wide IF Out port is still valid given the other settings

6.7.10 IF2 Out

Causes the signal that is normally routed to the IF, when the 1 GHz IF Path is selected, to be routed instead to the **IF2 Out** connector on the rear panel.

Only one IF output (Ext IF Out, **IF2 Out**, or Aux IF Out) can be selected at a time, so switching IF2 Out to On changes Ext IF Out and Aux IF Out to Off, and setting Aux IF Out to something other than Off or Ext IF Out to On forces IF2 Out to Off.

This control only appears if Option H1G is installed. It is only available when the 1 GHz IF Path is chosen, either directly or indirectly. In all other paths it is visible but grayed out and forced to Off. Attempting to set it On when the 1 GHz path is not selected generates an error.


- Direct selection of the 1 GHz path: Measurements that directly support the 1 GHz path have a 1 GHz selection in the IF Path menu in Meas Setup
- Indirect selection of the 1 GHz path: certain measurements, like CCDF, always choose the widest available path, and so will choose the 1 GHz path if it is available, even if there is no IF Path menu in the measurement. IF2 Out will be visible when this results in the 1 GHz path being selected, even if there is no control or readout indicating that the 1 GHz path is chosen

Remote Command	:OUTPut:IF2 ON OFF 1 0 :OUTPut:IF2?
Example	:OUTP:IF2 ON
Dependencies	Only appears in UXA and only when Option H1G is installed When this is ON , no measurement is displayed, and the error “No result; meas invalid with IF2 Out set to On” appears in the Status bar
Preset	OFF Not affected by Mode Preset but set to OFF by Input/Output Preset
State Saved	Saved in Input/Output state

Annotation	None (but error message appears when on)
Status Bits/OPC dependencies	STATUS:QUESTIONable:INTEgrity bit 1 is set when IF2 Out is ON . This indicates an error, because no valid data is on the screen or available via SCPI. However, the signal at the IF2 Out port is still valid given the other settings

6.7.11 REF Out

Lets you toggle the state of REF Out. The REF Out port is designed for MIMO, which provides the reference daisy chain for the Primary and Secondary modules.

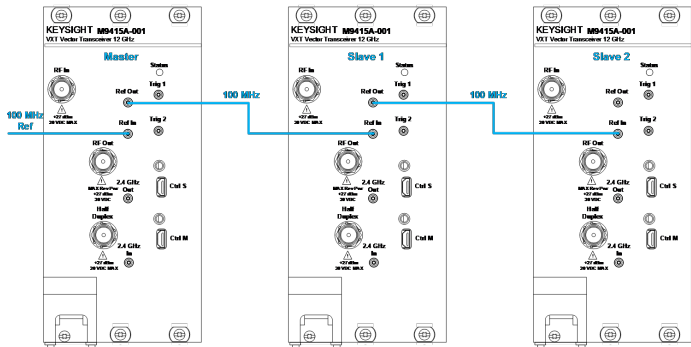

Remote Command	<code>:OUTPut:EREFerence:OUTPut ON OFF 1 0</code> <code>:OUTPut:EREFerence:OUTPut?</code>
Example	<code>:OUTP:EREF:OUTP ON</code> <code>:OUTP:EREF:OUTP?</code>
Notes	Used to route the 100 MHz reference signal on the REF In port to the REF Out port
Dependencies	Only available in VXT models M9415A/16A and M9415E/16E when Freq Ref Input is External, and Ext Ref Freq is 100 MHz
Preset	OFF
Range	ON OFF

6.7.12 LO Ref Out

Turns the LO Reference Signal Out on or off. **LO Ref Out** is used to provide reference daisy chain in MIMO or Phase Coherency.

For VXT models M9410A/11A, controls the **4.8 GHz Out** port on the front panel. Setting it **ON** outputs a 4.8 GHz reference signal.

Remote Command	<code>:OUTPut:ROSCillator:LO:OUTPut ON OFF 1 0</code> <code>:OUTPut:ROSCillator:LO:OUTPut?</code>
Example	<code>:OUTP:ROSC:LO:OUTP ON</code> <code>:OUTP:ROSC:LO:OUTP?</code>
Dependencies	Only available in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	OFF

6.8 Trigger Output

Accesses controls that configure the **Trigger Output** settings.

6.8.1 Trig 1 – 4 Out

Selects the type of output signal that will be output from the available **Trig n Out** connectors, where **n** = 1, 2, 3, or 4.

Some instruments do *not* support **Trig 2 Out** through **Trig 4 Out** outputs, nor their associated controls.

For most instruments, **Trig 1 Out** applies to the connector labeled **Trigger 1**, but for VXT model M9420A, it is labeled **Trigger 4**.

The front panel includes separate controls for each available trigger: **Trig 1 Out – Trig 4 Out**. The remote command can be used for *any* of the **Trig n Out** connectors, by specifying the appropriate parameter (for example **TRIG1**, **TRIG2**, etc.).

NOTE

Option **TARMed** is *not* available in modular instruments.

Remote Command	<pre>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen TARMed SP0int S1Marker S2Marker S3Marker S4Marker PARB FSYnc OFF</pre> <p>See "Trigger Out Options" on page 3852</p> <pre>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut?</pre>
Example	<pre>:TRIG:OUTP HSWP :TRIG2:OUTP GATE</pre>
Notes	<p>Trig 2 Out is used as the source trigger out in EXM and VXT model M9420A</p> <p>The available choices in EXM and VXT model M9420A are S1Marker, S2Marker, S3Marker, S4Marker and OFF</p> <p>For Power Amplifier Mode, Trig 2 Out is set to Source Marker2 when Burst Shape & Mask is ON. In this case, Trigger 2 is used to output PA Enable Mask</p>
Dependencies	<p>Trig 2 Out through Trig 4 Out are not supported in all models. In models that do not support them, the Trig n Out control is blanked, and sending the SCPI command for this output generates an error, "Hardware missing; Not available for this model number"</p> <p>Querying Trig 2 Out through Trig 4 Out in models that do not support them returns OFF</p> <p>For VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E:</p> <ul style="list-style-type: none"> When Trig n Out Device is ANALyzer, only MEASuring, MAIN and OFF are available When Trig n Out Device is SOURce, only S1Marker, S2Marker, S3Marker, S4Marker, PARB, FSYnc and OFF are available

	For VXT model M9421A, Trig 2 Out is used as the Analyzer trigger output	
Preset	Unaffected by Preset, but preset to the following values by Restore Input/Output Defaults or Restore System Defaults->All :	
	Trigger 1	Sweeping (HSWP)
	Trigger 2	Gate
	Trigger 3	Sweeping (HSWP)
	Trigger 4	Gate
State Saved	Saved in instrument state	

Trigger Out Options

Source	SCPI	Notes
Off	OFF	Selects no signal to be output to the Trig n Out connector
Sweeping	HSWP	Selects the Sweeping Trigger signal to be output to the Trig n Out connector when a measurement is made This signal has historically been known as HSWP (High = Sweeping), and is 5 V TTL level with 50 Ω output impedance
Measuring	MEASuring	Selects the Measuring trigger signal to be output to the Trig n Out connector. This signal is true while the Measuring status bit is true
Main Trigger	MAIN	Selects the current instrument trigger signal to be output to the Trig n Out connector Note: For multi segment sweeps, only the first sweep segment uses the selected trigger signal. All other sweep segments trigger using Free-Run and the trigger output will reflect that
Gate Trigger	GTRigger	Selects the gate trigger signal to be output to the Trig n Out connector. This is the source of the gate timing, not the actual gate signal
Gate	GATE	Selects the gate signal to be output to the Trig n Out connector. The gate signal has been delayed and its length determined by delay and length settings. When the polarity is positive, a high on the Trig n Out connector represents the time the gate is configured to pass the signal
Odd/Even Trace Point	OEVEN	Selects either the odd or even trace points as the signal to be output to the Trig n Out connector when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the instrument is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative
Trigger Armed	TARMed	Selects the “trigger armed” trigger signal to be output to the Trig n Out connector. This signal is true when the instrument reaches its trigger armed state <i>Not available in modular instruments</i>
Source Point Trigger	SPOint	Selects the gate signal to be output to the Trig n Out connector for use as the Point Trigger when operating an external source in Tracking mode. When Ext Trigger 1 is

Source	SCPI	Notes
		selected as the Point Trigger under Source , the Source Point Trigger under Trig 1 Out automatically gets selected. A similar pattern is used for the other Ext Trigger inputs; for example, when Ext Trigger 2 is selected as the Point Trigger under Source , the Source Point Trigger under Trig 2 Out automatically gets selected
Source Marker 1	S1Marker	Only available in VXT and M941xE. For M9420A, only for TRIG2 , for M9410A/11A/15A/16A available for both TRIG1 and TRIG2 Selects the Trigger Output at Marker 1 in the Waveform file that is currently playing
Source Marker 2	S2Marker	Only available in VXT and M941xE. For M9420A, only for TRIG2 , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both TRIG1 and TRIG2 Selects the Trigger Output at Marker 2 in the Waveform file that is currently playing
Source Marker 3	S3Marker	Only available in VXT and M941xE. For M9420A, only for TRIG2 , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both TRIG1 and TRIG2 Selects the Trigger Output at Marker 3 in the Waveform file that is currently playing
Source Marker 4	S4Marker	Only available in VXT and M941xE. For M9420A, only for TRIG2 , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both TRIG1 and TRIG2 Selects the Trigger Output at Marker 4 in the Waveform file that is currently playing
PerArb	PARB	Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E Selects the Trigger Output as PerArb. PerArb is a synchronization trigger which is generated by the ARB at the beginning of each repetition of playing the signal
FSYNc	FSYNc	Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E Selects the Trigger Output as FSYNc , routing the Periodic Timer Sync Source signal to the specified Trigger output. That is, the signal selected by :TRIGger[:SEquence]:FRAMe:SYNc is routed to the specified trigger output The following example specifies that External 1 trigger will be used as the Periodic Timer Sync Source, and this signal will then be routed to the Trigger 2 output: TRIG:FRAM:SYNc EXT1 TRIG2:OUTP FSYNc

—

6.8.2 Trig 1 – 4 Out Polarity

Sets the output to the **Trig n Out** connector to trigger on either the positive or negative polarity.

Remote Command	:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:POLarity POSitive NEGative :TRIGger[1] 2 ... 4[:SEquence]:OUTPut:POLarity?
Example	:TRIG1:OUTP:POL POS

Dependencies	You can only send TRIG parameters for the hardware you have; for example, you cannot send a TRIG3 parameter if your hardware does not support TRIG3 . Sending the command for an output you do not have generates an error, “Hardware missing; Not available for this model number” Querying a non-existent output returns OFF Trig 2 Out Polarity does not appear in EXM or VXT
Preset	Unaffected by Preset, but set to POSitive by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state

6.8.3 Trig 1 – 4 Out Device

Sets the output to the **Trig n Out** connector to trigger on either **ANALyzer** or **SOURce**.

Remote Command	:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:DIRection ANALyzer SOURce :TRIGger[1] 2 ... 4[:SEquence]:OUTPut:DIRection?						
Example	:TRIG1:OUTP:DIR ANAL						
Dependencies	Only available on VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E						
Preset	Unaffected by Preset Restore Input/Output Defaults and Restore System Defaults->All preset the triggers as follows:						
	<table> <tr> <th>Trig n Out Device</th><th>Preset</th></tr> <tr> <td>1, 3, 4</td><td>ANALyzer</td></tr> <tr> <td>2</td><td>SOURce</td></tr> </table>	Trig n Out Device	Preset	1, 3, 4	ANALyzer	2	SOURce
Trig n Out Device	Preset						
1, 3, 4	ANALyzer						
2	SOURce						
State Saved	Saved in instrument state						

6.8.4 Src PXI Trig Out

Selects which signal will be routed to the backplane Source PXI Trigger Output Line.

Remote Command	:TRIGger:PXIE:SOURce[:SEquence]:OUTPut S1Marker S2Marker S3Marker S4Marker PARB OFF See "Option details" on page 3855 :TRIGger:PXIE:SOURce[:SEquence]:OUTPut?
Example	:TRIG:PXIE:SOUR:OUTP S1M :TRIG:PXIE:SOUR:OUTP?
Dependencies	Only appears in EXM, VXT and M941xE
Preset	OFF
State Saved	Saved in instrument state

Option details

Here are details of all Source PXI Trigger Output options:

Source	SCPI	Notes
Off	OFF	Selects no signal to be output to the Source PXI backplane line
Source Marker 1	S1Marker	Selects the Trigger Output at Marker 1 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 2	S2Marker	Selects the Trigger Output at Marker 2 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 3	S3Marker	Selects the Trigger Output at Marker 3 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 4	S4Marker	Selects the Trigger Output at Marker 4 in the Waveform file that is currently playing to be output to the Source PXI backplane line
PerArb	PARB	A synchronization trigger that is generated by the ARB at the beginning of each repetition of playing the signal. This selection causes the PerArb Trigger Output that is currently playing to be output to the Source PXI backplane line Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E

6.8.5 Src Trig Out Polarity

Sets the output to the Source PXI backplane trigger line to trigger on either the positive or negative polarity.

Remote Command	:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:POLarity POSitive NEGative :TRIGger:PXIE:SOURce[:SEquence]:OUTPut:POLarity?
Example	:TRIG:PXIE:SOUR:OUTP:POL POS
Dependencies	Only appears in EXM, VXT and M941xE
Preset	Unaffected by Preset, but set to POSitive by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state

6.8.6 Select Src PXI Line

Controls which backplane trigger line **TRIG[0...7]** is used for the Source Trigger Output.

Remote Command	:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:LINE <line> :TRIGger:PXIE:SOURce[:SEquence]:OUTPut:LINE?
----------------	--

Example	<code>:TRIGger:PXIE:SOURce:OUTPut:LINE 0</code>
Dependencies	Only appears in EXM, VXT and M941xE
Preset	4
State Saved	Saved in instrument state
Range	[0,7]

6.8.7 Analyzer PXI Trig Out

Selects the signal that will be output from Analyzer PXI Trigger Line (Backplane Trigger Line 0~3).

Remote Command	<code>:TRIGger:PXIE:ANALyzer[:SEquence]:OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen OFF</code> See "Option Details" on page 3856 <code>:TRIGger:PXIE:ANALyzer[:SEquence]:OUTPut?</code>
Example	<code>:TRIG:PXIE:ANAL:OUTP HSWP</code>
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E For VXT models M9410A/11A/15A/16A, only OFF , MEASuring and MAIN are available
Preset	Unaffected by Preset but is preset to OFF by Restore Input/Output Defaults or Restore System Defaults->All
State Saved	Saved in instrument state

Option Details

Here are details of all Analyzer PXI Trigger Output options:

Source	SCPI	Notes
Off	OFF	Selects no signal to be output to the Analyzer PXI backplane trigger line
Sweeping (HSWP)	HSWP	Selects the Sweeping Trigger signal to be output to the Analyzer PXI backplane trigger line when a measurement is made. This signal has historically been known as "HSWP" (High = Sweeping), and is 5 V TTL level with 50-ohm output impedance
Measuring	MEAS	Selects the Measuring trigger signal to be output to the Analyzer PXI backplane trigger line. This signal is true while the Measuring status bit is true
Main Trigger	MAIN	Selects the current instrument trigger signal to be output to the Analyzer PXI backplane trigger line
Gate Trigger	GTR	Selects the gate trigger signal to be output to the Analyzer PXI backplane trigger line. This is the source of the gate timing, not the actual gate signal
Gate	GATE	Selects the gate signal to be output to the Analyzer PXI backplane trigger line. The gate signal has been delayed and its length determined by delay and length settings. When the

6 Input/Output

6.8 Trigger Output

Source	SCPI	Notes
Odd/Even Trace Point	OEV	<p>polarity is positive, a high on the Trig Out connector represents the time the gate is configured to pass the signal</p> <p>Selects either the odd or even trace points as the signal to be output to the Analyzer PXI backplane trigger line when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the instrument is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative</p>

6.8.8 Analyzer Trig Out Polarity

Sets the output to the Analyzer PXI backplane trigger line to trigger on either the positive or negative polarity.

Remote Command	:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity POSitive NEGative :TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity?
Example	:TRIG:PXIE:ANAL:OUTP:POL POS
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	Unaffected by Preset, but set to POSitive by Restore Input/Output Defaults or Restore System Defaults->All POSitive
State Saved	Saved in instrument state

6.8.9 Select Analyzer PXI Line

Controls which **PXI_TRIG[0...3]** is used for the Analyzer Trigger Output.

Remote Command	:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE <line> :TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE?
Example	:TRIGger:PXIE:ANALyzer:OUTPut:LINE 0
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	0
State Saved	Saved in instrument state
Range	[0,3]

6.8.10 Source Internal Trig Out

Selects the signal which will be output from Source Internal Trigger Line.

NOTE

In some software released in 2018 and 2019, the SCPI command for this function was as below:

```
:TRIGger:SOURce:INTernal[:SEquence]:OUTPut
S1Marker|S2Marker|S3Marker|S4Marker|OFF
```

It was necessary to change this SCPI in release A.24.00 due to internal conflicts in the software. User code written for the A.22.xx or A.23.xx instrument software which used the old form must be rewritten to use the form below.

Remote Command	<code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut S1Marker S2Marker S3Marker S4Marker PARB OFF</code> <code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut?</code>
Example	<code>:TRIG:INT:SOUR:OUTP S1M</code>
Notes	PARB (Per ARB) -A synchronization trigger that is generated by the ARB at the beginning of each repetition of playing the signal
Dependencies	Only available on VXT models M9420A, M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	Unaffected by Preset but preset by Restore Input/Output Defaults or Restore System Defaults->All . The value is Mode-dependent: Power Amplifier Mode: S1Marker All other Modes: OFF
State Saved	Saved in instrument state

6.8.11 Source Internal Trig Out Polarity

Sets the output to the Source Internal trigger line to trigger on either the positive or negative polarity.

NOTE

In some software released in 2018 and 2019, the SCPI command for this function was as below:

```
:TRIGger:SOURce:INTernal[:SEquence]:OUTPut:POLarity
POSitive|NEGative
```

It was necessary to change this SCPI in release A.24.00 due to internal conflicts in the software. User code written for the A.22.xx or A.23.xx instrument software which used the old form must be rewritten to use the form below.

Remote Command	<code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity POSitive NEGative</code> <code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity?</code>
Example	<code>:TRIG:INT:SOUR:OUTP:POL POS</code>
Dependencies	Only available on VXT models and M9410E/11E/15E/16E
Preset	Unaffected by Preset , but set to POSitive by Restore Input/Output Defaults or Restore System

Defaults->All	
State Saved	Saved in instrument state

6.9 Calibration

Lets you configure the Comb Calibrator. This tab only appears when an RCal license is installed. Settings associated with the Calibrator are configured here.

6.9.1 Configuration

Opens the dialog shown below. This is a full screen dialog. Configuring of Cals is done using this dialog. The table consists of rows of Cals and Columns of Cal settings. You can scroll or swipe vertically or horizontally to view Cals or settings not currently shown on the screen.

Dialog with Example Table entries:

Cal Group
1

Cal Input
RF Input

Calibrate Checked Rows

Apply Cal Group
On
Off

Copy From Cal Group
2

Copy

Select Calibrator
RCal Module 1

Serial #: SN1234567
Version 1.20

RCal Reference
Internal

Identify RCal Module

Cal Status

Calibration Configuration

?

Close

Description
Switch and Amplifier

Go to Row
2

Insert Row Below

Use Current Meas

Duplicate Row

Delete Row

Delete All

	Calibrate	Apply	Name	Last Cal	Applied	Type	Start Freq	Stop Fr
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Entire Instrument	Jul 23 2019 03:32 PM	---	Magnitude	910.0 MHz	910.0 M
2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Switch Cal	May 14 2019 09:35 AM	---	Complex	1.000 GHz	2.000 G
3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Amp Cal	May 14 2019 09:35 AM	---	Magnitude	10 Hz	26.5 GH

Full Cal Group Table with Example entries:

6 Input/Output
6.9 Calibration

RCal Calibrations Table

Table will scroll vertically and horizontally

	Calibrate	Apply	Name	Last Cal	Applied	External Mixer	Cal Type
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Entire Instrument	Aug 30 2018 03:32 PM	Yes	11970A : Normal	Vector
2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Wednesday with remote head	Sep 1 2018 02:27 PM	No	Custom : Normal	Vector
3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	20190119 3:54pm	--	--	11970U : Normal	Vector
4	<input type="checkbox"/>	<input type="checkbox"/>	1 GHz – 3 GHz	--	--	11970V : Normal	Scalar
5	<input type="checkbox"/>	<input type="checkbox"/>	2 GHz – 4 GHz	--	--	K Band Single Harmonic No Doubler : Normal	Scalar
6	<input type="checkbox"/>	<input type="checkbox"/>	External Preamp	--	--	W Band Single Harmonic No Doubler : Normal	Scalar
7	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
8	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
9	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
10	<input type="checkbox"/>	<input type="checkbox"/>	(None)				

Only shows when External Mixer is the selected Cal Input

Scalar

Vector

Start Freq	Stop Freq	Freq Step	Freq Points	Mech Atten	Mech Atten Start	Mech Atten Stop	Mech Atten Step	Elec Atten	Elec Atten Start
910.0 MHz	910.0 MHz	0 Hz	1	Step	0 dB	10 dB	2 dB	Step	0 dB
1.000 GHz	2.000 GHz	100.000 MHz	100	Reference	900 dB	900 dB	00 dB	Bypass	00 dB
10 Hz	26.5 GHz	0 Hz	3	All	00 dB	270 dB	2 dB	All	00 dB
1.000 GHz	3.000 GHz	100.00 MHz	20	Step	10 dB	50 dB	10 dB	Step	10 dB
2.000 GHz	4.000 GHz	10.000 MHz	200	Bypass	00 dB	270 dB	2 dB	All	00 dB
2.000 GHz	2.000 GHz	0 Hz	1	Reference	900 dB	900 dB	00 dB	Reference	900 dB

Step

All

Bypass

Step

All

Bypass

Elec Atten Stop	Elec Atten Step	Full Atten	Full Atten Start	Full Atten Stop	Freq Ext Atten	Freq Ext Atten Start	Freq Ext Atten Stop	IF Path
10 dB	5 dB	Step	0 dB	6 dB	Step	0 dB	6 dB	10 MHz
00 dBs	00 dBs	All	00 dBs	00 dBs	All	00 dBs	00 dBs	510 MHz
20 dB	1 dB	All	00 dBs	200 dBs	All	00 dBs	200 dBs	25 MHz
20 dB	2 dB	Step	6 dB	20 dB	Step	6 dB	20 dB	10 MHz
20 dB	1 dB	All	00 dBs	200 dBs	All	00 dBs	200 dBs	25 MHz
900 dBs	00 dBs	All	900 dBs	900 dBs	All	900 dBs	900 dBs	40 MHz

Step

All

Step

All

10 MHz

25 MHz

40 MHz

510 MHz

1 GHz

2 GHz

4 GHz


6.9.1.1 Cal Group

This is the same as "Cal Group" on page 3895 in the Calibration tab.


6.9.1.2 Calibrate Checked Rows

Executes the Cals within the currently selected Cal Group that have the Calibrate box checked in the RCal Configuration Table.

Once selected, the following dialog box is displayed;

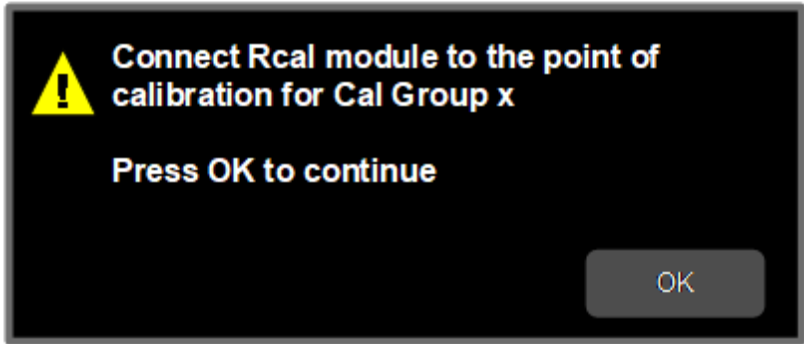

When you click OK, the following dialog is displayed;

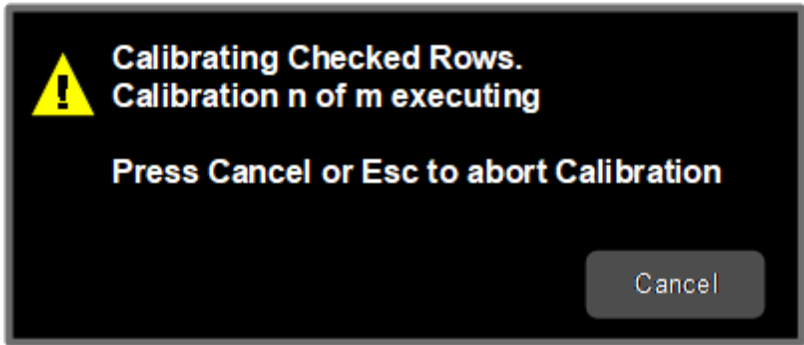

If there are multiple Cals being executed in a Cal Group, this dialog advises you when each Cal is complete. It also provides the ability to abort the Execute Cal Request. If you choose to abort, calibrations that have completed use the new Cal data and update the Last Cal field. Calibrations that have not completed retain the existing Cal data and Last Cal timestamp, or show “---” if the Cal had never been executed.

Remote Command	:SYSTem:CALibration:INITiate:SElected
Example	:SYST:CAL:INIT:SEL
Notes	Cals cannot be applied until they have been calibrated. Once a Cal has been calibrated, the Last Cal field in the table displays the date and time the Cal was last calibrated
Dependencies	Applied to the currently selected Cal Group
Couplings	Calibrate Selected is disabled if there are no Calibrate checkboxes checked. If the disabled control is selected, the advisory message “Check the Calibrate box for the Cals you want to calibrate” is displayed


6.9.1.3 Apply Cal Group

This is the same as "Apply Cal Group" on page 3895 in the Calibration tab.

6.9.1.4 Abort Calibration

Aborts the Calibration routine of the currently selected Cal Group

Remote Command	:SYSTem:CALibration:ABORt
Example	:SYST:CAL:ABOR
Dependencies	Aborts the currently running calibration. The previously-run calibrations will still be available, but the current calibration is halted, and next calibrations selected are not executed. Once the calibration starts, the modal dialog appears, and the abort can be executed by selecting Cancel

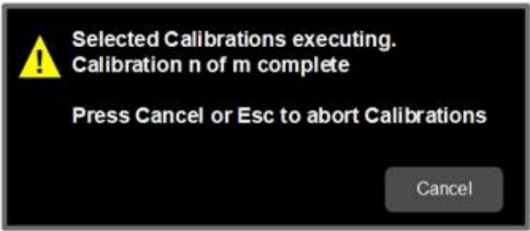

6.9.1.5 Copy From Cal Group

Determines the Cal Group from which existing rows are copied when using the "Copy" on page 3864Group feature.

Remote Command	:SYSTem:CALibration:CGROUP:COPY:FROM <integer>
Example	:SYST:CAL:CGR:COPY:FROM 2 :SYST:CAL:CGR:COPY:FROM?
Preset	1
Min	1
Max	100

6.9.1.6 Copy

Lets you copy the settings in the Cal Group specified by the Copy From Cal Group parameter.

All the rows in the table are copied to the selected Cal Group. The columns Apply, Last Cal and Applied are set to their default values.

The group level parameters are also copied, with the exception of Apply Cal Group and Copy From Cal Group.

Remote Command	:SYSTem:CALibration:CGROUP:COPY
Example	:SYST:CAL:CGROUP:COPY
Dependencies	Applied to the currently selected Cal Group
Couplings	Disabled if Copy From Cal Group is the same as the currently selected Cal Group. If the disabled control is selected, the advisory message "Unable to Copy from same Cal Group" is displayed, and the same message is returned remotely as a Settings Conflict If you attempt to copy from a Cal Group that is empty, the advisory message "Copy From Cal Group is empty" is displayed, and the same message is returned remotely as a Settings Conflict

6.9.1.7 Cal Input

Maps the currently selected Cal Group to a particular I/O port. This control allows any Input port (including External Mixing, the RF2 input, etc.) to be mapped to a specific Cal Group

Remote Command	<code>:SYSTem:CALibration:INPut RFIN RFIN2 EMIXer ERFIN</code> See "Option Details" on page 3865 <code>:SYSTem:CALibration:INPut?</code>
Example	<code>:SYST:CAL:INPut RFIN2</code>
Dependencies	<code>RFIN2</code> <code>EMIXer</code> are only available on C/E/M/P/UXA analyzers with the appropriate options loaded <code>ERFIN</code> is only available if a V3050A unit is connected
State Saved	Saved in State

Option Details

Note that the presence of these ports is highly hardware dependent.

Cal Input	SCPI	Notes
RF Input	<code>RFIN</code>	Main RF Port Not available on EXM with hardware M9431A
RF Input 2	<code>RFIN2</code>	Second RF Port, labeled RF Input 2 Only available on certain instruments
External Mixer	<code>EMIX</code>	Requires option EXM
External RF	<code>ERFIN</code>	Only available if a V3050A unit is connected

6.9.1.8 Freq Offset

Specifies any frequency offset that is to be applied to the currently selected Cal Group. This can be used when using an external mixer.

Remote Command	<code>:SYSTem:CALibration:FREQuency:OFFSet <freq></code> <code>:SYSTem:CALibration:FREQuency:OFFSet?</code>
Example	<code>:SYST:CAL:FREQ:OFFS 1e9</code>
Dependencies	The query applies to the currently selected Cal Group
Preset	All 0 Hz
State Saved	Saved in instrument state
Min	0 Hz
Max	100.0 GHz

6.9.1.9 Select Calibrator

Selects the calibrator for the currently selected Cal Group to use for executing the calibration when multiple modules are connected.

Remote Command	<code>:SYSTem:CALibration:MODule:SElect NONE RCM1 RCM2 RCM3 RCM4 RCM5 RCM6 RCM7 RCM8 RCM9 RCM10</code> <code>:SYSTem:CALibration:MODule:SElect?</code>
Example	<code>:SYST:CAL:MODule:SElect RCM1</code>
Notes	Details of the RCal module are displayed beneath the control. If there are no modules connected, the text states “No Modules Connected” For SCPI, if the parameter sent is for a module that is not currently connected to the instrument, the message “Selected RCal module not connected” is generated
Dependencies	The SCPI command is applied to the currently selected Cal Group
State Saved	Saved in instrument state
Range	All connected RCal modules

6.9.1.10 Identify RCal Module

Control to connect to the RCal module of the currently selected Cal Group and blink its identity light

6.9.1.11 RCal Module Serial Number (Remote Query Only)

Returns the serial number of the specified module

Remote Command	<code>:SYSTem:CALibration:MODule[1] 2 ... 10:SNUMber?</code>
Example	<code>:SYST:CAL:MOD:SNUM?</code>
Notes	If there is no module associated with the specified module number, returns an empty string

6.9.1.12 RCal Reference

Determines the reference type used by the RCal module of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:REference INTernal EXTernal</code> <code>:SYSTem:CALibration:REference?</code>
Example	<code>:SYST:CAL:REF EXT</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group

Preset	EXternal
State Saved	Saved in instrument state
Range	Internal External

6.9.1.13 RCal Status

Opens a dialog that is used to provide the status of all active rows in all groups. Status can be one of the following: Calibrated, Applied, Calibration Failed or Apply Failed.

If a Calibration Fails, an error icon is shown in the **Calibrate** column of the row(s) that failed, with a message indicating the nature of the failure. If the failure cannot be addressed by the user, the error message “Calibration Failed. See Error Log” will be shown and details of the failure will be written to the SA Event Log.

Applying the Calibration can result in a warning if there is a mismatch between the currently executing instrument state and any of the following parameter settings;

- Cal Input
- Frequency
- IF Path
- IF Gain
- Phase Noise Optimization
- Preamp
- Coupling
- Mechanical Attenuator
- Electrical Attenuator
- Full Range Attenuator
- uW Path Control
- Mixing Mode
- External Mixer

When there is a mismatch a warning icon will be shown in the Applied column of the row(s) that had the mismatch with details in the format “<Parameter Name> does not match meas state”.

The Status dialog provides you with the group and row of a Calibration and its current state and any error details if the status is not OK.

RCal Status (Remote Query Only)

Returns a comma-separated list of the status of an individual row status in the format “Group”, “Row”, ‘Status’, “Details”

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:STATus?</code>
Example	Return a comma-separated list for the status of an individual row, in the format “Group”, “Row”, ‘Status’, “Details”: <code>:SYST:CAL:ROW2:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

All RCal Status (Remote Query Only)

Returns a comma-separated list of all entries in the Cal Status table in the format “Group”, “Row”, ‘Status’, “Details”, which is repeated for each row in the table. If there are no entries in the table, returns an empty string.

Remote Command	<code>:SYSTem:CALibration:STATus:ALL?</code>
Example	Return a comma-separated list of all entries in the Cal Status table in the format “Group”, “Row”, ‘Status’, “Details”, repeated for each row in the table: <code>:SYST:CAL:STAT:ALL?</code>

6.9.1.14 Go to Row

Sets the selected row in the Cal table for the currently selected Cal Group.

Notes	You can only go to a row that has already been added
Preset	1
State Saved	Saved in instrument state
Min	1
Max	32

6.9.1.15 Insert Row Below

Adds a new row to the currently selected Cal Group, under the currently selected row in the table or after the sub opcode used in the SCPI command. The default values for each of the settings in the row is used.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:INSert</code>
Example	<code>:SYST:CAL:ROW2:INSert</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

6.9.1.16 Description

Provides a description for the currently selected Cal Group from which the operator can easily identify the Cal Group.

Remote Command	<code>:SYSTem:CALibration:DESCription "Description"</code> <code>:SYSTem:CALibration:DESCription?</code>
Example	<code>:SYST:CAL:DESC "Description"</code>
Notes	Also shown on the Calibration menu panel, but limited to the first 18 characters
Dependencies	The SCPI command is applied to the currently selected Cal Group
State Saved	Saved in instrument state

6.9.1.17 Use Current Meas

Takes the settings from the current running measurement state to populate the Cal Row settings of the currently selected Cal Group.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:UCMeas</code>
Example	<code>:SYST:CAL:ROW2:UCM</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the group table is empty and subopcode is omitted or 1, a new row is created and populated using the current running measurement If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated Pressing the control or sending the SCPI command in measurements that do not support this parameter generates error -221, “Settings conflict; Feature not supported for this measurement”

6.9.1.18 Duplicate Row

Creates a new row the currently selected row, and populates the new row with the settings from the selected row of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:DUPLicate</code>
Example	<code>:SYST:CAL:ROW2:DUPL</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated

6.9.1.19 Delete Row

Deletes the settings from the selected row of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:DELeTe</code>
Example	<code>:SYST:CAL:ROW2:DEL</code>
Notes	Disabled if the Cal Group contains no Cal rows
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

6.9.1.20 Delete All

Deletes all the Cals in the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:DELeTe:ALL</code>
Example	<code>:SYST:CAL:DEL:ALL</code>
Notes	Disabled if the Cal Group contains no Cal rows
Dependencies	The SCPI command is applied to the currently selected Cal Group

6.9.1.21 Calibrate

Determines whether the Cal row should be included when Calibrate Selected is executed.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:CALibrate:STATe ON OFF 1 0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:CALibrate:STATe?</code>
----------------	--

Example	<code>:SYST:CAL:ROW2:CAL:STAT ON</code> <code>:SYST:CAL:ROW2:CAL:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	All OFF
State Saved	Saved in instrument state
Range	ON OFF

6.9.1.22 Apply

Determines the Cal that is applied.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:APPLy:STATe ON OFF 1 0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:APPLy:STATe?</code>
Example	<code>:SYST:CAL:ROW2:APPL:STAT ON</code> <code>:SYST:CAL:ROW2:APPL:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated You can only check the Apply checkbox for a Cal that has been executed. If you attempt to select the Apply checkbox for Cal's that have not been executed, the advisory message “Cal must be executed before it can be applied” is displayed If Apply Cal is ON , and you attempt to check the Apply checkbox for a Cal that is invalid for use with the current measurement state, the error “Cal invalid with current measurement settings is shown, and the checkbox remains unchecked
Couplings	When the Apply check box is checked, if the Apply Cal Group setting is OFF , it will be turned on. Calibrations are only applied when the Apply Cal Group is ON
Preset	All OFF
State Saved	Saved in instrument state
Range	ON OFF
Annotation	If <i>any</i> Cal check box in any group is checked and Apply Cal Group for that group is ON , RCal in the Meas Bar displays in amber to indicate Calibrations are in use

6.9.1.23 Name

Sets an ASCII text field allowing you to name the selected Cal

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:NAME <string></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:NAME?</code>
Example	<code>:SYST:CAL:ROW2:NAM "Monday AM Cal"</code>
Notes	45 chars max; may not fit on display if max chars used
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	"Cal #", where # is corresponding Cal number
State Saved	Saved in instrument state

6.9.1.24 Last Cal

Displays the date and time the selected Cal was last executed. Read only field.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:LAST?</code>
Example	Return data and time Cal 2 was last executed: <code>:SYST:CAL:ROW2:LAST?</code>
Notes	Returns a string containing the date and time the Cal was executed. If the Cal has never been executed, or any of the settings are changed, SCPI returns an empty string, and the front panel displays "---"
Dependencies	The SCPI query applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated

6.9.1.25 Cal Applied

Displays the status of a Cal once it is applied. Is either Yes or No, depending on if the Cal was successfully applied or not. See RCalStatus for more details. If it is not being applied, the field shows "---". Read-only field.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:CAPPlied?</code>
Example	Return Cal Stats of Cal 2: <code>:SYST:CAL:ROW2:CAPP?</code>
Notes	Returns a string containing the date and time the Cal was executed. If the Cal has never been executed, or any of the settings are changed, SCPI returns an empty string, and the front panel displays "---"
Dependencies	The SCPI query applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated

6.9.1.26 Cal Type

Specifies how the calibration is to be performed on the selected Cal. Options are;

- **MAGNitude**: A single CW tone is measured at the center of the screen for each frequency point
- **COMPLex**: A comb signal is measured across the full IF passband at each frequency point. Magnitude and Phase are measured

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:TYPE MAGNitude COMPLex</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:TYPE?</code>
Example	<code>:SYST:CAL:ROW2:TYPE COMP</code>
Dependencies	Only available if the selected RCal module has a license for complex calibrations. If it does not, this control is disabled The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	MAGNitude
State Saved	Saved in instrument state
Range	MAGNitude COMPLex

6.9.1.27 Start Freq

Specifies the start frequency of the selected Cal.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:START <freq></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:START?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:STAR 1e9</code>
Notes	Max values depend on Hardware Options (503, 507, 508, 513, 526)
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated By direct entry: You cannot set Start Frequency > Stop Frequency. You can set the Start frequency = Stop frequency. If you set Start Frequency = Stop Frequency, "Freq Step" on page 3875 is adjusted to 0, and "Freq Points" on page 3875 is adjusted to 1 With the knob or step keys: If you set Start Frequency = Stop Frequency, Freq Step is adjusted to 0, and Freq Points is adjusted to 1
Couplings	If you change the start frequency of the selected range to a value > the range's stop frequency, the

	<p>stop frequency of the previous range is changed to the same value. Freq Step is set to 0 Hz and Freq Points is set to 1</p> <p>If you change the start frequency \leq min frequency of the instrument, the start frequency of the selected range is set to the minimum frequency of the instrument</p> <p>If you change the start frequency \geq maximum frequency of the instrument, the start frequency of the selected range is set to the maximum frequency of the instrument and the stop frequency of selected range is set to the maximum frequency of the instrument. Freq Step is set to 0 Hz and Freq Points is set to 1</p>
Preset	Depends on the instrument maximum frequency
State Saved	Saved in instrument state
Min	If Scale Type is set to Lin, the min Start Frequency changes to -80 MHz
Max	Depends on the instrument maximum frequency – 10 Hz minimum span

6.9.1.28 Stop Freq

Specifies the stop frequency of the selected Cal.

Remote Command	<pre>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STOP <freq> :SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STOP?</pre>
Example	<pre>:SYST:CAL:ROW2:FREQ:STOP 1e9</pre>
Notes	Max values depend on Hardware Options
Dependencies	<p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p> <p>By direct entry:</p> <p>You cannot set Stop frequency < Start frequency. You cannot set Start frequency = Stop frequency. You can set Start frequency = Stop frequency. If you set Start Frequency = Stop Frequency, "Freq Step" on page 3875 is adjusted to 0, and "Freq Points" on page 3875 is adjusted to 1</p> <p>With the knob or step keys:</p> <p>If you set Start Frequency = Stop Frequency, Freq Step is adjusted to 0, and Freq Points is adjusted to 1</p>
Couplings	<p>If you change the stop frequency of the selected range to a value < the range's start frequency the start frequency of the range is changed to the same value. Freq Step is set to 0 Hz and Freq Points is set to 1</p> <p>If you change the stop frequency \geq the maximum frequency of the instrument, the stop frequency of the selected range is set to the maximum frequency of the instrument</p> <p>If you change stop frequency \leq the minimum frequency of the instrument, the stop frequency of the selected range is set to the minimum frequency of the instrument and the start frequency of the selected range is set to the minimum frequency of the instrument. Freq Step is set to 0 Hz and Freq Points is set to 1</p>
Preset	Depends on the instrument maximum frequency

State Saved	Saved in instrument state
Min	If Scale Type is Lin, the min Stop Frequency is changed to -79.999990 MHz
Max	Depends on the instrument maximum frequency

6.9.1.29 Freq Step

Specifies the step frequency of the selected Cal. This determines the points between the start and stop frequencies to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STEP <freq></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STEP?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:STEP 1e9</code>
Notes	Max values depend on Hardware Options
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated You cannot set Freq Step > Stop frequency - Start frequency Attempts to set Freq Step > Stop frequency - Start frequency results in Freq Step being set to Stop frequency - Start frequency
Couplings	Coupled to " Freq Points " on page 3875. Changing Freq Step adjusts Freq Points using $((\text{Stop Freq} - \text{Start Freq}) / \text{Freq Step} + 1)$ and clips to the next integer value, which may result in Freq Step being clipped too If Freq Step is set to a value > Stop Freq - Start Freq Stop Freq is increased, and Freq Points is set to 1
Preset	All 10 kHz
State Saved	Saved in instrument state
Min	1 Hz
Max	Depends on the instrument maximum frequency

6.9.1.30 Freq Points

Specifies the frequency points of the selected Cal. This determines the points between the start and stop frequencies to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:POINTS</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:POINTS?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:POIN 100</code>
Couplings	Coupled to " Freq Step " on page 3875. Changing Freq Points adjusts Freq Step using $(\text{Stop Freq} - \text{Start Freq}) / (\text{Freq Points} - 1)$ and clips to the next integer value, which may result in Freq Step being clipped

Preset	1
Min	1
Max	100000

6.9.1.31 Mech Atten Type

Specifies the Mech Atten type to use:

- **STEP**: Use multiple Mech Atten states determined by Mech Atten Start, Mech Atten Stop and Mech Atten Step
- **ALL**: Use all the attenuator states
- **BYPass**: Bypasses the attenuator

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:TYPE STEP ALL BYPass</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:ATT:TYPE STEP</code>
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	STEP
State Saved	Saved in instrument state
Range	STEP ALL BYPass

6.9.1.32 Mech Atten Start

Determines the first Mechanical Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:START <rel_ampl></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:ATT:START 20</code>
Dependencies	Disabled unless " Mech Atten Type " on page 3876 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled to " Mech Atten Stop " on page 3877. Mech Atten Start must be \leq Mech Atten Stop . If Mech Atten Start $>$ Mech Atten Stop , then Mech Atten Stop = Mech Atten Start
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB

	The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it must be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value, which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB Note that, in the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and is reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

6.9.1.33 Mech Atten Stop

Determines the last Mechanical Attenuator to be used in the Calibration

Remote Command	:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STOP <rel_amp> :SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STOP?	
Example	:SYST:CAL:ROW3:ATT:STOP 30	
Dependencies	Disabled unless " Mech Atten Type " on page 3876 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221,Settings conflict; Subopcode does not reference an existing Cal row" is generated	
Couplings	Coupled to " Mech Atten Start " on page 3876. Mech Atten Start must be <= Mech Atten Stop . If Mech Atten Start > Mech Atten Stop , then Mech Atten Stop = Mech Atten Start	
Preset	10 dB	
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it must be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that, in the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and is reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	

6.9.1.34 Mech Atten Step

Determines the Mech Attenuation Step. This determines the points between the Mechanical Attenuation min and max to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STEP <rel_amp1></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STEP?</code>
Example	<code>:SYST:CAL:ROW2:ATT:STEP 2dB</code>
Dependencies	Disabled unless " Mech Atten Type " on page 3876 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	2 dB
State Saved	Saved in instrument state
Min	2 dB
Max	10 dB

6.9.1.35 Elec Atten Type

Specifies the Elec Atten type to use:

- **STEP**: Use multiple Elec Atten states determined by Elec Atten Start, Elec Atten Stop and Elec Atten Step
- **ALL**: Use all the attenuator states
- **BYPass**: Bypasses the attenuator

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:TYPE STEP ALL BYPass</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:EATT:TYPE STEP</code>
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	STEP
State Saved	Saved in instrument state
Range	STEP ALL BYPass

6.9.1.36 Elec Atten Start

Determines the first Electronic Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:START <rel_ampl></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:EATT:START 0</code>
Dependencies	<p>Only appears in Dual Attenuator models with an Electronic Attenuator installed and licensed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage)</p> <p>Disabled unless "Elec Atten Type" on page 3878 is STEP</p> <p>The electronic attenuator is unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, or 0-3 GHz, depending on the model). If the low band ranges from 0-3.6 GHz, and Stop Frequency of the Calibration is > 3.6 GHz, then this parameter is grayed out</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, or the electronic attenuator is unavailable, then this parameter is grayed-out</p> <p>If either of the above is true, and if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is sent</p> <p>If both of the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Couplings	Coupled to Elec Atten Stop. Elec Atten Start must be <= Elec Atten Stop. If Elec Atten Start > Elec Atten Stop, Elec Atten Stop = Elec Atten Start
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	24 dB

6.9.1.37 Elec Atten Stop

Determines the last Electrical Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STOP <rel_ampl></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:EATT:STOP 10</code>
Dependencies	<p>Only appears in Dual Attenuator models with an Electronic Attenuator installed and licensed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage)</p> <p>Disabled unless "Elec Atten Type" on page 3878 is STEP</p> <p>The electronic attenuator is unavailable above the low band (0-3.6 GHz, 0-3.4 GHz or 0-3 GHz, depending on the model). If the low band ranges from 0-3.6 GHz, and Stop Frequency of the</p>

	<p>Calibration is > 3.6 GHz, then this parameter is grayed out</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, the electronic attenuator is unavailable, then this parameter is grayed out</p> <p>If either of the above is true, and if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is sent</p> <p>If both of the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>For SCPI, this query applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Couplings	Coupled to Elec Atten Start. Elec Atten Stop must be >= Elec Atten Start. If Elec Atten Stop < Elec Atten Start, Elec Atten Start = Elec Atten Stop
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	24 dB

6.9.1.38 Elec Atten Step

Determines the Elec Attenuation Step. This determines the points between the Electric Attenuation min and max to use for Calibration.

Remote Command	<pre>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STEP <rel_ampl></pre> <pre>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STEP?</pre>
Example	<pre>:SYST:CAL:ROW2:EATT:STEP 2dB</pre>
Dependencies	<p>Disabled unless "Elec Atten Type" on page 3878 is STEP</p> <p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Preset	1 dB
State Saved	Saved in instrument state
Min	1 dB
Max	24 dB

6.9.1.39 Full Range Atten Type

Specifies the Full Range Atten type to use. The Full Range Attenuator adds a second input attenuator at the beginning of the RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

- **STEP**: Use multiple Full Range Atten states determined by Full Range Atten Start and Full Range Atten Stop
- **ALL**: Use all the attenuator states

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:TYPE STEP ALL </code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:FATT:TYPE STEP</code>
Dependencies	Only appears if input RF is selected, and RF Input Port 2 is selected, and the Full Range Attenuator exists The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	STEP
State Saved	Saved in instrument state
Range	STEP ALL

6.9.1.40 Full Range Atten Start

Determines the first Full Range Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:START <rel_amp></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:FATT:START 0</code>
Dependencies	Only appears in N9041B, when the RF input is selected, and the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed Disabled unless " Full Range Atten Type " on page 3880 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled to Full Range Atten Stop. Full Range Atten Start must be <= Full Range Atten Stop. If Full Range Atten Start > Full Range Atten Stop, Full Range Atten Stop = Full Range Atten Start
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB

6.9.1.41 Full Range Atten Stop

Determines the last Full Range Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:STOP <rel_amp1></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:FAT:PT:STOP 10</code>
Dependencies	Only appears in N9041B, when the RF input is selected, and the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed Disabled unless " Full Range Atten Type " on page 3880 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Couplings	Coupled to Full Range Atten Start. Full Range Atten Stop must be \geq Full Range Atten Start. If Full Atten Stop < Full Range Atten Start, Full Range Atten Start = Full Range Atten Stop
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB

6.9.1.42 Frequency Extender Attenuation Type

Specifies the Frequency Extender Attenuation type to use. **Frequency Extender Attenuation** is applied to the frequency extender's high frequency input signal path (for example, with a V3050A frequency extender, the high frequency path is 50 GHz to 110 GHz).

- **STEP**: Use multiple Frequency Extender Attenuation states determined by Frequency Extender Attenuation Start and Frequency Extender Attenuation Stop
- **ALL**: Use all the attenuator states

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:TYPE STEP ALL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:TYPE STEP</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	STEP
State Saved	No
Range	STEP ALL REfERENCE

6.9.1.43 Frequency Extender Attenuation Start

Determines the first Frequency Extender Attenuator to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:START <rel_amp1></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:START 0</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected Disabled unless " Frequency Extender Attenuation Type " on page 3882 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Couplings	Coupled to Frequency Extender Attenuation Stop. Frequency Extender Attenuation Start must be \leq Frequency Extender Attenuation Stop. If Frequency Extender Attenuation Start $>$ Frequency Extender Attenuation Stop, Frequency Extender Attenuation Stop = Frequency Extender Attenuation Start
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	V3050A: 26 dB

6.9.1.44 Frequency Extender Attenuation Stop

Determines the last Frequency Extender Attenuation to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STOP <rel_amp1></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:PT:STOP 26</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected Disabled unless " Frequency Extender Attenuation Type " on page 3882 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Couplings	Coupled to Frequency Extender Attenuation Start. Frequency Extender Attenuation Stop must be \geq Frequency Extender Attenuation Start. If Frequency Extender Attenuation Stop $<$ Frequency Extender Attenuation Start, Frequency Extender Attenuation Start = Frequency Extender Attenuation Stop
Preset	26 dB
State Saved	Saved in instrument state
Min	0 dB
Max	V3050A: 26 dB

6.9.1.45 Frequency Extender Atten Step

Determines the Frequency Extender Attenuation Step. This determines the points between the Frequency Extender Attenuation min and max to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STEP <rel_ampl></code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STEP?</code>
Example	<code>:SYST:CAL:ROW2:FEAT:STEP 2dB</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	1 dB
State Saved	No
Min	1 dB
Max	V3050A: 26 dB

6.9.1.46 IF Path

Determines the IF Path to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:PATH B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G EXT</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:PATH?</code>	
Example	<code>:SYST:CAL:ROW2:IF:PATH B25M</code>	
Notes	B10M	10 MHz
	B25M	25 MHz
	B40M	40 MHz
	B85M	85 MHz
	B125M	125 MHz
	B140M	140 MHz
	B160M	160 MHz
	B255M	255 MHz
	B510M	510 MHz
	B1G	1 GHz
	B1500M	1.5 GHz
	B2G	2 GHz

6 Input/Output

6.9 Calibration

	B4G	4 GHz
	EXT	Depends on the hardware
	In cases where the path is not available but is selected via SCPI, generates error -241, "Hardware missing; Option not installed"	
Dependencies	Path	Availability requires Installation of:
	25 MHz	25 MHz or wider IF Bandwidth option
	40 MHz	40 MHz or wider IF Bandwidth option
	85 MHz	85 MHz or wider IF Bandwidth option
	125 MHz	125 MHz or wider IF Bandwidth option
	140 MHz	Option B1X
	160 MHz	Option B1Y. B1Y cannot be installed without B1X
	255 MHz	Option B2X or wider IF Bandwidth option
	510 MHz	Option B5Y or wider IF Bandwidth option
	1 GHz	Option H1G/B1G or wider IF Bandwidth option
	2 GHz	Option B2G(R20) or wider IF Bandwidth option
	4 GHz	Option B4G(R40) or wider IF Bandwidth option
	1.5 GHz	Option R15
	If Option B85 <i>and</i> either Option B1A or Option B1X are installed, the 85 MHz option does not appear, and B85M is disabled. Sending the command to select B85M in this case generates an error -221, "Settings Conflict; Use wider bandwidth selection"	
	If Option B1A <i>and</i> Option B1X are both installed, the 125 MHz option does not appear, and B125M is disabled. Sending the command to select B125M in this case generates an error -221, "Settings Conflict; Use wider bandwidth selection"	
	In cases where the path is not available, but is selected via SCPI, error -241, "Hardware missing; Option not installed" is generated	
	The preset value depends on the Digital IF BW setting of the default measurement	
Preset	If the 25 MHz path is not available, presets to 10 MHz	
State Saved	No	
Range	B10M B25M B40M B85M B125M B140M B160M B255M B510M B1G B1500M B2G B4G EXT	

6.9.1.47 IF Gain

Determines the IF Gain to be used in the Calibration

Remote Command	:SYSTem:CALibration:ROW[1] 2 ... 100:IF:GAIN[:STATe]AUTO HIGH LOW ALL :SYSTem:CALibration:ROW[1] 2 ... 100:IF:GAIN[:STATe]?
----------------	--

Example	<code>:SYST:CAL:ROW3:IF:GAIN ALL</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>AUTO</code>
State Saved	Saved in instrument state
Range	Auto High Gain Low Gain All

6.9.1.48 Preamp

Determines if the Preamp is to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:BAND OFF LOW FULL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer:GAIN:BAND?</code>
Example	<code>:SYST:CAL:ROW2:POWer:GAIN:BAND OFF</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF LOW FULL</code>

6.9.1.49 Low Noise Amplifier (LNA)

Determines if the LNA is to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:LNA[:STATe] ON OFF 1 0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:SYST:CAL:ROW2:POW:GAIN:LNA ON</code> <code>:SYST:CAL:ROW2:POW:GAIN:LNA?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>OFF</code>
State Saved	No
Range	<code>ON OFF</code>

6.9.1.50 μ W Path Control

Determines the μ W Path Control to be used in the Calibration.

Option	SCPI
Standard Path	STD
Low Noise Path	LNPath
μ W Presel Bypass	MPBypass
Full Bypass	FULL

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:MW:PATH?</code>
Example	<code>:SYST:CAL:ROW2:POW:MW:PATH FULL</code>
Dependencies	<p>The SCPI command applies to the current selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p> <p>This column is not shown in the table unless <i>either</i> Option MPB or Option LNB is present and licensed</p> <p>The Low Noise Path selection does not appear unless Option LNP is present and licensed</p> <p>The μW Presel Bypass selection does not appear unless Option MPB is present and licensed</p> <p>The Full Bypass selection does not appear unless Options LNP, MPB and FBP are installed and licensed</p> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p>
Preset	STD
State Saved	Saved in instrument state
Range	STD LNPath MPBypass FULL

6.9.1.51 Coupling

Determines the Coupling to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:COUPling AC DC</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:COUPling?</code>
Example	<code>:SYST:CAL:ROW3:COUP AC</code>
Dependencies	<p>The SCPI command applies to the current selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Preset	AC

State Saved	Saved in instrument state
Range	AC DC

6.9.1.52 Phase Noise Optimization

Selects the LO (local oscillator) phase noise behavior for various desired operating conditions.

For full details, see ["Parameter Options & Installed Options" on page 3888](#) below.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNThesis[:STATe] 1 ... 5</code> For the meaning of each numeric option value, see "Parameter Options & Installed Options" on page 3888 below <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNThesis[:STATe]?</code>
Example	Select optimization for best wide offset phase noise: <code>:SYST:CAL:ROW1:FREQ:SYNT 2</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled with "Phase Noise Optimization All Option" on page 3893 When Phase Noise Optimization All is ON , selects all available LO mappings, and Phase Noise Optimization parameter will display All in the Configuration table. SCPI Query is still available to determine which parameter will be displayed when Phase Noise Optimization All is OFF
Preset	2
State Saved	Yes
Range	See "Ranges" on page 3893 below
Min	1
Max	5

Parameter Options & Installed Options

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
"Balanced" on page 3890	1	– In instruments with EPO, balances close-in phase noise with spur avoidance

Option	#	Description
		– In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 3890	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 3890	3	Optimizes LO for tuning speed
"Best Close-in" on page 3889	4 or 1*	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 3890	5	<ul style="list-style-type: none"> – In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

*Dependent on Option EPO installation. See "Best Close-in" on page 3889 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 3890 is identical in effect to "Best Close-in" on page 3889.

Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

:FREQ:SYNT 4

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the "Balanced" on page 3890 setting, parameter 1 selects "Balanced" on page 3890 in EPO instruments, in the interests of optimizing

code compatibility across the family. Parameter 4 selects "Best Close-in" on page 3889, which is usually not as good a choice as "Balanced" on page 3890.

Balanced

:FREQ:SYNT 1

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Best Spurs

:FREQ:SYNT 5

In instruments with EP0, the LO is configured for better phase noise than the "Best Wide-offset" on page 3890 case close to the carrier, but the configuration has 11 dB worse phase noise than the "Best Close-in" on page 3889 case mostly within ± 1 octave around 300 kHz offset. Spurs are even lower than in the "Balanced" on page 3890 case at better than -90 dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within ± 1 octave around 400 kHz offset. The spurs will always be below -70 dBc.

Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term ["Fast Tuning" on page 3890](#) refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as ["Best Spurs" on page 3890](#). It is available with the ["Fast Tuning" on page 3890](#) label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a ["Fast Tuning" on page 3890](#) option, the settings for ["Best Close-in" on page 3889](#) are used if ["Fast Tuning" on page 3890](#) is selected. This gives the fastest possible tuning for that hardware set.)

Auto

`:FREQ:SYNT:AUTO ON`

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EP0	Center frequency is < 699.9 kHz	"Balanced" on page 3890
Models with option EP0 have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Span > 114.1 MHz, or	"Fast Tuning" on page 3890
	RBW > 800 kHz	"Fast Tuning" on page 3890
	RBW > 290 kHz, or	"Best Wide-offset" on page 3890
	Span > 4.2 MHz	"Best Wide-offset" on page 3890
	Other conditions	"Balanced" on page 3890
EP1	Span > 44.44 MHz, or	"Fast Tuning" on page 3890
Models with option EP1 have a two-	RBW > 1.9 MHz, or	"Fast Tuning" on page 3890

Models with Option	Conditions	Selection
loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz All other conditions	"Best Close-in" on page 3889 "Best Wide-offset" on page 3890
EP2 Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 3889; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz All other conditions	"Best Close-in" on page 3889 "Fast Tuning" on page 3890 "Best Wide-offset" on page 3890
EP4 (available in CXA for improved phase noise)	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking" CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz All other conditions	"Fast Tuning" on page 3890 "Best Close-in" on page 3889 "Best Wide-offset" on page 3890
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 3890 are actually the same as "Best Close-in" on page 3889, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 25 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 141.4 kHz <i>and</i> RBW <= 5 kHz All other conditions	"Fast Tuning" on page 3890 "Best Close-in" on page 3889 "Best Wide-offset" on page 3890

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP1	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]
EP2, EP3, EP5	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
EP4	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

6.9.1.53 Phase Noise Optimization All Option

Selects all available LO settings

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNThesis:ALL[:STATe] ON OFF 1 0 :SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNThesis:ALL[:STATe]?</code>
Example	<code>:SYST:CAL:ROW1:FREQ:SYNT:ALL ON</code>
Notes	When this parameter is ON , it overrides the Phase Noise Optimization parameter, and selects all available LO settings
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

Couplings	Coupled with " Phase Noise Optimization " on page 3888. When this parameter is ON , it selects all available LO mappings, and Phase Noise Optimization parameter displays All in the Configuration table. When this parameter is OFF , the Phase Noise Optimization parameter displays its previously set value in the Configuration table
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF

6.9.1.54 Mixing Mode

Determines the LO Mixing Mode to be used.

Remote Command	:SYSTem:CALibration:ROW[1] 2 ... 100:LO:MMODE NORMa1 ALTeRnate ALL :SYSTem:CALibration:ROW[1] 2 ... 100:LO:MMODE?
Example	:SYST:CAL:ROW3:LO:MMOD NORM
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	NORMa1
State Saved	Saved in instrument state
Range	NORMa1 ALTeRnate ALL

6.9.1.55 Match State

Determines if the Cal settings must match exactly when applying the correction. If not, the system may find the closest matching state or interpolate between states.

Remote Command	:SYSTem:CALibration:ROW[1] 2 ... 100:MATCH[:STATe] ON OFF 1 0 :SYSTem:CALibration:ROW[1] 2 ... 100:MATCH[:STATe]?
Example	:SYST:CAL4:MATC ON :SYST:CAL4:MATC?
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	All True
State Saved	Saved in instrument state
Range	True False

6.9.2 Cal Group

Specifies the selected Calibration Group. You can use different Cal Groups for different external hardware configurations. The Cal Group is also an important concept when sending SCPI commands to the Calibration System, because in each case the SCPI command is directed to the currently-selected Cal Group, which is the Cal Group that is modified by the SCPI command.

Remote Command	<code>:SYSTem:CALibration:CGRoup <integer></code> <code>:SYSTem:CALibration:CGRoup?</code>
Example	<code>:SYST:CAL:CGR 2</code> <code>:SYST:CAL:CGR?</code>
Preset	1
Min	1
Max	100

6.9.3 Apply Cal Group

Controls whether or not the checked **Apply** rows of the currently selected Cal Group are applied.

Remote Command	<code>:SYSTem:CALibration:CGRoup:APPLy <bool></code> <code>:SYSTem:CALibration:CGRoup:APPLy?</code>
Example	<code>:SYST:CAL:CGR:APPL ON</code> <code>:SYST:CAL:CGR:APPL?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group You can only turn on Apply Cal Group if at least one Cal for the currently selected group has been executed. If you attempt to select Apply Cal Group before any Cals have been executed, the advisory message "At least one Row must be calibrated before it can be applied" is displayed
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Annotation	If any Cal Group is ON , RCal in the Meas Bar displays in amber, to indicate that Calibrations are in use

6.9.4 All Apply Cal Group Off

Turns off **Apply Cal Group** for all groups.

Remote	<code>:SYSTem:CALibration:CGRoup:APPLy:AOff</code>
--------	--

Command

Example `:SYST:CAL:CGR:APPL:AOFF`

6.9.5 Connection

Opens the **Connection** dialog, which provides step-by-step instructions for its use.

6.10 Calibrator Control

Lets you select a calibrator and control the calibrator settings.

6.10.1 Select Cal Source

Lets you select the calibrator to control.

Remote Command	<pre>:SYSTem:CALibration:TUNE[:SElected] NONE REF50 REF4800 TUNAbLe CALOUT RCM1 RCM2 RCM3 RCM4 RCM5 RCM6 RCM7 RCM8 RCM9 RCM10 :SYSTem:CALibration:TUNE[:SElected]?</pre>												
Example	<pre>:SYST:CAL:TUNE:SEL TUNABLE :SYST:CAL:TUNE?</pre>												
Notes	<p>Options are:</p> <table> <tr> <td>NONE</td><td>No calibrator selected</td></tr> <tr> <td>TUNAbLe</td><td>Tunable internal calibrator present in N9042B</td></tr> <tr> <td>CALOUT</td><td>Tunable calibrator available through CALOUT front panel port in N9042B</td></tr> <tr> <td>REF50</td><td>50 MHz calibrator</td></tr> <tr> <td>REF4800</td><td>4.8 GHz calibrator</td></tr> <tr> <td>RCM1 – RCM10</td><td>RCal module</td></tr> </table>	NONE	No calibrator selected	TUNAbLe	Tunable internal calibrator present in N9042B	CALOUT	Tunable calibrator available through CALOUT front panel port in N9042B	REF50	50 MHz calibrator	REF4800	4.8 GHz calibrator	RCM1 – RCM10	RCal module
NONE	No calibrator selected												
TUNAbLe	Tunable internal calibrator present in N9042B												
CALOUT	Tunable calibrator available through CALOUT front panel port in N9042B												
REF50	50 MHz calibrator												
REF4800	4.8 GHz calibrator												
RCM1 – RCM10	RCal module												
Dependencies	If the selected calibrator is not available, it does not appear in the dropdown. If you send SCPI to select a calibrator that is not available, the instrument generates an error												
Couplings	<p>Selecting REF50 sets the RF Calibrator to REF50</p> <p>Selecting REF4800 sets the RF Calibrator to REF4800</p> <p>Selecting a calibrator source other than REF50 or REF4800 sets RF Calibrator to OFF</p>												
Preset	Unaffected by Mode Preset. Set to NONE by Restore Input/Output Defaults or Restore System Defaults->All												

6.10.2 Cal Output

Lets you set the selected calibrator's RF power output state.

Remote Command	<pre>:SYSTem:CALibration:TUNE:OUTput[:STATe] ON OFF 1 0 :SYSTem:CALibration:TUNE:OUTput[:STATe]?</pre>
Example	<pre>:SYST:CAL:TUNE:OUTP ON :SYST:CAL:TUNE:OUTP?</pre>

Preset	Unaffected by Mode Preset . Set to OFF by Restore Input/Output Defaults or Restore System Defaults->All
--------	--

6.10.3 Cal Frequency

Lets you set the selected calibrator's frequency.

Remote Command	<code>:SYSTem:CALibration:TUNE:FREQuency <freq></code> <code>:SYSTem:CALibration:TUNE:FREQuency?</code>
Example	Set source frequency to 150 MHz: <code>:SYST:CAL:TUNE:FREQ 150000000</code>
Preset	Unaffected by Mode Preset . Set to 1 GHz by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	Depend on the selected calibrator

6.10.4 Cal Signal Type

Lets you set the selected calibrator's signal type.

Remote Command	<code>:SYSTem:CALibration:TUNE:TYPE CW COMB</code> <code>:SYSTem:CALibration:TUNE:TYPE?</code>
Example	<code>:SYST:CAL:TUNE:TYPE CW</code> <code>:SYST:CAL:TUNE:TYPE?</code>
Dependencies	If the selected calibrator does not support a signal type, then that type is disabled in the dropdown Changing the signal type to a disabled option generates an error
Preset	Unaffected by Mode Preset . Set to CW by Restore Input/Output Defaults or Restore System Defaults->All

6.10.5 Cal Comb Spacing

Lets you set the calibrator's comb spacing, when the signal type is **COMB**.

Remote Command	<code>:SYSTem:CALibration:TUNE:SPACing <freq></code> <code>:SYSTem:CALibration:TUNE:SPACing?</code>
Example	Set comb spacing to 1 MHz: <code>:SYST:CAL:TUNE:SPAC 1000000</code>
Dependencies	Only appears when COMB is selected as "Cal Signal Type" on page 3898 If the selected calibrator does not support the Comb signal, attempting to set the spacing generates an error

Preset	Unaffected by Mode Preset . Set to 0 Hz by Restore Input/Output Defaults or Restore System Defaults->All
Min/Max	Dependent on the selected calibrator

6.10.6 Calibrator Reference

Determines the frequency reference type used by the RCal module of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:TUNE:REFerence INTernal EXTernal</code> <code>:SYSTem:CALibration:TUNE:REFerence?</code>
Example	Set the calibrator frequency reference to Internal: <code>:SYSTem:CALibration:TUNE:REFerence INTERNAL</code>
Dependencies	Only displayed when an RCal module is the selected calibrator
Preset	Unaffected by Mode Preset . Set to preset value by Restore Input/Output Defaults or Restore System Defaults->All
Range	<code>INTernal EXTernal</code>


6.11 Advanced

6.11.1 T/R Port High Power Attenuator

Controls whether additional attenuation is added at the T/R Port. The T/R port has two input paths, one that provides a 16 dB attenuator, and the other that bypasses this attenuator.

- When **ON**, the path includes the 16 dB attenuator, so the max input level for this path is +47 dBm (50 W)
- When **OFF**, the 16 dB attenuator is bypassed, so the max input level for this path is +33 dBm (2 W)

If the attenuator is turned off, the following warning message is displayed and confirmation that the attenuator is to be turned off is required;

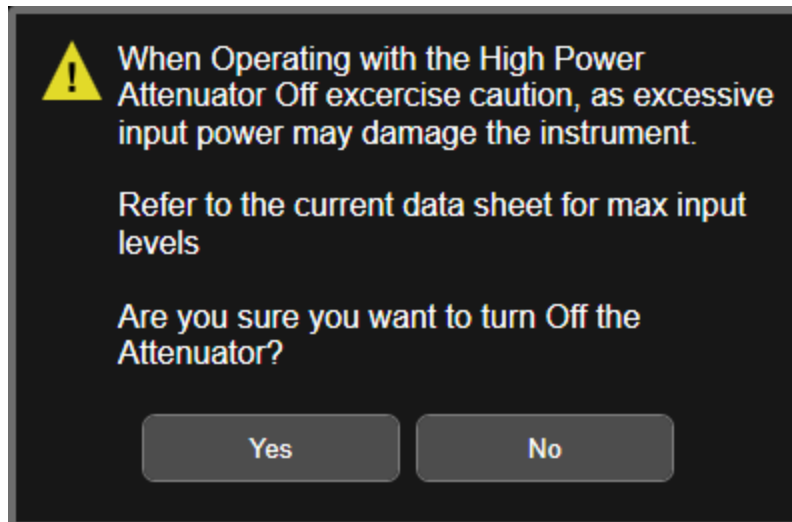

Whenever the attenuator is bypassed (**OFF**), a warning appears in the status bar: "Input caution; T/R unprotected"

In the case of an input overload at the T/R input, (>2 W with Attenuator off, or >50 W with attenuator on), or an over-temperature at the T/R input, the input is disconnected, and a dialog is displayed, stating:

"CAUTION! Excessive power has been detected at the T/R Port. The input has been disconnected. Remove the high signal power and press OK"

Or:

6 Input/Output
6.11 Advanced

“CAUTION! Over temperature has been detected at the T/R Port. The input has been disconnected. Remove the signal, allow to cool & press OK”

Until you press **OK**, the input remains disconnected, and no measurement can be made.

Remote Command	<code>[:SENSe]:FEED:RF:PORT:TR:HPOWer:ATTenuator[:STATe] ON OFF</code> <code>[:SENSe]:FEED:RF:PORT:TR:HPOWer:ATTenuator[:STATe]?</code>
Example	<code>:FEED:RF:PORT:TR:HPOW:ATT ON</code> <code>:FEED:RF:PORT:TR:HPOW:ATT?</code>
Dependencies	Only appears in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port
Preset	<code>ON</code>
State Saved	Saved in instrument state

6.12 Aux I/O Control

This menu is only available with Option LSN, indicating that the LISN IO board is installed. It is used to control each of the eight control lines out of the rear panel connector independently. There are eight bits of control lines. The LISN Control (Mode setup) of the EMI Receiver application affects the **AUX I/O Control** settings. Whenever you change the LISN Control in Mode Setup, the corresponding AUX I/O Control data lines will also be changed. The selection at the AUX I/O Control does not affect the LISN Control (Mode Setup) setting.

6.12.1 Data 0 – Data 7

Sets the value for Data 0 through Data 7 respectively.

Remote Command	<code>:OUTPut:AUX:IO:DATA<n> OFF ON 0 1</code> where <n> in an integer 0 - 7
Example	<code>:OUTP:AUX:IO:DATA0 OFF</code>
Notes	Unaffected by Mode Preset , but Input/Output Preset presets the value to ON for all 8 data lines
Preset	ON
Range	OFF ON


6.12.2 Aux IO Control (Remote Command Only)

Sets/Queries the value for all 8 data lines.

Remote Command	<code>:OUTPut:AUX:IO <Value></code> <code>:OUTPut:AUX:IO?</code>
Example	<code>:OUTP:AUX:IO 31</code>
Notes	Unaffected by Mode Preset , but Input/Output Preset presets the value to ON for all 8 data lines
Couplings	The states of Data 0 to Data 7 under the AUX I/O Control panel (Input/Output menu) change according to the keyed-in AUX IO value
Preset	31
Min	0
Max	255
Backwards Compatibility SCPI	<code>:OUTPut:UPORt <Value></code>

7 Save/Recall/Print


This section describes the functions that can be accessed via the front panel **Save**, **Quick Save**, and **Recall** hardkeys, as well as via the controls in the front-panel folder icon, as shown below.

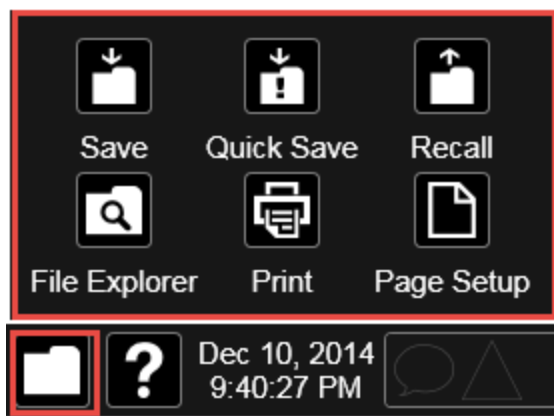

7.1 Quick Save

Quick Save repeats the previous Save at the touch of a single button. Whatever you saved before gets saved again to the same directory, and with a filename derived from the previous filename.

You access Quick Save by pressing the **Quick Save** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Quick Save** icon. In addition, if you have a PC keyboard plugged in, the sequence **CTL-Q** will perform a Quick Save.

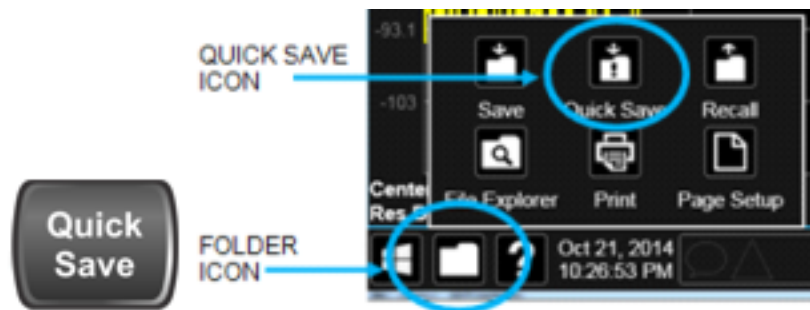

The **Quick Save** front-panel key repeats the most recent save that was performed from the **Save** menu, with the following exceptions:

- Register saves are not remembered as Saves for the purpose of the Quick Save function
- If the current measurement does not support the last non-register save that was performed, an informational message is generated, “File type not supported for this measurement”

Quick Save repeats the last type of qualified save (that is, a save qualified by the above criteria) in the last save directory by creating a unique filename using the Auto File Naming algorithm described below.

If the previous save was a Screen Image save, Quick Save saves a Screen Image when the Quick Save button is pressed. This image is *exactly* what is on the screen when the **Quick Save** button is pressed. Quick Save does *not* force a dialog exit or navigate in any way, it simply snaps the image on the screen and saves it. This lets you save images of dialogs and setup screens that would be impossible to save using the **Save** dialog.

NOTE

When **Quick Save** is pressed the display theme changes to the theme specified by the **Screen Image Theme** control in order to take the screen shot, and then changes back to the Display Theme, but no navigation is performed, and no dialogs are exited.

If **Quick Save** is pressed after startup and before any qualified Save has been performed, the Quick Save function performs a Screen Image save using the current settings for Screen Image saves (current theme, current directory), which then becomes the “last save” for the purpose of subsequent Quick Saves.

The Auto File Naming feature automatically generates a file name for use when saving a file. The filename consists of a prefix and suffix separated by a dot, as is standard for the Windows file system. A default prefix exists for each of the available file types:

Type	Default Prefix	Menu
State	State_	(Save/Recall)
Trace + State	State_	(Save/Recall)
Screen	Screen_	(Save/Recall)
Amplitude Corrections	Ampcor_	(Import/Export)
Traces	Trace_	(Import/Export)
Limit Lines	Limit_	(Import/Export)
Measurement Result	MeasR_	(Import/Export)
Capture Buffer	CapBuf_	(Import/Export)

A four-digit number is appended to the prefix to create a unique file name. The numbering sequence starts at 0000 within each Mode for each file type and updates incrementally to 9999, then wraps to 0000 again. It remembers where it was through a Mode Preset and when leaving and returning to the Mode. It is reset by Restore Misc Defaults and Restore System Defaults and subsequent running of the instrument application. So, for example, the first auto file name generated for State files is **State_0000.state**. The next is **State_0001**, and so forth.

One of the key features of Auto File Name is that we guarantee that the Auto File Name will never conflict with an existing file. The algorithm looks for the next available number. If it gets to 9999, then it looks for holes. If it find no holes, that is no more numbers are available, it gives an error.

For example, if when we get to State_0010.state there is already a State_0010.state file in the current directory, it advances the counter to State_0011.state to ensure that no conflict will exist (and then it verifies that State_0011.state also does not exist in the current directory and advances again if it does, and so forth).

If you enter a file name for a given file type, then the prefix becomes the filename you entered instead of the default prefix, followed by an underscore. The last four letters (the suffix) are the 4-digit number.

For example, if you save a measurement results file as “**fred.csv**”, then the next auto file name chosen for measurement results save will be **fred_0000.csv**.

NOTE

Although 0000 is used in the example above, the number that is used is actually the current number in the Meas Results sequence, that is, the number that would

have been used if you had not entered your own file name.

NOTE

If the filename you entered ends with _dddd, where d=any digit, making it look just like an auto file name, then the next auto file name picks up where you left off with the suffix being dddd + 1.

Quick Save Mode

Quick Save can be operated in the Normal mode and in a special “Prompt” mode. There is a switch on the User Interface page of the **System** menus that lets you control this.


When Quick Save Mode is in Normal (the default setting), the instrument does an immediate save of a new file of the same type and to the same directory as the previous Save action. When Quick Save Mode is in the Prompt state, instead of immediately performing a Save, the Alpha Keyboard pops up with the proposed auto-filename in the entry area. The user can then press Enter to accept the auto filename, or edit the name and press Enter. This allows you to easily save a file with a custom file name.

Notes

No remote command for this key specifically

7.2 Recall

The **Recall** dialog lets you recall previously saved states, traces and other items to the instrument from files on the instrument's internal storage, from removable devices, and from directories on the network. You access the Recall dialog by pressing the **Recall** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Recall** icon.

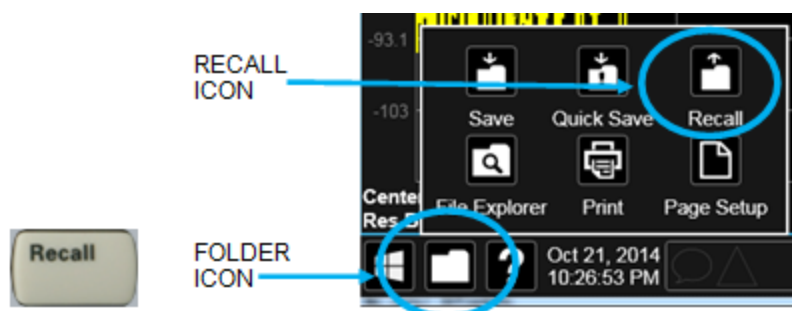

The dialog has section tabs running down the left side, which you use to specify what you want to recall, similar to the **Save** dialog. You choose the recall item and then complete the recall by choosing a register or file location from which to recall the item.

Notes	<p>No remote command for this key specifically, but :MMEM:LOAD is available for specific file types. For example: :MMEM:LOAD:STATE <filename></p> <p>If you try to recall a State file for a mode that is not licensed or not available in the instrument, an error message will occur and the state will not change</p>
-------	--

Backwards Compatibility Notes	<p>In legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly (since User Preset is actually loading a state), it was possible to do a User Preset without affecting the trace data, limit lines or correction data</p> <p>In the X-Series, "state" always includes all of this data; so, whenever state is loaded, all of the traces, limit lines and corrections are affected. Although this differs from previous behavior, it is desirable behavior, and should not cause adverse issues for users</p> <p>Recall for the X-Series supports backward compatibility in the sense that you can recall a state file from any X-Series model number and any version of X-Series software. This is only possible if part of the recalling process goes through a limiting step after recalling the mode settings, at least for settings that may vary with version number, model number, option and license differences. If you try to recall a state file onto an instrument with less capability than what was available on the instrument during the save, the recall will ignore the state it doesn't support, and it will limit the recalled setting to what it allows</p> <p>Example: if the saved state includes preamp ON, but the recalling instrument does not have a preamp; the preamp is limited to OFF. Conversely, if you save a state without a preamp, the preamp is OFF in the state file. When this saved file is recalled on an instrument with a licensed preamp, the preamp is changed to OFF. Another example is if the saved state has center frequency set to 20 GHz, but the instrument recalling the saved state is a different model and only supports 13.5 GHz. In this case, the</p>
-------------------------------	--

center frequency is limited along with any other frequency-based settings. Since the center frequency can't be preserved in this case, the recall limiting tries to at least preserve span to keep the measurement setup as intact as possible

Note that there is no state file compatibility outside of the X-Series. For example, you cannot recall a state file from ESA or PSA

7.2.1 Recall From File / Open

For every Recall type, a button appears called **Recall From File** or **Open**. “Recall From File” appears for recall types that also include registers (like State and Trace+State), and “Open” appears for all other recall types.

When you push the “Recall From File” or “Open” button, a dialog slides in from the right which allows you to see what files are saved in the current directory. See the “Save to File/Save As” section (3.1) for a depiction of this screen for the Save menu, which is similar to Recall.

The default directory is the internal directory for the current Mode and save type, on the D: drive. You may also change to another Mode's state directory by pressing the dropdown in the upper right corner labeled “Mode”. Once you have chosen a directory, the files in that directory whose extension matches the current data type (e.g., .state or .trace) are displayed in the right-hand window of the dialog. You can sort this list by name, date, file size or extension by tapping the Name, Date, Size, or Content header at the top of each column. A second tap toggles the sort order between Ascending and Descending.

Also displayed is a path depiction showing the path to the current directory. In the example shown, the path is D:\Users\Instrument\Documents\SA\screen. Tapping any element of this path lets you select an alternate route. Tapping the “Computer” arrow lets you select a different drive.



Tapping the “back” arrow navigates to the previously selected directory.

If you plug in a removable drive (e.g., a thumb drive), the browser immediately navigates to the root of that drive. Furthermore, if you had a thumb drive in and you were in a directory on the thumb, and then you exit the browser, when you come back in you are still in the same directory on that removable drive. If you remove the thumb drive, you return to the directory you had been in before the thumb drive was plugged in.

Note that for each data type there is a “current” directory, and it is the last directory used by either Save or Recall for that Mode. For example, if in SA Mode you save a Corrections file to a particular directory, then when you go to recall a Correction in SA Mode, you should be pointing at that directory. Or if in EMC Mode you recall a Limit from a particular directory then when in EMC Mode you go to save a Limit, it

should be pointing at that same directory. There is one “current” directory for each data type for each Mode (not one for Save and one for Recall).

The Filename field, just below the Path field, shows the filename that will be used. The **File Name** field is loaded with the name of the selected file. You may edit the filename by tapping it, which brings up the onscreen alpha keyboard. Press the “Done” button on this keyboard when you are done editing.

Select a file to load and press Recall. After a successful recall, a message "File <filename> recalled" or "State Register <register number> recalled" is displayed in an info box for a few seconds.

The **Files of Type** field shows the file suffix for the type of file you have selected to recall. This field only appears for files which have multiple file types that can be recalled. These file types are:

Amplitude Corrections:

- Amplitude Corrections (*.csv)
- Legacy Cable Corrections (*.cbl)
- Legacy User Corrections (*.amp)
- Legacy Other Corrections (*.oth)
- Legacy Antenna Corrections (*.ant)

Limits:

- Limit Data (*.csv)
- Legacy Limit Data (*.lim)

7.2.2 State

Lets you choose a register or file from which to recall the state.

See the Save State description for information on state files and their contents and the default paths. State files have the extension “.state”.

For rapid recall, the State menu lists 16 registers from which you can recall states. Pressing a Register button initiates the recall. You can also select a file from which to recall by pressing “Recall From File”.

Since each state file is only for one Mode, the settings for other Modes are unaffected when it is loaded. Recall State will cause a mode switch if the state being recalled is not from the current active mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.

Remote Command	<code>:MMEMory:LOAD:STATe <filename></code>
Example	Load the state file data (on the default file directory path) into the instrument state: <code>:MMEM:LOAD:STAT "MyStateFile.state"</code>
Notes	<p>When you pick a file to recall, the instrument first verifies that the file is recallable in the current instrument by checking the software version and model number of the instrument. If there is a mismatch between the file and the instrument, the recall function tries to recall as much as possible. It may limit settings that differ based on model number, licensing or version number. In general, variables in the instrument which are not contained in the state file will be unaffected, and variables in the state file which are not contained in the instrument will be ignored</p> <p>The recall proceeds by aborting the currently running measurement, clearing any pending operations, and then loading the State from the saved state file. You can open state files from any Mode, so recalling a State file switches the instrument to the Mode that was active when the save occurred. After switching to the Mode of the saved state file, Mode settings and data (if any for the Mode) become those from the saved file. The active measurement becomes the measurement which was running when the state file was saved and the data relevant to the measurement (if there is any) is recalled</p> <p>After recalling the state, the Recall State function does the following:</p> <ul style="list-style-type: none"> - Clears the input and output buffers - Status Byte is set to 0 - Executes <code>*CLS</code> <p>If the file specified is empty an error is generated. If the specified file does not exist, another error is generated. If there is a mismatch between the file and the proper file type, an error is generated. If there is a mismatch between file version or model number or instrument version or model number, a warning is displayed. Then it returns to the State menu and File Open dialog goes away</p> <p>After the Recall, the instrument exits the Recall menu and returns to the previous menu</p>
Backwards Compatibility SCPI	<p><code>:MMEMory:LOAD:STATe 1,<filename></code></p> <p>The "1" is simply ignored</p>

7.2.2.1 Recall Type

If you have a built-in Source in your instrument, you may wish, when recalling State, to recall only the part of the State file that applies to the instrument, and leave the Source unaffected. Or you may wish to recall only the part of the State file that applies to the Source, and leave the instrument unaffected.

Lets you choose whether you wish to recall the entire Analyzer + Source state (**ALL**), just the Analyzer State **ANALyzer**, or just the Source State (**SOURCE**).

Remote Command	<code>:MMEMory:LOAD:RTYPe ALL ANALyzer SOURce</code>
Example	<code>:MMEM:LOAD:RTYP ALL</code>
Dependencies	Only available in models with a built-in source, such as VXT models
Preset	<code>ALL</code>
Range	<code>ALL ANALyzer SOURce</code>

7.2.2.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the State to be recalled from the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17-128 are only available from the SCPI interface, using the `*RCL` command.

There is one set of 128 state registers in the instrument, not one set for each Mode. When a state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.

The date displayed follows the format specified in the **Date Format** setting in the **Control Panel**. The time shows hours and minutes.

After the recall completes, the message "Register <register number> recalled" is displayed.

If you are in the Spectrum Analyzer Mode, and you are recalling a register that was saved in the Spectrum Analyzer Mode, then after the recall, you will still be in the Recall Register menu. If the Recall causes you to switch modes, then after the Recall, you will be in the Frequency menu.

If a requested register is empty an error is generated.

Example	<code>*RCL 1</code>
Range	1-16 from front panel, 1-128 from SCPI

7.2.2.3 Edit Register Names

You may enter a custom name on any of the **Register** keys, to help you remember what you are using that state to recall. To do this, press the **Name** field for the register you want to rename, which brings up the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

For more information and the SCPI command, see "Edit Register Names" on page 3940 under **Save, State**.

7.2.3 Trace+State

Lets you choose a register or file for recalling the state.

See **Save, "State"** on page 3939 for information on state files and their contents and the default paths. State files have the extension **".state"**.

For rapid recall, the **Trace+State** menu lists 16 registers from which you can recall trace+state files. Pressing a **Register** control initiates the recall. You can also select a file from which to recall by pressing **Recall From File**.

Since each trace+state file is only for one Mode, the settings for other Modes are unaffected when it is loaded. **Recall Trace+State** will cause a mode switch if the trace+state being recalled is not from the current active Mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.

Trace+State files have the extension **.trace**.

The Trace+State selection only appears for measurements that support trace saves. It is blanked for modes that do not support trace saves. Saving Trace is identical to saving State, except that a **.trace** extension is used on the file instead of **.state**, and internal flags are set in the file indicating which trace was saved.

Remote Command	<code>:MMEMory:LOAD:TRACe TRACE1 ... TRACE6,<filename></code> <code>:MMEMory:LOAD:TRACe:REGister TRACE1 ... TRACE6,<integer></code>
Example	Loads the trace file data (on the default file directory path) into the specified trace; if it is a "single trace" save file, that trace is loaded to trace 2, and is set to be not updating: <code>:MMEM:LOAD:TRAC TRACE2,"MyTraceFile.trace"</code> Restore the trace data in register 2 to Trace 1:

	<code>:MMEM:LOAD:TRAC:REG TRACE1,2</code>
Notes	<p>When you perform the recall, the recalling Trace function must first verify the file is recallable in this instrument by checking instrument software version and model number, since it includes State. If everything matches, a full recall proceeds by aborting the currently running measurement, and loading the state from the saved state file to as close as possible to the context in which the save occurred. You can open .trace files from any mode that supports them, so recalling a Trace file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file and the saved measurement of the mode becomes the newly active measurement, and the data relevant to the measurement (if there is any) is recalled</p> <p>Once the state is loaded, the trace data must be loaded. The internal flags are consulted to see which trace to load and the "To Trace" setting to see where to load it. Trace data is always loaded with the specified trace set to View, so that the data is visible and not updating (so as not to erase the recalled data). If the file is an "all trace" file, all traces are loaded with the saved data (to the original trace the data was saved from) and set to View. Traces whose data is not loaded are restored to the update state that existed when they were saved</p> <p>After recall, the instrument exits the Recall menu and returns to the previous menu</p> <p>Some Modes and measurements do not have 6 available traces. For example, Phase Noise Mode: <code>:MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3,<filename></code></p> <p>Some Modes and measurements have more than 6 traces. For example, Realtime SA Mode: <code>:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 TRACE7 TRACE8 TRACE9 TRACE10 TRACE11 TRACE12 ALL,<filename></code></p>

7.2.3.1 Recall To Trace

Lets you select which Trace to recall to. Not all Modes have the same number of available traces. The default is the currently selected trace, selected in this or any other menu with **Trace** selection. If you have selected **ALL**, then that remains selected until you specifically change it to a single trace, regardless of the trace selected in the **Trace** menu.

If the **.trace** file is an "all trace" type, **To Trace** is ignored, and the traces each go back to the trace from which they were saved.

7.2.3.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the specified trace(s) and the state of the currently active mode to be recalled from the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

There is one set of 16 trace+state registers in the instrument, not one set for each Mode. When trace+state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.

The date displayed follows the format specified in the **Date Format** setting under the **Control Panel**. The time shows hours and minutes.

After the recall completes, the message **Register <register number> recalled** is displayed. If a requested register is empty, an error is generated.

Recalling state from a Register is the same as recalling state from a **Trace+State** File.

Example	*RCL 1
Range	1-16

7.2.3.3 Edit Register Names

You may enter a custom name on any of the **Register** keys, to help you remember what you are using that state to recall. To do this, press the **Name** field for the register you want to rename, which brings up the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

For more information and the SCPI command, see "Edit Register Names" on page 3940 under **Save, State**.

7.2.4 Screen Config + State

Lets you load the complete configuration of all your screens from a file which you specify.

Note that recalling a screen config file wipes out your current screen configuration; you do not see a warning before it loads, but there is a note on the **Recall** page letting you know what is going to happen.

The filenames are of the form:

State_0001.screen

Remote	:MMEMory:LOAD:SConfig <filename>
--------	----------------------------------

Command

Example Load the screen configuration from the file `MyScreenConfig.screen` in the default directory:
`:MMEM:LOAD:SCON "myScreenConfig.screen"`

7.2.5 Measurement Data

Lets you specify a data type (for example, trace data) and choose a file from which to import the data.

Measurement Data files are comma-separated value (CSV) files, and contain the requested data in a form that can be imported into Excel or other spreadsheets, as well as header data that gives information on relevant instrument settings at the time the save occurred.

For more on **Measurement Data** files, see ["Measurement Data" on page 3945](#) under **Save**.

Since the commonly exported data files are in CSV format, you can edit the data prior to importing it. This allows you to export a data file, manipulate the data in Excel (for example) and then import it.

7.2.5.1 Data Type

Lets you select the data type to recall.

Notes There is no SCPI command for Data Type, as the type is implied in the SCPI command for each item

Dependencies The **Data Type** menu for any given measurement only contains data types that are supported by that measurement. Data types that are not importable do not appear, even if they *do* appear in the corresponding **Save** menu

Trace

Allows you to import Trace files in the PC-readable CSV format.

Trace data files have the extension `.csv`. The trace file contains a “metadata” header which describes the state of the instrument when the file was saved. This metadata is compared to the current state of the instrument when the file is recalled; if it does not match the current state, the “invalid data indicator” (*) is displayed.

The metadata is detailed in Trace File Contents in the **Save** section.

Remote Command `:MMEMory:LOAD:TRACe:DATA TRACE1 | ... | TRACE6,<filename>`

Example Import the 2nd trace from the file `myTrace2.csv` in the current path. For SA Mode, the default path is:

	<p><code>My Documents\SA\data\traces</code></p> <p><code>:MMEM:LOAD:TRAC DATA TRACE2,"myTrace2.csv"</code></p>
Dependencies	<p>For SA measurements, a trace cannot be recalled from a trace file that was exported with ALL traces selected</p> <p>A trace cannot be imported if the number of trace points in the file do not match the number of sweep points currently set for the measurement. If this happens, an error message is generated</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p>
Couplings	<p>When a trace is imported, Trace Update is always turned OFF for that trace and Trace Display is always turned ON</p>
Annotation	<p>After recall is complete, an advisory is displayed in the message bar confirming which trace file was loaded</p>
Status Bits/OPC dependencies	<p>Sequential - aborts the current measurement</p>

7.2.6 Limit

Lets you select a file from which to import the **Limit** data.

Limit files are CSV files, and contain the limit data in a form that can be imported into Excel or similar spreadsheets, as well as header data that provides information on the limit.

See the **Save Limit** description ("**Limit**" on page 3981) for information on Limit files and their contents and the default paths. **Limit** files have the extension **.csv**.

For backwards compatibility, older limit files with the extension **.lim** can be read into the instrument, but you can only save limits as **.csv** files.

A set of preloaded **Limits** files can be found in the directory:

`My Documents/EMC Limits and Ampcor/Limits`

Remote Command	<p><code>:MMEMory:LOAD:LIMit LLINE1 LLINE2 LLINE3 LLINE4 LLINE5 LLINE6,<-filename></code></p>
Example	<p>Import the 2nd Limit Line from the file <code>myLimitLine2.csv</code> in the current path:</p> <p><code>:MMEM:LOAD:LIM LLINE2,"myLimitLine2.csv"</code></p>
Dependencies	<p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p> <p>In the Log Plot measurement in Phase Noise Mode, there are only three Limit Lines, so the valid parameters are LLINE1 LLINE2 LLINE3</p> <p>This key only appears if you have the proper option installed in your instrument</p>
Couplings	<p>When a limit line is loaded from mass storage, it is automatically turned on. This allows the user to see it, thus confirming the load. The Margin settings will match those when the limit was saved</p>

	The instrument cannot mix Limits domains (X Axis Unit must be Frequency or Time for both Limits). So, when a Limits file is loaded, the instrument sets the Limits domain (X Axis Unit) to match that of the file. If this changes the Limits domain from what it was before the file was loaded, all Limits data in all Limits sets is erased before the data loads. If this operation is over the remote interface, there is no warning if this occurs, so care should be taken to know the domain of the file you are loading
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which limit file was loaded
Status Bits/OPC dependencies	Sequential - aborts the current measurement

7.2.6.1 Select Limit

Selects the Limit register into which the recalled **Limit** will be placed, for example, **Limit 1**.

Preset	Not part of Preset , but is reset to LLINE1 by Restore Mode Defaults Survives shutdown
--------	---

7.2.7 Correction

Allows you to import Amplitude Corrections files in the PC-readable CSV format.

Amplitude Correction files contain the correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that provides information on the correction.

For backwards compatibility, older limit files with the extensions **.amp**, **.cbl**, **.ant** and **.oth** can be read into the instrument.

A set of preloaded **Corrections** files can be found in the directory:

My Documents\EMC Limits and Ampcor\Ampcor

The default path for CSV files is:

My Documents\amplitudeCorrections

Antenna corrections are a particular kind of Amplitude Corrections – they are distinguished in the corrections file by having **Antenna Unit** set to a value other than **None**. When the Amplitude Correction is an Antenna correction and the **Antenna Unit** in the file is not **None**, the Y-Axis Unit setting changes to match the Antenna (Transducer) Unit in the file.

Remote Command	:MMEMory:LOAD:CORRection 1 ... 8, <filename>
Example	Recall the Amplitude Correction data from the file myAmpcor.csv in the current directory to the 2nd Amplitude Correction table, and turns on Correction 2: :MMEM:LOAD:CORR 2, "myAmpcor.csv"

7 Save/Recall/Print

7.2 Recall

Dependencies	<p>Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit</p> <p>Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key is grayed-out in measurements that do not. The key does not show at all if no measurements in the Mode support it</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p> <p>This key does not appear unless you have the proper option installed in your instrument</p> <p>This command will generate an "Option not available" error unless you have the proper option installed in your instrument</p>
Couplings	When a correction file is loaded from mass storage, it is automatically turned on (CorrectionON) and Apply Corrections is set ON . This allows you to see its effect, thus confirming the load
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled
Backwards Compatibility SCPI	:MMEMory:LOAD:CORrection ANTenna CABLe OTHer USER, <filename>
	For backwards compatibility, ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4

7.2.7.1 Select Correction

Selects the register into which the recalled **Correction** will be placed, for example, **Correction 1**.

Preset	Not part of Preset , but reset to Correction 1 by Restore Input/Output Defaults Survives a shutdown
--------	---

7.2.8 Complex Correction

Imports **Complex Corrections** files in the PC-readable **.s2p** format.

Complex Correction files contain amplitude and phase correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the correction.

The default path for Complex Corrections files is:

My Documents\complexCorrections

Remote Command	:MMEMory:LOAD:CCORrection <integer>, <filename>
Example	<p>Recall the Complex Correction data from the file mycor.s2p in the current directory to the 2nd Complex Correction table, and turns on Complex Correction 2:</p> <p>:MMEM:LOAD:CCOR 2, "mycor.s2p"</p>
Dependencies	Not supported by all measurements. The tab does not appear at all if no measurements in the Mode

	support it Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Couplings	When a complex correction file is loaded from mass storage, it is automatically turned ON and Apply Corrections is set ON . This allows you to see its effect, thus confirming the load
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled

7.2.8.1 Select Complex Correction

Selects the register into which the recalled **Complex Correction** will be placed, for example, **Complex Correction 1**.

Preset	Not part of Preset , but is reset to Correction 1 by Restore Input/Output Defaults Survives a shutdown
--------	---

7.2.9 Recall VDI CCD Correction

Imports VDI CCD External Mixer Correction files in the PC-readable CSV (.csv) format.

The default path for VDI CCD External Mixer Correction files is the instrument's **My Documents** folder.

Remote Command	:MMEMory:LOAD:VCORrection <filename>
Example	:MMEM:LOAD:VCOR "vdi_ccd_corr.csv"
Dependencies	Requires the EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses VDI CCD Corrections are not supported by all measurements. The tab does not appear at all if no measurements in the Mode support it Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type If the file is empty, message -250 is reported. If the file does not exist, message -256 is reported. If there is a mismatch between the file and the destination data type, message -250 is reported
Couplings	When a VDI CCD correction file is loaded into memory, if the correction matches the current external mixer setup and "Select VDI CCD Correction" on page 3746 is NONE , the selected VDI CCD Correction is set to the serial number of the matching correction data
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled

7.2.10 SCPI Recorder

Contains controls to let you recall SCPI recordings.

7.2.10.1 Recall From File

Recalls a previously saved SCPI Recorder file. For details of the SCPI Recording feature, see ["SCPI Recorder" on page 3570](#).

After the file contents have been read, each of the SCPI commands or queries present in the file at the time of recall is applied to the system. If the file is from another instrument, or from a different model, some commands may cause unexpected data changes as each is applied. If any commands result in errors, the command(s) and the corresponding error(s) are displayed after playback is completed.

Recalling a SCPI recording plays the contents of the file immediately after recall. You can view the content of the file in the SCPI recorder dialog. If there are any entries in the SCPI recorder, you are prompted either to keep the previously recorded data, or let it be discarded.

If you choose to discard the data, all existing recording entries are cleared, and the SCPI recorder is populated with the recalled data.

If you choose to keep the existing recorded data, the recalled file content is appended to the existing recording.

NOTE

Some SCPI entries in the recorded file may require the presence of other files, if a command in the recorded file specifies the recall of other files.

7.2.11 Mask

The **Mask** data type is used to import and export Mask files for measurements that use masks, such as cellular comms and real-time measurements.

7.2.12 Sequence


These need to be brought over for the EXT and/or Sequence Analyzer when they are available in the Touch UI

7.2.13 Waveform

Recalls waveforms into the ARB memory of an Internal Source.

When you select the **Waveform** tab in the **Save** dialog,, a hint appears saying "Recalls files from Mass Storage to the ARB and lets you manage the ARB memory at the same time."

You then tap **Recall From File** to display the **Recall Waveform** dialog.

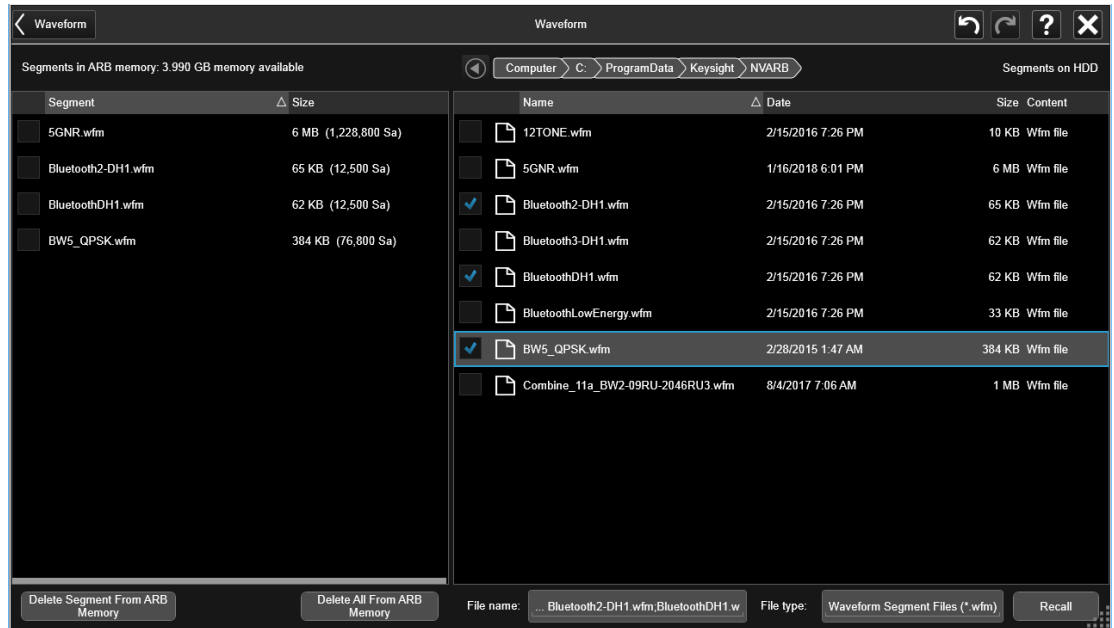

The left-hand window shows the files in ARB memory. The right-hand window shows the files on the hard drive.

You can select one or more waveform files in the right-hand window. Each file selected has a blue check box in it. To select a single file, tap that file's row. To select additional files, tap the check box in the row of the desired additional files.

When you have selected the file or files that you wish to recall, tap Recall. The file(s) are recalled into the ARB memory, and appear in the left-hand window.

If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, you can either use Windows File Explorer, or **:MMEMory:COPY**.

You can select one or more segments in the left-hand window and tap "Delete Segments from ARB memory" to delete the selected files. You can also delete all files in ARB memory by tapping "Delete All from ARB memory."

You can change the current directory by tapping on an element of the file path at the top of the screen and selecting the desired subdirectory in the list that appears, and repeating until you have the path you want. The current directory is used for manually loading waveform segments into ARB memory for playback, and as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence or a list sequence.

File Type allows you to specify a waveform format. The available file types are listed below:

7 Save/Recall/Print

7.2 Recall

Type	Extension	Notes
Waveform Files	<code>.wfm</code>	Keysight Signal Studio files
Binary Files	<code>.bin</code>	Interleaved IQ data files. They could be single precision or double precision customer created files. One-byte marker may be added
CSV Files	<code>.csv</code>	Comma-separated value file. Could be generated by Excel
Text Files	<code>.txt</code>	
Matlab Files	<code>.mat</code>	Should be Level 4, Level 5 or HDF5 MAT-files (only Level 5 Matlab file is supported in X24)

Waveforms in `.csv`, `.txt` and `.mat` formats are supported by models with a built-in source, such as VXT and EXM.

`.txt` files are formatted according to the following rules:

1. Text files only contain the IQ information. Data in the right column represents the amplitude of real(I) points, Data in the left column represents the amplitude of imaginary(Q) points
2. The amount of data should be multiple of two (IQ pairs)
3. The data range is from $-1e10$ to $1e10$, the data type should be `int`, `float` or `double`. 16 digits or fewer for every data is acceptable
4. The values are separated by comma or tab. Extra commas or tabs are ignored
5. Use **Enter** to separate IQ pairs

Example for text file data:

```
0.46425922, -0.57411048
0.47184454, -0.58435995
0.48107329, -0.59014958
0.49223323, -0.58998679
0.50419607, -0.58558843
0.51679158, -0.57721768
0.53005322, -0.56481976
0.54373011, -0.54879346
0.55759183, -0.52950807
0.57141409, -0.50732489
```

Rules 1–3 above also apply to `.csv` data.

Dependencies	Only appears if your hardware includes an Internal Source, such as in VXT
--------------	---

7.2.13.1 Load Segment to ARB Memory

Loads a single segment to ARB memory. Same as pressing the **Recall** button with a single waveform selected.

Remote Command	<p>:SOURce:RADio:ARB:LOAD <string></p> <p><string> - specifies the path name of the file to load from the HDD into ARB memory. May be a <full path + filename>, or <"NVWFM" MSUS + colon + filename></p>
Example	<p>:SOUR:RAD:ARB:LOAD "D:\NVARB\testwaveform.bin"</p> <p>or</p> <p>:SOUR:RAD:ARB:LOAD "NVWFM:testwaveform.bin"</p>
Notes	<p>Because loading the file involves a delay of unpredictable length, this command should be followed by *OPC?, which holds off subsequent commands until the loading operation is complete</p> <p>If you specify a file over SCPI, but the file is not at the specified location, an error is generated. If you try to load a waveform file but the file contains less than 500 IQ samples, an error is generated</p> <p>VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E:</p> <p>If you try to load a waveform file but the file contains less than 1024 IQ samples, an error is generated</p> <p>If you try to load a Signal Studio waveform *.wfm that contains invalid waveform header, an error is generated</p> <p>If the ARB is ON when you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>ARB can be loaded into ARB memory even if required licenses are not present on the instrument. In this case, a GUI-only warning message -800, "Operation complete; Loaded <filename> successfully, but no license <required licenses> installed". You can install required licenses according to <required licenses> string to license it, or multi-pack license it</p> <p>When in Sequence Analyzer Mode, and Include Source is Yes, an attempt to load a file to ARB memory is rejected with an error. When Include Source is No, and if there is insufficient free ARB memory to load the selected waveform, an error is generated</p>
Remote Command	<p>:SOURce:RADio:ARB:LOAD:ALL <string></p> <p><string> specifies the directory on the HDD to load the files into ARB memory from</p>
Example	:SOUR:RAD:ARB:LOAD:ALL "D:\nvarb"
Notes	<p>Loads all the segment files within the currently selected directory into ARB memory. If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, either use Windows File Explorer, or :MEMory:COPY</p> <p>If you specify a directory over SCPI, but the directory does not exist, an error is generated</p> <p>If the ARB is ON, and you then load or delete a file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and Include Source is Yes, an attempt to load all files from a</p>

directory to ARB memory is rejected with an error. When **Include Source** is **No** and there is insufficient free ARB memory to load all the waveforms, when the ARB memory is full, the copy ceases, and an error is generated

7.2.13.2 Delete Segment From ARB Mem

Deletes a segment from ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:DELeTe <string></code> <string> specifies the waveform to be deleted from the ARB playback memory
Example	<code>:SOUR:RAD:ARB:DEL "testwaveform.bin"</code>
Notes	<p>It is possible to delete files from within the ARB memory when the ARB is ON. However, if you attempt to delete the file that is currently playing an error is generated</p> <p>It is possible to delete a file from within the ARB memory when the sequencer state is ON, and the file is not being used by the List Sequencer. If you attempt to delete a file that is being used by the list sequencer, an error is generated</p> <p>When the Sequencer state of the List Sequencer is On, even if ARB state is On, the selected waveform will not be played. In this case, if the selected waveform is not used in List Sequence, it can be deleted, and the ARB state is turned Off</p> <p>If the ARB is ON and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and Include Source is Yes, an attempt to delete a file from ARB memory is rejected with an error. When Include Source is No, and you specify a file that does not exist within ARB memory, an error is generated</p>

7.2.13.3 Delete All From ARB Memory

Removes all segments from ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:DELeTe:ALL</code>
Example	<code>:SOUR:RAD:ARB:DELeTe:ALL</code>
Notes	<p>If you attempt to delete all files from ARB memory when there are waveform files used in the Sequencer function of the List Sequencer and the Sequencer state is ON, all files except the files currently being used in list sequencer are deleted, and an error is generated</p> <p>If the ARB is ON and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and Include Source is Yes, an attempt to delete all files from ARB memory is rejected with an error. When Include Source is No, and you attempt to delete all files from ARB memory when the ARB is currently playing a file, all files except the one playing are deleted and an error is generated</p>

7.2.13.4 Set Default Directory (Remote Command Only)

Sets the default directory for loading ARB files from SCPI.

Remote Command	<code>:SOURce:RADio:ARB:DEFault:DIRectory <string></code> <code>:SOURce:RADio:ARB:DEFault:DIRectory?</code>
Example	<code>:SOUR:RAD:ARB:DEF:DIR "D:\ArbFiles"</code> <code>:SOUR:RAD:ARB:DEF:DIR?</code>
Notes	Sets the default directory to be used as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence, and as a search location for selecting waveforms using SCPI
State Saved	Persistent, survives a power cycle and a preset but not saved in the instrument state

7.2.13.5 Query ARB Memory File List (Remote Query Only)

Queries the instrument for the list of waveform segments in the ARB memory.

NOTE

Returns a string for waveform segment names in ARB memory. If you want a string list of waveform segments in the ARB memory, use **"Query ARB Memory Full File List (Remote Query Only)"** on page 3925.

Remote Command	<code>:SOURce:RADio:ARB:CATalog?</code>						
Example	<code>:SOUR:RAD:ARB:CATalog?</code>						
Notes	The return data is in the following format: <table border="1"> <tr> <td><code><integer></code></td><td>memory used</td></tr> <tr> <td><code><integer></code></td><td>memory free</td></tr> <tr> <td><code><string>...</code></td><td>comma separated list of waveform segments within ARB memory</td></tr> </table>	<code><integer></code>	memory used	<code><integer></code>	memory free	<code><string>...</code>	comma separated list of waveform segments within ARB memory
<code><integer></code>	memory used						
<code><integer></code>	memory free						
<code><string>...</code>	comma separated list of waveform segments within ARB memory						

7.2.13.6 Query ARB Memory Full File List (Remote Query Only)

Queries the instrument for the string list of waveform segments in the ARB memory. Returns a string list for waveform segment names in the ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:FCATalog?</code>
Example	<code>:SOUR:RAD:ARB:FCATalog?</code>
Notes	The return data is in the following format:

<integer>	Memory used
<integer>	Memory free
<integer>	File count in ARB memory
<string>,<string>, ... <string>	Comma-separated string list of waveform segments within ARB memory

Example:

`:SOUR:RAD:ARB:FCAT?`

EXT returns: 27499,2069653,3,"c2k.wfm","gsm.wfm","wcdma.wfm"

7.2.14 Demod Info

Recalls various **Demod Info** data types to help you setup your measurement. The available data types vary depending on which measurement you are in.

7.2.14.1 Data Type

Recalls the whole Component Carrier setup or Custom IQ constellation definition.

Dependencies	Only appears in the 5GNR EVM measurement, in 5GNR Mode
--------------	--

CC Setup

You can recall a **Component Carrier Setup** file, which sets up the 5G NR Modulation Analysis measurement with the settings in the file.

Using the **Component Carrier** dropdown, you can specify which component carrier you wish to apply this setup to, or [ALL](#).

The following file formats are supported:

Format	Extension
Signal Studio N7631C Setup	.scp
M9384B VXG 5GNR Setup	.sgen
PWSG Desktop Setup	.pwsq
89600 VSA 5GNR Setup	.setx
X-Series Measurement Application 5GNR Component Carrier Setup	.nrcc

Remote Command	<code>:MMEMory:LOAD:EVM:SETup ALL CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15,<string></code>
----------------	---

Example	<code>:MMEM:LOAD:EVM:SET CC0,"mySetup.scp"</code>
---------	---

Status Bits/OPC dependencies	Sequential - aborts the current measurement
------------------------------	---

Frame Index (.scp and .pwsq only)

Signal Studio (N7631C) and PWSG desktop may have configuration for multiple frames. This parameter specifies which frame's configuration will be recalled in 5GNR Modulation Analysis measurement from a **.scp** or **.pwsq** file.

Remote Command	:MMEMory:LOAD:EVM:FRAMe <int> :MMEMory:LOAD:EVM:FRAMe?
Example	:MMEM:LOAD:EVM:FRAM 1 :MMEM:LOAD:EVM:FRAM?
Preset	0
State Saved	No
Min	0
Max	100

Close VSA after recall (.setx only)

Automatically launches VSA (VSA 2021 or later version with valid license is required) in the background, if it is needed to recall the specified **.setx** file. This provides recalled settings to the 5GNR EVM measurement through an internal API. This process will be slower and will consume more memory, because VSA is running in the background.

Lets you specify whether VSA will be closed after recalling the current **.setx** file:

ON Close VSA to improve performance and minimize memory usage
OFF Keep VSA running to allow faster recall of additional .setx files

Remote Command	:MMEMory:LOAD:EVM:VSA:RELease 0 1 OFF ON :MMEMory:LOAD:EVM:VSA:RELease?
Example	:MMEM:LOAD:EVM:VSA:REL 1 :MMEM:LOAD:EVM:VSA:REL?
Preset	OFF
State Saved	No
Range	OFF ON

Custom IQ Constellation State

Selects a text (**.txt**) file from which to import the Constellation States definition for the Custom IQ modulation type. This file format is the same as Signal Studio N7608C Custom IQ constellation file format and VMA Digital Demod measurement Custom IQ. To use a recalled constellation, change the PDSCH/PUSCH MCS to -1, then change the modulation format to Custom IQ.

A preloaded **Constellation State** file can be found under VMA directory:

My Documents\VMA\data\DDEMOD\ConstlnState

Remote Command	:MMEMory:LOAD:EVM:CONStln:StAtE <string>
Example	Import the constellation state from the file myConstlnState.txt in the current path: :MMEM:LOAD:EVM:CONS:STAT "myConstlnState.txt"
Dependencies	Only appears in 5GNR Mode, in the Modulation Analysis measurement Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Annotation	After recall is complete, an advisory is displayed in the message bar confirming the constellation state was loaded

Reference IQ data

Selects a reference IQ data (**.riq**) file from which to import the reference IQ data for EVM and error vector calculations.

Remote Command	:MMEMory:LOAD:EVM:REFeRence:IQ <string>
Example	Import the constellation state from the file myConstlnState.txt in the current path: :MMEM:LOAD:EVM:REF:IQ "mySetup.riq"
Dependencies	Only appears in 5GNR Mode, in the Modulation Analysis measurement Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Annotation	After recall is complete, an advisory is displayed in the message bar confirming the constellation state was loaded

7.2.15 Power Sensor Cal Factor

Selects a file to which to export the Power Sensor Cal factor data.

Cal Factor files are XML files, and contain the cal factor data and header data that gives information on the power sensor.

The default path for **Cal Factor** Files is:

My Documents\<mode name>\data\PSCF

where `<mode name>` is the parameter used to select the mode with `:INST:SEL` (for example, `MRECEIVE` for Measuring Receiver Mode). Hence, a **Cal Factor** file from any measurement in the Measuring Receiver mode would be stored in:

`My Documents\MRECEIVE\data\PSCF`

Cal Factor files have the extension `.xml`. The default filename is `<Sensor Model>_<Sensor Serial Number>_0000.xml`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. If the sensor model or serial number is blank, the default filename is `PSCF_0000.xml`.

Remote Command	<code>:MMEMory:STORe:PSCFactor <file_name></code>
Example	<code>:MMEM:STOR:PSCF "myPSCF.xml"</code>
Notes	If the save is initiated via SCPI, and the file already exists, the file will be overwritten Using the <code>C:</code> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade Both single and double quotes are supported for any filename parameter over SCPI
Dependencies	Only appears if you have the proper option installed in your instrument

7.2.16 Recording

Lets you specify a data type (for example, I/Q data) and select a file from which to import the data, then the data can be routed to the measurement engine as though it were being acquired from the Input.

The recording and playback of signal data files is a multi-step process that involves controls in several menus.

The menus that are involved in Record/Playback are:

- **Save**, **"Recording" on page 3996** (under the **Save** hardkey or the **Save** icon in the **File** panel)
- **Recall, Recording** (this menu)
- **Sweep, Recording** tab
- **Sweep, Playback** tab
- **Input/Output**, **"Data Source" on page 3783** tab

NOTE

A complete tutorial for the Record/Playback functionality, including how to load and save Recording files, can be found under the **Data Source** tab in **Input/Output**.

Dependencies	Only available in the following modes and measurements:
--------------	---

-
- VMA (Digital Demod and Custom OFDM)
 - 5G NR (Modulation Analysis)
 - LTE (Modulation Analysis)
 - WLAN (Modulation Analysis, MIMO Modulation Analysis, Spectral Flatness)
 - Analog Demod
 - Bluetooth (Transmit Analysis)
 - IoT & SRComms (LoRa CSS Demod)

7.2.16.1 Data Type

Allows you to recall IQ data from the measurement using a specified file type (CSV, SDF, TXT, BIN, BINX, BINF, ORB). See "Recording" on page 3929 for details about the available file types.

Note that BIN, BINX and BINF files do not include sampling rate information inside the file, so after recalling one of these file types you will need to set the Sample Rate in Sweep, Playback., based on your note of the Sample Rate that was displayed on the Sweep, Recording menu panel when you saved the file.

Example :MMEM:LOAD:RECORDing "C:\TEMP\MyIQData.csv"

7.2.16.2 Channel

Select data channels to recall. This is only supported in the 5GNR EVM, VMA Digital Demod, VMA Custom OFDM and WLAN MIMO EVM measurements.

The <meas> param in the command must be replaced with the node of the active measurement:

- EVM for 5GNR EVM
- EVMM for WLAN MIMO EVM
- DDEM for VMA Digital Demod
- OFDM for VMA Custom OFDM

Remote Command :MMEMory:LOAD:<meas>:RECORDing:CHANnel ALL | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8
:MMEMory:LOAD:<meas>:RECORDing:CHANnel?

Example :MMEM:LOAD:EVM:REC:CHAN CH1

	<code>:MMEM:LOAD:EVM:REC:CHAN?</code>
Preset	<code>ALL</code>
State Saved	No
Range	<code>ALL CH1 CH2 CH3 CH4 CH5 CH6 CH7 CH8</code>

7.2.16.3 Reset

Clears all recalled data channels.

This is only supported by 5GNR EVM, VMA Digital Demod, VMA Custom OFDM and WLAN MIMO EVM measurements.

The `<meas>` param in the command must be replaced with the node of the active measurement:

- `EVM` for 5GNR EVM
- `EVMM` for WLAN MIMO EVM
- `DDEM` for VMA Digital Demod
- `OFDM` for VMA Custom OFDM

Remote Command	<code>:MMEMory:LOAD:<meas>:RECORDing:RESet</code>
Example	<code>:MMEM:LOAD:EVM:REC:RES</code>

7.2.16.4 Recalled data channel table (Display only)

Displays recalled IQ data file for each channel in a table.

7.2.17 Recording + State

Recalls a snapshot file (`*.rssf`) that includes state and IQ recording.

Remote Command	<code>:MMEMory:LOAD:RSTate <filename></code>
Example	<code>:MMEM:LOAD:RST "snapshot1.rssf"</code>
Status Bits/OPC dependencies	Sequential - aborts the current measurement

7.2.17.1 CC Setup

You can recall a **Component Carrier Setup** file, which sets up the 5G NR Modulation Analysis measurement with the settings in the file.

Using the **Component Carrier** dropdown, you can specify which component carrier you wish to apply this setup to, or **ALL**.

The following file formats are supported:

Format	Extension
Signal Studio N7631C Setup	.scp
M9384B VXG 5G NR Setup	.sgen
PWSG Desktop Setup	.pws
89600 VSA 5G NR Setup	.setx
X-Series Measurement Application 5G NR Component Carrier Setup	.nrcc

Remote Command	:MMEMory:LOAD:EVM:SETup ALL CC0 CC1 CC2 CC3 CC4 CC5 CC6 CC7 CC8 CC9 CC10 CC11 CC12 CC13 CC14 CC15,<string>
Example	:MMEM:LOAD:EVM:SET CC0,"mySetup.scp"
Status Bits/OPC dependencies	Sequential - aborts the current measurement

Frame Index (.scp and .pws only)

Signal Studio (N7631C) and PWSG desktop may have configuration for multiple frames. This parameter specifies which frame's configuration will be recalled in 5G NR Modulation Analysis measurement from a .scp or .pws file.

Remote Command	:MMEMory:LOAD:EVM:FRAMe <int> :MMEMory:LOAD:EVM:FRAMe?
Example	:MMEM:LOAD:EVM:FRAM 1 :MMEM:LOAD:EVM:FRAM?
Preset	0
State Saved	No
Min	0
Max	100

Close VSA after recall (.setx only)

Automatically launches VSA (VSA 2021 or later version with valid license is required) in the background, if it is needed to recall the specified **.setx** file. This provides recalled settings to the 5GNR EVM measurement through an internal API. This process will be slower and will consume more memory, because VSA is running in the background.

Lets you specify whether VSA will be closed after recalling the current **.setx** file:

ON Close VSA to improve performance and minimize memory usage
OFF Keep VSA running to allow faster recall of additional .setx files

Remote Command	:MMEMory:LOAD:EVM:VSA:RELease 0 1 OFF ON :MMEMory:LOAD:EVM:VSA:RELease?
Example	:MMEM:LOAD:EVM:VSA:REL 1 :MMEM:LOAD:EVM:VSA:REL?
Preset	OFF
State Saved	No
Range	OFF ON

7.2.17.2 Custom IQ Constellation State

Selects a text (**.txt**) file from which to import the Constellation States definition for the Custom IQ modulation type. This file format is the same as Signal Studio N7608C Custom IQ constellation file format and VMA Digital Demod measurement Custom IQ. To use a recalled constellation, change the PDSCH/PUSCH MCS to -1, then change the modulation format to Custom IQ.

A preloaded **Constellation State** file can be found under VMA directory:

My Documents\VMA\data\DDEMOD\ConstlnState

Remote Command	:MMEMory:LOAD:EVM:CONStln:STATe <string>
Example	Import the constellation state from the file myConstlnState.txt in the current path: :MMEM:LOAD:EVM:CONS:STAT "myConstlnState.txt"
Dependencies	Only appears in 5GNR Mode, in the Modulation Analysis measurement Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Annotation	After recall is complete, an advisory is displayed in the message bar confirming the constellation state was loaded

7.2.18 Loss Comp

Sets the import file type to Loss Compensation Before DUT Table or to Loss Compensation After DUT Table.

Mode	NFIGURE
Parameter Name	Recall Loss Comp
Control Path	Recall
Parameter Type	ImmediateAction
SCPI Command	:MMEMory:LOAD:LOSS BEFore AFTEr,<file_name>
SCPI Example	:MMEM:LOAD:LOSS BEF,"C:\LossBefore.csv" :MMEM:LOAD:LOSS AFT,"C:\LossAfter.csv"
Notes	Three file formats are supported: <ul style="list-style-type: none"> - Loss Compensation file (.csv) - Legacy Loss Compensation file (.loss) - S parameter file (.s2p)
Soft Key Label	Loss Comp
Backwards Compatibility SCPI	:MMEMory:LOAD:LOSS
Initial S/W Revision	A.04.00

For .s2p files, only the S21 component is used for the loss compensation.

The CSV format contains the following data:

File Type

Application Name: Measurement Name

Version and Model Number

Loss Comp Data

Below is an example of a valid CSV Loss Compensation file:

[Filetype LossCompensation]

[NF:NFIG]

Ver. ***, Model ***

10, 1.0000

20, 2.0000

30, 3.0000

40, 4.0000

50, 5.0000

60, 6.0000

7.2.19 Data Pattern

Lets you choose a file from which to import the data pattern for generating an NRZ waveform to be used by the Audio Generator ARB.


Data Pattern files are CSV files, containing the bit pattern data in a form that can be imported into Excel or similar spreadsheets.

Data Pattern files have the extension **.csv**.

Remote Command	<code>:MMEMory:LOAD:RTS:DATA:PATtern <filename></code>
Example	Import the data pattern from the file <code>myDataPattern.csv</code> in the current path: <code>:MMEM:LOAD:RTS:DATA:PATT "myDataPattern.csv"</code>
Dependencies	Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Annotation	After recall is complete, an advisory is displayed in the message bar confirming the sync pattern strings were loaded
Status Bits/OPC dependencies	Sequential - aborts the current measurement

7.3 Save

The **Save** dialog lets you save states, traces, screen images and other items from the instrument to files on the instrument's internal storage, to removable devices, and to directories on the network. You access the dialog by pressing the **Save** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Save** icon.

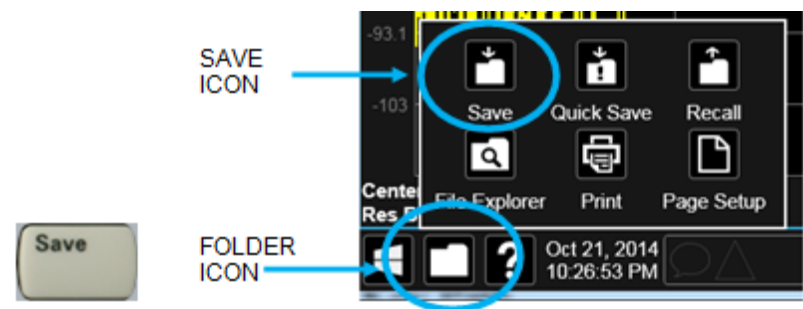

The dialog has tabs running down the left side, which you use to specify what you want to save.




You choose the save item and then complete the save by choosing a register or file location to which to save the item.

Notes No remote command for this key specifically, but **:MMEM:STORE** is available for specific file types
Example: **:MMEM:STORE:STATE <filename>**

7.3.1 Save to File / Save As

For every Save type, a control appears labeled **Save to File** or **Save As**. **Save to File** appears for save types that also include registers (like State and Trace+State), and **Save As** appears for all other save types.

When you press **Save to File** or **Save As**, a dialog slides in from the right that allows you to see what files are already saved in the current directory.

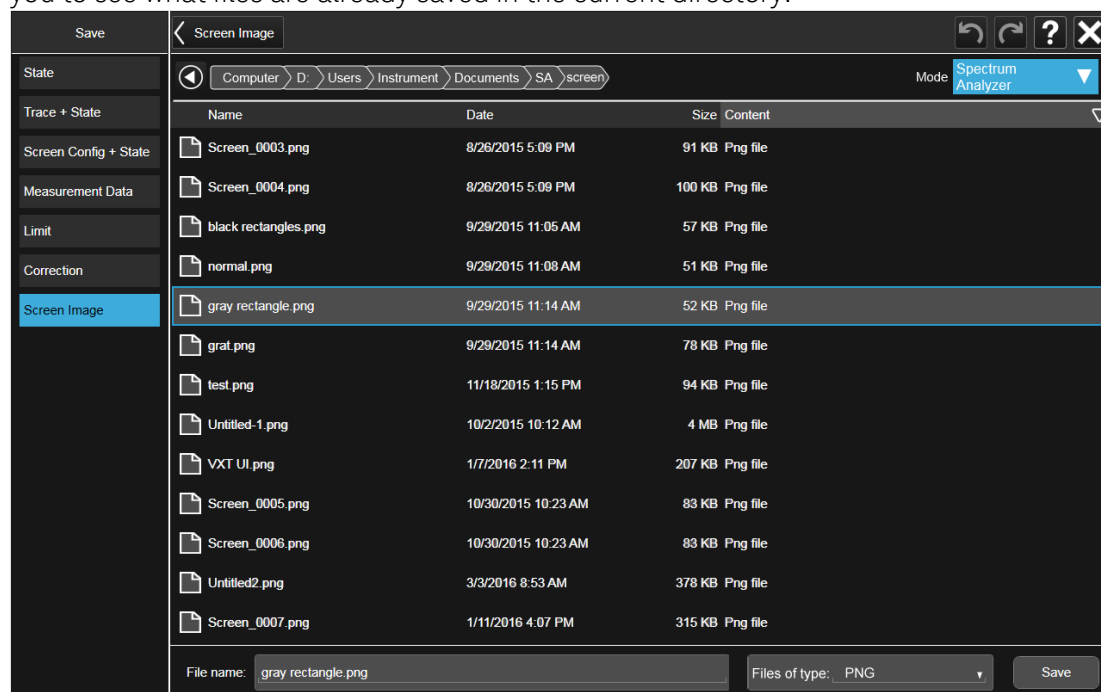

The default directory is the internal directory for the current Mode and save type, on

the **D:** drive. You may also change to another Mode's state directory by pressing the dropdown in the upper right corner labeled **Mode**. Once you have chosen a directory, the files in that directory whose extension matches the current data type (for example, **.state** or **.trace**) are displayed in the right-hand window of the dialog. You can sort this list by name, date, file size or extension by tapping the Name, Date, Size, or Content header at the top of each column. A second tap toggles the sort order between Ascending and Descending.

Also displayed is a path depiction showing the path to the current directory. In the example above, the path is **D:\Users\Instrument\Documents\SA\screen**. Tapping any element of this path lets you select an alternate route. Tapping the **Computer** arrow lets you select a different drive.



Tapping the "Back" arrow navigates to the previously selected directory.

Note: Using the C: drive is strongly discouraged, due to the risk of data being overwritten during an instrument software upgrade.

If you plug in a removable drive (for example, a thumb drive), the browser immediately navigates to the root of that drive. Furthermore, if you had a thumb drive in and you were in a directory on the thumb, and then you exit the browser, when you come back in you are still in the same directory on that removable drive. If you remove the thumb drive, you return to the directory you had been in before the thumb drive was plugged in.

Note that for each data type there is a "current" directory, and it is the last directory used by either Save or Recall for that Mode. For example, if in SA Mode you save a Corrections file to a particular directory, then when you go to recall a Correction in SA Mode, you should be pointing at that directory. Or if in EMC Mode you recall a Limit from a particular directory then when in EMC Mode you go to save a Limit, it should be pointing at that same directory. There is one "current" directory for each data type for each Mode (not one for Save and one for Recall).

The Filename field, just below the Path field, shows the filename that will be used. The **File Name** field is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may edit the filename by tapping it, which brings up the onscreen alpha keyboard. Press the "Done" button on this keyboard when you are done editing.

Select a file to overwrite, type in a file name, or use the name suggested by the instrument (guaranteed not to conflict with any file in the current directory), and press Save. If the file specified already exists, a dialog will appear that allows you to replace the existing file by selecting **OK**, or you can Cancel the request.

After a successful save, a message "File <filename> saved" or "State Register <register number> saved" is displayed in an info box for a few seconds.

See ["Quick Save" on page 3904](#) for details of the automatic file naming algorithm.

7.3.2 State

Selects a register or file for saving the state.

State files contain essentially all the information required to return the instrument to the measurement and settings that were in effect at the time of the save. **State** files are in a proprietary binary form (for speed) and cannot be read or edited by PC software, but can be loaded back into the instrument to restore the state.

State files contain all the settings of the **Input/Output** system as well, even though **Input/Output** variables are outside of the Mode's state and unaffected by **Mode Preset**, because these are needed to restore the complete setup.

Persistent System settings (for example, GPIB address) are affected by neither **Mode Preset** nor **Restore Mode Defaults**, nor are they included in a saved **State** file.

For rapid saving, the **State** menu lists 16 registers to which you can save states. Pressing a **Register** button initiates the save. You can also select a file to which to save by pressing **Save to File**.

The default path for all **State** files is:

My Documents\<mode name>\state

where <mode name> is the parameter used to select the Mode with **:INST:SEL** (for example, **SA** for Spectrum Analyzer Mode).

State files have the extension **.state**. The default filename is **State_0000.state**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

Remote Command	:MMEMory:STORe:STATe <filename>
Example	Store the current instrument state data in the file MyStateFile.state in the default directory: :MMEM:STOR:STATe "MyStateFile.state"
Notes	Both single and double quotes are supported for any filename parameter over remote After saving to a register, that register's menu key is updated with the date the time, unless a custom label has been entered for that key After saving to a register, you remain in the Save State menu, so that you can see the Register key update. After saving to a file, the instrument automatically returns to the previous menu and any Save As dialog goes away

Backwards	:MMEMory:STORe:STATe 1,<filename>
Compatibility	The "1" is simply ignored. The command is sequential
SCPI	

7.3.2.1 Register 1 thru Register 16

Selecting any one of these register buttons causes the state of the currently active Mode to be saved to the specified **Register**. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17-128 are only available from the SCPI interface, using the ***SAV** command.

There is one set of 128 state registers in the instrument, not one set for each Mode. When a state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

The date displayed follows the format specified in the **Date Format** setting under the **Control Panel**. The time shows hours and minutes.

After the save completes, the corresponding register menu key annotation is updated with the date and time and the message **Register <register number> saved** is displayed.

Example	*SAV 1
Range	1-16 from front panel, 1-128 from SCPI

7.3.2.2 Edit Register Names

You may enter a custom name for any of the **Registers**, to help you remember what you are using that state to save. To do this, press the **Name** field for the register you want to rename, which displays the onscreen alpha keyboard. Press **Done** on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

The register names are stored within the state files, but they are not part of the instrument state; that is, once you have edited a register name, loading a new state will not change that register name. Another consequence of this is that the names will be persistent through a power cycle. Also, if a named state file is transferred to another instrument, it will bring its custom name along with it.

If you try to edit the name of an empty register, the instrument first saves the state to have a file to put the name in. If you load a named state file into an instrument with older firmware, it ignores the metadata.

The ***SAV** and ***RCL** commands are not affected by the custom register names, nor are the **:MMEM** commands.

Remote Command	:MMEMory:REGister:STATe:LABel <reg number>,"label" :MMEMory:REGister:STATe:LABel? <reg number>
Example	:MMEM:REG:STAT:LAB 1,"my label"
Notes	<reg number> is an integer from 1 to 16. If the SCPI specifies an invalid register number an error message is generated, -222, "Data out of range; Invalid register label number" "label" is a string from 0 to 30 characters in length. If a label exceeds 30 characters, an error message is generated, -150, "String data error; Label clipped to 30 characters" "label" of zero length erases the custom label and restores the default (time and date) label. For example, :MMEM:REG:STAT:LAB 1,""
Preset	The names are unaffected by Preset or power cycle but are set to the default label (time and date) on Restore System Defaults>Misc

7.3.3 Trace+State

Selects a register or file for saving selected traces and the state.

Trace+State files contain essentially all the information required to return the instrument to the measurement and settings that were in effect at the time of the save, as well as the data for one or all traces. **Trace+State** files are in a proprietary binary form (for speed) and cannot be read or edited by PC software, but can be loaded back into the instrument to restore the state and trace(s).

Trace+State files contain all the settings of the **Input/Output** system as well, even though **Input/Output** variables are outside of the Mode's state and unaffected by **Mode Preset**, because these are needed to restore the complete setup.

Persistent **System** settings (for example, GPIB address) are affected by neither **Mode Preset** nor **Restore Mode Defaults**, nor are they included in a saved **Trace+State** file.

For rapid saving, the **Trace+State** menu lists 16 registers to which you can save trace+state files. The **Trace+State** registers are separate registers from the **State** registers. Pressing a **Register** button initiates the save. You can also select a file to which to save by pressing **Save to File**.

The default path for all **Trace+State** files is the same as that for **State** files:

My Documents\<mode name>\state

where <mode name> is the parameter used to select the mode with :INST:SEL (for example, BASIC for IQ Analyzer Mode).

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

Trace+State files have the extension .trace. The default filename is State_0000.trace, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

The Trace+State selection only appears for measurements that support trace saves. It is blanked for modes that do not support trace saves. Saving Trace is identical to saving State except a .trace extension is used on the file instead of .state, and internal flags are set in the file indicating which trace was saved.

See "More Information" on page 3943.

Remote Command	<pre>:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<filename> :MMEMory:STORe:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<integer></pre>
Example	<p>Save the file myState.trace on the default path and flags it as a “single trace” file with Trace 1 as the single trace (even though all of the traces are in fact stored):</p> <pre>:MMEM:STOR:TRAC TRACE1,"myState.trace"</pre> <p>Save the file myState.trace on the default path and flags it as an “all traces” file:</p> <pre>:MMEM:STOR:TRAC ALL,"myState.trace"</pre> <p>Store trace 1 data in trace register 2:</p> <pre>:MMEM:STOR:TRAC:REG TRACE1,2</pre>
Notes	<p>This command actually performs a Save State, which in the Swept SA measurement includes the trace data. However, it flags it (in the file) as a “save trace” file of the specified trace (or all traces)</p> <p>Some Modes and measurements do not have available all 6 traces. The Phase Noise Mode command, for example, is:</p> <pre>:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 ALL,<filename></pre> <p>Some modes and measurements have more than 6 traces available. The Realtime SA Mode command, for example, is:</p> <pre>:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 TRACE7 TRACE8 TRACE9 TRACE10 TRACE11 TRACE12 ALL,<filename></pre> <p>The range for the register parameter is 1-5</p> <p>When you initiate a save, if the file already exists, a dialog will appear that allows you to replace the existing file by selecting OK or you can cancel the request. If you select OK, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p>

Both single and double quotes are supported for any filename parameter over remote
After saving to a register, that register's menu key is updated with the date and time of the save
After saving to a register, you remain in the **Save Trace** menu, so that you can see the **Register** key update. After saving to a file, the instrument automatically returns to the previous menu and any **Save As** dialog goes away

More Information

In measurements that support saving **Traces**, for example, Swept SA, the **Trace** data is saved along with the **State** in the **State** file. When recalling the **State**, the **Trace** data is recalled as well. Traces are recalled exactly as they were stored, including the writing mode and update and display modes. If a Trace was updating and visible when the **State** was saved, it returns updating and visible, and its data will be rewritten right away. When you use **State** to save and recall traces, any trace whose data must be preserved should be placed in **View** or **Blank** mode before saving.

The following table describes the **Trace Save** and **Recall** possibilities:

You want to recall state and one trace's data, leaving other traces unaffected	Save Trace+State from 1 trace. Make sure that no other traces are updating (they should all be in View or Blank mode) when the save is performed	On recall, specify the trace you want to load the one trace's data into. This trace loads in view. All other traces' data will be unaffected, although their trace mode will be as it was when the state save was performed
You want to recall all traces	Save Trace+State from ALL traces	On recall, all traces come back in View (or Blank if they were in Blank or Background when saved)
You want all traces to load exactly as they were when saved	Save State	On recall, all traces' mode and data will be exactly as they were when saved. Any traces that were updating will have their data immediately overwritten

7.3.3.1 Save From Trace

Selects the trace to be saved. The default is the currently selected trace, selected in this this or any other menu with Trace selection. If you have chosen All then it remains chosen until you specifically change it to a single trace, regardless of the trace selected in the **Trace** menu.

When you select a trace, it makes that trace the current trace, so it displays on top of all of the other traces.

7.3.3.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the specified trace(s) and the state of the currently active mode to be saved to the specified register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

There is one set of 16 trace+state registers in the instrument, not one set for each Mode. When trace+state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

The date displayed follows the format specified in the **Date Format** setting in **Control Panel**. The time shows hours and minutes.

After the save completes, the corresponding register menu key annotation is updated with the date and time and the message **Register <register number> saved** is displayed.

Example	*SAV 1
Range	1-16

7.3.3.3 Edit Register Names

You may enter a custom name for any of the registers, to help you remember what you are using that trace+state to save. To do this, press the **Name** field for the register you want to rename, which displays the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

The register names are stored within the trace+state files, but they are not part of the instrument state; that is, once you have edited a register name, loading a new state does not change that register name. Another consequence of this is that the names are persistent through a power cycle. Also, if a named state file is transferred to another instrument, it brings its custom name along with it.

If you try to edit the name of an empty register, the instrument will first save the trace+state to have a file to put the name in. If you load a named state file into an instrument with older firmware, it ignores the metadata.

Remote Command	<code>:MMEMory:REGister:TRACe:LABel <reg number>,"label"</code> <code>:MMEMory:REGister:TRACe:LABel? <reg number></code>
Example	<code>:MMEM:REG:TRAC:LAB 1,"my label"</code>
Notes	<p><code><reg number></code> is an integer from 1 to 16. If the SCPI specifies an invalid register number an error message is generated, -222, "Data out of range; Invalid register label number"</p> <p><code>"label"</code> is a string from 0 to 30 characters in length. If a label exceeds 30 characters, an error message is generated, -150, "String data error; Label clipped to 30 characters"</p> <p><code>"label"</code> of zero length erases the custom label and restores the default (time and date) label, e.g., <code>:MMEM:REG:TRAC:LAB 1,""</code></p>
Preset	The names are unaffected by Preset or power cycle but are set to the default label (time and date) on Restore System Defaults > Misc

7.3.4 Screen Config + State

Saves the complete configuration of all your screens to a file. You choose a file to which to export the data.

Remote Command	<code>:MMEMory:STORe:SCONfig <filename></code>
Example	<p>Store the current screen configuration in the file <code>myScreenConfig.screen</code> in the default directory:</p> <p><code>:MMEM:STOR:SCON "myScreenConfig.screen"</code></p>

7.3.5 Measurement Data

Specifies a data type (for example, trace data) and choose a file to which to export the data.

Measurement Data files are comma-separated Value (CSV) files, and contain the requested data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on relevant instrument settings at the time the save occurred.

The main application of **Measurement Data** files is for importing data to a PC for analysis, but in some cases **Measurement Data** files can also be imported back into the instrument to recreate the data object that existed at the time of the save. For example, most **Trace** data files can be imported back into the instrument.

The default path for **Measurement Data** Files is:

`My Documents\<mode name>\data`

with the subdirectory reflecting the data type and where **<mode name>** is the parameter used to select the Mode with **:INST:SEL** (for example, **SA** for Spectrum Analyzer Mode) and **<measurement name>** is the parameter used to select the measurement with **:CONF** (for example, **SAN** for Swept SA). For example, a Peak Table file from Swept SA in SA Mode would be stored in:

My Documents\SA\data\SAN\results

Measurement Data files have extension **.csv**. The default filename is **Prefix_0000.csv**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory, and “Prefix” is dependent on the data type:

Type	Default Prefix
Traces	Trace_
Measurement Result	MeasR_
Capture Buffer	CapBuf_

For example, the default filename for a trace data file in an empty directory would be **Trace_0000.csv**

7.3.5.1 Save From

Selects the specific item to be saved, for example, if you are exporting trace data you may specify Trace 1, Trace 2, etc.

The default for traces is the currently selected trace, selected in this this or any other menu with Trace selection. If you have chosen **All** then it remains chosen until you specifically change it to a single trace, regardless of the trace selected in the Trace menu. The **All** selection saves all six traces in one CSV file with the x-axis data in the first column and the individual trace data in succeeding columns. The header data and x-axis data in this file reflect the current settings of the measurement. Note that any traces that are in **View** or **Blank** may have different x-axis data than the current measurement settings; but this different x-axis data is *not* output to the file.

Preset	Not part of Preset , but is reset to by Restore Mode Defaults Survives shutdown
--------	--

7.3.5.2 Data Type

You choose the data type to save by using the radio button selection box. Below are the specifications for Data files for each measurement.

Notes	There is no SCPI command for Data Type , as the type is implied in the SCPI command for each item
Dependencies	The Data Type menu for any given measurement only contains data types that are supported by that measurement

Meas Results

Meas Results files contain information that describes the current state of the instrument, as detailed in Meas Result File Contents below.

This command is only available in certain measurements, such as:

- PowerSuite: Channel Power, OBW, ACP, Spectrum Emissions Mask, Spurious Emissions, Power Stat CCDF, Transmit Power, Monitor Spectrum, IQ Waveform
- IQ Analyzer: Complex Spectrum
- Phase Noise: Log Plot and Spot Frequency
- WCDMA: Code Domain, Mod Accuracy, Power Control, and QPSK EVM
- Analog Demod: AM, FM, PM and FM Stereo
- Noise Figure
- Pulse

In general, the data in the Meas Results file matches the data which is returned to a measurement data query (**:FETCh?**, **:READ?**, **:MEASure?**). These queries and the results they return are documented for each measurement, and can be found in the Help for that measurement (or in the manual for that measurement) in the section titled **Remote Command Results**.

In the **MeasResults** file, you will see a column for each value of **n**. Each column contains the value for the corresponding value of **n** in the **Remote Command Results** table.

For example, Complex Spectrum allows values of **n** up to 17, and the **MeasResults** file for Complex Spectrum has 17 columns. So, the data returned when you send **:FETCh:SPECTrum1?** matches the data in the column labeled **MeasResult1** of the Meas Results file. See the example below:

Response to FETCh:SPECTrum1?

```
2.125444221E+01,6.487077992E+07,2.050000000E+02,6.004725051E+07,3.9215
68627E+04,2.370000000E+02,0.000000000E+00,1.000000000E-
07,1.000000000E+00,2.360000000E-05,2.500000000E+01
```

MeasResult1 column from Meas Results file

```
MeasResult1
-21.25444221
64870779.92
```

7 Save/Recall/Print
7.3 Save

205
60047250.51
39215.68627
237
0
1.00E-07
1
2.36E-05
25

In addition, examples of the Meas Results files are given for each data type in the Help below.

Remote Command	:MMEMory:STORe:RESults <string>
Example	:MMEM:STOR:RES "MeasR_0000.csv"
Notes	<p>If the save is initiated via SCPI and the file already exists, the file will be overwritten</p> <p>The SCPI command exports measurement results to the file specified as the parameter in the current path. The default path is:</p> <p>My Documents\<current mode>\data\<measurement name>\results</p> <p>where <mode name> is the parameter used to select the mode with the :INST:SEL command (for example, SA for Spectrum Analyzer Mode) and <measurement name> is the parameter used to select the measurement with the :CONF: command (for example, SAN for the Swept SA measurement)</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>The SCPI parameter is a quoted string, which specifies the filename. Both single and double quotes are supported for any filename parameter over SCPI</p>
Annotation	After the save is complete, an advisory is displayed in the window so that the user can confirm which file was saved
Status Bits/OPC dependencies	Sequential – waits for the previous measurement to complete

CHP Meas Results File Contents

The file contains measurement results, preceded by the following header information.

- File ID string, which is MeasResult
- Mode ID: Measurement ID, for example, SA:CHP

- Firmware rev and model number
- Option string
- Auto Sweep Time Rules
- Average Mode
- Average Number
- Average State
- Center Frequency
- Detector
- Electrical Atten
- Electrical Atten State
- IFGain
- IFGainAuto
- Impedance
- Integ BW
- Internal Preamp
- Internal Preamp Band
- Mechanical Atten
- MechanicalAttenStepEnum
- PSD Unit
- Resolution Band Width
- Resolution Bandwidth Shape
- RRC Filter Alpha
- RRC Filter BW
- RRC Filter State
- Span

7 Save/Recall/Print

7.3 Save

- Sweep Points
- Sweep Time
- Sweep Time Auto
- TriggerSource
- Video Bandwidth
- Y Axis Unit

Following the header entries above is a line containing only **MeasResult1** and **MeasResult2**, which flags the start of the measurement results. Each subsequent line consists of two comma-separated values, the **MeasResult1** value and the **MeasResult2** value.

- **MeasResult1** contains the same results as **:MEAS|:READ|:FETCh:CHPower1**
- **MeasResult2** contains the same results as **:MEAS|:READ|:FETCh:CHPower2**

The exported file is in CSV format. When imported into Microsoft Excel or a similar spreadsheet application, a typical file appears as follows:

MeasResult

SA:CHP

A.10.53	N9030A
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3 EDP	1
EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26 PFR PNC	
RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	
Auto Sweep Time Rules	Normal
Average Mode	Exponential
Average Number	10
Average State	TRUE
Center Frequency	13255000000
Detector	Average
IFGain	FALSE
IFGainAuto	FALSE
Impedance	50
Integ BW	2000000
Internal Preamp	FALSE
Internal Preamp Band	Low
PSD Unit	DbmHz
Resolution Band Width	27000

Resolution Bandwidth Shape	Gaussian
RRC Filter Alpha	0.22
RRC Filter BW	3840000
RRC Filter State	FALSE
Span	3000000
Sweep Points	1001
Sweep Time	0.004933333
Sweep Time Auto	TRUE
TriggerSource	Free
Video Bandwidth	270000
Y Axis Unit	DecibelMilliwatt
MeasResult1	MeasResult2
-76.8141133132837	-95.29174
-139.824413269924	-94.99601
	-94.95281
	-95.17146

OBW Meas Results File Contents

The first lines in the OBW Meas results file consist of header information, as follows.

- File ID string, which is “MeasResult”
- Measurement ID following Mode ID, which is “SA:OBW” for example.
- Firmware rev and model number
- Option string
- Auto Sweep Time Rules
- Average Mode
- Average Number
- Average State
- Center Frequency
- Detector
- Electrical Atten

7 Save/Recall/Print

7.3 Save

- Electrical Atten State
- IFGain
- IFGainAuto
- Internal Preamp
- Internal Preamp Band
- Limit
- Limit State
- Max Hold
- Mechanical Atten
- MechanicalAttenStepEnum
- OBW Percent Pwr
- Resolution Band Width
- Resolution Bandwidth Shape
- Span
- Sweep Points
- Sweep Time
- Sweep Time Auto
- TriggerSource
- Video Bandwidth
- x DB

The data above is followed in the file by a line containing “MeasResult1” and “MeasResult2”. This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of two comma-separated values, for MeasResult1 and MeasResult2 respectively.

The MeasResult1 set in the file corresponds to the data returned by `:MEAS|:READ|:FETCH:OBWidth1`, and the MeasResult2 set corresponds to the data returned by `:MEAS|:READ|:FETCH:OBWidth2`.

The exported file is in CSV format, with a `.csv` extension.

Meas Results File Example

When imported into Microsoft Excel, a typical Meas Results CSV file appears as shown in the example below.

MeasResult	
SA:OBW	
A.10.53	N9030A
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3	1
EDP EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26	
PFR PNC RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	
Auto Sweep Time Rules	Normal
Average Mode	Exponential
Average Number	10
Average State	TRUE
Center Frequency	1.33E+10
Detector	Average
IFGain	FALSE
IFGainAuto	FALSE
Internal Preamp	FALSE
Internal Preamp Band	Low
Limit	5000000
Limit State	FALSE
Max Hold	FALSE
OBW Percent Pwr	99
Resolution Band Width	27000
Resolution Bandwidth Shape	Gaussian
Span	3000000
Sweep Points	1001
Sweep Time	0.004933
Sweep Time Auto	TRUE
TriggerSource	Free
Video Bandwidth	270000
x DB	-26
MeasResult1	MeasResult2
2971020.10835045	-94.3702543927405
-74.9741251886604	-94.1447790390963

ACP Meas Results File Contents

An ACP Meas Results File contains measurement results with the following header information, columns A and B unless otherwise stated:

7 Save/Recall/Print

7.3 Save

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example, **SA:ACP**
- Firmware rev and model number
- Option string
- Auto Scaling
- Auto Sweep Time Rules
- Automatic Trigger Time
- Automatic Trigger Time State
- Average Mode
- Average Number
- Average State
- Bar Graph
- Carrier Coupling (columns A thru S, TRUE or FALSE)
- Carrier Pwr Present (columns A thru S, Yes or No)
- Carrier Spacing (columns A thru S, in Hz)
- Carriers
- Center Frequency
- Center Frequency Step
- Center Frequency Step State
- Detector Auto
- Detector Selection
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay (columns A thru E)
- External Array Trigger Delay State (columns A thru E)

- External Array Trigger Level (columns A thru E)
- External Array Trigger Slope (columns A thru E)
- Filter Alpha (columns A thru S)
- Filter BW
- Filter Type
- Internal Preamplifier
- Internal Preamplifier Band
- Limit Test
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Method
- Meas Type
- Measurement Noise Bandwidth (columns A thru S, in Hz)
- Mechanical Atten
- MechanicalAttenStepEnum
- Method (columns A thru S)
- Noise Correction
- Offset Abs Limit (columns A thru G)
- Offset Fail (columns A thru G)
- Offset Filter Alpha
- Offset Filter BW (columns A thru G)
- Offset Filter Type (columns A thru G)
- Offset Freq (columns A thru G)
- Offset Freq State (columns A thru G)

7 Save/Recall/Print

7.3 Save

- Offset Integ BW (columns A thru G)
- Offset Method
- Offset Rel Lim (Car) (columns A thru G)
- Offset Rel Lim (PSD) (columns A thru G)
- Offset Res BW (columns A thru G)
- Offset Res BW Mode (columns A thru G)
- Offset Video BW (columns A thru G)
- Offset Video BW Mode (columns A thru G)
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Points
- Power Ref
- Power Ref State
- Preselector Adjust
- PSD Ref
- PSD Unit
- Ref Car Freq
- Ref Car Freq State
- Ref Carrier
- Ref Carrier Mode
- Ref Position
- Ref Value
- Res BW

- Res BW Mode
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type
- RFBurst Trigger Slope
- Scale/Div
- Span
- Sweep Time
- Sweep Time Auto
- Trigger Holdoff
- Trigger Holdoff State
- Trigger Source
- Video BW
- Video BW Auto

The file contains this header, followed by a line containing **MeasResult1**, **MeasResult2**, and **MeasResult3**. This line flags the start of the measurement results. Each line of Measurement Results consists of three comma separated values, for **MeasResult1**, **MeasResult2**, and **MeasResult3**.

MeasResult1 contains the same result as **MEAS | READ | FETCh:ACPower1**; **MeasResult2**, **MEAS | READ | FETCh:ACPower2**; **MeasResult3**, **MEAS | READ | FETCh:ACPower3**.

The exported file is in CSV format, with a **.csv** extension. When imported into Microsoft Excel or a similar spreadsheet application, the *first three* columns of a typical file appear as follows:

Column A	Column B	Additional columns (if any)
MeasResult		
SA:ACP		

7 Save/Recall/Print
7.3 Save

Column A	Column B	Additional columns (if any)
A.10.53	N9030A	
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3 EDP EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26 PFR PNC RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	01	
Auto Scaling	True	
Auto Sweep Time Rules	Accy	
Automatic Trigger Time	0.1	
Automatic Trigger Time State	False	
Average Mode	Exponential	
Average Number	10	
Average State	True	
Bar Graph	True	
Carrier Coupling	True	Columns A thru S: True/False
Carrier Pwr Present	Yes	Columns A thru S: Yes/No
Carrier Spacing	5000000	Columns A thru S: Hz
Carriers	1	
Center Frequency	13255000000	
Center Frequency Step	800000	
Center Frequency Step State	True	
Detector Auto	True	
Detector Selection	Average	
Electrical Atten	0	
Electrical Atten State	False	
External Array Trigger Delay	1E-06	Columns A thru E
External Array Trigger Delay State	False	Columns A thru E
External Array Trigger Level	1.2	Columns A thru E
External Array Trigger Slope	Positive	Columns A thru E
Filter Alpha	0.22	Columns A thru S
Filter BW	Minus3dB	
Filter Type	Gaussian	
Internal Preamp	False	
Internal Preamp Band	Low	

Column A	Column B	Additional columns (if any)
Limit Test	False	
Line Trigger Delay	1E-06	
Line Trigger Delay State	False	
Line Trigger Slope	Positive	
Meas Method	IbwSpeed	
Meas Type	TPRef	
Measurement Noise Bandwidth	2000000	Columns A thru S: Hz
Mechanical Atten	10	
MechanicalAttenStepEnum	S2dB	
Method	IBW	Columns A thru S
Noise Correction	False	
Offset Abs Limit	0	0
Offset Fail	Relative	Columns A thru G
Offset Filter Alpha	0.22	
Offset Filter BW	Minus3dB	Columns A thru G
Offset Filter Type	Gaussian	Columns A thru G
Offset Freq	3000000	Columns A thru G
Offset Freq State	True	Columns A thru G
Offset Integ BW	2000000	Columns A thru G
Offset Method	False	
Offset Rel Lim (Car)	-45	Columns A thru G
Offset Rel Lim (PSD)	-28.87	Columns A thru G
Offset Res BW	220000	Columns A thru G
Offset Res BW Mode	True	Columns A thru G
Offset Video BW	22000	Columns A thru G
Offset Video BW Mode	True	Columns A thru G
Periodic Timer Period	0.02	
Periodic Timer Sync Source	None	
Periodic Timer Trigger Delay	1E-06	
Periodic Timer Trigger Delay State	False	
Points	1001	
Power Ref	-76.81 dBm	
Power Ref State	On	
Preselector Adjust	0	

7 Save/Recall/Print
7.3 Save

Column A	Column B	Additional columns (if any)
PSD Ref	-139.82 dBm/Hz	
PSD Unit	DbmHz	
Ref Car Freq	13.255000000 GHz	
Ref Car Freq State	On	
Ref Carrier	1	
Ref Carrier Mode	On	
Ref Position	Top	
Ref Value	-30	
Res BW	220000	
Res BW Mode	False	
RFBurst Trigger Delay	1E-06	
RFBurst Trigger Delay State	False	
RFBurst Trigger Level Abs	-20	
RFBurst Trigger Level Rel	-6	
RFBurst Trigger Level Type	Absolute	
RFBurst Trigger Slope	Positive	
Scale/Div	10	
Span	8000000	
Sweep Time	0.02	
Sweep Time Auto	True	
Trigger Holdoff	0.1	
Trigger Holdoff State	False	
Trigger Source	Free	
Video BW	22000	
Video BW Auto	True	
MeasResult1	MeasResult2	MeasResult3
-76.8058517744559	0	1
0.084790019950006	-76.8058517744559	0
0.0283929128313787	-999	1
... and so on	-999	0
	-999	1

SPUR Meas Results File Contents

A Spurious Emissions Meas Results File contains measurement results with the following header information, columns A and B unless otherwise stated:

- File ID string, which is “MeasResult”
- Measurement ID following Mode ID, which is “SA:SPUR” for example.
- Firmware rev and model number
- Option string
- Abs Start Limit (columns A thru K)
- Abs Stop Limit (columns A thru K)
- Abs Stop Limit Mode (columns A thru K, TRUE or FALSE)
- Auto Scaling
- Auto Sweep Time Rules
- Automatic Trigger Time
- Automatic Trigger Time State
- Average Mode
- Average Number
- Average State
- Detector 1 (columns A thru K)
- Detector 2 (columns A thru K)
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay (columns A thru E)
- External Array Trigger Delay State (columns A thru E)
- External Array Trigger Level (columns A thru E)
- External Array Trigger Slope (columns A thru E)
- Filter Type (columns A thru K)
- IF Gain Auto (columns A thru K, TRUE or FALSE)
- IF Gain State (columns A thru K, TRUE or FALSE)

7 Save/Recall/Print

7.3 Save

- Internal Preamp
- Internal Preamp Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Type
- Mechanical Atten
- MechanicalAttenStepEnum
- Peak Excursn (columns A thru K)
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Pk Threshold (columns A thru K)
- Points (columns A thru K)
- Points Mode (columns A thru K)
- Range State (columns A thru K)
- Ref Value
- Res BW (columns A thru K)
- Res BW Mode (columns A thru K)
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type

- RFBurst Trigger Slope
- Scale/Div
- Spurious Report Mode
- SpurRangeStartFrequencyArray (columns A thru K)
- SpurRangeStopFrequencyArray (columns A thru K)
- Sweep Time (columns A thru K)
- Sweep Time Mode (columns A thru K)
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource
- Video BW (columns A thru K)
- Video BW Mode (columns A thru K)

The data above is followed in the file by a line containing “MeasResult1” to “MeasResult42”. This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of 42 comma-separated values, from the MeasResult1 value to the MeasResult42 value.

The MeasResult1 set in the file corresponds to the data returned by MEAS/READ/FETCH:SPURious1; the MeasResult2 set corresponds to the data returned by MEAS/READ/FETCH:SPURious2, and so on.

The exported file is in CSV format, with a .csv extension.

Meas Results File Example

When imported into Excel, a typical Meas Results file will show the header information above followed by the data. A sample of what the data rows look like appears below. Only the columns for Meas Result 1 through 6 are shown, due to lack of space:

MeasResult 1	MeasResult 2	MeasResult 3	MeasResult 4	MeasResult 5	MeasResult 6
19	-80.27209	-80.87862	-90.94577	-89.27086	-76.77856
1	-78.28497	-80.93996	-91.00485	-90.56063	-76.33968

SEM Meas Results File Contents

SEM Meas Results Files are CSV files, with a **.csv** extension. Each file contains sets of measurement results, preceded by a header section.

The header section items are as follows. They span columns A and B, unless otherwise stated:

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example, **SA:SEM**
- Firmware rev and model number
- Option string
- Automatic Trigger Time
- Automatic Trigger Time State
- Center Frequency
- ChanIntegBW
- ChannelDetector
- ChannelDetectorState
- ChanPwrRefAuto
- ChanResBW
- ChanResBWAuto
- ChanSpan
- ChanSweepTime
- ChanSweepTimeAuto
- ChanSweepTypeAuto
- ChanVbwRbwRatio
- ChanVbwRbwRatioAuto
- ChanVideoBW
- ChanVideoBWAuto

- Electrical Atten
- Electrical Atten Bypass
- Electrical Atten State
- External1 Trigger Delay
- External1 Trigger Delay State
- External1 Trigger Level
- External1 Trigger Slope
- External2 Trigger Delay
- External2 Trigger Delay State
- External2 Trigger Level
- External2 Trigger Slope
- FilterAlpha
- FrontEnd Gain
- FrontEnd Gain Mode
- Input Port
- Internal Preamp
- Internal Preamp Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- LowNoiseAmplifier
- Measure Trace
- Mechanical Atten
- Mechanical Atten Auto
- MergedTraceNumPoints

7 Save/Recall/Print

7.3 Save

- OffsetAverageType
- OffsetDetector
- OffsetDetectorState
- OffsetLimit2ndFailMaskBTS
- OffsetLimit2ndFailMaskMS
- OffsetLimitAbs2ndStartBTS
- OffsetLimitAbs2ndStartMS
- OffsetLimitAbs2ndStopBTS
- OffsetLimitAbs2ndStopMS
- OffsetLimitAbsStartBTS
- OffsetLimitAbsStartMS
- OffsetLimitAbsStopBTS
- OffsetLimitAbsStopMS
- OffsetLimitFailMaskBTS
- OffsetLimitFailMaskMS
- OffsetLimitRelStartBTS
- OffsetLimitRelStartMS
- OffsetLimitRelStopBTS
- OffsetLimitRelStopMS
- OffsetMeasBWbts
- OffsetMeasBWms
- OffsetResolutionBWAutoBTS
- OffsetResolutionBWAutoMS
- OffsetResolutionBWbts
- OffsetResolutionBWms

- OffsetSideBTS
- OffsetSideMS
- OffsetStartFrequencyBTS
- OffsetStartFrequencyMS
- OffsetStateBTS
- OffsetStateMS
- OffsetStopFrequencyBTS
- OffsetStopFrequencyMS
- OffsetSweepTimeAutoBTS
- OffsetSweepTimeAutoMS
- OffsetSweepTimeBTS
- OffsetSweepTimeMS
- OffsetSweepTypeAutoBTS
- OffsetSweepTypeAutoMS
- OffsetSweepTypeBTS
- OffsetSweepTypeMS
- OffsetVbwRbwRatioAutoBTS
- OffsetVbwRbwRatioAutoMS
- OffsetVbwRbwRatioBTS
- OffsetVbwRbwRatioMS
- OffsetVideoBWAutoBTS
- OffsetVideoBWAutoMS
- OffsetVideoBWbts
- OffsetVideoBWMS
- PeakReference

7 Save/Recall/Print

7.3 Save

- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- PowerReference
- PSDReference
- Radio Device
- RefAverageType
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type
- RFBurst Trigger Slope
- RrcFilter
- SemAverageNumber
- SemAverageState
- SemRbwShape
- Span
- Sweep Type
- TotalAtten
- Trace Display
- Trace Math Function
- Trace Math Log Offset
- Trace Math Log Reference

- Trace Math Operand 1
- Trace Math Operand 2
- Trace Update
- TraceTypeArray
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource
- Video Trigger Delay
- Video Trigger Delay State
- Video Trigger Level
- Video Trigger Slope
- ViewCenterFreq
- ViewSelection
- ViewSpan
- XScaleAuto
- XScalePerDiv
- XScaleRefFreq
- XScaleRefPos
- YAutoScaling
- YRefValue
- YScalePerDiv

The header section is followed by a line containing items **MeasResult1** to **MeasResult20**, which flags the start of the measurement results. Each line of Measurement Results consists of 20 comma-separated values, from **MeasResult1** through **MeasResult20**.

MeasResult1 contains the same results as **MEAS/READ/FETCH:SEMask1**; **MeasResult2**, **MEAS/READ/FETCH:SEMask2**; **MeasResult3**, **MEAS/READ/FETCH:SEMask3**; and so on.

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results file displays the header information above, followed by the data section. A sample of the data rows appears below. Only the columns for **MeasResult1** through **MeasResult6** are shown, due to lack of space:

MeasResult1	MeasResult2	MeasResult3	MeasResult4	MeasResult5	MeasResult6	...etc.
-999	0	-13	999	15.59025	-999	
15.59025359	0	-13	999	-999	-999	

CCDF Meas Results File Contents

CCDF Meas Results Files are in CSV format, with a **.csv** extension. Each file contains sets of measurement results, preceded by a header section. The header section contains the following lines:

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example **SA:PST**
- Firmware rev and model number
- Option string
- Automatic Trigger Time
- Automatic Trigger Time State
- CcdfCurrentCounts
- Center Frequency
- Center Frequency Step
- Center Frequency Step State
- Counts
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay
- External Array Trigger Delay State
- External Array Trigger Level

- External Array Trigger Slope
- Gaussian Line
- IF Gain Auto
- IF Gain State
- Info BW
- Internal Preamplifier
- Internal Preamplifier Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Cycles
- MeasInterval
- Mechanical Atten
- MechanicalAttenStepEnum
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Preselector Adjust
- Ref Trace
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type

7 Save/Recall/Print

7.3 Save

- RFBurst Trigger Slope
- Scale/Div
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource

The header section is followed by a line containing items **MeasResult1** through **MeasResult4**. This line forms a header for each set of measurement results, which are listed in subsequent lines. Each line of Measurement Results consists of 4 comma-separated values, from the **MeasResult1** value to the **MeasResult4** value.

The **MeasResult1** set in the file corresponds to the data returned by **MEAS|READ|FETCH:PSTatistic1**; the **MeasResult2** set corresponds to the data returned by **MEAS|READ|FETCH:PSTatistic2**, and so on.

Meas Results File Example

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results file appears as shown in the example below.

MeasResult

SA:PST

A.10.53	N9030A
526 ALV ATP B1X B1Y B25	1
B40 BBA CR3 CRP DCF	
DDA DP2 DRD EA3 EDP	
EMC EP1 ERC ESC ESP EXM	
FSA LFE LNP MAT MPB NFE	
NUL P26 PFR PNC RTL RTS	
S40 SB1 SEC SM1 TVT YAS	
YAV	
Automatic Trigger Time	0.1
Automatic Trigger Time State	FALSE
CcdfCurrentCounts	6087500
Center Frequency	1.33E+10
Center Frequency Step	5000000
Center Frequency Step State	TRUE
Counts	10000000
Electrical Atten	0
Electrical Atten State	FALSE

External Array Trigger Delay	1.00E-06	1.00E-06	
External Array Trigger Delay State	FALSE	FALSE	
External Array Trigger Level	1.2	1.2	
External Array Trigger Slope	Positive	Positive	
Gaussian Line	TRUE		
IF Gain AUto	FALSE		
IF Gain State	FALSE		
Info BW	5000000		
Internal Preamp	FALSE		
Internal Preamp Band	Low		
Line Trigger Delay	1.00E-06		
Line Trigger Delay State	FALSE		
Line Trigger Slope	Positive		
Meas Cycles	1600		
MeasInterval	0.001		
Mechanical Atten	10		
MechanicalAttenStepEnum	S2dB		
Periodic Timer Period	0.02		
Periodic Timer Sync Source	None		
Periodic Timer Trigger Delay	1.00E-06		
Periodic Timer Trigger Delay State	FALSE		
Preselector Adjust	0		
Ref Trace	FALSE		
RFBurst Trigger Delay	1.00E-06		
RFBurst Trigger Delay State	FALSE		
RFBurst Trigger Level Abs	-20		
RFBurst Trigger Level Rel	-6		
RFBurst Trigger Level Type	Absolute		
RFBurst Trigger Slope	Positive		
Scale/Div	2		
Trigger Holdoff	0.1		
Trigger Holdoff State	FALSE		
TriggerSource	Free		
MeasResult1	MeasResult2	MeasResult3	MeasResult4
-73.0651058869747	36.9712197125257	36.7879441171442	
36.9712197125257	36.8850431211499	36.7032368203129	

IQ Waveform Meas Results File Contents

An IQ Waveform Meas Results File contains measurement results with the following header information:

- File ID string, which is “MeasResult”
- Measurement ID following Mode ID, for example, **WCDMA:WAV**
- Firmware rev and model number
- Option string
- Center Frequency
- Input Port
- Info BW
- Capture Time

The data above is followed in the file by a line containing **MeasResult0**, **MeasResult1**, and **MeasResult2**. This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of 3 comma-separated values.

The **MeasResult0** set in the file corresponds to the data returned by **MEAS|READ|FETCh:WAVeform0**; the **MeasResult1** set corresponds to the data returned by **:MEAS|READ|FETCh WAVeform1**, and the **MeasResult2** set corresponds to the data returned by **:MEAS|READ|FETCh WAVeform2**. See **"Remote Command Results" on page 3060** for details.

The exported file is in CSV format, with a **.csv** extension.

Meas Results File Example

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results CSV file appears as shown in the example below.

```
MeasResult
WCDMA:WAV
A.20.10_P0003                                N9040B
503 508 513 526 AKT ALV ATP B1A B1X B1Y B25 B2X    1
B40 B85 CR3 CRP DP2 EA3 EDC EDP EMC EP0 ERC
ESC ESP EXM FBP FP1 FP2 FS1 FS2 FSA FT2 LFE LNP
MPB NF2 NUL P26 PFR RBE RT2 RTL RTS TDS YAV
Center Frequency                                1000000000
```


Input Port	RF	
WAV_InfoBw	100000	
WAV_Used_CaptureTime	0.002	
MeasResult0	MeasResult1	MeasResult2
3.24E-06	8.00E-06	-99.79862
7.28E-08	-96.51288923	-95.87017
2.43E-06	-96.51288923	-101.4529
-4.47E-06	251	-94.5003
7.65E-07	7.796300857	-95.8662
-2.56E-06	-88.71658837	-97.78934
4.79E-07	-125.5631137	-101.0861
5.94E-06		-97.72218
4.71E-06		-96.72934
1.93E-06		-100.7464
4.04E-07		-99.8119

(rows continue until all data is displayed)

5GNR EVM Meas Results

A set of measurement results tables. The Main file contains header information, plus a list of sub-files. The fields in the Main file are as follows:

- File ID string, which is **MeasResult**
- Measurement ID following Mode ID, which is **NR5G:EVM**
- Firmware rev and model number
- Option string
- Center Frequency
- Link Direction
- Component Carrier Bandwidth
- Component Carrier State
- Component Carrier Frequency Range
- Number of Component Carriers

7 Save/Recall/Print

7.3 Save

- Error Summary of each Component Carrier (see [MEAS | READ | FETCH:EVM000001](#) for corresponding data)
- Sub Meas Results Files

The following sub Meas Results Files are also generated:

Result Set	File name
Meas IQ data for each CC: when constellation is displayed	[Main Meas Results File name]_CCxIQMeas.csv
Reference IQ data for each CC: when constellation is displayed	[Main Meas Results File name]_CCxIQRef.csv
Error Vector data for each CC: when error vector trace is displayed	[Main Meas Results File name]_CCxEVM.csv
RE Power for each CC: when demod power trace is displayed	[Main Meas Results File name]_CCxPowerRE.csv
Channel Allocation for each CC: when detected allocation trace is displayed	[Main Meas Results File name]_CCxDetectedAlloc.csv
Decode Bits for each CC: when decoding is turned on	[Main Meas Results File name]_CCxBits.csv
Condition Number for each CC: when MIMO Condition Number trace is displayed	[Main Meas Results File name]_CCxConditionNumber.csv
H Matrix for each CC: when MIMO H Matrix Table is displayed	[Main Meas Results File name]_CCxHMatrix.csv

Meas IQ Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- IQ pair at each resource grid, multiple IQ pairs (one pair for each layer) for MIMO mode

Reference IQ Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index

- Symbol Index
- IQ pair at each resource grid, multiple IQ pairs (one pair for each layer) for MIMO mode

Error Vector Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- Error vector at each resource grid, multiple values (one value for each layer) for MIMO mode

RE Power Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- RE power at each resource grid

Channel Allocation Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- Allocation name at each resource grid, multiple values (one value for each layer) for MIMO mode

Decode Bits Sub Meas Results File

Contains the following information:

- BWP and Allocation name
- Slot index
- Length
- CRC
- Bit sequence (each cell contains up to 1024 Hex symbol)

Condition Number Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- Condition Number at each resource grid

H Matrix Sub Meas Results File

Contains the following information:

- BWP name
- Subcarrier Index
- Symbol Index
- H matrix at each resource grid (averaged for each PDSCH/PUSCH allocation over symbols within each slot)

Transmit On|Off Power Meas Results File Contents

Transmit On|Off Power Meas Results Files are CSV files, with a **.csv** extension. Each file contains sets of measurement results, preceded by a header section.

The header section items are as follows. They span columns A and B, unless otherwise stated:

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID

- Firmware rev and model number
- Option string
- Acquisition Center Frequency
- Auto Timing Adjust
- Average Mode
- Average Number
- Average State
- Burst Repetition Period
- Burst Width
- DL Meas Interval
- DL Meas Offset
- Electrical Atten
- Electrical Atten State
- IF Gain
- Info BW
- Internal Preamp
- Internal Preamp Band
- Meas Range
- Measure Trace
- Mechanical Atten
- Noise Correction
- Noise Floor Extension
- Periodic Timer Trigger Period
- Periodic Timer Trigger Sync Source
- Radio Device

7 Save/Recall/Print

7.3 Save

- Specific Burst Number
- Total Attenuator
- Trace Display (Columns A to C)
- Trace Math Function (Columns A to C)
- Trace Math Log Offset (Columns A to C)
- Trace Math Log Reference (Columns A to C)
- Trace Math Operand 1 (Columns A to C)
- Trace Math Operand 2 (Columns A to C)
- Trace Update (Columns A to C)
- TraceTypeArray (Columns A to C)
- Trigger Source
- UL Meas Interval
- UL Meas Offset

The header section is followed by a line containing items returned by **MEAS/READ/FETCH:PVT**[Time](#)[n]?

Meas Results File Example

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results CSV file appears as shown in the example below.

MeasResult

NR5G:PVT

A.38.00	N9040B
Installed Options	1
Acquisition Center Frequency	1000000000
Auto Timing Adjust	FALSE
Average Mode	Repeat
Average Number	10
Average State	FALSE
Burst Repetition Period	0.005
Burst Width	0.003714286
DL Meas Interval	5

DL Meas Offset	0		
Electrical Atten	2		
Electrical Atten State	TRUE		
IF Gain	FALSE		
Info BW	100000000		
Internal Preamplifier	FALSE		
Internal Preamplifier Band	Low		
Meas Range	SpecificBurst		
Measure Trace	Trace1		
Mechanical Atten	10		
Noise Correction	FALSE		
Noise Floor Extension	Off		
Periodic Timer Trigger Period	0.005		
Periodic Timer Trigger Sync Source	RFBurst		
Radio Device	Bts		
Specific Burst Number	1		
Total Attenuator	12		
Trace Display	TRUE	FALSE	FALSE
Trace Math Function	Off	Off	Off
Trace Math Log Offset	0	0	0
Trace Math Log Reference	0	0	0
Trace Math Operand 1	Trace2	Trace3	Trace1
Trace Math Operand 2	Trace3	Trace1	Trace2
Trace Update	TRUE	FALSE	FALSE
TraceTypeArray	Average	MaxHold	MinHold
Trigger Source	ExtRear		
UL Meas Interval	6		
UL Meas Offset	-2		

7.3.6 Limit

Lets you choose a file to which to export the **Limit** data.

Limit files are CSV files, and contain the limit data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the limit.

The default path for most Limits files is:

My Documents\<mode name>\data\limits

7 Save/Recall/Print

7.3 Save

where **<mode name>** is the parameter used to select the mode with the **:INST:SEL** command (for example, **SA** for Spectrum Analyzer). Hence a **Limit** file from any measurement in Spectrum Analyzer Mode would be stored in:

My Documents\SA\data\limits

The default path for **Limit** files from the Log Plot measurement in Phase Noise Mode is:

My Documents\PNOISE\data\LPL\limits

The default filename is **Limit_0000.csv**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

For backwards compatibility, older limit files with the extension **.lim** can be read into the instrument, but you can only save limits as **.csv** files.

Remote Command	:MMEMory:STORe:LIMit LLINE1 ... LLINE6,<filename>
Example	Save the 2nd Limit Line to the file myLimitLine2.csv in the current path: :MMEM:STOR:LIM LLINE2,"myLimitLine2.csv"
Notes	If the save is initiated via SCPI, and the file already exists, the file will be overwritten Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade Both single and double quotes are supported for any filename parameter over SCPI
Dependencies	Only appears if you have the proper option installed in your instrument In the Log Plot measurement in Phase Noise Mode, there are only three Limit Lines, so the valid parameters are LLINE1 LLINE2 LLINE3
Preset	1 Not part of Preset , but reset by Restore Mode Defaults Survives power cycles
State Saved	The selected Limit number is saved in instrument state
Status Bits/OPC dependencies	Sequential - waits for previous measurement to complete

Limit File Contents

Limits may be exported into a data file with a **.csv** extension. They may be imported from that data file; they may also be imported from a legacy limit file with a **.lim** extension. The **.lim** files meet the specification for limit files contained in the EMI measurement guide, HP E7415A.

.csv file format

Except for information in quotes, limit line files are not case sensitive. Information in bold is required verbatim; other text is example text, and italic text is commentary which should not be present in the file.

The first five lines are system-required header lines, and must be in the correct order:

Limit	<i>Data file type name</i>
"FCC Part 15"	<i>File Description</i>
"Class B Radiated"	<i>Comment</i>
A.01.00.R0001,N9020A	<i>Instrument Version, Model Number</i>
P13 EA3 UK6 ,01	<i>Option List, File Format Version</i>

The next few lines describe the parameters; on export they will be in the order shown, on import they can be in any order. If some parameters are missing, they will revert to the default.

Type, Upper	<i>Upper Lower</i>
X Axis Unit, MHz	<i>MHz S; other units should be converted; this also specifies the domain</i>
Amplitude Unit, dBm	<i>dBm V; all other units should be converted appropriately</i>
Frequency Interpolation, Linear	<i>Logarithmic Linear</i>
Amplitude Interpolation, Logarithmic	<i>Logarithmic Linear</i>
X Control, Fixed	<i>Fixed Relative; on input we consider only the first three characters</i>
Y Control, Fixed	<i>Fixed Relative; on input we consider only the first three characters</i>
Margin, 0	<i>Always in dB. A 0 margin is equivalent to margin off</i>
X Offset, 10	<i>Expressed in the X axis units</i>
Y Offset, 5	<i>Expressed in the Amplitude units</i>

The Amplitude Unit line in the limits file may contain a transducer (formerly "antenna") factor unit, for example:

Amplitude Unit=dBuV/m

Transducer factor units are dBuV/m, dBuA/m, dBpT, and dBG. In this case, the unit is treated exactly as though it were dBuV, meaning that all of the limits are interpreted to have units of dBuV. The box does NOT change Y Axis Units when such a limit is loaded in.

The X-Axis unit also specifies the domain (time or frequency). It is not possible to have both time-domain lines and frequency-domain lines at the same time; if a time-domain line is imported while the other lines are in the frequency domain (or vice-versa), all limit lines will be deleted prior to import.

If the sign of the margin is inappropriate for the limit type (for example a positive margin for an upper limit), the sign of the margin will be changed internally so that it is appropriate.

The remaining lines describe the data. Each line in the file represents an X-Y pair. The X values should be monotonically non-decreasing, although adjacent lines in the file can have the same X value as an aid to building a stair-stepped limit line. To specify a region over which there is no limit, use +1000 dBm for upper limits or -1000 dBm for lower limits.

The data region begins with the keyword **DATA**:

DATA
200.000000,-10.00
300.000000,-10.00
300.000000,-20.00
500.000000,-20.00

.lim file format

This is a legacy format which allows files saved from older instruments to be loaded into the X-Series. *Design of files in this format is not recommended.*

Except for name and description text (which is taken verbatim), limit line files are not case sensitive.

The file may optionally start with a description block, consisting of the single line [DESCRIPTION] followed by arbitrary text. If there is no Limit Line Name header, the description text will be used as the limit line description in the GUI. If there is a Limit Line Name header, the Limit Line Name will be used instead.

Arbitrary text

The header block begins with the single line [HEADER], followed by some or all of the following fields, each with <parameter name>=<parameter value>. Excess white space around the “=” is ignored. If a field is not present or the data is invalid, the value is not changed when the limit line is loaded. Ordering of the fields is unimportant.

Limit Line Name="FCC Part 15;Class B Radiated"	
Type=Upper	Upper Lower
Frequency Unit=MHz	For time domain limits, this should say "Time Unit"
Amplitude Unit=dBm	
Frequency Interpolation=Lin	Log Lin; on input we consider only the first three characters
Amplitude Interpolation=Log	Log Lin; on input we consider only the first three characters
Mode=Fixed	Fixed Relative
Margin=0	Always in dB. A 0 margin is equivalent to margin off
Domain=Frequency	Frequency Time
Delimiter=TAB	

The data block begins with the line [DATA], and consists of any number of segments.

The Data lines represent segments – X1, Y1, X2, Y2. If the list of segments includes a gap in the middle on input, the space inside the gap will be set to ensure the limit does not fail: for upper limits maxtracevalue, for lower limits mintracevalue. If two segments overlap on input, the stricter of the two segments is used – for upper limits the lower segment, for lower limits the upper segment.

Thus, the following segments indicate into a –5 dB limit from 10 MHz to 20 MHz and 30 MHz to 40MHz:

10	–5	20	–5
30	–5	40	–5

If this was an upper limit, this would be translated into the following set of limit points:

10				-5	
20				-5	
20				maxtracevalue	
30				maxtracevalue	
30				-5	
40				-5	
	30	-29.5	88	-29.5	
	88	-33	216	-33	note that we are stair-stepping the line
	230	-35.6	960	-35.6	The gap between 216 MHz and 230 MHz will never fail
	960	-43.5	5000	-43.5	

7.3.6.1 Select Limit

Selects the specific Limit to be saved, for example, Limit 1.

Preset	Not part of Preset , but reset to LLINE1 by Restore Mode Defaults Survives shutdown
--------	---

7.3.7 Correction

Exports Amplitude Corrections files in the PC-readable **.csv** format.

Amplitude Correction files contain the correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the correction.

The default filename is **Ampcor_0000.csv**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

The default path for Corrections files is:

My Documents\amplitudeCorrections

For backwards compatibility, older limit files with the extensions **.amp**, **.cbl**, **.ant** and **.oth** can be read into the instrument, but you can only save corrections as **.csv** files.

See "Correction Data File" on page 3986

Remote Command	:MMEMory:STORe:CORRection 1 ... 8, <filename>
Example	Save Correction 2 to the file myAmpcor.csv on the current path:

7 Save/Recall/Print

7.3 Save

	:MMEM:STOR:CORR 2 "myAmpcor.csv"
Notes	<p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>Both single and double quotes are supported for any filename parameter over SCPI</p>
Dependencies	<p>Corrections are not supported by all measurements. If in a Mode in which some measurements support it, this key is grayed-out in measurements that do not. Does not appear at all if no measurements in the Mode support it</p> <p>Does not appear unless you have the proper option installed in your instrument</p>
Annotation	After save is complete, an advisory is displayed in the message bar confirming which file was saved
Backwards Compatibility SCPI	<p>:MMEMory:STORe:CORRection ANTenna CABLe OTHer USER, <filename></p> <p>For backwards compatibility, ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4</p>

Correction Data File

A Correction Data File contains a copy of one of the instrument correction tables. Corrections provide a way to adjust the trace display for predetermined gain curves (such as for cable loss).

Corrections files are text files in **.csv** (Comma-Separated Values) form, to make them importable into Excel or other spreadsheet programs. The format for Corrections files is as follows:

Line #	Type of field	Example	Notes
1	File type, must be "Amplitude Correction"	Amplitude Correction	May not be omitted
2	File Description (in quotes)	"Correction Factors for 11966E"	60 characters max; may be empty but may not be omitted. If exceeds 60 characters, error -233 Too much data reported
3	Comment (in quotes)	"Class B Radiated"	60 characters max; may be empty but may not be omitted. . If exceeds 60 characters, error -233 Too much data reported
4	Instrument Version, Model #	A.02.06,N9020A	May be empty but may not be omitted
5	Option List, File Format Version	K03 LFE EXM ,01	May be empty but may not be omitted
6	Freq Unit to be used for all frequency values in the file	Frequency Unit, MHz	assumed to be Hz if omitted

Line #	Type of field	Example	Notes
7	Transducer Unit	Antenna Unit, None	If omitted leaves the Transducer unit unchanged. The amplitude unit in the Transducer Unit field is a conversion factor that is used to adjust the Y Axis Units of the current mode, if the mode supports Transducer Units. For more details on transducer correction data, refer to the Input/Output, Corrections key description. Allowable values: dBuV/m, dBuA/m, dBG, dBpT, None
8	Freq Interpolation	Frequency Interpolation, Linear	if omitted leaves the Freq Interpolation unchanged. Allowable values: Linear, Logarithmic
9	Bias value in mA	Bias,0.00	If omitted leaves the Bias value unchanged (added as of A.08.50)
10	Bias State	Bias State,On	If omitted leaves the Bias State unchanged. Allowable values: On, Off (added as of A.08.50)
11	Overlap, two values, Freq1 and Freq2, separated by commas	Overlap,33500,40000	Uses Freq Unit from line 6. Thus, in this example Freq1=33.5 GHz, Freq2= 40.0 GHz (see note below). If omitted leaves the overlap unchanged (added as of A.08.50)
12	DATA marker	DATA	Corrections data begins in the next line

Lines 2 through 5 can be empty but must appear in the file. Lines 6 through 11 are optional, the lines can be left out of the file altogether.

The Overlap row and the two Bias rows apply only to external mixing. Both are read-only, they are never written by the instrument. The only way to insert or modify these rows is to edit the file with a text editor or a spreadsheet editor. These rows are intended for use by mixer manufacturers, as they allow the manufacturer to insert data about how the mixer corrections were generated and how they should be applied. The Bias rows allow you to specify whether to turn Bias on or off when the Correction is turned on and to specify a Bias value (turning off the Correction does not change the Bias, but turning it back on again sets it to the value specified in the file). The Overlap row allows you to specify an overlap region in which two different corrections may be applied. It is expected that in the corrections data itself, there will be TWO corrections values exactly at Max Freq, otherwise Overlap is ignored. The way the overlap is processed is as follows: if at any given time the current instrument Start Freq is greater than Freq 1 and lower than Freq 2, and the current Stop Freq is greater than Freq 2, extend the first correction point at or above Freq 2 down to Freq 1, rather than using the correction data between Freq1 and Freq2.

Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit. Note that the legacy term “Antenna Unit” is still used in the correction file, even though the more modern term “Transducer Unit” is used in the user interface.

Similarly, the Bias rows can only be used in Correction register 1, because there can only be one setting for Bias at any given time. If a Correction file with a Bias or Bias State row is loaded into any Correction register but 1, an error is generated: Mass storage error; Can only load Bias Settings into Correction 1

The data follows the DATA row, as comma separated X, Y pairs; one pair per line.

For example, suppose you have an Antenna to correct for on an N9020A version A.02.06 and the correction data is:

- 0 dB at 200 MHz
- 17 dB at 210 MHz
- 14.8 dB at 225 MHz

Then the file will look like:

- Amplitude Correction
- "Correction Factors for 11966E"
- "Class B Radiated"
- A.02.06,N9020A
- P13 EA3 UK6,01
- Frequency Unit, MHz
- Antenna Unit, dBuV/m
- Frequency Interpolation, Linear
- DATA
- 200.000000,0.00
- 210.000000,17.00
- 225.000000,14.80

The choices for the 1 of N fields in the metadata are as follows:

- Frequency Unit: Hz, kHz, MHz, GHz
- Antenna Unit: dBuV/m, dBuA/m, dBG, dBpT, None
- Frequency Interpolation: Logarithmic, Linear

7.3.7.1 Select Correction

Selects the specific Correction to be saved, for example, Correction 1.

Preset	Not part of a Preset , but reset to Correction 1 by Restore Input/Output Defaults Survives a shutdown
--------	---

7.3.8 SCPI Recorder

Contains controls to allow you to save SCPI recordings.

7.3.8.1 Save To File

Saves SCPI recording content to a file. For details of the SCPI Recording feature, see ["SCPI Recorder" on page 3570](#).

There are two possible file formats:

Type	Extension	Details
Text	.txt	Default
Python Script	.py	Generates a Python script that can be executed in Python environment.. For details, see "Saving a SCPI Recording as a Python Script" on page 3989

The saved file content does not include the label of each recorded entry, just the SCPI mnemonics. The file is saved to the following folder:

`<user_name>:\Documents\Keysight\Infrastructure\ScpiRecording folder`

Saving a SCPI Recording as a Python Script

To execute the generated Python script:

- Install the Python version required by PyVisa
- Download the PyVisa library from: <https://pypi.org/project/PyVISA/>
- Modify the connection string, to specify *your* instrument's connection string

Example Script

An example of the generated script is shown below.

```
# _install location: https://pypi.org/project/PyVISA/
import pyvisa
import re
# connected instrument
_inst = ""
# SCPI Recording commands and queries
# Add/Modify the instrument address to execute the script
_connectionString = 'your instrument connection string here'
#Example SCPI Recording Entries
_recordingEntries = ['Active Mode & Measurement'|':INST:CONF:SA:SANalyzer',
'Query Operation Complete'|'*OPC?',
'Active Mode & Measurement'|':INST:CONF:SA:SANalyzer',
'Query Operation Complete'|'*OPC?',
'Center Frequency'|':SENSe:FREQuency:CENTer 12000000000',
'Freq Offset'|':SENSe:FREQuency:OFFSet 10',
'Ref Level'|':DISPlay:WINDow:TRACe:Y:SCALE:RLEVel 5']
def ConnectToInstrument():
    rm = pyvisa.ResourceManager()
    _inst = rm.open_resource(_connectionString)
    _inst.read_termination = '\n'
    _inst.write_termination = '\n'
    idn = _inst.query('IDN?')
    print("Sending Recording Entries to: " + idn)
def CheckError()
    err = _inst.query('SYST:ERR?')
    return err.lower().find("no error")
def SendCommand(recordingEntry):
    # split the recording entry into label and mnemonic
    labelAndMnemonic = recordingEntry.split('|')
```



```

label = labelAndMnemonic[0]
mnemonic = labelAndMnemonic[1]
# check and see if this is OPC query
opcIndex = mnemonic.find('OPC?')
#if OPC query send the query and get OPC query value
if opcIndex >= 0:
    opcQueryValue = _inst.query(mnemonic)
    print(opcQueryValue)
else:
    print(mnemonic)
    _inst.write(mnemonic)
err = CheckError()
# publish any errors from the previous command
if err:
    print('Error for command ' + label + ': ' + err)
for entry in _recordingEntries
    SendCommand(entry)

```

7.3.9 Mask

The **Mask** data type is used to import and export Mask files for measurements that use masks, such as cellular comms and real-time measurements.

7.3.10 Waveform Sequence

Saves waveform sequences from the ARB memory of an Internal Source. When you open the Save **Waveform Sequence** dialog and press **Save**, the current waveform sequence is saved to the selected directory.

Notes	No remote command, front panel only
Dependencies	Only appears if your hardware includes an Internal Source, such as in VXT

7.3.11 Demod Info

Lets you save various Demod Info data types for later recall.

7.3.11.1 Data Type

Saves the whole Component Carrier setup or Custom IQ constellation definition.

Dependencies	Only appears in the 5GNR EVM measurement, in 5GNR Mode
--------------	--

Channel Configure

You can save component carrier setup (Meas Setup – Component Carriers/Channel Profile) to a file.

You can specify which component carrier to which you wish to save its setup, or “all”, using the Component Carrier dropdown.

The following file formats are supported:

- X-Series Measurement Application 5GNR Component Carrier Setup Files (*.nrcc)

Remote Command	:MMEMory:STORe:EVM:SETup <string>
Example	:MMEM:STOR:EVM:SET "mySetup.nrcc"
Status Bits/OPC dependencies	Sequential - aborts the current measurement

For X-Series Measurement Application 5GNR Component Carrier Setup Files (*.nrcc), the settings below are saved/recalled:

- Mode Level
 - Number of Component Carriers (Meas Setup – Component Carriers)
 - Direction (Meas Setup – Radio)
 - Freq Offset (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Freq Range (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Bandwidth (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Measure Carrier (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
- Meas Level

- MIMO (Meas Setup – Radio)
- Spectrum (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
- Cell ID Auto (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
- Cell ID Value (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
- Configuration Mode (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
- Enabled (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
- N_grid_start (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
- N_grid_size (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
- Channel profile settings (Meas Setup – Channel Profile – Control and User Channels)

Reference IQ data

You can save reference IQ data of the current measurement to a file.

Remote Command	<code>:MMEMory:STORe:EVM:REFerence:IQ <string></code>
Example	<code>:MMEM:STOR:EVM:REF:IQ "mySetup.riq"</code>
Status Bits/OPC dependencies	Sequential - aborts the current measurement

–

7.3.12 Screen Image

Selects a file for saving the contents of the display.

Screen Image files are PNG (Portable Network Graphics) files with the same resolution as the data display. They contain the image that was on the screen before you opened the **Save** dialog. When the **Screen Image** key is pressed, a "thumbnail" of the captured image is displayed, with the note "This is the image that will be saved" below it.

After you have completed the save, a message “File image.png saved” (assuming **image.png** was the filename you used).

NOTE

As of firmware release A.17.50, sending ***CLS** (Clear Status) removes any message displayed on the screen. If you do not want to see the “File saved” message after sending **:MMEM:STOR:SCR** (described below), send the following sequence (substituting your file name for **filename.png**): **:MMEM:STOR:SCR “filename.png”;*CLS**

NOTE

As of firmware release A.19.50, saving a screen image removes any informational message displayed on the screen before it captures the screen. This is useful if you are sending “save image” commands in rapid sequence, as it keeps the “File saved” message from one screen capture from appearing in the next screen capture. Error messages are still captured.

If you send a succession of screen image commands *too* rapidly, the system may not have time to remove the previous message before the next screen capture. Sending screen image commands more rapidly than twice per second is not advised.

The default path for State Files is:

My Documents\<mode name>\screen

where **<mode name>** is the parameter used to select the mode with **:INST:SEL**, for example, **SA** for Spectrum Analyzer Mode.

Screen Image files have extension **.png**. The default filename is **Screen_0000.png**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

After you have completed the save, the **Quick Save** front-panel key lets you quickly repeat the last save performed, using an auto-named file, with new current screen data.

Remote Command	:MMEMory:STORe:SCReen <filename>
Example	Store the current screen image in the file MyScreenFile.png in the default directory: :MMEM:STOR:SCR "myScreen.png"
Backwards Compatibility SCPI	:HCOPy:SDUMp:DATA? returns the screen image in a <DEFINITE LENGTH ARBITRARY RESPONSE DATA> element. The response data is IEEE Block format; the controlling computer can strip the header and store the result as a .png file Blocking Screen Capture (Remote Command Only) This command works <i>only</i> when the measurement is in Single mode (see "Sweep/Measure" on page 3411). When the command is sent, it blocks the SCPI

client, waits for the current refresh to complete, then captures the screen shot and saves it. In some instances, a single measurement is taken, and a screen shot of that measurement is captured.

This command ensures that the last-measured data is refreshed on the screen before it is captured, by blocking the command and waiting for refresh to complete. The command may time out, in which case it must be re-sent.

If timeout occurs, or if the active measurement is in **Continuous** mode, an error is returned.

Remote Command	<code>:MMEMory:STORe:SCReen:BLORked <filename></code>
Example	Wait for the current screen refresh to complete before capturing the screen shot, then store the current screen image in the file <code>MyScreenFile.png</code> in the default directory: <code>:MMEM:STOR:SCR:BLOR "myScreen.png"</code>

7.3.12.1 Theme

Accesses a menu of functions that enable you to choose the theme to be used when saving the screen image. You can choose between themes to be used when saving the screen image.

See ["More Information" on page 3995](#) for examples of the themes.

Remote Command	<code>:MMEMory:STORe:SCReen:THEMe FILLed OUTLine</code> <code>:MMEMory:STORe:SCReen:THEMe?</code>
Example	<code>:MMEM:STOR:SCR:THEM OUTL</code>
Preset	FILLed ; not part of Preset , but reset by Restore Misc Defaults or Restore System Defaults All
Backwards Compatibility SCPI	<code>:MMEMory:STORe:SCReen:THEMe TDCOLOR TDMonochrome FCOLor FMONochrome</code>
Backwards Compatibility Notes	<p>To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from the A-models are mapped as follows:</p> <p>TDCOLOR and TDMonochrome are both mapped to FILLed (exact full color representation of what is on the screen)</p> <p>FCOLOR and FMONochrome are both mapped to OUTLine (uses color for traces and other items, but most filled areas are white)</p> <p>There is no Monochrome theme in B-models, so the A-models monochrome commands yield color</p> <p><code>:MMEM:STOR:SCR:THEM?</code> always returns FILLed or OUTLine, never FCOLOR, FMONochrome, TDCOLOR, or TDMonochrome</p> <p>There is no monochrome theme in the X-Series Touch UI</p> <p>More Information</p>

- The **FILLed** theme is an exact representation of the information on the display
- The **OUTLine** theme eliminates most of the filled areas, in order to save ink when the image is printed. In addition, the yellow trace color is changed to be more orange, to improve visibility against a white background. Note that some objects remain filled. In particular, the selected marker remains filled with the green marker color, in order to distinguish it from the other markers. This is important, as it is the selected marker whose readout appears in the upper right corner of the display

7.3.13 Power Sensor Cal Factor

Selects a file to which to export the Power Sensor Cal factor data.

Cal Factor files are XML files, and contain the cal factor data and header data that gives information on the power sensor.

The default path for **Cal Factor** Files is:

`My Documents\<mode name>\data\PSCF`

where `<mode name>` is the parameter used to select the mode with `:INST:SEL` (for example, `MRECEIVE` for Measuring Receiver Mode). Hence, a **Cal Factor** file from any measurement in the Measuring Receiver mode would be stored in:

`My Documents\MRECEIVE\data\PSCF`

Cal Factor files have the extension `.xml`. The default filename is `<Sensor Model>_<Sensor Serial Number>_0000.xml`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. If the sensor model or serial number is blank, the default filename is `PSCF_0000.xml`.

Remote Command	<code>:MMEMory:STORe:PSCFactor <file_name></code>
Example	<code>:MMEM:STOR:PSCF "myPSCF.xml"</code>
Notes	<p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>Both single and double quotes are supported for any filename parameter over SCPI</p>
Dependencies	Only appears if you have the proper option installed in your instrument

7.3.14 Recording

Lets you save to a file data being acquired by the measurement, so that it can later be recalled and played back as though it were coming from the input.

You may specify a data type (for example, I/Q data) and choose a file to which to save the data.

The recording and playback of signal data files is a multi-step process that involves controls in several menus.

The menus that are involved in Record/Playback are:

- **Save, Recording** (this menu)
- **Recall, "Recording" on page 3929** (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- **Sweep, Recording** tab
- **Sweep, Playback** tab
- **Input/Output, "Data Source" on page 3783** tab

NOTE

A complete tutorial for the Record/Playback functionality, including how to load and save Recording files, can be found under the **Data Source** tab in **Input/Output**.

Dependencies

Only available in the following Modes and measurements:

- VMA (Digital Demod and Custom OFDM)
- 5G NR (Modulation Analysis)
- LTE (Modulation Analysis)
- WLAN (Modulation Analysis, MIMO Modulation Analysis, Spectral Flatness)
- Analog Demod
- Bluetooth (Transmit Analysis)
- IoT & SRComms (LoRa CSS Demod)

7.3.14.1 Data Type

Lets you save IQ data from the measurement using a specified file type (**CSV**, **SDF**, **TXT**, **BIN**, **BINX**, **BINF**, **ORB**).

CSV	Comma-Separated Values. Excel compatible format. Plain text roughly three times the size of BINF
TXT	Text format. Plain text roughly three times the size of BINF
SDF	Format developed for Keysight 89600 VSA Software. Note that due to differences in the internal file structure, SDF files saved by X-Series are not guaranteed to work perfectly with 89600
BIN	Interleaved 16-bit Q15 signed IQ file, in Big Endian format. Q15 is a DSP format in which the most significant bit is the sign bit, followed by 15 bits of fraction. The Q15 number

7 Save/Recall/Print

7.3 Save

has a decimal range between -32768 and -32767. The data is scaled to fit within this decimal range

BIN files do not include sampling rate information inside the file, there will be associated txt file including sampling rate and scaling information

BINX Interleaved 16-bit Q15 signed IQ file, in Little Endian format. The data is scaled to fit within the decimal range

BINX files do not include sampling rate information inside the file, there will be associated txt file including sampling rate and scaling information

BINF 32-bit IEEE 754 floating-point number in Little Endian format. The data is raw IQ data
BINF files do not include sampling rate information inside the file, there will be associated txt file including sampling rate information

ORB Format developed for Keysight ORAN Studio. This format is only supported by 5GNR, LTEAFDD and LTEATDD Modulation Analysis measurements, LTEAFDD and LTEATDD CEVM measurements

Example **:MMEM:STORe:RECORDing "C:\TEMP\MyIQData.csv"**

7.3.14.2 Channel

Select data channels to save. This is only supported by 5GNR Mode's EVM, VMA Digital Demod, VMA Custom OFDM measurements, and by WLAN Mode's MIMO EVM measurement.

The **<meas>** param in the command must be replaced with the node of the active measurement:

Parameter	Mode	Measurement
EVM	5GNR	EVM
EVMM	WLAN	MIMO EVM
DDEM	VMA	Digital Demod
OFDM	VMA	Custom OFDM

Remote Command	:MMEMory:STORe:<meas>:RECORDing:CHANnel ALL CH1 CH2 CH3 CH4 CH5 CH6 CH7 CH8 :MMEMory:STORe:<meas>:RECORDing:CHANnel?
Example	:MMEM:STOR:EVM:REC:CHAN CH1 :MMEM:STOR:EVM:REC:CHAN?
Preset	ALL
State Saved	No
Range	ALL CH1 CH2 CH3 CH4 CH5 CH6 CH7 CH8

7.3.15 Recording + State

You can save State and IQ recording into a snapshot file (*.rssf).

Remote Command	:MMEMory:STORe:RSTate <filename>
Example	:MMEM:STOR:RST "snapshot1.rssf"
Status Bits/OPC dependencies	Sequential - aborts the current measurement

7.3.16 Component Carrier Setup

You can save component carrier setup (Meas Setup – Component Carriers/Channel Profile) to a file.

You can specify which component carrier to which you wish to save its setup, or “all”, using the Component Carrier dropdown.

The following file formats are supported:

- X-Series Measurement Application 5GNR Component Carrier Setup Files (*.nrcc)

Remote Command	:MMEMory:STORe:EVM:SETup <string>
Example	:MMEM:STOR:EVM:SET "mySetup.nrcc"
Status Bits/OPC dependencies	Sequential - aborts the current measurement

For X-Series Measurement Application 5GNR Component Carrier Setup Files (*.nrcc), the settings below are saved/recalled:

- Mode Level
 - Number of Component Carriers (Meas Setup – Component Carriers)
 - Direction (Meas Setup – Radio)
 - Freq Offset (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Freq Range (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Bandwidth (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)

- Measure Carrier (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
- Meas Level
 - MIMO (Meas Setup – Radio)
 - Spectrum (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Cell ID Auto (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Cell ID Value (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)
 - Configuration Mode (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
 - Enabled (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
 - N_grid_start (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
 - N_grid_size (Meas Setup – Component Carriers – Configure Comp Carriers – Resource Grid)
 - Channel profile settings (Meas Setup – Channel Profile – Control and User Channels)

7.3.17 Remote Only Commands

The following commands execute file system operations such as move, copy, and transfer data from a file.

7.3.17.1 Mass Storage Catalog (Remote Command Only)

Remote Command	:MMEMory:CATalog? [<directory_name>] The string <directory_name> must be a valid logical path. If no string then it uses the current directory
Example	:MMEM:CAT? "C:\"
Notes	Queries disk usage information (drive capacity, free space available) and obtains a list of files and directories in a specified directory in the following format: <numeric_value>,<numeric_value>,\{<file_entry>\} It returns two numeric parameters and as many strings as there are files and directories

The first parameter indicates the total amount of storage currently used in bytes

The second parameter indicates the total amount of storage available, also in bytes. `<file_entry>` is a string. Each `<file_entry>` indicates the name, type, and size of one file in the directory list:
`<file_name>,<file_type>,<file_size>`

As the Windows file system has an extension that indicates file type, `<file_type>` is always empty. `<file_size>` provides the size of the file in bytes. For directories, `<file_entry>` is surrounded by square brackets and both `<file_type>` and `<file_size>` are empty

7.3.17.2 Mass Storage Change Directory (Remote Command Only)

Remote Command	<code>:MMEMory:CDIRectory [<directory_name>]</code> <code><directory_name></code> must be a valid logical path <code>:MMEMory:CDIRectory?</code>
Example	<code>:MMEM:CDIR "C:\Program Files"</code>
Notes	Changes the current directory for a mass memory file system. The <code><directory_name></code> parameter is a string. If no parameter is specified, the directory is set to the <code>*RST</code> value At <code>*RST</code> , this value is set to the default user data storage area, that is defined as <code>System.Environment.SpecialFolder.Personal</code> Query returns full path of the current directory as a quoted string

7.3.17.3 Mass Storage Copy (Remote Command Only)

Remote Command	<code>:MMEMory:COPY <string>,<string>[,<string>,<string>]</code> <code><string></code> must be a valid logical path
Example	<code>:MMEM:COPY "C:\TEMP\Screen_0000.png", "C:\\"</code>
Notes	Copies an existing file to a new file or an existing directory to a new directory If no directory is specified, uses the current directory Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists This command will generate an "access denied" error if the destination is a restricted folder (for example, <code>C:\Windows</code>) and you do not have Power User or Administrator privileges

7.3.17.4 Mass Storage Device Copy (Remote Command Only)

Transfers data to/from a file and a peripheral device.

Remote Command	<code>:MMEMory:COpy:DEvice <source_string>,<dest_string></code> <source_string> and <dest_string> must be valid logical paths
Notes	The strings must be a valid logical path or a valid device keyword. If <code><dest_string></code> is a device keyword, the data is copied from the source file to the device. If <code><source_string></code> is a device keyword, the data is copied to the source file from the device Valid device keywords are: <code>SNS</code> (smart noise source) An error is generated if the file or device is not found

7.3.17.5 Mass Storage Delete (Remote Command Only)

Remote Command	<code>:MMEMory:DELeTe <file_name>[,<directory_name>]</code> <file_name> and <directory_name> must be valid logical paths
Example	<code>:MMEM:DEL "Screen_0000.png"</code>
Notes	If no directory is specified, uses the current directory Removes a file from the specified directory. <file_name> specifies the file name to be removed. This command generates an "access denied" error if the file is in a restricted folder (for example, <code>C:\Windows</code>) and you do not have Power User or Administrator privileges

7.3.17.6 Mass Storage Data (Remote Command Only)

Creates a file containing the specified data or queries the data from an existing file.

Remote Command	<code>:MMEMory:DATA <file_name>, <data></code> <file_name> must be a valid logical path <code>:MMEMory:DATA? <file_name></code>
Example	<code>:MMEM:DATA? "MyFile.txt"</code>
Notes	If no directory is specified, uses the current directory The command form <code>:MMEMory:DATA <file_name>,<data></code> loads <data> into the file <file_name>. <data> is in 488.2 block format. <file_name> is string data The response to <code>:MMEMory:DATA? <file_name></code> is the associated <data> in block format

7.3.17.7 Mass Storage Make Directory (Remote Command Only)

Remote Command	<code>:MMEMory:MDIRectory <directory_name></code> <directory_name> must be a valid logical path
Example	<code>:MMEM:MDIR "C:\TEMP\NewDir"</code>
Notes	Creates a new directory. <directory_name> specifies the name to be created Generates an "access denied" error if the new directory would be in a restricted folder (for example,

`C:\Windows`) and you do not have Power User or Administrator privileges

7.3.17.8 Mass Storage Move (Remote Command Only)

Remote Command	<code>:MMEMory:MOVE <string>,<string>[,<string>,<string>]</code> <code><string></code> must be valid logical paths
Example	<code>:MMEM:MOVE "C:\TEMP\Screen_0000.png", "C:\\"</code>
Notes	<p>Moves an existing file to a new file or an existing directory to a new directory</p> <p>Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination</p> <p>The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists</p> <p>This command generates an "access denied" error if the destination is a restricted folder (for example, <code>C:\Windows</code>) and you do not have Power User or Administrator privileges</p>

7.3.17.9 Mass Storage Remove Directory (Remote Command Only)

Remote Command	<code>:MMEMory:RDIRectory <directory_name></code> <code><directory_name></code> must be a valid logical path
Example	<code>:MMEM:RDIR "C:\TEMP\NewDir"</code>
Notes	<p>Removes a directory. The <code><directory_name></code> parameter specifies the directory name to be removed. All files and directories under the specified directory will also be removed</p> <p>This command generates an "access denied" error if the folder is a restricted folder (for example, <code>C:\Windows</code>) or is in a restricted folder and you do not have Power User or Administrator privileges</p>

7.3.17.10 Mass Storage Determine Removable Media (Remote Query Only)

Used to determine whether any removable media devices are connected to the instrument. Primarily, these are USB memory devices plugged-in to the front panel or rear panel USB ports. On instruments with PC6 or PC7 CPUs, one SD card slot is available for removable media. The instrument's primary disk drive is *not* a removable media device.

Remote Command	<code>:MMEMory:RMEDia:LIST?</code>
Example	<code>:MMEM:RMED:LIST?</code>
Notes	<p>The return value is a string containing a list of partition identifiers, which are removable media devices. Each identifier will be separated by a comma. If no removable media is present, an empty string is</p>

returned

Examples:

- One removable device present results in a return string of "F:"
- Two removable devices present results in a return string of "F:,G:"

No removable devices present results in a return string of ""

7.3.17.11 Mass Storage Determine Removable Media Label (Remote Command Only)

Used to set or query a removable media device's label.

Remote Command	<code>:MMEMory:RMEDia:LABel <partition>,<string></code> <code>:MMEMory:RMEDia:LABel? <partition></code>
Example	<code>:MMEM:RMED:LAB "F:","My Device"</code>
Notes	If the <code><partition></code> specified does not exist or is not a removable media device, the error -252, "Missing Media" is generated Setting the removable media label requires Administrative privileges. If the currently logged-in user does not have appropriate privileges, error "-221, Settings conflict; Administrator privileges required" is generated

7.3.17.12 Mass Storage Determine Removable Media Write-protect status (Remote Query Only)

Used to query a removable media device's write-protect status.

Remote Command	<code>:MMEMory:RMEDia:WPRotect? <partition></code>
Example	<code>:MMEM:RMED:WPR? "F:"</code>
Notes	The return value is 1 if the device is write-protected, and 0 if the device is write-enabled If the <code><partition></code> specified does not exist or is not a removable media device the error -252, "Missing Media" is generated
Preset	The return value depends on the SD card installed

7.3.17.13 Mass Storage Determine Removable Media size (Remote Query Only)

Queries a removable media device's total memory size (not available memory size).

Remote Command	<code>:MMEMory:RMEDia:SIZE? <partition></code>
Example	<code>:MMEM:RMED:SIZE? "F:"</code>

Notes	The return value is integer value in GBytes. Any device that is less than 1 GB returns 0 GB If the <code><partition></code> specified does not exist or is not a removable media device, the error - 252, "Missing Media" is generated
-------	---


7.3.17.14 :SYSTem:SET (Remote Command Only)

Obtains the state of the currently active mode in a form that can then be loaded back into the instrument quickly.

Remote Command	<code>:SYSTem:SET <instrument state in IEEE Block></code> <code>:SYSTem:SET?</code>
----------------	--

Notes	<p>The query returns current instrument state of the active mode in IEEE Block data format. The state is in a machine-readable format only, as follows:</p> <p><code><syst set preamble><state block data></code></p> <p>Where:</p> <p><code><syst set preamble></code> is the format:</p> <p><code>#NMMM</code></p> <ul style="list-style-type: none">- <code>N</code> = number of digits that comprise <code>MMM</code>- <code>MMM</code> = length in bytes of following data <p><code><state block data></code> is machine readable state data</p> <p>Example response: <code>#42016<state data></code></p> <p>The state is recalled by sending the <code>:SYST:SET?</code> response data to the instrument. From example above: <code>:SYST:SET #42016<state data></code></p>
-------	--

7.4 Print

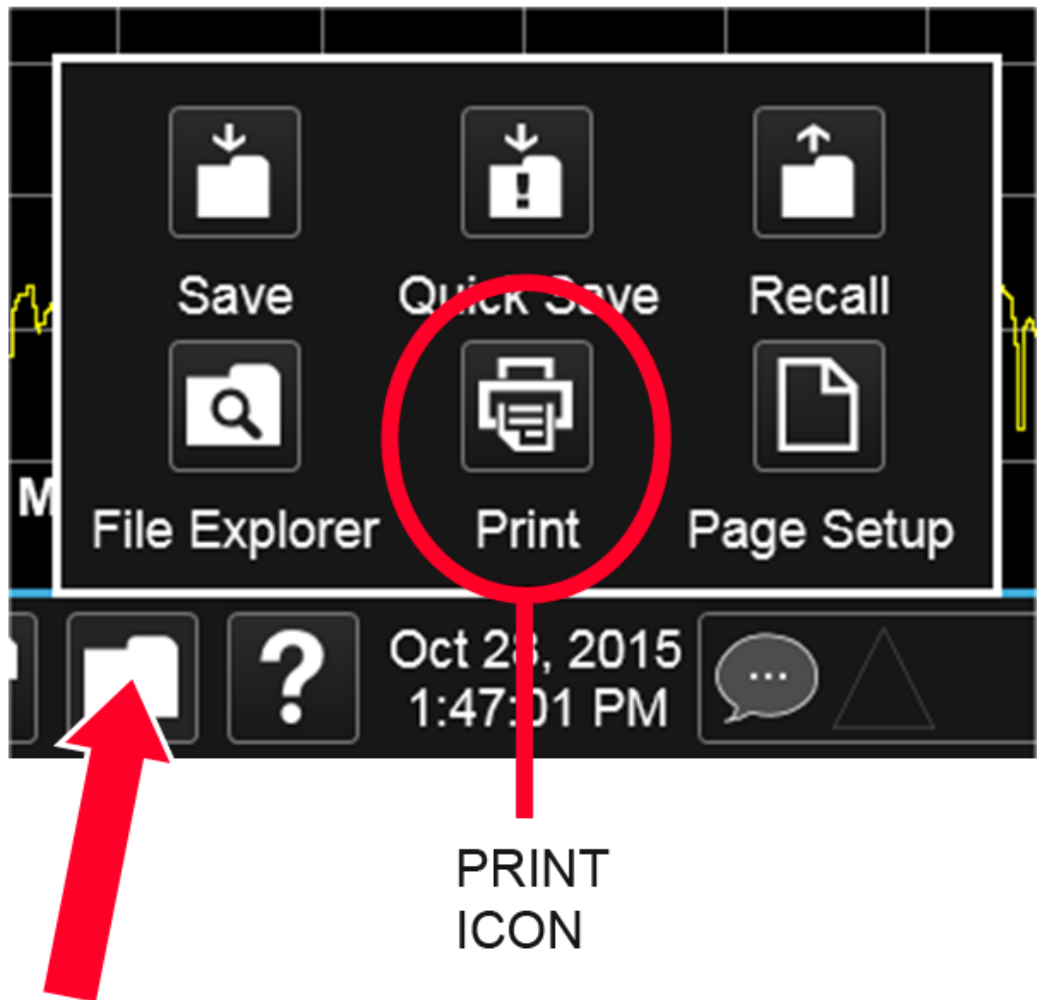

Opens a dialog for configuring printing (to the printer of your choice).


The **:HCOPY** command is equivalent to pressing the **PRINT** key.

Remote Command **:HCOPY[:IMMediate]**

:HCOPY:ABORT can be used to abort a print that is already in progress. Sending **:HCOPY:ABORT** causes the instrument to stop sending data to the printer, although the printer may continue or even complete the print, depending on how much data was sent to the printer before you sent the **:ABORT** command.

Remote Command **:HCOPY:ABORT**

7.5 Page Setup

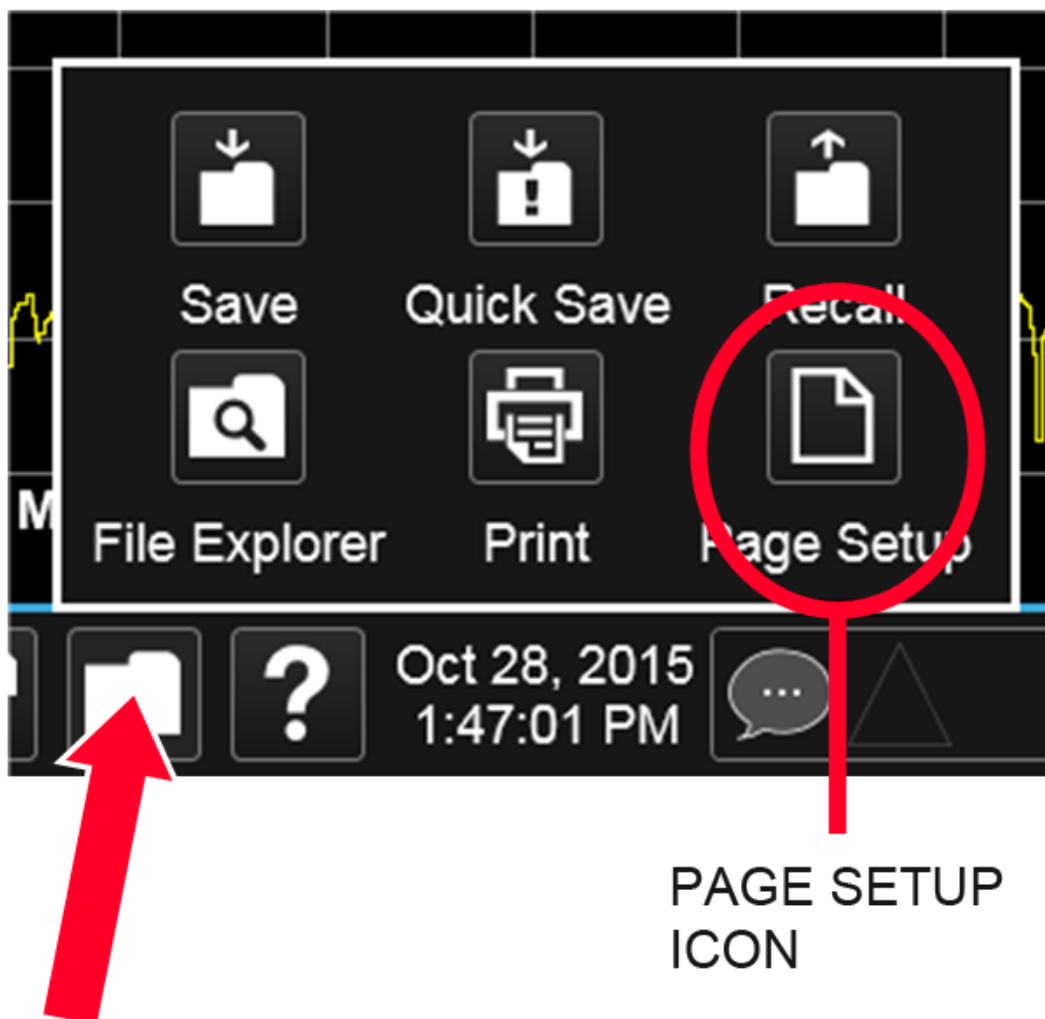

Opens a Windows Page Setup dialog that allows you to control aspects of the pages sent to the printer when the **PRINT** hardkey is pressed.

Depending on the abilities of the attached printer, paper size, paper source, page orientation and margins may all be set. There are no SCPI commands for controlling these parameters.

The dialog also has a dropdown control to let you select the Display Theme to use when printing. **Page Setup** themes are the same as those for **Screen Image** "Theme" on page 3995.

The **Theme** control has a corresponding SCPI command:

7 Save/Recall/Print
7.5 Page Setup

Remote Command	<code>:SYSTem:PRINt:THEMe FILLed OUTLine</code> <code>:SYSTem:PRINt:THEMe?</code>
Example	<code>:SYST:PRIN:THEM OUTL</code>
Preset	OUTL ; not part of Preset , but reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes
State Saved	No
Backwards Compatibility SCPI	<code>:SYSTem:PRINt:THEMe TDColor TDMonochrome FCOLor FMONochrome</code>
Backwards Compatibility Notes	<p>To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from A-models are mapped as follows:</p> <p>TDColor and TDMonochrome are both mapped to FILLed: Exact full color representation of what is on the screen</p> <p>FCOLor and FMONochrome are both mapped to OUTLine: Uses color for traces and other items, but most filled areas are white</p> <p>There is no Monochrome theme in B-models, so the A-models' monochrome commands yield color</p> <p><code>:SYST:PRINT:THEM?</code> always returns FILLed or OUTLine; never FCOLor, FMONochrome, TDColor, or TDMonochrome</p>

8 Trigger

Controls the **Trigger** system of the instrument. In general, these are functions associated with internal triggers or trigger inputs. Trigger Output functions are configured under **Input/Output**.

Trigger functions are common across multiple Modes and Measurements, although some controls appear only in certain Modes and/or certain Measurements. Additionally, some of the tabs on the **Trigger** menu are only available in certain Modes.

Many of the Trigger functions can be set graphically using the Trigger Setting Diagram. For more information see: ["Trigger Optimization" on page 4055](#)

In general, each Measurement can have a different Trigger, and each Measurement remembers its previous-trigger setting.

8.1 Trigger

Contains controls that let you select the trigger source, and setup of each of the trigger sources. The instrument is designed to allow triggering from many sources, for example, Free Run, Video, External, RF Burst, etc.

In general, each Measurement can have a different Trigger Source, and each Measurement remembers its previous-Trigger Source.

8.1.1 Select Trig Source

Specifies the trigger source for the currently selected instrument input (RF or I/Q). If you change inputs, the new input remembers the trigger source it was last programmed to for the current measurement and uses that trigger source. When in External Mixing, the instrument uses the RF trigger source. You can directly set the trigger source for the RF Input and for the I/Q input using SCPI commands; see ["Trigger Source Presets" on page 4018](#), ["RF Trigger Source \(Remote Command Only\)" on page 4020](#), and ["I/Q Trigger Source \(Remote Command Only\)" on page 4022](#).

In general, each Measurement can have a different Trigger Source, and each Measurement remembers its previously-set Trigger Source. Not every Trigger Source is available for every Measurement, so the available choices for Select Trig Source may vary from Mode to Mode and Measurement to Measurement. The trigger sources that are available for each measurement are shown in the "List of Available Trigger sources" dropdown below.

Note that the controls available on the Trigger Tab change depending on which trigger source is selected. Tap each trigger source in the table in the "List of Available Trigger sources" dropdown to see what parameters are available for that trigger source.


Note that most measurements require the inclusion of a <measurement> parameter in the Trigger Source command. However, for the Swept SA measurement and RTSA this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement or RTSA.

Waiting for Trigger

After you select a trigger source, the instrument will start its next measurement when that trigger source is satisfied. For example, if you choose External 1, the next measurement will start when the appropriate signal appears at the Trigger 1 In connector.

If the trigger source is not satisfied (for example, if no signal at the appropriate level appears at the Trigger 1 In connector), after approximately 2 seconds a popup

message will appear that says, "Waiting for trigger". The trigger annotation in the Meas Bar will also turn amber, as shown below:

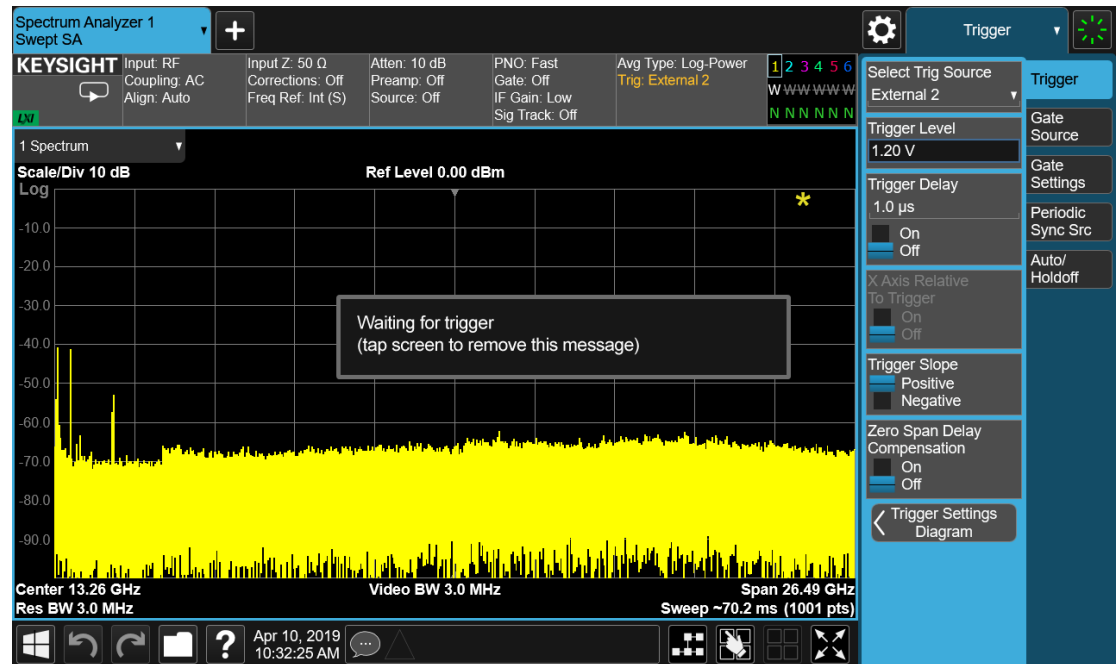

Tap anywhere on the screen (except on the message itself) to clear the popup. The annotation will remain amber until the trigger conditions are satisfied.

List of available Trigger sources

The tables show which Trigger sources are available for which Modes and Measurements, with the following exceptions:

- the Noise Figure Mode does not support Triggering at all
- the Disturbance Analyzer measurement in the EMI Mode does not support Triggering
- the Tx Band Spur measurement in the GSM/EDGE Mode does not support Triggering
- For some models (like N9042B) with ADC trigger: some IF Paths do not support Video trigger, instead they support ADC trigger

"Free Run" on page 4023

IMMediate

All Modes and measurements, except those measurements that support no triggers at all

"Video/ADC" on page 4023

VIDeo

All Modes except RTSA and Pulse

In Spectrum Analyzer Mode, all measurements except ACP and List Sweep

In WCDMA, MSR, Short Range Comms, VMA and LTE, all measurements

8 Trigger

8.1 Trigger

		except ACP
		In WLAN, all measurements
		In Phase Noise, all measurements except Log Plot and Spot Frequency
"ADC Trigger" on page 4024	ADC	All Modes and measurements supporting Video or Level, except Spectrum Analyzer mode
		Only supported in certain model's IF Paths
"Line" on page 4025	LINE	All Modes except EMI, Avionics and Analog Demod
		In Spectrum Analyzer, all measurements except List Sweep
		In WLAN and GSM/EDGE, all measurements except Power vs. Time
		In LTE and 5G NR, all measurements except Transmit On/Off Power
		In Short Range Comms, all measurements except Modulation Analysis
		In MSR, all measurements
Level [Mode: RTSA, PULSEX]	LEVel	RTSA and Pulse Modes only
FMT [Mode: RTSA, PULSEX]	FMT	RTSA and Pulse Modes only
"External 1" on page 4025	EXTernal1	All Modes and measurements
"External 2" on page 4026	EXTernal2	All Modes and measurements
"External 3" on page 4027	EXTernal3	See "External 3 Support" on page 4013
"RF Burst" on page 4028	RFBurst	All Modes except EMI
		In Spectrum Analyzer, all measurements except List Sweep
"Periodic" on page 4029	FRAMe	All Modes except EMI
		In Spectrum Analyzer, all measurements except List Sweep
TV [Mode: SA]	TV	Spectrum Analyzer Mode only, and only in the Swept SA measurement

I/Q Triggers

"I/Q Mag" on page 4031	IQMag	All Modes except EMI, Avionics, RTSA, Analog Demod and Pulse
"Input I" on page 4031	IINPut	In Spectrum Analyzer, only in Power Stat CCDF and Burst Power
"Input Q" on page 4032	QINPut	In WCDMA, only in Power Stat CCDF and IQ Waveform
"I (Demodulated)" on page 4032	IDEMod	In GSM/EDGE, only in EVM, GMSK Phase & Freq Error, Transmit Power and IQ Waveform
"Q (Demodulated)" on page 4033	QDEMod	In Phase Noise, only in IQ Waveform
"Aux I/Q Mag" on page 4033	AIQMag	In Bluetooth, only in Transmit Analysis
"PXI" on page 4034	PXI	In LTE, only in Power Stat CCDF, Modulation Analysis, Conformance EVM, and IQ Waveform
"Internal" on page 4034	INTernal	In WLAN, only in Power Stat CCDF, Modulation Analysis, Spectral Flatness, and IQ Waveform
"Audio External" on page 4028	AEXTernal	In Short Range Comms, only in Power Stat CCDF and Modulation Analysis
"Prot Channel Detection" on page 4035	PRTChandet	In VMA, only in Power Stat CCDF, Digital Demod and IQ Waveform
"Prot Frame Aligned" on page 4035	PRTFrame	In CQM, only in Group Delay, Power Stat CCDF, and IQ Waveform
"Prot Event" on page 4036	PRTEvent	All Modes and measurements (only found in modular analyzers)

External 3 Support

Trigger Source **External 3** is available only in certain Modes and measurements, as follows:

5G NR	Transmit On Off, Modulation Analysis, Power Stat CCDF, and IQ Waveform measurements only
ADEMOD	Not supported
AVIONICS	Not supported
BT	Not supported
CQM	Group Delay, Power Stat CCDF, and IQ Waveform measurements only
EMI	Not supported
GSMEDGE	IQ Waveform and Transmit Power measurements only
LTEAFDD,	Power Stat CCDF, IQ Waveform, and Transmit On Off measurements only

8 Trigger

8.1 Trigger

LTEATDD	
MSR	Power Stat CCDF, and IQ Waveform measurements only
PA	Power Amplifier measurement
PNOISE	IQ Waveform measurement only
PULSEX	Pulse measurement only
SA	Power Stat CCDF and Burst Power measurements only
SRCOMMS	Modulation Analysis, Power Stat CCDF, and IQ Waveform measurements only
VMA	Digital Demod, Custom OFDM, IQ Waveform, and Power Stat CCDF measurements only
WCDMA	QPSK EVM, Power Stat CCDF, and IQ Waveform measurements only
WLAN	Spectral Flatness, Modulation Analysis, Power Vs Time, Power Stat CCDF, and IQ Waveform measurements only

Backwards Compatibility SCPI

The following SCPI commands are provided for Backwards Compatibility:

Backwards Compatibility SCPI	<p>:TRIGger[:SEQuence]:SOURCe EXTernal</p> <p>For backward compatibility, the parameter EXTernal is mapped to EXTernal1</p> <p>[:SENSe]:<measurement>:TRIGger:SOURce</p> <p>This backwards compatibility alias command is provided for ESA/PSA compatibility</p> <p>This backwards compatibility command does not apply to the Swept SA measurement, for that just use :TRIGger:SOURCe</p> <p>This backwards compatibility command does not apply to the monitor spectrum, log plot and spot frequency measurements</p> <p>[:SENSe]:<measurement>:TRIGger:SOURce IF</p> <p>In earlier instruments, the parameter IF was used by apps for the video trigger, so using the IF parameter selects VIDeo triggering. Sending IF in the command causes VID to be returned to a query</p> <p>[:SENSe]:ACPR:TRIGger:SOURce</p> <p>This backwards Compatibility SCPI command is provided to support the same functionality as [:SENSe]:ACPr:TRIGger:SOURce (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to the fact that the ACPr node conflicts with the ACPower node</p> <p>The legacy command:</p> <p>:TRIGger[:SEQuence]:RFBurst:FSElectivity[:STATe] OFF ON 0 1</p> <p>is not supported in the X-Series, as the hardware to do Frequency Selective burst triggers does not exist in X-Series</p>
------------------------------------	--

More Information

The **Trigger** menus let you select the trigger source and trigger settings for a sweep or measurement. In triggered operation (basically, any trigger source other than Free Run), the instrument will begin a sweep or measurement only when the

selected trigger conditions are met, generally when your trigger source signal meets the specified trigger level and polarity requirements. (In FFT measurements, the trigger controls when the data acquisition begins for FFT conversion.)

For each of the trigger sources, you may define a set of operational parameters or settings, which will be applied when that source is selected as the current trigger source. Examples of these settings are Trigger Level, Trigger Delay, and Trigger Slope. You may apply different settings for each source; so, for example, you could have a Trigger Level of 1v for External 1 trigger and -10 dBm for Video trigger.

Once you have established the settings for a given trigger source, they generally will remain unchanged for that trigger source as you go from measurement to measurement within a Mode (although the settings can change as you go from Mode to Mode). Furthermore, the trigger settings within a Mode are the same for the **Trigger** menu, the **Gate Source** menu, and the **Periodic Sync Src** menu. That is, if **Ext1** trigger level is set to 1v in the **Trigger** menu, it will appear as 1v in both the **Gate Source** and the **Periodic Sync Src** menus. For these reasons the trigger settings commands are not qualified with the measurement name, the way the trigger source commands are.


Trigger Setup Parameters:

The following examples show trigger setup parameters using an external trigger source.

Example 1 illustrates the trigger conditions with negative slope and no trigger occurs during trigger Holdoff time.

Example 2 illustrates the trigger conditions with positive slope, trigger delay, and auto trigger time.

8 Trigger
8.1 Trigger

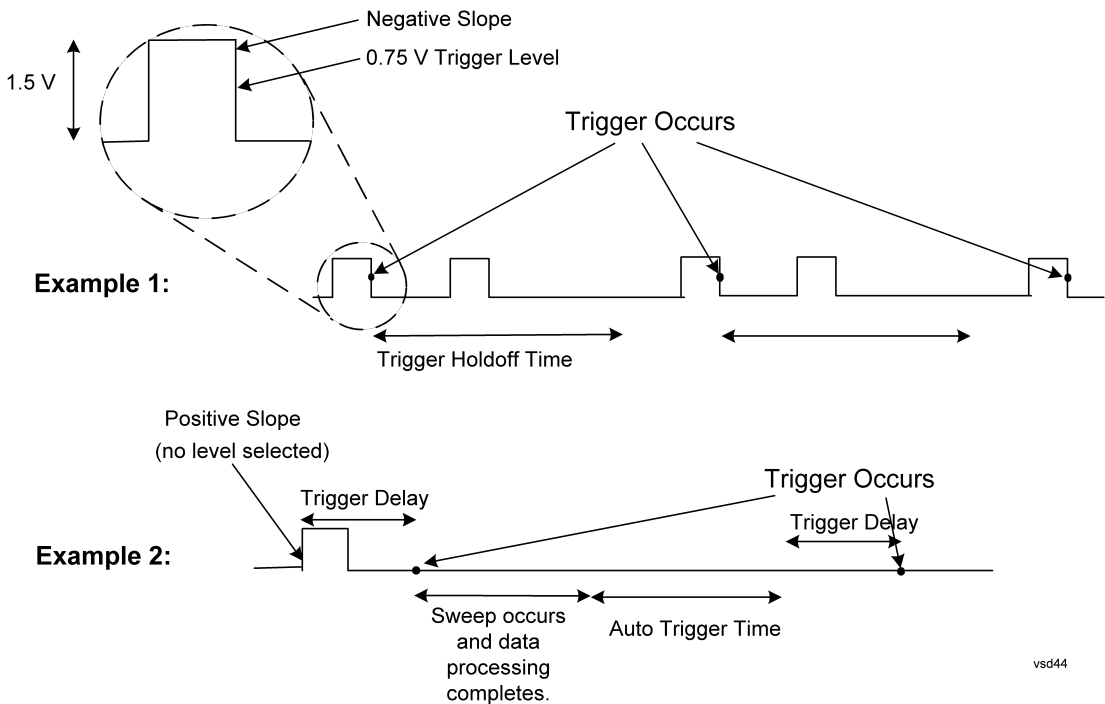

vsd44

Remote Command	<div>Swept SA and RTSA measurements: :TRIGger[:SEquence]:SOURce EXternal1 EXternal2 EXternal3 IMMEDIATE LINE FRAME RFBURST VIDEO TV PXI INTERNAL :TRIGger[:SEquence]:SOURce? All other measurements :TRIGger:<measurement>[:SEquence]:SOURce EXternal1 EXternal2 EXternal3 AEXTERNAL IMMEDIATE LEVEL FMT LINE ADC FRAME RFBURST VIDEO IQMag IDEMod QDEMod IINPut QINPut AIQMag PXI INTERNAL PRTChandet PRTFrame PRTEvent :TRIGger:<measurement>[:SEquence]:SOURce?</div>
Example	<div>The following commands set the External 1 trigger input for various measurements Swept SA and RTSA measurements: :TRIG:SOUR EXT1 Other Spectrum Analyzer Mode measurements: Harmonics: :TRIG:HARM:SOUR EXT1 Power Suite measurements (appear in many Modes): Channel Power: :TRIG:CHP:SOUR EXT1 Occupied BW, Output Spectrum BW: :TRIG:OBW:SOUR EXT1</div>

Notes	<p>For some of the trigger parameters, the tie-in to the parameter is not obvious. These are:</p> <p>IMMediate, selects Free Run</p> <p>FRAMe, selects Periodic Trigger</p> <p>FMT, selects Frequency Mask Trigger</p> <p>AEXternal1, selects Audio External trigger, using the TRIG IN connector on the M9260A Audio Analyzer module</p> <p>For most measurements, the <measurement> keyword follows TRIGger. For Swept SA and RTSA Modes, do <i>not</i> use the <measurement> keyword. Using the wrong command form will result in an Undefined Header error</p> <p>Other trigger-related commands are found in the :INITiate and :ABORt SCPI command subsystems</p> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges and presets can vary from mode to mode</p> <p>FMT (Pulse and RTSA apps):</p> <p>The amplitude resolution of the Frequency Mask is coupled to the Scale/Division. There are 256 vertical points therefore the amplitude resolution is computed using the algorithm: $(10 * \text{Scale/Div}) / \# \text{ Vertical Points}$</p>
Dependencies	<p>Not all trigger sources are available for each input. See the "RF Trigger Source (Remote Command Only)" on page 4020 and "I/Q Trigger Source (Remote Command Only)" on page 4022 commands for detailed information on which trigger sources are available for each input</p> <p>In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXternal12 parameter will generate a "Hardware missing; Not available for this model number" message</p> <p>EXternal13 is available only when Option H1G is installed</p> <p>For the E7760 the only available selections are: EXternal1 IMMediate INTernal RFBurst VIDEo</p> <p>For UXM the only available selections are: EXternal1 IMMediate PRTChandet PRTFrame PRTEvent</p> <p>In the Pulse app, when Option B2X and H1G are installed and Digital IF BW is greater than 255.176 MHz, only three trigger sources, IMMediate, LEVe1, and EXternal13 are available</p> <p>Level Trigger (Pulse and RTSA apps):</p> <p>Level trigger is allowed in average detector mode</p> <p>When Level Trigger is the selected Trigger Source in the Spectrum measurement, Spectrum minimum Acquisition Time is limited to the PVT minimum Acquisition Time. If the Spectrum Acquisition Time changed as a result of going into Level Trigger, a message is posted "Min Acq Time is 200 usec when Level Trigger is ON". When Level Trigger is no longer the selected Trigger Source, Spectrum minimum Acquisition Time is restored</p> <p>FMT (Pulse and RTSA apps):</p> <p>If you were not in Free Run when you entered the FMT Setup View, you can change Trigger Source to Free Run while in the editor. This will allow you to configure the mask with a continually updating trace. When exiting FMT Setup View, the Trigger Source will be changed back to FMT</p>

8 Trigger

8.1 Trigger

	<p>For Power Stat CCDF and IQ Waveform in 5G NR and LTEATDD, switching the radio direction changes this parameter to the preset value</p> <p>In Transmit On Off Power in 5G NR and LTEATDD, the value changes as follows</p> <ul style="list-style-type: none"> - If changed to uplink: Periodic - If changed to downlink: External 1 except for models with the H1G option. With the H1G option, it changes as follows <ul style="list-style-type: none"> - External 1, when Info BW \leq 255 MHz - External 3, when Info BW \geq 256 MHz
Couplings	<p>FMT (Pulse and RTSA apps):</p> <p>A remote user can enter or access FMT data via :TRIGger[:SEquence]:FMT[1]:2:DATA</p> <p>The upper and lower masks can have different freq/ampl pairs therefore subop code 1 is for the upper mask and subop code 2 is for the lower mask</p>
Preset	See "Trigger Source Presets" below
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears

Trigger Source Presets

The following Trigger Source presets are used for these measurements after a Mode Preset or Meas Preset:

Meas	Mode	Preset for RF	Preset for IQ
Swept SA	SA	IMM	IQ not supported
CHP	SA, WCDMA, MSR, SRCOMMS, 5GNR, WLAN	IMM	IQ not supported
OBW	SA, WCDMA, LTEAFDD, LTEATDD, BT, 5GNR, WLAN	1xEVDO: EXT1 Others: IMM	IQ not supported
Transmit Analysis	BT	RFB	IQM
Adjacent Channel Power	BT	IMM	IQ not supported
LE In-band Emissions	BT	IMM	IQ not supported
EDR In-band Spurious Emissions	BT	RF Burst	IQ not supported
CCDF	SA, WCDMA, LTEAFDD, LTEATDD, MSR, SRCOMMS, 5GNR, WLAN, CQM	LTEATDD:	LTEATDD: - BTS: EXT1

Meas	Mode	Preset for RF	Preset for IQ
		<ul style="list-style-type: none"> - BTS: External 1 - MS: Periodic Timer 	<ul style="list-style-type: none"> - MS: FRAM Others: IMM
ACP	SA, WCDMA, LTEAFDD, LTEATDD, MSR, SRCOMMS, 5GNR	IMM	IQ not supported
Tx Power	SA, GSM	RFBurst	IMM
SPUR	SA, WCDMA, MSR, LTEAFDD, LTEATDD, 5GNR, WLAN	IMM	IQ not supported
SEM	SA, WCDMA, MSR, LTEAFDD, LTEATDD, SRCOMMS, 5G NR, WLAN	IMM	IQ not supported
CDP	WCDMA	IMM	IMM
RHO	WCDMA	IMM	IMM
PCON	WCDMA	IMM	IMM
QPSK	WCDMA	EXT1	IMM
MON	All except: SA, BASIC	IMM	IQ not supported
WAV	All except: SA	LTEATDD: <ul style="list-style-type: none"> - BTS: External 1 - MS: Periodic Timer GSM/EDGE: RFBurst All others: IMM	LTEATDD: <ul style="list-style-type: none"> - BTS: EXT1 - MS: FRAM GSM/EDGE: IQM All others: IMM
EVM	LTEAFDD, LTEATDD, SRCOMMS, 5GNR, WLAN	IMM	IMM
PVT	WLAN	RFB	IQ not supported
Spectral Flatness	WLAN	IMM	IMM
SPEC	BASIC	IMM	IMM
LOG Plot	PN	IMM	IQ not supported
Spot Freq	PN	IMM	IQ not supported
GMSK PVT	EDGE/GSM	RFB	IMM
GMSK PFER	EDGE/GSM	RFB	IQM
GMSK ORFS	EDGE/GSM	RFB	IQ not supported
EDGE PVT	EDGE/GSM	RFB	IMM

8 Trigger

8.1 Trigger

Meas	Mode	Preset for RF	Preset for IQ
EDGE EVM	EDGE/GSM	RFB	IQM
EDGE ORFS	EDGE/GSM	Periodic Timer	IQ not supported
Combined WCDMA	WCDMA	IMM	IQ not supported
Combined GSM	EDGE/GSM	RFB	IQ not supported
List Power Step	WCDMA, EDGE/GSM	IMM	IQ not supported
Transmit On/Off Power	LTETDD, LTEATDD, 5G NR	BTS: External 1 (External3 when IFBW \geq 256 MHz with H1G option) MS: Periodic Timer	BTS: EXT1 MS: FRAM
Transmit Analysis	BLUETOOTH	RFB	IQ not supported
Adjacent Channel Power	BLUETOOTH	IMM	IQ not supported
LE In-band Emissions	BLUETOOTH	IMM	IQ not supported
EDR In-band Spurious Emissions	BLUETOOTH	Periodic Timer	IQ not supported
Conformance EVM Spectrum & PVT	LTEAFDD, LTEATDD, MSR	IMM	IMM
	RTSA	IMM	IQ not supported
Pulse	PULSEX	IMM	IQ not supported
AM, FM, PM, FM Stereo	ADEMOD	IMM	IQ not supported
PAVT	SA, 5G NR, VMA	IMM	IMM
Group Delay	CQM	IMM	IMM

RF Trigger Source (Remote Command Only)

Selects the trigger to be used for the specified measurement when RF is the selected input. The RF trigger source can be queried and changed even while another input is selected, but it is inactive until RF becomes the selected input.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement

this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

Remote Command	<pre>:TRIGger:<measurement>[:SEquence]:RF:SOURce EXTernal1 EXTernal2 IMMediate LEVel FMT LINE FRAMe RFBurst VIDEo IF TV PXI INTernal PRTChandet PRTFrame PRTEvent :TRIGger:<measurement>[:SEquence]:RF:SOURce?</pre> <p>Note that the available parameters are model number and hardware dependent</p>																						
Example	<p>Select the external 1 trigger input for the ACP measurement and the RF input:</p> <pre>:TRIG:ACP:RF:SOUR EXT1</pre> <p>Select video triggering for the SANalyzer measurement and the RF input. For SAN, do not use the <measurement> keyword:</p> <pre>:TRIG:RF:SOUR VID</pre>																						
Notes	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available</p> <p>Note that not all trigger sources are available for each input, and that the available parameters are model number and hardware dependent</p> <p>For the RF Trigger Source, the following trigger sources are available:</p> <table> <tr> <td>IMMediate</td><td>free run triggering</td></tr> <tr> <td>VIDeo</td><td>triggers on the video signal level</td></tr> <tr> <td>LEVel</td><td>triggers on the video signal level with time qualified triggering</td></tr> <tr> <td>FMT</td><td>triggers on the amplitude spectrum with frequency mask triggering</td></tr> <tr> <td>LINE</td><td>triggers on the power line signal</td></tr> <tr> <td>EXTernal1 or EXTernal</td><td>triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel of standalone instruments, "Trigger 3" on the front panel of EXM and VXT model M9421A, and "Trigger 1" on the front panel of VXT models M9410A/11A/15A/16A</td></tr> <tr> <td>EXTernal2</td><td>triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel of standalone instruments, and "Trigger 1" on the front panel of EXM and VXT model M9421A, and "Trigger 2" on the front panel of VXT models M9410A/11A/15A/16A. In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal2 parameter will generate a "Hardware missing; Not available for this model number" message</td></tr> <tr> <td>RFBurst</td><td>triggers on the bursted frame</td></tr> <tr> <td>FRAMe</td><td>triggers on the periodic timer</td></tr> <tr> <td>IF (video)</td><td>same as video, for backwards compatibility only</td></tr> <tr> <td>PRTChandet</td><td>triggers on Base Station Emulation detecting a valid UL signal (PUSCH/PUCCH/PRACH/SRS)</td></tr> </table>	IMMediate	free run triggering	VIDeo	triggers on the video signal level	LEVel	triggers on the video signal level with time qualified triggering	FMT	triggers on the amplitude spectrum with frequency mask triggering	LINE	triggers on the power line signal	EXTernal1 or EXTernal	triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel of standalone instruments, "Trigger 3" on the front panel of EXM and VXT model M9421A, and "Trigger 1" on the front panel of VXT models M9410A/11A/15A/16A	EXTernal2	triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel of standalone instruments, and "Trigger 1" on the front panel of EXM and VXT model M9421A, and "Trigger 2" on the front panel of VXT models M9410A/11A/15A/16A. In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal2 parameter will generate a "Hardware missing; Not available for this model number" message	RFBurst	triggers on the bursted frame	FRAMe	triggers on the periodic timer	IF (video)	same as video, for backwards compatibility only	PRTChandet	triggers on Base Station Emulation detecting a valid UL signal (PUSCH/PUCCH/PRACH/SRS)
IMMediate	free run triggering																						
VIDeo	triggers on the video signal level																						
LEVel	triggers on the video signal level with time qualified triggering																						
FMT	triggers on the amplitude spectrum with frequency mask triggering																						
LINE	triggers on the power line signal																						
EXTernal1 or EXTernal	triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel of standalone instruments, "Trigger 3" on the front panel of EXM and VXT model M9421A, and "Trigger 1" on the front panel of VXT models M9410A/11A/15A/16A																						
EXTernal2	triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel of standalone instruments, and "Trigger 1" on the front panel of EXM and VXT model M9421A, and "Trigger 2" on the front panel of VXT models M9410A/11A/15A/16A. In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal2 parameter will generate a "Hardware missing; Not available for this model number" message																						
RFBurst	triggers on the bursted frame																						
FRAMe	triggers on the periodic timer																						
IF (video)	same as video, for backwards compatibility only																						
PRTChandet	triggers on Base Station Emulation detecting a valid UL signal (PUSCH/PUCCH/PRACH/SRS)																						

8 Trigger

8.1 Trigger

	<p>PRTFrame triggers on the Base Station Emulation periodic technology format radio frame with data frame aligned to the BSE timing</p> <p>PRTEvent triggers on the Base Station Emulation events</p> <p>INTernal triggers on the internal source trigger output, for models with an internal source such as VXT</p> <p>PXI trigger only supported in PXI (modular) instruments</p> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges, and presets can vary from mode to mode</p>
Dependencies	<p>The available choices for VXT are: Free Run, Video, Internal, External 1, External 2, RF Burst, Periodic and PXI</p> <p>In VXT, Internal is only in VXT models M9410A/11A/15A/16A, not in models M9420/21A, and Internal and Periodic are not available in Spectrum Analyzer Mode</p> <p>PXI is only found in VXT</p> <p>The available choices for EXM are Free Run, Video, Internal, External 1, External 2, RF Burst, and Periodic</p> <p>The available choices for UXM are Free Run, External 1, Prot Channel Detection, Prot Frame Aligned, and Prot Event</p> <p>Prot Channel Detection, Prot Frame Aligned, and Prot Event are only available in UXM</p> <p>The available choices for E7760 are Free Run, External 1, Internal, Video and RF Burst</p> <p>In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal12 parameter will generate a "Hardware missing; Not available for this model number" error</p>
Status Bits/OPC dependencies	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 seconds. This message goes away when a trigger signal appears</p>
<h3>I/Q Trigger Source (Remote Command Only)</h3> <p>Selects the trigger to be used for the specified measurement when I/Q (which requires option BBA) is the selected input. The I/Q trigger source can be queried and changed even while another input is selected, but it is inactive until I/Q becomes the selected input.</p>	
Remote Command	<pre>:TRIGger:<measurement>[:SEquence]:IQ:SOURce EXTernal1 EXTernal2 IMMEDIATE IQMag IDEMod QDEMod IINPut QINPut AIQMag</pre> <pre>:TRIGger:<measurement>[:SEquence]:IQ:SOURce?</pre>
Example	<pre>:TRIG:WAVEform:SOUR IQM</pre> <p>Selects I/Q magnitude triggering for the IQ Waveform measurement and the I/Q input</p>

Notes	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available</p> <p>Note that not all trigger sources are available for each input, and that the available parameters are model number and hardware dependent</p> <p>For the I/Q Trigger Source, the following trigger sources are available:</p> <table> <tr> <td>IMMediate</td><td>free run triggering</td></tr> <tr> <td>EXTernal1</td><td>triggers on an externally connected trigger source on the rear panel or EXTernal</td></tr> <tr> <td>EXTernal2</td><td>triggers on an externally connected trigger source on the front panel</td></tr> <tr> <td>IQMag</td><td>triggers on the magnitude of the I/Q signal</td></tr> <tr> <td>IDEMod</td><td>triggers on the I/Q signal's demodulated I voltage</td></tr> <tr> <td>QDEMod</td><td>triggers on the I/Q signal's demodulated Q voltage</td></tr> <tr> <td>IINPut</td><td>triggers on the I channel's ADC voltage</td></tr> <tr> <td>QINPut</td><td>triggers on the Q channel's ADC voltage</td></tr> <tr> <td>AIQMag</td><td>triggers on the magnitude of the auxiliary receiver channel I/Q signal</td></tr> </table> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges, and from mode-to-mode presets can vary</p>	IMMediate	free run triggering	EXTernal1	triggers on an externally connected trigger source on the rear panel or EXTernal	EXTernal2	triggers on an externally connected trigger source on the front panel	IQMag	triggers on the magnitude of the I/Q signal	IDEMod	triggers on the I/Q signal's demodulated I voltage	QDEMod	triggers on the I/Q signal's demodulated Q voltage	IINPut	triggers on the I channel's ADC voltage	QINPut	triggers on the Q channel's ADC voltage	AIQMag	triggers on the magnitude of the auxiliary receiver channel I/Q signal
IMMediate	free run triggering																		
EXTernal1	triggers on an externally connected trigger source on the rear panel or EXTernal																		
EXTernal2	triggers on an externally connected trigger source on the front panel																		
IQMag	triggers on the magnitude of the I/Q signal																		
IDEMod	triggers on the I/Q signal's demodulated I voltage																		
QDEMod	triggers on the I/Q signal's demodulated Q voltage																		
IINPut	triggers on the I channel's ADC voltage																		
QINPut	triggers on the Q channel's ADC voltage																		
AIQMag	triggers on the magnitude of the auxiliary receiver channel I/Q signal																		
Status Bits/OPC dependencies	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears</p>																		

8.1.1.1 Free Run

Free Run triggering occurs immediately after the sweep/measurement is initiated.

Example	<p>Swept SA measurement:</p> <pre>:TRIG:SOUR IMM</pre> <p>Measurements other than Swept SA:</p> <pre>:TRIG:<meas>:SOUR IMM</pre>
Annunciation	Free Run (in the Meas Bar)

8.1.1.2 Video/ADC

The Video trigger condition is met when the video signal at the left edge of the graticule (the filtered and detected version of the input signal, including both RBW and VBW filtering) crosses the video trigger level with the chosen slope.

8 Trigger
8.1 Trigger

The Video trigger level is shown as a labeled line on the display. The line is displayed as long as Video is the selected trigger source. The Trigger Level line can be adjusted using the step keys, knob, or numeric keypad. It can also be dragged on the display with your finger or with a mouse.

When the detector selected for all active traces is the average detector, the video signal for triggering does not include any VBW filtering.

Log Plot and Spot Frequency measurements, in the Phase Noise Mode, do not support Video Trigger.

The **Trigger** tab contains the following Trigger Source dependent controls when Video Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present, which are not dependent on the selected Trigger Source.

Note that Video Trigger is a software trigger of the acquired trace for some measurements and a hardware trigger of the IF envelope for others. Most measurements support one method or the other, although some (like ACP) don't support Video Trigger at all. For those measurements that support Video Trigger as a software trigger, the Trigger Level units will be dependent on the current Y Axis Unit for the measurement; for those that support Video Trigger as an IF Envelope trigger, the units are typically in dBm.

Example	Swept SA measurement: :TRIG:SOUR VID
	Measurements other than Swept SA: :TRIG:<meas>:SOUR VID
Annunciation	Video (in the Meas Bar)

8.1.1.3 ADC Trigger

Some IF Paths in certain models (like N9042B) in IQ Measurements have an ADC trigger. ADC is like the Video trigger, but with 2 limitations due to a lack of post-processing.

First, the trigger is not limited to the current measurement's setup IF BW. The trigger sees everything in the passband, so measurements like IQA Complex Spectrum can be triggered outside of the current Digital IF BW.

The final limitation is, due to lack of post-processing, the amplitude accuracy of the ADC trigger is less than the video trigger.

If ADC trigger is available for at least one IF Path on a model, then the ADC trigger will always be seen as a trigger option in IQ Measurements. However, it will only be available (not grayed out) to select when using IF Paths that support it.

If Video Trigger is selected and measurement setup (IF Path or IF BW) is changed to a path that only supports the ADC trigger instead, then ADC trigger will be selected and *vice versa*.

Example	Measurements other than Swept SA: <code>:TRIG:<meas>:SOUR ADC</code>
Annunciation	ADC (in the Meas Bar)

8.1.1.4 Line

When **Line** is selected, start of a new sweep/measurement will be synchronized with the next cycle of the line voltage.

Line trigger is not available when operating from a "dc power source", for example, when the instrument is powered from batteries.

Line trigger is not available when using modular instruments like the VXT.

The **Trigger** tab contains the following Trigger Source dependent controls when **Line** Trigger is selected:

- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:SOUR LINE</code> Swept SA measurement <code>:TRIG:<meas>:SOUR LINE</code> Measurements other than Swept SA
Annunciation	LINE (in the Meas Bar)

8.1.1.5 External 1

When **External 1** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 1 IN input connector on the rear panel.

Grayed-out if Ext 1 is in use by Point Trigger in the Source Setup menu of Swept SA. Forced to "Free Run" on page 4023 if already selected and Point Trigger is set to External 1.

8 Trigger

8.1 Trigger

The **Trigger** tab contains the following Trigger Source dependent controls when External 1 Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:SOUR EXT1</code> Swept SA measurement <code>:TRIG:<meas>:SOUR EXT1</code> Measurements other than Swept SA
Annunciation	External 1 (in the Meas Bar)

8.1.1.6 External 2

When **External 2** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 2 IN input connector on the rear panel.

Grayed-out if Ext 2 is in use by Point Trigger in the Source Setup menu of Swept SA. Forced to "Free Run" on page 4023 if already selected and Point Trigger is set to External 2.

The **Trigger** tab contains the following Trigger Source dependent controls when External 2 Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:SOUR EXT2</code> Swept SA measurement <code>:TRIG:<meas>:SOUR EXT2</code> Measurements other than Swept SA
Annunciation	External 2 (in the Meas Bar)

8.1.1.7 External 3

When **External 3** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 3 IN input connector on the rear panel.

This control only appears in certain instrument and option combinations, as follows.

- For N9042B, selects the Precision External Trigger, but available only when IF Path is 255 MHz or wider. The resolution will be within one sample count of the 4.8 GHz ADC sampling rate for 255 ~ 2 GHz IF Paths, and within one sample count of the 10.2 GHz sampling rate for the 4 GHz IF Path
- For all other instruments, available only if Option H1G is installed. It is only available when the 1 GHz path is chosen, either directly or indirectly; in all other paths it is visible but grayed-out. Direct and indirect selection of the 1 GHz path occurs as follows:
 - **Direct:** Measurements that directly support the 1 GHz path have a 1 GHz selection in the **IF Path** menu in **Meas Setup**
 - **Indirect:** Certain measurements, such as Power Statistics CCDF (**PST**), always choose the widest available path, and so will choose the 1 GHz path if it is available, even if there is no **IF Path** menu for the measurement. **External 3** will be visible when this results in the 1 GHz path being selected, even if there is no control or readout indicating that the 1 GHz path has been selected

For a full list of Modes and measurements that support **External 3**, see "**External 3 Support**" on page 4013 in the section "**Select Trig Source**" on page 4010.

When **External 3** is set, and then becomes disabled because you switched away from the 1 GHz path, the Trigger Source selection reverts to the default ("**Free Run**" on page 4023).

When **External 3** Trigger is selected, the **Trigger** tab displays the following Trigger Source dependent controls:

- "**Prot Frame Aligned**" on page 4035
- "**Trigger Delay**" on page 4038
- "**Trigger Slope**" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:SPEC:SOUR EXT3 Sets External 3 as the trigger source for the Complex Spectrum measurement
Annunciation	External 3 (in the Meas Bar)

8.1.1.8 Audio External

When **Audio External** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIG IN input connector on the front panel of the M9260A Audio Analyzer module. This is a TTL level input (not analog) that supports both rising edge and falling edge triggers.

Only appears in modular instruments, and only when the M9260A Audio Analyzer module is installed, such as in M8920A.

The **Trigger** tab contains the following Trigger Source dependent controls when Audio External Trigger is selected:

- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:RTES:SOUR AEXT Sets Audio External as the trigger source for the Radio Test measurement
Annunciation	Audio Ext (in the Meas Bar)

8.1.1.9 RF Burst

When **RF Burst** is selected, a new sweep/measurement starts when an RF burst envelope signal is identified from the signal at the RF Input connector.

In some models, a variety of burst trigger circuitry is available, resulting in various available burst trigger bandwidths. The instrument automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the instrument.

The **Trigger** tab contains the following Trigger Source dependent controls when RF Burst is selected:

- "Trigger Level Absolute/Relative" on page 4043
- "Absolute Trigger Level" on page 4044
- "Relative Trigger Level" on page 4044
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:SOUR RFB</code>
	Swept SA measurement <code>:TRIG:<meas>:SOUR RFB</code>
	Measurements other than Swept SA
Annunciation	RF Burst (in the Meas Bar)

8.1.1.10 Periodic

When **Periodic** is selected, the instrument uses a built-in periodic timer signal as the trigger. Trigger occurrences are set by the **Periodic Timer** parameter, which is modified by the **Offset** and Periodic Sync Src.

Use this trigger when there is a periodic signal but no reliable signal on which to trigger. You can synchronize the periodic signal with outside events (using the Periodic Sync Src) to get closer to a reliable trigger signal (see ["More Information" on page 4030](#) below).

If you do not have a sync source selected (**OFF**), then the internal timer will not be synchronized with any external timing events.

The **Trigger** tab contains the following Trigger Source dependent controls when Periodic Trigger is selected:


- ["Period" on page 4046](#)
- ["Offset" on page 4047](#)
- ["Reset Offset Display" on page 4048](#)
- ["Sync Source" on page 4049](#)
- ["Trigger Delay" on page 4038](#)

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:SOUR FRAM</code>
	Swept SA measurement <code>:TRIG:<meas>:SOUR FRAM</code>
	Measurements other than Swept SA
Annunciation	Periodic (in the Meas Bar)

More Information

The graphic below shows the action of the periodic timer trigger.

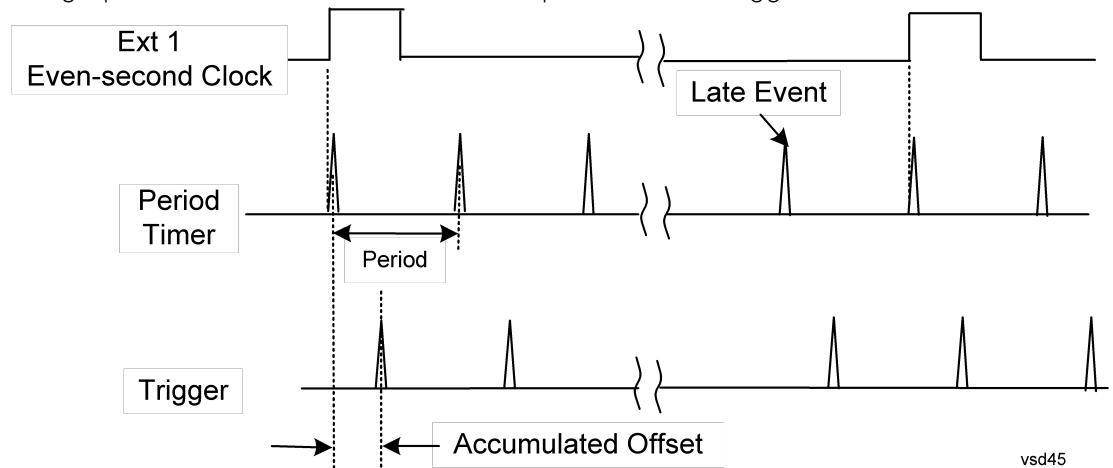

A common application is measuring periodic burst RF signals for which a trigger signal is not easily available. For example, we might be measuring a TDMA radio that bursts every 20 ms. Let's assume that the 20 ms period is very consistent. Let's also assume that we do not have an external trigger source available that is synchronized with the period, and that the signal-to-noise ratio of the signal is not high enough to provide a clean RF burst trigger at all of the analysis frequencies. For example, we might want to measure spurious transmissions at an offset from the carrier that is larger than the bandwidth of the RF burst trigger. In this application, we can set the Periodic Timer to a 20.00 ms period and adjust the offset from that timer to position our trigger just where we want it. If we find that the 20.00 ms is not exactly right, we can adjust the period slightly to minimize the drift between the period timer and the signal to be measured.

A second way to use this feature would be to use **Sync Source** temporarily, instead of **Offset**. In this case, we might tune to the signal in a narrow span and use the RF Burst trigger to synchronize the periodic timer. Then we would turn the sync source off so that it would not miss-trigger. Miss-triggering can occur when we are tuned so far away from the RF burst trigger that it is no longer reliable.

A third example would be to synchronize to a signal that has a reference time element of much longer period than the period of interest. In some CDMA applications, it is useful to look at signals with a short periodicity, by synchronizing that periodicity to the "even-second clock" edge that happens every two seconds. Thus, we could connect the even-second clock trigger to Ext1 and use then Ext1 as the sync source for the periodic timer.

The figure below illustrates this third example. The top trace represents the even-second clock. It causes the periodic timer to synchronize with the leading edge

shown. The instrument trigger occurs at a time delayed by the accumulated offset from the period trigger event. The periodic timer continues to run, and triggers continue to occur, with a periodicity determined by the instrument time base. The timer output (labeled "late event") will drift away from its ideal time due to imperfect matching between the time base of the signal being measured and the time base of the instrument, and also because of imperfect setting of the period parameter. But the synchronization is restored on the next even-second clock event. ("Accumulated offset" is described in the in the **Offset** function section.)

8.1.1.11 I/Q Mag

When **I/Q Mag** is selected, the trigger condition is met when the I/Q magnitude crosses the I/Q magnitude trigger level. The magnitude is measured at the output of the main I/Q digital receiver.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:<meas>:SOUR IQM
Annunciation	I/Q Mag (in the Meas Bar)

8.1.1.12 Input I

When **Input I** is selected, the condition is met when the voltage at the I Input crosses the trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Input I Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

8 Trigger
8.1 Trigger

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:<meas>:SOUR IINP
Annunciation	Input I (in the Meas Bar)

8.1.1.13 Input Q

When **Input Q** is selected, the condition is met when the voltage at the I Input crosses the trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Input Q Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:<meas>:SOUR QINP
Annunciation	Input Q (in the Meas Bar)

8.1.1.14 I (Demodulated)

When **I (Demodulated)** is selected, the trigger condition is met when the I voltage crosses the I voltage trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when I (Demodulated) Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	:TRIG:<meas>:SOUR IDEM
Annunciation	I (Demod) (in the Meas Bar)

8.1.1.15 Q (Demodulated)

When **Q (Demodulated)** is selected, the trigger condition is met when the Q voltage crosses the Q voltage trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Q (Demodulated) Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:<meas>:SOUR QDEM</code>
Annunciation	Q (Demod) (in the Meas Bar)

8.1.1.16 Aux I/Q Mag

When **Aux I/Q Mag** is selected, the trigger condition is met when the auxiliary receiver's I/Q magnitude output crosses the Auxiliary I/Q magnitude trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Aux I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042
- "Trigger Center Frequency" on page 4052
- "Trigger BW" on page 4052

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	<code>:TRIG:<meas>:SOUR AIQM</code>
Annunciation	Aux I/Q Mag (in the Meas Bar)

8.1.1.17 PXI

When **PXI** is selected, a new sweep/measurement will start when detecting the signal from the PXI backplane trigger line.

This trigger type is only found in the modular instrument products.

The **Trigger** tab contains the following Trigger Source dependent controls when PXI Trigger is selected:

- "Select PXI Line" on page 4053
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

Example	Swept SA measurement: :TRIG:SOUR PXI Measurements other than Swept SA: :TRIG:<meas>:SOUR PXI
Annunciation	PXI (in the Meas Bar)

8.1.1.18 Internal

When **Internal** is selected, the trigger condition is met when detecting the signal from the internal RF Source module.

This trigger type is only found in the modular instrument products.

The **Trigger** tab contains the following Trigger Source dependent controls when Aux I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 4035
- "Trigger Delay" on page 4038
- "Trigger Slope" on page 4042

Additional controls are also present that are not dependent on the selected Trigger Source.

For an Internal trigger to occur, there must be a trigger output from the internal RF source. This means that you must configure the Source Trigger Output before selecting Internal as the Trigger Source. To enable the Source Trigger Output,

output trigger should not be off if internal source works as list sequence mode and Trig 2 Out should not be off if internal source works as MXG mode. Otherwise, no trigger occurs, and measurement does not start.

Example	Swept SA measurement: <code>:TRIG:SOUR INTernal</code> Measurements other than Swept SA: <code>:TRIG:<meas>:SOUR INTernal</code>
Annunciation	Internal (in the Meas Bar)

8.1.1.19 Prot Channel Detection

Selects a protocol channel detection Base Station Emulation as the trigger. When Prot Channel Detection is selected, a new sweep/measurement will start when the protocol channel detection trigger condition is met.

Protocol Channel Detection Trigger is defined as the Base Station Emulation protocol channel detection event of PUSCH, PUCCH, PRACH or SRS. With this trigger, the IQ data, and therefore the measurement, is aligned at the beginning of the LTE sub-frame where the particular event was detected. Channel transmission is aligned to the sub-frame boundary; therefore, the measurement is aligned with its transmission with the exception of SRS, which might not start at the beginning of the sub-frame containing the SRS as it might have an offset from the start of the sub-frame base on the SRS configuration, In this case, the trigger and measurement are aligned to the beginning of the sub-frame containing SRS as defined by this trigger type (which is not the beginning of the SRS itself due to the offset).

This trigger type is only available in UXM.

Example	<code>:TRIG:<meas>:SOUR PRTC</code>
Annunciation	Prot Chan Det (in the Meas Bar)

8.1.1.20 Prot Frame Aligned

Selects a protocol frame aligned Base Station Emulation as the trigger. When Prot Frame Aligned is selected, a new sweep/measurement will start when the protocol frame aligned data trigger condition is met.

Prot Frame Aligned Trigger is aligned with the Base Station Emulation Protocol uplink frame timing boundary. It depends on the technology format of the base station call processing.

This trigger type is only available in UXM.

Example	<code>:TRIG:<meas>:SOUR PRTF</code>
Annunciation	Prot Frame (in the Meas Bar)

8.1.1.21 Prot Event

Selects a protocol frame aligned Base Station Emulation as the trigger. When Prot Frame Aligned is selected, a new sweep/measurement will start when the protocol frame aligned data trigger condition is met.

Prot Event Trigger is defined as the Base Station Emulation protocol internal event such as the starting of a predefined uplink pattern for a relative power control ramp. With this trigger, the IQ data, and therefore the measurement, is aligned with the start of the desired uplink pattern.

This trigger type is only available in UXM.

Example	:TRIG:<meas>:SOUR PRTF
Annunciation	Prot Frame (in the Meas Bar)

8.1.2 Trigger Level

Sets the amplitude level for Trigger and Gate sources that use level triggering. When the video signal crosses this level, with the chosen slope, the trigger occurs.

For any given Trigger, Gate, or Periodic Sync Src, the same Trigger Level is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

If **Video** is the selected trigger source, the trigger level displays as a green horizontal line with the label TRIG LVL just above it on the right:



If the value of trigger level is off screen low this line displays along the bottom of the graticule. If the value of trigger level is off screen high this line displays above the graticule but no farther above than 1.5 % of the graticule height (the same as the trace itself). Note that the TRIG LVL label cannot display above the graticule so the label itself stops at the top of the graticule.

For the I/Q Triggers, the I/Q reference impedance is used for converting between power and voltage.

Trigger Level Parameters

Source	Example	Min	Max	Prese t	Resoluti on	Step Key Incr	Knob Incr
Video	<code>TRIG:VID:LEV -40 dBm</code>	-170 dBm	+30 dBm	-25 dBm	.01 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
Level	<code>TRIG:LEV:LEV -40 dBm</code>	-170 dBm	+30 dBm	-25 dBm	.01 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
External 1 2	<code>TRIG:EXT1:LEV 0.4 V</code>	-5 V VXT models M9410A/11A/15A /16A: 0 V	5 V VXT models M9410A/11A/15A /16A: 2.5 V	1.2 V	10 mV	0.5 V	0.1 V
I/Q Mag	<code>TRIG:IQM:LEV -30 dBm</code>	-200 dBm	100 dBm	-25 dBm	.1 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
I (Demo d)	<code>TRIG:IDEM:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 µV
Q (Demo d)	<code>TRIG:QDEM:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 µV
Input I	<code>TRIG:IINP:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 µV
Input Q	<code>TRIG:QINP:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 µV
Aux Chan I/Q Mag	<code>TRIG:AIQM:LEV -30 dBm</code>	-200 dBm	100 dBm	-25 dBm	.1 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
Internal	<code>TRIG:INT:LEV 1.2 V</code>	-5 V VXT models M9410A/11A/15A /16A: 0 V	5 V VXT models M9410A/11A/15A /16A: 2.5 V	1.2 V	10 mV	.5 V	.1 V
ADC	<code>TRIG:ADC:L</code>	-170 dBm	30 dBm	-25	.01 dB	Scale/D	Step/10,

8 Trigger

8.1 Trigger

Source	Example	Min	Max	Prese t	Resoluti on	Step Key Incr	Knob Incr
	EV -30 dBm				dBm	iv (Log), 1 dB (Lin)	but never < 0.1 dB

More Information

For Video Trigger Level, when sweep type = FFT, the video trigger uses the amplitude envelope in a bandwidth wider than the FFT width as a trigger source. This can be useful but does not have the same relationship between the displayed trace and the trigger level as in swept triggering.

For Video Trigger Level the settable resolution of the function is 0.01 dB, even when the Y Axis Unit is linear. In Linear Y Axis Unit (for example, Volts) this requires 4 significant digits to display on the control.

For the Level trigger source, used in RTSA and other measurements, External Gain and Ref Level Offset modify the actual trace data as it is taken and are taken into account by Trig Level.

Remote Command	<pre>:TRIGger[:SEquence]:<trig_source>:LEVel <ampl> :TRIGger[:SEquence]:<trig_source>:LEVel?</pre> <p>where <trig_source> is one of:</p> <p>EXternal1 EXternal2 EXternal3 VIDEO ADC LEVel IQMag IDEMod QDEMod IINPut QINPut AIQMag INTernal</p>
Example	<pre>:TRIG:VID:LEV -40 dBm</pre>
Dependencies	Only appears when Video, External 1 2, or an I/Q trigger is selected as the Trigger Source
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<pre>:TRIGger[:SEquence]:IF:LEVel</pre> <p>taken as video trigger level</p> <pre>:TRIGger[:SEquence]:IF:LEVel?</pre> <p>taken as video trigger level query</p> <pre>:TRIGger[:SEquence]:EXTernal:LEVel</pre> <p>the parameter EXTernal is mapped to EXTernal1</p> <pre>:TRIGger[:SEquence]:FRAMe:EXTernal1:LEVel</pre>

8.1.3 Trigger Delay

Controls a time delay that the instrument will wait to begin a sweep after meeting the trigger criteria, for Trigger and Gate sources that support Trigger Delay.

For any given Trigger, Gate, or Periodic Sync source, the same Trigger Delay is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

Negative trigger delays can be used. Negative trigger delay makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. You can use negative delay to pre-trigger the instrument in the time domain or FFT, but not in swept spans. Video trigger delay may be set to negative values, in time domain, FFT and even swept, but in swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.

Remote Command	<pre>:TRIGger[:SEquence]:<trig_source>:DElay <time> :TRIGger[:SEquence]:<trig_source>:DElay?</pre> <p>where <trig_source> is one of:</p> <p>LINE EXternal1 EXternal2 EXternal3 AEXternal VIDEO ADC RFBurst FRAME LEVEL FMT IQMag IDEMod QDEMod IINPut QINPut AIQMag PXI Internal</p>
Example	<pre>:TRIG:VID:DEL:STAT ON :TRIG:VID:DEL 100 ms</pre>
Dependencies	Only appears when Video, Line, External 1 2, RF Burst, Periodic Timer or an I/Q trigger is selected as the Trigger Source
Couplings	<p>When FMT Trigger Criteria is INSIDE or OUTSIDE, FMT Trigger Delay State is forced to OFF</p> <p>FMT Trigger Delay MaxValue is dependent on the current AcquisitionTime. The equation is: MaxValue = $2^{16} \times \text{AcqTime}$, but never to exceed 70 sec. Ex: In PVT View with a min PVT Acq Time of 200 us, this Trigger Delay MaxValue is 13.26 sec. In RT Spectrum and Spectrogram with a min Acq Time of 100 us, this Trigger Delay MaxValue is 6.55 sec. When the Acq Time is increased, this MaxValue also increases</p>
State Saved	Saved in instrument state
Annotation	Trig Delay (in the Measurement Bar)
Backwards Compatibility Notes	<p>For backward compatibility with VSA/PSA comms apps</p> <pre>:TRIGger[:SEquence]:IF:DElay :TRIGger[:SEquence]:DElay</pre> <p>The legacy <code>:TRIGger[:SEquence]:DElay</code> command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers</p> <p>Auto Function</p>
Remote Command	<pre>:TRIGger[:SEquence]:<trig_source>:DElay:STATe OFF ON 0 1 :TRIGger[:SEquence]:<trig_source>:DElay:STATe?</pre> <p>where <trig_source> is one of:</p> <p>LINE EXternal1 EXternal2 EXternal3 AEXternal VIDEO ADC RFBurst FRAME LEVEL FMT IQMag IDEMod QDEMod IINPut QINPut AIQMag PXI Internal</p>
Preset	OFF

8 Trigger

8.1 Trigger

Backwards Compatibility Commands

Example	<code>:TRIG:DEL 1 ms</code>
Preset	1 us
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:DELay <time></code> <code>:TRIGger[:SEquence]:DELay?</code> <code>:TRIGger[:SEquence]:DELay:STATe OFF ON 0 1</code> <code>:TRIGger[:SEquence]:DELay:STATe?</code>
Example	<code>:TRIG:OFFS ON</code> <code>:TRIG:OFFS -100 ms</code>
Notes	ESA commands for trigger offset, which allowed you to use a positive or negative delay when in zero span and in a Res BW ≥ 1 kHz. For ESA compatibility, X-series instruments keep track of this offset and adds it to the Trigger Delay for VIDEO, LINE, EXTERNAL1 or EXTERNAL2 whenever the value is sent to the hardware, if in Zero Span and RBW ≥ 1 kHz
Preset	Off, 0 s
State Saved	Saved in instrument state
Min	-11 s
Max	+11 s
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:OFFSet <time></code> <code>:TRIGger[:SEquence]:OFFSet?</code>
	Auto Function
Remote Command	<code>:TRIGger[:SEquence]:OFFSet:STATe OFF ON 0 1</code> <code>:TRIGger[:SEquence]:OFFSet:STATe?</code>
Preset	OFF

Trigger Delay Parameters

Note: in Swept SA, when transitioning from Zero Span to Swept spans, the trigger delay is clipped to -150 ms if it had been longer in Zero Span.

Source	Example	Preset	Min	Max	Resolution
Video	<code>TRIG:VID:DEL:STAT ON</code> <code>TRIG:VID:DEL 100 ms</code>	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
Level	<code>TRIG:LEV:DEL:STAT ON</code>	Off, 30 ms	0 ms	70 sec (but	Multiple of Acq

Source	Example	Preset	Min	Max	Resolution
FMT	TRIG:LEV:DEL 100 ms			dependent on Acq Time like FMT)	Time (as is FMT)
	TRIG:FMT:DEL:STAT ON TRIG:FMT:DEL 100 ms	Off, 30 ms	0 ms	70 sec (but dependent on Acq Time like FMT)	Multiple of Acq Time (as is FMT)
External 1 2	TRIG:EXT1:DEL:STAT ON TRIG:EXT2:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
	TRIG:LINE:DEL:STAT ON TRIG:LINE:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
RF Burst	TRIG:RFB:DEL:STAT ON TRIG:RFB:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
	TRIG:FRAM:DEL:STAT ON TRIG:FRAM:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
I/Q Mag	TRIG:IQM:DEL:STAT ON TRIG:IQM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
	TRIG>IDEM:DEL:STAT ON TRIG>IDEM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Q (Demod)	TRIG:QDEM:DEL:STAT ON TRIG:QDEM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
	TRIG:IINP:DEL:STAT ON TRIG:IINP:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Input Q	TRIG:QINP:DEL:STAT ON TRIG:QINP:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
	TRIG:AIQM:DEL:STAT ON TRIG:AIQM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
PXI	TRIG:PXI:DEL:STAT ON TRIG:PXI:DEL 10 ms	Off, 1 us	-150 ms	+500 ms	100 ns
	TRIG:INT:DEL:STAT ON TRIG:INT:DEL 10 ms	Off, 1 us	-150 ms	+500 ms	100 ns
Prot Channel Detection	TRIG:PRTC:DEL:STAT ON TRIG:PRTC:DEL 1 ms	Off, 1 ms	-10 ms	+10 ms	100 ns


8 Trigger
8.1 Trigger

Source	Example	Preset	Min	Max	Resolution
Prot Frame Aligned	TRIG:PRTF:DEL:STAT ON	Off, 1 ms	-10 ms	+10 ms	100 ns
	TRIG:PRTF:DEL 1 ms				
Prot Event	TRIG:PRTE:DEL:STAT ON	Off, 1 ms	-10 ms	+10 ms	100 ns
	TRIG:PRTE:DEL 1 ms				

Note: in Bluetooth Mode, the preset value of Trigger Delay is always (On, -20us).

More Information

Here is the diagram for Frequency Mask Trigger (FMT) Trigger Delay:

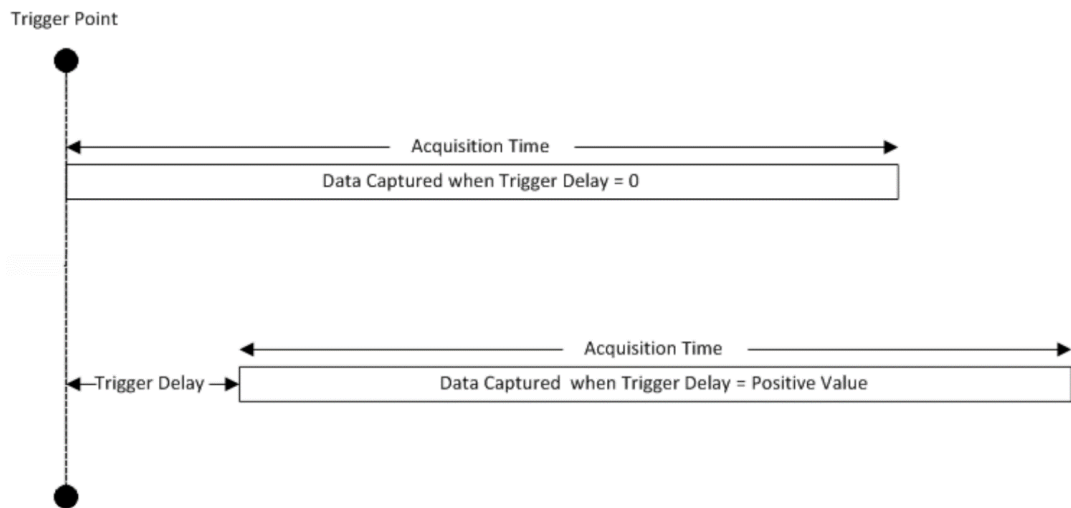

8.1.4 Trigger Slope

Sets the trigger polarity for Trigger and Gate sources that support Trigger Slope. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

For any given Trigger, Gate, or Periodic Sync source, the same Trigger Slope is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

Remote Command	:TRIGger[:SEquence]:<trig_source>:SLOPe POSitive NEGative :TRIGger[:SEquence]:<trig_source>:SLOPe? where <trig_source> is one of: LINE EXTErnal1 EXTErnal2 EXTErnal3 AEXTErnal VIDEo ADC RFBurst
----------------	---

	IQMag IDEMod QDEMod IINPut QINPut AIQMag PXI INTErnal
Example	:TRIG:VID:SLOP NEG :TRIG:VID:SLOP? :TRIG:EXT1: SLOP NEG
Dependencies	Only appears when Video, Line, External 1 2, RF Burst or an I/Q trigger is selected as the Trigger Source
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:TRIGger[:SEquence]:IF:SLOPe NEGative POSitive :TRIGger[:SEquence]:IF:SLOPe? For backward compatibility with VSA/PSA comms apps :TRIGger[:SEquence]:EXTernal:SLOPe For backward compatibility, the parameter EXTernal is mapped to EXTernal1 :TRIGger[:SEquence]:FRAMe:EXTernal1:SLOPe :TRIGger[:SEquence]:FRAMe:EXTernal2:SLOPe
Example	:TRIG:SLOP NEG
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:TRIGger[:SEquence]:SLOPe POSitive NEGative :TRIGger[:SEquence]:SLOPe?

Note: when transitioning from Zero Span to Swept spans, the trigger delay is clipped to -150 ms if it had been longer in Zero Span.

8.1.5 Trigger Level Absolute/Relative

Selects either Absolute or Relative Burst Triggering.

Remote Command	:TRIGger[:SEquence]:RFBurst:LEVel:TYPE ABSolute RELative :TRIGger[:SEquence]:RFBurst:LEVel:TYPE?
Example	Set the trigger level type of the RF burst trigger to Relative: :TRIG:RFB:LEV:TYPE REL
Dependencies	Only appears when RF Burst is selected as the Trigger Source
Preset	ABSolute
State Saved	Saved in instrument state

8.1.6 Absolute Trigger Level

Sets the absolute trigger level for the RF burst envelope.

NOTE

When using the External Mixing path, the Absolute Trigger Level is uncalibrated because the factory default was set to accommodate the expected IF levels for the RF path.

Remote Command	<code>:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute <ampl></code> <code>:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute?</code>
Example	Set the trigger level of the RF burst envelope signal to the absolute level of 10 dBm: <code>:TRIG:RFB:LEV:ABS 10 dBm</code>
Notes	Sending this command does not switch the setting from relative to absolute; to switch it you need to send <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> For Bluetooth Mode, the default value is -50 dBm
Dependencies	Only appears when RF Burst is selected as the Trigger, Gate or Periodic Sync Source
Couplings	This same level is used for the RF Burst trigger source in the Trigger menu, for the RF Burst selection in the Gate Source menu, and also for the RF Burst selection in the Periodic Sync Src menu
Preset	LTEA FDD/TDD modes: -40 dBm or -50 dBm depending on the hardware 5G NR mode: -40 dBm All other modes: -20 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	100 dBm
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:FRAMe:RFBurst:LEVel:ABSolute</code>

8.1.7 Relative Trigger Level

Sets the relative trigger level for the RF burst envelope.

In some models, the relative burst trigger function is implemented in hardware. In other models, without the advanced triggering hardware required, the relative burst trigger function is implemented in software in some measurements, and is unavailable in other measurements.

When implemented in software, the relative RF Burst trigger function is implemented as follows:

1. The measurement starts with the absolute RF Burst trigger setting. If it cannot get a trigger with that level, auto trigger fires and the acquisition starts anyway.

After the acquisition, the measurement searches for the peak in the acquired waveform and saves it

2. In the next cycle of the measurement, the measurement determines a new absolute RF Burst level based on the peak value from the first measurement and the Relative RF Burst Trigger Level (always 0 or negative dB) set by the user. The following formula is used: absolute RF Burst level = peak level of the previous acquisition + relative RF Burst level
3. If the new absolute RF Burst level differs from the previous by more than 0.5 dB, the new level is sent to the hardware; otherwise, it is not updated (to avoid slowing down the acquisition)

Steps 2 and 3 repeat for subsequent measurements.

Remote Command	<code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative <rel_ampl></code> <code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative?</code>
Example	Set the trigger level of the RF burst envelope signal to the relative level of -10 dB: <code>:TRIG:RFB:LEV:REL -10 dB</code>
Notes	Sending this command does not switch the setting from absolute to relative; to switch it you need to send <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> The relative trigger level is not available in some measurements. In those measurements the <code>RELative</code> parameter, and <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> generates an error if sent
Dependencies	This control is grayed-out and Absolute Trigger Level selected if the required hardware is not present in your instrument and the current measurement does not support Relative triggering Only appears when RF Burst is selected as the Trigger Source
Preset	-6 dB GSM: -25 dB
State Saved	Saved in instrument state
Min	-45 dB
Max	0 dB
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:RFBurst:LEVel</code> This legacy command is aliased to <code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative</code> because PSA had <i>only</i> relative burst triggering In some models, a variety of burst trigger circuitry is available, resulting in various available burst trigger bandwidths. The instrument automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the instrument. Here is the RF Burst Trigger Bandwidth table for Swept SA Measurement in SA mode:

8 Trigger

8.1 Trigger

Model	Option	Span	Swp Type	FFT Width	Trigger BW, -10 dB	Notes
EXA	any	All	all	all	16 MHz	
MXA	w/o B25	All	all	all	16 MHz	
MXA	B25	Zero	N/A	N/A	16 MHz	
MXA	B25	All	Swept	N/A	16 MHz	
MXA	B25	< 8 MHz	FFT	all	16 MHz	
MXA	B25	≥ 8 MHz	FFT	25 MHz	30 MHz	
PXA	any	all	all	all	> 80 MHz	Exceptions(*)

(*) Exceptions: When the RF Burst Trigger Level Type is Absolute, the start frequency is below 300 MHz, and the sweep type is either Swept or FFT with an FFT width of less than 25 MHz, then the RF Burst Trigger Bandwidth is not >80 MHz. It would be 16 MHz except in the subcase of Sweep Type = FFT and FFT Width between 8 and 25 MHz inclusive, where it would be 30 MHz.

8.1.8 Period

Sets the period of the internal periodic timer clock. For digital communications signals, this is usually set to the frame period of your current input signal. In the case that sync source is not set to OFF, and the external sync source rate is changed for some reason, the periodic timer is synchronized at every external synchronization pulse by resetting the internal state of the timer circuit.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:PERiod <time></code> <code>:TRIGger[:SEquence]:FRAMe:PERiod?</code>
Example	<code>:TRIG:FRAM:PER 100 ms</code>
Dependencies	The invalid data indicator turns on when the period is changed, until the next sweep/measurement completes Only appears when Periodic Timer is selected as the Trigger or Gate Source
Couplings	The same period is used in the Gate Source selection of the period timer
Preset	20 ms unless noted below: GSM: 4.615383 ms 5G NR: 10 ms
State Saved	Saved in instrument state
Min	100.000 ns
Max	559.0000 ms

8.1.9 Offset

Adjusts the accumulated offset between the periodic timer events and the trigger event. Adjusting the accumulated offset is different than setting an offset and requires explanation.

The periodic timer is usually not synchronized with any external events, so the timing of its output events has no absolute meaning. Since the timing relative to external events (RF signals) is important, you need to be able to adjust (offset) it. However, you have no direct way to see when the periodic timer events occur. All that you can see is the trigger timing. When you want to adjust the trigger timing, you will be changing the internal offset between the periodic timer events and the trigger event. Because the absolute value of that internal offset is unknown, we will just call that the accumulated offset. Whenever the Offset parameter is changed, you are changing that accumulated offset. You can reset the displayed offset using Reset Offset Display. Changing the display does not change the value of the accumulated offset, and you can still make additional changes to accumulated offset.

To avoid ambiguity, we define that an increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.

Remote Command	<code>:TRIGger[:SEQuence]:FRAMe:OFFSet <time></code> <code>:TRIGger[:SEQuence]:FRAMe:OFFSet?</code>
Example	<code>:TRIG:FRAM:OFFS 1.2 ms</code>
Notes	<p>The front panel interface (for example, the knob), and this command, adjust the accumulated offset, which is shown on the control</p> <p>However, the actual amount sent to the hardware each time the offset is updated is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. Note that the accumulated offset value is essentially arbitrary; it represents the accumulated offset from the last time the offset was zeroed (with the Reset Offset Display key)</p> <p>Note that this command does not change the period of the trigger waveform. Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see "Trigger Delay" on page 4038</p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event</p> <p>When the SCPI command is sent the value shown on the control is updated with the new value. However, the actual amount sent to the hardware is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value</p> <p>The SCPI query simply returns the value currently showing on the key</p>
Dependencies	<p>The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes</p> <p>Only appears when Periodic Timer is selected as the Trigger or Gate Source</p>

8 Trigger

8.1 Trigger

Couplings	The same offset is used in the Gate Source selection of the period timer
Preset	0 s
State Saved	Saved in instrument state
Min	-10.000 s
Max	10.000 s

8.1.10 Reset Offset Display

Resets the value of the periodic trigger offset display setting to 0.0 seconds. The current displayed trigger location may include an offset value defined with the **Offset** key. Pressing this control redefines the currently displayed trigger location as the new trigger point that is 0.0 s offset. The **Offset** control can then be used to add offset relative to this new timing.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet</code>
Example	<code>:TRIG:FRAM:OFFS:DISP:RES</code>
Dependencies	Only appears when Periodic Timer is selected as the Trigger or Gate Source

8.1.11 Offset Adjust (Remote Command Only)

Lets you advance the phase of the frame trigger by the amount you specify. It does *not* work in the same way as the related front panel keys.

The command does not change the period of the trigger waveform. If the command is sent multiple times, it advances the phase of the frame trigger an additional amount each time it is sent. Negative numbers are permitted.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:ADJust <time></code>
Example	<code>:TRIG:FRAM:ADJ 1.2 ms</code>
Notes	<p>Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section "Trigger Delay" on page 4038</p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event</p> <p>The front panel interface (for example, the knob) and the <code>:TRIG:FRAM:OFFS</code> command adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware is the delta value, that is, the current offset value minus the previous offset value</p> <p>When the SCPI command is sent the value shown on the control (and the Active Function, if this happens to be the active function) is updated by increasing it (or decreasing it if the value sent is negative) by the amount specified in the SCPI command</p> <p>This is no query for this command</p>
Dependencies	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement

	completes
Couplings	The same offset is used in the Gate Source selection of the period timer
Preset	0 s
State Saved	Saved in instrument state
Min	-10.000 s
Max	10.000 s

8.1.12 Sync Source

For convenience, you can select the Periodic Timer Sync Source using this dropdown. You can also select it from the Periodic Sync Src tab, which also contains controls that let you configure the Sync Source.

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you might be triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

Example	<pre>:TRIG:FRAM:SYNC EXT1 :TRIG:FRAM:SYNC EXT2 :TRIG:FRAM:SYNC RFB :TRIG:FRAM:SYNC OFF</pre>
Dependencies	Only appears when Periodic Timer is selected as the Trigger or Gate Source
Preset	OFF
State Saved	Saved in instrument state

8.1.13 TV Line

Selects the **TV Line** number on which to trigger. Line number range is dependent on the settings of the **"Standard"** on page 4051 and **"Field"** on page 4050 menus within the TV trigger setup functions. When the line number is incremented beyond the upper limit, the value will change to the lower limit and continue incrementing from there. When the line number is decremented below the lower limit, the value will change to the upper limit and continue decrementing from there.

Remote Command	<pre>:TRIGger[:SEquence]:TV:LINE <integer> :TRIGger[:SEquence]:TV:LINE?</pre>
Example	<pre>:TRIG:TV:LINE 20 :TRIG:TV:LINE?</pre>
Dependencies	<p>Only available in the Swept SA measurement</p> <p>Only appears when TV is selected as the Trigger Source</p>

8 Trigger

8.1 Trigger

Preset	17
State Saved	Saved in instrument state
Min	1 The minimum value is the minimum line and rolls over to the maximum value. The minimum line number depends on which Field and standard are selected
Max	The maximum value is the maximum line and rolls over to the minimum value. The maximum line number depends on which Field and standard are selected Field 1 (ODD): <ul style="list-style-type: none"> Maximum line is 263 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 Maximum line is 313 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L Field 2 (EVEN): <ul style="list-style-type: none"> The maximum line 262 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 The maximum line is 312 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L Field = ENTire Frame: <ul style="list-style-type: none"> 525, for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 625, for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L

8.1.14 Field

Selects the **Field** on which to trigger:

Entire Frame	ENTire	Causes the selected line number to be viewed as an offset into the entire frame starting with line 1, the first line in Field One
Field One	ODD	Causes the selected line number to be viewed as an offset into the first field starting with Line 1, the first line in Field One
Field Two	EVEN	Causes the selected line number to be viewed as an offset into the second field. If Line 1 is selected, it is the 264th line of the frame (NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M, PAL-60) or the 314th line of the frame (PAL-B,D,G,H,I, PAL-N, PAL-N-Combin, SECAM-L)

Remote Command	:TRIGger[:SEquence]:TV:FMODE ENTire ODD EVEN :TRIGger[:SEquence]:TV:FMODE?
Example	:TRIG:TV:FMODE ENT :TRIG:TV:FMODE EVEN :TRIG:TV:FMODE ODD
Dependencies	Only available in the Swept SA measurement Only appears when TV is selected as the Trigger Source

	This command is available only when Option B7B (TV trigger) is installed
Preset	ENTire
Range	ENTire ODD EVEN

8.1.15 Standard

Accesses the **Standard** menu keys, which select from the following TV standards:

NTSC-M	MNTSc
NTSC-Japan	JNTSc
NTSC-4.43	NTSC443
PAL-M	MPAL
PAL-B,D,G,H,I	BPAL
PAL-N	NPAL
PAL-N-Combin	CPAL
PAL-60	PAL60
SECAM-L	LSEC

As the TV standard is changed, the current line value is clipped as necessary to keep it valid for the chosen standard and field mode. For example, line 600 is selected in Entire Frame mode in PAL-N; if NTSC-M is selected, the line number is clipped to 525. Or, if line 313 is selected in Field 1 mode in PAL-N and NTSC-M is selected, the line number is clipped to 263. Changing back to the PAL-N standard will leave the line number at 263.

Remote Command	:TRIGger[:SEquence]:TV:STANdard MNTSc JNTSc NTSC443 MPAL BPAL NPAL CPAL PAL60 LSEC :TRIGger[:SEquence]:TV:STANdard?
Example	Sets NTSC-M :TRIG:TV:STAN MNTS Queries Standard :TRIG:TV:STAN?
Dependencies	Only available in the Swept SA measurement Only appears when TV is selected as the Trigger Source
Preset	MNTS
State Saved	Saved in instrument state
Range	MNTSc JNTSc NTSC443 MPAL BPAL NPAL CPAL PAL60 LSEC

8.1.16 Trigger Center Frequency

Sets the center frequency to be used by the auxiliary receiver for the **Auxiliary Channel I/Q Magnitude** trigger.

Remote Command	<code>:TRIGger[:SEquence]:AIQMag:CENTer <freq></code> <code>:TRIGger[:SEquence]:AIQMag:CENTer?</code>
Example	<code>:TRIG:AIQM:CENT 10 MHz</code>
Notes	Trigger CF + 1/2 Trigger BW < Max Trigger CF - 1/2 Trigger BW > Min
Dependencies	Only appears when Aux Channel I/Q Mag is selected as the Trigger Source
Preset	0 Hz
State Saved	Saved in instrument state
Range	-40 MHz to 40 MHz
Min	-40 MHz
Max	40 MHz

8.1.17 Trigger BW

Sets the information bandwidth used by the auxiliary receiver for the Auxiliary Channel I/Q Magnitude trigger.

Remote Command	<code>:TRIGger[:SEquence]:AIQMag:BANDwidth <freq></code> <code>:TRIGger[:SEquence]:AIQMag:BANDwidth?</code>
Example	<code>:TRIG:AIQM:BAND 8 MHz</code>
Notes	The combined sample rate for the main and auxiliary receivers cannot exceed 100 MSa/sec. The bandwidth available to Trigger BW is limited to what is available after the main receiver's bandwidth (Info BW, sometimes pre-FFT BW) is set. Because of this limitation, the Max is not always achievable The combination of " Trigger Center Frequency " on page 4052 and Trigger BW is also limited: <ul style="list-style-type: none"> - Trigger CF + 1/2 Trigger BW < Max - Trigger CF - 1/2 Trigger BW > Min
Dependencies	Only appears when Aux Channel I/Q Mag is selected as the Trigger Source
Preset	Bandwidth option dependent: <ul style="list-style-type: none"> - No Opt: 10 MHz - Opt B25: 25 MHz - Opt S40: 40 MHz

State Saved	Saved in instrument state
Range	10 Hz to Maximum
Min	10 Hz
Max	Bandwidth option & I/Q input path-dependent: <ul style="list-style-type: none"> – No Opt, I or Q Only: 10 MHz, I+jQ: 20 MHz – Opt B25, I or Q Only: 25 MHz, I+jQ: 50 MHz – Opt S40, I or Q Only: 40 MHz, I+jQ: 80 MHz

8.1.18 Zero Span Delay Compensation On/Off

In **Zero Span**, there is a natural delay in the signal path, which comes from the RBW filter. This is usually desirable, as it lets you trigger on events and also see those events, because the signal is delayed from the trigger event. However, in some cases it is desirable to eliminate this delay, so that trigger events line up exactly with the zero-time point in **Zero Span**. You can use the **Zero Span Delay Comp On/Off** feature to enable or disable zero span delay compensation.

Remote Command	<code>:TRIGger[:SEquence]:EXTernal1 EXTernal2 RFBurst:DElay:COMPensation OFF ON</code> <code> 0 1</code> <code>:TRIGger[:SEquence]:EXTernal1 EXTernal2 RFBurst:DElay:COMPensation?</code>
Example	<code>:TRIG:EXT1:DEL:COMP ON</code> <code>:TRIG:EXT1:DEL:COMP?</code> <code>:TRIG:EXT2:DEL:COMP ON</code> <code>:TRIG:RFB:DEL:COMP ON</code>
Dependencies	No effect except in zero-span, but not locked out in nonzero spans Zero Span Delay Compensation only appears in the Swept SA and List Power Step measurements. Only External and RF Burst triggers support it Does not appear in VXT If the SCPI command is sent when the control is not shown, an error is returned: -221, "Settings conflict; Feature not supported for this measurement" Only appears when External 1 2 or RF Burst is selected as the Trigger, Gate or Periodic Sync Source
Preset	OFF
State Saved	Saved in instrument state

8.1.19 Select PXI Line

Controls which `PXI_TRIG[0..7]` backplane line is used for the trigger source.


Only found in modular analyzer products.

Remote Command	<code>:TRIGger[:SEquence]:PXI:LINE <line></code> <code>:TRIGger[:SEquence]:PXI:LINE?</code>
Example	<code>:TRIG:PXI:LIN 2</code>
Preset	0
State Saved	Saved in instrument state
Range	[0,7]


8.1.20 Reset Sync Monitor

Lets you reset the status of Synchronization for **Periodic** trigger This control works together with bit 6 “Waiting for Periodic Sync Source” in the `:STATus:OPERation:CONDition` status register.

When you first switch to periodic trigger, RF Burst is the default Sync Source. The register will be set immediately. A “Periodic Trigger, Waiting for Sync Source” message will be generated after 2 seconds (if the instrument is not synchronized). The system is waiting for a RF Burst signal. You can tap the screen to remove the message.

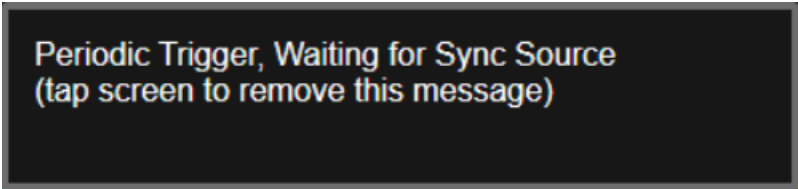

Once RF burst signal is provided and the hardware synchronized, the register will be cleared and a “Periodic Trigger Synchronized” message will be generated.

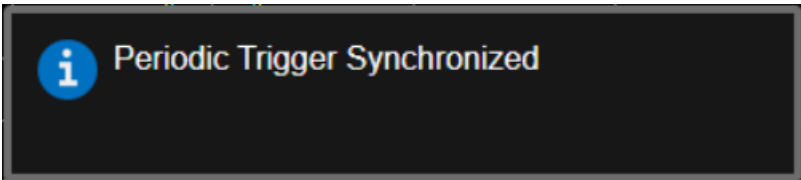

When change to a new Sync Source other than Off, take External1 as an example. You’ll get the condition register set to 1 and a pop-up message again. There are the possible following conditions:

- External1 is provided: the register is cleared, message is updated.
- External1 is not provided, you set the Sync Source to Off: the register is cleared, message is cleared.
- External1 is not provided, you set the Sync Source to External2: the register and message keep the same.

- External1 is not provided, you set the Sync Source back to RF Burst: the register is cleared, message is also cleared. That's because the instrument is synchronized to RF Burst already. If you want to make a new synchronization, you have to press "Reset Sync Monitor" you send SCPI command ":TRIG:FRAM:SMON:RES".

Remote Command	:TRIGger[:SEquence]:FRAMe:SMONitor:RESet
Example	:TRIG:FRAM:SMON:RES
Notes	<p>This control works together with bit 1 "Waiting for Periodic Sync Source" in the :STATus:OPERa-tion:INSTrument:CONDition status register</p> <p>A "Periodic Trigger, Waiting for Sync Source" message will be generated after pressing this control, and the status bit will be set</p> <p>A "Periodic Trigger Synchronized" message will be generated after successfully synchronizing to Sync Source, and the status bit will be cleared</p>
Dependencies	<p>Only functional when Periodic Trigger is selected as the Trigger or Gate Source, and Sync Source is not Off</p> <p>Only available in VXT models M9410A/11A/15A/16A</p>
Status Bits/OPC dependencies	Bit 6 of :STATus:OPERation:CONDition will be set after pressing this control

8.1.21 Trigger Optimization

Sets the trigger behavior for various desired operation conditions.

Remote Command	:TRIGger[:SEquence]:OPTimize:MODE NORMal MJITter
	For option details, see "Options" on page 4055
	:TRIGger[:SEquence]:OPTimize:MODE?
Example	<p>Select trigger optimization for minimum jitter:</p> <p>:TRIG:OPT:MOD MJIT</p>
Dependencies	<p>Only appears in VXT models M9410A/11A/15A/16A</p> <p>Minimum jitter is functional only when digital IF BW is lower than 300 MHz. When Trigger Optimization is set to MJITter and it is not in effect, the following warning message appears in the status bar:</p> <p>Settings Alert; Minimum Jitter is not available</p>
Preset	NORMal
State Saved	Yes
Range	NORMal MJITter

Options

Trigger optimization options are:

8 Trigger

8.1 Trigger

Trigger Optimization	SCPI	Notes
Normal	NORMa1	No optimization
Minimum Jitter	MJITter	<p>Optimizes trigger for minimum jitter. A software resample method is provided to reduce jitter, at the expense of some measurement speed</p> <p>The acquisition jitter depends on the digital IF BW, the jitter will be smaller when digital IF BW gets larger. For example, when the digital IF BW is 98.3 MHz in 5GNR, the jitter varies under 15ns. When set MJITter as trigger optimization type, the jitter will be reduced to 1ns</p> <p>This setting apples to all the Trigger Sources</p>

8.1.22 Trigger Settings Diagram

Lets you configure the **Trigger** system using a visual utility.

First, select what you want to configure (the Trigger, Gate or Periodic Sync Source) by tapping the box for **Trigger**, **Gate** or **Periodic Sync Source**.

Next, tap any box in the gray row to choose a Trigger Source to connect to. For **Periodic Sync Source**, you can also tap **Off**.

The **Trigger Settings Diagram** changes depending on context. The Trigger Sources that are available change depending on which input you have selected.

8.2 Gate Source

Contains controls that let you select and configure Gate control signals.

This tab appears in the **Trigger** menu panel for measurements that support gating. In measurements that do not support gating, this tab does not appear.

The menus under the **Gate Source** tab are the same as those under the **Trigger** tab, with these exceptions:

A smaller set of sources is available for gating.

The Free Run and Video selections are not provided for Gate

- The Trig Delay controls are not present
- Relative RF Burst Triggering is not available, just Absolute
- There is an additional control, Sync Holdoff, under Gate Source

Any changes to the settings in the setup menus under each Gate Source selection (for example: Trigger Level, Trigger Delay, etc.) also affect the corresponding settings under the Trigger menu keys. The gate system uses the Trigger SCPI commands for the setup functions, since each setting affects both Gate and Trigger.

Example: to set the Trigger Level for External 1 Trigger you use the command `:TRIG:EXT1:LEV`; to set the Trigger Level for External 1 Gate you use the same command, `:TRIG:EXT1:LEV`. By the same token, once you set the External 1 Trigger Level to 1v, it is 1v whether External 1 is being used as a Gate Source or a Trigger Source.

If a command is sent to the **TRIG** node to set the functions that are omitted from the **Gate Source** menus (Auto Trig, Holdoff, Trig Delay), it is accepted and the values stored, but the values are not visible from the **Gate Source** menus.

8.2.1 Select Gate Source

Selects the source of the Gate signal for doing Gated Trigger measurements.

This version of the **Select Gate Source** function is used in all measurements except the Pulse measurement application.

For the selection of the gate source the SCPI node, `:TRIGger[:SEquence]:` is replaced by `[:SENSe]:SWEep:EGATe:` as shown in the remote command below. Because you can independently set the Gate Source and the Trigger Source, there is a separate SCPI command for the Gate Source.

Remote Command `[:SENSe]:SWEep:EGATe:SOURce EXTerna11 | EXTerna12 | LINE | FRAMe | RFBurst`

8 Trigger

8.2 Gate Source

	 TV VIDEo PXI INTernal [:SENSe]:SWEep:EGATe:SOURce?						
Example	:SWE:EGAT:SOUR EXT1 :SWE:EGAT:SOUR?						
Dependencies	<p>Available selections differ depending on models as below</p> <table> <tr> <td>Benchtop</td><td>Line, External 1, External 2, RF Burst, Periodic, TV (Swept SA only)</td></tr> <tr> <td>VXT</td><td> Video, Internal, External 1, External 2, RF Burst, Periodic, PXI Internal and Periodic are not available in Spectrum Analyzer Mode <ul style="list-style-type: none"> Internal is available only in M9410A/11A/15A/16A and unavailable in M9420/21A </td></tr> <tr> <td>EXM</td><td>Video, Internal, External 1, External 2, RF Burst, Periodic</td></tr> </table> <p>Not available in E7760</p> <p>In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal12 parameter will generate a “Hardware missing; Not available for this model number” error</p>	Benchtop	Line, External 1, External 2, RF Burst, Periodic, TV (Swept SA only)	VXT	Video, Internal, External 1, External 2, RF Burst, Periodic, PXI Internal and Periodic are not available in Spectrum Analyzer Mode <ul style="list-style-type: none"> Internal is available only in M9410A/11A/15A/16A and unavailable in M9420/21A 	EXM	Video, Internal, External 1, External 2, RF Burst, Periodic
Benchtop	Line, External 1, External 2, RF Burst, Periodic, TV (Swept SA only)						
VXT	Video, Internal, External 1, External 2, RF Burst, Periodic, PXI Internal and Periodic are not available in Spectrum Analyzer Mode <ul style="list-style-type: none"> Internal is available only in M9410A/11A/15A/16A and unavailable in M9420/21A 						
EXM	Video, Internal, External 1, External 2, RF Burst, Periodic						
Preset	GSM/EDGE, Phase Noise: FRAM MSR: EXT1 LTEATDD, 5G NR: <ul style="list-style-type: none"> Direction is Downlink: EXT1 Direction is Uplink: FRAM All Others: EXT1						

8.2.2 Sync Holdoff

Applies only to the Periodic Timer. Specifies the duration that the sync source signal for the Periodic Timer must be kept false before the transition to true to be recognized as the sync timing. The periodic timer phase is aligned when the sync source signal becomes true, after the Holdoff time is satisfied.

A holdoff of 2 ms works with most WiMAX signals, but there may be cases where the burst off duration is less than 1 ms and this value will need to be changed.

Remote Command	:TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff <time> :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff?
Example	:TRIG:FRAM:SYNC:HOLD 5 :TRIG:FRAM:SYNC:HOLD?
Dependencies	<p>Only appears if Periodic is the selected Gate Source</p> <p>Does not appear in all Measurements. For example, does not appear in Swept SA</p>

Preset	LTEATDD: ON, 1 ms 5G NR: ON, 250.0 us 1xEVDO: OFF, 0 ms (SCPI only) Other than above: OFF, 4 msec
State Saved	Saved in instrument state
Min	0 ms
Max	+500 ms
	Auto Function
Remote Command	:TRIGger[:SEquence]:FRAMe:SYNC:HOLDoFF:STATe OFF ON 0 1 :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoFF:STATe?
Preset	LTEATDD, 5G NR: ON Others: OFF

8.3 Gate Settings

Contains controls that let you control the gating function. The Gate functionality is used to view signals best viewed by qualifying them with other events.

This tab appears in the **Trigger** menu panel for measurements that support gating. In measurements that do not support gating, this tab does not appear.

In the Swept SA measurement, the Gate controls, and all SCPI under the `[:SENSe] :SWEep:EGATe` SCPI node are unavailable when Source Mode is set to Tracking. This is because the Gate circuitry is used to sync the external source. If the Tracking Source is turned on, the Gate is turned off.

Gate setup parameters are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

Note that Sweep Time auto coupling rules and annotation are changed when Gate is on.

8.3.1 Gate On/Off

Turns the gate function on or off.

When the Gate Function is **ON**, the selected Gate Method is used along with the gate settings and the signal at the gate source to control the sweep and video system with the gate signal. Not all measurements allow every type of Gate Methods.

If the Gate were to be turned **ON** without a gate signal present, Marker Count operation would be unreliable, so it is locked out whenever Gate is on for measurements that support Marker Count.

Remote Command	<code>[:SENSe] :SWEep:EGATe [:STATe] OFF ON 0 1</code> <code>[:SENSe] :SWEep:EGATe [:STATe] ?</code>
Example	<code>:SWE:EGAT ON</code> <code>:SWE:EGAT ?</code>
Dependencies	<p>The function is unavailable (grayed-out) and OFF when:</p> <ul style="list-style-type: none">– Gate Method is LO or Video and FFT Sweep Type is manually selected– Gate Method is FFT, and Swept Sweep Type is manually selected– Marker Count is ON <p>The following are unavailable whenever Gate is on:</p> <ul style="list-style-type: none">– FFT under Sweep Type when Method=LO or Video or Swept under Sweep Type when Method=FFT

	<ul style="list-style-type: none"> – Marker Count <p>While Gate is on, the Auto Rules for Sweep Type are modified so that the choice agrees with the Gate Method: i.e., FFT for Method = FFT and Swept for Method = LO or Video</p> <p>When in the ACP measurement:</p> <ul style="list-style-type: none"> – When Meas Method is RBW or FAST, this function is unavailable, and the control is grayed-out – Whenever Gate is on, Meas Method, RBW, or FAST is unavailable and keys for those are grayed-out – When Gate is on, Offset Res BW and Offset Video BW are ignored (if you set these values) and the measurement works as if all Offset Res BW and all Offset Video BW are coupled with the Res BW and the Video BW under the BW menu. When Gate is on, the Offset BW control in the Offset/Limit menu is grayed-out
Preset	LTEATDD Mode: ON Other modes: OFF
State Saved	Saved in instrument state
Range	OFF ON
Annunciation	Annunciated in the Meas Bar ; if Gate is on, the word "Gate:" followed by the gate type appears, where <ul style="list-style-type: none"> – LO = Gated LO – Vid = Gated Video – FFT = Gated FFT
Backwards Compatibility SCPI	[:SENSe]:SWEep:TIME:GATE[:STATe] Available in SA and SCPI LC Modes ESA compatibility
Backwards Compatibility Notes	In ESA, Trig Delay (On) and Gate (On) could not be active at the same time. This dependency does not exist in PSA or in the X-Series

8.3.2 Gate View On/Off

Turning on Gate View puts the instrument into Gate View. When in Gate View, the regular view of the current measurement traces and results are reduced vertically to about 70% of the regular height. The Zero Span window, showing the positions of the Gate, is shown between the Measurement Bar and the reduced measurement window. By reducing the height of the measurement window, some of the annotation on the Data Display may not fit and is not shown.

Remote Command	[:SENSe]:SWEep:EGATe:VIEW ON OFF 1 0 [:SENSe]:SWEep:EGATe:VIEW?
Example	Turn on the gate view:

8 Trigger

8.3 Gate Settings

:SWE:EGAT:VIEW ON	
Dependencies	<p>In the Swept SA measurement:</p> <p>In Gate View, the regular Sweep Time (or Acquisition Time) control is grayed out, to avoid confusing the user who wants to set Gate View Sweep Time. When pressed, the grayed-out control puts up the informational message "Use Gate View Sweep Time in the Gate menu"</p> <p>In other measurements:</p> <p>When you turn Gate View on, the lower window takes on the current state of the instrument. Upon leaving Gate View, the instrument takes on the state of the lower window</p> <p>When you turn Gate View on, the upper window Sweep Time (or Acquisition Time) is set to Gate View Sweep Time (or Gate View Acquisition Time)</p>
Couplings	<p>These couplings apply to the Swept SA measurement:</p> <ul style="list-style-type: none"> – When Gate View is turned on, the instrument is set to Zero Span – Gate View automatically turns off whenever a Span other than Zero is selected – Gate View automatically turns off if you press the Swept Span toggle under Freq while in Gate View, and the instrument returns to the Span it was in before entering Gate View (even if that is Zero Span) – When Gate View is turned on, the sweep time used is the Gate View Sweep Time. This is set according to the rules in "Gate View Sweep Time" on page 4068 – When Gate View is turned off, Sweep Time is set to the normal Swept SA measurement sweep time – If Gate View is on and Gate is off, then turning on Gate turns off Gate View
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Annunciation	<p>For Gate View to work properly, a gate signal must be present at the selected Gate Source. Therefore, in Gate View, any time more than 2 seconds passes with no gate signal, a pop-up message "Waiting for gate input" appears. This message goes away when a gate signal appears</p>

Turning Gate View off returns the instrument to the Normal measurement view.

In Swept SA, the normal measurement view is the single-window Swept SA view. When returning to this view, the Swept SA measurement returns to the Span it was in before entering **Gate View** (even if that is Zero Span).

The **Gate View** window is triggered from the Gate Source, with zero trigger delay. Also, when updating the **Gate View** window, the Gate itself must not operate. So, it is internally shut off while the gate view window is being updated. For the Swept SA measurement, this means that the Gate is internally shut off whenever the gate view window is displayed. The measurement bar and controls continue to show the Trigger source for the main sweep window and give no indication that the Gate is shut off or that the Gate View window is triggered from the Gate Source.

When in **Gate View**, vertical lines are displayed in the Gate View window as follows:

Green lines labeled GATE START and GATE STOP are displayed at the gate edges as follows: in Edge Gate, a line is shown for Delay and one for the end of the Gate period, defined by Length. In Level Gate a line is shown only for Delay. You can adjust the position of the green lines by adjusting the gate length and the gate delay or by dragging them with your finger or the mouse.. These lines update in the Gate View window as the active function changes, even if the window is not being updated. In Gated LO and Gated Video, these lines are positioned relative to the delay reference line (not relative to 0 time). In Gated FFT, their location is relative to the left edge of the screen.

A blue line is displayed showing the delay reference, that is, the reference point for the Gate Delay within the Zero Span window. The blue line represents where (in time) the effective location of the gate start would be if the gate were programmed to zero delay.

- A second blue line is displayed at the location that represents the boundary between "compensated IF" and "compensated LO" operating modes. The second blue line is labeled "MIN FAST" because it represents the minimum Gate Delay for fast Gated LO operation. This line is only displayed in Gated LO. You cannot scroll (knob) or decrement (down key) the Gate Delay to less than that represented by the position of this line, it can only be set below this position manually, although once there it can be moved freely with the knob while below the line.

A yellow line in the Gated Video case only, is displayed at B_{length} , where B_{length} is the display point (bucket) length for the swept trace, which is given by the Sweep Time (or Acquisition Time) for that trace divided by number of Points - 1. So, it is referenced to 0 time, not to the delay reference. This line is labeled NEXT PT (it is not shown in the figure above because the figure above is for Gated LO). The yellow line represents the edge of a display point (bucket). Normally in Gated Video, the bucket length must be selected so that it exceeds the off time of the burst. There is another way to use the instrument in Gated Video measurements, and that is to set the bucket width much shorter than the off time of the burst. Then use the Max Hold trace function to fill in "missing" buckets more slowly. This allows you to see some of the patterns of the Gated Video results earlier, though seeing a completely filled-in spectrum later.

8.3.3 Gate Delay

Controls the length of time from the time the gate condition goes True until the gate is turned on.

Remote Command	<code>[:SENSe]:SWEp:EGATe:DELaY <time></code> <code>[:SENSe]:SWEp:EGATe:DELaY?</code>
Example	<code>:SWE:EGAT:DELaY 500ms</code> <code>:SWE:EGAT:DELaY?</code>

8 Trigger

8.3 Gate Settings

Notes	Units of time are required, or no units; otherwise, an invalid suffix error message is generated
Preset	WiMAX OFDMA: 71 us GSM/EDGE: 600 us WLAN: 500 us 5G NR: 5 ms Others: 57.7 us
State Saved	Saved in instrument state
Min	0.0 us
Max	100 s
Backwards Compatibility SCPI	<code>[:SENSe]:SWEep:TIME:GATE:DELay</code> This backward compatibility command is available in SA and SCPI LC Modes ESA compatibility

8.3.4 Gate Length

Controls the length of time that the gate is on after it opens.

Remote Command	<code>[:SENSe]:SWEep:EGATe:LENGth <time></code> <code>[:SENSe]:SWEep:EGATe:LENGth?</code>
Example	<code>:SWE:EGAT:LENG 1</code> <code>:SWE:EGAT:LENG?</code>
Notes	Units of time are required, or no units; otherwise, an invalid suffix error message is generated
Dependencies	Grayed-out when Gate Method is set to FFT , in which case the label changes to that shown below  <p>The control is also grayed-out if Gate Control = LEVe1</p>
Preset	WiMAX OFDMA: 50 us GSM/EDGE: 200 us WLAN: 1.54 ms Others: 461.6 us
State Saved	Saved in instrument state
Min	100 ns
Max	5 s
Backwards Compatibility SCPI	<code>[:SENSe]:SWEep:TIME:GATE:LENGth</code> This backward compatibility command is available in SA and SCPI LC Modes

ESA compatibility

8.3.5 Gate Method

Lets you choose one of the three different types of gating. Not all types of gating are available for all measurements.

Remote Command	<code>[:SENSe]:SWEep:EGATe:METHod LO VIDEo FFT</code> For option details, see "LO" on page 4065, "Video" on page 4065 or "FFT" on page 4066 <code>[:SENSe]:SWEep:EGATe:METHod?</code>
Example	<code>:SWE:EGAT:METH FFT</code>
Dependencies	This function is only available in the Swept SA measurement in Spectrum Analyzer Mode This control is unavailable when Gate is On and FFT Sweep Type manually selected When selected, Sweep Type is forced to Swept, and the FFT selection in Sweep Type is grayed-out Only the FFT method is supported in non-SA products Only the FFT method is supported by VXT models M9410A/11A/15A/16A
Preset	LO
State Saved	Saved in instrument state
Range	Video LO FFT
Annunciation	In Meas Bar

LO

In **LO** gating, when Gate is **ON**, the LO sweeps whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating is more sophisticated, and results in faster measurements. With Gated LO, the instrument only sweeps while the gate conditions are satisfied. This means that a sweep could take place over several gate events. It would start when the gate signal goes true and stop when it goes false, and then continue when it goes true again. But since the LO is sweeping as long as the gate conditions are satisfied, the sweep typically finishes much more quickly than with Gated Video.

When in zero span, there is no actual sweep performed. But data is only taken while the gate conditions are satisfied. So even though there is no sweep, the gate settings will impact when data is acquired.

Video

In **Video** gating, when Gate is **ON**, the video signal is allowed to pass through whenever the gate conditions as specified in the Gate menu are satisfied by the

signal at the Gate Source.

This form of gating may be thought of as a simple switch, which connects the signal to the input of the spectrum analyzer. When the gate conditions are satisfied, the switch is closed, and when the gate conditions are not satisfied, the switch is open. So we only look at the signal while the gate conditions are satisfied.

With this type of gating, you usually set the instrument to sweep very slowly. In fact, a general rule is to sweep slowly enough that the gate is guaranteed to be closed at least once per data measurement interval (bucket). Then if the peak detector is used, each bucket will represent the peak signal as it looks with the gate closed.

FFT

In **FFT** gating, when Gate is **ON**, an FFT is performed whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source. This is an FFT measurement that begins when the gate conditions are satisfied. Since the time period of an FFT is approximately $1.83/\text{RBW}$, you get a measurement that starts under predefined conditions and takes place over a predefined period. So, in essence, this is a gated measurement. You have limited control over the gate length, but it works in FFT sweeps, which the other two methods do not.

Gated FFT is not possible in zero span since the instrument is not sweeping, so in zero span the Gated LO method is used. Data is still only taken while the gate conditions are satisfied, so the gate settings do impact when data is acquired.

The Gate Length will be $1.83/\text{RBW}$.

This is a convenient way to make a triggered FFT measurement under control of an external gating signal.

8.3.6 Control Edge/Level

Sets the method of controlling the gating function from the gating signal.

- EDGE** The gate opens (after the Delay) on the selected edge (for example, positive) of the gate signal and closes on the alternate edge (for example, negative)
- LEVe1** The gate opens (after the Delay) when the gate signal has achieved a certain level and stays open as long as that level is maintained


Remote Command	<code>[:SENSe]:SWEp:EGATe:CONTRol EDGE LEVe1</code> <code>[:SENSe]:SWEp:EGATe:CONTRol?</code>
Example	<code>:SWE:EGAT:CONT EDGE</code>
Dependencies	If the Gate Method is FFT , this control is grayed-out and EDGE is selected If the Gate Source is TV, Frame, or Line, this control is grayed-out and EDGE is selected

Preset	EDGE
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<p><code>[:SENSe]:SWEep:EGATe:TYPE</code></p> <p>This backwards-compatibility command is available when the primary command is available</p> <p><code>[:SENSe]:SWEep:TIME:GATE:TYPE</code></p> <p>This backwards-compatibility command is available in SA and SCPILC Modes</p> <p>ESA Compatibility</p>

8.3.7 Gate Holdoff

Lets you increase or decrease the wait time after a gate event ends before the instrument will respond to the next gate signal.

After any Gate event finishes, the instrument must wait for the sweep system to settle before it can respond to another Gate signal. The instrument calculates a "wait time," taking into account a number of factors, including RBW and Phase Noise Optimization settings. The goal is to achieve the same accuracy when gated as in ungated operation. The figure below illustrates this concept:

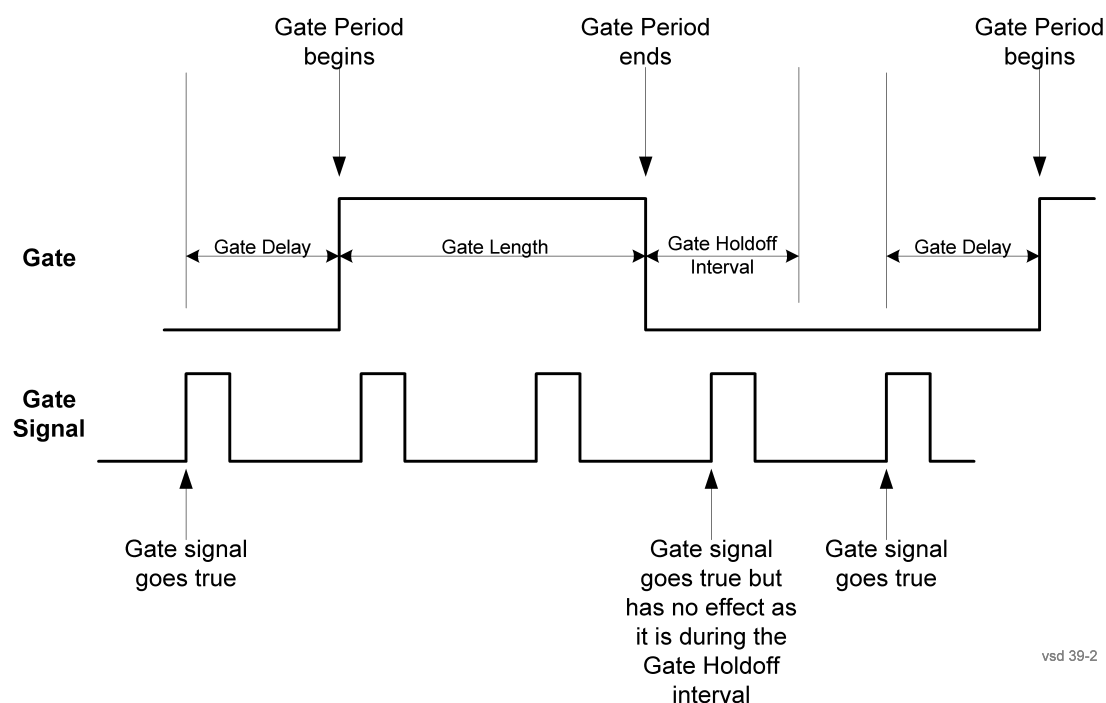

vsd 39-2

When **Gate Holdoff** is Auto, the wait time calculated by the instrument is used. When Gate Time is in Manual, the user may adjust the wait time, usually decreasing it in order to achieve greater speed, but at the risk of decreasing accuracy.

8 Trigger

8.3 Gate Settings

When the **Method** control is set to **Video** or **FFT**, the **Gate Holdoff** function has no effect.

In measurements that do not support "Auto Function" on page 4068, the value shown when Auto is selected is "---" and the manually set holdoff is returned to a query.

Remote Command	<code>[:SENSe]:SWEp:EGATe:HOLDoFF <time></code> <code>[:SENSe]:SWEp:EGATe:HOLDoFF?</code>
Example	<code>:SWE:EGAT:HOLD 0.0002</code> <code>:SWE:EGAT:HOLD?</code>
Couplings	<p>When Gate Holdoff is Auto, the Gate Holdoff control shows the value calculated by the instrument for the wait time</p> <p>Pressing the Gate Holdoff control while it is in Auto and not selected, causes the control to become selected and allows the user to adjust the value. If the value is adjusted, the setting changes to Man</p> <p>Pressing the Gate Holdoff key, while it is in Auto and selected, does not change the value of Gate Holdoff, but causes the setting to change to Man. Now the user can adjust the value</p> <p>Pressing the control while it is in Man and selected, cause the value to change back to Auto</p> <p>Pressing the control while it is in Man and not selected, causes the control to become selected and allows the user to adjust the value</p> <p>When Method is set to Video or FFT, the Gate Holdoff function has no effect</p>
Preset	Auto
State Saved	Saved in instrument state
Min	1 μ sec
Max	1 sec

Auto Function

Remote Command	<code>[:SENSe]:SWEp:EGATe:HOLDoFF:AUTO OFF ON 0 1</code> <code>[:SENSe]:SWEp:EGATe:HOLDoFF:AUTO?</code>
Example	<code>:SWE:EGAT:HOLD:AUTO ON</code> <code>:SWE:EGAT:HOLD:AUTO?</code>
Preset	Auto/On
State Saved	Saved in instrument state
Range	Auto Man

8.3.8 Gate View Sweep Time

Controls the Sweep Time in the Gate View window. To provide an optimal view of the gate signal, the instrument initializes **Gate View Sweep Time** based on the current settings of Gate Delay and Gate Length.

NOTE

Since **Gate View Sweep Time** is used to calculate Gate Delay and Gate Length increments, it is maintained even when not in **Gate View**.

NOTE

In instruments without sweeping hardware such as some modular analyzers, this control may be labeled **Gate View Acquisition Time**

Remote Command	<code>[:SENSe]:SWEep:EGATe:TIME <time></code> <code>[:SENSe]:SWEep:EGATe:TIME?</code>
Example	<code>:SWE:EGAT:TIME 500 ms</code>
Dependencies	Gate View Sweep Time is initialized: <ul style="list-style-type: none"> – On Preset (after initializing delay and length) – Every time the Gate Method is set/changed <p>Additionally, in the Swept SA measurement, whenever you do a Preset, or leave Gate View, the instrument remembers the Gate Delay and Gate Length settings. Then, when returning to Gate View, if the current Gate Delay and/or Gate Length do not match the remembered values Gate View Sweep Time is re-initialized</p>
Preset	WiMAX OFDMA: 5 ms GSM/EDGE: 1 ms 5G NR: 10 ms Others: 800 μ s
State Saved	Saved in instrument state
Min	1 μ s
Max	6000 s
Annotation	The gate view Sweep Time is displayed in the lower-right corner of the gate view window

8.3.9 Gate View Start Time

Controls the time at the left edge of the Gate View.

Remote Command	<code>[:SENSe]:SWEep:EGATe:VIEW:STARt <time></code> <code>[:SENSe]:SWEep:EGATe:VIEW:STARt?</code>
Example	<code>:SWE:EGAT:VIEW:STAR 10ms</code>
Notes	Units of time are required or no units; otherwise, an invalid suffix error message is generated
Preset	0 ms
State Saved	Saved in instrument state
Min	0
Max	500 ms

8.3.10 Gate Delay Compensation

Allows you to select an RBW-dependent value by which to adjust the gate delay, to compensate for changes in the delay caused by RBW effects. You can select between uncompensated operation and two types of compensation:

Uncompensated	OFF
Delay Until RBW Settled	SETTled
Compensate for RBW Group Delay	GDElay

For full details of these options, see ["More Information" on page 4070](#)

Remote Command	<code>[:SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE OFF SETTled GDElay</code> <code>[:SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE?</code>
Example	<code>:SWE:EGAT:DEL:COMP:TYPE SETT</code> <code>:SWE:EGAT:DEL:COMP:TYPE?</code>
Notes	<p>Although this function is Meas Global, there are some measurements that do not support this function. In those measurements the control is not displayed, and the operation will be Uncompensated</p> <p>If some but not all measurements in a Mode support this function, then selecting a measurement that does not support it will not change the Meas Global selection; it will simply be “Uncompensated” while in that measurement. The SCPI command is still accepted while in that measurement</p> <p>If Gate Delay Compensation is not supported at all within a particular mode, the control is not displayed, and if the SCPI command is sent while in a measurement within that mode, an “Undefined Header” message is generated</p> <p>Note that, for modular products such as EXM and VXT, this function is not supported. In those products the control is not displayed and the SCPI is ignored, although it is accepted without error</p>
Preset	TD-SCDMA, LTEA FDD/TDD, 5G NR Modes: GDElay All other Modes: SETTled
State Saved	Saved in instrument state
Range	OFF SETTled GDElay

More Information

Selecting **Uncompensated** means that the actual gate delay is as you set it.

Selecting **Delay Until RBW Settled** causes the gate delay to be increased above the user setting by an amount equal to $3.06/\text{RBW}$. This compensated delay causes the GATE START and GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** control does *not* change.

Delay Until RBW Settled allows excellent measurements of gated signals, by allowing the IF to settle following any transient that affects the burst. Excellent measurements also require that the analysis region not extend into the region affected by the falling edge of the burst. Thus, excellent measurements can only be made over a width that declines with narrowing RBWs, which is achieved by decreasing the gate length below the user setting by an amount equal to $2.53/\text{RBW}$. Therefore, for general purpose compensation, you will still want to change the gate length with changes in RBW even if the gate delay is compensated. The compensated Gate Length is limited by the instrument so that it will never go below 10% of the value shown on the Gate Length key, as otherwise the sweep times could get very long. Anytime the **Gate Length** and **RBW** values combine in such a way that this limiting takes place, a warning is displayed. For measurements that contain multiple sweeps with different RBW like SEM and SPUR, the smallest RBW is used for this limiting.

Selecting **Compensate for RBW Group Delay** causes the gate delay to be increased above the user setting by an amount equal to $1.81/\text{RBW}$. This compensated delay causes the GATE START, GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** control does *not* change. **Compensate for RBW Group Delay** also includes gate length compensation; the gate length itself is adjusted as necessary to attempt to compensate for delay effects imposed by the RBW.

Compensate for RBW Group Delay is similar to **Delay Until RBW Settled** but compensates for the group delay of the RBW filter, rather than the filter settling time. As the RBW gets narrow, this can allow the settling tail of the RBW to affect the beginning part of the gated measurement and allow the beginning of the RBW settling transient to affect the end of the gated measurement. These two effects are symmetric because the RBW response is symmetric. Because the gate length is not automatically compensated, some users might find this compensation to be more intuitive than compensation for RBW settling.

8.3.11 Min Fast Position Query (Remote Query Only)

Queries the position of the MIN FAST line, relative to the delay reference (REF) line. See ["Gate View On/Off" on page 4061](#). If this query is sent while not in Gate view, the MinFast calculation is performed based on the current values of the appropriate parameters and the result is returned. Reading this value lets you set an optimal gate delay value for the current measurement setup.

Example	<code>:SWE:EGAT:MIN?</code>
Backwards Compatibility SCPI	<code>[:SENSe] :SWEep:EGATe:MINFast?</code>

8.3.12 Gate Preset (Remote Command Only)

Presets the time-gated spectrum analysis capability.

This command sets gate parameter values to the ESA preset values, as follows:

- Gate trigger type = edge
- Gate polarity = positive
- Gate delay = 1 us
- Gate length = 1 us

Backwards Compatibility	<code>[:SENSe] :SWEep :TIME :GATE :PRESet</code>
SCPI	ESA Compatibility

8.3.13 Gate Level (Remote Command Only)

Sets the gate input transition point level for the external **TRIGGER** inputs on the front and rear panel. This is a legacy command for PSA compatibility. It is simply an alias to the equivalent trigger level command.

Notes	This command is simply an alias to <code>:TRIGger [:SEQuence] :EXTeRnal [1] 2 :LEVe1</code>
Backwards Compatibility	<code>[:SENSe] :SWEep :EGATe :EXTeRnal [1] 2 :LEVe1 <voltage></code>
SCPI	<code>[:SENSe] :SWEep :EGATe :EXTeRnal [1] 2 :LEVe1?</code>

8.3.14 Gate Polarity (Remote Command Only)

Sets the polarity for the gate signal. This setup is now done using the gate trigger's slope setting.

When **POSitive** is selected, a positive-going edge (Edge) or a high voltage (Level) will satisfy the gate condition, after the delay set with the Gate Delay key. When **NEGative** is selected, a negative-going edge (Edge) or a low voltage (Level) will satisfy the gate condition after the delay.

Example	<code>:SWE :EGAT :POL NEG</code> <code>:SWE :EGAT :POL ?</code>
Preset	<code>POSitive</code>
State Saved	Saved in instrument state

Backwards Compatibility SCPI	<div><code>[:SENSe]:SWEep:EGATe:POLarity NEGative POSitive</code></div> <div><code>[:SENSe]:SWEep:EGATe:POLarity?</code></div> <div>This backwards-compatibility command is available in Modes that support Gate Polarity parameter</div> <div><code>[:SENSe]:SWEep:TIME:GATE:POLarity</code></div> <div>This backwards-compatibility command is available in SA and SCPIILC Modes</div> <div>ESA compatibility</div>
Preset	<div>HIGH</div>
Backwards Compatibility SCPI	<div><code>[:SENSe]:SWEep:TIME:GATE:LEVel HIGH LOW</code></div> <div><code>[:SENSe]:SWEep:TIME:GATE:LEVel?</code></div> <div>ESA compatibility</div>

8.4 Enables the hardware accelerated stepped FFT gating feature (Display only)

Enables or disables the hardware-accelerated stepped FFT gating feature:

- Enabling the Hardware Acceleration feature means that the Stepped FFT algorithm will run on the FPGA for configurations where speed improvements are possible
- Disabling the hardware-accelerated stepped FFT gating means the Stepped FFT software algorithm will always run on the CPU instead of the FPGA

When enabled it is only used when applicable and determined by the current sweep configuration.

The default value is **ON** and its value is power-on persistent.

Remote Command	<code>[:SENSe]:SWEp:EGATe:HACCeLerate:ENABle OFF ON 0 1</code>
Example	<code>:SWEp:EGATe:HACCeLerate:ENABle ON</code>
Notes	Value ON means the hardware accelerated stepped FFT gating is used intelligently Value OFF means the hardware accelerated stepped FFT gating is always disabled
Dependencies	Only valid in ACP, CHP and SEM measurements
State Saved	Saved in instrument state

8.5 Periodic Sync Src

Contains controls that let you select and configure the sync signal for the **Periodic Timer** Trigger.

For convenience controls for adjusting the level and slope of the selected sync source are provided here. Note that these settings match those in the **Trigger** and **Gate Source** menus; that is, each trigger source has only one value of level and slope, regardless of which menu it is accessed from.

8.5.1 Select Periodic Timer Sync Source

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you are triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

Note that, with Sync Source **OFF**, the timing will drift unless the signal source frequency is locked to the instrument frequency reference.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:SYNC EXTeRnal1 EXTeRnal2 RFBurst PXI INTeRnal OFF</code> <code>:TRIGger[:SEquence]:FRAMe:SYNC?</code>
Example	<code>:TRIG:FRAM:SYNC EXT1</code> <code>:TRIG:FRAM:SYNC EXT2</code> <code>:TRIG:FRAM:SYNC RFB</code> <code>:TRIG:FRAM:SYNC OFF</code>
Dependencies	PXI and INTeRnal triggers are only found in modular analyzers such as VXT Not available in E7760 or UXM In some models, there is no second External input. In these models, the External 2 selection is not shown, and the EXTeRnal2 parameter generates a “Hardware missing; Not available for this model number” message
Preset	OFF GSM/EDGE, LTE, LTETDD, 5G NR: RFBurst
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:FRAMe:SYNC EXTeRnal</code> For backwards-compatibility, the parameter EXTeRnal is mapped to EXTeRnal1

8.6 Auto/Holdoff

Contains controls that let you adjust Auto Trigger and Trigger Holdoff parameters

This tab does not appear in Spectrum Analyzer Mode in VXT model M9421A.

8.6.1 Trig Holdoff

Sets the holdoff time between triggers. When the trigger condition is satisfied, the trigger occurs, the delay begins, and the holdoff time begins. New trigger conditions will be ignored until the holdoff time expires. For a free-running trigger, the holdoff value is the minimum time between triggers.

Remote Command	<code>:TRIGger[:SEquence]:HOLDoff <time></code> <code>:TRIGger[:SEquence]:HOLDoff?</code>
Example	<code>:TRIG:HOLD:STAT ON</code> <code>:TRIG:HOLD 100 ms</code>
Dependencies	Unavailable if the selected Input is BBIQ . If this is the case, the control is grayed-out if it is pressed the informational message "Feature not supported for this Input" is displayed. If the SCPI command is sent, the error "Settings conflict; Feature not supported for this Input" is generated
Preset	All modes except GSM/EDGE, LTEAFDD/TDD and 5G NR: 100 ms GSM/EDGE, Bluetooth: 10 μ s LTEATDD: 19 ms 5G NR: 4 ms
State Saved	Saved in instrument state
Min	0 s
Max	0.5 s VXT models M9410A/11A/15A/16A: 2.86 s
Auto Function	
Remote Command	<code>:TRIGger[:SEquence]:HOLDoff:STATe OFF ON 0 1</code> <code>:TRIGger[:SEquence]:HOLDoff:STATe?</code>
Preset	All modes but GSM/EDGE: OFF GSM/EDGE mode: ON

8.6.2 Auto Trig

Sets the time that the instrument will wait for the trigger conditions to be met. If they are not met after that much time, then the instrument is triggered anyway.

Remote Command	<code>:TRIGger[:SEquence]:ATRigger <time></code> <code>:TRIGger[:SEquence]:ATRigger?</code>
Example	<code>:TRIG:ATR:STAT ON</code> <code>:TRIG:ATR 100 ms</code>
Notes	The "time that the instrument will wait" starts when the instrument is ready for a trigger, which may be hundreds of ms after the data acquisition for a sweep is done. The "time" ends when the trigger condition is satisfied, not when the delay ends
Dependencies	Not available in Real Time Spectrum Analyzer Mode
Preset	Off, 100 ms
State Saved	Saved in instrument state
Min	1 ms
Max	100 s
Auto Function	
Remote Command	<code>:TRIGger[:SEquence]:ATRigger:STATe OFF ON 0 1</code> <code>:TRIGger[:SEquence]:ATRigger:STATe?</code>
Preset	OFF

8.6.3 Holdoff Type

Enables you to set the Trigger **Holdoff Type**.

NOTE

Holdoff Type is not supported by all measurements. If the current measurement does not support it, this control does not appear, and **Holdoff Type** is Normal. If **Holdoff Type** SCPI is sent while in such a measurement, the SCPI is accepted and the setting remembered, but it has no effect until a measurement is in force that supports **Holdoff Type**.

Trigger Holdoff Type functionality

NORMa1	This is the "oscilloscope" type of trigger holdoff and is the setting when the Holdoff Type control does not appear. In this type of holdoff, no new trigger will be accepted until the holdoff interval has expired after the previous trigger
ABOVe	If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) and then remains above the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) after having been above the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed
BELow	If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) after

8 Trigger
8.6 Auto/Holdoff

having been below the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) and then remains below the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed

Remote Command	:TRIGger[:SEquence]:HOLDoff:TYPE NORMa1 ABovE BELow :TRIGger[:SEquence]:HOLDoff:TYPE?	
Example	:TRIG:HOLD:TYPE NORM	
Preset	Modes	Setting
	GSM/EDGE	BELow
	Bluetooth	
	All others	NORMa1
State Saved	Saved in instrument state	

9 Programming the Instrument

This section provides information about the instrument's SCPI programming interface. You can also operate the instrument remotely using some legacy programming languages by running the N9061C Remote Language Compatibility measurement application and the N9062C SCPI Language Compatibility measurement application.

9.1 List of Supported SCPI Commands

The SCPI commands available while using this application are listed below.

To find a command in the list, search according to its first alphanumeric character, ignoring any leading ":" or "[" characters. The sole exception to this is the asterisk [*] prefix, identifying IEEE 488.2 Common commands and queries; all these appear at the start of the list.

Note that most commands also have query forms. In cases where a command and its query are described in the same topic, the list below includes the command and query as a *single* item, with no suffix.

Suffix	Interpretation
No suffix	Command & Query, <i>or</i> Command only For details, click the link to view the command definition
?	Query only

*

*CAL
*CAL
*CLS
*ESE
*ESR?
*IDN?
*OPC
*OPT?
*RCL
*RST
*SAV
*SRE
*STB?
*TRG
*TST?
*WAI

A

ABORT

C

CALCulate:<meas>:MATH

```

CALCulate[:<meas>]:MATH?
CALCulate:<meas>:MTRace
CALCulate:<meas>:PLAY:MODE
CALCulate:<meas>:PLAY:SRATe
CALCulate:<meas>:PLAY:START
CALCulate:<meas>:PLAY:STEP:FORWARD
CALCulate:<meas>:PLAY:STOP
CALCulate:ACPower:LIMit:STATe
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:LEFT
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:RIGHT
CALCulate:ACPower:MARKer[1]|2|...|12:MINimum
CALCulate:ACPower:MARKer[1]|2|...|12:MODE
CALCulate:ACPower:MARKer[1]|2|...|12:PTPeak
CALCulate:ACPower:MARKer[1]|2|...|12:REFerence
CALCulate:ACPower:MARKer[1]|2|...|12:TRACe
CALCulate:ACPower:MARKer[1]|2|...|12:X
CALCulate:ACPower:MARKer[1]|2|...|12:X:POSition
CALCulate:ACPower:MARKer[1]|2|...|12:Y?
CALCulate:ACPower:MARKer:AOFF
CALCulate:ACPower:MARKer:COUPle[:STATe]
CALCulate:ACPower:OFFSet[1]|2[:OUTer]:LIST:LIMit:NEGative
[:UPPer]:DATA
CALCulate:ACPower:OFFSet[1]|2[:OUTer]:LIST:LIMit:POSitive
[:UPPer]:DATA
CALCulate:CHPower:MARKer[1]|2|...|12:MAXimum
CALCulate:CHPower:MARKer[1]|2|...|12:MODE
CALCulate:CHPower:MARKer[1]|2|...|12:REFerence
CALCulate:CHPower:MARKer[1]|2|...|12:TRACe
CALCulate:CHPower:MARKer[1]|2|...|12:X
CALCulate:CHPower:MARKer[1]|2|...|12:X:POSition
CALCulate:CHPower:MARKer[1]|2|...|12:Y?
CALCulate:CHPower:MARKer:AOFF
CALCulate:CLIMits:FAIL?
CALCulate:DATA<n>:COMPRESS?
CALCulate:DATA[1]|2|...|6:PEAKs?
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:BAND:LEFT
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:BAND:RIGHT
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:BAND:SPAN
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:INTERval:LEFT
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:INTERval:RIGHT
CALCulate:EVM:MARKer[1]|2|...|12:FUNCTION:INTERval:SPAN
CALCulate:EVM:MARKer[1]|2|...|12:MAXimum
CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:LEFT
CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:PREVIOUS
CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:RIGHT
CALCulate:EVM:MARKer[1]|2|...|12:MINimum

```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```

CALCulate:EVM:MARKer[1]|2|...|12:MODE
CALCulate:EVM:MARKer[1]|2|...|12:PTPeak
CALCulate:EVM:MARKer[1]|2|...|12:REference
CALCulate:EVM:MARKer[1]|2|...|12[:SET]:CENTer
CALCulate:EVM:MARKer[1]|2|...|12:TRACe:IBEM
CALCulate:EVM:MARKer[1]|2|...|12:WINDow
CALCulate:EVM:MARKer[1]|2|...|12:X
CALCulate:EVM:MARKer[1]|2|...|12:Y:ANNotation?
CALCulate:EVM:MARKer[1]|2|...|12:Y:IMAGinary
CALCulate:EVM:MARKer[1]|2|...|12:Y[:REAL]
CALCulate:EVM:MARKer[1]|2|...|12:Z
CALCulate:EVM:MARKer:AOff
CALCulate:EVM:MARKer:COUPle[:STATe]
CALCulate:EVM:RECalculate
CALCulate:FPOWer:POWer[1,2,...,999]?
CALCulate:FPOWer:POWer[1,2,...,999]:CONFigure
CALCulate:FPOWer:POWer[1,2,...,999]:DEFine?
CALCulate:FPOWer:POWer[1,2,...,999]:FETCh?
CALCulate:FPOWer:POWer[1,2,...,999]:INITiate
CALCulate:FPOWer:POWer[1,2,...,999]:READ?
CALCulate:FPOWer:POWer[1,2,...,999]:READ1?
CALCulate:FPOWer:POWer[1,2,...,999]:READ2?
CALCulate:FPOWer:POWer[1,2,...,999]:RESet
CALCulate:MATH
CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION
CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:LEFT
CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:RIGHT
CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:SPAN
CALCulate:MONitor:MARKer[1]|2|...|12:MAXimum
CALCulate:MONitor:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:MONitor:MARKer[1]|2|...|12:MODE
CALCulate:MONitor:MARKer[1]|2|...|12:REference
CALCulate:MONitor:MARKer[1]|2|...|12:STATe
CALCulate:MONitor:MARKer[1]|2|...|12:TRACe
CALCulate:MONitor:MARKer[1]|2|...|12:X
CALCulate:MONitor:MARKer[1]|2|...|12:X:POSition
CALCulate:MONitor:MARKer[1]|2|...|12:Y?
CALCulate:MONitor:MARKer:AOff
CALCulate:MONitor:MARKer:COUPle[:STATe]
CALCulate:OBWidth:LIMit:FBLimit
CALCulate:OBWidth:LIMit:FBLimit:AUTO
CALCulate:OBWidth:LIMit[:TEST]
CALCulate:OBWidth:MARKer[1]|2|...|12:MAXimum
CALCulate:OBWidth:MARKer[1]|2|...|12:MODE
CALCulate:OBWidth:MARKer[1]|2|...|12:REference
CALCulate:OBWidth:MARKer[1]|2|...|12:TRACe
CALCulate:OBWidth:MARKer[1]|2|...|12:X
CALCulate:OBWidth:MARKer[1]|2|...|12:X:POSition
CALCulate:OBWidth:MARKer[1]|2|...|12:Y?
CALCulate:OBWidth:MARKer:AOff

```

```

CALCulate:PStatistic:MARKer[1]|2|...|12:MODE
CALCulate:PStatistic:MARKer[1]|2|...|12:REfERENCE
CALCulate:PStatistic:MARKer[1]|2|...|12:TRACe
CALCulate:PStatistic:MARKer[1]|2|...|12:X
CALCulate:PStatistic:MARKer[1]|2|...|12:Y?
CALCulate:PStatistic:MARKer:AOff
CALCulate:PStatistic:MARKer:COUple[:STATe]
CALCulate:PStatistic:RANGe[:PROBability]:MINimum
CALCulate:PStatistic:STORe:REfERENCE
CALCulate:PVTime:MARKer[1]|2|...|12:MAXimum
CALCulate:PVTime:MARKer[1]|2|...|12:MODE
CALCulate:PVTime:MARKer[1]|2|...|12:REfERENCE
CALCulate:PVTime:MARKer[1]|2|...|12:TRACe
CALCulate:PVTime:MARKer[1]|2|...|12:X
CALCulate:PVTime:MARKer[1]|2|...|12[:X]:POSition
CALCulate:PVTime:MARKer:AOff
CALCulate:PVTime:MARKer:COUple[:STATe]
CALCulate:PVTime:MRANGe
CALCulate:PVTime:SBNumber
CALCulate:SEMask:LLINe:STATe
CALCulate:SEMask:MARKer[1]|2|...|12:MODE
CALCulate:SEMask:MARKer[1]|2|...|12:TRACe
CALCulate:SEMask:MARKer[1]|2|...|12:X
CALCulate:SEMask:MARKer[1]|2|...|12:X:POSition
CALCulate:SEMask:MARKer[1]|2|...|12:Y?
CALCulate:SEMask:MARKer:AOff
CALCulate:SEMask:MARKer:COUple[:STATe]
CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum
CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:LEFT
CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:RIGHT
CALCulate:SPURious:MARKer[1]|2|...|12:MINimum
CALCulate:SPURious:MARKer[1]|2|...|12:MODE
CALCulate:SPURious:MARKer[1]|2|...|12:PTPeak
CALCulate:SPURious:MARKer[1]|2|...|12:REfERENCE
CALCulate:SPURious:MARKer[1]|2|...|12:TRACe:ATTached
CALCulate:SPURious:MARKer[1]|2|...|12:X
CALCulate:SPURious:MARKer[1]|2|...|12:X:POSition
CALCulate:SPURious:MARKer[1]|2|...|12:Y?
CALCulate:SPURious:MARKer:AOff
CALCulate:SPURious:MARKer:COUple[:STATe]
CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA
[:START]
CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute
[:UPPer]:DATA:STOP
CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute
[:UPPer]:DATA:STOP:AUTO
CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion
CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:LEFT
CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:RIGHT

```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:SPAN
CALCulate:WAVEform:MARKer[1]|2|...|12:MAXimum
CALCulate:WAVEform:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:WAVEform:MARKer[1]|2|...|12:MINimum
CALCulate:WAVEform:MARKer[1]|2|...|12:MODE
CALCulate:WAVEform:MARKer[1]|2|...|12:REFeRence
CALCulate:WAVEform:MARKer[1]|2|...|12:TRACe
CALCulate:WAVEform:MARKer[1]|2|...|12:X
CALCulate:WAVEform:MARKer[1]|2|...|12:X:POSition
CALCulate:WAVEform:MARKer[1]|2|...|12:Y?
CALCulate:WAVEform:MARKer:AOff
CALCulate:WAVEform:MARKer:COUPle[:STATe]
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:START
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STOP
CALibration[:ALL]
CALibration[:ALL]:NPENding
CALibration:AUTO
CALibration:AUTO:ALERT
CALibration:AUTO:MODE
CALibration:AUTO:TIME:OFF?
CALibration:DATA:BACKup
CALibration:DATA:DEFault
CALibration:DATA:INTernal:BACKup
CALibration:DATA:INTernal:REStore
CALibration:DATA:REStore
CALibration:EMIXer
CALibration:EXPIred
CALibration:FREQuency:REFeRence:COARse
CALibration:FREQuency:REFeRence:FINE
CALibration:FREQuency:REFeRence:MODE
CALibration:INTernal:ASFRanges?
CALibration:INTernal:ASFRanges:EXTend[:STATe]
CALibration:INTernal:ASFRanges:FRANGes
CALibration:INTernal:ASFRanges[:STATe]
CALibration:INTernal:EMPath
CALibration:INTernal:FAST[:ALL]
CALibration:INTernal:HBAND[:ALL]
CALibration:INTernal:LBAND[:ALL]
CALibration:INTernal:LOLeakage
CALibration:INTernal:RECeiver[:ALL]
CALibration:INTernal:RRHead:AMPLitude
CALibration:INTernal:RRHead:AMPLitude:FAST
CALibration:INTernal:RRHead:IFCable
CALibration:INTernal:RRHead:LOPower
CALibration:INTernal:RRHead:LOSync
CALibration:INTernal:SOURce[:ALL]
CALibration:INTernal:SOURce[:ALL]:NPENding
CALibration:INTernal:VXT:TRANsceiver
CALibration:IQ:FLATness:I

CALibration:IQ:FLATness:I|IBAR|Q|QBAR:TIME?
CALibration:IQ:FLATness:IBAR
CALibration:IQ:FLATness:Q
CALibration:IQ:FLATness:QBAR
CALibration:IQ:ISOLation
CALibration:IQ:ISOLation:TIME?
CALibration:IQ:PROBe:I
CALibration:IQ:PROBe:I|:TIME?
CALibration:IQ:PROBe:IBar
CALibration:IQ:PROBe:IBAR:TIME?
CALibration:IQ:PROBe:I:CLear
CALibration:IQ:PROBe:Q
CALibration:IQ:PROBe:QBar
CALibration:IQ:PROBe:QBAR:TIME?
CALibration:IQ:PROBe:Q:CLear
CALibration:IQ:PROBe:Q:TIME?
CALibration:MIMO:ALL
CALibration:MIMO:ALL:NPENDING
CALibration:MIMO:DElay:RESidual
CALibration:MIMO:DElay:RESidual:NPENDING
CALibration:MIMO:DElay:TRIGger
CALibration:MIMO:DElay:TRIGger:NPENDING
CALibration:MIMO:FREquency:START
CALibration:MIMO:FREquency:STOP
CALibration:MIMO:PHASe
CALibration:MIMO:PHASe:NPENDING
CALibration:MIMO:SECondary:INSTrument1|...|4:IPADdress
CALibration:MIMO:SECondary:INSTrument1|...|4:IPADdress1|...|4?
CALibration:MIMO:SECondary:INSTrument1|...|4:SElected
CALibration:NFLoor
CALibration:NRF
CALibration:NRF:NPENDING
CALibration:NRFSelector
CALibration:PDElay:CORRection
CALibration:PDElay:SOURce
CALibration:PRESelector
CALibration:REFerence:CLOCK?
CALibration:REFerence:CLOCK:END?
CALibration:REFerence:CLOCK:INITialize?
CALibration:RF
CALibration:RF:NPENDING
CALibration:RFSelector:ALERT
CALibration:RFSelector:CONDUCTed
CALibration:RFSelector:FULL
CALibration:RFSelector:ONLY
CALibration:RFSelector:RADiated
CALibration:RFSelector:SCHeduler:RECurrence
CALibration:RFSelector:SCHeduler:RECurrence:DAY
CALibration:RFSelector:SCHeduler:RECurrence:WEEK
CALibration:RFSelector:SCHeduler:STATe
CALibration:RFSelector:SCHeduler:TASK

9 Programming the Instrument

9.1 List of Supported SCPI Commands

CALibration:RFPSelector:SCHeduler:TIME:NEXT?
CALibration:RFPSelector:SCHeduler:TIME:START
CALibration:TDS
CALibration:TEMPerature:AGO?
CALibration:TEMPerature:CURRent?
CALibration:TEMPerature:CURRent:RRHead?
CALibration:TEMPerature:CURRent:RRHead:LO?
CALibration:TEMPerature:INTernal:EMPath?
CALibration:TEMPerature:INTernal:FAST?
CALibration:TEMPerature:INTernal:HBAND?
CALibration:TEMPerature:INTernal:LBAND?
CALibration:TEMPerature:INTernal:LOLeakage?
CALibration:TEMPerature:INTernal:RECeiver?
CALibration:TEMPerature:INTernal:RRHead:AMPLitude?
CALibration:TEMPerature:INTernal:RRHead:AMPLitude:FAST?
CALibration:TEMPerature:INTernal:RRHead:IFCable?
CALibration:TEMPerature:INTernal:RRHead:LOPower?
CALibration:TEMPerature:INTernal:RRHead:LOSync?
CALibration:TEMPerature:INTernal:SOURce?
CALibration:TEMPerature:INTernal:VXT:TRANsceiver?
CALibration:TEMPerature:LALL?
CALibration:TEMPerature:LIF?
CALibration:TEMPerature:LPReselector?
CALibration:TEMPerature:LRF?
CALibration:TEMPerature:MAXimum?
CALibration:TEMPerature:MINimum?
CALibration:TEMPerature:NFLoor?
CALibration:TEMPerature:OLDest:SEConds?
CALibration:TEMPerature:OLDest[:TEMPerature]?
CALibration:TEMPerature:PDElay:SOURce?
CALibration:TEMPerature:RFPSelector:LCONducted?
CALibration:TEMPerature:RFPSelector:LRADiated?
CALibration:TEMPerature:UPDown:CONVerter?
CALibration:TIME:ELAPsed:NFLoor?
CALibration:TIME:INTernal:EMPath?
CALibration:TIME:INTernal:FAST?
CALibration:TIME:INTernal:HBAN?
CALibration:TIME:INTernal:LBAND?
CALibration:TIME:INTernal:LOLeakage?
CALibration:TIME:INTernal:RECeiver?
CALibration:TIME:INTernal:RRHead:AMPLitude?
CALibration:TIME:INTernal:RRHead:AMPLitude:FAST?
CALibration:TIME:INTernal:RRHead:IFCable?
CALibration:TIME:INTernal:RRHead:LOPower?
CALibration:TIME:INTernal:RRHead:LOSync?
CALibration:TIME:INTernal:SOURce?
CALibration:TIME:INTernal:VXT:TRANsceiver?
CALibration:TIME:LALL?
CALibration:TIME:LIF?
CALibration:TIME:LPReselector?

CALibration:TIME:LRF?
CALibration:TIME:NFLoor?
CALibration:TIME:PDElay:SOURce?
CALibration:TIME:REfERENCE:CLOCK?
CALibration:TIME:RFPSelector:LCONducted?
CALibration:TIME:RFPSelector:LRADiated?
CALibration:TIME:UPDown:CONVerter?
CALibration:UPDown:CONVerter
CALibration:YTF
CALibration:YTF:NPENDING
CONFigure?
CONFigure:<measurement>[:NDEFault]
CONFigure:ACPower
CONFigure:ACPower
CONFigure:ACPower:NDEFault
CONFigure:CATalog?
CONFigure:CHPower
CONFigure:CHPower
CONFigure:CHPower:NDEFault
CONFigure:EVM
CONFigure:EVM
CONFigure:EVM:NDEFault
CONFigure:MONitor
CONFigure:MONitor
CONFigure:MONitor:NDEFault
CONFigure:OBWidth
CONFigure:OBWidth
CONFigure:OBWidth:NDEFault
CONFigure:PAVTime
CONFigure:PAVTime
CONFigure:PAVTime:NDEFault
CONFigure:PSTatistic
CONFigure:PSTatistic
CONFigure:PSTatistic:NDEFault
CONFigure:PVTime
CONFigure:PVTime
CONFigure:PVTime:NDEFault
CONFigure:SEMask
CONFigure:SEMask
CONFigure:SEMask:NDEFault
CONFigure:SPURious
CONFigure:SPURious
CONFigure:SPURious:NDEFault
CONFigure:WAVEform
CONFigure:WAVEform
CONFigure:WAVEform:NDEFault
COUPle

D

```

DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALE]:RANGe
DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:COUPle
DISPlay:ACPower:VIEW:NSElect
DISPlay:ACPower:VIEW:RTYPE
DISPlay:ACPower:VIEW[:SElect]
DISPlay:ACPower:VIEW:WINDow:CINformation:FREquency
DISPlay:ACPower:WINDow[1]:BGRaph
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition
DISPlay:ACTivefunc[:STATe]
DISPlay:ANNotation:MBAR[:STATe]
DISPlay:ANNotation:SCReen[:STATe]
DISPlay:ANNotation:TRACe[:STATe]
DISPlay:BACKlight
DISPlay:CHPower:VIEW:NSElect
DISPlay:CHPower:VIEW[:SElect]
DISPlay:CHPower:VIEW:WINDow:CINformation:FREquency
DISPlay:CHPower:WINDow[1]:BGRaph
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition
DISPlay:ENABLE
DISPlay:EVM:CCARrier0|...|15:PVTime:X:UNIT
DISPlay:EVM:CCARrier0|...|15:REVSpectrum|DPVSpectrum:ALL|SSB1|SSB2|
DBWP0|DBWP1|DBWP2|DBWP3|DBWP4|UBWP1|UBWP2|UBWP3|UBWP4:X:UNIT
DISPlay:EVM:CCARrier0|...|15:REVTime|DPVTime:ALL|SSB1|SSB2|DBWP0|DB
WP1|DBWP2|DBWP3|DBWP4|UBWP1|UBWP2|UBWP3|UBWP4:X:UNIT
DISPlay:EVM:CC:SElected
DISPlay:EVM:COMBine:BWP
DISPlay:EVM:REFeRence:BWP
DISPlay:EVM:TRACe:SCS:ANNotation
DISPlay:EVM:TRACe:ULINK:IBEM:LLINE:ALL
DISPlay:EVM:TRACe:ULINK:IBEM:LLINE:DC
DISPlay:EVM:TRACe:ULINK:IBEM:LLINE:GENeral
DISPlay:EVM:TRACe:ULINK:IBEM:LLINE:IMAGe
DISPlay:EVM:VIEW[:SElect]
DISPlay:EVM:WINDow[1]|2|...|16[:TRACe]:DATA
DISPlay:EVM:WINDow[1]|2|...|9:BWP
DISPlay:EVM:WINDow[1]|2|...|9:CCARrier
DISPlay:EVM:WINDow[1]|2|...|9:CHANnel
DISPlay:EVM:WINDow[1]|2|...|9:LAYer
DISPlay:EVM:WINDow[1]|2|...|9[:TRACe]:FORMat
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALE]:COUPle
  
```

```

DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:RLEVel
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:RPOSition
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:RSCS
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:UNIT:FREQuency
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:UNIT:TIME
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:WIDTh
DISPlay:EVM:WINDow[1]|2|...|9:Y:POLar:HCENter
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:AUTO:ONCE
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:PDIVision
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:RLEVel
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:RPOSition
DISPlay:EVM:WINDow[1]|2|...|9:Z[:SCALe]:COUPle
DISPlay:EVM:WINDow[1]|2|...|9:Z[:SCALe]:RLEVel
DISPlay:EVM:WINDow[1]|2|...|9:Z[:SCALe]:RPOSition
DISPlay:EVM:WINDow[1]|2|...|9:Z[:SCALe]:UNIT:FREQuency
DISPlay:EVM:WINDow[1]|2|...|9:Z[:SCALe]:WIDTh
DISPlay:EVM:Y[:SCALe]:AUTO:REStArt
DISPlay:FSCreen[:STATe]
DISPlay:GRATicule[:STATe]
DISPlay:MONitor:VIEW:WINDow:CATtribute
DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency
DISPlay:MONitor:VIEW:WINDow:SATtribute[:STATe]
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUPle
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIVision
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGe
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEVel
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOSition
DISPlay:OBWidth:VIEW:NSElect
DISPlay:OBWidth:VIEW[:SElect]
DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:COUPle
DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:PDIVision
DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel
DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOSition
DISPlay:OBWidth:WINDow[1]:XDB
DISPlay:OBWidth:WINDow2:BOUNDaries:FREQuency
DISPlay:PAVTime:TYPE
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y
[:SCALe]:AMPLitude:PDIVision
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y
[:SCALe]:AMPLitude:RLEVel
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y
[:SCALe]:AMPLitude:RPOSition
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:PDIVision
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:RLEVel
DISPlay:PAVTime:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PHASe:RPOSition
DISPlay:PStatistic:GAUSSian[:STATe]
DISPlay:PStatistic:RTRace[:STATe]
DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision
DISPlay:PVTime:BGRaph

```

9 Programming the Instrument
9.1 List of Supported SCPI Commands

```
DISPlay:PVTime:BLINes[:STATe]
DISPlay:PVTime:LIMit:MASK
DISPlay:PVTime:RAMP[:STATe]
DISPlay:PVTime:TRIGger[:STATe]
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF[:STATe]
DISPlay:PVTime:VIEW[:SElect]
DISPlay:PVTime:VIEW[:SElect]
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:COUPle
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:PDIVision
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:RLEVel
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:RPOSition
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:COUPle
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:PDIVision
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:RLEVel
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:RPOSition
DISPlay:SEMask:OFFSet:SABSolute
DISPlay:SEMask:VIEW[1]:WINDow[1]:CINformation:FREQuency
DISPlay:SEMask:VIEW:NSElect
DISPlay:SEMask:VIEW[:SElect]
DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:COUPle
DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:PDIVision
DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:RLEVel
DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALe]:RPOSition
DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:COUPle
DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:PDIVision
DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RLEVel
DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:RPOSition
DISPlay:SPURious:FREQuency:CENTer[:STATe]
DISPlay:SPURious:VIEW:RANGe:TABLE:FMODE
DISPlay:SPURious:VIEW[:SElect]
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVel
DISPlay:THEMe
DISPlay:UINterface:CSIZE
DISPlay:UINterface:HTABs
DISPlay:UINterface:STAB
DISPlay:UINterface:STFScreen
DISPlay:UINterface:TYPE?
DISPlay:VIEW:ADVanced:CATalog?
DISPlay:VIEW:ADVanced:DELeTe
DISPlay:VIEW:ADVanced:DELeTe:ALL
DISPlay:VIEW:ADVanced:NAME
DISPlay:VIEW:ADVanced:REName
DISPlay:VIEW:ADVanced:SElect
DISPlay:VIEW:ADVanced:USER:CATalog?
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALe]:COUPle
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALe]:PDIVision
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALe]:RLEVel
```

DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALE]:RPOSition
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:Y[:SCALE]:COUPle
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RANGe
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSition
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RANGe
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RLEVel
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOSition
DISPlay:WAVEform:VIEW:NSElect
DISPlay:WAVEform:VIEW[:SElect]
DISPlay:WINDow[1]:ANNOtation[:ALL]

F

FETCh:<measurement>[n]?
FETCh:ACPower?
FETCh:CHPower:DENSity[n]?
FETCh:CHPower[n]?
FETCh:EVM[n]?
FETCh:MONitor[n]?
FETCh:OBWidth:FERRor?
FETCh:OBWidth[n]?
FETCh:OBWidth:OBWidth?
FETCh:OBWidth:XDB?
FETCh:PAVTime[n]?
FETCh:PStatistic?
FETCh:PVTime[n]?
FETCh:SEMask[n]?
FETCh:SPURious[n]?
FETCh:WAVEform?
FORMat:BORDER
FORMat[:TRACe][:DATA]

H

HCOPy:ABORt
HCOPy[:IMMediate]

I

INITiate:<measurement>
INITiate:ACPower
INITiate:CHPower
INITiate:CONTinuous
INITiate:EVM

9 Programming the Instrument

9.1 List of Supported SCPI Commands

INITiate[:IMMediate]
INITiate:MONitor
INITiate:OBWidth
INITiate:PAUSE
INITiate:PAVTime
INITiate:PStatistic
INITiate:PVTime
INITiate:REStart
INITiate:RESume
INITiate:SEMask
INITiate:SPURious
INITiate:WAVEform
INPut[1]:IQ[:I]:IMPedance
INPut[1]:IQ:Q:IMPedance
INPut:COUPling
INPut:COUPling:I
INPut:COUPling:Q
INPut:FEXTender:CABLE:CORRection
INPut:IMPedance:REference
INPut:IQ[:I]:DIFFerential
INPut:IQ:MIRRored
INPut:IQ:Q:DIFFerential
INPut:OFFSet:I
INPut:OFFSet:Q
INSTrument:CATalog?
INSTrument:CONFigure:<mode_id>:<meas>
INSTrument:COUPle:DEFault
INSTrument:COUPle:EMC:STANdard
INSTrument:COUPle:FREQuency:BAND:EXTend
INSTrument:COUPle:FREQuency:CENTer
INSTrument:COUPle:SCReen:INPut
INSTrument:DEFault
INSTrument:NSElect
INSTrument:SCReen:CATalog?
INSTrument:SCReen:CREate
INSTrument:SCReen:DELeTe
INSTrument:SCReen:DELeTe:ALL
INSTrument:SCReen:MULTiple?
INSTrument:SCReen:MULTiple[:STATe]
INSTrument:SCReen:ORIENTATION
INSTrument:SCReen:REName
INSTrument:SCReen:SElect
INSTrument:SCReen:STAB?
INSTrument[:SElect]
INSTrument[:SElect]
INSTrument[:SElect]
INSTrument[:SElect]
INSTrument[:SElect]
INSTrument[:SElect]
INSTrument[:SElect]

INSTRument:UNLoad

L

LXI:IDENTify[:STATe]

M

MEASure:<measurement>[n]?
 MEASure:ACPower[n]?
 MEASure:CHPower:DENSity[n]?
 MEASure:CHPower[n]?
 MEASure:EVM[n]?
 MEASure:MONitor[n]?
 MEASure:OBwidth:FERRor?
 MEASure:OBwidth[n]?
 MEASure:OBwidth:OBwidth?
 MEASure:OBwidth:XDB?
 MEASure:PAVTime[n]?
 MEASure:PSTatistic[n]?
 MEASure:PVTime[n]?
 MEASure:SEMask[n]?
 MEASure:SPURious[n]?
 MEASure:WAVEform[n]?
 MMEMemory:CATalog?
 MMEMemory:CDIRectory
 MMEMemory:COPY
 MMEMemory:COPY:DEvice
 MMEMemory:DATA
 MMEMemory:DElete
 MMEMemory:EVM:RState:MODE
 MMEMemory:HEADER:ID?
 MMEMemory:LOAD:<meas>:RECORDing:CHANnel
 MMEMemory:LOAD:<meas>:RECORDing:RESet
 MMEMemory:LOAD:CCORrection
 MMEMemory:LOAD:CORRection
 MMEMemory:LOAD:EVM:CONStln:STATe
 MMEMemory:LOAD:EVM:CONStln:STATe
 MMEMemory:LOAD:EVM:FRAME
 MMEMemory:LOAD:EVM:FRAME
 MMEMemory:LOAD:EVM:REFeRence:IQ
 MMEMemory:LOAD:EVM:SEtUp
 MMEMemory:LOAD:EVM:SEtUp
 MMEMemory:LOAD:EVM:VSA:RELease
 MMEMemory:LOAD:EVM:VSA:RELease
 MMEMemory:LOAD:LIMit
 MMEMemory:LOAD:LOSS
 MMEMemory:LOAD:RState

9 Programming the Instrument

9.1 List of Supported SCPI Commands

MMEMory:LOAD:RTS:DATA:PATtern
MMEMory:LOAD:RTYPE
MMEMory:LOAD:SCONfig
MMEMory:LOAD:STATe
MMEMory:LOAD:TRACe
MMEMory:LOAD:TRACe:DATA
MMEMory:LOAD:TRACe:REGister
MMEMory:LOAD:VCORrection
MMEMory:MDIRectory
MMEMory:MOVE
MMEMory:RDIRectory
MMEMory:REGister:STATe:LABel
MMEMory:REGister:TRACe:LABel
MMEMory:RMEDIA:LABel
MMEMory:RMEDIA:LIST?
MMEMory:RMEDIA:SIZE?
MMEMory:RMEDIA:WProtect?
MMEMory:STORe:<meas>:RECORDing:CHANnel
MMEMory:STORe:CORRection
MMEMory:STORe:EVM:REFerence:IQ
MMEMory:STORe:EVM:SETup
MMEMory:STORe:EVM:SETup
MMEMory:STORe:LIMit
MMEMory:STORe:PSCFactor
MMEMory:STORe:PSCFactor
MMEMory:STORe:QSAVe
MMEMory:STORe:RESults
MMEMory:STORe:RSTate
MMEMory:STORe:SCONfig
MMEMory:STORe:SCReen
MMEMory:STORe:SCReen:BLOCKed
MMEMory:STORe:SCReen:THEMe
MMEMory:STORe:STATe
MMEMory:STORe:TRACe
MMEMory:STORe:TRACe:REGister

O

OUTPut:ANALog
OUTPut:ANALog:AUTO
OUTPut:ANALog:SVIDeo
OUTPut:AUX
OUTPut:AUX:AIF
OUTPut:AUX:IO
OUTPut:AUX:IO:DATA<n>
OUTPut:DBUS[1][:STATe]
OUTPut:DBUS2:DATA
OUTPut:DBUS2[:STATe]
OUTPut:EIF


```
OUTPut:EREFerence:OUTPut
OUTPut[:EXTeRnal][:STATe]
OUTPut:IF2
OUTPut:IQ:OUTPut
OUTPut:MODulation[:STATe]
OUTPut:ROSCillator:LO:OUTPut
```

R

```
READ:<measurement>[n]?
READ:ACPower[n]?
READ:CHPower:DENSity[n]?
READ:CHPower[n]?
READ:EVM[n]?
READ:MONitor[n]?
READ:OBWidth:FERRor?
READ:OBWidth[n]?
READ:OBWidth:OBWidth?
READ:OBWidth:XDB?
READ:PAVTime[n]?
READ:PSTatistic[n]?
READ:PVTime[n]?
READ:SEMask[n]?
READ:SPURious[n]?
READ:WAVEform[n]?
```

S

```
[:SENSe]:<meas>:POWer:IQ:REFerence:PLANE
[:SENSe]:<meas>:SWeep:ACQuisition:TIME
[:SENSe]:<meas>:SWeep:ACQuisition:TIME:AUTO
[:SENSe]:<meas>:SWeep:ETIme?
[:SENSe]:<meas>:SWeep:TIME
[:SENSe]:<meas>:SWeep:TIME:AUTO
[:SENSe]:<measurement>:PFILter[:STATe]
[:SENSe]:ACPower:AVERage:CONTInue
[:SENSe]:ACPower:AVERage:COUNt
[:SENSe]:ACPower:AVERage:COUNt:TERMinAl?
[:SENSe]:ACPower:AVERage[:STATe]
[:SENSe]:ACPower:AVERage:TCONtrol
[:SENSe]:ACPower:BANDwidth[:RESolution]
[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO
[:SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE
[:SENSe]:ACPower:BANDwidth:SHAPE
[:SENSe]:ACPower:BANDwidth:TYPE
[:SENSe]:ACPower:BANDwidth:VIDeo
[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO
[:SENSe]:ACPower:CARRier[1]|2:AUTO[:STATe]
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:ACPower:CARRier[1]|2:CPsD
[ :SENSe]:ACPower:CARRier[1]|2:INDeX
[ :SENSe]:ACPower:CARRier[1]|2[:POWer]
[ :SENSe]:ACPower:CARRier[1]|2:PREFeRence:TYPE
[ :SENSe]:ACPower:CARRier[1]|2:RCARRier
[ :SENSe]:ACPower:CARRier[1]|2:RCARRier:AUTO
[ :SENSe]:ACPower:CARRier[1]|2:RCARRier:ZBASe
[ :SENSe]:ACPower:CORRection:NOISe[:AUTO]
[ :SENSe]:ACPower:DETeCTOR:AUTO
[ :SENSe]:ACPower:DETeCTOR[:FUNctIon]
[ :SENSe]:ACPower:FILTeR:BANDwidth[:INtegration]
[ :SENSe]:ACPower:FREQuency:SPAN
[ :SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]
[ :SENSe]:ACPower:FREQuency:SYNThesis[:STATe]
[ :SENSe]:ACPower:IF:GAIN:FPOWer
[ :SENSe]:ACPower:METHod
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:ABSolute
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth[:INtegration]
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:RESolution
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:RESolution:AUTO
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:SHAPE
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:TYPE
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:VIDeo
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:BANDwidth:VIDeo:AUTO
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:FILTeR:ALPHA
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:FILTeR[:RRC][:STATe]
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST[:FREQuency]
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:PREFeRence
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:PREFeRence:AUTO
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:RCARRier
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:RPSDeNSity
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:SIDE
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:STATe
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:LIST:TEST
[ :SENSe]:ACPower:OFFSet[1]|2:INNeR:TYPE
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:ABSolute
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth[:INtegration]
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:RESolution
[ :SENSe]:ACPower:OFFSet[1]|2
[ :OUTer]:LIST:BANDwidth:RESolution:AUTO
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:SHAPE
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:TYPE
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:FILTeR:ALPHA
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:FILTeR[:RRC][:STATe]
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREQuency]
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:RCARRier
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:RPSDeNSity
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:SIDE
```

```
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:STATe
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:TEST
[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:TYPE
[ :SENSe]:ACPower:OFFSet:MAXNumber
[ :SENSe]:ACPower:SAVoid[:STATe]
[ :SENSe]:ACPower:SWEEP:POINTs
[ :SENSe]:ACPower:SWEEP:POINTs:AUTO[:STATe]
[ :SENSe]:ACPower:SWEEP:TIME:AUTO:RULEs
[ :SENSe]:ACPower:TYPE
[ :SENSe]:AFINput[1]|2:COUPling
[ :SENSe]:AFINput[1]|2:IMPedance
[ :SENSe]:AFINput[1]|2:LOW
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CARRier:REFerence
[ :SENSe]:CCARRier<n>:FREQuency:OFFSet
[ :SENSe]:CCARRier0|...|15:RF:CHANnel1|...|8:IFPath
[ :SENSe]:CCARRier[0]|1|...|15:ACPower:BANDwidth[1]|2:INTEgration
[ :SENSe]:CCARRier[0]|1|...|15:CHPower:BANDwidth:INTEgration
[ :SENSe]:CCARRier[0]|1|...|15:RADio:SLINK
[ :SENSe]:CCARRier[0]|1|...|15:RADio:STANdard:BANDwidth
[ :SENSe]:CCARRier[0]|1|...|15:RADio:STANdard:FRANge
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:ATTenuation
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:EATTenuation
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:GAIN:LNA
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:GAIN:PREamp
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:IF:GAIN:LEVel
[ :SENSe]:CCARRier[0]|1|...|15:RF:CHANnel1|...|8:MW:PATH
[ :SENSe]:CCARRier[0]|1|...|15:RGRid:PMSCs?
[ :SENSe]:CCARRier[0]|1|...|15:SEMask:BANDwidth[1]|2:INTEgration
[ :SENSe]:CCARRier[0]|1|...|15:SPECTrum
[ :SENSe]:CCARRier[0]|1|...|15[:STATe]
[ :SENSe]:CCARRier:AFOFFset
[ :SENSe]:CCARRier:CONFig:ALLocation
[ :SENSe]:CCARRier:CONFig:ALLocation:NCONtiguous:ABPoint
[ :SENSe]:CCARRier:COUNt
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
[ :SENSe]:CCARRier:REFerence
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:CCARrier:REfERENCE
[ :SENSe]:CCORrection:CSET:COMMeNt
[ :SENSe]:CCORrection:CSET:ALL:DELeTe
[ :SENSe]:CCORrection:CSET:DATA
[ :SENSe]:CCORrection:CSET:DELeTe
[ :SENSe]:CCORrection:CSET:DESCRiption
[ :SENSe]:CCORrection:CSET:DIRection
[ :SENSe]:CCORrection:CSET:PORT
[ :SENSe]:CCORrection:CSET:SELeCt
[ :SENSe]:CCORrection:CSET[:STATe]
[ :SENSe]:CCORrection:CSET:X:SPACing
[ :SENSe]:CCORrection:DATA?
[ :SENSe]:CHPower:AVERage:CONTinue
[ :SENSe]:CHPower:AVERage:COUNt
[ :SENSe]:CHPower:AVERage:COUNt:TERMiNal?
[ :SENSe]:CHPower:AVERage[:STATe]
[ :SENSe]:CHPower:AVERage:TCONtrol
[ :SENSe]:CHPower:BANDwidth:INTegration
[ :SENSe]:CHPower:BANDwidth[:RESolution]
[ :SENSe]:CHPower:BANDwidth[:RESolution]:AUTO
[ :SENSe]:CHPower:BANDwidth:SHApe
[ :SENSe]:CHPower:BANDwidth:VIDeo
[ :SENSe]:CHPower:BANDwidth:VIDeo:AUTO
[ :SENSe]:CHPower:DETeCtor:AUTO
[ :SENSe]:CHPower:DETeCtor[:FUNctioN]
[ :SENSe]:CHPower:FREQuency:SPAN
[ :SENSe]:CHPower:FREQuency:SPAN:AUTO
[ :SENSe]:CHPower:FREQuency:SPAN:FULL
[ :SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe]
[ :SENSe]:CHPower:FREQuency:SYNThesis[:STATe]
[ :SENSe]:CHPower:IF:GAIN:AUTO[:STATe]
[ :SENSe]:CHPower:IF:GAIN[:STATe]
[ :SENSe]:CHPower:SAVoid[:STATe]
[ :SENSe]:CHPower:SWEEp:POINts
[ :SENSe]:CHPower:SWEEp:TIME:AUTO:RULEs
[ :SENSe]:CORRection:BTS[:RF]:GAIN
[ :SENSe]:CORRection:CSET[1]|2|...|16:ANTenna[:UNIT]
[ :SENSe]:CORRection:CSET[1]|2|...|16:COMMeNt
[ :SENSe]:CORRection:CSET[1]|2|...|16:DATA
[ :SENSe]:CORRection:CSET[1]|2|...|16:DATA:MERGe
[ :SENSe]:CORRection:CSET[1]|2|...|16:DELeTe
[ :SENSe]:CORRection:CSET[1]|2|...|16:DESCRiption
[ :SENSe]:CORRection:CSET[1]|2|...|16:DIRection
[ :SENSe]:CORRection:CSET[1]|2|...|16:RF:PORT
[ :SENSe]:CORRection:CSET[1]|2|...|16[:STATe]
[ :SENSe]:CORRection:CSET[1]|2|...|16:X:SPACing
[ :SENSe]:CORRection:CSET:ALL:DELeTe
[ :SENSe]:CORRection:CSET:ALL[:STATe]
[ :SENSe]:CORRection:CSET:GRouP[1]|2|...|10:DATA
[ :SENSe]:CORRection:CSET:GRouP:BReak
```

```
[ :SENSe]:CORRection:CSET:GROup:COMMeNt
[ :SENSe]:CORRection:CSET:GROup:DELeTe
[ :SENSe]:CORRection:CSET:GROup:DESCription
[ :SENSe]:CORRection:CSET:GROup:RELoad
[ :SENSe]:CORRection:CSET:GROup[:STATe]
[ :SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]
[ :SENSe]:CORRection:IQ:I:ATTenuation
[ :SENSe]:CORRection:IQ:I:ATTenuation:RATio
[ :SENSe]:CORRection:IQ:I:GAIN
[ :SENSe]:CORRection:IQ[:I]:SKEW
[ :SENSe]:CORRection:IQ:Q:ATTenuation
[ :SENSe]:CORRection:IQ:Q:ATTenuation:RATio
[ :SENSe]:CORRection:IQ:Q:GAIN
[ :SENSe]:CORRection:IQ:Q:GAIN:COUPle
[ :SENSe]:CORRection:IQ:Q:SKEW
[ :SENSe]:CORRection:MS[:RF]:GAIN
[ :SENSe]:CORRection:NOISe:FLOR
[ :SENSe]:CORRection:NOISe:FLOR
[ :SENSe]:CORRection:NOISe:FLOR
[ :SENSe]:CORRection:NOISe:FLOR
[ :SENSe]:CORRection:NOISe:FLOR
[ :SENSe]:CORRection:NOISe:FLOR:ADAPtive
[ :SENSe]:CORRection:NOISe:FLOR:ADAPtive
[ :SENSe]:CORRection:NOISe:FLOR:ADAPtive
[ :SENSe]:CORRection:NOISe:FLOR:ADAPtive
[ :SENSe]:CORRection:SA[:RF]:GAIN
[ :SENSe]:EVM:ACP
[ :SENSe]:EVM:ACP:POINts
[ :SENSe]:EVM:ACP:POINts:AUTO
[ :SENSe]:EVM:ACQuisition
[ :SENSe]:EVM:AVERage:CONTinue
[ :SENSe]:EVM:AVERage:COUNt
[ :SENSe]:EVM:AVERage[:STATe]
[ :SENSe]:EVM:AVERage:TCONtrol
[ :SENSe]:EVM:CCARrier0|...|15:CONDition:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:CONDition:NUMBer:RB
[ :SENSe]:EVM:CCARrier0|...|15:CONFormance
[ :SENSe]:EVM:CCARrier0|...|15:COpy:ALL|TIME|ADVanced|DECode
[ :SENSe]:EVM:CCARrier0|...|15:CPOWer:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:ANTenna:PORT:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:ANTenna:PORT:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:DENSIty
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:FREQuency:BITMap
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:RB:OFFSet
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:REUSed:PDSch
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:SLOT:ALlocated
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:STATe
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:SYMBol:FIRSt[:ONE]
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:SYMBol:FIRSt:TWO
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:TABLE:INDex
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs<n>:ZPOWer
[ :SENSe]:EVM:CCARrier0|...|15:CSIRs1|8:SYMBol:FIRSt:TWO
[ :SENSe]:EVM:CCARrier0|...|15:DC:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:DC:OFFSet:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:DC:PUNCTure
[ :SENSe]:EVM:CCARrier0|...|15:DECode:ITERation
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PBCH
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PDCCh
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PDSCh
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PSCCh
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PSSCh
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PUCCh
[ :SENSe]:EVM:CCARrier0|...|15:DECode:PUSCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:CSIRs
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PDCCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PDSCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PRACH
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PSCCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PSSCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PUCCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:PUSCh
[ :SENSe]:EVM:CCARrier0|...|15:DElete:RIMRs
[ :SENSe]:EVM:CCARrier0|...|15:DElete:SRS
[ :SENSe]:EVM:CCARrier0|...|15:DElete:ssB
[ :SENSe]:EVM:CCARrier0|...|15:DElete:ssSB
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:ID
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:RBG:ALLoc
ated
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:RB:NUMBER
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:RB:OFFSet
:R16
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:REG:BUNDL
e
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:REG:INTER
leave
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:REG:MAPPi
ng
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:SHIFT
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:COReset0|1|2:SYMBol:LE
NGth
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:CPLength
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:NUMBER:COReset
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:RB:NUMBER
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:RB:OFFSet
```



```
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4:SCS
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:BWP0|...|4[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:DELeTe:BWP
[ :SENSe]:EVM:CCARrier0|...|15:DLINK:NUMBer:BWP
[ :SENSe]:EVM:CCARrier0|...|15:EFLoCk:RANGe
[ :SENSe]:EVM:CCARrier0|...|15:EFLoCk:RANGe:VALue
[ :SENSe]:EVM:CCARrier0|...|15:EQUalizer:TRAIning
[ :SENSe]:EVM:CCARrier0|...|15:EQUalizer:TRAIning:MAFilter:LENGTh
[ :SENSe]:EVM:CCARrier0|...|15:EQUalizer:TRAIning:MAFilter[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:EQUalizer:TRAIning:TBSIs
[ :SENSe]:EVM:CCARrier0|...|15:EVMWindow:LENGTh:CUSTOm
[ :SENSe]:EVM:CCARrier0|...|15:EVMWindow:MODE
[ :SENSe]:EVM:CCARrier0|...|15:FRAMe:TRIGger
[ :SENSe]:EVM:CCARrier0|...|15:HIGH:PNOise:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:HIGH:PNOise[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:IQIMbalance:COMPensation[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:IQIMbalance:MODE
[ :SENSe]:EVM:CCARrier0|...|15:IQIMbalance[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:IQOffset:COMPensation[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:LO:MIXMode
[ :SENSe]:EVM:CCARrier0|...|15:LO:MIXMode:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:MCFilter:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:MCFilter[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:MPERror[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:CSIRs
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PDCCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PDSCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PRACH
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PSCCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PSSCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PUCCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:PUSCh
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:RIMRs
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:SSB
[ :SENSe]:EVM:CCARrier0|...|15:NUMBer:SSSB
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:AGGRegation
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:ANTenna:PORT:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:ALEVe11
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:ALEVe16
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:ALEVe12
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:ALEVe14
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:ALEVe18
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:INDex
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CANDIdate:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:CCE:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:Coreset:ID
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:DCI:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:DMRS:POWer
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:DMRS:SCID
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:PERiodicity
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:RNTI
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:RNTI:TYPE
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:SEARch:SPACe
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh<n>:SYMBol:FIRSt
[ :SENSe]:EVM:CCARrier0|...|15:PDCCh1|16:COReset
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:ANTenna:PORT:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:ANTenna:PORT:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:CWORD:NUMBER
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:ADDPoS
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:CDMGroups:COUNT
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:CONFigure
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:DALT
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:DURation
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:MLEN
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:MREference
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:NID0
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:NID1
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:R16[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:DMRS:TAPoS
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:MCS
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:MCS:TABLE
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:MODulation
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PBGROUP
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PBGROUP:USER
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PDSch:MAP
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PERiodicity
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PMATrix:PBGROUP<m>
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS:K
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS:L
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS:RE:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:PTRS[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RAType
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RBG:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RBG:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RB:NUMBER
```



```
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMArch:COReset
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:LEVel
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:PERiodicity
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:PERiodicity:BIT
Map
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:RB:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:SCS
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>[:STATE]
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:SYMBOL:BITMap
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern<m>:SYMBOL:BSpan
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RMPattern:NUMBER
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RNTI
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:RV
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SCIDn
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SCIDn:NID
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SLOT:ALlocated
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SLOT:FORMat
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>[:STATE]
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SYMBOL:FIRST
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:SYMBOL:LAST
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:TB:SFACTOR
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:VPMapping
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:VPMapping:COReset
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:VPMapping:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PDSch<n>:ANTenna:PORT:INDEX?
[ :SENSe]:EVM:CCARrier0|...|15:PDSch1|250:PMATrix:RESet<integer>
[ :SENSe]:EVM:CCARrier0|...|15:PDSch1|250:RMPattern:DElete
[ :SENSe]:EVM:CCARrier0|...|15:PFFT:MINimization
[ :SENSe]:EVM:CCARrier0|...|15:PHASe:COMPensation:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:PHASe:COMPensation:FREQuency
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:ABWP
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:CONFig:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:CONFig:INDEX?
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:CSHift:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:FDM
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:FRAME:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:POWER
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:RA
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:RAStArt
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:RSEQUence:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:RSET:CONFig
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:SCS
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:SPECTrum:TYPE
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:STATE
[ :SENSe]:EVM:CCARrier0|...|15:PRACH<n>:ZCZone
[ :SENSe]:EVM:CCARrier0|...|15:PRACH1|100:LRA
[ :SENSe]:EVM:CCARrier0|...|15:PROFile:PDCCh:AUTO[:DETECT]
[ :SENSe]:EVM:CCARrier0|...|15:PROFile:PDSch:AUTO[:DETECT]
[ :SENSe]:EVM:CCARrier0|...|15:PROFile:PRACH:OCCASion:AUTO[:DETECT]
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|15:PROFile:PUSCh:AUTO[:DETECT]
[ :SENSe]:EVM:CCARrier0|...|15:PROFile:SSB:AUTO[:DETECT]
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:DMRS:MAPI
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:DMRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:DMRS:SCID
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:LOAD:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:SYMBol:FIRSt
[ :SENSe]:EVM:CCARrier0|...|15:PSCCh<n>:SYMBol:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:DMRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:DMRS:SYMBol:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:DMRS:SYMBol:NUMBer:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:DMRS:TIME:PATtern
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:MCS
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:MCS:TABLE
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PSCCh
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS:K
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS:L
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS:RE:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:PTRS[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SCI2:LOAD:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SCI2:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SCI2:SCALing
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SCI2[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SYMBol:FIRSt
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:SYMBol:LAST
[ :SENSe]:EVM:CCARrier0|...|15:PSSCh<n>:X:OVERhead
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:CYCLic:SHIFt
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:CYCLic:SHIFt:MCS
```

```
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:DMRS:ADDITIONal
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:DMRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:DMRS:TP:R16[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:FORMat
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:HOPPing:FREQuency:INTRa:SLOT
[ :STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:HOPPing:GROup
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:HOPPing:ID
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:INTERlace:ONE
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:INTERlace:RBSet
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:INTERlace[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:INTERlace:ZERO
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:MULTiplex
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:NRNTi
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:OCC:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:OCC:LENGth
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:RB:OFFSet:HOPPing:SECond
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:SCID
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:SYMBOL:FIRST
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:SYMBOL:LAST
[ :SENSe]:EVM:CCARrier0|...|15:PUCCh<n>:UCI:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:ANTenna:PORT:INDEX
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:ANTenna:PORT:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:ADDPos
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:CDMGroups:COUNT
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:CONFigure
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:DURation
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:HOPPing:GROup[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:HOPPing:SEQuence
[ :STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:MLEN
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:NID0
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:NID1
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:R16[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:DMRS:TAPOs
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:HOPPing:GROup[:STATe]?
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:INCLude
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:MCS
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:MCS:TABLE
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:MODulation
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:NID:PUSCh
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:NRAPid
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PBGRoup
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PMATrix:PBGroup<m>
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:GROup:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:GROup:SNUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:K
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:L
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:NID
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:PORT
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS:RE:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PTRS[:STATE]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:PUSCh:MAP
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RANK
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RAType
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RBG:ALlocated
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RBG:SIZE
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:LEVel
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:PERiodicity
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:PERiodicity:BIT
Map
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:RB:INDex
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:SCS
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>[:STATE]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:SYMBOL:BITMap
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern<m>:SYMBOL:BSPan
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RMPattern:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RNTI
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:RV
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SCIDn
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SCIDn:NID
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SLOT:ALlocated
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SLOT:FORMat
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:STATe
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>[:STATE]?
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SYMBOL:FIRSt
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:SYMBOL:LAST
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:TPRecoding[:STATE]
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:USER:PBGRoup
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh<n>:ANTenna:PORT:INDex?
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh1|250:PMATrix:RESet<integer>
[ :SENSe]:EVM:CCARrier0|...|15:PUSCh1|250:RMPattern:DElete
```

```
[ :SENSe]:EVM:CCARrier0|...|15:REfERENCE:DATA
[ :SENSe]:EVM:CCARrier0|...|15:REfERENCE:DATA:PDSCh
[ :SENSe]:EVM:CCARrier0|...|15:REPort:DB
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SCIDn
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SEQuence:MFACTOR
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SEQuence:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SEQuence:TPERiod
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:STATe
[ :SENSe]:EVM:CCARrier0|...|15:RIMRs<n>:SYMBol:FIRST[:ONE]
[ :SENSe]:EVM:CCARrier0|...|15:SAVoid:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:SAVoid:FREQuency
[ :SENSe]:EVM:CCARrier0|...|15:SCERror:COMPensation[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:SFRame:TRIGger:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:SIGNal:PATtern
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:BWP1|...|4:CPLength
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:BWP1|...|4:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:BWP1|...|4:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:BWP1|...|4:SCS
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:BWP1|...|4[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:DELeTe:BWP
[ :SENSe]:EVM:CCARrier0|...|15:SLINK:NUMBer:BWP
[ :SENSe]:EVM:CCARrier0|...|15:SLOT:PHASe:CONTinue
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:ANTenna:PORT
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:ANTenna:PORT:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:BW:INDEX:B
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:BW:INDEX:C
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:BWP
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:COMB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:COMB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:CSHift:CONFig
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:FDOMain:POSition
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:FDOMain:SHIFt
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:FREQuency:BHOP
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:FREQuency:HOPping[:MODE]
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:FREQuency:SFACTOR
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:NID
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:POSition:START
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:RB:START
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:RB:START:HOPping:STATe
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:REPetition:FACTOR
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:SLOT:ALLocated
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:STATe
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:SYMBol:NUMBer
```


9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|15:SRS<n>:SYMBol:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:ACTive:INDices
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:HFINDex
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:K0
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:LMAX
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PATtern
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PBCH:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PBCH:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PBCH:POWer
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PERiodicity
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PSS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:PSS:POWer
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:SCS
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:SCS:COMMon
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:SSS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:ssB<n>:SYMBol:STARt
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:PERiod:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:POWer
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:PSBCh:DMRS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:PSBCh:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:SCS
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:SLOT:INTeval
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:SLOT:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:SPSS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>:SSSS:INCLude
[ :SENSe]:EVM:CCARrier0|...|15:ssSB<n>[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:SYMBol:TIMing:ADJust
[ :SENSe]:EVM:CCARrier0|...|15:SYMBol:TIMing:ADJust:MODE
[ :SENSe]:EVM:CCARrier0|...|15:SYNC:MODE
[ :SENSe]:EVM:CCARrier0|...|15:SYNC:SOUR?
[ :SENSe]:EVM:CCARrier0|...|15:SYNC:SOURce
[ :SENSe]:EVM:CCARrier0|...|15:SYNC:SOURce:INDex
[ :SENSe]:EVM:CCARrier0|...|15:SYNC:ssB
[ :SENSe]:EVM:CCARrier0|...|15:TAE:MODE
[ :SENSe]:EVM:CCARrier0|...|15:TIME:ASBoundary
[ :SENSe]:EVM:CCARrier0|...|15:TIME:INTerval[:SFRame]
[ :SENSe]:EVM:CCARrier0|...|15:TIME:INTerval:SLOT
[ :SENSe]:EVM:CCARrier0|...|15:TIME:INTerval:SYMBol
[ :SENSe]:EVM:CCARrier0|...|15:TIME:LENGth:RESult
[ :SENSe]:EVM:CCARrier0|...|15:TIME:LENGth:SEARch
[ :SENSe]:EVM:CCARrier0|...|15:TIME:OFFSet[:SFRame]
[ :SENSe]:EVM:CCARrier0|...|15:TIME:OFFSet:SLOT
[ :SENSe]:EVM:CCARrier0|...|15:TIME:OFFSet:SYMBol
[ :SENSe]:EVM:CCARrier0|...|15:TRACk:AMPLitude
[ :SENSe]:EVM:CCARrier0|...|15:TRACk:MODE
[ :SENSe]:EVM:CCARrier0|...|15:TRACk:PHASe
[ :SENSe]:EVM:CCARrier0|...|15:TRACk:TIMing
```

```
[ :SENSe]:EVM:CCARrier0|...|15:TRANSient:CAPability
[ :SENSe]:EVM:CCARrier0|...|15:TRANSient:PPCHange:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:BWP1|...|4:CPLength
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:BWP1|...|4:RB:NUMBer
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:BWP1|...|4:RB:OFFSet
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:BWP1|...|4:SCS
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:BWP1|...|4[:STATe]
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:DELeTe:BWP
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:FLATness:CHANnel:CONDition
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:FLATness:TTOLerance
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:FREQuency:HIGH
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:FREQuency:LOW
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:GENeral:MODE
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:OPower
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:OPower:AUTO
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PClass
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PRB:THReshold
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PRB:THReshold:ALL
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PRB:THReshold:DC
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PRB:THReshold:GENera
1
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:PRB:THReshold:IMAGE
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:IBEMission:TTOLerance
[ :SENSe]:EVM:CCARrier0|...|15:ULINK:NUMBer:BWP
[ :SENSe]:EVM:CCARrier[0]|1|...|15:CID
[ :SENSe]:EVM:CCARrier[0]|1|...|15:CID:MODE
[ :SENSe]:EVM:CCARrier[0]|1|...|15:DELeTe:LTE
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<4>:COFFset
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<n>:BW
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<n>:CRS:ANTenna:PORT:NUMBer
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<n>:CRS:VSHift
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<n>:MBSFn:SFRame
[ :SENSe]:EVM:CCARrier[0]|1|...|15:LTE<n>[:STATe]
[ :SENSe]:EVM:CCARrier[0]|1|...|15:NUMBer:LTE
[ :SENSe]:EVM:CCARrier[0]|1|...|15:RGRid:CONFig:AUTO
[ :SENSe]:EVM:CCARrier[0]|1|...|15:RGRid:REFA?
[ :SENSe]:EVM:CCARrier
[0]|1|...|15:RGRid:SCS15k|SCS30k|SCS60k|SCS120k|SCS240k|SCS480k|SCS
960k:K0?
[ :SENSe]:EVM:CCARrier
[0]|1|...|15:RGRid:SCS15k|SCS30k|SCS60k|SCS120k|SCS240k|SCS480k|SCS
960k:SIZE
[ :SENSe]:EVM:CCARrier
[0]|1|...|15:RGRid:SCS15k|SCS30k|SCS60k|SCS120k|SCS240k|SCS480k|SCS
960k:START
[ :SENSe][:EVM]:CCARrier
[0]|1|...|15:RGRid:SCS15k|SCS30k|SCS60k|SCS120k|SCS240k|SCS480k|SCS
960k[:STATe]
[ :SENSe]:EVM:CCARrier[0]|1|...|15:RGRid:SCS15k|SCS30k:GBAND
[ :SENSe]:EVM:CCEVm[:ENABle]
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCross:POWer:REFeRence
[ :SENSe]:EVM:CCross:TAE:REFeRence
[ :SENSe]:EVM:FREQuency:SYNThesis[:STATe]
[ :SENSe]:EVM:IACTion:REStArt
[ :SENSe]:EVM:IF:GAIN:AUTO[:STATe]
[ :SENSe]:EVM:IF:GAIN:LEVel
[ :SENSe]:EVM:IF:GAIN:SElect
[ :SENSe]:EVM:LO:DITHer[:STATe]
[ :SENSe]:EVM:OBW
[ :SENSe]:EVM:OBW:POINts
[ :SENSe]:EVM:OBW:POINts:AUTO
[ :SENSe]:EVM:OPTimize
[ :SENSe]:EVM:OPTimize:ITERative:TARGet
[ :SENSe]:EVM:OPTMethod
[ :SENSe]:EVM:POWer:MIMO:MODE
[ :SENSe]:EVM:PROFile:COpy[:IMMediate]
[ :SENSe]:EVM:PVTime
[ :SENSe]:EVM:SAVoid[:STATe]
[ :SENSe]:EVM:SElected
[ :SENSe]:EVM:SEM
[ :SENSe]:EVM:SEM:TABLE
[ :SENSe]:EVM:STITching:SPECTrum[:STATe]
[ :SENSe]:EVM:TIME:SCALE:FACTor
[ :SENSe]:FEED
[ :SENSe]:FEED:AFALign
[ :SENSe]:FEED:AFINput:PORT
[ :SENSe]:FEED:AREFeRence
[ :SENSe]:FEED:DATA
[ :SENSe]:FEED:DATA:STORe
[ :SENSe]:FEED:IQ:TYPE
[ :SENSe]:FEED[:RF]:PORT:INFormation?
[ :SENSe]:FEED[:RF]:PORT[:INPut]
[ :SENSe]:FEED:RF:PORT:OUTPut
[ :SENSe]:FEED:RF:PORT:TR:HPower:ATTenuator[:STATe]
[ :SENSe]:FREQuency:CENTer
[ :SENSe]:FREQuency:CENTer
[ :SENSe]:FREQuency:CENTer
[ :SENSe]:FREQuency:CENTer
[ :SENSe]:FREQuency:CENTer:AUTO
[ :SENSe]:FREQuency:CENTer:AUTO
[ :SENSe]:FREQuency:CENTer:AUTO
[ :SENSe]:FREQuency:CENTer:OFFSet
[ :SENSe]:FREQuency:CENTer:OFFSet
[ :SENSe]:FREQuency:CENTer:OFFSet
[ :SENSe]:FREQuency:CENTer:OFFSet
[ :SENSe]:FREQuency:CENTer:STEP:AUTO
[ :SENSe]:FREQuency:CENTer:STEP:AUTO
[ :SENSe]:FREQuency:CENTer:STEP:AUTO
[ :SENSe]:FREQuency:CENTer:STEP[:INCRement]
[ :SENSe]:FREQuency:CENTer:STEP[:INCRement]
```



```
[ :SENSe]:FREQuency:CENTer:STEP[:INCRement]
[ :SENSe]:FREQuency:EMIXer:CENTer
[ :SENSe]:FREQuency:EMIXer:CENTer
[ :SENSe]:FREQuency:EMIXer:CENTer
[ :SENSe]:FREQuency:EMIXer:CENTer
[ :SENSe]:FREQuency:IQ:CENTer
[ :SENSe]:FREQuency:IQ:CENTer
[ :SENSe]:FREQuency:IQ:CENTer
[ :SENSe]:FREQuency:IQ:CENTer
[ :SENSe]:FREQuency:OFFSet
[ :SENSe]:FREQuency:RF:CENTer
[ :SENSe]:FREQuency:RF:CENTer
[ :SENSe]:FREQuency:RF:CENTer
[ :SENSe]:FREQuency:RF:CENTer
[ :SENSe]:HDUPlex:PORT:INPut
[ :SENSe]:HDUPlex:PORT:OUTPut
[ :SENSe]:MIXer:BAND
[ :SENSe]:MIXer:BIAS
[ :SENSe]:MIXer:BIAS:STATe
[ :SENSe]:MIXer:CIFLoss
[ :SENSe]:MIXer:HARMonic
[ :SENSe]:MIXer:LODoubler
[ :SENSe]:MIXer:MPATH
[ :SENSe]:MIXer:TTPe
[ :SENSe]:MIXer:TTPe?
[ :SENSe]:MIXer:UIFFreq
[ :SENSe]:MONitor:AVERage:COUNt
[ :SENSe]:MONitor:AVERage[:STATe]
[ :SENSe]:MONitor:AVERage:TCONtrol
[ :SENSe]:MONitor:BANDwidth[:RESolution]
[ :SENSe]:MONitor:BANDwidth[:RESolution]:AUTO
[ :SENSe]:MONitor:BANDwidth:VIDeo
[ :SENSe]:MONitor:BANDwidth:VIDeo:AUTO
[ :SENSe]:MONitor:BANDwidth:VIDeo:RATio
[ :SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO
[ :SENSe]:MONitor:CONversion:TYPE
[ :SENSe]:MONitor:DETEctor:TRACe?
[ :SENSe]:MONitor:DETEctor:TRACe[1]|2|3:AUTO
[ :SENSe]:MONitor:DETEctor:TRACe[1]2|3
[ :SENSe]:MONitor:FREQuency:SPAN
[ :SENSe]:MONitor:FREQuency:SPAN:ADJust
[ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio
[ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO
[ :SENSe]:MONitor:PNOise:OPTion
[ :SENSe]:MONitor:SAVoid[:STATe]?
[ :SENSe]:MONitor:SWEEp:POINts
[ :SENSe]:MONitor:SWEEp:POINts:AUTO[:STATe]
[ :SENSe]:OBWidth:AVERage:CONTinue
[ :SENSe]:OBWidth:AVERage:COUNt
[ :SENSe]:OBWidth:AVERage:COUNt:TERMinAl?
[ :SENSe]:OBWidth:AVERage[:STATe]
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:OBWidth:AVERage:TCONtrol
[ :SENSe]:OBWidth:BANDwidth[:RESolution]
[ :SENSe]:OBWidth:BANDwidth[:RESolution]:AUTO
[ :SENSe]:OBWidth:BANDwidth:SHApe
[ :SENSe]:OBWidth:BANDwidth:VIDeo
[ :SENSe]:OBWidth:BANDwidth:VIDeo:AUTO
[ :SENSe]:OBWidth:DETEctor:AUTO
[ :SENSe]:OBWidth:DETEctor[:FUNCTION]
[ :SENSe]:OBWidth:FREQuency:SPAN
[ :SENSe]:OBWidth:FREQuency:SPAN:AUTO
[ :SENSe]:OBWidth:FREQuency:SPAN:FULL
[ :SENSe]:OBWidth:IF:GAIN:AUTO[:STATe]
[ :SENSe]:OBWidth:IF:GAIN[:STATe]
[ :SENSe]:OBWidth:INTEgration[:METHod]
[ :SENSe]:OBWidth:MAXHold
[ :SENSe]:OBWidth:PERCent
[ :SENSe]:OBWidth:PREFerence
[ :SENSe]:OBWidth:SAVoid[:STATe]
[ :SENSe]:OBWidth:SWEEP:POINTS
[ :SENSe]:OBWidth:SWEEP:POINTS:AUTO[:STATe]
[ :SENSe]:OBWidth:SWEEP:TIME:AUTO:RULEs
[ :SENSe]:OBWidth:XDB
[ :SENSe]:PAVTime:FERRor
[ :SENSe]:PAVTime:FERRor:CORRection[:STATe]
[ :SENSe]:PAVTime:FERRor:IMMediate
[ :SENSe]:PAVTime:FERRor:TIME
[ :SENSe]:PAVTime:IF:GAIN:AUTO[:STATe]
[ :SENSe]:PAVTime:IF:GAIN[:STATe]
[ :SENSe]:PAVTime:MTIME?
[ :SENSe]:PAVTime:SEGMENTS
[ :SENSe]:PAVTime:SEGMENTS:INTERval
[ :SENSe]:PAVTime:SEGMENTS:OFFSet
[ :SENSe]:PAVTime:SEGMENTS:TRANsient
[ :SENSe]:PAVTime:SYNC
[ :SENSe]:POWer:IQ[:I]:RANGE[:UPPer]
[ :SENSe]:POWer:IQ:Q:RANGE[:UPPer]
[ :SENSe]:POWer:IQ:RANGE:AUTO
[ :SENSe]:POWer[:RF]:ATTenuation
[ :SENSe]:POWer[:RF]:ATTenuation:AUTO
[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]
[ :SENSe]:POWer[:RF]:EATTenuation
[ :SENSe]:POWer[:RF]:EATTenuation:STATe
[ :SENSe]:POWer[:RF]:FRATten
[ :SENSe]:POWer[:RF]:GAIN:BAND
[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]
[ :SENSe]:POWer[:RF]:GAIN[:STATe]
[ :SENSe]:POWer[:RF]:MW:PATH
[ :SENSe]:POWer[:RF]:MW:PATH:AUTO
[ :SENSe]:POWer[:RF]:MW:PATH:AUTO:FULL
[ :SENSe]:POWer[:RF]:PADJust
```

```
[ :SENSe]:POWer[:RF]:PCENter
[ :SENSe]:POWer[:RF]:RANGe
[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet
[ :SENSe]:POWer[:RF]:RANGe:OPTimize
[ :SENSe]:POWer[:RF]:RANGe:OPTimize
[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation
[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation
[ :SENSe]:POWer[:RF]:RANGe:OPTimize:REStArt
[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE
[ :SENSe]:POWer[:RF]:RANGe:PARatio
[ :SENSe]:POWer[:RF]:RFPSelector:NFIltEr[:STATe]
[ :SENSe]:POWer[:RF]:RFPSelector[:STATe]
[ :SENSe]:POWer[:RF]:SWPResel
[ :SENSe]:POWer[:RF]:SWPResel:BW
[ :SENSe]:POWer[:RF]:SWPResel:STAT?
[ :SENSe]:POWer[:RF]:SWPResel:STATe
[ :SENSe]:PStatistic:BANDwidth
[ :SENSe]:PStatistic:BANDwidth:AUTO
[ :SENSe]:PStatistic:COUNts
[ :SENSe]:PStatistic:FREQuency:CENTer:ADJust
[ :SENSe]:PStatistic:IF:GAIN:AUTO[:STATe]
[ :SENSe]:PStatistic:IF:GAIN[:STATe]
[ :SENSe]:PStatistic:MEAS:OFFSet
[ :SENSe]:PStatistic:SLTView[:STATe]
[ :SENSe]:PStatistic:SWEEp:CYCLes
[ :SENSe]:PStatistic:SWEEp:TIME
[ :SENSe]:PStatistic:URATio
[ :SENSe]:PVTime:AVERage:CONTinue
[ :SENSe]:PVTime:AVERage:COUNt
[ :SENSe]:PVTime:AVERage:COUNt:TERMinAl?
[ :SENSe]:PVTime:AVERage[:STATe]
[ :SENSe]:PVTime:AVERage:TCONtrol
[ :SENSe]:PVTime:AVERage:TYPE
[ :SENSe]:PVTime:BANDwidth
[ :SENSe]:PVTime:BANDwidth:AUTO
[ :SENSe]:PVTime:BURSt:RPERiod
[ :SENSe]:PVTime:BURSt:WIDTh
[ :SENSe]:PVTime:CORRection:NOISe[:AUTO]
[ :SENSe]:PVTime:DLINK:MINTerval
[ :SENSe]:PVTime:DLINK:MOFFset
[ :SENSe]:PVTime[:DLINK]:SCS
[ :SENSe]:PVTime:IF:GAIN:AUTO[:STATe]
[ :SENSe]:PVTime:IF:GAIN[:STATe]
[ :SENSe]:PVTime:IGNore:BURSt:FOUND
[ :SENSe]:PVTime:LIMit:POFF:DLINK
[ :SENSe]:PVTime:LIMit:POFF:ULINK
[ :SENSe]:PVTime:LIMit:PON:ULINK:REFerence
[ :SENSe]:PVTime:LIMit:PON:ULINK:STATe
[ :SENSe]:PVTime:LIMit:PON:ULINK:TOLerance
[ :SENSe]:PVTime:LIMit:RAMP:DRTIME
[ :SENSe]:PVTime:LIMit:RAMP:URTime
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:PVTime:LIMit:TRANsient:DLINK
[ :SENSe]:PVTime:POFF:MEAS:RULEs
[ :SENSe]:PVTime:RAMP:SEARCh:LENGth
[ :SENSe]:PVTime:SAVoid[:STATe]
[ :SENSe]:PVTime:SCS:AUTO
[ :SENSe]:PVTime:THReshold:DOWN:END
[ :SENSe]:PVTime:THReshold:DOWN:STARt
[ :SENSe]:PVTime:THReshold:UP:END
[ :SENSe]:PVTime:THReshold:UP:STARt
[ :SENSe]:PVTime:TIMing:REFeRence:AUTO
[ :SENSe]:PVTime:ULINK:CCARrier
[ :SENSe]:PVTime:ULINK:MINTErval
[ :SENSe]:PVTime:ULINK:MOFFset
[ :SENSe]:PVTime:ULINK:POFF:WIDTh
[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet
[ :SENSe]:RADio:IMODulation:INTerference:RANGe:EXCLUde[1]|2
[ :SENSe]:RADio:IMODulation:INTerference:REGion
[ :SENSe]:RADio:IMODulation:INTerference:SIDE
[ :SENSe]:RADio:IMODulation:INTerference:SPAN
[ :SENSe]:RADio:IMODulation:INTerference[:STATe]
[ :SENSe]:RADio:MCHannel:CHANnel:INFO?
[ :SENSe]:RADio:MCHannel:IPAdDress[1]|2|...|4
[ :SENSe]:RADio:MCHannel:IPAdDress[1]|2|...|4:LOCKed
[ :SENSe]:RADio:MCHannel:IPAdDress[1]|2|...|4:PORT
[ :SENSe]:RADio:MCHannel:PORT[1]|2
[ :SENSe]:RADio:MCHannel:PORT[1]|2:LOCKed
[ :SENSe]:RADio:MCHannel:PRESet:DEFault
[ :SENSe]:RADio:MCHannel:PRESet:EIRP
[ :SENSe]:RADio:MCHannel:SACQuisition[:STATe]
[ :SENSe]:RADio:MIMO:CHANnel:REFeRence
[ :SENSe]:RADio:MIMO:IPAdDress[1]|2|...|4:PORT
[ :SENSe]:RADio:MIMO[:STATe]
[ :SENSe]:RADio:STANDard:DIRection
[ :SENSe]:RADio:STANDard:PRESet:ADJust:FRANge
[ :SENSe]:RADio:STANDard:PRESet:ADJust:FRANge:AUTO
[ :SENSe]:RADio:STANDard:PRESet:CARRier[:BANDwidth]
[ :SENSe]:RADio:STANDard:PRESet:DLINK:ACHannel[:TYPE]
[ :SENSe]:RADio:STANDard:PRESet:DLINK:BS:CATEgory
[ :SENSe]:RADio:STANDard:PRESet:DLINK:BS:TYPE
[ :SENSe]:RADio:STANDard:PRESet:DLINK:NRTM
[ :SENSe]:RADio:STANDard:PRESet:DMODE
[ :SENSe]:RADio:STANDard:PRESet:FREQuency:RANGe
[ :SENSe]:RADio:STANDard:PRESet:IMMediate
[ :SENSe]:RADio:STANDard:PRESet:INCLude:EGATe:SOURce
[ :SENSe]:RADio:STANDard:PRESet:INCLude:EVM:RBALloc
[ :SENSe]:RADio:STANDard:PRESet:INCLude:FRAMe:PERiod
[ :SENSe]:RADio:STANDard:PRESet:INCLude:FRAMe:PERiod
[ :SENSe]:RADio:STANDard:PRESet:INCLude:FRAMe:SYNC:HOLDoff
[ :SENSe]:RADio:STANDard:PRESet:INCLude:FRAMe:SYNC:HOLDoff
```

```
[ :SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]
[ :SENSe]:RADio:STANdard:PRESet:INCLude:FRAMe:SYNC[:SOURce]
[ :SENSe]:RADio:STANdard:PRESet:OTYPE
[ :SENSe]:RADio:STANdard:PRESet:RBALloc
[ :SENSe]:RADio:STANdard:PRESet:SCS
[ :SENSe]:RADio:STANdard:PRESet:SCS:AUTO[:STATe]
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SLOT:COUNT
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:DLINK:SYMBol:COUNT
[ :SENSe]:RADio:STANdard:PRESet
[:TDDConfig]:RBALloc:FULFilled:IGNore:DMODE
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:RBALloc:TIME:LENGTH
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SLOT:ALLocation?
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:SPECial:SLOT:COUNT?
[ :SENSe]:RADio:STANdard:PRESet
[:TDDConfig]:TRANsmission:PERiodicity
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SLOT:COUNT
[ :SENSe]:RADio:STANdard:PRESet[:TDDConfig]:ULINK:SYMBol:COUNT
[ :SENSe]:RADio:STANdard:PRESet:ULINK:ACHannel[:TYPE]
[ :SENSe]:RADio:STANdard:PRESet:ULINK:CARRier
[ :SENSe]:RADio:STANdard:PRESet:ULINK:CTYPE
[ :SENSe]:RADio:STANdard:PRESet:ULINK:PCLass
[ :SENSe]:RF:ACQuisition:ATABle
[ :SENSe]:RF:ACQuisition:ATABle:IFPath:AUTO
[ :SENSe]:ROSCillator:BANDwidth
[ :SENSe]:ROSCillator:EXTernal:FREQuency
[ :SENSe]:ROSCillator:EXTernal:FREQuency:DEFault
[ :SENSe]:ROSCillator:LO:INPut
[ :SENSe]:ROSCillator:PXIReference:EXTernal:FREQuency
[ :SENSe]:ROSCillator:PXIReference:EXTernal:LOCK?
[ :SENSe]:ROSCillator:PXIReference:SELEct
[ :SENSe]:ROSCillator:PXIReference:SOURce
[ :SENSe]:ROSCillator:SOURce?
[ :SENSe]:ROSCillator:SOURce:TYPE
[ :SENSe]:SEMask:AVERage:CARRier:TYPE
[ :SENSe]:SEMask:AVERage:CONTInue
[ :SENSe]:SEMask:AVERage:COUNT
[ :SENSe]:SEMask:AVERage:COUNT:TERMinal?
[ :SENSe]:SEMask:AVERage:OFFSet:TYPE
[ :SENSe]:SEMask:AVERage[:STATe]
[ :SENSe]:SEMask:BANDwidth[1]|2:INTegration
[ :SENSe]:SEMask:BANDwidth[1]|2[:RESolution]
[ :SENSe]:SEMask:BANDwidth[1]|2[:RESolution]:AUTO
[ :SENSe]:SEMask:BANDwidth[1]|2:VIDeo
[ :SENSe]:SEMask:BANDwidth[1]|2:VIDeo:AUTO
[ :SENSe]:SEMask:BANDwidth[1]|2:VIDeo:RATio
[ :SENSe]:SEMask:BANDwidth[1]|2:VIDeo:RATio:AUTO
[ :SENSe]:SEMask:BANDwidth:SHAPE
[ :SENSe]:SEMask:CARRier:AUTO[:STATe]
[ :SENSe]:SEMask:CARRier:CPSD
[ :SENSe]:SEMask:CARRier:INDEX
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```
[ :SENSe]:SEMask:CARRier:MEASure:ALL
[ :SENSe]:SEMask:CARRier:PEAK[:POWER]
[ :SENSe]:SEMask:CARRier[:POWER]
[ :SENSe]:SEMask:CARRier:PREference:TYPE
[ :SENSe]:SEMask:DETEctor:CARRier:AUTO
[ :SENSe]:SEMask:DETEctor:CARRier[:FUNCTION]
[ :SENSe]:SEMask:DETEctor:OFFSet:AUTO
[ :SENSe]:SEMask:DETEctor:OFFSet[:FUNCTION]
[ :SENSe]:SEMask:FILTer[:RRC]:ALPHA
[ :SENSe]:SEMask:FILTer[:RRC][:STATE]
[ :SENSe]:SEMask:FREQuency[1]|2:SPAN
[ :SENSe]:SEMask:FREQuency[1]|2:SPAN:AUTO
[ :SENSe]:SEMask:NCONtiguous:REGion
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:CMASk:FREQuency:STOP
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:CMASk[:STATE]
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:IMULTi
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth[:RESolution]
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth
[:RESolution]:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDeo
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDeo:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:FREQuency:START
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:FREQuency:STOP
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SIDE
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:ABSolute
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:RCARRier
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:SABSolute
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STATE
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:ABSolute
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:ABSolute:COUPle
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:RCARRier
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:RCARRier:COUPle
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:SABSolute
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:SABSolute:COUPle
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:ACQuisition:TIME
[ :SENSe]:SEMask:OFFSet
[1]|2:INNER:LIST:SWEEp:ACQuisition:TIME:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:ETIME?
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TIME
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TIME:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TYPE
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TYPE:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:TEST
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:TEST:SABSolute
[ :SENSe]:SEMask:OFFSet[1]|2:INNER:TYPE
[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:IMULTi
[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth[:RESolution]
[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth
[:RESolution]:AUTO
[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo
```

```
[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:RATio
[:SENSe]:SEMask:OFFSet[1]|2
[:OUTer]:LIST:BANDwidth:VIDeo:RATio:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:FREQuency:START
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:FREQuency:STOP
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SIDE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:RCARrier
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STATe
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:ABSolute:COUPle
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:RCARrier
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:RCARrier:COUPle
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:SABSolute:COUPle
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:ACQuisition:TIME
[:SENSe]:SEMask:OFFSet[1]|2
[:OUTer]:LIST:SWEEP:ACQuisition:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:ETIME?
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:TIME
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:TYPE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEEP:TYPE:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:TEST
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:TEST:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:TYPE
[:SENSe]:SEMask:OFFSet[1]|2:TYPE
[:SENSe]:SEMask:SAVoid[:STATe]?
[:SENSe]:SEMask:SWEEP[1]|2:TIME
[:SENSe]:SEMask:SWEEP[1]|2:TIME:AUTO
[:SENSe]:SEMask:SWEEP[1]|2:TYPE
[:SENSe]:SEMask:SWEEP[1]|2:TYPE:AUTO
[:SENSe]:SEMask:SWEEP:ACQuisition:TIME
[:SENSe]:SEMask:SWEEP:ACQuisition:TIME:AUTO
[:SENSe]:SEMask:SWEEP:ETIME?
[:SENSe]:SEMask:SWEEP:POINTs
[:SENSe]:SEMask:SWEEP:TYPE:AUTO:RULEs
[:SENSe]:SEMask:TYPE
[:SENSe]:SEMask:WBFFt:ENABle
[:SENSe]:SIDentify:MODE
[:SENSe]:SIDentify[:STATe]
[:SENSe]:SPECtrum:IF:FREQuency?
[:SENSe]:SPECtrum:LO:MIXMode:SIDE?
[:SENSe]:SPURious:AVERage:CONTInue
[:SENSe]:SPURious:AVERage:COUNT
[:SENSe]:SPURious:AVERage:COUNT:TERMinal?
[:SENSe]:SPURious:AVERage[:STATe]
[:SENSe]:SPURious:AVERage:TCONtrol
```


9 Programming the Instrument
9.1 List of Supported SCPI Commands

```
[ :SENSe]:SPURious:AVERage:TYPE
[ :SENSe]:SPURious:FSMeas
[ :SENSe]:SPURious:IF:GAIN:AUTO[:STATe]
[ :SENSe]:SPURious:IF:GAIN[:STATe]
[ :SENSe]:SPURious[:RANGe]:ALL:SWEEp:TYPE:AUTO
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]:AUTO
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo
[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO
[ :SENSe]:SPURious[:RANGe][:LIST]:DETEctor[1][:FUNction]
[ :SENSe]:SPURious[:RANGe][:LIST]:DETEctor2[:FUNction]
[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:CENTer
[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN
[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:START
[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP
[ :SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCURsion
[ :SENSe]:SPURious[:RANGe][:LIST]:PEAK:THREshold
[ :SENSe]:SPURious[:RANGe][:LIST]:STATe
[ :SENSe]:SPURious[:RANGe][:LIST]:SWEEp:POINts
[ :SENSe]:SPURious[:RANGe][:LIST]:SWEEp:POINts:AUTO
[ :SENSe]:SPURious[:RANGe][:LIST]:SWEEp:TIME
[ :SENSe]:SPURious[:RANGe][:LIST]:SWEEp:TIME:AUTO
[ :SENSe]:SPURious:REPT:MODE
[ :SENSe]:SPURious:SPUR
[ :SENSe]:SPURious:SWEEp:TIME:AUTO:RULEs
[ :SENSe]:SPURious:TYPE
[ :SENSe]:SWEEp:EGATE:CONTRol
[ :SENSe]:SWEEp:EGATE:DELay
[ :SENSe]:SWEEp:EGATE:DELay:COMPensation:TYPE
[ :SENSe]:SWEEp:EGATE:HACcelerate:ENABLE
[ :SENSe]:SWEEp:EGATE:HOLDoff
[ :SENSe]:SWEEp:EGATE:HOLDoff:AUTO
[ :SENSe]:SWEEp:EGATE:LENGth
[ :SENSe]:SWEEp:EGATE:METHod
[ :SENSe]:SWEEp:EGATE:SOURce
[ :SENSe]:SWEEp:EGATE[:STATe]
[ :SENSe]:SWEEp:EGATE:TIME
[ :SENSe]:SWEEp:EGATE:VIEW
[ :SENSe]:SWEEp:EGATE:VIEW:START
[ :SENSe]:SWEEp:IF:DITHer
[ :SENSe]:SWEEp:IF:DITHer
[ :SENSe]:SWEEp:IMAGeprot
[ :SENSe]:SWEEp:IMAGeprot
[ :SENSe]:VCORrection:DELeTe
[ :SENSe]:VCORrection:SELeCt
[ :SENSe]:VOLTage|POWER:IQ:MIRROred
[ :SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]
[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]
```



```
[ :SENSe]:VOLTage:IQ:RANGe:AUTO
[ :SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe]
[ :SENSe]:WAVeform:ADC:DITHer[:STATe]
[ :SENSe]:WAVeform:APERture?
[ :SENSe]:WAVeform:AVERage:COUNt
[ :SENSe]:WAVeform:AVERage[:STATe]
[ :SENSe]:WAVeform:AVERage:TACount
[ :SENSe]:WAVeform:AVERage:TACount:AUTO
[ :SENSe]:WAVeform:AVERage:TCONtrol
[ :SENSe]:WAVeform:AVERage:TYPE
[ :SENSe]:WAVeform:AVERage:TYPE:AUTO
[ :SENSe]:WAVeform:DIF:BANDwidth
[ :SENSe]:WAVeform:DIF:BANDwidth:AUTO
[ :SENSe]:WAVeform:DIF:FILTer:ALPha
[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth
[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO
[ :SENSe]:WAVeform:DIF:FILTer:TYPE
[ :SENSe]:WAVeform:FREQuency:CENTer:ADJust
[ :SENSe]:WAVeform:FREQuency:SYNThesis:AUTO[:STATe]
[ :SENSe]:WAVeform:FREQuency:SYNThesis[:STATe]
[ :SENSe]:WAVeform:IF:FREQuency?
[ :SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]
[ :SENSe]:WAVeform:IF:GAIN:LEVel
[ :SENSe]:WAVeform:IF:GAIN:OFFSet
[ :SENSe]:WAVeform:IF:GAIN[:STATe]
[ :SENSe]:WAVeform:LO:DITHer[:STATe]
[ :SENSe]:WAVeform:LO:MIXMode
[ :SENSe]:WAVeform:LO:MIXMode:SIDE?
[ :SENSe]:WAVeform:OPTimize:EVM
[ :SENSe]:WAVeform:SAVoid[:STATe]
[ :SENSe]:WAVeform:SPECTrum
[ :SENSe]:WAVeform:SRATe
[ :SENSe]:WAVeform:SWEEp:TIME
Service[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATe]
SOURce:AM[:DEPTH][:LINear]
SOURce:AM:INTernal:FREQuency
SOURce:AM:INTernal:FREQuency:STEP[:INCRement]
SOURce:AM:STATe
SOURce:FM[:DEViation]
SOURce:FM:INTernal:FREQuency
SOURce:FM:INTernal:FREQuency:STEP[:INCRement]
SOURce:FM:STATe
SOURce:FREQuency:CHANnels:BAND
SOURce:FREQuency:CHANnels:NUMBer
SOURce:FREQuency:COUPling
SOURce:FREQuency:COUPling:OFFSet
SOURce:FREQuency[:CW]
SOURce:FREQuency:OFFSet
SOURce:FREQuency:REFerence
SOURce:FREQuency:REFerence:SET
SOURce:FREQuency:REFerence:STATe
```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

SOURce:FREQuency:STEP[:INCRement]
SOURce:LIST:INITiation:ARMed?
SOURce:LIST:NUMBer:STEPs
SOURce:LIST:REPetition:TYPE
SOURce:LIST:SETup:AMPLitude
SOURce:LIST:SETup:CLEar
SOURce:LIST:SETup:CNFRequency
SOURce:LIST:SETup:DURation:TYPE
SOURce:LIST:SETup:INPut:TRIGger
SOURce:LIST:SETup:OUTPut:TRIGger
SOURce:LIST:SETup:RADio:BAND
SOURce:LIST:SETup:RADio:BAND:LINK
SOURce:LIST:SETup:TOCount
SOURce:LIST:SETup:TRANSition:TIME
SOURce:LIST:SETup:WAVEform
SOURce:LIST[:STATe]
SOURce:LIST:STEP[1]|2|...|1000:SETup
SOURce:LIST:STEP[1]|2|...|1000:SETup:AMPLitude
SOURce:LIST:STEP[1]|2|...|1000:SETup:CNFRequency
SOURce:LIST:STEP[1]|2|...|1000:SETup:DURation:TCOUNT
SOURce:LIST:STEP[1]|2|...|1000:SETup:DURation:TCOUNT
SOURce:LIST:STEP[1]|2|...|1000:SETup:DURation:TYPE
SOURce:LIST:STEP[1]|2|...|1000:SETup:INPut:TRIGger
SOURce:LIST:STEP[1]|2|...|1000:SETup:OUTPut:TRIGger
SOURce:LIST:STEP[1]|2|...|1000:SETup:RADio:BAND
SOURce:LIST:STEP[1]|2|...|1000:SETup:RADio:BAND:LINK
SOURce:LIST:STEP[1]|2|...|1000:SETup:TRANSition:TIME
SOURce:LIST:STEP[1]|2|...|1000:SETup:WAVEform
SOURce:LIST:TRIGger[:IMMediate]
SOURce:LIST:TRIGger:INITiate[:IMMediate]
SOURce:LIST:TRIGger:OUTPut:TYPE
SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer
SOURce:PM[:DEViation]
SOURce:PM:INTernal:FREQuency
SOURce:PM:INTernal:FREQuency:STEP[:INCRement]
SOURce:PM:STATe
SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]
SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]:UNIT
SOURce:POWer[:LEVel][:IMMediate]:OFFSet
SOURce:POWer:REFerence
SOURce:POWer:REFerence:STATe
SOURce:POWer:STEP[:INCRement]
SOURce:PRESet
SOURce:RADio:ARB:BASEband:FREQuency:OFFSet
SOURce:RADio:ARB:BASEband:POWer
SOURce:RADio:ARB:CATalog?
SOURce:RADio:ARB:CATalog?
SOURce:RADio:ARB:DEFault:DIRectory
SOURce:RADio:ARB:DELeTe
SOURce:RADio:ARB:DELeTe:ALL

```

SOURce:RADio:ARB:FCATalog?
SOURce:RADio:ARB:FCATalog?
SOURce:RADio:ARB:HEADer:CLEar
SOURce:RADio:ARB:HEADer:INFormation?
SOURce:RADio:ARB:HEADer:SAVE
SOURce:RADio:ARB:IQADjustment:DElay
SOURce:RADio:ARB:IQADjustment:GAIN
SOURce:RADio:ARB:IQADjustment:[STATe]
SOURce:RADio:ARB:LOAD
SOURce:RADio:ARB:LOAD:ALL
SOURce:RADio:ARB:MDEStination:ALCHold
SOURce:RADio:ARB:MDEStination:PULSe
SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?
SOURce:RADio:ARB:MPLicensed:UID:LOCKed?
SOURce:RADio:ARB:MPOLarity:MARKer1|...|4
SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth
SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe]
SOURce:RADio:ARB:NR5G:PHASe:SCS
SOURce:RADio:ARB:NR5G:PHASe[:STATe]
SOURce:RADio:ARB:RETRigger
SOURce:RADio:ARB:RMS
SOURce:RADio:ARB:RMS:CALCulate
SOURce:RADio:ARB:RMS:CALCulation:MODE
SOURce:RADio:ARB:RSCaling
SOURce:RADio:ARB:SCLock:RATE
SOURce:RADio:ARB:SEQuence[:MWAVEform]
SOURce:RADio:ARB:SEQuence:SYNC
SOURce:RADio:ARB[:STATe]
SOURce:RADio:ARB:TRIGger:INITiate
SOURce:RADio:ARB:TRIGger[:SOURce]
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DElay
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DElay:STATe
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:SLOPe
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay:STATe
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe
SOURce:RADio:ARB:TRIGger:SYNC[:STATe]
SOURce:RADio:ARB:TRIGger:TYPE
SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]
SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE]
SOURce:RADio:ARB:WAVEform
SOURce:RADio:BAND:LINK
SOURce:SYNC:CONFig
SOURce:SYNC:CONNEcted?
SOURce:SYNC:REMOte:ADDReSS
SOURce:SYNC:REMOte:ADDReSS:ADD
SOURce:SYNC:REMOte:ADDReSS:DELeTe
SOURce:SYNC:REMOte:IPPort
SOURce:SYNC:REMOte:SEC<integer>?
SOURce:SYNC:REMOte:SECOndary<integer>

```

9 Programming the Instrument
9.1 List of Supported SCPI Commands

SOURce:SYNC:RTSetting:STATe
SOURce:SYNC:SETTings:ENABle
SOURce:SYNC:SETTings:SEGment2:ENABle
SOURce:SYNC:SETTings:SEGment2:FREQuency
SOURce:SYNC:START
SOURce:SYNC:STOP
SOURce:SYNC:TYPE
STATus:OPERation:CONDition?
STATus:OPERation:ENABle
STATus:OPERation:ENABle
STATus:OPERation[:EVENT]?
STATus:OPERation:INSTrument:CONDition?
STATus:OPERation:INSTrument:ENABle
STATus:OPERation:INSTrument[:EVENT]?
STATus:OPERation:INSTrument:NTRansition
STATus:OPERation:INSTrument:PTRansition
STATus:OPERation:NTRansition
STATus:OPERation:PTRansition
STATus:PRESet
STATus:QUESTionable:CALibration:CONDition?
STATus:QUESTionable:CALibration:ENABle
STATus:QUESTionable:CALibration[:EVENT]?
STATus:QUESTionable:CALibration:EXTended:FAILure:CONDition?
STATus:QUESTionable:CALibration:EXTended:FAILure:ENABle
STATus:QUESTionable:CALibration:EXTended:FAILure[:EVENT]?
STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition
STATus:QUESTionable:CALibration:EXTended:FAILure:PTRansition
STATus:QUESTionable:CALibration:EXTended:NEEDed:CONDition?
STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABle
STATus:QUESTionable:CALibration:EXTended:NEEDed[:EVENT]?
STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition
STATus:QUESTionable:CALibration:EXTended:NEEDed:PTRansition
STATus:QUESTionable:CALibration:NTRansition
STATus:QUESTionable:CALibration:PTRansition
STATus:QUESTionable:CALibration:SKIPped:CONDition?
STATus:QUESTionable:CALibration:SKIPped:ENABle
STATus:QUESTionable:CALibration:SKIPped[:EVENT]?
STATus:QUESTionable:CALibration:SKIPped:NTRansition
STATus:QUESTionable:CALibration:SKIPped:PTRansition
STATus:QUESTionable:CONDition?
STATus:QUESTionable:ENABle
STATus:QUESTionable[:EVENT]?
STATus:QUESTionable:FREQuency:CONDition?
STATus:QUESTionable:FREQuency:ENABle
STATus:QUESTionable:FREQuency[:EVENT]?
STATus:QUESTionable:FREQuency:NTRansition
STATus:QUESTionable:FREQuency:PTRansition
STATus:QUESTionable:INTegrity:CONDition?
STATus:QUESTionable:INTegrity:ENABle
STATus:QUESTionable:INTegrity[:EVENT]?

STATus:QUESTionable:INTEgrity:NTRansition
STATus:QUESTionable:INTEgrity:OUTPut:CONDition?
STATus:QUESTionable:INTEgrity:OUTPut:ENABle
STATus:QUESTionable:INTEgrity:OUTPut[:EVENT]?
STATus:QUESTionable:INTEgrity:OUTPut:NTRansition
STATus:QUESTionable:INTEgrity:OUTPut:PTRansition
STATus:QUESTionable:INTEgrity:PTRansition
STATus:QUESTionable:INTEgrity:SIGNal:CONDition?
STATus:QUESTionable:INTEgrity:SIGNal:ENABle
STATus:QUESTionable:INTEgrity:SIGNal[:EVENT]?
STATus:QUESTionable:INTEgrity:SIGNal:NTRansition
STATus:QUESTionable:INTEgrity:SIGNal:PTRansition
STATus:QUESTionable:INTEgrity:UNCalibrated:CONDition?
STATus:QUESTionable:INTEgrity:UNCalibrated:ENABle
STATus:QUESTionable:INTEgrity:UNCalibrated[:EVENT]?
STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition
STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition
STATus:QUESTionable:NTRansition
STATus:QUESTionable:POWer:CONDition?
STATus:QUESTionable:POWer:ENABle
STATus:QUESTionable:POWer[:EVENT]?
STATus:QUESTionable:POWer:NTRansition
STATus:QUESTionable:POWer:PTRansition
STATus:QUESTionable:POWer:PTRansition?>
STATus:QUESTionable:PTRansition
STATus:QUESTionable:TEMPerature:CONDition?
STATus:QUESTionable:TEMPerature:ENABle
STATus:QUESTionable:TEMPerature[:EVENT]?
STATus:QUESTionable:TEMPerature:NTRansition
STATus:QUESTionable:TEMPerature:PTRansition
SYSTem:APPLication:CATalog[:NAME]?
SYSTem:APPLication:CATalog[:NAME]:COUNT?
SYSTem:APPLication:CATalog:OPTion?
SYSTem:APPLication:CATalog:REVision?
SYSTem:APPLication[:CURRENT][:NAME]?
SYSTem:APPLication[:CURRENT]:OPTion?
SYSTem:APPLication[:CURRENT]:REVision?
SYSTem:APPLication:LOAded?
SYSTem:CALibration:ABORT
SYSTem:CALibration:CGRoup
SYSTem:CALibration:CGRoup:APPLy
SYSTem:CALibration:CGRoup:APPLy:AOff
SYSTem:CALibration:CGRoup:COpy
SYSTem:CALibration:CGRoup:COpy:FROM
SYSTem:CALibration:DElete:ALL
SYSTem:CALibration:DESCription
SYSTem:CALibration:FREquency:OFFSet
SYSTem:CALibration:INITiate:SElected
SYSTem:CALibration:INPut
SYSTem:CALibration:MODule[1]|2|...|10:SNUMber?
SYSTem:CALibration:MODule:SElect

9 Programming the Instrument

9.1 List of Supported SCPI Commands

```

SYSTem:CALibration:REFerence
SYSTem:CALibration:ROW[1] | 2 | ... | 100:APPLy:STATe
SYSTem:CALibration:ROW[1] | 2 | ... | 100:ATTenuation:START
SYSTem:CALibration:ROW[1] | 2 | ... | 100:ATTenuation:STEP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:ATTenuation:STOP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:ATTenuation:TYPE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:CALibrate:STATe
SYSTem:CALibration:ROW[1] | 2 | ... | 100:CAPPLIED?
SYSTem:CALibration:ROW[1] | 2 | ... | 100:COUPLing
SYSTem:CALibration:ROW[1] | 2 | ... | 100:DELeTe
SYSTem:CALibration:ROW[1] | 2 | ... | 100:DUPLicate
SYSTem:CALibration:ROW[1] | 2 | ... | 100:EATTenuation:START
SYSTem:CALibration:ROW[1] | 2 | ... | 100:EATTenuation:STEP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:EATTenuation:STOP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:EATTenuation:TYPE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FATTenuation:START
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FATTenuation:STOP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FATTenuation:TYPE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FEATTenuation:START
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FEATTenuation:STEP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FEATTenuation:STOP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FEATTenuation:TYPE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:POINts
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:START
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:STEP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:STOP
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:SYNThesis:ALL[:STATe]
SYSTem:CALibration:ROW[1] | 2 | ... | 100:FREQuency:SYNThesis[:STATe]
SYSTem:CALibration:ROW[1] | 2 | ... | 100:IF:GAIN[:STATe]?
SYSTem:CALibration:ROW[1] | 2 | ... | 100:IF:GAIN
[:STATe]AUTO|HIGH|LOW|ALL
SYSTem:CALibration:ROW[1] | 2 | ... | 100:IF:PATH
SYSTem:CALibration:ROW[1] | 2 | ... | 100:INSert
SYSTem:CALibration:ROW[1] | 2 | ... | 100:LAST?
SYSTem:CALibration:ROW[1] | 2 | ... | 100:LO:MMODE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:MATCH[:STATe]
SYSTem:CALibration:ROW[1] | 2 | ... | 100:NAME
SYSTem:CALibration:ROW[1] | 2 | ... | 100:POWER:GAIN:BAND?
SYSTem:CALibration:ROW[1] | 2 | ... | 100:POWER[:RF]:GAIN:BAND
SYSTem:CALibration:ROW[1] | 2 | ... | 100:POWER[:RF]:GAIN:LNA[:STATe]
SYSTem:CALibration:ROW[1] | 2 | ... | 100:POWER[:RF]:MW:PATH
SYSTem:CALibration:ROW[1] | 2 | ... | 100:STATus?
SYSTem:CALibration:ROW[1] | 2 | ... | 100:TYPE
SYSTem:CALibration:ROW[1] | 2 | ... | 100:UCMeas
SYSTem:CALibration:STATus:ALL?
SYSTem:CALibration:TUNE:FREQuency
SYSTem:CALibration:TUNE:OUTput[:STATe]
SYSTem:CALibration:TUNE:REFerence
SYSTem:CALibration:TUNE[:SElected]
SYSTem:CALibration:TUNE:SPACing

```



```

SYSTem:CALibration:TUNE:TYPE
SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRESS
SYSTem:COMMunicate:GPIB[1][:SELF]:CONTROLLER[:ENABLE]
SYSTem:COMMunicate:LAN:INSTrument:PORT?
SYSTem:COMMunicate:LAN:IPV4:CONFig
SYSTem:COMMunicate:LAN:IPV6:CONFig
SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABLEd?
SYSTem:COMMunicate:LAN:PHYSical:IPADDRESS:LIST?
SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLear:ENABLE
SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABLE
SYSTem:COMMunicate:LAN:SCPI:SICL:ENABLE
SYSTem:COMMunicate:LAN:SCPI:SOCKEt:CONTRol?
SYSTem:COMMunicate:LAN:SCPI:SOCKEt:ENABLE
SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABLE
SYSTem:COMMunicate:USB:CONNECTION?
SYSTem:COMMunicate:USB:PACKets?
SYSTem:COMMunicate:USB:STATUS?
SYSTem:CONFigure[:SYSTem]?
SYSTem:CSYSTem?
SYSTem:DATE
SYSTem:DEFAult
SYSTem:DISPlay:BACKlight:INTensity
SYSTem:DISPlay:CFORmat
SYSTem:DISPlay:HINTs?
SYSTem:DISPlay:HINTs[:STATe]
SYSTem:DISPlay:LANGuage
SYSTem:DISPlay:MPPosition
SYSTem:DISPlay:MPTab
SYSTem:DISPlay:NEPImmediate
SYSTem:ERRor[:NEXT]?
SYSTem:ERRor:OVERload[:STATe]
SYSTem:ERRor:PUP?
SYSTem:ERRor:VERBoSe
SYSTem:HELP:HEADers?
SYSTem:HID?
SYSTem:IDN
SYSTem:IDN:CONFigure
SYSTem:KLOCK
SYSTem:LICense[:FPAck]:WAVEform:ADD
SYSTem:LICense[:FPAck]:WAVEform:CLEar
SYSTem:LICense[:FPAck]:WAVEform:FREE?
SYSTem:LICense[:FPAck]:WAVEform:LOCK
SYSTem:LICense[:FPAck]:WAVEform:NAME?
SYSTem:LICense[:FPAck]:WAVEform:REPLace
SYSTem:LICense[:FPAck]:WAVEform:STATus?
SYSTem:LICense[:FPAck]:WAVEform:UID?
SYSTem:LICense[:FPAck]:WAVEform:USED?
SYSTem:LKEY?
SYSTem:LKEY
SYSTem:LKEY:BORRow
SYSTem:LKEY:BORRow:LIST?

```

9 Programming the Instrument

9.1 List of Supported SCPI Commands

SYSTem:LKEY:BORRow:NETWork:COUT:ENABle
SYSTem:LKEY:BORRow:RETurn
SYSTem:LKEY:COUT?
SYSTem:LKEY:COUT:LIST?
SYSTem:LKEY:DELeTe
SYSTem:LKEY:LIST?
SYSTem:LKEY:SOFTware:SUPPort:EXPIration:DATE?
SYSTem:LKEY:WAVEform:ADD
SYSTem:LKEY:WAVEform:CLear
SYSTem:LKEY:WAVEform:FREE?
SYSTem:LKEY:WAVEform:LOCK
SYSTem:LKEY:WAVEform:NAME?
SYSTem:LKEY:WAVEform:REPLace
SYSTem:LKEY:WAVEform:STATus?
SYSTem:LKEY:WAVEform:UID?
SYSTem:LKEY:WAVEform:USED?
SYSTem:LOCK:NAME?
SYSTem:LOCK:OWNer?
SYSTem:LOCK:RELease
SYSTem:LOCK:REQuest?
SYSTem:LOFF
SYSTem:LWSTation
SYSTem:METRics:FPANel?
SYSTem:METRics:SCPI?
SYSTem:METRics:STIME?
SYSTem:MRELay:COUNt?
SYSTem:OPTions?
SYSTem:PDown
SYSTem:PERSONa:DEFault
SYSTem:PERSONa:MANUFACTurer
SYSTem:PERSONa:MANUFACTurer:DEFault
SYSTem:PERSONa:MODEl
SYSTem:PERSONa:MODEl:DEFault
SYSTem:PON:APPLication:LLIST
SYSTem:PON:APPLication:VMEMory[:AVAIlable]?
SYSTem:PON:APPLication:VMEMory:TOTal?
SYSTem:PON:APPLication:VMEMory:USED?
SYSTem:PON:APPLication:VMEMory:USED:NAME?
SYSTem:PON:ETIME?
SYSTem:PON:FPGA:LOAD
SYSTem:PON:FPGA:PREFerence
SYSTem:PON:MODE
SYSTem:PON:TIME?
SYSTem:PON:TYPE
SYSTem:PRESet
SYSTem:PRESet:FULL
SYSTem:PRESet:TYPE
SYSTem:PRESet:USER
SYSTem:PRESet:USER:ALL
SYSTem:PRESet:USER:SAVE

SYSTem:PRINT:THEMe
 SYSTem:PUP
 SYSTem:PUP:PROcEss
 SYSTem:SECurity:USB:WPRotect[:ENABle]
 SYSTem:SEQuencer
 SYSTem:SET
 SYSTem:SHOW
 SYSTem:SOFTware:VERSion:DATE?
 SYSTem:TEMPerature:HEXTreme?
 SYSTem:TEMPerature:LEXTreme?
 SYSTem:TIME
 SYSTem:VERSion?

T

TRACe[:<meas>]:CLEar:ALL
 TRACe:<meas>:COPY
 TRACe:<meas>:EXCHange
 TRACe[:<meas>]:PRESet:ALL
 TRACe:<meas>:PRESet:EIRP
 TRACe[1]|2|...|6:DISPlay[:STATe]
 TRACe[1]|2|...|6:TYPE
 TRACe[1]|2|...|6:UPDate[:STATe]
 TRACe[1]|2|3:<meas>:CHANnel
 TRACe[1]|2|3:<meas>:DISPlay[:STATe]
 TRACe[1]|2|3:<meas>:TYPE
 TRACe[1]|2|3:<meas>:UPDate[:STATe]
 TRACe[1]|2|3:PVTime:DISPlay[:STATe]
 TRACe[1]|2|3:PVTime:TYPE
 TRACe[1]|2|3:PVTime:UPDate[:STATe]
 TRACe:CLEar
 TRACe:COPY
 TRACe[:DATA]
 TRACe:EXCHange
 TRACe:MONitor:CLEar:ALL
 TRIGger:<measurement>[:SEQuence]:IQ:SOURce
 TRIGger:<measurement>[:SEQuence]:RF:SOURce
 TRIGger:<measurement>[:SEQuence]:SOURce
 TRIGger[1]|2|...|4[:SEQuence]:OUTPut
 TRIGger[1]|2|...|4[:SEQuence]:OUTPut:DIRection
 TRIGger[1]|2|...|4[:SEQuence]:OUTPut:POLarity
 TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut
 TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE
 TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity
 TRIGger:PXIE:SOURce[:SEQuence]:OUTPut
 TRIGger:PXIE:SOURce[:SEQuence]:OUTPut:LINE
 TRIGger:PXIE:SOURce[:SEQuence]:OUTPut:POLarity
 TRIGger[:SEQuence]:<trig_source>:DELay
 TRIGger[:SEQuence]:<trig_source>:DELay:STATe

9 Programming the Instrument

9.1 List of Supported SCPI Commands

TRIGger[:SEquence]:<trig_source>:LEVel
TRIGger[:SEquence]:<trig_source>:SLOPe
TRIGger[:SEquence]:AIQMag:BANDwidth
TRIGger[:SEquence]:AIQMag:CENTer
TRIGger[:SEquence]:ATRigger
TRIGger[:SEquence]:ATRigger:STATe
TRIGger[:SEquence]:EXternal1|EXternal2|RFBurst:DElay:COMPensation
TRIGger[:SEquence]:FRAME:ADJust
TRIGger[:SEquence]:FRAME:OFFSet
TRIGger[:SEquence]:FRAME:OFFSet:DISPlay:RESet
TRIGger[:SEquence]:FRAME:PERiod
TRIGger[:SEquence]:FRAME:SMONitor:RESet
TRIGger[:SEquence]:FRAME:SYNC
TRIGger[:SEquence]:FRAME:SYNC:HOLDoff
TRIGger[:SEquence]:FRAME:SYNC:HOLDoff:STATe
TRIGger[:SEquence]:HOLDoff
TRIGger[:SEquence]:HOLDoff:STATe
TRIGger[:SEquence]:HOLDoff:TYPE
TRIGger[:SEquence]:INTernal:SOURce:OUTPut
TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity
TRIGger[:SEquence]:OFFSet:STATe
TRIGger[:SEquence]:OPTimize:MODE
TRIGger[:SEquence]:PXi:LINE
TRIGger[:SEquence]:RFBurst:LEVel:ABSolute
TRIGger[:SEquence]:RFBurst:LEVel:RELative
TRIGger[:SEquence]:RFBurst:LEVel:TYPE
TRIGger[:SEquence]:SOURce
TRIGger[:SEquence]:TV:FMODE
TRIGger[:SEquence]:TV:LINE
TRIGger[:SEquence]:TV:STANdard

U

UNIT:ACPower:POWer:PSD
UNIT:CHPower:POWer:PSD

9.2 IEEE 488.2 Common Commands

The instrument supports the following subset of IEEE 488.2 Common Commands, as defined in Chapter 10 of [IEEE Standard 488.2–1992](#). As indicated below, some of these commands correspond directly to instrument front-panel functionality, while others are available only as remote commands.

- ["*CAL? - Calibration Query" on page 4129](#) (Align Now All equivalent)
- ["*CLS - Clear Status" on page 4130](#)
- ["*ESE - Standard Event Status Enable" on page 4130](#)
- ["*ESR? - Standard Event Status Register Query" on page 4131](#)
- ["*IDN? - Identification Query" on page 4131](#)
- ["*OPC? - Operation Complete" on page 4132](#)
- ["*OPT? - Query Instrument Options" on page 4133](#)
- ["*RCL - Recall Instrument State" on page 4133](#) (Recall State equivalent)
- ["*RST - Reset" on page 4133](#) (Mode Preset equivalent)
- ["*SAV - Save Instrument State" on page 4134](#) (Save State equivalent)
- ["*SRE - Service Request Enable" on page 4134](#)
- ["*STB? - Status Byte Query" on page 4135](#)
- ["*TRG - Trigger" on page 4135](#)
- ["*TST? - Self Test Query" on page 4135](#)
- ["*WAI - Wait-to-Continue" on page 4136](#)

9.2.1 *CAL? - Calibration Query

[*CAL?](#) Performs a full alignment and returns a number indicating the success of the alignment. A zero is returned if the alignment is successful. A one is returned if any part of the alignment fails. The equivalent SCPI command is [:CALibrate\[:ALL\]?](#)

See ["Align Now All" on page 3483](#)

Remote Command

[*CAL](#)

Example	*CAL? Runs a full alignment and returns 0 if no problems encountered
Status Bits/OPC dependencies	See "Align Now All" on page 3483

9.2.2 *CLS - Clear Status

Clears the "Status Byte Register" on page 4166, by emptying the error queue and clearing all bits in all of the event registers, and consequently all bits in the Status Byte Register.

The Status Byte Register summarizes the states of the other registers. It is also responsible for generating service requests.

Remote Command	*CLS
Example	*CLS Clears the error queue and the Status Byte Register
Notes	For related commands, see : SYSTem:ERRor[:NEXT]? See also : STATus:PRESet and all commands in the "Status Register System & STATus Subsystem" on page 4157
Status Bits/OPC dependencies	Resets all bits in all event registers to 0, which resets all the status byte register bits to 0 also

9.2.3 *ESE - Standard Event Status Enable

Sets the desired bits in the Event Enable sub-register of the "Standard Event Status Register" on page 4170, which enables the corresponding bits in the Standard Event Status Register. This register monitors I/O errors and synchronization conditions such as operation complete, request control, query error, device-dependent error, status execution error, command error, and power on. The selected bits are **ORed** to become a summary bit (bit 5) in the "Status Byte Register" on page 4166, which can be queried.

The query returns the state of this register.

Numeric values for bit patterns can be entered using decimal or hexadecimal representations (0 to 32767, equivalent to **#H0** to **#H7FFF**).

Remote Command	*ESE <integer> *ESE?
Example	*ESE 36 Enables the Standard Event Status Register to monitor query and command errors (bits 2 and 5)

	*ESE?
	Returns a 36 indicating that the query and command status bits are enabled
Notes	For related commands, see the "Status Register System & STATus Subsystem" on page 4157 and :SYSTem:ERRor[:NEXT]?
Preset	255
State Saved	Not saved in state
Min	0
Max	255

9.2.4 *ESR? - Standard Event Status Register Query

Queries and clears the ["Standard Event Status Register" on page 4170](#). (This is a destructive read.) The value returned is a hexadecimal number that reflects the current state (0/1) of all the bits in the register.

Remote Command	*ESR?
Example	*ESR?
	Returns a 1 if there is either a query or command error, otherwise it returns a zero
Notes	For related commands, see "Status Register System & STATus Subsystem" on page 4157
Min/Max	0 / 255
Status Bits/OPC dependencies	Standard Event Status Register (bits 0 – 7)

9.2.5 *IDN? - Identification Query

Returns a string of instrument identification information. The string contains the model number, serial number, and firmware revision.

The response is organized into four fields separated by commas. The field definitions are as follows:

1. Manufacturer
2. Model
3. Serial number
4. Firmware version

Remote Command	*IDN?
----------------	--------------

Example	<p>*IDN?</p> <p>Returns instrument identification information, such as: Keysight Technologies,N9040B,US01020004,A.15.02</p> <p>Backwards Compatibility Command</p>
Example	<p>:ID?</p> <p>Returns model number, such as: N9040B</p>
Notes	<p>Provided for backwards compatibility:</p> <p>In Remote Language Compatibility Mode, ID? returns the model number of the emulated instrument</p> <p>In any other Mode, the returned model number is that of the actual instrument</p>
Backwards Compatibility SCPI	:ID?

9.2.6 *OPC? - Operation Complete

Sets bit 0 in the "Standard Event Status Register" on page 4170 (SESR) to "1" when pending operations have finished, that is when all overlapped commands are complete. It does not hold off subsequent operations. You can determine when the overlapped commands have completed either by polling the OPC bit in SESR, or by setting up the status system so that a service request (SRQ) is asserted when the OPC bit is set.

***OPC?** returns "1" after all the current overlapped commands are complete, so it holds off subsequent commands until the "1" is returned, then the program continues. This query can be used to synchronize events of other instruments on the external bus.

Remote Command	<p>*OPC</p> <p>*OPC?</p>
Example	<p>Select single sweeping: :INIT:CONT 0</p> <p>Initiate a sweep: :INIT:IMM</p> <p>Hold off any further commands until the sweep is complete: *OPC?</p>
Notes	<p>Not global to all remote ports or front panel. *OPC only affects operations that were initiated on the same port that the *OPC command was issued from</p> <p>*OPC is an overlapped command, but *OPC? is sequential</p> <p>*OPC? does <i>not</i> holdoff the completion of GUI update commands , such as :MMEM:LOAD:SCON "myScreenConfig.screen"</p>

9.2.7 *OPT? - Query Instrument Options

Returns a string of all installed instrument options. It is a comma-separated list, with quotes, for example:

```
"550,B25,B40,BBA,CRP,CRW,EA3,EDP,ESC,EXM,FBP,LNP,MPB,NF2,RTS,EMC,FP2"
```

Remote Command	*OPT?
----------------	-------

9.2.8 *RCL - Recall Instrument State

Recalls the instrument state from the specified instrument memory register.

- If the state being loaded has a newer firmware revision than the revision of the instrument, no state is recalled and an error is reported
- If the state being loaded has an equal firmware revision than the revision of the instrument, the state will be loaded
- If the state being loaded has an older firmware revision than the revision of the instrument, then the instrument will only load the parts of the state that apply to the older revision

Remote Command	*RCL <register #>
Example	Recall the instrument state that is currently stored in register 7 (register 8 in the UI): *RCL 7
Notes	Registers 0 through 15 are accessible from the front panel in menu keys for Recall Registers. Register 0 corresponds to front panel Register 1
Min	0
Max	127
Status Bits/OPC dependencies	The command is sequential

9.2.9 *RST - Reset

*RST is equivalent to :SYST:PRES;:INIT:CONT OFF, which is a Mode Preset in the **Single** measurement state. This command is preferred over the Mode Preset command :SYST:PRES, because optimal remote programming occurs with the instrument in the **Single** measurement state.

*RST clears all pending OPC bits and sets the Status Byte to 0.

Remote Command	*RST
Notes	Sequential
Couplings	*RST causes the currently running measurement to be aborted and causes the default measurement to be active. *RST gets the mode to a consistent state, with all of the default couplings set
Status Bits/OPC dependencies	Clears all pending OPC bits. The "Status Byte Register" on page 4166 is set to 0

9.2.10 *SAV - Save Instrument State

Saves the current instrument state and mode to the specified instrument memory register.

Remote Command	*SAV <register #>
Example	Save the instrument state in register 9 (register 10 in the UI): *SAV 9
Notes	Registers 0 through 15 are accessible from the front panel in menu keys for Save Registers. Register 0 corresponds to the front panel Register 1
Min/Max	0 / 127
Status Bits/OPC dependencies	The command is sequential

9.2.11 *SRE - Service Request Enable

Enables the desired bits of the "Service Request Enable Register" on page 4169.

The query returns the value of the register, indicating which bits are currently enabled.

Numeric values for bit patterns can be entered using decimal or hexadecimal representations (0 to 32767, equivalent to #H0 to #H7FFF).

Remote Command	*SRE <integer> *SRE?
Example	Enable bits 1, 2, and 4 in the service request enable register: *SRE 22
Notes	For related commands, see "Status Register System & STATus Subsystem" on page 4157 and :SYSTem:ERRor[:NEXT]?
Preset	0
Min/Max	0 / 255

Status Bits/OPC dependencies	Service Request Enable Register (all bits, 0 – 7)
------------------------------	---

9.2.12 *STB? - Status Byte Query

Returns the value of the "Status Byte Register" on page 4166 without erasing its contents.

Remote Command	*STB?
Example	Return a decimal value for the bits in the Status Byte Register: *STB? For example, if 16 is returned, it indicates that bit 5 is set and one of the conditions monitored in the standard event status register is set
Notes	See related command " *CLS - Clear Status " on page 4130
Status Bits/OPC dependencies	Status Byte Register (all bits, 0 – 7)

9.2.13 *TRG - Trigger

Triggers the instrument. Use **:TRIGger[:SEquence]:SOURce** to select the trigger source.

Remote Command	*TRG
Example	Trigger the instrument to take a sweep or start a measurement, depending on the current instrument settings: *TRG
Notes	See related command :INITiate:IMMediate

9.2.14 *TST? - Self Test Query

Performs the internal self-test routines and returns a number indicating the success of the testing. The value returned is 0 if the test is successful, or 1 if it fails.

Remote Command	*TST?
Example	Run the self-test routines: *TST?

9.2.15 *WAI - Wait-to-Continue

Causes the instrument to wait until all overlapped commands are completed before executing any additional commands. There is no equivalent query.

Remote Command	*WAI
Example	Set the instrument to single sweep. Start a sweep, then wait for its completion: :INIT:CONT OFF;INIT;*WAI
Notes	*WAI does <i>not</i> wait for the completion of user-interface-related commands, such as :MMEM:LOAD:SCON "myScreenConfig.screen"
Status Bits/OPC dependencies	Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port that the *OPC command was issued from

9.3 SCPI Operation and Results Query

You can use SCPI commands for remote control of measurements and querying of measurement results data. There are several alternative commands you can use to control the measurement, depending on how you wish to operate the instrument. There are also a number of queries that you can use to extract the measurement data.

In this section, “Mode” refers to a Measurement Application, for example, Spectrum Analyzer or 5G NR.

9.3.1 Mode Control

Use either `:INSTRument:SElect` or `:INSTRument:NSElect` to select the Mode. See ["Mode" on page 132](#).


`:INSTRument:CONFigure` causes a Mode *and* Measurement switch at the same time. This results in faster overall switching than sending `:INSTRument:SElect` and `:CONFigure` separately, as described in ["Mode" on page 132](#).

9.3.2 Measurement Control

This section describes the measurement control commands listed below, and their functions.

"CONFigure" on page 4138	Switches to the desired measurement. Presets all measurement settings to their defaults, <i>unless</i> <code>:NDEFault</code> is specified
"INITiate" on page 4139	Starts the measurement
"FETCh" on page 4139	Queries the data without starting the measurement. If a measurement is already in progress, waits for completion
"READ" on page 4140	Starts the measurement with the current settings and queries the data
"MEASure" on page 4141	Switches to the desired measurement, presets all measurement settings to their defaults, starts the measurement and queries the data

The relationship between the command forms is illustrated in the diagram below. `:FETCh`, `:READ` and `:MEASure` are queries that return measurement data.

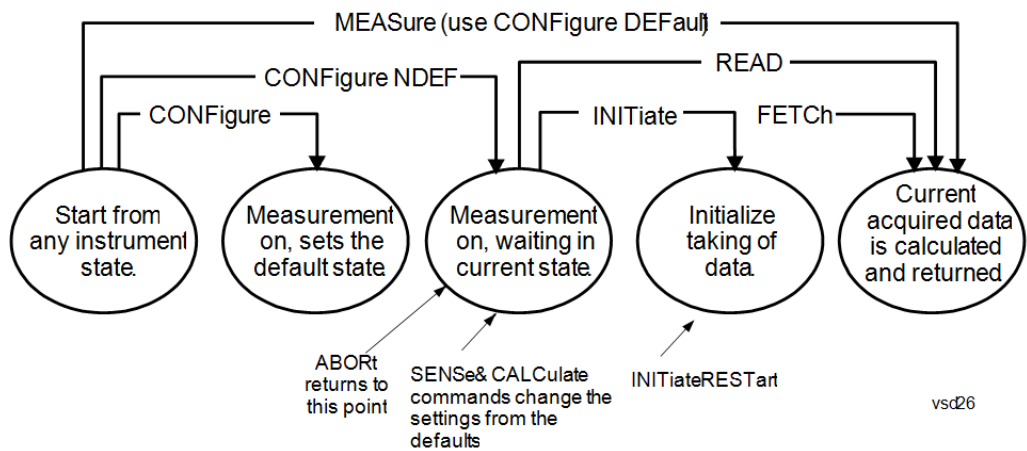

9.3.2.1 CONFIgure

Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement’s default settings. Does not initiate the collection of measurement data unless `:INIT:CONT` is `ON`. If you change any measurement settings after using `:CONFIgure`, "READ" on page 4140 can be used to initiate a measurement without changing the settings back to their defaults.

Normally `:CONFIgure` presets the measurement after selecting it; but, if sent with the `NDEFault` parameter, it selects it without performing a Preset.

Remote Command	<code>:CONFIgure:<measurement>[:NDEFault]</code> <code>:CONFIgure?</code>
Example	Select and preset the Swept SA measurement: <code>:CONF:SAN</code> Select the Swept SA measurement <i>without</i> presetting: <code>:CONF:SAN:NDEF</code> Query the current measurement: <code>:CONF?</code>
Remote Command	<code>:CONFIgure:CATalog?</code>
Example	<code>:CONF:CATalog?</code> returns a quoted string of all licensed measurement names in the current mode. For example, "SAN, CHP, OBW, ACP, PST, TXP, SPUR, SEM, LIST" for the Spectrum Analyzer mode

9.3.2.2 INITiate

Initiates a trigger cycle for the specified measurement, but does not output any data. You must then use `:FETCh<meas>` to return data. If a measurement other than the current one is specified, the instrument will switch to that measurement and then initiate it.

Remote Command `:INITiate:<measurement>`

Example Switch to the `SANalyzer` (Swept SA) measurement if not already there, then start the measurement:
`:INIT:SAN`

`:INITiate` does not change any of the measurement settings. For example, if you have already run the ACP measurement and you send `:INIT:ACP?` it initiates a new ACP measurement using the same instrument settings as the last time ACP was run.

If another measurement is running, `:INIT` switches to the specified measurement. For example, suppose you are running the channel power measurement. If you send `:INIT:ACP?` it changes from channel power to ACP and initiates an ACP measurement.

If your selected measurement is currently in the idle state, it restarts the measurement. Depending upon the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events, for one full trigger cycle.

CAUTION `:INIT` allows additional commands *while* the measurement is in progress.

Be aware that such additional commands may change measurement settings. They may cause the measurement in progress to be discarded, and a new measurement may start.

To wait for the completion of a measurement after sending `:INITiate`, send `"*WAI - Wait-to-Continue"` on page 4136, or `"*OPC? - Operation Complete"` on page 4132, or use `"FETCh"` on page 4139.

9.3.2.3 FETCh

Places selected data from the most recent measurement into the output buffer. Use `:FETCh` if you have already made a valid measurement and you want to retrieve data. You can issue `:FETCh` multiple times with differing `[n]` values without restarting or re-making the measurement, for example, both scalars and trace data from a single measurement.

Remote Command `:FETCh:<measurement>[n]?`

Example	<p>Fetch item 2 (Trace 2) from the SAN (Swept SA) measurement when the measurement completes. If not in the Swept SA measurement, returns an error:</p> <p>:FETCh:SAN2?</p> <p>:FETCh does not change any of the measurement settings, it simply reads the results of the current measurement. :FETCh may be used to return results other than those specified with the original :READ or :MEASure query that you sent.</p> <p>You can only :FETCh results from the measurement that is currently active, it does not change to a different measurement. An error message is reported if a measurement other than the current one is specified.</p> <p>If you need to get new measurement data, use "READ" on page 4140, which is equivalent to "INITiate" on page 4139 followed by :FETCh.</p> <p>The measurement results for n = 1 (usually the scalar result) will be returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected data results will be returned. See each measurement for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. See "Format Data: Numeric Data (Remote Command Only)" on page 4145.</p> <p>Note that the data returned by :FETCh? uses the data setting specified by "Format Data: Numeric Data (Remote Command Only)" on page 4145 and "Format Data: Byte Order (Remote Command Only)" on page 4146 commands, and can return real or ASCII data. If the format is set to INT, 32, it returns REAL, 32 data.</p>
---------	--

9.3.2.4 READ

Initiates a trigger cycle for the specified measurement and outputs the requested data. If a measurement other than the current one is specified, the instrument will switch to that measurement before it initiates the measurement and returns results.

Remote Command	:READ:<measurement>[n]?
Example	<p>Switch to the SANalyzer (Swept SA) measurement if not already there, start the measurement, and return item 2 (Trace 2) from the measurement when the measurement completes:</p> <p>:READ:SAN2?</p> <p>:READ does not change any of the measurement settings. For example, if you have already run the ACP measurement and you send :READ:ACP?, it initiates a new ACP measurement using the same instrument settings as the last time ACP was run.</p> <p>:READ switches to the specified measurement if the instrument is not already there. For example, suppose you have already run the ACP measurement but now you are running the Channel Power measurement. When you send :READ:ACP?, it changes</p>

from Channel Power back to ACP and, using the previous ACP settings, initiates the measurement and return results.

The measurement results for $n = 1$ (usually the scalar result) will be returned if the optional `[n]` value is not included, or is set to 1. If the `[n]` value is set to a value other than 1, the selected data results will be returned. See each measurement for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. See ["Format Data: Numeric Data \(Remote Command Only\)" on page 4145](#).

Note that the data returned by `:READ?` uses the data setting specified by ["Format Data: Byte Order \(Remote Command Only\)" on page 4146](#) and ["Format Data: Numeric Data \(Remote Command Only\)" on page 4145](#), and can return real or ASCII data. If the format is set to `INT, 32` it returns `REAL, 32` data.

`:READ` blocks other SCPI communication, waiting until the measurement is complete before returning results.

For more details of how measurements proceed, see also ["INITiate" on page 4139](#).

9.3.2.5 MEASure

Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement's default settings, initiates a trigger cycle for the specified measurement, and outputs the requested data.

Remote Command	<code>:MEASure:<measurement>[n]?</code>
Example	<p>Switch to the <code>SANalyzer</code> (Swept SA) measurement, start the measurement, and read back item 2 (Trace 2) when the measurement completes</p> <p><code>:MEAS:SAN2?</code></p> <p>This is a fast single-command way to make a measurement using the measurement's default settings. These are the settings and units that conform to the Mode Setup settings (for example, Radio Standard) that you have currently selected.</p> <p>Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement's defaults.</p> <p>Initiates the data acquisition for the measurement.</p> <p>Blocks other SCPI communication, waiting until the measurement is complete before returning results.</p> <p>Depending on the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events.</p>

After the data is valid, returns the scalar results, or the trace data, for the specified measurement. The type of data returned may be defined by an [n] value that is sent with the command.

If the optional [n] value is not included, or is set to 1, scalar measurement results will be returned. If the [n] value is other than 1, the selected trace data results will be returned. See each command for details of which types of scalar results or trace data results are available.

The default format for data output is ASCII. (Older versions of Spectrum Analysis and Phase Noise mode measurements only use ASCII.) The binary data formats should be used for handling large blocks of data, because transfers are smaller and faster than when using the ASCII format. See "Format Data: Numeric Data (Remote Command Only)" on page 4145 for more information.

If you need to change some of the measurement parameters from the measurement's default settings, you can set up the measurement with :CONFigure. Use the commands in the :SENSe:<measurement> and :CALCulate:<measurement> subsystems to change the settings, then you can use :READ? to initiate the measurement and query the results.

Measurement settings persist if you initiate a different measurement and then return to a previous one. Use :READ? if you want to use those persistent settings. If you want to go back to the default settings, use :MEASure?.

Note that the data returned to :MEASure? uses the data setting specified by "Format Data: Byte Order (Remote Command Only)" on page 4146 and "Format Data: Numeric Data (Remote Command Only)" on page 4145, and can return real or ASCII data. If the format is set to INT, 32 it returns REAL, 32 data.

9.3.3 Trace Formatting Commands

The following commands and queries are available to format and manipulate trace data.

9.3.3.1 Clear Trace (Remote Command Only)

Clears the selected trace (from the front panel) or the specified trace (from SCPI). Does not affect the state of any function or variable in the instrument. Loads mintracevalue into all of the points in the selected trace, unless the trace is in Min Hold in which case it loads maxtracevalue. This occurs even if Update = Off.

Remote Command	:TRACe:CLEAr TRACE1 ... TRACE6
Example	Clear Trace 1: :TRAC:CLE TRACE1

9.3.3.2 Send/Query Trace Data (Remote Command Only)

Allows trace data to be sent to the instrument or queried from the instrument. The response to the query is a list of the amplitude points which comprise the requested trace in the current Y Axis Unit of the instrument. The X Axis Unit is that of the destination trace (for send) or the source trace (for query).

See:

- "Query Trace Data" on page 4143
- "More Information" on page 4144

Remote Command	<code>:TRACe[:DATA] TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, <data></code>
Notes	<p>The <code>:TRACe[:DATA]</code> command is of the form: <code>:TRACe:DATA <trace>,<data></code></p> <p>where <code><trace></code> can be one of the following parameters: <code>TRACE1, TRACE2, TRACE3, TRACE4, TRACE5, TRACE6</code></p> <p>and where <code><data></code> can be</p> <ul style="list-style-type: none"> - ASCII data, which consists of a string of values separated by comma or - <code>REAL</code> or <code>INTEger</code> sent as a definite length block, with a header describing the data to follow
Couplings	<p>Sweep points will affect the amount of data</p> <p><code>:FORMat:DATA</code> describes the different types of data formats that can be used with trace data</p> <p>Use <code>:FORMat:BORDER</code> to set the byte order</p>

Query Trace Data

Remote Command	<code>:TRACe[:DATA]? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6</code>
Example	<p>Send five points to Trace 1. Assuming that <code>:FORMat:DATA</code> is set to <code>ASCIi</code>, Y Axis Unit is set to dBm, and sweep points is set to 5, this will result in Trace 1 consisting of the five points -1 dBm, -2 dBm, -3 dBm, -4 dBm, and -5 dBm:</p> <p><code>:TRAC TRACE1, -1, -2, -3, -4, -5</code></p> <p>Query the instrument for the contents of trace 2:</p> <p><code>:TRAC? TRACE2</code></p>
Backwards Compatibility Notes	In X-Series, the legacy <code>RAWTRACE, LLINE1, LLINE2</code> parameters for trace data query are no longer available

More Information

The format and byte order of the sent or received data depend on "Format Data: Numeric Data (Remote Command Only)" on page 4145 and "Format Data: Byte Order (Remote Command Only)" on page 4146. **ASCII** data consists of a string of comma separated values. **REAL** or **INTEGER** data is sent as a definite length block, with a header describing the data to follow.

For example, a four point trace might look like this if in ASCII (**FORMat:DATA ASCii**):

```
-5.87350E+01, -5.89110E+01, -5.87205E+01, -5.12345E+01<NL><END>
```

and like this if in **INTEGER** with 4 bytes per point (**FORMat:DATA INT,32**):

```
#216<16 bytes of data><NL><END>
```

where the 2 in the #216 means "2 digits of numeric data to follow", and the 16 is the 2 digits and means "16 binary bytes to follow" (this is the definite length block format).

Note that the data is terminated with **<NL><END>**. (For GPIB this is newline, or linefeed, followed by EOI set true. For LAN, this is newline only.)

The data format set by "Format Data: Numeric Data (Remote Command Only)" on page 4145 and "Format Data: Byte Order (Remote Command Only)" on page 4146 is used both for sending data to the instrument and receiving data from the instrument.

When sending data to the instrument, the data block must contain exactly the number of points currently specified in **Sweep, Points** or an error message will be generated and there will be no change to the target trace.

No units terminator (for example, dB or V) is used when sending data; the data is taken as being in the current Y Axis Unit of the instrument.

When a trace is sent to the instrument, it immediately overwrites all of the data in the target trace. Consequently the trace should be inactive in order to achieve predictable results. If you send trace data while a trace is active, and particularly if a sweep or an **Average** or **Max/Min Hold** sequence is already in progress, you may end up with a trace that combines the data you sent with measurement data. Similarly, when querying trace data, it is best if the instrument is not sweeping during the query.

Therefore, it is generally advisable to be in **Single** sweep, or have the trace in **View**, when sending trace data to the instrument or querying trace data from the instrument.

9.3.3.3 Format Data: Numeric Data (Remote Command Only)

Specifies the format of the trace data input and output.

Specifies the formats used for trace data during data transfer across any remote port. Affects only the data format for setting and querying trace data for **:TRACE[:DATA]**, **:TRACE[:DATA]?**, **:CALCulate:DATA[n]?** and **:FETCH:SANalyzer[n]?**.

Remote Command	:FORMAT[:TRACE][:DATA] ASCii INTeger,32 REAL,32 REAL,64 :FORMat[:TRACE][:DATA]?
Notes	<p>The query response is:</p> <p>ASCii: ASC,8</p> <p>REAL,32: REAL,32</p> <p>REAL,64: REAL,64</p> <p>INTeger,32: INT,32</p> <p>When the numeric data format is REAL or ASCii, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm)</p> <p>The INT,32 format returns binary 32-bit integer values in internal units (m dBm), in a definite length block</p>
Dependencies	<p>Sending a data format spec with an invalid number (for example, INT,48) generates no error. The instrument simply uses the default (8 for ASCii, 32 for INTeger, 32 for REAL)</p> <p>Sending data to the instrument which does not conform to the current FORMat specified, results in an error. Sending ASCII data when a definite block is expected generates message -161 "Invalid Block Data" and sending a definite block when ASCII data is expected generates message -121 "Invalid Character in Number"</p>
Preset	ASCii
Backwards Compatibility Notes	<p>Note that the INT,32 format is only applicable to :TRACE:DATA. This preserves backwards compatibility for the Swept SA measurement. For all other commands/queries that honor :FORMat:DATA, if INT,32 is sent the instrument will behave as though it were set to REAL,32</p>

The specifications for each output type are:

ASCii Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form: **SX.YYYYYEsZZ**, where:

- S = sign (+ or -)
- X = one digit to left of decimal point
- Y = 5 digits to right of decimal point
- E = E, exponent header
- s = sign of exponent (+ or -)
- ZZ = two digit exponent

REAL, 32	Binary 32-bit real values in the current Y Axis Unit, in a definite length block
REAL, 64	Binary 64-bit real values in the current Y Axis Unit, in a definite length block

9.3.3.4 Format Data: Byte Order (Remote Command Only)

Selects the binary data byte order for data transfer and other queries.

Controls whether binary data is transferred in normal or swapped mode. Affects only the byte order for setting and querying trace data for :TRACe[:DATA], :TRACe[:DATA]? , :CALCulate:DATA[n]? and :FETCh:SANalyzer[n]?.

By definition, any command that depends on this setting uses any format supported by :FORMat:DATA.

- NORMa1 order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4
- SWAPped order is when the byte sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1

Remote Command	:FORMat:BORDer NORMa1 SWAPped :FORMat:BORDer?
Preset	NORMa1

9.3.3.5 Calculate/Compress Trace Data Query (Remote Command Only)

Returns compressed data for the currently selected measurement and sub-opcode [n].

n = any valid sub-opcode for that measurement. See the :MEASure:<measurement>? query description of your specific measurement for information on the data that can be returned.

The data is returned in the current Y Axis Unit of the instrument. The command is used with a sub-opcode <n> (default = 1) to specify the trace. With trace queries, it is best if the instrument is not sweeping during the query. Therefore, it is generally advisable to be in Single sweep, or Update = Off.

This command is used to compress or decimate a long trace to extract and return only the desired data. A typical example would be to acquire N frames of GSM data and return the mean power of the first burst in each frame. The command can also be used to identify the best curve fit for the data.

Remote Command	:CALCulate:DATA<n>:COMPRESS? BLOCK CFIT MAXimum MINimum MEAN DMEan RMS SAMPLE SDEViation PPHase [,<soffset>[,<length>[,<roffset>[,<rlimit>]]]]
----------------	--

Notes

The command supports 5 parameters, but the last 4 (**<soffset>**, **<length>**, **<roffset>**, **<rlimit>**) are optional. The optional parameters must be entered in the specified order. For example, if you want to specify **<length>**, then you must also specify **<soffset>**. See details below for a definition of each of these parameters

This command uses the data in the format specified by **"Format Data: Byte Order (Remote Command Only)" on page 4146**, returning either binary or ASCII data

As an example, to query the mean power of a set of GSM bursts:

- Supply a signal that is a set of GSM bursts
- Select the IQ Waveform measurement (in IQ Analyzer Mode)
- Set the sweep time to acquire at least one burst
- Set the triggers such that acquisition happens at a known position relative to a burst
- Query the mean burst levels using, **:CALC:DATA2:COMP? MEAN,24e-6,526e-6** (These parameter values correspond to GSM signals, where 526e-6 is the length of the burst in the slot and you just want 1 burst)

BLOCK or block data

Returns all the data points from the region of the trace data that you specify. For example, it could be used to return the data points of an input signal over several timeslots, excluding the portions of the trace data that you do not want. (This is x,y pairs for trace data and I,Q pairs for complex data.)

CFIT or curve fit

Applies curve fitting routines to the data. **<soffset>** and **<length>** are required to define the data that you want. **<roffset>** is an optional parameter for the desired order of the curve equation. The query will return the following values: the x-offset (in seconds) and the curve coefficients ((order + 1) values).

MIN, **MAX**, **MEAN**, **DME**, **RMS**, **SAMP**, **SDEV** and **PPH** return one data value for each specified region (or **<length>**) of trace data, for as many regions as possible until you run out of trace data (using **<roffset>** to specify regions), or they return the number of regions you specify (using **<rlimit>**) ignoring any data beyond that.

MINimum

Returns the minimum data point (y value) for the specified region(s) of trace data. For I/Q trace data, the minimum magnitude of the I/Q pairs is returned.

MAXimum

Returns the maximum data point (y value) for the specified region(s) of trace data. For I/Q trace data, the maximum magnitude of the I/Q pairs is returned.

MEAN

Returns a single value that is the arithmetic mean of the data point values (in dB/ dBm) for the specified region(s) of trace data. For I/Q trace data, the mean of the magnitudes of the I/Q pairs is returned. See the following equations.

NOTE

If the original trace data is in dB, this function returns the arithmetic mean of those log values, not log of the mean power which is a more useful value. The mean of the log is the better measurement technique when measuring CW signals in the presence of noise. The mean of the power, expressed in dB, is useful in power measurements such as Channel Power. To achieve the mean of the power, use the RMS option.

Equation 1: Mean Value of Data Points for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i$$

where X_i is a data point value, and n is the number of data points in the specified region(s).

Equation 2: Mean Value of I/Q Data Pairs for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} |X_i|$$

where $|X_i|$ is the magnitude of an I/Q pair, and n is the number of I/Q pairs in the specified region(s).

DMEan

Returns a single value that is the mean power (in dB/ dBm) of the data point values for the specified region(s) of trace data. See the following equation:

Equation 3: DMEan Value of Data Points for Specified Region(s)

$$\text{DME} = 10 \times \log_{10} \left(\frac{1}{n} \sum_{X_i \in \text{region}(s)} 10^{\frac{X_i}{10}} \right)$$

RMS

Returns a single value that is the average power on a root-mean-squared voltage scale (arithmetic rms) of the data point values for the specified region(s) of trace

data. See the following equation.

Equation 4: RMS Value of Data Points for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i^2}$$

where X_i is a data point value, and n is the number of data points in the specified region(s).

For I/Q trace data, the rms of the magnitudes of the I/Q pairs is returned. See the following equation.

NOTE

This function is very useful for I/Q trace data. However, if the original trace data is in dB, this function returns the rms of the log values which is not usually needed.

Equation 5: RMS Value of I/Q Data Pairs for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i X_i^*}$$

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region(s).

Once you have the rms value for a region of trace data (linear or I/Q), you may want to calculate the mean power. You must convert this rms value (peak volts) to power in dBm:

$$10 \times \log[10 * (\text{rms value})^2]$$

SAMPLE

Returns the first data value (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the first I/Q pair is returned.

SDEViation

Returns a single value that is the arithmetic standard deviation for the data point values for the specified region(s) of trace data. See the following equation.

Equation 6: Standard Deviation of Data Point Values for Specified Region(s)

$$SDEV = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (X_i - \bar{X})^2}$$

where X_i is a data point value, \bar{X} is the arithmetic mean of the data point values for the specified region(s), and n is the number of data points in the specified region(s).

For I/Q trace data, the standard deviation of the magnitudes of the I/Q pairs is returned. See the following equation.

Equation 7: Standard Deviation of I/Q Data Pair Values for Specified Region(s)

$$SDEV = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (|X_i| - \bar{X})^2}$$

where $|X_i|$ is the magnitude of an I/Q pair, \bar{X} is the mean of the magnitudes for the specified region(s), and n is the number of data points in the specified region(s).

PPHase

Returns the x,y pairs of both rms power (dBm) and arithmetic mean phase (radian) for every specified region and frequency offset (Hz). The number of pairs is defined by the specified number of regions. This parameter can be used for I/Q vector ($n=0$) in Waveform (time domain) measurement and all parameters are specified by data point in **PPHase**.

The rms power of the specified region may be expressed as:

$$\text{Power} = 10 \times \log [10 \times (\text{RMS I/Q value})] + 10.$$

The RMS I/Q value (peak volts) is:

$$\sqrt{\frac{1}{n} \sum_{X_i \in \text{region}} X_i X_i^*}$$

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region.

The arithmetic mean phase of the specified region may be expressed as:


$$\frac{1}{n} \sum_{Y_i \in \text{region}} Y_i$$

where Y_i is the unwrapped phase of I/Q pair with applying frequency correction and n is the number of I/Q pairs in the specified region.

The frequency correction is made by the frequency offset calculated by the arithmetic mean of every specified region's frequency offset. Each frequency offset is calculated by the least square method against the unwrapped phase of I/Q pair.


Sample Trace Data - Constant Envelope

(See below for explanation of variables.)

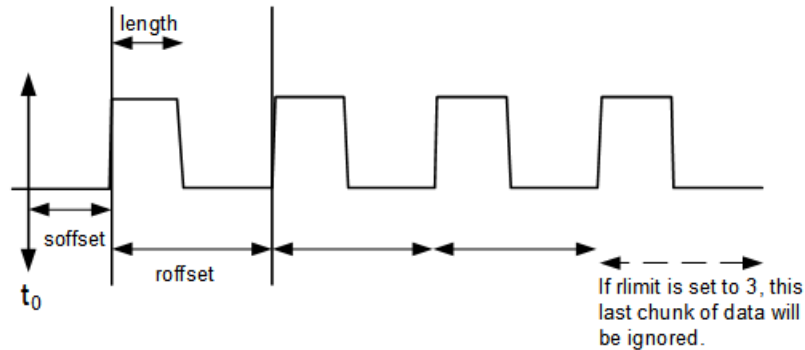

Sample Trace Data - Not Constant Envelope

(See below for explanation of variables.)

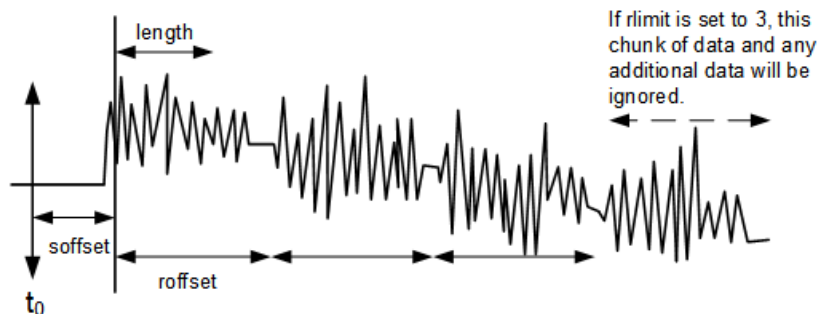

- <soffset>** Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces
Specifies the amount of data at the beginning of the trace that will be ignored before the decimation process starts. It is the time or frequency change from the start of the trace to the point where you want to start using the data. The default value is zero
- <length>** Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces
Defines how much data will be compressed into one value. This parameter has a default value equal to the current trace length
- <roffset>** Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces

	Defines the beginning of the next field of trace elements to be compressed. This is relative to the beginning of the previous field. This parameter has a default value equal to the <code><length></code> variable. Note that this parameter is used for a completely different purpose when curve fitting (see "CFIT or curve fit" on page 4147 above)
<code><rlimit></code>	Optional integer Specifies the number of data items that you want returned. Ignores any additional items beyond that number. You can use the Start offset and the Repeat limit to pick out exactly what part of the data you want to use. The default value is all the data

9.3.3.6 Calculate Peaks of Trace Data (Remote Command Only)

Returns a list of all the peaks for the currently selected measurement and sub-opcode `[n]`. The peaks must meet the requirements of the peak threshold and excursion values.

`n` = any valid sub-opcode for the current measurement. See the `:MEASure:<measurement>` command description of your specific measurement for information on the data that can be returned.

The command can only be used with specific sub-opcodes with measurement results that are trace data. Both real and complex traces can be searched, but complex traces are converted to magnitude in dBm. In many measurements the sub-opcode `n = 0`, is the raw trace data, which cannot be searched for peaks, and sub-opcode `n = 1`, is often calculated results values which also cannot be searched for peaks.

This command uses the data setting specified by "Format Data: Byte Order (Remote Command Only)" on page 4146 and "Format Data: Numeric Data (Remote Command Only)" on page 4145, and can return real or ASCII data. If the format is set to `INT, 32`, it returns `REAL, 32` data.

The command has four types of parameters:

- 1. Threshold (in dBm)
- 2. Excursion (in dB)
- 3. Sorting order (amplitude, frequency, time)
- 4. Optional in some measurements: Display line use (all, > display line, < display line)

Remote Command	For Swept SA measurement: <code>:CALCulate:DATA[1] 2 ... 6:PEAKs? <threshold>,<excursion>[,AMPLitude FREQuency TIME[,ALL GTDLine LTDLine]]</code>
----------------	--

For most other measurements: :CALCulate:DATA[1] 2 ... 6:PEAKs? <threshold>,<excursion>[,AMPLitude FREQuency TIME]	
Notes	Parameters:
<n>	The trace that will be used: [1] 2 ... 6
<threshold>	The level below which trace data peaks are ignored Note that the threshold value is required and is always used as a peak criterion. To effectively disable the threshold criterion for this command, provide a substantially low threshold value such as -200 dBm Note also that the threshold value used in this command is independent of and has no effect on the threshold value stored under the Peak Criteria menu
<excursion>	The minimum amplitude variation (rise and fall) required for a signal to be identified as peak Note that the excursion value is required and is always used as a peak criterion. To effectively disable the excursion criterion for this command, provide the minimum value of 0.0 dB Note also that the excursion value used in this command is independent of and has no effect on the excursion value stored under the Peak Criteria menu
Values must be provided for threshold and excursion. The sorting and display line parameters are optional (defaults are AMPLitude and ALL) Note that there is always a Y-axis value for the display line, regardless of whether the display line state is on or off. It is the current Y-axis value of the display line which is used by this command to determine whether a peak should be reported Sorting order:	
AMPLitude	Lists the peaks in order of descending amplitude, with the highest peak first If this optional parameter not sent, this is the default
FREQuency	Lists the peaks in order of occurrence, left to right across the x-axis
TIME	Lists the peaks in order of occurrence, left to right across the x-axis
Peaks vs. Display Line:	
ALL	Lists all of the peaks found (default if optional parameter not sent)
GTDLIne	Lists all of the peaks found above the display line
Greater than display line	
LTDLIne	Lists all of the peaks found below the display line
Less than display line	
For example, for Swept SA measurement in Spectrum Analyzer Mode: :CALC:DATA4:PEAK? -40,10,FREQ,GTDL	

Identifies the peaks of trace 4 that are above –40 dBm, with excursions of at least 10 dB. The peaks are returned in order of increasing frequency, starting with the lowest frequency. Only the peaks that are above the display line are returned

Query Results:

If `:FORMat:DATA REAL, 32` is selected, returns a list of floating-point numbers. The first value in the list is the number of peak points that are in the following list. A peak point consists of two values: a peak amplitude followed by its corresponding frequency (or time)

If no peaks are found, the peak list consists of only the number of peaks, (0)

9.3.3.7 Smooth Trace Data (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Smooths the trace according to the number of points specified in `:TRACE:MATH:SMOoth:POINts`. There is no equivalent front panel function.

The purpose of this function is to perform a spatial video averaging, as compared to the temporal version supplied by the video-average command

`[:SENSe]:AVERage:TYPE VIDEo`. The functions of `:TRACE:MATH:SMOoth` `<trace>` and `[:SENSe]:AVERage:TYPE VIDEo|POWer` are not interchangeable.


Backwards Compatibility
SCPI

`:TRACE:MATH:SMOoth TRACE1 | ... | TRACE6`

Each point value is replaced with the average of the values of the selected number of points, with half of those points located on each side of any particular point (when possible). Refer to the illustration below, which shows a 401 point trace with a smoothing number of 31. Think of the trace points as “buckets” of data. To smooth (arbitrary) point 273, the instrument averages buckets 258 through 288 and applies that value to point 273.

Increasing the number of points increases smoothing at the cost of decreasing resolution.

The amount of smoothing decreases at the end points. Because `:TRACE:MATH:SMOoth <trace>` averages values that occur before and after the data point in time, display irregularities can be caused at the start and stop frequencies. To avoid possible irregularities (signal distortion) at the ends of the trace, use small values for the smooth parameter.

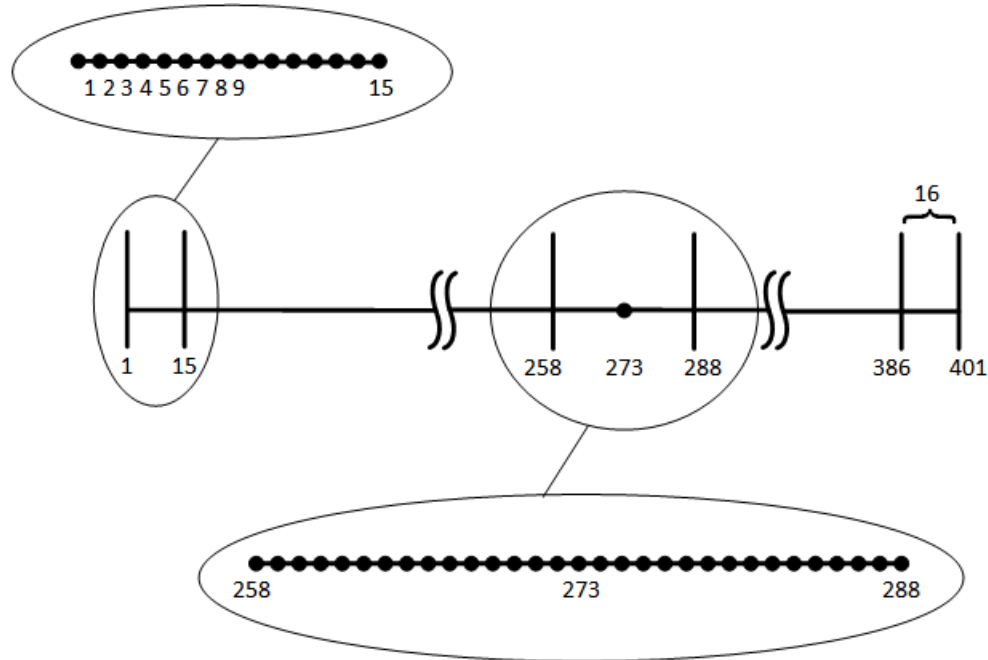

Smoothing With 401 Trace Points and 31 Smoothing Points

Refer to the illustration above for a discussion of this end-point smoothing phenomena. With 31 smoothing points and a 401 point trace, point 16 will be the first point to have full 31-bucket smoothing. Likewise, point 386 will be the last point with full 31-bucket smoothing. Under the conditions stated, points 2 through 15 will be smoothed as follows: Point 2 is derived from averaging buckets 1 through 3. Point 3 is derived from averaging buckets 1 through 5, Point 4 is derived from averaging buckets 1 through 7, and so forth until point 16 is reached. The quantity of buckets used for the smoothing running average increases at the rate of 2 buckets per point, from point 1 to point $(\lceil \text{smoothing number} + 1 \rceil / 2)$, at which time the full number of smoothing points is utilized. The same characteristic occurs at the completion of the trace, beginning at point 386, beyond which the number of averaging buckets begins to decrease until point 401 is reached.

By replacing the value of each point in a trace with the average of the values of a number of points centered about that point, any rapid variations in noise or signals are smoothed into more gradual variations. It thereby performs a function similar to reducing the video bandwidth without the corresponding changes in sweep time; as such, frequency resolution is decreased. Also, signal peaks are reduced with large smoothing values. This can cause the amplitude to appear to be less than its actual value.

9.3.3.8 Number of Points for Smoothing (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Specifies the number of points that will be smoothed. Increasing the number of points increases smoothing at the cost of decreasing resolution. If the number of points is an even number, then the number of points is increased by one. If the number of points is larger than the number of sweep points, then the number of sweep points is used, unless the number of sweep points is even, in which case the number of points will be the sweep points minus one. The number of points smoothed is always an odd number.

Example	<code>:TRAC:MATH:SMO:POIN 501</code>
Notes	Only odd values are allowed If an even value of <code><integer></code> is specified, adds 1 unless <code><integer></code> = number of sweep points, in which case subtract 1 Used with <code>TRACe:MATH:SMOoth</code>
Preset	11
Min	3
Max	Number of sweep points
Backwards Compatibility SCPI	<code>:TRACe:MATH:SMOoth:POINTs <integer></code> <code>:TRACe:MATH:SMOoth:POINTs?</code>

9.3.3.9 Mean Trace Data (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Returns the mean of the amplitudes of the trace amplitude elements in measurement units.

Example	<code>:TRAC:MATH:MEAN? TRACE2</code>
Backwards Compatibility SCPI	<code>:TRACe:MATH:MEAN? TRACE1 ... TRACE6</code>

9.4 Status Register System & STATus Subsystem


This section provides an overview of the X-Series SCPI status register system, and how to manage the registers. For detailed programming information on each status register, see ["Status Subsystem Registers and Commands" on page 4166](#).

The SCPI **STATus** Subsystem allows you to monitor a number of status conditions within the instrument through the use of a hierarchy of status registers containing bits which go true or false depending on various conditions.

9.4.1 Status Register System Diagram

The diagram below provides a top-level overview of all the Status Registers and their interconnections.

To navigate to detailed information about each Register, click on a register name:

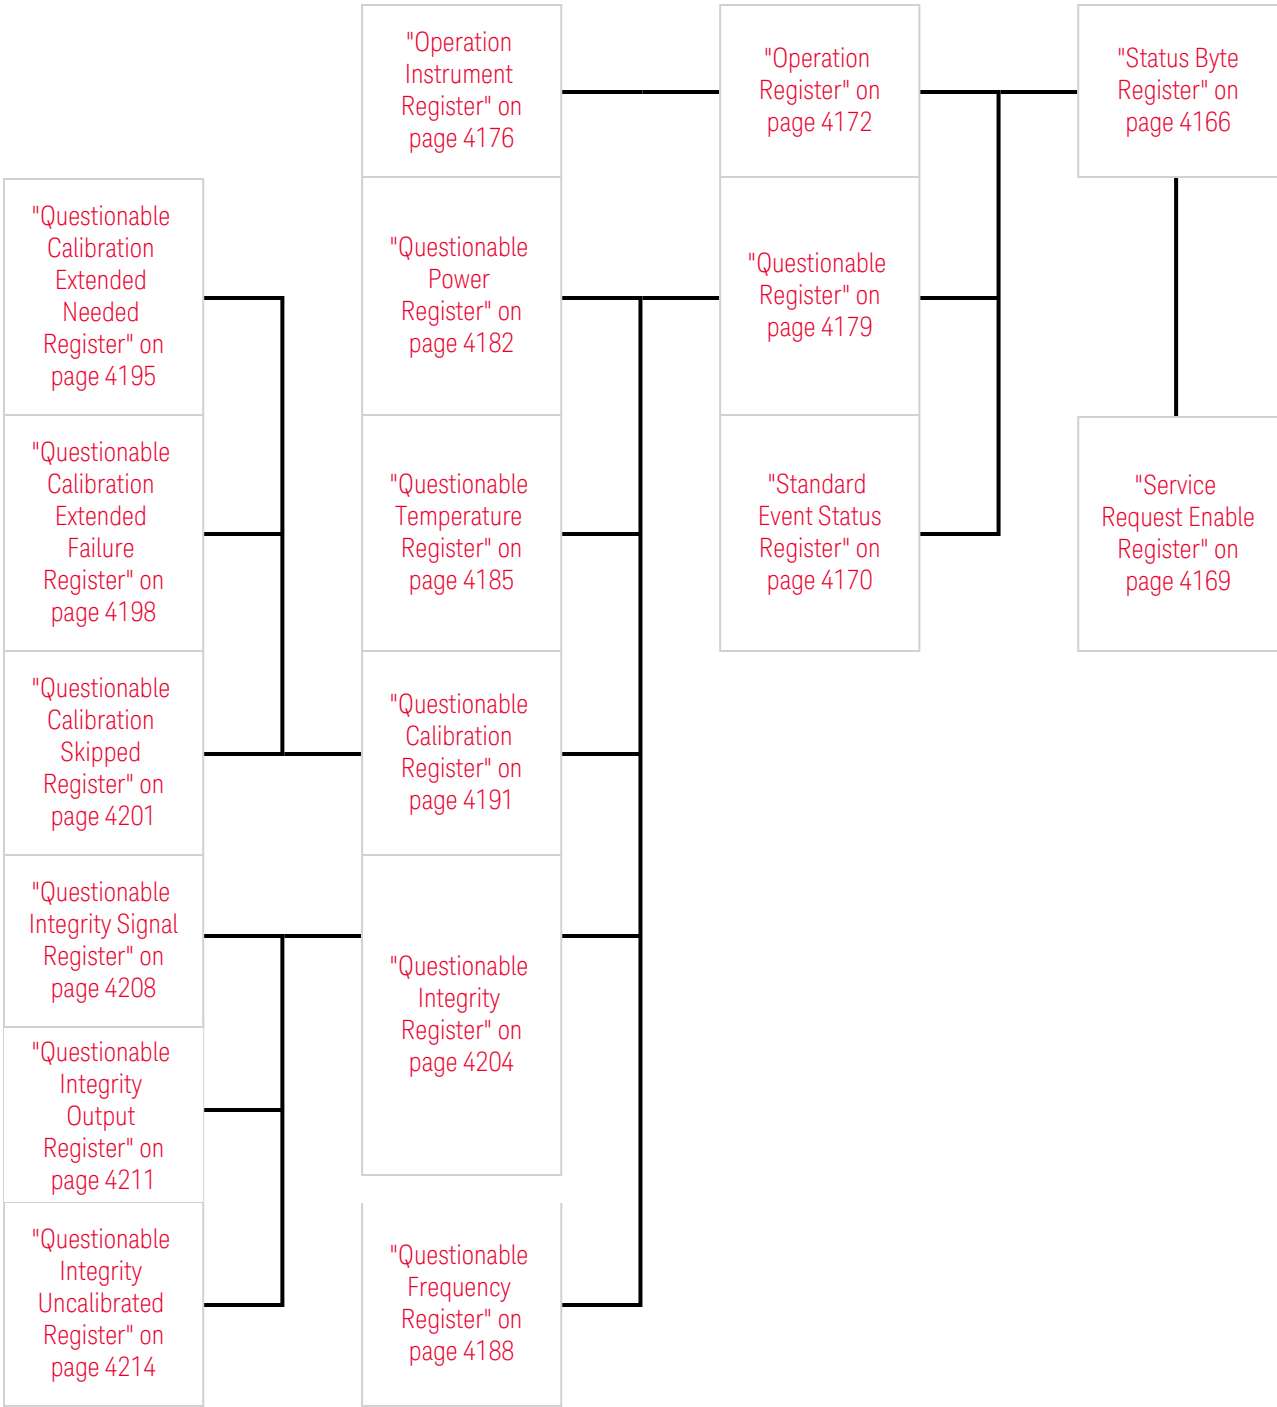

Detailed System Diagram

As from the **X-Apps 2023** update, the fully-detailed system diagram that previously appeared here is still available, but, for improved readability, it is now published as a separate high-resolution PDF. You can download the document from Keysight's web site at:

<http://literature.cdn.keysight.com/litweb/pdf/N9040-90056.pdf>

9.4.2 Status Register Hierarchy

The Status Register system contains multiple registers, arranged in a hierarchy. The lower-level registers propagate their data to the higher-level registers in the data structures by means of summary bits.


The **"Status Byte Register" on page 4166** is at the top of the hierarchy and contains general status information for the instrument's events and conditions. All other individual registers are used to determine the specific events or conditions.

The **"Operation Register" on page 4172** and **"Questionable Register" on page 4179** are sets of registers that monitor the overall instrument condition. They are accessed using **:STATus:OPERation** and **:STATus:QUESTionable** commands in the **STATus** subsystem. Each composite status register set consists of five sub-registers:

1	Condition Register	Reports the real-time state of the signals monitored by this register set. There is no latching or buffering for a condition register
2	Positive Transition Register	Transition Filter Register Controls which signals will set a bit in the event register when the signal makes a low to high transition (when the condition bit changes from 0 to 1)
3	Negative Transition Register	Transition Filter Register Controls which signals will set a bit in the event register when the signal makes a high to low transition (when the condition bit changes from 1 to 0)
4	Event Register	Latches any signal state changes, in the way specified by the filter registers. Bits in the event register are never cleared by signal state changes. Event registers are cleared when read. They are also cleared by *CLS and by presetting the instrument
5	Event Enable Register	Controls which of the bits, being set in the event register, will be summarized as a single output for the register set. Summary bits are then used by the next higher register

Each status register produces a summary message bit.

The diagram below shows how the sub-registers relate to each other.

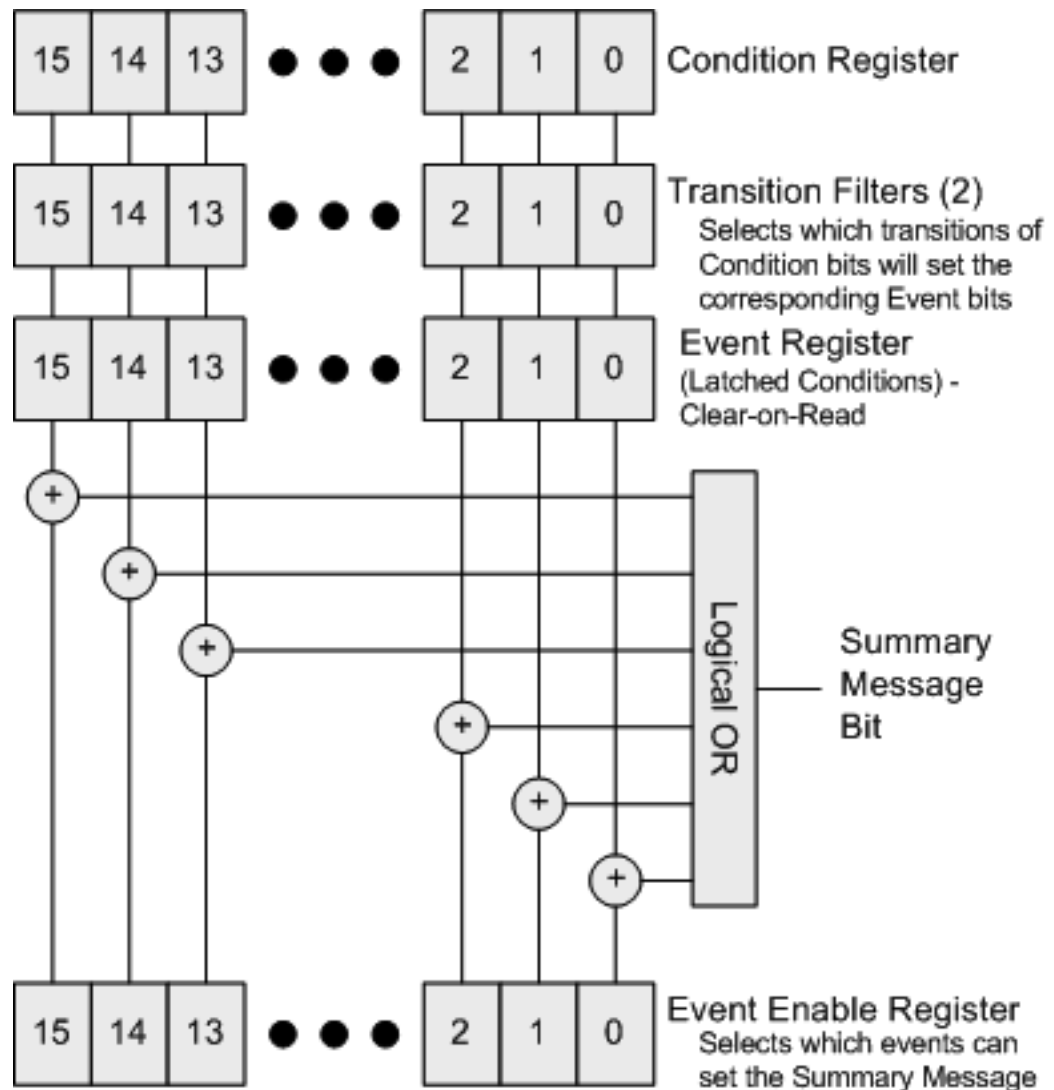

The settings of the Transition Filter registers determine whether or not a bit set in a Condition register ripples through to the Event register, as follows:

- If a bit is set in the Positive Transition register, then the corresponding bit in the Event register is set when the condition bit goes from low to high (false to true, off to on)
- Conversely, if a bit is set in the Negative Transition register then the Event register bit is set when the condition bit goes from high to low
- If *both* Transition Filter registers are set true, then the event bit for that condition is set whenever there is any change in the bit. If an event bit is set, the Event Enable register determines whether or not it will **OR** into the summary bit that is sent to the next level of register. If this bit is set, then the corresponding event bit will be included

Note that the Event register is "Clear-on-Read": when any bit is read, it is automatically cleared.

Questionable Registers

These registers report abnormal operating conditions. The status register hierarchy is:

- The summary outputs from the six [QUESTionable:<keyword>](#) detail registers are inputs to the ["Questionable Register" on page 4179](#)
- The summary output from the ["Questionable Register" on page 4179](#) is an input to the Status Byte Register
- The summary output from the is an input to the ["Operation Register" on page 4172](#). The inputs to the ["Operation Condition Query" on page 4173](#) Register indicate the real time state of the instrument. The ["Operation Event Query" on page 4174](#) Register summary output is an input to the Status Byte Register

Note that, in E4406A only, the ["Operation Enable" on page 4174](#) Register has an additional function. It is [ANDed](#) with the ["Operation Condition Query" on page 4173](#) Register to determine the instrument busy state, which is checked by ["*OPC? - Operation Complete" on page 4132](#) and ["*WAI - Wait-to-Continue" on page 4136](#). If the [ANDed](#) result is non-zero, the instrument is considered busy.

9.4.3 Status Register SCPI Commands

Monitoring of instrument conditions is done at the highest level using the following IEEE 488.2 common commands.

For complete command descriptions, see ["IEEE 488.2 Common Commands" on page 4129](#). Individual status registers can be set and queried using the commands described in ["Status Subsystem Registers and Commands" on page 4166](#).

*CLS	Clear Status	Clears the status byte by emptying the error queue and clearing all the event registers
*ESE	Event Status	Sets and queries the bits in the enable register part of the standard event status register
*ESE?	Enable	
*ESR?	Event Status Register	Queries and clears the event register part of the standard event status register
*OPC	Operation	Sets the standard event status register to monitor the completion of all commands. The query stops any new commands from being processed until the current processing is complete, then returns a '1'
*OPC?	Complete	
*PSC	Power-on	Sets the power-on state so that it clears the service request enable register and the event status enable register at power on
*PSC?	State Clear	

*SRE	Service	Sets and queries the value of the service request enable register
*SRE?	Request Enable	
*STB?	Status Byte	Queries the value of the status byte register without erasing its contents

9.4.4 How to Use Status Registers

A program often needs to be able to detect and manage error conditions or changes in instrument status.

There are two methods you can use to programmatically access the information in status registers:

- The ["Polling Method" on page 4162](#)
- The ["Service Request \(SRQ\) Method" on page 4163](#)

The Polling Method works well if you do not need to know about changes the moment they occur. To detect a change using this method, the program must repeatedly read the registers.

The SRQ Method should be used if you must know immediately when a condition changes.

Either method allows you to monitor one or more conditions.

9.4.4.1 Polling Method

In this method, the instrument has a passive role. It only tells the controller that conditions have changed when the controller asks the right question.

Use this method when:

- your programming language/development environment does not support SRQ interrupts
- you want to write a simple, single-purpose program and don't want the added complexity of setting up an SRQ handler

To monitor a condition:

- Determine which register contains the bit that reports the condition
- Send the unique SCPI query to read that register
- Examine the bit to see if the condition has changed

Monitoring Options

You can monitor conditions in various ways:

- | | | |
|---|---|---|
| 1 | Check the current instrument hardware and firmware status | Do this by querying the condition registers, which continuously monitor status. These registers represent the current state of the instrument. Bits in a condition register are updated in real time
When the condition monitored by a particular bit becomes true, the bit is set to 1. When the condition becomes false, the bit is reset to 0 |
| 2 | Monitor a particular condition (bit) | You can enable a particular bit(s), using the "Standard Event Status Enable Register" on page 4171 . The instrument will then monitor that particular condition. If the bit becomes true (0 to 1 transition) in the Event Register, it will stay set until the Event Register is cleared. Querying the Event Register allows you to detect that this condition occurred, even if the condition no longer exists. The Event Register can only be cleared by querying it, or by sending *CLS |
| 3 | Monitor a particular type of change in a condition (bit) | By default, the Transition Registers are set if the condition goes from 0 to 1 (false to true, or a positive transition), but you can change this behavior so the selected condition is detected if the bit goes from 1 to 0 (true to false, or a negative transition)

You can also detect <i>both</i> types of transitions, or neither
If both Transition Registers are set to 0 for a particular bit position, that bit is <i>not</i> set in the "Standard Event Status Enable Register" on page 4171 for either type of change |

9.4.4.2 Service Request (SRQ) Method

In this method, the instrument takes a more active role, by informing the controller when there has been a condition change, without the controller asking.

Use this method when:

- you need time-critical notification of changes
- you are monitoring more than one device which supports SRQs
- you need to have the controller do something else while waiting
- you can't afford the performance penalty inherent to polling

Using the Service Request (SRQ) Method

Your language, bus, and programming environment must be able to support SRQ interrupts, for example, BASIC used with VXI-11.3 (GPIB over LAN). When you monitor a condition with the SRQ method, you must:

- Determine which bit monitors the condition
- Determine how that bit reports to the request service (**RQS**) bit of the status byte
- Send SCPI commands to enable the bit that monitors the condition and to enable the summary bits that report the condition to the **RQS** bit
- Enable the controller to respond to service requests

When the condition changes, the instrument sets its **RQS** bit. The controller is informed of the change as soon as it occurs. As a result, the time the controller would otherwise have used to monitor the condition can be used to perform other tasks. Your program determines how the controller responds to the SRQ.

Bit 6 of the "Status Byte Register" on page 4166 is the request service (**RQS**) bit. Use ***SRE** to configure the **RQS** bit to report changes in instrument status. When such a change occurs, the **RQS** bit is set. It is cleared when the Status Byte Register is queried using ***SRE?** (with a serial poll.) It can be queried *without* erasing the contents by using ***STB?**.

When a register being set causes a summary bit in the status byte to change from 0 to 1, the instrument can initiate the service request (SRQ) process. However, the process is only initiated if *both* the following conditions are true:

The corresponding bit of the service request enable register is also set to 1

The instrument does not have a service request pending. (A service request is considered to be pending between the time the instrument's SRQ process is initiated and the time the controller reads the status byte register)

The SRQ process sets the SRQ true. It also sets the status byte's request service (**RQS**) bit to 1. Both actions are necessary to inform the controller that the instrument requires service. Setting the SRQ line *only* informs the controller that some device on the bus requires service. Setting the **RQS** bit allows the controller to determine which instrument requires service.

If your program enables the controller to detect and respond to service requests, it should instruct the controller to perform a serial poll when the SRQ is set true. Each device on the bus returns the contents of its Status Byte Register in response to this poll. The device whose **RQS** bit is set to 1 is the device that requested service.

NOTE

When you read the instrument's Status Byte Register using a serial poll, the **RQS bit is reset to 0. Other bits in the register are not affected.**

If the status register is configured to SRQ on end-of-measurement, and the measurement is in **Continuous** mode, then restarting a measurement (via **:INIT**) can cause the measuring bit to pulse low. This causes an SRQ even though you have not actually reached the "end-of-measurement" condition. To avoid this:

- Set **:INITiate:CONTinuous OFF**
- Set/enable the status registers
- Restart the measurement (send **:INIT**)

9.4.5 Status Register Bit Parameters

The diagram below shows a typical status register, in this case the "Operation Enable" on page 4174 Register. Each bit in a register is represented by a numerical value based on its location. When a command requires a bit pattern to be sent as its parameter, that can be entered as a numeric value using decimal or hexadecimal representations. (where 0 to 32767 is equivalent to **#H0** to **#H7FFF**). If you want to enable more than one bit, you send the sum of all the bits that you want to monitor.

Decimal Value	32768	16384	8192	4096	2048	1024	512	256	128	64	32	16	8	4	2	1
Bit Number	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

STATus:OPERation:ENABLE <num>

STATus:OPERation:ENABLE?

Standard Operation Event Enable Register

ck730a

NOTE Bit 15 is not used to report status.

Example 1

To enable bit 0 and bit 6 of standard event status register, you would send the command ***ESE 65** because $1 + 64 = 65$

The results of a query are evaluated in a similar way. If the ***STB?** command returns a decimal value of 140, ($140 = 128 + 8 + 4$) then bit 7 is true, bit 3 is true and bit 2 is true

Example 2

Suppose you want to know if an Auto-trigger Timeout occurs, but you only cared about that specific condition. So you would want to know what was happening with bit 10 in the Status Questionable Integrity register, and not about any other bits

It is usually a good idea to start by clearing all the status registers, using ***CLS**

Sending **:STAT:QUES:INT:ENAB 1024** lets you monitor only bit 10 events, instead of the default monitoring all the bits in the register. The register default is for positive transition events (0 to 1 transition), that is, when an auto-trigger timeout occurs. If instead, you want to know when the Auto-trigger timeout condition is cleared, then you set **:STAT:QUES:INT:PTR 0** and **:STAT:QUES:INT:NTR 32767**

Now, the only output from the "Questionable Integrity Register" on page 4204 will come from a bit 10 positive transition, and goes to the Integrity Sum bit 9 of the "Questionable Register" on page 4179

If you want only to monitor bit 9 of the same register, send **:STAT:QUES:ENAB 512**

The "Questionable Register" on page 4179 output goes to the "Status Questionable Summary" bit 3 of the "Status Byte Register" on page 4166. The output from this register can be enabled using ***SRE 8**.

Finally, you can use the serial polling functionality available for the particular bus/software that you are using to monitor the Status Byte Register, or you could use ***STB?** to poll the Status Byte Register.

9.4.6 Status Subsystem Registers and Commands

The Status Subsystem registers monitor various events and conditions in the instrument. Software written to control the instrument may need to monitor some of these events and conditions.

To set and query status registers, you can use the **STATus** subsystem SCPI commands and queries.

NOTE

All status register commands are sequential. You can send them in the middle of an ongoing overlapped command to get the current status. You can also send them following a sequential command. In this case, the status register command waits for the completion of the previously-sent sequential command before performing the action.

Most commands are sequential commands; only a few are overlapped.


If a command *is* overlapped, then that is explicitly stated in the command description.

See also the [Keysight X-Series Signal Analyzers Instrument Messages](#) manual for more detail on the instrument conditions that can cause these bits to be set.

9.4.6.1 Status Byte Register

Provides a one-byte overview of the entire **STATus** subsystem. All the other registers funnel into this register via summary bits, as shown in the "Status Register System

Diagram" on page 4157.

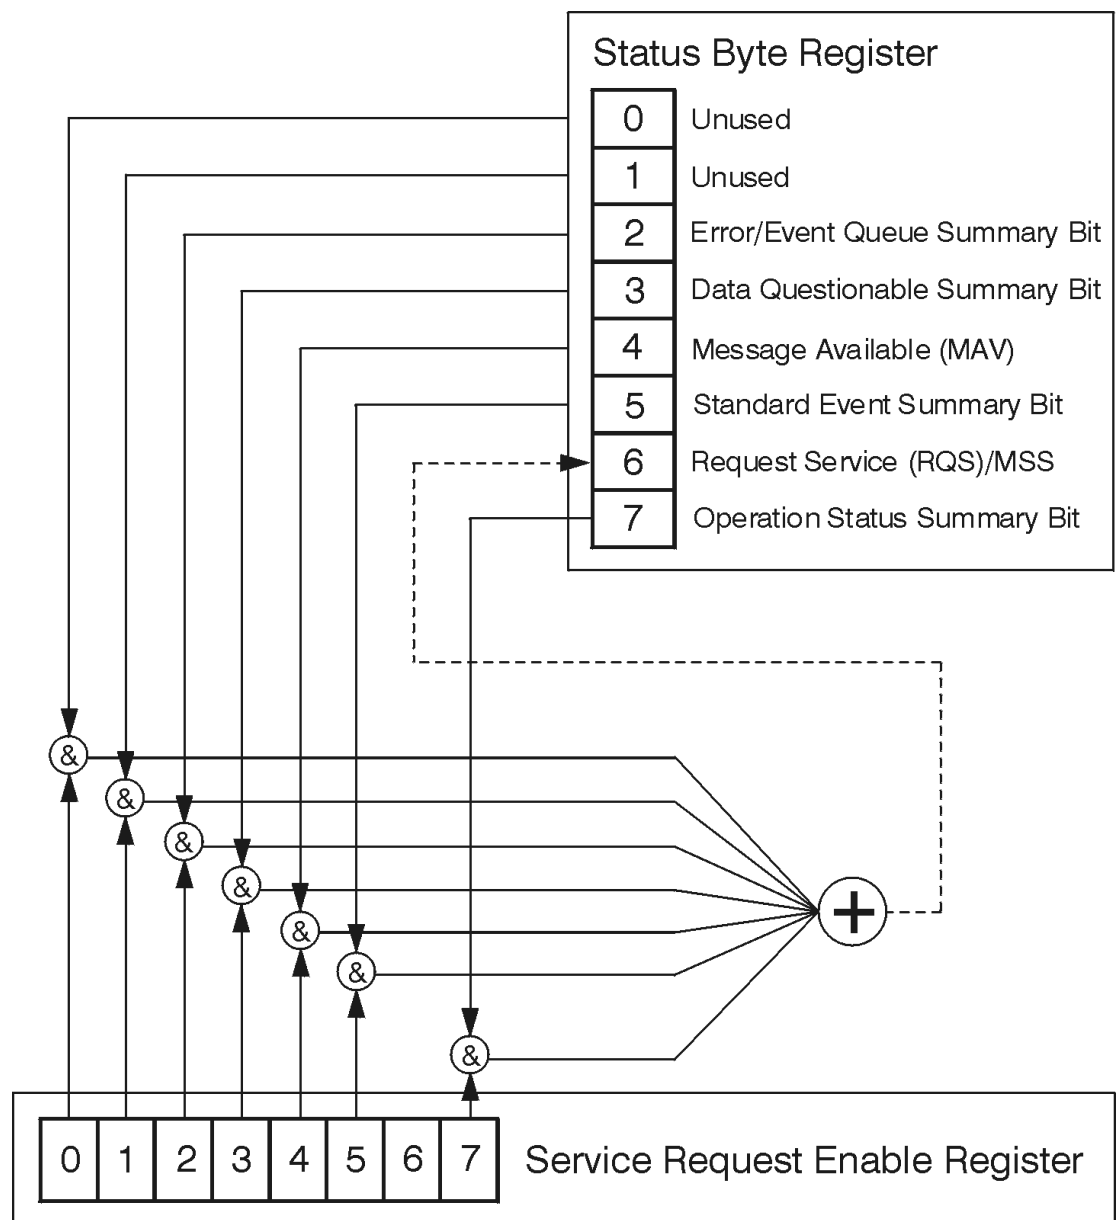

ck776a

Description								
Standard Operation Status Summary Bit								
Request Service (RQS) Summary Bit								
Standard Event Status Summary Bit								
Message Available (MAV)								
Data Questionable Status Summary Bit								
Error/Event Queue Summary Bit								
Unused								
Unused								
Bit Number	7	6	5	4	3	2	1	0

*STB?

Status Byte Register

ck725a

Bit	Description
0, 1	These bits are always set to 0
2	A 1 in this bit position indicates that the SCPI error queue is not empty which means that it contains at least one error message
3	A 1 in this bit position indicates that the data questionable summary bit has been set. The data questionable event register can then be read to determine the specific condition that caused this bit to be set
4	A 1 in this bit position indicates that the instrument has data ready in the output queue. There are no lower status groups that provide input to this bit
5	A 1 in this bit position indicates that the standard event summary bit has been set. The standard event status register can then be read to determine the specific event that caused this bit to be set
6	A 1 in this bit position indicates that the instrument has at least one reason to report a status change. This bit is also called the master summary status bit (MSS)
7	A 1 in this bit position indicates that the standard operation summary bit has been set. The standard operation event register can then be read to determine the specific condition that caused this bit to be set

To query the Status Byte Register, send **"*STB? - Status Byte Query"** on page 4135. The response will be the decimal sum of the bits that are set to 1. For example, if bit number 7 and bit number 3 are set to 1, the decimal sum of the 2 bits is 128 plus 8, so the decimal value 136 is returned.

***STB** does *not* clear the status register.

The **RQS** bit is read and reset by a serial poll. The same bit position (**MSS**) is read non-destructively by ***STB?**. If you serial-poll bit 6, it is read as **RQS**, but if you send ***STB**, it reads bit 6 as **MSS**. For more information refer to Section 11 of: **IEEE Standard 488.2-1992**

In addition to the Status Byte Register, the status byte group also contains the ["Service Request Enable Register" on page 4169](#), which lets you select which bits in the Status Byte Register will trigger a service request.

Service Request Enable Register

Enables the desired bits of the Service Request (SRQ) subsystem.

Send ***SRE <integer>**, where **<integer>** is the sum of the decimal values of the bits you want to enable plus the decimal value of bit 6. For example, assume that you want to enable bit 7 so that whenever the standard operation status register summary bit is set to 1 it will trigger a service request. Send the command ***SRE 192** (because $192 = 128 + 64$). You must always add 64 (the numeric value of RQS bit 6) to your numeric sum when you enable any bits for a service request.

***SRE?** returns the decimal value of the sum of the bits previously enabled with ***SRE <integer>**.

This register presets to zeros (0).

Decimal Value	128	64	32	16	8	4	2	1
Bit Number	7	6	5	4	3	2	1	0

***SRE <num>**
***SRE?**

Service Request Enable Register

ck726a

See also ["*SRE - Service Request Enable" on page 4134](#)

Preset the Status Byte


Sets bits in most of the enable and transition registers to their default state.

- Presets:
- All Transition Filters
- All Enable Registers
- Error/Event Queue Enable

Has no effect on Event Registers, Error/Event QUEue, IEEE 488.2 ESE, and SRE Registers, as described in: [IEEE Standard 488.2-1992](#)

Remote Command	:STATus:PRESet
Example	:STAT:PRES

9.4.6.2 Standard Event Status Register

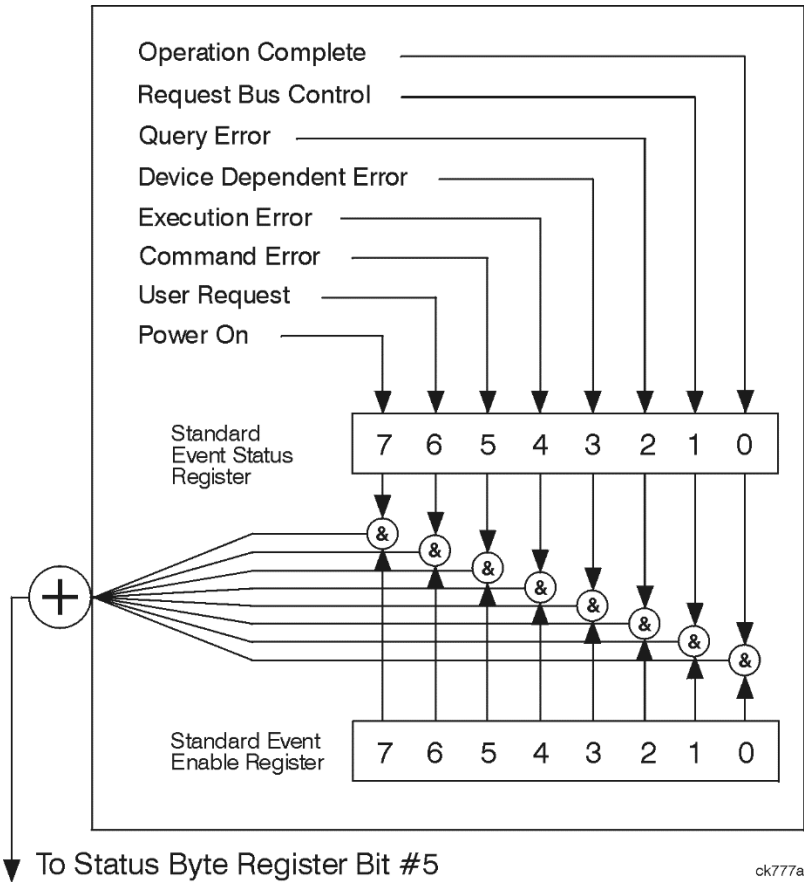

The standard event status register contains the following bits:

Description								
Power On								
User Request Key (Local)								
Command Error								
Execution Error								
Device Dependent Error								
Query Error								
Request Control								
Operation Complete								
Bit Number	7	6	5	4	3	2	1	0

*ESR?

Standard Event Status Register

ck727a

Bit	Description
0	A 1 in this bit position indicates that all pending operations were completed following execution of the *OPC command
1	For GPIB handshaking to request control. Currently it is set to 0, because there are no implementations where the spectrum analyzer controls another instrument
2	A 1 in this bit position indicates that a query error has occurred. Query errors have SCPI error numbers from -499 to -400
3	A 1 in this bit position indicates that a device dependent error has occurred. Device dependent errors have SCPI error numbers from -399 to -300 and 1 to 32767
4	A 1 in this bit position indicates that an execution error has occurred. Execution errors have SCPI error numbers from -299 to -200
5	A 1 in this bit position indicates that a command error has occurred. Command errors have SCPI error numbers from -199 to -100
6	A 1 in this bit position indicates that the LOCAL key has been pressed. This is true even if the instrument is in local lockout mode
7	A 1 in this bit position indicates that the instrument has been turned off and then on

The Standard Event Status Register is used to determine the specific events that set bit 5 in the **"Status Byte Register" on page 4166**. To query this register, send ***ESR?**. The response will be the decimal sum of the bits that are enabled (set to 1). For example, if bit number 7 and bit number 3 are enabled, the decimal sum of the 2 bits is 128 plus 8, so the decimal value 136 is returned. See also **"*ESR? - Standard Event Status Register Query" on page 4131**

Standard Event Status Enable Register

In addition to the **"Standard Event Status Register" on page 4170**, the Standard Event status group also contains a Standard Event Status Enable Register. This

register lets you choose which bits in the standard event status register will set the summary bit (bit 5 of the status byte register) to 1. Send ***ESE <integer>**, where **<integer>** is the sum of the decimal values of the bits you want to enable. For example, to enable bit 7 and bit 6 so that whenever either of those bits is set to 1, the standard event status summary bit of the status byte register will be set to 1, send ***ESE 192** (128 + 64). ***ESE?** returns the decimal value of the sum of the bits previously enabled with ***ESE <integer>**.

The standard event status enable register presets to zeros (0).

Decimal Value								
128 64 32 16 8 4 2 1								
Bit Number	7	6	5	4	3	2	1	0

*ESE <num>
*ESE?

Standard Event Status Enable Register

ck728a

See also **"*ESE - Standard Event Status Enable" on page 4130**

9.4.6.3 Operation Register

This register and the **"Questionable Register" on page 4179** are sets of registers that monitor the overall instrument condition. They are accessed using **:STATus:OPERation** and **:STATus:QUEStionable**.

This register monitors the current instrument measurement state and various instrument operations for a quick summary of what is happening within the instrument. It checks to see if the instrument is calibrating, sweeping, or waiting for a trigger (see also **"*OPC? - Operation Complete" on page 4132**).

Description																
Always 0																
Unused																
Unused																
Source waiting for trigger																
Instrument Summary																
DC Coupled																
Source sweeping																
Paused																
Unused																
Waiting for Periodic Sync Source																
Waiting for trigger																
Measuring																
Sweeping																
Unused																
Settling																
Calibrating																
Bit #	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

STATus:OPERation Register

Bit	Condition	Operation
0	Calibrating	The instrument is busy executing its Align Now process
1	Settling	The instrument circuitry is settling
3	Sweeping	The instrument is busy taking a sweep
4	Measuring	The instrument is busy making a measurement. Measurements often require multiple sweeps. They are initiated by user-interface keys or with the MEASure group of commands The bit is valid for most X-Series Modes
5	Waiting for trigger	The instrument is waiting for the trigger conditions to be met, then it will trigger a sweep or measurement
6	Waiting for Periodic Sync Source	The instrument is waiting for the Periodic trigger Sync Source conditions to be met, then the sweep or measurement period will be synchronized
8	Paused	The measurement is paused
9	Source Sweeping	The List Sequencer is running, or Freq Scan results are available The List Sequencer or Waveform Sequences are running, specifically, in VXT models: M9410A/11A/15A/16A, M9410E/11E/15E/16E, E6680A/80E/81A, S9110A/01A/06A/08A/15A/30A, M8920B
10	DC Coupled	The instrument is DC coupled
11	Instrument Summary	The summary bit for the "Operation Instrument Register" on page 4176
12	Source Waiting for Trigger	The built in source is waiting for a trigger

Filter Registers

- "Operation Condition Query" on page 4173
- "Operation Enable" on page 4174
- "Operation Event Query" on page 4174
- "Operation Negative Transition" on page 4175
- "Operation Positive Transition" on page 4175

Operation Condition Query

Returns the decimal value of the sum of the bits in the Status Operation Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:OPERation:CONDition?</code>
Example	<code>:STAT:OPER:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Operation Enable

Determines which bits in the "Operation Event Query" on page 4174 register will set the Operation Status Summary bit (bit 7) in the "Status Byte Register" on page 4166.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

NOTE

The preset condition is to have all bits in this enable register set to 0. To have any Operation Events reported to the Status Byte Register, one or more bits need to be set to 1.

Remote Command	<code>:STATus:OPERation:ENABle <integer></code> <code>:STATus:OPERation:ENABle?</code>
Example	<code>:STAT:OPER:ENAB 1</code> Sets the register so that Align Now events will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Operation Event Query

Returns the decimal value of the sum of the bits in the Operation Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:OPERation[:EVENT]?</code>
Example	<code>:STAT:OPER?</code>
Preset	0

Status Bits/OPC dependencies	Sequential command
------------------------------	--------------------

Operation Negative Transition

Determines which bits in the "Operation Condition Query" on page 4173 register will set the corresponding bit in the "Operation Event Query" on page 4174 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:NTRansition <integer></code> <code>:STATus:OPERation:NTRansition?</code>
Example	<code>:STAT:OPER:NTR 1</code> Align Now operation complete will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Operation Positive Transition


Determines which bits in the "Operation Condition Query" on page 4173 register will set the corresponding bit in the "Operation Event Query" on page 4174 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:PTRansition <integer></code> <code>:STATus:OPERation:PTRansition?</code>
Example	<code>:STAT:OPER:PTR 1</code> Align Now operation beginning will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.4 Operation Instrument Register

Monitors instrument-related operations and summarizes them in bit 11 of the "Operation Register" on page 4172.

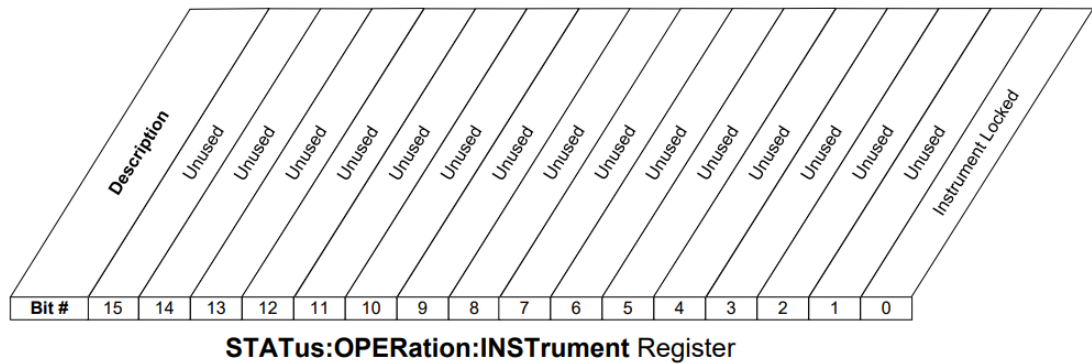

Bit	Condition	Operation
0	Instrument Locked	The instrument is locked

Filter Registers

- "Operation Instrument Condition" on page 4176
- "Operation Instrument Enable" on page 4177
- "Operation Instrument Event Query" on page 4177
- "Operation Instrument Negative Transition" on page 4178
- "Operation Instrument Positive Transition" on page 4178

Operation Instrument Condition

Returns the decimal value of the sum of the bits in the Status Operation Instrument Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:OPERation:INSTrument:CONDition?
Example	:STAT:OPER:INST:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

Operation Instrument Enable

Determines which bits in the "Operation Instrument Condition" on page 4176 Register will set bits in the "Operation Instrument Event Query" on page 4177 register, which also sets the Instrument Summary bit (bit 11) in the "Operation Instrument Register" on page 4176.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

NOTE

The preset condition is to have all bits in this enable register set to 0. To have any Instrument Events reported to the Status Byte Register, one or more bits need to be set to 1.

Remote Command	<code>:STATus:OPERation:INSTrument:ENABle <integer></code>
	<code>:STATus:OPERation:INSTrument:ENABle?</code>
Example	<code>:STAT:OPER:INST:ENAB 1</code>
	Sets the register so that Instrument Locked will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Operation Instrument Event Query

Returns the decimal value of the sum of the bits in the Operation Instrument Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:OPERation:INSTrument[:EVENT]?</code>
Example	<code>:STAT:OPER:INST?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Operation Instrument Negative Transition

Determines which bits in the "Operation Condition Query" on page 4173 Register will set the corresponding bit in the "Operation Event Query" on page 4174 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:INSTrument:NTRansition <integer></code> <code>:STATus:OPERation:INSTrument:NTRansition?</code>
Example	<code>:STAT:OPER:INST:NTR 1</code> Instrument Locked being cleared will be reported to the Instrument Summary of the Status Operation register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Operation Instrument Positive Transition

Determines which bits in the "Operation Condition Query" on page 4173 Register will set the corresponding bit in the "Operation Event Query" on page 4174 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:INSTrument:PTRansition <integer></code> <code>:STATus:OPERation:INSTrument:PTRansition?</code>
Example	<code>:STAT:OPER:INST:PTR 1</code> Instrument Locked being set will be reported to the Instrument Summary of the Status Operation register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.5 Questionable Register

This register and the "Operation Register" on page 4172 monitor the overall instrument condition. They are accessed using :STATus:OPERation and :STATus:QUESTionable.

This register monitors the instrument's condition to see if anything questionable has happened. It detects anything that might cause an error or a bad measurement, such as a hardware problem, an out-of-calibration situation, or a unusual signal. All the bits are summary bits from lower-level event registers.

Bit #	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Description	Always 0	Unused	Unused	Unused	Unused	Unused	Unused	Integrity summary	Calibration summary	Unused	Unused	Frequency summary	Temperature summary	Power summary	Unused	Unused

STATus:QUESTionable Register

Bit	Condition	Operation
3	Power summary	Summary bit for "Questionable Power Register" on page 4182
4	Temperature summary	Summary bit for "Questionable Temperature Register" on page 4185
5	Frequency summary	Summary bit for "Questionable Frequency Register" on page 4188
8	Calibration summary	Summary bit for "Questionable Calibration Register" on page 4191
9	Integrity summary	Summary bit for "Questionable Integrity Register" on page 4204

Filter Registers

- "Questionable Condition" on page 4180
- "Questionable Enable" on page 4180
- "Questionable Event Query" on page 4181
- "Questionable Negative Transition" on page 4181
- "Questionable Positive Transition" on page 4181

Questionable Condition

Returns the decimal value of the sum of the bits in the Questionable Condition register.

NOTE The data in this register is continuously updated and reflects current conditions.

Remote Command	:STATus:QUEStionable:CONDition?
Example	:STAT:QUES:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Enable

Determines which bits in the "Questionable Event Query" on page 4181 Register will set the Questionable Status Summary bit (bit3) in the "Status Byte Register" on page 4166.

The variable <integer> is the sum of the decimal values of the bits you want to enable.

NOTE The preset condition is all bits in this enable register set to 0. To report any Questionable Events to the Status Byte Register, one or more bits need to be set to 1. The "Standard Event Status Register" on page 4170 should be queried after each measurement to check the Questionable Status Summary (bit 3). If it is equal to 1, a condition during the test may have made the test results invalid. If it is equal to 0, this indicates that no hardware problem or measurement problem was detected by the analyzer.

Remote Command	:STATus:QUEStionable:ENABle <integer> :STATus:QUEStionable:ENABle? :STATus:OPERation:ENABle <integer> :STATus:OPERation:ENABle?
Example	:STAT:QUES:ENAB 16 Sets the register so that questionable temperature events will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767

Status Bits/OPC dependencies Sequential command

Questionable Event Query

Returns the decimal value of the sum of the bits in the Questionable Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUESTionable[:EVENT]?
Example	:STAT:QUES?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Negative Transition

Determines which bits in the "Questionable Condition" on page 4180 Register will set the corresponding bit in the "Questionable Event Query" on page 4181 Register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:NTRansition <integer> :STATus:QUESTionable:NTRansition?
Example	:STAT:QUES:NTR 16 Temperature summary 'questionable cleared' will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Positive Transition


Determines which bits in the "Questionable Condition" on page 4180 Register will set the corresponding bit in the "Questionable Event Query" on page 4181 Register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:PTRansition <integer></code> <code>:STATus:QUEStionable:PTRansition?</code>
Example	<code>:STAT:QUES:PTR 16</code> Temperature summary 'questionable asserted' will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.6 Questionable Power Register

Monitors power-related conditions within the instrument and summarizes them in bit 3 of the "Questionable Register" on page 4179.

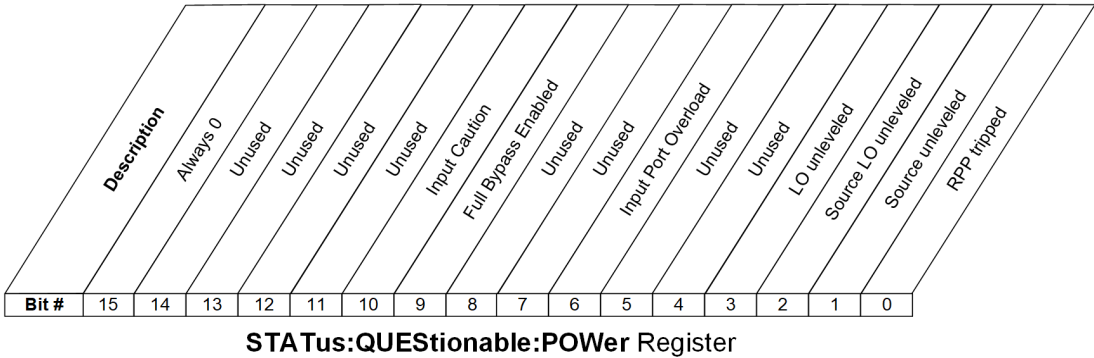

Bit	Condition	Operation
0	RPP tripped	(not currently in use)
1	Source Unleveled	The built-in source is not properly leveled
2	Source LO Unleveled	(not currently in use)
3	LO Unleveled	(not currently in use)
6	Input Port Overload	A power overload condition exists at an input port
9	Full Bypass Enabled	Frontend circuitry is bypassed, use caution to protect the mixer
10	Input Caution	Input circuitry is configured such that care is required to prevent damage

Filter Registers

- "Questionable Power Condition" on page 4183
- "Questionable Power Enable" on page 4183
- "Questionable Power Event Query" on page 4184
- "Questionable Power Negative Transition" on page 4184
- "Questionable Power Positive Transition" on page 4184

Questionable Power Condition

Returns the decimal value of the sum of the bits in the Questionable Power Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:POWer:CONDition?</code>
Example	<code>:STAT:QUES:POW:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Power Enable

Determines which bits in the "Questionable Power Condition" on page 4183 Register will set bits in the Questionable Power Event register, which also sets the Power Summary bit (bit 3) in the "Questionable Register" on page 4179.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	<code>:STATus:QUESTionable:POWer:ENABle <integer></code> <code>:STATus:QUESTionable:POWer:ENABle?</code>
Example	<code>:STAT:QUES:POW:ENAB 2</code> Source Unlevelled will be reported to the Power Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Power Event Query

Returns the decimal value of the sum of the bits in the Questionable Power Event Query register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:POWer[:EVENT]?</code>
Example	<code>:STAT:QUES:POW?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Power Negative Transition

Determines which bits in the "Questionable Power Condition" on page 4183 register will set the corresponding bit in the "Questionable Power Event Query" on page 4184 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:POWer:NTRansition <integer></code> <code>:STATus:QUESTionable:POWer:NTRansition?</code>
Example	<code>:STAT:QUES:POW:NTR 2</code> Source Unlevelled being cleared will be reported to the Power Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Power Positive Transition


Determines which bits in the "Questionable Power Condition" on page 4183 register will set the corresponding bit in the "Questionable Power Event Query" on page 4184 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:POWer:PTRansition <integer></code> <code>:STATus:QUESTionable:POWer:PTRansition?></code>
Example	<code>:STAT:QUES:POW:PTR 32</code> Source Unlevelled being set will be reported to the Power Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.7 Questionable Temperature Register

Monitors temperature-related conditions within the instrument and summarizes them in bit 4 of the "Questionable Register" on page 4179.

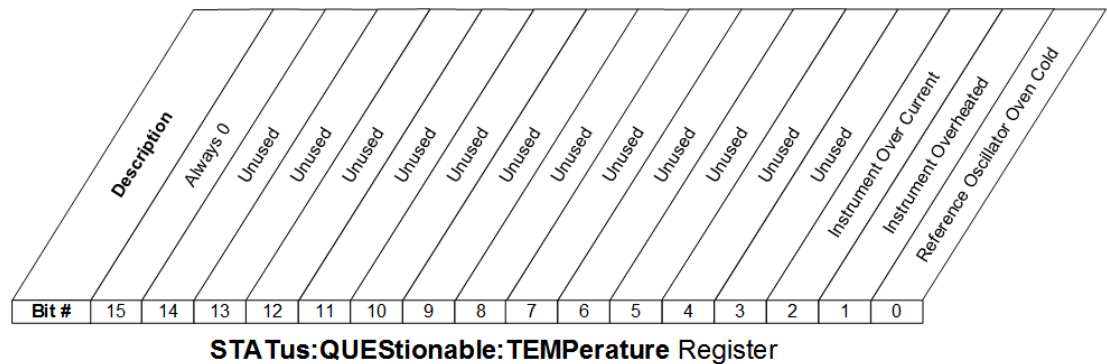

Bit	Condition	Operation
0	Reference Oscillator Oven Cold	(not currently in use)
1	Instrument overheated (over temperature)	Excessive heat has been detected in some part of the instrument
2	Instrument over current	Excessive heat has been detected in some part of the instrument, the instrument should be restarted

Filter Registers

- "Questionable Temperature Condition" on page 4186
- "Questionable Temperature Enable" on page 4186

- "Questionable Temperature Event Query" on page 4187
- "Questionable Temperature Negative Transition" on page 4187
- "Questionable Temperature Positive Transition" on page 4187

Questionable Temperature Condition

Returns the decimal value of the sum of the bits in the Questionable Temperature Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:TEMPerature:CONDition?
Example	:STAT:QUES:TEMP:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Temperature Enable

Determines which bits in the "Questionable Temperature Condition" on page 4186 Register will set bits in the "Questionable Temperature Event Query" on page 4187 register, which also sets the Temperature Summary bit (bit 4) in the "Questionable Register" on page 4179.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	:STATus:QUESTionable:TEMPerature:ENABLE <integer> :STATus:QUESTionable:TEMPerature:ENABLE?
Example	:STAT:QUES:TEMP:ENAB 2 Instrument Overheated will be reported to the Temperature Summary of the Questionable Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Temperature Event Query

Returns the decimal value of the sum of the bits in the Questionable Temperature Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:TEMPerature[:EVENT]?</code>
Example	<code>:STAT:QUES:TEMP?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Temperature Negative Transition

Determines which bits in the "Questionable Temperature Condition" on page 4186 Register will set bits in the "Questionable Temperature Event Query" on page 4187 register, when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:TEMPerature:NTRansition <integer></code> <code>:STATus:QUESTionable:TEMPerature:NTRansition?</code>
Example	<code>:STAT:QUES:TEMP:NTR 2</code> Instrument Overheated being cleared will be reported to the Temperature Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Temperature Positive Transition


Determines which bits in the "Questionable Temperature Condition" on page 4186 Register will set bits in the "Questionable Temperature Event Query" on page 4187 register, when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:TEMPerature:PTRansition <integer></code> <code>:STATus:QUEStionable:TEMPerature:PTRansition?</code>
Example	<code>:STAT:QUES:TEMP:PTR 2</code> Instrument Overheated being set will be reported to the Temperature Summary of the Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.8 Questionable Frequency Register

Monitors frequency-related conditions within the instrument and summarizes them in bit 5 of the "Questionable Register" on page 4179.

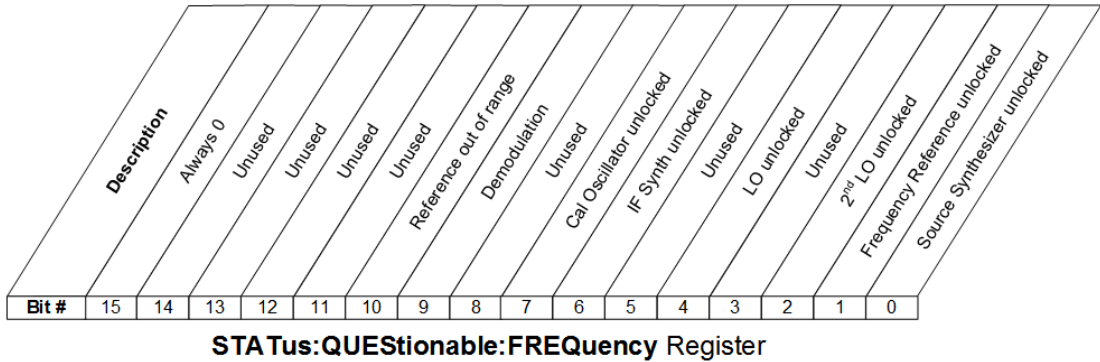

Bit	Condition	Operation
0	Source Synth Unlocked	The synthesizer in the built-in source is not locked
1	Frequency Reference Unlocked	The instrument's frequency reference is unlocked
2	2 nd LO Unlocked	The instrument's second LO (local oscillator) is unlocked
4	LO Unlocked	The instrument's main LO (local oscillator) is unlocked
6	IF Synth Unlocked	The synthesizer in the IF is not locked
7	Cal Osc Unlocked	The oscillator used for internal calibrations is not locked
9	Demodulation	Demodulation cannot be performed due to an out of range frequency

Bit	Condition	Operation
10	Reference missing or out of range	The signal being fed to a reference input is missing or too high or low in frequency for the reference to lock

Filter Registers

- "Questionable Frequency Condition" on page 4189
- "Questionable Frequency Enable" on page 4189
- "Questionable Frequency Event Query" on page 4190
- "Questionable Frequency Negative Transition" on page 4190
- "Questionable Frequency Positive Transition" on page 4191

Questionable Frequency Condition

Returns the decimal value of the sum of the bits in the Questionable Frequency Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:FREQuency:CONDition?</code>
Example	<code>:STAT:QUES:FREQ:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Frequency Enable

Determines which bits in the "Questionable Frequency Condition" on page 4189 Register will set bits in the "Questionable Temperature Event Query" on page 4187 register, which also sets the Frequency Summary bit (bit 5) in the "Questionable Register" on page 4179.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	<code>:STATus:QUESTionable:FREQuency:ENABle <integer></code> <code>:STATus:QUESTionable:FREQuency:ENABle?</code>
Example	<code>:STAT:QUES:FREQ:ENAB 2</code> Frequency Reference Unlocked will be reported to the Frequency Summary of the Status

	Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Frequency Event Query

Returns the decimal value of the sum of the bits in the Questionable Frequency Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:FREQuency[:EVENT]?</code>
Example	<code>:STAT:QUES:FREQ?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Frequency Negative Transition

Determines which bits in the "Questionable Frequency Condition" on page 4189 register will set the corresponding bit in the "Questionable Frequency Event Query" on page 4190 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:FREQuency:NTRansition <integer></code> <code>:STATus:QUESTionable:FREQuency:NTRansition?</code>
Example	<code>:STAT:QUES:FREQ:NTR 2</code> Frequency Reference 'regained lock' will be reported to the Frequency Summary of the Status Questionable register
Preset	0
Min	0
Max	32767

Status Bits/OPC dependencies Sequential command

Questionable Frequency Positive Transition

Determines which bits in the "Questionable Frequency Condition" on page 4189 register will set the corresponding bit in the "Questionable Frequency Event Query" on page 4190 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:FREQuency:PTRansition <integer></code> <code>:STATus:QUEStionable:FREQuency:PTRansition?</code>
Example	<code>:STAT:QUES:FREQ:PTR 2</code> Frequency Reference 'became unlocked' will be reported to the Frequency Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.9 Questionable Calibration Register

Monitors calibration-related conditions within the instrument and summarizes them in bit 8 of the "Questionable Register" on page 4179. Three of the bits are summary bits from lower-level event registers.

Bit #	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Description	Always 0	*Align Now* needed	Unused	*Align Now RF* needed	Alignment skipped summary	Unused	Extended alignment failure summary	Extended alignment failure summary	FM Demod alignment needed summary	ADC alignment failure	TLOG alignment failure	IF alignment failure	RF alignment failure	TG alignment failure	Unused	Unused

STATus:QUEStionable:CALibration Register

Bit	Condition	Operation
2	TG Alignment Failure	The Tracking Generator failed to align properly
3	RF Alignment Failure	The RF section (frontend) failed to align properly
4	IF Alignment Failure	The IF section failed to align properly
5	LO Alignment Failure	The LO (local oscillator) failed to align properly
6	ADC Alignment Failure	The ADC section failed to align properly
7	FM Demod Alignment Failure	The FM Demod section failed to align properly
8	Extended Align Needed Summary	Summary bit for "Questionable Calibration Extended Needed Register" on page 4195
9	Extended Align Failure Summary	Summary bit for "Questionable Calibration Extended Failure Register" on page 4198
11	Align Skipped Sum Summary	Summary bit for "Questionable Calibration Skipped Register" on page 4201
12	"Align Now RF" required	Go to the System, Alignments, Align Now menu and perform an "Align Now RF"
14	"Align Now" required	Go to the System, Alignments, Align Now menu and perform an "Align Now All" or an "Align Now Expired"

Filter Registers

- "Questionable Calibration Condition" on page 4192
- "Questionable Calibration Enable" on page 4193
- "Questionable Calibration Event Query" on page 4193
- "Questionable Calibration Negative Transition" on page 4194
- "Questionable Calibration Positive Transition" on page 4194

Questionable Calibration Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:CALibration:CONDition?</code>
Example	<code>:STAT:QUES:CAL:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Enable

Determines which bits in the "Questionable Calibration Condition" on page 4192 Register will set bits in the "Questionable Calibration Event Query" on page 4193 register, which also sets the Calibration Summary bit (bit 8) in the "Questionable Register" on page 4179.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:ENABle <integer></code> <code>:STATus:QUESTionable:CALibration:ENABle?</code>
Example	<code>:STAT:QUES:CAL:ENAB 16384</code> Can be used to query if an alignment is needed, if you have turned off the automatic alignment process
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:CALibration[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Negative Transition

Determines which bits in the "Questionable Calibration Condition" on page 4192 register will set the corresponding bit in the "Questionable Calibration Event Query" on page 4193 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:NTRansition <integer></code> <code>:STATus:QUESTionable:CALibration:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:NTR 16384</code> "Align All Now Needed" being cleared will be reported to the Calibration Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Positive Transition

Determines which bits in the "Questionable Calibration Condition" on page 4192 register will set the corresponding bit in the "Questionable Calibration Event Query" on page 4193 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:PTRansition <integer></code> <code>:STATus:QUESTionable:CALibration:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:PTR 16384</code> "Align All Now Needed" being set will be reported to the Calibration Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.10 Questionable Calibration Extended Needed Register

Monitors conditions that occur because a calibration or alignment is required to guarantee accurate measurements. It summarizes them in bit 8 of the "Questionable Calibration Register" on page 4191.

Bit #	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Description	Always 0	Unused	Unused	Characterize Noise Floor required	Characterize Preselector required	Unused	Unused	MPA Align required	Unused	Unused	Align current frequency range required	Input attenuation not calibrated	Unused	Align 30 MHz-1 GHz required	Align 9 kHz-30 MHz required	Unused

STATus:QUESTIONable:CALibration:EXTended:NEEded Register

Bit	Condition	Operation
1	Align 9kHz-30MHz required	EMI receiver alignment required, 9kHz-30 MHz (conducted band)
2	Align 30MHz-1GHz required	EMI receiver alignment required, 30 MHz-1 GHz (radiated band)
4	Input Attenuation not calibrated	The input attenuator is uncalibrated
5	Align current frequency range required	Alignment for current set frequency range is needed. It is suggested to process Align Selected Freq Range for the frequency range in use
8	MPA Align required	The Multiport Adaptor must be calibrated (EXT only)
11	Characterize Preselector required	Go to the System, Alignments, Advanced menu and perform a "Characterize Preselector"
12	Characterize Noise Floor required	Go to the System, Alignments, Advanced menu and perform a "Characterize Noise Floor"

Filter Registers

- "Questionable Calibration Extended Needed Condition" on page 4196
- "Questionable Calibration Extended Needed Enable" on page 4196
- "Questionable Calibration Extended Needed Event Query" on page 4197

- "Questionable Calibration Extended Needed Negative Transition" on page 4197
- "Questionable Calibration Extended Needed Positive Transition" on page 4197

Questionable Calibration Extended Needed Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:NEEDed:CONDition?</code>
Example	<code>:STAT:QUES:CAL:EXT:NEED:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Needed Enable

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 4196 will set bits in the "Questionable Calibration Extended Needed Event Query" on page 4197 register, which also sets bit 14 of the "Questionable Calibration Register" on page 4191.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABle <integer></code> <code>:STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABle?</code>
Example	<code>:STAT:QUES:CAL:EXT:NEED:ENAB 2</code> Can be used to query if an EMI conducted alignment is needed
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Needed Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:NEEDed[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL:EXT:NEED?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Needed Negative Transition

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 4196 register will set the corresponding bit in the "Questionable Calibration Extended Needed Event Query" on page 4197 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition <integer></code> <code>:STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:NEED:NTR 2</code> Conducted alignment required bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Needed Positive Transition

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 4196 register will set the corresponding bit in the "Questionable Calibration

Extended Needed Event Query" on page 4197 register when the condition register bit has a positive transition (0 to 1).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QuesTionable:CALibration:EXTEnded:NEEDed:PTRansition <integer> :STATus:QuesTionable:CALibration:EXTEnded:NEEDed:PTRansition?
Example	:STAT:QUES:CAL:EXT:NEED:PTR 2 Conducted alignment required bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.11 Questionable Calibration Extended Failure Register

Monitors conditions that occur because a calibration or alignment has failed to complete properly. It summarizes them in bit 9 of the "Questionable Calibration Register" on page 4191.

Description	
15	Always 0
14	Misc/System Alignment Failure
13	Unused
12	RCal Multiple Groups Applied
11	RCal Calibrations Missing, Part of Trace
10	RCal Multiple Calibrations Applied, Part of Trace
9	RCal Apply Warning, Check RCal Status
8	MPAdapter Preamp Charact Failure
7	Unused
6	Unused
5	Align Selected Freq Range failed
4	Unused
3	Unused
2	Characterize Preselector Failure
1	Unused
0	Unused

STATus:QuesTionable:CALibration:EXTEnded:FAILure Register

Bit	Condition	Operation
2	Characterize Preselector Failure	The preselector characterization failed
5	Align Selected Freq Range failed	The alignment for selected frequency range failed
8	MPAdapter Preamp Charact Failure	The Multiport Adaptor must be calibrated (EXT only)
9	RCal Apply Warning, Check RCal Status	The calibration request sent to the RCal module failed

Bit	Condition	Operation
10	RCal Multiple Calibrations Applied, Part of Trace	More than one calibration is being applied to part of the trace for current measurement
11	RCal Calibrations Missing, Part of Trace	The calibration being applied is not being applied to all of the trace for the current measurement
12	RCal Multiple Groups Applied	More than one calibrated rows are being applied to the current measurement
14	Misc/System Alignment Failure	Miscellaneous/System alignments have failed

Filter Registers

- "Questionable Calibration Extended Failure Condition" on page 4199
- "Questionable Calibration Extended Failure Enable" on page 4199
- "Questionable Calibration Extended Failure Event Query" on page 4200
- "Questionable Calibration Extended Failure Negative Transition" on page 4200
- "Questionable Calibration Extended Failure Positive Transition" on page 4201

Questionable Calibration Extended Failure Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QuesTionable:CALibration:EXTended:FAILure:CONDition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Failure Enable

Determines which bits in the "Questionable Calibration Extended Failure Condition" on page 4199 Register will set bits in the "Questionable Calibration Extended Failure Event Query" on page 4200 register, which also sets bit 9 of the "Questionable Calibration Register" on page 4191.

The variable **<integer>** is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:CALibration:EXTended:FAILure:ENABle <integer></code> <code>:STATus:QUESTIONable:CALibration:EXTended:FAILure:ENABle?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:ENAB 1</code> Can be used to query if an EMI conducted alignment failed
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Failure Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTIONable:CALibration:EXTended:FAILure[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Failure Negative Transition

Determines which bits in the "Questionable Calibration Extended Failure Condition" on page 4199 register will set the corresponding bit in the "Questionable Calibration Extended Failure Event Query" on page 4200 register when the condition register bit has a negative transition (1 to 0).

The variable **<integer>** is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:CALibration:EXTended:FAILure:NTRansition <integer></code> <code>:STATus:QUESTIONable:CALibration:EXTended:FAILure:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:NTR 1</code>

	Conducted alignment failed bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Extended Failure Positive Transition


Determines which bits in the "Questionable Calibration Extended Failure Condition" on page 4199 register will set the corresponding bit in the "Questionable Calibration Extended Failure Event Query" on page 4200 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QuesTionable:CALibration:EXTEnded:FAILure:PTRansition <integer></code> <code>:STATus:QuesTionable:CALibration:EXTEnded:FAILure:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:PTR 1</code> Conducted alignment failed bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.12 Questionable Calibration Skipped Register

Monitors conditions that occur because a calibration or alignment has been skipped due to various settings or conditions. It summarizes them in bit 11 of the "Questionable Calibration Register" on page 4191.

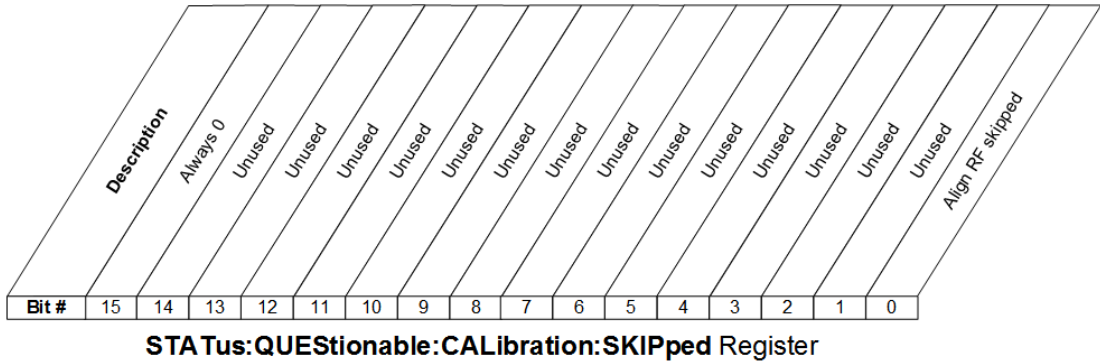

Bit	Condition	Operation
0	Align RF skipped	During an alignment, the calibration of the RF section (frontend) of the instrument was not performed. This can be caused by an interfering user signal present at the RF Input See "Align Now" on page 3481, "Align Now All" on page 3483

Filter Registers

- "Questionable Calibration Skipped Condition" on page 4202
- "Questionable Calibration Skipped Enable" on page 4203
- "Questionable Calibration Skipped Event Query" on page 4203
- "Questionable Calibration Skipped Negative Transition" on page 4203
- "Questionable Calibration Skipped Positive Transition" on page 4204

Questionable Calibration Skipped Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Skipped Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.	
Remote Command	:STATus:QUESTIONable:CALibration:SKIPPed:CONDition?
Example	:STAT:QUES:CAL:SKIP:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Skipped Enable

Determines which bits in the "Questionable Calibration Skipped Condition" on page 4202 Register will set bits in the "Questionable Calibration Skipped Event Query" on page 4203 register, which also sets bit 11 of the "Questionable Calibration Register" on page 4191.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:SKIPped:ENABle <integer></code> <code>:STATus:QUESTionable:CALibration:SKIPped:ENABle?</code>
Example	<code>:STAT:QUES:CAL:SKIP:ENAB 1</code> Can be used to query if an RF alignment skipped condition is detected
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Skipped Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:CALibration:SKIPped[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL:SKIP?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Skipped Negative Transition

Determines which bits in the "Questionable Calibration Skipped Condition" on page 4202 register will set the corresponding bit in the "Questionable Calibration Skipped

Event Query" on page 4203 register when the condition register bit has a negative transition (1 to 0).

The variable **<integer>** is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:CALibration:SKIPped:NTRansition <integer> :STATus:QUESTionable:CALibration:SKIPped:NTRansition?
Example	:STAT:QUES:CAL:SKIP:NTR 1 RF Align Skipped bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Calibration Skipped Positive Transition


Determines which bits in the **"Questionable Calibration Skipped Condition" on page 4202** register will set the corresponding bit in the **"Questionable Calibration Skipped Event Query" on page 4203** register when the condition register bit has a positive transition (0 to 1).

The variable **<integer>** is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:CALibration:SKIPped:PTRansition <integer> :STATus:QUESTionable:CALibration:SKIPped:PTRansition?
Example	:STAT:QUES:CAL:SKIP:PTR 1 RF Align Skipped bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.13 Questionable Integrity Register

Monitors measurement integrity-related conditions within the instrument and summarizes them in bit 9 of the **"Questionable Register" on page 4179**. Two of the bits are summary bits from lower-level event registers.

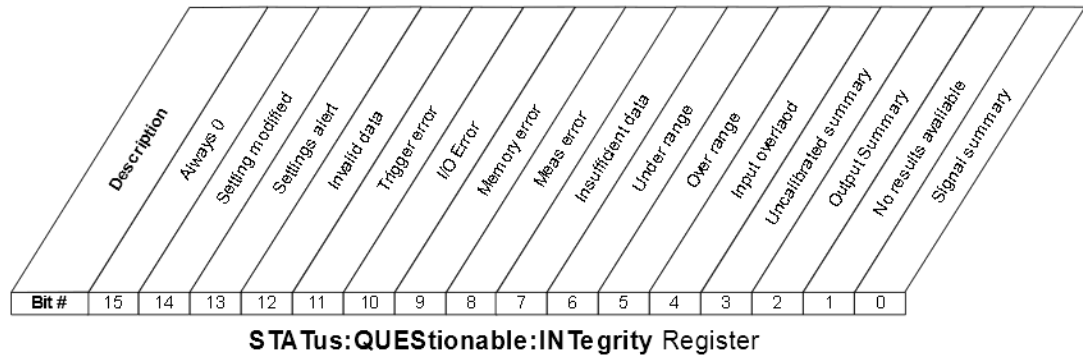

Bit	Condition	Operation
0	Signal Summary	The summary bit for the "Questionable Integrity Signal Register" on page 4208
1	No Result	The current measurement is incompatible with a setting or combination of settings, such as the selected Input, Radio Standard, etc.
2	Output Summary	The summary bit for the "Questionable Integrity Output Register" on page 4211
3	Uncalibrated Summary	The summary bit for the "Questionable Integrity Uncalibrated Register" on page 4214
4	Input Overload	A signal overload condition exists
5	Over Range	The signal at the input for this measurement is too high. You should increase the attenuation or decrease the signal level
6	Under Range	The signal at the input for this measurement is too low. You should decrease the attenuation or increase the signal level
7	Insufficient Data	Signal or settings conditions did not allow enough data to be taken during an acquisition for a valid measurement
8	Meas Error	(not currently in use)
9	Memory Error	There is not enough memory to perform the desired operation
10	I/O Error	I/O settings are preventing communication with an instrument or peripheral
11	Trigger Error	Signal or settings conditions did not allow enough data to be taken during an acquisition for a valid measurement
12	Invalid data	The Invalid Data indicator (* in upper right of display) is on, indicating that onscreen data may be stale and not match the current settings
13	Settings Alert	Settings are not right for a valid measurement, but the instrument is nonetheless allowing a measurement to be taken
14	Setting Modified	Settings are not right for a valid measurement, and the instrument is using different settings than the ones you entered in order to take a measurement

Filter Registers

- "Questionable Integrity Condition" on page 4206
- "Questionable Integrity Enable" on page 4206
- "Questionable Integrity Event Query" on page 4207
- "Questionable Integrity Negative Transition" on page 4207
- "Questionable Integrity Positive Transition" on page 4207

Questionable Integrity Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:INTEgrity:CONDition?
Example	:STAT:QUES:INT:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Enable

Determines which bits in the "Questionable Integrity Condition" on page 4206 Register will set bits in the "Questionable Integrity Event Query" on page 4207 register, which also sets the Integrity Summary bit (bit 9) in the "Questionable Register" on page 4179.

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:INTEgrity:ENABle <integer> :STATus:QUESTionable:INTEgrity:ENABle?
Example	:STAT:QUES:INT:ENAB 8 Uncalibrated Summary will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Event Query

Returns the decimal value of the sum of the bits in the Questionable Integrity Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:INTEgrity[:EVENT]?</code>
Example	<code>:STAT:QUES:INT?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Negative Transition

Determines which bits in the "Questionable Integrity Condition" on page 4206 register will set the corresponding bit in the "Questionable Integrity Event Query" on page 4207 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:NTRansition <integer></code> <code>:STATus:QUESTionable:INTEgrity:NTRansition?</code>
Example	<code>:STAT:QUES:INT:NTR 8</code> Uncalibrated Summary being cleared will be reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Positive Transition


Determines which bits in the "Questionable Integrity Condition" on page 4206 register will set the corresponding bit in the "Questionable Integrity Event Query" on page 4207 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:PTRansition <integer></code> <code>:STATus:QUEStionable:INTEgrity:PTRansition?</code>
Example	<code>:STAT:QUES:INT:PTR 8</code> Uncalibrated Summary being set will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.14 Questionable Integrity Signal Register

Monitors conditions that occur because a measurement may not be able to return an accurate or valid result due to signal conditions. It summarizes them in bit 0 of the "Questionable Integrity Register" on page 4204.

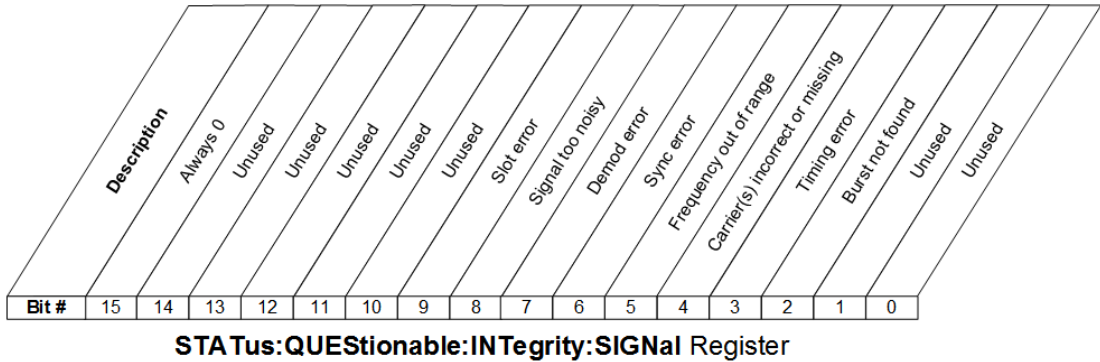

Bit	Condition	Operation
2	Burst not found	The instrument is expecting a bursted signal but such a signal cannot be detected because of inappropriate parameter settings or incorrect signal content
3	Timing Error	The instrument cannot establish appropriate timing from the signal
4	Carrier(s) incorrect or missing	The instrument cannot find the expected carrier(s) within the frequency ranges in which it is looking
5	Frequency out of range	One or more system or signal input frequencies are out of range
6	Sync error	The instrument cannot establish sync with the measured signal
7	Demod error	The instrument cannot demodulate the signal due to inappropriate

Bit	Condition	Operation
		signal or settings conditions
8	Signal Too Noisy	The instrument cannot measure the desired signal because it is too noisy
9	Slot Error	No valid signal slot found in captured data

Filter Registers

- "Questionable Integrity Signal Condition" on page 4209
- "Questionable Integrity Signal Enable" on page 4209
- "Questionable Integrity Signal Event Query" on page 4210
- "Questionable Integrity Signal Negative Transition" on page 4210
- "Questionable Integrity Signal Positive Transition" on page 4211

Questionable Integrity Signal Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Signal Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:SIGNAL:CONDition?</code>
Example	<code>:STAT:QUES:INT:SIGN:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Signal Enable

Determines which bits in the "Questionable Integrity Signal Condition" on page 4209 Register will set bits in the "Questionable Integrity Signal Event Query" on page 4210 register, which also sets the Integrity Summary bit (bit 9) in the "Questionable Register" on page 4179.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote	<code>:STATus:QUEStionable:INTEgrity:SIGNAL:ENABle <integer></code>
--------	---

Command	<code>:STATus:QUESTIONable:INTEgrity:SIGNAL:ENABLE?</code>
Example	<code>:STAT:QUES:INT:SIGN:ENAB 4</code> Burst Not Found will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Signal Event Query

Returns the decimal value of the sum of the bits in the Questionable Integrity Signal Event register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTIONable:INTEgrity:SIGNAL[:EVENT]?</code>
Example	<code>:STAT:QUES:INT:SIGN?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Signal Negative Transition

Determines which bits in the "Questionable Integrity Signal Condition" on page 4209 register will set the corresponding bit in the "Questionable Integrity Signal Event Query" on page 4210 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:INTEgrity:SIGNAL:NTRansition <integer></code> <code>:STATus:QUESTIONable:INTEgrity:SIGNAL:NTRansition?</code>
Example	<code>:STAT:QUES:INT:SIGN:NTR 4</code> Burst not found being cleared will be reported to the Integrity Summary of the Status Questionable register
Preset	0

Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Signal Positive Transition


Determines which bits in the "Questionable Integrity Signal Condition" on page 4209 register will set the corresponding bit in the "Questionable Integrity Signal Event Query" on page 4210 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:SIGNAL:PTRansition <integer></code> <code>:STATus:QUEStionable:INTEgrity:SIGNAL:PTRansition?</code>
Example	<code>:STAT:QUES:INT:SIGN:PTR 4</code> Burst not found being set will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.15 Questionable Integrity Output Register

Monitors conditions that occur in connection status currently limited to ODI streaming . It summarizes them in bit 2 of the "Questionable Integrity Register" on page 4204.

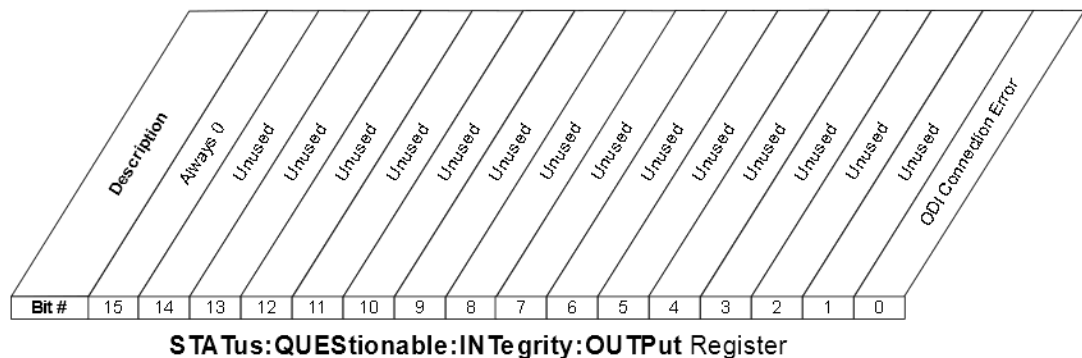

Bit	Condition	Operation
0	ODI Connection Error	ODI Connection Error This bit is never triggered, only its aliases are

Filter Registers

- "Questionable Integrity Output Condition" on page 4212
- "Questionable Integrity Output Enable" on page 4212
- "Questionable Integrity Output Event Query" on page 4213
- "Questionable Integrity Output Negative Transition" on page 4213
- "Questionable Integrity Output Positive Transition" on page 4214

Questionable Integrity Output Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Output Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:OUTPut:CONDition?</code>
Example	<code>:STAT:QUES:INT:OUTP:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Output Enable

Determines which bits in the "Questionable Integrity Output Condition" on page 4212 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 4213 register, which also sets the Data Output Summary bit (bit 2) in the "Questionable Integrity Register" on page 4204.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:OUTPut:ENABLE</code> <code>:STATus:QUEStionable:INTEgrity:OUTPut:ENABLE?</code>
Example	<code>:STAT:QUES:INT:OUTP:ENAB 1</code>

	Oversweep (Meas Uncal) is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Output Event Query

Returns the decimal value of the sum of the bits in the "Questionable Integrity Output Condition" on page 4212 register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut[:EVENT]?
Example	:STAT:QUES:INT:OUTP?
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Output Negative Transition

Determines which bits in the "Questionable Integrity Output Condition" on page 4212 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 4213 register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut:NTRansition <integer> :STATus:QUESTionable:INTEgrity:OUTPut:NTRansition?
Example	:STAT:QUES:INT:OUTP:NTR 1
	Oversweep cleared is reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Output Positive Transition


Determines which bits in the "Questionable Integrity Output Condition" on page 4212 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 4213 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QuesTionable:INTEgrity:OUTPut:PTRansition <integer></code> <code>:STATus:QuesTionable:INTEgrity:OUTPut:PTRansition?</code>
Example	<code>:STAT:QUES:INT:OUTP:PTR 1</code> Oversweep set is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

9.4.6.16 Questionable Integrity Uncalibrated Register

Monitors conditions that occur because a measurement may not be able to return an accurate or valid result due to a mismatch between instrument settings and the signal, placing the instrument in an uncalibrated state for that signal. It summarizes them in bit 3 of the "Questionable Integrity Register" on page 4204.

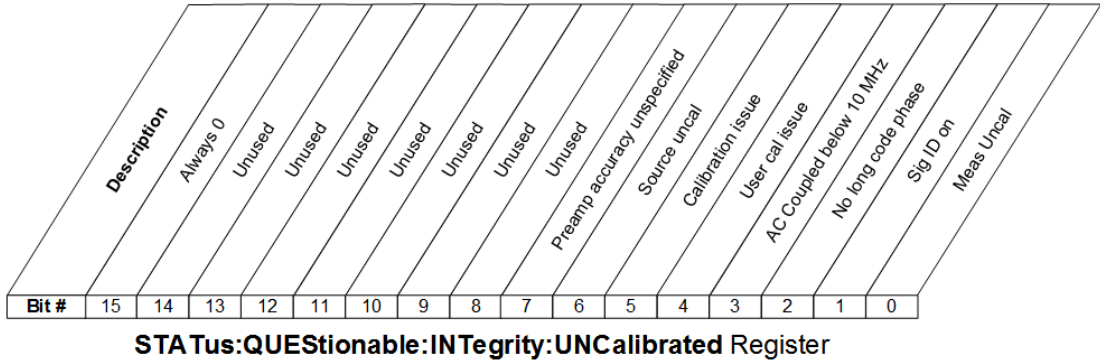

Bit	Condition	Operation
0	Meas Uncal	A Meas Uncal warning is being displayed; generally this means the sweep time must be reduced or the RBW increased
1	Signal ID on	In external mixing, the Sig ID function is on, which will impact the

Bit	Condition	Operation
		trace results
2	No Long Code Phase	The long code phase that identifies an access channel cannot be found (WCDMA)
3	AC coupled: Accy unspec'd <10 MHz	The instrument is AC coupled but is operating below 10 MHz, where the blocking capacitor will impact measurement accuracy
4	User cal issue	In noise figure measurements, the User Cal has not been performed or has been invalidated
5	Calibration issue	In noise figure measurements, one or more calibration or measurement frequency point exceeds the currently loaded Cal or Meas ENR Table frequency ranges
6	Source uncal	While using a Tracking Source, settings are putting it into an uncalibrated operational state
7	Preamplifier accuracy unspecified below XX MHz	The preamp is being used but is operating below frequencies for which its accuracy is specified

Filter Registers

- "Questionable Integrity Uncalibrated Condition" on page 4215
- "Questionable Integrity Uncalibrated Enable" on page 4216
- "Questionable Integrity Uncalibrated Event Query" on page 4216
- "Questionable Integrity Uncalibrated Negative Transition" on page 4216
- "Questionable Integrity Uncalibrated Positive Transition" on page 4217

Questionable Integrity Uncalibrated Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Uncalibrated Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:CONDition?</code>
Example	<code>:STAT:QUES:INT:UNC:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Uncalibrated Enable

Determines which bits in the "Questionable Integrity Uncalibrated Condition" on page 4215 Register will set bits in the "Questionable Integrity Uncalibrated Event Query" on page 4216 register, which also sets the Data Uncalibrated Summary bit (bit 3) in the "Questionable Integrity Register" on page 4204.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:ENABle</code> <code>:STATus:QUESTionable:INTEgrity:UNCalibrated:ENABle?</code>
Example	<code>:STAT:QUES:INT:UNC:ENAB 1</code> Oversweep (Meas Uncal) is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Uncalibrated Event Query

Returns the decimal value of the sum of the bits in the "Questionable Integrity Uncalibrated Condition" on page 4215 register.

NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated[:EVENT]?</code>
Example	<code>:STAT:QUES:INT:UNC?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Uncalibrated Negative Transition

Determines which bits in the "Questionable Integrity Uncalibrated Condition" on page 4215 register will set the corresponding bit in the "Questionable Integrity

"Uncalibrated Event Query" on page 4216 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition <integer></code> <code>:STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition?</code>
Example	<code>:STAT:QUES:INT:UNC:NTR 1</code> Oversweep cleared is reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

Questionable Integrity Uncalibrated Positive Transition

Determines which bits in the "Questionable Integrity Uncalibrated Condition" on page 4215 register will set the corresponding bit in the "Questionable Integrity Uncalibrated Event Query" on page 4216 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition <integer></code> <code>:STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition?</code>
Example	<code>:STAT:QUES:INT:UNC:PTR 1</code> Oversweep set is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

10 Hardware-Accelerated Fast Power Measurement (Remote Command Only)

The **Fast Power** option (FP2) enables very fast channel power measurements for instruments with the prerequisite hardware (DP2 and/or B40). It accomplishes this by performing real-time overlapped FFTs at the hardware layer, using software for basic post-processing before returning the result. The upshot of this approach is improved throughput for user applications that require many sequential power measurements.

The analysis bandwidth of FP2 may be limited by the licenses in the instrument.

NOTE

FP2 is remote-only, which means the instrument does not switch to any particular Mode or measurement. FP2 commands can be sent while another application is in use on the front panel.

Each Fast Power measurement can be predefined using an array index, and up to 1000 measurements can be stored. In the following documentation, instances of [1,2,...,999] can be substituted with a particular measurement index, for example, `:CALC:FPOW:POW1?`, `:CALC:FPOW:POW2?`, `:CALC:FPOW:POW134?`. In this way, power measurements can be defined one time in a batch, and then executed multiple times without having to redefine them, similar to “list mode” on other measurements.

In addition to basic channel power measurements, there are several other measurement “functions” for each channel, including peak power, peak frequency, and power spectral density.

10.1 Reset Fast Power Measurement (Remote Command Only)

Resets the measurement configuration to the defaults.

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:RESet
Example	:CALC:FPOW:POW1:RES
Notes	Option FP2 is required

10.2 Reset Fast Power Measurement (Remote Command Only)

Resets the measurement configuration to the defaults.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:RESet</code>
Example	<code>:CALC:FPOW:POW1:RES</code>
Notes	Option FP2 is required

10.2.1 Acquisition Time

Example	<code>:CALC:FPOW:POW1:DEF "AcquisitionTime=0.002"</code>
Notes	Sets the time in which the entire spectrum is measured. An increase in the acquisition time yields an improvement in measurement repeatability
Preset	0.001 s
Range	0 s to 1 s

10.2.2 Center Frequency

Example	<code>:CALC:FPOW:POW1:DEF "CenterFrequency=2e9"</code>
Notes	Sets the frequency in which the measurement is centered around. "Channel Offset Frequency Array" on page 4228 is calculated relative to the center frequency
Preset	1 GHz
Range	0 Hz to maximum instrument frequency

10.2.3 DC Coupled

Example	<code>:CALC:FPOW:POW1:DEF "DCCoupled=True"</code>
Notes	Lets you specify whether the DC blocking capacitor is utilized. Set to <code>True</code> when measuring frequencies below 10 MHz
Preset	<code>False</code>
Range	<code>True</code> DC Coupled
	<code>False</code> AC Coupled

10.2.4 Detector Type

Example	:CALC:FPOW:POW1:DEF "DetectorType=Peak"	
Notes	Option FP2 is required Lets you specify whether an RMS average or peak value is used during the measurement	
Preset	RmsAverage	
Range	RmsAverage, Peak	

10.2.5 Do Noise Correction

Example	:CALC:FPOW:POW1:DEF "DoNoiseCorrection=True"	
Notes	<p>When noise correction is enabled, the linear noise power contributed by the instrument is subtracted from all measurements. This effectively lowers the noise floor of the instrument</p> <p>When noise correction is enabled, the first measurement for a given set of input parameters will take extra time. This is because the instrument takes an extra acquisition with the RF input disconnected from the instrument's front end to measure the noise of just the instrument. The measured noise floor is stored in a cache so the noise acquisition will occur only once for the same state settings. In other words, if noise correction was turned on and the instrument made an acquisition at frequency A, then frequency B, and back again to frequency A, the hidden initial noise floor acquisition would only occur for the first acquisition at frequency A and the cached noise floor would be used the second time frequency A was measured</p>	
Preset	False	
Range	True	Enable noise correction
	False	Disable noise correction

10.2.6 Do Spur Suppression

Example	:CALC:FPOW:POW1:DEF "DoSpurSuppression=True"	
Notes	<p>When measuring very low-level signals, or when large out-of-band inputs are input into the instrument, sometimes unwanted spurs and residuals can appear in the measured spectrum. Spur suppression is a method to help minimize the levels of these internally generated spurs and residuals</p> <p>When spur suppression is enabled, the instrument will automatically take two acquisitions using two different internal analog LO frequencies. The FFT spectrums from both acquisitions are combined by taking the minimum power between both traces on a per FFT bin basis. External signals will have the same amplitude for both traces and therefore will return the expected amplitudes. However, low level spurs and residuals generated internally to the instrument tend to move to different FFT bins depending on the internal analog LO frequency used, and therefore tend to be suppressed using this spur suppression method</p>	

	Because two acquisitions, rather than a single acquisition, are made when spur suppression is enabled, the measurement time will always be slower when spur suppression is enabled	
Preset	False	
Range	True	Enable spur suppression
	False	Disable spur suppression

10.2.7 Electronic Attenuator Bypass

Example	:CALC:FPOW:POW1:DEF "ElecAttBypass =False"	
Notes	Lets you either utilize or bypass the electronic attenuator. The electronic attenuator is only available for frequencies up to 3.6 GHz. Set to True when using frequencies above 3.6 GHz. Set to False when using the preamp	
Preset	True	
Range	True	Bypass electronic attenuator
	False	Use electronic attenuator

10.2.8 Electronic Attenuation

Example	:CALC:FPOW:POW1:DEF "ElecAttenuation=10"	
Notes	Option EA3 is required	
	The electronic attenuation value parameter sets the amount of electrical attenuation from 0 to 24 dB (1 dB steps)	
	Set ElecAttBypass = False to make sure the electronic attenuator path is enabled	
Preset	0 dB	
Range	0 – 24 dB (1 dB steps)	

10.2.9 External Reference Frequency

Example	:CALC:FPOW:POW1:DEF "ExternalReferenceFrequency=10"	
Notes	This is the user-specified frequency of the external reference. Used when "Frequency Reference Source" on page 4223 is set to ExternalFrequencyReference , or AutoExternalFrequencyReference when the external source is present. Unused if FrequencyReferenceSource is set to InternalFrequencyReference	
Preset	10 MHz	

10.2.10 Frequency Reference Source

Example	<code>:CALC:FPOW:POW1:DEF "FrequencyReferenceSource= InternalFrequencyReference"</code>
Notes	Specifies which frequency reference source should be used for this request: <ul style="list-style-type: none"> - If <code>ExternalFrequencyReference</code> is selected and no external reference is present, the frequency reference unlocks but the data acquisition will continue - If <code>AutoExternalFrequencyReference</code> is selected, the hardware senses whether an external source is present before starting the data acquisition. If no external source is present then the internal source is selected, and the data acquisition will continue
Preset	<code>InternalFrequencyReference</code>
Range	<code>InternalFrequencyReference, ExternalFrequencyReference, AutoExternalFrequencyReference</code>

10.2.11 IF Gain

Example	<code>:CALC:FPOW:POW1:DEF "IFGain=10"</code>
Notes	Lets you specify the gain at the IF stage anywhere from -6 to 16 dB (1 dB steps). This is an advanced feature; for most cases this should remain at its default value of 0 dB
Preset	0 dB
Range	-6 – 16 dB (1 dB steps)

10.2.12 IF Type

Example	<code>:CALC:FPOW:POW1:DEF "IFType=B25M"</code>
Notes	Lets you select between different IF paths. For example, if the signal is less than 25 MHz wide, then you can select the B25M path to take advantage of additional filtering on this analog IF path
Preset	<code>B40M</code>
Range	<code>B10M, B25M, B40M</code>

10.2.13 Include Power Spectrum

Example	<code>:CALC:FPOW:POW1:DEF "IncludePowerSpectrum=True"</code>
Notes	Lets you read data on the entire spectrum for diagnostic purposes. It is not recommended for production use For details of the binary format of the response, see "Diagnostic Binary Read Fast Power Measurement (Remote Command Only)" on page 4236

Preset	False	
Range	True	Returns both channel power and full power spectrum
	False	Returns only channel power

10.2.14 Mechanical Attenuation

Example	:CALC:FPOW:POW1:DEF "MechAttenuation=10"	
Notes	Sets the amount of mechanical attenuation anywhere from 0 to 70 dB (2 dB steps)	
Preset	0 dB	
Range	0 – 70 dB (2 dB steps)	

10.2.15 Preamp Mode

Example	:CALC:FPOW:POW1:DEF "PreAmpMode=Low"	
Notes	<p>The license for the appropriate preamp is required</p> <p>Specifies whether the preamps are being utilized. Low allows any preamps up to 3.6 GHz, and Full allows all licensed preamps. Set ElecAttBypass = True to utilize any preamps (see "Electronic Attenuator Bypass" on page 4222)</p>	
Preset	Off	
Range	Off, Low, Full	

10.2.16 Resolution Bandwidth Mode

Example	:CALC:FPOW:POW1:DEF "PreAmpMode=Low"	
Notes	<p>Lets you specify whether the RBW filter is automatically or manually set. The BestSpeed value minimizes measurement time, while the Narrowest value minimizes RBW size (minimum of two FFT bins per RBW)</p> <p>To manually specify an RBW, set this parameter to Explicit, and set "Resolution Bandwidth" on page 4225 to the desired value</p>	
Preset	BestSpeed	
Range	BestSpeed, Narrowest, Explicit	

10.2.17 Resolution Bandwidth

Example	<code>:CALC:FPOW:POW1:DEF "ResolutionBW=25e3"</code>
Notes	Sets the 3-dB bandwidth of the RBW filter. "Resolution Bandwidth Mode" on page 4224 must be set to Explicit to manually set the RBW
Preset	0 Hz

10.2.18 Trigger Delay

Example	<code>:CALC:FPOW:POW1:DEF "TriggerDelay=0.025"</code>
Notes	Sets the time after an external trigger is detected until the measurement is performed
Preset	0 s
Range	0 – 1 s

10.2.19 Trigger Level

Example	<code>:CALC:FPOW:POW1:DEF "TriggerLevel=2"</code>
Notes	Sets the voltage value at which an external trigger is detected
Preset	1.2 V
Range	-5 to 5 V

10.2.20 Trigger Slope

Example	<code>:CALC:FPOW:POW1:DEF "TriggerSlope=Negative"</code>
Notes	Specifies the direction of the edge trigger voltage for detection
Preset	Positive
Range	Positive , Negative

10.2.21 Trigger Source

Example	<code>:CALC:FPOW:POW1:DEF "TriggerSource=Ext1"</code>
Notes	Lets you select whether the measurement triggers freely, or is controlled by an external input Ext1 and Ext2 correspond to Trigger 1 In and Trigger 2 In, respectively
Preset	Free
Range	Free , Ext1 , Ext2

10.2.22 Trigger Timeout

Example	<code>:CALC:FPOW:POW1:DEF "TriggerTimeout=0.1"</code>
Notes	Sets the time in which the instrument will wait for a trigger before automatically performing the measurement
Preset	1 s
Range	0 – 1 s

10.2.23 Signal Input

Example	<code>:CALC:FPOW:POW1:DEF "SignalInput=Fp50MHzCW"</code>
Notes	Lets you select between using the main RF input or the internal instrument reference CW signal of 50 MHz
Preset	<code>FpMainRf</code>
Range	<code>FpMainRf, Fp50MHzCW</code>

10.2.24 Use Preselector

Example	<code>:CALC:FPOW:POW1:DEF "UsePreSelector=True"</code>				
Notes	Lets you either utilize or bypass the front-end tunable filter at frequencies above 3.6 GHz. For frequencies below 3.6 GHz, the preselector is automatically bypassed, so you do not need to set this parameter to <code>False</code> in those cases				
Preset	<code>False</code>				
Range	<table border="0"> <tr> <td><code>True</code></td><td>Use preselector above 3.6 GHz</td></tr> <tr> <td><code>False</code></td><td>Preselector bypassed</td></tr> </table>	<code>True</code>	Use preselector above 3.6 GHz	<code>False</code>	Preselector bypassed
<code>True</code>	Use preselector above 3.6 GHz				
<code>False</code>	Preselector bypassed				

10.2.25 Channel Bandwidth Array

Example	<code>:CALC:FPOW:POW1:DEF "Bandwidth=[3.84e6, 5e6, 3.84e6]"</code>
Notes	Defines the bandwidth of each channel that will be measured All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single number with no square brackets can be used to define the parameter
Preset	<code>[1e6]</code>
Range	0 to 40 MHz

10.2.26 Channel Filter Type Array

Example	<code>:CALC:FPOW:POW1:DEF "FilterType=[RRC, IBW, RRC]"</code>
Notes	<p>Lets you select either an integration bandwidth (IBW) filter, or a root-raised-cosine (RRC) filter. The integration bandwidth filter weighs all frequencies within the bandwidth equally. The root-raised-cosine filter has an associated shape parameter, defined by the FilterAlpha parameter</p> <p>All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single value with no square brackets can be used to define the parameter</p>
Preset	<code>[IBW]</code>
Range	<code>IBW, RRC</code>

10.2.27 Channel Filter Alpha Array

Example	<code>:CALC:FPOW:POW1:DEF "FilterAlpha=[0.5, 0.0, 0.5]"</code>
Notes	<p>Lets you adjust the alpha value associated with the root-raised-cosine (RRC) filter type.</p> <p>Set <code>FilterType</code> to <code>RRC</code> to utilize this parameter</p> <p>All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single number with no square brackets can be used to define the parameter</p>
Preset	<code>[0.22]</code>
Range	<code>0.0 – 1.0</code>

10.2.28 Channel Measurement Function Array

Example	<code>:CALC:FPOW:POW1:DEF "Function=[BandPower, PeakPower, BandPower]"</code>
Notes	<p>Defines what measurement is being made for each individually-specified channel. For details, see "Parameter Options" on page 4227</p> <p>All array parameters should have the same number of elements</p> <p>Alternatively, if all the elements are the same value, a single value with no square brackets can be used to define the parameter</p>
Preset	<code>BandPower</code>
Range	<code>BandPower, BandDensity, PeakPower, PeakFrequency, XdBBandwidth, OccupiedBandwidth</code>

Parameter Options

Option	Description	Unit
<code>BandPower</code>	Total power within the specified bandwidth of the	dBm

Option	Description	Unit
	channel	
BandDensity	Total power density within the specified bandwidth of the channel	dBm/Hz
PeakPower	The peak power value within the specified bandwidth of the channel	dBm
PeakFrequency	The frequency that corresponds to the peak power value within the specified bandwidth of the channel. This frequency is relative to the center frequency	Hz
XdBBandwidth	The half power (-3.01 dB) bandwidth of the highest amplitude signal that resides within the channel dB is configurable using " Channel x-dB Bandwidth Array " on page 4229	Hz
OccupiedBandwidth	The bandwidth at which 99% of the total power resides within the channel Percentage is configurable using " Channel Occupied Bandwidth Percent Array " on page 4228	Hz

10.2.29 Channel Offset Frequency Array

Example	<code>:CALC:FPOW:POW1:DEF "OffsetFrequency=[-5e6, 0, 5e6]"</code>
Notes	Defines the difference between the center frequency to the center frequency of each channel All array parameters should have the same number of elements
Preset	[0]
Range	0 to 20 MHz

10.2.30 Channel Occupied Bandwidth Percent Array

Example	<code>:CALC:FPOW:POW1:DEF "OccupiedBandwidthPercent =[0.95, 0.95, 0.95]"</code>
Notes	Only applies to channels whose " Channel Measurement Function Array " on page 4227 is set to OccupiedBandwidth . The occupied bandwidth percent parameter specifies the percent of total power in these channels. The valid range for this parameter is 0.0 to 1.0, where 1.0 represents 100%. The default for this parameter is 0.99, which will return the bandwidth that contains 99% of the total channel power
Preset	[0.99]
Range	0 – 1.0

10.2.31 Channel x-dB Bandwidth Array

Example	<code>:CALC:FPOW:POW1:DEF " XdBBandwidth =[-6.02, -3.01, -1.0]"</code>
Notes	Only applies to channels whose "Channel Measurement Function Array" on page 4227 is set to <code>XdBBandwidth</code> . The X dB bandwidth parameter is used to specify the power relative to the peak channel power over which the bandwidth is calculated. The parameter value must be a negative number
Preset	<code>[-3.01]</code>
Range	-200 to 0 dB

10.3 Define Fast Power Measurement Query (Remote Command Only)

Retrieves a list of all defined parameters in an ASCII string format

The following is an example of returned results:

```
"DCCoupled=False,ElecAttBypass=True,ElecAttenuation=0,IFGain=0,MechAttenuation=0,PreAmpMode=Off,PreSelectorOffset=0,UsePreSelector=False,ExternalReferenceFrequency=100000000,FrequencyReferenceSource=AutoExternalFrequencyReference,IFType=B40M,LOMode=SLW,SignalInput=FpMainRf,AcquisitionTime=0.001,CenterFrequency=1000000000,ResolutionBW=0,ResolutionBWMode=BestSpeed,DetectorType=RmsAverage,Bandwidth=[1000000],OffsetFrequency=[0],Function=[BandPower],FilterType=[IBW],FilterAlpha=[0.22],OccupiedBandwidthPercent=[0.99],XdBBandwidth=[3.01],DoNoiseCorrection=False,DoSpurSuppression=False,MeasurementMethod=HardwareFFT,IncludePowerSpectrum=False,TriggerDelay=0,TriggerLevel=1.2,TriggerSlope=Positive,TriggerSource=Free,TriggerTimeout=1,Trigger1Output=Off,Trigger1OutputPolarity=Positive,Trigger2Output=Off,Trigger2OutputPolarity=Positive"
```

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:DEFine?
Example	:CALC:FPOW:POW1:DEF?
Notes	Retrieves a list of all defined parameters in an ASCII format

10.4 Configure Fast Power Measurement (Remote Command Only)

Begins hardware setup and returns immediately, with no acquisition made. This can be used in parallel with other hardware operations to effectively hide the hardware setup time.

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:CONFigure
Example	:CALC:FPOW:POW1:CONF
Notes	Option FP2 is required

10.5 Initiate Fast Power Measurement (Remote Command Only)

Begins an acquisition and returns immediately. The results of the measurement can be retrieved using [:FETCh](#).

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:INITiate
Example	:CALC:FPOW:POW1:INIT
Notes	Option FP2 is required

10.6 Fetch Fast Power Measurement (Remote Command Only)

Used to retrieve the results of an acquisition initiated by `:INIT`. The returned results are in *ASCII string* format. The string begins and ends with quotation marks.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:FETCh?</code>
Example	<code>:CALC:FPOW:POW1:FETC?</code>
Notes	<p>Option FP2 is required</p> <p>Returns m comma-separated ASCII values, where m corresponds to the number of bandwidths defined</p> <p>1. Declared function return in the 1st specified channel</p> <p>2. Declared function return in the 2nd specified channel</p> <p>...</p> <p>m. Declared function return in the last specified channel</p> <p>The <code>INIT</code> and <code>FETC?</code> command sequence has the same effect as a single <code>CALC:FPOW:POW[n]?</code> query. Units of the returned values depend on "Channel Measurement Function Array" on page 4227 for each channel</p>

10.7 Execute Fast Power Measurement (Remote Command Only)

Shorthand for `:INIT` immediately followed by `:FETC?`. The returned results are in *ASCII string* format. The string begins and ends with quotation marks.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]?</code>
Example	<code>:CALC:FPOW:POW1?</code>
Notes	Option FP2 is required For return format, see notes for "Fetch Fast Power Measurement (Remote Command Only)" on page 4233

10.8 Binary Read Fast Power Measurement (Remote Command Only)

Shorthand for `:INIT` immediately followed by `:FETC?`. The returned results are in *binary format*.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:READ?</code> <code>:CALCulate:FPOWer:POWer[1,2,...,999]:READ1?</code>
Example	<code>:CALC:FPOW:POW1:READ?</code> <code>:CALC:FPOW:POW1:READ1?</code>
Notes	Option FP2 is required Returns m 4-byte floating point binary values (Little-Endian), where m corresponds to the number of bandwidths defined

10.9 Diagnostic Binary Read Fast Power Measurement (Remote Command Only)

Shorthand for **:INIT** immediately followed by **:FETC?**. The returned results are in *binary format*. This command is used primarily for diagnostic purposes, to test for ADC overloads and to visibly inspect the spectrum.

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:READ2?
Example	:CALC:FPOW:POW1:READ2?
Notes	<p>Option FP2 is required</p> <p>Note that Spectrum data is only returned if IncludePowerSpectrum is set to True (see "Include Power Spectrum" on page 4223). If IncludePowerSpectrum is False, the number of spectrum points is zero (0)</p> <p>Units of the returned values are dependent on the Function parameter per channel (e.g. dBm for BandPower, Hz for PeakFrequency)</p> <p>Returns binary data (Little-Endian) that contains information on m amount of channels, along with ADC over range and full spectrum data</p> <p>The following is the binary format of the response</p> <p>Bandwidth Return Value</p> <ol style="list-style-type: none"> 1. Number of channels specified, m [4-byte int] 2. Declared function result for the 1st specified channel [4-byte float] 3. Declared function result for the 2nd specified channel [4-byte float] ... (m + 1). Declared function result for the last (mth) specified channel [4-byte float] <p>ADC Over Range</p> <ol style="list-style-type: none"> 1. ADC over-range occurred (1: true, 0: false) [2 byte short] <p>Spectrum Data</p> <ol style="list-style-type: none"> 1. Number of points in the spectrum data, k [4-byte int] 2. Start frequency of spectrum data (Hz) [8-byte double] 3. Step frequency of spectrum data (Hz) [8-byte double] 4. FFT bin at 1st point (dBm) [4-byte float] 5. FFT bin at 2nd point (dBm) [4-byte float] ... (k + 3). FFT bin at last (kth) point (dBm) [4-byte float]

