# A User's Guide to Keysight 3458A Front Panel Operation (RoHS Compliance)



### Numeric/User Keys

- 10-Key Pad for Numeric Entry
- Deep RECALL buffer of Executed Commands
- MENU type selection
- 10 Battery Backed Up User Definable Keys F0-F9

The Keysight 3458A Auto-Calibration (ACAL) function removes measurement errors caused by component temperature and time drift. For maximum accuracy, ACAL should be performed every 24 hours. For example, additional Vdc volts gain errors due to temperature changes are reduced from 1 ppm/°C to 0.15 ppm/°C (over 6:1) using ACAL. In ACV volts, additional gain error due to temperature changes are reduced from 30 ppm/°C to less than 1 ppm/°C (over 30:1) using ACAL. The time to perform a complete ACAL is about 12 minutes. ACAL ACV takes about 1 minute, ACAL DCV takes about 2 minutes, and ACAL OHM takes about 9 minutes. For monitoring temperature changes, the Keysight 3458A provides the TEMP? command (found in the command Menu) to measure the internal instrument temperature. Refer to the User's

ACAL keystroke sequence:										
Auto Cal	û	₽	₽	û	,	3	4	5	8	Enter

# with the Keysight 3458A

been powered-on and in a stable temperature environment for a minimum of four hours.

Function	Comment	Key Sequence
	D	CV
RESET	Power-on state (VDC)	(blue) Reset
NPLC 200	Integration Time (1)	NPLC 2 0 Enter
NDIG 8	8 1/2 Digits	(blue) N 8 Enter
	A	CV
RESET	Power-on state	(blue) Reset
ACV	Function Vac	ACV
SETACV SYNC	Synchronous AC	(blue) S 🗗 🕏 Enter
RES .002	Max AC Reading Res.	(blue) R 🕶 . 0 0 2 Enter
LFILTER ON	Internal LP Filter <sup>(2)</sup>	(blue)
	0H	HMS
RESET	Power-on state	(blue) Reset
OHMF	Function Four-Wire Ohms	(blue) Reset
OCOMP ON	For R <= 100 kOhms (3)	Offset Comp 0.
DELAY 1	Adds 1 s delay <sup>(4)</sup>	(blue) C 🗗 🗗 Inter
NPLC 200	Integration Time	NPLC 2 0 0 Enter

- 2. Recommended for frequencies less than 50 kHz.
- effect of any thermally generated offset voltage from creating errors in resistance measurements.
- 4. Adds 1 s settling delay to reduce effects of dielectric absorption errors of cabling and the resistor under

## Auto-Calibration (ACAL)

l	eystroke sequence:
	Configuration for Highly Accurate Measurements

(You should perform an ACAL every 24 hours for the appropriate function after the Keysight 3458A has

Function	Comment	Key Sequence CV
RESET	Power-on state (VDC)	(blue) Reset
NPLC 200	Integration Time (1)	NPLC 2 0 Enter
NDIG 8	8 1/2 Digits	(blue) N 8 Enter
	A(	CV
RESET	Power-on state	(blue) Reset
ACV	Function Vac	ACV
SETACV SYNC	Synchronous AC	(blue) S 🗗 🖒 🗈 Enter
RES .002	Max AC Reading Res.	(blue) R 🗗 . 0 0 2 Enter
LFILTER ON	Internal LP Filter <sup>(2)</sup>	(blue)
	0H	MS
RESET	Power-on state	(blue) Reset
OHMF	Function Four-Wire Ohms	(blue) Reset
OCOMP ON	For R <= 100 kOhms (3)	Offset Comp □
DELAY 1	Adds 1 s delay <sup>(4)</sup>	(blue) C & & T
NPLC 200	Integration Time	NPLC 2 0 0 Enter
1 Longer integra	tion times reduce measurement no	ise and increase measurement resolution

- 3. OCOMP ON turns on the offset compensation feature of the Keysight 3458A. OCOMP ON minimizes the

A 5-Minute Tutorial of Front Panel Operation

Function/Range Keys

GPIB Bus Address

Immediate Execute Function Keys

Display Window 

- Manual Range and Menu 🗗 🖸

Example 1: Making a measurement with any function after turning on the Keysight 3458A. The ACV function serves as a typical example of the immediate execute keys found in the Function/Range key group. Connect the appropriate signal to the input terminals and press the keys shown.

**Key Sequence** ACV Function/Range ACV (Any other function key in the Function/Range Key Group acts similarly; the Keysight 3458A changes function, automatically ranges, and begins measurements.)

Function/Range (RESET returns the Keysight 3458A to the powered-on state.)

**Key Group** 

Reading/Menu Display

Status Annunciators

Command Menu

Command

NDIG 8

Alphanumeric Reading, Units, and Functions

## Example 2: Making a precision Vdc measurement on the 10 V range.

Command	Key Group	Key Sequence
RESET	Function/Range	(blue) Reset
DCV	Function/Range	DCV
10 V Range	Function/Range	Or û
XX.XXXXX V DC (X is any numb	pressed until the desired range er). ayed for easy range identificatio	
NPLC 100	Menu Numeric/User	NPLC  1 0 0 Enter
(Measurement will take about	3 seconds.)	

Function/Range

Numeric/User

(Sets the display to 8 1/2 digits.) Printed in Malavsia

**KEYSIGHT** 


TECHNOLOGIES



© Kevsight Technologies 1988-2019



Edition 4, August 2019

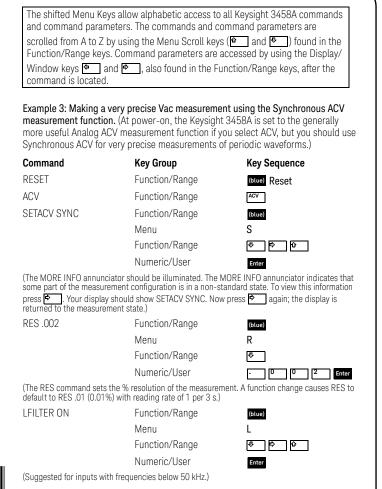

Commonly Used Commands

Command Menu

Shifted Alphabetic Entry Points into

Store and Recall Instrument Setups Store and Recall can significantly reduce the number of keystrokes necessary for a complex

configuration. Simply pressing Store, pressing a Numeric Key X (0-127) and pressing Latter, stores the state of the Keysight 3458A as a state to recall by pressing Recall X. Shipped with the Keysight 3458A is a small plastic overlay that fits on key 5 to document your User Key and Stored State definitions. Use Example 3 and perform the following:

Command	Key Group	Key Sequence
SSTATE 1	Menu	Store State
	Numeric/User	1 Enter
(Stores the Keysight 34	58A's state in stored state 1.)	
RESET	Function/Range	(blue) Reset
(RESET returns the Keys	sight 3458A to the powered-on state.)	
RSTATE 1	Menu	Recall State
	Numeric/User	1 Enter
(Returns the Kevsight 3	458A to stored state 1.)	

#### User Definable Keys

In addition to the State Store and Recall commands, you can also define any of the User keys, FO-F9, in the Numeric/User Key Group to be any string of commands. Let's use Example 3 one more time to show how this feature works.

Command	key Sequence
DEFKEY DEFAULT	(blue) Def Key 😉 Enter
(Clears all previously define	ed User Definable keys.)
DEFKEY FO, "	0
(Ready to accept command	ds.)
FUNC ACV	(blue) E
	(four times) (blue)
(The delimiter used to separ The delimiter used to separ	arate commands is " ; ". rate parameters is " , ".)
SETACV SYNC	(blue) S & P P (blue;
RES .002	(blue) R 🗗 . 0 0 2 (blue;
LFILTER ON	(blue) L
DEFKEY F1, "	1
MATH NULL	(blue) L • (four times)
	• (eight times) Enter
(MATH NULL displays the d	lifference between the first and subsequent measurements.)
Now Use It!	
(blue) f() Enter	
(blue) f1 Enter	
(Nigto the MATIL appunciate	ar in turned on \

## Command Recall Buffer Operation

The command recall buffer recalls previously entered commands. If you have performed the sequence in the User Definable Keys you can expect to have the results listed below.

ommand	Key Group	Key Sequence
ECALL	Function/Range	(blue)
	Numeric/User	Recall
MATH NULL shoul	d appear in the Display.)	

### The MENU Command

To access the commands alphabetically, you use the Menu Keys. As the Keysight 3458A is shipped, only the most commonly used commands are available in this "SHORT" menu. To access all the commands, you have to use the Menu Key with the "FULL' parameter.

Command	Key Group	Key Sequence
MENU FULL	Function/Range	(blue)
	Numeric/User	Menu
	Function/Range	4
	Numeric/User	Enter