
Keysight x1149 Boundary Scan Analyzer



Notices

© Keysight Technologies 2013-2025

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Edition

Edition 6, April 2025

Published by:

Keysight Technologies, Inc.
Bayan Lepas Free Industrial Zone
Phase 3, 11900 Bayan Lepas
Pulau Pinang, Malaysia

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the

U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Safety Notices

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

Installation Guide

Keysight x1149 Hardware	4
Installing the Keysight x1149 Software	6
Installing the x1149 Licenses	7
Connecting and Configuring the Controller	14
Uninstalling the Keysight x1149 Software	21
System Backup and Recovery	21
Keysight Technical Support	21

Keysight x1149 Hardware

The x1149 controller supports up to four TAP I/O ports and an optional Cover-Extend module.

Figure 1 Keysight x1149 Boundary Scan Analyzer

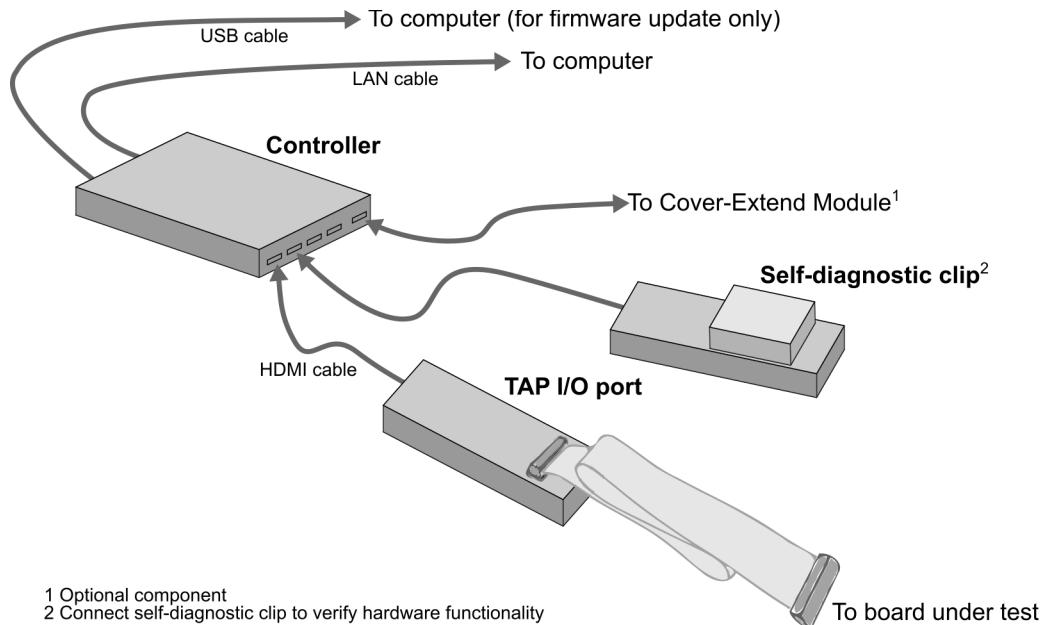


Table 1

Item	Quantity
Keysight x1149 4-TAP Boundary Scan Controller	1
Power Adapter	1
Keysight x1149 Boundary Scan TAP/I/O Ports ¹	4
Keysight x1149 Self-Diagnostic Clip	1
LAN Cable	1
USB Cable	1
HDMI Cables ²	5
20-pin Ribbon Cables	4

1. When available, a 2-TAP bundle will include 2 TAP/IO ports with 3 HDMI cables and 2 ribbon cables.
2. An extra HDMI cable is included for use with the optional Cover-Extend module.

Figure 2 Hardware connections




- Connect the controller to the computer running the Keysight x1149 software. To connect to the controller, the Keysight x1149 software must know its IP address. The default static IP address for the controller is 192.168.1.2.
- The controller and computer may also be connected to the local area network. In this case, allow the network to assign the IP addresses automatically. For information on the controller and network setup, refer to [Connecting and Configuring the Controller](#).

Other connections:

- The self-diagnostic clip plugs into the TAP I/O to verify hardware functionality when needed.
- The USB cable is used to connect to the computer for controller firmware updates only.

Figure 3 x1149 controller ports

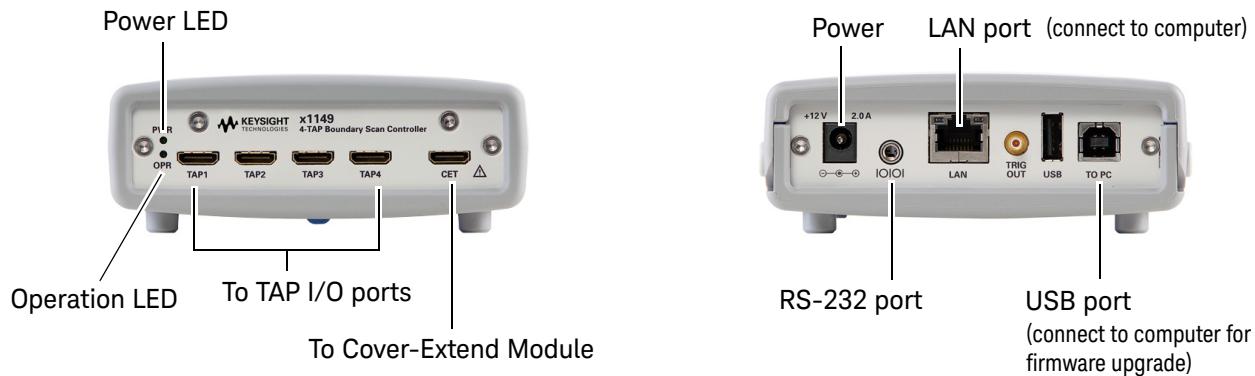

The Keysight x1149 controller is ready when both LEDs are lit.

Installing the Keysight x1149 Software

System Requirements

To install the Keysight x1149 software, the computer must meet the following requirements.

Table 2 System requirements

Specifications	
Processor	4-core Intel x86-64 or AMD64
Operating System	Windows 10 (64-bit) Windows 11 Ensure that all Windows updates are installed.
Memory	8 GB minimum
Available Disk Space	<ul style="list-style-type: none">10 GB minimum on the installation drive (can be any drive)1 GB on C: drive.
Display Properties	<ul style="list-style-type: none">Screen resolution: at least 1024 x 768 pixelsColor quality: at least 16-bit
Language Setting	Must be English (United States).

Installation Procedure

Be sure to uninstall any previous versions of the x1149 software before installing version 2.3.0.

- 1 Run the x1149 software installer.
- 2 If the User Account Control dialog box appears, click **Yes** to allow the installation to continue.
- 3 Follow the instructions on the screen to complete the installation of the x1149 software.

When installation is completed, install the IO Libraries Suite¹. If the computer already has an older version of the software installed, this step is not needed.

- 1 Run the IO Libraries Suite installer.
- 2 Follow the instructions on the screen to complete the installation of IO Libraries Suite.

1. The IO libraries suite is used for firmware update, power supply (N6700) and external instrument (34980) integration.

Installing the x1149 Licenses

The Keysight x1149 software requires a license to run. Obtain the license file following the instructions provided when you purchased the system.

NOTE

Be sure to keep a backup copy of your license file in a safe place.

Installing Node-locked or Transportable Licenses

Follow EITHER (A) or (B) to install the license(s).

A. Using PathWave License Manager

- 1 Launch PathWave License Manager.
- 2 Click **Add a License File**.
- 3 Browse to the location where you saved your license file. Select the license file (**.lic**) and click **Add Now**.

The license is now installed.

B. Drag-n-Drop


Drag and drop the license file into the licensing folder
C:\ProgramData\Keysight\Licensing\Licenses\0ther

The license is now installed.

Refer to [Default User IDs](#) for the default user names and passwords you can use to log in to the x1149 software.


Installing Floating Licenses

Floating licenses reside on a license server (a separate computer) and are checked out for use on individual client computers, then returned when no longer needed so that they can be used on another computer.

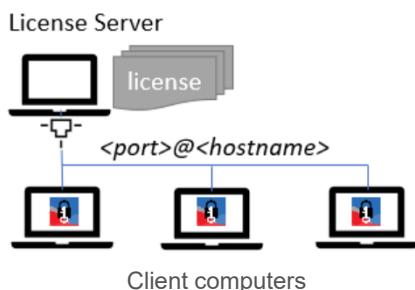


Install floating licenses on license server

- 1 Follow the same procedure in [Installing Node-locked or Transportable Licenses](#) to install the licenses on the license server.
- 2 In PathWave License Manager, click **View Licenses** to check that the floating licenses have been installed. Ensure the license server status shows **UP**.

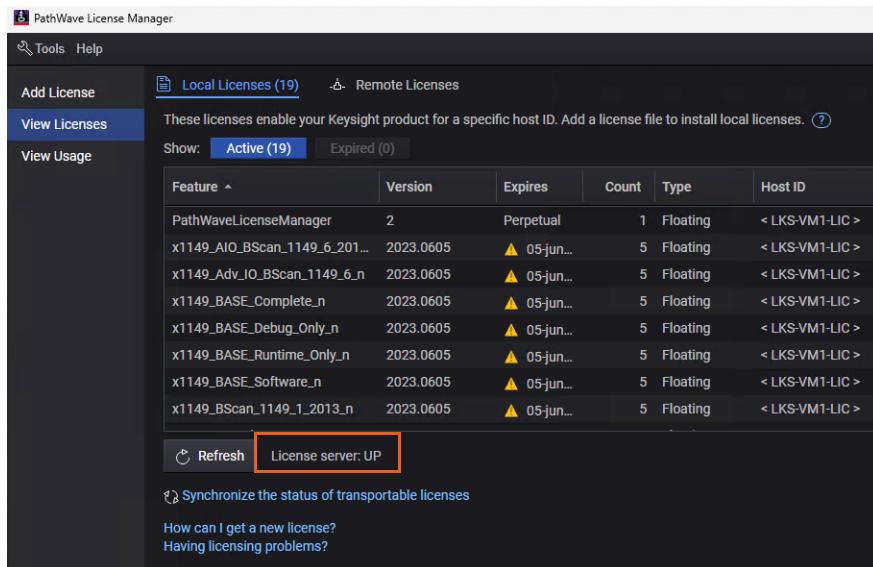

The screenshot shows the PathWave License Manager interface. The left sidebar has three options: 'Add License', 'View Licenses' (which is selected and highlighted in blue), and 'View Usage'. The main content area is titled 'Local Licenses (19)'. It displays a table of license details with columns: Feature, Version, Expires, Count, Type, and Host ID. All listed features are of type 'Floating' and have a host ID of '< LKS-VM1-LIC >'. The 'Expires' column shows dates ranging from 2023-06-05 to 2023-06-06. The 'Count' column shows values of 1 or 5. The 'Type' column shows 'Floating'. The 'Host ID' column shows '< LKS-VM1-LIC >'. Below the table, there are buttons for 'Refresh' and 'License server: UP'. A status message at the bottom says 'Synchronize the status of transportable licenses'. At the very bottom, there are links for 'How can I get a new license?' and 'Having licensing problems?'. The status bar at the bottom of the window shows 'License server: UP'.

If the status is **NOT STARTED**, click **Repair Windows Service** and check the status again. Restart the server if the problem persists.

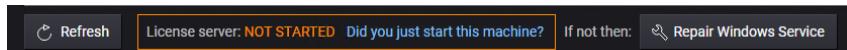

NOTE

Make sure the license server status is **UP**, otherwise the client computers will not be able to retrieve the floating licenses.

Set up client computers to use floating licenses

On the client computers running the Keysight x1149 software, follow these steps to access the licences on the license server.

- 1 Launch PathWave License Manager.
- 2 Click **Specify a Remote License Server**.
 - a If prompted to choose a product, choose **x1149**.
 - b Specify the server machine from which to get your license. The format is:
port_number@host_name

NOTE


For triple redundancy setup, specify all three servers

(separate them using spaces). For example:


port_number@host_name1 port_number@host_name2

port_number@host_name3

- c Click **Verify Connection and Save**, then click **Done** to complete the setup.

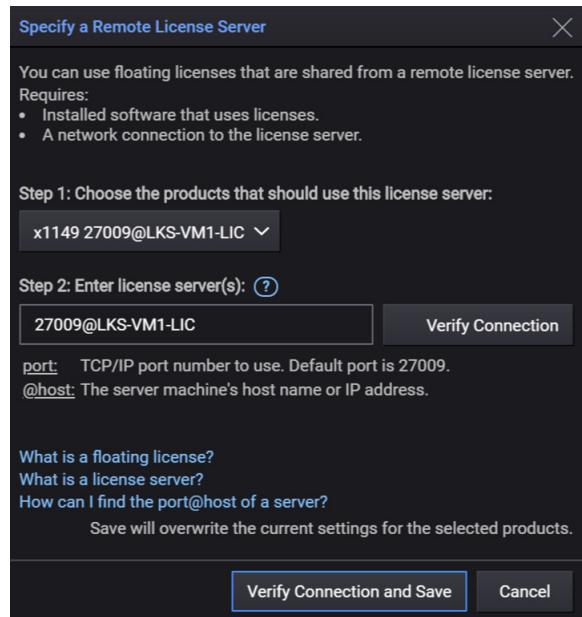

3 Click **View Licenses** to check that the floating licenses are available in the **Remote Licenses** tab.

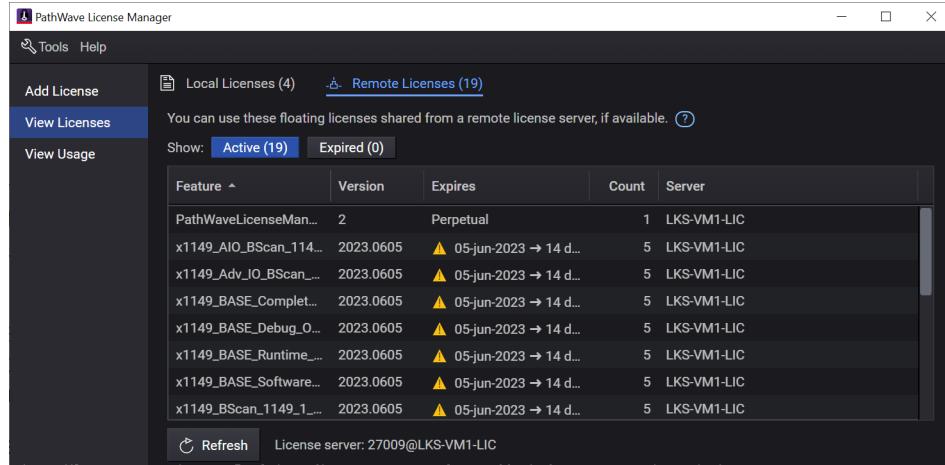

4 In a Command Prompt window, go to `C:\Program Files\Keysight\x1149` and run `LicenseSearchPathReg.bat` in administrator mode.

```
C:\Windows\system32\cmd.exe
The operation completed successfully.
Floating License add successful
```


The x1149 software can now be run using the floating licenses. You can use the default user IDs to log in.

Adjusting idle timeout for floating licenses

After floating licenses are installed, the idle timeout may be adjusted if needed.


- 1 Launch the x1149 application.
- 2 Click **Help > Technical Support > My Support Subscriptions**.

Check that **Network** is displayed in the License Type column,

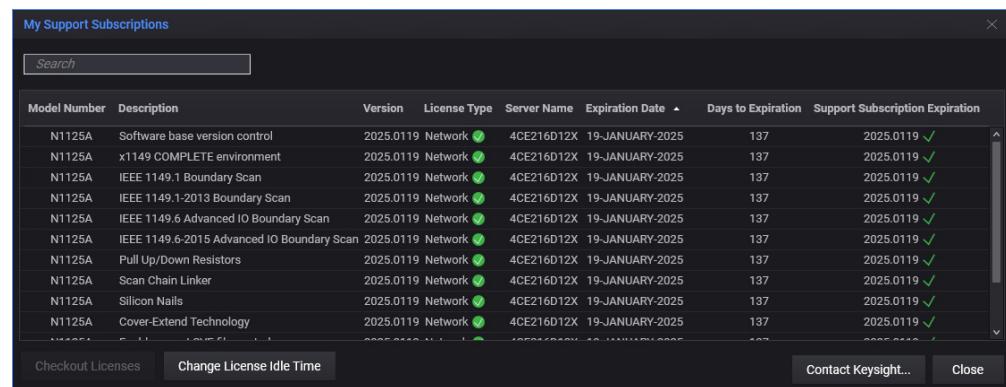

Model Number	Description	Version	License Type	Server Name	Expiration Date	Days to Expiration	Support Subscription	Expiration
N1125A	Software base version control	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	x1149 COMPLETE environment	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	IEEE 1149.1 Boundary Scan	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	IEEE 1149.1-2013 Boundary Scan	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	IEEE 1149.6 Advanced IO Boundary Scan	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	IEEE 1149.6-2015 Advanced IO Boundary Scan	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	Pull Up/Down Resistors	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	Scan Chain Linker	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	Silicon Nails	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓
N1125A	Cover-Extend Technology	2025.0119	Network ✓	4CE216D12X	19-JANUARY-2025	137	2025.0119	✓

- 3 Click **Change License Idle Time**.

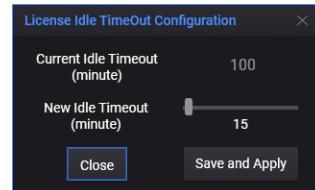

- 4 Use the slider to set the new timeout value (from 15 to 120 minutes). Click **Save and Apply**.


The timeout value is saved in the following file:

`C:\Program Files\Keysight\x1149\licensetimeout.value`

You can also edit the value in the file instead of changing it in the x1149 application.

Removing floating licenses

- 1 Launch PathWave License Manager.
- 2 Click **Specify a Remote License Server**.
 - a Delete the port and license server name under **Step 2: Enter license server(s)**.
 - b Click **Clear connection and Save**.

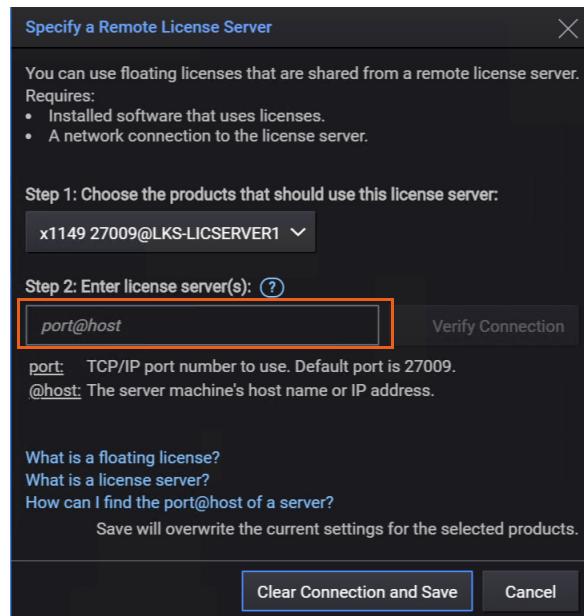

- 3 In a Command Prompt window, go to `C:\Program Files\Keysight\x1149` and run `LicenseSearchPathReg.bat` in administrator mode.

```
PS C:\Windows\system32\cmd.exe
The operation completed successfully.
Floating License add successful
Waiting for 2 seconds, press a key to continue ...
```

The `operation completed successfully` message indicates the removal was successful.

Default User IDs

The default user IDs for accessing the Keysight x1149 software are given below. They provide access to different functionality in the software.

Table 3 Default User IDs

User ID	Group/Function	Password
Admin	Admin/user administration tasks	x1149BSA1
Engineer	Engineer/test development and debug	x1149BSA1
Operator	Operator/board testing	x1149BSA1

Connecting and Configuring the Controller

You can connect and configure the controller using the Keysight x1149 software as described in [Connect and Configure Controller Using x1149 Software](#) below.

Alternatively, follow the one of these procedures to configure the controller (depending on your system setup):

- [Connect Controller to Host Computer](#)
- [Connect Controller and Host Computer to Local Area Network](#)

Connect and Configure Controller Using x1149 Software

1 Connect the LAN cable to the controller and the computer running the Keysight x1149 software ([Figure 2](#)).


2 From the Keysight x1149 software, select **Tools** > **Preferences** > **Hardware Connections** tab.

The Hardware Connections tab ([Figure 4](#)) will show any controllers detected and the available networks from the host computer.

3 Continue with the configuration for your desired network connection:

- [Controller connected to host computer](#), or
- [Controller and host computer connected to local area network](#)

Figure 4 Network connections

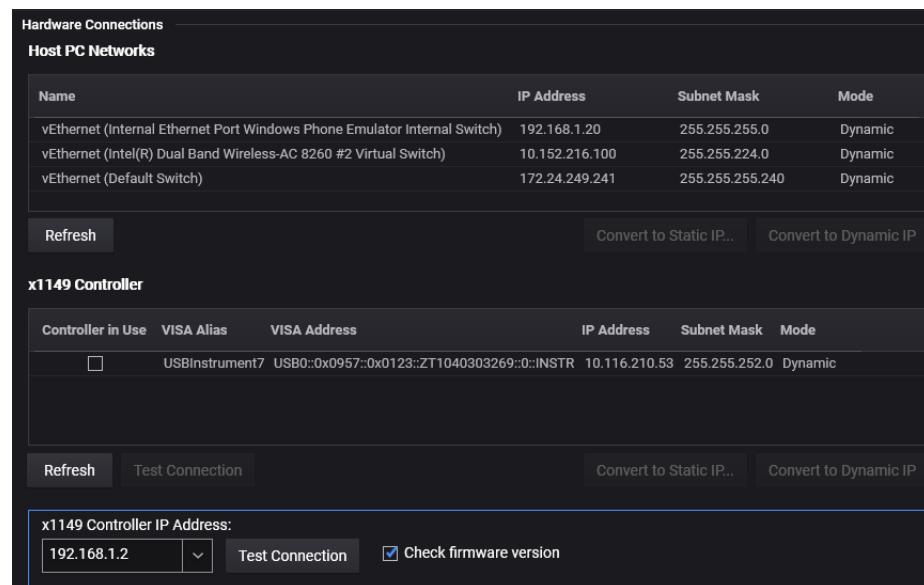

Controller connected to host computer

- 1 Set a static IP address for the host computer:

- a Select the host computer and click **Convert to Static IP**.
- b Enter the IP address and click **OK**.

NOTE

The default IP address for the controller is 192.168.1.2. To communicate, the host computer's IP address must also be set in the 192.168.1.x range.

- 2 Select the x1149 Controller and click the **Test Connection** button to test the connection.

- 3 Click the **Controller In Use** checkbox for the controller and click **OK**.

If you wish to change the IP address of the controller, simply enter the new IP address under **x1149 Controller IP Address** (see [Figure 4](#)), then use the **Test Connection** button to test the connection.

IP addresses that have previously been set for the controller are saved and can be selected from the drop-down list.

Controller and host computer connected to local area network

To connect the controller and computer to the local area network, continue with the following steps:

- 1 Set a dynamic IP address for the controller:

- a Select the controller and click **Convert to Dynamic IP**.
- b Click **Yes** to confirm.

The controller will be restarted and its IP address updated.

- 2 Select the x1149 Controller and click the **Test Connection** button to test the connection.

- 3 Click the **Controller In Use** checkbox for the controller and click **OK**.

Connect Controller to Host Computer

NOTE

The default IP address for the controller is 192.168.1.2. To communicate, the host computer's IP address must also be set in the 192.168.1.x range.

- 1 Connect the LAN cable to the controller and the computer running the Keysight x1149 software.
- 2 Set the IP address of the host computer as follows:
 - a Go to **Control Panel** > **Network and Sharing Center**.
 - b Click **Local Area Connection** and click **Properties**.
 - c Under **This connection uses the following items**, select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.
 - d On the **General** tab, select **Use the following IP address**. Set the IP address of the computer in the **192.168.1.x** range with subnet mask **255.255.255.0**. Then click **OK**.

This completes the setup.

If you wish to change the IP address for the controller

If you should need to change the controller's IP address to something other than the default (192.168.1.2), follow these steps:

- 1 Connect the LAN cable to the controller and computer.
- 2 Set the computer's IP address in the range **192.168.1.x** with subnet mask **255.255.255.0** as described above.
- 3 Launch a web browser and enter the controller's default IP address, **192.168.1.2**.
- 4 Click **View & Modify Configuration** > **Modify Configuration**. At the prompt, enter the password **keysight**.
- 5 Enter the preferred IP address for the controller and click **Apply** (Figure 5).
- 6 Turn the controller off and on again.
- 7 Update the computer's IP address to the same subnet of the controller.

Figure 5 Manual IP address configuration

Parameter		Value
IP Address Configuration:	<input type="radio"/> Automatic <input checked="" type="radio"/> Manual	
IP Address:	192.168.1.2	
Subnet Mask:	255.255.255.0	
Default Gateway:	192.168.1.1	
DNS Server Address Configuration:	<input type="radio"/> Automatic <input checked="" type="radio"/> Manual	
Preferred DNS Server:	192.168.1.1	
Alternate DNS Server:		
Desired Hostname:	N1125A (Requires reboot to take effect)	
Description: <small>Used as the desired mDNS service name</small>	Agilent 0 1149.X based Defect Analyzer - 0	
mDns Enabled:	<input checked="" type="checkbox"/> Enabled	

In the Keysight x1149 software, select **Tools > Preferences > Hardware Connections** tab to enter the controller's new IP address.

Connect Controller and Host Computer to Local Area Network

To connect the controller and computer to the local area network, do the following:

- **Set dynamic IP addresses**
- **Find out IP address assigned to controller**
- **Update controller's IP address in Keysight x1149 software**

Set dynamic IP addresses

- 1 Connect the LAN cable to the controller and the computer running the Keysight x1149 software.
- 2 Set the computer's IP address in the range **192.168.1.x** with subnet mask **255.255.255.0**.
- 3 Launch a web browser and enter the controller's default IP address, **192.168.1.2**.
- 4 Click **View & Modify Configuration > Modify Configuration**. At the prompt, enter the password **keysight**.

- 5 Set the IP address configuration to **Automatic** and click **Apply**.

Parameter		Value
IP Address Configuration:	<input type="radio"/> Automatic <input checked="" type="radio"/> Manual	
IP Address:	192.168.1.2	
Subnet Mask:	255.255.255.0	
Default Gateway:	192.168.1.1	
DNS Server Address Configuration:	<input type="radio"/> Automatic <input checked="" type="radio"/> Manual	
Preferred DNS Server:	192.168.1.1	
Alternate DNS Server:		

Note: You must click "Apply" before changes to parameters become effective.


- 6 Turn the controller off and on again.
- 7 Connect the controller and computer to the local area network.
- 8 Specify dynamic addressing as follows:
 - Go to **Control Panel > Network and Sharing Center**.
 - Click **Local Area Connection** and click **Properties**.
 - Under **This connection uses the following items**, select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.
 - On the **General** tab, select **Obtain an IP address automatically**.
 - Click **OK**.

Find out IP address assigned to controller

To find out what IP address was assigned to the controller:

- 1 Keep the connections to the local area network.
- 2 Connect the USB cable to the controller (port labeled **TO PC** on the rear panel) and to the computer.
- 3 In the Windows taskbar, click  (Keysight IO Libraries Suite) and select **Connection Expert**.


4 In the Instruments list, select 0, Agilent Technologies, then click **Send Commands to This Instrument** in the Details pane on the right.

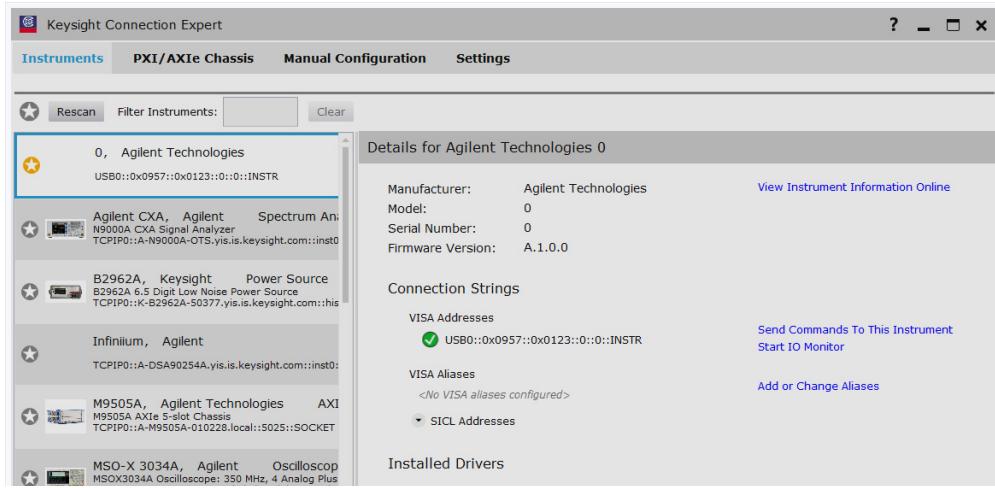

5 Enter the following command:

`:syst:comm:lan:addr?`

This displays the controller's IP address.

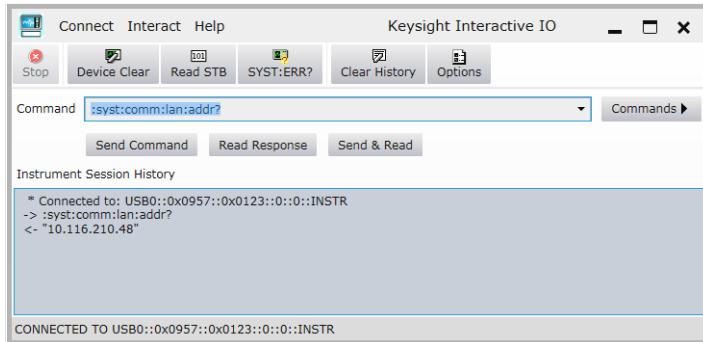

Update controller's IP address in Keysight x1149 software

To connect to the controller, the Keysight x1149 software must know its IP address. Select **Tools > Preferences > Hardware Connections** tab, under **x1149 Controller IP Address**, enter the controller's IP address obtained in [Step 5](#) above.

This completes the setup.

If you wish to change the IP address from dynamic to static setting

If the controller has been set up with dynamic IP address and you need to change it back to static, you can do so using the controller webpage as described earlier.

If you are unable to access the webpage, set the static IP address as follows:

- 1 Launch Keysight IO Libraries Suite and select **Connection Expert**.
- 2 In the Instruments list, select **0, Agilent Technologies**, then click **Send Commands to This Instrument** in the Details pane on the right.
- 3 Send the following commands to the controller:
`:syst:comm:lan:dhcp off`
`:syst:comm:lan:addr "192.168.1.2"`
`:syst:comm:lan:upd`
- 4 Turn the controller off and on again.

This sets the controller's static IP address to the default 192.168.1.2.

Uninstalling the Keysight x1149 Software

- 1 Right-click **Start**  > Apps and Features.
- 2 Find **Keysight Boundary Scan Analyzer**, click **Options (:) button**, and click **Modify**.
- 3 Click **OK** to stop any associated service and proceed with the uninstallation.

System Backup and Recovery

It is the responsibility of the customer to create a full backup of the files on their test systems so that the system and data can be recovered in case of a disaster such as a disk crash. It is recommended that you set up a backup schedule and procedure to create regular backups.

IN NO EVENT WILL KEYSIGHT OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

Keysight Technical Support

You can access support information at www.keysight.com/find/x1149. Technical Support provides links to application notes, articles and case studies to help you use your Keysight x1149 Boundary Scan Analyzer more effectively.

To contact Keysight technical support, go to www.keysight.com/find/contactus for support details.

